

ISUZU_PN	PT_PN	DESCRIPTION	LA_PDC	CI_PDC
ABCDWE2210	ABCD-WE-221	WORKSHOP MANUAL 4BC2	000000	000000
AOPR1DISK0	AOPR 1DISK	DIST SVC PTS PRICE LIST D	000000	000000
AOPR1RETO	AOPR 1RET	SUGGESTED RETAIL 1/94	000000	000000
AOPR10	AOPR 1	DIST SVC PTS PRICE LIST 1	000000	000000
A01070	A0107	QD100 AUTO OWNERS MAN SPA	000000	000000
A2SA120	A2SA12	DISCONTINUED: FOLDER	000000	000000
A2SA150	A2SA15	SERVICE TRAINING BINDER	000000	000000
A2SA160	A2SA16	BINDER; SERVICE 1"	000000	000000
A2SA170	A2SA17	SERVICE POLICY/PROCEDURE	000000	000000
A2SA200	A2SA20	BINDER; PARTS 1"	000000	000000
A2SA210	A2SA21	ZEXEL "1993	000000	000000
A2SA22R0	A2SA22R	APPOINTMENT OF OEM-SHORT	000000	000000
A2SA25REV1	A2SA25 REV1	PARTS POLICY/PROCEDURE MA	000000	000000
A2SA250	A2SA25	PARTS POLICY/PROCEDURE MA	000000	000000
A2SA260	A2SA26	DISTRIBUTOR REQUEST FOR C	000000	000000
A2SA270	A2SA27	DISTR. REQ. FOR CREDIT-SU	000000	000000
A2SA280	A2SA28	DIST.REQUEST FOR FUNCT.CO	000000	000000
A2SA290	A2SA29	SERIAL NUMBER LOCATION CA	000000	000000
A2SA310	A2SA31	ISUZU 1" BINDER	000000	000000
A3SA120	A3SA12	GOTO L-3KC1I-3("C")	000000	000000
A3SA130	A3SA13	4B/6B AUTO**DISCONTINUED*	000000	000000
A3SA160	A3SA16	ISUZU MAR/GEN LIT	000000	000000
A3SA230	A3SA23	DATA CARD 27/40/60M	000000	000000
A3SA240	A3SA24	DATA CARD 130/145M	000000	000000
A3SA250	A3SA25	DATA CARD QD150M	000000	000000
A3SA270	A3SA27	EXTENDED WARRANTY BROCHUR	000000	000000
A7SA100	A7SA10	APPLICATION FOR OEM/DEALE	000000	000000
B00330	B0033	3 X 3 ISUZU DECAL	000000	000000
B00550	B0055	5 X 5 ISUZU DECAL	000000	000000
B00990	B0099	9 X 9 ISUZU DECAL	000000	000000
B15150	B1515	REFLECTIVE DECAL	000000	000000
B24240	B2424	24 X 24 ISUZU DECAL	000000	000000
CORE2500	CORE 250	CORE CHARGE - REMAN GENER	000000	000000
CORE3000	CORE 300	CORE CHARGE FOR REMAN STA	000000	000000
CORE5000	CORE 500	CORE CHARGE FOR REMAN TUR	000000	000000
C223WE1410	C223-WE-141	WORKSHOP MANUAL C223	000000	000000
DAP10	DAP1	DEALER AGREEMENT APPLICAT	000000	000000
DAWE5610	DA-WE-561	WORKSHOP MANUAL DA SERIES	000000	000000
EELSE0210	EEL-SE-021	ENGINE ELECTRICAL	000000	000000
EST0210	ES-T-021	INSTRUCTION MANUAL 6RB1-6	000000	000000
E1233140	E12331-4	DISCONTINUED	000000	000000
E880TODAY0	E880-TODAY	DISCONTINUED: BROCHURE	000000	000000
E890ISUZU0	E890-ISUZU	GOTO E911-ISUZU "C"	000000	000000
E920ISUZUW	E920-ISUZU-WAY	THE ISUZU WAY 1992	000000	000000
FR1924WE10	FR1924WE101	WORKSHOP MANUAL C240 FREN	000000	000000
F890ISUZU0	F890-ISUZU	ISUZU - LE VOIE	000000	000000

GRP11D5004	GRP-11D5-004	SIDE PANELS; LOUVERED 6BD	000000	000000
GRP11D5006	GRP-11D5-006	PANELS; SIDE LOUVERED	000000	000000
GRP12B1005	GRP-12B1-005	BATTERY TRAY: GROUP	000000	000000
GRP2A10050	GRP-2A1-005	BASE ASM; SKID	000000	000000
GRP5B20110	GRP-5B2-011	SAE #3 GEAR ADAPTER GRP	000000	000000
GRP5B20130	GRP-5B2-013	ADAPTION COMP. HD MAR GEA	000000	000000
GRP5B30010	GRP-5B3-001	DECALS & LABELS	000000	000000
GRP5B30020	GRP-5B3-002	DECALS & LABELS	000000	000000
GRP5B40070	GRP-5B4-007	BW 72 SERIES MTG ACCY	000000	000000
GRP5B40100	GRP-5B4-010	BW 10-17 MTG ACCY	000000	000000
GRP5B40120	GRP-5B4-012	BW MTG ACCY	000000	000000
GRP5B40130	GRP-5B4-013	TWIN DISC MG502 MTG ACCY	000000	000000
GRP5B40170	GRP-5B4-017	TRANS ADAPTOR;BW PR1-PR2	000000	000000
GRP5B40200	GRP-5B4-020	HURTH 630A MTG ACC	000000	000000
GRP5C70010	GRP-5C7-001	BRACKET; ACCY MTG	000000	000000
GRP5D20020	GRP-5D2-002	HEAT EXCHANGER; WTR COOL.	000000	000000
GRP5D20030	GRP-5D2-003	HEAT EXCHANGER; WTR/COOL	000000	000000
GRP5D20050	GRP-5D2-005	HEAT EXCHANGER; ENGINE	000000	000000
GRP5F10090	GRP-5F1-009	RADIATOR & MTG 4BD1	000000	000000
GRP5F10100	GRP-5F1-010	RADIATOR; MTG, SHROUD	000000	000000
GRP5F10200	GRP-5F1-020	RADIATOR MNTG/FAN SHROUD	000000	000000
GRP5F10210	GRP-5F1-021	GRILL; CORE GUARD RAD.	000000	000000
GRP5F10220	GRP-5F1-022	RADIATOR MNTG/FAN SHROUD	000000	000000
GRP5K20010	GRP-5K2-001	THERMOSTAT HSG ELBOW	000000	000000
GRP5K30020	GRP-5K3-002	SEA WATER PUMP	000000	000000
GRP5K30040	GRP-5K3-004	PUMP-RAW WATER, HOSES	000000	000000
GRP5K50030	GRP-5K5-003	WATER COOL. SYST. HOSE CO	000000	000000
GRP5K50050	GRP-5K5-005	COOLING SYST. (FRESH WATER	000000	000000
GRP5L10030	GRP-5L1-003	EXH. MANIFOLD, WATER COOL	000000	000000
GRP5L10050	GRP-5L1-005	MANIFOLD; WATER COOLED	000000	000000
GRP5L20010	GRP-5L2-001	EXHAUST SYSTEM: C240PV/PW	000000	000000
GRP5L20090	GRP-5L2-009	EXHAUST SYSTEM	000000	000000
GRP5L20100	GRP-5L2-010	EXHAUST SYSTEM	000000	000000
GRP5L20140	GRP-5L2-014	EXHAUST SYSTEM	000000	000000
GRP5L20160	GRP-5L2-016	EXHAUST SYSTEM	000000	000000
GRP5L20170	GRP-5L2-017	EXHAUST GROUP	000000	000000
GRP5L30010	GRP-5L3-001	ELBOW; S/STEEL WATER COOL	000000	000000
GRP5L30020	GRP-5L3-002	ELBOW; WATER COOLED	000000	000000
GRP5L30030	GRP-5L3-003	ELBOW; S/STEEL WATER COOL	000000	000000
GRP5L30040	GRP-5L3-004	ADAPTOR; EXHAUST (DRY)	000000	000000
GRP5M30020	GRP-5M3-002	AIR CLEANER	000000	000000
GRP5M30070	GRP-5M3-007	AIR CLEANER ASM.	000000	000000
GRP5M30080	GRP-5M3-008	AIR CLEANER	000000	000000
GRP5M30130	GRP-5M3-013	AIR CLEANER ASM. 4BD1 PU	000000	000000
GRP5M30140	GRP-5M3-014	AIR CLEANER	000000	000000
GRP5M30150	GRP-5M3-015	AIR CLEANER	000000	000000
GRP5M30220	GRP-5M3-022	AIR CLEANER	000000	000000

GRP5M30230	GRP-5M3-023	AIR CLEANER	000000	000000
GRP5M30250	GRP-5M3-025	AIR CLEANER ASM.	000000	000000
GRP5N10150	GRP-5N1-015	THROTTLE CABLE	000000	000000
GRP5N10160	GRP-5N1-016	THROTTLE CABLE	000000	000000
GRP5N10210	GRP-5N1-021	CABLE; THROTTLE ASM.	000000	000000
GRP5N10230	GRP-5N1-023	CABLE; THROTTLE	000000	000000
GRP5Q10020	GRP-5Q1-002	SUPPORT: ENG. FRT: PROPUL	000000	000000
GRP5Q10070	GRP-5Q1-007	ENGINE MOUNT; FRONT C240P	000000	000000
GRP5Q10090	GRP-5Q1-009	ENGINE SUPPORT; FRONT	000000	000000
GRP5Q10110	GRP-5Q1-011	ENGINE MOUNT; FRONT & REA	000000	000000
GRP5Q10130	GRP-5Q1-013	ENGINE MNTG; FRT.	000000	000000
GRP5Q10140	GRP-5Q1-014	ENGINE MNTG; FRT.	000000	000000
GRP5Q20090	GRP-5Q2-009	ENGINE MNTG; RR	000000	000000
GRP5R10010	GRP-5R1-001	STANDARD SHIP LOOSE COMPO	000000	000000
GRP5R10080	GRP-5R1-008	INSTRUMENT PANEL; STANDAR	000000	000000
GRP5R10500	GRP-5R1-050	MASTER GROUP: 6BB1/6BD1 O	000000	000000
GRP5R10510	GRP-5R1-051	MASTER GROUP: 6BD1T-OPUs	000000	000000
GRP5S10080	GRP-5S1-008	SKID-SHIPPING 6B: OPUs	000000	000000
GRP5S10100	GRP-5S1-010	SKID; SHIPPING	000000	000000
GRP5X40020	GRP-5X4-002	PULLEY; AUX. CRANK (2 GRO	000000	000000
GRP5X50010	GRP-5X5-001	BRACKET; THROT.-STOP CABL	000000	000000
GRP5X50020	GRP-5X5-002	BRACKET; THROT.-STOP CABL	000000	000000
GRP5X50030	GRP-5X5-003	BRACKET; THROT.-STOP CABL	000000	000000
GRP5Y10030	GRP-5Y1-003	ALTERNATOR AND MTG HARDWA	000000	000000
GRP5Y10040	GRP-5Y1-004	ALTERNATOR & MTG	000000	000000
GRP5Y20020	GRP-5Y2-002	ELECTRIC SHUTDOWN	000000	000000
GRP5Y20070	GRP-5Y2-007	SOLENOID ASM; ELECT. SHUT	000000	000000
GRP5Y20080	GRP-5Y2-008	STOP SOLENOID & MTG	000000	000000
GRP5Y20160	GRP-5Y2-016	ELECTRIC SHUTDOWN-4BD1 CP	000000	000000
GRP5Y20170	GRP-5Y2-017	ELECTRIC SHUTDOWN; DELUXE	000000	000000
GRP5Y20180	GRP-5Y2-018	ELECTRIC SHUTDOWN; DELUXE	000000	000000
GRP5Y20190	GRP-5Y2-019	ELECTRIC SHUTDOWN; DELUXE	000000	000000
GRP5Y20210	GRP-5Y2-021	ELECTRIC SHUTDOWN; DELUXE	000000	000000
GRP5Y20220	GRP-5Y2-022	ELECTRIC SHUTDOWN; DELUXE	000000	000000
GRP5Y20230	GRP-5Y2-023	4JB1 SOLENOID; 12V ELECT	000000	000000
GRP5Y20250	GRP-5Y2-025	SOLENOID ASM; ELECT. SHUT	000000	000000
GRP5Y30020	GRP-5Y3-002	DELUXE INST. PANEL	000000	000000
GRP5Y30070	GRP-5Y3-007	INST. PANEL W/TACH	000000	000000
GRP5Y30080	GRP-5Y3-008	INST. PANEL (DLX)	000000	000000
GRP5Y30100	GRP-5Y3-010	PANEL; SINGLE STATION	000000	000000
GRP5Y30170	GRP-5Y3-017	PANEL; DUAL STATION	000000	000000
GRP5Y30180	GRP-5Y3-018	PANEL; DUAL STATION	000000	000000
GRP5Y30230	GRP-5Y3-023	INSTRUMENT PANEL; DELUXE	000000	000000
GRP5Y30240	GRP-5Y3-024	HARNESS EXTENSION; 10'	000000	000000
GRP5Y30260	GRP-5Y3-026	HARNESS EXTENSION; 10'	000000	000000
GRP5Y30270	GRP-5Y3-027	HARNESS EXTENSION; 20'	000000	000000
GRP5Y30280	GRP-5Y3-028	HARNESS EXTENSION; 20'	000000	000000

GRP5Y30290	GRP-5Y3-029	HARNESSEXTENSION; 20'	000000	000000
GRP5Y30310	GRP-5Y3-031	INSTRUMENTPANELASM.	000000	000000
GRP5Y30320	GRP-5Y3-032	INSTRUMENTPANELASM.	000000	000000
GRP5Y30340	GRP-5Y3-034	INST. PANEL W/TACH	000000	000000
GRP5Y40030	GRP-5Y4-003	TACHOMETER	000000	000000
GRP5Y40050	GRP-5Y4-005	TACHOMETER; ELEC.	000000	000000
GRP5Y40070	GRP-5Y4-007	TACHOMETER W/HOURMETER	000000	000000
HD22020	HD-2202	WORKSHOPMANUAL C221	000000	000000
HLEEWE0210	HLEE-WE-021	WORKSHOPMANUALELECTRICA	000000	000000
IDE00210	IDE-0021	ISUZU-THE NAME IN DIESEL	000000	000000
IDE00240	IDE-0024	ISUZU-THE NAME IN DIESEL	000000	000000
IDE01500	IDE-0150	QD150 MARINE PARTS BOOK	000000	000000
IDE02000	IDE-0200	SPEC REQ SHEET	000000	000000
IDE02100	IDE-0210	CHECK SHEET	000000	000000
IDE03100	IDE-0310	ISUZU B-SERIES DIESEL	000000	000000
IDE03200	IDE-0320	3AB1PW-09 IND.PARTS CATAL	000000	000000
IDE10000	IDE-1000	INSTR BOOK 2A/AB1/3A/AB1/	000000	000000
IDE10100	IDE-1010	INSTR BOOK C190/C240/IND	000000	000000
IDE10200	IDE-1020	INSTR BOOK C330/4BA1/IND	000000	000000
IDE10400	IDE-1040	INSTR BOOK 4BB/6BB1/AUTO	000000	000000
IDE10700	IDE-1070	SUPERSEDED**IDE-1210/1170	000000	000000
IDE10900	IDE-1090	INSTR BOOK DA SERIES	000000	000000
IDE11200	IDE-1120	INSTR BOOK DH100/IND	000000	000000
IDE11300	IDE-1130	INSTR BOOK E120/IND	000000	000000
IDE11500	IDE-1150	INSTR BOOK C190/C240/AUTO	000000	000000
IDE11600	IDE-1160	INSTR BOOK 6RA/6RA1T/6RB1	000000	000000
IDE11700	IDE-1170	INSTR BOOK 6BB/6BD/6BD1T/	000000	000000
IDE11850	IDE-1185	INSTRUCTION 2KC, 3KA, 3KB, 3	000000	000000
IDE11860	IDE-1186	INSTRUCTION 2KC, 3KA, 3KB, 3	000000	000000
IDE12000	IDE-1200	INSTR BOOK 6BB/6BD/6BD1T/	000000	000000
IDE12100	IDE-1210	INSTR BOOK 4BA/4BC2/4BD1/	000000	000000
IDE12200	IDE-1220	INSTRUCTIONAL MANUAL 4BA1	000000	000000
IDE12220	IDE-1222	INSTR BOOK 4BB/BC/BD/BD1T	000000	000000
IDE12410	IDE-1241	INSTRUCTION BOOK 6BD1T/AU	000000	000000
IDE12610	IDE-1261	INST. MANUAL 6SA1, 6SA1T, 6	000000	000000
IDE12800	IDE-1280	INSTR BOOK 6RB1/6RB1T/E12	000000	000000
IDE12910	IDE-1291	INST. MANUAL 4J/A/B/C/E/1	000000	000000
IDE13900	IDE-1390	INSTR BOOK UM6BD1TC	000000	000000
IDE14700	IDE-1470	INSTR BOOK UM6BD1TC	000000	000000
IDE14800	IDE-1480	INSTR BOOK UM3KC1	000000	000000
IDE17300	IDE-1730	FRENCH INSTRUCTION (3KC1)	000000	000000
IDE17410	IDE-1741	INSTRUCTION MANUAL (GERMA	000000	000000
IDE17500	IDE-1750	INST. MAN. GERMAN/FRENCH	000000	000000
IDE19010	IDE-1901	INSTRUCTION MANUAL 4F/B/C	000000	000000
IDE19100	IDE-1910	OWNERS MANUAL 12PB1	000000	000000
IDE20000	IDE-2000	WORKSHOPMANUAL 2A/AB1/3A	000000	000000
IDE2010K0	IDE-2010K	WORKSHOPMANUAL 2K/3K SER	000000	000000

IDE20100	IDE-2010	WORKSHOP MANUAL 2K/3K SER	000000	000000
IDE20200	IDE-2020	WORKSHOP MANUAL DH100	000000	000000
IDE20300	IDE-2030	WORKSHOP MANUAL 8MA1*DISC	000000	000000
IDE20410	IDE-2041	WORKSHOP MANUAL 4B-6B IND	000000	000000
IDE20600	IDE-2060	WORKSHOP MANUAL E120/E120	000000	000000
IDE20800	IDE-2080	WORKSHOP MANUAL 3KR1	000000	000000
IDE20900	IDE-2090	WORKSHOP MANUAL 12PB1	000000	000000
IDE21100	IDE-2110	WORKSHOP MANUAL UM6BD1MTC	000000	000000
IDE21500	IDE-2150	WORKSHOP MANUAL UM3KC1EL	000000	000000
IDE21600	IDE-2160	WORKSHOP MANUAL 6SA1/SA1T	000000	000000
IDE21610	IDE-2161	6SD1T WORKSHOP MANUAL	000000	000000
IDE21700	IDE-2170	WORKSHOP MANUAL 4JB1/4JB1	000000	000000
IDE21800	IDE-2180	WORKSHOP MANUAL D500	000000	000000
IDE22100	IDE-2210	WORKSHOP MANUAL 6RB1-6RB1	000000	000000
IDE22200	IDE-2220	WORKSHOP MANUAL C240 (IN	000000	000000
IDE22300	IDE-2230	WORKSHOP MAN.4FA1,4FB1,4F	000000	000000
IDE22600	IDE-2260	WORKSHOP MANUAL 3L SERIES	000000	000000
IDE80100	IDE-8010	SPECIAL TOOL LIST (COMP.DI	000000	000000
IDE80200	IDE-8020	LABOR TIME GUIDE	000000	000000
IDE90100	IDE-9010	WALL CHART C240-SET	000000	000000
IDE90700	IDE-9070	WALL CHART 4BD1 (LOG. CRO	000000	000000
IDE90800	IDE-9080	WALL CHART 4BD1 (LAT. CRO	000000	000000
IDE90900	IDE-9090	WALL CHART 4BD1 (LUBRICAN	000000	000000
IDE91000	IDE-9100	WALL CHART 6BD1 (LOG. CRO	000000	000000
IDE91100	IDE-9110	WALL CHART 6BD1T (LOG. CR	000000	000000
IDE91200	IDE-9120	WALL CHART 6BD1 (LAT. CRO	000000	000000
IDE91300	IDE-9130	WALL CHART 6BD1 (LUBRICAN	000000	000000
IDE91400	IDE-9140	WALL CHART E120 (LOG. CRO	000000	000000
IDE91500	IDE-9150	WALL CHART E120 (LAT. CRO	000000	000000
IDE91600	IDE-9160	WALL CHART E120 (LUBRICAN	000000	000000
IDE91800	IDE-9180	WALL CHART 2KC1 (LAT.CROS	000000	000000
IDE91900	IDE-9190	WALL CHART 2KC1 (LUBRICAN	000000	000000
IDE92000	IDE-9200	WALL CHART 3KC1 (LAT. CRO	000000	000000
IDE92100	IDE-9210	WALL CHART 3KC1 (LUBRICAN	000000	000000
IDE92200	IDE-9220	WALL CHART 2/3KC1	000000	000000
IDE92300	IDE-9230	WALL CHART 2/3KC1 (LAT.CR	000000	000000
IDE92400	IDE-9240	WALL CHART 4JA/B1 (LAT. C	000000	000000
IDE92500	IDE-9250	WALL CHART 4JA/B1 (LOG. C	000000	000000
IDE92600	IDE-9260	WALL CHART C240 (LOG.CROS	000000	000000
IDE92700	IDE-9270	WALL CHART C240 (LAT. CRO	000000	000000
IED00100	IED-0010	MANUAL, INST. 6BD1M	000000	000000
IED00200	IED-0020	MSHA REGISTR. FORM (SEE R	000000	000000
IED02910	IED-0291	ISUZU J-SERIES DIESEL	000000	000000
IED1280C0	IED-1280-C	COOLING	000000	000000
IED1280I0	IED-1280-I	IND/OFF HWY & AGR SUP	000000	000000
IED1280M0	IED-1280-M	MARINE SUP	000000	000000
IED128000	IED-1280-0	ON HIGHWAY SUP	000000	000000

IMWE6BD101	IM-WE-6BD1-001	WORKSHOP MANUAL UM6BD1MTC	000000	000000
INJSE0110	INJ-SE-011	WORKSHOP MANUAL INJECTION	000000	000000
INVSE0310	INV-SE-031	INJECTION PUMP VE TYPE	000000	000000
ISP10010	ISP-1001	IDNA SOURCED PARTS CATALO	000000	000000
ISTSVC4341	IST-SVC-4341	'93 NPR W4 SERVICE MANUAL	000000	000000
IV6210000	IV-6210-00	BINDER; ISUZU 2"	000000	000000
J2288820A0	J-22888-20A	INSTALLER: REMOVER	000000	000000
J22912010	J-22912-01	INSTALLER: BEARING REMOVE	000000	000000
J265080	J-26508	INSTALLER: OIL SEAL	000000	000000
J265400	J-26540	INSTALLER: OIL SEAL FRT C	000000	000000
J290400	J-29040	OUTPUT SHAFT BRG. TOOL	000000	000000
J29768A0	J-29768-A	INSTALLER: HOLDING SUPPOR	000000	000000
J297690	J-29769	INSTALLER: OIL SEAL TRANS	000000	000000
J338510	J-33851	INSTALLER: MAINSHAFT COLL	000000	000000
J366290	J-36629	INSTALLER:WRENCH-MAINSHAF	000000	000000
J80920	J-8092	DRIVE HANDLE	000000	000000
J8614010	J-8614-01	OUTPUT FLANGE HOLDER	000000	000000
LADKIT10	L-ADKIT-1	DISCONTINUED: AD KIT	000000	000000
LC240I20	L-C240I-2	INDUSTRIAL ENGINE-LIT C24	000000	000000
LC240I30	L-C240I-3	INDUSTRIAL ENGINE-LIT C24	000000	000000
LC240M10	L-C240M-1	ISUZU MARINE DIESEL QD60	000000	000000
LC240OEPU1	L-C240OEPU-1	C240 OPEN & ENCLOSED PU L	000000	000000
LC240OPU20	L-C240OPU-2	OPU-LIT: C240	000000	000000
LC240PU50	L-C240PU-5	ISUZU DIESEL PU C240	000000	000000
LFOLDER10	L-FOLDER-1	GENERIC FOLDER W/LOGO ON	000000	000000
LG4BEWE580	LG4BE-WE-58	WORKSHOP MANUAL	000000	000000
LKCBMINE10	L-KCBMINE-1	K-SERIES, C240 & B-SERIES	000000	000000
LUM6BD1MTC	L-UM6BD1MTC	ISUZU MARINE UM6BD1 MTC I	000000	000000
L041D0	L-041-D	INSTALLATION DRAWING	000000	000000
L051C0	L-051-C	DRAWING (X-14335-001)	000000	000000
L061B0	L-061-B	INSTALLATION DRAWING	000000	000000
L086A0	L-086-A	DRAWING LAYOUT-TRANS ADAP	000000	000000
L086C0	L-086-C	DRAWING LAYOUT-TRANS ADAP	000000	000000
L114A0	L-114-A	SHUTDOWN SOLENOID ASM. IN	000000	000000
L115A0	L-115-A	THROTTLE ASM INSTRUCTIONS	000000	000000
L135A0	L-135-A	INSTALLATION DRAWING	000000	000000
L2AB1M10	L-2AB1M-1	ISUZU DIESEL MARINE QD-27	000000	000000
L2KC1I30	L-2KC1I-3	IND 2KC1 (REV. 3/92)	000000	000000
L2K3KPU30	L-2K3KPU-3	2K/3K OPU	000000	000000
L240MGS10	L-240MGS-1	ISUZU MAR/GEN LIT	000000	000000
L3AB1I50	L-3AB1I-5	IND. 3AB1-LIT	000000	000000
L3KC1I10	L-3KC1I-1	GOTO L-3KC1I-3("C")	000000	000000
L3KC1I30	L-3KC1I-3	IND. 3KC1-LIT	000000	000000
L3KR1I30	L-3KR1I-3	IND. 3KR1-LIT	000000	000000
L3LB1I10	L-3LB1I-1	INDUSTRIAL LIT. FOR 3LB1I	000000	000000
L3LB1I20	L-3LB1I-2	INDUSTRIAL LIT. FOR 3LB1I	000000	000000
L3LD1I10	L-3LD1I-1	INDUSTRIAL LIT. FOR 3LD1I	000000	000000

L3LD1I20	L-3LD1I-2	INDUSTRIAL LIT. FOR 3LD1I	000000	000000
L3LSERIES2	L-3LSERIES-1	FOLD OUT BROCHURE 3LB/3LD	000000	000000
L4BD1A10	L-4BD1A-1	LITERATURE 4BD1A:SALES	000000	000000
L4BD1I20	L-4BD1I-2	ISUZU DIESEL IND. 4BD1	000000	000000
L4BD1I30	L-4BD1I-3	ISUZU DIESEL IND. 4BD1	000000	000000
L4BD1PU10	L-4BD1PU-1	CPU-LIT 4BD1	000000	000000
L4BD1PU20	L-4BD1PU-2	CPU-LIT 4BD1	000000	000000
L4BD1TA30	L-4BD1TA-3	AUTO 4BD1T LIT.	000000	000000
L4BD1TI30	L-4BD1TI-3	ISUZU DIESEL IND 4BD1T	000000	000000
L4BD1TI40	L-4BD1TI-4	ISUZU DIESEL IND 4BD1T	000000	000000
L4BD2A10	L-4BD2A-1	LITERATURE 4BD2A: SALES	000000	000000
L4JB1I30	L-4JB1I-3	IND. 4JB1-LIT	000000	000000
L4JB1I40	L-4JB1I-4	IND. 4JB1-LIT	000000	000000
L4JB1OEPU1	L-4JB1OEPU-1	4JB1 OPEN & ENCLOSED PU-	000000	000000
L6BB1I10	L-6BB1I-1	LITERATURE - 6BB1 ENGINES	000000	000000
L6BB1PU10	L-6BB1PU-1	LITERATURE - 6BB1 CPU	000000	000000
L6BD1I20	L-6BD1I-2	ISUZU DIESEL IND 6BD1	000000	000000
L6BD1I30	L-6BD1I-3	ISUZU DIESEL IND 6BD1	000000	000000
L6BD1M10	L-6BD1M-1	ISUZU MARINE DIESEL QD150	000000	000000
L6BD1OPU20	L-6BD1OPU-2	OPU-LIT: 6BD1	000000	000000
L6BD1PU30	L-6BD1PU-3	ISUZU DIESEL PU 6BD1	000000	000000
L6BD1PU40	L-6BD1PU-4	ISUZU DIESEL PU 6BD1	000000	000000
L6BD1TA20	L-6BD1TA-2	ISUZU DIESEL AUTO 6BD1T	000000	000000
L6BD1TA30	L-6BD1TA-3	ISUZU DIESEL AUTO 6BD1T	000000	000000
L6BD1TI30	L-6BD1TI-3	ISUZU DIESEL IND. 6BD1T	000000	000000
L6BD1TI40	L-6BD1TI-4	ISUZU DIESEL IND. 6BD1T	000000	000000
L6BG1TA10	L-6BG1TA-1	LITERATURE 6BG1TA: SALES	000000	000000
L6BG1TI10	L-6BG1TI-1	TURBO IND ENGINE 6BG1T	000000	000000
L6BG1TI20	L-6BG1TI-2	TURBO IND ENGINE 6BG1T	000000	000000
L6RB1I50	L-6RB1I-5	ISUZU DIESEL IND. 6RB1	000000	000000
L6RB1TI30	L-6RB1TI-3	ISUZU DIESEL IND 6RB1T	000000	000000
L6RB1TI40	L-6RB1TI-4	ISUZU DIESEL IND 6RB1T	000000	000000
L6SA1I30	L-6SA1I-3	IND. 6SA1-LIT	000000	000000
L6SA1TA20	L-6SA1TA-2	ISUZU DIESEL AUTO 6SA1T	000000	000000
L6SA1TI30	L-6SA1TI-3	ISUZU DIESEL IND. 6SA1T	000000	000000
L6SA1TI40	L-6SA1TI-4	ISUZU DIESEL IND. 6SA1T	000000	000000
M11199720	M1119972	DISCONTINUED	000000	000000
M11350720	M1135072	DISCONTINUED	000000	000000
POF1810	POF181	PARTS ORDER FORM	000000	000000
PT3001000	PT-3001-00	"GO TO" PARTS LISTING BOO	000000	000000
PT3001010	PT-3001-01	"GO TO" PARTS LISTING BOO	000000	000000
PT3002000	PT-3002-00	REVERSE "GO TO" LISTING B	000000	000000
PT3002010	PT-3002-01	REVERSE "GO TO" LISTING B	000000	000000
PT3003000	PT-3003-00	OEM SPECIFICATION LIST	000000	000000
PT3004000	PT-3004-00	OPEN & ENCLOSED P.U. PART	000000	000000
PT3005000	PT-3005-00	MARINE PARTS LIST	000000	000000
PT3006000	PT-3006-00	PARTS/WORKSHOP MANUAL: TR	000000	000000

PT3007000	PT-3007-00	PARTS/WORKSHOP MANUAL: TR	000000	000000
P000010010	P-00001-001	ISUZU BANNER 11 X 3	000000	000000
P000020010	P-00002-001	DISCONTINUED: PENNANT	000000	000000
P000040010	P-00004-001	ISUZU FLAG 4 X 3	000000	000000
P000050010	P-00005-001	BASEBALL JERSEY (MED)	000000	000000
P000050020	P-00005-002	BASEBALL JERSEY (MED)	000000	000000
P000050030	P-00005-003	BASEBALL JERSEY (LARGE)	000000	000000
P000050040	P-00005-004	BASEBALL JERSEY (X-LARGE)	000000	000000
P000050050	P-00005-005	BASEBALL JERSEY (XX-LARGE)	000000	000000
P000050060	P-00005-006	T SHIRT NEW LOGO (XXX-LARG	000000	000000
P000090010	P-00009-001	ISUZU TIE	000000	000000
P000100010	P-00010-001	ISUZU KEY HOLDER	000000	000000
P000110010	P-00011-001	ISUZU WORLD TIME ALARM CL	000000	000000
P000120020	P-00012-002	ISUZU CALCULATOR	000000	000000
P000140020	P-00014-002	"ISUZU" ROLL WRITER PEN	000000	000000
P000140030	P-00014-003	DISCONTINUED	000000	000000
P000150010	P-00015-001	ISUZU DISPOSABLE LIGHTER	000000	000000
P000160010	P-00016-001	BELT BUCKLE	000000	000000
P000170010	P-00017-001	ISUZU KOOZIE CUP: W/INSER	000000	000000
P000170020	P-00017-002	KOOZIE CUP (WITHOUT INSER	000000	000000
P000180010	P-00018-001	ISUZU MAGNETS	000000	000000
P000190010	P-00019-001	COFFEE MUG	000000	000000
P000200010	P-00020-001	BASEBALL JERSEY (MED)	000000	000000
P000200020	P-00020-002	BASEBALL JERSEY (MED)	000000	000000
P000200030	P-00020-003	ISUZU T-SHIRTS (LARGE)	000000	000000
P000200040	P-00020-004	ISUZU T-SHIRTS-XL	000000	000000
P000200050	P-00020-005	ISUZU T-SHIRT (XX LARGE)	000000	000000
P000200060	P-00020-006	ISUZU T-SHIRTS (XXX LARGE)	000000	000000
P000210010	P-00021-001	POLY MESH BASEBALL CAP	000000	000000
P000210020	P-00021-002	BASEBALL CAP (EMBROIDERED	000000	000000
P000220010	P-00022-001	SOLID TWILL RED CAP	000000	000000
P000230010	P-00023-001	ISUZU EMBLEM (DISCONTINUE	000000	000000
P000240010	P-00024-001	GOLF SHIRT (Sm) WHITE	000000	000000
P000240020	P-00024-002	GOLF SHIRT (Med) WHITE	000000	000000
P000240030	P-00024-003	GOLF SHIRT (Lrg) WHITE	000000	000000
P000240040	P-00024-004	GOLF SHIRT (XL) WHITE	000000	000000
P000240050	P-00024-005	GOLF SHIRT (XXL) WHITE	000000	000000
P000240060	P-00024-006	GOLF SHIRT (XXXL) WHITE	000000	000000
P000250010	P-00025-001	ISUZU STICKER 8.5"X 18"	000000	000000
P000260010	P-00026-001	GOLF SHIRT (SM) BLACK	000000	000000
P000260020	P-00026-002	GOLF SHIRT (Med) BLACK	000000	000000
P000260030	P-00026-003	GOLF SHIRT (Lrg) BLACK	000000	000000
P000260040	P-00026-004	GOLF SHIRT (XL) BLACK	000000	000000
P000260050	P-00026-005	GOLF SHIRT (XXL) BLACK	000000	000000
P000260060	P-00026-006	GOLF SHIRT (XXXL) BLACK	000000	000000
P121390	P12139	COOLER; GEAR OIL	000000	000000
P121430	P12143	HOSE	000000	000000

P121490	P12149	DISCONTINUED	000000	000000
P121500	P12150	DISCONTINUED	000000	000000
P124040	P12404	DISCONTINUED	000000	000000
P124060	P12406	BRACKET	000000	000000
P124150	P12415	DISCONTINUED	000000	000000
P124210	P12421	DISCONTINUED	000000	000000
P131490	P13149	DISCONTINUED	000000	000000
P222040	P22204	DISCONTINUED	000000	000000
P222110	P22211	HOSE	000000	000000
P262020	P26202	DISCONTINUED	000000	000000
P262140	P26214	DISCONTINUED	000000	000000
P323800	P32380	DISCONTINUED	000000	000000
P443730	P44373	DISCONTINUED	000000	000000
P52500A0	P52500A	DISCONTINUED	000000	000000
P525060	P52506	PLATE; BACK	000000	000000
P525230	P52523	DISCONTINUED	000000	000000
P525250	P52525	GASKET	000000	000000
P535070	P53507	GASKET; EXAHUST QD40	000000	000000
P535250	P53525	DISCONTINUED	000000	000000
P546010	P54601	DISCONTINUED	000000	000000
P564250	P56425	DISCONTINUED	000000	000000
P566050	P56605	DISCONTINUED	000000	000000
P626210	P62621	DISCONTINUED	000000	000000
P627000	P62700	DISCONTINUED	000000	000000
P636210	P63621	DISCONTINUED	000000	000000
P920950	P92095	DISCONTINUED	000000	000000
P921400	P92140	DISCONTINUED	000000	000000
P960810	P96081	DISCONTINUED	000000	000000
QDS1790	QDS-179	GOTO QDS179	000000	000000
QDS6810	QDS681	SPANISH WARRANTY REGISTRA	000000	000000
R114400082		TURBO, REMAN	000000	000000
R11440009C		CORE: TURBO, REMAN	000000	000000
R114400096		TURBO, REMAN	000000	000001
R11440010C		CORE; TURBO, REMAN	000000	000000
R114400107		TURBO, REMAN	000000	000000
R11440013C		CORE; TURBO, REMAN	000000	000000
R114400133		TURBO, REMAN	000000	000000
R114400135	R11440 0135	REMANUFACTURED TURBOCHARG	000001	000000
R11440016C		CORE;TURBO, REMAN	000000	000000
R114400163		TURBO, REMAN	000000	000000
R114400164	R11440 0164	TURBO, REMAN	000000	000000
R11440018C		CORE;TURBO, REMAN	000000	000000
R114400187		TURBO, REMAN	000000	000000
R114400208		TURBO, REMAN	000000	000000
R114400210		TURBO, REMAN	000000	000000
R114400236		TURBO, REMAN	000000	000000
R18110018C		CORE; STARTER, REMAN	000000	000000

R181100180		STARTER, REMAN	000000 000000
R18110019C		CORE; STARTER, REMAN	000000 000000
R181100191		STARTER, REMAN	000000 000000
R18110023C		CORE; STARTER, REMAN	000000 000000
R181100230		STARTER, REMAN	000000 000000
R181100264		STARTER, REMAN	000000 000000
R18120024C		CORE; GENERATOR, REMAN	000000 000000
R181200249		GENERATOR, REMAN	000000 000000
R181200303		GENERATOR, REMAN	000000 000000
R18120031C		CORE; GENERATOR, REMAN	000000 000000
R181200314		GENERATOR, REMAN	000000 000001
R181200335		GENERATOR, REMAN	000000 000000
R18120038C		CORE;GENERATOR, REMAN	000000 000000
R181200382		GENERATOR, REMAN	000000 000000
R18120039C		CORE; GENERATOR, REMAN	000000 000000
R181200394		GENERATOR, REMAN	000000 000000
R181200397	R18120 0397	GENERATOR, REMAN	000000 000000
R581100080		STARTER, REMAN	000000 000000
R58110016C		CORE;STARTER, REMAN	000000 000000
R581100166		STARTER, REMAN	000000 000000
R581100169	R58110 0169	STARTER, REMAN	000000 000004
R581100192		STARTER, REMAN	000000 000000
R581100215		STARTER, REMAN	000000 000000
R581200164		STARTER, REMAN	000000 000000
R581200212		GENERATOR, REMAN	000001 000000
R581200358		GENERATOR, REMAN	000000 000000
R894133338		REMANUFACTURED STARTER	000000 000000
R894366525	R89436 6525	STARTER, REMAN	000000 000000
R894401793		GENERATOR, REMAN	000000 000000
R894416351	R89441 6351	TURBO, REMAN	000000 000000
R894418320		TURBO, REMAN	000000 000000
R89446205C		CORE; GENERATOR, REMAN	000000 000000
R894462057		GENERATOR, REMAN	000001 000000
R89701147C		CORE; TURBO, REMAN	000000 000000
R897011474		TURBO, REMAN	000000 000000
R89702986C		CORE; STARTER, REMAN	000000 000000
R897029863		STARTER, REMAN	000000 000000
SAOPR1RET0	SAOPR 1RET	SUPERSEDED**RETAIL LIST	000000 000000
SAOPR10	SAOPR 1	SUPERSEDED**D/SVC PRC	000000 000000
SB20	SB-2	SERVICE BULLETIN BINDER-3	000000 000000
SB85900	SB-8590	SERVICE BULLETINS	000000 000000
SIDE24000	SIDE-2400	SLIDE; K SERIES ENGINES	000000 000000
SK11240	SK-1124	ENGINE SKETCH & TECH SHEE	000000 000000
SK11250	SK-1125	ENGINE SKETCH & TECH SHEE	000000 000000
SK11270	SK-1127	ENGINE SKETCH & TECH SHEE	000000 000000
SK11280	SK-1128	ENGINE SKETCH & TECH SHEE	000000 000000
SK11290	SK-1129	ENGINE SKETCH & TECH SHEE	000000 000000

SK11300	SK-1130	ENGINE SKETCH & TECH SHEE	000000	000000
SK11310	SK-1131	ENGINE SKETCH & TECH SHEE	000000	000000
SK11330	SK-1133	ENGINE SKETCH & TECH SHEE	000000	000000
SK11610	SK-1161	PRELIM SPEC/AUTO & INDUST	000000	000000
SK11640	SK-1164	ENGINE SKETCH & TECH SHEE	000000	000000
SK11830	SK-1183	INDUSTRIAL SPEC & TECH DA	000000	000000
SK12620	SK-1262	ASSEMBLY INSTRUC.-ENG.DEP	000000	000000
SL4000000	SL-4000-00	SALES DATA MANUAL	000000	000000
SL4001000	SL-4001-00	APPOINTMENT OF OEM-SHORT	000000	000000
SL4002000	SL-4002-00	APPLIC. FOR OEM APPOINTME	000000	000000
SL4004000	SL-4004-00	3L-SERIES SALES MATERIAL	000000	000000
SPECPARTS0	SPECIAL PARTS	SPECIAL PARTS	000000	000000
STM0010	STM-001	SERVICE TRAINING FILM	000000	000000
STS10180	STS-1018	DISASSM & REASSM OF C240	000000	000000
STS10350	STS-1035	SLIDE; 4BD1 DIESEL ENGINE	000000	000000
SV5001000	SV-5001-00	SERVICE BULLETIN BINDER-3	000000	000000
SV5002000	SV-5002-00	SERVICE BULLETINS	000000	000000
SV5003000	SV-5003-00	BINDER TABS F/SVC BULLETI	000000	000000
S000010020	S-00001-002	SALES BINDER 1.5	000000	000000
S000020010	S-00002-001	DISTRIBUTOR ADVERTISING T	000000	000000
S000030010	S-00003-001	ISUZU ENGINE DELIVERY NOT	000000	000000
S188710101	S18871 0101	OBSOLETE**P/C E120	000000	000000
S188710249	S18871 0249	OBSOLETE**P/C	000000	000000
S188710280	S18871 0280	OBSOLETE**6SA1	000000	000000
S188710297	S18871 0297	OBSOLETE**P/C	000000	000000
S188710303	S18871 0303	OBSOLETE**P/C 6BD1 (EX)	000000	000000
S188710334	S18871 0334	OBSOLETE PARTS CATALOG	000000	000000
S188710340	S18871 0340	PARTS CATALOG 6BD1	000000	000000
S188710344	S18871 0344	OBSOLETE**P/C E120	000000	000000
S188751232	S18875 1232	OBSOLETE**P/C "ITC"	000000	000000
S188751245	S18875 1245	OBSOLETE**P/C "ITC"	000000	000000
S588710069	S58871 0069	OBSOLETE**P/C 2AA/2AB	000000	000000
S588710070	S58871 0070	OBSOLETE**P/C 3AA/AB/AD1	000000	000000
S588710101	S58871 0101	OBSOLETE**P/C 4BB1	000000	000000
S588710158	S58871 0158	OBSOLETE**P/C 2KC1	000000	000000
S588710179	S58871 0179	OBSOLETE**P/C	000000	000000
S588710183	S58871 0183	OBSOLETE**P/C 4JB1	000000	000000
S588710193	S58871 0193	OBSOLETE**P/C 4BD1	000000	000000
S588710194	S58871 0194	OBSOLETE**P/C	000000	000000
S588710197	S58871 0197	OBSOLETE**P/C 4FE1	000000	000000
S588710206	S58871 0206	OBSOLETE**P/C 3KC1	000000	000000
S588710247	S58871 0247	OBSOLETE**P/C C240	000000	000000
S588710248	S58871 0248	PARTS CATALOG-Discontinue	000000	000000
S588710250	S58871 0250	OBSOLETE PARTS BOOK	000000	000000
S588710297	S58871 0297	OBSOLETE PARTS BOOK	000000	000000
TB1001000	TB-1001-00	K-SERIES CERT MINING BOOK	000000	000000
TB1002010	TB-1002-01	ISUZU DIST. DIRECTORY	000000	000000

TB1002020	TB-1002-02	ISUZU DIST. DIRECTORY	000000	000000
TB1002030	TB-1002-03	ISUZU DIST. DIRECTORY 7/9	000000	000000
TB1004000	TB-1004-00	ENG. INSTALLATION REV. PK	000000	000000
TB1005000	TB-1005-00	MSHA AFFADAVIT FORM	000000	000000
TB1006000	TB-1006-00	REQUEST:REPLACEMENT CAMSH	000000	000000
TB1007000	TB-1007-00	L-SERIES ENG. SPEC MANUAL	000000	000000
TB10690	TB1069	TRANS ADAPTION SPEC SHEET	000000	000000
TB10710	TB1071	APPLICATIONS REQUIREMENT	000000	000000
TB10730	TB-1073	GOTO TB1073	000000	000000
TB1100000	TB-1100-00	ENGINE APPLICATION MANUAL	000000	000000
TB1150S0	TB-1150-S	ENGINE SPECIFICATIONS 4JB	000000	000000
TB1150000	TB-1150-00	ENGINE SPEC. REF. MANUAL	000000	000000
TB1151000	TB-1151-00	ENGINE MODEL QUICK REF CH	000000	000000
TB1151010	TB-1151-01	ENGINE MODEL QUICK REF CH	000000	000000
TB11730	TB1173	BINDER; FOR TECH DATA BOO	000000	000000
TB12970	TB1297	ISUZU ELECTRICAL WIRING D	000000	000000
TB12980	TB-1298	MARINE INSTR. MANUAL 2AB1	000000	000000
TB1298000	TB-1298-00	MARINE INSTR. MANUAL C240	000000	000000
TB12990	TB-1299	SPECIFICATION LIST 3KC1/3	000000	000000
TI11460	TI-1146	ISUZU ENGINES FOR MINING	000000	000000
TUSE0010	TU-SE-001	SERVICE MANUAL(FOR TURBO	000000	000000
UBSIE4310	UBS-IE-431	INSTR BOOK C223	000000	000000
UBS1E4310	UBS-1E-431	INSTR BOOK C223	000000	000000
X000900030	X-00090-003	BEARING; CLUTCH PILOT	000000	000000
X030900010	X-03090-001	SCREW; #10-32 X 3/4 LONG	000021	000000
X030900020	X-03090-002	SCREW; 3/8-16 X 1" LONG	000000	000000
X030900030	X-03090-003	SCREW; #8-32 X 1/2 LONG	000000	000000
X030900050	X-03090-005	SCREW; #10-32 X 1/2 LONG	000572	000000
X030900070	X-03090-007	RD. HD. SCREW #10-32X3/4"	000000	000000
X030900080	X-03090-008	SCREW; #6-32 X 1.25LONG	000000	000000
X030900100	X-03090-010	SCREW; #8-32 X 1/2 LONG	000000	000000
X030900110	X-03090-011	# 10 - 24 X 1/2 HEX HEAD	000049	000000
X030910010	X-03091-001	SCREW; M5 X 0.8-12 FLAT H	000047	000000
X060000010	X-06000-001	SCREW; 5/16 - 18 X 1/4 LO	000009	000000
X060000020	X-06000-002	SCREW; 3/8 - 16 X 1 LONG	000000	000000
X062050030	X-06205-003	SCREW; HEX HEAD LAG=3/8"D	000135	000000
X062050040	X-06205-004	SCREW; HEX HEAD LAG 1/2 X	000000	000000
X062050050	X-06205-005	SCREW; LAG, HEX 1/2 X 7 L	000000	000000
X062050070	X-06205-007	BOLT; HEX HEAD LAG 1/2"X3	000000	000000
X070000020	X-07000-002	SCREW;SHEET METAL 1/4-14	000000	000000
X070000030	X-07000-003	#12-14 X 3/4" HEX HEAD SE	000000	000025
X081000010	X-08100-001	BUSHING; NYLON	000000	000166
X081040010	X-08104-001	PIN; COTTER 1/16 X 1/2	000000	000000
X081040020	X-08104-002	PIN; COTTER 3/32 X 3/4	001603	000002
X081500010	X-08150-001	DISCONTINUED	000000	000000
X081600010	X-08160-001	PIN; ROLL M12 DIA X 20 LO	000000	000000
X090540010	X-09054-001	DISCONTINUED	000000	000000

X090540020	X-09054-002	BOLT; SPOOL AT540 SPECI	000000	000000
X090540040	X-09054-004	BOLT; SELF-LOCKING 7/16 -	000000	000000
X090540050	X-09054-005	BOLT; 5/16 - 18 X 3/4	001424	000000
X090540060	X-09054-006	BOLT; 3/8 - 16 X 1, GR8	000247	000000
X090540070	X-09054-007	BOLT; 7/16 - 14 X 1 1/4	000000	000000
X090540080	X-09054-008	BOLT; 3/8 - 16 X 1 1/4, G	000000	000000
X090540090	X-09054-009	BOLT; 1/4 - 20 X 3/4, GR5	001011	000000
X090540100	X-09054-010	BOLT; 1/2 - 13 X 3", GR5	000000	000000
X090540120	X-09054-012	BOLT; SOCKET HEAD, 3/8 -	000058	000000
X090540130	X-09054-013	BOLT; 7/16 - 14 X 1 1/2,	000000	000000
X090540140	X-09054-014	DISCONTINUED	000000	000000
X090540150	X-09054-015	3OLT; 3/8 - 16 X 3/4	000000	000000
X090540160	X-09054-016	BOLT; 3/8 - 16 X 1 1/2	000000	000000
X090540170	X-09054-017	BOLT; 1/2 - 13 X 4 1/2	000000	000000
X090540180	X-09054-018	BOLT; FLT HD SCKT 1/4-20	000000	000000
X090540190	X-09054-019	BOLT; 5/16-18, 3/8 X 1.75	000086	000000
X090540200	X-09054-020	BOLT; 7/16-14 X 1", GR5,	000000	000000
X090540210	X-09054-021	BOLT; 5/16-18 X 1", GR5,	000025	000000
X090540220	X-09054-022	BOLT; 3/8-16 X 1", GR5, P	000354	000000
X090540230	X-09054-023	BOLT; HEX, FLANGE HEAD	000000	000000
X090540240	X-09054-024	5/16-18X1" FLANGE HD BOLT	000077	000000
X090540250	X-09054-025	BOLT; HEX 1/2-13 X 1.25 G	000022	000000
X090540260	X-09054-026	BOLT; HEX 1/2"-13 X 1 1/2	000000	000000
X090540270	X-09054-027	BOLT; HEX 5/16"-18 X 5/8	000072	000000
X090540280	X-09054-028	BOLT; HEX 1/2"-13 X 1.00	000000	000000
X090540290	X-09054-029	BOLT; HEX 1/4"-20 X 1/2 L	000000	000000
X090540300	X-09054-030	BOLT; HEX 5/16"-18 X 2 LG	000000	000000
X090540310	X-09054-031	BOLT; 3/8-16 X 2 1/4, HEX	000000	000000
X090540320	X-09054-032	BOLT; 3/8-16 X 1" BODY FI	000000	000000
X090540330	X-09054-033	BOLT; HEX 3/8-16 X 1.75,	000000	000000
X090540340	X-09054-034	BOLT; HEX 1/4-20 X 1.25	000000	000000
X090540350	X-09054-035	BOLT; HEX HEAD GR5, PLD 3	000000	000000
X090540370	X-09054-037	BOLT; 12 PT AT540	000010	000000
X090540380	X-09054-038	BOLT: 5/16-18-1	000000	000000
X090540400	X-09054-040	DISCONTINUED	000000	000000
X090540420	X-09054-042	BOLT; CARRIAGE, 3/8-16 X	000000	000000
X090540440	X-09054-044	BOLT;7/16-14X1 1/2 ALLEN	000000	000000
X090540450	X-09054-045	BOLT; 3/8-16 X 7/8 ALLEN	000000	000000
X090540460	X-09054-046	BOLT; 5/8 X 11 X 1, HEX H	000000	000000
X090540470	X-09054-047	BOLT; SCKT HD BOLT-SPL 3/	000000	000000
X090540480	X-09054-048	BOLT;HEX 1/4-20 X .625	000000	000000
X090540500	X-09054-050	BOLT; 3/8-16 X 1" FLANGE	000000	000000
X090540510	X-09054-051	DISCONTINUED	000000	000000
X090540520	X-09054-052	BOLT; HEX 1/4-20 X 1.0"	000000	000000
X090540560	X-09054-056	BOLT; 1/2-13 X 1.25 GRD#	000000	000000
X090540580	X-09054-058	BOLT; 3/8-16 X 1.0 GRD#	000024	000000
X090540630	X-09054-063	BOLT; HEX 3/4-10 X 2.0	000000	000000

X090540640	X-09054-064	BOLT; 3/8-16 X 1.25 GRD#	000035	000000
X090540680	X-09054-068	BOLT; HEX HEAD	000000	000000
X090540710	X-09054-071	BOLT; PLATED GRADE 8, 3/8	000000	000025
X090540720	X-09054-072	BOLT; LAG, HEX HEAD, 3/8	000000	000025
X090540730	X-09054-073	BOLT; 10-24 X 1/2"	000000	000025
X090540740	X-09054-074	BOLT; WIZLOCK, 1/4-20 X 3	000000	000100
X090540750	X-09054-075	BOLT; 5/8"-11 X 1 1/2", E	000000	000025
X090540760	X-09054-076	BOLT; WIZLOCK, 10-32X.50	000000	000025
X090550010		BOLT; M10X1.25-25 PLATED	000002	000000
X090550020	X-09055-002	BOLT; M8 X 1.25 - 35	000032	000000
X090550040	X-09055-004	BOLT; M10 X 1.25 - 30	000096	000000
X090550050	X-09055-005	BOLT; M6 X 1.0 - 16	000555	000000
X090550060	X-09055-006	BOLT; M8 X 1.25 - 15	000574	000000
X090550070	X-09055-007	BOLT; M8 X 1.25 - 20	000416	000000
X090550080	X-09055-008	BOLT; M8 X 1.25 - 25	000174	000000
X090550090	X-09055-009	BOLT; M8 X 1.25 - 55	000000	000000
X090550100	X-09055-010	BOLT; M8 X 1.25 - 70	000059	000000
X090550110	X-09055-011	BOLT; M8 X 1.25 - 130, GR	000142	000000
X090550120	X-09055-012	BOLT;M10 X 1.25 -15	000000	000000
X090550130	X-09055-013	BOLT; M10 X 1.25 - 35	000100	000000
X090550140	X-09055-014	BOLT; M10 X 1.5 - 20	000021	000000
X090550150	X-09055-015	X090550160X 1.5 - 25	000000	000000
X090550160	X-09055-016	BOLT; M10 X 1.5 - 40	000000	000000
X090550170	X-09055-017	DISCONTINUED	000000	000000
X090550180	X-09055-018	BOLT; M10 X 1.5 - 75	000000	000000
X090550190	X-09055-019	BOLT; M12 X 1.75 - 30	000000	000000
X090550200	X-09055-020	BOLT; M12 1.75 - 70	000000	000000
X090550210	X-09055-021	BOLT; M14 X 2.0 - 30	000000	000000
X090550220	X-09055-022	BOLT; M14 X 2.0 - 45	000000	000000
X090550230	X-09055-023	BOLT; M10 X 1.5-30 SS	000033	000000
X090550240	X-09055-024	BOLT; M4 X 0.7 - 10	000000	000000
X090550270	X-09055-027	BOLT; M10 X 1.25 - 45	000000	000000
X090550280	X-09055-028	BOLT; M8 X 1.25 - 30	000358	000000
X090550290	X-09055-029	BOLT; M8 X 1.25-60, PLD,	000000	000000
X090550310	X-09055-031	BOLT; M6 X 1.0 X 12 HEX P	000000	000000
X090550320	X-09055-032	BOLT; M10 X 1.5 X 20 SS H	000052	000000
X090550330	X-09055-033	BOLT; M8 X 1.25-50 PLD GR	000000	000000
X090550350	X-09055-035	BOLT; M6 X 1.0 X 25 HEX	000000	000000
X090550360	X-09055-036	BOLT; M5 X .8 X 25 HEX PL	000000	000000
X090550390	X-09055-039	BOLT; M12 X 1.75-25, PL, GR	000121	000000
X090550400	X-09055-040	BOLT; M14 X 1.5 X 45 SC/H	000000	000000
X090550410	X-09055-041	BOLT;M10X1.25-20 HEX HEAD	000000	000000
X090550420	X-09055-042	DISCONTINUED	000000	000000
X090550440	X-09055-044	BOLT M10XX 1.5-180 HEX	000000	000000
X090550450	X-09055-045	BOLT;M6 X 1.0 - 20	000000	000000
X090550480	X-09055-048	BOLT M10 X 1.5-50 GR.8.8	000000	000000
X090550490	X-09055-049	BOLT HEX. M8 X 1.25 X 65	000012	000000

X090550500	X-09055-050	H.H. BOLT M8X 1.25-75 DIN	000000	000000
X090550550	X-09055-055	BOLT; HEX M14 X 1.5-20MM	000000	000000
X090550610	X-0905 5061	BOLT ASM	000000	000003
X091100010	X-09110-001	NUT; 3/4-16 JAM	000000	000000
X091100020	X-09110-002	NUT; 7/16-14 REG HEX	000000	000000
X091100030	X-09110-003	NUT; 1/2-13 REG HEX	000162	000000
X091100040	X-09110-004	NUT; 1/4-20 REG HEX	000270	000000
X091100050	X-09110-005	NUT; 1/4-28 REG HEX	000405	000000
X091100060	X-09110-006	NUT; #10-32 SELF-LOCKING (001214	000000
X091100070	X-09110-007	NUT; #10-32 REG HEX, PLD	000000	000000
X091100080	X-09110-008	NUT; 5/8-18 HEX JAM	000000	000000
X091100090	X-09110-009	NUT; 5/16-18 REG HEX, PLD	001295	000000
X091100100	X-09110-010	NUT; 5/16-18 HEX, FLANGE	000000	000100
X091100110	X-09110-011	NUT; HEX 3/8-16	000117	000000
X091100120	X-09110-012	NUT; #8-32 HEX	000132	000000
X091100130	X-09110-013	NUT; 3/8-16 NYLOCK	000241	000000
X091100140	X-09110-014	NUT; 5/16-18 ACORN	000000	000000
X091100150	X-09110-015	NUT; 5/16-18 NYLOCK	000029	000000
X091100160	X-09110-016	NUT; #8-32 ACORN	000114	000000
X091100180	X-09110-018	NUT; 7/16-20 REG HEX, PLD	000000	000000
X091100190	X-09110-019	NUT; 1/4 - 20 SELF-LOCKIN	000827	000000
X091100200	X-09110-020	NUT; 3/8 X 24	000000	000000
X091100220	X-09110-022	NUT; FLANGE HEX HEAD	000060	000000
X091100240	X-09110-024	NUT; HEX 3/4-10	000050	000000
X091100270	X-09110-027	NUT; FLANGED(AUVECO 5598 O	000000	000000
X091100300	X-09110-030	NUT; 6-32 NYLOK	000000	000000
X091100330	X-09110-033	NUT; 10-24, NYLOCK	000000	000025
X091110010	X-09111-001	NUT; M6 X 1.0 HEX	000000	000000
X091110020	X-09111-002	NUT; M10 X 1.25 HEX	001395	000000
X091110030	X-09111-003	NUT; M12 X 1.25 HEX	000000	000000
X091110040	X-09111-004	NUT; M14 X 2.0 HEX	000040	000000
X091110050	X-09111-005	NUT; M5 X 0.8 LOCK/NUT(NY	000049	000000
X091110060	X-09111-006	NUT; HEX M10 X 1.5 SS QD1	000269	000000
X091110070	X-09111-007	NUT; HEX METRIC M8 X 1.25	000291	000000
X091110080	X-09111-008	NUT; HEX M10 X 1.5 CAD PL	000026	000000
X091110090	X-09111-009	DISCONTINUED	000000	000000
X091110100	X-09111-010	NUT; LOCK M8 X 1.25	000000	000000
X091110110	X-09111-011	NUT; SEMS W/GRIP WASHER M	000000	000000
X091110120	X-09111-012	NUT; M10 X 1.25 SS	000000	000000
X091110140	X-09111-014	M12 X 1.75 HEX NUT	000000	000025
X091500010	X-09150-001	WASHER; LOCK, 5/16 SPRING	002532	000000
X091500020	X-09150-002	WASHER; LOCK, 7/16 SPRING	000000	002132
X091500030	X-09150-003	WASHER; LOCK, 5/8 SPRING	000000	000000
X091500040	X-09150-004	WASHER; LOCK, 3/8 SPRING	000000	001883
X091500050	X-09150-005	WASHER; LOCK, 1/2 SPRING	000381	000000
X091500060	X-09150-006	WASHER; LOCK, 1/4 SPRING	000256	000000
X091500070	X-09150-007	WASHER; LOCK, #10 SPRING	000000	000000

X091500080	X-09150-008	WASHER; LOCK, #8	000307	000000
X091500090	X-09150-009	WASHER; LOCK SPRING 3/4	000000	000000
X091510010	X-09151-001	WASHER; LOCK, M10, DIN127	001763	000000
X091510020	X-09151-002	WASHER; LOCK, M8, DIN127	001589	000000
X091510030	X-09151-003	WASHER; LOCK, M6, DIN127	000764	000000
X091510040	X-09151-004	WASHER; LOCK, M12, DIN127	000068	000000
X091510050	X-09151-005	WASHER; LOCK, M14, DIN127	000060	000000
X091510060	X-09151-006	WASHER; LOCK, M4, DIN127	000005	000000
X091510070	X-09151-007	WASHER; LOCK, M8 DIN127A	000138	000000
X091510080	X-09151-008	WASHER; LOCK, M10 SS QD15	000072	000000
X091510090	X-09151-009	WASHER; SPRING, M8, DIN13	000000	000000
X091510100	X-09151-010	WASHER; LOCK, M5	000000	000000
X091510110	X-09151-011	WASHER; SPRING M10 WAVY T	000191	000000
X091550010	X-09155-001	WASHER; LOCK, M10, DIN127	000000	000000
X091600010	X-09160-001	SPACER; FLAT, 5/16 W/1" O	000000	000000
X091600020	X-09160-002	WASHER; FLAT, 3/8	000000	000000
X091600030	X-09160-003	WASHER; FLAT, 1/2	000399	000000
X091600040	X-09160-004	WASHER; FLAT, 1/4 PLD USS	000330	000000
X091600050	X-09160-005	WASHER; FLAT 7/64ID X 1/2	000000	000000
X091600060	X-09160-006	WASHER; FL NOM. 5/16 PLTD	000249	000000
X091600070	X-09160-007	WASHER, FLAT, 7/16 PLD	000000	000000
X091600080	X-09160-008	WASHER; FLAT, #10 PLD	000030	000006
X091600090	X-09160-009	WASHER; FLAT 3/8";SPECIAL	000381	000000
X091600100	X-09160-010	WASHER; FLAT 3/8SPL, 5/80	000000	000000
X091600120	X-09160-012	WASHER; FLAT #8	000085	000000
X091600150	X-09160-015	WASHER; FLAT #6 3/8" OD	000000	000000
X091600190	X-09160-019	WASHER; SNUBBING	000000	000000
X091600200	X-09160-020	WASHER; SNUBBING, 10GA.	000122	000075
X091610010	X-09161-001	WASHER; FLAT, M12, HARDEN	000000	000000
X091610020	X-09161-002	WASHER; FLAT, M8	001767	000000
X091610030	X-09161-003	WASHER; FLAT, M10	000204	000000
X091610040	X-09161-004	WASHER; FLAT, M10 W/M30 O	000002	000000
X091610050	X-09161-005	WASHER; FLAT, M12	000000	000000
X091610060	X-09161-006	WASHER; FLAT, M12, HARDEN	000000	000000
X091610070	X-09161-007	WASHER; FLAT, M10, SS QD1	000058	000000
X091610080	X-09161-008	WASHER; FLAT METRIC M6, D	000840	000000
X091610100	X-09161-010	WASHER; FLAT, M8, SS QD15	000000	000000
X091610110	X-09161-011	WASHER; FLAT FENDER M10 P	000127	000000
X091610130	X-09161-013	M8, FLAT, 9MM ID X24.9MM	000000	000025
X091750120	X-09175-012	CLAMP; WATER INL HOSE	000005	000000
X093020010	X-09302-001	STUD; 7/16 - 14 X 1 3/4(Q	000000	000000
X093020020	X-09302-002	STUD 7/16-14x3 1/2"	000000	000000
X093020030	X-09302-003	STUD; 7/16 - 14 X 3 1/2 C	000000	000000
X093020080	X-09302-008	STUD-3/8-16-3.43 THD 5/8L	000083	000000
X093020090	X-09302-009	STUD; 3/8-16 X 1 3/4	000249	000000
X093030010	X-09303-001	STUD; M10 X 1.5 X 58 SS Q	000010	000000
X093030020	X-09303-002	STUD; SPL QD100/150M	000000	000000

X093030030	X-09303-003	STUD;	000002	000000
X095200010	X-09520-001	STUD; WING HEAD	000000	000000
X095200020	X-09520-002	RETAINER; STUD (OPTIONAL)	000000	000000
X09520003C	X-09520-003C	RECEPTACLE:NOT FOR RESALE	000000	000000
X095200030	X-09520-003	RECEPTACLE	000000	000000
X095200050	X-09520-005	RECEPTACLE & BRACKET ASM	000000	000000
X095200070	X-09520-007	BRACKET ASM	000000	000006
X095200120	X-09520-012	LOCK: FOR SIDE PANELS	000000	000000
X095250010	X-09525-001	SPRING CLIP; THROTTLE CAB	000006	000234
X095250020	X-09525-002	RIVET: POP 1/8" SHORT	000000	000000
X095250030	X-09525-003	LATCH; LOCKING HEAVY DUTY	000000	000010
X096000010	X-09600-001	PLUG; PIPE, EXH MNFD VENT	000000	000000
X096000020	X-09600-002	LUG; PIPE 1/8-27 NPTF ST	000071	000000
X096000030	X-09600-003	PLUG; PIPE 1/4-18 NPTF QD	000005	000000
X096000040	X-09600-004	PLUG; PIPE 1/8-27 NPT, HE	000000	000000
X096000080	X-0960 0008	PIPE PLUG	000003	000004
X096100010	X-09610-001	PLUG; CAP QD27	000000	000235
X096100020	X-09610-002	DISCONTINUED	000000	000000
X096150030	X-09615-003	GROMMET; RUBBER	000000	000000
X096150040	X-09615-004	GROMMET;RUBBER	000000	000000
X096150050	X-09615-005	GROMMET;RUBBER	000004	000000
X096150070		GROMMET	000000	000972
X097040010	X-09704-001	DISCONTINUED	000000	000000
X097040020	X-09704-002	VALVE; WATER QD150M	000000	000000
X097040030	X-09704-003	COCK; DRAIN	000000	000000
X097040040	X-09704-004	DRAIN COCK; 3LD/B1	000000	000024
X097040050	X-09704-005	DRAIN COCK	000023	000000
X097070010	X-09707-001	TIE; CABLE 8"	000000	000145
X097070020	X-09707-002	TIE; CABLE, W/SCREW HOLE	000000	000000
X097150020	X-09715-002	CLIP; THROTTLE CABLE	000000	000000
X097150030	X-09715-003	CLIP; STOP CABLE	000000	000000
X097150040	X-09715-004	CLIP; WIRE HARNESS	000612	000000
X097150060	X-09715-006	CLIP; CABLE	000265	000000
X097150070	X-09715-007	CLIP; OIL LINE CABLE	000000	000000
X097150080	X-09715-008	CLIP; CABLE	000383	000000
X097150090	X-09715-009	CLIP; CABLE	000040	000000
X097150110	X-09715-011	CLIP; WIRE	000000	000000
X097150120	X-09715-012	CLIP;WIRE HARNESS	000000	000000
X097170020	X-09717-002	CLIP; ROD LH	000073	000000
X097170030	X-09717-003	CLIP; CLEVIS ROD	000000	000000
X099020010	X-09902-001	ADAPTER; PIPE, 1/8	000058	000103
X099020020	X-09902-002	ADAPTER; PIPE, 3/8 X 3 LO	000000	000000
X099020030	X-09902-003	ADAPT; PIPE 3/8"NPT EXT B	000000	000000
X099020050	X-09902-005	ADAPTER; HOSE	000000	000000
X099020060	X-09902-006	ADAPTER; HOSE	000000	000000
X099020070	X-09902-007	ADAPTER; HOSE QD150M	000002	000000
X099020080	X-09902-008	ADAPTER; HOSE QD150M	000000	000000

X099020090	X-09902-009	ADAPTER; HOSE QD150M	000002	000000
X099020100	X-09902-010	ADAPTOR; 3/8 TO 5/8	000000	000000
X099020130	X-09902-013	ADAPTOR; W/SEAL 1/2" BSP	000000	000000
X099020140	X-09902-014	STRAIGHT ADAPTOR	000000	000000
X099140020	X-09914-002	TUBING; VINYL, 5/8" ID X	000000	000000
X099140030	X-09914-003	TUBING; VINYL, 5/8" ID X	000000	000000
X099140040	X-09914-004	HOSE; O/FLOW-CUT 90991470	000012	000000
X099140050	X-09914-005	HOSE; OIL BREATHER COVER	000000	000000
X099140060	X-09914-006	TUBING; VINYL, 5/8" ID X	000000	000000
X099140090	X-09914-009	HOSE;O/FLOW-CUT-909914701	000000	000000
X099150010	X-09915-001	CLAMP; HOSE #16	000000	000038
X099150020	X-09915-002	CLAMP; HOSE #24	000013	000000
X099150030	X-09915-003	CLAMP; HOSE #20	000000	006615
X099150040	X-09915-004	CLAMP; HOSE #36	000000	000000
X099150050	X-09915-005	CLAMP; HOSE #32	000024	000067
X099150060	X-09915-006	CLAMP; HOSE #28	000051	000000
X099150070	X-09915-007	CLAMP; HOSE	000025	000000
X099150080	X-09915-008	CLAMP; HOSE #56	000000	000000
X099150090	X-09915-009	CLAMP; HOSE #48	000000	000023
X099150100	X-09915-010	CLAMP; HOSE #10	000007	000003
X099150110	X-09915-011	CLAMP; HOSE #72,6BD1T	000038	000070
X099150120	X-09915-012	CLAMP; AIR CLEANER	000058	000000
X099150140	X-09915-014	T-BOLT BAND CLAMP 3.25/62	000010	000000
X099150150	X-09915-015	CLAMP, 3" CONSTANT TORQUE	000000	000005
X099150160	X-09915-016	CLAMP, HOSE #64	000000	000000
X099150170	X-09915-017	CLAMP, 4" CONSTANT TORQUE	000000	000005
X099150180	X-09915-018	HOSE CLAMP;HIGH TORUQE	000010	000000
X099150200	X-09915-020	HOSE CLAMP;HIGH TORQUE	000010	000000
X099160010	X-09916-001	DISCONTINUED	000000	000000
X099160020	X-09916-002	CLAMP; HOSE-FUEL	000010	000000
X099160030	X-09916-003	CLAMP; HOSE-FUEL	000043	000002
X099170010	X-09917-001	CLAMP; V-BAND	000000	000000
X099200010	X-09920-001	O-RING QD150M	000064	000000
X102115770	X-10211-577	PLATE; CLUTCH, DRIVEN	000000	000000
X111290010	X-11129-001	PLUG; CUP	000000	000000
X111700020	X-11170-002	DISCONTINUED	000000	000000
X111700040	X-11170-004	COVER ASM; CYL HEAD	000000	000000
X111700080	X-11170-008	PLUG; ROCKER COVER	000000	000000
X113410050	X-11341-005	RING; SPACER, 40MM 4BD/6B	000000	000000
X113410060	X-11341-006	RING; SPACER, 32MM 4BD/6B	000000	000000
X113410070	X-11341-007	BRACE; TRANSMISSION, RH	000001	000000
X113410080	X-11341-008	BRACE; TRANSMISSION, LH	000001	000000
X113410100	X-11341-010	BRACE; TRANSMISSION, RH	000000	000000
X113410110	X-11341-011	BRACE; TRANSMISSION, LH	000000	000000
X113410120	X-11341-012	HOUSING; FLYWHEEL RWK SAE	000000	000000
X113490010	X-11349-001	DUST COVER; FLYWHEEL	000000	000000
X113600020	X-11360-002	PLUG CAP, OIL FILLER QD15	000000	000000

X113600030	X-11360-003	GASKET; TURBO, OIL CAP QD	000000	000000
X113600070	X-11360-007	DISCONTINUED	000000	000000
X117400040	X-11740-004	BREATHER; CRANKCASE, MODI	000000	000000
X11740005C	X-11740-005C	BREATHER COVER; CASTING O	000000	000000
X117400050	X-11740-005	BREATHER COVER;CRK/CASE Q	000000	000000
X117400060	X-11740-006	COVER PLATE; OIL BREATHER	000000	000000
X117400070	X-11740-007	GAUZE; FILTER QD150M	000000	000000
X117400120	X-11740-012	GASKET; BREATHER COVER QD	000008	000000
X117510010	X-11751-001	PIPE; OIL FILLER BRK IS X	000000	000000
X117510030	X-11751-003	BRACKET; REQD FOR X-11751	000000	000000
X117510050	X-11751-005	OIL FILLER EXTENSION TUBE	000000	000000
X117600020	X-11760-002	DIP STICK; OIL PAN RH QD1	000000	000000
X117600050	X-11760-005	GAUGE; OIL LEVEL QD150M	000000	000000
X117660010	X-11766-001	TUBE ASM; GUIDE QD150M	000000	000000
X117660020	X-11766-002	BRACKET; DIP STICK TUBE Q	000000	000000
X117660060	X-11766-006	TUBE ASM; GUIDE	000000	000000
X117710020	X-11771-002	MOUNT; ENGINE BRACKET ASM	000000	000000
X117710030	X-11771-003	MOUNT;ENG.BRKT.FRONT	000000	000000
X117710070	X-11771-007	MOUNT; ENGINE SPACER, FRO	000000	000000
X117710080	X-11771-008	MOUNT; ENGINE, RH REAR 18	000000	000000
X117710090	X-11771-009	MOUNT; ENGINE, LH 18"	000000	000000
X117710100	X-11771-010	MOUNT; ENGINE, RH REAR 18	000000	000000
X117710110	X-11771-011	MOUNT; ENGINE, LH REAR 18	000000	000000
X117710210	X-11771-021	MOUNT; ENGINE,RH FRONT MN	000000	000000
X117710220	X-11771-022	MOUNT; ENGINE,LH FRONT MN	000000	000077
X117710230	X-11771-023	MOUNT; ENG FOOT, REAR TWI	000000	000000
X117710240	X-11771-024	MOUNT; ENG FOOT, RH FRONT	000000	000000
X117710250	X-11771-025	MOUNT; ENG FOOT, LH FRONT	000000	000000
X117710260	X-11771-026	MOUNT; ENGINE MNTG PLATE	000000	000000
X117710270	X-11771-027	PLATE; MOUNTING ENGINE GE	000000	000001
X117710280	X-11771-028	MOUNT; ENGINE FOOT, REAR,	000000	000000
X117710290	X-11771-029	MOUNT; ENGINE, SHOCK ABSO	000000	000029
X117710320	X-11771-032	MOUNT; MARINE GEN SET	000000	000000
X117710340	X-11771-034	MOUNT; ENGINE FOOT, REAR	000000	000000
X117710430	X-11771-043	BRACKET; ENGINE MOUNT RH	000000	000000
X117710440	X-11771-044	BRACKET; ENG MTG, LH	000000	000000
X117710450	X-11771-045	MOUNT; ENGINE FOOT, RH RE	000000	000000
X117710460	X-11771-046	MOUNT; ENGINE FOOT, LH RE	000000	000000
X117710480	X-11771-048	DISCONTINUED	000000	000000
X117710520	X-11771-052	MOUNT; VIBR QD27/40M	000000	000002
X117710530	X-11771-053	MOUNT; VIBR QD60M	000004	000105
X117710540	X-11771-054	DISCONTINUED	000000	000000
X117710560	X-11771-056	DISCONTINUED	000000	000000
X117710580	X-11771-058	SUPPORT; ENGINE REAR FMC	000000	000000
X117710620	X-11771-062	BRACKET; LH ENGINE	000000	000000
X117710640	X-11771-064	PLATE; SUPPORT (RH ENG MO	000000	000000
X117710650	X-11771-065	MOUNT; ISOLATION	000000	000000

X117710700	X-11771-070	FOOT; HURTH 710A	000000	000000
X117710710	X-11771-071	MOUNT; FLEXIBLE ENGINE	000000	000000
X117710720	X-11771-072	SUPPORT; ENGINE FRONT FMC	000000	000000
X117710740	X-11771-074	MOUNT; MARINE GEN SET	000000	000048
X117710770	X-11771-077	MOUNT; ENGINE FRONT	000000	000003
X117710780	X-11771-078	MOUNT; ENGINE REAR	000000	000000
X117710870	X-11771-087	PEDESTAL; ENG.MNT. RR(LH-	000000	000052
X117710880	X-11771-088	PEDESTAL; ENG.MNT. FRT-LH	000000	000011
X117710890	X-11771-089	PEDESTAL; ENG.MNT. FRT-RH	000000	000010
X117710910	X-11771-091	PEDESTAL; ENG.MNT. FRT-RH	000000	000046
X117710920	X-11771-092	PEDESTAL; ENG.MNT. FRT-LH	000001	000000
X117710970	X-11771-097	BRKT:TRANS. SUPPORT (LH &	000000	000000
X117711080	X-11771-108	MOUNT; ENGINE FOOT	000000	000006
X117711100	X-11771-110	PEDESTAL; FRT (LH)	000000	000013
X117711110	X-11771-111	PEDESTAL; FRT (RH)	000000	000017
X117711130	X-11771-113	FOOT; ENGINE, LEFT FRONT	000000	000017
X117711140	X-11771-114	FOOT; ENGINE, RIGHT FRONT	000009	000000
X117711150	X-11771-115	MOUNT; PEDESTALS LH, RH &	000000	000009
X117711160	X-11771-116	FOOT; ENGINE REAR	000000	000005
X117711170	X-11771-117	MOUNT; PEDESTALS LH, RH &	000000	000010
X117711190	X-11771-119	MOUNT; ENGINE, FRONT	000000	000010
X117711200	X-11771-120	MOUNT; ENGINE, REAR	000000	000010
X117770030	X-11777-003	HANGER; FRONT ENG LIFT HO	000000	000000
X117770040	X-11777-004	HANGER; RR QD27/40/60M	000000	000000
X123310070	X-12331-007	ADAPTOR; SPOOL AT540 STD	000000	000000
X123310270	X-12331-027	ADAPTOR; F/W HOUSING MARI	000000	000000
X123310490	X-12331-049	SPOOL; 4BD1/FORD	000000	000000
X123310500	X-12331-050	SPOOL; 6BD1/FORD	000002	000000
X123310540	X-12331-054	SLEEVE; PILOT BRG 4BB/BD1	000000	000000
X123310550	X-12331-055	FLYWHEEL ASM	000000	000000
X123310560	X-12331-056	SPOOL; 6BD1/CHRYSLER	000000	000000
X123310580	X-12331-058	SPACER RING; FLYWHEEL	000000	000000
X123310610	X-12331-061	DISCONTINUED	000000	000000
X123310660	X-12331-066	SPOOL; DRIVE	000000	000000
X123310670	X-12331-067	SPOOL; 4BD1/GM-HYD	000000	000000
X123310680	X-12331-068	SPOOL; 6BD1/HYDRAMATIC	000000	000000
X123310690	X-12331-069	DISCONTINUED	000000	000000
X12331070C	X-12331-070C	CASTING FOR X-12331-070	000000	000000
X123310700	X-12331-070	ADAPTOR RING; FLYWHEEL	000000	000000
X123310710	X-12331-071	SPOOL; DRIVE	000000	000000
X123310750	X-12331-075	FLYWHEEL (REWORKED) C2	000000	000000
X123310840	X-12331-084	FLYWHEEL	000000	000000
X123320010	X-12332-001	SPOOL KIT; ALLLISTON AT-54	000000	000000
X123320060	X-12332-006	SPOOL KIT; 6BD1/CHRYSLER	000000	000000
X123320070	X-12332-007	SPOOL KIT; 4BD1/FORD	000000	000000
X123320080	X-12332-008	NPOOL KIT; 6BD1/FORD	000002	000000
X123320090	X-12332-009	SPOOL KIT; 4BD1/GM-HYD	000000	000000

X123320100	X-12332-010	SPOOL KIT; 6BD1/GM-HYD	000000	000000
X123320110	X-12332-011	SPOOL KIT 6BD1/HYD	000004	000000
X123320120	X-12332-012	SPOOL KIT; ALLISTON AT54	000002	000000
X123320140	X-12332-014	SPOOL KIT; ALLISON QD145A	000000	000000
X123320150	X-12332-015	SPOOL KIT; ALLISTON AT-54	000000	000000
X123320160	X-12332-016	SPOOL KIT; CHRYSLER QD100	000000	000000
X12371001C	X-12371-001C	CASTING FOR PULLEY X-1237	000000	000000
X123710010	X-12371-001	PULLEY; 1 GROOVE ADAPTOR	000006	000000
X12371002C	X-12371-002C	CASTING FOR PULLEY X-1237	000111	000000
X123710020	X-12371-002	PULLEY; SEA WATER PUMP QD	000000	000000
X123710030	X-12371-003	PULLEY; SEA WATER PUMP QD	000000	000005
X123710040	X-12371-004	PULLEY; ALT QD27/40/60	000001	000000
X123710060	X-12371-006	PULLEY; 1 GROOVE QD130/14	000000	000000
X12371009C	X-12371-009C	CASTING FOR X-12371-009	000000	000000
X123710090	X-12371-009	PULLEY; 3 GROOVE	000000	000000
X12371011C	X-12371-011C	CASTING FOR PULLEY X-1237	000000	000060
X123710110	X-12371-011	PULLEY;SPECIAL	000000	000001
X123710130	X-12371-013	PULLEY; ALTERNATOR QD145M	000000	000000
X123710140	X-12371-014	PULLEY; SEA WTR PUMP QD14	000002	000000
X12371015C	X-12371-015C	CASTING FOR X-12371-015 P	000000	000059
X123710150	X-12371-015	PULLEY; 2 GROOVE QD90/100	000002	000000
X123710160	X-12371-016	PULLEY; 1 GROOVE QD90/100	000000	000041
X123710170	X-12371-017	PULLEY; F/PUMP X-26230-02	000002	000000
X123710200	X-12371-020	PULLEY; ALTERNATOR QD150M	000004	000000
X123710220	X-12371-022	PULLEY; CRANKSHAFT 4BD1	000000	000000
X123710260	X-12371-026	PULLEY; 1 GROOVE 2KC1/3KC	000022	000000
X123710300	X-12371-030	PULLEY AUX	000000	000005
X123710310	X-12371-031	PULLEY; AUXILIARY	000000	000006
X123710320	X-12371-032	PULLEY;AUXLIARY	000000	000008
X132010010	X-13201-001	FILTER; OIL (SPIN-ON)QD24	000000	000168
X132010020	X-13201-002	FILTER;OIL (SPIN-ON)QD60/9	000000	000000
X132010060	X-13201-006	FILTER; LUBE OIL (SPIN-ON	000000	000000
X132010080	X-13201-008	ELEMENT; OIL FILTER	000000	000000
X132010090	X-13201-009	FILTER; OIL (SPIN-ON) 2A/3	000000	000228
X132010110	X-13201-011	FILTER; OIL (SPIN ON) 6SA	000000	000354
X13201012D		FILTER; OIL (SPIN-ON) 6BD/B	000000	000000
X132010120		FILTER; OIL (SPIN-ON) 6BD/B	000000	000425
X132010130	X-13201-013	FILTER; OIL (SPIN-ON)E120/	000000	000000
X132010140	X-1320 1014	OIL FILTER, 4JB1	000000	000264
X132100010	X-13210-001	ADAPTOR KIT; LUBE OIL C24	000012	000000
X132100020	X-13210-002	ADAPTER; OIL FILTER	000000	000000
X132100030	X-13210-003	STUD FOR X-13210-001	000000	000000
X132100050	X-13210-005	ADAPTOR KIT; LUBE OIL QD6	000005	000000
X132100060	X-13210-006	DISCONTINUED	000000	000000
X132100080	X-13210-008	RING; SQUARE FOR X-13210-	000000	000000
X132100090	X-13210-009	RING; SQUARE FOR X-13210-	000000	000000
X132100100	X-13210-010	RING; SQUARE FOR X-13210-	000002	000000

X132120020	X-13212-002	DISCONTINUED	000000	000000
X132120050	X-13212-005	HOSE ASM	000000	000000
X132120060	X-13212-006	FILTER KIT; OIL REMOTE QD	000000	000000
X132120070	X-13212-007	DISCONTINUED	000000	000000
X132130010	X-13213-001	PUMP KIT*DISCONTINUED*	000000	000000
X132190010	X-13219-001	BLOCK; REMOTE OIL JUNCTIO	000000	000000
X132190050	X-13219-005	PLATE; REMOTE OIL JUNCTIO	000000	000012
X132190070	X-13219-007	BLOCK; REMOTE OIL JUNCTIO	000006	000000
X132190100	X-13219-010	PLATE; TAPPED	000000	000023
X132190110	X-13219-011	BRACKET; FILTER MTG.	000000	000000
X132190120	X-13219-012	JUNCTION BLOCK	000000	000000
X132400010	X-13240-001	FILTER	000000	000000
X132400100	X-13240-010	SEPARATOR ASM; FUEL/WATER	000000	000000
X132400120	X-13240-012	FITTING; STRAIGHT	000000	000000
X132400130	X-13240-013	FITTING; 90 DEGREE	000000	000000
X132400150	X-13240-015	FILTER	000000	000976
X132400170	X-13240-017	FILTER; CARTRIDGE, FUEL/W	000000	000000
X132400200	X-13240-020	ELEMENT;FUEL E120/6RB1	000000	000000
X132400210	X-13240-021	FILTER;FUEL (SPIN-ON) E120	000181	000634
X132400240	X-13240-024	FILTER; FUEL (SPIN-ON) 6B	000002	005328
X133110020	X-13311-002	PIPE; OIL GALLERY TO INJ	000000	000000
X136110010	X-13611-001	HOSE; WATER PUMP INLET QD	000000	000000
X136110040	X-13611-004	TUBE; COOLING QD150M	000000	000010
X136420010	X-13642-001	SPACER; FAN 42MM QD145A	000000	000000
X136420020	X-13642-002	SPACER; FAN	000000	000000
X136710010	X-13671-001	BELT: ALTERNATOR:QD27/40/	000000	000167
X136710020	X-13671-002	V-BELT; RAW WATER PUMP QD	000000	000092
X136710030	X-13671-003	V-BELT; RAW WATER PUMP QD	000000	000055
X136710040	X-13671-004	V-BELT; RAW WATER PUMP QD	000000	000000
X137120020	X-13712-002	ADAPTER	000029	000000
X137130010	X-13713-001	ELBOW; WATER OUTLET QD27/	000000	000000
X137130011	X-13713-001	ELBOW; WATER OUTLET QD27/	000000	000000
X137130020	X-13713-002	GASKET; WATER OUTLET QD27	000026	000868
X137130060	X-13713-006	PLUG; W/P CAP QD150M	000000	000000
X137130070	X-13713-007	DISCONTINUED	000000	000000
X137130080	X-13713-008	PLUG; HOSE CAP QD150M	000000	000000
X137130100	X-13713-010	BRACKET; FRONT	000000	000000
X137130110	X-13713-011	BRACKET; SIDE	000000	000000
X137130120	X-13713-012	TUBE; U-WATER QD145M	000000	000001
X137130140	X-13713-014	DISCONTINUED	000000	000000
X137130170	X-13713-017	DISCONTINTUED	000000	000000
X141100280	X-14110-028	INLET TUBE; AIR FILTER	000000	000000
X141110010	X-14111-001	FLANGE ASM; INLET PIPE QD	000000	000164
X14111002T		FLANGE ASM; INLET PIPE QD	000000	000000
X141110020		FLANGE ASM; INLET PIPE QD	000000	000086
X141110030	X-14111-003	FLANGE ASM; INLET PIPE QD	000000	000000
X141110040	X-14111-004	PIPE; AIR INLET QD60	000001	000000

X141110090	X-14111-009	PIPE; AIR INLET	000000	000000
X141110110	X-14111-011	PIPE; AIR INLET	000000	000000
X141110160	X-14111-016	PIPE; INLET	000001	000000
X141110230	X-14111-023	PIPE; AIR & EXH INTAKE	000000	000000
X141110240	X-14111-024	TUBE;AIR INLET	000011	000000
X141110250	X-14111-025	AIR INLET TUBE	000000	000000
X141110350	X-14111-035	PIPE; AIR INLET	000000	000002
X141110380	X-14111-038	PIPE; AIR INLET	000000	000035
X141110450	X-14111-045	FLANGE AND TUBE ASSY.	000000	000004
X141110460	X-14111-046	FLANGE AND TUBE ASSY.	000000	000000
X141110470	X-14111-047	FLANGE AND TUBE ASSY. 6BG	000000	000003
X141110500	X-14111-050	AIR INLET TUBE	000000	000010
X141110510	X-14111-051	ELBOW	000002	000010
X141110520	X-14111-052	REDUCER ADAPTOR	000000	000005
X141110530	X-14111-053	INSULATION	000000	000018
X141110540	X-14111-054	INSULATION	000000	000018
X141110550	X-14111-055	MOLDED ADAPTOR 2.5" X 3"	000000	000006
X141110560	X-14111-056	MOLDED ADAPTOR 3" X 3.5"	000010	000000
X141110570	X-14111-057	TUBE; INLET, AIR 3" X 2"	000000	000014
X141110600	X-14111-060	TUBE; AIR CLEANER	000005	000000
X141110610	X-14111-061	HOSE; HUMP 3X3.5	000000	000000
X141110620	X-14111-062	HOSE; 2.5 X 3	000000	000015
X141110630	X-14111-063	HOSE/SLEEVE 2.5 X 2.25 (R	000000	000010
X141110640	X-14111-064	TUBE; 3 X 3 X 7.5	000005	000010
X141110650	X-14111-065	HOSE ELBOW 3 X 3	000000	000005
X141110660	X-14111-066	TUBE; 3 X 3 X 24	000000	000005
X141110670	X-14111-067	HOSE; HUMP 3 X 4	000000	000000
X141110680	X-14111-068	HOSE; ELBOW 4.5 X 4.5	000000	000010
X141110690	X-14111-069	HOSE/SLEEVE (RUBBER) 4 X	000010	000000
X141110700	X-14111-070	TUBE ADAPTER AIR CLEANER	000010	000000
X141110710	X-14111-071	TUBE ADAPTER AIR CLEANER	000000	000001
X141110720	X-14111-072	HOSE REDUCTION 3" TO 4"	000000	000010
X141150020	X-14115-002	HEAT SHIELD	000027	000000
X141410010	X-14141-001	END COVER; MANIFOLD FRNT	000000	000002
X141410020	X-14141-002	MANIFOLD; EXHAUST QD27	000000	000000
X141410030	X-14141-003	MANIFOLD; EXHAUST QD40	000000	000000
X14141004C	X-14141-004C	MANIFOLD;NOT MACHINED	000000	000000
X141410040	X-14141-004	MANIFOLD; EXHAUST QD60	000000	000000
X141410050	X-14141-005	END CVR; RR EXH MANIFOLD	000035	000000
X141410060	X-14141-006	GASKET; EXHAUST MANIFOLD	000000	000253
X141410170	X-14141-017	MANIFOLD; COVER FRONT QD1	000006	000000
X141410220	X-14141-022	MANIFOLD; EXHAUST QD150M	000000	000000
X141410230	X-14141-023	MANIFOLD; COVER REAR QD15	000003	000000
X141410240	X-14141-024	FLANGE; MANIFOLD 3" EXHAU	000000	000003
X141410250	X-14141-025	FLANGE; 2",FOR X-14141-02	000000	000000
X141410260	X-14141-026	FLANGE ASM; EXHAUST 2"	000000	000000
X141410270	X-14141-027	ADAPTOR; MANIFOLD, FLARED	000004	000000

X141410290	X-14141-029	GASKET; FRONT CVR MARINE	000026	000000
X141410300	X-14141-030	GASKET; RR CVR MARINE MAN	000061	000000
X141410310	X-14141-031	FLANGE; EXHAUST QD27/40/6	000000	000000
X141410350	X-14141-035	FLANGE & TUBE 2" EXHAUST	000000	000027
X141410360	X-14141-036	FLANGE & TUBE 2.5" EX.QD9	000000	000028
X141410370	X-14141-037	FLANGE & TUBE 3" EX.QD130	000000	000043
X141410390	X-14141-039	GASKET; EXH. FLANGE QD90/	000000	000101
X141410400	X-14141-040	GASKET; EXH. FLANGE QD90/	000000	000000
X141410440	X-14141-044	FLANGE; EXHAUST MANIFOLD	000000	000015
X141410470	X-14141-047	EXH. PIPE/FLANGE ASM. 6BD	000000	000000
X141410480	X-14141-048	FLANGE,EXHAUST C240	000000	000000
X141410600	X-14141-060	GASKET; EXHAUST,6BD1T	000016	000010
X141410610	X-14141-061	FLANGE AND PIPE ASSY;EXHA	000000	000015
X141410620	X-14141-062	EXHAUST FLANGE AND TUBE	000000	000027
X141410680	X-14141-068	FLANGE, EXHAUST	000000	000000
X141410730	X-14141-073	FLANGE; EXH. PIPE ASM.	000000	000094
X141410830	X-14141-083	FLANGE & PIPE ASSY.	000000	000002
X141410840	X-14141-084	FLANGE & PIPE ASSY.	000000	000070
X14141087T		FLANGE; EXHAUST	000000	000000
X141410870		FLANGE; EXHAUST	000000	000020
X141410900	X-14141-090	ELBOW; TURBO EXHAUST	000000	000019
X141410920	X-14141-092	ELBOW; EXHAUST	000000	000002
X141410930	X-14141-093	ELBOW; TURBO EXHAUST	000000	000054
X141410960	X-14141-096	EXHAUST PIPE & FLANGE	000001	000004
X141410970	X-14141-097	EXHAUST PIPE & FLANGE	000000	000011
X141410980	X-14141-098	EXHAUST PIPE & FLANGE	000000	000001
X141410990	X-14141-099	EXHAUST PIPE & FLANGE	000000	000006
X141420040	X-14142-004	MANIFOLD ASM; EXHAUST QD6	000000	000000
X141420120	X-14142-012	MANIFOLD ASM QD145M	000000	000000
X141510010	X-14151-001	ELBOW; WATER COOLED EXH Q	000000	000000
X141510020	X-14151-002	ELBOW; WATER COOLED EXH Q	000000	000000
X141510060	X-14151-006	ELBOW; EXHAUST QD150M	000000	000000
X141510070	X-14151-007	GASKET; MARINE ELBOW QD15	000026	000000
X141510080	X-14151-008	ADAPTOR; TURBO	000001	000000
X141510090	X-14151-009	GASKET; EXHAUST ADAPTOR	000000	000000
X141510100	X-14151-010	ELBOW; WATER COOLED EXHAU	000000	000001
X141520030	X-14152-003	DISCONTINUED	000000	000000
X141520050	X-14152-005	MUFFLER; EXHAUST	000000	000000
X141520060	X-14152-006	ELBOW; EXHAUST PIPE	000000	000000
X141520070	X-14152-007	CAP; RAIN	000000	000044
X141520080	X-14152-008	BRACKET; MUFFLER SUPPORT	000000	000000
X141520090	X-14152-009	CLAMP; EXHAUST PIPE, 3" H	000000	000000
X141520100	X-14152-010	MUFFLER; EXHAUST	000003	000000
X141520110	X-14152-011	TAILPIPE; MUFFLER	000000	000000
X141520120	X-14152-012	CLAMP; MUFFLER(2 1/8")	000000	000000
X141520130	X-14152-013	CLAMP; TAILPIPE	000000	000000
X141520140	X-14152-014	CAP; RAIN QD27/40/60 PU	000005	000000

X141520160	X-14152-016	HANGER; MUFFLER CLAMP	000000	000000
X141520190	X-14152-019	MUFFLER ASM	000000	000000
X141520200	X-14152-020	PACKING; EXHAUST 2 5/8 F.	000000	000000
X141520210	X-14152-021	CLAMP; MUFFLER 2 1/2"	000000	000000
X141520220	X-14152-022	MUFFLER; QD100 PU	000000	000004
X141520230	X-14152-023	PIPE; EXHAUST ELBOW	000000	000005
X141520240	X-14152-024	RAIN CAP 2.5"	000000	000066
X141520250	X-14152-025	BRACKET; MUFFLER SUPPORT	000000	000000
X141520270	X-14152-027	MUFFLER; EXHAUST,6BD1T	000000	000000
X141520280	X-14152-028	PIPE; EXHAUST,6BD1T	000000	000000
X141520290	X-14152-029	RAIN CAP; 3.75",6BD1T	000000	000000
X141520300	X-14152-030	CLAMP; MUFFLER 3.50",6BD1	000000	000000
X141520310	X-14152-031	BRACKET; MUFFLER,6BD1T	000000	000000
X141520320	X-14152-032	BRACKET; MUFFLER SUPPORT	000000	000000
X141520330	X-14152-033	MUFFLER; EXHAUST	000000	000000
X141520340	X-14152-034	MUFFLER; EXHAUST	000000	000000
X141520430	X-14152-043	RAIN CAP	000004	000000
X141520460	X-14152-046	CLAMP: EXHAUST	000003	000000
X141520470	X-14152-047	MUFFLER ASM.	000000	000016
X141520480	X-14152-048	RAIN CAP	000000	000099
X141520490	X-14152-049	MUFFLER; EXHAUST	000000	000004
X141520500	X-14152-050	MUFFLER; EXHAUST	000000	000002
X141520620	X-14152-062	EXHAUST MUFFLER	000000	000005
X141520640	X-14152-064	MUFFLER	000000	000001
X141520650	X-14152-065	RAINCAP	000000	000014
X141520660	X-14152-066	CLAMP; EXHAUST (FOR X-141	000000	000077
X141520670	X-14152-067	MUFFLER	000000	000001
X141520680	X-14152-068	RAINCAP	000000	000005
X141520690	X-14152-069	CLAMP; EXHAUST (FOR X-141	000000	000005
X141520700	X-14152-070	MUFFLER; EXHAUST	000000	000010
X141520710	X-14152-071	CLAMP; SEAL	000010	000000
X141520720	X-14152-072	CAP; EXHAUST STACK	000000	000025
X141550010	X-14155-001	PIPE; EXHAUST	000000	000000
X141550020	X-14155-002	TAILPIPE; EXHAUST	000000	000000
X141550030	X-14155-003	TAILPIPE; EXHAUST	000000	000000
X141550040	X-14155-004	DISCONTINUED	000000	000000
X141550050	X-14155-005	PIPE ASM; EXHAUST	000000	000000
X141550070	X-14155-007	PIPE; EXHAUST	000000	000000
X141550080	X-14155-008	PIPE; EXHAUST	000000	000000
X141550110	X-14155-011	PIPE EXHAUST & FLANGE ASM	000000	000000
X142100030	X-14210-003	CLEANER ASM; AIR, 5/8" QD	000000	000000
X142100040	X-14210-004	CLEANER ASM; AIR QD40/60	000006	000000
X142100050	X-14210-005	A/CLNR**DISCONTINUED**	000000	000000
X142100060	X-14210-006	CLEANER; AIR, FOAM ELEM Q	000000	000000
X142100070	X-14210-007	CLEANER; AIR, FOAM ELEM Q	000003	000041
X142100080	X-14210-008	CLEANER; AIR QD150M	000002	000000
X142100090	X-14210-009	CLEANER ASM; AIR	000000	000003

X142100100	X-14210-010	HOOD; AIR INLET	000000	000000
X142100110	X-14210-011	BAND; MOUNTING	000011	000000
X142100130	X-14210-013	CLEANER; AIR QD60	000000	000000
X142100140	X-14210-014	HOOD; AIR CLEANER QD60	000001	000000
X142100150	X-14210-015	BAND ASM, MOUNTING QD60	000000	000000
X142100160	X-14210-016	CLEANER; AIR	000000	000000
X142100170	X-14210-017	CLEANER; AIR, HOOD QD27	000000	000000
X142100180	X-14210-018	BAND; MOUNTING, AIR CLEAN	000000	000000
X142100210	X-14210-021	CLEANER; AIR, FOAM ELEM Q	000000	000051
X142100220	X-14210-022	BRACKET; AIR FILTER	000000	000000
X142100230	X-14210-023	DISCONTINUED	000000	000000
X142100270	X-14210-027	ELBOW; RUBBER 90 DEGREES	000000	000000
X142100290	X-14210-029	DISCONTINUED	000000	000000
X142100300	X-14210-030	REDUCER; ELBOW RUBBER 6BD	000000	000024
X142100310	X-14210-031	CLEANER ASM; AIR	000000	000000
X142100330	X-14210-033	ELBOW; RUBBER	000000	000000
X142100340	X-14210-034	CLEANER ASM; AIR 6BD1T	000000	000027
X142100350	X-14210-035	HOOD; AIR CLEANER, 6BD1T	000000	000005
X142100360	X-14210-036	BANDS; AIR CLEANER, 6BD1T	000000	000042
X142100470	X-14210-047	AIR CLEANER	000000	000012
X142100480	X-14210-048	CLEANER ASM; AIR	000000	000021
X142100540	X-14210-054	AIR CLEANER	000000	000000
X142100550	X-14210-055	FILTER; ELEMENT	000000	000004
X142100560	X-14210-056	BAND; MOUNTING	000000	000001
X142100570	X-14210-057	AIR CLEANER ASM	000000	000042
X142100580	X-14210-058	AIR CLEANER (DISPOSABLE)	000000	000005
X142100590	X-14210-059	AIR CLEANER, 8" 2-STAGE	000000	000001
X142100600	X-14210-060	BAND; AIR CLEANER (FOR X-	000000	000010
X142100610	X-14210-061	RAIN CAP; AIR CLEANER (FO	000000	000010
X142100620	X-14210-062	AIR RESTRICTION INDICATOR	000015	000000
X142100630	X-14210-063	EXTENSION; AIR CLEANER	000000	000010
X142100640	X-14210-064	AIR CLEANER (DISPOSABLE)	000000	000002
X142100660	X-14210-066	BAND; AIR CLEANER (FOR X	000000	000010
X142100670	X-14210-067	AIR CLEANER 11" 2-STAGE	000000	000004
X142100680	X-14210-068	EXTENSION; AIR CLEANER	000000	000010
X142100690	X-14210-069	RAIN CAP, AIR CLEANER	000000	000013
X142100700	X-14210-070	AIR CLEANER (DISPOSABLE)	000001	000001
X142100710		AIR CLEANER	000000	000080
X142100720		AIR CLEANER	000000	000000
X142100730		AIR CLEANER ELEMENT	000000	000000
X142100740		FILTER; AIR, DURALIGHT	000000	000025
X142100750	X-14210-075	SEAL; AIR FILTER, FPG RDL	000000	000004
X142100760	X-14210-076	REDUCER; RUBBER HUMP	000004	000000
X142100770	X-14210-077	BAND; FPG MOUNTING	000000	000000
X143300010	X-14330-001	BRACKET; SHUT DOWN QD60M	000000	000000
X143300020	X-14330-002	SOLENOID; W/O SPRING	000000	000000
X143300080	X-14330-008	DISCONTINUED	000000	000000

X143300090	X-14330-009	BRACKET; SHIFT CABLE QD27	000000	000000
X143300100	X-14330-010	INSTRUCTION SHEET; REWORK	000000	000000
X143300180	X-14330-018	BRACKET; THROTTLE CABLE Q	000000	000000
X143300190	X-14330-019	BRACKET; SHIFT CABLE QD27	000000	000000
X143300200	X-14330-020	BRACKET; THROTTLE CABLE Q	000000	000000
X143300210	X-14330-021	BRACKET; STOP SOLENOID QD	000000	000000
X143300220	X-14330-022	BRACKET; MOUNTING EXTENSI	000021	000000
X143300240	X-14330-024	BRACKET; CLEVIS F/STOP SO	000000	000366
X143300250	X-14330-025	BRACKET; MOUNTING SOLENOI	000000	000000
X143300260	X-14330-026	BRACKET; EXT THROTTLE QD1	000000	000000
X143300310	X-14330-031	BRACKET; STOP SOLENOID QD	000001	000000
X143300320	X-14330-032	BRACKET; THROTTLE LEVER Q	000000	000000
X143300350	X-14330-035	DISCONTINUED	000000	000000
X143300360	X-14330-036	EXTENTION; THROT LEVER QD	000049	000000
X143300370	X-14330-037	DISCONTINUED	000000	000000
X143300380	X-14330-038	BRACKET; RUN SOLENOID	000000	000036
X143300390	X-14330-039	LEVER; RUN SOLENOID	000011	000019
X143300400	X-14330-040	BRACKET; MTG F/STOP SOLEN	000000	000000
X143300410	X-14330-041	SOLENOID; W/SPRING QD90/1	000000	000009
X143300420	X-14330-042	BRACKET; RUN SOLENOID	000000	000000
X143300430	X-14330-043	LEVER; REVERSING	000000	000000
X143300460	X-14330-046	BRACKET; THROTTLE CABLE	000000	000000
X143300470	X-14330-047	BRACKET; MOUNTING, RUN SO	000000	000000
X143300480	X-14330-048	SOLENOID 12V	000000	000000
X143300490	X-14330-049	DISCONTINUED	000000	000000
X143300500	X-14330-050	BRACKET; SHIFT CABLE QD60	000000	000000
X143300510	X-14330-051	BRACKET; THROTTLE CABLE Q	000001	000000
X143300520	X-14330-052	BRACKET; SHIFT CABLE QD15	000000	000000
X143300540	X-14330-054	BRACKET; THROTTLE CABLE	000005	000000
X143300550	X-14330-055	BRACKET; SOLENOID	000000	000000
X143300560	X-14330-056	BRACKET; UPPER SELECTOR C	000000	000000
X143300570	X-14330-057	BRACKET; LOWER SELECTOR C	000000	000000
X143300580	X-14330-058	LEVER	000000	000000
X143300640	X-14330-064	SOLENOID ASM QD60	000000	000015
X143300680	X-14330-068	SOLENOID 6BD1A	000000	000000
X143300690	X-14330-069	SOLENOID 24V	000000	000000
X143300710	X-14330-071	BRACKET; SHUTDOWN CABLE	000000	000000
X143300730	X-14330-073	BRACKET; SOLENOID	000000	000000
X143300740	X-14330-074	BRACKET; THROTTLE	000000	000000
X143300760	X-14330-076	BRACKET; INTERCOOLER	000000	000000
X143300780	X-14330-078	BRACKET; REAR AIR INLET T	000000	000000
X143300790	X-14330-079	BRACKET; JUNCTION BOX	000000	000000
X143300800	X-14330-080	BRACKET; THROTTLE CABLE	000000	000000
X143300810	X-14330-081	BRACKET; OIL FILTER EXTEN	000000	000000
X143300830	X-14330-083	ADAPTOR PLATE SPECIAL (ITT	000000	000000
X143300880	X-14330-088	BRACKET; THROTTLE UM3KC1	000000	000000
X143300890	X-14330-089	BRACKET; SOLENOID UM3KC1	000000	000000

X143300910	X-14330-091	BRACKET; CABLE	000000	000000
X143300920	X-14330-092	SOLENOID; W/O SPRING	000000	000006
X143300930	X-14330-093	BRACKET; THROTTLE,6BD1T	000000	000000
X143300960	X-14330-096	BRACE;RADIATOR UPPER	000005	000000
X143300990	X-14330-099	BRKT; ALT. 80 AMP-QD100	000000	000000
X143301010	X-14330-101	BRACE;RADIATOR UPPER RH.	000000	000000
X143301030	X-14330-103	BRACKET;AIR CLEANER SUPPO	000000	000025
X143301040	X-14330-104	BRACE;RADIATOR UPPER LH.	000001	000000
X143301050	X-14330-105	BRACKET MANUAL SHUTDOWN L	000000	000000
X143301080	X-14330-108	SOLENOID	000000	000008
X143301100	X-14330-110	BRACKET;ACCESSORY MOUNTIN	000000	000012
X143301170	X-14330-117	RUN SOLENOID	000001	000000
X143301180	X-14330-118	BRACKET;THROTTLE CABLE	000000	000000
X143301270	X-14330-127	THROTTLE & STOP CABLE BRA	000004	000000
X143301280	X-14330-128	THROTTLE & STOP CABLE BRA	000000	000000
X143301300	X-14330-130	BRACKET; RAD. UPPER LH	000000	000000
X143301310	X-14330-131	BRACKET; RAD. UPPER RH	000000	000000
X143301320	X-14330-132	BRACKET; THROTTLE CABLE	000120	000000
X143301490	X-14330-149	BRACKET; SOLENOID	000014	000000
X143301500	X-14330-150	RACE; SOLENOID	000474	000000
X143301510	X-14330-151	BRACKET;STOP CABLE B/ANCH	000003	000000
X143301520	X-14330-152	BRACKET; THROTTLE CABLE	000000	000022
X143301530	X-14330-153	BRACKET; INSTR. MTG.	000000	000092
X143301540	X-14330-154	SOLENOID	000006	000018
X143301550	X-14330-155	BRACKET; SOLENOID	000041	000000
X143301560	X-14330-156	BRACE; SOLENOID BRACKET	000000	000020
X143301580	X-14330-158	BRACKET; SHIFT CABLE	000000	000000
X143301620	X-14330-162	EXTENTION; THROT LEVER	000000	000000
X143301630	X-14330-163	SUPPORT; RAD. UPPER RH	000012	000000
X143301640	X-14330-164	SUPPORT; RAD. UPPER LH	000002	000002
X143301660	X-14330-166	BRACKET; SOLENOID	000029	000000
X143301670	X-14330-167	BRACKET; SUPPORT SOLENOID	000058	000036
X143301680	X-14330-168	BRACKET; THROTTLE CABLE	000000	000000
X143301720	X-14330-172	BRACKET; DIPSTICK FRONT	000000	000000
X143301730	X-14330-173	BRACKET; DIPSTICK REAR	000000	000000
X143301820	X-14330-182	BRACKET; RH FUEL TANK	000000	000098
X143301830	X-14330-183	BRACKET; LH FUEL TANK	000000	000191
X143301840	X-14330-184	BRACKET; STAY	000014	000002
X143301860	X-14330-186	TUBE; SPACER	000030	000000
X143301890	X-14330-189	BRACKET;FRONT COVER SPRT.	000001	000000
X143301920	X-14330-192	BRACKET;THROTTLE CABLE SP	000000	000009
X143301930	X-14330-193	BRACKET; AIR SUPPORT	000000	000013
X143301950	X-14330-195	BRCKT;ELECTICAL BOX SPRT	000000	000010
X143301970	X-14330-197	BRCKT'MNTG INSTMNTL PANEL	000000	000029
X143301980	X-14330-198	TUBE; SPACER	000004	000000
X143301990	X-14330-199	BRACKET; SPACER	000000	000024
X143302000	X-14330-200	BRACKET;SOLENOID MOUNTING	000000	000051

X143302010	X-14330-201	BRACE;SOLENOID BRACKET	000051	000000
X143302020	X-14330-202	SOLENOID;FUEL SHUT OFF	000000	000040
X143302040	X-14330-204	BRACKET; AIR CLEANER, NON	000000	000025
X143302050	X-14330-205	BRACKET; AIR CLEANER SUPP	000000	000014
X143302060	X-14330-206	BRACKET; AIR CLEANER REAR	000000	000005
X143302070	X-14330-207	BRACKET; AIR CLEANER FULL	000000	000005
X143302080	X-14330-208	BRACKET; SHIPPING ANCHOR	000000	000025
X143302090	X-14330-209	BRACKET; BELT GUARD MOUNT	000005	000000
X143302100	X-14330-210	BRACKET; BELT GUARD MOUNT	000005	000000
X143302120	X-14330-212	BRACKET; T-CABLE END, MOU	000015	000000
X143302130	X-14330-213	BRACKET; GAGE PANEL MOUNT	000000	000005
X143302140	X-14330-214	BRACKET; FRONT SHROUD MOU	000000	000005
X143302150	X-14330-215	BRACKET; SHROUD MOUNTING	000000	000005
X143302160	X-14330-216	BRACKET; SHROUD MOUNTING	000000	000005
X143302170	X-14330-217	BRKT; AIR CLEANER MOUNTIN	000000	000010
X143302180	X-14330-218	BRACKET; AIR FILTER SUPPR	000000	000010
X143302190	X-14330-219	BRACKET; FUEL FILTER SUPP	000010	000000
X143302200	X-14330-220	SUPPORT PLATE;FUEL FILTER	000010	000000
X143302210	X-14330-221	BRACKET; RADIATOR SUPPORT	000010	000000
X143302220	X-14330-222	BRACKET;CONTROL CABLE GOV	000010	000000
X143302230	X-14330-223	BRACKET;SOLENOID MOUNTING	000000	000048
X143302240	X-14330-224	BRACKET; AIR FILTER SUPPO	000010	000000
X143302250	X-14330-225	BRACE;UPPER RADIATOR (RH)	000010	000000
X143310010	X-14331-001	LINK; STOP SOLENOID QD40M	000007	000000
X143310020	X-14331-002	LINK; STOP SOLENOID QD60/	000010	000000
X143310030	X-14331-003	LINK; STOP SOLENOID QD145	000000	000000
X143310040	X-14331-004	LINK; STOP SOLENOID QD150	000003	000000
X143310060	X-14331-006	LINK; STOP SOLENOID QD145	000000	000000
X143310080	X-14331-008	LINK; RUN SOLENOID	000039	000000
X143310090	X-14331-009	SPRING; COMPRESSION	000011	000000
X143310100	X-14331-010	LINK; STOP SOLENOID 1.50"	000006	000000
X143310110	X-14331-011	ROD ASM; RUN SOLENOID	000000	000000
X143310130	X-14331-013	ROD; RUN SOLENOID	000000	000000
X143310140	X-14331-014	ROD LINK; SOLENOID	000002	000000
X143310150	X-14331-015	ROD ASM C240	000000	000000
X14331016T		ROD; LINK	000000	000000
X143310160		ROD; LINK	000000	000000
X143310190	X-14331-019	LINK; CLEVIS UM3KC1	000000	000000
X143310200	X-14331-020	CONNECTING ROD	000069	000000
X143310210	X-14331-021	HEX CLEVIS	000000	000000
X143310240	X-14331-024	ROD; LINK	000000	000255
X143310260	X-14331-026	LINK; STOP SOLENOID	000016	000000
X143310270	X-14331-027	LINK; STOP SOLENOID	000000	000044
X143310280	X-14331-028	LINK ROD; SOLENOID	000000	000012
X143320020		SOLENOID;24V,LW CURRT COI	000000	000011
X143350010		SOLENOID KIT QD145 IND	000000	000000
X143350020	X-14335-002	SOLENOID KIT QD100A	000000	000000

X143350030	X-14335-003	SOLENOID KIT QD145A	000000	000000
X143350040	X-14335-004	GO TO GRP5Y2-022-0	000000	000000
X143350100	X-14335-010	SHUTDOWN SOLENOID KIT/K S	000000	000000
X154110010	X-15411-001	PIPE; FUEL SUCTION QD150M	000000	000000
X154110020	X-15411-002	PIPE; FUEL RETURN QD150M	000000	000005
X154110030	X-15411-003	DISCONTINUED	000000	000000
X154110040	X-15411-004	FUEL LINE; REAR	000000	000000
X154110060	X-15411-006	DISCONTINUED	000000	000000
X154110070	X-15411-007	GASKET	000000	000000
X154200050	X-15420-005	HOSE; FUEL LINE 5/16"	000000	000000
X154200070	X-15420-007	HOSE; FEED, 5/16" ID	000009	000000
X154200080	X-15420-008	HOSE; RETURN, 3/16" ID	000009	000000
X154200100	X-15420-010	HOSE; FUEL LINE	000010	000000
X156000020	X-15600-002	ACTUATOR; INTEGRAL	000000	000000
X156000030	X-15600-003	PROPORTIONAL ACTUATOR;INT	000000	000000
X15600004D		ACTUATOR 12V	000000	000000
X156000040		ACTUATOR 12V	000000	000141
X156000050		ACTUATOR;24V	000000	000157
X156000060		12V ELEC. GOVERNOR	000000	000000
X156000070	X-1560 0007	24V ELEC. GOVERNOR	000000	000005
X156000080	X-1560 0008	12V ELEC. GOVERNOR	000000	000003
X156000090	X-1560 0009	24V ELEC. GOVERNOR	000000	000005
X157250030	X-15725-003	STOP LEVER;R/W 5-1572 514	000000	000000
X195000010	X-19500-001	ELBOW; HIGH PRESS.OUTLET	000000	000000
X195000020	X-19500-002	ELBOW; 90 DEG 1/2" BRASS	000000	000000
X195000030	X-19500-003	ELBOW; 90 DEG 1/2" QD145M	000003	000000
X195000040	X-19500-004	ELBOW; 90 DEG 1/2" MALE W	000000	000000
X195000050	X-19500-005	ELBOW; 45 DEG 3/8" QD27/4	000000	000000
X195000060	X-19500-006	ELBOW; 90 DEG 3/8" BRASS	000000	000000
X195000080	X-19500-008	DISCONTINUED	000000	000000
X195000090	X-19500-009	ELBOW; 45 DEG 1/8" QD130/	000000	000000
X195000100	X-19500-010	DISCONTINUED	000000	000000
X195000110	X-19500-011	DISCONTINUED	000000	000000
X195000120	X-19500-012	DISCONTINUED	000000	000000
X195000190	X-19500-019	REDUCER 3/4 TO 1/2	000000	000000
X195000200	X-19500-020	ELBOW; 90 DEG F/POWER STE	000000	000000
X195000230	X-19500-023	ELBOW; STREET BRASS 3/4"	000000	000000
X195000250	X-19500-025	FITTING, STRAIGHT	000000	000000
X195000280	X-19500-028	PIPE; ELBOW 45 1/8"M X	000000	000006
X195000300		FITTING	000000	000455
X195000310		FITTING	000000	000411
X195000320		FITTING, RESTRICTION TAP	000100	000000
X195000330	X-19500-033	FITTING, OIL PRESSURE LIN	000000	000025
X197110040	X-19711-004	BRACKET; GENERATOR QD150M	000000	000000
X197110100	X-19711-010	BRACKET; ALTERNATOR 80AMP	000000	000000
X197110110	X-19711-011	FILTER;RESERVOR-POWER STE	000000	000000
X197110190	X-19711-019	BRACKET; SPACER QD100M	000000	000000

X197110200	X-19711-020	MOUNT PLATE; RESERVIOR	000000	000000
X197190030	X-19719-003	GUARD; BELT/FINGER	000000	000031
X197190040	X-19719-004	GUARD; BELT/FINGER	000000	000005
X197190050	X-19719-005	GUARD; BELT/FINGER	000000	000000
X197190130	X-1971 9013	GUARD; BELT FINGER	000000	000000
X197190150	X-19719-015	GUARD; BELT	000000	000051
X197190170	X-19719-017	GUARD; BELT ALTERNATOR	000000	000014
X208530000	X-20853-000	ADAPTER; BLANK	000000	000000
X20853001C	X-20853-001C	CASTING FOR X-20853-001!!	000000	000000
X208530010	X-20853-001	RING; ADAPTOR, FORD C-6 H	000000	000000
X208530030	X-20853-003	RING; ADAPTOR FOR C-6 LOW	000000	000000
X208530050	X-20853-005	RING; ADAPTOR GM	000000	000000
X208530100	X-20853-010	RING; AUTO TRANS, ALLISON	000000	000000
X208530150	X-20853-015	RING; ADAPTOR, CHRYSLER 4	000000	000000
X208530170	X-20853-017	RING; ADAPTOR GM	000000	000000
X208530180	X-20853-018	ADAPTOR; HURTH HBW 100/15	000000	000000
X208530190	X-20853-019	ADAPTOR; HURTH HBW 220 QD	000000	000000
X208530200	X-20853-020	ADAPTOR; HURTH QD60M	000000	000001
X208530240	X-20853-024	RING; ADAPTOR, CHRYSLER 3	000000	000000
X208530250	X-20853-025	ADAPTOR; FLYWHEEL HOUSING	000000	000000
X208530260	X-20853-026	ADAPTOR; FLYWHEEL HOUSING	000000	000000
X208530280	X-20853-028	PLATE; ADAPTOR	000000	000000
X208530290	X-20853-029	ADAPTOR; F/W HOUSING QD13	000000	000000
X208530300	X-20853-030	ADAPTER; TWIN DISC TO B-W	000000	000000
X214010010	X-21401-001	RADIATOR ASM. C/J SERIES	000000	000000
X214010020	X-21401-002	RADIATOR 6BG1 ONLY	000000	000004
X214010030	X-21401-003	RADIATOR ASM QD27/40	000000	000000
X214010040	X-21401-004	RADIATOR; 4BD1 SERIES	000000	000000
X214010070	X-21401-007	DISCONTINUED	000000	000000
X21401014D		RADIATOR ASM. C/J SERIES	000000	000000
X214010140		RADIATOR ASM. C/J SERIES	000000	000000
X214010150	X-21401-015	RADIATOR; 4BD1 SERIES	000000	000000
X214010160	X-21401-016	RADIATOR ASM. 6BD1 SERIE	000000	000000
X214010210	X-21401-021	RADIATOR ASM. 3LD1	000000	000000
X214010220	X-21401-022	GOTO GRP-5F1-015	000000	000000
X214010240	X-21401-024	RADIATOR ASM	000000	000000
X214010260	X-21401-026	RADIATOR	000000	000000
X214010310	X-21401-031	RADIATOR	000000	000000
X214010320	X-21401-032	RADIATOR ASM	000000	000001
X214010340	X-21401-034	RADIATOR ASM; 4LE1	000000	000000
X214010370		RADIATOR ASM	000000	000000
X214010400	X-2140 1040	RADIATOR ASM.	000000	000006
X214010450	X-21401-045	RADIATOR ASM;C/J SERIES	000000	000000
X214010460	X-21401-046	RADIATOR	000000	000001
X214010470	X-21401-047	RADIATOR ASM 3LB1	000000	000001
X21401048T		RADIATOR	000000	000000
X214010480		RADIATOR	000000	000006

X214010490	X-21401-049	RADIATOR ASM. 3LD1	000000	000001
X214010500	X-21401-050	RADIATOR ASM	000000	000000
X214010510	X-21401-051	RADIATOR	000000	000017
X214010520	X-21401-052	RADIATOR ASM	000000	000000
X214010530	X-2140 1053	RADIATOR	000000	000000
X214010550	X-2140 1055	RADIATOR	000000	000001
X214010570	X-21401-057	RADIATOR	000000	000004
X214010580	X-21401-058	RADIATOR ASM	000000	000004
X214220010	X-21422-001	NECK ASM; RADIATOR FILLER	000000	000000
X214500010	X-21450-001	CAP; RADIATOR PSI (16 LBS)	000001	000002
X214500020	X-21450-002	CAP; RADIATOR PSI (7 LBS)	000000	000001
X214500030	X-21450-003	PRESSURE CAP 7PSI	000000	000000
X214500040	X-2145 0004	RADIATOR CAP	000000	000004
X214500050	X-2145 0005	RADIATOR CAP	000000	000020
X214600010	X-21460-001	TANK; EXPANTION	000000	000000
X214600040	X-21460-004	ADAPTOR PLATE, COOLANT JU	000000	000000
X214900020	X-21490-002	HEAT EXCHANGER QD27/40/60	000000	000000
X214900030	X-21490-003	ZINC QD27/40/60M	000004	000000
X214900040	X-21490-004	TUBE; WATER OUTLET QD27	000000	000000
X214900050	X-21490-005	TUBE; WATER OUTLET QD40	000000	000000
X214900060	X-21490-006	TUBE; WATER OUTLET QD60	000000	000010
X214900070	X-21490-007	PLATE; MTG HEAT EXCH QD27	000005	000000
X214900080	X-21490-008	HOSE; HEAT EXCHANGER	000000	000000
X214900090	X-21490-009	HOSE; HEAT EXCHANGER INLE	000000	000020
X214900100	X-21490-010	HOSE; 1" RAW WATER PUMP Q	000000	000000
X214900110	X-21490-011	TUBE ASM; WATER INLET	000005	000000
X214900130	X-21490-013	EXCHANGER; HEAT QD150M	000000	000001
X214900160	X-21490-016	EXCHANGER; HEAT, FSKR/PSC	000000	000000
X214900230	X-21490-023	HOSE; 1" RAW WATER PUMP Q	000000	000000
X214900240	X-21490-024	HOSE; RAW WATER PUMP QD27	000000	000000
X214900260	X-21490-026	TUBE; WATER OUTLET QD150M	000000	000008
X214900280	X-21490-028	HOSE	000009	000000
X214900290	X-21490-029	CLAMP; HEAT EXCHANGER QD1	000003	000000
X214900310	X-21490-031	HOSE; 1.375" WATER OUTLET	000000	000014
X214900320	X-21490-032	HOSE; HEAT EXCHANGER QD14	000000	000000
X214900330	X-21490-033	HEAT EXCHANGER QD27/40/60	000000	000000
X214900340	X-21490-034	EXCHANGER; HEAT QD145M	000000	000015
X214900350	X-21490-035	DISCONTINUED	000000	000000
X214900360	X-21490-036	PLATE; HEAT EXCH MTG PROP	000000	000000
X214900370	X-21490-037	ZINC 1/2"	000000	000026
X214900390	X-21490-039	HOSE; R/W PUMP TO HEAT EX	000000	000032
X214900440	X-21490-044	HOSE; 2.25" INLET QD60	000000	000000
X214900450	X-21490-045	Y-TUBE CONNECTOR QD150M	000001	000000
X214900460	X-21490-046	HOSE; Y PIPE TO MANIFOLD	000000	000005
X214900470	X-21490-047	HOSE; 2.125" INLET PUMP Q	000000	000000
X214900480	X-21490-048	HOSE; 2.125" MANIFOLD QD1	000000	000000
X214900490	X-21490-049	HOSE; 2.125" HEAT EXCHANG	000000	000000

X214900500	X-21490-050	HOSE; 1" OIL COOLER QD145	000000	000000
X214900510	X-21490-051	HOSE; THERMOSTAT QD145M	000000	000000
X214900520	X-21490-052	DISCONTINUED	000000	000000
X214900540	X-21490-054	HOSE; HEAT EX TO OIL COOL	000000	000022
X214900550	X-21490-055	HOSE; 1.12" INLET QD150	000002	000000
X214900560	X-21490-056	HOSE; .62" OUTLET QD150	000007	000000
X214900570	X-21490-057	HOSE; GEAR COOLER QD150M	000000	000000
X214900660	X-21490-066	HEAT EXCHANGER QD27/40/60	000000	000003
X214900670	X-21490-067	HOSE; RAW WATER PUMP TO H	000000	000013
X214900680	X-21490-068	HOSE; RAW WATER PUMP TO H	000000	000000
X214900700	X-21490-070	HEAT EXCHANGER QD27/40/60	000000	000003
X214900710	X-21490-071	HOSE COUPLING; STRAIGHT	000000	000035
X214900740	X-21490-074	TUBE ASM WP TO KEEL COOLE	000000	000000
X214900750	X-21490-075	TUBE ASM EXH MANIF. COOL.	000000	000000
X215510030	X-21551-003	SHROUD; RADIATOR	000000	000004
X215510040	X-21551-004	SHROUD; FAN QD27/40	000000	000000
X215510050	X-21551-005	SHROUD; FAN QD60	000000	000000
X215510060	X-21551-006	SHROUD; FAN 4BD1 (100/400	000000	000000
X215510080	X-21551-008	DISCONTINUED	000000	000000
X215510130	X-21551-013	SHROUD; FAN	000000	000000
X215510160	X-21551-016	SHROUD; FAN 4BD1 (100/400	000000	000014
X215510170	X-21551-017	FAN SHROUD	000000	000008
X215510190	X-21551-019	FAN SHROUD	000000	000009
X215510200	X-21551-020	FAN SHROUD 3LB1	000000	000002
X215510210	X-21551-021	FAN SHROUD 3LD1	000000	000003
X215510230	X-21551-023	FAN SHROUD	000000	000001
X215510240	X-21551-024	FAN SHROUD	000000	000000
X215510250	X-21551-025	FAN SHROUD	000000	000000
X215510260	X-21551-026	FAN SHROUD	000000	000003
X215510270	X-21551-027	FAN SHROUD	000000	000002
X215510280	X-21551-028	FAN SHROUD	000000	000012
X215510290	X-2155 1029	FAN SHROUD	000000	000000
X215530010	X-21553-001	GUARD; FAN/FINGER	000000	000000
X215530030	X-21553-003	GUARD; FAN/FINGER	000000	000103
X215530070	X-21553-007	GUARD; FAN/FINGER	000000	000130
X215530080	X-21553-008	GUARD; FAN/FINGER	000000	000000
X215530090	X-21553-009	FINGER GUARD 3LB/D1	000000	000005
X215530100	X-21553-010	FINGER GUARD	000000	000006
X215530110	X-21553-011	FINGER GUARD	000000	000008
X215530140	X-21553-014	FINGER GUARD	000000	000044
X217000010	X-21700-001	COOLER; OIL QD27/40/60M	000004	000000
X217000020	X-21700-002	BRACKET; MTG OIL COOLER Q	000000	000000
X217000030	X-21700-003	CLAMP; OIL COOLER UPPER Q	000015	000000
X217000040	X-21700-004	CLAMP; OIL COOLER LOWER Q	000043	000000
X217000050	X-21700-005	COOLER OIL: TWIN DISC QD1	000000	000000
X217000060	X-21700-006	DISCONTINUED	000000	000000
X217000080	X-21700-008	DISCONTINUED	000000	000000

X217000120	X-21700-012	COOLER; GEAR OIL QD150M	000000	000000
X217000130	X-21700-013	BRACKET; GEAR OIL COOLER	000000	000000
X217000140	X-21700-014	DISCONTINUED	000000	000000
X217000170	X-21700-017	BRACKET; GEAR COOLER, HUR	000000	000000
X217000180	X-21700-018	BRACKET; GEAR COOLER, BOR	000000	000000
X217000190	X-21700-019	PACKING; INLET PIPE SEA W	000000	000000
X217000230	X-21700-023	GEAR OIL COOLER ASM	000000	000000
X217000260	X-21700-026	ELBOW	000002	000000
X22410002T		TANK; MOLDED, FUEL, 8-GAL	000000	000000
X224100020		TANK; MOLDED, FUEL, 8-GAL	000000	000125
X224100030		CAP	000000	000403
X232100010	X-23210-001	CABLE; 6FT STOP W/HANDLE	000000	000005
X232100020	X-23210-002	CLIP; STOP CABLE HOLD DOW	000000	000000
X232100030	X-23210-003	PIVOT; LOCK FOR STOP CABL	000000	000000
X232100050	X-23210-005	CABLE; STOP 12FT	000000	000000
X232100060	X-23210-006	CLIP; CABLE	000000	000000
X232100070	X-23210-007	SHIM; CABLE CLAMP	000000	000000
X232100080	X-23210-008	PIVOT; CABLE THROTTLE	000000	000000
X232100090	X-23210-009	PIVOT; THROTTLE CABLE	000000	000000
X232100100	X-23210-010	PIVOT; RUN SOLENOID	000000	000438
X232100110	X-23210-011	PIVOT; THROTTLE CABLE (C6	000000	000000
X232100120	X-23210-012	CABLE ASM; STOP W/SWIVEL	000000	000000
X232100130	X-23210-013	CABLE ASM; THROTTLE QD60/	000000	000019
X232100140	X-23210-014	DISCONTINUED	000000	000000
X232100150	X-23210-015	CLAMP & SHIM KIT	000000	000000
X232100160	X-2321 0016	PIVOT	000000	000000
X232100170	X-23210-017	CABLE; TH.ASM.QD 60/70/145	000000	000089
X232100180	X-23210-018	CLIP; DUAL CABLE	000000	000000
X232100190	X-23210-019	PIN; TERMINAL EYE KIT QD1	000000	000000
X232100200	X-23210-020	EYE; TERMINAL QD150M	000000	000000
X232100210	X-23210-021	CLAMP; STOP CABLE, SPECIA	000000	000000
X232100240	X-23210-024	CABLE; THROTTLE	000000	000000
X232100260	X-23210-026	BRACKET; SHIFT CABLE, HUR	000000	000000
X232100270	X-23210-027	CABLE CONTROL; MANUAL SHUT	000000	000000
X232100280	X-23210-028	CABLE; THROTTLE CONTROL AS	000000	000000
X232100290	X-23210-029	CABLE; STOP	000000	000000
X23210032D		33LPL POS LOCK&PIVOT 30L	000000	000000
X232100320		33LPL POS LOCK&PIVOT 30L	000000	000031
X232110020	X-23211-002	CABLE KIT; 6FT STOP	000000	000000
X232110030	X-23211-003	CABLE KIT; TWIN DISC SHIF	000000	000000
X262300020	X-26230-002	PLATE; MTG, PUMP QD27/40	000000	000000
X262300040	X-26230-004	PLATE; MTG, PUMP QD60	000006	000000
X262300050	X-26230-005	PUMP; SEA WATER QD27/40	000000	000000
X262300070	X-26230-007	TUBE ASM; DISCHARGE, PUMP	000000	000000
X262300080	X-26230-008	TUBE ASM; INLET, PUMP QD6	000003	000000
X262300090	X-26230-009	PUMP; SEA WATER QD60	000001	000000
X262300100	X-26230-010	CONNECTOR; HOSE 3/8 PIPE	000000	000000

X262300110	X-26230-011	BRACKET; MTG RAW WATER PU	000042	000000
X262300140	X-26230-014	KIT FOR ENG.WITH S/N 6882	000000	000000
X262300160	X-26230-016	SERVICE KIT; RAW WATER PU	000002	000000
X262300170	X-26230-017	SERVICE KIT; RAW WATER P	000000	000000
X262300180	X-26230-018	KIT FOR ENG.WITH S/N 6882	000000	000000
X262300190	X-26230-019	IMPELLER; RAW WATER PUMP	000000	000000
X262300200	X-26230-020	PUMP; RAW WATER QD145M	000000	000000
X262300210	X-26230-021	BRACKET; 'B', SEA WATER P	000005	000000
X262300230	X-26230-023	PUMP ASM; SEA WATER QD150	000000	000000
X262300240	X-26230-024	REPAIR KIT;X-26230-023**P	000000	000000
X262300250	X-26230-025	KIT FOR ENG.WITH S/N 6882	000000	000000
X262800020	X-26280-002	PANEL; INSTRUMENT DELUXE	000000	000024
X262800030	X-26280-003	PANEL; INSTR DELUXE W/AUT	000000	000003
X262800040	X-26280-004	PANEL; INSTRUMENT DUAL ST	000000	000000
X262800050	X-26280-005	DISCONTINUED	000000	000000
X262800060	X-26280-006	PANEL; INSTR SNGL STN DLX	000000	000001
X262800080	X-26280-008	PANEL; INSTRUMENT SINGLE	000000	000000
X262800090	X-26280-009	PANEL; INSTRUMENT DUAL ST	000000	000000
X262800110	X-26280-011	PANEL; INSTR DELUXE	000000	000000
X263000010	X-26300-001	SKID; PROPULSION QD27/40/	000000	000000
X263000030	X-26300-003	SKID; GEN QD60	000000	000000
X263000040	X-26300-004	SKID; PROPULSION QD150	000000	000000
X263000050	X-26300-005	SHIPPING RAIL 72"	000000	000000
X263000060	X-26300-006	BAIL; SHIPPING QD27/40/60	000000	000000
X263000070	X-26300-007	SPACER; SHIPPING QD150M	000000	000000
X263000080	X-26300-008	SPACER; BLOCK WOOD QD150M	000000	000000
X263000090	X-26300-009	SHIPPING RAIL 52"	000000	000000
X263000100	X-26300-010	SKID; SHIPPING-C/J PU's	000000	000000
X263000110	X-26300-011	SKID; SHIPPING-6B:OPUs	000000	000000
X263000130	X-26300-013	SHIPPING SKID	000000	000000
X311110000	X-31111-000	CLUTCH HOUSING; CASTING (000000	000000
X311110010	X-31111-001	CLUTCH HOUSING 4.750	000000	000000
X311110020	X-31111-002	CLUTCH HOUSING 5.125	000000	000000
X311110030	X-31111-003	CLUTCH HOUSING 4.875	000000	000000
X311110080	X-31111-008	CLUTCH HOUSING 4.850	000000	000000
X311110090	X-31111-009	CLUTCH HOUSING 4.853; F/W	000000	000000
X311110100	X-31111-010	CLUTCH HOUSING 5.125; FUL	000000	000000
X311110120	X-31111-012	CLUTCH HOUSING; GM P30	000000	000000
X311110180	X-31111-018	HOUSING; CLUTCH 4BD1PWS	000000	000000
X312200010	X-31220-001	COVER; CLUTCH QD100/145A	000000	000000
X312200040	X-31220-004	COVER; CLUTCH, PSI	000000	000000
X312400030	X-31240-003	DISC; CLUTCH 1 1/2 X 10T	000000	000000
X312400040	X-31240-004	DISC ASM; CLUTCH	000000	000000
X312400050	X-31240-005	DISC; CLUTCH	000000	000000
X312400140	X-31240-014	DISC; CLUTCH	000000	000000
X312400150	X-31240-015	DISC CLUTCH 4BD1	000000	000000
X312420010	X-31242-001	DAMPER ASM; TORSIONAL QD2	000000	000000

X31242002C	X-31242-002C	DAMPER ASM.;*NOT FOR SALE	000000	000000
X312420020	X-31242-002	DAMPER ASM; TORSIONAL QD2	000000	000000
X312420030	X-31242-003	DAMPER ASM; TORSIONAL QD2	000000	000004
X312420080	X-31242-008	DAMPER; PLATE HURTH UM3KC	000000	000000
X313410050	X-31341-005	BOOT; CLUTCH FORK	000000	000000
X313410080	X-31341-008	RELEASE BEARING 1.88HT	000000	000000
X314110010	X-31411-001	DISCONTUNUED	000000	000000
X314110080	X-31411-008	PIVOT BLOCK; CLUTCH FORK	000000	000000
X314110090	X-31411-009	DISCONTINUED	000000	000000
X314110100	X-31411-010	SPACER	000000	000000
X314110170	X-31411-017	CLUTCH FORK	000000	000000
X314110190	X-31411-019	BRACKET	000000	000000
X314110210	X-31411-021	PULL ROD; CLUTCH	000000	000000
X314110240	X-31411-024	V-NUT	000000	000000
X314110270	X-31411-027	BUSHING; TORQUE CONV. C2	000000	000016
X330001140	X-33000-114	PTO SAE 1 14" F/W SIDE LO	000000	000000
X330003100	X-33000-310	PTO SAE 3 10" F/W SIDE LO	000000	000000
X330003110	X-33000-311	PTO SAE-3 11-1/2 FW SIDE	000000	000000
X330004100	X-33000-410	PTO SAE 4 10" F/W SIDE LO	000000	000001
X330005080	X-33000-508	PTO SAE 5 8" F/W SIDE LOA	000000	000000
X330011140	X-33001-114	PTO SAE 1 14" F/W IN-LINE	000000	000000
X330013110	X-33001-311	PTO SAE 3 11.5" F/W IN-LI	000000	000000
X330015070	X-33001-507	PTO SAE 5 7.5" F/W	000000	000000
X330020010	X-33002-001	GEAR HURTH HBW 100-2 (1.7	000000	000000
X330030010	X-33003-001	GEAR HURTH HBW 150-2 (1.8	000000	000000
X330030030	X-33003-003	GEAR HURTH HBW 150-1.5 (1	000000	000000
X330030040	X-33003-004	GEAR HURTH HBW 150 V-DRIV	000000	000000
X330040010	X-33004-001	GEAR HURTH HBW 250-3 (2.7	000000	000000
X330040020	X-33004-002	GEAR HURTH HBW 250-2 (1.8	000000	000000
X330050010	X-33005-001	GEAR WARNER 71C 1.91/1	000000	000000
X330050020	X-33005-002	GEAR WARNER 71C 2.91/1	000000	000000
X330050030	X-33005-003	GEAR WARNER 71C 2.57/1	000000	000000
X330050040	X-33005-004	GEAR WARNER 71C 2.10/1	000000	000000
X330050050	X-33005-005	GEAR WARNER 71C 1.523/1	000000	000000
X330050060	X-33005-006	GEAR WARNER 71C 1/1	000000	000000
X330060010	X-33006-001	GEAR WARNER 71CR2 1.58/1	000000	000000
X330060020	X-33006-002	GEAR WARNER 71CR2 1.58/1	000000	000000
X330060030	X-33006-003	GEAR WARNER 71CR2 2.03/1	000000	000000
X330060040	X-33006-004	GEAR WARNER 71CR2 2.03/1	000000	000000
X330060050	X-33006-005	GEAR WARNER 71CR2 2.47/1	000000	000000
X330060060	X-33006-006	GEAR WARNER 71CR2 2.47/1	000000	000000
X330070010	X-33007-001	GEAR WARNER 72CR2 1.58/1	000000	000000
X330070020	X-33007-002	GEAR WARNER 72CR2 1.58/1	000000	000000
X330070030	X-33007-003	GEAR WARNER 72CR2 2.03/1	000000	000000
X330070040	X-33007-004	GEAR WARNER 72CR2 2.03/1	000000	000000
X330070060	X-33007-006	GEAR WARNER 72CR2 2.47/1	000000	000000
X330080010	X-33008-001	GEAR; TWIN DISC MG502 1.5	000000	000000

X330080020	X-33008-002	GEAR; TWIN DISC MC502 2.0	000000	000000
X330080030	X-33008-003	GEAR; TWIN DISC MG502 (2.	000000	000000
X330090030	X-33009-003	GEN; LIMA MAC 10 KW SAE 4	000000	000000
X330090040	X-33009-004	GEN; LIMA MAC 20 KW SAE 4	000000	000000
X330090070	X-33009-007	GEN; LIMA MAC 15 KW SAE 4	000000	000000
X330090080	X-33009-008	GEN; LIMA MAC 10 KW SAE 5	000000	000000
X330090090	X-33009-009	GEN; LIMA MAC 15 KW SAE 5	000000	000000
X330090100	X-33009-010	GEN; LIMA SER 30 KW SAE H	000000	000000
X330090110	X-33009-011	GEN; LIMA 005 10KW SERIES	000000	000000
X330090120	X-33009-012	VOLTAGE REGULATOR XR2004F	000000	000000
X330100010	X-33010-001	GEAR WARNER 72CR 1.52/1 L	000000	000000
X330100020	X-33010-002	GEAR WARNER 72CR 1.91/1 R	000000	000000
X330100030	X-33010-003	GEAR WARNER 72CR 2.10/1 L	000000	000000
X330100040	X-33010-004	GEAR WARNER 72CR 2.57/1 L	000000	000000
X330100050	X-33010-005	GEAR WARNER 72CR 1/1	000000	000000
X330100060	X-33010-006	GEAR WARNER 72CR (2.9/1)	000000	000000
X330110010	X-33011-001	GEAR WARNER 71C V-DRIVE 2	000000	000000
X330110020	X-33011-002	GEAR WARNER 71C V-DRIVE 2	000000	000000
X330120010	X-33012-001	GEAR HURTH HBW 360A-2R (2	000000	000000
X330120020	X-33012-002	GEAR HURTH HBW 360A-1.5 (000000	000000
X330120030	X-33012-003	DISCONTINUED	000000	000000
X330130010	X-33013-001	GEAR HURTH HBW 450 (2.04/	000000	000000
X330130020	X-33013-002	GEAR HURTH HBW 450 (3/1)	000000	000000
X330140010	X-33014-001	GEAR HURTH HBW 450 (2.04/	000000	000000
X330140020	X-33014-002	GEAR HURTH HBW 360-1.5 (1	000000	000000
X330140030	X-33014-003	DISCONTINUED	000000	000000
X330150010	X-33015-001	GEAR HURTH HSW 710A (1.50	000000	000000
X330150020	X-33015-002	GEAR HURTH HSW 710A (2.0/	000000	000000
X330150030	X-33015-003	GEAR HURTH HSW 710A (3.0/	000000	000000
X330160010	X-33016-001	HURTH 630A MARINE GEAR; 1	000000	000000
X330160020	X-33016-002	HURTH 630A MARINE GEAR; 1	000000	000000
X330160030	X-33016-003	HURTH 630A MARINE GEAR; 2	000000	000000
X330160040	X-33016-004	HURTH 630A MARINE GEAR; 2	000000	000000
X332390010	X-33239-001	CPLG; PROP SHAFT 5"OD, 1"	000000	000000
X332390020	X-33239-002	CPLG; PROP SHAFT 5"OD, 1.	000000	000000
X332390030	X-33239-003	CPLG; PROP SHAFT 4"OD, 1.	000000	000000
X332390040	X-33239-004	CPLG; PROP SHAFT 5"OD, 1.	000000	000000
X332390050	X-33239-005	CPLG; PROP SHAFT 5"OD, 1.	000000	000000
X332390070	X-33239-007	CPLG; PROP SHAFT 4"OD, 1.	000000	000000
X332390080	X-33239-008	CPLG; PROP SHAFT 4"OD, 1"	000000	000000
X332390090	X-33239-009	CPLG; PROP SHAFT 5"OD, 2"	000000	000000
X332390100	X-33239-010	CPLG; PROP SHAFT 4"OD, 1	000000	000000
X332390110	X-33239-011	CPLG; PROP SHAFT 5"OD, 1.	000000	000000
X332390120	X-33239-012	CPLG; PROP SHAFT F/TWIN D	000000	000000
X332400010	X-33240-001	COUPLER; BABBITT 404A 4"	000000	000000
X332400020	X-33240-002	DISCONTINUED	000000	000000
X343300010	X-34330-001	HOSE ASM; OIL COOLER QD15	000000	000000

X343300050	X-34330-005	HOSE ASM 20"	000002	000004
X343300060	X-34330-006	HOSE; OIL FILTER W/BRASS	000000	000000
X343300070	X-34330-007	HOSE; OIL FILTER W/BRASS	000000	000000
X343300080	X-34330-008	HOSE ASM; OIL COOLER QD15	000000	000000
X343300090	X-34330-009	HOSE ASM; OIL QD150M 13	000001	000000
X343300100	X-34330-010	HOSE ASM; OIL COOLER QD15	000000	000000
X343300110	X-34330-011	HOSE ASM; OIL COOLER QD15	000000	000000
X343300150	X-34330-015	LINE; HIGH PRESSURE	000000	000000
X343300170	X-34330-017	HOSE ASM	000000	000000
X343300180	X-34330-018	HOSE ASM	000000	000000
X343300190	X-34330-019	HOSE ASM	000000	000000
X343300200	X-34330-020	HOSE ASM	000000	000000
X343300210	X-34330-021	HOSE; REMOTE OIL	000000	000000
X343300230	X-34330-023	HOSE; COOLER TO TRANSMISS	000001	000000
X343350020	X-34335-002	LINE; LOW PRESSURE 3/4"	000000	000000
X345100010	X-34510-001	MODULATOR; 36", FORD C6/Q	000000	000000
X345100020	X-34510-002	MODULATOR; 44", FORD C6/Q	000000	000000
X345100030	X-34510-003	MODULATOR; 48", FORD C6/Q	000000	000000
X345100040	X-34510-004	MODULATOR; 40", CHV HYDRA	000000	000000
X345100050	X-34510-005	MODULATOR; 52", ALLISON A	000000	000000
X345110020	X-34511-002	SLIP LINK (GM HYD & ALLIS	000000	000000
X474300010	X-47430-001	HOSE; VACUUM 5/8 BY C.5 L	000000	000000
X531000090	X-53100-009	BASE; SKID	000000	000000
X531000120	X-53100-012	BASE; SKID QD60	000000	000000
X531000150	X-53100-015	PLATE; CLAMPING QD27/40/6	000000	000000
X531000210	X-53100-021	BASE SKID QD-100P.U.	000000	000000
X531000580	X-53100-058	BASE ASM; SKID	000000	000003
X531000670	X-53100-067	BASE; SKID	000000	000000
X531000680	X-53100-068	BATTERY TRAY	000000	000000
X531000860	X-53100-086	SKID BASE ASM;POWER UNIT	000000	000000
X531001000	X-53100-100	BASE; SKID	000000	000001
X531001010	X-53100-101	BASE; SKID	000000	000001
X531200010	X-53120-001	PLATE; SPACER, TRANS CHAM	000000	000000
X532150020	X-53215-002	MOUNT; RADIATOR QD27/40/6	000000	000436
X532150030	X-53215-003	MOUNT; RADIATOR QD27/40/6	000000	000091
X532150040	X-53215-004	ISOLATOR; INSTRUMENT PANE	000000	000234
X532150050	X-53215-005	MOUNT; ISOLATOR, AIR CLEA	000000	000000
X532150060	X-53215-006	ISOLATOR; VOLTAGE REGULAT	000004	000000
X532150080	X-53215-008	ISOLATOR; RAD. UPPER	000000	000379
X532150090	X-53215-009	MOUNT; ISOLATOR, VOLT REG	000004	000000
X532150120	X-53215-012	ISOLATOR	000000	000643
X532150130	X-53215-013	ISOLATION MOUNT	000000	000224
X532150140	X-53215-014	ISOLATION MOUNT	000000	000003
X532150150	X-53215-015	BUMPER; ISOLATION	000025	000025
X532150160	X-53215-016	ISOLATION MOUNT	000000	000206
X532150170	X-53215-017	ISOLATION MOUNT, ENGINE F	000000	000040
X536190010	X-53619-001	STRAP; BATTERY HOLD-DOWN	000000	000000

X536190020	X-53619-002	BOLT; "J"	000000	000000
X611280000	X-61128-000	250' BULK COIL	000000	000000
X611280010	X-61128-001	TRIM; 15" (USE X-61128-0	000007	000000
X611280020	X-61128-002	TRIM; 15 3/4"-USE X-61128	000000	000000
X611280050	X-61128-005	TRIM 7.5" (USE X-61128-00	000000	000000
X611280060	X-61128-006	TRIM; 16" (USE X-61128-0	000005	000000
X611280070	X-61128-007	TRIM 16.25"	000000	000000
X611290010	X-61129-001	DISCONTINUED	000000	000000
X611880010	X-61188-001	HOOK; RUBBER QD27/40/60	000000	000000
X611880020	X-61188-002	PIVOT; RUBBER QD27/40/60	000000	000000
X611880030	X-61188-003	HOOK; ANCHOR QD27/40/60	000000	000000
X656700020	X-65670-002	PANEL; INSTRUMENT (BLANK)	000000	000000
X656700030	X-65670-003	PANEL & HARNESS ASM(100-4	000000	000000
X656700040	X-65670-004	PANEL; INSTRUMENT BLANK	000000	000000
X656700050	X-65670-005	PANEL ASM; INSTRUMENT QD2	000000	000005
X656700060	X-65670-006	PANEL; TACHOMETER	000002	000000
X656700070	X-65670-007	PANEL; INST., 6BD1T	000000	000000
X656700090	X-65670-009	INSTRUMENT PANEL/W.HARNES	000000	000000
X656700120	X-65670-012	INSTRUMENT PANEL	000000	000000
X656700130	X-65670-013	COVER; REAR	000035	000000
X656700170	X-65670-017	COVER, GAUGE PANEL	000000	000005
X711100020	X-71110-002	FRAME; FRONT	000000	000000
X711100030	X-71110-003	DISCONTINUED	000000	000000
X711100050	X-71110-005	GRILL & SHELL ASM	000000	000000
X711100070	X-71110-007	DISCONTINUED	000000	000000
X711100080	X-71110-008	COVER ASM; FRONT QD27/40/	000000	000000
X711100090	X-71110-009	GRILL & SHELL ASM QD27/40	000000	000000
X711100160	X-71110-016	GUARD;RADIATOR CORE	000000	000033
X711100210	X-71110-021	BAFFLE; GRILL, LH	000000	000000
X711100220	X-71110-022	BAFFLE; GRILL, RH	000000	000000
X711100230	X-71110-023	WRAPPER; FRONT 4BD1 P/U	000000	000000
X711100250	X-71110-025	GRILL ASM. 4BD1 P/U	000000	000000
X711100270	X-71110-027	GRILL;RADIATOR	000000	000000
X711100300	X-71110-030	WRAPPER; FRT.	000000	000006
X711100340	X-71110-034	BRACKET; SUPPORT FRT. WRA	000000	000014
X711100350	X-71110-035	WRAPPER;FRONT	000000	000000
X711100420	X-71110-042	GUARD; RADIATOR CORE	000000	000019
X711100430	X-71110-043	GUARD; RADIATOR CORE	000000	000019
X711100510	X-71110-051	GUARD;RADIATOR CORE	000000	000179
X711100511	X-71110-051	GUARD;RADIATOR CORE	000000	000000
X711100520	X-71110-052	GUARD; GRILL	000000	000010
X711100530	X-71110-053	WRAPPER; FRONT	000000	000001
X711100540	X-71110-054	WRAPPER; FRONT (14GA.)	000000	000001
X711200020	X-71120-002	FRAME; REAR	000000	000000
X711200030	X-71120-003	PANEL; REAR	000000	000000
X711200040	X-71120-004	COVER	000000	000000
X711200130	X-71120-013	COVER ASM; REAR QD27/40/6	000000	000000

X711200200	X-71120-020	WRAPPER; REAR 4BD1 P/U	000000	000000
X711200210	X-71120-021	LOUVER PANEL;REAR 4BD1 P/	000000	000000
X711200250	X-71120-025	SHIMS	000000	000000
X711200270	X-71120-027	SUPPORT;INSTRUMENT PANEL	000001	000000
X711200300	X-71120-030	COVER; REAR	000000	000000
X711200310	X-71120-031	BRACKET; SUPPORT RR. WRAP	000000	000005
X711200340	X-71120-034	WRAPPER; REAR 6BD1	000000	000000
X711200350	X-71120-035	PANEL; REAR LOUVERED 6BD1	000000	000000
X711200370	X-71120-037	PLATE: VOLT REGULATOR MTG	000001	000000
X711200380	X-71120-038	BRACKET: VOLT REG ISOLATO	000000	000000
X711200440	X-71120-044	RACKET; REAR COVER	000000	000009
X711200480	X-71120-048	WRAPPER; REAR	000000	000001
X711200490	X-71120-049	PANEL; BEZEL	000010	000000
X711200500	X-71120-050	WRAPPER; REAR	000000	000001
X711200510	X-71120-051	WRAPPER; REAR (14GA.)	000000	000001
X711200520	X-71120-052	WRAPPER; REAR (14GA.)	000000	000001
X711200530	X-71120-053	COVER; REAR BLANK (14GA)	000000	000005
X711200540	X-71120-054	PANEL ASSY; REAR COVER	000000	000010
X711300010	X-71130-001	HOOD ASM	000000	000000
X711300060	X-71130-006	DISCONTINUED	000000	000000
X711300070	X-71130-007	DISCONTINUED	000000	000000
X711300080	X-71130-008	HOOD ASM QD60	000000	000000
X711300090	X-71130-009	HOOD SMM	000000	000000
X711300100	X-71130-010	HOOD ASM., 6BD1T	000000	000000
X711300120	X-71130-012	HOOD	000000	000007
X711300130	X-71130-013	HOOD: 4JB1	000000	000015
X711300140	X-71130-014	HOOD ASM., 6BD1T	000000	000000
X711300150	X-71130-015	HOOD ASM., 6BD1	000000	000001
X711300170	X-71130-017	HOOD	000000	000001
X711300180	X-71130-018	HOOD (16 GA.)	000000	000001
X711300190	X-71130-019	HOOD (14 GA.)	000000	000001
X711300200	X-71130-020	HOOD (16 GA.)	000000	000000
X711300210	X-71130-021	HOOD (14 GA.)	000000	000001
X711300220	X-71130-022	HOOD (16 GA.)	000000	000001
X711300230	X-71130-023	HOOD (14 GA.)	000000	000001
X711300240	X-71130-024	HOOD (16 GA.)	000000	000001
X711300250	X-71130-025	HOOD (14 GA.)	000000	000001
X711300260	X-71130-026	HOOD ASM.	000000	000010
X711400010	X-71140-001	PANEL; LOUVERED SIDE	000000	000000
X711400060	X-71140-006	DISCONTINUED	000000	000000
X711400070	X-71140-007	PANEL; LOWER SIDE QD60	000000	000000
X711400080	X-71140-008	DISCONTINUED	000000	000000
X711400090	X-71140-009	DISCONTINUED	000000	000000
X711400100	X-71140-010	PANEL; LOUVER SIDE QD60	000000	000000
X711400120	X-71140-012	PANEL; SIDE-LOUVERED 4BD1	000000	000000
X711400130	X-71140-013	PANEL; SIDE LOUVERED	000000	000036
X711400140	X-71140-014	PANEL; LOUVERED SIDE	000000	000004

X711400180	X-71140-018	PANEL; SIDE, LOUVERED	000000	000001
X711400190	X-71140-019	PANEL LOUVERED	000000	000000
X711400200	X-71140-020	PANEL; SIDE	000000	000000
X711400210	X-71140-021	PANEL; SIDE (14 GA.)	000000	000010
X711500020	X-71150-002	SUPPORT; RADIATOR LOWER	000000	000000
X711500050	X-71150-005	MOUNT ASM; RADIATOR	000000	000000
X711500060	X-71150-006	BRACKET; ISOLATOR, UPPER	000000	000000
X711500100	X-71150-010	DISCONTINUED	000000	000000
X711500110	X-71150-011	SUPPORT; RADIATOR QD27/40	000000	000000
X711500120	X-71150-012	SUPPORT; RADIATOR QD60	000000	000001
X711500140	X-71150-014	BRACKET; UPPER RADIATOR M	000000	000000
X711500150	X-71150-015	BRACKET; UPPER RADIATOR M	000000	000027
X711500160	X-71150-016	DISCONTINUED	000000	000000
X711500170	X-71150-017	BRACKET; ISOLATOR RADIATO	000000	000000
X711500190	X-71150-019	DISCONTINUED	000000	000000
X711500230	X-71150-023	BRACE; RADIATOR UPPER FMC	000000	000000
X711500240	X-71150-024	BRACE; RADIATOR LOWER FMC	000000	000000
X711500270	X-71150-027	ISOLATOR PAD; UPPER	000000	000000
X711500280	X-71150-028	ISOLATOR PAD; LOWER	000000	000000
X711500290	X-71150-029	BRACKET; RAD RETAINER (LH	000000	000000
X711500300	X-71150-030	BRACKET; RAD RETAINER (RH	000000	000000
X711500310	X-71150-031	ANGLE, ASM., RAD. SUPPORT	000000	000000
X711500320	X-71150-032	BRACKET; ISOLATOR TO FRAM	000000	000000
X711500330	X-71150-033	BRACKET; ISOLATOR TO RADI	000000	000000
X711500340	X-71150-034	BRACKET; ISOLATOR 4BD1 P/	000003	000000
X711500350	X-71150-035	BRACKET; ISOLATOR 4BD1 P/U	000003	000000
X711500360	X-71150-036	MOUNT ASM; RAD. 4BD1 P/U	000000	000000
X711500500	X-71150-050	SUPPORT; RAD LOWER C240/4J	000000	000011
X711500550	X-71150-055	BRACKET; ISOLATOR UPPER	000048	000000
X711500580	X-71150-058	SUPPORT; RAD. UPPER	000000	000054
X711500590	X-71150-059	BRACKET; RAD. UPPER ISOLA	000000	000000
X711500600	X-71150-060	ANGLE ASM; FRONT WRAPPER	000000	000000
X711500610	X-71150-061	ANGLE ASSY; RAD. SUPPORT	000000	000000
X711500620	X-71150-062	SUPPORT; RADIATOR LOWER	000000	000000
X711500730	X-71150-073	BRACKET; RDTR. SUPPORT LOWER	000000	000007
X711500740	X-71150-074	BRACKET; RDTR. SPPRT. RIGHT	000000	000011
X711500750	X-71150-075	BRACKET; RDTR. SPPRT. UPPER	000000	000017
X711500760	X-71150-076	BRACKET; RDTR. SPPRT. UPPER	000000	000069
X711500770	X-71150-077	BRACKET; RADTR. SPPRT. UPPR	000067	000000
X711500780	X-71150-078	BRKT; RDTR SPRT UPPER LH	000026	000000
X711500790	X-71150-079	BRACKET; RADIATOR SPACER	000000	000000
X711500810	X-71150-081	BRACKET; RADIATOR UPPER RH	000000	000000
X711500820	X-71150-082	BRKT; RDTR SPPRT UPPER (LH)	000006	000000
X711500830	X-71150-083	BRKT; RDTR SPPRT UPPER (LH)	000006	000000
X711500840	X-71150-084	BRKT; RDTR SPPRT UPPER (RH)	000003	000000
X711500850	X-71150-085	BRKT; RDTR SPPRT UPPER (RH)	000005	000000
X711500860	X-71150-086	BRACKET; RDTR SPPRT LOWER	000005	000000

X711500870	X-71150-087	BRKT;RDTR SUPPORT LOWER	000005	000001
X711500880	X-71150-088	BRACKET; RADIATOR SUPPORT	000000	000013
X711500890	X-71150-089	BRACKET; RADIATOR SUPPORT	000000	000014
X711500900	X-71150-090	BRACKET; RADIATOR SUPPORT	000000	000014
X711500910	X-71150-091	BRACKET; RADIATOR SUPPORT	000000	000005
X711500920	X-71150-092	BRACKET; RADIATOR SUPPORT	000000	000021
X711500930	X-71150-093	BRACKET; RADIATOR SUPPORT	000000	000019
X711500940	X-71150-094	BRACKET; RADIATOR SUPPORT	000005	000010
X711500950	X-71150-095	BRACKET; RADIATOR SUPPORT	000010	000000
X711500960	X-71150-096	BRACKET; RADIATOR SUPPORT	000005	000000
X711500970	X-71150-097	BRACKET; RADIATOR SUPPORT	000000	000020
X711610500	X-71161-050	PA FEMALE #18-14 TERMINAL	000000	000000
X711620900	X-71162-090	14,16 & 18 GAUGE TERMINAL	000000	000000
X711620920	X-71162-092	12 GAUGE TERMINAL	000000	000000
X711626420	X-71162-642	12 GAUGE TERMINAL	000000	000000
X712320240	X-71232-024	250 2P FEMALE NAT CONNECT	000000	000000
X712322620	X-71232-262	250 6P FEMALE NAT CONNECT	000000	000000
X721933200	X-72193-320	BS 2P FEMALE CONNECTOR	000000	000000
X732328573	X-73232-857	250 5P FEMALE CONNECTOR	000000	000000
X812000010	X-81200-001	ALTERNATOR ASM; 12V:55A	000000	000028
X812000020	X-81200-002	SPACER; ALT MOUNTING QD60	000000	000000
X812000160	X-81200-016	SPACER; ALT QD150M	000000	000000
X812000270	X-81200-027	SPACER; ALT MOUNTING QD27	000000	000000
X823000010	X-82300-001	0600	000000	000000
X823000020	X-82300-002	SWITCH; PANEL LIGHT QD150	000000	000000
X823000030	X-82300-003	SWITCH; STOP QD150	000000	000000
X823000040	X-82300-004	DISCONTINUED	000000	000000
X826200030	X-82620-003	HARNESS; WIRING QD27/40/6	000000	000000
X826200050	X-82620-005	HARNESS; WIRING 10' EXT	000002	000000
X826200060	X-82620-006	HARNESS; WIRING 20' EXT	000000	000000
X826200080	X-82620-008	HARNESS; WIRING QD130/145	000001	000000
X826200090	X-82620-009	HARNESS; WIRING, F/AUTO S	000000	000006
X826200100	X-82620-010	DISCONTINUED	000000	000000
X826200120	X-82620-012	HARNESS; WIRING 10' EXT, F	000000	000000
X826200130	X-82620-013	HARNESS; WIRING 20' EXT, F	000000	000000
X826200150	X-82620-015	HARNESS; WIRING QD27/40/6	000000	000000
X826200160	X-82620-016	HARNESS ASM; WIRE, POWER	000000	000000
X826200161	X-82620-016	HARNESS ASM; WIRE, POWER	000005	000000
X826200170	X-82620-017	HARNESS; WIRING, W/JUNCT	000000	000000
X826200180	X-82620-018	HARNESS ASM; ENGINE, W/RE	000000	000000
X826200190	X-82620-019	HARNESS; WIRING 10' EXT Q	000000	000000
X826200200	X-82620-020	HARNESS; WIRING 20' EXT Q	000000	000005
X826200240	X-82620-024	DISCONTINUED	000000	000000
X826200320	X-82620-032	HARNESS; ENGINE STOPPER	000000	000000
X826200330	X-82620-033	HARNESS; ENGINE CONTROL	000000	000000
X826200340	X-82620-034	HARNESS; GLOW PLUG	000000	000000
X826200360	X-82620-036	HARNESS W/JUNCTION BOX	000003	000000

X826200370	X-82620-037	HARNESS; WIRING	000000	000000
X826200380	X-82620-038	HARNESS ASSY;WIRE	000000	000000
X826200390	X-82620-039	HARNESS "Y"	000000	000000
X826200400	X-82620-040	HARNESS;WIRE	000000	000000
X826200450	X-82620-045	WIRING HARNESS	000000	000000
X826200460	X-82620-046	WIRING HARNESS	000017	000000
X826200470	X-82620-047	WIRE; TACH.	000000	000000
X826200480	X-82620-048	WIRE; TACH.	000048	000000
X826200490	X-82620-049	HARNESS; WIRING	000001	000000
X826200500	X-82620-050	WIRING HARNESS	000000	000000
X826200520	X-82620-052	WIRE HARNESS	000000	000050
X826200540	X-82620-054	WIRE HARNESS;ENGINE	000000	000097
X826200560	X-82620-056	WIRE HARNESS ENGINE	000000	000007
X826200570	X-82620-057	WIRE HARNESS; BOX	000000	000002
X826200580	X-82620-058	WIRE HARNESS; BOX	000000	000018
X826200590	X-82620-059	WIRE HARNESS; DELUXE	000000	000014
X826200600	X-82620-060	EXTENSION; WIRE HARNESS	000000	000001
X826200640	X-82620-064	HARNESS; WIRING, ENGINE	000001	000000
X826200660	X-82620-066	HARNESS; WIRING, ENGINE	000000	000010
X826200670	X-82620-067	WIRE HARNESS; ENGINE	000008	000000
X827150010	X-82715-001	BLANK KEY FOR ALL FLAT ST	000000	000000
X827150020	X-82715-002	KEY;REPLACEMENT	000000	000000
X827200010	X-82720-001	SENDER; OIL PRESSURE 12V	000000	000000
X827200020	X-82720-002	JUNCTION BLOCK; OIL PRESS	000002	000000
X827200030	X-82720-003	SENDER; OIL PRESSURE 100P	000000	000010
X827200040	X-82720-004	SENDING UNIT; OIL DUAL ST	000006	000000
X827200060	X-82720-006	SENDER; OIL, MANIFOLD UM3	000000	000000
X828500010	X-82850-001	ENGINE CONTROL-AUTOMATIC	000000	000000
X828500030	X-82850-003	ENGINE CONTROL-AUTOMATIC	000001	000000
X828500040	X-82850-004	CONTROLLER; APECS 2000	000000	000000
X828500041	X-82850 004	CONTROLLER;APECS 2000	000010	000000
X828500050	X-82850-005	CONTLLR;APECS 3000 (VBATT)	000000	000010
X828500051	X-82850-005	CONTROLLER;APECS 3000VBATT	000000	000000
X828500060	X-82850-006	CONTLLR; APECS 3000 (GND)	000003	000000
X828500061	X-82850-006	CONTROLLER;APECS 3000 (GND)	000000	000000
X828500070	X-82850-007	ACT;PC CALIBRATION TOOL	000000	000000
X829300030	X-82930-003	CABLE; BATTERY (-) 31"	000000	000000
X829300080	X-82930-008	CABLE; BATTERY (-) 35"	000000	000000
X829500010	X-82950-001	CONNECTOR HOUSING; 6-POLE	000000	000000
X829500020	X-82950-002	CONNECTOR HOUSING; 3-POLE	000000	000000
X829500030	X-82950-003	CONNECTOR HOUSING; 2-POLE	000000	000000
X829510010	X-82951-001	CONNECTOR HOUSING; 6-POLE	000000	005544
X829510020	X-82951-002	CONNECTOR HOUSING; 3-POLE	000000	000000
X829510030	X-82951-003	CONNECTOR HOUSING; 2-POLE	000000	000000
X829510040	X-82951-004	TERMINAL; SPADE FEMALE	000350	007266
X829510050	X-82951-005	BLK ELEC BOX	000000	000000
X829510060	X-82951-006	CONNECTOR HOUSING; 4-POLE	000000	000000

X829510070	X-82951-007	TERMINAL; 3 POLE CONNECTO	000000	000000
X829510080	X-82951-008	CONNECTOR TERMINAL; FOUR	000000	000000
X829510090	X-82951-009	PVC PROTECTOR	000000	000000
X829510110	X-82951-011	TERMINAL; 12-18 GAUGE	004051	000000
X829510120	X-82951-012	SEAL; 3 POLE CONNECTOR	000000	000000
X829510140	X-82951-014	SNAP PLUG; MALE	000174	000000
X829510150	X-82951-015	SNAP PLUG, FEMALE	000000	000727
X829510160	X-82951-016	250 5P FEMALE CONNECTOR	000000	001618
X829510170	X-82951-017	250 2P FEMALE NAT CONNECT	000000	000000
X829510180	X-82951-018	250 6P FEMALE CONNECTOR	000000	002917
X829510190	X-82951-019	BS 2P FEMALE CONNECTOR	000000	000128
X829510200	X-82951-020	PA FEMALE #18-14 TERMINAL	000000	010283
X829510210	X-82951-021	12 GAUGE TERMINAL	000000	000655
X829510220	X-82951-022	12 GAUGE TERMINAL	003739	000000
X829510230	X-82951-023	HOUSING	000000	002715
X829510240	X-82951-024	TERMINAL	011641	000000
X829510250	X-82951-025	HOUSING	000008	000021
X829510260	X-82951-026	TERMINAL	000000	019302
X829510320	X-82951-032	HOUSING ASSEMBLY	000000	001065
X829510330	X-82951-033	TERMINAL	000284	005916
X829510340	X-82951-034	CONNECTOR HOUSING	000000	000002
X829510350	X-82951-035	TERMINAL	000027	000002
X829510360	X-82951-036	CONNECTOR HOUSING	000000	001770
X829510370	X-82951-037	TERMINAL	000000	000000
X829510380	X-82951-038	CONNECTOR HOUSING	000086	003581
X829510390	X-82951-039	TERMINAL	005675	000000
X829510400	X-82951-040	CONNECTOR HOUSING	000000	006558
X829510410	X-82951-041	TERMINAL	000594	000000
X829510420	X-82951-042	PLUG	000000	000000
X829510430	X-82951-043	RUBBER STOPPER	000000	000429
X829510440	X-82951-044	CONNECTOR HOUSING	000000	004340
X829510450	X-82951-045	WIRE SEAL	000000	000000
X829510460	X-82951-046	DUMMY PLUG	000000	000000
X831020010	X-83102-001	HOUSING; GAUGE MOUNT	000000	000000
X831020020	X-83102-002	HOUSING; GAUGE PANEL (MUR	000000	000000
X831200010	X-83120-001	GOTO GRP-5Y4-008 ("C")	000000	000000
X831200020	X-83120-002	TACHOMETER W/HOURMETER	000000	000000
X831210010	X-83121-001	SENSOR;MAGNETIC C240/4JB1	000000	000000
X831210020	X-83121-002	BOOT; RUBBER	000000	000000
X831210030	X-83121-003	BRACKET; MOUNTING	000000	000000
X831210040	X-83121-004	TACHOMETER;C240/4JB1	000000	000000
X831210050	X-83121-005	TACHOMETER W/HOUR METER	000000	000000
X831210070	X-83121-007	TACHOMETER ASM; W/HOUR ME	000000	000000
X831210090	X-83121-009	TACH.ASM;W/HR METER MARIN	000000	000000
X831210100	X-83121-010	TACHOMETER ASM; W/HR METE	000004	000000
X831210130	X-83121-013	TACHOMETER W/HOUR METER	000000	000009
X831210140	X-83121-014	SENSOR;MAGNETIC C240/4JB1	000000	000000

X831210150	X-83121-015	TACHOMETER;C240/4JB1	000000	000016
X831210160	X-83121-016	MOUNT; TACH	000000	000000
X831400010	X-83140-001	SENDER; OIL PRESSURE	000000	000000
X831400020	X-83140-002	GAUGE; OIL PRESSURE 12V	000000	000000
X831400030	X-83140-003	PRESSURE KIT; OIL	000000	000000
X831400040	X-83140-004	SENDER; OIL PRESSURE DUAL	000000	000000
X831400050	X-83140-005	GAUGE; OIL 0-80 LBS	000000	000000
X831400060	X-83140-006	GAUGE; OIL PRESSURE QD27/	000000	000001
X831400080	X-83140-008	OIL LINE;GALLERY TO GUAGE	000022	000000
X831400090	X-83140-009	DISCONTINUED	000000	000000
X831400100	X-83140-010	DISCONTINUED	000000	000000
X831400110	X-83140-011	DISCONTINUED	000000	000000
X831400120	X-83140-012	GAUGE; OIL PRESSURE QD150	000000	000000
X831400130	X-83140-013	GAUGE; OIL PRESSURE QD27/	000000	000000
X831500010	X-83150-001	GAUGE; TEMPERATURE	000000	000000
X831500020	X-83150-002	GAUGE KIT; TEMPERATURE	000000	000000
X831500030	X-83150-003	GAUGE; TEMPERATURE QD100/	000000	000000
X831500040	X-83150-004	GAUGE; TEMPERATURE QD27/4	000000	000000
X831500050	X-83150-005	GAUGE; TEMP	000000	000000
X831500060	X-83150-006	GAUGE; TEMPERATURE QD150	000000	000000
X831500080	X-83150 008	TEMP GAUGE	000000	000000
X831510010	X-83151-001	SENDER**DISCONTINUED**	000000	000000
X831510020	X-83151-002	SENDER; TEMPERATURE	000000	000000
X831510030	X-83151-003	SENDING UNIT; DUAL STATIO	000000	000000
X831510060	X-83151-006	SENDER; TEMPERATURE	000000	000000
X831510080	X-83151-008	SENDER; TEMPERATURE QD27/	000013	000000
X831510090	X-83151-009	SENDING UNIT; DUAL STATIO	000000	000000
X831550010	X-83155-001	GAUGE; VOLTAGE QD150	000002	000000
X831600010	X-83160-001	AMMETER QD27/40/60	000006	000000
X831700020	X-83170-002	HOUR METER QD27/40/60	000000	000001
X831800010	X-83180-001	BUZZ-LIGHT; WARNING QD150	000003	000000
X831900010	X-83190-001	SWITCH ASM; MAG	000002	000000
X831900020	X-83190-002	RELAY; GLOW PLUG QD150	000006	000000
X831900030	X-83190-003	P&B 35A CIR BREAKER	000000	000000
X831900040	X-83190-004	DISCONTINUED	000000	000000
X831900070	X-83190-007	RELAY; SOLENOID	000000	000000
X839100010	X-83910-001	TACHOMETER	000000	000000
X839100020	X-83910-002	CABLE; TACHOMETER	000000	000004
X839100030	X-83910-003	CABLE ASM; TACHOMETER	000001	000000
X839100040	X-83910-004	CABLE ASM; TACHOMETER 31.	000006	000000
X892130020	X-89213-002	ISOLATOR; ADHESIVE SIDE P	000000	000062
X892140010	X-89214-001	HOSE; UPPER QD27/40/60	000000	000021
X892140020	X-89214-002	HOSE; LOWER QD27/40/60	000000	000025
X892140030	X-89214-003	HOSE; FRONT W/P INLET QD1	000000	000041
X892140040	X-89214-004	HOSE; UPPER QD130/145	000000	000000
X892140050	X-89214-005	HOSE; LOWER QD130/145	000000	000000
X892140080	X-89214-008	HOSE; UPPER QD90/100	000000	000000

X892140090	X-89214-009	HOSE; LOWER QD90/100	000000	000013
X892140110	X-89214-011	HOSE; WATER PUMP INLET	000000	000000
X892140130	X-89214-013	HOSE; UPPER RADIATOR	000000	000000
X892140140	X-89214-014	HOSE; UPPER	000000	000000
X892140150	X-89214-015	HOSE; LOWER	000000	000000
X892140160	X-89214-016	DISCONTINUED	000000	000000
X892140200	X-89214-020	HOSE; UPPER RADIATOR	000000	000000
X892140240	X-89214-024	HOSE: UPPER RADIATOR	000000	000000
X892140270	X-89214-027	HOSE; RAD. LOWER	000022	000008
X892140280	X-89214-028	LOWER RADIATOR	000000	000020
X892140290	X-89214-029	UPPER RADIATOR	000000	000037
X892140300	X-89214-030	LOWER RADIATOR	000000	000000
X892140320		HOSE; RADIATOR LOWER	000000	000000
X892140340	X-89214-034	HOSE; RADIATOR, LOWER	000000	000046
X892140350	X-89214-035	HOSE; RADIATOR, LOWER	000000	000002
X892140360	X-89214-036	HOSE; RADIATOR, UPPER	000000	000001
X892140390	X-89214-039	HOSE; RADIATOR, UPPER	000000	000000
X892140410	X-89214-041	HOSE; RADIATOR, UPPER	000000	000026
X892150020	X-89215-002	HOSE; AIR CLEANER	000000	000000
X892150030	X-89215-003	HOSE; 2" MANIFOLD/ AIR CL	000000	000000
X892150040	X-89215-004	HOSE; AIR CLEANER, COUPLI	000000	000004
X892150050	X-89215-005	HOSE; RUBBER	000000	000000
X892150070	X-89215-007	HOSE; COUPLING	000000	000000
X892150080	X-89215-008	HOSE; COUPLING, TURBO, 6BD	000000	000000
X892150090	X-89215-009	HOSE 4BD1 P/U	000000	000000
X892150200	X-89215-020	HOSE COUPLING; AIR INLET	000000	000011
X892150220	X-89215-022	CONNECTOR; TUBE	000000	000010
X892160020	X-89216-002	DISCONTINUED	000000	000000
X892160040	X-89216-004	HOSE ASM	000000	000000
X999300010		ENGINE REBUILD KIT-C240	000000	000019
X999300020	X-99930-002	ENGINE REBUILD KIT-4FB1	000000	000002
X999300030	X-99930-003	ENGINE REBUILD KIT-4JC1	000000	000001
X999300040	X-99930-004	ENGINE REBUILD KIT-4BD1	000000	000000
X999300050	X-99930-005	ENGINE REBUILD KIT-4BD1	000000	000000
X999300070	X-99930-007	ENGINE REBUILD KIT-4BD1T	000000	000005
X999300080	X-99930-008	ENGINE REBUILD KIT-6BB1	000000	000003
X999300090	X-99930-009	ENGINE REBUILD KIT-6BD1	000000	000000
X999300100	X-99930-010	ENGINE REBUILD KIT-6BD1	000000	000002
X999300110	X-99930-011	ENGINE REBUILD KIT-6BD1	000000	000005
X999300120	X-99930-012	ENGINE REBUILD KIT-6BG1	000000	000000
X999300130	X-99930-013	ENGINE REBUILD KIT-6BD1T	000000	000000
X999300140	X-99930-014	ENGINE REBUILD KIT-6BG1T	000000	000000
X999300150	X-99930-015	ENGINE REBUILD KIT-6BD1T	000000	000002
X999300160	X-99930-016	ENGINE REBUILD KIT-6SA1T	000000	000000
X999300170	X-99930-017	ENGINE REBUILD KIT-6SD1T	000000	000000
X999300180	X-99930-018	ENGINE REBUILD KIT-6RB1T	000000	000000
X999300190	X-99930-019	ENGINE REBUILD KIT-6RB1T	000000	000004

X999300200	X-99930-020	ENGINE REBUILD KIT-4JB1PK	000000	000000
X999300210	X-99930-021	ENGINE REBUILD KIT-4BD1T	000000	000002
X999300220	X-99930-022	ENGINE REBUILD KIT	000000	000000
X999300230	X-99930-023	ENGINE REBUILD KIT	000000	000000
X999300240	X-99930-024	ENGINE REBUILD KIT	000000	000002
X999300250	X-99930-025	ENGINE REBUILD KIT	000000	000000
X999300260	X-99930-026	ENGINE REBUILD KIT	000000	000000
X999300270	X-99930-027	ENGINE REBUILD KIT	000000	000002
X999300280	X-99930-028	4BD1 ENGINE REBUILD KIT	000000	000003
X999300290	X-99930-029	6BB1 ENGINE REBUILD KIT	000000	000005
X999300300	X-99930-030	6RB1 ENGINE REBUILD KIT	000000	000005
X999300310	X-99930-031	6BD1 ENGINE REBUILD KIT	000000	000000
X999300320	X-99930-032	6BD1 ENGINE REBUILD KIT	000000	000001
X999300330	X-99930-033	6SD1 ENGINE REBUILD KIT	000000	000000
X999300340	X-99930-034	E120 ENGINE REBUILD KIT	000000	000002
X999300350	X-99930-035	E120 ENGINE REBUILD KIT	000000	000003
X999300360	X-99930-036	E120 ENGINE REBUILD KIT	000000	000000
X999300370	X-99930-037	E120 ENGINE REBUILD KIT	000000	000000
X999300380	X-9930-038	E120 ENGINE REBUILD KIT	000000	000004
X999300390	X-99930-039	ENGINE REBUILD KIT	000000	000000
X999300400		ENGINE REBUILD KIT-6RB1T	000000	000004
X999440010		DECAL; MINING CERTIFICATI	000000	000000
X999440020	X-99944-002	LABEL; FILL INSTR QD150M	000000	000000
X999440030	X-99944-003	LABEL; ZINC ANODE QD150M	000869	000000
X999440040	X-99944-004	LABEL; ENGINE SPEC QD150M	000000	000000
X999440050	X-99944-005	LABEL; PTO CAUTION	000000	000000
X999440060	X-99944-006	LABEL; DIESEL FUEL ONLY	000000	000000
X999440120	X-99944-012	LABEL COOLANT FILL	000000	000000
X999440130	X-99944-013	INSTRUCTION LABLE FOR VAL	000000	000000
X999440140	X-99944-014	DECAL; GEAR WARNING	000000	000000
X999440200	X-99944-020	DECAL, RADIATOR SHROUD	000225	000000
X999440210	X-99944-021	DECAL, HOOD	000001	000000
X999500010	X-99950-001	INSTALLATION MANUAL	000000	000000
X999500050	X-99950-005	INSTRUCTIONS (X-14335-001	000000	000000
X999500070	X-99950-007	INSTRUCTION SHEET	000000	000000
X999500140	X-99950-014	INSTRUCTION SHEET	000000	000000
X999500150	X-99950-015	INSTRUCTION SHEET	000000	000000
X999500170	X-99950-017	INST DRAWING UM6BD1 STOP	000000	000000
X999500180	X-99950-018	INST DRAWING UM6BD1MTC3 D	000000	000000
X999500360	X-99950-036	ASSEMBLY INSTRUCTIONS	000000	000000
X999500370	X-99950-037	ASSEMBLY INSTRUCTIONS	000000	000000
X999500570	X-99950-057	INSTRUCTION DRWG PKG	000000	000000
X999500580	X-99950-058	INSTRUCTION PACKAGE	000000	000000
X999500620	X-99950-062	INSTALLATION INSTRUCTIONS	000000	000000
X999500630	X-99950-063	INSTRUCTIONS TRANS ADAPT	000000	000000
X999500660	X-99950-066	INST DRAWING-TACH (DATCON	000000	000000
X999500680	X-99950-068	INSTALLATION INSTRUCTIONS	000000	000000

X999500710	X-99950-071	INSTRUCTIONS-ENG. MNTG, F	000000	000000
X999500720	X-99950-072	INSTRUCTIONS-ENG.MNTG,FRT	000000	000000
X999500730	X-99950-073	INSTRUCTIONS-ENG.MNTG,RR	000000	000000
X999500740	X-99950-074	INSTRUCTIONS-SKID BASE AS	000000	000000
X999500750	X-99950-075	INSTRUCTIONS-RAD/MNTG,FAN	000000	000000
X999500760	X-99950-076	INSTRUCTIONS-RAD.MNTG, FA	000000	000000
X999500770	X-99950-077	INSTRUCTIONS-GRILL, CORE	000000	000000
X999500780	X-99950-078	INSTRUCTIONS-AIR CLEANER	000000	000000
X999500790	X-99950-079	INSTRUCTIONS-AIR CLEANER	000000	000000
X999500800	X-99950-080	INSTRUCTIONS-EXH. SYSTEM	000000	000000
X999500810	X-99950-081	INSTRUCTIONS-CABLE, THROT	000000	000000
X999500820	X-99950-082	INSTRUCTIONS-BRKT,THROT,S	000000	000000
X999500830	X-99950-083	INSTRUCTIONS-BRKT,THROT,S	000000	000000
X999500840	X-99950-084	INSTRUCTIONS-BRKT,THROT-S	000000	000000
X999500850	X-99950-085	INSTRUCTIONS-CABLE, STOP	000000	000000
X999500860	X-99950-086	INSTRUCTIONS-INSTR.PANEL	000000	000000
X999500870	X-99950-087	INSTRUCTIONS-INSTR.PANEL	000000	000000
X999500880	X-99950-088	INSTRUCTIONS-TACH.	000000	000000
X999500890	X-99950-089	INSTRUCTIONS-ENCL,FRT,RR	000000	000000
X999500900	X-99950-090	INSTRUCTIONS-ENCL,FRT,RR	000000	000000
X999500910	X-99950-091	INSTRUCTIONS-PANELS, SIDE	000000	000000
X999500930	X-99950-093	INSTRUCTIONS-TACH.	000000	000000
X999500950	X-99950-095	INSTRUCTIONS, INSTALL	000000	000000
X999550220	X-99955-022	INST DRAWING UM3KC1 SHUTD	000000	000000
X999550260	X-99955-026	WIRING HARNESS INSTRUCTIO	000000	000000
X999550300	X-99955-030	INST DRAWING UM6BD1 THROT	000000	000000
X999550310	X-99955-031	INST DRAWING - WIRING HAR	000000	000000
X999550320	X-99955-032	INST DRAWING UM6BD1 HBW M	000000	000000
X999550330	X-99955-033	INST DRAWING UM6BD1 T/D M	000000	000000
X999550340	X-99955-034	INST DRAWING UM6BD1 B/W M	000000	000000
X999550350	X-99955-035	INST DRAWING UM6BD1 EXHAU	000000	000000
X999550360	X-99955-036	INST DRAWING UM6BD1 WATER	000000	000000
X999550400	X-99955-040	INST DRAWING UM6BD1 ADPT	000000	000000
X999550420	X-99955-042	STOP LEVER RE WORK DRAWIN	000000	000000
X999550430	X-99955-043	INST DRAWING UM3KC THROTT	000000	000000
X999550450	X-99955-045	INST. DRAWING ENG HARNESS	000000	000000
X999550470	X-99955-047	INTALLATION INSTRUCTIONS	000000	000000
X999550490	X-99955-049	INSTALLATION DRAWINGS	000000	000000
X999550560	X-99955-056	INSTRUCTIONAL DRWG PKG	000000	000000
X999550570	X-99955-057	INSTALLATION DRAWINGS	000000	000000
X999550680	X-99955-068	INSTALLATION DRAWINGS	000000	000000
X999550990	X-99955-099	DRAWING; ASM. INSTALLATIO	000000	000000
X999551000	X-99955-100	DRAWING; ASSEMBLY INSTALL	000000	000000
X999551010	X-99955-101	SKETCH; ASSEMBLY INSTALLA	000000	000000
X999570280	X-99957-028	PAINT; LT GREEN, P/U SHEE	000000	000000
X999600010	X-99960-001	SLEEVE; RUNOUT CHECKING	000000	000000
X999600120	X-99960-012	JIG; TORQUE CONVERTER	000000	000000

X999800010	X-99980-001	INSTRUCTIONAL DRWG PKG	000000	000000
X999800020	X-99980-002	INSTRUCTIONAL DRWG PKG	000000	000000
X999800030	X-99980-003	INSTRUCTIONAL DRWG PKG	000000	000000
X999800040	X-99980-004	INSTRUCTIONAL DRWG PKG	000000	000000
X999800050	X-99980-005	INSTRUCTIONAL DRWG PKG	000000	000000
X999800060	X-99980-006	INSTRUCTIONAL DRWG PKG	000000	000000
X999800070	X-99980-007	INTALLATION INSTRUCTIONS	000000	000000
X999800080	X-99980-008	INSTRUCTIONAL DRWG PKG	000000	000000
X999800090	X-99980-009	INSTRUCTION DRWG PKG	000000	000000
X999800100	X-99980-010	INSTRUCTIONAL DRWG PKG	000000	000000
X999800110	X-99980-011	DISCONTINUED	000000	000000
X999800120	X-99980-012	INSTRUCTIONAL DRWG PKG	000000	000000
X999800130	X-99980-013	INSTRUCTIONAL DRWG PKG	000000	000000
X999800140	X-99980-014	INSTRUCTIONAL DRWG PKG	000000	000000
0011041300	0-0110 4130	HOSE;FUEL,OVERFLOW L=130	000000	000000
0011041500	0-0110 4150	HOSE; FUEL	000000	000000
0011043200	0-0110 4320	HOSE;RUBBER,FUEL L=320	000000	000000
0011060500	0-0110 6050	PIPE; FUEL, ADAPTER-NOZZL	000000	000000
0011082700	0-0110 8270	HOSE; FUEL I/PUMP TO	000000	000000
0011083400	0-0110 8340	HOSE; RUBBER C/V-OILPAN	000000	000000
0011084300	0-0110 8430	HOSE; FUEL, TANK-FILT L=4	000000	000000
0011084600	0-0110 8460	HOSE;FUEL,TANK-FILTER	000000	000000
0011084800	0-0110 8480	HOSE; FILTER-PUMP	000000	000000
0011086000	0-0110 8600	HOSE;FUEL (L=600)	000000	000000
0011091200	0-0110 9120	HOSE: RUBBER	000000	000000
0011091500	0-0110 9150	HOSE: FUEL	000000	000000
0011091800	0-0110 9180	HOSE; OVER FLOW	000000	000000
0011091900	0-0110 9190	HOSE; RUBBER L=190	000000	000000
0011092500	0-0110 9250	PIPE; OVER FLOW	000000	000000
0011094500	0-0110 9450	HOSE; FUEL FILTER	000000	000000
0011109800	0-0111 0980	HOSE FUEL FILTE	000000	000000
0011543000	0-0115 4300	HOSE;RBR,L=3000	000000	000000
0011563000	0-0115 6300	HOSE;FUEL (L=880MM)	000000	000000
0011583000	0-0115 8300	HOSE;RUBBER	000000	000000
0011585900	0-0115 8590	HOSE; RUBBER	000000	000000
0011593000	0-0115 9300	HOSE; RUBBER	000000	000000
0012041500	0-0120 4150	HOSE;RUBBER,VSV TO L=150	000000	000000
0012042400	0-0120 4240	HOSE;RUBBER, 4.5X11.5X240	000000	000000
0012060500	0-0120 6050	HOSE; FUEL (L=50MM)	000000	000000
0012065000		HOSE; FUEL (L=500)	000000	000000
0012081700		HOSE; RUBBER, FUEL	000000	000000
0012083000	0-0120 8300	HOSE; RUBBER L=300	000000	000000
0012084600	0-0120 8460	HOSE; TANK L=460	000000	000000
0012084800	0-0120 8480	HOSE; RUBBER L=480	000000	000000
0012091200	0-0120 9120	HOSE;OVER FLOW VLV. L=120	000000	000000
0012091500	0-0120 9150	HOSE; OVERFLOW VLV L=150	000000	000000
0012091800	0-0120 9180	HOSE;OVER FLOW VLV. L=180	000000	000000

0012092500	0-0120	9250	HOSE;FLTR-PUMP,O/F L=250	000000	000000
0012109800	0-0121	0980	PIPE; DELIVERY FUEL TANK	000000	000000
0012543000	0-0125	4300	HOSE;RUBBER L=3000	000000	000002
0012563000	0-0125	6300	HOSE; FUEL,RTN (L=3000)	000001	000018
0012583000	0-0125	8300	HOSE;RUBBER, L=3000	000000	000001
0012585900			HOSE; RUBBER	000000	000002
0012593000	0-0125	9300	HOSE;BREATHER L=3000	000000	000010
0012603000	0-0126	0300	HOSE; FUEL DELIVERY L3000	000000	000022
0015583000	0-0155	8300	HOSE; RUBBER, FUEL L=3000	000020	000022
0018041300	0-0180	4130	HOSE; RUBBER,FUEL	000000	000008
0022092400	0-0220	9240	HOSE;ATF L=240	000000	000000
0022098600	0-0220	9860	HOSE; ATF L=860	000000	000000
0022130800	0-0221	3080	HOSE*	000000	000000
0022130900	0-0221	3090	HOSE;RUBBER,TAPPET CHAMBE	000003	000000
0022593000	0-0225	9300	HOSE; ATF L=3000	000014	000004
0023091300	0-0230	9130	HOSE; RUBBER, OIL PIPE	000000	000002
0023114000	0-0231	1400	HOSE;GUIDE TUBE, (ID=11.5)	000000	000003
0023114100	0-0231	1410	HOSE; RUBBER	000000	000000
0023115200	0-0231	1520	HOSE; RUBBER,VAC-PUMP	000000	000000
0023611500	0-0236	1150	HOSE; RUBBER (L=1500)	000001	000001
0023613000	0-0236	1300	HOSE;RUBBER, (L=3000)	000000	000000
0026142000	0-0261	4200	HOSE; OIL DRAIN	000000	000000
0026175000	0-0261	7500	HOSE; RUBBER	000000	000000
0026178000	0-0261	7800	HOSE; RUBBER	000000	000018
0026671000	0-0266	7100	HOSE; RUBB., PCV.ID17X1000	000000	000000
0026781000	0-0267	8100	HOSE; RUBBER,VE	000000	000000
0027096000	0-0270	9600	HOSE; RUBBER. PCV	000000	000001
0027212000	0-0272	1200	HOSE; RUBBER, OIL PAN	000001	000000
0027258600	0-0272	5860	HOSE; RUBBER, AIR BREATHE	000000	000000
0027258800	0-0272	5880	HOSE; RUBBER	000000	000000
0027591000	0-0275	9100	HOSE; BREATHER, OPEN	000000	000001
0027751100	0-0277	5110	HOSE; RUBBER	000000	000004
0027901100	0-0279	0110	HOSE; RUBBER, AIR BREATHE	000000	000001
0028149000	0-0281	4900	HOSE; RUBBER,BREATHER TO	000000	000001
0028251000	0-0282	5100	HOSE;BREATHER TO PIPE	000000	000001
0028405201	0-0284	0520	HOSE; BREATHER	000000	000000
0028573000	0-0285	7300	HOSE; BREATHER L=3000	000000	000002
0028641000	0-0286	4100	HOSE; RUBBER PCV	000000	000010
0028641100	0-0286	4110	HOSE; RUBBER PCV	000000	000004
0028751000	0-0287	5100	HOSE; RUBBER, AIR BREATHE	000001	000000
0028751150	0-0287	5115	HOSE; RUBBER,AIR BREATHER	000000	000000
0031073600	0-0310	7360	HOSE; WATER (L=350)	000000	000000
0031078000	0-0310	7800	HOSE; WATER DRAIN	000000	000000
0031571050	0-0315	7105	HOSE;	000000	000000
0031573000	0-0315	7300	HOSE; WATER	000000	000008
0032160550	0-0321	6055	HOSE; RUBBER (L=55)	000000	000000
0032160900	0-0321	6090	HOSE; OIL COOLER (L=90)	000000	000000

0032161100	0-0321	6110	HOSE; RUBBER (L=110)	000000	000000
0032161600	0-0321	6160	HOSE; WATER	000000	000000
0032162000	0-0321	6200	HOSE;WATER (L=200)	000000	000000
0032162200	0-0321	6220	HOSE; O/COOLER (L=220)	000000	000000
0032302700	0-0323	0270	HOSE; RUBBER, WATER	000000	000000
0032571050	0-0325	7105	HOSE;WATER,BYPASS L=1050	000000	000000
0032573000	0-0325	7300	HOSE;RAD L=3000	000000	000000
0032593000	0-0325	9300	HOSE; RUBBER,WATER L=3000	000000	000000
0032663000	0-0326	6300	HOSE; WATER,HEATE(L=3000)	000000	000002
0032663100	0-0326	6310	HOSE;WATER,HEATER(L=3000)	000000	000000
0034573000	0-0345	7300	HOSE	000000	000002
0035091100	0-0350	9110	HOSE;WATER,TURBOCHARGER	000000	000002
0035091400	0-0350	9140	HOSE; WATER,TURBO	000049	000000
0035163500	0-0351	6350	HOSE; RUBBER,HTR	000000	000000
0035330550	0-0353	3055	HOSE;RUBBER CON TO W/PUMP	000003	000000
0035571050	0-0355	7105	HOSE RAD TO SURGE TANK	000001	000002
0035573000	0-0355	7300	HOSE;RAD TO PIPE	000000	000004
0035593000	0-0355	9300	HOSE;WATER DRAIN,C/BL	000049	000232
0035663000	0-0356	6300	HOSE; RUBBER,EGR COOLER	000023	000022
0035743000	0-0357	4300	HOSE;RUBBER	000000	000003
0041504000			HOSE;RBR,BREATHER,RR AXLE	000000	000000
0042401700	0-0424	0170	HOSE;RUBBER,3WA	000000	000000
0042403000	0-0424	0300	HOSE;RUBBER,VSV	000000	000000
0042405800	0-0424	0580	HOSE; RUBBER, MCV	000000	000004
0042410300	0-0424	1030	HOSE; CONN (L=30)	000000	000000
0042418400	0-0424	1840	HOSE;RUBBER	000000	000000
0042451400	0-0424	5140	HOSE; VAC PIPE, (E)	000000	000000
0042513700	0-0425	1370	HOSE;RUBBER(CATER)	000000	000000
0044202700	0-0442	0270	HOSE;VAC	000000	000002
0046503000			HSE;RUBBR,BREATHER,RR AXL	000000	000000
0047401350	0-0474	0135	HOSE; VAC VSV	000000	000004
0047402500	0-0474	0250	HOSE;PRESSURE REGULATOR	000000	000000
0047403000	0-0474	0300	HOSE; RUBBER L=3000	000000	000282
0047406000	0-0474	0600	HOSE;PRESSURE REGULATOR	000000	000000
0047413000	0-0474	1300	HOSE;RUBBER	000000	000000
0047423000	0-0474	2300	HOSE;RUBBER	000000	000000
0047432500	0-0474	3250	HOSE;PRESSER REGULATOR	000000	000000
0047433000	0-0474	3300	HOSE;RUBBER,THROTTLE VLV	000000	000000
0047443000	0-0474	4300	HOSE; RUBBER,PRESSURE REG	000000	000000
0047453000	0-0474	5300	HOSE;RUBBER	000000	000000
0047456000	0-0474	5600	HOSE;PRESSER REGULATOR	000000	000000
0047503000	0-0475	0300	HOSE;MAP SENSOR L=3000	000000	000008
0047513000	0-0475	1300	HOSE;RUBBER	000000	000000
0047903000	0-0479	0300	HOSE,RUBBER (L=3000)	000000	000002
0048503000	0-0485	0300	HOSE;VAC,ENG	000000	000002
0071202800			HOSE; FLEX, AIR	000000	000000
0098091500			HOSE; RETURN, P/S	000000	000000

0108010550	0-1080	1055	BOLT	000000	000000
0108056380	0-1080	5638	BOLT; PVC CLIP	000000	000000
0108056500	0-1080	5650	BOLT; VALVE	000000	000015
0108056550	0-1080	5655	BOLT; COOLING FAN	000005	000000
0108056650	0-1080	5665	BOLT*	000000	000000
0108058000	0-1080	5800	BOLT;HSG. TO HOOD	000000	000000
0108058350	0-1080	5835	BOLT; JOINT	000013	000000
0108058400	0-1080	5840	B O L T	000000	000127
0108058450	0-1080	5845	BOLT; HAND BRAKE LEVER	000200	000000
0108058500	0-1080	5850	BOLT; BRKT. FIX	000486	000000
0108058550	0-1080	5855	BOLT; COOLING F.	000000	000000
0108058600	0-1080	5860	BOLT	000000	000000
0108058650	0-1080	5865	BOLT; EXHST PIPE	000054	000000
0108058700	0-1080	5870	BOLT; CLAMP	000000	000001
0108058750	0-1080	5875	BOLT; INJ PUMP	000000	000000
0108058800	0-1080	5880	BOLT	000003	000000
0108058850	0-1080	5885	BOLT; BRACKET	000033	000000
0108058900			BOLT; EXHST VALVE	000000	000092
0108058950			BOLT; THERMOSTAT HSG	000000	000003
0108060000	0-1080	6000	BOLT;DUCT	000000	000043
0108060400	0-1080	6040	BOLT;DUCT	000000	000094
0108060450	0-1080	6045	BOLT; PUMP BODY-COVER	000000	000000
0108060500	0-1080	6050	BOLT; BRACKET FIX	000010	000296
0108060550	0-1080	6055	BOLT; BRACKET	000000	000000
0108060600	0-1080	6060	BOLT; CONT. CYL.	000000	000122
0108060650	0-1080	6065	BOLT;CLUTCH M/CYL TO BRKT	000000	000010
0108060700	0-1080	6070	BOLT; CLAMP	000000	000027
0108060750	0-1080	6075	BOLT; CUSHION, RUBBER RAD	000000	000375
0108060800	0-1080	6080	BOLT; INJ PUMP BRKT	000006	000038
0108060850	0-1080	6085	BOLT; INJ. PUMP BRKT. FIX	000000	000000
0108060900	0-1080	6090	BOLT; COVER	000000	000000
0108060950	0-1080	6095	BOLT; HSG TO HD	000000	000000
0108062500	0-1080	6250	BOLT; SPACER	000000	000000
0108062550	0-1080	6255	BOLT; S/ABS	000000	000000
0108062600	0-1080	6260	BOLT;POWER CHAMBER BRKT	000042	000015
0108062650	0-1080	6265	BOLT; CASE	000000	000000
0108062700	0-1080	6270	BOLT, COVER	000000	000000
0108062800			BOLT;SPRING TO SHACKLE	000000	000000
0108062850			BOLT	000024	000000
0108062900	0-1080	6290	BOLT; SEMS, CASE	000023	000000
0108064500	0-1080	6450	B O L T	000000	000005
0108064550	0-1080	6455	BOLT*	000000	000000
0108064650	0-1080	6465	BOLT;FLYWHEEL	000000	000115
0108064750	0-1080	6475	BOLT*	000000	000000
0108064900	0-1080	6490	BOLT;LWR LNK TO FRT C/MBR	000010	000009
0108066650	0-1080	6665	BOLT BRG CASE	000000	000000
0108066900	0-1080	6690	BOLT BRG CASE	000000	000000

0108108350	0-1081	0835	BOLT; GEAR CASE	000001	000001
0108108500	0-1081	0850	BOLT; PIN LOCK, LINK	000000	000000
0108108550	0-1081	0855	BOLT	000000	000000
0108108600	0-1081	0860	BOLT	000000	000000
0108108750	0-1081	0875	BOLT; INJ PUMP	000000	000023
0108108930	0-1081	0893	BOLT; FAN	000000	000000
0108110400	0-1081	1040	BOLT; BRKT, 3RD	000000	000017
0108110550	0-1081	1055	BOLT; THRUST COLLAR	000002	000010
0108112500	0-1081	1250	BOLT; S/ABS TO LWR LF	000000	000000
0108112550	0-1081	1255	BOLT; SPR & SHACKLE	000000	000000
0108112650	0-1081	1265	BOLT; SPR & SHACKLE	000000	000090
0108112800	0-1081	1280	BOLT; ENGINE FOOT	000000	000016
0108112900	0-1081	1290	BOLT;	000000	000000
0108114550			BOLT; HOOK TO FRAME	000000	000017
0108114650	0-1081	1465	BOLT; HOOK TO FRAME	000000	000013
0108116650	0-1081	1665	BOLT; BRG. CASE	000000	000000
0108116700	0-1081	1670	BOLT; HOOK TO FRAME	000000	000000
0108116750	0-1081	1675	BOLT; HOOK TO FRAME	000000	000000
0108558000	0-1085	5800	BOLT; HSG TO HD	000115	000000
0108558600	0-1085	5860	BOLT; INJ PUMP BRKT	000000	000038
0108558700			BOLT; CLAMP	000056	000221
0108562500			BOLT; S/ABS	000000	000011
0108564500	0-1085	6450	BOLT; COVER TO HSG	000000	000005
0108564800	0-1085	6480	BOLT; PIN LOCK	000000	000005
0109558400	0-1095	5840	BOLT; GEAR CASE COVER	000000	000267
0109558500	0-1095	5850	BOLT; INL COVER	000029	000071
0109566000	0-1095	6600	BOLT; CR/SHF PULLEY	000000	000067
0109566600	0-1095	6660	BOLT; TENSION	000000	000148
0168060000	0-1680	6000	BOLT	000018	000000
0168060400	0-1680	6040	BOLT; BRG CASE	000000	000007
0168060450	0-1680	6045	BOLT E120	000000	000000
0168060500	0-1680	6050	BOLT; CLU CONT	000000	000000
0168060550	0-1680	6055	BOLT	000000	000014
0168060600	0-1680	6060	BOLT; QUADRANT BOX	000000	000000
0168060650	0-1680	6065	BOLT; INJ PUMP BRKT	000000	000000
0168060700	0-1680	6070	BOLT; OIL PUMP TO C/BL	000000	000009
0168060750	0-1680	6075	BOLT; GEN. BRKT.	000000	000000
0168060800	0-1680	6080	BOLT	000013	000017
0168060850	0-1680	6085	BOLT; SHIFT ASSM.	000000	000000
0168060900	0-1680	6090	BOLT	000000	000000
0168060950	0-1680	6095	BOLT*	000001	000000
0168062500	0-1680	6250	BOLT; ADJ. PLATE FIX. MC	000000	000000
0168062550	0-1680	6255	BOLT; COVER	000000	000000
0168062600	0-1680	6260	BOLT; HSG.	000137	000000
0168062650	0-1680	6265	BOLT; GEAR CASE	000000	000000
0168064500			BOLT; FINAL PINION CAGE	000000	000027
0168064550			BOLT	000000	000000

0168064700	0-1680	6470	BOLT*	000000	000000
0168064950	0-1680	6495	BOLT*	000000	000000
0168068750	0-1680	6875	BOLT*	000000	000000
0168110500	0-1681	1050	BOLT; FUEL TANK TO FRAME	000000	000000
0168110600	0-1681	1060	B O L T	000016	000000
0168560500	0-1685	6050	BOLT;GEAR CASE COVER	000029	000071
0168560700	0-1685	6070	BOLT; WATER HOSE	000000	000005
0168560800	0-1685	6080	BOLT; OIL PUMP	000000	000003
0168560900	0-1685	6090	BOLT; INJ PUMP	000032	000051
0168562600	0-1685	6260	BOLT; HSG	000000	000137
0168562900	0-1685	6290	BOLT; HSG	000000	000033
0169562700	0-1695	6270	BOLT; HSG	000000	000098
0169562900	0-1695	6290	BOLT; HSG	000029	000071
0169564000	0-1695	6400	BOLT; STAY TO C/BL	000000	000078
0169564500	0-1695	6450	BOLT; HSG	000000	000030
0169564600	0-1695	6460	BOLT; THRUST COLLAR	000000	000009
0169564900	0-1695	6490	BOLT; AIR CMPR FIX	000000	000126
0198181400	0-1981	8140	HOSE; RUBBER	000000	000000
0200061440	0-2000	6144	BOLT;	000000	000000
0200183070	0-2001	8307	BOLT;	000000	000000
0200582270	0-2005	8227	BOLT;	000000	000000
0208004350	0-2080	0435	BOLT; PCV	000000	000000
0208005100	0-2080	0510	BOLT; POINTER FIX	000000	000020
0208005120	0-2080	0512	BOLT; CLAMP	000000	000000
0208005160	0-2080	0516	BOLT; ENG CONT	000000	000000
0208005200	0-2080	0520	BOLT; CLIP, INJ, PIPE	000000	000030
0208005300	0-2080	0530	BOLT*	000000	000000
0208006100	0-2080	0610	BOLT; BRG. COVER	000000	000000
0208006120	0-2080	0612	BOLT; DUST COVER,RET	000000	000233
0208006140	0-2080	0614	BOLT; THRUST PLATE	000000	000000
0208006160	0-2080	0616	BOLT; FENDER	000008	000387
0208006180	0-2080	0618	BOLT;SUPPORT,CHANGE LEVER	000000	000036
0208006200	0-2080	0620	BOLT; CLIP	000000	000105
0208006250	0-2080	0625	BOLT; LEVER SHAFT	000000	000118
0208006350	0-2080	0635	BOLT, DYNAMIC DA	000000	000000
0208006500	0-2080	0650	BOLT; PEDAL STOP	000000	000271
0208006550	0-2080	0655	BOLT; CONT SET SPEED	000005	000000
0208006600	0-2080	0660	BOLT; COOLING FAN	000000	000010
0208008100	0-2080	0810	BOLT;DUST CVR TO KNUCKLE	000000	000000
0208008120	0-2080	0812	BOLT;DUST CVR TO KNUCKLE	001035	000000
0208008140	0-2080	0814	BOLT; BAFFLE PLATE FIX	000000	000000
0208008160	0-2080	0816	BOLT; BRACKET TO TRANS	000000	000013
0208008180	0-2080	0818	B O L T	000000	000110
0208008200	0-2080	0820	BOLT;BRK DRUM	000000	000032
0208008220	0-2080	0822	BOLT; CLIP, VAC.	000046	000000
0208008250	0-2080	0825	BOLT; BRKT TO BO	000000	000037
0208008280	0-2080	0828	BOLT;STOPPER,ACCEL PEDAL	000009	000006

0208008300	0-2080	0830	BOLT; INTERCOOLER	000064	000000
0208008320	0-2080	0832	BOLT	000002	000000
0208008350	0-2080	0835	BOLT; BRACKET, VERTCL PIPE	000046	000000
0208008450	0-2080	0845	BOLT; EXH. PIPE	000000	000000
0208008750	0-2080	0875	BOLT;	000000	000000
0208010000	0-2080	1000	BOLT SPINDLE	000000	000000
0208010140	0-2080	1014	BOLT; COVER	000007	000000
0208010160	0-2080	1016	BOLT; BRKT, FIX	000053	000000
0208010180	0-2080	1018	BOLT*	000000	000000
0208010200	0-2080	1020	BOLT; STAY	000078	000040
0208010220	0-2080	1022	BOLT.	000000	000063
0208010250	0-2080	1025	BOLT; CLIP, SIDE	000000	000009
0208010280	0-2080	1028	BOLT	000000	000000
0208010300	0-2080	1030	BOLT; BRKT, VERTICAL	000000	000000
0208010320	0-2080	1032	BOLT; FUEL FILTER FIX	000000	000000
0208010350	0-2080	1035	BOLT; BRACKET TO	000075	000079
0208010400	0-2080	1040	BOLT; FOOT	000000	000000
0208010450	0-2080	1045	BOLT	000000	000000
0208010500	0-2080	1050	BOLT; CLAMP	000000	000002
0208010550	0-2080	1055	BOLT; FOOT	000000	000000
0208012220	0-2080	1222	BOLT; BRKT/SUPPORT PLATE	000000	000000
0208012250	0-2080	1225	BOLT; BRKT TO AXLE CASE	000000	000000
0208012280			BOLT; POWER CHAMBER BRKT.	000000	000000
0208012300	0-2080	1230	BOLT; SUPPORT, RUBBER TO	000000	000031
0208012320	0-2080	1232	BOLT; S/ABS BRACKET	000000	000000
0208012350	0-2080	1235	BOLT; SPROCKET TO C/SHAFT	000011	000006
0208012400	0-2080	1240	BOLT; EXH PIPE, FRT	000002	000012
0208012450	0-2080	1245	BOLT; BRAKE, M/CYL	000000	000000
0208012500	0-2080	1250	BOLT; CLAMP TO ROD	000000	000025
0208014180	0-2080	1418	BOLT; CLIP FIXING	000008	000000
0208014220	0-2080	1422	BOLT; ENGINE FOOT	000000	000000
0208014250	0-2080	1425	BOLT; ENG. HANGER	000000	000060
0208014300	0-2080	1430	BOLT; LWR. BRKT	000000	000044
0208014350	0-2080	1435	BOLT; SPACER	000000	000015
0208014400	0-2080	1440	BOLT; FRT WHEEL CYL	000000	000369
0208014450	0-2080	1445	BOLT; STRG UNIT	000000	000000
0208016400	0-2080	1640	BOLT; BRKT, AIR TANK TO FRA	000000	000003
0208016450	0-2080	1645	BOLT; FINAL DRIVE SETTING	000000	000007
0208508200	0-2085	0820	BOLT; BRK DRUM	000051	000014
0208510000			BOLT; ADJ	000000	000035
0208510160	0-2085	1016	BOLT; LOCK ANCH	000000	000000
0208510250	0-2085	1025	BOLT; CLIP	000000	000010
0208512350	0-2085	1235	BOLT; FRAME TO ENG FOOT	000000	000031
0209508200	0-2095	0820	BOLT; CLU	000004	000148
0209510200			BOLT	000000	000010
0209514250	0-2095	1425	BOLT; FLEX PLATE	000010	000013
0209514350	0-2095	1435	BOLT; TURBOCHARGER	000006	000014

0209514500	0-2095	1450	BOLT; STRG	000013	000020
0209516400	0-2095	1640	BOLT;FINAL DRIVE SETTING	000000	000004
0209516500	0-2095	1650	BOLT; CR/SHF PULLEY	000006	000010
0238010140	0-2380	1014	BOLT; CLIP	000000	000000
0238010160	0-2380	1016	BOLT; LK PIECE	000000	000000
0238010180	0-2380	1018	BOLT; BRG COVER	000000	000000
0238010200	0-2380	1020	BOLT	000000	000076
0238010220	0-2380	1022	BOLT; BRKT TO TRANS.	000000	000060
0238010250	0-2380	1025	BOLT; COVER	000000	000007
0238010300	0-2380	1030	BOLT*	000007	000000
0238010320	0-2380	1032	BOLT; DUCT,PUMP OUT	000000	000000
0238010350	0-2380	1035	BOLT; STIFFENER	000000	000000
0238010400			BOLT; BRG CASE	000000	000000
0238010500	0-2380	1050	BOLT;	000000	000006
0238012250	0-2380	1225	BOLT;ADJ. PLATE	000000	000037
0238012320	0-2380	1232	BOLT	000000	000000
0238012350	0-2380	1235	BOLT*	000000	000000
0238012380	0-2380	1238	BOLT POWER DRIVE	000000	000000
0238012400	0-2380	1240	BOLT*	000001	000001
0238014250	0-2380	1425	BOLT; BRACKET	000014	000000
0238014300	0-2380	1430	BOLT	000000	000000
0238014320	0-2380	1432	BOLT; SUPPORT PLATE	000000	000014
0238014380	0-2380	1438	B O L T	000000	000000
0238014400	0-2380	1440	BOLT; CLU HSG TO TRANS	000000	000000
0239514250	0-2395	1425	BOLT; THRUST COLLAR	000000	000013
0239514300	0-2395	1430	BOLT; THRUST COLLAR	000000	000134
0280106100	0-2801	0610	BOLT;FAN GUIDE	000000	000000
0280106120	0-2801	0612	BOLT;FLANGE RET/CVR TO CL	000000	000010
0280106160	0-2801	0616	BOLT;BRACKET	000022	000000
0280106250	0-2801	0625	BOLT; HARNESS	000000	000000
0280106500	0-2801	0650	BOLT;TIMING	000000	000000
0280108120	0-2801	0812	BOLT;CHG LEVER	000000	000000
0280108180	0-2801	0818	BOLT; DRIVE GEAR	000000	000000
0280108200			BOLT; BRACKET/ENG HARNESS	000000	000046
0280108220	0-2801	0822	BOLT; CLIP FIX.	000000	000000
0280108250	0-2801	0825	BOLT; FRAME	000000	000000
0280108350	0-2801	0835	BOLT;GOV TO FRAME,ROPE HK	000000	000000
0280110250	0-2801	1025	BOLT; PULLEY	000000	000000
0280206140	0-2802	0614	BOLT;PULLEY	000000	000000
0280206160	0-2802	0616	BOLT;CAM PULLEY	000000	000000
0280206180	0-2802	0618	BOLT;FRT PLATE	000000	000000
0280206200	0-2802	0620	BOLT;EGR VLV TO INL MANIF	000000	000000
0280206220	0-2802	0622	BOLT;OIL PUMP	000000	000004
0280206250	0-2802	0625	BOLT; ENG CONTROL MODULE	000000	000000
0280206280	0-2802	0628	BOLT;IGN,COIL	000000	000000
0280206300	0-2802	0630	BOLT;OIL PUMP	000000	000000
0280206450	0-2802	0645	BOLT; FRT PLATE	000000	000000

0280208120	0-2802	0812	BOLT;SEMS	000000	000000
0280208140	0-2802	0814	BOLT; BRACKET	000000	000000
0280208160	0-2802	0816	BOLT;PLUG/ELEMENT TO CASE	000000	000000
0280208180	0-2802	0818	BOLT; FRT PLATE	000000	000000
0280208200	0-2802	0820	BOLT; COLUMN	000000	000000
0280208220	0-2802	0822	BOLT;SUCTION PI	000000	000000
0280208250			BOLT; FRT SEAT/BODY	000000	000000
0280208280	0-2802	0828	BOLT;INL.MANIFO	000000	000000
0280208320	0-2802	0832	BOLT;INL MANIFO	000000	000000
0280208350	0-2802	0835	BOLT;INTAKE POR	000000	000000
0280208400			BOLT;STAY TO BRACKET	000000	000000
0280208450	0-2802	0845	BOLT; BRKT TO/INL DUCT	000000	000000
0280210220	0-2802	1022	BOLT; SEAT BELT ANCHOR	000000	000000
0280210250	0-2802	1025	BOLT; BRKT	000000	000000
0280210300	0-2802	1030	BOLT;TRANS CASE	000000	000000
0280210350	0-2802	1035	BOLT;TRANS CASE	000000	000000
0280210450			BOLT; TRANS	000000	000000
0280210500	0-2802	1050	BOLT;TRANS CASE	000000	000000
0280408400	0-2804	0840	BOLT;OIL PIPE/PUMPTO C/BL	000000	000000
0280506100	0-2805	0610	BOLT; BRKT	000023	000461
0280506120	0-2805	0612	BOLT; SHROUD	000086	000162
0280506160	0-2805	0616	BOLT; CLIP BRKT	000307	000630
0280506180			BOLT;FRT PLATE	000000	000088
0280506200	0-2805	0620	BOLT; BRKT, FAN	000000	000041
0280506250	0-2805	0625	BOLT;SW,OIL LEVEL	000000	000070
0280506300	0-2805	0630	BOLT; CLIP,INJ PIPE	000000	000190
0280506350	0-2805	0635	BOLT; CLIP,FUEL PIPE	000000	000015
0280506400	0-2808	0640	BOLT; CLIP,FUEL P	000000	000079
0280506450	0-2805	0645	BOLT; ACCEL PEDAL	000000	000187
0280506500	0-2805	0650	BOLT;BRKT	000005	000000
0280506600	0-2805	0660	BOLT;INTAKE HEATER	000002	000476
0280506700	0-2805	0670	BOLT;COOLING FAN	000001	000000
0280506800	0-2805	0680	BOLT; CHAMBER	000000	000000
0280508000	0-2805	0800	BOLT;WATER PUMP	000001	000050
0280508100	0-2805	0810	BOLT;HEAT PROTECTOR	000002	000020
0280508120	0-2805	0812	BOLT;BAFFLE PLATE FIX	000001	000000
0280508160	0-2805	0816	BOLT; LK PLATE	000421	000391
0280508180	0-2805	0818	BOLT; COVER,OIL PUMP	000000	000000
0280508200	0-2805	0820	BOLT; OIL PIPE TO C/BL	000000	000000
0280508250	0-2805	0825	BOLT;C/RAIL FIX	000017	000040
0280508300	0-2805	0830	BOLT; INL MANIF	000141	000045
0280508350	0-2805	0835	BOLT; CAM BRKT	000175	000019
0280508400	0-2805	0840	BOLT; BRKT	000070	000049
0280508450	0-2805	0845	BOLT;OIL COOLER FIX	000050	000009
0280508500	0-2805	0850	BOLT;COVER FIX	000003	000103
0280508600	0-2805	0860	BOLT;COOLER FIX	000033	000154
0280508700	0-2805	0870	BOLT; HARNESS	000821	001665

0280508800	0-2805	0880	BOLT;INTAKE PIPE	000194	000098
0280508900	0-2805	0890	BOLT; COMPR	000059	000065
0280510000	0-2808	1000	BOLT; GEN	000217	000509
0280510120	0-2805	1012	BOLT; CONNECTOR FIX	000000	000022
0280510160	0-2805	1016	PIN; S/ABS SETTING	000000	000004
0280510200	0-2805	1020	BOLT;BRACKET TUBE	000000	000052
0280510250	0-2805	1025	BOLT; PULLEY	000000	001047
0280510300	0-2805	1030	BOLT; HSG TO HD	000419	000000
0280510350	0-2805	1035	BOLT; WATER PUMP TO C/BL	000020	000010
0280510400	0-2805	1040	BOLT; BRKT	000004	000041
0280510450	0-2805	1045	BOLT; FAN	000000	000042
0280510500	0-2805	1050	BOLT; SHROUD FIXING	000000	000023
0280510600	0-2805	1060	BOLT; PULLEY	000000	000029
0280510700	0-2805	1070	BOLT; WATER PUMP TO C/BL	000000	000000
0280510800	0-2805	1080	BOLT; FUEL FILTER	000000	000006
0280510900	0-2805	1090	BOLT; HSG TO HD	000000	000000
0280512350	0-2805	1235	BOLT;BRKT,HITCH	000010	000000
0280512700	0-2805	1270	BOLT; COVER	000000	000002
0280558110	0-2805	5811	BOLT; WATER PUMP	000000	000106
0280558120	0-2805	5812	BOLT; BRKT FAN GUIDE	000000	000082
0280558140	0-2805	5814	BOLT; HSG TO HD	000029	000050
0280558150	0-2805	5815	BOLT; COMMON CHAMBER	000000	000043
0280560120	0-2805	6012	BOLT; GEN	000000	000011
0280560130	0-2805	6013	BOLT;GEN.	000000	000040
0280560140	0-2805	6014	BOLT; OIL FILTER	000000	000027
0280560150	0-2805	6015	BOLT; OIL FILTER	000000	000017
0280606120	0-2806	0612	BOLT; SENSOR	000000	000099
0280606200	0-2806	0620	BOLT; SENSOR	000000	000057
0280608120	0-2806	0812	BOLT; PIPE FIX	000000	000059
0280608160	0-2806	0816	BOLT; THRUST COLLAR	000000	000120
0280608200	0-2806	0820	BOLT; BRKT	000000	000029
0280608250	0-2806	0825	BOLT; OIL PUMP	000000	000216
0280608300	0-2806	0830	BOLT; OIL PUMP	000000	000001
0280608350	0-2806	0835	BOLT; BRKT	000000	000062
0280608400	0-2806	0840	BOLT; CAM BRKT	000000	000000
0280608450	0-2806	0845	BOLT; WATER PUMP TO C/BL	000008	000025
0280608600	0-2806	0860	BOLT; FIX	000000	000009
0280608700	0-2806	0870	BOLT;COVER FIX	000000	000031
0280608900	0-2806	0890	BOLT; INJ PUMP	000000	000074
0280610200	0-2806	1020	BOLT; CABLE FIX	000000	000053
0280610250	0-2806	1025	BOLT; ENG FOOT	000000	000276
0280610400	0-2806	1040	BOLT;IDLE PULLEY	000004	000004
0280610600	0-2806	1060	BOLT; IDLE GEAR	000046	000000
0280610700	0-2806	1070	BOLT; PULLEY	000019	000000
0280658140	0-2806	5814	BOLT; EXH MANIF	000000	000105
0280806100	0-2808	0610	BOLT; COVER, IDLE GEAR	000007	000005
0280806120	0-2808	0612	BOLT; OIL PAN/SENSOR	000000	000003

0280806140	0-2808	0614	BOLT;CVR.TO CLU/BRKT.	000000	000074
0280806160	0-2808	0616	BOLT; CAM PULLEY	000002	000000
0280806180	0-2808	0618	BOLT; FRT PLATE	000000	000000
0280806200	0-2808	0620	BOLT;FAN TO CLUTCH	000000	000000
0280806220	0-2808	0622	BOLT; OIL PUMP	000000	000080
0280806250	0-2808	0625	BOLT; ENG CONTROL MODULE	000000	000007
0280806280	0-2808	0628	BOLT; IGNITION COIL	000000	000000
0280806300	0-2808	0630	BOLT; OIL PUMP	000000	000000
0280806350	0-2808	0635	BOLT; BOARD STEP	000000	000083
0280806400	0-2808	0640	BOLT;UNDER COVER TO TRANS	000001	000004
0280806450	0-2808	0645	BOLT; FRT PLATE, (B)	000000	000000
0280806500	0-2808	0650	BOLT; WATER PIPE, (B)	000000	000004
0280806600	0-2808	0660	BOLT; INLET PIPE	000000	000014
0280806700	0-2808	0670	BOLT; COOLING FAN	000000	000000
0280806800	0-2808	0680	BOLT; EGR ADAPTER	000000	000000
0280808000	0-2808	0800	BOLT; COMMON CHAMBER	000009	000009
0280808100	0-2808	0810	BOLT; HEAT PROTECTOR	000000	000000
0280808120	0-2808	0812	BOLT; BRACKET, FUEL PIPE	000002	000002
0280808140	0-2808	0814	BOLT; BRACKET TO BODY	000043	000098
0280808160	0-2808	0816	BOLT; PULLEY, AIR PUMP	000000	000000
0280808180	0-2808	0818	BOLT; BRACKET, FLEX	000213	000184
0280808200	0-2808	0820	BOLT; CHANGE LEVER	000000	000000
0280808220	0-2808	0822	BOLT;CONT BOX, TRANSFER	000001	001672
0280808250	0-2808	0825	BOLT;VACUUM TANK/PUSH ROD	000000	000000
0280808280	0-2808	0828	BOLT; RAD FAN GUIDE	000000	000000
028080830F			BOLT; MANIF TO HD	000000	000000
0280808300	0-2808	0830	BOLT; MANIF TO HD	000000	000000
0280808320	0-2808	0832	BOLT; HANGER, FRT	000008	000078
0280808350	0-2808	0835	BOLT; INT PORT	000001	000292
0280808400	0-2808	0840	BOLT; STAY TO BRACKET	000004	000005
0280808450	0-2808	0845	BOLT; BRKT TO/INL DUCT	000005	000009
0280808500	0-2808	0850	BOLT; BRKT, POWER STRG	000003	000000
0280808600	0-2808	0860	BOLT; HSG	000000	000000
0280808700	0-2808	0870	BOLT; ADJ PLATE	000007	000009
0280808800	0-2808	0880	BOLT; CAM BRKT	000000	000001
0280808900	0-2808	0890	BOLT; FAN BRACKET	000005	000000
0280809700	0-2808	0970	BOLT; BRG COVER	000000	000000
0280810000	0-2808	1000	BOLT; GEN	000000	000000
0280810120	0-2808	1012	BOLT;CONNECTOR FIX	000000	000000
0280810160	0-2808	1016	BOLT;STARTER EARTH	000000	000000
0280810200	0-2808	1020	BOLT;CUSHION RUBR,CAB MTG	000000	000000
0280810220	0-2808	1022	BOLT; SEAT BELT ANCHOR	000000	000000
0280810250	0-2808	1025	BOLT;DUCT	000000	000000
0280810300	0-2808	1030	BOLT;TRANS CASE	000018	000000
0280810350	0-2808	1035	BOLT;TRANS CASE	000002	000007
0280810400	0-2808	1040	BOLT; SEMS GEN	000005	000008
0280810450	0-2808	1045	BOLT;TRANS CASE	000000	000000

0280810500	0-2808	1050	BOLT;TRANS CASE (LH)	000000	000000
0280810600	0-2808	1060	BOLT;TRANS CASE STIFF,RH	000000	000000
028081070F			BOLT	000000	000000
0280810700	0-2808	1070	BOLT	000000	000000
0280810800	0-2808	1080	BOLT; ADAPTER FIX	000000	000000
0280810900	0-2808	1090	BOLT; GEN	000000	000000
0280812300	0-2808	1230	BOLT; CUSHION RUBBER TO	000111	000092
0280812400	0-2808	1240	BOLT; STEP BOARD TO FLOOR	000003	000093
0280812500	0-2808	1250	BOLT; GEN	000000	000000
0280812600			BOLT; ENG. FOOT	000000	000000
0280812700	0-2808	1270	BOLT; TRANS CASE TO ENG	000000	000000
0280812800	0-2808	1280	BOLT; TRANS CAS	000000	000039
0280812900	0-2808	1290	BOLT; STARTER TO TRANS CA	000000	000022
0280858110	0-2808	5811	BOLT; FAN FIX.	000000	000000
0280858120	0-2808	5812	BOLT;GEN	000000	000000
0280858140	0-2808	5814	BOLT; EXH MANIF	000033	000004
0280858150	0-2808	5815	BOLT; COMMON CHAMBER	000000	000000
0280860120	0-2808	6012	BOLT;GEN	000000	000000
0280860130	0-2808	6013	BOLT; GEN.	000000	000000
0280860140	0-2808	6014	BOLT; OIL FILTER	000006	000004
0280860150	0-2808	6015	BOLT; FILTER FIX	000000	000000
0280906120	0-2809	0612	BOLT; SENSOR	000010	000000
0280906160	0-2809	0616	BOLT; FR END BAR	000000	000000
0280906200	0-2809	0620	BOLT; CLIP	000022	000000
0280908000	0-2809	0800	BOLT; FAN FIX.	000038	000000
0280908100			BOLT; CLIP	000060	000170
0280908120	0-2809	0812	BOLT; CLIP	000080	000130
0280908160	0-2809	0816	BOLT; DAMPER	000000	000000
0280908250	0-2809	0825	BOLT; STAY	000000	000021
0280908300	0-2809	0830	BOLT;OIL PUMP	000000	000000
0280908350	0-2809	0835	BOLT*	000000	000000
0280908400	0-2809	0840	BOLT	000000	000000
0280908450	0-2809	0845	BOLT	000000	000000
0280908500	0-2809	0850	BOLT*	000000	000000
0280908600	0-2809	0860	BOLT; FAN	000000	000000
0280908700	0-2809	0870	BOLT; FUEL PUMP	000000	000000
0280908800	0-2809	0880	BOLT*	000010	000000
0280908880	0-2809	0888	BOLT; FAN FIX.	000000	000000
0280908900	0-2809	0890	BOLT; FAN FIX	000000	000000
0280910200	0-2809	1020	BOLT; CABLE FIX	000000	000000
0280910250	0-2809	1025	BOLT; FOOT	000000	000000
0280910400	0-2809	1040	BOLT; IDLE PULLEY	000000	000000
0280910450	0-2809	1045	BOLT; HOOK TO FRAME	000000	000010
0280958130	0-2809	5813	BOLT; EXH MANIF	000000	000000
0280958140	0-2809	5814	BOLT; EXH MANIF	000000	000000
0281210200			NUT;BRKT	000000	000000
0281210220	0-2812	1022	BOLT;MTG.RUBBER	000000	000000

0281210300		BOLT; STIFFENER	000000	000000
0281210350	0-2812 1035	BOLT; ACG	000000	000000
0281210400	0-2812 1040	BOLT;TRANSFER CASE TO CLU	000000	000000
0281210450	0-2812 1045	BOLT; COVER, TRANSFER	000000	000000
0281212300	0-2812 1230	BOLT;STIFFENER	000000	000000
0281212450	0-2812 1245	BOLT;TRANS CASE	000004	000000
0281508400	0-2815 0840	BOLT; PUMP COVER	000000	000000
0281510000	0-2815 1000	BOLT;EXH MANIFOLD FIX	000000	000012
0281510120	0-2815 1012	BOLT;HARNES FIX	000000	000150
0281510160	0-2815 1016	BOLT; CLIP	000000	000055
0281510200	0-2815 1020	BOLT; GUIDE TUBE	000000	000078
0281510250	0-2815 1025	BOLT; GEAR CASE	000012	000005
0281510300	0-2815 1030	BOLT; GEAR CASE COVER	000000	000000
0281510350	0-2815 1035	BOLT;EGR VALVE	000000	000012
0281510400	0-2815 1040	BOLT; THRUST COLLAR	000000	000068
0281510450	0-2815 1045	BOLT; ADJ PLATE	000000	000002
0281510500	0-2815 1050	BOLT;EGR VALVE	000188	000289
0281510600	0-2815 1060	BOLT; FYLWHEEL HSG	000000	000073
0281510700	0-2815 1070	BOLT;BRKT	000007	000032
0281510800	0-2815 1080	BOLT;BRKT FIX	000042	000109
0281510900	0-2815 1090	BOLT;FAN CANTER, FIX	000000	000050
0281512000	0-2815 1200	BOLT; INJ PUMP	000001	000006
0281512160	0-2815 1216	BOLT; CLIP	000000	000008
0281512200	0-2815 1220	BOLT; ENG HANGER	000004	000066
0281512250	0-2815 1225	BOLT; BRKT	000005	000034
0281512300	0-2815 1230	BOLT; EGR COOLER	000004	000008
0281512350	0-2815 1235	BOLT; STARTER	000000	000009
0281512400	0-2815 1240	BOLT;IDLER PUL/TRANS CASE	000010	000038
0281512450	0-2815 1245	BOLT; BRKT	000000	000091
0281512500	0-2815 1250	BOLT; STAY TO HSG	000014	000055
0281512600	0-2815 1260	BOLT; EGR COOLER-A/AB	000000	000122
0281512700	0-2815 1270	BOLT; INJ PUMP	000083	000122
0281512800	0-2815 1280	BOLT; PIPE	000000	000033
0281560110	0-2815 6011	BOLT; ADJ PLATE,GEN	000000	000248
0281560120	0-2815 6012	BOLT; BRKT	000000	000000
0281560130	0-2815 6013	BOLT; BRKT FIX	000000	000062
0281560140	0-2815 6014	BOLT; GEAR CASE	000000	000192
0281560150	0-2815 6015	BOLT; SEPARATOR	000000	000069
0281562120	0-2815 6212	BOLT; CYL HD TO BLOCK	000000	000026
0281610000	0-2816 1000	BOLT; INJ PUMP	000000	000032
0281610200	0-2816 1020	BOLT; BRKT	000000	000028
0281610350	0-2816 1035	BOLT; FOOT STAY	000000	000029
0281612200	0-2816 1220	BOLT; ENG HANGER	000000	000100
0281612250	0-2816 1225	BOLT; DAMPER	000000	000043
0281612300	0-2816 1230	BOLT; BRKT	000000	000005
0281612450	0-2816 1245	BOLT;F/W HSG	000000	000085
0281612500	0-2816 1250	BOLT; ENG HANGER	000000	000104

0281612600	0-2816	1260	BOLT;F/W HSG	000000	000000
0281612700	0-2816	1270	BOLT; BRKT	000000	000033
0281612800	0-2816	1280	BOLT; COVER	000000	000003
0281612900	0-2816	1290	BOLT; ENG HANGER	000000	000033
0281660130	0-2816	6013	BOLT; BRKT FIX	000000	000052
0281660150	0-2816	6015	BOLT; BRKT OIL SEPERATOR	000002	000004
0281662130	0-2816	6213	BOLT; GEN BRKT	000000	000030
0281810000	0-2818	1000	BOLT; CMPR TO BRKT	000000	000000
0281810120	0-2818	1012	BOLT; CLIP FIX	000000	000146
0281810160	0-2818	1016	BOLT;STAY,BRKT,HARNES	000007	000000
0281810180	0-2818	1018	BOLT; BRKT	000002	000050
0281810200	0-2818	1020	BOLT;ADAPTER	000000	000000
0281810220	0-2818	1022	BOLT; MTG. RUBBER	000000	000000
0281810250	0-2818	1025	BOLT;TRANSFR/SUPPT,BRKT	000009	000006
0281810280	0-2818	1028	BOLT; STIFFENER	000047	000000
0281810300	0-2818	1030	BOLT; STIFFENER	000000	000583
0281810350	0-2818	1035	BOLT;TRANSFER CASE	000000	000000
0281810400	0-2818	1040	BOLT;TRANSFER CASE TO CLU	000000	000037
0281810450	0-2818	1045	BOLT; COVER, TRANSFER	000000	000006
0281810500	0-2818	1050	BOLT; FLYWHEEL HOUSING	000006	000003
0281810600	0-2818	1060	BOLT; QUAD BOX	000000	000000
0281810700	0-2818	1070	BOLT; COVER, INJ PUMP	000000	000000
0281810800	0-2818	1080	BOLT; DYNAMIC DAMPER	000000	000003
0281810900	0-2818	1090	BOLT; OIL FILTER	000000	000000
0281812000	0-2818	1200	BOLT; BRG CASE	000002	000000
0281812200	0-2818	1220	BOLT; COVER	000003	000007
0281812220	0-2818	1222	BOLT; ENG,HANGER	000001	000042
0281812250	0-2818	1225	BOLT; BRACKET	000005	000093
0281812300	0-2818	1230	BOLT; STIFFENER TO TRANS	000000	000005
0281812350	0-2818	1235	BOLT; STARTER FIX.	000042	000000
0281812400	0-2818	1240	BOLT;IDLER PUL/TRANS CASE	000003	000001
0281812450	0-2818	1245	BOLT;TRANS CASE TO ENG.	000023	000006
0281812500	0-2818	1250	BOLT;TRANS CASE TO ENG.	000000	000000
0281812600	0-2818	1260	BOLT; STARTER T	000000	000000
0281812700	0-2818	1270	BOLT; AIR CMPR	000004	000003
0281812800	0-2818	1280	BOLT ; STARTER	000000	000000
0281860110	0-2818	6011	BOLT;COVER,COUPLING	000000	000000
0281860120	0-2818	6012	BOLT; GEN	000000	000000
0281860130	0-2818	6013	BOLT; BRKT FIX	000004	000004
0281860140	0-2818	6014	BOLT; GEAR CASE	000006	000014
0281860150	0-2818	6015	BOLT;BRKT	000003	000000
0281862120	0-2818	6212	BOLT;CYL HD TO BLOCK	000000	000000
0281910200	0-2819	1020	BOLT;ENG FOOT	000000	000000
0281910220	0-2819	1022	BOLT; MTG. RUBBER	000009	000059
0281910250	0-2819	1025	BOLT; ENG. FOOT	000000	000000
0281910300	0-2819	1030	BOLT	000000	000000
0281910350	0-2819	1035	BOLT; ENG. FOOT	000000	000000

0281912200	0-2819	1220	BOLT; ENG HANGER	000038	000005
0281912250	0-2819	1225	BOLT; ENG HANGER	000000	000000
0281912500	0-2819	1250	BOLT; ENG HANGER	000008	000002
0281912800	0-2819	1280	BOLT; COVER	000000	000000
0281960130	0-2819	6013	BOLT; BRKT FIX	000000	000000
0281960150	0-2819	6015	BOLT; BRKT, OIL SEPARATOR	000000	000000
0281962130	0-2819	6213	BOLT;GEN BRKT	000000	000003
0282108250	0-2821	0825	BOLT;RR SIDE BUMPER	000000	000000
0282506300	0-2825	0630	BOLT; DUCT	000000	000004
0282806220	0-2828	0622	BOLT; CLIP	000000	000000
0282806300	0-2828	0630	BOLT; CLIP	000000	000108
0282808250	0-2828	0825	BOLT; AIR DUCT	000000	000000
0282808350	0-2828	0835	BOLT; HD COVER	000001	000130
0284810200	0-2848	1020	BOLT; CUSHION R	000000	000010
0286506160	0-2865	0616	BOLT;BRACKET FIX	000024	000015
0286506200	0-2865	0620	BOLT;HOSE PCV	000119	000010
0286506250	0-2865	0625	BOLT;OIL LEVEL SWITCH	001169	000032
0286506300	0-2865	0630	BOLT;H/PROTR FIX	000260	000772
0286506350	0-2865	0635	BOLT; CLIP,FUEL PIPE	000003	000138
0286506400	0-2865	0640	BOLT; JOINT	000000	000035
0286508200	0-2865	0820	BOLT; BRKT	000668	001678
0286508250	0-2865	0825	BOLT;OIL PIPE-TURBO FIX	000130	000614
0286508300	0-2865	0830	BOLT;PIPE ASM FIX	000232	000000
0286508350	0-2865	0835	BOLT;COVER FIX	000082	001181
0286508400	0-2865	0840	BOLT;BRACKET,F/FILTER, FIX	000000	000007
0286510200	0-2865	1020	BOLT; BRKT	000000	000114
0286510250	0-2865	1025	BOLT; BRKT	000043	000034
0286510300	0-2865	1030	BOLT; CONDENSER A/C	000019	000033
0286510350	0-2865	1035	BOLT; PROTECTOR	000122	000182
0286510400	0-2865	1040	BOLT; FUEL FILTER	000100	000203
0286512300	0-2865	1230	BOLT; FUEL TANK	000000	000106
0286512350	0-2865	1235	BOLT; S/ABS BRKT	000009	000048
0286512400	0-2865	1240	BOLT; BRKT FIX	000000	000086
0286606200	0-2866	0620	BOLT; SENSOR	000051	000000
0286608200	0-2866	0820	BOLT; CAB STAY BRKT	000000	000041
0286608250	0-2866	0825	BOLT; BRKT	000000	000011
0286610250	0-2866	1025	BOLT; BRKT	000001	000004
0286610400	0-2866	1040	BOLT; BRKT	000000	000073
0286806160	0-2868	0616	BOLT; HEAT PROTECTOR	000003	000002
0286806200	0-2868	0620	BSWT; BRKT.	000001	000000
0286806250	0-2868	0625	BOLT; SWITCH, CLU	000000	000000
0286806300	0-2868	0630	BOLT;CONDENSER,A/C	000000	000000
0286806350	0-2868	0635	BOLT; OIL PIPE	000000	000000
0286806400	0-2868	0640	BOLT; UNDER COV	000000	000000
0286808200	0-2868	0820	BOLT; STAY	000000	000000
0286808250	0-2868	0825	BOLT; RELAY BRKT	000000	000000
0286808300	0-2868	0830	BOLT; FLX HOSE TO RR AXLE	000000	000000

0286808301	0-2868	0830	BOLT; FLX HOSE TO RR AXLE	000000	000000
0286808350	0-2868	0835	BOLT; DROPPING RESISTOR	000000	000000
0286808400	0-2868	0840	BOLT; BRACKET	000113	000408
0286810200	0-2868	1020	BOLT; CUSH. RUBBER MTG.	000000	000000
0286810250	0-2868	1025	BOLT; CONDENSER,A/C	000000	000000
0286810300	0-2868	1030	BOLT; BRKT TO FRAME	000000	000000
0286810350	0-2868	1035	BOLT;AIR TANK	000000	000000
0286810400	0-2868	1040	BOLT; EXH. PIPE	000000	000000
0286812300	0-2868	1230	BOLT; S/ABS BRKT	000000	000000
0286812350	0-2868	1235	BOLT; STARTER FIX.	000000	000000
0286812400	0-2868	1240	BOLT; BRKT, CAB TILT	000002	000002
0286814250	0-2868	1425	WASHER; SPR	000000	000000
0286906200	0-2869	0620	BOLT; RET	000000	000000
0286908200	0-2869	0820	BOLT;STAY BRKT	000000	000006
0286908250	0-2869	0825	BOLT;CUSHN RBR TO BRKT	000000	000000
0286910250	0-2869	1025	BOLT; CLU MTG BRKT	000017	000019
0286910400	0-2869	1040	BOLT; BRACKET	000000	000031
0287510200	0-2875	1020	BOLT;GUIDE TUBE	000000	000142
0287510250	0-2875	1025	BOLT; OIL PIPE	000003	000501
0287510300	0-2875	1030	BOLT;ADAPTER FIX	000003	000226
0287510350	0-2875	1035	BOLT;ENG HANGER	000000	000040
0287510400	0-2875	1040	BOLT;EXH MANIFOLD FIX	000036	000148
0287512250	0-2875	1225	BOLT; SUPPORT BRKT	000004	000202
0287512350	0-2875	1235	BOLT; STARTER	000006	000000
0287612300	0-2876	1230	BOLT; DAMPER	000000	000121
0287612350	0-2876	1235	BOLT;TURBO (F/FIX)	000000	000212
0287612400	0-2876	1240	BOLT; ENG HANGER	000020	000050
0287614300	0-2876	1430	BOLT; SUPPORT PLATE	000030	000011
0287614400	0-2876	1440	BOLT; HSG	000000	000010
028781020F			BOLT; BRKT - F.W. HSG	000000	000000
0287810200	0-2878	1020	BOLT; BRKT - F.W. HSG	000002	000000
0287810250	0-2878	1025	SCREW; COVER	000001	000005
0287810300	0-2878	1030	BOLT; SLAVE CYL TO TRANS	000002	000000
0287810350	0-2878	1035	BOLT; SUPPORT R	000049	000341
0287810400	0-2878	1040	BOLT; TRANS CAS	000000	000052
0287812250	0-2878	1225	BOLT;BRKT	000000	000005
0287812300	0-2878	1230	BOLT; STARTER FIX.	000008	000000
0287812301	0-2878	1230	BOLT; STARTER FIX.	000000	000000
0287812350	0-2878	1235	BOLT; STARTER FIX	000000	000000
0287812400	0-2878	1240	BOLT;STARTER	000014	000000
0287910350	0-2879	1035	BOLT; GENERATOR FIX	000000	000000
0287912300	0-2879	1230	BOLT; TURBOCHARGER	000000	000542
0287912350	0-2879	1235	BOLT;HSG	000000	000000
0287912400	0-2879	1240	BOLT; ENG HANGER	000000	000000
0287914300	0-2879	1430	BOLT;SUPPORT PLATE	000000	000000
0287914400	0-2879	1440	BOLT;HSG	000015	000026
0288010500	0-2880	1050	BOLT; IDLER SHAFT, REV.	000000	000000

0288514200	0-2885	1420	BOLT; COVER, FLYWHEEL PTO	000045	000000
0288514250	0-2885	1425	BOLT; COVER	000013	000028
0288514500	0-2885	1450	BOLT; STAY TO BRKT FIX	000000	000005
0288514700	0-2885	1470	BOLT; LINK ROD	000000	000006
0288514800	0-2885	1480	BOLT; ENG FOOT	000000	000079
0288516700	0-2885	1670	BOLT; WATER DUCT	000000	000091
0288616700	0-2886	1670	BOLT; CR/SHF PULL	000000	000033
0288814200	0-2888	1420	BOLT; BRKT FIX	000000	000032
0288814500	0-2888	1450	BOLT; STAY, FIX.	000000	000000
0288814700	0-2888	1470	BOLT; LINK ROD	000000	000000
0288816700	0-2888	1670	BOLT; WATER DUCT	000010	000000
0288914450	0-2889	1445	BOLT; HSG., CYL BLOCK	000010	000000
0288914600	0-2889	1460	BOLT; HSG., CYL BLOCK	000000	000000
0289514250	0-2895	1425	BOLT; BRKT, OIL SEPARATOR	000000	000079
0289514800	0-2895	1480	BOLT; FLANGE	000000	000096
0289514900	0-2895	1490	BOLT; INJ PUMP BRKT	000000	000097
0289564120	0-2895	6412	BOLT; INJ PUMP BRKT	000002	000050
0289564150	0-2895	6415	BOLT; BRKT	000000	000005
0289614400	0-2896	1440	BOLT; ENG FOOT	000000	000008
0289614600	0-2896	1460	BOLT; GEN BRKT	000028	000000
0289616500	0-2896	1650	BOLT; ENG FOOT	000000	000008
0289664110	0-2896	6411	BOLT; WATER PIPE INL	000000	000123
0289814250	0-2898	1425	BOLT; BRKT, OIL SEPARATOR	000000	000000
0289814800	0-2898	1480	BOLT; GEN BRKT	000011	000000
0289814900	0-2898	1490	.OLT; INJ PUMP BRKT	000000	000000
0289864120	0-2898	6412	BOLT; INJ PUMP BRKT	000003	000000
0289914600	0-2899	1460	BOLT; GEN BRKT	000000	000000
0289964110	0-2899	6411	BOLT; GEN BRKT	000070	000000
0350504080	0-3505	0408	SCREW; BAFFLE PLATE, CYL HD	000000	000014
0362204080	0-3622	0408	SCREW; VENT TO HDCVR	000000	000000
0362204100	0-3622	0410	SCREW; PCV COVER	000000	000000
0362204120			SCREW; IGNITION SWITCH	000000	000000
0362204140			SCREW SET; CAM BRG.#2-6	000000	000010
0362205120	0-3622	0512	SCREW, SEMS, FUEL	000000	000033
0362206200	0-3622	0620	SCREW; HUB CAP	000000	000021
0362304100	0-3623	0410	BOLT; HARNESS	000340	000790
0362305100	0-3623	0510	SCREW; CASSETTE & RADIO	000000	000040
0362306120	0-3623	0612	SCREW; CONTROL UNIT	000000	000000
0364106160			BOLT; BRK DRUM	000000	000062
0401108300	0-4011	0830	STUD; WATER PUMP FIX	000097	000161
0402108160			STUD; OIL PIPE	000000	000002
0402108200			STUD; FRONT HANGER	000000	000037
0402108280	0-4021	0828	STUD; INL PIPE	000000	000087
0410106120	0-4101	0612	STUD; OIL PAN FIX	000000	000757
0410106160	0-4101	0616	STUD; GEAR CASE C	000002	000051
0410106180	0-4101	0618	STUD; CHAIN	000000	000622
0410106200	0-4101	0620	STUD; INL PIPE	000000	000016

0410106250	0-4101	0625	STUD;INTAKE PIPE FIX	000011	000000
0410106300	0-4101	0630	STUD; CLIP	000007	000000
0410108140			STUD;AIR DUCT	000000	000010
0410108160	0-4101	0816	STUD; OIL PAN	000001	000000
0410108180	0-4101	0818	STUD;OIL PAN	000009	000474
0410108200	0-4101	0820	STUD; OIL PAN TO	000000	003809
0410108220	0-4101	0822	STUD,HANGER,CYL	000000	000028
0410108250	0-4101	0825	STUD; EGR PIPE	000393	000086
0410108280	0-4101	0828	STUD; INL PIPE	000000	004734
0410108300	0-4101	0830	STUD;AXLE CASE	000010	000092
0410108350	0-4101	0835	STUD,ENG. TO INL	000000	000103
0410108400	0-4101	0840	STUD; CRANKCASE	000000	000006
0410108450	0-4101	0845	STUD;INTAKE HEATER	000032	000000
0410108500	0-4101	0850	STUD; COVER	000000	000011
0410108550	0-4101	0855	STUD; WATER PUMP	000145	000949
0410108600	0-4101	0860	STUD; EXH MANIF	000000	000000
0410108750	0-8101	0875	STUD, EXH.MANIFO	000000	000012
0431110250	0-4311	1025	STUD; FAN DRIVE	000000	000050
0431110800	0-4311	1080	STUD; FUEL,FILTER	000000	000198
0432110250	0-4321	1025	STUD; FAN DRIVE	000001	000008
0440110250	0-4401	1025	STUD; INL PIPE	000414	000655
0440110300	9-0441	1030	STUD; P/S PUMP	000000	000155
0440110320	0-4401	1032	STUD;GEAR CASE FIX	000000	000000
0440110350	9-0441	1035	STUD;VALVE FIX	000000	000055
0440110400	0-4401	1040	STUD;	000000	000010
0440110500	0-4401	1050	STUD; ADAPTER, EGR	000012	000046
0440110550	0-4401	1055	STUD;NOZZLE HOLDER	000000	000005
0440110700	0-4401	1070	STUD; GUIDE TUBE	000012	000000
0440110900	0-4401	1090	STUD; CHARGE AIR COOLER	000000	000020
0440112300	0-4401	1230	STUD; STARTER	000000	000005
0440112350	0-4401	1235	STUD; AIR CMPR	000000	000005
0440112600	0-4401	1260	STUD; HSG	000000	000003
0440114350	0-4401	1435	STUD; STARTER	000000	000030
0440114400	0-4401	1440	STUD; STARTER	000000	000003
0491408300	0-4914	0830	STUD;O/PUMP - O/STRAINER	000019	000000
0491408600	0-4914	0860	STUD;W/PUMP FIX	000000	000028
0492410250	0-4924	1025	STUD; OIL FILTER	000048	000067
0495408280	0-4954	0828	STUD; INL MANIFOLD	000000	000016
0495408290	0-4954	0829	STUD; MANIFOLD	000000	000000
0495408350	0-4954	0835	STUD; EXHAUST MANIFOLD	000000	000000
0497406300			STUD; OIL PAN	000000	000000
0497408600			STUD; COMMON CHAMBER	000000	000000
0498410250	0-4984	1025	STUD; EXH. MANIF.	000000	000000
0500006160	0-5000	0616	BOLT;MUD COVER	000000	000000
0500008180	0-5000	0818	BOLT;	000000	000000
0500008200	0-5000	0820	BOLT; TANK BAND	000000	000000
0500406120	0-5004	0612	BOLT; OIL PAN	000000	000000

0500406140	0-5004	0614	BOLT; DUCT BRKT	000000	000002
0500406160	0-5004	0616	BOLT; PULLEY TO BOSS	000000	000000
0500406180	0-5004	0618	BOLT;CLIP, HARNESS	000092	000000
0500406200	0-5004	0620	BOLT;NET TO BRKT	000000	000168
0500406220	0-5004	0622	BOLT; SEMS,CLIP	000079	000000
0500406250	0-5004	0625	BOLT; ROCKER BRKT	000000	000000
0500406280	0-5004	0628	BOLT;CLIP, HARNESS	000000	000028
0500406300	0-5004	0630	BOLT;CLIP FUEL PIPE	000007	000053
0500406320	0-5004	0632	BOLT;CLIP, AIR PIPE	000000	000041
0500406350	0-5004	0635	BOLT; BOARD STEP	000000	000000
0500406400	0-5004	0640	BOLT; BRKT,P/S PIPE DASH	000000	000000
0500406450	0-5004	0645	BOLT;PROPORT. VLV TO BRKT	000034	000000
0500406500	0-5004	0650	BOLT; SEMS, FAN TO PULLEY	000000	000004
0500408000	0-5004	0800	BOLT; OIL PIPE	000000	000005
0500408120	0-5004	0812	BOLT; JOINT	000000	000000
0500408140	0-5004	0814	BOLT; FUEL PIPE	000064	000762
0500408160	0-5004	0816	BOLT; HANGER, FRT.	000000	000000
0500408180	0-5004	0818	BOLT;BRKT,FLEX HSE,FR BRK	000000	000000
0500408200	0-5004	0820	BOLT;STAB BAR TO BODY	000002	000000
0500408220	0-5004	0822	BOLT;OIL FILTER/TENSIONER	000000	000618
0500408250	0-5004	0825	BOLT; OUTLET PIPE	000000	000000
0500408280	0-5004	0828	BOLT; OIL FILTER	000000	000000
0500408300	0-5004	0830	BOLT; MANIF TO HD	000000	000263
0500408320	0-5004	0832	BOLT; CRANKCASE TO C/BL	000000	000333
0500408350	0-5004	0835	BOLT; OIL FILTER	000000	000000
0500408400	0-5004	0840	B O L T	000002	000001
0500408450	0-5004	0845	BOLT; HSG	000000	000000
0500408500	0-5004	0850	BOLT; OIL PIPE	000000	000000
0500408600	0-5004	0860	BOLT; HOUSING	000000	000054
0500408700	0-5004	0870	BOLT; OIL FILTER	000000	000000
0500408800	0-5004	0880	BOLT; GEAR CASE COVER	000000	000059
0500408900	0-5004	0890	BOLT; SEMS	000001	000017
0500410000	0-5004	1000	BOLT; P/S PUMP,	000000	000000
0500410160	0-5004	1016	BOLT; DRUM CVR	000000	000053
0500410180	0-5004	1018	BOLT*	000000	000000
0500410200	0-5004	1020	BOLT;RECL.DEVICE,MUD CVR	000000	000000
0500410220	0-5004	1022	BOLT;BRACKET	000000	000000
0500410250	0-5004	1025	BOLT;STRUT BAR LWR LINK	000000	000000
0500410280	0-5004	1028	BOLT;AIR DRYER	000029	000000
0500410300	0-5004	1030	BOLT;CVR STRG UNIT	000000	000000
0500410320	0-5004	1032	BOLT;COLUMN TO SHAFT	000000	000000
0500410350	0-5004	1035	BOLT;BRACKET	000002	000004
0500410400	0-5004	1040	BOLT;CMPR STAY	000000	000008
0500410450	0-5004	1045	BOLT;	000000	000040
0500410500	0-5004	1050	BOLT; WATER PUMP TO C/BL	000000	000005
0500410600	0-5004	1060	BOLT; OIL PUMP P/S	000161	000000
0500410700	0-5004	1070	BOLT;A/C CMPR	000000	000009

0500410800	0-5004	1080	BOLT; STAY	000000	000016
0500410900	0-5004	1090	BOLT; GEN BRACKET	000000	000010
0500412250	0-5004	1225	BOLT; ENGINE FOOT	000005	000076
0500412280			BOLT;BRKT,FUEL TANK	000000	000019
0500412300	0-5004	1230	BOLT, SEMS, BACK	000000	000000
0500412320	0-5004	1232	BOLT; BRACKET TO FRAME	000000	000037
0500412350	0-5004	1235	BOLT; BRACKET	000016	000000
0500412400	0-5004	1240	BOLT;MAG VLV BRKT	000123	000000
0500412450	0-5004	1245	BOLT;BRKT	000000	000007
0500412500	0-5004	1250	BOLT; SPACER,FUEL TA	000000	000000
0500414250	0-5004	1425	BOLT; ENG. FOOT	000000	000000
0500414500	0-5004	1450	BOLT; HOUSING	000000	000002
0500510200	0-5005	1020	BOLT;GUIDE PIPE	000000	000021
0500510220	0-5005	1022	BOLT; BRKT, INLET PIPE	000111	000000
0500510250	0-5005	1025	BOLT; SEMS INLET	000000	000000
0500510280	0-5005	1028	BOLT; RR COVER	000000	000000
0500510300	0-5005	1030	BOLT; QUADRANT BOX	000080	000168
0500510320	0-5005	1032	BOLT; STARTER FIX	000000	000000
0500510350	0-5005	1035	BOLT; ENG FOOT	000000	000065
0500510400	0-5005	1040	BOLT; ENG FOOT	000000	000000
0500510450	0-5005	1045	BOLT; BRACKET	000000	000000
0500512200	0-5005	1220	BOLT; COVER	000000	000000
0500512250	0-5005	1225	BOLT/SCREW; BODY	000000	000000
0500512280	0-5005	1228	BOLT; SUPPORT BRACKET	000000	000004
0500512300	0-5005	1230	BOLT	000000	000017
0500512320	0-5005	1232	BOLT; SUPPORT PLATE	000040	000000
0500512350	0-5005	1235	BOLT;FRT WHEEL CYL SETTNG	000000	000000
0500512400	0-5005	1240	BOLT;IDLERPUL/TRANS CASE	000000	000000
0500512450	0-5005	1245	BOLT;	000043	000103
0500610300	0-5006	1030	BOLT;FLYWHEEL	000000	000000
0500806160	0-5008	0616	BOLT;RET,MUD GUARD	000000	000000
0500808200	0-5008	0820	B O L T	000000	000000
0501006160	0-5010	0616	BOLT;MUD COVER	000000	000000
0501406120	0-5014	0612	BOLT; ENGINE HARNESS	000000	000000
0501406140	0-5014	0614	BOLT; CABLE CLIP	000078	000368
0501406160	0-5014	0616	BOLT;BUSHING,TORSION BAR	000005	000009
0501406180	0-5014	0618	BOLT; PIPE,OIL COOLER	000000	000000
0501406200	0-5014	0620	BOLT;WATER HOSE/CABLE	004779	000112
0501406250	0-5014	0625	BOLT; A/CL TO FRAME	000000	000004
0501406280	0-5014	0628	BOLT; 1ST STEP	000047	000171
0501406300	0-5014	0630	BOLT; STAB BAR	000000	000037
0501406350	0-5014	0635	BOLT; SEMS	000000	000154
0501406450	0-5014	0645	B O L T	000000	000000
0501408000	0-5014	0800	BOLT;OIL PIPE,PUMP TO BDY	000000	000000
0501408140	0-5014	0814	BOLT; SENSOR TO STRUT	000001	000006
0501408160	0-5014	0816	BOLT;T/GATE LINK,RR BODY	000000	000000
0501408180	0-5014	0818	BOLT; RETURN PIPE	000007	000714

0501408200	0-5014	0820	BOLT; FRT SEAT/BODY	000006	000004
0501408220	0-5014	0822	BOLT; DISTR	000000	000029
0501408250	0-5014	0825	BOLT; CLAMP TO ROD	002203	000000
0501408280	0-5014	0828	BOLT; SUPPORT, P/S BRKT	000000	000132
0501408300	0-5014	0830	BOLT; FAN GUIDE	000000	000000
0501408320	0-5014	0832	BOLT; CLIP TO FRAME	000030	000000
0501408350	0-5014	0835	BOLT; EXH BRKT	001198	000000
0501408400	0-5014	0840	BOLT; BRKT FIX	000000	000000
0501408450	0-5014	0845	BOLT; HAND BRAKE LEVER	000000	000000
0501408500	0-5014	0850	BOLT; BRKT, POWER STRG	000000	000000
0501408600	0-5014	0860	BOLT*	000000	000000
0501410200	0-5014	1020	BOLT; OIL PUMP, P/S	000000	000238
0501410220	0-5014	1022	BOLT; BRKT, AIR DUCT	000000	000000
0501410250	0-5014	1025	BOLT; INL COVER TO DUCT	000000	000000
0501410280	0-5014	1028	BOLT; QUADRANT BOX	000000	000005
0501410300	0-5014	1030	BOLT; EXH PIPE	000033	000000
0501410320	0-5014	1032	BOLT; OIL FILTER	000000	000160
0501410350	0-5014	1035	BOLT; HSG TO HD	000239	000672
0501410400	0-5014	1040	BOLT; OIL FILTER	000000	000000
0501410450	0-5014	1045	BOLT; CLAMP	000000	000254
0501410600	0-5014	1060	BOLT; COVER FIX., L=55	000003	000000
0501412350	0-5014	1235	BOLT; GUIDE NUT	000000	000000
0501412400	0-5014	1240	BOLT*	000000	000000
0501412450	0-5014	1245	BOLT	000000	000000
0501484400	0-5014	8440	BOLT; PIPE BRKT	000000	000000
0501510200	0-5015	1020	BOLT; WATER HOSE	000000	000000
0501510220	0-5015	1022	BOLT; BRKT TO C	000000	000000
0501510250	0-5015	1025	BOLT;	000000	000110
0501510280	0-5015	1028	BOLT*	000050	000000
0501510300	0-5015	1030	BOLT CLU. HSG	000000	000000
0501510320	0-5015	1032	BOLT; QUAD BOX	000000	000015
0501510350	0-5015	1035	BOLT; STIFFENER	000000	000000
0501510400	0-5015	1040	BOLT; GEAR CASE COVER	000028	000000
0501510450	0-5015	1045	BOLT; GEN. BRKT	000000	000078
0501510900	0-5015	1090	BOLT; THROTTLE	000000	000000
0501512250			BOLT; AIR TANK	000000	000000
0501512320			BOLT; SUPPORT PLATE	000000	000000
0501512350	0-5015	1235	BOLT; SEMS, STARTER FIX.	000000	000000
0501512400	0-5015	1240	BOLT; RR COVER	000000	000023
0501514400	0-5015	1440	BOLT; CLU HSG TO TRANS	000000	000000
0501516400	0-5015	1640	BOLT; CLU HSG TO TRANS	000000	000007
0505406120	0-5054	0612	BOLT; LK WASHER	000000	000032
0505406140	0-5054	0614	BOLT; COVER	000000	000000
0505406160	0-5008	0616	BOLT; OIL PIPE TO TURBOCH	000023	000046
0505406180	0-5054	0618	BOLT; SENSOR	000014	000036
0505406200	0-5054	0620	BOLT; OIL PIPE TO TURBOCH	000000	000032
0505406250	0-5054	0625	BOLT; OIL PIPE CLIP	000000	000033

0505406300	0-5054	0630	BOLT; INL PIPE TO MANIF	000000	000012
0505408120	0-5054	0812	BOLT; COVER	000000	000004
0505408160	0-5054	0816	BOLT; FAN	000000	001840
0505408180	0-5054	0818	BOLT, BRKT, FLEX HSE, FR BRK	000257	000033
0505408220	0-5054	0822	BOLT; OIL PAN	000000	000000
0505408250	0-5054	0825	BOLT; THRUST PLATE TO C/BL	000000	005197
0505408300	0-5054	0830	BOLT; OIL PAN	000000	000435
0505408320	0-5054	0832	BOLT; ADJ	000000	000025
0505408350	0-5054	0835	BOLT; STRAINER	000000	000000
0505408500	0-5054	0850	BOLT; OIL COOLER	000000	000002
0505408800	0-5054	0880	BOLT; GEAR CASE COVER	000000	000004
0505410160	0-5054	1016	BOL; DRUM COVE	000000	000000
0505410200	0-5054	1020	BOLT; ACL	000000	000173
0505410220	0-5054	1022	BOLT ENG FOOT	000000	000025
0505410250	0-5054	1025	BOLT; INJ PUP BRKT	000000	000000
0505410300	0-5054	1030	BOLT; HSG	000000	000164
0505410350	0-5054	1035	BOLT; WATER PUMP TO C/BL	000000	000065
0505410400	0-5054	1040	BOLT; WATER PUMP TO C/BL	000000	000017
0505410600	0-5054	1060	BOLT; WATER PUMP TO C/BL	000000	000000
0505412300	0-5054	1230	BOLT; RR PLATE	000000	000244
0505414250	0-5054	1425	BOLT; ENG FOOT	000005	000000
0505510200	0-5055	1020	BOLT; ENG HANGER	000011	000101
0505510300	0-5055	1030	BOLT; BRKT	000000	000002
0505512250	0-5055	1225	BOLT; PIPE	000000	000001
0506406160	0-5064	0616	BOLT; SOLENOID VLV	000009	000000
0506406250	0-5064	0625	BOLT; BOX ASM FIX	000002	000065
0506406280	0-5064	0628	BOLT; SW, OIL LEVEL	000000	000000
0506406350	0-5064	0635	BOLT; VALVE	000000	000022
0506408000	0-5064	0800	BOLT; OIL PIPE, PUMP 2 BODY	000014	000026
0506408160	0-5064	0816	BOLT; STAY TO CRACKCASE	000000	000131
0506408200	0-5064	0820	BOLT; COVER	000009	000000
0506408220	0-5064	0822	BOLT; OIL PAN	000000	000000
0506408250	0-5064	0825	BOLT; OIL PAN	000000	000000
0506408280	0-5064	0828	BOLT; OUTLET PIPE	000000	000000
0506408300	0-5064	0830	BOLT; FAN GUIDE	000000	000887
0506408450	0-5064	0845	BOLT; GEAR CASE COVER	000014	000036
0506408500	0-5064	0850	BOLT; FAN	000000	000025
0506410250	0-5064	1025	BOLT; RET	000000	000087
0506410300	0-5064	1030	BOLT; HSG TO HD	000000	000000
0506410350	0-5064	1035	BOLT; JOINT, THERMOSTAT	000000	000125
0506510300	0-5065	1030	BOLT; CLU HSG T	000000	000031
0506510350	0-5065	1035	BOLT; OIL FILTER	000070	000000
0506512350	0-5065	1235	BOLT; OIL FILTER	000029	000071
0506514400	0-5065	1440	BOLT; CLU HSG T	000000	000001
0507408160	0-5074	0816	BOLT; INSULATOR	000000	000010
0507408200	0-5074	0820	BOLT; BRKT	000008	001701
0507408250	0-5074	0825	BOLT; THRUST PLATE TO C/BL	000000	000000

0507408450	0-5074	0845	BOLT; HSG	000194	000413
0507410200	0-5074	1020	BOLT; ACL	000000	000000
0507410250	0-5074	1025	BOLT;STRUT BAR LWR LINK	000125	001125
0583106120	0-5831	0612	BOLT;BAFFLE PLATE CRNKCSE	000000	000151
0583106140	0-5831	0614	BOLT; PLATE	000000	000000
0583108350	0-5831	0835	BOLT;COVER,OIL PUMP	000000	000000
0583306100	0-5833	0610	BOLT; GEAR	000000	000058
0583306120	0-5833	0612	BOLT; PLATE	000000	000052
0583306140	0-5833	0614	BOLT;GEAR CASE COVER FIX	000000	000004
0583306160	0-5833	0616	BOLT; SPROCKET TO	000022	000000
0583306500	0-5833	0650	BOLT; THROTTLE ASM	000005	000045
0583308250	0-5833	0825	BOLT; ROCKER SHAF	000000	000008
0583308300	0-5833	0830	BOLT;O/PUMP-C/BLOCK	000000	000040
0583308350	0-5833	0835	BOLT;BRACKET,EGR	000042	000000
0583308400	0-5833	0840	BOLT; ROCKER SHAF	000012	000008
0583308500	0-5833	0850	BOLT; PTO	000050	000000
0583308600	0-5833	0860	BOLT	000000	000167
0612008140	0-6120	0814	SCREW; SET	000000	000047
0622106200	0-6221	0620	SCREW; WOOD	000000	000000
0700404160	0-7004	0416	SCREW;HOOK	000000	000028
0700804160	0-7008	0416	SCREW;HOOK	000000	000000
0711804120	0-7118	0412	SCREW;CVR.STOP	000000	000339
0741006120	0-7410	0612	SCREW,SEM.LEVER	000000	000000
0811220150	0-8112	2015	PIN; SNAP CABLE	000000	000268
0811220250	0-8112	2025	PIN	000000	000010
0811230250	0-8112	3025	PIN; KNOCK, KNUC	000000	000004
0811240300	0-8112	4030	PIN; SPLIT	000000	000068
0811240400	0-8112	4040	PIN; SPLIT, FAN	000000	000047
0840005180	0-8400	0518	LINK; ENGINE STOP	000000	000005
0840006060	0-8400	0606	ROD; LINK, SOLENOID VLV	000000	000001
0842005040	0-8420	0504	ROD; LINK	000000	000000
0903014100	0-9030	1410	NIPPLE; GREASE	000001	000449
0903015100	0-9030	1510	NIPPLE;GREASE,SHIFT BLOCK	000000	000036
0903016100	0-9030	1610	NIPPLE; GREASE	000000	000136
0911105050	0-9111	0505	NUT; BALL JOINT	000000	000010
0911105060	0-9111	0506	NUT; SIDE COVER	000067	000004
0911105080	0-9111	0508	NUT; WIPER ARM TO WIPER P	000006	003368
0911105100	0-9111	0510	NUT; EXH MANIF	000721	002639
0911105120	0-9111	0512	NUT; ADJ SCREW,LK	000000	000007
0911105140	0-9111	0514	NUT; STARTER	000056	000073
0911105160	0-9111	0516	NUT; CAB FRT FOOT	000054	000049
0911105180	0-9111	0518	NUT; GREASE NIPPLE	000058	000182
0911105200	0-9111	0520	NUT; PUMP GEAR	000000	000018
0911105240	0-9111	0524	NUT; GEAR	000000	000000
0911115060	0-9111	1506	NUT; FLAP RUBBER	000005	001075
0911115080	0-9111	1508	NUT;ADJ SCREW	000078	000000
0911115100	0-9111	1510	NUT;ADJ SCREW	000254	000420

0911115120	0-9111	1512	NUT; STOPPER BOLT, KNUCKL	000026	000024
0911115140	0-9111	1514	NUT; S/ABS	000003	000031
0911115160	0-9111	1516	NUT; CAB MTG RR	000000	000026
0911115180	0-9111	1518	NUT;GEAR FIX	000112	000130
0911115200	0-9111	1520	NUT; TIE ROD END	000108	000198
0911115220	0-9111	1522	NUT;PITMAN ARM	000061	000002
0911115240	0-9111	1524	NUT; PULLEY	000000	000115
091150106F			NUT; BUMPER/BRKT, HINGE	000000	000000
0911501060	0-9115	0106	NUT; BUMPER/BRKT, HINGE	000000	000000
091150108F			NUT;SADDLE, SPARE TIRE	000000	000000
0911501080	0-9115	0108	NUT;SADDLE, SPARE TIRE	000000	000000
0911501082	0-9115	0108	NUT; BRACKET TO CLU M/CYL	000000	000000
0911501100	0-9115	0110	NUT; HAND BRAKE, BRATHER	000000	000000
0911501120	0-9115	0112	NUT;RETAINER/CLU HSG TO	000000	000000
0911501140	0-9115	0114	NUT;LEVER TO SH	000000	000000
0911502060	0-9115	0206	NUT;BRKT, FIX	000005	000001
0911502080	0-9115	0208	NUT; INTAKE	000000	000000
0911502100	0-9115	0210	NUT; LK, ARM, CUSHN RUBR (RH)	000000	000000
0911502120	0-9115	0212	NUT; LOCK, STRUT, LWR LINK	000000	000000
0911502140	0-9115	0214	NUT;RR BUSHING	000067	000000
0911602140	0-9116	0214	NUT; HOUSING FIX.	000000	000000
0911801060	0-9118	0106	NUT; RET	000079	000429
0911801080	0-9118	0108	NUT;OIL PIPE	000389	000868
0911801100	0-9118	0110	NUT;FAN CANTER	000268	000302
0911801120	0-9118	0112	NUT; ADJ PLATE, GEN	000076	000000
0911801140	0-9118	0114	NUT; STARTER	000000	000013
0911802060	0-9118	0206	NUT; HOSE	000012	000076
0911802080	0-9118	0208	NUT;COOLER FIX	000647	003467
0911802100	0-9118	0210	NUT;BRKT FIX	001079	001527
0911802120	0-9118	0212	NUT; COVER	000017	000025
0911802140	0-9118	0214	NUT; GEAR	000024	000004
0912501100	0-9125	0110	NUT;LEVER TO SHAFT	000000	000000
0912502100	0-9125	0210	NUT;COMPRESSOR	000000	000000
0912801100	0-9128	0110	NUT; CASE	000000	000024
0912802100	0-9128	0210	NUT; BRKT	000000	000195
0913700080	0-9137	0008	NUT; ROOF	000000	000034
0913700100	0-9137	0010	NUT; TIE ROD	000530	000970
0913700120	0-9137	0012	NUT; PEDAL	000189	000553
0915105050	0-9151	0505	WASHER; LK, CABLE, BATTERY	000000	000013
0915105060	0-9151	0506	WASHER; LK	000000	000172
0915105080	0-9151	0508	WASHER; LK, STRG SHAFT	000181	000090
0915105100	0-9151	0510	WASHER; LK, UNION, AIR PIP	000000	000000
0915105120	0-9151	0512	WASHER; LK, AIR CMPR	000095	000000
0915105140	0-9151	0514	WASHER; LK GEN	000393	001101
0915105160	0-9151	0516	WASHER; LK, COVER	000000	000004
0915105200	0-9151	0520	WASHER; LK, STRG WHEEL	000000	000170
0915105240	0-9151	0524	WASHER; GEAR	000029	000070

0915106100	0-9151	0610	WASHER; LK(L)	000000	000042
0915106120	0-9151	0612	WASHER;LK,RR BRK ASM SETT	000000	000000
0915106140	0-9151	0614	1SHER,LK,SHACK	000000	000009
0915106160	0-9151	0616	WASHER; LK, ENG FOOT	000000	000059
0915108080	0-9151	0808	WASHER; LK, SHAFT	000000	000032
0915108100	0-9151	0810	WASHER; LK,OIL PU	000000	000000
0915108120	0-9151	0812	WASHER;LK, YOKE TO RR AXLE	001158	000000
0915108140	9-0915	0814	WASHER; LK BRKT	000076	000104
0916105080	0-9161	0508	WASHER,PL. GEAR CONT BRKT	000142	000090
0916105100	0-9141	0510	WASHER; EGR PIPE	000000	000079
0916105120	0-9161	0512	WASHER; PL, COVER	000019	000050
0916105140	0-9161	0514	WASHER; PL,GEN	000008	000120
0916105160	0-9161	0516	WASHER; PL, CABLE	000000	000000
0916105200	0-9161	0520	WASHER;PL,PIN	000000	000068
0916106050	0-9161	0605	WASHER; PL	000000	000004
0916106060	0-9161	0606	WASHER; PL	000000	000000
0916106080	0-9161	0608	WASHER;PL,COOLING FAN	000000	000002
0916106100	0-9161	0610	WASHER,PL.,ENGI	000000	000030
0916106120	0-9161	0612	WASHER; STAY TO RAD	000000	000000
0916107060	0-9161	0706	WASHER; PL	000000	000045
0916107080	0-9161	0708	WASHER; PL,A/T CONT	000068	000118
0916107100	0-9161	0710	WASHER; PL, CUSHION	000007	000017
0916107120	0-9161	0712	WASHER;PL,ADJ PLATE	000000	000025
0916145100	0-9161	4510	WASHER;COVER	000000	000000
0916145140			WASHER; PL,GEAR CASE	000000	000033
0916146080	0-9161	4608	WASHEER; PL, INL CVR FIX	000029	000071
0916146100	0-9161	4610	WASHER; PL,OIL PU	000000	000085
0916146180	8-9161	4618	WASHER;GEAR FIX	000070	000082
0916146200	0-9161	4620	WASHER; S/ABSORB	000000	0000710
0916147080	0-9161	4708	WASHER; PL,ADJ PL	000007	000140
0916147100	0-9161	4710	WASHER; PL,FAN	000000	000000
0916147120	0-9161	4712	WASHER;PL,GEN TO ADJ PLAT	000000	000070
0916147140	0-9161	4714	WASHER; PL, GEN	000000	000049
0916148100	0-9161	4810	WASHER;PL CHR G AIR COOLER	000000	000016
0918006180			RING; SNAP	000007	000085
0918006300			RING;SNAP	000023	000000
0918007720	0-9180	0772	RING; SNAP E120	000000	000044
0918055030	0-9180	5503	RING;SNAP,SET SCREW	000000	000131
0918055040	0-9180	5504	SWNG/RETAINER; SNAP	000005	000066
0918055080	0-9180	5508	RING; SNAP	000000	000153
0918055120	0-9180	5512	RING;SNAP,PIN	000000	000009
0920014710	0-9200	1471	PLUG;PLATE	000000	000000
0920024120	0-9200	2412	PLUG; SCREW,LK	000000	000036
0920024160	0-9200	2416	PLUG;WATER OUTLET PIPE	000000	000020
0920024180	0-9200	2418	PLUG;OIL FILTER	000000	000010
0921118060	0-9211	1806	NIPPLE; BOOST PIPE	000000	000005
0921218100	0-9212	1810	CONNECTOR;TURBOCHARGER OI	000000	000008

0921343100	0-9213	4310	CONNECTOR;POWER CHAMBER	000000	000001
0952073050	0-9520	7305	CLIP; HARNESS	000000	000008
0952346250	0-9523	4625	CLIP;OIL PIPE,BODY TO CMP	000000	000000
0952346320	0-9523	4632	CLIP; OIL PIPE	000012	000061
0952346850	0-9523	4685	CLIP; OIL PIPE	000014	000030
0952348550	0-9523	4855	CLIP; HARNESS	000000	000000
0952350250	0-9523	5025	CLIP; WATER PIPE	000020	000010
0952350320	0-9523	5032	CLIP; HARNESS	000000	000000
0952350350	0-9523	5035	CLIP; ENG HARNESS	000017	000001
0952350520	0-9523	5052	CLIP; PIPE	000000	000010
0952350550	0-9523	5055	CLIP; HARNESS	000000	000000
0952350650	0-9523	5065	CLIP;OIL PIPE	000000	000031
0952350750	0-9523	5075	CLIP; HARNESS	000000	000008
0952352350	0-9523	5235	CLIP;FRT CABLE TO FLOOR	000000	000009
0952355350	0-9523	5535	CLIP;STEERING COLUMN HARN	000000	000000
0952355360	0-9523	5536	CLIP;FUEL PIPE,LEAK OFF	000000	000003
0952355560	0-9523	5556	CLIP; PARKING BRK CABLE	000000	000037
0952358360	0-9523	5836	CLIP; WATER PIPE	000000	000009
0952358550	0-9523	5855	CLIP; HARNESS	000000	000000
0952358560	0-9523	5856	CLIP; ENG HARNESS	000000	000000
0952358760	0-9523	5876	CLIP; HARNESS	000000	000000
0952358860	0-9523	5886	CLIP; ENG HARNESS	000014	000036
0956901110	0-9569	0111	GASKET; CONNECT	000000	000002
0956902260	0-9569	0226	GASKET; OIL PIPE	000007	000000
0956902710	0-9569	0271	GASKET; COVER	000000	000002
0956903380	0-9569	0338	GASKET; SUCTION P	000000	000002
1019008140	1-0190	0814	BOLT; 6RB1	000000	000000
1057824020	1-0578	2402	MEASURER	000000	000000
1057826280	1-0578	2628	MEASURER	000000	000001
1090000070	1-0900	0007	BOLT; LEAF SPR	000002	000005
1090000090	1-0900	0009	BOLT	000000	000000
1090000240	1-0900	0024	BOLT; COVER FIX	000000	000000
1090000260	1-0900	0026	BOLT	000000	000000
1090000711	1-0900	0071	BOLT; GEN	000000	000000
1090001040	1-0900	0104	BOLT; GEN SET 6BG1	000000	000000
1090001050	1-0900	0105	PLUG; OIL FILTER	000000	000044
1090001130	1-0900	0113	BOLT; ENG.CONT.L	000000	000000
1090001140	1-0900	0114	BOLT; ADJ., FAN BELT	000054	000049
1090001141	1-0900	0114	BOLT; ADJ., FAN BELT	000000	000000
1090001180	1-0900	0118	BOLT;ADJ.PLATE	000000	000000
1090001181	1-0900	0118	BOLT;ADJ.PLATE	000007	000000
1090001200	1-0900	0120	BOLT	000000	000000
1090001270	1-0900	0127	BOLT;SOCKET	000000	000000
1090001320	1-0900	0132	BOLT*	000000	000000
1090001330	1-0900	0133	BOLT; GENERATOR	000000	000000
1090001331	1-0900	0133	BOLT; GENERATOR	000000	000027
1090001610	1-0900	0161	BOLT*	000000	000000

1090001660	1-0900	0166	BOLT	000000	000000
1090001670	1-0900	0167	BOLT*	000000	000000
1090001690	1-0900	0169	BOLT*	000000	000000
1090001700	1-0900	0170	BOLT*	000000	000000
1090001770	1-0900	0177	BOLT	000000	000000
1090001800	1-0900	0180	BOLT;CONNECTOR	000000	000000
1090001831	1-0900	0183	BOLT; FLYWHEEL	000000	000001
1090001880	1-0900	0188	BOLT	000000	000000
1090001990	1-0900	0199	BOLT; HEX HEAD M	000000	000000
1090001991	1-0900	0199	BOLT; HEX HEAD M	000008	000000
1090002010	1-0900	0201	BOLT; OIL FILTER	000000	000000
1090002011	1-0900	0201	BOLT; OIL FILTER	000000	000000
1090002230	1-0900	0223	BOLT	000017	000000
1090002240	1-0900	0224	BOLT;COVER,TURBO	000000	000000
1090002250	1-0900	0225	BOLT;PLATE,TURBO	000000	000000
1090002280	1-0900	0228	BOLT*	000000	000000
1090002300	1-0900	0230	BOLT*	000000	000000
1090002320	1-0900	0232	BOLT*	000000	000000
1090002330	1-0900	0233	BOLT*	000000	000000
1090002480	1-0900	0248	BOLT*	000000	000000
1090002512	1-0900	0251	BOLT; GEN	000002	000003
1090002520	1-0900	0252	BOLT; TURBO 6SA1	000000	000000
1090002550	1-0900	0255	BOLT*	000000	000000
1090002600	1-0900	0260	BOLT*	000000	000000
1090002700	1-0900	0270	BOLT; PUMP FIX.	000010	000000
1090002820	1-0900	0282	BOLT; FILTER	000000	000000
1090002821	1-0900	0282	BOLT; FILTER	000002	000000
1090002840	1-0900	0284	BOLT; THRUST CO	000001	000035
1090002860	1-0900	0286	BOLT;ADAPTER TO	000000	000015
1090003050	1-0900	0305	BOLT;FLYWHEEL	000000	000017
1090003060	1-0900	0306	BOLT; OIL PAN	000014	000000
1090003190	1-0900	0319	BOLT; ADAPTER T	000000	000006
1090003200	1-0900	0320	BOLT; ADAPTER, (M10 X 50)	000000	000010
1090003240	1-0900	0324	BOLT; GENERATOR FIX	000000	000000
1090003310	1-0900	0331	BOLT;AIR CMPR	000053	000000
1090003320	1-0900	0332	BOLT;AIR CMPR	000000	000038
1090003370	1-0900	0337	SCREW;ADJUST	000000	000000
1090003410	1-0900	0341	PLUG;FILTER BOD	000000	000083
1090003510	1-0900	0351	BOLT; AIR INTAK	000000	000000
1090003570	1-0900	0357	BOLT;A/C CVR	000000	000012
1090003580	1-0900	0358	BOLT;FLANGE	000000	000005
1090003750	1-0900	0375	BOLT; COVER FIX	000000	000000
1090003751	1-0900	0375	BOLT;COVER, FIX	000000	000049
1090003790	1-0900	0379	BOLT; EXHAUST MANIFOLD FI	000011	000004
1090004040	1-0900	0404	BOLT; BLOWER HOUSING	000002	000002
1090004050	1-0900	0405	BOLT; TURBINE HOUSING FIX	000000	000000
1090004060	1-0900	0406	BOLT;BLOWER, HOUSING	000000	000000

1090004640	1-0900	0464	BOLT	000000	000000
1090004690	1-0900	0469	BOLT; BRG.	000000	000000
1090004691	1-0900	0469	BOLT; BEARING CAP	000000	000000
1090004692	1-0900	0469	BOLT; BEARING CAP	000010	000012
1090004780	1-0900	0478	BOLT; WATER PUMP	000000	000000
1090004781	1-0900	0478	BOLT; WATER PUMP	000000	000201
1090004800	1-0900	0480	BOLT; TENSION	000004	000060
1090004820	1-0900	0482	BOLT; CONNECTOR	000000	000000
1090004830	1-0900	0483	BOLT; TENSION, PULLEY SET	000000	000000
1090004831	1-0900	0483	BOLT; TENSION, PULLEY SET	000000	000003
1090004950	1-0900	0495	BOLT	000006	000002
1090005320	1-0900	0532	BOLT SPINDLE	000000	000000
1090005350	1-0900	0535	BOLT; CRANKSHAFT	000000	000000
1090005351	1-0900	0535	BOLT; CRANKSHAFT	000011	000000
1090005670	1-0900	0567	BOLT; BRACKET	000000	001455
1090005730			BOLT; CAB FRT FOOT	000000	000021
1090006060	1-0900	0606	BOLT	000004	000000
1090006170	1-0900	0617	BOLT	000002	000000
1090090121	1-0900	9012	BOLT; PULLEY FIX	000000	000000
1090090890	1-0900	9089	BOLT; TAPPET GUIDE	000000	000053
1090090940	1-0900	9094	BOLT; DRIVE, GEAR	000000	000000
1090090941	1-0900	9094	BOLT; DRIVE GEAR	000000	000000
1090090942	1-0900	9094	BOLT; DRIVE GEAR	000000	000004
1090091000	1-0900	9100	BOLT 6RB1	000010	000000
1090091130	1-0900	9113	BOLT; ADJ	000000	000000
1090091131	1-0900	9113	BOLT; GEN SET 6BG1	000000	000155
1090091140	1-0900	9114	BOLT; ADJ PLATE, GEN	000000	000000
1090091141	1-0900	9114	BOLT; ADJ PLATE, GEN	000009	000065
1090091150	1-0900	9115	BOLT; ADJ PLATE, GEN	000000	000000
1090091190	1-0900	9119	PLUG; GEAR CASE	000000	000325
1090091420	1-0900	9142	BOLT; BRKT FIX	000000	000000
1090091540	1-0900	9154	BOLT; TAPPET GUIDE	000125	000567
1090091560	1-0900	9156	BOLT BRKT	000000	000000
1090091690	1-0900	9169	BOLT; TENSION	000000	000001
1090091830	1-0900	9183	BOLT; TENSION	000000	000036
1090200031	1-0902	0003	BOLT; HSG	000000	000000
1090200040	1-0902	0004	BOLT	000000	000000
1090200041	1-0902	0004	BOLT	000000	000075
1090200070	1-0902	0007	BOLT; ENG FOOT	000000	000042
1090200080	1-0902	0008	BOLT; HOUSING 6RB1	000000	000000
1090200081	1-0902	0008	BOLT; HOUSING 6RB1	000000	000014
1090200130	1-0902	0013	BOLT; WATER PUMP	000000	000000
1090200141	1-0902	0014	BOLT OIL PAN FIX	000000	000000
1090200150	1-0902	0015	BOLT*	000000	000000
1090200210	1-0902	0021	BOLT; BRKT FIX	000000	000000
1090200270	1-0902	0027	BOLT; EXHAUST PIPE FIX 6S	000003	000000
1090200330	1-0902	0033	BOLT; AIR COMPRE	000000	000000

1090200331	1-0902	0033	BOLT;AIR COMPRE	000000	000010
1090200540	1-0902	0054	BOLT;HSG.	000001	000000
1090200541	1-0902	0054	BOLT; HSG	000000	000002
1090200570	1-0902	0057	BOLT;HSG.	000000	000000
1090200571	1-0902	0057	BOLT; HSG	000000	000015
1090200591	1-0902	0059	BOLT;HEAD COVER FIX	000000	000000
1090200660	1-0902	0066	BOLT; 1/GEAR E120	000004	000000
1090200732	1-0902	0073	BOLT; EXH PIPE	000034	000000
1090200800	1-0902	0080	BOLT; STAY 6RB1T	000000	000000
1090200880	1-0902	0088	BOLT; EXH FLANGE FIX (M16	000000	000025
1090200890	1-0902	0089	BOLT; EXH FLANGE FIX (M16	000000	000000
1090200920	1-0902	0092	BOLT; ENG FOOT 10X29MM	000007	000000
1090200930	1-0902	0093	BOLT; ENG FOOT	000001	000000
1090201000	1-0902	0100	BOLT; ENGINE FOOT FRT.	000000	000040
1090201010	1-0902	0101	BOLT; ENGINE FOOT FRT	000000	000032
1090201200	1-0902	0120	BOLT; FRT COVER/QUAD BOX	000000	000000
1090201201	1-0902	0120	BOLT; FRT COVER/QUAD BOX	000000	000000
1090201350	1-0902	0135	BOLT; RR COVER	000000	000001
1090201460	1-0902	0146	BOLT; GEAR CASE	000001	000000
1090201690	1-0902	0169	BOLT; HSG	000000	000001
1090290140	1-0902	9014	BOLT	000000	000000
1090290210	1-0902	9021	BOLT;OIL FILTER	000000	000000
1090290241	1-0902	9024	BOLT,BRKT	000000	000000
1090290260	1-0902	9026	BOLT*	000000	000000
1090290261	1-0902	9026	BOLT*	000000	000000
1090290270	1-0902	9027	BOLT*	000000	000000
1090290530	1-0902	9053	BOLT; STARTER FIX.	000002	000000
1090300030			BOLT;BRKT	000000	000000
1090300031			BOLT;SEMS	000000	000000
1090300040			BOLT; OIL PAN	000000	000000
1090300140	1-0903	0014	BOLT;MUD COVER	000000	000000
1090300150	1-0903	0015	BOLT;QUADRANT	000000	000000
1090300200			BOLT;UNDER &	000000	000000
1090300201			BOLT;UNDER &	000000	000000
1090300250	1-0903	0025	BOLT: BATTERY RELAY FIX	000000	000000
1090300301	1-0903	0030	BOLT; A/CL	000000	000000
1090300302	1-0903	0030	BOLT; A/CL	000000	000000
1090300360	1-0903	0036	SCREW; BAFFLE PLATE FIX	000006	000077
1090300390	1-0903	0039	BOLT; A/CL	000000	000000
1090300730	1-0903	0073	BOLT; SIDE PANEL	000005	000000
1090300780	1-0903	0078	BOLT; OIL PAN	000043	000000
1090300860	1-0903	0086	BOLT; DRUM CVR	000000	000000
1090300910	1-0903	0091	BOLT; OIL COOLER	000000	000008
1090330020	1-0903	3002	BOLT; SEMS HOUSING FIX	000001	000000
1090330030	1-0903	3003	BOLT; SEMS HOUSING FIX	000000	000005
1090330050	1-0903	3005	BOLT; SEMS INLET	000000	000000
1090330070	1-0903	3007	BOLT; SET W, OR RR COVER	000000	000000

1090330120	1-0903	3012	BOLT; LK PIECE	000012	000000
1090330130			BOLT; STAY RAD	000000	000037
1090330160			BOLT	000010	000000
1090340040	1-0903	4004	BOLT; CLY HD	000000	000000
1090350050	1-0903	5005	STUD	000000	000000
1090390030	1-0903	9003	BOLT; CYL HD	000000	000000
1090390040	1-0903	9004	BOLT;CYL HD	000000	000000
1090400090	1-0904	0009	BOLT;REAMER	000000	000000
1090400160	1-0904	0016	BOLT STRAP	000000	000000
1090400350	1-0904	0035	BOLT; REAMER	000000	000000
1090400360	1-0904	0036	BOLT	000000	000000
1090400380	1-0904	0038	BOLT*	000000	000000
1090400390	1-0904	0039	BOLT;REAMER	000000	000000
1090400420	1-0904	0042	BOLT; STRAP PLA	000000	000000
1090400430	1-0904	0043	BOLT; STRAP PLA	000000	000000
1090400520	1-0904	0052	BOLT E120	000000	000000
1090400570	1-0904	0057	BOLT*	000000	000000
1090400630	1-0904	0063	BOLT; FRT COVER/QUAD BOX	000000	000000
1090400631	1-0904	0063	BOLT; FRT COVER/QUAD BOX	000000	000000
1090400640	1-0904	0064	BOLT; FRT COVER/QUAD BOX	000000	000000
1090400641	1-0904	0064	BOLT; FRT COVER/QUAD BOX	000000	000000
1090400701	1-0904	0070	BOLT; QUAD BOX, L=25	000000	000000
1090400802	1-0904	0080	RAIL ASM BOLT	000000	000010
1090400890	1-0904	0089	BOLT; FRT COVER/QUAD BOX	000000	000000
1090400891	1-0904	0089	BOLT; FRT COVER/QUAD BOX	000000	000008
1090400910	1-0904	0091	BOLT; QUAD BOX	000000	000000
1090400911	1-0904	0091	BOLT; QUAD BOX	000000	000061
1090401050	1-0904	0105	BOLT ; GEN	000000	000100
1090401060	1-0904	0106	BOLT ; GEN	000000	000001
1090420360	1-0904	2036	BOLT; RET,M8X38 W/PINHOLE	000000	000008
1090420370	1-0904	2037	B O L T	000007	000000
1090440150	1-0904	4015	BOLT; CYL HEAD FIX E120	000018	000000
1090440250	1-0904	4025	BOLT; AIR COMPRESS 6RB1	000000	000000
1090440251	1-0904	4025	BOLT; AIR COMPRESS 6RB1	000000	000000
1090440252	1-0904	4025	BOLT; AIR COMPRESS 6RB1	000127	000000
1090440301	1-0904	4030	BOLT; FLYWHEEL E120	000007	000005
1090440311	1-0904	4031	BOLT; CASE FIX 6RB1	000000	000031
1090440382	1-0904	4038	BOLT; SIDE PLATE	000000	000000
1090440470	1-0904	4047	BOLT; CASE	000000	000138
1090440630	1-0904	4063	SCREW;BUSHING,DRVN.GEAR	000006	000033
1090440710	1-0904	4071	BOLT;	000000	000000
1090440711	1-0904	4071	BOLT;	000006	000000
1090440720	1-0904	4072	BOLT; WATER DUCT	000000	000000
1090440721	1-0904	4072	BOLT; WATER DUCT	000003	000316
1090440730	1-0904	4073	BOLT*	000004	000023
1090440740	1-0904	4074	BOLT*	000000	000011
1090440750	1-0904	4075	BOLT; FAN FIX	000000	000000

1090440751	1-0904	4075	BOLT; FAN FIX	000000	000018
1090440780	1-0904	4078	BOLT; SEMS INLET	000015	000000
1090440800	1-0904	4080	BOLT; RR COVER	000000	000022
1090440830	1-0904	4083	BOLT; RR COVER	000000	000005
1090440850	1-0904	4085	BOLT; ADJ. PLATE FIX. MC	000019	000000
1090440860	1-0904	4086	B O L T;	000000	000019
1090440871	1-0904	4087	BOLT;BRKT	000000	000001
1090440990	1-0904	4099	BOLT; BRKT	000000	000025
1090460011	1-0904	6001	BOLT;DRUM TO FLANGE	000000	000000
1090460012	1-0904	6001	BOLT;DRUM TO FLANGE	000000	000000
1090490060	1-0904	9006	BOLT; QUAD	000000	000000
1090490061	1-0904	9006	BOLT; QUAD	000000	000036
1090490190	1-0904	9019	BOLT; LK PIECE	000000	000000
1090500050	1-0905	0005	BOLT	000000	000000
1090500051	1-0905	0005	BOLT*	000000	000000
1090520041	1-0905	2004	BOLT;SHIFT ARM	000000	000000
1090520042	1-0905	2004	BOLT;SHIFT ARM	000000	000000
1090520170	1-0905	2017	BOLT;CHAMBER COVER	000000	000000
1090520180	1-0905	2018	BOLT; CHAMBER	000000	000000
1090520181	1-0905	2018	BOLT; CHAMBER	000000	000000
1090520200	1-0905	2020	BOLT; CHAMBER CV	000000	000000
1090520221	1-0905	2022	BOLT; TAPPET	000000	000000
1090520310	1-0905	2031	BOLT; COVER TO C/BL	000000	000011
1090520342	1-0905	2034	BOLT; SHIFT ARM	000000	000012
1090540110	1-0905	4011	BOLT*	000000	000000
1090540120	1-0905	4012	BOLT*	000000	000000
1090540150	1-0905	4015	BOLT;CAP ELEMEN	000000	000016
1090540190	1-0905	4019	SCREW;PLATE	000001	000042
1090640020	1-0906	4002	BOLT; HANGER	000000	000000
1090700090	1-0907	0009	BOLT; BRG CAP	000000	000000
1090700130	1-0907	0013	SCREW; CAP	000000	000000
1090700140	1-0907	0014	SCREW; CAP	000008	000000
1090700160	1-0907	0016	BOLT; CYL, HD, FIX E120	000000	000000
1090700171	1-0907	0017	BOLT; FLYWHEEL 6RB1	000000	000008
1090700211	1-0907	0021	BOLT; FLYWHEEL FIX.	000000	000000
1090700250	1-0907	0025	BOLT; FLYWHEEL	000000	000000
1090700290	1-0907	0029	BOLT; ENG. FOOT,R.R. 6SA1	000000	000000
1090700300	1-0907	0030	BOLT; ENG. FOOT RR 6SA1	000000	000000
1090700310	1-0907	0031	BOLT; IDLE GEAR SHAF	000000	000000
1090700340	1-0907	0034	BOLT:BRG CAP	000000	000000
1090700360			BOLT; FLYWHEEL 6BD1	000000	000000
1090700390	1-0907	0039	BOLT; CYL HEAD	000000	000000
1090700430	1-0907	0043	BOLT; CRANK CAS	000000	000000
1090700431	1-0907	0043	BOLT; CYL HD TO BLOCK	000000	000096
1090700440	1-0907	0044	BOLT; CYL HD TO	000000	000000
1090700441	1-0907	0044	BOLT; CYL HD TO BLOCK	000000	000028
1090700450	1-0907	0045	BOLT; FAN DR.	000000	000000

1090700451	1-0907	0045	BOLT; COUPLING TO W/PUMP	000000	000000
1090700590	1-0907	0059	BOLT; CYL HEAD	000000	000002
1090700600	1-0907	0060	BOLT; CYL HEAD	000000	000016
1090700610	1-0907	0061	BOLT; CRANK CAS	000000	000009
1090700620	1-0907	0062	BOLT; CYL HD TO	000000	000000
1090700630	1-0907	0063	BOLT; CYL HD TO	000000	000000
1090700760	1-0907	0076	BOLT; CMPR	000000	000000
1090700872	1-0907	0087	BOLT; CRANKCASE	000000	000082
1090700930	1-0907	0093	BOLT; GEAR FIX	000001	000000
1090701000	1-0907	0100	BOLT;CYL HD TO BLOCK	000000	000000
1090701001	1-0907	0100	BOLT;CYL HD TO BLOCK	000133	000092
1090701010	1-0907	0101	BOLT;CYLINDER HD TO BLOCK	000000	000000
1090701011	1-0907	0101	BOLT;CYLINDER HD TO BLOCK	000519	000358
1090701160	1-0907	0116	BOLT; GEAR TO SHAFT	000000	000031
1090701200	1-0907	0120	BOLT;COUPLING TO WTR PUMP	000000	000036
1090701201	1-0907	0120	BOLT;COUPLING TO WTR PUMP	000000	000000
1090701210	1-0907	0121	BOLT; CLAMP NOZZLE HOLDER	000001	000000
1090701270	1-0907	0127	BOLT; IDLE GEAR A FIX	000005	000000
1090701292	1-0907	0129	BOLT; FLYWHEEL	000000	000010
1090701380	1-0907	0138	BOLT; THRUST COLL	000000	000017
1090701410	1-0907	0141	BOLT;CYL HD TO BLOCK	000000	000092
1090701420	1-0907	0142	BOLT;CYL HD TO BLOCK	000000	000824
1090701460	1-0907	0146	BOLT; FLYWHEEL	000000	000000
1090701461	1-0907	0146	BOLT; FLYWHEEL	000000	000029
1090701510	1-0907	0151	BOLT; CRANKCASE	000000	000013
1090701590	1-0907	0159	BOLT; CRANKCASE	000000	000033
1090701600	1-0907	0160	BOLT; CYL HD TO B	000000	000003
1090701601	1-0907	0160	BOLT; CYL HD TO B	000000	000028
1090701610	1-0907	0161	BOLT; CRANKCASE	000000	000005
1090870040	1-0908	7004	BOLT: EXH PIPE FIX	000000	000000
1090870260	1-0908	7026	BOLT; BRACKET, TO FLYWHEE	000000	000000
1090870310	1-0908	7031	BOLT 6RB1T	000000	000000
1091000090	1-0910	0009	SCREW; TURBO 6SA1	000000	000000
1091000100	1-0910	0010	SCREW;TURBO,PLATE	000000	000000
1091000110	1-0910	0011	SCREW; TURBO 6SA1	000000	000000
1091000140	1-0910	0014	SCREW;TURBO	000000	000000
1091000160	1-0910	0016	SCREW;TURBO	000000	000000
1091000170	1-0910	0017	SCREW;TURBO,PLATE	000000	000000
1091000260	1-0910	0026	BOLT	000000	000000
1091000320	1-0910	0032	SCREW	000000	000000
1091000330	1-0910	0033	SCREW	000000	000000
1091000340	1-0910	0034	BOLT	000008	000000
1091000400	1-0910	0040	BOLT;LK PLATE BLOWER HSG	000000	000000
1091000410	1-0910	0041	SCREW;THRUST BRG TURBOCHA	000000	000000
1091040040	1-0910	4004	SCREW	000001	000000
1091060020	1-0910	6002	SCREW	000000	000000
1091090030	1-0910	9003	BOLT;EMERGENCY	000000	000000

1091220131	1-0912	2013	SCREW; SET E120	000000	000000
1091220132	1-0912	2013	SCREW; SET E120	000000	000014
1091220160	1-0912	2016	SCREW; SET CAM	000000	000079
1091220190	1-0912	2019	SCREW; SET CAM	000000	000009
1091290010	1-0912	9001	SCREW	000000	000000
1091290030	1-0912	9003	GUIDE BOLT E120	000264	000000
1091290042	1-0912	9004	SCREW; CAMSHAFT META	000000	000000
1092651240	1-0926	5124	SEAL; OIL	000000	000000
1093000010	1-0930	0001	STUD; OIL COOLER FIX	000000	000000
1093000130	1-0930	0013	STUD; ENGINE FOOT R.H.	000000	000000
1093000140	1-0930	0014	STUD; NOZZLE HOLDER	000080	000117
1093000150	1-0930	0015	STUD; OIL FEED PIP FIX	000000	000000
1093000170	1-0930	0017	STUD; ENGINE FOOT RH	000000	000000
1093000180	1-0930	0018	STUD-INJEC NOZ	000000	000142
1093000181	1-0930	0018	STUD-INJEC NOZ	000000	000000
1093000250	1-0930	0025	STUD*	000000	000000
1093000270	1-0930	0027	STUD; OIL PUMP FIXING	000023	000000
1093000281	1-0930	0028	STUD; CAM BRKT	000000	000021
1093000331	1-0930	0033	STUD; CAM BRKT,	000000	000013
1093000351	1-0930	0035	STUD PRESSURE	000000	000000
1093000400	1-0930	0040	STUD; P/S OIL PUMP	000000	000089
1093000490	1-0930	0049	STUD; COVER	000005	000005
1093000491	1-0930	0049	STUD; BRG COVER,RR	000000	000000
1093000500	1-0930	0050	STUD; WATER PUMP	000200	000006
1093000530	1-0930	0053	STUD; ENGINE FOOT, (RH)	000000	000257
1093000540	1-0930	0054	STUD;ENGINE FOOT	000000	000000
1093000550	1-0930	0055	STUD; ENGINE FOOT R.H.	000069	000000
1093000580	1-0930	0058	STUD; COVER,TIM	000000	000001
1093000581	1-0930	0058	STUD;COVER,TIMING CHK.HOL	000000	000019
1093000640	1-0930	0064	STUD; EXHAUST MANIFOLD FI	000002	000000
1093000761	1-0930	0076	STUD; ENG FOOT, RH L1=40	000000	000000
1093000790	1-0930	0079	STUD*	000000	000000
1093000890	1-0930	0089	STUD; EXH.MANIFOLD, L1=96	000000	000000
1093000930	1-0930	0093	STUD BRG COVER	000000	000000
1093001010	1-0930	0101	STUD; ADAPTER EXH PIPE	000000	000013
1093001100	1-0930	0110	STUD; ENGINE SUPPORT	000000	000000
1093001101	1-0930	0110	STUD; ENGINE SUPPORT	000001	000000
1093020010	1-0930	2001	STUD*	000005	000000
1093020031	1-0930	2003	STUD; EXHAUST PIPE FIX	000005	000000
1093020220	1-0930	2022	STUD; NOZZLE HOLDER	000055	000000
1093020241	1-0930	2024	STUD;CLU HSG	000002	000016
1093020242	1-0930	2024	STUD;CLU HSG	000000	000000
1093020340	1-0930	2034	STUD; EXHAUST PIPE E120	000000	000000
1093020350	1-0930	2035	STUD; ADAPTER	000000	000000
1093020480	1-0930	2048	STUD;GEAR CASE COVER FIX	000000	000000
1093020481	1-0930	2048	STUD;GEAR CASE COVER FIX	000000	000000
1093020630	1-0930	2063	STUD; EXH. MANIFOLD TO HE	000000	000026

1093020650	1-0930	2065	STUD; BRACKET FIX 6RB1	000001	000000
1093020660	1-0930	2066	STUD; AIR CMPR	000000	000000
1093020790	1-0930	2079	STUD: EXH PIPE FIX	000000	000016
1093020890	1-0930	2089	STUD; WATER PUMP	000007	000001
1093020910	1-0930	2091	STUD; EXH MANIFOLD	000000	000005
1093020950	1-0930	2095	STUD; INTAKE, INLET PIPE	000010	000000
1093020980	1-0930	2098	STUD; EXH MANIF	000000	000005
1093021020	1-0930	2102	STUD; OIL PUMP FIX.	000000	000000
1093021030	1-0930	2103	STUD; TURBO FIX	000000	000000
1093021040	1-0930	2104	STUD; EXH MANIF	000000	000000
1093021041	1-0930	2104	STUD;EXH MANIF	000000	000116
1093021050	1-0930	2105	STUD; FRONT COV	000000	000016
1093021060	1-0930	2106	STUD; DUCT TO TURBO FIX	000428	000107
1093021070	1-0930	2107	STUD; EXH MANIF	000000	000000
1093021120	1-0930	2112	STUD; AIR CMPR	000000	000020
1093021230	1-0930	2123	STUD; COVER FIX.	000000	000000
1093021240	1-0930	2124	STUD: EXH. MNFLD	000000	000000
1093021310	1-0930	2131	STUD: EXH MNFLD	000000	000000
1093021340	1-0930	2134	STUD; CNTR MF/ TO TRBCHRG	000000	000255
1093021380	1-0930	2138	STUD;PARKING BRAKE	000000	000000
1093021381	1-0930	2138	STUD; PARKING BRAKE	000000	000000
1093021440	1-0930	2144	STUD;PARKING BRAKE	000000	000000
1093021441	1-0930	2144	STUD;PARKING BRAKE	000000	000000
1093021451	1-0930	2145	STUD; CLUTCH HOUSING SET	000000	000000
1093021530	1-0930	2153	STUD: BRACKET FIX	000000	000005
1093021540	1-0930	2154	STUD: BRACKET FIX	000000	000005
1093021590	1-0930	2159	STUD; EXH. MAN.	000000	000000
1093021601	1-0930	2160	STUD; GEAR CASE COVER FIX	000000	000000
1093021610	1-0930	2161	STUD; EXHAUST MANIFOLD	000000	000219
1093021650	1-0930	2165	STUD; EXHAUST MANIFOLD	000022	000021
1093021671	1-0930	2167	STUD; CNTR MF/ TO TRBCHRG	000000	000000
1093021740	1-0930	2174	STUD; EXH MANIF	000000	000001
1093021760	1-0930	2176	STUD;BRKT FIX	000000	000341
1093021790	1-0930	2179	STUD; TURBOCHARGER	000001	000063
1093050050	1-0930	5005	STUD: INJECTION PUMP	000054	000000
1093090080	1-0930	9008	STUD; INL MANIF	000000	000014
1093090100	1-0930	9010	STUD; COVER OIL	000000	000000
1093090130	1-0930	9013	STUD;GEAR CASE	000000	000000
1093090131	1-0930	9013	STUD;GEAR CASE COVER FIX	000000	000027
1093090190	1-0930	9019	BOLT; INJ PUMP BRACKET	000000	000000
1093300230	1-0933	0023	BUSHING;CONT LVR,TRNS PTO	000000	000000
1093300550	1-0933	0055	STUD;ENG FOOT	000000	000000
1093300570	1-0933	0057	BUSH;INNER,LEVE	000000	000003
1093300580	1-0933	0058	BUSHING; CONT L	000000	000005
1093300680			BUSHING; RUBBER	000000	000000
1093300720	1-0933	0072	BUSHING; BRKT	000000	000040
1093300770	1-0933	0077	BUSH; FLYWHEEL	000000	000000

1093300771	1-0933	0077	BUSH; FLYWHEEL	000007	000000
1093301080	1-0933	0108	BUSHING; IDLE GEAR	000000	000000
1093301130	1-0933	0113	BUSHING; DLE GEAR	000000	000002
1093301180	1-0933	0118	BUSING; ROCKER ARM	000011	000000
1093301240	1-0933	0124	BUSHING; IDLE GEAR	000000	000000
1093301241	1-0933	0124	BUSHING; IDLE GEAR	000000	000003
1093301300	1-0933	0130	BUSHING; ROCKER ARM	000059	000002
1093301350	1-0933	0135	BUSHING; FLYWHEEL TO CONV	000008	000000
1093320490	1-0933	2049	GROMMET	000000	000000
1093330320	1-0933	3032	GROMMET COVER	000000	000000
1093330431	1-0933	3043	GROMMET; VENTILA	000000	000000
1093330560	1-0933	3056	GROMMET	000000	000000
1093330710	1-0933	3071	GROMMET	000000	000000
1093331330	1-0933	3133	GASKET	000000	000000
1093331390			GROMMET; CHECK	000000	000007
1093370040	1-0933	7004	MTG. RUBBER; O/P	000000	000020
1093370060	1-0933	7006	RUBBER; MTG.	000000	000000
1093370120	1-0933	7012	SLEEVE; RUBBER, FLEX HOSE	000000	000002
1093370130	1-0933	7013	SLEEVE; RUBBER, NYLON TUBE	000000	000004
1093370170	1-0933	7017	RUBBER; MTG	000000	000072
1093370270	1-0933	7027	RUBBER; MTG.	000093	000042
1093370300	1-0933	7030	SLEEVE; RUBBER	000001	000000
1093600310	1-0936	0031	HOSE; RUBBER, AIR BREATHER	000000	000000
1093600391	1-0936	0039	HOSE; L=1000	000001	000003
1093600430	1-0936	0043	HOSE; RUBBER OIL DRAIN	000001	000003
1093600460	1-0936	0046	HOSE; OUTLET PIPE E120	000000	000000
1093600505	1-0936	0050	HOSE L=300	000000	000000
1093600600	1-0936	0060	HOSE; FILTER TO (L=550)	000000	000000
1093600681	1-0936	0068	RUBBER; HOSE	000000	000000
1093600700	1-0936	0070	HOSE; RUBBER, INL	000000	000000
1093600970	1-0936	0097	HOSE; RUBBER E120	000004	000000
1093600980	1-0936	0098	HOSE; RUBBER E120	000000	000000
1093601120	1-0936	0112	HOSE; RUBBER E120	000000	000000
1093601131	1-0936	0113	RUB.HOSE; AIR L=720	000000	000000
1093601282	1-0936	0128	HOSE; AIR CMPR, SUCTI	000000	000000
1093601390	1-0936	0139	HOSE; RUBBER E120	000000	000000
1093601890	1-0936	0189	HOSE; AIR CMPR, SUCTION	000000	000000
1093601940	1-0936	0194	HOSE; RUBBER	000000	000000
1093601951	1-0936	0195	HOSE	000000	000000
1093601970	1-0936	0197	HOSE	000000	000000
1093602360	1-0936	0236	HOSE; RUBBER	000000	000000
1093602640	1-0936	0264	HOSE: RUBBER I/COOL OUT	000000	000002
1093602660	1-0936	0266	HOSE; GUIDE TUBE, {ID=6.0}	000000	000001
1093602750	1-0936	0275	HOSE; RUBBER	000000	000000
1093602961	1-0936	0296	HOSE; CRANK CASE BREATHER	000000	000000
1093602970	1-0936	0297	RUBBER HOSE; AIR	000000	000000
1093603110	1-0936	0311	HOSE; RUBBER 6RB1	000000	000000

1093603190	1-0936	0319	HOSE; RUBBER TURBO	000000	000000
1093603250	1-0936	0325	HOSE; RUBBER	000000	000000
1093603370	1-0936	0337	HOSE;AIR CMPR,S	000000	000006
1093603561	1-0936	0356	HOSE; RUBBER, TURBO	000001	000001
1093603730	1-0936	0373	HOSE; RUBBER	000000	000000
1093603790	1-0936	0379	COVER; PIPE,FUE L=800	000000	000000
1093603791	1-0936	0379	COVER;RUBBER L=800	000000	000000
1093603800	1-0936	0380	HOSE;	000000	000009
1093604031	1-0936	0403	HOSE; RUBBER 6SA1	000000	000002
1093604041	1-0936	0404	HOSE; RUBBER	000000	000012
1093604081	1-0936	0408	HOSE;FILLER NEC	000000	000000
1093604100	1-0936	0410	HOSE*	000000	000000
1093604182	1-0936	0418	HOSE; CONNECTING	000000	000000
1093604310	1-0936	0431	HOSE;RUBBER	000000	000000
1093604340	1-0936	0434	HOSE; RUBBER 6BD1	000000	000002
1093604390	1-0936	0439	HOSE;BREATHER	000000	000000
1093604391	1-0936	0439	HOSE;BREATHER	000000	000000
1093604530	1-0936	0453	HOSE; RUBBER, AIR CLEANER	000001	000002
1093604601	1-0936	0460	COVER;PIPE,FUEL L=800	000000	000000
1093604640	1-0936	0464	HOSE; LOWER	000000	000000
1093604710	1-0936	0471	VACUUM HOSE;BRK(L=1500MM)	000000	000006
1093604750	1-0936	0475	HOSE;RUBBER,AIR BREATHER	000000	000001
1093604760	1-0936	0476	HOSE; RUBBER	000000	000002
1093604790	1-0936	0479	HOSE; CONNECTING	000000	000000
1093605250	1-0936	0525	HOSE; OUTLET PIPE E120	000000	000026
1093605570	1-0936	0557	HOSE; RUBBER, AIR CLEANER	000000	000003
1093605600	1-0936	0560	HOSE; BYPASS	000000	000000
1093605730	1-0936	0573	HOSE; RUBBER, TURBO TO IN	000000	000000
1093605731	1-0936	0573	HOSE; RUBBER, TURBO TO IN	000001	000000
1093605740	1-0936	0574	HOSE; RUBBER	000000	000001
1093605790	1-0936	0579	HOSE: RUB. SEA WATER PIPE	000000	000001
1093605980	1-0936	0598	HOSE; RUBBER, AIR BREATHE	000000	000000
1093606080	1-0936	0608	HOSE; RUBBER	000000	000000
1093606160	1-0936	0616	HOSE;RUBBER,DRAIN	000000	000000
1093606181	1-0936	0618	HOSE; RUBBER	000000	000013
1093606220	1-0936	0622	CVR;FUEL HOSE L=900	000000	000000
1093606221	1-0936	0622	COVER;RUBBER L=900	000000	000000
1093606260	1-0936	0626	HOSE; RUBBER,WA	000000	000002
1093606420	1-0936	0642	HOSE;RUBBER,SEA WATER	000000	000000
1093606480	1-0936	0648	HOSE;RUBBER 6RB1	000000	000000
1093606550	1-0936	0655	HOSE; RUBBER TURBO OUTLET	000000	000000
1093606680	1-0936	0668	HOSE;WATER DRAI	000000	000000
1093606681	1-0936	0668	HOSE; WATER DRAIN	000000	000000
1093606690	1-0936	0669	HOSE; RUBBER 6SA1	000000	000009
1093606750	1-0936	0675	HOSE; RUBBER, INTER COOLE	000000	000000
1093606751	1-0936	0675	HOSE; RUBBER, INTER COOLE	000001	000000
1093606771	1-0936	0677	COVER; PIPE F/TANK L=1300	000004	000003

1093606860	1-0936	0686	HOSE; RUBBER, SEA WATER P	000003	000000
1093606900	1-0936	0690	COVER;PIPE L=500	000000	000000
1093606901	1-0936	0690	COVER;PIPE L=500	000000	000000
1093607101	1-0936	0710	COVER;RUBBER/PIPE L=1200	000000	000000
1093607171	1-0936	0717	COVER RUBBER L=700	000000	000000
1093607200	1-0936	0720	HOSE; RUBBER, INNER COOLE	000000	000003
1093607280	1-0936	0728	HOSE RUBBER	000000	000000
1093607300	1-0936	0730	HOSE; VENTILATO	000000	000000
1093607301	1-0936	0730	HOSE; VENTILATO	000001	000000
1093607320	1-0936	0732	HOSE; RAD,INL	000000	000027
1093607330	1-0936	0733	HOSE; RUBBER, BLOW BY	000002	000000
1093607351	1-0936	0735	HOSE; RUBBER 6SA1T	000000	000001
1093607451	1-0936	0745	HOSE; RUBBER	000001	000000
1093607510	1-0936	0751	HOSE; RUBBER	000000	000000
1093607520	1-0936	0752	HOSE; RUBBER, VENT.	000000	000000
1093607540	1-0936	0754	HOSE; RUBBER	000000	000000
1093607550	1-0936	0755	HOSE; OIL DRAIN	000001	000001
1093607660	1-0936	0766	HOSE; AIR CMPR	000000	000010
1093607820	1-0936	0782	HOSE; RUBBER,TURBO OUTLET	000000	000013
1093607971	1-0936	0797	HOSE;RUBBER,TURBO,OUTLET	000001	000009
1093608030	1-0936	0803	HOSE: RUBBER	000000	000002
1093608070	1-0936	0807	HOSE VAC TANK L=280	000000	000000
1093608090	1-0936	0809	VACUUM HOSE;BRA L=400	000000	000000
1093608210	1-0936	0821	HOSE; RUBBER	000000	000000
1093608270	1-0936	0827	HOSE; RUB.TURBO.IN., 86X70	000001	000001
1093608530	1-0936	0853	HOSE; RUBBER	000000	000000
1093608700	1-0936	0870	HOSE;RUBBER,VNTLTR PIPE	000000	000000
1093608910	1-0936	0891	HOSE; RUBBER	000000	000002
1093609130	1-0936	0913	HOSE; RUBBER, TURBO INT	000000	000009
1093609160	1-0936	0916	HOSE; AIR CMPR,SUCTI	000000	000000
1093609170	1-0936	0917	HOSE;RUBBER 6RB1	000000	000005
1093609260	1-0936	0926	HOSE; RUBBER, OIL FILLER	000000	000000
1093609280	1-0936	0928	HOSE; RUBBER	000000	000001
1093609350	1-0936	0935	PIPE; FUEL RUB.	000000	000001
1093609360	1-0936	0936	HOSE; RUBBER L=2000	000000	000000
1093609380	1-0936	0938	HOSE; RUBBER	000000	000000
1093609390	1-0936	0939	HOSE; RUBBER, SEA WATER	000000	000000
1093609410	1-0936	0941	HOSE;RUBBERSE	000000	000000
1093609540	1-0936	0954	HOSE; RUBBER,AIR DUCT	000000	000001
1093609880	1-0936	0988	HOSE; RUBBER,TURBOCHARGER	000002	000003
1093609940	1-0936	0994	HOSE; VENT, CYL HD CVR	000000	000000
1093610320	1-0936	1032	HOSE; RUBBER,WATER DUCT	000000	000001
1093610351	1-0936	1035	HOSE; BYPASS	000000	000072
1093610701	1-0936	1070	HOSE;RUBBER OIL FILLER	000000	000002
1093610811	1-0936	1081	HOSE; RUBBER	000000	000012
1093611070	1-0936	1107	WATER HOSE	000000	000001
1093611080	1-0936	1108	HOSE; ACL	000000	000001

1093611090	1-0936	1109	HOSE; RUBBER	000000	000001
1093611100	1-0936	1110	WATER HOSE	000000	000002
1093611110	1-0936	1111	WATER HOSE	000000	000002
1093611120	1-0936	1112	HOSE; RUBBER	000000	000001
1093611130	1-0936	1113	WATER HOSE	000000	000002
1093611140	1-0936	1114	HOSE; RUBBER	000000	000003
1093611150	1-0936	1115	HOSE	000000	000002
1093611240	1-0936	1124	HOSE	000000	000001
1093642540	1-0936	4254	SHAFT ASM.;FLEX. L=4000	000000	000000
1093642560	1-0936	4256	TUBE; FLEX HOSE, OIL	000000	000000
1093642570	1-0936	4257	HOSE;FLEX.,OIL	000000	000004
1093642890	1-0936	4289	HOSE FLEX	000000	000000
1093643480	1-0936	4348	FLEX TUBE; SUCTION	000000	000000
1093644050	1-0936	4405	HOSE; FLEX, WATER OUTLET	000002	000000
1093644210	1-0936	4421	HOSE; FLEX 6BD1	000000	000000
1093644490			HOSE FLEX BLOCK	000000	000000
1093645160	1-0936	4516	HOSE;FLEX,OIL	000000	000001
1093645180	1-0936	4518	HOSE;FLEX,OIL	000000	000001
1093645200	1-0936	4520	HOSE; FLEX 6BD1	000004	000000
1093645210	1-0936	4521	HOSE; FLEX, PARTIAL FILTE	000000	000000
1093645291	1-0936	4529	HOSE; FLEX, P/S	000000	000000
1093645530	1-0936	4553	TUBE; FLEX (HOSE, FLEXIB	000000	000000
1093646170	1-0936	4617	HOSE; FLEX, FRT	000000	000000
1093646380	1-0936	4638	OIL DRAIN HOSE	000000	000000
1093646610	1-0936	4661	HOSE; FLEX.	000000	000000
1093647080	1-0936	4708	TUBE; FLEX (HOSE, FLEXIB	000000	000000
1093647260	1-0936	4726	HOSE;FLEX,RUBBER PARTIAL	000000	000001
1093647570	1-0936	4757	HOSE ASM; FUEL, F/PUMP	000000	000000
1093647580	1-0936	4758	HOSE ASM; FUEL, F/PUMP	000000	000000
1093647590	1-0936	4759	HOSE ASM; FUEL, F/PUMP	000000	000000
1093648370	1-0936	4837	HOSE;FLEX,RUBBER PARTIAL	000000	000001
1093648690			HOSE;FLEX,SHIF	000000	000004
1093651760	1-0936	5176	HOSE; DRAIN, OIL PAN	000004	000000
1093660200	1-0936	6020	PIPE; VINYL (L=550)	000000	000000
1093660210	1-0936	6021	VINYL PIPE	000000	000000
1093660330	1-0936	6033	PIPE/HOSE; (1000)	000000	000000
1093660610	1-0936	6061	HOSE;SURGE TANK	000000	000002
1093660790	1-0936	6079	PIPE; VNYL,OIL DR(L=900)	000000	000000
1093660960	1-0936	6096	PIPE; FUEL, 14.5X1550	000000	000000
1093661110	1-0936	6111	PIPE; VINYL DRAIN	000000	000000
1093661330	1-0936	6133	SUPERSEDED**PIPE	000000	000000
1093661470	1-0936	6147	PIPE; V... (22X15X1500)	000000	000000
1093662250	1-0936	6225	HOSE; VINYL (L=370MM)	000000	000000
1093662570	1-0936	6257	HOSE;BREATHER TO PIPE	000000	000029
1093690100	1-0936	9010	SLEEVE; RUBBER,HARNESS	000000	000022
1093690740	1-0936	9074	HOSE; WATER DRAIN	000010	000000
1093690750	1-0936	9075	HOSE; WATER DRN, 8X6X650	000000	000000

1093765120	1-0937	6512	SLEEVE; RUBBER	000000	000018
1093800010	1-0938	0001	NIPPLE E120	000000	000000
1093800020	1-0938	0002	NIPPLE; GREASE,WATER PUMP	000000	000022
1094000120	1-0940	0012	NUT	000005	000000
1094000130	1-0940	0013	NUT	000000	000000
1094000270	1-0940	0027	NUT; TURBO FIX	000000	002185
1094000280	1-0940	0028	NUT; PULLEY FIX	000008	000000
1094000410	1-0940	0041	NUT; LOCK	000004	000000
1094000430	1-0940	0043	N U T	000000	000000
1094000520			NUT; BAND	000000	000000
1094000630	1-0940	0063	NUT;STAY	000000	000000
1094000710	1-0940	0071	NUT; BRAKE DRUM	000234	000135
1094000720	1-0940	0072	NUT; EXH.ADAPTER,MF12 SUS	000000	000107
1094000750			NUT; WIPER ARM,HEADLAMP	000000	000037
1094001040	1-0940	0104	N U T	000000	000000
1094001090	1-0940	0109	NUT: LOCK	000002	000000
1094001160	1-0940	0116	NUT; BRACKET	000000	000097
1094001181	1-0940	0118	NUT; ADAPTER/SELF LOCK,RH	000183	000740
1094001190	1-0940	0119	NUT;LK,TURBINE SHAFT TO I	000000	000000
1094200050	1-0942	0005	NUT; TURBOCHARGER	001820	004434
1094220120	1-0942	2012	N U T	000000	000000
1094290030	1-0942	9003	NUT**	000000	000000
1094400020	1-0944	0002	NUT PIN SHOE HOLD	000000	000025
1094400030	1-0944	0003	NUT;FLANGE SHOE HOLD	000028	000028
1094400040	1-0944	0004	NUT;BUMPER/TRANS CASE	000000	000000
1094400180			NUTS	000000	000000
1094400270	1-0944	0027	NUT; GEAR FIX.	000000	000000
1094400400	1-0944	0040	NUT; HANGER TO H	000000	000000
1094400401	1-0944	0040	NUT; EXH,MANIFOLD	000000	000157
1094400470	1-0944	0047	NUT; SUPPORT PLATE	000000	000000
1094400480	1-0944	0048	NUT; SUPPORT PLATE	000000	000054
1094400490	1-0944	0049	NUT; LINK ROD	000000	000162
1094420120	1-0944	2012	N U T	000000	000000
1094420130	1-0944	2013	NUT**	000000	000000
1094430030	1-0944	3003	BOLT; REAMER	000000	000000
1094430040	1-0944	3004	NUT**	000000	000000
1094490050	1-0944	9005	NUT;DRIVING PINION	000000	000000
1094490090	1-0944	9009	NUT;LOCK FINAL	000000	000000
1094490100	1-0944	9010	NUT; FLANGE,SPLINED	000000	000000
1094490140	1-0944	9014	NUT;/.	000000	000025
1094490280	1-0944	9028	NUT;LK,MAIN	000000	000000
1094490360	1-0944	9036	NUT; STRAP PLAT	000001	000005
1094490371	1-0944	9037	NUT**	000000	000000
1094490580	1-0944	9058	NUT;DRIVING	000000	000000
1094490581	1-0944	9058	NUT;DRIVING PINION	000000	000000
1094490582	1-0944	9058	NUT;DRIVING PINION	000000	000000
1094490610	1-0944	9061	NUT, FLANGE	000000	000000

1094490650	1-0944	9065	NUT;SHACKLE PIN/YOKE	000000	000000
1094490660	1-0944	9066	NUT;LK MAINSHAFT	000000	000000
1094490661	1-0944	9066	NUT;DRIVING PINION	000000	000015
1094490670	1-0944	9067	NUT;DRIVING PINION	000000	000000
1094490680	1-0944	9068	NUT;FLANGE/DRIVING PINION	000000	000000
1094490710	1-0944	9071	NUT	000000	000000
1094490810	1-0944	9081	NUT; GEAR, BALL BRG	000002	000001
1094490830	1-0944	9083	NUT;DRIVING PINION	000000	000001
1094640080	1-0946	4008	NUT; LEVER	000000	000000
1094680020	1-0946	8002	NUT; CAP	000000	000000
1094680021	1-0946	8002	NUT;CAP,FUEL PI	000004	000018
1095000020	1-0950	0002	WASHER;LK SUPPORT PLATE	000000	000005
1095000070	1-0950	0007	WASHER;STUD	000000	000622
1095000080	1-0950	0008	WASHER; SPRING	000000	000012
1095000090	1-0950	0009	WASHER: SPR. LEAD PIPE FI	000001	000010
1095000100	1-0950	0010	WASHER; LK	000000	000010
1095000101	1-0950	0010	WASHER; LK	000000	000000
1095000270	1-0950	0027	WASHER; SPRING	000000	000000
1095000280	1-0950	0028	WASHER;SPR.	000000	000000
1095000290	1-0950	0029	WASHER;SPR.	000000	000000
1095000300	1-0950	0030	WASHER; SPACING	000001	000000
1095000320	1-0950	0032	WASHER; PLAIN TURBO 6SA1	000000	000000
1095000390	1-0950	0039	WASHER; SPRING EXHAUST FL	000000	000000
1095000460	1-0950	0046	WASHER;LK,AIR INTAKE	000000	000000
1095030030	1-0950	3003	WASHER;CRANK P	000000	000000
1095030060	1-0950	3006	WASHER; PLAIN	000000	000000
1095030080	1-0950	3008	WASHER	000000	000000
1095030140	1-0950	3014	WASHER; PLAIN	000000	000000
1095030160	1-0950	3016	WASHER; PULLEY E120	000000	000000
1095030221	1-0950	3022	WASHER; SPINDLE 6RB1	000000	000000
1095030240	1-0950	3024	WASHER; WATER P	000000	000039
1095030250	1-0950	3025	WSHR;LK.NUT/PL DRV.PINION	000000	000018
1095030290	1-0950	3029	WASHER; PLAIN 3KC1	000000	000000
1095030310	1-0950	3031	WASHER; IDLE GEAR SHAFT	000000	000000
1095030320	1-0950	3032	WASHER	000002	000000
1095030330	1-0950	3033	WASHER;NUT,CRANKSHAFT	000000	000000
1095030331	1-0950	3033	WASHER;NUT,CRANKSHAFT	000000	000000
1095030390	1-0950	3039	WASHER; SHAFT E120 / 4FB1	000000	000009
1095030500	1-0950	3050	WASHER; PL. CYL.	000001	000040
1095030510	1-0950	3051	WASHER; CAMSHAFT GEAR E12	000000	000000
1095030530	1-0950	3053	WASHER	000013	000000
1095030570	1-0950	3057	WASHER	000000	000000
1095030671	1-0950	3067	SPACER;ATF PIPE BRACKET	000000	000000
1095030700	1-0950	3070	WASHER;WTR PUMP	000000	000009
1095030760	1-0950	3076	WASHER; LK PULLEY FIX	000000	000000
1095030810	1-0950	3081	PLATE	000000	000000
1095030950	1-0950	3095	WASHER; STRAP P	000000	000009

1095031000	1-0950	3100	WASHER;	000000	000000
1095031051	1-0950	3105	COLLAR; THRUST,	000000	000000
1095031052	1-0950	3105	COLLAR;THRUST	000000	000000
1095031110	1-0950	3111	WASHER; PLAIN 6RB1	000019	000068
1095031230	1-0950	3123	WASHER;CRANKSHAFT	000000	000000
1095031240	1-0950	3124	WASHER; LOCK, TURBO 6SA1	000000	000000
1095031370	1-0950	3137	WASHER; TURBO 6SA1	000000	000000
1095031660	1-0950	3166	WASHER; PL., LK	000000	000000
1095031830	1-0950	3183	WASHER;STUD GEAR CASE	000000	000000
1095031860	1-0950	3186	WASHER; PL, INLE	000000	000031
1095032080	1-0950	3208	WASHER; CAM GEAR	000000	000000
1095032090	1-0950	3209	WASHER	000000	000000
1095032100	1-0950	3210	WASHER; WATER PUMP	000057	000209
1095032190	1-0950	3219	WASHER; PLAIN 8.5	000000	000000
1095032220	1-0950	3222	WASHER; PL,RAD MRT B RH	000600	001592
1095032230	1-0950	3223	WASHER; PL, BRKT	000000	000004
1095032240	1-0950	3224	WASHER; PL	000009	000020
1095032380	1-0950	3238	WASHER: LOCK	000002	000000
1095032640	1-0950	3264	WASHER; PL, GEN	000000	000004
1095033090	1-0950	3309	WASHER;WATER PUMP	000024	000000
1095060050	1-0950	6005	WASHER;LOCK	000000	000000
1095090140	1-0950	9014	WASHER;FLANGE	000000	000000
1095090170	1-0950	9017	WASHER;ADJ.BOLT	000000	000053
1095090350	1-0950	9035	WASHER; LOCK, TURBO	000000	000000
1095090360	1-0950	9036	WAHSER; LOCK, TURBO	000000	000000
1095090460	1-0950	9046	WASHER; CLAMP NOZZLE	000000	000000
1095255252	1-0952	5525	SEAL; OIL,CRANKSHAFT REAR	000000	000000
1095300020	1-0953	0002	WASHER; VALVE A	000000	000000
1095300030	1-0953	0003	WASHER; LK,RELI	000002	000000
1095300040	1-0953	0004	WASHER; VALVE	000000	000004
1095320020	1-0953	2002	WASHER; PL., SE	000000	000000
1095390070	1-0953	9007	PLATE; LOCK, TIMING SET	000000	000000
1095390080	1-0953	9008	PLATE;LOCK,TIMING SET	000000	000000
1095540040	1-0955	4004	WASHER	000000	000000
1095560020			WASHER; EXH PIPE	000000	000000
1095560150	1-0955	6015	WASHER; EXH MANIF	000743	002107
1095560160	1-0955	6016	WASHER; TURBO	000000	000000
1095560200	1-0955	6020	WASHER; EXH PIPE	000000	000055
1095720100	1-0957	2010	GASKET;OIL FEED BOLT	000000	000000
1095800710	1-0958	0071	SPRING;ELEMENT	000000	000000
1095800911			SPRING;ROD,GEAR	000000	000007
1095800931	1-0958	0093	SPRING; REV. RE	000000	000003
1095801490	1-0958	0149	SPRING; COIL E120	000048	000025
1095801560	1-0958	0156	SPRING; INL MANIF	000007	000052
1095802020	1-0958	0202	SPRING; OIL E120	000009	000000
1095802100	1-0958	0210	SPRING	000000	000000
1095802140	1-0958	0214	SPRING	000000	000000

1095802290	1-0958	0229	SPRING; SET	000000	000000
1095802340	1-0958	0234	SPRING; CLUTCH	000000	000000
1095802350	1-0958	0235	SPRING; PRESS., CLUTCH	000000	000000
1095802360	1-0958	0236	SPRING;PRESSURE	000000	000018
1095802450	1-0958	0245	SPRING	000000	000000
1095802500	1-0958	0250	SPRING; CLUTCH	000000	000000
1095802860	1-0958	0286	SPRING	000000	000000
1095802880	1-0958	0288	SPRING;CLUTCH	000000	000000
1095803000	1-0958	0300	SPRING;RETAINER	000000	000000
1095803001	1-0958	0300	SPRING;RETAINER	000000	000000
1095803080	1-0958	0308	SPRING; LOCK,SHIFT SLEEVE	000000	000000
1095803110	1-0958	0311	SPRING; DETENT	000000	000000
1095803350	1-0958	0335	SPRING; ROCKER SHAFT	000000	000042
1095803870	1-0958	0387	SPRING; ELEMENT	000000	000001
1095803880	1-0958	0388	SPRING	000000	000000
1095804721	1-0958	0472	SPRING;ROCKER SHAFT	000006	000000
1095804840	1-0958	0484	SPRING ; ELEMENT	000000	000001
1095804890			SPRING;NEUTRAL	000000	000000
1095805340	1-0958	0534	SPRING; COIL	000000	000000
1095830910	1-0958	3091	SPRING,RETURN	000000	000000
1095831020	1-0958	3102	SPRING;ADJ WHEE	000000	000000
1095831700	1-0958	3170	SPRING; BOOCON CUT	000000	000000
1095831710	1-0958	3171	SPRING	000000	000000
1095831820	1-0958	3182	SPRING; RETURN	000000	000000
1095832070	1-0958	3207	SPRING; RETURN	000000	000000
1095832080	1-0958	3208	SPRING; RETURN	000000	000003
1095832420	1-0958	3242	SPRING; RETURN,CONT CABLE	000000	000205
1095832490	1-0958	3249	SPRING; CLUTCH RETURN	000000	000015
1095832680	1-0958	3268	SPRING; ADJ WHEEL	000000	000019
1095833150	1-0958	3315	SPRING; RETURN	000026	000000
1095870170	1-0958	7017	SNAP RING;BRG C	000000	000008
1095870450	1-0958	7045	RING;SNAP	000000	000000
1095870470	1-0958	7047	SNAP; RING, PISTON PIN SE	000036	000000
1095870480	1-0958	7048	RING; SNAP,PISTON PIN	000000	000000
1095870500	1-0958	7050	RING; SNAP,PIST	000000	000012
1095870510	1-0958	7051	SNAP; RING, PISTON E120	000002	000015
1095870550	1-0958	7055	SPIROLOX	000000	000000
1095870561	1-0958	7056	RING;SNAP	000000	000000
1095870650	1-0958	7065	RING; SNAP	000000	000007
1095870730	1-0958	7073	RING;SNAP	000000	000000
1095870750	1-0958	7075	SNAP; RING, PISTON	000030	000000
1095870751	1-0958	7075	SNAP; RING, PISTON	000000	000000
1095870810	1-0958	7081	RING; SNAP, PISTON PIN	000000	000000
1095870811	1-0958	7081	RING; SNAP, PISTON PIN	000000	000132
1095870820	1-0958	7082	RING;SNAP, PISTON PIN	000000	000017
1095880130	1-0958	8013	RING;SECTION	000000	000000
1095880360	1-0958	8036	RING;SNAP	000000	000000

1095880480			RING; SNAP, TOP	000000	000000
1095880800	1-0958	8080	RING; SNAP, THRUST WASHER	000000	000011
1095881040	1-0958	8104	RING; SNAP, CLUTCH HUB	000000	000000
1095881200	1-0958	8120	RING; SNAP, 3RD GEAR	000000	000000
1095881290	1-0958	8129	RING; SNAP	000000	000000
1095881300	1-0958	8130	RING; SNAP	000000	000000
1095881340	1-0958	8134	RING SNAP POWER DRIVE	000000	000000
1095881360	1-0958	8136	RING; SNAP, TOP G	000001	000015
1095881600	1-0958	8160	RING; SNAP, TOP	000000	000000
1095881601	1-0958	8160	RING; SNAP, TOP GEAR SHFT.	000000	000006
1095881610	1-0958	8161	RING; SNAP, TOP	000000	000000
1095881611	1-0958	8161	RING; SNAP, TOP GEAR SHFT.	000000	000016
1095881621	1-0958	8162	RING; SNAP, TOP GEAR SHFT.	000000	000009
1095881630	1-0958	8163	RING; SNAP, TOP	000000	000000
1095881631	1-0958	8163	RING; SNAP, TOP GEAR SHFT.	000000	000026
1095881650	1-0958	8165	RING SNAP LOCK	000000	000259
1095881770	1-0958	8177	SNAP; RING	000000	000008
1096000030	1-0960	0003	CUP; SEALING, WATER JACKE	000000	000021
1096000051	1-0960	0005	CUP; SEALING, RR FACE	000000	000000
1096000052	1-0960	0005	CUP; SEALING, RR FACE	000000	000000
1096000101	1-0960	0010	CUP; SEALING, W	000000	000000
1096000102	1-0960	0010	CUP; SEALING, W	000000	000000
1096000112	1-0960	0011	CUP, SEALING	000000	000000
1096000121	1-0960	0012	CUP; SEALING, TAPPET CHMBR	000004	000004
1096000122	1-0960	0012	CUP; SEALING, TAPPET CHMBR	000088	000776
1096000130	1-0960	0013	SEALING CUP	000000	000000
1096000160	1-0960	0016	CUP; SEALING, TOP FACE	000195	000090
1096000200	1-0960	0020	CUP; SEALING	000000	000000
1096000201	1-0960	0020	CUP; SEALING	000000	000000
1096000210	1-0960	0021	CUP; SEALING - TAP	000000	000000
1096000220	1-0960	0022	CUP; SEALING	000000	000000
1096000320	1-0960	0032	CUP; SEALING, WATER JACKE	000018	000000
1096000520	1-0960	0052	CUP; SEALING, CYLINDER	000000	000000
1096000521	1-0960	0052	CUP; SEALING, CYLINDER	000000	000055
1096000540	1-0960	0054	CUP; SEALING	000040	000000
1096000580	1-0960	0058	CUP; SEALING, W	000192	000001
1096000581	1-0960	0058	CUP; SEALING, W	000000	001169
1096000590	1-0960	0059	CUP; SEALING, W	000000	000015
1096000591	1-0960	0059	CUP; SEALING, W	000000	000000
1096000650	1-0960	0065	CUP; SEALING WATER JACKET	000027	000000
1096000651	1-0960	0065	CUP; SEALING WATER JACKET	000000	000000
1096040090	1-0960	4009	PLUG	000000	000000
1096040100	1-0960	4010	PLUG; HEATER	000002	000000
1096040180	1-0960	4018	PLUG, COVER	000000	000000
1096040210	1-0960	4021	PLUG; OIL DRAIN	000009	000005
1096040220	1-0960	4022	PLUG; OIL DRAIN	000000	000101
1096040230	1-0960	4023	PLUG; OIL DRAIN, AXLE CASE	000000	000009

1096040290	1-0960	4029	PLUG*	000000	000000
1096040310	1-0960	4031	PLUG*	000000	000000
1096040350	1-0960	4035	PLUG; SCRE, HEATER BOSS	000001	000000
1096040640	1-0960	4064	PLUG; OIL DRAIN	000000	000000
1096040641	1-0960	4064	PLUG; OIL DRAIN	000000	000000
1096040660	1-0960	4066	PLUG; GEAR CHECK HOL	000000	000000
1096040670	1-0960	4067	PLUG; SCREW, OIL	000002	000000
1096040740	1-0960	4074	BOLT; CONNECTOR FIX	000000	000000
1096040770	1-0960	4077	PLUG ASM	000000	000000
1096040780	1-0960	4078	PLUG; INL MANIF	000000	000020
1096040810	1-0960	4081	PLUG WATER LEVEL	000000	000000
1096040940	1-0960	4094	PLUG; C/BL SIDE	000000	000000
1096040950	1-0960	4095	PLUG; C/BL, SIDE	000001	000000
1096040980	1-0960	4098	PLUG; HOLE, OIL LEVEL GAUGE	000001	000000
1096050030	1-0960	5003	PLUG; BODY SIDE/OIL GALLERY	000000	000000
1096050040	1-0960	5004	PLUG: OIL GALLEY	000002	000000
1096050120	1-0960	5012	PLUG; OIL GALLERY FRONT E	000000	000000
1096050190	1-0960	5019	PLUG; BODY SIDE/OIL GALLERY	000000	000091
1096050200	1-0960	5020	PLUG; 3/4 HTR	000000	000004
1096050210	1-0960	5021	PLUG; INLET PIP	000000	000003
1096050211	1-0960	5021	PLUG; INLET PIP	000000	000000
1096050220	1-0960	5022	PLUG WATER DUCT	000001	000000
1096050250	1-0960	5025	PLUG; OIL GALLERY FRONT E	000000	000008
1096050310	1-0960	5031	PLUG; TAPER 1/8	000000	000000
1096050330	1-0960	5033	PLUG*	000000	000000
1096050350	1-0960	5035	PLUG*	000000	000000
1096050480	1-0960	5048	PLUG; TAPER	000000	000000
1096050490	1-0960	5049	PLUG; TAPER	000000	000000
1096050500	1-0960	5050	PLUG; C/BL SIDE	000000	000000
1096050502	1-0960	5050	PLUG; TAPER 1/8	000000	000000
1096050520	1-0960	5052	PLUG; TAPER	000000	000000
1096050560	1-0960	5056	PLUG 6RB1	000012	000000
1096050651	1-0960	5065	PLUG; OIL PAN	000015	000454
1096050660	1-0960	5066	PLUG; OIL GALLERY	000000	000012
1096050680	1-0960	5068	PLUG; OIL GALLERY	000000	000000
1096050681	1-0960	5068	PLUG; OIL GALLERY	000000	000003
1096050700	1-0960	5070	PLUG	000000	000000
1096050720	1-0960	5072	PLUG; SCREW	000000	000000
1096050730	1-0960	5073	PLUG; SCREW	000000	000000
1096050740	1-0960	5074	PLUG	000000	000000
1096050750	1-0960	5075	PLUG; SEAL	000000	000000
1096050790	1-0960	5079	PLUG; OIL G	000000	000000
1096050791	1-0960	5079	PLUG; OIL GALLERY (RH)	000000	000013
1096050800	1-0960	5080	PLUG; 3/4	000000	000009
1096050810	1-0960	5081	PLUG	000001	000000
1096050850	1-0960	5085	PLUG; PARKING V	000000	000005
1096050860	1-0960	5086	PLUG*	000000	000000

1096050950	1-0960	5095	PLUG; SCREW	000000	000000
1096050960	1-0960	5096	PLUG; SCREW	000000	000000
1096051100	1-0960	5110	PLUG; SCREW	000000	000000
1096051231	1-0960	5123	PLUG	000000	000003
1096051270	1-0960	5127	PLUG; CASE,SEA WATER PUMP	000000	000001
1096090080	1-0960	9008	BOLT;DRAIN	000000	000000
1096090090	1-0960	9009	PLUG; RAD DRAIN	000000	000012
1096090091	1-0960	9009	PLUG; RAD DRAIN	000000	000000
1096090141	1-0960	9014	PLUG; OIL GALLERY FRT.	000003	000000
1096230130	1-0962	3013	GASKET;FUEL FEED PUMP,INJ	000051	000119
1096230140	1-0962	3014	O-RING	000004	000015
1096230150	1-0962	3015	PACKING; O-RING	000000	000000
1096230160	1-0962	3016	O-RING.FEED PUM	000006	000000
1096230161			O-RING.FEED PUM	000000	000000
1096230170			O-RING	000012	000000
1096230200	1-0962	3020	O-RING	000000	000000
1096230241	1-0962	3024	PACKING	000000	000000
1096230260	1-0962	3026	GASKET; OIL FILTER	000060	000000
1096230280	1-0962	3028	O-RING	000000	000000
1096230290	1-0962	3029	O-RING 8MA1	000000	000000
1096230390			RING	000000	000000
1096230430			O-RING 8MA1	000000	000000
1096230520	1-0962	3052	O-RING	000000	000061
1096230530	1-0962	3053	O-RING; FRONT COVER	000000	000024
1096230540	1-0962	3054	O-RING	000000	000000
1096230550	1-0962	3055	GASKET; O-RING	000000	000091
1096230560	1-0962	3056	O-RING; FILTER	000011	000000
1096230570	1-0962	3057	GASKET; REV SHAFT	000000	000000
1096230580	1-0962	3058	GASKET/PLUG/OIL THRM.SW	000000	000000
1096230590	1-0962	3059	PACKING;O-RING	000000	000000
1096230600	1-0962	3060	PACKING; O-RING CAP	000000	000000
1096230650	1-0962	3065	O-RING	000002	000008
1096230670	1-0962	3067	PACKING; OIL GALLERY PLUG	000000	000000
1096230680	1-0962	3068	O-RING; NOZZLE	000000	000000
1096230690	1-0962	3069	PACKING; O-RING, OIL PIPE	000000	000000
1096230700	1-0962	3070	RINGS	000000	000000
1096230710	1-0962	3071	O-RING;OIL PIPE	000005	000000
1096230730	1-0962	3073	GASKET; BEARING COVER	000000	000000
1096230770	1-0962	3077	GASKET;O-RING	000000	000000
1096230790	1-0962	3079	O-RING;CYL BLOCK	000000	000133
1096230820	1-0962	3082	GASKET;ROCKER OIL	000000	000000
1096230840	1-0962	3084	O-RING; DRAIN PLUG, FUEL	000000	000000
1096230850	1-0962	3085	O-RING	000000	000000
1096230880	1-0962	3088	O-RING	000008	000000
1096230890	1-0962	3089	O/RING	000041	000000
1096231160			O-RING	000000	000000
1096231260	1-0962	3126	GASKET; GEAR BO	000000	000000

1096231290	1-0962	3129	GSKT;VLV,O/FILT	000000	000000
1096231300	1-0962	3130	GASKET; OIL PIPE	000190	000241
1096231320	1-0962	3132	O-RING	000000	000000
1096231330	1-0962	3133	PACKING; O-RING PLUG	000015	000000
1096231390	1-0962	3139	PACKING DA640	000000	000000
1096231400	1-0962	3140	PACKING DA640	000000	000000
1096231420	1-0962	3142	PACKING; O-RING	000000	000009
1096231430	1-0962	3143	O-RING; OIL PUMP	000030	000056
1096231450	1-0962	3145	PACKING;COVER	000000	000005
1096231460	1-0962	3146	PACKING; O-RING	000000	000016
1096231490	1-0962	3149	O-RING	000000	000000
1096231500	1-0962	3150	GSKT;ORING A/C	000000	000021
1096231520	1-0962	3152	O-RING; AIR COMPRESS	000003	000000
1096231590	1-0962	3159	PACKING	000000	000000
1096231630	1-0962	3163	GASKET; VALVE,OVERFLOW	000005	000045
1096231640	1-0962	3164	O-RING	000000	000000
1096231650	1-0962	3165	O-RING	000000	000000
1096231660	1-0962	3166	O-RING	000000	000000
1096231670	1-0962	3167	O-RING	000000	000000
1096231700	1-0962	3170	PACKING; O-RING, OIL PIPE	000000	000000
1096231710	1-0962	3171	PACKING	000000	000000
1096231731	1-0962	3173	PACKING O-RING	000000	000000
1096231740	1-0962	3174	O-RING	000000	000000
1096231770	1-0962	3177	PACKING;O-RING	000033	000000
1096231780	1-0962	3178	GASKET;O-RING	000000	000000
1096231790	1-0962	3179	O-RING	000000	000236
1096231800	1-0962	3180	GSKT;O-RING	000171	001291
1096231830	1-0962	3183	GASKET; REV SHAFT	000000	000000
1096231840	1-0962	3184	GASKET;O-RING,AIR BREATHR	000009	000063
1096231850	1-0962	3185	GASKET; SENSOR	000000	000000
1096231860	1-0962	3186	O-RING	000032	000000
1096231870	1-0962	3187	PACKING; O-RING, OIL PIPE	000000	000000
1096231880	1-0962	3188	O-RING E120	000014	000072
1096231890	1-0962	3189	O-RING	000000	000000
1096231920	1-0962	3192	O-RING	000000	000000
1096231960	1-0962	3196	PACKING; O-RING	000000	000000
1096231970	1-0962	3197	O-RING	000005	000000
1096232020	1-0962	3202	PACKING;O-RING	000000	000000
1096232030	1-0962	3203	PACKING;O-RING	000000	000000
1096232080	1-0962	3208	GASKET; GEAR BO	000000	000014
1096232081	1-0962	3208	GASKET; GEAR BO	000000	000000
1096232090	1-0962	3209	GASKET; VENTILA	000000	000004
1096232120	1-0962	3212	O-RING	000000	000000
1096232130	1-0962	3213	PACKING; OIL GALLERY PLUG	000001	000000
1096232150	1-0962	3215	GASKET; BEARING COVER	000000	000258
1096232180	1-0962	3218	GASKET; AIR CMP	000000	000000
1096232200	1-0962	3220	GASKET;OIL PIPE	000000	000020

1096232250	1-0962	3225	O-RING	000000	000000
1096232270	1-0962	3227	O-RING	000000	000000
1096232280	1-0962	3228	GASKET;AIR COMPRESSOR	000000	000000
1096232290	1-0962	3229	GASKET;GUIDE,TUBE,OIL LEV	000000	000000
1096232320	1-0962	3232	GASKET; GUIDE TUBE,O	000000	000000
1096232340	1-0962	3234	GASKET; OIL FILLER	000000	000000
1096232341	1-0962	3234	O-RING;CYL BLOCK	000000	000000
1096232350	1-0962	3235	O-RING; NOZZLE	000012	000000
1096232390	1-0962	3239	O-RING PISTON	000000	000000
1096232430	1-0962	3243	GASKET;AIR CMPR	000000	000000
1096232460	1-0962	3246	GASKET; BUSHING,INNER	000000	000018
1096232470	1-0962	3247	GASKET; COVER,IDLE GEAR	000000	000000
1096232590	1-0962	3259	O-RING 6RB1	000003	000000
1096232600	1-0962	3260	O-RING;COMPRESSOR	000000	000002
1096232610	1-0962	3261	O-RING;COMPRESSOR	000000	000005
1096232620	1-0962	3262	PACKING; COVER, O-RING	000000	000000
1096232650	1-0962	3265	SEAL RING	000000	000000
1096232670	1-0962	3267	GASKET;AIR CMPR	000000	000003
1096232680	1-0962	3268	GASKET; INL PIPE	000000	000000
1096232700	1-0962	3270	PACKING	000000	000000
1096232710	1-0962	3271	SLEEVE SEAL	000005	000002
1096232730	1-0962	3273	PACKING	000110	000000
1096232740	1-0962	3274	PACKING; O-RING	000125	000122
1096232820	1-0962	3282	GSKT;O-RING,	000007	000095
1096232830	1-0962	3283	O-RING; OIL PUMP	000000	000000
1096232840	1-0962	3284	GASKET;COVER	000000	000000
1096232850	1-0962	3285	GASKET;FLANGE	000000	000000
1096232970	1-0962	3297	GASKET; OIL PIP	000003	000050
1096232990	1-0962	3299	PACKING; O-RING	000063	000014
1096233000	1-0962	3300	GASKET; INJ PUMP	000000	000000
1096233070	1-0962	3307	GASKET; PLUG,WA	000000	000005
1096233100	1-0962	3310	O-RING	000000	000000
1096233110	1-0962	3311	O-RING	000000	000000
1096233130	1-0962	3313	PACKING;O-RING	000000	000000
1096233150	1-0962	3315	O-RING	000000	000000
1096233160	1-0962	3316	O'RING	000000	000000
1096233190	1-0962	3319	O-RING	000000	000000
1096233200	1-0962	3320	O-RING	000000	000000
1096233300	1-0962	3330	GASKET; INLET P	000000	000018
1096233340	1-0962	3334	PACKING: PIPE-HEAT EXCH	000000	000000
1096233350	1-0962	3335	O-RING	000004	000000
1096233360	1-0962	3336	PACKING	000000	000008
1096233420	1-0962	3342	PACKING; PUMP THERMOS-HSG	000000	000006
1096233430	1-0962	3343	GASKET; INLET P	000000	000005
1096233510	1-0962	3351	PACKING; O-RING HEAT EXCH	000012	000000
1096233530	1-0962	3353	GSKT; COVER	000002	000008
1096233550	1-0962	3355	GASKET / PACKING	000008	000004

1096233590	1-0962	3359	PACKING; OIL PIPE	000000	000253
1096233610	1-0962	3361	GSKT;CVR/O-RING A/C	000000	000000
1096233621	1-0962	3362	PACKING: O-RING	000000	000010
1096233630	1-0962	3363	REAR SEAL	000000	000000
1096233631	1-0962	3363	REAR SEAL	000000	000013
1096233690	1-0962	3369	GASKET;BOLT,FRT COVER	000000	000019
1096233700	1-0962	3370	GASKET;DRVN.GEAR,SPDMTR.	000000	000057
1096233730	1-0962	3373	PACKING; O-RING, INJECTIO	000006	000003
1096233750	1-0962	3375	GASKET; HANGER,RR	000012	000024
1096233790	1-0962	3379	GASKET;MAINSHAFT	000000	000001
1096233820	1-0962	3382	GASKET; SEA WATER PUMP	000000	000010
1096233830	1-0962	3383	O-RING;OIL	000720	004176
1096233860	1-0962	3386	O-RING	000002	000000
1096233940	1-0962	3394	PACKING; O-RING, WATER PU	000007	000003
1096233950	1-0962	3395	GASKET;O-RING,OIL	006093	016180
1096233970	1-0962	3397	GASKET; COVER TO BODY	000003	000005
1096234030	1-0962	3403	GASKET;CYL HD TO GEAR CAS	000006	000013
1096234060	1-0962	3406	GASKET;PIPE TO PUMP	000000	000023
1096234090	1-0962	3409	O-RING	000000	000000
1096234100	1-0962	3410	GASKET; LINER T	000000	000000
1096234160	1-0962	3416	GASKET; OIL FILTER	000061	000277
1096234190	1-0962	3419	GASKET; THERMOSTAT	000000	000029
1096234210	1-0962	3421	GASKET; COVER P/S	000000	000015
1096234220	1-0962	3422	GASKET; INL PIPE	000000	000002
1096234230	1-0962	3423	GASKET; COVER	000074	000110
1096234250	1-0962	3425	PACKING; O-RING	000014	000000
1096234310	1-0962	3431	O-RING	000000	000000
1096234320	1-0962	3432	GASKET; CREVISE	000000	000000
1096234490	1-0962	3449	GASKET;AIR CMP	000000	000004
1096234500	1-0962	3450	PACKING; O-RING, OIL PIPE	000000	000285
1096234520	1-0962	3452	GASKET;OUTLET PIPE	000000	000000
1096234550	1-0962	3455	O-RING	000005	000000
1096234580	1-0962	3458	GASKET;GUIDE,TUBE,OIL LEV	000000	000000
1096234610	1-0962	3461	PACKING	000009	000000
1096234620	1-0962	3462	GASKET; OIL PIPE	000943	001922
1096234640	1-0962	3464	GASKET; COUPLING	000189	000198
1096234650	1-0962	3465	GASKET; COVER TO C/BL	000000	000011
1096234670	1-0962	3467	GASKET;O-RING	000000	000023
1096234680	1-0962	3468	GASKET;AIR COMPRESSOR	000000	000036
1096234690	1-0962	3469	GASKET;GUIDE,TUBE,OIL LEV	000000	000000
1096234710	1-0962	3471	GASKET; LINER T	000000	000000
1096234730	1-0962	3473	SUPERSEDED**PACKING	000000	000000
1096234740	1-0962	3474	SUPERSEDED**PACKING	000000	000000
1096234760	1-0962	3476	GASKET; AIR CMPR	000000	000018
1096234780	1-0962	3478	GASKET; BRKT, INJ PUMP	000000	000090
1096234790	1-0962	3479	GASKET; OIL FILTER TO C/B	000000	000001
1096234810	1-0962	3481	GASKET; O-RING,OIL PIPE	000167	000231

1096234830	1-0962	3483	PACKING; LINER	000055	000008
1096234900	1-0962	3490	GASKET; DRAIN PLUG	000013	000091
1096234910	1-0962	3491	GASKET; UPPER COVER, SEDIM	000060	000043
1096234940	1-0962	3494	GASKET; WATER PUMP	000000	000003
1096234960	1-0962	3496	SEAL: OIL RING STRAINER	000000	000019
1096234990	1-0962	3499	GASKET; PLUG, OIL COOLER	000091	001139
1096235000	1-0962	3500	PACKING; CENTER PIPE	000000	000026
1096235050	1-0962	3505	GASKET; INL PIPE TO CVR	000000	000042
1096235120	1-0962	3512	O'RING	000003	000000
1096235130	1-0962	3513	O-RING	000000	000000
1096235290	1-0962	3529	GASKET; OIL PIPE STRAINER	000000	000041
1096235380	1-0962	3538	GASKET; LINER	000012	000000
1096235390	1-0962	3539	GSKT; CVR/O-RING A/C	000000	000006
1096235410	1-0962	3541	PACKING	000000	000006
1096235412	1-0962	3541	PACKING	000000	000000
1096235420	1-0962	3542	GASKET; OUTLET PIPE	000000	000029
1096235440	1-0962	3544	O-RING	000000	000000
1096235480	1-0962	3548	GASKET; BODY TO CASE	000000	000004
1096235490	1-0962	3549	GASKET; CENTER BOLT	000000	000004
1096235500	1-0962	3550	GASKET; PLUG OIL DRAIN	000001	000000
1096235510	1-0962	3551	GASKET; CENTER BOLT	000000	000005
1096235520	1-0962	3552	GASKET; BODY TO CASE	000000	000007
1096235640	1-0962	3564	GASKET; CAP NUT NOZZLE HO	000000	000171
1096235650	1-0962	3565	GASKET; AIR BREATHER	000506	000928
1096235700	1-0962	3570	GASKET; AIR CMPR	000091	000069
1096235861	1-0962	3586	GASKET; PUMP TO C/BL	000000	000014
1096235870	1-0962	3587	GASKET; COVER TO BODY	000000	000000
1096235880	1-0962	3588	GASKET; ADAPTER	000124	000007
1096235930	1-0962	3593	GASKET; INJ PUMP	000081	000082
1096236100	1-0962	3610	RING; CASE	000000	000134
1096236260	1-0962	3626	GASKET; AIR CMPR	000000	000068
1096236430	1-0962	3643	GASKET; BODY TO CASE	000000	000002
1096236440	1-0962	3644	GASKET; BODY TO CASE	000000	000002
1096236450	1-0962	3645	GASKET; PLUG, OIL DRAIN	000000	000000
1096236460	1-0962	3646	GASKET; PLUG, OIL DRAIN	000001	000000
1096236470	1-0962	3647	GASKET; CENTER BOLT	000005	000000
1096236480	1-0962	3648	GASKET; CENTER BOLT	000005	000000
1096236590	1-0962	3659	GASKET	000000	000003
1096236731	1-0962	3673	GASKET	000000	000000
1096236830	1-0962	3683	GASKET; SEA WATER PUMP	000000	000007
1096236850	1-0962	3685	GASKET; OIL PUMP, C/BL	000000	000013
1096236870	1-0962	3687	GASKET; COVER	000000	000023
1096250020	1-0962	5002	SEAL; DUST, CLU HSG	000021	000047
1096250030	1-0962	5003	SEAL DUST	000000	000000
1096250160	1-0962	5016	SEAL; OIL	000000	000002
1096250250	1-0962	5025	SEAL; OIL, FRONT 12PB1	000000	000000
1096250300	1-0962	5030	SEAL; OIL	000000	000000

1096250310	1-0962	5031	OIL SEAL	000000	000000
1096250630	1-0962	5063	SEAL; OIL	000003	000000
1096250800	1-0962	5080	SEAL; OIL, TIMING	000000	000000
1096250810	1-0962	5081	SEAL; CRANKSHAFT DA640	000000	000000
1096250820	1-0962	5082	SEAL; CRANKSHAFT DA640	000000	000000
1096251120	1-0962	5112	SEAL; OIL, CRANKS	000000	000000
1096251130	1-0962	5113	SEAL; OIL DRIVEN GEAR	000000	000000
1096251230	1-0962	5123	SEAL; OIL 8MA1	000000	000000
1096251240	1-0962	5124	SEAL; OIL	000000	000000
1096251250	1-0962	5125	SEAL; OIL	000000	000000
1096251280	1-0962	5128	SEAL; OIL BRG	000000	000000
1096251330	1-0962	5133	SEAL; OIL, BRG C	000000	000000
1096251340	1-0962	5134	SEAL; OIL, BRG	000000	000020
1096251350	1-0962	5135	SEAL; OIL REAR	000000	000000
1096251360	1-0962	5136	SEAL	000004	000000
1096251430	1-0962	5143	SEAL; OIL, A/COMP	000000	000000
1096251450	1-0962	5145	SEAL; OIL	000000	000009
1096251490	1-0962	5149	SEAL; OIL	000000	000000
1096251550	1-0962	5155	SEAL; OIL, FRT	000000	000000
1096251660	1-0962	5166	OIL SEAL	000000	000000
1096251730	1-0962	5173	SEAL; OIL, RR COVER	000000	000000
1096251860	1-0962	5186	SEAL; OIL, A/COMP	000005	000000
1096251870	1-0962	5187	SEAL; OIL, BRG, C	000000	000008
1096251930	1-0962	5193	SEAL; OIL, TIMING	000000	000000
1096251940	1-0962	5194	SEAL; CRANKSHAFT DA640	000002	000000
1096251950	1-0962	5195	SEAL; OIL, CRANKS	000000	000000
1096251960	1-0962	5196	SEAL; CRANKSHAFT DA640	000004	000003
1096251970	1-0962	5197	SEAL; OIL, CRANK	000000	000000
1096251980	1-0962	5198	SEAL; OIL 8MA1	000000	000000
1096252000	1-0962	5200	SEAL; OIL, FRONT 12PB1	000000	000000
1096252010	1-0962	5201	SEAL; OIL, REAR	000000	000000
1096252021			SEAL; OIL, INPUT	000000	000000
1096252070	1-0962	5207	SEAL; OIL REAR	000000	000000
1096252190	1-0962	5219	SEAL; OIL-SHAFT	000000	000000
1096252320	1-0962	5232	SEAL; OIL RR 6BD1	000000	000000
1096252560	1-0962	5256	SEAL; OIL	000005	000000
1096252580	1-0962	5258	SEAL; OIL, FRONT	000000	000000
1096252620	1-0962	5262	SEAL; SECONDARY	000000	000000
1096252660	1-0962	5266	SEAL; OIL	000000	000000
1096252670	1-0962	5267	SEAL; OIL	000000	000000
1096252770	1-0962	5277	SEAL; OIL, WATER	000001	000016
1096252800	1-0962	5280	SEAL; OIL, FRONT	000000	000000
1096253050	1-0962	5305	SEAL; OIL	000000	000000
1096253100	1-0962	5310	SEAL; OIL	000036	000000
1096253110	1-0962	5311	SEAL; OIL	000000	000000
1096253160	1-0962	5316	SEAL; OIL, TIMING	000000	000000
1096253170	1-0962	5317	SEAL; OIL, CRANK	000000	000000

1096253190	1-0962	5319	SEAL; OIL, CRANK	000000	000000
1096253200	1-0962	5320	OIL SEAL; CRANK	000000	000000
1096253210	1-0962	5321	SEAL; OIL, CRANKS	000000	000000
1096253220	1-0962	5322	SEAL	000002	000000
1096253260	1-0962	5326	SEAL; CRANKSHAFT REAR	000000	000000
1096253290	1-0962	5329	SEAL; CRANK	000000	000000
1096253330	1-0962	5333	SEAL; OIL, CRANK SHAFT, R	000001	000000
1096253510			S E A L	000000	000000
1096253540			SEAL; OIL	000002	000000
1096253550	1-0962	5355	SEAL; OIL E120	000000	000000
1096253600	1-0962	5360	SEAL; OIL RR	000001	000000
1096253620	1-0962	5362	SEAL; OIL RR	000000	000017
1096253630	1-0962	5363	SEAL OIL RR	000000	000032
1096253640	1-0962	5364	SEAL; OIL RR 6BD1	000000	000003
1096253690	1-0962	5369	SEAL; OIL, SELECT	000000	000005
1096253770			SEAL; OIL	000000	000000
1096253790			OIL SEAL	000000	000000
1096253800	1-0962	5380	OIL SEAL CRANK	000000	000000
1096253810	1-0962	5381	SEAL; OIL, WATER	000002	000000
1096253820	1-0962	5382	SEAL; OIL, WATER	000001	000000
1096253840	1-0962	5384	SEAL; OIL, CRANKS	000000	000000
1096253860	1-0962	5386	SEAL; OIL, CONT SHAFT, QUAD	000000	000004
1096253880	1-0962	5388	SEAL; OIL IMPELLER SIDE	000030	000000
1096253890	1-0962	5389	SEAL; OIL CENTER SIDE	000024	000000
1096253960	1-0962	5396	SEAL; OIL, CRANK	000000	000000
1096254010	1-0962	5401	SEAL; OIL, CRANK REAR	000000	000000
1096254020	1-0962	5402	SEAL; OIL, CRANKS	000033	000012
1096254040	1-0962	5404	SEAL; OIL, FRONT	000000	000000
1096254050	1-0962	5405	SEAL; CRANK	000000	000000
1096254240	1-0962	5424	SEAL; OIL	000000	000041
1096254350	1-0962	5435	SEAL; OIL, FRONT	000000	000000
1096254360	1-0962	5436	SEAL; OIL, RR	000000	000000
1096254370	1-0962	5437	SEAL; SECONDARY	000000	000002
1096254380	1-0962	5438	SEAL; OIL, TIMING GEAR CASE	000136	000027
1096254390	1-0962	5439	SEAL; OIL, CRANKS	000000	000000
1096254391	1-0962	5439	SEAL; OIL, CRANKS	000038	000042
1096254400	1-0962	5440	SEAL; OIL, BRG C	000000	000010
1096254410	1-0962	5441	SEAL; OIL, CRANK	000000	000002
1096254420	1-0962	5442	SEAL; OIL, TIMING	000000	000000
1096254430	1-0962	5443	SEAL; CRANK	000000	000010
1096254500	1-0962	5450	SEAL; OIL, RR	000000	000000
1096254510	1-0962	5451	SEAL; CRANK	000000	000000
1096254690	1-0962	5469	SEAL; OIL, CRANK REAR	000000	000002
1096254840	1-0962	5484	SEAL; OIL, FINAL PINION	000040	000139
1096254841			SEAL; OIL, FINAL PINION	000000	000000
1096254970	1-0962	5497	SEAL; OIL, FRT COVER, T/M	000000	000007
1096254990	1-0962	5499	SEAL: OIL	000003	000000

1096255000	1-0962	5500	SEAL: OIL	000000	000000
1096255010	1-0962	5501	SEAL: OIL	000000	000000
1096255020	1-0962	5502	SEAL;OIL,FRT COVER,T/M	000000	000000
1096255040	1-0962	5504	SEAL; OIL RR	000001	000001
1096255050	1-0962	5505	SEAL;OIL,RR COVER	000000	000011
1096255060	1-0962	5506	SEAL;OIL,FRONT	000000	000013
1096255071	1-0962	5507	SEAL; OIL, RR	000000	000000
1096255100	1-0962	5510	SEAL;OIL,DRIVE GEAR	000000	000005
1096255220	1-0962	5522	SEAL;OIL,RR COVER	000000	000000
1096255242	1-0962	5524	SEAL; OIL, FRONT	000000	000000
1096255243	1-0962	5524	SEAL; OIL, FRONT	000002	000000
1096255252	1-0962	5525	SEAL; OIL,CRANKSHAFT REAR	000000	000001
1096255340	1-0962	5534	SEAL; OIL,BRG COVER,AIR C	000000	000004
1096255402	1-0962	5540	SEAL;OIL,CRANKSHFT FRT	000000	000000
1096255403	1-0962	5540	SEAL;OIL,CRANKSHFT FRT	000007	000000
1096255412	1-0962	5541	SEAL;OIL C/SHF.RR	000000	000011
1096255440	1-0962	5544	GASKET; DUST COVER	000000	000129
1096255450	1-0962	5545	SEAL; WATER PUMP	000000	000168
1096255510	1-0962	5551	SEAL; OIL,WATER PUMP	000000	000004
1096255561	1-0962	5556	SEAL; OIL CRACKSHAFT FRT	000000	000000
1096255562	1-0962	5556	SEAL; OIL CRACKSHAFT FRT	000054	000000
1096255571	1-0962	5557	SEAL; OILCR/SHF,RR	000000	000000
1096255650	1-0962	5565	SEAL; OIL,FRT COVER,T/M	000000	000000
1096255651	1-0962	5565	SEAL; OIL,FRT COVER,T/M	000000	000051
1096255760	1-0962	5576	SEAL; OIL, BRG CASE	000000	000005
1096256170	1-0962	5617	SEAL;OIL WATER PUMP	000000	000000
1096256180	1-0962	5618	SEAL;OIL WATER PUMP	000000	000000
1096256421	1-0962	5642	SEAL;OIL,CR/SHF,RR	000000	000005
1096256430	1-0962	5643	SEAL;OIL,TIMING	000000	000025
1096256440	1-0962	5644	SEAL;OIL,CR/SHF,RR	000000	000001
1096300070	1-0963	0007	PACKING; ELEMENT E120	000027	000000
1096300071	1-0963	0007	PACKING; ELEMENT E120	000000	000000
1096300200	1-0963	0020	PACKING,UNION B	000000	000047
1096300210	1-0963	0021	GSKT;FEED PIPE	000000	000000
1096300220	1-0963	0022	GASKET; JOINT,OIL PIPE	000000	000000
1096300230	1-0963	0023	GASKET; OIL PIPE	000000	000000
1096300240	1-0963	0024	PACKING	000000	000000
1096300250	1-0963	0025	PACKING	000000	000000
1096300260	1-0963	0026	PACKING; RSP	000000	000000
1096300290	1-0963	0029	PACKING 6BD1/6BG1	000000	000000
1096300330	1-0963	0033	GASKET	000017	000000
1096300340	1-0963	0034	GASKET 2KC1	000000	000000
1096300370	1-0963	0037	WASHER;COPPER	000000	000000
1096300380	1-0963	0038	GASKET; OIL PUMP MARINE G	000000	000000
1096300430	1-0963	0043	GASKET;	000018	000000
1096300480	1-0963	0048	GASKET	000000	000000
1096300500	1-0963	0050	GSKT;FUEL STRAI	000416	000000

1096300510	1-0963	0051	GSKT;FEED PIPE	000000	000000
1096300520	1-0963	0052	GASKET; JOINT,OIL PIPE	000000	000000
1096300530	1-0963	0053	GASKET; OIL PIPE	000000	000000
1096300540	1-0963	0054	GASKET;FUEL PIPE	000000	000000
1096300560	1-0963	0056	GASKET;AIR PIPE	000000	000000
1096300580	1-0963	0058	PACKING E120	000000	000000
1096300600	1-0963	0060	GASKET; OIL PIPE TO C/BL	000000	000000
1096300720	1-0963	0072	GASKET;FILTER COVER	000000	000000
1096300820	1-0963	0082	GSKT;FEED PIPE	001263	002127
109630083D			GASKET; JOINT,OIL PIPE	000000	000000
1096300830	1-0963	0083	GASKET; JOINT,OIL PIPE	006223	002120
109630084D			GASKET; OIL PIPE	000000	000000
1096300840	1-0963	0084	GASKET; OIL PIPE	000436	000122
1096300850	1-0963	0085	GASKET; FUEL PIPE TO OVRF	008393	016295
1096300856			GASKET; FUEL PIPE TO OVRF	000000	000000
1096300860	1-0963	0086	GASKET; AIR PIPE	000536	000118
1096300870	1-0963	0087	GASKET;AIR PIPE	000099	000315
1096300880	1-0963	0088	PACKING	000000	000057
1096300890	1-0963	0089	PACKING E120	000000	000030
1096300900	1-0963	0090	PACKING 6BD1/6BG1	000000	000129
1096301000	1-0963	0100	PACKING; BODY, CAP E120	000032	000011
1096301030	1-0963	0103	CENTER BOLT GASKET	000000	000000
1096301110	1-0963	0111	GASKET;PLUG	000000	000221
1096301120	1-0963	0112	PACKING; BODY-CASE	000000	000000
1096301130	1-0963	0113	PACKING; CENTER BOLT	000000	000000
1096301140	1-0963	0114	GASKET;SW	000000	000000
1096301150	1-0963	0115	GASKET; FLEX HOSE	000000	000170
1096301180	1-0963	0118	GASKET	000000	000000
1096301280	1-0963	0128	GASKET COPPER	000000	000000
1096301320	1-0963	0132	GASKET; PLUG	000000	000001
1096301330	1-0963	0133	O-RING	000004	000007
1096301410	1-0963	0141	GASKET; PLUG,HD	000000	000272
1096320520	1-0963	2052	PACKING	000000	000000
1096350010	1-0963	5001	GSKT;FEED PIPE	000000	000000
1096350020	1-0963	5002	GASKET; JOINT,OIL PIPE	000000	000000
1096350070	1-0963	5007	GASKET; INJ PUMP	000000	000000
1096370110	1-0963	7011	PACKING	000000	000000
1096370120	1-0963	7012	PACKING; JOINT PIPE TO HS	000000	000000
1096370121	1-0963	7012	PACKING; JOINT PIPE TO HS	000000	000000
1096370140	1-0963	7014	PACKING; O-RING	000000	000000
1096370150	1-0963	7015	PACKING; O-RING	000000	000000
1096370160	1-0963	7016	PACKING; RSP E120	000000	000000
1096370190	1-0963	7019	PACKING; WATER OUTLET UME	000001	000000
1096370420	1-0963	7042	PACKING	000000	000000
1096370430	1-0963	7043	GASKET; DRAIN PIPE	000000	000000
1096370450	1-0963	7045	GASKET; DRAIN PIPE	000654	001628
1096370460	1-0963	7046	PACKING;COVER	000000	000000

1096370470	1-0963	7047	GSKT;INL PIPE	000000	000000
1096370490	1-0963	7049	PACKING; O-RING	000007	000000
1096370500	1-0963	7050	PACKING; O-RING	000007	000000
1096370530	1-0963	7053	PACKING; RSP	000000	000000
1096370550	1-0963	7055	GASKET; DRAIN PIPE	000000	000000
1096370560	1-0963	7056	GASKET; INL PIP	000000	000000
1096370570	1-0963	7057	GASKET; OIL PIPE TO C/BL	000000	000000
1096370581	1-0963	7058	GASKET; OIL PIPE TO TURBO	000002	000001
1096370582	1-0963	7058	GASKET; OIL PIPE TO TURBO	000048	000185
1096370600	1-0963	7060	PACKING;OIL RETURN	000000	000000
1096370601	1-0963	7060	PACKING;OIL RETURN	000000	000026
1096370610	1-0963	7061	PACKING;INL.PIPE	000000	000000
1096370630	1-0963	7063	PACKING	000000	000019
1096370640	1-0963	7064	GASKET; OIL PIPE TO TURBO	000000	000003
1096390180	1-0963	9018	PACKING; SLEEVE, NUT HEAD	000000	000402
1096390190	1-0963	9019	PACKING; HOLDER, SLEEVE N	000000	000455
1096390300	1-0963	9030	PACKING; SLEEVE	000008	000000
1096390310	1-0963	9031	PACKING; COVER	000000	000000
1096390320	1-0963	9032	PACKING;CVR TO	000203	000420
1096390340	1-0963	9034	GASKET; SLEEVE,INJ PUMP	000366	000819
1096500330	1-0965	0033	CONN;ELBOW,QRV	000000	000000
1096500740	1-0965	0074	CONN;MAG.,VLV	000000	000000
1096500741	1-0965	0074	CONN; MAG VLV,INL PORT	000000	000021
1096501800	1-0965	0180	CONNECTOR	000000	000000
1096501801	1-0965	0180	CONNECTOR	000000	000000
1096501960	1-0965	0196	NIPPLE; AIR CMP	000000	000003
1096502020	1-0965	0202	CONNECTOR	000000	000002
1096502100	1-0965	0210	CONNECTOR; PART	000000	000000
1096502101	1-0965	0210	CONNECTOR; PART	000000	000000
1096502110	1-0965	0211	CONNECTOR; INJ	000006	000000
1096502111	1-0965	0211	CONNECTOR; INJ	000000	000000
1096502881	1-0965	0288	NIPPLE: BOOST PIPE	000000	000002
1096504340	1-0965	0434	CONNECTOR; POWER CHAMBER	000000	000000
1096504380	1-0965	0438	CONNECTOR; BRK VALVE	000000	000005
1096540490	1-0965	4049	UNION; OIL PIPE E120	000000	000000
1096541350	1-0965	4135	CONNECTOR, M14	000000	000000
1096544000	1-0965	4400	ADAPTER	000000	000001
1096562361	1-0965	6236	UNION; 4 WAY	000000	000000
1096590350	1-0965	9035	ADAPT;OIL PRESS	000000	000001
1096600111	1-0966	0011	CONNECTOR; WATER DRAIN	000011	000000
1096600280	1-0966	0028	NIPPLE; OIL PUMP	000000	000000
1096600310	1-0966	0031	CONNECTOR;ELBOW	000000	000000
1096600340	1-0966	0034	CONNECTOR 6RB1	000000	000000
1096600341	1-0966	0034	CONNECTOR 6RB1	000000	000001
1096600350	1-0966	0035	NIPPLE	000000	000000
1096600370	1-0966	0037	CONNECTOR; PIPE	000000	000000
1096600371	1-0966	0037	CONNECTOR; PIPE	000001	000000

1096600780	1-0966	0078	CONNECTOR	000000	000000
1096600900	1-0966	0090	CONNECTOR; OIL GAL. NO. 7	000004	000001
1096600990	1-0966	0099	CONNECTOR SWITC	000000	000003
1096601010	1-0966	0101	NIPPLE;OIL FEED,TRBO (LH)	000000	000002
1096601040	1-0966	0104	CONNECTOR E120	000000	000000
1096601041	1-0966	0104	CONNECTOR E120	000011	000000
1096601080	1-0966	0108	NIPPLE; INJ PUMP	000002	000003
1096601190	1-0966	0119	CONNECTOR; BYPASS	000000	000000
1096601191	1-0966	0119	CONNECTOR; BYPASS	000000	000000
1096601192	1-0966	0119	CONNECTOR; BYPASS	000010	000000
1096601290	1-0966	0129	CONNECTOR; CYL. BLK. 6SA1	000015	000000
1096601401	1-0966	0140	CONNECTOR E120	000010	000000
1096601430	1-0966	0143	CONNECTOR	000000	000000
1096601550	1-0966	0155	NIPPLE;INJ PUMP	000000	000000
1096601740	1-0966	0174	CONN; WATER DRAIN	000000	000000
1096601741	1-0966	0174	CONN;WTR, DRAIN	000000	000000
1096601742	1-0966	0174	CONN; WATER DRAIN	000000	000001
1096601840	1-0966	0184	PIPE;HEATER	000000	000007
1096602071	1-0966	0207	CONN;WATER	000000	000000
1096602072	1-0966	0207	CONNECTOR;WATER DRAIN	000000	000007
1096602090	1-0966	0209	JOINT; HEATER	000000	000000
1096603290	1-0966	0329	CONNECTOR; TURBO	000000	000000
1096603500	1-0966	0350	ADAPTER;OIL PRESS SWITH	000000	000000
1096603590	1-0966	0359	CONNECTOR; OIL FEED 6RB1	000000	000000
1096603591	1-0966	0359	CONNECTOR; OIL FEED 6RB1	000001	000014
1096603610	1-0966	0361	CONNECTOR	000000	000000
1096604080	1-0966	0408	NIPPLE; AIR CMP	000000	000006
1096604510	1-0966	0451	CONNECTOR;HEATER PLUG	000000	000000
1096604570	1-0966	0457	PIPE ASM; WATER	000000	000000
1096605040	1-0966	0504	JOINT;HEATER	000000	000000
1096605041	1-0966	0504	JOINT;HEATER	000003	000002
1096605680	1-0966	0568	NIPPLE; OIL GALLERY	000020	000000
1096606340	1-0966	0634	CONNECTOR:OIL PIPE PT1/2	000000	000005
1096613750	1-0966	1375	CONNECTOR; BYPASS	000000	000000
1096640100	1-0966	4010	UNION	000000	000000
1096640161	1-0966	4016	UNION; PIPE	000000	000000
1096660270	1-0966	6027	NIPPLE	000000	000000
1096660360	1-0966	6036	JOINT;PIPE,DR.	000009	000040
1096690150	1-0966	9015	CONNECTOR; LEAK OFF PIPE	000000	000000
1096691300	1-0966	9130	ADAPTER; OIL PRESSURE SWI	000000	000000
1096740390	1-0967	4039	JOINT; EYE,AIR PIPE CHR.G.	000000	000000
1096740400	1-0967	4040	EYE BOLT	000000	000000
1096740610	1-0967	4061	JOINT; EYE	000000	000000
1096740700	1-0967	4070	EYE; GOVERNOR 6BD1	000005	000000
1096740720	1-0967	4072	EYE; OUTLET 6BD1	000000	000000
1096750011	1-0967	5001	BOLT; EYE, INLET	000000	000000
1096750110			BOLTS	000000	000000

1096750220		BOLT; EYE,FUEL PIPE	000000	000005
1096750231	1-0967 5023	BOLT*	000001	000003
1096750250	1-0967 5025	BOLT; JT. PIPE	000000	000000
1096750280	1-0967 5028	BOLT; JOINT, PI	000000	000031
1096750371	1-0967 5037	BOLT;EYE,FUEL PIPE	000154	000340
1096750381	1-0967 5038	BOLT; EYE 6RB1	000020	000000
1096750391	1-0967 5039	BOLT; JOINT,LEAK OFF PIPE	000004	000009
1096750410	1-0967 5041	BOLT; EYE,OIL PIPE	000000	000000
1096750450	1-0967 5045	EYE BOLT	000000	000000
1096750490	1-0967 5049	BOLT;EYE,OIL PIPE	000000	000000
1096750500	1-0967 5050	BOLT; EYE,AIR PIPE TO CMP	000000	000000
1096750560	1-0967 5056	BOLT;JOINT	000000	000000
1096750580	1-0967 5058	BOLT;EYE,OIL COOLER TO HS	000000	000014
1096750590	1-0967 5059	BOLT; EYE	000000	000000
1096750600	1-0967 5060	BOLT; EYE	000000	000000
1096750610	1-0967 5061	BOLT;EYE	000000	000000
1096750630	1-0967 5063	BOLT; EYE, FUEL	000000	000054
1096750640	1-0967 5064	BOLT; EYE E120	000000	000000
1096750650	1-0967 5065	BOLT; EYE E120	000000	000000
1096750660	1-0967 5066	BOLT; EYE E120	000011	000000
1096750710	1-0967 5071	BOLT;TERMINAL	000000	000000
1096750760	1-0967 5076	BOLT; JOINT	000005	000000
1096750770	1-0967 5077	BOLT; EYE,OIL PIPE	000024	000242
1096750780	1-0967 5078	BOLT;JOINT,OIL PIPE	000000	000000
1096750810	1-0967 5081	BOLT; EYE,OIL PIPE	000000	000040
1096750820	1-0967 5082	BOLT	000000	000000
1096750850	1-0967 5085	BOLT;EYE,OIL PIPE	000004	000036
109675086F		BOLT; EYE,AIR PIPE TO CMP	000000	000000
1096750860	1-0967 5086	BOLT; EYE,AIR PIPE TO CMP	000142	000145
1096750870	1-0967 5087	BOLT; EYE E120	000000	000039
1096750880	1-0967 5088	JOINT BOLT; FLEX HOSE	000000	000025
1096750890	1-0967 5089	BOLT; EYE	000000	000000
1096750900	1-0967 5090	BOLT; JOINT,FUEL FILTER	000004	000000
1096750920	1-0967 5092	BOLT;EYE	000000	000000
1096750950	1-0967 5095	BOLT; EYE,AIR PIPE TO CMP	000000	000000
1096750951	1-0967 5095	BOLT; EYE,AIR PIPE TO CMP	000000	000115
1096750990	1-0967 5099	BOLT*	000000	000000
1096751040	1-0967 5104	BOLT; EYE	000000	000000
1096751051	1-0967 5105	BOLT; JOINT,OIL	000000	000001
1096751060	1-0967 5106	BOLT:EYE	000000	000000
1096751061		BOLT;EYE	000000	000048
1096751120	1-0967 5112	BOLT;EYE GUIDE	000000	000000
1096751150	1-0967 5115	BOLT; EYE OIL PIPE	000000	000000
1096751160	1-0967 5116	BOLT;EYE	000000	000000
1096751190	1-0967 5119	BOLT;EYE, OIL PIPE	000008	000000
1096751200	1-0967 5120	BOLT; EYE OIL , PIPE	000004	000006
1096751260	1-0967 5126	BOLT; EYE 6RB1	000001	000000

1096751292	1-0967	5129	BOLT; EYE	000000	000000
1096751320	1-0967	5132	BOLT; EYE,AIR PIPE TO CMP	000000	000000
1096751321	1-0967	5132	BOLT; EYE,AIR PIPE TO CMP	000000	000000
1096751330	1-0967	5133	BOLT;EYE,AIR PI	000012	000002
1096751331	1-0967	5133	BOLT;EYE,AIR PI	000000	000000
1096751390	1-0967	5139	BOLT;JOINT HOLD	000000	000000
1096751391	1-0967	5139	BOLT;JOINT HOLD	000000	000000
1096751400	1-0967	5140	BOLT: EYE, PARTIAL	000000	000002
1096751460	1-0967	5146	BOLT;JOINT,FUEL	000000	000290
1096751530	1-0967	5153	BOLT*	000000	000000
1096751561	1-0967	5156	EYE BOLT;WATER PIPE	000000	000000
1096751600	1-0967	5160	BOLT;EYE,OIL PIPE	000000	000000
1096751740	1-0967	5174	BOLT; EYE	000001	000006
1096751750	1-0967	5175	BOLT; EYE	000000	000000
1096751751	1-0967	5175	BOLT;EYE,AIR PIPE TO CMPR	000003	000000
1096751752	1-0967	5175	BOLT;EYE,AIR PIPE TO CMPR	000000	000001
1096751820	1-0967	5182	BOLT; GUIDE PIPE	000000	000002
1096751830	1-0967	5183	EYE BOLT;OIL PIPE	000024	000000
1096751840	1-0967	5184	BOLT; EYE	000000	000029
1096751930	1-0967	5193	BOLT; EYE,WATER PIPE,AIR	000000	000047
1096752050	1-0967	5205	BOLT; EYE,FLEX HOSE,P/S	000000	000007
1096752060	1-0967	5206	BOLT;EYE,FUEL	000000	000001
1096752160	1-0967	5216	BOLT; EYE,AIR PIPE TO CMP	000000	000000
1096752280	1-0967	5228	EYE BOLT; OIL PAN	000000	000005
1096752290	1-0967	5229	BOLT; EYE, TURBOCHAGER	000010	000014
1096752390	1-0967	5239	BOLT; JOINT,FUEL FILTER	000000	000023
1096800240	1-0968	0024	COCK ASM;WTR DR	000002	000010
1096800250	1-0968	0025	COCK; DRAIN,WATER	000000	000010
1096800260	1-0968	0026	COCK ASM; WATER DRAIN	000003	000000
1096800271	1-0968	0027	COCK; WATER DRAIN	000000	000000
1096800280	1-0968	0028	COCK;WATER DRAI	000000	000000
1096800320	1-0968	0032	COCK; WATER DRAIN	000000	000000
1096800460	1-0968	0046	COCK ASM; WATER E120	000011	000000
1096800531	1-0968	0053	COCK; DRAIN,WATER	000000	000010
1096800551	1-0968	0055	CONNECTOR; DRAIN	000000	000000
1096800630	1-0968	0063	COCK; DRAIN	000000	000000
1096801010	1-0968	0101	PLUG; OIL DRAIN	000000	000000
1096801040	1-0968	0104	PLUG; OIL DRAIN	000001	000002
1096801050	1-0968	0105	PLUG; OIL DRAIN	000000	000000
1096801051	1-0968	0105	PLUG; OIL DRAIN	000000	000000
1096801052	1-0968	0105	PLUG; OIL DRAIN	000000	000000
1096801060	1-0968	0106	PLUG; OIL DRAIN	000000	000270
1097000060	1-0970	0006	CLIP; BOOCON PIPE FIX.	000000	000000
1097000090	1-0970	0009	CLIP; WATER DRAIN PIPE	000000	000000
1097000270	1-0970	0027	CLIP; HOSE	000000	000000
1097000370	1-0970	0037	CLIP;CONT.CABLE	000000	000000
1097000371	1-0970	0037	CLIP;CONT.CABLE	000000	000026

1097000500	1-0970	0050	CLIP;AIR & FUEL	000000	000000
1097000501	1-0970	0050	CLIP;AIR & FUEL	000000	000000
1097000510	1-0970	0051	CLIP;AIR & FUEL	000000	000000
1097000790	1-0970	0079	CLIP;ECR AIR PI	000000	000000
1097000800	1-0970	0080	CLIP;ECR AIR PI	000000	000000
1097000940	1-0970	0094	CLIP; CABLE	000000	000000
1097000941	1-0970	0094	CLIP; CABLE	000000	000000
1097001090	1-0970	0109	CLIP;FRAME HARN	000000	000000
1097001091	1-0970	0109	CLIP; FRAME HAR	000000	000000
1097001100	1-0970	0110	CLIP	000000	000009
1097001120	1-0970	0112	CLIP;HARNNESS,ECGI	000000	000000
1097001121	1-0970	0112	CLIP; PARKING BRAKE CABLE	000000	000000
1097001130	1-0970	0113	CLIP; FLEX SHAF	000000	000000
1097001141	1-0970	0114	CLAMP;CONN.HOSE	000000	000000
1097001210	1-0970	0121	CLIP; BOOST PIPE FIX.	000001	000005
1097001440	1-0970	0144	CLIP; OIL PIPE	000000	000000
1097001450	1-0970	0145	CLIP; OIL PIPE	000000	000000
1097001600	1-0970	0160	CLIP; HERNESS FIX.	000000	000000
1097001630	1-0970	0163	CLIP; PIPE	000000	000023
1097001640	1-0970	0164	CLIP; PIPE	000000	000009
1097002100	1-0970	0210	CLIP; FLEX. FIX.	000000	000000
1097003040	1-0970	0304	CLIP;HARNNESS,THERMOMETER	000000	000008
1097003290	1-0970	0329	CLIP; HOSE, DCR	000000	000000
1097003291	1-0970	0329	CLIP; HOSE, DCR	000000	000019
1097003320	1-0970	0332	CLIP; FUEL PIPE 6RB1	000000	000000
1097003460	1-0970	0346	CLIP; DASH HARNNESS	000000	000000
1097003770	1-0970	0377	CLIP; OIL PIPE	000000	000000
1097003950	1-0970	0395	CLIP; GLOW	000000	000000
1097004040	1-0970	0404	CLIP; OIL PIPE	000000	000008
1097004050	1-0970	0405	CLIP; OIL PIPE	000000	000024
1097004150	1-0970	0415	CLIP;GLOW PLUG/HARNNESS	000001	000003
1097004180	1-0970	0418	CLIP; SW.	000000	000000
1097004181	1-0970	0418	CLIP; THERMOSTAT	000000	000024
1097004230	1-0970	0423	CLIP; HARNNESS	000000	000000
1097004310	1-0970	0431	CLIP;FUEL&AIR	000000	000000
1097004320	1-0970	0432	CLIP; HARNNESS,SPEED	000000	000000
1097004440	1-0970	0444	CLIP; OIL PIPE E120	000001	000000
1097004530	1-0970	0453	CLIP; MOTOR HAR	000000	000000
1097004680	1-0970	0468	CLIP; VINYL PIPE	000000	000000
1097004790	1-0790	0479	CLIP;ENG HARNE	000000	000016
1097004910	1-0970	0491	CLIP;PIPE,FUEL,(L=33)	000000	000000
1097004920	1-0970	0492	CLIP; FLEX. HOSE	000000	000000
1097004921	1-0970	0492	CLIP; FLEX. HOSE	000000	000000
1097005040	1-0970	0504	CLIP; AIR PIPE	000000	000003
1097005110	1-0970	0511	CLIP;BACK/HARNNESS,MAG VLV	000005	000162
1097005150	1-0970	0515	CLIP; WATER PIPE	000000	000000
1097005151	1-0970	0515	CLIP; WATER PIPE	000000	000067

1097005190	1-0970	0519	CLIP; ACCEL CONTROL CABLE	000000	000000
1097005231	1-0970	0523	CLIP; PIPE-A.C.G	000000	000000
1097005240	1-0970	0524	CLIP; FUEL PIPE	000000	000000
1097005241	1-0970	0524	CLIP; FUEL PIPE	000005	000000
1097005470	1-0970	0547	CLIP; AIR PIPE	000000	000007
1097005500	1-0970	0550	CLIP; AIR PIPE,	000000	000007
1097005512	1-0970	0551	CLIP; PIPE, INJ. PUMP BRKT.	000000	000000
1097005600	1-0970	0560	CLIP; ECR AIR PI	000000	000000
1097005610	1-0970	0561	CLIP; ECR AIR PI	000000	000000
1097005620	1-0970	0562	CLIP; PLUG HARNE	000000	000000
1097005621	1-0970	0562	CLIP; PLUG, HARN	000000	000000
1097005630	1-0970	0563	CLIP; FUEL PIPE	000023	000002
1097005720	1-0970	0572	CLIP; RUBBER HOSE	000000	000000
1097005790	1-0970	0579	CLIP; ENG. STOP	000000	000000
1097005830	1-0970	0583	CLIP; OIL PIPE E120	000000	000000
1097005860	1-0970	0586	CLIP; CONNECTOR, AIR	000000	000000
1097005880	1-0970	0588	CLIP; SHUTTER	000000	000000
1097005890	1-0970	0589	CLIP; SHUTTER	000000	000000
1097005900	1-0970	0590	CLIP*	000000	000000
1097005990	1-0970	0599	CLIP; CABLE	000000	000000
1097005991	1-0970	0599	CLIP; CABLE	000000	000000
1097006030	1-0970	0603	CLIP; OIL PIPE	000000	000013
1097006040	1-0970	0604	CLIP; PIPE	000000	000029
1097006060	1-0970	0606	CLIP; HOSE/VAC PIPE	000000	000000
1097006071	1-0970	0607	CLIP; ENG HARNESS	000000	000004
1097006081	1-0970	0608	CLIP; VINYL HOSE-CYL. BOD	000000	000000
1097006082	1-0970	0608	CLIP; VINYL HOSE-CYL. BOD	000000	000036
1097006200	1-0970	0620	CLIP; RAD, (RH) / FLEX HOSE	000000	000010
1097006340	1-0970	0634	CLIP; OIL PIPE 6RB1	000000	000003
1097006380	1-0970	0638	CLIP; ENG HARNESS	000000	000005
1097006490	1-0970	0649	CLIP; OIL PIPE	000000	000000
1097006730			CLIP; DASH HARN.	000000	000000
1097006731	1-0970	0673	CLIP; FRAME HARNESS	000000	000015
1097006840	1-0970	0684	CLIP; RUBBER HOSE	000000	000004
1097006952	1-0970	0695	CLIP; OIL PIPE	000000	000022
1097007041	1-0970	0704	CLIP; ENG HARNESS	000005	000000
1097007180	1-0970	0718	CLIP FLEX HOSE	000000	000000
1097007200	1-0970	0720	CLIP, FUEL PIPE	000001	000000
1097007300	1-0970	0730	CLIP; RUBBER HOSE, AIR	000000	000000
1097007360	1-0970	0736	CLIP; OIL PIPE, P.T.O.	000000	000000
1097007410	1-0970	0741	CLIP; FUEL PIPE	000000	000000
1097007420	1-0970	0742	CLIP; PIPE	000000	000000
1097007430	1-0970	0743	CLIP; CLU. HSG	000000	000000
1097007590	1-0970	0759	CLIP; PIPE FIXING	000017	000000
1097007600	1-0970	0760	CLIP; OIL PIPE	000007	000000
1097007660	1-0970	0766	CLIP; FRAME HARNESS (LH)	000000	000054
1097007661	1-0970	0766	CLIP; FRAME HARNESS	000000	000030

1097007700	1-0970	0770	CLIP;FUEL/OIL PIPE	000000	000010
1097007881	1-0970	0788	CLIP;HARNESSES FIX.	000001	000000
1097008090	1-0970	0809	CLIP; NYLON TUBE	000000	000000
1097008210	1-0970	0821	CLIP; ENGINE HARNESSES	000000	000000
1097008391	1-0970	0839	CLIP; OIL PIPE	000000	000000
1097008480	1-0970	0848	CLIP; FLEX HOSE	000000	000018
1097008590	1-0970	0859	CLIP CABLE TO F	000000	000028
1097008600	1-0970	0860	CLIP; FRAME HARNESSES	000000	000186
1097008610	1-0970	0861	CLIP; RELAY BOX	000000	000059
1097008620	1-0970	0862	CLIP; NYLON TUB	000000	000043
1097008630	1-0970	0863	CLIP;FRAME,HARN	000000	000030
1097008680	1-0970	0868	CLIP,THROTTLE CABLE	000000	000014
1097008750	1-0970	0875	CLIP;BATTERY/FLEX HOSE	000000	000000
1097008760	1-0970	0876	CLIP;CABLE	000000	000000
1097008820	1-0970	0882	CLIP; OIL PIPE FIX.,W/NUT	000000	000000
1097008950	1-0970	0895	CLIP: PIPE FIX (LH)	000000	000000
1097009090	1-0970	0909	CLIP; HOSE	000000	000029
1097009160	1-0970	0916	CLIP; PIPE FIX	000007	000000
1097009440	1-0970	0944	CLIP; BATTERY	000000	000021
1097009450	1-0970	0945	CLIP; NYLON TUB	000000	000022
1097009470	1-0970	0947	CLIP; NYLON TUBE	000000	000003
1097009480	1-0970	0948	CLIP; NYLON TUBE	000000	000006
1097009550	1-0970	0955	CLIP;OIL PIPE,INJ PUMP	000000	000000
1097009600	1-0970	0960	CLIP; OIL PIPE	000000	000015
1097009690	1-0970	0969	CLIP; HARNESSES,LH	000000	000004
1097009910			CLIP; NYLON	000000	000000
1097009911	1-0970	0991	CLIP; NYLON TUBE,LH	000000	000023
1097009940	1-0970	0994	CLIP; NYLON TUBE	000000	000006
1097009950			CLIP; FRAME HARNESSES	000000	000000
1097009951	1-0970	0995	CLIP; FRAME HARNESSES	000000	000014
1097010011	1-0970	1001	CLIP; HARNESSES	000017	000000
1097010030	1-0970	1003	CLIP CABLE	000000	000000
1097010031	1-0970	1003	CLIP CABLE	000000	000024
1097010120	1-0970	1012	CLIP HAND BRAKE	000000	000032
1097010130	1-0970	1013	CLIP; FRT CABLE	000000	000060
1097010140	1-0970	1014	CLIP;CABLE TO FRAME	000000	000000
1097010180	1-0970	1018	CLIP; HOSE	000000	000000
1097010411	1-0970	1041	CLIP; HOSE	000000	000017
1097010470	1-0970	1047	CLIP;RUBBER HOSE,AIR BREA	000000	000002
1097010551	1-0970	1055	CLIP; NYLON TUBE	000000	000040
1097010640	1-0970	1064	CLIP;FRAME,HARN	000000	000003
1097010641	1-0970	1064	CLIP;FRAME,HARN	000000	000001
1097010650	1-0970	1065	CLIP;OIL PRESSURE SWITCH	000000	000000
1097010761	1-0970	1076	CLIP; FRAME HARNESSES	000000	000000
1097010880	1-0970	1088	CLIP; HARNESSES, G/C COVER	000000	000000
1097010910	1-0970	1091	CLIP; OVERFLOW LEAK OFF	000006	000045
1097011071	1-0970	1107	CLIP; FLEX HOSE	000000	000000

1097011320	1-0970	1132	CLIP; INJ PIPE	000000	000000
1097011321	1-0970	1132	CLIP; INJ PIPE	000000	000230
1097011380	1-0970	1138	CLIP;FLEX HOSE,SHIFT BLCK	000000	000006
1097011381	1-0970	1138	CLIP;FLEX HOSE,SHIFT BLCK	000000	000000
1097011721			CLIP; FUEL PIPE	000000	000000
1097011722	1-0970	1172	CLIP; FUEL PIPE	000000	000000
1097011723	1-0970	1172	CLIP; FUEL PIPE	000000	000055
1097011730			CLIP; INJ PIPE	000000	000000
1097011731	1-0970	1173	CLIP; INJ PIPE	000000	000000
1097011732	1-0970	1173	CLIP; INJ PIPE	000000	000512
1097011800	1-0970	1180	CLIP; FUEL PIPE	000000	000095
1097011931	1-0970	1193	CLIP; OIL PIPE	000000	000038
1097011941	1-0970	1194	CLIP; OIL PIPE	000000	000039
1097012122	1-0970	1212	CLIP;OIL PIPE	000000	000000
1097012301	1-0970	1230	CLIP; RUBBER HOSE	000000	000008
1097012311	1-0970	1231	CLIP; RUBBER HOSE	000000	000005
1097012400	1-0970	1240	CLIP; AIR PIPE	000000	000092
1097012420	1-0970	1242	CLIP;OIL PIPE	000000	000000
1097012651	1-0970	1265	CLIP; OIL PIPE	000000	000017
1097012660	1-0970	1266	CLIP; HARNESS	000023	000047
1097012690	1-0970	1269	CLIP; INJ PIPE	000000	000022
1097012820	1-0970	1282	CLIP; FUEL PIPE	000000	000028
1097012840	1-0970	1284	CLIP; PIPE	000000	000040
1097040050	1-0970	4005	CLAMP;DUCT IN	000000	000000
1097040121	1-0970	4012	CLIP,WIRE,RUBBE	000000	000000
1097040181	1-0970	4018	CLAMP; VINYL HOSE	000000	000000
1097040320	1-0970	4032	CLIP; RUBBER HOSE D=22	000000	000000
1097040340	1-0970	4034	CLIP;CONN.HOSE,INL & TURB	000000	000000
1097040350	1-0970	4035	CLIP; RUBBER HOSE	000000	000000
1097040360	1-0970	4036	CLIP; BAND 3KC/3KR PU	000002	000000
1097040370			CLIP RUBBER HOS	000000	000021
1097040420	1-0970	4042	LAMP; DUCT IN	000000	000003
1097040460	1-0970	4046	CLIP;HOSE,A/CL	000000	000000
1097040480	1-0970	4048	CLIP; HOSE CONN	000000	000000
1097040560	1-0970	4056	CLIP,HOSE CONN	000000	000000
1097040570	1-0970	4057	CLIP; ENGINE SIDE TOP	000000	000147
1097040640	1-0970	4064	CLIP; RUBBER 6BG1	000000	000000
1097040650	1-0970	4065	CLIP; HOSE	000000	000000
1097040660	1-0970	4066	CLIP;BAND,HOSE	000000	000015
1097040670	1-0970	4067	CLIP; HOSE CONN	000000	000000
1097040680	1-0970	4068	CLIP,HOSE CONN	000000	000000
1097040710	1-0970	4071	CLIP;BAND HOSE	000002	000007
1097040730	1-0970	4073	CLIP; RUBBER HOSE BREATHE	000000	000000
1097040740	1-0970	4074	CLIP;HOSE	000000	000010
1097040760	1-0970	4076	CLAMP; RAD. HOSE	000000	000000
1097040770	1-0970	4077	CLIP;WATER HOSE, RAD	000000	000038
1097040780	1-0970	4078	CLIP; WATER HOS	000000	000000

1097040850	1-0970	4085	CLIP; HOSE	000000	000000
1097040940	1-0970	4094	CLIP; HOSE	000000	000000
1097041000	1-0970	4100	CLIP; HOSE,DRAIN	000000	000000
1097041010	1-0970	4101	CLIP,HOSE CONN	000000	000046
1097041020	1-0970	4102	CLIP;RUBBER HOSE	000000	000025
1097041060	1-0970	4106	CLIP; HOSE CONN.	000000	000092
1097070111	1-0970	7011	CLIP;RUBBER HOS	000000	000000
1097070150	1-0970	7015	CLIP;HOSE,A/CL	000000	000000
1097070460	1-0970	7046	CLIP; RUBBER 6BG1	000000	000000
1097070841	1-0970	7084	CLIP;BAND	000002	000128
1097070870	1-0970	7087	CLIP; BREATHER HOSE	000000	000026
1097070910	1-0970	7091	CLIP; INLET HOSE	000000	000000
1097071070	1-0970	7107	CLIP; BAND	000000	000000
1097071071	1-0970	7107	CLIP; BAND	000000	000077
1097071080	1-0970	7108	C L I P	000000	000000
1097071130	1-0970	7113	CLIP;GASKET,AIR	000000	000003
1097071140	1-0970	7114	CLIP;RUBR HSE,AIR DUCT EN	000000	000039
1097071240	1-0970	7124	CLIP; AIR BREATHER	000000	000035
1097071300	1-0970	7130	CLIP; RUBBER HOSE D=22	000000	000000
1097071310	1-0970	7131	CLIP; RUBBER HOSE D=22	000000	000000
1097071320	1-0970	7132	CLIP;OIL FILLER	000000	000000
1097071330	1-0970	7133	CLIP;OIL FILLER	000000	000024
1097071340	1-0970	7134	CLIP;WATER HOSE	000000	000000
1097071350	1-0970	7135	CLIP;RUBBER HOS	000000	000000
1097071360	1-0970	7136	CLIP; HOSE,TURBOCHARGER	000029	000012
1097071380	1-0970	7138	CLIP; HOSE TURBO	000000	000000
1097071390	1-0970	7139	CLIP;HOSE,TURBOCHARGER,IN	000000	000027
109707141F			CLIP; HOSE FIX	000000	000000
1097071410	1-0970	7141	CLIP; HOSE FIX	000188	000000
1097071440	1-0970	7144	CLIP; HOSE TURBO	000000	000128
1097071500	1-0970	7150	CLIP; HOSE, AIR CMPR	000000	000000
1097071570	1-0970	7157	CLIP;HOSE,A/CL	000000	000005
1097071580	1-0970	7158	CLIP;HOSE,GUIDE,{ID=17.0}	000002	000000
1097071900	1-0970	7190	CLIP; BAND	000010	000025
1097071980	1-0970	7198	CLIP; AIR DUCT	000000	000000
1097072000	1-0970	7200	CLIP; AIR DUCT	000006	000014
1097072030	1-0970	7203	CLIP;HOSE TURBOCHRG OUTLT	000000	000000
1097090350	1-0970	9035	CLAMP; CABLE	000000	000000
1097090940	1-0970	9094	U-BAND; TURBO DUCT	000000	000000
1097090941	1-0970	9094	U-BAND; TURBO DUCT	000000	000000
1097091040	1-0970	9104	CLIP*	000000	000000
1097091410	1-0970	9141	CLAMP; ENGINE CONTROL CAB	000000	000000
1097091560	1-0970	9156	CLIP*	000000	000000
1097091780	1-0970	9178	CLIP; HARNESS	000000	000020
1097091820	1-0970	9182	CLIP; HOSE	000000	000000
1097093000	1-0970	9300	BRACKET; ENG CONT	000000	000001
1097141010	1-0971	4101	CLIP;RUBBER	000000	000000

1097320110	1-0973	2011	RIVET	000000	000000
1097350160	1-0973	5016	KEY COUPLING SE	000000	000000
1097350210	1-0973	5021	KEY;FEATHER,2ND COUNTER	000000	000013
1097350410	1-0973	5041	KEY	000000	000092
1097400060	1-0974	0006	PIN**	000000	000000
1097400080	1-0974	0008	PIN;SPR,SHAFT	000000	000016
1097400310	1-0974	0031	PIN; CRANK CASE	000001	000010
1097400320	1-0974	0032	PIN;THRUST WASHER	000000	000078
1097400360	1-0974	0036	PIN; FLYWHEEL HSG	000000	000000
1097400370	1-0974	0037	PIN**	000000	000000
1097400681	1-0974	0068	PIN;CRANKCASE	000000	000004
1097400780	1-0974	0078	PIN;TIMING GEAR CASE	000000	000225
1097440700	1-0974	4070	PIN	000000	000017
1097440730	1-0974	4073	PIN ;	000000	000000
1097440901	1-0974	4090	PIN ADJ CAB STA	000000	000005
1097460150	1-0974	6015	PLATE;LOCK	000000	000000
1097470020	1-0974	7002	PIN,SPLIT,THROT	000000	000361
1097470030	1-0974	7003	PIN;CONT BOX	000016	000429
1097470040	1-0974	7004	PIN;CONT BOX	000000	000000
1097470050	1-0974	7005	RING/PIN;SNAP,SHIFT FORK	000000	000000
1097470070	1-0974	7007	PIN; SNAP, SPR. EYE	000000	000000
1097480090	1-0974	8009	PIN;ROLL	000000	000000
1097490251	1-0974	9025	PIN; THRUST BRG	000037	000000
1097550890	1-0975	5089	BRACKET; SEDIMENTER	000000	000000
1097600020	1-0976	0002	JOINT ASM; BALL	000000	000000
1097600030	1-0976	0003	JOINT ASM; BALL	000000	000000
1097600040	1-0976	0004	BALL JOINT ASM	000002	000002
1097600300	1-0976	0030	JOINT; BALL	000000	000000
1097600520			JOINT;BALL,RH S	000000	000000
1097600530			JOINT;BALL,RH S	000000	000000
1097600630	1-0976	0063	JOINT ASM; BALL	000000	000000
1097600640	1-0976	0064	JOINT ASM;	000000	000000
1097600780			JOINT ASM; BALL	000000	000000
1097600850			JOINT; BALL	000000	000001
1097600860			JOINT BALL; (LH)	000000	000002
1097600890	1-0976	0089	JOINT ASM; BALL	000000	000000
1097600950	1-0976	0095	JOINT ASM; BALL	000000	000000
1097600960	1-0976	0096	JOINT ASM	000000	000000
1097601010	1-0976	0101	JOINT ASM; BALL	000001	000005
1097601020	1-0976	0102	JOINT ASM; BALL	000000	000005
1097601181	1-0976	0118	ROD END; SCREW	000022	000016
1097601190	1-0976	0119	JOINT ASM.; BAL	000000	000000
1097601191	1-0976	0119	JOINT ASM.; BAL	000000	000024
1097650490	1-0976	5049	LINK ASSY,E/CON	000000	000000
1097651410	1-0976	5141	ROD;ENG STOP	000000	000000
1097651770	1-0976	5177	ROD;LINK,CLUTCH	000000	000000
1097680540			JOINT;JAW,CONT.	000000	000000

1097680550	1-0976	8055	JOINT; JAW, CONT.	000000	000000
1098000120	1-0980	0012	BEARING; WATER	000000	000000
1098000150	1-0980	0015	BEARING; BALL	000000	000000
1098000160	1-0980	0016	BEARING; RADIAL	000002	000000
1098000250	1-0980	0025	BEARING	000000	000000
1098000280	1-0980	0028	BEARING; ELBOW DRIVE	000000	000000
1098000380	1-0980	0038	BRG; PULLEY	000000	000026
1098000430	1-0980	0043	BEARING; BALL E120	000006	000000
1098000460	1-0980	0046	BEARING; WATER PUMP	000000	000000
1098000520	1-0980	0052	BEARING; BALL, SPINDLE	000008	000000
1098000550	1-0980	0055	BEARING; BALL	000000	000003
1098000590	1-0980	0059	BEARING; BALL	000004	000000
1098000610	1-0980	0061	BEARING; BALL, PULLEY E12	000000	000002
1098000640	1-0980	0064	BEARING; FLYWHEEL PTO	000000	000000
1098000860	1-0980	0086	BEARING FRT; ARMATURE	000000	000000
1098000871	1-0980	0087	BEARING; TOP GEAR SHAFT	000000	000000
1098001170			BEARING; BALL E120	000001	000009
1098001180	1-0980	0118	BEARING; BALL	000001	000009
1098001400	1-0980	0140	BEARING ASM; CENTER	000000	000000
1098001450	1-0980	0145	BALL BRG; PILOT	000000	000000
1098001460			BEARING; PILOT, FLYWH	000000	000000
1098001540			BEARING; CRANKSHAFT	000000	000002
1098001550	1-0980	0155	BEARING; WATER PUMP, FRT	000000	000000
1098001560	1-0980	0156	BEARING, PILOT, F	000000	000000
1098001700	1-0980	0170	BEARING; BALL FRONT	000000	000025
1098001760	1-0980	0176	BEARING; BALL, SEA WATER	000001	000001
1098001770	1-0980	0177	BEARING; BALL, SHAFT	000000	000000
1098001880	1-0980	0188	BEARING; BALL	000000	000001
1098001950	1-0980	0195	BALL BRG; PILOT	000000	000000
1098001960	1-0980	0196	BEARING; BALL, R.R., W/P	000000	000001
1098001990	1-0980	0199	BEARING BALL	000000	000000
1098002000			BEARING; PILOT, FLYWH	000000	000000
1098002050	1-0980	0205	BEARING; WATER PUMP	000000	000007
1098002060	1-0980	0206	BEARING; WATER PUMP, FRT	000000	000008
1098002070	1-0980	0207	BEARING; WATER PUMP, FRT	000001	000601
1098002110	1-0980	0211	BEARING; AIR COMPSR.	000003	000000
1098002140	1-0980	0214	BEARING; PILOT	000000	000000
1098002230	1-0980	0223	BEARING: BALL	000001	000000
1098002320	1-0980	0232	BEARING; AIR CM	000000	000009
1098002430	1-0980	0243	BRG BALL PULLEY	000000	000000
1098002460	1-0980	0246	BEARING; COUPLING	000000	000002
1098002520	1-0980	0252	BEARING; WATER PUMP	000001	000001
1098002530	1-0980	0253	BEARING; WATER PUMP	000001	000001
1098002570	1-0980	0257	BEARING; BALL PILOT	000002	000000
1098002620	1-0980	0262	BEARING; BALL	000000	000035
1098002640	1-0980	0264	BEARING; BALL, PULLEY	000000	000037
1098002650	1-0980	0265	BEARING; BALL, PULLEY	000000	000020

1098002790	1-0980	0279	BEARING;WATER PUMP,FRT	000000	000004
1098002860	1-0980	0286	BEARING ASM; CENTER	000000	000000
1098002900	1-0980	0290	BEARING; SEA WATER PUMP	000000	000002
1098002920	1-0980	0292	BEARING; BALL, FAN PULEY	000057	000000
1098002930	1-0980	0293	BEARING; BALL, FAN PULEY	000000	000023
1098002940	1-0980	0294	BEARING; BALL, FAN PULEY	000000	000085
1098002950	1-0980	0295	BEARING; BALL, FAN PULEY	000000	000009
1098002990			BEARING; WATER	000000	000001
1098003020	1-0980	0302	BEARING; WATER PUMP	000000	000000
1098003030	1-0980	0303	BEARING; WATER PUMP	000000	000012
1098003040	1-0980	0304	BEARING;PILOT, TOP GEAR SH	000000	000000
1098003070	1-0980	0307	PUMP BEARING	000000	000005
1098003090	1-0980	0309	BEARING; IDLE PULLEY	000000	000024
1098010010	1-0980	1001	BEARING; BALL	000000	000000
1098100030	1-0981	0003	BEARING	000000	000000
1098100491			BEARING; TOP GEAR SHFT.	000000	000000
1098100502			BEARING;TOP GEAR SHFT.	000000	000001
1098100550	1-0981	0055	BEARING;ROLLER	000000	000000
1098100560	1-0981	0056	BEARING; COUNTER, RR.	000001	000000
1098100731	1-0981	0073	BRG;PINION,PLT	000000	000000
1098100732	1-0981	0073	BRG;PINION,PLT	000000	000001
1098100741			BRG;PINION,PILO	000000	000000
1098100870			BEARING;BALL I	000000	000000
1098101520	1-0981	0152	BEARING	000000	000000
1098101620			BEARING; TOP GEAR SHFT	000000	000006
1098101780			PILOT BRG.	000000	000000
1098101850			BEARING; TOP GEAR SHAFT	000000	000000
1098101960			BEARING; PINION	000000	000001
1098102010	1-0981	0201	BRNG:ROLLER,SEA WTR PMP	000001	000001
1098102510	1-0981	0251	BEARING; SEA WATER PUMP	000000	000001
1098102520	1-0981	0252	BEARING; BALL	000000	000001
1098110021	1-0981	1002	BEARING;NEEDLE,CLU HSG	000047	000009
1098110030	1-0981	1003	BEARING NEEDLE	000000	000000
1098110160	1-0981	1016	BEARING;NEEDLE, IDLER	000000	000000
1098110170	1-0981	1017	BEARING; NEEDLE, IDLER	000002	000002
1098110190	1-0981	1019	BEARING;NEEDLE,1ST,REV	000000	000000
1098110200	1-0981	1020	BEARING; NEEDLE	000000	000004
1098110281	1-0981	1028	BEARING; NEEDLE,LOW GEAR	000000	000000
1098110290	1-0981	1029	BEARING; NEEDLE LOW GEAR	000000	000000
1098110300	1-0981	1030	BEARING; NEEDLE	000000	000000
1098110331			BEARING	000000	000000
1098110540			BEARING	000000	000000
1098111980	1-0981	1198	BEARING;NEEDLE,3RD GEAR	000000	000001
1098112770			BEARING;NEEDLE 2ND & 3RD	000000	000000
1098112790			BEARING; NEEDLE,2ND/3RD	000000	000002
1098120070	1-0981	2007	BEARING; FINAL PINION	000000	000001
1098120090			BEARING; TAPER R	000000	000000

1098120200		BRG;FINAL PINION	000000	000000
1098120260		BEARING; FINAL PINION	000000	000000
1098120270	1-0981 2027	BRG;FINAL PINION	000000	000000
1098120310	1-0981 2031	BEARING; TAPER ROLLER	000000	000000
1098120380		BEARING; ROLLER	000000	000000
1098120412		BEARING; FINAL PINION	000000	000000
1098120420		BRG;PINION, INNER	000000	000000
1098120421		BEARING;PINION, INNER	000013	000006
1098120750	1-0981 2075	BEARING	000002	000000
1098120970		BEARING;HUB OU	000000	000004
1098121240		BEARING	000000	000000
1098200080	1-0982 0008	BEARING;CLU.R	000000	000000
1098200170	1-0982 0017	RACE;THRUST	000000	000000
1098200340	1-0982 0034	BEARING;TAPER ROLLER	000000	000000
1098200350	1-0982 0035	BEARING;TAPER ROLLER	000000	000000
1098200360	1-0982 0036	BEARING;TAPER ROLLER	000000	000000
1098200500	1-0982 0050	TAPER BEARING	000000	000000
1098200510	1-0982 0051	BEARING; TAPER	000000	000000
1098200720	1-0982 0072	BEARING;TAPER ROLLER	000000	000000
1098200730	1-0982 0073	BEARING;TAPER ROLLER	000000	000000
1098200780	1-0982 0078	BEARING; CLU RELEASE	000000	000000
1098200880	1-0982 0088	BEARING: TAPR ROLLER	000000	000000
1098200910	1-0982 0091	BEARING: TAPER ROLLER	000000	000000
1098201140	1-0982 0114	BEARING; CLU RELEASE	000008	000099
1098201150	1-0982 0115	BEARING;CLU RELEASE	000000	000000
1098290110	1-0982 9011	BEARING; BALL REAR	000000	000000
1098290120	1-0982 9012	BEARING; BALL, FRONT	000000	000000
1098290340	1-0982 9034	NEEDLE;THRUST	000000	000000
1098400031	1-0984 0003	NUT; CONN ROD	000000	000013
1098410020	1-0984 1002	BEARING;THRUST	000000	000000
1098410030	1-0984 1003	WASHER LK FRT HUB	000000	000016
1098430100	1-0984 3010	BEARING;BALL	000000	000000
1099800090	1-0998 0009	BOLT; SEMS, SUP	000005	000017
1099802560		BOLT; BRKT, FLEX HOSE	000000	000000
1099802820	1-0998 0282	BOLT:SET	000000	000000
1099802880	1-0998 0288	BOLT;MUD GUARD	000000	000000
1099804190	1-0998 0419	SCREW;BRKT OUTSIDE MIRROR	000003	000016
1099804240		BOLT; STAY TO BRKT	000167	000000
1099804490	1-0998 0449	BOLT; BRKT,AIR	000000	000000
1099804920	1-0998 0492	BOLT; MUD COVER	000102	000525
1099804930	1-0998 0493	BOLT;CBLE BKT/FACIA HRNSS	000000	000000
1099805070	1-0998 0507	BOLT;	000000	000000
1099805210	1-0998 0521	BOLT;AIR INTAKE	000000	000000
1099805300	1-0998 0530	BOLT;POWER CYL BKT CAB TI	000000	000056
1099805430	1-0998 0543	BOLT; 1ST STEP	000000	000000
1099805470	1-0998 0547	BOLT;CAB MOUNT	000000	000000
1099805480	1-0998 0548	BOLT BRKT	000000	000004

1099805550	1-0998	0555	BOLT;ENG CONT	000000	000010
1099810050			SCREW	000000	000000
1099810200			SCREW;DR STRIKE	000000	000000
1099814440			SCREW; OUTSIDE	000000	000002
1099814470	1-0998	1447	SCREW;DOOR LK	000000	000000
1099814471	1-0998	1447	SCREW;DOOR LK	000000	000535
1099814530	1-0998	1453	SCREW; DOOR ORNAMENT,LH	000000	000123
1099815110	1-0998	1511	SCREW;VENTILAT	000335	000000
1099840690			NUT;SELF LK.	000000	000000
1099841050	1-0998	4105	NUT; MIRROR	000000	000000
1099841090	1-0998	4109	NUT; CAP,RECLINING	000000	000000
1099841200	1-0998	4120	NUT; STAY	000000	000000
1099841220	1-0998	4122	NUT; CAB ROD	000000	000000
1099841240	1-0998	4124	NUT; POINTER	000000	000000
1099841260	1-0998	4126	NUT; CAP,MIRROR STAY,RH	000011	000015
1099841490	1-0998	4149	NUT; HOOD, ROOF	000000	000000
1099851070	1-0998	5107	WASHER PL CONN	000000	000000
1099851080	1-0998	5108	WASHER; PL,SAFETY LK	000000	000000
1099851600	1-0998	5160	WASHER; PL,STAY	000000	000000
1099851610	1-0998	5161	WASHER; MIRROR	000000	000000
1099851700			WASHER; PL	000000	000000
1099851720	1-0998	5172	WASHER; STAY	000000	000000
1099851740			WASHER; PL,CAB STAY, RH	000000	000000
1099851770	1-0998	5177	WASHER; LOCK	000016	001389
1099851790	1-0998	5179	WASHER; LK., PED	000013	000179
1099851800	1-0998	5180	WASHER; LK	000005	000008
1099851850	1-0998	5185	WASHER LK CAB	000002	000709
1099851870	1-0998	5187	WASHER; PL WINDOW REG	000000	000000
1099851890	1-0998	5189	WASHER; LK,PWR CYL BRKT	000211	000467
1099853450	1-0998	5345	WASHER;LK	000009	000254
1099871410	1-0998	7141	PIN; SNAP,CAB LOCK ROD	000000	000083
1099871760	1-0998	7176	CLIP; FILTER HOSE	000000	000000
1111100270	1-1111	0027	CYLINDER HEAD	000000	000001
1111100290	1-1111	0029	HEAD ADM; CYL	000000	000000
1111100310	1-1111	0031	HEAD ASM;CYL	000000	000000
1111100850	1-1111	0085	HEAD ASM; CYL	000000	000000
1111100860	1-1111	0086	CYL HEAD DA220	000000	000000
1111101990	1-1111	0199	HEAD ASM; CYL 8MA1	000000	000000
1111102650	1-1111	0265	CYL HEAD ASM	000000	000000
1111103220			CYL HEAD ASSY	000000	000000
1111103221	1-1111	0322	HEAD ASM;CYL RH	000000	000000
1111103410	1-1111	0341	HEAD ASM; CYL	000000	000000
1111103420	1-1111	0342	HEAD ASM; CYL	000000	000000
1111103452	1-1111	0345	HEAD ASM;CYL.	000000	000000
1111103602	1-1111	0360	HEAD ASM; CYL E120	000000	000000
1111104200	1-1111	0420	CYL HEAD ASM; D500	000000	000000
1111104320	1-1111	0432	CYLINDER HEAD ASM	000000	000000

1111104620	1-1111	0462	HEAD ASM;CYL.	000000	000000
1111104870	1-1111	0487	HEAD ASM	000000	000000
1111104910	1-1111	0491	HEAD ASM; CYL.	000000	000000
1111104911	1-1111	0491	HEAD ASM; CYL.	000000	000000
1111104931	1-1111	0493	CYL HEAD (RH)	000000	000000
1111104941	1-1111	0494	CYL HEAD (LH)	000000	000000
1111105090	1-1111	0509	HEAD ASM;CYL	000000	000000
1111105092	1-1111	0509	HEAD ASM; CYL	000000	000000
1111105260			HEAD ASM;CYL.	000000	000000
1111105261	1-1111	0526	HEAD ASM;CYL.	000000	000000
1111105271	1-1111	0527	HEAD ASM;CYL	000000	000000
1111105403	1-1111	0540	HEAD ASM; CYL	000000	000003
1111105732	1-1111	0573	HEAD ASM; CYL 6BG1	000000	000002
1111105733	1-1111	0573	HEAD ASM; CYL 6BG1	000000	000000
1111105760	1-1111	0576	HEAD ASM; CYL	000000	000000
1111105771	1-1111	0577	HEAD ASM;	000000	000000
1111105950	1-1111	0595	HEAD ASM.; CYL.	000000	000000
1111105970	1-1111	0597	HEAD ASM; CYL.	000000	000000
1111105971	1-1111	0597	HEAD ASM; CYL.	000000	000000
1111106001	1-1111	0600	HEAD ASM; CYL 6BG1	000000	000000
1111106002	1-1111	0600	HEAD ASM; CYL 6BG1	000000	000001
1111106003	1-1111	0600	HEAD ASM; CYL 6BG1	000000	000000
1111106011	1-1111	0601	HEAD ASM;CYL	000000	000000
1111106141	1-1111	0614	HEAD ASM.;CYL	000000	000000
1111106142	1-1111	0614	HEAD ASM.;CYL	000000	000000
1111106143	1-1111	0614	HEAD ASM.;CYL	000000	000000
1111106411	1-1111	0641	HEAD ASM;	000000	000000
1111106414	1-1111	0641	HEAD ASM;	000000	000000
1111106481	1-1111	0648	SUPERSEDED**HEAD ASM.	000000	000000
1111106502	1-1111	0650	HEAD ASM; CYL	000000	000000
1111106640	1-1111	0664	HEAD ASM;	000000	000000
1111106760	1-1111	0676	HEAD ASM; CYL	000000	000000
1111106761	1-1111	0676	HEAD ASM; CYL	000000	000000
1111106762	1-1111	0676	HEAD ASM; CYL	000000	000002
1111106940	1-1111	0694	HEAD ASM CYL	000000	000000
1111106941	1-1111	0694	HEAD ASM CYL	000001	000000
1111106990	1-1111	0699	HEAD ASM; CYL.	000000	000000
1111107040	1-1111	0704	HEAD ASM;	000000	000000
1111107041	1-1111	0704	HEAD ASM;	000000	000000
1111107043			HEAD ASM;	000000	000002
1111107190			CYL HEAD ASM	000000	000000
1111107191	1-1111	0719	CYL HEAD ASM	000000	000000
1111107192	1-1111	0719	CYL HEAD ASM	000000	000000
1111107460	1-1111	0746	HEAD ASM; CYL.	000000	000002
1111107540	1-1111	0754	HEAD ASM; CYL.	000000	000000
1111107541	1-1111	0754	HEAD ASM; CYL.	000000	000000
1111108420	1-1111	0842	HEAD ASM; CYL.	000000	000000

1111108422	1-1111	0842	HEAD ASM; CYL.	000000	000001
1111108460	1-1111	0846	HEAD ASM; CYL.	000000	000000
1111108461	1-1111	0846	HEAD ASM; CYL.	000000	000000
1111108462	1-1111	0846	HEAD ASM; CYL.	000000	000000
1111108463	1-1111	0846	HEAD ASM; CYL.	000000	000005
1111108618	1-1111	0861	HEAD ASM;CYL	000000	000000
1111108619	1-1111	0861	HEAD ASM;CYL	000000	000000
1111108670	1-1111	0867	HEAD ASM; CYL	000000	000008
1111108671	1-1111	0867	HEAD ASM; CYL	000000	000000
1111108772	1-1111	0877	HEAD	000000	000001
1111109060	1-1111	0906	HEAD ASM; CYL	000000	000000
1111109184	1-1111	0918	HEAD ASM; CYL	000000	000001
1111109301	1-1111	0930	HEAD ASM;CYL	000000	000000
1111109380	1-1111	0938	HEAD ASM; CYL	000000	000001
1111109392	1-1111	0939	HEAD ASM; CYL	000000	000001
1111109393	1-1111	0939	HEAD ASM; CYL	000000	000000
1111109395	1-1111	0939	HEAD ASM; CYL	000000	000003
1111109411	1-1111	0941	HEAD ASM; CYL	000000	000000
1111109412	1-1111	0941	HEAD ASM; CYL	000000	000000
1111109413	1-1111	0941	HEAD ASM; CYL	000000	000000
1111109414	1-1111	0941	HEAD ASM; CYL	000000	000004
1111109461	1-1111	0946	HEAD ASM; CYL	000000	000000
1111109462	1-1111	0946	HEAD ASM; CYL	000000	000000
1111109463	1-1111	0946	HEAD ASM; CYL	000000	000000
1111109464	1-1111	0946	HEAD ASM; CYL	000000	000002
111111111B			TEST PLANNING	000000	000000
111111111M			TEST PLANNING	000000	000000
11111111111	11111111111		TEST ONLY TEST ONLY TEST	000007	000001
1111112750	1-1111	1275	GUIDE; BRIDGE	000000	000000
1111190030	1-1111	9003	COVER; WATER JACKET	000000	000000
1111190120	1-1111	9012	SEAT; VALVE	000000	000000
1111190121	1-1111	9012	SEAT; VALVE	000011	000000
1111190180	1-1111	9018	PLUG; GLOW	000001	000000
1111290180	1-1112	9018	COVER; INJ. PUMP COUPLING	000014	000000
1111290190	1-1112	9019	SLEEVE; NOZZLE HOLDER 12P	000000	000000
1111290220	1-1112	9022	CUP; SEALING	000002	000000
1111290230	1-1112	9023	CUP; SEALING	000024	000000
1111290250	1-1112	9025	SLEEVE; NOZZLE HOLDER E12	000000	000005
1111290330	1-1112	9033	SLEEVE; NOZZLE	000000	000000
1111290580	1-1112	9058	SLEEVE;NOZZLE HOLDER	000000	000000
1111290640	1-1112	9064	SLEEVE; NOZZLE HOLDER	000000	000000
1111290641	1-1112	9064	SLEEVE; NOZZLE HOLDER	000000	000016
1111290670	1-1112	9067	SLEEVE; NOZZLE HOLDER	000000	000004
1111290680	1-1112	9068	SLEEVE;NOZZLE	000000	000019
1111410020	1-1114	1002	GASKET; CYL HEAD DA220	000000	000002
1111410310	1-1114	1031	GASKET; CYL HEAD	000000	000000
1111410450	1-1114	1045	GASKET; CYL HEAD	000000	000000

1111410830	1-1114	1083	HEAD GASKET	000000	000000
1111410831	1-1114	1083	HEAD GASKET	000004	000000
1111410870	1-1114	1087	GASKET; CYL HEAD	000000	000000
1111410902	1-1114	1090	GASKET; HEAD	000000	000000
1111411002	1-1114	1100	GASKET; CYL HEAD	000000	000000
1111411150	1-1114	1115	GASKET; CYL HEAD E120	000000	000000
1111411191	1-1114	1119	GASKET; CYL HEAD	000000	000000
1111411250	1-1114	1125	GASKET; CYL HEAD	000000	000000
1111411392	1-1114	1139	GASKET; CYL HEAD	000000	000004
1111411402	1-1114	1140	GASKET; CYL HEA	000000	000003
1111411420	1-1114	1142	GASKET; CYL. HEAD	000000	000022
1111411550	1-1114	1155	GASKET; CYL HEAD	000000	000000
1111411610	1-1114	1161	GASKET; CYL HEAD	000000	000000
1111411690	1-1114	1169	CYL GASKET	000000	000000
1111411700	1-1114	1170	HEAD GASKET	000000	000000
1111411701	1-1114	1170	GASKET CYL HD	000000	000000
1111411710	1-1114	1171	GASKET;CYL HD	000000	000000
1111411822	1-1114	1182	GASKET;CYLINDER HEAD	000000	000000
1111411880			GASKET; CYL HEAD	000000	000000
1111411950	1-1114	1195	GASKET;CYL HEAD	000000	000000
1111411951	1-1114	1195	GASKET;CYL HEAD	000009	000024
1111411960	1-1114	1196	GASKET; CYL HEAD	000000	000000
1111411961	1-1114	1196	GASKET; CYL HEAD	000069	000211
1111412162	1-1114	1216	GASKET;CYLINDER HEAD	000000	000000
1111412163	1-1114	1216	GASKET;CYLINDER HEAD	000000	000000
1111412164	1-1114	1216	GASKET;CYLINDER HEAD	000000	000208
1111412200	1-1114	1220	GASKET; CYL HEAD	000000	000000
1111412201			GASKET; CYL HEAD	000000	000000
1111412651	1-1114	1265	GASKET;CYL HD	000000	000000
1111412652	1-1114	1265	GASKET;CYL HD	000000	000000
1111412653	1-1114	1265	GASKET;CYL HD	000000	000000
1111412654	1-1114	1265	GASKET;CYL HD	000000	000016
1111412921	1-1114	1292	GASKET; CYL HD	000000	000000
1111412922	1-1114	1292	GASKET; CYL HD	000000	000003
1111510111	1-1115	1011	PRECHAMBER	000000	000000
1111510170	1-1115	1017	PRECHAMBER	000016	000000
1111510180	1-1115	1018	BODY; PRECHAMBER	000002	000000
1111510210	1-1115	1021	PRECHAMBER	000000	000000
1111550020	1-1115	5002	PACKING	000021	000000
1111708890	1-1117	0889	COVER ASM.; CYL. HEAD	000000	000000
1111708891	1-1117	0889	COVER ASM.; CYL. HEAD	000000	000002
1111708911	1-1117	0891	COVER ASM; CYL. HEAD	000000	000000
1111708951	1-1117	0895	COVER ASM; CYL.	000000	000000
1111709140	1-1117	0914	COVER ASM; CYL HEAD	000000	000000
1111709261	1-1117	0926	COVER ASM.; CYL. HEAD	000000	000000
1111709270	1-1117	0927	COVER ASM.; CYL. HEAD	000000	000000
1111709271	1-1117	0927	COVER ASM.; CYL. HEAD	000000	000000

1111709281	1-1117	0928	COVER ASM; CYL HEAD	000000	000000
1111709331	1-1117	0933	COVER ASM.; CYL HEAD	000000	000000
1111709340	1-1117	0934	COVER ASM.; CYL. HEAD	000000	000000
1111709341	1-1117	0934	COVER ASM.; CYL. HEAD	000000	000000
1111709351	1-1117	0935	COVER ASM; CYL HEAD	000000	000000
1111709361	1-1117	0936	COVER ASM; CYL.	000000	000000
1111709371	1-1117	0937	COVER ASM; CYL HEAD	000000	000000
1111709380	1-1117	0938	COVER ASM.; CYL. HEAD	000000	000000
1111709381	1-1117	0938	COVER ASM.; CYL. HEAD	000000	000000
1111709390	1-1117	0939	COVER ASM.; CYL. HEAD	000000	000000
1111709400	1-1117	0940	COVER ASM.; CYL. HEAD	000000	000000
1111709401	1-1117	0940	COVER ASM.; CYL. HEAD	000000	000000
1111709410	1-1117	0941	COVER ASM; CYL HEAD 6BB1/	000000	000000
1111709411	1-1117	0941	COVER ASM; CYL HEAD 6BB1/	000000	000000
1111709421	1-1117	0942	COVER ASM.;CYL HEAD	000000	000000
1111709441	1-1117	0944	COVER ASM.; CYL. HEAD	000000	000000
1111709460	1-1117	0946	COVER ASM; CYL HEAD	000000	000000
1111709461	1-1117	0946	COVER ASM; CYL HEAD	000000	000000
1111709590	1-1117	0959	COVER ASM; CYL HEAD	000000	000000
1111709640	1-1117	0964	COVER ASM; CYL HEAD	000000	000000
1111709641	1-1117	0964	COVER ASM; CYL HEAD	000000	000000
1111709880	1-1117	0988	COVER; TIMING GEAR CASE	000000	000000
1111709990	1-1117	0999	COVER ASM; CYL. HEAD	000000	000000
1111709991	1-1117	0999	COVER ASM; CYL. HEAD	000000	000000
1111710854	1-1117	1085	COVER ASM; CYL HEAD	000000	000000
1111710864	1-1117	1086	COVER ASM; CYL HEAD	000001	000004
1111711680	1-1117	1168	CYL HEAD COVER;	000000	000000
1111711690	1-1117	1169	COVER;CYL HD	000000	000000
1111711740	1-1117	1174	COVER; CYL HEAD RH	000000	000000
1111711742	1-1117	1174	COVER; CYL HEAD RH	000000	000000
1111711750	1-1117	1175	COVER; CYL HEAD LH	000000	000000
1111711752	1-1117	1175	COVER; CYL HEAD LH	000000	000000
1111712390	1-1117	1239	COVER ASM; CYL HEAD	000000	000002
1111712490	1-1117	1249	CVR ASM;HD (T)	000000	000000
1111712491	1-1117	1249	COVER ASM; HD (T)	000000	000002
1111712583	1-1117	1258	COVER; CYL HD	000000	000000
1111712593	1-1117	1259	CYL HEAD COVER;	000000	000000
1111712690	1-1117	1269	COVER ASM; CYL HEAD	000000	000000
1111712832	1-1117	1283	COVER; CYL HEAD	000000	000000
1111712952	1-1117	1295	COVER ASM; CYL HEAD	000000	000000
1111712990	1-1117	1299	COVER; CYL HD	000000	000000
1111713170	1-1117	1317	CYL HEAD COVER	000000	000001
1111713260	1-1117	1326	COVER ASM; HD (T)	000000	000000
1111713300	1-1117	1330	COVER; CYL HEAD	000000	000000
1111713480	1-1117	1348	COVER;CYL,HEAD	000000	000000
1111713571	1-1117	1357	COVER CYL HD	000000	000001
1111713580	1-1117	1358	COVER ASM; CYL. HEAD	000000	000000

1111713581	1-1117	1358	COVER ASM; CYL. HEAD	000000	000002
1111713600	1-1117	1360	COVER; CYL HEAD	000000	000002
1111713620	1-1117	1362	COVER; CYL. HEAD	000000	000000
1111713640	1-1117	1364	COVER;CYL,HEAD	000000	000000
1111713820	1-1117	1382	CYL HEAD COVER;	000000	000000
1111713910	1-1117	1391	COVER ASM; CYL HEAD	000000	000001
1111713920	1-1117	1392	COVER; CYL HEAD	000000	000001
1111714111	1-1117	1411	COVER;CYL HD	000000	000000
1111714450	1-1117	1445	COVER;CYL HD	000000	000000
1111714520	1-1117	1452	COVER;CYL HD	000000	000000
1111730101	1-1117	3010	PACKING; HEAD COVER E120	000000	000122
1111730320	1-1117	3032	PACKING,COVER	000000	000000
1111730360	1-1117	3036	PACKING; HEAD COVER	000000	000004
1111730440			GASKET; HD TO COVER	000000	000000
1111730520	1-1117	3052	GASKET; HD TO C	000000	000000
1111730550	1-1117	3055	GASKET; VAL COVER	000040	000062
1111730590	1-1117	3059	GASKET; CYL. HEAD COVER	000000	000438
1111730640	1-1117	3064	PACKING UM6BD1	000003	000000
1111730650			GASKET; HD TO COVER	000000	000000
1111730670			PACKING; HEAD COVER	000000	000000
1111730780	1-1117	3078	GASKET;HD TO C	000000	000000
1111730800	1-1117	3080	GASKET; HD TO COVER	000000	000000
1111730850	1-1117	3085	GASKET; HD TO C	000000	000105
1111730880	1-1117	3088	GASKET; HD TO C	000000	000000
1111730890			GSKT; HD TO COVER	000000	000000
1111731010			GASKET; AIR BRE	000000	000004
1111731040	1-1117	3104	GASKET;HD TO C	000004	000000
1111731100	1-1117	3110	GASKET;HD TO COVER	000000	000000
1111731101			GASKET;HD TO COVER	000000	000000
1111731102	1-1117	3110	GASKET;HD TO COVER	000000	000034
1111731180	1-1117	3118	GASKET; HD TO COV	000000	000005
1111731191	1-1117	3119	GASKET; HD TO COVER	000000	000357
1111731201	1-1117	3120	GASKET; HD TO COVER	000000	000036
1111750070	1-1117	5007	CAP NUT,COVER F	000000	000000
1111750080	1-1117	5008	NUT**	000001	000000
1111750090	1-1117	5009	NUT; COVER FIX	000003	000000
1111750100	1-1117	5010	NUT; HEAD COVER	000000	000000
1111750101	1-1117	5010	NUT; HEAD COVER	000000	000000
1111750111	1-1117	5011	NUT;INLET COVER	000000	000024
1111790480	1-1117	9048	WASHER; CAP NUT,HD C	000000	000000
1111790940	1-1117	9094	FLT ASM;HD CVR	000000	000003
1111790990	1-1117	9099	ELEMENT; BAFFLE	000002	000000
1111791050	1-1117	9105	PLATE;INNER HD COVER	000000	000000
1111791091	1-1117	9109	PLATE; INNER HD COVER	000001	000000
1111800050	1-1118	0005	COVER ASM; CYL HEAD	000000	000000
1111800051	1-1118	0005	COVER ASM; CYL HEAD	000000	000000
1111800110	1-1118	0011	COVER ASM; CYL HEAD	000000	000000

1111800111	1-1118	0011	COVER ASM; CYL HEAD	000000	000000
1111800231	1-1118	0023	COVER ASM; CYL. HEAD	000000	000000
1111800542	1-1118	0054	COVER ASM; CYL HEAD	000000	000000
1111800622	1-1118	0062	COVER ASM; CYL HEAD	000000	000000
1111800650	1-1118	0065	COVER ASM; CYL HEAD	000000	000000
1111800841	1-1118	0084	COVER ASM; CYL. HEAD	000000	000000
1111800842	1-1118	0084	COVER ASM; CYL. HEAD	000000	000000
1111801320	1-1118	0132	COVER ASM; CYL HEAD	000000	000001
1111801322	1-1118	0132	COVER ASM; CYL HEAD	000000	000001
1111801351	1-1118	0135	COVER ASM; CYL HEAD	000000	000000
1111801370	1-1118	0137	COVER ASM.; CYL. HEAD	000000	000000
1111801371	1-1118	0137	COVER ASM.; CYL. HEAD	000000	000000
1111801380	1-1118	0138	COVER ASM.; CYL. HEAD	000000	000000
1111801381	1-1118	0138	COVER ASM.; CYL. HEAD	000000	000000
1111801390	1-1118	0139	COVER ASM; CYL HEAD 6BG1	000000	000000
1111801531	1-1118	0153	COVER ASM; CYL HEAD	000000	000000
1111801571	1-1118	0157	COVER ASM; CYL HEAD 6BG1	000000	000000
1111801621	1-1118	0162	COVER ASM; CYL HEAD	000000	000000
1111801622	1-1118	0162	COVER ASM; CYL HEAD	000000	000000
1111801670	1-1118	0167	COVER ASM; CYL HEAD FRT.	000000	000000
1111801710	1-1118	0171	COVER ASM.; CYL. HEAD	000000	000000
1111801711	1-1118	0171	COVER ASM.; CYL. HEAD	000000	000000
1111801820	1-1118	0182	COVER ASM; CYL HEAD 6BG1	000000	000000
1111801850	1-1118	0185	COVER ASM; CYL. HEAD	000000	000000
1111801851			COVER ASM; CYL. HEAD	000000	000000
1111801973			COVER ASM; VALVE	000000	000000
1111802390	1-1118	0239	COVER ASM; CYL HEAD FRT	000000	000000
1111802461	1-1118	0246	COVER ASM.; CYL. HEAD	000000	000000
1111802581	1-1118	0258	COVER ASM; CYL. HEAD	000000	000000
1111802751	1-1118	0275	COVER ASM; CYL HEAD	000000	000000
1111802761	1-1118	0276	COVER ASM.;	000000	000000
1111802820	1-1118	0282	COVER ASM.;CYL.HEAD	000000	000000
1111802891	1-1118	0289	COVER ASM.;CYL.HEAD	000000	000000
1111802940	1-1118	0294	COVER ASM; CYL HEAD	000000	000000
1111802980	1-1118	0298	COVER ASM; HEAD	000000	000000
1111802981	1-1118	0298	COVER ASM;HEAD	000000	000000
1111803020	1-1118	0302	COVER ASM; CYL. HEAD	000000	000008
1111803030	1-1118	0303	SUPERSEDED**	000000	000000
1111803061	1-1118	0306	COVER ASM.;HEAD	000000	000000
1111803360	1-1118	0336	COVER ASM; CYL. HEAD	000000	000000
1111803361	1-1118	0336	COVER ASM; CYL. HEAD	000000	000001
1111803450	1-1118	0345	COVER ASM.;CYL.HEAD	000000	000000
1111803470	1-1118	0347	COVER ASM.;CYL.HEAD	000000	000000
1111803500	1-1118	0350	COVER ASM; CYL. HEAD	000000	000000
1111803600	1-1118	0360	COVER ASM; CYL. HEAD	000000	000000
1111803601	1-1118	0360	COVER ASM; CYL. HEAD	000000	000002
1111803610	1-1118	0361	COVER ASM; CYL. HEAD	000000	000000

1111804640	1-1118	0464	COVER; CYL HD	000000	000000
1111804711	1-1118	0471	CYL HEAD COVER	000000	000000
1111804762	1-1118	0476	COVER; CYL HD	000000	000000
1111804763	1-1118	0476	COVER; CYL HD	000000	000002
1111804764	1-1118	0476	COVER; CYL HD	000000	000000
1111804770	1-1118	0477	COVER; CYL HD	000000	000000
1111804771	1-1118	0477	COVER; CYL HD	000000	000000
1112100470	1-1121	0047	SUPERSEDED**	000000	000000
1112100490	1-1121	0049	SUPERSEDED**BLOCK	000000	000000
1112101053	1-1121	0105	BLOCK ASM; CYLINDER	000000	000000
1112101060	1-1121	0106	BLOCK ASM; CYLINDER E120	000000	000000
1112101062	1-1121	0106	BLOCK ASM; CYLINDER E120	000000	000000
1112101300	1-1121	0130	BLOCK ASM; CYLINDER	000000	000000
1112101501	1-1121	0150	CYL BODY ASSY	000000	000000
1112101841	1-1121	0184	BLOCK ASM; CYL.	000000	000000
1112101893	1-1121	0189	BLOCK ASM;CYL	000000	000000
1112101993	1-1121	0199	BLOCK ASM; CYLINDER	000000	000000
1112102462	1-1121	0246	BLOCK ASM; CYLINDER 6RB1	000000	000000
1112102730	1-1121	0273	BLOCK ASM;CYL. E120 N/A	000000	000000
1112102780	1-1121	0278	SUPERSEDED**	000000	000000
1112102790	1-1121	0279	SUPERSEDED**BLOCK	000000	000000
1112102810	1-1121	0281	BLOCK ASM; CYLINDER	000000	000000
1112102910	1-1121	0291	SUPERSEDED**BLOCK	000000	000000
1112103200	1-1121	0320	BLOCK ASM;CYL.	000000	000000
1112103211	1-1121	0321	BLOCK ASM.	000000	000000
1112103212	1-1121	0321	BLOCK ASM.	000000	000001
1112103314	1-1121	0331	BLOCK ASM; CYL	000000	000001
1112103320	1-1121	0332	BLOCK ASM; CYL	000000	000000
1112103324	1-1121	0332	BLOCK ASM; CYL	000000	000000
1112103330	1-1121	0333	BLOCK ASM; CYLINDER	000000	000000
1112103401	1-1121	0340	BLOCK ASM; CYL 6BG1	000000	000000
1112103407	1-1121	0340	BLOCK ASM; CYL 6BG1	000000	000000
1112103408	1-1121	0340	BLOCK ASM; CYL 6BG1	000000	000000
1112103409	1-1121	0340	BLOCK ASM; CYL 6BG1	000000	000000
1112103414	1-1121	0341	BLOCK ASM; CYL	000000	000000
1112103470	1-1121	0347	BLOCK ASM; CYL.	000000	000000
1112103474	1-1121	0347	BLOCK ASM; CYL.	000000	000000
1112103642	1-1121	0364	BLOCK ASM; CYL	000000	000000
1112103645	1-1121	0364	BLOCK ASM; CYL	000000	000000
1112103850	1-1121	0385	BLOCK ASM; CYL	000000	000000
1112104210	1-1121	0421	BLOCK ASM; CYL.	000000	000002
1112104294	1-1121	0429	BLOCK ASM.;CYL.FOR SERVIC	000000	000000
1112104400	1-1121	0440	BLOCK ASM; CYL	000000	000000
1112104401	1-1121	0440	BLOCK ASM; CYL	000000	000000
1112104423	1-1121	0442	BLOCK ASM; CYL. 6BD1T	000000	000000
1112104424	1-1121	0442	BLOCK ASM; CYL. 6BD1T	000000	000000
1112104433	1-1121	0443	BLOCK ASM; CYL 6BG1	000000	000000

1112104436	1-1121	0443	BLOCK ASM; CYL 6BG1	000000	000000
1112104437	1-1121	0443	BLOCK ASM; CYL 6BG1	000000	000000
1112104438	1-1121	0443	BLOCK ASM; CYL 6BG1	000000	000000
1112104446	1-1121	0444	BLOCK ASM. CYL	000000	000000
1112104447	1-1121	0444	BLOCK ASM. CYL	000000	000000
1112104448	1-1121	0444	BLOCK ASM. CYL	000000	000001
1112104483	1-1121	0448	BLOCK ASM; CYL	000000	000000
1112104570	1-1121	0457	BLOCK ASM; CYL	000000	000000
1112104573	1-1121	0457	BLOCK ASM; CYL	000000	000000
1112104610	1-1121	0461	BLOCK ASM; CYL.	000000	000000
1112104614	1-1121	0461	BLOCK ASM; CYL.	000000	000000
1112104633	1-1121	0463	BLOCK ASM	000000	000000
1112104656	1-1121	0465	BLOCK ASM; CYLINDER	000000	000000
1112104830	1-1121	0483	BLOCK ASM; CYL.	000000	000000
1112104833	1-1121	0483	BLOCK ASM; CYL.	000000	000000
1112105421	1-1121	0542	BLOCK ASM.;CYL.	000000	000000
1112105442	1-1121	0544	BLOCK ASM; CYL.	000000	000000
1112105452			BLOCK ASM; CYL	000000	000000
1112105561			BLOCK ASM; CYLINDER	000000	000000
1112105590	1-1121	0559	BLOCK ASM.;CYL.	000000	000000
1112105692	1-1121	0569	BLOCK ASM; CYL.	000000	000000
1112105694	1-1121	0569	BLOCK ASM; CYL.	000000	000000
1112105720	1-1121	0572	BLOCK ASM; CYL.	000000	000000
1112105721	1-1121	0572	BLOCK ASM; CYL.	000000	000000
1112105730	1-1121	0573	BLOCK ASM; CYL.	000000	000000
1112105880	1-1121	0588	BLOCK ASM; CYL.	000000	000000
1112105910	1-1121	0591	BLOCK ASM; CYL.	000000	000000
1112105920	1-1121	0592	BLOCK ASM.	000000	000001
1112105921	1-1121	0592	BLOCK ASM.	000000	000001
1112105930	1-1121	0593	BLOCK ASM; CYL.	000000	000000
1112105932	1-1121	0593	BLOCK ASM; CYL.	000000	000000
1112106325	1-1121	0632	BLOCK ASM; CYL	000000	000000
1112106353	1-1121	0635	BLOCK ASM; CYL.	000000	000000
1112106410	1-1121	0641	BLOCK ASM; CYL.	000000	000000
1112106413	1-1121	0641	BLOCK ASM; CYL.	000000	000000
1112106902	1-1121	0690	BLOCK ASM; CYL	000000	000001
1112106912	1-1121	0691	BLOCK ASM; CYL	000000	000000
1112106913	1-1121	0691	BLOCK ASM; CYL	000000	000003
1112111861	1-1121	1186	***INVALID FAX540****	000000	000000
1112190010	1-1121	9001	PROTECTOR; HEAT	000000	000000
1112190350	1-1121	9035	COVER E120	000000	000000
1112190520	1-1121	9052	COVER; INJ PUMP CUP	000001	000000
1112190542	1-1121	9054	COVER; INJ. PUMP COUPLING	000000	000000
1112190581	1-1121	9058	STAY; COUP COVER	000000	000000
1112190811	1-1121	9081	SUPERSEDED**COVER	000000	000000
1112190890	1-1121	9089	COVER; CYL BLOCK 6RB1	000000	000000
1112190900	1-1121	9090	COVER; CYL. BLOCK, OIL PU	000000	000000

1112190920	1-1121	9092	PACKING; CYL. BLOCK	000000	000000
1112190950	1-1121	9095	PACKING; OIL COOLER	000000	000000
1112190960	1-1121	9096	PACKING; OIL	000000	000000
1112190971	1-1121	9097	COVER;TURBO,RET	000000	000000
1112190972	1-1121	9097	COVER;TURBO,RET	000000	000000
1112190980	1-1121	9098	COVER;TURBO,RET	000000	000000
1112190982	1-1121	9098	COVER;TURBO,RET	000000	000000
1112190983	1-1121	9098	COVER;TURBO,RET	000000	000006
1112191030	1-1121	9103	OIL COOLER PACKING	000000	000000
1112191040	1-1121	9104	COVER; ING. PUMP COUP	000000	000000
1112191050	1-1121	9105	COVER; ING. PUMP COUP	000000	000000
1112191060	1-1121	9106	SPACER E120	000000	000000
1112191140	1-1121	9114	PACKING; OIL 6SA1	000000	000000
1112191141	1-1121	9114	PACKING; OIL 6SA1	000000	000001
1112191200	1-1121	9120	COVER; OIL PUMP	000000	000000
1112191210	1-1121	9121	COVER; CYL, BLK.,OIL PUMP	000000	000000
1112191220	1-1121	9122	COVER; CYL. BLOCK, OIL PU	000000	000000
1112191230	1-1121	9123	COVER; BLK. OIL PORT	000000	000000
1112191260	1-1121	9126	GASKET; OIL COO	000000	000000
1112191261	1-1121	9126	GASKET; OIL COO	000000	000000
1112191291	1-1121	9129	COVER; OIL PUMP HOLE	000000	000298
1112191320	1-1121	9132	ADAPTER; BLOCK	000000	000003
1112191350	1-1121	9135	GASKET; OIL COO	000000	000000
1112191390	1-1121	9139	GASKET; OIL COO	000000	000000
1112191480	1-1121	9148	PACKING; OIL COOLER	000000	000000
1112191490	1-1121	9149	COVER; COUPLING	000000	000000
1112191500	1-1121	9150	GASKET; OIL COO	000003	000000
1112191550	1-1121	9155	PACKING;OIL COOLER	000000	000004
1112191590	1-1121	9159	GASKET;OIL COOL	000000	000000
1112191630	1-1121	9163	COVER; OIL PORT	000000	000007
1112191660	1-1121	9166	PACKING; BLOCK-CRANK	000000	000003
1112191670	1-1121	9167	COVER INJ PUMP COUPLING	000000	000000
1112191740	1-1121	9174	COVER INJ PUMP COUPLING	000001	000000
1112191770	1-1121	9177	GASKET; OIL COOL	000000	000000
1112191771	1-1121	9177	GASKET; OIL COOL	000018	000014
1112191780	1-1121	9178	COVER; INJ. PUMP COUPL.	000000	000000
1112191810	1-1121	9181	COVER ; COUPLING	000000	000001
1112191860	1-1121	9186	GASKET; OIL COOLER TO C/B	000000	000000
1112191890	1-1121	9189	COVER;COUPLING	000000	000005
1112192010	1-1121	9201	COVER;COUPLING	000000	000000
1112192050	1-1121	9205	GASKET;OIL COOLER TO C/B	000000	000001
1112192080	1-1121	9208	COVER; COUPLING	000000	000013
1112192090	1-1121	9209	COVER; COUPLING	000000	000009
1112210630	1-1122	1063	LINER; CYL 12PB1	000000	000000
1112290120	1-1122	9012	DOWEL; CAM BRKT	000000	000000
1112290121	1-1122	9012	DOWEL; CAM BRKT	000000	000014
1112290130	1-1122	9013	DOWEL; IDLE GEAR SPINDLE	000000	000028

1112290140	1-1122	9014	CLIP; HOSE, AIR	000000	000000
1112580010	1-1125	8001	SEAL; OIL, BRG CAP R C/BO	000000	000000
1112610300	1-1126	1030	LINER	000000	000000
1112610630	1-1126	1063	LINER; CYL	000000	000000
1112610653	1-1126	1065	LINER; CYL 6SA1	000000	000000
1112610740	1-1126	1074	LINER; CYL	000000	000000
1112610941	1-1126	1094	LINER; C/BL	000000	000000
1112611040	1-1126	1104	LINER; CYLINDER	000000	000000
1112611051	1-1126	1105	LINER; CYLINDER	000000	000000
1112611062	1-1126	1106	LINER; CYLINDER	000000	000000
1112611160	1-1126	1116	LINER; C/BL	000000	000000
1112611180	1-1126	1118	LINER;ENG. CYL.	000000	000000
1112611190	1-1126	1119	LINER; CYL 6BG1	000000	000000
1112611330	1-1126	1133	LINER; CYLINDER	000000	000000
1112611550	1-1126	1155	LINER; CYL.	000000	000000
1112611580	1-1126	1158	LINER; CYL.	000000	000000
1112611600			LINER; CYL	000000	000000
1112611930	1-1126	1193	LINER KIT	000000	000000
1112612040	1-1126	1204	LINER KIT	000000	000000
1112612400	1-1126	1240	LINER; CYL BLK	000000	000002
1112612410	1-1126	1241	LINER; CYL BLK	000000	000001
1112612420	1-1126	1242	LINER; CYL BLK	000000	000004
1112612430	1-1126	1243	LINER; CYL BLK	000000	000002
1112612440	1-1126	1244	LINER; CYL BLK	000000	000002
1112612450	1-1126	1245	LINER; CYL BLK	000000	000001
1112612460	1-1126	1246	6INER; CYL BLK	000000	000067
1112612470	1-1126	1247	LINER; CYL BLK	000000	000001
1112612480	1-1126	1248	LINER KIT	000000	000000
1112612490	1-1126	1249	LINER KIT	000000	000000
1112612500	1-1126	1250	LINER KIT	000000	000000
1112612510	1-1126	1251	LINER KIT	000000	000000
1112612520	1-1126	1252	LINER KIT	000000	000000
1112612530	1-1126	1253	LINER KIT	000000	000000
1112612540	1-1126	1254	LINER KIT	000000	000000
1112612550	1-1126	1255	LINER KIT	000000	000000
1112612800	1-1126	1280	LINER KIT	000000	000000
1112612830	1-1126	1283	LINER KIT	000000	000000
1112612890			LINER KIT	000000	000000
1112612900	1-1126	1290	LINER KIT	000000	000000
1112612980	1-1126	1298	LINER. C/BLK.	000000	000000
1112612990			LINER, C/BLK	000000	000000
1112613000			LINER, C/BLK	000000	000000
1112613030			LINER KIT	000000	000000
1112613080	1-1126	1308	LINER KIT	000000	000000
1112613090	1-1126	1309	LINER; CYL BLK	000000	000008
1112613140	1-1126	1314	LINER KIT	000000	000000
1112613150	1-1126	1315	LINER KIT	000000	000000

1112613330	1-1126	1333	LINER KIT	000000	000000
1112613340	1-1126	1334	LINER KIT	000000	000000
1112613370	1-1126	1337	LINER KIT	000000	000000
1112613380	1-1126	1338	LINER KIT	000000	000000
1112613390	1-1126	1339	LINER KIT	000000	000000
1112613400	1-1126	1340	LINER KIT	000000	000000
1112613410	1-1126	1341	LINER KIT	000000	000000
1112613420	1-1126	1342	LINER KIT	000000	000000
1112613680	1-1126	1368	LINER; C/BL	000000	000005
1112613690	1-1126	1369	LINER; C/BL	000000	000005
1112613700	1-1126	1370	LINER; C/BL	000000	000009
1112613710	1-1126	1371	LINER; C/BL	000000	000004
1112613712	1-1126	1371	LINER; C/BL	000000	000000
1112613790	1-1126	1379	LINER KIT	000000	000000
1112613792	1-1126	1379	LINER KIT	000001	000000
1112613800	1-1126	1380	LINER KIT	000000	000000
1112613802	1-1126	1380	LINER KIT	000000	000003
1112613820	1-1126	1382	LINER; C/BL	000000	000001
1112613821	1-1126	1382	LINER; C/BL	000000	000000
1112613830	1-1126	1383	LINER; C/BL	000000	000000
1112613860	1-1126	1386	LINER; C/BL	000000	000000
1112613880	1-1126	1388	LINER; C/BL	000000	000000
1112670030	1-1126	7003	O-RING; LINER	000000	000000
1112670050	1-1126	7005	PACKING; LINER	000000	000000
1112800051	1-1128	0005	COVER ASM.;WATER	000000	000000
1112800052	1-1128	0005	COVER ASM.;WATER	000000	000001
1112800120	1-1128	0012	GASKET;OIL COOLER TO C/BL	000000	000000
1112810180	1-1128	1018	BODY;OIL COOLER	000000	000000
1112810181	1-1128	1018	BODY;CHASE,OIL	000000	000000
1112810260	1-1128	1026	BODY;CASE,OIL COOLER	000000	000000
1112810261	1-1128	1026	BODY; CASE, OIL COOLER	000000	000039
1112810280	1-1128	1028	BODY; COOLER	000000	000000
1112810281	1-1128	1028	BODY; COOLER	000000	000005
1112810360	1-1128	1036	BODY; CASE	000000	000000
1112810370	1-1128	1037	BODY;CASE	000000	000000
1112810380	1-1128	1038	BODY; CASE	000000	000000
1112820080	1-1128	2008	GASKET;OIL COOLER TO C/BL	000000	000000
1112820090	1-1128	2009	GASKET; COVER	000000	000000
1112820120	1-1128	2012	GASKET;OIL COOLER TO C/BL	000000	000000
1112820130	1-1128	2013	GASKET; COVER	000000	000000
1112820140	1-1128	2014	GASKET; ELEMENT TO BODY	000000	000044
1112820150	1-1128	2015	ELEMENT; O	000000	000000
1112820151	1-1128	2015	ELMNT.COPPER;OIL COOLER	000000	000001
1112820160	1-1128	2016	ELEMENT ASM, OIL COOLER	000000	000000
1112820170	1-1128	2017	ELEMENT ASM;	000000	000001
1112820180	1-1128	2018	ELEMENT; OIL COOLER	000000	000003
1112820190	1-1128	2019	ELEMENT ASM, OIL COOLER	000001	000000

1112820200	1-1128	2020	PACKING;COVER-CYL.BODY	000000	000000
1112820250	1-1128	2025	ELEMENT ASM.	000000	000000
1112820270	1-1128	2027	ELEMENT ASM.	000000	000000
1112820280	1-1128	2028	GASKET;OIL COOLER TO C/BL	000000	000000
1112820281	1-1128	2028	GASKET;OIL COOLER TO C/BL	000000	000000
1112820282	1-1128	2028	GASKET;OIL COOLER TO C/BL	000011	000012
1112820290	1-1128	2029	GASKET; ELEMENT TO BODY	000000	000044
1112902273	1-1129	0227	COVER ASM.; TAPPET CHAMBE	000000	000000
1112902290	1-1129	0229	COVER ASM;TAPPE	000000	000000
1112902291	1-1129	0229	COVER ASM.;TAPP	000000	000000
1112902292	1-1129	0229	COVER ASM.;TAPP	000000	000005
1112902300	1-1129	0230	COVER ASM;TAPPE	000000	000000
1112902301	1-1129	0230	COVER ASM.;TAPP	000000	000000
1112902302	1-1129	0230	COVER ASM.;TAPP	000000	000000
1112902321	1-1129	0232	COVER ASM.; TAPPET CHAMBE	000000	000000
1112902330	1-1129	0233	COVER ASM.;TAPPET CHAMBER	000000	000000
1112902400	1-1129	0240	COVER; TAPPET CHAMBER	000000	000000
1112902401	1-1129	0240	COVER; TAPPET CHAMBER	000000	000000
1112902410	1-1129	0241	COVER; TAPPET	000000	000000
1112902411	1-1129	0241	COVER; TAPPET CHAMBER	000000	000001
1112902420	1-1129	0242	COVER; TAPPET CHAMBER	000000	000001
1112902421	1-1129	0242	COVER; TAPPET CHAMBER	000000	000000
1112902430	1-1129	0243	COVER ASM.; TAPPET CHAMBE	000000	000000
1112902460	1-1129	0246	COVER ASM; TAPPET	000000	000000
1112902461	1-1129	0246	COVER ASM; TAPPET	000000	000003
1112902470	1-1129	0247	COVER ASM; TAPPET	000000	000000
1112902471	1-1129	0247	COVER ASM; TAPPET	000000	000000
1112902500	1-1129	0250	COVER ASM.;TABBET CHAMBER	000000	000000
1112902510	1-1129	0251	COVER ASM; TAP	000000	000000
1112902541	1-1129	0254	COVER ;TAPPET CHAMBER	000000	000012
1112910081	1-1129	1008	COVER; FRONT E120	000000	000000
1112910091	1-1129	1009	COVER; FRONT E120	000000	000000
1112910100	1-1129	1010	COVER; FRONT E120	000000	000000
1112910350	1-1129	1035	COVER ASM; TAPPET E120	000000	000000
1112910351	1-1129	1035	COVER ASM; TAPPET E120	000002	000000
1112910441	1-1129	1044	COVER; CHAMBER 6BD/BG1	000000	000007
1112910560	1-1129	1056	COVER ASM; TAPPET E120	000000	000000
1112910570	1-1129	1057	COVER ASM; TAPPET E120	000000	000000
1112910632	1-1129	1063	COVER ASM; TAPPET E120	000002	000000
1112910770	1-1129	1077	COVER; TAPPET CHAMBER	000000	000000
1112910801	1-1129	1080	COVER; TAPPET	000000	000017
1112910930	1-1129	1093	COVER; TAPPET, W/BOLT	000000	000000
1112911020	1-1129	1102	COVER; CR/SHF PULLEY	000000	000013
1112911030	1-1129	1103	COVER; CR/SHF	000000	000069
1112920150	1-1129	2015	PACKING E120	000000	000000
1112920160	1-1129	2016	GASKET;COVER TAPPET	000000	000000
1112920180	1-1129	2018	GASKET	000003	000000

1112920190	1-1129	2019	PACKING	000000	000000
1112920191	1-1129	2019	PACKING	000003	000000
1112920200	1-1129	2020	GASKET;TAPPET	000000	000000
1112920220	1-1129	2022	GASKET; TAPPET	000000	000000
1112920250	1-1129	2025	GASKET;COVER TAPPET	000000	000000
1112920280	1-1129	2028	GASKET;COVER TAPPET	000000	000019
1112920300	1-1129	2030	GASKET; COVER	000007	000000
1112920301	1-1129	2030	GASKET; COVER	000000	000000
1112920310	1-1129	2031	PACKING;TAPPET CHAMBER	000000	000000
1112990101	1-1129	9010	PLATE;BAFFLE,TAPPET CHMBR	000001	000003
1112990110	1-1129	9011	PLATE;GUIDE TAP	000001	000007
1112990141	1-1129	9014	JOINT; BREATHER, TAPPET	000001	000000
1112990160	1-1129	9016	PIPE; BREATHER	000000	000000
1112990170	1-1129	9017	PIPE;BREATHER,OIL-DRAIN	000000	000000
1112990191	1-1129	9019	PIPE; BREATHER, OIL DRAIN	000000	000000
1112990200	1-1129	9020	PIPE; BREATHER, OIL DRAIN	000000	000000
1112990212	1-1129	9021	PIPE; BREATHER OIL DRAIN	000000	000000
1113100533	1-1131	0053	CASE;TIMING GEAR	000000	000000
1113100534	1-1131	0053	CASE;TIMING GEAR	000000	000000
1113100535	1-1131	0053	CASE;TIMING GEAR	000000	000000
1113100550	1-1131	0055	CASE; HEAD GEAR	000000	000000
1113100551	1-1131	0055	CASE; HEAD GEAR	000001	000000
1113100605	1-1131	0060	CASE; TIMING GEAR	000000	000001
1113100633	1-1131	0063	CASE; TIMING GEAR	000000	000000
1113110260			CASE; TIMING GEARS	000000	000000
1113110340	1-1131	1034	CASE;TIMING GEAR 6RB1T	000000	000002
1113110370	1-1131	1037	CASE; TIMING GEARS E120	000000	000000
1113110420	1-1131	1042	CASE;TIMING GEA	000000	000000
1113110421	1-1131	1042	CASE;TIMING	000000	000012
1113120070	1-1131	2007	PACKING;GEAR CASE	000000	000000
1113120080	1-1131	2008	PACKING; GEAR CASE-BLOCK	000000	000000
1113120081	1-1131	2008	PACKING; GEAR CASE-BLOCK	000000	000009
1113120090	1-1131	2009	GASKET	000000	000000
1113120100	1-1131	2010	GASKET; TIMING	000000	000000
1113120110	1-1131	2011	PACKING;GEAR CASE	000000	000000
1113120140	1-1131	2014	GASKET; GEAR CASE TO C/BL	000000	000000
1113120150	1-1131	2015	PACKING;GEAR CASE	000000	000000
1113120160	1-1131	2016	PACKING;GEAR CASE-C/BLOCK	000000	000002
1113126080			PACKING	000000	000000
1113190080	1-1131	9008	GSKT; INJ.PUMP	000000	000000
1113190090	1-1131	9009	GSKT; INJ.PUMP	000000	000000
1113190120	1-1131	9012	COVER; HOLE	000001	000000
1113200461	1-1132	0046	COVER;GEAR CASE PTO	000000	000000
1113200560	1-1132	0056	COVER ASM; FRT	000000	000000
1113201300	1-1132	0130	CASE ASM; BRG, INJ PUMP	000000	000001
1113210081	1-1132	1008	COVER; TIMING GEAR CASE	000000	000000
1113210234	1-1132	1023	COVER; TIMING GEAR CASE	000000	000001

1113210261	1-1132	1026	COVER 8MA1	000000	000000
1113210470	1-1132	1047	COVER; POWER STR.PUMP 6SA	000000	000000
1113210471	1-1132	1047	COVER; POWER STR.PUMP 6SA	000000	000000
1113210481	1-1132	1048	CVR;TIMING GEAR	000000	000002
1113210551	1-1132	1055	COVER; PTO	000000	000001
1113210690	1-1132	1069	COVER; TIMING GEAR CASE	000000	000000
1113210750	1-1132	1075	COVER; IDLE GEA	000000	000000
1113210790	1-1132	1079	COVER; GEAR CASE 6BD/BG1	000000	000011
1113210801	1-1132	1080	COVER; FRONT	000000	000002
1113210810	1-1132	1081	COVER; TIMING GEAR CASE	000000	000000
1113210830	1-1132	1083	COVER; SEA WATER PUMP GEA	000000	000000
1113210852	1-1132	1085	COVER;FRONT	000000	000000
1113210853	1-1132	1085	COVER;FRONT	000001	000000
1113210890	1-1132	1089	COVER; GEAR CASE	000000	000000
1113211000	1-1132	1100	COVER;IDLE GEAR	000000	000000
1113211100	1-1132	1110	COVER;GEAR CASE	000000	000000
1113211281	1-1132	1128	COVER GEAR CASE	000000	000000
1113211540	1-1132	1154	COVER; GEAR CASE	000000	000001
1113211640	1-1132	1164	COVER; SEA WATER PUMP GEA	000000	000001
1113211681	1-1132	1168	COVER;GEAR CASE	000000	000000
1113211740	1-1132	1174	COVER; GEAR CASE	000000	000000
1113211741	1-1132	1174	COVER; GEAR CASE	000000	000009
1113211743	1-1132	1174	COVER; GEAR CASE	000000	000000
1113220120	1-1132	2012	PACKING 8MA1 WATER	000000	000000
1113220121	1-1132	2012	PACKING 8MA1 WATER	000000	000000
1113220131	1-1132	2013	PACKING 8MA1	000000	000000
1113220140	1-1132	2014	PACKING 8MA1	000000	000000
1113220141	1-1132	2014	PACKING 8MA1	000000	000000
1113220250	1-1132	2025	PACKING;COVER	000000	000000
1113220260	1-1132	2026	PACKING; GEAR E120	000000	000000
1113220270	1-1132	2027	PACKING; COVER	000000	000000
1113220290	1-1132	2029	PACKING; GEAR E120	000000	000000
1113220320	1-1132	2032	PACKING;COVER	000000	000000
1113220321	1-1132	2032	PACKING;COVER	000003	000000
1113220330	1-1132	2033	PACKING; COVER	000000	000000
1113220340	1-1132	2034	GASKET;GEAR	000000	000000
1113220350	1-1132	2035	PACKING 4BA1	000008	000000
1113220360	1-1132	2036	PACKING;COVER	000000	000000
1113220370	1-1132	2037	GSKT;GEAR CASE	000000	000000
1113220420	1-1132	2042	GASKET;GEAR	000000	000000
1113220421	1-1132	2042	GASKET;GEAR	000005	000000
1113220430	1-1132	2043	PACKING	000000	000000
1113220441	1-1132	2044	GASKET;GEAR CASE TO COVER	000000	000000
1113220510	1-1132	2051	PACKING;G/C.COVER-CASE	000000	000008
1113220520	1-1132	2052	PACKING;COVER-GEAR CASE	000000	000009
1113220550	1-1132	2055	GSKT;GEAR CASE	000000	000000
1113220580	1-1132	2058	PACKING: PUMP FIX	000019	000000

1113220600	1-1132	2060	GASKET; GEAR CASE TO COVE	000000	000035
1113220610	1-1132	2061	GASKET; GEAR CASE TO COVE	000000	000032
1113250071	1-1132	5007	BRG COVER	000000	000000
1113250080	1-1132	5008	COVER BRG GEAR	000000	000000
1113250081	1-1132	5008	COVER; BEARING, REAR	000000	000004
1113250130	1-1132	5013	BEARING; COVER ASM	000000	000000
1113250132	1-1132	5013	COVER ASM; FRT-CAM BRG	000000	000000
1113250190	1-1132	5019	COVER FRT GEAR CASE	000002	000000
1113250200	1-1132	5020	COVER; BEARING	000000	000001
1113270100	1-1132	7010	POINTER; TIMING	000000	000000
1113270130	1-1132	7013	POINTER; TIMING E120	000018	000000
1113270180	1-1132	7018	POINTER; TIMING 6RB1	000008	000000
1113270252	1-1132	7025	POINTER; FLYWHEEL HOUSING	000000	000000
1113270272	1-1132	7027	POINTER; TIMING CHECK	000000	000000
1113270310	1-1132	7031	POINTER; TIMING	000000	000000
1113270360	1-1132	7036	POINTER	000000	000000
1113270380	1-1132	7038	POINTER TIMING	000000	000002
1113270401	1-1132	7040	POINTER;AIR CMPR	000000	000001
1113270430	1-1132	7043	POINTER	000000	000000
1113270450	1-1132	7045	POINTER; FLYWHEEL HSG	000000	000000
1113270451	1-1132	7045	POINTER; FLYWHEEL HSG	000000	000004
1113270501	1-1132	7050	POINTER;TIMING CHECK HOLE	000002	000000
1113270540	1-1132	7054	COVER;POINTER	000000	000000
1113270550	1-1132	7055	POINTER; AIR CMPR	000004	000000
1113290040	1-1132	9004	COVER; DUST	000000	000000
1113290050	1-1132	9005	PACKING,DUST CO	000000	000000
1113290060	1-1132	9006	COVER; DUST	000000	000000
1113290080	1-1132	9008	ADAPTOR E120	000000	000003
1113290150	1-1132	9015	PACKING 12PB1	000000	000000
1113290190	1-1132	9019	BRACKET; SENSOR	000000	000000
1113290241	1-1132	9024	BOLT GEAR CASE COVER	000000	000000
1113401346	1-1134	0134	HOUSING ASM; FLYWHEEL	000000	000000
1113402341	1-1134	0234	HOUSING ASM; FLYWHEEL	000000	000000
1113402511	1-1134	0251	HOUSING ASM; FLYWHEEL	000000	000000
1113410400	1-1134	1040	HOUSING; FLYWHEEL	000000	000000
1113410861	1-1134	1086	HOUSING	000000	000000
1113411080	1-1134	1108	**FAX 549 INVALID**	000000	000000
1113411260	1-1134	1126	HOUSING; FLYWHEEL E120	000000	000000
1113411282	1-1134	1128	HOUSING; FLYWHEEL E120	000000	000000
1113411297	1-1134	1129	HOUSING; F/W	000000	000000
1113411480	1-1134	1148	HOUSING;	000000	000000
1113411495	1-1134	1149	HOUSING; FLYWHEEL	000000	000000
1113411496	1-1134	1149	HOUSING; FLYWHEEL	000000	000002
1113411503	1-1134	1150	HOUSING	000000	000000
1113411504	1-1134	1150	HOUSING	000000	000000
1113411513	1-1134	1151	HOUSING; F/W	000000	000000
1113411790	1-1134	1179	HOUSING; FLYWHEEL E120	000000	000000

1113412002	1-1134	1200	SUPERSEDED**HOUSING	000000	000000
1113412072	1-1134	1207	HOUSING; FLYWHEEL	000000	000000
1113412120	1-1134	1212	HOUSING; FLYWHEEL	000000	000000
1113412123	1-1134	1212	HOUSING; FLYWHEEL	000000	000000
1113412202	1-1134	1220	PLATE; REAR	000000	000000
1113412280	1-1134	1228	HOUSING; FLYWHEEL/6BD1	000000	000000
1113412283	1-1134	1228	HOUSING; FLYWHEEL/6BD1	000000	000000
1113412320	1-1134	1232	HOUSING; FLYWHEEL E120	000000	000000
1113412322	1-1134	1232	HOUSING; FLYWHEEL E120	000000	000000
1113412352	1-1134	1235	HOUSING; FLYWHEEL	000000	000000
1113412610	1-1134	1261	HOUSING;FLYWHE	000000	000000
1113412631	1-1134	1263	HOUSING; FLY WHEEL	000000	000000
1113412633	1-1134	1263	HOUSING; FLY WHEEL	000000	000000
1113412636	1-1134	1263	HOUSING; FLY WHEEL	000000	000000
1113412652	1-1134	1265	HOUSING; FLYWHE	000000	000000
1113412680	1-1134	1268	HSG;FLYWHEEL	000000	000000
1113412685	1-1134	1268	HOUSING; FLYWHEEL	000000	000000
1113412686	1-1134	1268	HOUSING; FLYWHEEL	000000	000003
1113412710	1-1134	1271	HOUSING; FLYWHEEL	000000	000000
1113412711	1-1134	1271	HOUSING; FLYWHEEL	000000	000000
1113412732	1-1134	1273	HOUSING; F/W	000000	000000
1113412815	1-1134	1281	HOUSING; FLYWHEEL	000000	000000
1113412816	1-1134	1281	HOUSING; FLYWHEEL	000000	000000
1113412817	1-1134	1281	HOUSING; FLYWHEEL	000000	000000
1113412840	1-1134	1284	HOUSING; FLYWHEEL 6RB1	000000	000000
1113412852	1-1134	1285	HOUSING; FLYWHEEL	000000	000000
1113412853	1-1134	1285	HOUSING; FLYWHEEL	000000	000000
1113412972	1-1134	1297	HOUSING;FLYWHEE	000000	000000
1113412973	1-1134	1297	HOUSING; FLYWHE	000000	000000
1113412974	1-1134	1297	HOUSING;FLYWHEE	000000	000000
1113412975	1-1134	1297	HOUSNG;FLY WHEE	000000	000000
1113413110	1-1134	1311	HOUSING; FLYWHEEL	000000	000000
1113413111	1-1134	1311	HOUSING; FLYWHEEL	000000	000000
1113413171	1-1134	1317	HOUSING; FLYWHEEL	000000	000000
1113413172	1-1134	1317	HOUSING; FLYWHEEL	000000	000000
1113413290	1-1134	1329	HOUSING; FLYWHEEL	000000	000000
1113413420	1-1134	1342	HOUSING;FLYWHE	000000	000000
1113413421	1-1134	1342	HOUSING;FLYWHE	000000	000000
1113413431	1-1134	1343	HOUSING; FLYWHEEL	000000	000000
1113413490	1-1134	1349	PLATE; REAR	000000	000000
1113413512	1-1134	1351	HOUSING; FLYWHEEL	000000	000000
1113413513	1-1134	1351	HOUSING; FLYWHEEL	000000	000000
1113413516	1-1134	1351	HOUSING; FLYWHEEL	000000	000000
1113413518	1-1134	1351	HOUSING; FLYWHEEL	000000	000000
1113413521	1-1134	1352	HOUSING; FLYWHEEL	000000	000000
1113413553	1-1134	1355	HOUSING; FLYWHEEL	000000	000000
1113413621	1-1134	1362	HOUSING; FLYWHEEL	000000	000000

1113413622	1-1134	1362	HOUSING; FLYWHEEL	000000	000000
1113413800	1-1134	1380	HOUSING; FLYWHEEL	000000	000000
1113413801	1-1134	1380	HOUSING; FLYWHEEL	000000	000000
1113413802	1-1134	1380	HOUSING; FLYWHEEL	000000	000002
1113413883	1-1134	1388	HOUSING; FLYWHEEL	000000	000000
1113413940	1-1134	1394	HOUSING; F/W	000000	000000
1113413960	1-1134	1396	HOUSING; FLYWHEEL	000000	000000
1113413963	1-1134	1396	HOUSING; FLYWHEEL	000000	000000
1113413970	1-1134	1397	HOUSING; FLYWHEEL	000000	000000
1113414190	1-1134	1419	HOUSING; F/WHEEL	000000	000000
1113414191	1-1134	1419	HOUSING; F/WHEEL	000000	000000
1113414193	1-1134	1419	HOUSING; F/WHEEL	000000	000000
1113414280	1-1134	1428	HOUSING; FLYWHEEL	000000	000000
1113414281	1-1134	1428	HOUSING; FLYWHEEL	000000	000000
1113414282	1-1134	1428	HOUSING; FLYWHEEL	000000	000000
1113414283	1-1134	1428	HOUSING; FLYWHEEL	000000	000000
1113414290	1-1134	1429	HOUSING; FLYWHEEL	000000	000002
1113414291	1-1134	1429	HOUSING; FLYWHEEL	000000	000000
1113414292	1-1134	1429	HOUSING; FLYWHEEL	000000	000001
1113414293	1-1134	1429	HOUSING; FLYWHEEL	000000	000000
1113414320	1-1134	1432	HOUSING;	000000	000000
1113414330	1-1134	1433	HOUSING; FLYWHEEL	000000	000000
1113414331	1-1134	1433	HOUSING; FLYWHEEL	000000	000000
1113414332	1-1134	1433	HOUSING; FLYWHEEL	000000	000000
1113414333	1-1134	1433	HOUSING; FLYWHEEL	000000	000000
1113414420	1-1134	1442	HOUSING; F/W	000000	000000
1113414451	1-1134	1445	HOUSING; FLYWHEEL	000000	000000
1113414452	1-1134	1445	HOUSING; FLYWHEEL	000000	000000
1113414612	1-1134	1461	HOUSING; FLYWHEEL	000000	000000
1113414613	1-1134	1461	HOUSING; FLYWHEEL	000000	000000
1113414620	1-1134	1462	HOUSING; FLYWHEEL	000000	000000
1113414680	1-1134	1468	HOUSING; F/W	000000	000000
1113414700	1-1134	1470	HOUSING; FLYWHEEL	000000	000000
1113414701	1-1134	1470	HOUSING; FLYWHEEL	000000	000000
1113414703	1-1134	1470	HOUSING; FLYWHEEL	000000	000002
1113414704	1-1134	1470	HOUSING; FLYWHEEL	000000	000002
1113414981	1-1134	1498	HOUSING;FLYWHEEL	000000	000000
1113414982	1-1134	1498	HOUSING;FLYWHEEL	000000	000000
1113415010	1-1134	1501	HOUSING; FLYWHEEL	000000	000002
1113415011	1-1134	1501	HOUSING; FLYWHEEL	000000	000000
1113415012	1-1134	1501	HOUSING; FLYWHEEL	000000	000000
1113415090	1-1134	1509	HOUSING; FLYWHEEL	000000	000000
1113415220	1-1134	1522	HOUSING; FLYWHEEL	000000	000000
1113415221	1-1134	1522	HOUSING; FLYWHEEL	000000	000000
1113415820	1-1134	1582	HOUSING ;FLYWHEEL	000000	000001
1113415840	1-1134	1584	HOUSING ;FLYWHEEL	000000	000000
1113415850	1-1134	1585	HOUSING ;FLYWHEEL	000000	000002

1113415860	1-1134	1586	HOUSING;FLY WHEEL	000000	000000
1113415911	1-1134	1591	HOUSING; FLYWHEEL	000000	000003
1113415931	1-1134	1593	HOUSING; FLYWHEEL	000000	000000
1113415934	1-1134	1593	HOUSING; FLYWHEEL	000000	000000
1113415935	1-1134	1593	HOUSING; FLYWHEEL	000000	000000
1113416230	1-1134	1623	HOUSING;FLYWHEEL	000000	000000
1113416232	1-1134	1623	HOUSING;FLYWHEEL	000000	000002
1113416420	1-1134	1642	HOUSING; FLYWHEEL	000000	000001
1113416430	1-1134	1643	HOUSING FLYWHEEL	000000	000001
1113416460	1-1134	1646	HOUSING; FLYWHEEL	000000	000001
1113416531	1-1134	1653	HOUSING FLYWHEEL	000000	000000
1113416870	1-1134	1687	HOUSING; FLYWHEEL	000000	000002
1113416890	1-1134	1689	HOUSING; FLYWHEEL	000000	000000
1113416892	1-1134	1689	HOUSING; FLYWHEEL	000000	000000
1113420050	1-1134	2005	POINTER; TIMING	000000	000000
1113420070	1-1134	2007	POINTER;FLY-WHE	000000	000000
1113420140	1-1134	2014	POINTER; TIMING	000000	000033
1113420150	1-1134	2015	POINTER; TIMING CHECK	000000	000000
1113420170	1-1134	2017	POINTER; TIMING CHECK	000000	000000
1113420171	1-1134	2017	POINTER; TIMING CHECK	000001	000000
1113420180	1-1134	2018	POINTER; FLYWHE	000000	000001
1113420220	1-1134	2022	POINTER;	000000	000000
1113440360	1-1134	4036	PACKING	000000	000000
1113440380	1-1134	4038	GASKET; REAR COVER	000000	000000
1113440381	1-1134	4038	GASKET; REAR COVER	000000	000001
1113490161	1-1134	9016	SEAT,ENG FOOT	000000	000000
1113490190	1-1134	9019	COVER; CHECK HOLE E120	000000	000000
1113490630	1-1134	9063	COVER P/S PUMP	000000	000000
1113490730	1-1134	9073	COVER;TIMING CHECK HOLE	000000	000000
1113490840	1-1134	9084	COVER	000000	000000
1113490850	1-1134	9085	STAY*	000000	000000
1113490900	1-1134	9090	STAY; L HOUSING E120	000000	000000
1113490910	1-1134	9091	STAY; R HOUSING E120	000000	000000
1113490950	1-1134	9095	STAY; L HOUSING 6RB1,E120	000000	000000
1113490960	1-1134	9096	STAY; R HOUSING 6RB1,E120	000000	000000
1113491090	1-1134	9109	PACKING	000000	000000
1113491220	1-1134	9122	COVER;TIMING CHECK HOLE	000001	000000
1113491240	1-1134	9124	STAY;	000000	000000
1113491260	1-1134	9126	COVER; TIMING C	000000	000000
1113491270	1-1134	9127	WASHER; COVER F	000000	000064
1113491300	1-1134	9130	ADAPTER; FLYWHEEL	000000	000000
1113491310	1-1134	9131	COVER; POINTER	000020	000000
1113491440	1-1134	9144	GASKET;FLYWHEEL	000000	000000
1113491441	1-1134	9144	GASKET;FLYWHEEL	000000	000001
1113491460	1-1134	9146	COVER; TIMING C	000000	000003
1113491490	1-1134	9149	COLLAR;DISTNC,BRKT,INJ.P	000000	000000
1113491512	1-1134	9151	COVER; TACHOMETER DRIVE	000001	000000

1113491570	1-1134	9157	PLUG;N-SENSOR HOLE	000000	000000
1113491640	1-1134	9164	ADAPTER; HSG.	000000	000000
1113491670	1-1134	9167	STAY;	000000	000000
1113491680	1-1134	9168	STAY; HSG, F/W	000000	000000
1113491740	1-1134	9174	STAY HOUSING TO OIL PAN R	000001	000000
1113491750	1-1134	9175	STAY HOUSING TO OIL PAN L	000000	000000
1113492400	1-1134	9240	STAY; FLYWHEEL HSG	000000	000006
1113492410	1-1134	9241	STAY; FLYWHEEL HSG	000000	000010
1113492520	1-1134	9252	POINTER;FLYWHEEL HSG	000000	000000
1113601651	1-1136	0165	SUPERSEDED**	000000	000000
1113601842	1-1136	0184	OIL PAN ASM	000000	000000
1113601985	1-1136	0198	PAN ASM; OIL	000000	000000
1113602000	1-1136	0200	PAN ASM; OIL	000000	000000
1113602231	1-1136	0223	PAN ASM; OIL	000000	000000
1113602932	1-1136	0293	PAN ASM.;OIL	000000	000000
1113602934	1-1136	0293	PAN ASM.;OIL	000000	000000
1113603583	1-1136	0358	PAN ASM; OIL	000000	000000
1113603680	1-1136	0368	PAN ASM; OIL E120	000000	000000
1113603690	1-1136	0369	PAN ASM; OIL E120	000000	000000
1113603750	1-1136	0375	PAN ASM;OIL	000000	000000
1113603830	1-1136	0383	PAN ASM; OIL	000000	000000
1113604062	1-1136	0406	PAN ASM; OIL E120	000000	000000
1113604103	1-1136	0410	PAN ASM; OIL	000000	000001
1113604330	1-1136	0433	PAN ASM; OIL	000000	000000
1113604331	1-1136	0433	PAN ASM; OIL	000000	000000
1113604392	1-1136	0439	PAN ASM;OIL W/DRAIN PLUG	000000	000000
1113604420	1-1136	0442	PAN ASM.;OIL W/DRAIN PLUG	000000	000000
1113604421	1-1136	0442	PAN ASM.;OIL W/DRAIN PLUG	000000	000000
1113604514	1-1136	0451	PAN ASM; OIL	000000	000000
1113604572	1-1136	0457	PAN ASM; OIL	000000	000000
1113604630	1-1136	0463	PAN ASM; OIL E120	000000	000000
1113604681	1-1136	0468	PAN ASM; OIL 6BD1T	000001	000000
1113604703	1-1136	0470	PAN ASM; OIL	000000	000001
1113604720	1-1136	0472	PAN ASM; OIL	000000	000000
1113604721	1-1136	0472	PAN ASM; OIL	000000	000000
1113604760	1-1136	0476	PAN ASM; OIL	000000	000000
1113604761	1-1136	0476	PAN ASM; OIL	000000	000000
1113604970	1-1136	0497	PAN ASM; OIL	000000	000000
1113604971	1-1136	0497	PAN ASM; OIL	000000	000000
1113604990	1-1136	0499	PAN ASM; OIL, W/ DRAIN PL	000000	000000
1113604991	1-1136	0499	PAN ASM; OIL, W/ DRAIN PL	000000	000000
1113605070	1-1136	0507	PAN ASM; OIL	000000	000000
1113605130	1-1136	0513	PAN ASM.;OIL	000000	000000
1113605191	1-1136	0519	PAN ASM.;OIL,W/DRAIN PLUG	000000	000000
1113605200	1-1136	0520	SUPERSEDED**OIL PAN	000000	000000
1113605234	1-1136	0523	PAN ASM; OIL	000000	000000
1113605290	1-1136	0529	PAN, OIL	000000	000000

1113605291	1-1136	0529	PAN ASM;OIL	000000	000000
1113605292	1-1136	0529	PAN ASM;OIL	000001	000001
1113605373	1-1136	0537	OIL PAN	000000	000000
1113605440	1-1136	0544	PAN ASM; OIL	000000	000000
1113605441	1-1136	0544	PAN ASM; OIL	000000	000000
1113605456	1-1136	0545	PAN ASM; OIL, W/PLUG	000000	000000
1113605502	1-1136	0550	PAN ASM; OIL	000000	000001
1113605530	1-1136	0553	PAN ASM; OIL	000000	000000
1113605532	1-1136	0553	PAN ASM; OIL	000000	000000
1113605542	1-1136	0554	PAN ASM; OIL	000000	000000
1113605550	1-1136	0555	PAN ASM; OIL	000000	000000
1113605670	1-1136	0567	PAN ASM; OIL	000000	000000
1113605671	1-1136	0567	PAN ASM;OIL	000000	000001
1113605683	1-1136	0568	PAN ASM; OIL	000000	000000
1113605820	1-1136	0582	PAN ASM; OIL, W/PLUG	000000	000000
1113605821	1-1136	0582	PAN ASM; OIL, W/PLUG	000000	000000
1113605911	1-1136	0591	PAN ASM; OIL W/PLUG 6BG1	000000	000000
1113605912	1-1136	0591	PAN ASM; OIL W/PLUG 6BG1	000000	000000
1113605913	1-1136	0591	PAN ASM; OIL W/PLUG 6BG1	000000	000000
1113606190	1-1136	0619	PAN ASM; OIL	000000	000000
1113606191	1-1136	0619	PAN ASM; OIL	000000	000000
1113606211	1-1136	0621	PAN ASM; OIL 6SA1T	000000	000001
1113606241	1-1136	0624	PAN ASM; OIL	000000	000000
1113606271	1-1136	0627	PAN ASM; OIL	000000	000000
1113606272	1-1136	0627	PAN ASM;OIL	000000	000000
1113606273	1-1136	0627	PAN ASM;OIL	000000	000001
1113606380	1-1136	0638	PAN ASM; OIL	000000	000000
1113606381	1-1136	0638	PAN ASM; OIL	000000	000000
1113606510	1-1136	0651	PAN ASM; OIL	000000	000000
1113606511	1-1136	0651	PAN ASM; OIL	000000	000002
1113606532	1-1136	0653	PAN ASM.;OIL,W/DRAIN PLUG	000000	000000
1113606821	1-1136	0682	PAN ASM; OIL	000000	000000
1113606960	1-1136	0696	PAN ASM; OIL	000000	000000
1113606962	1-1136	0696	PAN ASM; OIL	000000	000000
1113606980	1-1136	0698	PAN ASM; OIL	000000	000000
1113607081	1-1136	0708	PAN ASM; OIL W/DRAIN PLUG	000000	000000
1113607082	1-1136	0708	PAN ASM; OIL W/DRAIN PLUG	000000	000000
1113607083	1-1136	0708	PAN ASM; OIL W/DRAIN PLUG	000000	000004
1113607220	1-1136	0722	PAN ASM; OIL	000000	000000
1113607221	1-1136	0722	PAN ASM; OIL	000000	000000
1113607235	1-1136	0723	PAN ASM; OIL	000000	000001
1113607302	1-1136	0730	PAN ASM; OIL	000000	000000
1113607303	1-1136	0730	PAN ASM; OIL	000000	000001
1113607440	1-1136	0744	PAN ASM; OIL	000000	000001
1113607451	1-1136	0745	PAN ASM; OIL	000000	000000
1113607620	1-1136	0762	PAN ASM; OIL, W/PLUG	000000	000000
1113607621	1-1136	0762	PAN ASM; OIL, W/PLUG	000000	000000

1113607700	1-1136	0770	PAN ASM; OIL	000000	000000
1113607701	1-1136	0770	PAN ASM; OIL	000000	000000
1113607750	1-1136	0775	OIL PAN ASM; W/DRAIN PLUG	000000	000000
1113607752	1-1136	0775	OIL PAN ASM; W/DRAIN PLUG	000000	000001
1113607831	1-1136	0783	PAN ASM.;OIL,W/ PLUG	000000	000001
1113607911	1-1136	0791	PAN ASM; OIL	000000	000000
1113607912	1-1136	0791	PAN ASM; OIL	000000	000000
1113607913	1-1136	0791	PAN ASM; OIL	000000	000002
1113608220	1-1136	0822	PAN ASM.;OIL,W/PLUG	000000	000007
1113608610	1-1136	0861	PAN ASM; OIL, W/PLUG	000000	000006
1113608850	1-1136	0885	PAN ASM; OIL	000000	000000
1113608860	1-1136	0886	PAN ASM;OIL	000000	000000
1113608871	1-1136	0887	PAN ASM; OIL	000000	000001
1113608900	1-1136	0890	PAN ASM; OIL	000000	000000
1113608910	1-1136	0891	PAN ASM;OIL	000000	000001
1113608960	1-1136	0896	PAN ASM; OIL	000000	000001
1113608970	1-1136	0897	PAN ASM;OIL	000000	000000
1113608971	1-1136	0897	PAN ASM;OIL	000000	000032
1113608982	1-1136	0898	SPACER;DIST. OIL PAN	000000	000000
1113608990	1-1136	0899	PAN ASM; OIL	000000	000002
1113609020	1-1136	0902	PAN ASM;OIL	000000	000000
1113609030	1-1136	0903	PAN ASM;OIL	000000	000000
1113609031	1-1136	0903	PAN ASM;OIL	000000	000004
1113609050	1-1136	0905	PAN ASM;OIL	000000	000003
1113609160	1-1136	0916	PAN ASM; OIL	000000	000002
1113609170	1-1136	0917	PAN ASM; OIL	000000	000001
1113609180	1-1136	0918	PAN ASM; OIL	000000	000005
1113610410	1-1136	1041	PACKING; OIL PAN	000000	000000
1113611690	1-1136	1169	PAN ASM; OIL E120	000000	000000
1113612220	1-1136	1222	PAN ASM; OIL E120	000000	000000
1113612221	1-1136	1222	PAN ASM; OIL E120	000000	000000
1113612460	1-1136	1246	PAN ASM; OIL 12PB1	000000	000000
1113613294	1-1136	1329	PAN ASM; OIL	000000	000000
1113613552	1-1136	1355	PAN ASM; OIL	000000	000001
1113613560	1-1136	1356	PAN; OIL, FC PAN ASM.; OI	000000	000000
1113613583	1-1136	1358	PAN ASM; OIL E120	000000	000000
1113613591	1-1136	1359	PAN ASM; OIL E120 N/A	000000	000000
1113614330	1-1136	1433	PAN ASM; OIL	000000	000000
1113614331	1-1136	1433	PAN ASM; OIL	000000	000000
1113614460	1-1136	1446	PAN ASM; OIL 6RB1	000000	000000
1113614661	1-1136	1466	OIL PAN	000000	000001
1113614890	1-1136	1489	PAN; OIL	000000	000000
1113615221	1-1136	1522	PAN; OIL, FC	000000	000001
1113615241	1-1136	1524	OIL PAN	000000	000001
1113615691	1-1136	1569	SPACER;DIST,OIL PAN	000000	000000
1113631063	1-1136	3106	SPINDLE; WATER PUMP	000000	000000
1113670090	1-1136	7009	PACKING;COVER	000000	000000

1113670200	1-1136	7020	GASKET; OIL PAN TO C	000000	000000
1113670210	1-1136	7021	PACKING;OIL PAN	000000	000000
1113670460	1-1136	7046	PACKING;OIL PAN	000000	000000
1113670470	1-1136	7047	PACKING; OIL CYL BLOCK DA	000000	000000
1113670480	1-1136	7048	PACKING; OIL PAN	000000	000000
1113670501	1-1136	7050	GASKET; OIL PAN	000000	000000
1113670550	1-1136	7055	PACKING,OIL:DISCONTINUED	000000	000000
1113670640	1-1136	7064	PACKING; OIL PAN	000000	000000
1113670650	1-1136	7065	OIL PAN GASKET	000000	000000
1113670660	1-1136	7066	PACKING;OIL PAN	000000	000002
1113670670	1-1136	7067	PACKING; OIL CYL BLOCK DA	000000	000000
1113670671	1-1136	7067	PACKING; OIL CYL BLOCK DA	000000	000001
1113670680	1-1136	7068	PACKING; OIL PAN	000001	000000
1113670710	1-1136	7071	PACKING; COVER	000000	000000
1113670711	1-1136	7071	PACKING; COVER	000000	000001
1113670720	1-1136	7072	GASKET; OIL PAN TO C/BL	000000	000000
1113670740	1-1136	7074	PACKING; OIL PAN E120	000000	000002
1113670760	1-1136	7076	PACKING; OIL PAN	000000	000000
1113670770	1-1136	7077	PACKING;OIL PAN	000000	000000
1113670820	1-1136	7082	GASKET;	000000	000009
1113670850	1-1136	7085	GASKET; OIL PAN TO C/BL	000000	000000
1113670911	1-1136	7091	PACKING;OIL PAN	000000	000000
1113670920	1-1136	7092	PACKING;OIL PAN	000000	000000
1113670921	1-1136	7092	PACKING;OIL PAN	000000	000000
1113670940	1-1136	7094	PACKING;OIL PAN-CYL BODY	000000	000000
1113670960	1-1136	7096	GASKET; OIL PAN TO C/BL	000000	000000
1113670961	1-1136	7096	GASKET; OIL PAN TO C/BL	000000	000000
1113670980	1-1136	7098	PACKING;OIL PAN-CYL.BODY	000000	000023
1113671000	1-1136	7100	PACKING;OIL PAN-CYL.BODY	000000	000000
1113671040	1-1136	7104	PACKING; OIL PAN	000000	000002
1113671050	1-1136	7105	GASKET; OIL PAN TO C	000000	000001
1113671110	1-1136	7111	GASKET;OIL PAN YO C/BL	000000	000000
1113671130	1-1136	7113	PACKING; OIL PAN	000000	000000
1113671210	1-1136	7121	GASKET;OIL PAN YO C/BL	000000	000000
1113671290	1-1136	7129	PACKING; OIL PAN	000000	000000
1113671291	1-1136	7129	PACKING; OIL PAN	000000	000017
1113671300	1-1136	7130	GASKET; OIL PAN YO C/BL	000000	000137
1113671310	1-1136	7131	GASKET; OIL PAN	000000	000178
1113671320	1-1136	7132	PACKING;OIL PAN-CYL. BODY	000027	000005
1113690800	1-1136	9080	SPACER; DISTANCE,OIL	000000	000000
1113690810	1-1136	9081	TUBE;DISTANCE	000001	000005
1113690930	1-1136	9093	ADAPTER;GUIDE	000000	000000
1113691030	1-1136	9103	CLIP; BREATHER E120	000000	000000
1113691040	1-1136	9104	COVER;OIL PAN	000000	000000
1113691150	1-1136	9115	CLIP; HOSE AIR BREATHER	000000	000000
1113691230	1-1136	9123	COVER 6SA1T	000000	000001
1113691340	1-1136	9134	COVER; OIL PAN 6RB1T	000011	000000

1113691460	1-1136	9146	CLIP; HOSE AIR B.	000001	000007
1113691570	1-1136	9157	SPACER; HARNESS	000000	000006
1114205910	1-1142	0591	CLEANER ASM; AIR	000000	000000
1115100080	1-1151	0008	METAL KIT; CRANK	000000	000000
1115100090	1-1151	0009	METAL KIT; CR/SHF	000000	000000
1115100110	1-1151	0011	METAL KIT; CRANK STD	000000	000000
1115100120	1-1151	0012	METAL KIT; CRANK STD	000000	000000
1115100250	1-1151	0025	METAL KIT; MAIN	000000	000000
1115100260	1-1151	0026	METAL KIT; MAIN	000000	000000
1115100310	1-1151	0031	METAL KIT; CRANK STD	000001	000000
1115100330	1-1151	0033	METAL KIT; CRANK	000003	000000
1115100360	1-1151	0036	METAL KIT; CRANK	000000	000000
1115100361	1-1151	0036	METAL KIT; CRANK	000000	000001
1115100390	1-1151	0039	METAL KIT; CR/S	000001	000009
1115100400	1-1151	0040	METAL KIT;CR/S	000000	000000
1115100410	1-1151	0041	METAL KIT; CRANK	000000	000001
1115100450	1-1151	0045	BEARING	000000	000000
1115100460	1-1151	0046	METAL KIT; CRANK	000001	000000
1115100470	1-1151	0047	METAL KIT; CRANK	000000	000000
1115100520			BEARING KIT;STD	000000	000000
1115100530			METAL KIT; CRANK	000001	000000
1115100601	1-1151	0060	METAL KIT; CRANK STD	000000	000031
1115100660			METAL KIT; CRANK	000000	000000
1115100670	1-1151	0067	METAL KIT	000000	000000
1115100740	1-1151	0074	METAL KIT;CR/S	000000	000000
1115100741	1-1151	0074	METAL KIT;CR/S	000021	000056
1115100742	1-1151	0074	METAL KIT;CR/S	000000	000000
1115100743	1-1151	0074	METAL KIT;CR/S	000000	000000
1115100870	1-1151	0087	METAL KIT; CRAN	000000	000015
1115100871	1-1151	0087	METAL KIT; CRAN	000000	000000
1115100872	1-1151	0087	METAL KIT; CRAN	000000	000000
1115100930	1-1151	0093	METAL KIT;CRANKSHAFT, STA	000000	000000
1115100931	1-1151	0093	METAL KIT;CRANKSHAFT, STA	000000	000000
1115100933	1-1151	0093	METAL KIT;CRANKSHAFT, STA	000000	000000
1115100934	1-1151	0093	METAL KIT;CRANKSHAFT, STA	000000	000000
1115100935	1-1151	0093	METAL KIT;CRANKSHAFT, STA	000000	000033
1115140320	1-1151	4032	METAL #3; LWR CRANK	000000	000000
1115150040	1-1151	5004	METAL SET; THRUST, STD.	000001	000000
1115150400	1-1151	5040	METAL SET; THRUST, STD.	000002	000004
1115160250			BEARING; CRANK,RR SET	000000	000000
1115170130			BEARING; CRANK,CENTER SET	000000	000000
1115180210			BEARING; CRANK,INNER SET	000000	000000
1115200350			METAL KIT; .25 CRANK	000000	000000
1115200870	1-1152	0087	METAL KIT; .25 CRANK	000000	000000
1115300120	1-1153	0012	METAL KIT; .25 CRANK	000001	000000
1115300260	1-1153	0026	METAL KIT; CRANK	000000	000000
1115300290	1-1153	0029	BEARING KIT, UNSI. 0.25	000000	000000

1115300310	1-1153	0031	METAL KIT; .25 CRANK	000000	000000
1115300350	1-1153	0035	METAL KIT; .50 CRANK	000000	000000
1115300390	1-1153	0039	METAL KIT; .25 CRANK	000002	000004
1115300400	1-1153	0040	METAL KIT	000000	000000
1115300410	1-1153	0041	METAL KIT	000001	000000
1115300740	1-1153	0074	METAL KIT	000000	000000
1115300741	1-1153	0074	METAL KIT	000000	000005
1115300742	1-1153	0074	METAL KIT	000000	000000
1115300870	1-1153	0087	METAL KIT; .50 CRANK	000000	000000
1115400120	1-1154	0012	BEARING KIT; CRANK	000000	000000
1115400260	1-1154	0026	METAL KIT; MAIN	000000	000000
1115400270	1-1154	0027	BEARING KIT, UNSI. 0.50	000000	000000
1115400390	1-1154	0039	METAL KIT; .50 CRANK	000002	000000
1115400740	1-1154	0074	METAL KIT	000000	000000
1115400741	1-1154	0074	METAL KIT	000000	000004
1115400742	1-1154	0074	METAL KIT	000000	000000
1115500390	1-1155	0039	METAL KIT; .75 CRANK	000006	000001
1115600390	1-1156	0039	METAL KIT	000000	000000
1115750400	1-1157	5040	METAL SET THRUST	000000	000000
1115990050	1-1159	9005	WASHER; THRUST,	000000	000000
1115990070	1-1159	9007	WASHER;THRUST	000000	000000
1115990071	1-1159	9007	WASHER;THRUST	000000	000002
1115990090	1-1159	9009	WASHER;THRUST,CR/SHF	000000	000027
1116110032	1-1161	1003	METAL; CAMSHAFT #1	000000	000000
1116110050	1-1161	1005	METAL; CAMSHAFT	000000	000000
1116110080	1-1161	1008	METAL; CAMSHAFT	000000	000005
1116120080	1-1161	2008	BEARING	000000	000000
1116160060	1-1161	6006	METAL SET; CAM #2	000000	000000
1116160170	1-1161	6017	CAM BRG NO2 SET	000000	000000
1116160210	1-1161	6021	SUPERSEDED**BEARING	000000	000000
1116160230	1-1161	6023	METAL BRG; CAM #2	000000	000014
1116170071	1-1161	7007	METAL SET; CAM #3	000001	000000
1116170150	1-1161	7015	METAL BRG; CAM #3	000000	000019
1116180061	1-1161	8006	METAL SET; CAM #4	000001	000000
1116180121	1-1161	8012	SUPERSEDED**BEARING	000000	000000
1116180160	1-1161	8016	METAL BRG; CAM #4	000000	000007
1116190151	1-1161	9015	METAL BRG SET; CAM #5	000001	000000
1116190181	1-1161	9018	METAL BRG SET; CAM #6	000001	000000
1116190211	1-1161	9021	METAL BRG; CAM #7	000000	000000
1116190490	1-1161	9049	METAL BRG CAM #6 STD E120	000000	000000
1116190520	1-1161	9052	METAL BRG; CAM #5	000000	000006
1116190550	1-1161	9055	METAL BRG; CAM #6	000000	000008
1116190580	1-1161	9058	METAL BRG; CAM #7 E120	000000	000004
1116800010	1-1168	0001	WASHER; TRHUST,CR/SH	000000	000000
1116800011	1-1168	0001	WASHER; THRUST,CR/SH	000000	000008
1116800012	1-1168	0001	WASHER; THRUST,CR/SH	000000	000000
1116800013	1-1168	0001	WASHER; THRUST,CR/SH	000000	000000

1117110050	1-1171	1005	INSERT; EXH VALVE	000019	000000
1117110200	1-1171	1020	INSERT;VALVE	000000	000000
1117110230	1-1171	1023	EXHAUST VALVE SEAT	000000	000000
1117110240	1-1171	1024	INSERT; VALVE EXH	000000	000000
1117110250	1-1171	1025	INSERT; VALVE SEAT E120	000000	000000
1117110260	1-1171	1026	INSERT;VLV SEAT	000000	000007
1117110410	1-1171	1041	INSERT; VLV SEA	000000	000029
1117110430	1-1171	1043	INSERT; VLV SEAT,EXH	000006	000297
1117110440	1-1171	1044	INSERT; VALVE	000000	000015
1117110470	1-1171	1047	INSERT; VALVE SEAT, EXH.	000000	000000
1117110510	1-1171	1051	INSERT; VALVE ASM-EXH.	000000	000000
1117110540	1-1171	1054	INSERT; VALVE,	000000	000000
1117110601	1-1171	1060	INSERT; VALVE SEAT, EX	000000	000000
1117110710	1-1171	1071	INSERT; VALVE	000000	000000
1117110740	1-1171	1074	SEAT; VLV INSERT	000000	000000
1117110741	1-1171	1074	SEAT; VLV INSERT	000000	000007
1117110770	1-1171	1077	SEAT;VLV INSERT	000000	000000
1117110820	1-1171	1082	SEAT; VLV INSERT	000000	000015
1117110870	1-1171	1087	SEAT; VLV INSERT	000000	000006
1117150050	1-1171	5005	INSERT; VALVE INLET DA120	000012	000006
1117150060	1-1171	5006	INSERT; VALVE	000000	000000
1117150061	1-1171	5006	INSERT; VALVE	000000	000000
1117150080	1-1171	5008	INSERT; INLET VALVE	000000	000000
1117150290	1-1171	5029	INSERT; VALVE SEAT E120	000000	000076
1117150300	1-1171	5030	INTAKE VALVE SEAT	000000	000000
1117150320	1-1171	5032	INSERT; VALVE INL	000000	000000
1117150340	1-1171	5034	INSERT; VALVE S	000000	000008
1117150350	1-1171	5035	INSERT; VALVE SEAT INLET	000000	000000
1117150400	1-1171	5040	INSERT; VLV SEAT,INL	000000	000000
1117150430	1-1171	5043	INSERT;VALVE SEAT,INL	000024	000000
1117150460	1-1171	5046	INSERT; VALVE SEAL 6SA1	000000	000025
1117150500	1-1171	5050	INSERT VLV SEAT	000000	000006
1117150540	1-1171	5054	INSERT; VLV SEAT,INL	000000	000000
1117150541	1-1171	5054	INSERT; VLV SEAT,INL	000006	000137
1117150590	1-1171	5059	INSERT; VALVE	000001	000000
1117150600	1-1171	5060	INSERT; VALVE 6SA1	000003	000000
1117150610	1-1171	5061	INSERT;	000000	000000
1117150700	1-1171	5070	INSERT; VLV SEA	000000	000004
1117150730	1-1171	5073	INSERT; VALVE SEAT INLET	000001	000028
1117150770	1-1171	5077	INSERT; VALVE SEAT-INLET	000000	000000
1117150850	1-1171	5085	INSERT; VALVE SEAT INL.	000000	000000
1117150951	1-1171	5095	INSERT; VALVE SEAT	000000	000000
1117151090	1-1171	5109	SEAT; VLV INSERT	000006	000000
1117151091	1-1171	5109	SEAT; VLV INSERT	000000	000009
1117151120	1-1171	5112	SEAT;VLV INSERT	000000	000000
1117151121	1-1171	5112	SEAT;VLV INSERT	000000	000014
1117151220	1-1171	5122	SEAT;VLV INSERT	000000	000000

1117151240	1-1171	5124	SEAT; VLV INSERT	000000	000009
1117190030	1-1171	9003	COVER; WATER JACKET	000000	000000
1117210010	1-1172	1001	GUIDE; VALVE E120	000000	000216
1117210040	1-1172	1004	GUIDE;VALVE INL&EHX	000000	000072
1117210050	1-1172	1005	GUIDE; VALVE	000000	000000
1117210080	1-1172	1008	GUIDE; VLV, INL	000000	000158
1117210120	1-1172	1012	GUIDE; VLV	000000	000091
1117210130	1-1172	1013	GUIDE; VALVE, INL & EXH	000538	000444
1117290031	1-1172	9003	BRIDGE GUIDE E120	000000	000001
1117290050	1-1172	9005	GUIDE;BRIDGE	000000	000000
1117400961	1-1174	0096	BREATHER ASM; AIR	000000	000000
1117401022	1-1174	0102	FILLER ASM; OIL E120	000000	000000
1117401133	1-1174	0113	FILLER ASM; OIL	000000	000000
1117401181	1-1174	0118	FILLER ASM;OIL	000000	000000
1117401210	1-1174	0121	BREATHER ASM; AIR 6BD1T	000000	000000
1117401250	1-1174	0125	FILLER ASM; OIL PAN	000000	000000
1117401310	1-1174	0131	BREATHER ASM; AIR 6BD/BG1	000000	000000
1117401390	1-1174	0139	BREATHER ASM; AIR 6BD/BG1	000000	000000
1117401393	1-1174	0139	BREATHER ASM; AIR 6BD/BG1	000001	000000
1117401442	1-1174	0144	BREATHER ASM;AI	000000	000002
1117401460	1-1174	0146	BREATHER ASM; AIR	000000	000000
1117401490	1-1174	0149	BREATHER ASM; AIR	000000	000000
1117401540	1-1174	0154	BREATHER ASM; AIR	000000	000001
1117401562	1-1174	0156	BREATHER ASM; AIR	000000	000001
1117401590	1-1174	0159	BREATHER ASM; AIR	000000	000000
1117401670	1-1174	0167	BREATHER ASM; AIR	000000	000000
1117401671	1-1174	0167	BREATHER ASM; AIR	000000	000000
1117401690	1-1174	0169	BREATHER; AIR	000000	000000
1117401691	1-1174	0169	BREATHER; AIR	000000	000026
1117401710	1-1174	0171	BREATHER ASM.;AIR	000000	000000
1117401722	1-1174	0172	VENTILATOR	000000	000001
1117401741	1-1174	0174	FILLER ASM; OIL	000000	000000
1117401810	1-1174	0181	BREATHER; AIR	000000	000000
1117401811	1-1174	0181	BREATHER; AIR	000000	000047
1117401842	1-1174	0184	BREATHER ASM; AIR	000000	000000
1117401850	1-1174	0185	BREATHER ASM; AIR, 6BD1T	000000	000000
1117401851	1-1174	0185	BREATHER ASM; AIR, 6BD1T	000000	000000
1117401910	1-1174	0191	FILLER ASM; OIL	000000	000000
1117402010	1-1174	0201	FILLER ASM; OIL	000000	000000
1117402012	1-1174	0201	FILLER ASM; OIL	000000	000000
1117402020	1-1174	0202	FILLER ASM; OIL	000000	000000
1117402021	1-1174	0202	FILLER ASM; OIL	000000	000000
1117402030	1-1174	0203	FILLER ASM; OIL	000000	000000
1117402031	1-1174	0203	FILLER ASM;	000000	000000
1117402041	1-1174	0204	FILLER ASM; OIL	000002	000000
1117402050	1-1174	0205	FILLER ASM; OIL	000000	000000
1117402051	1-1174	0205	FILLER ASM; OIL	000000	000000

1117402060	1-1174	0206	FILLER ASM; OIL	000000	000000
1117402061	1-1174	0206	FILLER ASM; OIL	000000	000000
1117402110	1-1174	0211	BREATHER ASM; A	000000	000000
1117402200	1-1174	0220	BREATHER ASM; AIR	000000	000000
1117402260	1-1174	0226	BREATHER ASM; OIL	000000	000000
1117402261	1-1174	0226	BREATHER ASM; OIL	000000	000000
1117402280	1-1174	0228	VENTILATOR	000001	000000
1117402421	1-1174	0242	BREATHER ASM;AIR	000000	000000
1117402510	1-1174	0251	BREATHER ASM; AIR	000001	000000
1117402513	1-1174	0251	BREATHER AIR	000000	000000
1117402520	1-1174	0252	BREATHER ASM; AIR	000000	000001
1117402530	1-1174	0253	BREATHER ASM; OIL	000000	000001
1117402651	1-1174	0265	BREATHER;AIR	000000	000000
1117402652	1-1174	0265	BREATHER;AIR	000000	000001
1117402661	1-1174	0266	BREATHER; AIR	000000	000000
1117402690	1-1174	0269	BREATHER; AIR	000000	000012
1117402730	1-1174	0273	FILLER; OIL	000000	000000
1117402731	1-1174	0273	FILLER; OIL	000002	000000
1117402801	1-1174	0280	SEPERATOR;OIL,PCV	000001	000000
1117402841	1-1174	0284	HOSE; OIL DRAIN	000001	000002
1117410750	1-1174	1075	FILLER ASM; OIL	000000	000000
1117410751	1-1174	1075	FILLER ASM; OIL	000000	000000
1117410961	1-1174	1096	FILLER ASM;OIL	000000	000000
1117410981	1-1174	1098	FILLER ASM; OIL	000000	000000
1117411170	1-1174	1117	FILLER; OIL	000000	000000
1117411190	1-1174	1119	FILLER; OIL	000000	000000
1117412510	1-1174	1251	FILLER; OIL	000000	000001
1117412800	1-1174	1280	FILLER; OIL	000000	000000
1117412801	1-1174	1280	FILLER; OIL	000000	000010
1117420070	1-1174	2007	PIPE ASM: BLOW-BY	000000	000000
1117420081	1-1174	2008	PIPE; DRAIN 6BD1	000000	000000
1117420110	1-1174	2011	PIPE; DRAIN	000000	000000
1117420140	1-1174	2014	PIPE; DRAIN 6BD1T	000001	000000
1117420200	1-1174	2020	PIPE; DRAIN 6BG1	000000	000000
1117420201	1-1174	2020	PIPE; DRAIN 6BG1	000000	000000
1117420210	1-1174	2021	PIPE; DRAIN 6BG1	000000	000000
1117420211	1-1174	2021	PIPE; DRAIN 6BG1	000000	000006
1117420220	1-1174	2022	PIPE; DRAIN	000000	000000
1117420230	1-1174	2023	PIPE;DRAIN	000000	000000
1117420240	1-1174	2024	PIPE ASM.;BLOW-BY	000000	000000
1117420250	1-1174	2025	HOSE;RUBBER,DRAIN	000001	000000
1117420271	1-1174	2027	PIPE; DRAIN	000000	000000
1117420320	1-1174	2032	BREATHER; DRAIN PIPE 6BD/	000002	000000
1117420350	1-1174	2035	PIPE; DRAIN	000000	000000
1117420351	1-1174	2035	PIPE; DRAIN	000000	000000
1117420360	1-1174	2036	PIPE; DRAIN	000002	000000
1117420370	1-1174	2037	PIPE; DRAIN 6BD1T	000000	000003

1117420381	1-1174	2038	PIPE; DRAIN	000000	000000
1117420400	1-1174	2040	PIPE;DRAIN	000000	000000
1117420440	1-1174	2044	PIPE ASM: BLOW-BY	000000	000001
1117420450	1-1174	2045	PIPE; DRAIN	000000	000000
1117420451	1-1174	2045	PIPE; DRAIN	000000	000000
1117420460	1-1174	2046	PIPE; DRAIN	000000	000000
1117420470	1-1174	2047	PIPE;DRAIN	000000	000000
1117420490	1-1174	2049	PIPE; DRAIN	000000	000000
1117420510	1-1174	2051	PIPE;DRAIN	000000	000000
1117420520	1-1174	2052	HOSE; RUBBER,AIR	000001	000000
1117420560	1-1174	2056	PIPE;DRAIN	000001	000000
1117420570	1-1174	2057	PIPE; DRAIN	000002	000000
1117420581	1-1174	2058	HOSE; RUBBER, AIR	000000	000000
1117420582	1-1174	2058	HOSE; RUBBER, AIR	000000	000003
1117420602	1-1174	2060	PIPE;DRAIN	000001	000000
1117420701	1-1174	2070	PIPE;DRAIN	000000	000001
1117420791	1-1174	2079	HOSE; RUBBER,AIR	000000	000000
1117420792	1-1174	2079	HOSE; RUBBER,AIR	000000	000000
1117420793	1-1174	2079	HOSE; RUBBER,AIR	000000	000000
1117420794	1-1174	2079	HOSE; RUBBER,AIR	000000	000003
1117420830	1-1174	2083	HOSE;RUBBER, AIR	000000	000000
1117420831	1-1174	2083	HOSE;RUBBER, AIR	000000	000000
1117420832	1-1174	2083	HOSE;RUBBER, AIR	000000	000015
1117420851	1-1174	2085	HOSE; RUBBER, AIR	000000	000000
1117420852	1-1174	2085	HOSE; RUBBER, AIR	000000	000000
1117420853	1-1174	2085	HOSE; RUBBER, AIR	000000	000000
1117420854	1-1174	2085	HOSE; RUBBER, AIR	000000	000006
1117420862	1-1174	2086	HOSE; RUBBER, AIR	000000	000003
1117490630	1-1174	9063	BRACKET; OIL FILLER	000000	000000
1117490670	1-1174	9067	BRACKET; OIL FILLER	000000	000000
1117490671	1-1174	9067	BRACKET; OIL FILLER	000000	000000
1117490720	1-1174	9072	BRACKET; DRAIN	000000	000000
1117490740	1-1174	9074	COVER;	000000	000000
1117490880	1-1174	9088	BRACKET; DRAIN PIPE	000000	000000
1117490980	1-1174	9098	BRACKET; A/BREATHER	000000	000000
1117490990	1-1174	9099	BRACKET; AIR BREATHER	000000	000001
1117491030	1-1174	9103	COVER; OIL	000000	000000
1117491040	1-1174	9104	STAY; BREATHER HOSE	000000	000000
1117491060	1-1174	9106	ADAPTER; AIR UM6BD1	000000	000002
1117491110	1-1174	9111	BRACKET; OIL FILLER & GUI	000000	000000
1117491840	1-1174	9184	COVER;HOLE	000000	000000
1117491860	1-1174	9186	COVER;P/S	000000	000004
1117491900	1-1174	9190	COVER; HOLE	000000	000000
1117491940	1-1174	9194	COVER;HOLE	000000	000002
1117492040	1-1174	9204	HOSE; RUBBER,AIR	000000	000001
1117492090	1-1174	9209	BREATHER; AIR	000000	000001
1117492100	1-1174	9210	HOSE; RUBBER,AIR BREATHER	000000	000001

1117492230	1-1174	9223	PIPE; BREATHER	000000	000001
1117500060	1-1175	0006	CAP ASM	000000	000000
1117500110	1-1175	0011	CAP ASM;OIL FI	000000	000000
1117500120	1-1175	0012	CAP ASM; OIL	000000	000003
1117500130	1-1175	0013	CAP; FILLER	000000	000000
1117500150	1-1175	0015	CAP ASM; FILLER	000005	000000
1117500170	1-1175	0017	CAP ASM; OIL FILLER	000000	000014
1117500200	1-1175	0020	CAP;OIL FILLER	000000	000000
1117500240	1-1175	0024	CAP;OIL FILLER	000000	000000
1117500241	1-1175	0024	CAP;OIL FILLER	000017	000039
1117510030	1-1175	1003	CAP; FILLER OIL 6RB1/E120	000000	000000
1117510051	1-1175	1005	CAP;OIL FILLER	000000	000051
1117510080	1-1175	1008	CAP; FILLER OIL 6RB1/E120	000001	000011
1117600450	1-1176	0045	GAUGE ASM; OIL LEVEL E120	000000	000000
1117600520	1-1176	0052	GAUGE ASM; OIL LEVEL E120	000000	000000
1117600580	1-1176	0058	GAUGE ASM; OIL LEVEL E120	000000	000000
1117600581	1-1176	0058	GAUGE ASM; OIL LEVEL E120	000000	000003
1117600761	1-1176	0076	GAUGE ASM; OIL	000000	000000
1117600810	1-1176	0081	GAUGE ASM; OIL LEVEL	000000	000000
1117601472	1-1176	0147	GAGE ASM:LEVEL	000000	000000
1117601611	1-1176	0161	GAUGE ASM; O/LEVEL,L1=277	000000	000000
1117601621	1-1176	0162	GAUGE ASM.;O/LEVEL,L1=277	000000	000000
1117601672	1-1176	0167	GAUGE ASM; OIL LEVEL 12PB	000000	000000
1117601673	1-1176	0167	GAUGE ASM; OIL LEVEL 12PB	000000	000000
1117601711	1-1176	0171	GAUGE ASM; OIL LEVEL E120	000000	000000
1117601722	1-1176	0172	GAUGE ASM; OIL LEVEL	000000	000000
1117601790	1-1176	0179	GAUGE ASM; OIL LEVEL 6BD1	000000	000000
1117601811	1-1176	0181	GAUGE ASM; OIL LEVEL	000003	000000
1117601820	1-1176	0182	GAUGE ASM; OIL LEVEL	000004	000000
1117601831	1-1176	0183	GAUGE ASM; OIL LEVEL	000002	000000
1117601850	1-1176	0185	GAUGE ASM; OIL LEVEL	000000	000000
1117601860	1-1176	0186	GAUGE ASM; OIL LEVEL 4BD1	000000	000000
1117601871	1-1176	0187	GAUGE ASM.; OIL LEVEL	000000	000000
1117601930	1-1176	0193	GAUAGE ASM;OIL LVL L1=506	000000	000006
1117601940	1-1176	0194	GAUGE ASM; OIL LEVEL 6BD1	000000	000000
1117601941	1-1176	0194	GAUGE ASM; OIL LEVEL 6BD1	000000	000000
1117601981	1-1176	0198	GAGE ASM;LEVEL	000000	000000
1117601990	1-1176	0199	GUAGE ASM; OIL LEVEL	000000	000000
1117602000	1-1176	0200	GAUGE ASM; OIL LEVEL	000000	000000
1117602001	1-1176	0200	GAUGE ASM; OIL LEVEL	000000	000002
1117602020	1-1176	0202	GUAGE ASM;OIL LVL L1=241	000033	000000
1117602040	1-1176	0204	GAUGE ASM; OIL LEVEL 6BD1	000002	000009
1117602131	1-1176	0213	GAUGE ASM; OIL LEVEL	000000	000000
1117602132	1-1176	0213	GAUGE ASM; OIL LEVEL	000000	000003
1117602210	1-1176	0221	GAUGE; OIL LEVEL	000000	000000
1117602220	1-1176	0222	GAUGE ASM; OIL LEVEL	000000	000000
1117602270	1-1176	0227	GAUGE; OIL LEVEL	000000	000000

1117602330	1-1176	0233	GAUGE ASM.; OIL LEVEL	000000	000000
1117602380	1-1176	0238	GAUGE ASM; OIL LEVEL 4BD1	000000	000004
1117602400	1-1176	0240	GAUGE ASM.; OIL LEVEL	000000	000000
1117602500	1-1176	0250	GAUGE ASM.; OIL LEVEL	000000	000000
1117602570	1-1176	0257	GAUGE ASM; OIL LEVEL	000000	000000
1117602571	1-1176	0257	GAUGE ASM; OIL LEVEL	000010	000000
1117602611	1-1176	0261	GAUGE ASM; OIL	000001	000000
1117602640	1-1176	0264	GAUGE ASM; OIL LEVEL	000000	000000
1117602651	1-1176	0265	GAUGE ASM; OIL LEVEL	000000	000000
1117602681	1-1176	0268	GAUGE; OIL LEVE	000000	000000
1117602690	1-1176	0269	GAUGE ASM.; OIL LEVEL	000002	000000
1117602730	1-1176	0273	GAUGE ASM.; OIL LEVEL	000015	000000
1117602750	1-1176	0275	GAUGE ASM; OIL LEVEL	000000	000000
1117602760	1-1176	0276	GAUGE; OIL LEVEL	000000	000005
1117602802	1-1176	0280	GAUGE ASM; OIL	000000	000003
1117602820	1-1176	0282	GAUGE ASM.; OIL LEVEL	000001	000000
1117602830	1-1176	0283	GAUGE ASM; OIL	000000	000000
1117602840	1-1176	0284	GAUGE ASM; OIL LEVEL	000000	000005
1117602850	1-1176	0285	GAUGE ASM;OIL LEVEL	000000	000002
1117602860	1-1176	0286	GAUGE ASM.; OIL LEVEL	000000	000000
1117602880	1-1176	0288	GAUGE ASM.; OIL LEVEL	000000	000000
1117602900	1-1176	0290	GAUGE ASM; OIL	000002	000000
1117602921	1-1176	0292	GAUGE ASM; OIL LEVEL	000000	000003
1117602990	1-1176	0299	GAUGE ASM;OIL LEVEL	000000	000000
1117602991	1-1176	0299	GAUGE ASM;OIL LEVEL	000000	000004
1117603030	1-1176	0303	GAUGE ASM;OIL LEVEL	000000	000000
1117603033	1-1176	0303	GAUGE ASM;OIL LEVEL	000001	000000
1117603190	1-1176	0319	GAUGE;OIL LEVEL	000000	000000
1117603221	1-1176	0322	GAUGE ASM.; OIL LEVEL	000000	000000
1117603250	1-1176	0325	GAUGE;OIL LEVEL	000000	000000
1117603251	1-1176	0325	GAUGE;OIL LEVEL	000000	000006
1117603290	1-1176	0329	GAUGE; OIL LEVEL	000000	000001
1117603370	1-1176	0337	GAUGE ASM.; OIL LEVEL	000000	000000
1117603380	1-1176	0338	GAUGE ASM; OIL LEVEL	000000	000000
1117603390	1-1176	0339	GAUGE ASM; OIL	000001	000005
1117603410	1-1176	0341	GAUGE ASM; OIL	000000	000000
1117603420	1-1176	0342	GAUGE ASM.; 0/LEVEL	000002	000000
1117603500	1-1176	0350	GAUGE ASM; OIL	000002	000000
1117603510	1-1176	0351	GAUGE ASM; OIL	000000	000000
1117603530	1-1176	0353	GAUGE ASM.;OIL,	000003	000000
1117603540	1-1176	0354	GAUGE ASM OIL LEVEL	000000	000000
1117603541	1-1176	0354	GAUGE ASM OIL LEVEL	000009	000000
1117603550	1-1176	0355	GAUGE ASM; OIL LEVEL	000000	000000
1117603650	1-1176	0365	GAUGE ASM; OIL	000000	000000
1117603651	1-1176	0365	GAUGE ASM; OIL	000000	000000
1117603670	1-1176	0367	GAUGE ASM; OIL	000000	000001
1117603680	1-1176	0368	GAUGE ASM; OIL	000000	000005

1117603731	1-1176	0373	GAUGE ASM.;OIL LEVEL L530	000000	000000
1117603780	1-1176	0378	GAUGE ASM; OIL	000000	000002
1117603820	1-1176	0382	GAUGE ASM; OIL	000001	000000
1117603971	1-1176	0397	OIL LEVEL	000000	000001
1117604001	1-1176	0400	GAGE ASM;LEVEL,OIL	000000	000001
1117604130	1-1176	0413	GAUGE ASM. ; OIL LEVEL	000000	000000
1117604170	1-1176	0417	GASE;ASM;OIL LVL ENG	000000	000000
1117604201	1-1176	0420	GAUGE; OIL LEVEL	000000	000011
1117604210	1-1176	0421	GAUGE; OIL LEVEL	000000	000079
1117604220	1-1176	0422	GAUGE; OIL LEVEL	000000	000000
1117604410	1-1176	0441	GAUGE; OIL LEVEL	000000	000000
1117604430	1-1176	0443	GAUGE;OIL LEVEL	000000	000000
1117604450	1-1176	0445	GAUGE;OIL LEVEL	000000	000000
1117604460	1-1176	0446	GAUGE; OIL LEVEL	000000	000000
1117604461	1-1176	0446	GAUGE; OIL LEVEL	000000	000038
1117604490	1-1176	0449	GASE; ASM; OIL	000000	000025
1117604500	1-1176	0450	GAUGE; OIL LEVEL	000000	000000
1117604501	1-1176	0450	GAUGE; OIL LEVEL	000000	000047
1117604510	1-1176	0451	GAUGE; OIL	000000	000000
1117604521	1-1176	0452	GAUGE; OIL LEVEL	000000	000050
1117604540	1-1176	0454	GAUGE; OIL LEVEL	000001	000002
1117604550	1-1176	0455	GAUGE; OIL LEVEL	000000	000007
1117610340	1-1176	1034	GAUGE ASM; OIL LEVEL	000000	000000
1117660360	1-1176	6036	TUBE ASM; OIL GUIDE E120	000000	000000
1117660380	1-1176	6038	TUBE ASM; OIL GUIDE E120	000000	000000
1117660390	1-1176	6039	TUBE ASM; OIL GUIDE	000000	000000
1117660821	1-1176	6082	GUIDE TUBE ASM	000000	000000
1117661321	1-1176	6132	TUBE ASM; GUIDE	000000	000000
1117661370	1-1176	6137	TUBE ASM; OIL GUIDE E120	000000	000000
1117661410	1-1176	6141	TUBE;OIL GAUGE	000000	000004
1117661420	1-1176	6142	TUBE ASM; OIL GUIDE	000000	000000
1117661430	1-1176	6143	TUBE ASM; OIL GUIDE	000000	000000
1117661470	1-1176	6147	TUBE ASM GUIDE	000000	000000
1117661550	1-1176	6155	TUBE ASM; OIL GUIDE GAUGE	000000	000000
1117661552	1-1176	6155	TUBE ASM; OIL GUIDE GAUGE	000000	000000
1117661581	1-1176	6158	TUBE ASM; OIL GUIDE GAUGE	000000	000000
1117661582	1-1176	6158	TUBE ASM; OIL GUIDE GAUGE	000000	000000
1117661600	1-1176	6160	TUBE ASM; OIL GUIDE GAUGE	000000	000000
1117661722	1-1176	6172	TUBE ASM; OIL GUIDE LEVEL	000000	000002
1117661723	1-1176	6172	TUBE ASM; OIL GUIDE LEVEL	000000	000000
1117661821	1-1176	6182	TUBE ASM; OIL GUIDE	000000	000001
1117661910	1-1176	6191	TUBE ASM; OIL GUIDE	000000	000000
1117661911	1-1176	6191	TUBE ASM; OIL GUIDE	000000	000000
1117661920	1-1176	6192	TUBE ASM; OIL GUIDE	000000	000000
1117662100	1-1176	6210	TUBE ASM; OIL GUIDE GAUGE	000000	000000
1117662150	1-1176	6215	TUBE ASM; OIL GUIDE GAUGE	000000	000000
1117662151	1-1176	6215	TUBE ASM; OIL GUIDE GAUGE	000000	000000

1117662160	1-1176	6216	TUBE:GUIDE	000000	000000
1117662210	1-1176	6221	TUBE ASM; OIL GUIDE	000000	000000
1117662211	1-1176	6221	TUBE ASM; OIL GUIDE	000000	000000
1117662220	1-1176	6222	TUBE ASM; OIL GUIDE	000000	000000
1117662230	1-1176	6223	TUBE ASM; OIL GUIDE GAUGE	000000	000000
1117662231	1-1176	6223	TUBE ASM; OIL GUIDE GAUGE	000000	000000
1117662410	1-1176	6241	PIPE;GUIDE,OIL	000000	000003
1117662430	1-1176	6243	TUBE;OIL GAUGE	000000	000000
1117662441	1-1176	6244	TUBE ASM; OIL GUIDE 6SA1T	000000	000000
1117662442	1-1176	6244	TUBE ASM; OIL GUIDE 6SA1T	000000	000000
1117662470	1-1176	6247	TUBE;GUIDE,LEVE	000000	000000
1117662550	1-1176	6255	TUBE ASM; GUIDE	000000	000000
1117662551	1-1176	6255	TUBE ASM; GUIDE	000000	000000
1117662730	1-1176	6273	TUBE ASM; OIL GUIDE GAUGE	000000	000000
1117662740	1-1176	6274	TUBE; GUIDE	000000	000000
1117662741	1-1176	6274	TUBE; GUIDE	000002	000000
1117662770	1-1176	6277	TUBE ASM; OIL GUIDE GAUGE	000000	000000
1117662810	1-1176	6281	TUBE ASM; OIL GUIDE GAUGE	000000	000000
1117662820	1-1176	6282	TUBE ASM; OIL GUIDE 6RB1T	000000	000000
1117662830	1-1176	6283	PIPE; GUID	000000	000000
1117662831	1-1176	6283	TUBE;GUIDE	000000	000000
1117662832	1-1176	6283	TUBE;GUIDE	000000	000001
1117662901	1-1176	6290	TUBE ASM; OIL GUIDE GUAGE	000000	000000
1117663041	1-1176	6304	TUBE ASM; OIL GUIDE GUAGE	000000	000000
1117663042	1-1176	6304	TUBE ASM; OIL GUIDE GUAGE	000002	000000
1117663180	1-1176	6318	TUBE ASM; OIL GUIDE GUAGE	000000	000000
1117663181	1-1176	6318	TUBE ASM; OIL GUIDE GUAGE	000000	000000
1117663222	1-1176	6322	TUBE ASM; OIL GUIDE GAUGE	000000	000000
1117663223	1-1176	6322	TUBE ASM; OIL GUIDE GAUGE	000000	000001
1117663300	1-1176	6330	TUBE; GUIDE, OIL	000000	000000
1117663550	1-1176	6355	TUBE ASM; OIL GUIDE GAUGE	000001	000000
1117663610	1-1176	6361	TUBE ASM; OIL GUIDE	000003	000000
1117663700	1-1176	6370	TUBE; GUIDE, LEVEL GAUGE	000000	000000
1117663701	1-1176	6370	TUBE; GUIDE, LEVEL GAUGE	000000	000004
1117663770	1-1176	6377	TUBE; GUIDE, LEVEL GAUGE	000000	000000
1117663810	1-1176	6381	TUBE; GUIDE, OIL	000000	000000
1117663860	1-1176	6386	TUBE; GUIDE-OIL	000000	000001
1117663871	1-1176	6387	GUIDE; TUBE	000000	000000
1117664020	1-1176	6402	TUBE; GUIDE, LEVEL	000001	000000
1117664271	1-1176	6427	TUBE; GUIDE, LEVEL GAUGE	000000	000000
1117664350	1-1176	6435	GUIDE OIL LEVEL GAUGE	000000	000004
1117664550	1-1176	6455	TUBE	000000	000001
1117664630	1-1176	6463	TUBE;GUIDE,LEVEL GAUGE	000000	000000
1117664870	1-1176	6487	TUBE;GUIDE,LEVEL GAUGE	000000	000000
1117664910	1-1176	6491	TUBE;GUIDE,LEVEL GAUGE	000000	000000
1117665390	1-1176	6539	TUBE; GUIDE,OIL LEVEL GAU	000000	000006
1117665460	1-1176	6546	BRACKET; TUBE,OIL LEVEL G	000001	000000

1117665590	1-1176	6559	TUBE;GUIDE,OIL LVL GAUGE	000000	000001
1117665640	1-1176	6564	TUBE;GUIDE OIL LEVEL GAUG	000000	000000
1117665681	1-1176	6568	TUBE;GUIDE,OIL LEVEL GAUG	000000	000000
1117665800	1-1176	6580	TUBE;GUIDE OIL LEVEL GAUG	000000	000002
1117665950	1-1176	6595	TUBE;GUIDE,OIL LEVEL GAUG	000000	000001
1117666090	1-1176	6609	TUBE; GUIDE,OIL LEVEL GAU	000000	000000
1117666091	1-1176	6609	TUBE; GUIDE,OIL LEVEL GAU	000000	000001
1117666240	1-1176	6624	TUBE;GUIDE,OIL LVL GAUGE	000000	000000
1117666241	1-1176	6624	TUBE;GUIDE,OIL LVL GAUGE	000000	000005
1117690630	1-1176	9063	STAY;GUIDE TUBE	000000	000000
1117690640	1-1176	9064	STAY;GUIDE TUBE	000000	000000
1117690800	1-1176	9080	BRKT;GUIDE TUBE	000000	000000
1117690910	1-1176	9091	BRKT:GUIDE TUBE	000000	000000
1117691060	1-1176	9106	STAY;GUIDE TUBE	000000	000000
1117691070	1-1176	9107	STAY; GUIDE TUBE	000000	000000
1117691130	1-1176	9113	STAY;GUIDE TUBE	000000	000000
1117691160	1-1176	9116	BRACKET; LEVEL	000000	000000
1117691180	1-1176	9118	BRACKET;GUIDE TUBE	000000	000000
1117691190	1-1176	9119	STAY; GUIDE TUBE 6RB1	000000	000000
1117691290	1-1176	9129	BRACKET;TUBE,OI	000000	000000
1117691291	1-1176	9129	BRACKET;TUBE,OI	000000	000005
1117691320	1-1176	9132	BRACKET; LEVEL GUAGE	000001	000000
1117691370	1-1176	9137	BRKT; GUIDE TUBE 6SA1T	000000	000000
1117691371	1-1176	9137	BRKT; GUIDE TUBE 6SA1T	000000	000000
1117691390	1-1176	9139	STAY;	000000	000000
1117691400	1-1176	9140	STAY 6RB1	000000	000000
1117691561	1-1176	9156	BRACKET; LAVEL GAUGE	000000	000000
1117691630	1-1176	9163	STAY GUIDE TUBE	000000	000002
1117710130	1-1177	1013	FOOT; ENG. (LH)	000000	000000
1117710160	1-1177	1016	FOOT; ENGINE E120	000000	000000
1117710161	1-1177	1016	FOOT; ENGINE E120	000000	000000
1117710670	1-1177	1067	FOOT,ENG.RH	000000	000000
1117710680	1-1177	1068	FOOT,ENG.LH	000000	000000
1117710750	1-1177	1075	FOOT; ENG FRT RH CYL BLOC	000000	000000
1117710850	1-1177	1085	FOOT; ENGINE RH UME120	000000	000000
1117711050	1-1177	1105	FOOT; ENG, FRT-RH	000000	000000
1117711060	1-1177	1106	ENGINE FOOT F;	000000	000000
1117711131	1-1177	1113	FOOT; ENGINE, RH, FRT BLO	000000	000000
1117711330	1-1177	1133	FOOT; ENGINE	000000	000000
1117711350	1-1177	1135	FOOT; ENGINE RR UME120	000000	000000
1117711400	1-1177	1140	FOOT; ENGINE RH	000000	000000
1117711410	1-1177	1141	FOOT; ENGINE LH	000000	000000
1117711420	1-1177	1142	FOOT; ENG.	000000	000000
1117711561	1-1177	1156	FOOT; ENGINE	000000	000017
1117711571	1-1177	1157	FOOT; ENGINE	000000	000021
1117711640	1-1177	1164	FOOT; ENGINE	000000	000000
1117711641	1-1177	1164	FOOT;ENGINE	000000	000009

1117711681	1-1177	1168	FOOT; ENGINE, FRT CYL BLO	000000	000000
1117711691	1-1177	1169	FOOT; ENGINE	000000	000002
1117711710	1-1177	1171	FOOT; ENGINE FRT LH BODY	000001	000000
1117711720	1-1177	1172	FOOT; ENGINE FRT CYL BLOC	000001	000000
1117711730	1-1177	1173	FOOT; ENGINE FRT CYL BLOC	000000	000000
1117711740	1-1177	1174	FOOT; ENGINE FRT CYL BLOC	000000	000000
1117711780	1-1177	1178	FOOT; ENGINE	000000	000000
1117711790	1-1177	1179	FOOT; ENGINE	000000	000000
1117711810	1-1177	1181	FOOT; ENGINE RH FRT	000002	000000
1117711820	1-1177	1182	FOOT; ENG, LH	000000	000000
1117711910	1-1177	1191	FOOT; ENG.	000000	000000
1117711970	1-1177	1197	FOOT; ENG.	000000	000000
1117711971	1-1177	1197	FOOT; ENG.	000000	000000
1117712200	1-1177	1220	FOOT; ENG	000000	000001
1117712340	1-1177	1234	FOOT; ENG	000000	000002
1117712350	1-1177	1235	FOOT; ENG	000000	000002
1117730351	1-1177	3035	FOOT; ENGINE RR CYL BLOCK	000000	000000
1117770380	1-1177	7038	HANGER; FRT,LB	000000	000000
1117770460	1-1177	7046	HANGER	000000	000000
1117770470	1-1177	7047	HANGER; FRT CYL HEAD	000000	000000
1117770480	1-1177	7048	SUPERSEDED**HANGER	000000	000000
1117770500	1-1177	7050	O-RING; CYL. LINER	000000	000000
1117770560	1-1177	7056	HANGER; ENGINE E120	000000	000000
1117770561	1-1177	7056	HANGER; ENGINE E120	000001	000000
1117770600	1-1177	7060	HANGER CYL HEAD	000000	000000
1117770640	1-1177	7064	HANGER; RR ENGINE	000000	000000
1117770810	1-1177	7081	HANGER; ENG. R.R. CYL.HEA	000001	000000
1117770840	1-1177	7084	HANGER; ENG,LIFT	000025	000000
1117770870	1-1177	7087	HANGER	000000	000000
1117770911	1-1177	7091	HANGER	000000	000000
1117770930	1-1177	7093	HANGER; RR ENG.	000000	000000
1117770950	1-1177	7095	HANGER; ENG. RR CYL. HEAD	000000	000000
1117770960	1-1177	7096	HANGER; ENG,FRT	000000	000000
1117770990	1-1177	7099	HANGER; ENG,RR	000000	000000
1117771010	1-1177	7101	HANGER & VRACKET;RR.TO IN	000000	000000
1117771060	1-1177	7106	HANGER; FRT ENG LIFTING	000000	000000
1117771090	1-1177	7109	HANGER; ENGINE REAR	000000	000000
1117771091	1-1177	7109	HANGER; ENGINE REAR	000000	000000
1117771101	1-1177	7110	HANGER; RR., ENG. LIFTING	000000	000000
1117771231	1-1177	7123	HANGER; ENG, RR	000000	000002
1117771370	1-1177	7137	HANGER CYL HEAD	000000	000000
1117771421	1-1177	7142	HANGER; ENG RR CYL HEAD	000000	000000
1117771492	1-1177	7149	HANGER; ENG,RR	000000	000000
1117771493	1-1177	7149	HANGER; ENG,RR	000004	000000
1117771621	1-1177	7162	HANGER; FRT. ENGINE LIFT.	000000	000000
1117771710	1-1177	7171	HANGER; RR. ENG	000000	000000
1117771711	1-1177	7171	HANGER; RR. ENG	000000	000000

1117771930	1-1177	7193	HANGER; ENGINE, RR.	000000	000000
1117771931	1-1177	7193	HANGER; ENGINE, RR.	000000	000000
1117772161	1-1177	7216	HANGER;ENG, RR	000000	000000
1117772162	1-1177	7216	HANGER;ENG, RR	000001	000000
1117772740	1-1177	7274	HANGER; ENG RR	000000	000001
1117772750	1-1177	7275	HANGER; ENG	000000	000001
1117790140	1-1177	9014	PACKING; WATER PUMP	000000	000050
1117790141	1-1177	9014	PACKING; WATER PUMP	000000	000011
1117790150	1-1177	9015	PACKING; WATER PUMP	000011	000000
1117790250	1-1177	9025	SPACER	000000	000000
1121110223	1-1211	1022	PISTON STD	000000	000000
1121110580	1-1211	1058	RING SET; PISTON 12PB1	000000	000000
1121110911	1-1211	1091	PISTON	000000	000000
1121111221	1-1211	1122	PISTONS	000000	000000
1121111230	1-1211	1123	PISTON	000000	000000
1121111231	1-1211	1123	PISTON	000004	000000
1121111241	1-1211	1124	PISTON STD	000000	000000
1121111251	1-1211	1125	PISTON	000000	000000
1121111261	1-1211	1126	PISTONS	000000	000000
1121111281	1-1211	1128	PISTON STD	000000	000000
1121111440	1-1211	1144	PISTON STD	000000	000000
1121111441			PISTON STD	000000	000000
1121111540			PISTON	000000	000000
1121111640	1-1211	1164	PISTON STD	000000	000000
1121111920	1-1211	1192	PISTON STD	000000	000000
1121112170			PISTON STD	000002	000000
1121112241	1-1211	1224	PISTON STD	000000	000000
1121112260	1-1211	1226	PISTON STD	000000	000000
1121112401	1-1211	1240	PISTON STD	000000	000000
1121112420	1-1211	1242	PISTON; STD	000000	000000
1121112450	1-1211	1245	PISTON STD	000000	000000
1121112462	1-1211	1246	PISTON	000000	000000
1121112710	1-1211	1271	PISTON STD	000000	000000
1121112711	1-1211	1271	PISTON STD	000000	000000
1121112770	1-1211	1277	PISTON STD	000000	000000
1121112991	1-1211	1299	PISTON STD	000000	000000
1121113031	1-1211	1303	PISTON STD	000000	000000
1121113211	1-1211	1321	PISTON; ENG	000000	000000
1121113251	1-1211	1325	PISTON; W/TURBO	000000	000000
1121113310	1-1211	1331	PISTON	000000	000000
1121113320	1-1211	1332	PISTON	000000	000000
1121113450	1-1211	1345	PISTON	000000	000000
1121113660	1-1211	1366	PISTON STD	000000	000000
1121113773	1-1211	1377	PISTON STD	000000	000000
1121113774	1-1211	1377	PISTON STD	000000	000000
1121114241	1-1211	1424	PISTON	000000	000000
1121114260	1-1211	1426	PISTON	000000	000000

1121114280	1-1211	1428	PISTON;ENGINE	000000	000000
1121114350	1-1211	1435	PISTON	000000	000000
1121114370	1-1211	1437	PISTON STD	000000	000000
1121114470	1-1211	1447	PISTON STD	000000	000000
1121114522	1-1211	1452	PISTON	000000	000000
1121114590	1-1211	1459	PISTON	000000	000000
1121114591	1-1211	1459	PISTON	000000	000000
1121114600	1-1211	1460	PISTON	000000	000000
1121114610	1-1211	1461	PISTON	000000	000000
1121114630	1-1211	1463	PISTON STD	000000	000000
1121114640	1-1211	1464	PISTON STD	000000	000000
1121114780	1-1211	1478	PISTON	000000	000000
1121114820	1-1211	1482	PISTON	000000	000000
1121114911	1-1211	1491	PISTON STD	000000	000000
1121114931	1-1211	1493	PISTON STD	000000	000000
1121115141	1-1211	1514	PISTON; STD	000000	000000
1121115160	1-1211	1516	PISTON STD	000000	000000
1121115190	1-1211	1519	PISTON STD	000000	000000
1121115230	1-1211	1523	PISTON STD	000000	000006
1121115240	1-1211	1524	PISTON STD	000000	000000
1121115260	1-1211	1526	PISTON STD	000000	000000
1121115280	1-1211	1528	PISTON STD	000000	000031
1121115670	1-1211	1567	PISTON	000000	000013
1121115681	1-1211	1568	PISTON	000000	000000
1121115701	1-1211	1570	PISTON	000000	000000
1121115710	1-1211	1571	PISTON STD	000000	000000
1121115870	1-1211	1587	PISTON STD	000000	000000
1121115871	1-1211	1587	PISTON STD	000000	000000
1121115880	1-1211	1588	PISTON STD	000000	000000
1121115980	1-1211	1598	PISTON	000000	000000
1121116090	1-1211	1609	PISTON	000000	000000
1121116100	1-1211	1610	PISTON	000000	000000
1121116170	1-1211	1617	PISTON STD	000000	000000
1121116201	1-1211	1620	PISTON STD	000000	000000
1121116260	1-1211	1626	PISTON	000000	000000
1121116330	1-1211	1633	PISTON	000000	000000
1121116340	1-1211	1634	PISTON	000002	000000
1121116410	1-1211	1641	PISTON STD	000000	000000
1121116441	1-1211	1644	AEOP PART (16)	000000	000000
1121116690	1-1211	1669	PISTON; STANDARD	000000	000000
1121116730	1-1211	1673	PISTON; STD.	000000	000000
1121116790	1-1211	1679	PISTON	000000	000000
1121116791	1-1211	1679	PISTON	000000	000000
1121116880	1-1211	1688	PISTON	000000	000000
1121116910	1-1211	1691	PISTON; STD.	000000	000000
1121116980	1-1211	1698	PISTON	000000	000000
1121116990	1-1211	1699	PISTON	000000	000000

1121117000	1-1211	1700	PISTON	000000	000000
1121117010	1-1211	1701	PISTON	000000	000000
1121117030	1-1211	1703	PISTON	000000	000000
1121117040	1-1211	1704	PISTON	000000	000000
1121117050	1-1211	1705	PISTON	000001	000005
1121117060	1-1211	1706	PISTON	000000	000006
1121117070	1-1211	1707	PISTON	000000	000005
1121117080	1-1211	1708	PISTON	000000	000030
1121117090	1-1211	1709	PISTON	000001	000000
1121117100	1-1211	1710	PISTON	000000	000000
1121117110	1-1211	1711	PISTON	000002	000000
1121117120	1-1211	1712	PISTON	000000	000000
1121117121	1-1211	1712	PISTON	000000	000014
1121117130	1-1211	1713	PISTON	000000	000000
1121117131	1-1211	1713	PISTON	000009	000000
1121117140	1-1211	1714	PISTON	000000	000000
1121117141	1-1211	1714	PISTON	000000	000000
1121117150	1-1211	1715	PISTON	000000	000000
1121117151	1-1211	1715	PISTON	000003	000000
1121117160	1-1211	1716	PISTON	000000	000000
1121117170	1-1211	1717	PISTON	000000	000000
1121117180	1-1211	1718	PISTON	000004	000000
1121117190	1-1211	1719	PISTON	000003	000000
1121117221	1-1211	1722	PISTON	000000	000003
1121117231	1-1211	1723	PISTON	000000	000003
1121117310	1-1211	1731	PISTON	000000	000000
1121117320	1-1211	1732	PISTON	000000	000000
1121117330	1-1211	1733	PISTON	000000	000000
1121117340	1-1211	1734	PISTON	000000	000000
1121117370	1-1211	1737	PISTON	000000	000000
1121117380	1-1211	1738	PISTON	000000	000000
1121117390	1-1211	1739	PISTON	000000	000000
1121117400	1-1211	1740	PISTON	000000	000000
1121117410	1-1211	1741	PISTON	000000	000001
1121117420	1-1211	1742	PISTON	000004	000000
1121117430	1-1211	1743	PISTON	000000	000000
1121117440	1-1211	1744	PISTON	000000	000000
1121117450	1-1211	1745	PISTON	000001	000000
1121117460	1-1211	1746	PISTON	000003	000004
1121117470	1-1211	1747	PISTON	000000	000000
1121117480	1-1211	1748	PISTON	000000	000000
1121117490	1-1211	1749	PISTON	000003	000000
1121117500	1-1211	1750	PISTON	000000	000000
1121117510	1-1211	1751	PISTON	000000	000000
1121117520	1-1211	1752	PISTON	000000	000000
1121117530	1-1211	1753	PISTON	000000	000000
1121117540	1-1211	1754	PISTON	000000	000003

1121117550	1-1211	1755	PISTON	000000	000000
1121117560	1-1211	1756	PISTON	000000	000000
1121117570	1-1211	1757	PISTON	000000	000002
1121117580	1-1211	1758	PISTON	000000	000011
1121117590	1-1211	1759	PISTON	000000	000000
1121117600	1-1211	1760	PISTON	000000	000000
1121117610	1-1211	1761	PISTON	000000	000007
1121117620	1-1211	1762	PISTON	000002	000002
1121117630	1-1211	1763	PISTON	000000	000000
1121117640	1-1211	1764	PISTON	000000	000000
1121117650	1-1211	1765	PISTON	000000	000000
1121117660	1-1211	1766	PISTON	000000	000000
1121117670	1-1211	1767	PISTON	000000	000000
1121117671	1-1211	1767	PISTON	000002	000006
1121117680	1-1211	1768	PISTON	000006	000000
1121117690	1-1211	1769	PISTON	000000	000000
1121117700	1-1211	1770	PISTON	000000	000000
1121117710	1-1211	1771	PISTON	000000	000001
1121117720	1-1211	1772	PISTON	000000	000005
1121117730	1-1211	1773	PISTON	000000	000000
1121117740	1-1211	1774	PISTON	000000	000000
1121117750	1-1211	1775	PISTON	000000	000006
1121117760	1-1211	1776	PISTON	000000	000001
1121117770	1-1211	1777	PISTON	000001	000000
1121117780	1-1211	1778	PISTON	000000	000002
1121117790	1-1211	1779	PISTON	000000	000004
1121117800	1-1211	1780	PISTON	000006	000000
1121117810	1-1211	1781	PISTON	000000	000001
1121117820	1-1211	1782	PISTON	000000	000003
1121117850	1-1211	1785	PISTON	000000	000002
1121117860	1-1211	1786	PISTON	000000	000005
1121117880	1-1211	1788	PISTON	000000	000000
1121117890	1-1211	1789	PISTON	000000	000000
1121117910	1-1211	1791	PISTON	000000	000000
1121117940	1-1211	1794	PISTON	000000	000000
1121117950	1-1211	1795	PISTON	000000	000000
1121117990	1-1211	1799	PISTON	000000	000000
1121118130	1-1211	1813	PISTON	000000	000000
1121118140	1-1211	1814	PISTON	000000	000000
1121118150	1-1211	1815	PISTON	000000	000000
1121118160	1-1211	1816	PISTON	000000	000000
1121118180	1-1211	1818	PISTON	000001	000000
1121118230	1-1211	1823	PISTON	000005	000000
1121118240	1-1211	1824	PISTON	000000	000056
1121118260	1-1211	1826	PISTON	000000	000000
1121118270	1-1211	1827	PISTON	000000	000000
1121118300	1-1211	1830	PISTON	000000	000000

1121118310	1-1211	1831	PISTON	000000	000000
1121118360	1-1211	1836	PISTON	000000	000000
1121118370	1-1211	1837	PISTON	000000	000000
1121118580	1-1211	1858	PISTON	000000	000000
1121118590	1-1211	1859	PISTON	000000	000000
1121118600	1-1211	1860	PISTON	000000	000000
1121118610	1-1211	1861	PISTON	000000	000000
1121118620	1-1211	1862	PISTON	000000	000000
1121118630	1-1211	1863	PISTON	000000	000000
1121118640	1-1211	1864	PISTON	000006	000000
1121118650	1-1211	1865	PISTON	000000	000004
1121118670	1-1211	1867	PISTON	000000	000000
1121118680	1-1211	1868	PISTON	000000	000000
1121118710	1-1211	1871	PISTON	000000	000000
1121118720	1-1211	1872	PISTON	000000	000000
1121118730	1-1211	1873	PISTON	000000	000005
1121118810	1-1211	1881	PISTON	000000	000003
1121118820	1-1211	1882	PISTON	000000	000000
1121118870	1-1211	1887	PISTON	000000	000000
1121119110	1-1211	1911	PISTON; GRADE AX	000000	000000
1121119120	1-1211	1912	PISTON; GRADE CX	000000	000000
1121119130	1-1211	1913	PISTON; STD	000000	000000
1121119140	1-1211	1914	PISTON; STD	000000	000002
1121119170	1-1211	1917	PISTON; STANDARD	000001	000002
1121119180	1-1211	1918	PISTON; STANDARD	000002	000002
1121119190	1-1211	1919	PISTON; STANDARD	000000	000005
1121119200	1-1211	1920	PISTON; STANDARD	000001	000000
1121119320	1-1211	1932	PISTON; STANDARD	000000	000004
1121119330	1-1211	1933	PISTON; STANDARD	000000	000005
1121119641	1-1211	1964	PISTON	000000	000000
1121119642	1-1211	1964	PISTON	000000	000000
1121119700	1-1211	1970	PISTON; STANDARD	000000	000000
1121119710	1-1211	1971	PISTON; STANDARD	000000	000000
1121119730	1-1211	1973	PISTON	000000	000016
1121119760	1-1211	1976	PISTON	000000	000007
1121119880	1-1211	1988	PISTON	000000	000006
1121119900	1-1211	1990	PISTON	000000	000000
1121119910	1-1211	1991	PISTON	000000	000000
1121120010	1-1211	2001	PISTON	000000	000000
1121120160	1-1211	2016	PISTON	000000	000008
1121210010	1-1212	1001	PISTON RING	000007	000009
1121210070	1-1212	1007	PISTON RING	000001	000000
1121210090	1-1212	1009	PISTON RINGS	000003	000002
1121210100	1-1212	1010	RING SET; PISTON STD	000006	000000
1121210110	1-1212	1011	RING SET; PISTON	000006	000000
1121210140			RING SET; PISTON STD	000007	000000
1121210150	1-1212	1015	RING SET; PISTON STD	000000	000000

1121210160	1-1212	1016	RING SET; PISTON	000006	000002
1121210170	1-1212	1017	RING SET; PISTON	000001	000000
1121210180	1-1212	1018	RING SET; PISTON	000000	000000
1121210230	1-1212	1023	RING SET; PISTON	000000	000000
1121210240	1-1212	1024	RING SET; PISTON	000000	000000
1121210270	1-1212	1027	RING SET; PISTON	000007	000000
1121210310	1-1212	1031	RING SET; PISTON STD	000000	000000
1121210340	1-1212	1034	RING SET; PISTON STD	000000	000000
1121210371	1-1212	1037	RING SET; PISTON STD	000000	000000
1121210400	1-1212	1040	RING SET; PISTON	000000	000000
1121210430	1-1212	1043	RING SET; PISTON	000000	000000
1121210460			PISTON RING	000000	000000
1121210470			PISTON RING SET	000000	000007
1121210520			RING SET; PISTON	000000	000000
1121210650	1-1212	1065	RING SET;	000000	000000
1121210651	1-1212	1065	RING SET; PISTON	000000	000000
1121210691	1-1212	1069	RING SET; PISTON STD	000002	000000
1121210700	1-1212	1070	RING SET;	000000	000000
1121210730	1-1212	1073	RING SET; PISTON	000000	000000
1121210742	1-1212	1074	RING SET; PISTON STD	000000	000011
1121210750	1-1212	1075	RING SET; PISTON	000000	000000
1121210762	1-1212	1076	RING SET: PISTON STD	000000	000000
1121210770	1-1212	1077	RING SET; PISTON	000000	000000
1121210780	1-1212	1078	RING SET; PISTON	000000	000000
1121210782	1-1212	1078	RING SET; PISTON	000009	000000
1121210840	1-1212	1084	RING SET; PISTON	000000	000000
1121210860	1-1212	1086	RING SET; PISTON STD	000000	000005
1121210870	1-1212	1087	RING SET; PISTON	000000	000000
1121210941	1-1212	1094	RING SET; PISTON	000000	000000
1121210942	1-1212	1094	IING SET; PISTON	000000	000039
1121211011	1-1212	1101	RING SET; PISTON	000000	000273
1121211020	1-1212	1102	RING SET; PISTON	000000	000000
1121211021	1-1212	1102	RING SET; PISTON	000000	000008
1121211050	1-1212	1105	RING SET; PISTON	000000	000000
1121211061	1-1212	1106	RING SET; PISTON	000001	000000
1121211070	1-1212	1107	RING SET; PISTON	000000	000008
1121211120	1-1212	1112	RING SET; PISTON	000000	000018
1121211130	1-1212	1113	RING SET	000000	000042
1121211150	1-1212	1115	RING SET; PISTON	000131	000488
1121211180	1-1212	1118	RING SET; PISTON	000000	000000
1121211210	1-1212	1121	RING SET: PISTON, STD	000000	000006
1121211261	1-1212	1126	PISTON RINGS	000000	000006
1121211271	1-1212	1127	RING SET; PISTON STD	000000	000000
1121211360	1-1212	1136	RING SET;PISTON	000000	000000
1121211370	1-1212	1137	RING SET; PISTON, STD	000000	000000
1121211371	1-1212	1137	RING SET; PISTON, STD	000000	000014
1121211430	1-1212	1143	RING SET; PISTON STANDARD	000000	000012

1121211440	1-1212	1144	RING SET;PISTON,STANDARD	000000	000006
1121211460	1-1212	1146	RING SET;PISTON STANDARD	000000	000155
1121211540	1-1212	1154	RING SET; PISTON,STANDARD	000000	000002
1121211541	1-1212	1154	RING SET; PISTON,STANDARD	000000	000000
1121240010	1-1212	4001	RING SET	000000	000000
1121240160	1-1212	4016	RING SET; PISTON	000000	000000
1121810050	1-1218	1005	SUPERSEDED**RING SET	000000	000000
1121810110	1-1218	1011	SUPERSEDED**RING KIT	000000	000000
1121810220	1-1218	1022	SUPERSEDED**RING KIT	000000	000000
1121810330	1-1218	1033	RING KIT PISTON	000000	000000
1121810340	1-1218	1034	SUPERSEDED**RING KIT	000000	000000
1121810380	1-1218	1038	SUPERSEDED**	000000	000000
1121810640	1-1218	1064	RING SET; PISTON	000000	000000
1121810692	1-1218	1069	RING SET	000001	000000
1122110013	1-1221	1001	PIN; PISTON	000004	000000
1122110080	1-1221	1008	PIN; PISTON	000006	000000
1122110181	1-1221	1018	PIN; PISTON	000000	000093
1122110220	1-1221	1022	PIN; PISTON	000000	000014
1122110250	1-1221	1025	PIN; PISTON	000000	000005
1122110290	1-1221	1029	PIN; PISTON	000000	000000
1122110291	1-1221	1029	PIN; PISTON	000001	000000
1122110330	1-1221	1033	PIN; PISTON	000000	000000
1122110331	1-1221	1033	PIN; PISTON	000000	000000
1122110332	1-1221	1033	PIN; PISTON	000000	000025
1122110520	1-1221	1052	PIN; PISTON	000000	000000
1122300181			CONNECTING ROD ASM	000000	000000
1122300250			CON ROD	000006	000000
1122300280	1-1223	0028	ROD ASM; CONN	000000	000001
1122300310	1-1223	0031	ROD ASM.; CONN	000000	000000
1122300380	1-1223	0038	ROD ASM; CONN	000002	000000
1122300681	1-1223	0068	ROD ASM; CONN	000000	000000
1122300860	1-1223	0086	ROD ASM;CONN	000000	000000
1122300950	1-1223	0095	ROD ASM;CONN	000000	000000
1122300951	1-1223	0095	ROD ASM;CONN	000000	000000
1122300960	1-1223	0096	ROD ASM; CONN	000000	000003
1122300970	1-1223	0097	ROD ASM; CONN	000000	000006
1122300971	1-1223	0097	ROD ASM; CONN	000000	000000
1122301040	1-1223	0104	ROD ASM;CONN	000000	000000
1122301041	1-1223	0104	ROD ASM;CONN	000000	000000
1122301042	1-1223	0104	ROD ASM;CONN	000000	000000
1122301044	1-1223	0104	ROD ASM;CONN	000000	000020
1122301080	1-1223	0108	ROD ASM; CONN	000000	000000
1122301081	1-1223	0108	ROD ASM; CONN	000000	000000
1122301180	1-1223	0118	ROD ASM; CONN	000000	000000
1122301181	1-1223	0118	ROD ASM; CONN	000000	000000
1122301200	1-1223	0120	ROD ASM	000000	000000
1122301291	1-1223	0129	ROD ASM; CONN	000000	000000

1122301292	1-1223	0129	ROD ASM; CONN	000000	000009
1122301510	1-1223	0151	ROD ASM.; CONN.	000000	000001
1122301520	1-1223	0152	ROD ASM.; CONN.	000000	000000
1122301530	1-1223	0153	ROD ASM	000001	000000
1122301540	1-1223	0154	ROD ASM	000000	000000
1122301550	1-1223	0155	ROD ASM; CONN	000000	000000
1122301560	1-1223	0156	ROD ASM; CONN	000000	000000
1122301762	1-1223	0176	ROD ASM; CONN	000000	000000
1122301880	1-1223	0188	ROD ASM; CONN	000000	000001
1122301890	1-1223	0189	ROD ASM; CONN	000000	000001
1122310430	1-1223	1043	BOLT; CENTER E120	000000	000000
1122312161	1-1223	1216	FLYWHEEL	000000	000000
1122312171	1-1223	1217	FLYWHEEL	000000	000000
1122312191	1-1223	1219	FLYWHEEL	000000	000000
1122350130	1-1223	5013	BOLT;CAP FIX	000002	000000
1122350201	1-1223	5020	BOLT; CONN ROD	000000	000000
1122350231	1-1223	5023	BOLT;CONN ROD	000000	000000
1122350232	1-1223	5023	BOLT;CONN ROD	000000	000014
1122350250	1-1223	5025	BOLT; CONN ROD	000000	000000
1122350251	1-1223	5025	BOLT; CONN ROD	000017	000000
1122350260	1-1223	5026	BOLT; CONN ROD	000000	000000
1122350261	1-1223	5026	BOLT; CONN ROD	000000	000030
1122350270	1-1223	5027	BOLT; CONN ROD	000000	000000
1122350271	1-1223	5027	BOLT; CONN ROD	001189	000071
1122350300	1-1223	5030	BOLT; CONN ROD, MF	000000	000000
1122350301	1-1223	5030	BOLT; CONN ROD, MF	000000	000014
1122350350	1-1223	5035	BOLT; CONNROD	000000	000000
1122350363	1-1223	5036	BOLT; CONNROD	000000	000000
1122350460	1-1223	5046	BOLT; CONNROD	000000	000021
1122390051	1-1223	9005	NUT; CONNROD	000000	000025
1122510010	1-1225	1001	BUSH; CONN ROD	000000	000000
1122510110	1-1225	1011	CONN. ROD BUSHING	000000	000000
1122510120	1-1225	1012	BUSH CONN ROD	000017	000000
1122510162	1-1225	1016	BUSHING; CONN R	000000	000012
1122510211	1-1225	1021	BUSH; CONN ROD	000000	000068
1122510250	1-1225	1025	BUSH; CONN ROD	000000	000000
1122510270	1-1225	1027	BUSHING;CONN ROD	000000	000178
1122510320	1-1225	1032	BUSHING; CONN ROD	000000	000211
1122510374	1-1225	1037	BUSHING; CONNROD	000000	000000
1122510440	1-1225	1044	BUSH; CONN ROD	000000	000017
1122510510	1-1225	1051	BUSHING; CONNROD	000000	000033
1122610500	1-1226	1050	METAL SET; C-ROD	000000	000000
1122710080	1-1227	1008	METAL SET	000011	000000
1122710200	1-1227	1020	METAL SET; C-ROD	000002	000000
1122710230	1-1227	1023	METAL SET; C-ROD	000004	000001
1122710280	1-1227	1028	METAL SET; CONNROD	000000	000000
1122710290	1-1227	1029	METAL SET, CONN.	000000	000000

1122710300	1-1227	1030	METAL SET	000000	000000
1122710380	1-1227	1038	METAL SET; C-ROD	000000	000000
1122710480	1-1227	1048	METAL SET; C-ROD	000000	000102
1122710500	1-1227	1050	METAL SET	000000	000102
1122710550	1-1227	1055	METAL SET, CONN.	000090	000000
1122710600	1-1227	1060	METAL SET; C-ROD	000000	000000
1122710680	1-1227	1068	METAL SET; C-ROD	000000	000000
1122710700	1-1227	1070	METAL SET:CONN ROD, STD	000000	000006
1122710701	1-1227	1070	METAL SET:CONN ROD, STD	000000	000000
1122710720	1-1227	1072	METAL SET; CONN ROD, STAN	000000	000000
1122710721	1-1227	1072	METAL SET; CONN ROD, STAN	000000	000000
1122710840	1-1227	1084	METAL SET; C-ROD	000000	000078
1122710960	1-1227	1096	METAL SET; CONN ROD, STAND	000000	000055
1122711790	1-1227	1179	METAL SET; C-ROD	000000	000000
1122720500	1-1227	2050	METAL SET; C-ROD .25	000005	000000
1122730230	1-1227	3023	BEARING SET; .25 C-ROD	000000	000000
1122730290	1-1227	3029	BEARING SET; .25 C-ROD	000009	000000
1122730291	1-1227	3029	BEARING SET; .25 C-ROD	000000	000000
1122730480	1-1227	3048	METAL SET; .25 C-ROD	000000	000029
1122730500	1-1227	3050	METAL SET; .50 C-ROD	000000	000013
1122730550	1-1227	3055	METAL SET; .25 C-ROD	000003	000000
1122740230	1-1227	4023	METAL SET; .50 C-ROD	000023	000000
1122740290	1-1227	4029	METAL SET; C-ROD	000000	000000
1122740480	1-1227	4048	METAL SET; .50 C-ROD	000000	000000
1122740550	1-1227	4055	METAL SET; C-ROD	000042	000000
1122750480	1-1227	5048	METAL SET; .75 C-ROD	000000	000005
1122760480	1-1227	6048	METAL SET; 1.00 C-ROD	000000	000000
1123100941	1-1231	0094	CRANKSHAFT ASM	000000	000001
1123101830	1-1231	0183	CRANKSHAFT ASM	000000	000000
1123102310	1-1231	0231	CRANKSHAFT ASM	000000	000000
1123102340	1-1231	0234	CRANKSHAFT ASM	000000	000000
1123102376	1-1231	0237	GOTO 1-1231 0457 ("C")	000000	000000
1123102640	1-1231	0264	SUPERSEDED**CRANKSHAFT	000000	000000
1123103352	1-1231	0335	CRANK SHAFT ASM	000000	000000
1123103653	1-1231	0365	CRANKSHAFT ASM	000000	000000
1123103656	1-1231	0365	CRANKSHAFT ASM	000000	000002
1123103691	1-1231	0369	CRANKSHAFT ASM	000000	000000
1123103692	1-1231	0369	CRANKSHAFT ASM	000000	000000
1123103700	1-1231	0370	CRANKSHAFT ASM	000000	000000
1123103922	1-1231	0392	CRANKSHAFT	000000	000000
1123103926	1-1231	0392	CRANKSHAFT	000001	000000
1123103952	1-1231	0395	CRANKSHAFT ASM	000000	000000
1123103953	1-1231	0395	CRANKSHAFT ASM	000000	000000
1123104030	1-1231	0403	CRANKSHAFT ASM.	000000	000000
1123104070	1-1231	0407	CRANKSHAFT (T)	000000	000011
1123104071	1-1231	0407	CRANKSHAFT (T)	000000	000000
1123104092	1-1231	0409	CRANKSHAFT ASM	000000	000000

1123104170	1-1231	0417	CRANKSHAFT ASM	000000	000000
1123104341	1-1231	0434	CRANKSHAFT	000000	000000
1123104360	1-1231	0436	CRANKSHAFT ASM	000000	000000
1123104370	1-1231	0437	CRANKSHAFT	000000	000001
1123104380	1-1231	0438	CRANKSHAFT ASM	000000	000000
1123104390	1-1231	0439	CRANKSHAFT ASM	000000	000000
1123104480	1-1231	0448	CRANKSHAFT	000000	000002
1123104481	1-1231	0448	CRANKSHAFT	000000	000000
1123104540	1-1231	0454	CRANKSHAFT ASM.	000000	000000
1123104576	1-1231	0457	CRANKSHAFT ASM.	000000	000000
1123104700	1-1231	0470	CRANKSHAFT ASM;	000000	000001
1123104701	1-1231	0470	CRANKSHAFT ASM;	000000	000000
1123104801	1-1231	0480	CRANKSHAFT ASM	000000	000000
1123104802	1-1231	0480	CRANKSHAFT ASM	000000	000000
1123104900	1-1231	0490	CRANK SHAFT ASM	000000	000000
1123104920	1-1231	0492	CRANKSHAFT	000000	000000
112310497T			CRANKSHAFT ASM	000000	000000
1123104971			CRANKSHAFT ASM	000000	000000
1123104972	1-1231	0497	CRANKSHAFT ASM	000000	000000
1123105031	1-1231	0503	CRANKSHAFT ASM; W/PLUG	000000	000000
1123105032	1-1231	0503	CRANKSHAFT ASM; W/PLUG	000000	000002
1123105170	1-1231	0517	CRANKSHAFT ASM.	000000	000000
1123105180	1-1231	0518	CRANKSHAFT ASM.	000000	000000
1123105200	1-1231	0520	CRANKSHAFT	000000	000000
1123105201	1-1231	0520	CRANKSHAFT	000000	000000
1123105240	1-1231	0524	CRANKSHAFT	000000	000000
1123105241	1-1231	0524	CRANKSHAFT	000000	000000
1123105470	1-1231	0547	CRANKSHAFT ASM	000000	000000
1123105471	1-1231	0547	CRANKSHAFT ASM	000000	000001
1123105680	1-1231	0568	CRANKSHAFT ASM.	000000	000001
1123105690	1-1231	0569	CRANKSHAFT	000000	000003
1123105970	1-1231	0597	CRANKSHAFT ASM	000000	000000
1123106259			CRANKSHAFT	000000	000000
1123106540			CRANKSHAFT ASM; W/GEAR	000000	000002
1123106680	1-1231	0668	CRANKSHAFT	000000	000000
1123106751	1-1231	0675	CRANKSHAFT	000000	000000
1123106870	1-1231	0687	CRANKSHAFT	000000	000001
1123107151	1-1231	0715	CRANKSHAFT	000000	000000
1123107152	1-1231	0715	CRANKSHAFT	000000	000010
1123112871	1-1231	1287	LEVER; ENGINE STOP 6BG1/C	000000	000000
1123150091	1-1231	5009	WEAR RING; CRANKSHAFT RR.	000000	000001
1123150180	1-1231	5018	RING WEAR	000002	000000
1123150490	1-1231	5049	RING; WEAR, CRANKSHAFT	000000	000000
1123150770	1-1231	5077	RING; WEAR	000000	000043
1123190090	1-1231	9009	SLEEVE DA640	000005	000002
1123190100	1-1231	9010	WEAR RING; CRANKSHAFT	000000	000001
1123190140	1-1231	9014	SPACER; CRANKSHAFT BRG	000000	000000

1123190170	1-1231	9017	THROWER; OIL	000001	000000
1123190180	1-1231	9018	RING; WEAR,CR/SHF	000000	000002
1123190190	1-1231	9019	RING;WEAR,CR/SHF	000000	000000
1123301112	1-1233	0111	FLYWHEEL E120	000000	000000
1123301113	1-1233	0111	FLYWHEEL E120	000000	000000
1123302240	1-1233	0224	FLYWHEEL ASM	000000	000000
1123303031	1-1233	0303	FLYWHEEL; W/RING	000000	000000
1123303035	1-1233	0303	FLYWHEEL; W/RING	000000	000005
1123303190	1-1233	0319	FLYWHEEL; W/RING	000000	000000
1123303191	1-1233	0319	FLYWHEEL; W/RING	000000	000000
1123303690	1-1233	0369	FLYWHEEL ASM.	000000	000000
1123305102	1-1233	0510	FLYWHEEL ASM W/RING GEAR	000000	000008
1123305600	1-1233	0560	FLYWHEEL	000000	000004
1123310145	1-1233	1014	FLYWHEEL	000000	000000
1123310392	1-1233	1039	FLY WHEEL	000000	000000
1123310394	1-1233	1039	FLY WHEEL	000000	000000
1123310456	1-1233	1045	FLYWHEEL	000000	000000
1123310533	1-1233	1053	FLYWHEEL E120	000000	000000
1123310535	1-1233	1053	FLYWHEEL E120	000000	000000
1123310740	1-1233	1074	FLYWHEEL	000000	000000
1123310741	1-1233	1074	FLYWHEEL	000000	000000
1123310792	1-1233	1079	FLYWHEEL	000000	000000
1123310820	1-1233	1082	FLYWHEEL	000000	000000
1123310890	1-1233	1089	FLYWHEEL	000000	000000
1123310920	1-1233	1092	FLYWHEEL	000000	000000
1123310921	1-1233	1092	FLYWHEEL	000000	000000
1123310930	1-1233	1093	FLYWHEEL; SAE 11.5 INCH	000000	000000
1123310931	1-1233	1093	FLYWHEEL; SAE 11.5 INCH	000000	000002
1123310932	1-1233	1093	FLYWHEEL; SAE 11.5 INCH	000000	000000
1123310994	1-1233	1099	FLYWHEEL	000000	000000
1123311130	1-1233	1113	FLYWHEEL ASM. 6BD1T	000000	000000
1123311151	1-1233	1115	FLYWHEEL	000000	000000
1123311152	1-1233	1115	FLYWHEEL	000000	000000
1123311170	1-1233	1117	FLYWHEEL	000000	000000
1123311230	1-1233	1123	FLYWHEEL ASM 6BD1	000000	000000
1123311243	1-1233	1124	FLYWHEEL QD145A	000000	000001
1123311273	1-1233	1127	FLYWHEEL	000000	000000
1123311320	1-1233	1132	FLYWHEEL	000000	000000
1123311323	1-1233	1132	FLYWHEEL	000000	000000
1123311401	1-1233	1140	FLYWHEEL	000000	000000
1123311412	1-1233	1141	FLYWHEEL E120	000000	000000
1123311462	1-1233	1146	FLYWHEEL	000000	000000
1123311471	1-1233	1147	FLYWHEEL	000000	000000
1123311472	1-1233	1147	FLYWHEEL ASM;13 INCH	000000	000000
1123311491	1-1233	1149	FLYWHEEL	000000	000000
1123311492	1-1233	1149	FLYWHEEL	000000	000000
1123311500	1-1233	1150	FLYWHEEL	000000	000000

1123311501	1-1233	1150	FLYWHEEL	000000	000000
1123311581	1-1233	1158	FLYWHEEL	000000	000000
1123311582	1-1233	1158	FLYWHEEL (14")	000000	000000
1123311583	1-1233	1158	FLYWHEEL (14")	000000	000000
1123311584	1-1233	1158	FLYWHEEL (14")	000000	000003
1123311596	1-1233	1159	FLYWHEEL 6SA1T	000000	000001
1123311597	1-1233	1159	FLYWHEEL 6SA1T	000000	000000
1123311622	1-1233	1162	FLYWHEEL	000000	000000
1123311624	1-1233	1162	FLYWHEEL	000000	000001
1123311641	1-1233	1164	FLYWHEEL	000000	000000
1123311642	1-1233	1164	FLYWHEEL	000000	000000
1123311643	1-1233	1164	FLYWHEEL	000000	000001
1123311781	1-1233	1178	FLYWHEEL	000000	000000
1123311782	1-1233	1178	FLYWHEEL	000000	000000
1123311820	1-1233	1182	FLYWHEEL	000000	000000
1123311821	1-1233	1182	FLYWHEEL	000000	000000
1123311851	1-1233	1185	FLYWHEEL	000000	000000
1123311881	1-1233	1188	FLYWHEEL	000000	000000
1123311882	1-1233	1188	FLYWHEEL	000000	000000
1123311891	1-1233	1189	FLYWHEEL	000000	000000
1123311892	1-1233	1189	FLYWHEEL	000000	000000
1123311912	1-1233	1191	FLYWHEEL	000000	000000
1123311941	1-1233	1194	FLYWHEEL	000000	000000
1123311942	1-1233	1194	FLYWHEEL	000000	000000
1123311943	1-1233	1194	FLYWHEEL	000000	000003
1123311951	1-1233	1195	FLYWHEEL;	000000	000000
1123311953	1-1233	1195	FLYWHEEL;	000000	000000
1123311982	1-1233	1198	FLYWHEEL	000000	000000
1123311990	1-1233	1199	FLYWHEEL ASM.	000000	000000
1123311991	1-1233	1199	FLYWHEEL ASM.	000000	000000
1123312000	1-1233	1200	FLYWHEEL 6SA1T	000000	000000
1123312001	1-1233	1200	FLYWHEEL 6SA1T	000000	000000
1123312011	1-1233	1201	FLYWHEEL	000000	000000
1123312100	1-1233	1210	FLYWHEEL	000000	000000
1123312130	1-1233	1213	FLYWHEEL;	000000	000000
1123312141	1-1233	1214	FLYWHEEL	000000	000000
1123312152	1-1233	1215	FLYWHEEL	000000	000000
1123312161	1-1233	1216	FLYWHEEL	000000	000000
1123312171	1-1233	1217	FLYWHEEL	000000	000000
1123312181	1-1233	1218	FLYWHEEL	000000	000000
1123312191	1-1233	1219	FLYWHEEL	000000	000000
1123312210	1-1233	1221	FLYWHEEL;	000000	000000
1123312212	1-1233	1221	FLYWHEEL;	000000	000001
1123312241	1-1233	1224	FLYWHEEL; 6SA1	000000	000000
1123312250	1-1233	1225	FLYWHEEL	000000	000000
1123312271	1-1233	1227	FLYWHEEL	000000	000000
1123312291	1-1233	1229	FLYWHEEL	000000	000000

1123312390	1-1233	1239	FLYWHEEL	000000	000000
1123312391	1-1233	1239	FLYWHEEL	000000	000000
1123312392	1-1233	1239	FLYWHEEL	000000	000007
1123312400	1-1233	1240	FLYWHEEL	000000	000000
1123312401	1-1233	1240	FLYWHEEL	000000	000000
1123312490	1-1233	1249	FLYWHEEL	000000	000000
1123312530	1-1233	1253	FLYWHEEL	000000	000000
1123312540	1-1233	1254	FLYWHEEL	000000	000000
1123312550	1-1233	1255	FLYWHEEL	000000	000000
1123312560	1-1233	1256	FLYWHEEL	000000	000000
1123312590	1-1233	1259	FLYWHEEL	000000	000000
1123312620	1-1233	1262	FLYWHEEL	000000	000000
1123312630	1-1233	1263	FLYWHEEL	000000	000000
1123312650	1-1233	1265	FLYWHEEL	000000	000000
1123312651	1-1233	1265	FLYWHEEL	000000	000000
1123312670	1-1233	1267	FLYWHEEL	000000	000000
1123312730	1-1233	1273	FLYWHEEL	000000	000000
1123312731	1-1233	1273	FLYWHEEL	000000	000000
1123312760	1-1233	1276	FLYWHEEL	000000	000001
1123312761	1-1233	1276	FLYWHEEL	000000	000000
1123312900	1-1233	1290	FLYWHEEL	000000	000000
1123312920	1-1233	1292	FLYWHEEL	000000	000000
1123312921	1-1233	1292	FLYWHEEL	000000	000001
1123312922	1-1233	1292	FLYWHEEL	000000	000000
1123313060	1-1233	1306	FLYWHEEL	000000	000000
1123313600	1-1233	1360	FLYWHEEL	000000	000000
1123313732	1-1233	1373	FLYWHEEL	000000	000000
1123313770	1-1233	1377	FLYWHEEL	000000	000000
1123313773	1-1233	1377	FLYWHEEL	000000	000000
1123313900	1-1233	1390	FLYWHEEL	000000	000002
1123313941	1-1233	1394	FLYWHEEL	000000	000001
1123313950	1-1233	1395	FLYWHEEL	000000	000000
1123313951	1-1233	1395	FLYWHEEL	000000	000002
1123313962	1-1233	1396	FLYWHEEL	000000	000001
1123314210	1-1233	1421	FLYWHEEL	000000	000000
1123314211	1-1233	1421	FLYWHEEL	000000	000000
1123314240	1-1233	1424	FLYWHEEL	000000	000000
1123314270	1-1233	1427	FLYWHEEL	000000	000003
1123330050	1-1233	3005	GEAR; RING, Z=139 6RB1T	000000	000000
1123330130	1-1233	3013	GEAR; RING, Z=139 6RB1T	000000	000000
1123330131	1-1233	3013	GEAR; RING, Z=139 6RB1T	000000	000005
1123330140	1-1233	3014	GEAR; RING	000000	000000
1123330150	1-1233	3015	GEAR; RING (14")	000000	000000
1123330160	1-1233	3016	GEAR; RING	000000	000000
1123330170	1-1233	3017	GEAR; RING	000000	000008
1123330190	1-1233	3019	GEAR; RING	000000	000000
1123330250	1-1233	3025	GEAR; RING (14')	000000	000002

1123340090	1-1233	4009	BOLT; FLYWHEEL E120	000000	000000
1123340122	1-1233	4012	BOLT; FLYWHEEL	000000	000000
1123340123	1-1233	4012	BOLT; FLYWHEEL	000010	000000
1123340161	1-1233	4016	BOLT*	000000	000000
1123350300	1-1233	5030	*INVALID*	000000	000000
1123360041	1-1233	6004	WASHER	000000	000000
1123360050	1-1233	6005	WASHER; FLYWHEE	000001	000000
1123360051	1-1233	6005	WASHER; FLYWHEE	000000	000005
1123360060	1-1233	6006	WASHER; FLYWHEEL	000000	000013
1123360071	1-1233	6007	WASHER; FLYWHEEL 6BD1	000000	000000
1123360110	1-1233	6011	WASHER; FLYWHEEL	000000	000007
1123380030	1-1233	8003	HOLDER E120	000000	000000
1123380060	1-1233	8006	RETAINER ASM;FL	000000	000000
1123390050	1-1233	9005	HOLDER.	000001	000000
1123390060	1-1233	9006	HOLDER; BEARING 6RB1	000000	000000
1123390130	1-1233	9013	PIN; TIMING SENSOR	000002	000000
1123390140	1-1233	9014	SPACER; PILOT BRG.	000000	000000
1123390171	1-1233	9017	ADAPTOR; FLYWHEEL	000000	000001
1123390200	1-1233	9020	HOLDER;BRG. FLYWHEEL	000000	000000
1123390201	1-1233	9020	HOLDER;BRG. FLYWHEEL	000001	000000
1123390240	1-1233	9024	PILOT; ADAPTOR	000000	000000
1123390250	1-1233	9025	HOLDER;BRG, FLYWHEEL	000000	000001
1123390270	1-1233	9027	HOLDER;BR, FLYWHEEL	000008	000000
1123390271	1-1233	9027	HOLDER;BR, FLYWHEEL	000000	000000
1123610031	1-1236	1003	COLLAR; THRUST	000000	000000
1123620010	1-1236	2001	THROWER	000000	000000
1123620030	1-1236	2003	THROWER; OIL	000000	000000
1123620031	1-1236	2003	THROWER; OIL,CR/SH	000000	000017
1123630021	1-1236	3002	RETAINER; SEAL	000002	000000
1123630060	1-1236	3006	RETAINER E120	000000	000000
1123630100	1-1236	3010	SUPERSEDED**	000000	000000
1123630210	1-1236	3021	RETAINER; REAR SEAL DA220	000000	000000
1123630220	1-1236	3022	RETAINER; SEAL	000007	000000
1123630301	1-1236	3030	SUPERSEDED**RETAINER	000000	000000
1123630330	1-1236	3033	SUPERSEDED**	000000	000000
1123630340	1-1236	3034	RETAINER	000000	000000
1123640060	1-1236	4006	GASKET	000000	000000
1123640070	1-1236	4007	PACKING; OIL RETAINER	000000	000000
1123640071	1-1236	4007	PACKING; OIL RETAINER	000000	000000
1123640080	1-1236	4008	PACKING E120	000000	000000
1123640090	1-1236	4009	PACKING	000000	000000
1123640091	1-1236	4009	PACKING	000011	000000
1123640100	1-1236	4010	PACKING; OIL SEAL, RETAIN	000000	000000
1123640110	1-1236	4011	GASK;OIL SEAL	000000	000000
1123640120	1-1236	4012	PACKING; RETAINER	000000	000000
1123640130	1-1236	4013	SEAL;OIL RETAIN	000000	000003
1123640131	1-1236	4013	SEAL;OIL RETAIN	000000	000000

1123702832	1-1237	0283	CRANKSHAFT PULLEY	000000	000000
1123703610	1-1237	0361	PULLEY; CRANKSHAFT	000000	000000
1123703630	1-1237	0363	PULLEY; CRANKSHAFT	000000	000000
1123703660	1-1237	0366	SUPERSEDED**PULLEY	000000	000000
1123705581	1-1237	0558	FLANGE; FRT PTO	000000	000001
1123705700	1-1237	0570	PULLEY	000000	000002
1123710171	1-1237	1017	PULLEY; CENTER	000000	000000
1123710710	1-1237	1071	PULLEY; CRANKSHAFT	000000	000000
1123710711	1-1237	1071	PULLEY; CRANKSHAFT	000000	000000
1123710750	1-1237	1075	PULLEY; CRANKSHAFT	000000	000000
1123710751	1-1237	1075	PULLEY; CRANKSHAFT	000000	000000
1123710790	1-1237	1079	PULLEY; CRANKSHAFT E120	000000	000000
1123710841	1-1237	1084	PULLEY; CRANKSHAFT	000000	000000
1123710880	1-1237	1088	PULLEY DA640	000000	000000
1123710881	1-1237	1088	PULLEY DA640	000000	000000
1123710960	1-1237	1096	PULLEY; CRANKSHAFT DA120	000000	000000
1123711010	1-1237	1101	PULLEY; CRANK	000000	000000
1123711070	1-1237	1107	PULLEY; CRANKSHAFT	000000	000000
1123711141	1-1237	1114	PULLEY; CRANKSHAFT UME120	000000	000000
1123711281	1-1237	1128	PULLEY; CRANKSHAFT	000000	000000
1123711410	1-1237	1141	PULLEY; CRANK	000000	000000
1123711580	1-1237	1158	PULLEY; CRANKSHAFT	000000	000002
1123711591	1-1237	1159	PULLEY; CRANKSHAFT	000000	000000
1123711610	1-1237	1161	PULLEY; CRANKSHAFT	000000	000000
1123711650	1-1237	1165	PULLEY; CRANKSHAFT	000000	000000
1123711730	1-1237	1173	PULLEY; CRANKSHAFT	000000	000000
1123711740	1-1237	1174	PULLEY; CRANKSHAFT, V2	000000	000000
1123711741	1-1237	1174	PULLEY; CRANKSHAFT, V2	000000	000000
1123711742	1-1237	1174	PULLEY; CRANKSHAFT, V2	000000	000000
1123711743	1-1237	1174	PULLEY; CRANKSHAFT, V2	000000	000000
1123711924	1-1237	1192	PULLEY; CRANKSHAFT	000000	000000
1123711925	1-1237	1192	PULLEY; CRANKSHAFT	000000	000002
1123712000	1-1237	1200	PULLEY	000000	000000
1123712020	1-1237	1202	PULLEY; CRANKSHAFT	000000	000000
1123712270	1-1237	1227	PULLEY; CRANKSHAFT	000000	000000
1123712272	1-1237	1227	PULLEY; CRANKSHAFT	000000	000000
1123712281	1-1237	1228	PULLEY; CRANKSHAFT	000000	000000
1123712284	1-1237	1228	PULLEY; CRANKSHAFT	000000	000000
1123712322	1-1237	1232	PULLEY; CRANKSHAFT	000000	000000
1123712380	1-1237	1238	PULLEY; CRANKSHAFT	000001	000000
1123712420	1-1237	1242	PULLEY; DAMPER	000000	000009
1123712440	1-1237	1244	PULLEY; CRANKSHAFT	000000	000000
1123712480	1-1237	1248	PULLEY; CRANKSHA	000000	000013
1123712490	1-1237	1249	PULLEY; CRANKSHAFT (3 BEL	000000	000000
1123712550	1-1237	1255	PULLEY; CRANKSHAFT 6SA1T	000000	000000
1123712620	1-1237	1262	PULLEY; CRANKSHAFT, V4	000000	000000
1123712630	1-1237	1263	PULLEY; CRANKSHAFT 6SA1	000000	000000

1123712631	1-1237	1263	PULLEY; CRANKSHAFT 6SA1	000000	000000
1123712670	1-1237	1267	PULLEY; CRANK	000000	000000
1123712671	1-1237	1267	PULLEY; CRANK	000000	000000
1123712701	1-1237	1270	PULLEY; CRANKSH	000000	000001
1123712702	1-1237	1270	PULLEY;CRANKSHA	000000	000000
1123712703	1-1237	1270	PULLEY;CRANK SH	000000	000000
1123712704	1-1237	1270	PULLEY; CRANKSHAFT	000000	000000
1123712705	1-1237	1270	PULLEY; CRANKSHAFT	000000	000000
1123712820	1-1237	1282	PULLEY;CRANK DA	000000	000000
1123712830	1-1237	1283	PULLEY,CRANKSHA	000000	000006
1123712870	1-1237	1287	PULLEY; CRANKSHAFT 6RB1	000000	000000
1123712871	1-1237	1287	PULLEY; CRANKSHAFT 6RB1	000000	000000
1123712960	1-1237	1296	DAMPER; PULLEY (CRANKSHAF	000000	000000
1123713001	1-1237	1300	PULLEY; CRANKSHAFT	000000	000000
1123713002	1-1237	1300	PULLEY; CRANKSHAFT	000000	000001
1123713020	1-1237	1302	PULLEY; CRANK D	000000	000005
1123713050	1-1237	1305	PULLEY; CRANKSHAFT	000000	000000
1123713100	1-1237	1310	PULLEY; CRANKSH	000000	000000
1123713112	1-1237	1311	PULLEY	000000	000001
1123713113	1-1237	1311	PULLEY	000000	000000
1123713130	1-1237	1313	PULLEY; CRANKSHAFT	000000	000002
1123713140	1-1237	1314	PULLEY; CRANK	000000	000000
1123713150	1-1237	1315	PULLEY; CRANK	000000	000000
1123713212	1-1237	1321	PULLEY; CRANKSHAFT, V3	000000	000000
1123713213	1-1237	1321	PULLEY; CRANKSHAFT, V3	000000	000000
1123713220	1-1237	1322	PULLEY; CR	000000	000001
1123713240	1-1237	1324	PULLEY; CRANKSHAFT	000000	000000
1123713260	1-1237	1326	PULLEY; CRANKSHAFT	000000	000000
1123713350	1-1237	1335	PULLEY; CRANK	000000	000000
1123713351	1-1237	1335	PULLEY; CRANK	000000	000000
1123713460	1-1237	1346	PULLEY; CRANK	000000	000000
1123713461	1-1237	1346	PULLEY; CRANK	000000	000000
1123713470	1-1237	1347	PULLEY;C/SHAFT,V4 D=169	000000	000000
1123713491	1-1237	1349	PULLEY; CRANK	000000	000000
1123713500	1-1237	1350	PULLEY; CRANK	000000	000000
1123713501	1-1237	1350	PULLEY; CRANK	000000	000000
1123713510	1-1237	1351	PULLEY; CR., D-192	000000	000000
1123713511	1-1237	1351	PULLEY; CR., D-192	000000	000000
1123713640	1-1237	1364	PULLEY; CRANK	000000	000000
1123713641	1-1237	1364	PULLEY; CRANK	000000	000001
1123713680	1-1237	1368	PULLEY CRANKSHAFT V6	000000	000000
1123713721	1-1237	1372	PULLEY; CRANK	000000	000000
1123713730	1-1237	1373	PULLEY; CRANKSHAFT	000000	000003
1123713760	1-1237	1376	PULLEY	000000	000002
1123713810	1-1237	1381	CENTER; CRANK	000000	000000
1123713920	1-1237	1392	CENTER; CRANK	000000	000000
1123714010	1-1237	1401	PULLEY; CRANK	000000	000000

1123714011	1-1237	1401	PULLEY; CRANK	000000	000000
1123714020	1-1237	1402	PULLEY; CRANK	000000	000000
1123714050	1-1237	1405	PULLEY; CR/SHF	000000	000000
1123714070	1-1237	1407	PULLEY; CRANK	000000	000000
1123714100	1-1237	1410	PULLEY; CRANK	000000	000002
1123714170	1-1237	1417	PULLEY CRANKSHAFT V5	000000	000004
1123714240	1-1237	1424	PULLEY;CRK,178+V3X187+217	000000	000000
1123714340	1-1237	1434	PULLEY: CR/SHF	000000	000000
1123714443	1-1237	1444	PULLEY;CR/SHF	000000	000003
1123714570	1-1237	1457	PULLEY;CR/SHF DAMPER	000000	000000
1123714580	1-1237	1458	PULLEY;CR/SHF	000000	000000
1123714581	1-1237	1458	PULLEY;CR/SHF	000000	000002
1123714582	1-1237	1458	PULLEY;CR/SHF	000000	000000
1123714590	1-1237	1459	PULLEY;CR/SHF DAMPER	000000	000000
1123714600	1-1237	1460	PULLEY; CR/SHF	000000	000010
1123714660	1-1237	1466	CENTER CRANK	000000	000000
1123714670	1-1237	1467	PULLEY; CR/SHF	000000	000000
1123714680	1-1237	1468	PULLEY; CR/SHF	000000	000000
1123714700	1-1237	1470	PULLEY; CR/SHF DAMPER	000000	000035
1123714870	1-1237	1487	PAMPE; PULLEY	000000	000002
1123714880	1-1237	1488	PULLEY;CR/SHF DAMPER	000000	000009
1123714920	1-1237	1492	PULLEY; CR/SHF	000000	000000
1123714930	1-1237	1493	PULLEY; CR/SHF	000000	000000
1123750110	1-1237	5011	DAMPER; CRANKSHAFT E120	000000	000003
1123750450	1-1237	5045	DAMPER	000000	000000
1123750753	1-1237	5075	DAMPER: CRANK	000000	000000
1123750800	1-1237	5080	DAMPER	000000	000000
1123750930	1-1237	5093	DAMPER; CRANKSHAFT	000000	000002
1123750940	1-1237	5094	DAMPER; CRANKSHAFT	000000	000000
1123750990	1-1237	5099	DAMPER; CRANK S.	000000	000000
1123751050	1-1237	5105	DAMPER; CRANK	000000	000000
1123751080	1-1237	5108	DAMPER; CRANKSHAFT 6SA1T	000000	000000
1123751160	1-1237	5116	DAMPER; CRANK	000000	000000
1123751261	1-1237	5126	DAMPER; CRANKSHAFT	000000	000002
1123751320	1-1237	5132	DAMPER PULLEY	000000	000001
1123751340			DAMPER; CRANKSH	000000	000000
1123751390	1-1237	5139	DAMPER; CRANKSHAFT	000000	000001
1123751660	1-1237	5166	PULLEY; DAMPER	000000	000000
1123751710	1-1237	5171	PULLEY	000000	000000
1123751711	1-1237	5171	PULLEY	000000	000001
1123751881	1-1237	5188	DAMPER; CRANK	000000	000000
1123751882	1-1237	5188	DAMPER; CRANK	000001	000002
1123751890	1-1237	5189	DAMPER; CRANKSHAFT 6RB1T	000000	000004
1123751911	1-1237	5191	DAMPER PULLEY	000000	000001
1123751930	1-1237	5193	DAMPER; CR/SHF	000000	000000
1123751950	1-1237	5195	DAMPER;CR/SHF	000000	000003
1123752070	1-1237	5207	DAMPER; CR/SHF	000000	000001

1123780010	1-1237	8001	CLAW	000000	000000
1123780011	1-1237	8001	CLAW; CRANKING HANDLE	000000	000000
1123790190	1-1237	9019	THROWER; DUST	000000	000000
1123790200	1-1237	9020	THROWER; DUST	000000	000001
1123790210	1-1237	9021	WEAR RING; CRANK DA640	000001	000000
1123790310	1-1237	9031	RING; WEAR, OIL SEAL DA64	000000	000000
1123790361	1-1237	9036	PLATE	000000	000000
1123790380	1-1237	9038	PULLEY; CENTER	000002	000000
1123790390	1-1237	9039	WASHER;; DAMPER	000000	000000
1123790391	1-1237	9039	WASHER;; DAMPER	000001	000000
1125110970	1-1251	1097	CAMSHAFT	000000	000000
1125110980	1-1251	1098	CAM SHAFT	000000	000000
1125111400	1-1251	1140	SUPERSEDED**CAMSHAFT	000000	000000
112511178T			CAMSHAFT	000000	000000
1125111781			CAMSHAFT	000000	000001
1125111852	1-1251	1185	CAMSHAFT ASM	000000	000000
1125111853	1-1251	1185	CAMSHAFT ASM	000001	000001
1125112013	1-1251	1201	CAMSHAFT	000000	000000
1125112170	1-1251	1217	CAMSHAFT; 6SA1	000000	000000
1125112173	1-1251	1217	CAMSHAFT; 6SA1	000000	000000
1125112300	1-1251	1230	CAMSHAFT; TIMING	000000	000000
1125112301	1-1251	1230	CAMSHAFT; TIMING	000000	000001
1125112490	1-1251	1249	CAM SHAFT	000000	000000
1125112491	1-1251	1249	CAM SHAFT	000000	000013
1125112540	1-1251	1254	CAM SHAFT	000000	000000
1125112541	1-1251	1254	CAMSHAFT; 6S41	000000	000001
1125112552	1-1251	1255	CAMSHAFT	000000	000004
1125140050	1-1251	4005	SHAFT; CAM	000000	000004
1125140100	1-1251	4010	CAMSHAFT	000000	000002
1125161240	1-1251	6124	BRACKET KIT; CAM. CYL. HEAD.	000000	000000
1125161250	1-1251	6125	BRKT; KIT, CAM	000000	000000
1125161251	1-1251	6125	BRKT; KIT, CAM	000000	000001
1125161481	1-1251	6148	BRACKET SET; CAM, CYL HD	000000	000000
1125161521	1-1251	6152	BRACKET SET; CAM, CYL HD	000000	000000
1125161680	1-1251	6168	BRACKET KIT; CAM	000000	000000
1125161780	1-1251	6178	BRACKET KIT; CAM CYL HD	000000	000000
1125161800	1-1251	6180	BRACKET KIT; CAM. CYL HD	000000	000003
1125210010	1-1252	1001	GEAR; CRANK	000000	000000
1125210080	1-1252	1008	GEAR; CRANKSHAFT	000000	000000
1125210113	1-1252	1011	GEAR;	000000	000000
1125210120	1-1252	1012	GEAR; CRANK	000000	000000
1125210121	1-1252	1012	GEAR; CRANK	000000	000001
1125210210	1-1252	1021	GEAR; CRANKSHAF	000000	000000
1125210211	1-1252	1021	GEAR; CRANKSHAFT	000000	000001
1125210271	1-1252	1027	GEAR; CRANK	000000	000001
1125210530	1-1252	1053	GEAR; CRANK SHAFT	000000	000000
1125210531	1-1252	1053	GEAR; CRANK SHAFT	000001	000000

1125210610	1-1252	1061	GEAR; SR/SHF	000000	000000
1125210611	1-1252	1061	GEAR; SR/SHF	000000	000000
1125210612	1-1252	1061	GEAR; SR/SHF	000001	000000
1125210680	1-1252	1068	GEAR;CR/SHF	000000	000000
1125220020	1-1252	2002	GEAR; CAMSHAFT	000000	000000
1125220021	1-1252	2002	GEAR; CAMSHAFT	000000	000000
1125220081	1-1252	2008	GEAR; CAMSHAFT	000000	000000
1125220135	1-1252	2013	GEAR; CAMSHAFT	000000	000000
1125220151	1-1252	2015	GEAR; CAMSHAFT	000002	000000
1125220160	1-1252	2016	GEAR; CAMSHAFT	000000	000000
1125220161	1-1252	2016	GEAR; CAMSHAFT	000000	000000
1125220162	1-1252	2016	GEAR; CAMSHAFT	000000	000002
1125220260	1-1252	2026	GEAR; CAMSHAFT	000000	000000
1125220261	1-1252	2026	GEAR;CAMSHAFT	000000	000001
1125220271	1-1252	2027	GEAR; CAM SHAFT	000000	000000
1125220272	1-1252	2027	GEAR; CAM SHAFT	000000	000000
1125220280	1-1252	2028	GEAR; CAMSHAFT	000000	000000
1125220281	1-1252	2028	GEAR; CAMSHAFT	000001	000000
1125220370	1-1252	2037	GEAR; CAM SHAFT	000000	000000
1125220371	1-1252	2037	GEAR; CAM SHAFT	000000	000000
1125220372	1-1252	2037	GEAR; CAM SHAFT	000001	000000
1125220552	1-1252	2055	GEAR;CM/SHF	000000	000000
1125220600	1-1252	2060	GEAR;CM/SHF	000002	000001
1125220601	1-1252	2060	GEAR;CM/SHF	000000	000000
1125230150	1-1252	3015	GEAR ASM; IDLE W/BUSH	000000	000000
1125230440	1-1252	3044	SUPERSEDED**GEAR	000000	000000
1125230504	1-1252	3050	GEAR; IDLE	000000	000000
1125230570	1-1252	3057	GEAR; IDLER	000000	000000
1125230571	1-1252	3057	GEAR; IDLER	000000	000000
1125230572	1-1252	3057	GEAR; IDLER	000000	000000
1125230573	1-1252	3057	GEAR; IDLER	000000	000000
1125230800	1-1252	3080	GEAR; IDLER "A" 6SA1T	000000	000000
1125230820	1-1252	3082	GEAR; IDLER	000000	000000
1125230940	1-1252	3094	GEAR; WITH BUSHING, IDLE	000000	000002
1125230960	1-1252	3096	GEAR;	000000	000000
1125231090	1-1252	3109	GEAR; IDLER	000000	000003
1125231110	1-1252	3111	GEAR; IDLE	000000	000000
1125231111	1-1252	3111	GEAR IDLE	000000	000001
1125231121	1-1252	3112	GEAR; IDLE "C"	000000	000001
1125231220	1-1252	3122	GEAR; IDLER	000000	000003
1125231310	1-1252	3131	GEAR ASM; W/BUSH	000000	000000
1125231312	1-1252	3131	GEAR ASM; W/BUSH	000000	000000
1125231650	1-1252	3165	GEAR ASM; IDLE	000000	000000
1125231720	1-1252	3172	GEAR; IDLE	000001	000000
1125232153	1-1252	3215	GEAR ASM;IDLE	000000	000000
1125232316	1-1252	3231	GEAR ASMM; IDLE	000000	000000
1125232317	1-1252	3231	GEAR ASMM; IDLE	000000	000001

1125232410	1-1252	3241	GEAR ASM; IDLE	000000	000000
1125232420	1-1252	3242	GEAR ASM; IDLE	000000	000000
1125232460	1-1252	3246	GEAR; IDLE, "C"	000000	000000
1125232461	1-1252	3246	GEAR; IDLE, "C"	000000	000001
1125233130	1-1252	3313	GEAR ASM; IDLE	000000	000000
1125233340	1-1252	3334	GEAR ASM; IDLE	000000	000000
1125233460	1-1252	3346	GEAR IDLE	000000	000001
1125233470	1-1252	3347	GEAR; IDLE	000000	000001
1125233660	1-1252	3366	GEAR ASM; IDLE	000000	000000
1125233661	1-1252	3366	GEAR ASM; IDLE	000000	000001
1125233690	1-1252	3369	GEAR ASM; IDLE	000000	000000
1125233691	1-1252	3369	GEAR ASM; IDLE	000000	000004
1125233710	1-1252	3371	GEAR ASM; IDLE	000001	000005
1125233711	1-1252	3371	GEAR ASM; IDLE	000000	000000
1125233770	1-1252	3377	GEAR; IDLE	000000	000000
1125233771	1-1252	3377	GEAR; IDLE	000000	000000
1125233781	1-1252	3378	GEAR; IDLE	000001	000001
1125240012	1-1252	4001	GEAR, INJ PUMP	000000	000000
1125240114	1-1252	4011	GEAR; INJ. PUMP	000000	000000
1125240121	1-1252	4012	GEAR; INJ. PUMP	000000	000002
1125240131	1-1252	4013	GEAR; INJ PUMP 6RB1/E120	000000	000000
1125240150	1-1252	4015	GEAR; INJ, FEDERA	000000	000000
1125240210	1-1252	4021	GEAR; INJ PUMP	000000	000002
1125240300	1-1252	4030	GEAR INJ; PUMP	000000	000000
1125240330	1-1252	4033	GEAR; DRIVE, INJ	000000	000007
1125240350	1-1252	4035	GEAR; I/PUMP	000000	000000
1125240371	1-1252	4037	GEAR; INJ PUMP	000000	000000
1125240372	1-1252	4037	GEAR; INJ PUMP	000000	000005
1125240400	1-1252	4040	GEAR; INJ PUMP	000000	000000
1125240460	1-1252	4046	GEAR; INJ. PUMP	000000	000000
1125240480	1-1252	4048	GEAR; INJ. PUMP	000000	000001
1125240520	1-1252	4052	GEAR; INJ. PUMP	000000	000000
1125240540	1-1252	4054	GEAR; I/PUMP	000000	000000
1125240570	1-1252	4057	GEAR; I/PUMP	000000	000000
1125240580	1-1252	4058	GEAR; I/PUMP	000000	000000
1125240590	1-1252	4059	GEAR; AIR CMPR	000001	000000
1125240630	1-1252	4063	GEAR; INJ. PUMP	000001	000000
1125240650	1-1252	4065	GEAR; DRIVE, INJ PUMP	000000	000000
1125240680	1-1252	4068	GEAR; INJ. PUMP	000000	000000
1125240700	1-1252	4070	GEAR; INJ. PUMP	000000	000000
1125240720	1-1252	4072	GEAR; INJ PUMP	000000	000004
1125240730	1-1252	4073	GEAR; A/C-INJ/PUMP	000000	000001
1125240770	1-1252	4077	GEAR; INJ. PUMP	000000	000000
1125240980	1-1252	4098	GEAR; AIR CMPR. & INJ. PUMP	000000	000000
1125240981	1-1252	4098	GEAR; AIR CMPR. & INJ. PUMP	000000	000001
1125241000	1-1252	4100	GEAR; INJ. PUMP & COMPR	000000	000000
1125241001	1-1252	4100	GEAR; INJ. PUMP & COMPR	000000	000001

1125241111	1-1252	4111	GEAR; INJ PUMP	000000	000000
1125241640	1-1252	4164	GEAR;INJ PUMP	000003	000000
1125250011	1-1252	5001	GEAR; IDLE-CASE	000000	000000
1125250021	1-1252	5002	GEAR; IDLE-CASE	000000	000000
1125250040	1-1252	5004	GEAR; IDLER	000000	000001
1125250050	1-1252	5005	GEAR; SEA WATER PUMP DRIV	000000	000001
1125280060	1-1252	8006	BUSHING; GEAR	000000	000023
1125280070	1-1252	8007	BUSHING; IDLE S	000000	000003
1125280130	1-1252	8013	BUSH; IDLE GEAR A	000014	000000
1125280200	1-1252	8020	BUSHING; IDLE GEAR A	000002	000000
1125280280	1-1252	8028	BUSHING;IDLE GEAR A	000000	000026
1125290030	1-1252	9003	RING;FRICTION	000003	000002
1125300040	1-1253	0004	CASE ASM; BRG E120	000000	000000
1125300060	1-1253	0006	CASE ASM; BRG 6RB1	000000	000000
1125300100	1-1253	0010	CASE ASM.;BRG., INJ. PUMP	000000	000000
1125300110	1-1253	0011	CASE ASM BRG INJ PUMP DRI	000000	000000
1125300111	1-1253	0011	CASE ASN BRG INJ PUMP DRI	000000	000000
1125300130	1-1253	0013	CASE ASM; BRG 6RB1	000000	000002
1125300180	1-1253	0018	COMPRESSOR ASM; AIR	000000	000000
1125300181	1-1253	0018	COMPRESSOR ASM; AIR	000000	000000
1125300182	1-1253	0018	COMPRESSOR ASM; AIR	000000	000000
1125300190	1-1253	0019	COUPLING ASM	000000	000000
1125310050	1-1253	1005	SHAFT; IDLE GEAR	000000	000000
1125310111	1-1253	1011	SHAFT; IDLE GEA	000000	000000
1125310122	1-1253	1012	SHAFT; IDLE GEA	000000	000000
1125310142	1-1253	1014	SHAFT; IDLE GEA	000000	000000
1125310220	1-1253	1022	SHAFT; IDLE GEAR	000000	000000
1125310232	1-1253	1023	SHAFT; IDLE GEAR	000000	000004
1125310300	1-1253	1030	SHAFT; IDLE GEAR	000001	000000
1125310370	1-1253	1037	SHAFT; IDLE GEAR	000001	000000
1125310541	1-1253	1054	SHAFT; IDLE GEAR B	000000	000000
1125310640	1-1253	1064	SHAFT; IDLE GEAR A	000000	000000
1125310690	1-1253	1069	SHAFT; IDLE GEAR	000000	000001
1125310761	1-1253	1076	SHAFT; IDLE GEAR	000000	000000
1125310762	1-1253	1076	SHAFT; IDLE GEAR	000001	000000
1125310920	1-1253	1092	SHAFT; IDLE GEAR	000000	000000
1125310921	1-1253	1092	SHAFT; IDLE GEAR	000000	000000
1125310922	1-1253	1092	SHAFT; IDLE GEAR	000001	000001
1125310930	1-1253	1093	SHAFT; IDLE GEAR	000000	000000
1125310931	1-1253	1093	SHAFT; IDLE GEAR	000000	000004
1125310972	1-1253	1097	SHAFT; IDLE GEAR	000002	000001
1125310980	1-1253	1098	SHAFT IDLE GEAR	000000	000002
1125310990	1-1253	1099	SHAFT;IDLE GEAR	000002	000000
1125311150	1-1253	1115	SHAFT; IDLE GEAR	000000	000004
1125320032	1-1253	2003	SHAFT ASM E120	000001	000000
1125320090	1-1253	2009	SHAFT DRIVE INJ	000000	000000
1125320092	1-1253	2009	SHAFT; DRIVE INJ PUMP	000000	000001

1125320110	1-1253	2011	SHAFT; INJ. PUMP DRIVE	000000	000000
1125320111	1-1253	2011	SHAFT; INJ. PUMP DRIVE	000000	000000
1125320130	1-1253	2013	SHAFT INJ PUMP DRIVE	000000	000000
1125320140	1-1253	2014	SHAFT	000000	000000
1125320141	1-1253	2014	SHAFT	000002	000000
1125330042	1-1253	3004	SHAFT; IDLE GEAR	000000	000001
1125330060	1-1253	3006	SHAFT; SEA WATER PUMP	000000	000001
1125330940	1-1253	3094	GEAR; IDLE W/BUSH	000000	000000
1125350050	1-1253	5005	PLATE; THRUST 6RB1T	000001	000004
1125350081	1-1253	5008	COLLAR; THRUST, IDLE GEAR	000001	000000
1125350190	1-1253	5019	COLLAR; THRUST, IDLE GEAR	000001	000000
1125350210	1-1253	5021	PLATE; GEAR, IDLE A	000000	000000
1125350211	1-1253	5021	PLATE; GEAR, IDLE A	000001	000000
1125390050	1-1253	9005	ADAPTER; ELBOW DRIVE	000000	000000
1125390110	1-1253	9011	ADAPTER;ELBOW	000000	000021
1125390121	1-1253	9012	ADAPTER; ELBOW DRIVE	000003	000000
1125390170	1-1253	9017	ADAPTER; ELBOW DRIVE	000001	000000
1125391050	1-1253	9105	BEARING; COUPLING	000000	000000
1125391060	1-1253	9106	BEARING; COUPLING	000000	000000
1125391070	1-1253	9107	SEAL; OIL SHAFT	000000	000000
1125391080	1-1253	9108	RING; SNAP	000000	000000
1125510020	1-1255	1002	INT VALVE	000011	000000
1125510030	1-1255	1003	VALVE; INLET	000000	000000
1125510042	1-1255	1004	VALVE; INLET	000009	000012
1125510100	1-1255	1010	SUPERSEDED**VALVE	000000	000000
1125510130	1-1255	1013	VALVE; INLET	000000	000000
1125510252	1-1255	1025	VALVE; INLET E120	000002	000001
1125510303	1-1255	1030	VALVE	000000	000000
1125510471	1-1255	1047	VALVE; INL	000000	000000
1125510500	1-1255	1050	VALVE; INLET	000000	000000
1125510501	1-1255	1050	IALVE; INLET	000000	000032
1125510521	1-1255	1052	VALVE; INLET	000000	000000
1125510540	1-1255	1054	VALVE; INLET	000000	000000
1125510541	1-1255	1054	VALVE; INLET	000000	000011
1125510570	1-1255	1057	VALVE; INL	000000	000000
1125510760	1-1255	1076	VALVE; INLET	000000	000012
1125510830	1-1255	1083	VALVE; INTAKE	000000	000121
1125510831	1-1255	1083	VALVE; INTAKE	000000	000000
1125510890	1-1255	1089	VALVE; INLET 6SA1	000000	000000
1125510891	1-1255	1089	VALVE; INLET 6SA1	000000	000000
1125510892	1-1255	1089	VALVE; INLET 6SA1	000000	000021
1125510900	1-1255	1090	VALVE; INLET 6SA1	000000	000000
1125510920	1-1255	1092	VALVE; INL	000000	000009
1125510930	1-1255	1093	CAM SHAFT AND VALVE	000014	000001
1125511110	1-1255	1111	VALVE; INL	000000	000000
1125511111	1-1255	1111	VALVE; INL	000000	000000
1125511112	1-1255	1111	VALVE; INL	000000	000010

1125511260	1-1255	1126	VALVE; INLET	000000	000000
1125511261	1-1255	1126	VALVE; INLET	000000	000028
1125511290	1-1255	1129	VALVE; INL	000000	000000
1125511291	1-1255	1129	VALVE; INL	000000	000078
1125511390	1-1255	1139	VALVE; INTAKE	000000	000000
1125511391	1-1255	1139	VALVE; INTAKE	000000	000152
1125511510	1-1255	1151	VALVE; INL	000000	000000
1125511511	1-1255	1151	VALVE; INL	000000	000000
1125511512	1-1255	1151	VALVE; INL	000000	000000
1125511513	1-1255	1151	VALVE; INL	000000	000000
1125511514	1-1255	1151	VALVE; INL	000000	000000
1125511515	1-1255	1151	VALVE; INL	000000	000000
1125511612	1-1255	1161	VALVE; INL	000000	000000
1125511613	1-1255	1161	VALVE; INL	000000	000000
1125511614	1-1255	1161	VALVE; INL	000000	000002
1125511621	1-1255	1162	VALVE; INL	000000	000000
1125511622	1-1255	1162	VALVE; INL	000000	000000
1125511623	1-1255	1162	VALVE; INL	000000	000000
1125511624	1-1255	1162	VALVE; INL	000000	000093
1125511650	1-1255	1165	VALVE; INL	000000	000109
1125520010	1-1255	2001	EXH VALVE	000021	000000
1125520030	1-1255	2003	VALVE; EXHAUST	000000	000000
1125520031	1-1255	2003	VALVE; EXHAUST	000001	000000
1125520071	1-1255	2007	VALVE; EXHAUST	000014	000000
1125520132	1-1255	2013	VALVE; EXH	000000	000000
1125520154	1-1255	2015	VALVE; EXHAUST	000000	000003
1125520220	1-1255	2022	VALVE; EXHAUST	000000	000000
1125520221	1-1255	2022	VALVE; EXHAUST	000001	000000
1125520250	1-1255	2025	VALVE; EXHAUST	000000	000000
1125520251	1-1255	2025	VALVE; EXHAUST	000000	000000
1125520260			EXH VALVE	000000	000000
1125520270	1-1255	2027	VALVE; EXHAUST	000054	000000
1125520280	1-1255	2028	VALVE; EXH	000000	000176
1125520410	1-1255	2041	VALVE; EXHAUST	000000	000000
1125520430	1-1255	2043	VALVE; EXH	000000	000000
1125520500	1-1255	2050	VALVE; EXHAUST	000040	000000
1125520520	1-1255	2052	VALVE; EXHAUST	000000	000000
1125520630	1-1255	2063	VALVE; EXH	000000	000000
1125520631	1-1255	2063	VALVE; EXH	000000	000000
1125520790	1-1255	2079	VALVE; EXH	000000	000000
1125520800	1-1255	2080	VALVE; EXH	000000	000000
1125520830	1-1255	2083	VALVE; EXH	000000	000110
1125520850	1-1255	2085	EXHAUST VALVE	000000	000000
1125520851	1-1255	2085	EXHAUST VALVE	000000	000000
1125520970	1-1255	2097	VALVE; EXHAUST	000000	000000
1125521002	1-1255	2100	VALVE; EXH	000000	000000
1125521003	1-1255	2100	VALVE; EXH	000000	000128

1125521080	1-1255	2108	VALVE;EXH	000000	000000
1125521081	1-1255	2108	VALVE;EXH	000000	000000
1125521082	1-1255	2108	VALVE;EXH	000000	000098
1125521090	1-1255	2109	VALVE;EXH	000000	000000
1125521091	1-1255	2109	VALVE;EXH	000000	000058
1125521100	1-1255	2110	VALVE; EXH	000000	000000
1125521110	1-1255	2111	VALVE; EXH	000000	000158
1125521130	1-1255	2113	VALVE; EXHAUST	000000	000000
1125521131	1-1255	2113	VALVE; EXHAUST	000001	000002
1125600120	1-1256	0012	SPRING ASM; VALVE EXH.	000014	000000
1125600130	1-1256	0013	SPRING VALVE; INLET	000003	000001
1125600140	1-1256	0014	SPRING VALVE; EXHAUST	000003	000001
1125610010	1-1256	1001	VALVE; SPRING, IN	000000	000000
1125610110	1-1256	1011	SPRING; VLV, OUT	000000	000004
1125610180	1-1256	1018	SPRING; VLV, OUT	000006	000017
1125610280	1-1256	1028	SPRING; VALVE E120	000060	000020
1125610380	1-1256	1038	SPRING; VLV, OUTER, EXH.	000000	000000
1125610400	1-1256	1040	SPRING; VALVE OUTER	000000	000000
1125610470	1-1256	1047	SPRING; VLV, OUT	000000	000000
1125610480	1-1256	1048	SPRING; VLV, INN	000000	000000
1125610510	1-1256	1051	SPRING; VALVE, OUTER 6SA1	000000	000029
1125610520	1-1256	1052	SPRING; VALVE, OUTER 6SA1	000000	000000
1125610630	1-1256	1063	SPRING; VALVE	000000	000021
1125610720	1-1256	1072	SPRING; VALVE, OUT	000000	000059
1125610730	1-1256	1073	SPRING; VALVE, INN	000000	000059
1125610800	1-1256	1080	SPRING	000000	000052
1125610890	1-1256	1089	SPRING; VALVE, OUTER	000000	000105
1125610900	1-1256	1090	SPRING; VLV, OUTER EXH.	000000	000049
1125610920	1-1256	1092	SPRING; VLV	000000	000000
1125610930	1-1256	1093	SPRING; VLV, OUTER	000000	000301
1125610980	1-1256	1098	SPRING; VALVE	000000	000013
1125610981	1-1256	1098	SPRING; VALVE	000000	000000
1125610990	1-1256	1099	SPRING; VALVE	000000	000000
1125610991	1-1256	1099	SPRING; VALVE	000000	000091
1125620010	1-1256	2001	VALVE; SPRING, OUT	000000	000000
1125620080	1-1256	2008	SPRING; VLV, INN	000000	000003
1125620130	1-1256	2013	SPRING; VLV, INN	000000	000011
1125620270	1-1256	2027	SPRING; VLV, INNER	000000	000000
1125620280	1-1256	2028	SPRING; VALVE, INNER	000000	000000
1125620320	1-1256	2032	SPRING; VALVE, INNER 6SA1	000000	000016
1125620330	1-1256	2033	SPRING; VALVE, INNER 6SA1	000000	000000
1125620570	1-1256	2057	SPRING; VALVE, INNER	000000	000096
1125620580	1-1256	2058	SPRING; VALVE, INNER EXH.	000000	000049
1125620600	1-1256	2060	SPRING; VLV, INNER	000000	000037
1125630040	1-1256	3004	SEAT; SPRING UP	000000	000000
1125630060	1-1256	3006	SEAT; VALVE	000000	000000
1125630130	1-1256	3013	SEAT; VALVE SPRING-UPPER	000000	000000

1125630131	1-1256	3013	SEAT; VALVE SPRING-UPPER	000000	000025
1125630160	1-1256	3016	SPRING SEAT	000000	000000
1125630270	1-1256	3027	SEAT; SPR,LWR	000000	000000
1125630300	1-1256	3030	SEAT; SPRING VALVE	000000	000000
1125630331	1-1256	3033	SEAT; SPR,UPR	000000	000000
1125630351	1-1256	3035	SEAT; SPRING LOWER 6BB/BD	000000	000021
1125630380	1-1256	3038	SEAT; VALVE SPRING, LOWER	000000	000000
1125630490	1-1256	3049	SEAT; SPR,UPR	000000	000000
1125630550	1-1256	3055	SEAT;SPR	000000	000000
1125630562	1-1256	3056	SEAT;SPR	000000	000158
1125630591	1-1256	3059	SEAT;SPR	000000	000011
1125630600	1-1256	3060	SEAT; SPR	000022	000164
1125650010	1-1256	5001	COLLAR; SPLIT	000015	000501
1125650020	1-1256	5002	COLLAR; SPLIT	000000	000000
1125650070	1-1256	5007	COLLAR; SPLIT	000000	000596
1125690010	1-1256	9001	SEAL; VALVE GUIDE	000015	000000
1125690091	1-1256	9009	VALVE STEM; OIL	000000	000000
1125690100	1-1256	9010	SEAL; VLV GUIDE	000000	000000
1125690120	1-1256	9012	SEAL; VALVE	000015	000000
1125690130	1-1256	9013	SEAL; VALVE GUIDE	000000	000486
1125690150	1-1256	9015	SEAL; VALVE GUIDE	000000	000000
1125690160	1-1256	9016	SEAL;VLV,GUIDE	000000	000000
1125690170	1-1256	9017	VALVE STEM; OIL	000000	000000
1125690191	1-1256	9019	SEAL; VLV GUIDE	000000	000061
1125690200	1-1256	9020	SEAL; VLV GUIDE	000000	000000
1125710033	1-1257	1003	TAPPET; INL/EXH	000000	000000
1125710172	1-1257	1017	TAPPET	000000	000000
1125711190	1-1257	1119	TAPPET	000000	000000
1125711460	1-1257	1146	TAPPET ASM;CAM	000000	000000
1125711461	1-1257	1146	TAPPET ASM;CAM	000000	000000
1125711470	1-1257	1147	TAPPET	000000	000000
1125711600	1-1257	1160	TAPPET	000000	000000
1125711601	1-1257	1160	TAPPET	000000	000000
1125711681	1-1257	1168	TAPPET	000000	000000
1125711682	1-1257	1168	TAPPET	000000	000000
1125711991	1-1257	1199	TAPPET	000000	000000
1125712110	1-1257	1211	TAPPET	000000	000000
1125712111	1-1257	1211	TAPPET	000000	000000
1125712112	1-1257	1211	TAPPET; VALVE	000000	000000
1125712113	1-1257	1211	TAPPET; VALVE	000000	000000
1125712114	1-1257	1211	TAPPET; VALVE	000012	000018
1125712120	1-1257	1212	TAPPET	000000	000000
1125712121	1-1257	1212	TAPPET	000000	000000
1125712210	1-1257	1221	TAPPET; VALVE	000000	000000
1125712230			TAPPETT	000004	000000
1125712281			TAPPET; VALUE	000000	000000
1125712410			TAPPET;VALUE	000002	000000

1125712490			TAPPET; VLV	000000	000000
1125712510	1-1257	1251	TAPPET	000000	000000
1125712511	1-1257	1251	TAPPET	000000	000084
1125750160	1-1257	5016	ROD; PUSH 12PB1	000001	000000
1125750161	1-1257	5016	ROD; PUSH 12PB1	000000	000000
1125750242	1-1257	5024	ROD PUSH	000000	000000
1125750300	1-1257	5030	ROD; PUSH,ROCKER	000000	000000
1125750360	1-1257	5036	PUSHROD	000296	000000
1125750370	1-1257	5037	ROD;BUSH	000000	000000
1125750411	1-1257	5041	ROD PUSH	000000	000000
1125750600			ROD;PUSH	000000	000016
1126001910	1-1260	0191	ROCKER ARM & SHAFT ASM	000000	000000
1126001920	1-1260	0192	ROCKER ARM & SHAFT ASM	000000	000000
1126100111	1-1261	0011	ARM;ROCKER	000000	000000
1126100112	1-1261	0011	ARM; ROCKER	000000	000000
1126100131	1-1261	0013	BRIDGE; ROCKER	000000	000000
1126100310	1-1261	0031	ARM; ROCKE	000000	000000
1126100312	1-1261	0031	ARM; ROCKER	000000	000000
1126100450	1-1261	0045	ARM;ROCKER	000000	000000
1126100451	1-1261	0045	ARM; ROCKER	000000	000000
1126100452	1-1261	0045	ARM; ROCKER	000000	000071
1126100611	1-1261	0061	ARM; ROCKER	000000	000048
1126100791	1-1261	0079	ARM; ROCKER	000000	000000
1126100792	1-1261	0079	ARM; ROCKER	000000	000000
1126100800	1-1261	0080	ARM;ROCKER	000000	000030
1126100801	1-1261	0080	ARM;ROCKER	000000	000032
1126110141	1-1261	1014	BRIDGE; ROCKER E120	000000	000000
1126111000	1-1261	1100	ARM; ROCKER INLET	000000	000000
1126111010	1-1261	1101	ROCKER ARM EXH	000000	000000
1126111180	1-1261	1118	ARM; ROCKER W/BUSH	000000	000014
1126111700	1-1261	1170	BRIDGE; 6RB1T	000000	000038
1126111820	1-1261	1182	ARM; ROCKER	000000	000000
1126112490	1-1261	1249	ARM; ROCKER	000110	000135
1126112660	1-1261	1266	ARM; ROCKER	000000	000000
1126112670	1-1261	1267	ARM; ROCKER	000000	000000
1126112771	1-1261	1277	BRIDGE	000000	000000
1126112772	1-1261	1277	BRIDGE	000000	000000
1126112773	1-1261	1277	BRIDGE	000000	000046
1126150131	1-1261	5013	BUSHING; ROCKER ARM	000000	000000
1126160010	1-1261	6001	ADJ SCREW,ROCKE	000000	000000
1126160170	1-1261	6017	SCREW; ADJ,ROCK	000000	000000
1126160210	1-1261	6021	SCREW;ADJ.,ROCK	000000	000000
1126160211	1-1261	6021	SCREW; ADJ,ROCK	000000	000000
1126160280	1-1261	6028	SCREW;ADJ,ROCK	000000	000000
1126160341	1-1261	6034	SCREW;ADJ ROCKER ARMN	000035	000000
1126160350	1-1261	6035	SCREW;ADJ.ROCKER	000000	000000
1126160380	1-1261	6038	SCREW; ADJ. ROCKER ARM	000000	000005

1126160400	1-1261	6040	CAP; ADJ SCREEN	000000	000067
1126160410	1-1261	6041	SCREW; ADJ E120	000000	000040
1126160420	1-1261	6042	SCRE; ADJ, BRIDGE	000000	000037
1126190112	1-1261	9011	PLATE; CAP	000052	000011
1126210110	1-1262	1011	SHAFT,ROCKER AR	000000	000000
1126210120	1-1262	1012	SHAFT; ROCKER ARM	000000	000000
1126210510	1-1262	1051	SHAFT; ROCKER A	000000	000001
1126210620	1-1262	1062	SHAFT; ROCKER ARM	000000	000000
1126210621	1-1262	1062	SHAFT; ROCKER ARM	000000	000003
1126210630	1-1262	1063	SHAFT; ROCKER ARM	000000	000000
1126210631	1-1262	1063	SHAFT; ROCKER ARM	000000	000007
1126210840	1-1262	1084	SHAFT ASM; ROCKER ARM	000000	000000
1126210841	1-1262	1084	SHAFT ASM; ROCKER ARM	000000	000003
1126210900	1-1262	1090	SHAFT; ROCKER ARM	000000	000003
1126210920	1-1262	1092	SHAFT; ROCKER ARM	000000	000002
1126210940	1-1262	1094	SHAFT;ROCKER ARM	000000	000005
1126280062	1-1262	8006	BRACKET; ROCKER ARM	000000	000000
1126280081	1-1262	8008	BRACKET; ROCKER ARM	000000	000000
1126280111	1-1262	8011	BRACKET; ROCKER ARM	000001	000000
1126280121	1-1262	8012	BRACKET; ROCKER ARM	000000	000000
1126280280	1-1262	8028	BRACKET E120	000000	000005
1126280340	1-1262	8034	BRACKET; ROCKER	000000	000000
1126280450	1-1262	8045	BRACKET; R	000000	000003
1126280480	1-1262	8048	BRACKET	000000	000000
1126280681	1-1262	8068	BRACKET; SHAFT, INTER	000000	000000
1126280682	1-1262	8068	BRACKET; SHAFT, INTER	000001	000007
1126280701	1-1262	8070	BRACKET;ROCKER SHAFT,FRT	000000	000000
1126280703	1-1262	8070	BRACKET;ROCKER SHAFT,FRT	000001	000000
1126280721	1-1262	8072	BRACKET; ROCKER SHAFT SHA	000000	000000
1126280723	1-1262	8072	BRACKET; ROCKER SHAFT SHA	000001	000000
1126280940	1-1262	8094	BRACKET; ROCKER S	000000	000006
1129110180	1-1291	1018	PISTON SET; STD	000000	000000
1129110181	1-1291	1018	PISTON SET; STD	000000	000000
1131000250	1-1310	0025	PUMP ASM; OIL	000000	000000
1131000260	1-1310	0026	PUMP ASM; OIL	000000	000000
1131000270	1-1310	0027	OIL PUMP ASSY	000001	000000
1131000300	1-1310	0030	PUMP ASAM;OIL	000000	000000
1131000470	1-1310	0047	OIL PUMP ASSY	000000	000000
1131000480	1-1310	0048	OIL PUMP GEAR	000000	000000
1131000490	1-1310	0049	PUMP ASM; OIL	000000	000000
1131000992	1-1310	0099	PUMP ASM; OIL	000000	000000
1131000993	1-1310	0099	PUMP ASM; OIL	000000	000000
1131001191	1-1310	0119	OIL PUMP ASM	000000	000000
1131001193	1-1310	0119	PUMP ASM,OIL	000000	000000
1131001203	1-1310	0120	PUMP ASM; OIL	000001	000000
1131001292	1-1310	0129	PUMP ASM; OIL E120	000000	000000
1131001361	1-1310	0136	PUMP ASM; OIL E120	000000	000000

1131001541	1-1310	0154	PUMP ASM; OIL	000000	000000
1131001562	1-1310	0156	OIL PUMP ASM.	000000	000000
1131001572	1-1310	0157	PUMP ASM; OIL	000000	000000
1131001653	1-1310	0165	PUMP ASM; OIL	000000	000000
1131001670	1-1310	0167	PUMP ASM; OIL	000000	000000
1131001680	1-1310	0168	PUMP ASM.;OIL	000000	000000
1131001721	1-1310	0172	PUMP ASM; OIL	000000	000000
1131001800	1-1310	0180	PUMP ASM; OIL W/PINION	000000	000000
1131001810	1-1310	0181	PUMP ASM.; OIL, WO/PINION	000000	000000
1131001832	1-1310	0183	PUMP ASM; OIL	000000	000000
1131001890	1-1310	0189	PUMP ASM.; OIL	000000	000000
1131001912	1-1310	0191	PUMP ASM; OIL	000000	000009
1131001940	1-1310	0194	PUMP ASM; OIL	000000	000000
1131001980	1-1310	0198	PUMP ASM; OIL W/PINION	000000	000000
1131001990	1-1310	0199	PUMP ASM;OIL	000000	000002
1131002000			PUMP ASM; OIL	000000	000000
1131002010			PUMP ASM; OIL	000000	000005
1131002040	1-1310	0204	PUMP ASM; OIL W/PINION	000000	000000
1131002080	1-1310	0208	PUMP ASM; OIL	000000	000001
1131002090	1-1310	0209	PUMP ASM; OIL	000000	000000
1131002091	1-1310	0209	PUMP ASM; OIL	000000	000000
1131002092	1-1310	0209	PUMP ASM; OIL	000000	000000
1131002093	1-1310	0209	PUMP ASM; OIL	000000	000002
1131002102	1-1310	0210	PUMP ASM; OIL	000000	000001
1131002110	1-1310	0211	PUMP ASM; OIL	000000	000002
1131002120	1-1310	0212	OIL PUMP ASM.	000001	000000
1131002200	1-1310	0220	PUMP ASM.;OIL	000000	000002
1131002330	1-1310	0233	PUMP ASM; OIL	000000	000000
1131002440	1-1310	0244	PUMP ASM; OIL	000000	000000
1131002441	1-1310	0244	PUMP ASM; OIL	000000	000005
1131002450	1-1310	0245	PUMP ASM; OIL	000000	000000
1131002451	1-1310	0245	PUMP ASM; OIL	000000	000003
1131002751	1-1310	0275	PUMP ASM; OIL	000000	000000
1131002770	1-1310	0277	PUMP ASM;OIL,W/PINION	000000	000028
1131003061	1-1310	0306	PUMP ASM;OIL	000000	000000
1131003080			PUMP ASM; OIL	000000	000000
1131003120	1-1310	0312	PUMP ASM;	000000	000000
1131003121	1-1310	0312	PUMP ASM;	000000	000016
1131003130	1-1310	0313	PUMP ASM; OIL	000000	000000
1131003131	1-1310	0313	PUMP ASM; OIL	000000	000000
1131003132	1-1310	0313	PUMP ASM; OIL	000000	000000
1131003133	1-1310	0313	PUMP ASM; OIL	000000	000028
1131100211	1-1311	0021	COVER ASM; OIL PUMP	000000	000001
1131100221	1-1311	0022	COVER ASM; OIL PUMP	000000	000000
1131100230	1-1311	0023	PUMP ASM.; OIL, WO/PINION	000000	000000
1131100300	1-1311	0030	PUMP ASM; OIL	000000	000012
1131100362			OIL PUMP; TRANSFER ASM	000000	000000

1131130180	1-1311	3018	COVER ASSY O/P	000000	000000
1131130340	1-1311	3034	COVER ASM;	000000	000000
1131130370	1-1311	3037	COVER ASM; OIL PUMP	000000	000000
1131130380	1-1311	3038	COVER ASM;OIL PUMP	000000	000000
1131130450	1-1311	3045	COVER ASM; OIL PUMP	000000	000000
1131130470	1-1311	3047	COVER ASM; OIL PUMP	000000	000002
1131130490	1-1311	3049	COVER ASM; OIL PUMP	000000	000000
1131130510	1-1311	3051	COVER ASM; OIL PUMP	000000	000000
1131130540	1-1311	3054	COVER ASM	000000	000000
1131130570	1-1311	3057	COVER; OIL PUMP	000001	000001
1131130580	1-1311	3058	COVER ASM; OIL PUMP	000001	000000
1131130680	1-1311	3068	COVER ASM; OIL PUMP	000003	000000
1131140010	1-1311	4001	PACKING E120	000000	000000
1131140070	1-1311	4007	PACKING; COVER	000000	000000
1131140080	1-1311	4008	PACKING; COVER	000000	000000
1131140110	1-1311	4011	PACKING; COVER	000000	000002
1131160030	1-1311	6003	BUSH E120	000000	000000
1131160040	1-1311	6004	B U S H	000000	000000
1131160050	1-1311	6005	BUSH;DRIVEN GEAR,OIL PUMP	000000	000000
1131160060	1-1311	6006	BUSH E120	000000	000000
1131160070	1-1311	6007	BUSH E120	000000	000000
1131190010	1-1311	9001	SPACER; OIL PUMP	000000	000000
1131190020	1-1311	9002	SPACER	000000	000000
1131190030	1-1311	9003	DOWEL;COVER	000016	000031
1131190040	1-1311	9004	DOWEL; OIL PUMP SET	000000	000057
1131190050	1-1311	9005	DOWEL; OIL PUMP	000001	000000
1131200070	1-1312	0007	GEAR ASM	000000	000000
1131200180	1-1312	0018	GEAR ASM	000000	000000
1131200181	1-1312	0018	GEAR ASM.;OIL P	000000	000000
1131200191	1-1312	0019	GEAR ASM; W/SHAFT	000000	000000
1131200202	1-1312	0020	GEAR ASM.;	000000	000000
1131200251	1-1312	0025	GEAR ASM E120	000000	000000
1131200280	1-1312	0028	GEAR ASM; OIL E120	000000	000000
1131200281			GEAR ASM; OIL E120	000000	000000
1131200290			GEAR ASM;W/SHAFT,BODY	000000	000000
1131200292	1-1312	0029	GEAR ASM;W/SHAFT,BODY	000000	000000
1131200293	1-1312	0029	GEAR ASM; W/SHAFT, BODY	000000	000000
1131200302	1-1312	0030	GEAR ASM E120	000000	000000
1131200303	1-1312	0030	GEAR ASM E120	000001	000000
1131200331	1-1312	0033	GEAR;OIL PUMP,W/SHAFT	000002	000000
1131200341	1-1312	0034	GEAR ASM E120	000004	000000
1131200351	1-1312	0035	GEAR E120	000001	000000
1131200410	1-1312	0041	GEAR ASM; DRIVE, OIL PUMP	000000	000000
1131200420	1-1312	0042	GEAR ASM; DRIVE, OIL	000000	000000
1131200430	1-1312	0043	GEAR ASM; DRIVE, OIL PUMP	000001	000000
1131200480	1-1312	0048	GEAR ASM	000000	000000
1131200541	1-1312	0054	GEAR ASM	000000	000000

1131200580	1-1312	0058	GEAR; DRIVE,OIL	000000	000000
1131200590	1-1312	0059	GEAR; DRIVEN,OI	000000	000000
1131200630	1-1312	0063	GEAR ASM;W/BODY	000000	000002
1131200640			GEAR;DRIVING	000000	000000
1131200650			GEAR; DRIVE,OIL	000000	000000
1131200660			GEAR ASM.;DRIVE, OIL PUMP	000000	000000
1131200700	1-1312	0070	GEAR;DRIVING	000000	000001
1131200760	1-1312	0076	GEAR ASM; W/SHAFT, BODY	000000	000000
1131200800	1-1312	0080	GEAR; DRIVE, OIL PUMP	000000	000001
1131200821	1-1312	0082	GEAR; DRIVE, OIL PUMP	000000	000000
1131200880	1-1312	0088	GEAR;DRIVE,OIL PUMP	000000	000001
1131200890	1-1312	0089	GEAR; DRIVE, OIL PUMP	000003	000000
1131200901	1-1312	0090	GEAR; DRIVE, OIL PUMP	000000	000000
1131200902	1-1312	0090	GEAR; DRIVE, OIL PUMP	000000	000003
1131210060	1-1312	1006	GEAR ASM	000000	000000
1131210070	1-1312	1007	GEAR ASM	000000	000000
1131210241	1-1312	1024	GEAR ASM.; OIL PUMP DRIVE	000000	000000
1131210260	1-1312	1026	GEAR ASM.; OIL PUMP DRIVE	000000	000000
1131210270	1-1312	1027	GEAR ASM.; OIL PUMP DRIVE	000002	000000
1131210280	1-1312	1028	GEAR ASM.; OIL PUMP DRIVE	000000	000000
1131230160	1-1312	3016	COUPLING; PINION	000000	000009
1131250050	1-1312	5005	GEAR; OIL PUMP	000000	000000
1131250161	1-1312	5016	GEAR ASM:OIL PU	000000	000000
1131250181	1-1312	5018	GEAR ASM.;DRIVE	000000	000000
1131250270	1-1312	5027	GEAR; DRIVEN E120	000000	000000
1131250271	1-1312	5027	GEAR; DRIVEN E120	000000	000000
1131250281	1-1312	5028	GEAR; W/BUSH E120	000000	000000
1131250370	1-1312	5037	SHAFT ASM;GEAR	000000	000000
1131270160	1-1312	7016	SHAFT; DRIVEN GEAR	000000	000000
1131280160	1-1312	8016	PINION; OIL PUMP DRIVING	000000	000000
1131280180	1-1312	8018	PINION;OIL PUMP	000000	000001
1131280270	1-1312	8027	GEAR ASM;IDLE	000000	000000
1131290030	1-1312	9003	VALVE ASSY	000000	000000
1131290070	1-1312	9007	SPINDLE; GEAR	000000	000000
1131290090	1-1312	9009	SPACER; HOUSING	000000	000000
1131290101	1-1312	9010	SPINDLE; DRIVEN	000000	000000
1131400240	1-1314	0024	OIL STRAINER AS	000000	000000
1131400282	1-1314	0028	STRAINER; OIL	000000	000000
1131400400	1-1314	0040	STRAINER,OIL	000000	000000
1131400480	1-1314	0048	STRAINER ASM; OIL	000000	000000
1131400560	1-1314	0056	OIL STRAINER	000000	000000
1131400580	1-1314	0058	STRAINER ASM; OIL PUMP	000000	000000
1131400650	1-1314	0065	STRAINER ASM:OI	000000	000000
1131400660	1-1314	0066	STRAINER ASM; OIL PUMP	000000	000000
1131400751	1-1314	0075	STRAINER ASM; OIL	000000	000000
1131400790	1-1314	0079	STRAINER;OIL,OIL PUMP	000000	000010
1131400860	1-1314	0086	STRAINER ASM; OIL PUMP	000000	000000

1131400870	1-1314	0087	PIPE; SUCTION, OIL PUMP	000001	000000
1131400940	1-1314	0094	STRAINER; OIL	000000	000000
1131401060	1-1314	0106	STRAINER ASM;OIL	000000	000000
1131401160	1-1314	0116	STRAINER ASM.	000000	000002
1131410210	1-1314	1021	CASE;OIL PUMP	000002	000004
1131410220	1-1314	1022	CASE; TOP-STRAINER	000000	000000
1131410250	1-1314	1025	STRAINER ASM; OIL PUMP	000000	000000
1131450280	1-1314	5028	BRACKET; STRAINER	000000	000000
1131450301	1-1314	5030	BRACKET 6RB1	000000	000000
1131450320	1-1314	5032	STAY A 6RB1	000000	000000
1131450322	1-1314	5032	STAY A 6RB1	000001	000000
1131450332	1-1314	5033	STAY B 6RB1	000001	000000
1131450430	1-1314	5043	STAY; STRAINER 6SA1T	000000	000000
1131450440	1-1314	5044	STAY; STRAINER 6SA1T	000000	000000
1131450470	1-1314	5047	BRKT; OIL STRAINER	000000	000000
1131490270	1-1314	9027	GASKET; OIL PICKUP TUBE	000001	000000
1131600080	1-1316	0008	VALVE ASM; RELIEF E120	000000	000000
1131600090	1-1316	0009	VALVE ASM; OIL RELIEF	000000	000000
1131600120	1-1316	0012	VALVE ASM; OIL RELIEF	000000	000000
1131600170	1-1316	0017	VALVE;OIL RELIEF,O/COOLER	000000	000000
1131600171	1-1316	0017	VALVE;OIL RELIEF,O/COOLER	000001	000005
1131600180	1-1316	0018	VALVE ASM;OIL P	000000	000001
1131600190	1-1316	0019	VALVE ASM; OIL RELIEF	000000	000000
1131600191	1-1316	0019	VALVE; OIL RELIEF	000000	000143
1131600210	1-1316	0021	VALVE ASM; RELI	000000	000000
1131600280	1-1316	0028	VALVE ASM; OIL RELIEF	000000	000000
1131600302	1-1316	0030	VALVE ;OIL RELIEF	000000	000000
1131600303	1-1316	0030	VALVE ;OIL RELIEF	000000	000001
1131600340	1-1316	0034	VALVE; OIL RELIEF	000000	000002
1131600350	1-1316	0035	VALVE; RELIEF	000000	000006
1131610050	1-1316	1005	VALVE; OIL RELIEF E120	000000	000001
1131610080	1-1316	1008	VALVE; CHECK,OIL	000000	000000
1131610090	1-1316	1009	VALVE ASM; OIL JET	000000	000000
1131610100	1-1316	1010	VALVE ASM;	000000	000000
1131610120	1-1316	1012	VALVE; OIL CHECK	000000	000000
1131610210	1-1316	1021	BALL; OIL RELIEF VLV	000005	000000
1131610240	1-1316	1024	VALVE ASM; RELIEF, OIL PU	000000	000000
1131630020	1-1316	3002	PLUG; ADAPTER	000000	000035
1131630040	1-1316	3004	COVER;BALL	000000	000003
1131650050	1-1316	5005	SEAT; SPRING E120	000006	000000
1131690030	1-1316	9003	STOPPER E120	000000	000001
1132000251	1-1320	0025	OIL FILTER ASSY	000000	000000
1132000253	1-1320	0025	FILTER; ASM.	000000	000000
1132000694	1-1320	0069	FILTER ASM; FUEL W/VALVE	000000	000000
1132000696	1-1320	0069	FILTER ASM; FUEL W/VALVE	000001	000000
1132000896	1-1320	0089	BODY; OIL FILTE	000000	000000
1132001059	1-1320	0105	FUEL FILTER ASM	000000	000000

1132001135	1-1320	0113	SUPERSEDED**FILTER	000000	000000
1132001136	1-1320	0113	SUPERSEDED**FILTER	000000	000000
1132001721	1-1320	0172	FILTER FUEL	000000	000000
1132002445	1-1320	0244	FILTER AND COOL	000000	000000
1132002485	1-1320	0248	FILTER & COOLER; OIL	000000	000000
1132002521	1-1320	0252	FILTER ASM; OIL PARTIAL 6	000000	000000
1132002522	1-1320	0252	FILTER ASM; OIL PARTIAL 6	000000	000000
1132002523	1-1320	0252	FILTER ASM; OIL PARTIAL 6	000000	000000
1132002851	1-1320	0285	FILTER ASM; FUEL	000000	000000
1132002881	1-1320	0288	FILTER ASM; OIL E120	000000	000000
1132002883	1-1320	0288	FILTER ASM; OIL	000000	000000
1132002981	1-1320	0298	FILTER ASM; OIL	000000	000000
1132003050	1-1320	0305	FUEL FILTER; SED	000000	000000
1132003091	1-1320	0309	FILTER ASSY, FUEL	000000	000000
1132003193	1-1320	0319	FILTER ASM; OIL	000000	000000
1132003232	1-1320	0323	FILTER ASM; OIL	000000	000000
1132003253	1-1320	0325	FILTER ASM; OIL 6BD1	000000	000000
1132003320	1-1320	0332	FUEL FILTER	000000	000000
1132003322	1-1320	0332	FUEL FILTER	000000	000001
1132003341	1-1320	0334	FILTER ASM; OIL PARTIAL	000000	000000
1132003381	1-1320	0338	FILTER ASM; OIL	000000	000000
1132003431	1-1320	0343	FILTER ASM; OIL	000000	000000
1132003450	1-1320	0345	FILTER ASM; OIL	000000	000000
1132003473	1-1320	0347	FILTER ASM; OIL	000000	000000
1132003482	1-1320	0348	FILTER ASM; OIL	000000	000000
1132003550	1-1320	0355	FILTER ASM; FUEL	000001	000000
1132003631	1-1320	0363	FILTER ASM; FUEL	000000	000001
1132003711	1-1320	0371	FILTER ASM; OIL	000000	000000
1132003870	1-1320	0387	FILTER ASM; OIL 6BB/D1	000000	000000
1132003880	1-1320	0388	FILTER ASM; OIL	000001	000000
1132003900	1-1320	0390	FILTER ASM; OIL	000000	000001
1132003921	1-1320	0392	FILTER ASM; PREF	000000	000000
1132003923	1-1320	0392	FILTER ASM; PREF	000000	000000
1132004220	1-1320	0422	FILTER ASM; COOLER 6SA1	000000	000000
1132004230	1-1320	0423	FILTER ASM; OIL	000000	000000
1132004310	1-1320	0431	FILTER & COOLER	000000	000000
1132004345	1-1320	0434	FILTER & COOLER; OIL	000000	000000
1132004401	1-1320	0440	FILTER ASM; PART	000000	000000
1132004402	1-1320	0440	FILTER ASM; PART	000000	000001
1132004410	1-1320	0441	FILTER & COOLER	000000	000000
1132004440	1-1320	0444	FILTER ASM; COOLER OIL	000000	000000
1132004501	1-1320	0450	FILTER ASM; OIL 6BD1	000000	000000
1132004740	1-1320	0474	SEDIMENTER ASM	000000	000000
1132004742	1-1320	0474	SEDIMENTER ASM	000000	000000
1132004781	1-1320	0478	FILTER ASM; OIL 6BB1	000000	000001
1132004861	1-1320	0486	FILTER ASM; OIL	000000	000000
1132004862	1-1320	0486	FILTER ASM; OIL	000000	000000

1132004863	1-1320	0486	FILTER ASM;OIL	000000	000000
1132004870	1-1320	0487	ELEMENT; OIL FILTER	000000	000000
1132004871	1-1320	0487	ELEMENT; OIL FILTER	000000	000000
1132004872	1-1320	0487	ELEMENT; OIL FILTER	001246	001998
1132005110	1-1320	0511	FILTER ASM;FUEL	000000	000000
1132005330	1-1320	0533	FILTER ASM;PREF	000000	000000
1132005331	1-1320	0533	FILTER ASM;PREF	000000	000000
1132005332	1-1320	0533	FILTER ASM;PREF	000000	000000
1132005333	1-1320	0533	FILTER ASM;PREF	000000	000000
1132005343	1-1320	0534	FILTER ASM.; OIL PAPTIAL	000000	000000
1132005481	1-1320	0548	FILTER ASM; OIL	000000	000000
1132005482	1-1320	0548	FILTER ASM; OIL	000000	000000
1132005483	1-1320	0548	FILTER ASM; OIL	000000	000002
1132005490	1-1320	0549	FILTER ASM; FUEL	000000	000000
1132005491	1-1320	0549	FILTER ASM; FUEL	000004	000000
1132005492	1-1320	0549	FILTER ASM; FUEL	000000	000000
1132005503	1-1320	0550	FILTER ASM; OIL CARTRIDGE	000000	000000
1132005511	1-1320	0551	FILTER ASM; OIL 6BD1	000000	000000
1132005512	1-1320	0551	FILTER ASM; OIL 6BD1	000000	000001
1132005562	1-1320	0556	FILTER ASM; OIL	000000	000000
1132005641	1-1320	0564	FILTER ASM; FUEL	000001	000000
1132005732	1-1320	0573	FILTER ASM; OIL PARTIAL	000000	000004
1132005930	1-1320	0593	FILTER ASM; FUEL 6BG1	000001	000000
1132005970	1-1320	0597	FILTER ASM; OIL	000000	000000
1132006223	1-1320	0622	FILTER ASM; OIL CARTRIDGE	000000	000000
1132006410	1-1320	0641	FILTER ASM; OIL	000000	000000
1132006412	1-1320	0641	FILTER ASM; OIL	000000	000000
1132006451	1-1320	0645	FILTER; OIL (SPIN-ON)	000000	000000
1132006471	1-1320	0647	FILTER ASM; OIL	000000	000000
1132006502	1-1320	0650	OIL FILTER	000000	000000
1132006536	1-1320	0653	FILTER; OIL,CART.MAIN.70B	000000	000000
1132006542	1-1320	0654	FILTER; OIL,CART.PART.70B	000001	000000
1132006555	1-1320	0655	FILTER ASM; OIL	000000	000000
1132006556	1-1320	0655	FILTER ASM; OIL	000000	000010
1132006590	1-1320	0659	FILTER COOLER ASM,OIL	000000	000000
1132006598	1-1320	0659	FILTER COOLER ASM,OIL	000000	000000
1132006599	1-1320	0659	FILTER COOLER ASM,OIL	000000	000002
1132006605	1-1320	0660	FILTER ASM; COOLER OIL	000000	000000
1132006608	1-1320	0660	FILTER ASM; COOLER OIL	000000	000000
1132006609	1-1320	0660	FILTER ASM; COOLER OIL	000000	000000
1132006660	1-1320	0666	FILTER ASM; FUEL	000000	000000
1132006661	1-1320	0666	FILTER ASM; FUEL	000000	000000
1132006662	1-1320	0666	FILTER ASM; FUEL	000000	000071
1132006670	1-1320	0667	FILTER ASM; FUEL W/VALVE	000001	000000
1132006680	1-1320	0668	FILTER ASM; FUEL	000002	000000
1132006760	1-1320	0676	FILTER ASM;OIL PARTIAL	000000	000001
1132006840	1-1320	0684	FILTER ASM; OIL	000000	000008

1132006881	1-1320	0688	FILTER ASM; OIL CARTRIDGE	000000	000003
1132006920	1-1320	0692	FILTER ASM; FUEL	000000	000000
1132007011	1-1320	0701	FILTER ASM; FUEL	000000	000000
1132007012	1-1320	0701	FILTER ASM; FUEL	000000	000001
1132007013	1-1320	0701	FILTER ASM; FUEL	000000	000000
1132007014	1-1320	0701	FILTER ASM; FUEL	000000	000018
1132007020	1-1320	0702	FILTER ASM; FUEL 6BD1T	000000	000000
1132007021	1-1320	0702	FILTER ASM; FUEL 6BD1T	000000	000000
1132007022	1-1320	0702	FILTER ASM; FUEL 6BD1T	000000	000000
1132007050	1-1320	0705	FILTER ASM.; FUEL	000000	000000
1132007060	1-1320	0706	FILTER ASM; FUEL	000000	000000
1132007061	1-1320	0706	FILTER ASM; FUEL	000000	000000
1132007090	1-1320	0709	FILTER ASM; FUEL	000000	000000
1132007091	1-1320	0709	FILTER ASM; FUEL	000000	000000
1132007240	1-1320	0724	FILTER ASM	000000	000000
1132007241	1-1320	0724	FILTER ASM; OIL	000000	000000
1132007242	1-1320	0724	FILTER ASM; OIL	000000	000000
1132007243	1-1320	0724	FILTER ASM; OIL	000000	000001
1132007250	1-1320	0725	FILTER ASM; OIL	000000	000000
1132007251	1-1320	0725	FILTER ASM; OIL	000000	000000
1132007260	1-1320	0726	FILTER ASM; OIL	000000	000003
1132007270	1-1320	0727	FILTER ASM; OIL	000000	000002
1132007323	1-1320	0732	OIL FILTER & COOLER ASM	000000	000000
1132007324	1-1320	0732	OIL FILTER & COOLER ASM	000000	000000
1132007380	1-1320	0738	FILTER ASM; FUEL	000000	000000
1132007381	1-1320	0738	FILTER ASM; FUEL	000000	000000
1132007390	1-1320	0739	FILTER ASM; SEDIMENTER	000000	000000
1132007440	1-1320	0744	FILTER ASM; OIL	000000	000000
1132007463	1-1320	0746	FILTER ASM.; OIL, CART, M	000000	000000
1132007464	1-1320	0746	FILTER ASM.; OIL, CART, M	000000	000000
1132007470	1-1320	0747	SEDIMENTER ASM.	000000	000000
1132007680	1-1320	0768	FILTER ASM; OIL	000000	000000
1132007682	1-1320	0768	FILTER ASM; OIL	000000	000000
1132007760	1-1320	0776	FILTER & COOLER	000000	000000
1132007761	1-1320	0776	FILTER; COOLER	000000	000000
1132007762	1-1320	0776	FILTER & COOLER ASM; OIL	000000	000000
1132007764	1-1320	0776	FILTER COOLER ASM; OIL	000000	000000
1132008090	1-1320	0809	FILTER ASM; OIL	000000	000000
1132008091	1-1320	0809	FILTER ASM; OIL	000000	000000
1132008110	1-1320	0811	FILTER ASM; OIL	000000	000000
1132008180	1-1320	0818	FILTER ASM; OIL	000000	000000
1132008391	1-1320	0839	FILTER ASM; OIL	000000	000000
1132008392	1-1320	0839	FILTER ASM; OIL	000000	000001
1132008410	1-1320	0841	SEDIMENTER ASM.	000000	000127
1132008420	1-1320	0842	SEDIMENTER ASM.	000000	000000
1132008471	1-1320	0847	FILTER ASM; PARTIAL-OIL	000000	000000
1132008472	1-1320	0847	FILTER ASM; PARTIAL-OIL	000000	000001

1132008491	1-1320	0849	FILTER ASM; OIL	000000	000000
1132008492	1-1320	0849	FILTER ASM; OIL	000000	000003
1132008501	1-1320	0850	FILTER ASM; OIL	000000	000000
1132008627	1-1320	0862	FILTER ASM; OIL	000000	000000
1132008634	1-1320	0863	FILTER ASM; OIL PARTIAL	000000	000000
1132008730	1-1320	0873	FILTER; OIL, CART.FIG.70B	000000	000000
1132008740	1-1320	0874	FILTER ASM; OIL PARTIAL	000000	000000
1132008741	1-1320	0874	FILTER ASM; OIL PARTIAL	000000	000000
1132008742	1-1320	0874	FILTER ASM; OIL PARTIAL	000000	000003
1132008881	1-1320	0888	COOLER ASM; OIL	000000	000000
1132008882	1-1320	0888	COOLER ASM; OIL	000000	000000
1132009050	1-1320	0905	OIL FILTER	000000	000000
1132009051	1-1320	0905	FILTER ASM; OIL, CARTRIDGE	000000	000001
1132009060	1-1320	0906	FILTER ASM.;OIL, PAR	000000	000001
1132009083	1-1320	0908	FILTER ASM: OIL	000000	000001
1132009590	1-1320	0959	FILTER ASM;OIL	000000	000001
1132009600	1-1320	0960	FILTER; FUEL	000000	000006
1132009610	1-1320	0961	FILTER & OIL COOLER ASM	000000	000002
1132009690	1-1320	0969	FILTER ASM. ; OIL, PARTL	000000	000000
1132009691	1-1320	0969	FILTER ASM. ; OIL, PARTL	000000	000001
1132009701	1-1320	0970	FILTER & COOLER ASM; OIL	000001	000000
1132009770	1-1320	0977	FILTER ASM;OIL	000000	000001
1132009894	1-1320	0989	FILTER ASM; OIL PARTIAL	000000	000001
1132009901	1-1320	0990	FILTER ASM; OIL PARTIAL	000000	000001
1132009902	1-1320	0990	FILTER ASM; OIL PARTIAL	000000	000000
1132009940	1-1320	0994	FILTER ASM; FUEL	000000	000001
1132009950	1-1320	0995	FILTER ASM; FUEL	000000	000001
1132009980	1-1320	0998	SEDIMENTER; FUEL	000000	000001
1132010010	1-1320	1001	FILTER ASM;OIL	000000	000000
1132010020	1-1320	1002	FILTER ASM; OIL	000000	000000
1132010110	1-1320	1011	COOLER ASM; OIL	000000	000000
1132010111	1-1320	1011	COOLER ASM; OIL	000000	000028
1132010113	1-1320	1011	COOLER ASM; OIL	000000	000000
1132010191	1-1320	1019	FILTER ASM; OIL	000000	000000
1132010192	1-1320	1019	FILTER ASM; OIL	000000	000025
1132010232	1-1320	1023	FILTER ASM; OIL	000000	000001
1132010480	1-1320	1048	FILTER ASM; OIL	000000	000000
1132010481	1-1320	1048	FILTER ASM; OIL	000000	000000
1132010482	1-1320	1048	FILTER ASM; OIL	000000	000006
1132010620	1-1320	1062	FILTER ASM;OIL	000000	000000
1132010621	1-1320	1062	FILTER ASM;OIL	000000	000000
1132010622	1-1320	1062	FILTER ASM;OIL	000000	000003
1132010632	1-1320	1063	FILTER ASM;OIL	000000	000002
1132010660	1-1320	1066	COOLER ASM; OIL	000000	000000
1132010662	1-1320	1066	COOLER ASM; OIL	000000	000000
1132010663	1-1320	1066	COOLER ASM; OIL	000001	000001
1132016620	1-1320	1662	PIPE; INLET MANIFOLD-CLEA	000000	000000

1132055330	1-1320	5533	FILTER ASM; FUEL	000000	000000
1132100140	1-1321	0014	BODY ASM DA640	000000	000000
1132100150	1-1321	0015	BODY ASSY;W/S	000000	000000
1132100160	1-1321	0016	BODY ASM; W/SPINDLE	000001	000001
1132100180	1-1321	0018	CASE ASM.	000000	000000
1132100200	1-1321	0020	CASE ASM.	000000	000000
1132100470	1-1321	0047	COVER; OIL FILTER	000000	000000
1132100480	1-1321	0048	GEAR DRIVE OIL	000000	000000
1132100511	1-1321	0051	COVER;OIL FILTER	000000	000000
1132101720	1-1321	0172	COVER; OIL PORT	000000	000001
1132110060	1-1321	1006	SUPERSEDED**BODY	000000	000000
1132110241	1-1321	1024	BODY;OIL FILTER	000000	000000
1132110270	1-1321	1027	BODY; FUEL FILTER E120	000000	000000
1132110271	1-1321	1027	BODY; FUEL FILTER E120	000003	000000
1132110280	1-1321	1028	BODY; OIL FILTER	000000	000001
1132110311	1-1321	1031	BODY:FILTER	000000	000000
1132110340	1-1321	1034	BODY; OIL FILTER	000001	000000
1132110360	1-1321	1036	BODY; OIL FILTER	000000	000000
1132110540	1-1321	1054	BODY; FILTER DA120/DH100	000001	000000
1132110590	1-1321	1059	BODY ASM 6RB1	000000	000000
1132110610	1-1321	1061	BODY ASM.	000000	000000
1132110670	1-1321	1067	BODY; CENTER	000000	000000
1132110690	1-1321	1069	BODY ASM	000000	000000
1132110720	1-1321	1072	BODY; OIL FILTER	000002	000001
1132110741	1-1321	1074	BODY; OIL FILTER W/CAUTIO	000000	000000
1132110751	1-1321	1075	BODY; OIL FILTER E120	000000	000000
1132110940	1-1321	1094	BODY; OIL FILLER	000001	000000
1132111120	1-1321	1112	CASE;PRE FUEL	000000	000000
1132111150	1-1321	1115	BODY ASM 6BG1	000000	000000
1132111272	1-1321	1127	HOUSING ASM; OIL COOLER	000000	000000
1132111274	1-1321	1127	HOUSING ASM; OIL COOLER	000000	000000
1132111304	1-1321	1130	BODY ASM; OIL COOLER	000000	000000
1132111305	1-1321	1130	BODY ASM; OIL COOLER	000000	000000
1132111360	1-1321	1136	BODY; FUEL FILTER	000000	000000
1132111410	1-1321	1141	CASE ASM.	000000	000000
1132111461	1-1321	1146	COVER; OIL FILTER	000000	000000
1132111462	1-1321	1146	COVER; OIL FILTER	000000	000000
1132111471	1-1321	1147	COVER; O/FILTER	000000	000000
1132111472	1-1321	1147	COVER; O/FILTER	000000	000000
1132111491	1-1321	1149	BODY;OIL FILTER	000000	000000
1132111540	1-1321	1154	COVER; OIL FILTER	000000	000000
1132111541	1-1321	1154	COVER; OIL FILTER	000001	000000
1132111560	1-1321	1156	COVER; OIL FILTER	000008	000000
1132111620	1-1321	1162	SUPERSEDED**CASE	000000	000000
1132111631	1-1321	1163	COVER; OIL FILTER	000000	000000
1132111632	1-1321	1163	COVER; OIL FILTER	000000	000000
1132111641	1-1321	1164	BODY;OIL FILTER	000000	000000

1132111660	1-1321	1166	BODY ASM.	000000	000000
1132111720	1-1321	1172	BODY ASM; SEDIMENTER	000000	000000
1132112040	1-1321	1204	COVER; OIL FILTER	000000	000000
1132112041	1-1321	1204	COVER; OIL FILTER	000000	000000
1132112061	1-1321	1206	COVER; OIL FILTER	000002	000000
1132112100	1-1321	1210	CASE ASM.	000000	000000
1132112110	1-1321	1211	CASE ASM.	000000	000042
1132112161	1-1321	1216	BODY; OIL FILTER	000000	000000
1132112171	1-1321	1217	BODY; OIL FITLER PARTIAL	000000	000000
1132112260	1-1321	1226	BODY;OIL FILTER	000000	000000
1132112281	1-1321	1228	BODY ASM; OIL FILTER	000000	000000
1132112290	1-1321	1229	BODY ASM.; OIL FILTER (IN	000000	000000
1132112550	1-1321	1255	CASE;SEDIMENTER	000000	000021
1132112680	1-1321	1268	BODY ASM. ; OIL COOLER	000000	000000
1132112681	1-1321	1268	BODY ASM. ; OIL COOLER	000000	000000
1132112700	1-1321	1270	COVER; OIL FILTER	000001	000000
1132112830	1-1321	1283	CASE ASM; OIL FILTER	000000	000000
1132113370	1-1321	1337	HOUSING ASM; COOLER	000000	000002
1132120070			PACKING	000000	000000
1132120300	1-1321	2030	COVER ASM; FILTER	000000	000000
1132120340	1-1321	2034	COVER ASM; OIL FILTER	000000	000001
1132120341	1-1321	2034	COVER ASM; OIL FILTER	000000	000000
1132120350	1-1321	2035	CVR ASM;O/FILTE	000000	000000
1132120401	1-1321	2040	COVER; OIL FILTER	000001	000000
1132120482	1-1321	2048	COVER; UPPER FUEL FILTER	000004	000000
1132120491	1-1321	2049	COVER; UPPER	000000	000000
1132120550	1-1321	2055	COVER; OIL FILTER	000000	000000
1132120570	1-1321	2057	COVER; OIL FILTER	000000	000000
1132120590	1-1321	2059	COVER; OIL FILTER	000000	000000
1132120680	1-1321	2068	COVER ASM; OIL	000001	000000
1132120690	1-1321	2069	COVER; OIL FILTER 4BB1	000000	000002
1132120700	1-1321	2070	COVER; OIL FILTER	000000	000000
1132120750	1-1321	2075	COVER; OIL FILTER 6BD1	000000	000000
1132120830	1-1321	2083	COVER; OIL FILTER	000000	000000
1132120870	1-1321	2087	COVER;FUEL FILT	000000	000000
1132120871	1-1321	2087	COVER;FUEL FILT	000000	000000
1132120872	1-1321	2087	COVER;FUEL FILT	000000	000001
1132120891	1-1321	2089	BODY; OIL FILTE	000000	000000
1132120892	1-1321	2089	BODY;OIL FILTER	000000	000001
1132120910	1-1321	2091	BODY ASM; OIL FILTER	000004	000000
1132120920	1-1321	2092	COVER; UPPER, FUEL FILTER	000000	000000
1132120921	1-1321	2092	COVER; UPPER, FUEL FILTER	000000	000004
1132120930	1-1321	2093	COVER; OIL FILTER 6BD1T(T	000000	000000
1132120931	1-1321	2093	COVER; OIL FILTER 6BD1T(T	000000	000000
1132120951	1-1321	2095	CASE;OIL FILTER	000000	000000
1132120970	1-1321	2097	COVER; FUEL FILTER 6BD1 D	000001	000000
1132120971	1-1321	2097	COVER; FUEL FILTER 6BD1 D	000000	000000

1132121020	1-1321	2102	COVER; OIL FILTER	000001	000000
1132121080	1-1321	2108	COVER; UPR,FUEL FILTER	000000	000000
1132121081	1-1321	2108	COVER; UPR,FUEL FILTER	000010	000016
1132121200	1-1321	2120	COVER;FILTER	000000	000000
1132121261	1-1321	2126	COVER; OIL FILTER	000000	000000
1132121290	1-1321	2129	COVER;OIL FILTER	000000	000000
1132121300	1-1321	2130	COVER; OIL FILTER	000002	000000
1132121310	1-1321	2131	COVER; OIL FILTER	000010	000000
1132121330	1-1321	2133	COVER; OIL FILTER	000000	000000
1132121341	1-1321	2134	BODY;OIL FILTR	000000	000000
1132121342	1-1321	2134	BODY; OIL FILTER	000000	000003
1132121390	1-1321	2139	SUPERSEDED**COVER	000000	000000
1132121391	1-1321	2139	SUPERSEDED**COVER	000000	000000
1132121401	1-1321	2140	BODY ASM; SEDIMENTER	000001	000000
1132121430	1-1321	2143	COVER;UPPER,SEDIMENTER AS	000000	000000
1132121591	1-1321	2159	COVER; FUEL FILTER	000000	000000
1132121592	1-1321	2159	COVER; FUEL FILTER	000000	000004
1132121601	1-1321	2160	BODY ASM; OIL FILTER	000000	000000
1132121602	1-1321	2160	BODY ASM; OIL FILTER	000000	000011
1132121603	1-1321	2160	BODY ASM; OIL FILTER	000000	000000
1132121762	1-1321	2176	COVER; UPR,SEDIMENTER ASM	000000	000000
1132121763	1-1321	2176	COVER; UPR,SEDIMENTER ASM	000000	000010
1132130010	1-1321	3001	PACKING; COVER TO BODY E1	000000	000000
1132130060	1-1321	3006	GSKT;OIL FILTER	000012	000010
1132130061	1-1321	3006	GSKT;OIL FILTER	000000	000000
1132130070	1-1321	3007	PACKING; COVER TO BODY E1	000008	000127
1132130170	1-1321	3017	GASKET; UPR COVER,SEDIMEN	000000	000001
1132130600			GASKET; FUEL FILTER	000000	000000
1132190040			P L U G	000000	000000
1132190090	1-1321	9009	CLAMP ASM;O/F	000000	000001
1132190100	1-1321	9010	CLAMP ASM.	000000	000000
1132190300	1-1321	9030	BOLT; DRAIN	000000	000000
1132190350	1-1321	9035	BRACKET; OIL FILTER	000000	000000
1132190450	1-1321	9045	BOLT*	000000	000000
1132190460	1-1321	9046	BOLT,AIR DRAIN	000000	000000
1132190500	1-1321	9050	RING*	000000	000000
1132190510	1-1321	9051	BAFFLE	000000	000000
1132190530	1-1321	9053	STOPPER	000021	000000
1132190580	1-1321	9058	DRAIN COCK ASM	000000	000000
1132190590	1-1321	9059	PLUG ASM.	000000	000000
1132190600	1-1321	9060	O-RING	000000	000000
1132190740	1-1321	9074	BOLT*	000000	000000
1132190770	1-1321	9077	BAND;PART.O/FIL	000000	000006
1132190920	1-1321	9092	P L U G	000000	000000
1132191000	1-1321	9100	GASKET;OIL PIPE	000000	000000
1132191031	1-1321	9103	BRACKET;OIL FILTER	000000	000000
1132191320	1-1321	9132	PIPE; OIL DRAIN	000000	000000

1132191321	1-1321	9132	PIPE; OIL DRAIN	000000	000000
1132191380	1-1321	9138	PLUG;PRE FILTER	000000	000000
1132191390	1-1321	9139	PLUG;PRE FILTER	000000	000006
1132191391	1-1321	9139	PLUG;PRE FILTER	000000	000000
1132191420	1-1321	9142	VALVE; SEDIMENT	000000	000000
1132191430	1-1321	9143	VALVE; SEDIMENT	000000	000003
1132191460	1-1321	9146	PLUG; DRAIN UNIT	000000	000000
1132191470	1-1321	9147	GSKT;DRAIN UNIT	000000	000011
1132191480	1-1321	9148	SPRING;DRAIN UN	000000	000011
1132191491	1-1321	9149	PLUG;DRAIN	000000	000000
1132191500	1-1321	9150	PLUG; DRAIN 6SA1	000002	000000
1132191510	1-1321	9151	PLUG; DRAIN	000000	000019
1132191520	1-1321	9152	PLUG;BODY	000000	000009
1132191530	1-1321	9153	PLUG;BODY	000000	000007
1132191550	1-1321	9155	GUIDE;WATER	000000	000000
1132191551	1-1321	9155	GUIDE; WATER	000000	000003
1132191560	1-1321	9156	SCREW; GUIDE	000000	000000
1132191570	1-1321	9157	WASHER;GUIDE	000094	000000
1132191580	1-1321	9158	GASKET;PLUG	000000	000000
1132191590	1-1321	9159	GASKET;PLUG	000008	000000
1132191600	1-1321	9160	PIPE; DRAIN 6SA1	000019	000000
1132191610	1-1321	9161	BOLT;	000029	000000
1132191620	1-1321	9162	GASKET;O-RING	000000	000028
1132191630	1-1321	9163	BOLT;	000004	000000
1132191631	1-1321	9163	BOLT;	000000	000030
1132191640	1-1321	9164	GASKET;O-RING	000000	000005
1132191670	1-1321	9167	BOLT; PARTIAL O	000000	000000
1132191680	1-1321	9168	WASHER; PARTIAL	000000	000000
1132191690	1-1321	9169	BRACKET; PARTIA	000000	000000
1132191700	1-1321	9170	NUT; PARTIAL OI	000000	000000
1132191720	1-1321	9172	COVER;OIL PORT	000000	000000
1132191730			SEAT	000000	000013
1132191880	1-1321	9188	PACKING	000000	000000
1132191900	1-1321	9190	O-RING	000000	000000
1132191910	1-1321	9191	SPRING; COIL	000000	000000
1132191920	1-1321	9192	PLUG*	000003	000000
1132191940	1-1321	9194	GASKET;OIL FILTER TO C/BL	000000	000000
1132191950	1-1321	9195	COVER; OIL FILTER	000000	000000
1132192080	1-1321	9208	NUT;RING,FUEL FILTER	000000	000000
1132192081	1-1321	9208	NUT;RING,FUEL FILTER	000000	000019
1132192090	1-1321	9209	SUPERSEDED**PLATE	000000	000000
1132192100	1-1321	9210	WATER LEVEL,6SD1	000001	000000
1132192110	1-1321	9211	DRAIN PLUG	000000	000000
1132192120	1-1321	9212	SUPERSEDED**SCREW	000000	000000
1132192130	1-1321	9213	PLUG; DRAIN	000000	000000
1132192210	1-1321	9221	PLUG; DRAIN, FUEL	000000	000000
1132192250	1-1321	9225	PLUG; DRAIN,SED	000000	000007

1132192260	1-1321	9226	RING; BODY TO CASE	000055	000253
1132192270	1-1321	9227	FLOAT; SEDIMENTER	000000	000009
1132192280	1-1321	9228	SCREEN ASM; SEDIMENTER	000000	000016
1132192290	1-1321	9229	PLATE; BAFFLE	000000	000002
1132192310	1-1321	9231	COVER;OIL PORT	000000	000001
1132192350	1-1321	9235	PLUG; VALVE SPRING	000000	000000
1132192520	1-1321	9252	PLUG; DRAIN UNIT	000000	000003
1132192720	1-1321	9272	PLUG; OIL DRAIN	000000	000000
1132192760	1-1321	9276	PLUG; DRAIN	000000	000000
1132192811	1-1321	9281	BOLT; CENTER, OIL FILTER	000000	000000
1132192950	1-1321	9295	PLUG; DRAIN	000000	000000
1132192951	1-1321	9295	PLUG; DRAIN	000000	000003
1132193110	1-1321	9311	GASKET; CORE TO BODY	000000	000000
1132193130	1-1321	9313	FLOAT; SEDIMENTER	000000	000001
1132193140	1-1321	9314	PLUG; DRAIN,FUEL FILTER	000008	000011
1132193220	1-1321	9322	PLUG	000004	000000
1132193230	1-1321	9323	PLUG	000000	000000
1132193240	1-1321	9324	NUT; CORE TO BODY	000000	000025
1132193410	1-1321	9341	PLUG; SCREW	000000	000000
1132193460	1-1321	9346	PLUG; OIL DRAIN	000001	000000
1132193470	1-1321	9347	PLUG; PARTIAL OIL FILTER	000001	000000
1132193570	1-1321	9357	COVER;OIL FILTER	000000	000000
1132200031	1-1322	0003	ADAPTOR; CENT	000001	000000
1132260050	1-1322	6005	CAP; FUEL FILTER	000000	000003
1132290010	1-1322	9001	STOP.;CONN,FUEL	000000	000004
1132290020	1-1322	9002	CONN ASM;FUEL	000000	000004
1132290030	1-1322	9003	CONNECTOR ASM;	000000	000000
1132290040	1-1322	9004	CONNECTOR (IN)	000000	000000
1132290050	1-1322	9005	CONNECTOR (OUT)	000000	000000
1132290100	1-1322	9010	CONNECTOR	000000	000000
1132290150	1-1322	9015	CONCTR.ASM;SEDI	000000	000000
1132310060	1-1323	1006	BOLT,CENTER	000000	000000
1132310100	1-1323	1010	CENTER BOLT,BOD	000000	000000
1132310110	1-1323	1011	BOLT 8MA1	000001	000000
1132310120	1-1323	1012	BOLT; CENTER, FUEL FILTER	000000	000003
1132310160	1-1323	1016	BOLT; CENTER OIL	000000	000000
1132310220	1-1323	1022	BOLT; CENTER	000000	000000
1132310260	1-1323	1026	TUBE; CENTER	000000	000000
1132310300	1-1323	1030	BOLT; CENTER	000000	000000
1132310330	1-1323	1033	BOLT;PRE-FUEL	000000	000000
1132310350	1-1323	1035	BOLT; CENTER OIL	000002	000000
1132310380	1-1323	1038	BOLT;CENTER,OIL	000000	000000
1132310381	1-1323	1038	BOLT, CENTER	000000	000000
1132310400	1-1323	1040	BOLT; CENTER OIL	000000	000000
1132310410	1-1323	1041	BOLT; CENTER	000000	000000
1132310420	1-1323	1042	BOLT; CENTER OIL	000013	000000
1132310430	1-1323	1043	BOLT; CENTER OIL	000000	000000

1132310440	1-1323	1044	BOLT; CENTER E120	000000	000000
1132310470	1-1323	1047	BOLT;OIL FILTER	000001	000000
1132310530	1-1323	1053	BOLT;PRE-FUEL	000000	000005
1132310750	1-1323	1075	BOLT; CENTER, OIL FILTER	000000	000000
1132340050	1-1323	4005	WASHER; ELEMENT, OIL FILT	000000	000000
1132340070	1-1323	4007	WASHER;ELEMENT,OIL FILTER	000006	000014
1132390030	1-1323	9003	WASHER;SEAL,PRE	000000	000036
1132390340	1-1323	9034	WASHER; THRUST	000000	000000
1132400080	1-1324	0008	ELEMENT KIT; F.	000000	000000
1132400111	1-1324	0011	ELEMENT; FUEL FILTER	000000	000000
1132400191	1-1324	0019	FILTER;FUEL PAPER ELEMENT	000000	000000
1132400200	1-1324	0020	SEDIMENTER(EXZ)	000000	000000
1132400410	1-1324	0041	ELEMENT; FUEL FILTER	000000	000000
1132400422	1-1324	0042	FILTER; PARTIAL	000000	000000
1132400440	1-1324	0044	US654JPIDSEL ** SPIN-ON E	000000	000000
1132400441	1-1324	0044	FILTER; FUEL ** SPIN-ON E	000000	000000
1132400450	1-1324	0045	FILTER: SPIN-ON OIL E120/	000000	000000
1132400461	1-1324	0046	FILTER; OIL, MAIN	000000	000000
1132400474	1-1324	0047	FILTER; OIL (SPIN-ON) W/P	000000	000000
1132400482	1-1324	0048	FILTER; OIL (SPIN-ON) ** 6B	000000	000000
1132400500	1-1324	0050	ELEMENT	000000	000000
1132400550	1-1324	0055	FILTER; PARTIAL	000000	000000
1132400560	1-1324	0056	FILTER PAPER ELEMENT KIT	000000	000007
1132400570	1-1324	0057	ELEMENT; FUEL FILTER	000000	000000
1132400590	1-1324	0059	FILTER; OIL (SPIN-ON) ** 6B	000000	000000
1132400591	1-1324	0059	FILTER; OIL (SPIN-ON) ** 6B	000000	000000
1132400600	1-1324	0060	FILTER; OIL (SPIN-ON) W/P	000000	000000
1132400602	1-1324	0060	FILTER; OIL (SPIN-ON) W/P	000005	000000
1132400611	1-1324	0061	FILTER; PARTIAL	000000	000000
1132400621	1-1324	0062	FILTER; OIL (SPIN-ON) 6BD	000000	000000
1132400622	1-1324	0062	FILTER; OIL (SPIN-ON) 6BD	000000	000128
1132400632	1-1324	0063	FILTER; OIL (SPIN-ON) ** 6B	000000	000000
1132400660	1-1324	0066	FILTER; PARTIAL	000000	000000
1132400661	1-1324	0066	FILTER; PARTIAL	000000	000000
1132400670	1-1324	0067	FILTER; PARTIAL	000000	000000
1132400680	1-1324	0068	ELEMENT; FUEL FILTER	000000	000100
1132400681	1-1324	0068	ELEMENT; FUEL FILTER	000000	000000
1132400691	1-1324	0069	ELEMENT; FUEL FILTER	000000	000000
1132400730	1-1324	0073	ELEMENT; FUEL FILTER	000000	000000
1132400740	1-1324	0074	ELEMENT; FUEL FILTER	000000	000000
1132400750	1-1324	0075	FILTER; OIL (SPIN-ON) 6BD	000000	000000
1132400752	1-1324	0075	FILTER; OIL (SPIN-ON) 6BD	000000	000000
1132400790	1-1324	0079	ELEMENT; FUEL FILTER	000000	000000
1132400791	1-1324	0079	ELEMENT; FUEL FILTER	000000	000000
1132400890	1-1324	0089	ELEMENT ASM;	000000	000000
1132400891	1-1324	0089	ELEMENT ASM;	000000	000000
1132400892	1-1324	0089	ELEMENT; OIL FILTER	000002	000002

1132400900	1-1324	0090	ELEMENT; OIL FILTER	000000	000000
1132400910	1-1324	0091	FILTER; OIL (SPIN-ON) ** 6B	000000	000000
1132400920	1-1324	0092	CARTRIDGE; OIL	000000	000000
1132400990	1-1324	0099	FILTER; PARTIAL	000000	000000
1132401030	1-1324	0103	FILTER; PARTIAL	000000	000000
1132401040	1-1324	0104	FILTER; PARTIAL	000000	000000
1132401052	1-1324	0105	FILTER: SPIN-ON OIL E120/	000000	000000
1132401053	1-1324	0105	CARTRIDGE; MAIN	000000	000000
1132401080	1-1324	0108	ELEMENT; OIL FILTER	000000	000000
1132401091	1-1324	0109	ELEMENT ASM;	000000	000000
1132401220	1-1324	0122	FILTER; OIL (SPIN-ON)	000000	000000
1132401230	1-1324	0123	FILTER; OIL (SPIN-ON) ** 6B	000000	000000
1132401310	1-1324	0131	FILTER; PARTIAL	000000	000000
1132401320			ELEMENT KIT	000000	000000
1132401570			FILTER; OIL, MAIN	000000	000000
1132401571	1-1324	0157	FILTER; OIL, MAIN	000000	000000
1132401581	1-1324	0158	FILTER; OIL, PARTIAL	000000	000000
1132401582	1-1324	0158	FILTER; OIL, PARTIAL	000000	000000
1132401583	1-1324	0158	FILTER; OIL, PARTIAL	000000	000000
1132401601	1-1324	0160	FILTER; OIL (SPIN-ON) W/P	000007	000002
1132401611	1-1324	0161	FILTER; OIL (SPIN-ON) ** 6B	000000	000000
1132401612	1-1324	0161	FILTER; OIL (SPIN-ON) ** 6B	000000	000012
1132401621	1-1324	0162	FILTER; PARTIAL	000000	000000
1132401631	1-1324	0163	FILTER; PARTIAL	000000	000000
1132401632	1-1324	0163	FILTER; PARTIAL	000000	000248
1132401650	1-1324	0165	ELEMENT; OIL FILTER	000000	000000
1132401670	1-1324	0167	CARTRIDGE; MAIN	000000	000000
1132401680	1-1324	0168	FILTER; OIL (SPIN-ON)	000000	000000
1132401681	1-1324	0168	FILTER; OIL (SPIN-ON)	000000	000041
1132401910	1-1324	0191	ELEMENT KIT; F.	000000	000100
1132401940	1-1324	0194	ELEMENT; FUEL FILTER	000189	001032
1132402000	1-1324	0200	ELEMENT; OIL FILTER	000000	000000
1132402090	1-1324	0209	FILTER; OIL, PARTIAL	000000	000374
1132402100	1-1324	0210	CARTRIDGE; MAIN	000000	000062
1132402240	1-1324	0224	ELEMENT; OIL FILTER	000000	000000
1132402290	1-1324	0229	ELEMENT; OIL FILTER	000000	000000
1132402321	1-1324	0232	ELEMENT; OIL FILTER	000000	000000
1132402322	1-1324	0232	ELEMENT; OIL FILTER	000000	024785
1132402330	1-1324	0233	ELEMENT; OIL FILTER	000000	000294
1132402340	1-1324	0234	ELEMENT; OIL FILTER	000000	000002
1132402341	1-1324	0234	ELEMENT; OIL FILTER	000000	000002
1132402410	1-1324	0241	ELEMENT; OIL FILER	000000	000471
1132490140	1-1324	9014	SPR.; SET, SCREEN	000000	000022
1132490150	1-1324	9015	STOP; CONN, FUEL	000000	000000
1132490180	1-1324	9018	SCREEN ASM	000348	000000
1132490190	1-1324	9019	SEAT; SPRING	000000	000000
1132490200	1-1324	9020	SEAT; ELEMENT	000000	000000

1132490270	1-1324	9027	INDICATOR ASM 6BG1	000000	000000
1132510010	1-1325	1001	STRAINER; WATER, W/SPRING	000001	000000
1132600011	1-1326	0001	VALVE; OVERFLOW, INJ PUMP	000000	000000
1132600171	1-1326	0017	VALVE ASM DA220	000000	000000
1132600191	1-1326	0019	VALVE; RELI	000000	000005
1132600242	1-1326	0024	VALVE ASSY, FILT	000000	000000
1132600270	1-1326	0027	VALVE ASM E120	000007	000000
1132600280	1-1326	0028	VALVE ASM; CUT-OFF DA640	000000	000000
1132600290	1-1326	0029	VALVE ASSY, CUT	000000	000000
1132600310	1-1326	0031	VALVE ASM; OVERFLOW E120	000007	000000
1132600320	1-1326	0032	VALVE ASM.	000000	000000
1132600350	1-1326	0035	VALVE ASM; OVER FLOW	000000	000000
1132600360	1-1326	0036	VALVE ASM; OVE	000000	000026
1132600400			SWITCH ASSY	000000	000000
1132600410	1-1326	0041	VALVE ASM; OVERFLOW E120	000000	000017
1132600440	1-1326	0044	VALVE ASM; FILTER	000000	000000
1132600470	1-1326	0047	VLV ASM; OVRFLOW, FUEL FILT	000000	000039
1132600490	1-1326	0049	VALVE; OVER 6RB1	000001	000000
1132600500	1-1326	0050	VALVE; OVERFLOW	000000	000000
1132600501	1-1326	0050	VALVE; OVERFLOW	000000	000008
1132600531	1-1326	0053	VLV ASM; O/FILTE	000000	000000
1132600532	1-1326	0053	VLV ASM; O/FILTE	000000	000011
1132600540	1-1326	0054	VALVE ASM; OVERFLOW	000000	000005
1132600560	1-1326	0056	VALVE ASSY: OIL	000000	000000
1132600600	1-1326	0060	VALVE ASM.;	000000	000000
1132600611	1-1326	0061	VALVE ASM; CHECK	000000	000012
1132600620	1-1326	0062	VALVE; OVERFLOW	000000	000000
1132600621	1-1326	0062	VALVE; OVE	000000	000006
1132600631	1-1326	0063	VALVE ASM; DRAI	000000	000000
1132600661	1-1326	0066	VALVE ASM.	000005	000000
1132600670	1-1326	0067	VALVE ASM; BYPAS	000000	000000
1132600700	1-1326	0070	VALVE ASM; BYPAS	000000	000009
1132600740	1-1326	0074	VALVE; OVERFLOW	000000	000237
1132600760	1-1326	0076	VALVE ASM.; RELIEF (INCL.	000000	000001
1132600770	1-1326	0077	VALVE ASM; OIL FILTER BOD	000000	000006
1132600860	1-1326	0086	VALVE ASM; DRAIN	000000	000001
1132600980	1-1326	0098	VALVE ASM; OVER FLOW	000001	000002
1132601020	1-1326	0102	VALVE ASM.; OVER FLOW	000000	000000
1132601060	1-1326	0106	VALVE; OVERFLOW	000001	000003
1132601110	1-1326	0111	VALVE ASM.	000000	000000
1132601131	1-1326	0113	CHAMBER ASM; SW, FILTER	000000	000000
1132620050	1-1326	2005	VALVE ASM; RELIEF, OIL FI	000000	000000
1132620080	1-1326	2008	VALVE	000001	000000
1132630060	1-1326	3006	SPRING; REL	000001	000008
1132630070	1-1326	3007	SPRING; ELEMENT	000000	000000
1132633311	1-1326	3331	VALVE; OVERFLOW, INJ PUMP	000000	000004
1132650091	1-1326	5009	CAP ASM; W/O-RING	000000	000000

1132650101	1-1326	5010	CAP ASM; W/TERMINAL	000000	000000
1132650130	1-1326	5013	PLUG; CUT-OFF VALVE	000002	000000
1132650140	1-1326	5014	CAP ASM E120	000005	000000
1132650200	1-1326	5020	PLUG;RELIEF VLV	000000	000000
1132650210	1-1326	5021	PLUG;RELIEF VLV	000000	000007
1132650220	1-1326	5022	PLUG ASM;VALVE 6RB1T	000002	000000
1132690020	1-1326	9002	VALVE;RELI	000000	000000
1132690030	1-1326	9003	TERMINAL DA640	000000	000000
1132690050	1-1326	9005	VALVE;RELI	000001	000015
1132690090	1-1326	9009	VALVE; RELIEF	000000	000021
1133110310	1-1331	1031	PIPE ASM; OIL, W/STRAINER	000000	000000
1133110640	1-1331	1064	SUPERSEDED**PIPE	000000	000000
1133110780	1-1331	1078	PIPE ASSY,FILTE	000000	000000
1133110841	1-1331	1084	PIPE ASM; OIL E120	000000	000000
1133110942	1-1331	1094	PIPE; BLK-CMPRSSR	000000	000000
1133111060	1-1331	1106	PIPE ASSY	000000	000000
1133111181	1-1331	1118	PIPE ASM; OIL	000000	000000
1133112050	1-1331	1205	PIPE, OIL, OIL PUMP-CYL.	000000	000000
1133112400	1-1331	1240	PIPE ASM; OIL	000000	000000
1133112430	1-1331	1243	PIPE ASM; OIL STRAINER	000000	000000
1133112500	1-1331	1250	PIPE ASM; OIL	000000	000000
1133112510	1-1331	1251	CONNECTOR	000000	000000
1133112640	1-1331	1264	OIL PIPE ASM	000000	000000
1133112643	1-1331	1264	PIPE ASM	000000	000000
1133112700	1-1331	1270	PIPE OIL DA120/640	000000	000000
1133112950	1-1331	1295	PIPE ASM; OIL E120	000000	000000
1133112980	1-1331	1298	PIPE ASM; OIL	000000	000000
1133112991	1-1331	1299	PIPE ASM; OIL	000000	000000
1133113040	1-1331	1304	PIPE ASM; OIL E120	000000	000000
1133113041	1-1331	1304	PIPE ASM; OIL E120	000000	000004
1133113050	1-1331	1305	OIL PIPE	000000	000000
1133113090	1-1331	1309	PIPE ASM; OIL E120	000000	000000
1133113430	1-1331	1343	PIPE ASM; OIL, W/STRAINER	000000	000000
1133113440	1-1331	1344	PIPE; INJ. FEED	000000	000000
1133114270	1-1331	1427	PIPE ASM; OIL E120	000000	000000
1133114430	1-1331	1443	PIPE; I/PUMP RETURN	000000	000000
1133114700	1-1331	1470	PIPE ASM; OIL E120	000000	000000
1133114730	1-1331	1473	PIPE ASM; OIL, PUMP-BLOCK	000000	000000
1133115313	1-1331	1531	PIPE ASM; OIL E120	000000	000000
1133115322	1-1331	1532	PIPE ASM: OIL	000000	000000
1133115400	1-1331	1540	PIPE; BLK-CMPRSSR	000000	000000
1133115460	1-1331	1546	PIPE ASM;OIL	000000	000000
1133115480	1-1331	1548	PIPE ASM; OIL	000002	000000
1133115510	1-1331	1551	PIPE ASM; OIL E120	000000	000000
1133115551	1-1331	1555	PIPE; OIL W/STRAINER 6RB1	000003	000000
1133115882	1-1331	1588	PIPE ASM.;OIL,PARTIAL FEE	000000	000000
1133115891	1-1331	1589	PIPE;OIL RETURN	000000	000000

1133115892	1-1331	1589	PIPE;OIL,RETURN	000000	000000
1133116011	1-1331	1601	PIPE ASM; OIL 6RB1	000000	000003
1133116162	1-1331	1616	PIPE ASM; OIL	000000	000000
1133116172	1-1331	1617	PIPE ASM; OIL	000000	000000
1133116202	1-1331	1620	PIPE ASM; OIL	000000	000000
1133116310	1-1331	1631	PIPE ASM; TURBO	000005	000000
1133116321	1-1331	1632	PIPE ASM; OIL E120M	000000	000000
1133116410	1-1331	1641	HOSE; RUBBER VACUUM PUMP	000000	000000
1133116490	1-1331	1649	PIPE ASM; OIL E120	000000	000001
1133116620	1-1331	1662	PIPE ASM; OIL	000001	000000
1133116631	1-1331	1663	PIPE ASM; OIL	000000	000000
1133116632	1-1331	1663	PIPE; OIL,	000000	000000
1133116633	1-1331	1663	PIPE ASM;OIL	000000	000000
1133116634	1-1331	1663	PIPE ASM;OIL	000000	000001
1133116640	1-1331	1664	PIPE ASM; OIL	000000	000000
1133116830	1-1331	1683	PIPE ASM; OIL	000000	000000
1133116852	1-1331	1685	OIL PIPE; OIL RETURN TURB	000000	000000
1133116853	1-1331	1685	OIL PIPE; OIL RETURN TURB	000002	000001
1133116880	1-1331	1688	PIPE ASM; OIL, W/STRAINER	000000	000000
1133116902	1-1331	1690	PIPE ASM; OIL	000000	000001
1133116910	1-1331	1691	PIPE ASM; OIL	000003	000000
1133117031	1-1331	1703	PIPE ASM; OIL E120T	000000	000002
1133117041	1-1331	1704	PIPE ASM; OIL E120T	000002	000002
1133117140	1-1331	1714	PIPE ASM; OIL, PUMP-BLOCK	000000	000000
1133117402	1-1331	1740	PIPE ASM; OIL	000000	000003
1133117650	1-1331	1765	PIPE ASM; OIL	000000	000004
1133117950	1-1331	1795	STRAINER ASM; OIL PUMP	000000	000000
1133117960	1-1331	1796	PIPE ASM;OIL FI	000000	000000
1133117961	1-1331	1796	PIPE ASM;OIL FI	000000	000004
1133118070	1-1331	1807	PIPE ASM	000000	000000
1133118210	1-1331	1821	PIPE ASM; OIL	000000	000000
1133118400	1-1331	1840	PIPE ASM; OIL, FEED E120/	000000	000001
1133118440	1-1331	1844	PIPE ASM.;OIL, BLOCK-PUMP	000000	000000
1133118450	1-1331	1845	PIPE ASM.; OIL, VAC. PUMP	000000	000000
1133119001	1-1331	1900	CONNECTOR; HSG-COOLER	000000	000000
1133119280	1-1331	1928	PIPE ASM;OIL	000000	000000
1133119330	1-1331	1933	PIPE ASM; OIL	000000	000000
1133119331	1-1331	1933	PIPE ASM; OIL	000000	000000
1133119332	1-1331	1933	PIPE ASM; OIL	000000	000004
1133119361	1-1331	1936	PIPE; OIL, TURBO	000001	000000
1133119470	1-1331	1947	PIPE ASM; OIL	000000	000000
1133119570	1-1331	1957	PIPE ASM:INJ	000000	000000
1133119630	1-1331	1963	PIPE ASM;OIL,	000000	000000
1133119680	1-1331	1968	PIPE ASM; OIL	000000	000000
1133120090	1-1331	2009	OIL PIPE ASM.	000000	000000
1133120140	1-1331	2014	PIPE OIL FILTER	000000	000002
1133120200	1-1331	2020	PIPE; OIL TURBO	000000	000000

1133120201	1-1331	2020	PIPE; OIL TURBO	000000	000000
1133120290	1-1331	2029	PIPE ASM; OIL CONN 6RB1	000001	000000
1133120301	1-1331	2030	PIPE ASM; OIL, INJ PUMP-B	000000	000000
1133120311	1-1331	2031	PIPE ASM; OIL	000002	000000
1133120321	1-1331	2032	PIPE ASM; OIL 6RB1	000002	000000
1133120410	1-1331	2041	PIPE ASM.; OIL, FILTER-PU	000000	000000
1133120520	1-1331	2052	PIPE ASM; OIL BLOCK-FILTE	000000	000000
1133120540	1-1331	2054	PIPE ASM; OIL COMP-FILTER	000000	000000
1133120690	1-1331	2069	HOSE;VAC,VAC,PU	000000	000000
1133120751	1-1331	2075	PIPE; OIL	000000	000000
1133120771	1-1331	2077	PIPE ASM; OIL	000000	000000
1133120841	1-1331	2084	PIPE ASM; OIL BODY FILTER	000000	000000
1133120850	1-1331	2085	PIPE ASM; OIL BODY FILTER	000000	000000
1133121270	1-1331	2127	PIPE ASM; INJ PUMP RETURN	000000	000000
1133121310	1-1331	2131	PIPE; OIL RETURN	000001	000003
1133121320	1-1331	2132	PIPE; OIL RETURN	000000	000002
1133121330	1-1331	2133	PIPE ASM; OIL 6BG1	000000	000000
1133121991	1-1331	2199	PIPE ASM; OIL, COOLER-BLO	000000	000000
1133122040	1-1331	2204	PIPE ASM; OIL FEED TURBO	000004	000002
1133122200	1-1331	2220	PIPE ASM; OIL BLOCK-COMP	000000	000000
1133122221	1-1331	2222	PIPE ASM; OIL, TURBO, FEE	000000	000000
1133122222	1-1331	2222	PIPE ASM; OIL, TURBO, FEE	000000	000000
1133122230	1-1331	2223	PIPE; OIL,TURB	000000	000000
1133122410	1-1331	2241	PIPE ASM; OIL, TURBO, RET	000000	000000
1133122471	1-1331	2247	PIPE;OIL COOLER	000000	000000
1133122500	1-1331	2250	PIEP ASM; OIL, PIPE-P.T.O	000000	000000
1133122560	1-1331	2256	PIPE; OIL,PARTI	000000	000001
1133122570	1-1331	2257	PIPE; OIL,INJ P	000000	000001
1133122650	1-1331	2265	PIPE; OIL,PARTIAL FILTER	000000	000000
1133122790	1-1331	2279	PIPE ASM; OIL,TURBO FEED	000002	000000
1133122860	1-1331	2286	PIPE ASM; OIL, BLOCK-FILT	000000	000002
1133122991	1-1331	2299	SUPPLY TUBE	000000	000000
1133123220	1-1331	2322	PIPE ASM; OIL PARTIAL FIL	000000	000000
1133123230	1-1331	2323	PIPE ASM; OIL PARTIAL	000000	000000
1133123310	1-1331	2331	PIPE ASM; OIL PUMP	000000	000000
1133123370	1-1331	2337	PIPE ASM; OIL PUMP	000000	000001
1133123380	1-1331	2338	PIPE; OIL, PUMP	000000	000004
1133123430	1-1331	2343	PIPE ASM; OIL, COOLER-BLO	000000	000003
1133123462	1-1331	2346	PIPE ASM; OIL TURBO FEED	000003	000001
1133123490	1-1331	2349	PIPE ASM; OIL,B	000000	000008
1133123580	1-1331	2358	PIPE ASM; OIL, TURBO DRAI	000000	000000
1133123610	1-1331	2361	PIPE ASM.; OIL, BLOCK-HEA	000001	000000
1133123690	1-1331	2369	PIPE ASM; OIL FEED	000000	000000
1133123700	1-1331	2370	PIPE ASM; OIL RETURN	000000	000000
1133123960	1-1331	2396	PIPE ASM; OIL PUMP-BODY	000000	000000
1133124020	1-1331	2402	PIPE ASM; OIL, W/STRAINER	000000	000001
1133124040	1-1331	2404	PIPE ASM; OIL,O	000000	000000

1133124041	1-1331	2404	PIPE ASM; OIL,O	000000	000006
1133124520	1-1331	2452	PIPE; OIL PO/FTR FEED 6SA	000000	000000
1133124530	1-1331	2453	PIPE ASM; OIL, TURBO FEED	000000	000000
1133124540	1-1331	2454	PIPE	000000	000000
1133124550	1-1331	2455	PIPE ASM; OIL, TURBO FEED	000001	000000
1133124571	1-1331	2457	PIPE ASM; OIL, RETURN	000000	000000
1133124620	1-1331	2462	PIPE ASM; OIL TURBO, FEED	000000	000002
1133124690	1-1331	2469	PIPE ASM.;OIL,PARTIAL FEE	000000	000000
1133124700	1-1331	2470	PIPE ASM.;OIL,PARTIAL FEE	000000	000000
1133124720	1-1331	2472	PIPE ASM; OIL	000000	000000
1133124871	1-1331	2487	PIPE; OIL, BODY-PTO	000000	000000
1133125020	1-1331	2502	PIPE; OIL,TURB	000000	000001
1133125251	1-1331	2525	PIPE ASSM:OIL PARTIAL FD	000000	000001
1133125360	1-1331	2536	PIPE ASM; OIL, SUPPLY TO	000000	000000
1133125600	1-1331	2560	PIPE ASM; OIL	000000	000000
1133125840	1-1331	2584	PIPE; OIL,TURB	000000	000000
1133125851	1-1331	2585	PIPE ASM; OIL	000000	000004
1133125861	1-1331	2586	PIPE ASM; OIL	000000	000001
1133126060	1-1331	2606	PIPE ASM; CAM-FEED	000000	000000
1133126100	1-1331	2610	PIPE ASM; OIL	000000	000004
1133126120	1-1331	2612	PIPE ASM; INJECTION	000003	000000
1133126130	1-1331	2613	PIPE ASM; OIL	000001	000006
1133126170	1-1331	2617	PIPE ASM; OIL, BLOCK COMP	000000	000000
1133126390	1-1331	2639	PIPE ASM; OIL, BLOCK-HEAD	000000	000009
1133126451	1-1331	2645	PIPE ASM; OIL	000000	000001
1133126460	1-1331	2646	STRAINER & PIPE ASM; OIL	000000	000001
1133126810	1-1331	2681	PIPE ASM; OIL W/STRAINER	000000	000000
1133126820	1-1331	2682	PIPE ASM; OIL	000000	000000
1133126830	1-1331	2683	PIPE ASM; OIL	000000	000000
1133127071	1-1331	2707	PIPE; OIL TURBO	000000	000000
1133127072	1-1331	2707	PIPE; OIL TURBO	000002	000000
1133127210	1-1331	2721	PIPE ASM; OIL,BODY	000000	000000
1133127211	1-1331	2721	PIPE ASM; OIL,BODY	000000	000000
1133127212	1-1331	2721	PIPE ASM; OIL,BODY	000000	000000
1133127220	1-1331	2722	PIPE ASM; OIL	000000	000000
1133127300	1-1331	2730	PIPE ASM; OIL,TURBO,FEED	000000	000000
1133127310	1-1331	2731	PIPE ASM; TURBO-RETURN	000000	000000
1133127450	1-1331	2745	PIPE ASM; OIL	000000	000000
1133127451	1-1331	2745	PIPE ASM; OIL	000001	000000
1133127470	1-1331	2747	PIPE;OIL INJ	000000	000000
1133127491	1-1331	2749	STRAINER ASM; OIL PUMP	000000	000002
1133127501	1-1331	2750	PIPE	000000	000001
1133127610	1-1331	2761	HOSE;VAC,VAC,PU	000000	000004
1133128080	1-1331	2808	STRAINER & PIPE	000000	000000
1133128082	1-1331	2808	STRNR. & PIPE	000000	000000
1133128181	1-1331	2818	PIPE ASM; OIL, TURBO FEED	000000	000001
1133128190	1-1331	2819	PIPE ASM; OIL, TURBO RETU	000001	000000

1133128192	1-1331	2819	PIPE ASM; OIL, TURBO RETU	000000	000000
1133128210	1-1331	2821	PIPE; OIL	000000	000000
1133128650	1-1331	2865	PIPE ASM.; INJ. PUMP-BLOCK	000000	000000
1133128750	1-1331	2875	PIPE ASM:OIL, BLK-FILTER	000000	000000
1133128780	1-1331	2878	PIPE ASM;OIL	000000	000000
1133128960	1-1331	2896	PIPE ASM; OIL	000000	000000
1133128970	1-1331	2897	PIPE ASM; OIL, PUMP-BLOCK	000000	000000
1133129010	1-1331	2901	PIPE; PARTIAL OIL FEED	000000	000000
1133129040	1-1331	2904	PIPE ASM;OIL	000000	000000
1133129050	1-1331	2905	PIPE ASM; OIL COMP.	000000	000000
1133129610	1-1331	2961	PIPE ASM;OIL	000000	000000
1133129700	1-1331	2970	PIPE ASM; OIL	000000	000000
1133129710	1-1331	2971	PIPE ASM; INJ/PUMP-BLOCK	000000	000007
1133129740	1-1331	2974	PIPE ASM; OIL-INJ. PUMP	000001	000000
1133129871	1-1331	2987	PIPE ASM; OIL DRAIN	000000	000000
1133129880	1-1331	2988	PIPE; OIL, TURBO-FEED	000000	000002
1133129881	1-1331	2988	PIPE; OIL, TURBO-FEED	000000	000000
1133129910	1-1331	2991	PIPE ASM; TURBO-RETURN	000000	000000
1133130530	1-1331	3053	PIPE ASM:OIL PARTIAL FEED	000000	000002
1133130540	1-1331	3054	PIPE ASM:OIL PARTIAL RTRN	000000	000002
1133130740	1-1331	3074	PIPE ASM:OIL, FILT-INJ PMP	000000	000000
1133130760	1-1331	3076	PIPE ASM; OIL, TURBO	000000	000000
1133130770	1-1331	3077	PIPE ASM; TURBO-BLOCK	000000	000000
1133130890	1-1331	3089	PIPE; OIL	000000	000013
1133131080	1-1331	3108	PIPE ASM; OIL	000000	000007
1133131340	1-1331	3134	PIPE; OIL-PARTIAL FEED	000000	000000
1133131650	1-1331	3165	PIPE; OIL, PARTIAL, FEED	000000	000000
1133131660	1-1331	3166	PIPE ASM: OIL SEA WTR PMP	000000	000001
1133131850	1-1331	3185	PIPE; OIL, TURBO	000000	000000
1133131851	1-1331	3185	PIPE; OIL, TURBO	000000	000000
1133131920	1-1331	3192	PIPE ASM; OIL	000000	000000
1133131930	1-1331	3193	PIPE; OIL, OIL PAN	000000	000000
1133132040	1-1331	3204	PIPE ASM.; OIL, TURBO, RE	000000	000000
1133132050	1-1331	3205	PIPE ASM:OIL TURBO FEED	000001	000000
1133132730	1-1331	3273	PIPE ASM.; OIL W/STRAINER	000001	000000
1133132740	1-1331	3274	PIPE ASM; OIL, PUMP-BLK	000000	000001
1133132960	1-1331	3296	PIPE ASM; OIL	000000	000000
1133132990	1-1331	3299	PIPE;OIL, RETURN	000000	000012
1133133190	1-1331	3319	PIPE; OIL RETURN TURBOCHA	000000	000000
1133133191	1-1331	3319	PIPE; OIL RETURN TURBOCHA	000000	000004
1133133350	1-1331	3335	PIPE	000000	000001
1133133360	1-1331	3336	PIPE	000000	000001
1133133370	1-1331	3337	PIPE; I/PUMP RETURN	000001	000001
1133133380	1-1331	3338	PIPE; OIL-TURBO-FEED	000000	000000
1133133390	1-1331	3339	PIPE; OIL-TURBO-FEED	000000	000006
1133133400	1-1331	3340	PIPE; OIL, PARTIAL FEEL	000000	000001
1133133510	1-1331	3351	PIPE; OIL INJ.	000000	000001

1133133520	1-1331	3352	PIPE; OIL PARTIAL FILTER	000000	000004
1133133640	1-1331	3364	PIPE;OIL RTN TURBOCHARGER	000000	000001
1133133890	1-1331	3389	PIPE; OIL TURBO	000000	000001
1133133910	1-1331	3391	PIPE; OIL, PARTIAL, RTN	000000	000000
1133133920	1-1331	3392	PIPE ASM; OIL, TURBO, FEED	000007	000000
1133133930	1-1331	3393	PIPE; OIL, PARTIAL, FEED	000001	000000
1133133940	1-1331	3394	PIPE ASM; OIL, TURBO, FEED	000000	000000
1133134490	1-1331	3449	PIPE;OIL, INJ PUMP TO C/BL	000000	000010
1133134500	1-1331	3450	PIPE;OIL, INJ PUMP TO C/BL	000000	000000
1133134550	1-1331	3455	PIPE ASM; TURBO-RETURN	000000	000000
1133134620	1-1331	3462	PIPE ASM:OIL PARTIAL RTRN	000000	000001
1133134960	1-1331	3496	OIL PIPE ASM;	000000	000001
1133135120	1-1331	3512	PIPE ASM.; OIL, TURBO, RE	000000	000001
1133135181	1-1331	3518	PIPE ASM;OIL, TURBO FEED	000001	000001
1133135650	1-1331	3565	PIPE ASM;OIL, FILTER-COOLE	000000	000000
1133135660	1-1331	3566	PIPE ASM;OIL, FILTER-PUMP	000000	000001
1133135910	1-1331	3591	PIPE ASM; OIL, TURBO	000000	000000
1133135911	1-1331	3591	PIPE ASM; OIL, TURBO	000000	000003
1133135920	1-1331	3592	PIPE ASM; OIL, TURBO	000000	000005
1133135990	1-1331	3599	PIPE ASM;OIL, TURBO FEED	000000	000000
1133136020	1-1331	3602	PIPE ASM: OIL, OIL GAL	000000	000002
1133136030	1-1331	3603	PIPE ASM;OIL, FILTER-COOLE	000000	000000
1133136041	1-1331	3604	PIPE ASM;OIL, FILTER-COOLE	000000	000000
1133136110	1-1331	3611	PIPE ASM;OIL, TURBO RETURN	000000	000001
1133136120	1-1331	3612	PIPE ASM;OIL, TURBO RETURN	000000	000000
1133136121	1-1331	3612	PIPE ASM;OIL, TURBO RETURN	000000	000004
1133136160	1-1331	3616	PIPE; OIL, RETURN	000000	000000
1133136170	1-1331	3617	PIPE ASM.;OIL, TURBO.RET.	000000	000000
1133136420	1-1331	3642	PIPE ASM; OIL BODY	000000	000006
1133136480	1-1331	3648	PIPE ASM;OIL, FILTER-COOLE	000000	000000
1133136490	1-1331	3649	PIPE ASM.;OIL, BLOCK-PTO	000000	000000
1133136610	1-1331	3661	PIPE ASM; OIL, FILTER	000000	000000
1133136611	1-1331	3661	PIPE ASM; OIL, FILTER	000000	000002
1133136650	1-1331	3665	PIPE ASM; OIL INJ PUMP FE	000010	000006
1133136700	1-1331	3670	PIPE ASM.;TURBO RETURN	000001	000000
1133136701	1-1331	3670	PIPE ASM.;TURBO RETURN	000000	000000
1133136970	1-1331	3697	PIPE ASM; OIL TURBO, FD	000000	000023
1133136980	1-1331	3698	PIPE ASM; TURBO RTN	000000	000000
1133136981	1-1331	3698	PIPE ASM; TURBO RTN	000001	000001
1133137060	1-1331	3706	PIPE ASM; OIL FILTER	000000	000000
1133137310	1-1331	3731	PIPE ASM; OIL FILTER	000002	000000
1133137340	1-1331	3734	PIPE;OIL, TURBOCHARGER FEE	000001	000001
1133138040	1-1331	3804	STRAINER & PIPE ASM; OIL	000000	000001
1133138280	1-1331	3828	PIPE ASM;OIL	000000	000003
1133138340	1-1331	3834	PIPE;OIL, FILTER TO BRG CA	000000	000001
1133138372	1-1331	3837	STRAINER & PIPE ASM; OIL	000000	000001
1133138720	1-1331	3872	PIPE;OIL TURBOCHARGER FEE	000001	000030

1133138730	1-1331	3873	PIPE OIL FILTER TO COOLER	000000	000000
1133138740	1-1331	3874	PIPE;OIL RETURN TURBOCHAR	000000	000000
1133138741	1-1331	3874	PIPE;OIL RETURN TURBOCHAR	000000	000000
1133138742	1-1331	3874	PIPE;OIL RETURN TURBOCHAR	000000	000000
1133138750	1-1331	3875	STRAINER & PIPE ASM; OIL	000000	000001
1133138852	1-1331	3885	STRAINER & PIPE ASM; OIL	000000	000000
1133138853	1-1331	3885	STRAINER & PIPE ASM; OIL	000001	000001
1133138880	1-1331	3888	PIPE ASM;OIL COOLER TO BO	000000	000000
1133138890	1-1331	3889	PIPE; OIL TURBOCHARGER FE	000000	000001
1133138970	1-1331	3897	PIPE;OIL INJ PUMP C/BL	000000	000000
1133138980	1-1331	3898	PIPE;OIL TURBOCHARGER FEE	000000	000002
1133138990	1-1331	3899	PIPE ASM;OILGOV TO C/BL	000000	000005
1133139040	1-1331	3904	PIPE; OIL RETURN TURBOCHA	000000	000000
1133139041	1-1331	3904	PIPE; OIL RETURN TURBOCHA	000000	000000
1133139042	1-1331	3904	PIPE; OIL RETURN TURBOCHA	000000	000006
1133139060	1-1331	3906	PIPE;OIL TURBOCHARGER FEE	000000	000000
1133139101	1-1331	3910	PIPE; OIL,OIL FILTER TO I	000000	000007
1133139130	1-1331	3913	PIPE;OIL RETURN TURBOCHAR	000000	000001
1133139320	1-1331	3932	PIPE;OIL RURBOCHARGER, FE	000000	000001
1133139410	1-1331	3941	PIPE ASM; OIL,BODY	000000	000001
1133139440	1-1331	3944	PIPE; OIL RETURN TURBOCHA	000000	000000
1133139450	1-1331	3945	PIPE; OIL TURBOCHARGER FE	000000	000000
1133139471	1-1331	3947	STRAINER & PIPE ASM;OIL	000000	000003
1133139492	1-1331	3949	PIPE;OIL RETURN,TURBOCHAR	000006	000000
1133139561	1-1331	3956	STRAINER & PIPE ASM; OIL	000000	000000
1133139680	1-1331	3968	PIPE; OIL PUMP TO C/BL	000000	000002
1133140050	1-1331	4005	PIPE;OIL,FILTER TO PUMP	000000	000001
1133140100	1-1331	4010	PIPE;OIL,TURBOCHARGER FEE	000003	000000
1133140160	1-1331	4016	PIPE;OIL,OIL FILTER TO IN	000000	000000
1133140170	1-1331	4017	OIL PIPE	000000	000001
1133140180	1-1331	4018	OIL PIPE	000000	000001
1133140190	1-1331	4019	PIPE; OIL, GOV RETURN	000000	000005
1133140210	1-1331	4021	PIPE ASM; OIL, INJ PUMP FE	000001	000004
1133140220	1-1331	4022	SIPE; OIL, INJ PUMP TO C/B	000001	000003
1133140240	1-1331	4024	PIPE; OIL RETURN,TURBOCHA	000000	000003
1133140490	1-1331	4049	STRAINER & PIPE ASM; OIL	000000	000000
1133140491	1-1331	4049	STRAINER & PIPE ASM; OIL	000000	000001
1133140500	1-1331	4050	PIPE; OIL,TURBOCHARGER FE	000000	000000
1133140591	1-1331	4059	PIPE; OIL,C/BL TO PTO	000000	000000
1133140600	1-1331	4060	PIPE;OIL,TURBOCHRG FEED	000000	000000
1133140610	1-1331	4061	PIPE;OIL RTN,TUROBCHRG	000000	000004
1133140620	1-1331	4062	ADAPTER; OIL, BOV RETURN	000000	000000
1133140641	1-1331	4064	PIPE; OIL,TURBOCHARGER FE	000000	000000
1133140642	1-1331	4064	PIPE; OIL,TURBOCHARGER FE	000000	000000
1133140660	1-1331	4066	PIPE; OIL,TURBOCHARGER FE	000000	000001
1133140670	1-1331	4067	PIPE; OIL RETURN,TURBOCHA	000000	000001
1133190100	1-1331	9010	BRACKET*DISCONTINUED*	000000	000000

1133190200	1-1331	9020	BRACKET;CLIP,OIL PIPE,TUR	000002	000004
1133190480	1-1331	9048	STAY; OIL PIPE, TURBO	000000	000000
1133190611	1-1331	9061	BRACKET;OIL PIPE	000001	000000
1133190620	1-1331	9062	BRACKET	000000	000002
1133190650	1-1331	9065	BRACKET; INJ PIPE CLIP	000003	000000
1133410190	1-1334	1019	CONNECTOR; HSG-COOLER	000000	000000
1133410772	1-1334	1077	CONNECTOR 6RB1	000005	000000
1133410940	1-1334	1094	FLANGE; OIL PIPE E120M	000000	000000
1133412040	1-1334	1204	CONNECTOR,BODY.P/FILTER	000005	000000
1133412240	1-1334	1224	BRACKET; OIL PIPE, FILTER	000000	000000
1133412280	1-1334	1228	COVER; OIL PORT	000000	000007
1133412290	1-1334	1229	COVER; OIL PORT	000000	000001
1133412310	1-1334	1231	COVER; OIL PORT	000000	000004
1133420471	1-1334	2047	JET ASM; OIL	000000	000000
1133420651	1-1334	2065	SUPERSEDED**JET ASM.	000000	000000
1133420742	1-1334	2074	JET ASM; OIL, PISTON COOL	000000	000000
1133420743	1-1334	2074	JET ASM; OIL, PISTON COOL	000000	000000
1133420760	1-1334	2076	JET ASM; OIL,PISTON COOL	000000	000000
1133420790	1-1334	2079	JET ASM; OIL E120	000000	000000
1133420820	1-1334	2082	JET ASM; OIL,PISTON COOL	000000	000001
1133420830	1-1334	2083	JET ASM; OIL E120	000000	000001
1133420840	1-1334	2084	JET ASM; OIL E120	000002	000005
1133420850	1-1334	2085	JET ASM; OIL E120	000003	000001
1133420890	1-1334	2089	JET;OIL,PISTON	000000	000000
1133420920	1-1334	2092	JET; OIL,PISTON COOL	000000	000000
1133421070	1-1334	2107	JET ASM; OIL	000000	000000
1133421071	1-1334	2107	JET ASM; OIL	000000	000008
1133421081	1-1334	2108	SET ASM; OIL, PISTON COOL	000000	000001
1133421100	1-1334	2110	JET;OIL,PISTON	000000	000000
1133421101	1-1334	2110	JET;OIL,PISTON	000000	000204
1133421111	1-1334	2111	JET ASM; OIL	000000	000003
1133421112	1-1334	2111	JET ASM; OIL	000000	000004
1133421121	1-1334	2112	JET ASM; OIL	000000	000000
1133421122	1-1334	2112	JET ASM; OIL	000000	000005
1133421141	1-1334	2114	JET ASM; OIL PISTON COOL	000000	000000
1133421161	1-1334	2116	JET; OIL,PISTON	000000	000006
1133421220	1-1334	2122	JET; OIL, PISTO	000000	000004
1133421221	1-1334	2122	JET; OIL	000000	000000
1133421270	1-1334	2127	JET ASM; OIL	000000	000000
1133421271	1-1334	2127	JET ASM; OIL	000000	000000
1133421320	1-1334	2132	JET; OIL,PISTON COOLING	000000	000044
1133421321	1-1334	2132	JET; OIL,PISTON COOLING	000000	000081
1133421390	1-1334	2139	JET;OIL PISTON COOLING	000000	000000
1133421391	1-1334	2139	JET;OIL PISTON COOLING	000000	000018
1133450040	1-1334	5004	S T A Y	000000	000000
1133450550	1-1334	5055	STAY; OIL STRAINER	000000	000000
1133450560	1-1334	5056	STAY; OIL STRAINER	000000	000000

1133450570	1-1334	5057	STAY;A,OIL STRAINER	000000	000000
1133450581	1-1334	5058	STAY;B,OIL STRAINER	000000	000000
1133450690	1-1334	5069	STAY; OIL STRAIN E120	000000	000000
1133450800	1-1334	5080	STAY; PIPE FIX E120	000000	000000
1133451020	1-1334	5102	STAY; STRAINER E120	000000	000000
1133451030	1-1334	5103	STAY; PIPE, OIL E120	000000	000000
1133451040	1-1334	5104	BRACKET; STRAINER	000000	000000
1133451051	1-1334	5105	STAY; PIPE FIX E120	000013	000000
1133451060	1-1334	5106	STAY;A,OIL STRAINER	000000	000000
1133451072	1-1334	5107	STAY; OIL STRAIN E120T	000000	000000
1133451110	1-1334	5111	BRACKET;OIL PIPE	000000	000000
1133451120	1-1334	5112	CLIP; OIL PIPE	000000	000000
1133451130	1-1334	5113	CLIP; OIL PIPE	000000	000000
1133451140	1-1334	5114	CLIP; OIL PIPE	000000	000000
1133451150	1-1334	5115	CLIP; OIL PIPE	000000	000000
1133451161	1-1334	5116	BRACKET 6RB1	000000	000002
1133451180	1-1334	5118	BRACKET; OIL PIPE E120	000000	000000
1133451250	1-1334	5125	STAY;OIL PIPE	000000	000000
1133451390	1-1334	5139	STAY B 6RB1T	000000	000000
1133451420	1-1334	5142	STAY;OIL STRAINER	000000	000000
1133451460	1-1334	5146	STAY;A,OIL STRAINER	000011	000000
1133451470	1-1334	5147	STAY;B,OIL STRAINER	000001	000001
1133451480	1-1334	5148	STRAINER STAY	000003	000000
1133451660	1-1334	5166	BRKT;OIL PIPE	000000	000005
1133451801	1-1334	5180	BRACKET; OIL STRAINER	000001	000000
1133451820	1-1334	5182	STAY ; OIL STRAINER	000002	000000
1133451880	1-1334	5188	BRACKET; OIL PIPE	000000	000001
1133452160	1-1334	5216	BRACKET; CLIP,OIL PIPE,TU	000000	000003
1133452260	1-1334	5226	BRACKET; OIL SEPARATOR	000000	000000
1133452261	1-1334	5226	BRACKET; OIL SEPARATOR	000000	000008
1133452270	1-1334	5227	BRACKET; CLIP,OIL PIPE,TU	000005	000000
1133452290	1-1334	5229	BRACKET; OIL SEPARATOR	000006	000000
1133452340	1-1334	5234	BRACKET; CLIP,ENG HARNESS	000005	000000
1133452360	1-1334	5236	BRACKET; SEPARATOR	000003	000000
1133490140	1-1334	9014	JOINT BOLT	000000	000003
1133490312	1-1334	9031	BOLT; JOINT,OIL JET,	000000	000000
1133490330	1-1334	9033	BOLT; JOINT, OIL JET	000000	000000
1134260070			WASHER	000000	000000
1134520280	1-1345	2028	PACKING;SHIFTER COVER	000000	000000
1136100111	1-1361	0011	PUMP ASM; WATER	000000	000000
1136100200	1-1361	0020	PUMP ASM; WATER	000000	000000
1136100810	1-1361	0081	PUMP ASM; WATER	000000	000000
1136101050	1-1361	0105	SUPERSEDED**W/PUMP	000000	000000
1136101851			WATER PUMP	000000	000000
1136101860			PUMP ASM; WATER	000000	000000
1136101861	1-1361	0186	PUMP ASM; WATER	000000	000000
1136102190	1-1361	0219	PUMP ASM; WATER	000000	000000

1136102210	1-1361	0221	SUPERSEDED**W/PUMP	000000	000000
1136102220	1-1361	0222	SUPERSEDED**W/PUMP	000000	000000
1136102230	1-1361	0223	PUMP ASM; WATER	000000	000000
1136102310	1-1361	0231	PUMP ASM; WATER	000000	000000
1136102750	1-1361	0275	PUMP ASM; WATER	000000	000000
1136102790	1-1361	0279	PUMP ASM;WATER	000000	000000
1136102960	1-1361	0296	PUMP ASM; WATER	000000	000000
1136103230	1-1361	0323	PUMP ASM;WATER	000000	000000
1136103493	1-1361	0349	PUMP ASM; WATER	000000	000000
1136103571	1-1361	0357	PUMP ASM; WATER	000000	000000
1136104160	1-1361	0416	PUMP ASM; WATER	000001	000001
1136104252	1-1361	0425	PUMP ASM; WATER W/PACKING	000000	000000
1136104260	1-1361	0426	PUMP ASM; WATER	000000	000000
1136104281	1-1361	0428	PUMP ASM;WATER W/O GSKT.	000000	000000
1136104282	1-1361	0428	PUMP ASM;WATER W/O GSKT.	000000	000000
1136104291	1-1361	0429	PUMP ASM; WATER	000000	000000
1136104301	1-1361	0430	SUPERSEDED**W/PUMP	000000	000000
1136104310	1-1361	0431	PUMP;WATER	000000	000000
1136104311	1-1361	0431	PUMP WATER	000000	000000
1136104451	1-1361	0445	PUMP ASM; WATER	000000	000000
1136104462	1-1361	0446	PUMP ASM; WATER	000000	000000
1136104471	1-1361	0447	PUMP ASM; WATER	000000	000000
1136104481	1-1361	0448	PUMP ASM; WATER	000000	000000
1136104482	1-1361	0448	PUMP ASM; WATER	000000	000000
1136104611	1-1361	0461	PUMP ASM; WATER	000000	000000
1136104891	1-1361	0489	PUMP ASM; WATER	000000	000000
1136105421	1-1361	0542	PUMP ASM; WATER	000000	000000
1136105901	1-1361	0590	PUMP ASM;W/PUMP	000000	000000
1136105930	1-1361	0593	PUMP ASM; WATER	000000	000000
1136105931	1-1361	0593	PUMP ASM; WATER	000000	000000
1136105981	1-1361	0598	PUMP ASM; WATER	000000	000000
1136106011	1-1361	0601	PUMP ASM; WATER	000000	000000
1136106041	1-1361	0604	PUMP ASM; WATER	000000	000000
1136106071	1-1361	0607	PUMP ASM; WATER	000000	000000
1136106093	1-1361	0609	PUMP ASM; WATER	000000	000000
1136106121	1-1361	0612	PUMP ASM; WATER	000000	000000
1136106250	1-1361	0625	PUMP ASM; WATER	000000	000000
1136106252	1-1361	0625	PUMP ASM;WATER W/O GSKT.	000000	000000
1136106253	1-1361	0625	PUMP ASM;WATER W/O GSKT.	000000	000000
1136106670	1-1361	0667	PUMP ASM; WATER	000000	000000
1136106830	1-1361	0683	PUMP ASM; WATER	000000	000000
1136106930	1-1361	0693	PUMP ASM; WATER	000000	000000
1136107250	1-1361	0725	PUMP ASM; WATER	000000	000001
1136107460	1-1361	0746	PUMP ASM; WATER	000000	000000
1136107461	1-1361	0746	PUMP ASM; WATER	000000	000000
1136107462	1-1361	0746	PUMP ASM; WATER	000000	000000
1136107470	1-1361	0747	PUMP ASM; WATER	000000	000000

1136107530	1-1361	0753	PUMP ASM; WATER	000000	000000
1136107600	1-1361	0760	PUMP ASM; WATER	000000	000000
1136107610	1-1361	0761	PUMP ASM; WATER	000000	000000
1136107620	1-1361	0762	PUMP ASM; WATER	000000	000000
1136107621	1-1361	0762	PUMP ASM; WATER	000000	000000
1136107630	1-1361	0763	PUMP ASM; WATER	000000	000000
1136107640	1-1361	0764	PUMP ASM; WATER	000000	000000
1136107651	1-1361	0765	PUMP ASM; WATER	000000	000000
1136107660	1-1361	0766	PUMP ASM; WATER	000000	000000
1136107670	1-1361	0767	PUMP ASM; WATER	000000	000000
1136107680	1-1361	0768	PUMP ASM; WATER	000000	000001
1136107690	1-1361	0769	PUMP ASM; WATER	000000	000001
1136107710	1-1361	0771	PUMP ASM; WATER	000000	000000
1136107780	1-1361	0778	PUMP ASM; WATER	000000	000000
1136107790	1-1361	0779	PUMP ASM; WATER	000000	000000
1136107800	1-1361	0780	PUMP ASM.; WATER	000000	000000
1136107981	1-1361	0798	PUMP ASM; WATER W/PACKING	000000	000000
1136107982	1-1361	0798	PUMP ASM; WATER W/PACKING	000000	000000
1136107991	1-1361	0799	PUMP ASM.; WATER, FIG.72	000000	000000
1136108000	1-1361	0800	PUMP ASM; WATER	000000	000000
1136108001	1-1361	0800	PUMP ASM; WATER	000000	000000
1136108040	1-1361	0804	PUMP ASM; WATER	000000	000002
1136108070	1-1361	0807	WATER PUMP; DA220	000001	000000
1136108080	1-1361	0808	PUMP ASM; WATER	000000	000000
1136108081	1-1361	0808	PUMP ASM; WATER	000000	000000
1136108082	1-1361	0808	PUMP ASM; WATER	000000	000001
1136108090	1-1361	0809	PUMP ASM; WATER	000000	000000
1136108091	1-1361	0809	PUMP ASM; WATER	000000	000000
1136108120	1-1361	0812	PUMP ASM; WATER W/PACKING	000000	000000
1136108171	1-1361	0817	PUMP ASM; WATER W/PACKING	000000	000000
1136108180	1-1361	0818	PUMP ASM; WATER W/GSKT.	000000	000000
1136108190	1-1361	0819	WATER PUMP ASM	000000	000000
1136108191	1-1361	0819	WATER PUMP ASM	000007	000004
1136108200	1-1361	0820	PUMP ASM; WATER	000000	000021
1136108230	1-1361	0823	PUMP ASM; WATER	000000	000002
1136108250	1-1361	0825	PUMP ASM; WATER	000000	000001
1136108360			KIT; WATER PUMP W/GSKT.	000000	000000
1136108361			KIT; WATER PUMP W/GSKT.	000000	000025
1136108370			PUMP ASM; WATER	000000	000000
1136108371	1-1361	0837	PUMP ASM; WATER	000000	000000
1136108390	1-1361	0839	PUMP ASM; WATER	000000	000000
1136108391	1-1361	0839	IUMP ASM; WATER	000000	000002
1136108400	1-1361	0840	PUMP ASM; WATER	000000	000000
1136108401	1-1361	0840	PUMP ASM; WATER	000000	000000
1136108402	1-1361	0840	PUMP ASM; WATER	000000	000000
1136108430	1-1361	0843	PUMP ASM; WATER	000000	000000
1136108431	1-1361	0843	PUMP ASM; WATER	000000	000001

1136108460	1-1361	0846	PUMP ASM; WATER	000000	000000
1136108461	1-1361	0846	PUMP ASM; WATER	000000	000000
1136108462	1-1361	0846	PUMP ASM; WATER	000000	000000
1136108490	1-1361	0849	PUMP ASM;WATER W/GSKT.	000000	000000
1136108570	1-1361	0857	PUMP ASM; WATER	000000	000001
1136108600	1-1361	0860	PUMP ASM; WATER	000000	000000
1136108721	1-1361	0872	PUMP ASM; WATER	000000	000000
1136108732			WATER PUMP ASM	000000	000001
1136108740			PUMP ASM; WATER	000000	000000
1136108741	1-1361	0874	PUMP ASM; WATER	000000	000002
1136108760	1-1361	0876	PUMP ASM; WATER	000000	000000
1136108761	1-1361	0876	PUMP ASM; WATER	000000	000000
1136108770	1-1361	0877	PUMP ASM; WATER W/PACKING	000000	000000
1136108771	1-1361	0877	PUMP ASM; WATER W/PACKING	000000	000000
1136108780	1-1361	0878	PUMP ASM; WATER	000000	000000
1136108790	1-1361	0879	PUMP ASM; W/PUMP	000000	000000
1136108791	1-1361	0879	PUMP ASM; W/PUMP	000000	000001
1136108820	1-1361	0882	PUMP ASM; WATER	000000	000000
1136108821	1-1361	0882	PUMP ASM; WATER	000000	000002
1136108920	1-1361	0892	PUMP ASM; WATER	000000	000001
1136108940	1-1361	0894	PUMP ASM; WATER	000000	000000
1136108942	1-1361	0894	PUMP ASM; WATER	000000	000000
1136109060	1-1361	0906	PUMP ASM; WATER	000000	000000
1136109100	1-1361	0910	PUMP ASM; WATER	000000	000002
1136109140	1-1361	0914	PUMP ASM; WATER	000000	000000
1136109370	1-1361	0937	PUMP ASM;W/O GSKT.	000000	000000
1136109430	1-1361	0943	PUMP ASM; WATER	000000	000001
1136109440	1-1361	0944	PUMP ASM; WATER	000000	000000
1136109441	1-1361	0944	PUMP ASM; WATER	000000	000001
1136109450	1-1361	0945	PUMP ASM; WATER	000000	000000
1136109461	1-1361	0946	PUMP ASM: WATER	000000	000000
1136109471	1-1361	0947	PUMP ASM.; WATER	000000	000001
1136109480	1-1361	0948	WATER PUMP ASM	000000	000000
1136109490	1-1361	0949	PUMP ASM; WATER	000000	000000
1136109540	1-1361	0954	PUMP ASM; WATER	000000	000000
1136109550	1-1361	0955	PUMP ASM;WATER W/GSKT.	000000	000000
1136109551	1-1361	0955	PUMP ASM;WATER W/GSKT.	000000	000000
1136109552	1-1361	0955	PUMP ASM;WATER W/GSKT.	000025	000013
1136109580	1-1361	0958	PUMP ASM; WATER	000000	000000
1136109581			PUMP ASM; WATER	000000	000001
1136109590			PUMP ASM; WATER	000000	000000
1136109601	1-1361	0960	PUMP ASM; WATER	000000	000000
1136109620	1-1361	0962	PUMP ASM; WATER	000000	000000
1136109630	1-1361	0963	PUMP ASM; WATER	000000	000000
1136109632	1-1361	0963	PUMP ASM; WATER	000000	000000
1136109633	1-1361	0963	PUMP ASM; WATER	000000	000001
1136109670	1-1361	0967	PUMP ASM; WATER	000000	000006

1136109730	1-1361	0973	PUMP ASM; WATER KIT	000000	000000
1136109780	1-1361	0978	PUMP ASM; WATER	000000	000000
1136109850	1-1361	0985	PUMP ASM; WATER	000000	000000
1136109851	1-1361	0985	PUMP ASM; WATER	000000	000000
1136109852	1-1361	0985	PUMP ASM; WATER	000000	000003
1136109950	1-1361	0995	PUMP ASM;WATER	000000	000000
1136110230	1-1361	1023	SEAL UNIT; WATER PUMP	000000	000000
1136120010	1-1361	2001	COVER; WATER PUMP DA120	000000	000000
1136120080	1-1361	2008	COVER,WATER PUM	000000	000000
1136120200	1-1361	2020	COVER; WATER PUMP E120	000000	000002
1136120230	1-1361	2023	COVER; WATER PUMP	000000	000001
1136120270	1-1361	2027	COVER:WATER PUM	000000	000000
1136120271	1-1361	2027	COVER, WATER PUMP	000000	000000
1136120320	1-1361	2032	COVER; WATER PUMP	000002	000000
1136120500	1-1361	2050	COVER; WATER PUMP	000000	000000
1136130070	1-1361	3007	PACKING; COVER	000000	000000
1136130080	1-1361	3008	PACKING,W/PUMP	000000	000000
1136130110	1-1361	3011	PACKING; WATER PUMP	000009	000001
1136130140	1-1361	3014	PACKING; COVER E120	000002	000002
1136130160	1-1361	3016	PACKING DH100	000000	000000
1136130200	1-1361	3020	GASKET; COVER	000001	000000
1136130220	1-1361	3022	PACKING	000000	000000
1136130260	1-1361	3026	PACKING; COVER E120	000013	000000
1136130390	1-1361	3039	GASKET; COVER T	000000	000000
1136130420	1-1361	3042	PACKING; COVER TO BODY	000000	000004
1136130500	1-1361	3050	PACKING; WATER	000000	000044
1136130520	1-1361	3052	GASKET; WATER PUMP	000000	000000
1136140080	1-1361	4008	PACKING; WATER PUMP	000000	000000
1136140100	1-1361	4010	GASKET; W/PUMP	000000	000000
1136140111	1-1361	4011	GASKET; WATER PUMP	000003	000000
1136140120	1-1361	4012	GASKET; PUMP TO	000000	000000
1136140121	1-1361	4012	GASKET;PUMP TO	000000	000000
1136140130	1-1361	4013	GASKET; PUMP TO C/BL	000000	000000
1136140131	1-1361	4013	GASKET; PUMP TO C/BL	000000	000000
1136140140	1-1361	4014	GASKET;WATER PUMP-BLOCK	000000	000000
1136140170	1-1361	4017	GASKET;PUMP TO	000000	000000
1136140180	1-1361	4018	GASKET; PUMP TO	000000	000000
1136140181	1-1361	4018	GASKET; PUMP TO	000000	000008
1136140210	1-1361	4021	COVER; WATER PUMP	000000	000000
1136140211	1-1361	4021	COVER; WATER PUMP	000000	000036
1136140230	1-1361	4023	GSKT; WTR DUCT TO OIL COO	000000	000000
1136140231	1-1361	4023	GSKT; WTR DUCT TO OIL COO	000000	000044
1136140240	1-1361	4024	GASKET; WATER DUCT	000000	000000
1136140241	1-1361	4024	GASKET; WATER DUCT	000000	000009
1136140270	1-1361	4027	GASKET; PUMP TO C	000000	000004
1136190090	1-1361	9009	ZINC;PROTECTION	000000	000000
1136190200	1-1361	9020	WASHER; WATER PUMP E120	000003	000000

1136190280	1-1361	9028	BAR ASM; ZINC	000000	000011
1136190380	1-1361	9038	PLUG	000000	000001
1136190390	1-1361	9039	JOINT; HEATER HOSE	000000	000000
1136190391	1-1361	9039	JOINT; HEATER HOSE	000000	000003
1136190400	1-1361	9040	NIPPLE	000000	000000
1136190420	1-1361	9042	NIPPLE	000000	000004
1136190440	1-1361	9044	JOINT; PIPE	000000	000001
1136190460	1-1361	9046	NOZZLE; GREASE W/P	000004	000000
1136190490	1-1361	9049	BAR ASM; ZINC	000001	000013
1136190500	1-1361	9050	BAR; ZINC	000000	000000
1136200020	1-1362	0002	UNIT ASM.;SEAL,WATER PUMP	000000	000000
1136200030	1-1362	0003	SEAL UNIT WATER	000001	000000
1136200060	1-1362	0006	UNIT; SEAL W/P	000000	000000
1136200120	1-1362	0012	UNIT; SEAL	000000	000000
1136200150	1-1362	0015	SEAL UNIT; WATE	000000	000009
1136200160	1-1362	0016	UNIT; SEAL W/P	000000	000000
1136200170	1-1362	0017	UNIT; SEAL	000001	000000
1136200190	1-1362	0019	UNIT; SEAL,WATER	000000	000000
1136200200	1-1362	0020	UNIT; SEAL, WATER	000000	000000
1136200210	1-1362	0021	UNIT; SEAL	000000	000002
1136200230	1-1362	0023	SEAL UNIT ;WATER PUMP	000000	000045
1136200240	1-1362	0024	SEAL UNIT;WATER PUMP	000000	000000
1136210010	1-1362	1001	IMPELLER; WATER PUMP	000001	000000
1136210030	1-1362	1003	IMPELLER; WATER E120	000000	000000
1136210050	1-1362	1005	IMPELLER	000000	000000
1136210051	1-1362	1005	IMPELLER; WATER	000002	000000
1136210100	1-1362	1010	IMPELLER.	000000	000000
1136210150	1-1362	1015	IMPELLER; WATER	000002	000000
1136210250	1-1362	1025	IMPELLER	000000	000000
1136210260	1-1362	1026	IMPELLER; WATER 6RB1	000000	000002
1136210390	1-1362	1039	IMPELLER; WATER	000000	000002
1136210410	1-1362	1041	IMPELLER; WATER	000000	000000
1136210420	1-1362	1042	IMPELLER; WATER PUMP	000000	000000
1136210430	1-1362	1043	IMPELLER; WATER	000000	000000
1136210450	1-1362	1045	IMPELLER	000000	000000
1136210470	1-1362	1047	IMPELLER; WATER PUMP	000000	000000
1136210490	1-1362	1049	IMPELLER; WATER PUMP	000000	000000
1136210560	1-1362	1056	IMPELLER; WTR PMP (D=118)	000000	000000
1136210590	1-1362	1059	IMPELLER;WATER PUMP	000001	000000
1136210610	1-1362	1061	IMPELLER; WATER PUMP	000000	000010
1136250220	1-1362	5022	PLUG; CHECK VALVE	000000	000000
1136310090	1-1363	1009	SUPERSEDED**SPINDLE	000000	000000
1136310210	1-1363	1021	SHAFT	000000	000000
1136310220	1-1363	1022	SPINDLE	000000	000000
1136310240	1-1363	1024	SPINDLE; WATER PUMP E120	000000	000000
1136310260	1-1363	1026	SHAFT; WATER PUMP	000002	000000
1136310340	1-1363	1034	SPINDLE; WATER PUMP	000000	000000

1136310360	1-1363	1036	SPINDLE; WATER PUMP	000000	000000
1136310390	1-1363	1039	SPINDLE; WATER PUMP E120	000000	000000
1136310450	1-1363	1045	SPINDLE; WATER PUMP	000000	000000
1136310510	1-1363	1051	SPINDLE; WATER PUMP	000000	000000
1136310540	1-1363	1054	SHAFT; WATER PU	000000	000000
1136310560	1-1363	1056	SPINDLE; WATER PUMP 6SA1	000000	000000
1136310580	1-1363	1058	SHAFT; WATER PUMP	000000	000001
1136310581	1-1363	1058	SHAFT; WATER PUMP	000000	000000
1136310600	1-1363	1060	SHAFT; WATER PUMP	000000	000000
1136310601	1-1363	1060	SHAFT; WATER PUMP	000000	000000
1136310630	1-1363	1063	SPINDLE; WATER PUMP	000006	000000
1136310640	1-1363	1064	SPINDLE; WATER PUMP	000002	000000
1136310690	1-1363	1069	SPINDLE; WATER PUMP	000000	000000
1136310700	1-1363	1070	SPINDLE; WATER PUMP	000000	000005
1136310720	1-1363	1072	SPINDLE; WATER PUMP	000000	000000
1136310740	1-1363	1074	SHAFT; WATER PUMP	000000	000003
1136310781	1-1363	1078	SHAFT; WATER PUMP	000000	000000
1136310810	1-1363	1081	SHAFT; WATER PUMP	000000	000000
1136310830	1-1363	1083	SHAFT; WATER PUMP	000000	000000
1136310840	1-1363	1084	SHAFT; WATER PUMP	000000	000000
1136310900	1-1363	1090	SHAFT; WATER PUMP	000000	000000
1136310920	1-1363	1092	SHAFT; BRG CASE	000000	000000
1136340020	1-1363	4002	SPACER	000000	000000
1136340030	1-1363	4003	SPACER; BALL BRG E120	000000	000000
1136340090	1-1363	4009	SPACER	000001	000000
1136340190	1-1363	4019	SPACER 6RB1	000001	000000
1136340200	1-1363	4020	SPACER; BEARING 6BG1	000000	000032
1136340250	1-1363	4025	SPACER; BRG,WATER PUMP	000000	000006
1136340270	1-1363	4027	SPACER; BRG,WAT	000000	000000
1136340290	1-1363	4029	SPACER; WATER PUMP	000000	000000
1136340320	1-1363	4032	SPACER;BEARING,WATER PUMP	000000	000002
1136340350	1-1363	4035	SPACER; WATER PUMP	000000	000000
1136340400	1-1363	4040	SPACER; BRG,WATER PUMP	000001	000004
1136340410	1-1363	4041	SPACER; BRG.	000000	000000
1136340420	1-1363	4042	SPACER;BRG.WATER PUMP	000000	000000
1136340440	1-1363	4044	SPACER; BRG WATER PUMP	000000	000011
1136390021	1-1363	9002	COVER; DUST E120	000000	000000
1136390031	1-1363	9003	COVER; DUST	000000	000000
1136390060	1-1363	9006	COVER; DUST	000000	000001
1136390070	1-1363	9007	COVER; DUST	000000	000001
1136390200	1-1363	9020	SLINGER; WATER PUMP E120	000000	000002
1136390210	1-1363	9021	THROWER; DUST,W	000000	000000
1136390280	1-1363	9028	THROWER;DUST WATER	000000	000000
1136410142	1-1364	1014	PULLEY; WATER PUMP	000000	000000
1136410350	1-1364	1035	PULLEY; W/P	000000	000000
1136410390	1-1364	1039	PULLEY	000000	000000
1136410430	1-1364	1043	PULLEY; WATER PUMP	000000	000000

1136410440	1-1364	1044	PULLEY; WATER PUMP	000000	000000
1136410620	1-1364	1062	PULLEY; W/P	000000	000000
1136410740	1-1364	1074	PULLEY; WATER PUMP	000000	000001
1136410831	1-1364	1083	PULLEY; WATER PUMP	000000	000001
1136410890	1-1364	1089	PULLEY	000000	000000
1136410920	1-1364	1092	PULLEY; WATER PUMP	000000	000000
1136410921	1-1364	1092	PULLEY; WATER PUMP	000000	000000
1136411010	1-1364	1101	PULLEY; WATER PUMP	000000	000002
1136411140	1-1364	1114	PULLEY; W/PUMP D=200	000000	000002
1136411191	1-1364	1119	PULLEY; WATER PUMP	000000	000000
1136411200	1-1364	1120	PULLEY; WATER PUMP	000001	000000
1136411210	1-1364	1121	PULLEY; WATER PUMP	000000	000000
1136411230	1-1364	1123	PULLEY; WATER PUMP	000000	000000
1136411281	1-1364	1128	PULLEY; WATER PUMP	000000	000000
1136411290	1-1364	1129	PULLEY; WATER P	000000	000000
1136411380	1-1364	1138	PULLEY; WATER PUMP	000000	000000
1136411421	1-1364	1142	PULLEY; WATER PUMP	000000	000005
1136411500	1-1364	1150	PULLEY; WATER PUMP	000000	000002
1136411530	1-1364	1153	PULLEY; WATER PUMP	000000	000005
1136411550	1-1364	1155	PULLEY; WATER	000000	000001
1136411570	1-1364	1157	PULLEY; WATER	000000	000000
1136411630	1-1364	1163	PULLEY; WATER PUMP	000001	000000
1136411650	1-1364	1165	PULLEY; WATER PUMP	000000	000009
1136411670	1-1364	1167	PULLEY; W/PUMP	000000	000000
1136411680	1-1364	1168	GEAR;WATER PUMP, DRIVE	000000	000000
1136411751	1-1364	1175	PULLEY;WATER PUMP	000000	000004
1136411760	1-1364	1176	PULLEY;WATER PUMP	000000	000000
1136411770	1-1364	1177	PULLEY	000000	000001
1136411830	1-1364	1183	PULLEY; WATER PUMP	000000	000000
1136411850	1-1364	1185	PULLEY; WATER PUMP	000000	000001
1136411870	1-1364	1187	PULLEY;WATER PUMP	000000	000001
1136411910	1-1364	1191	PULLEY; WATER PUMP	000000	000007
1136411930	1-1364	1193	PULLEY; WATER PUMP	000000	000000
1136411931	1-1364	1193	PULLEY; WATER PUMP	000000	000002
1136411951	1-1364	1195	PULLEY; FAN CENTER	000000	000003
1136411960	1-1364	1196	PULLEY;WATER PUMP	000000	000003
1136412020	1-1364	1202	PULLEY; FAN CENTER	000000	000001
1136412050	1-1364	1205	PULLEY; WATER PUMP	000000	000063
1136412060	1-1364	1206	PULLEY; FAN CENTER	000000	000001
1136412070	1-1364	1207	PULLEY;WATER PUMP	000000	000002
1136412071	1-1364	1207	PULLEY;WATER PUMP	000000	000000
1136412100	1-1364	1210	PULLEY ; WATER PUMP	000000	000000
1136412211	1-1364	1221	PULLEY; WATER PUMP	000000	000002
1136417700			PULLEY	000000	000000
1136420030	1-1364	2003	CNTR;FAN & PULL	000000	000010
1136420053	1-1364	2005	CENTER; FAN & PULLEY	000002	000001
1136420060	1-1364	2006	WATER PUMP HUB	000001	000000

1136420080	1-1364	2008	SPACER; FAN PULLEY	000000	000001
1136420100	1-1364	2010	SPACER; FAN PULLEY	000001	000006
1136420120	1-1364	2012	SPACER; FAN PULLEY	000000	000002
1136420130	1-1364	2013	CENTER ASM; W/P, PULLEY	000000	000000
1136420140	1-1364	2014	SPACER; PULLEY	000000	000000
1136420150	1-1364	2015	CENTER ASM; W/P PULLEY	000007	000000
1136420212	1-1364	2021	CENTER; BRG. CASE	000000	000000
1136420240	1-1364	2024	SPACER; FAN PULLEY	000001	000000
1136420250	1-1364	2025	SPACER; FAN-PULLEY	000000	000002
1136420260	1-1364	2026	SPACER; FAN	000001	000000
1136420270	1-1364	2027	SPACER; FAN T=44.6	000000	000000
1136420280	1-1364	2028	SPACER; FAN	000001	000000
1136420290	1-1364	2029	SPACER;	000002	000000
1136420300	1-1364	2030	SPACER; FAN	000000	000000
1136420310	1-1364	2031	SPACER; FAN	000000	000000
1136420320	1-1364	2032	CENTER ASM; W/P PULLEY	000000	000001
1136420330	1-1364	2033	SPACER; FAN	000000	000000
1136420340	1-1364	2034	SPACER; FAN-PULLEY	000000	000000
1136420350	1-1364	2035	SPACER; FAN-PULLEY	000000	000000
1136420360	1-1364	2036	SPACER; FAN-PULLEY	000001	000000
1136420370	1-1364	2037	CENTER; BRG. CASE	000000	000000
1136420380	1-1364	2038	CENTER; FAN & PULLEY	000000	000000
1136420390	1-1364	2039	SPACER; FAN-PULLEY	000000	000000
1136420410	1-1364	2041	ADAPTER ASM; COOLING FAN	000004	000000
1136420441	1-1364	2044	SPACER; FAN	000000	000006
1136420451	1-1364	2045	SPACER; FAN	000001	000000
1136420460	1-1364	2046	CENTER; WATER PUMP	000000	000000
1136420470	1-1364	2047	SPACER; FAN	000000	000044
1136420480	1-1364	2048	SPACER; FAN	000000	000000
1136420490	1-1364	2049	SPACER; FAN	000000	000001
1136420500	1-1364	2050	SPACER; FAN	000001	000000
1136420510	1-1364	2051	SPACER; FAN	000001	000002
1136420520	1-1364	2052	SPACER; FAN	000000	000000
1136420531	1-1364	2053	SPACER; FAN	000000	000001
1136420540	1-1364	2054	SPACER; FAN	000000	000006
1136420570	1-1364	2057	SPACER; FAN	000000	000005
1136420580	1-1364	2058	SPACER; FAN	000001	000000
1136420610	1-1364	2061	SPACER; FAN	000000	000000
1136420630	1-1364	2063	SPACER; FAN	000000	000025
1136420650	1-1364	2065	SPACER; FAN	000001	000000
1136420660	1-1364	2066	SPACER; FAN	000000	000000
1136420680	1-1364	2068	SPACER; FAN	000000	000000
1136420700	1-1364	2070	SPACER; FAN	000000	000000
1136420730	1-1364	2073	SPACER; FAN	000000	000008
1136420740	1-1364	2074	SPACER; FAN	000000	000000
1136420750	1-1364	2075	SPACER; FAN	000000	000002
1136420770	1-1364	2077	ADAPTER; FAN TO PULLEY	000000	000002

1136420780	1-1364	2078	SPACER; FAN	000001	000002
1136420791	1-1364	2079	SPACER; FAN	000000	000000
1136420792	1-1364	2079	SPACER; FAN	000000	000000
1136420793	1-1364	2079	SPACER; FAN	000000	000000
1136420800	1-1364	2080	SPACER; FAN	000000	000029
1136420810	1-1364	2081	CENTER; WATER PUMP	000000	000000
1136420840	1-1364	2084	SPACER;FAN	000000	000000
1136500160			PUMP ASM; WTR W/ PCK	000000	000000
1136500161	1-1365	0016	PUMP ASM; WTR W/ PCK	000000	000014
1136500170	1-1365	0017	PUMP KIT; WATER, W/GASKET	000000	000000
1136500171	1-1365	0017	PUMP KIT; WATER, W/GASKET	000000	000127
1136500180	1-1365	0018	PUMP KIT; WATER, W/GASKET	000000	000000
1136500181	1-1365	0018	PUMP KIT; WATER, W/GASKET	000000	000091
1136500190	1-1365	0019	PUMP KIT; WATER, W/GASKET	000000	000000
1136500200	1-1365	0020	PUMP KIT; WATER, W/GASKET	000000	000011
1136500260	1-1365	0026	PUMP ASM. ; WATER	000000	000000
1136500261			PUMP ASM. ; WATER	000000	000099
1136500285			W/PUMP	000000	000001
1136500590	1-1365	0059	PUMP ASM; WATER, W/GSKT	000000	000000
1136500591	1-1365	0059	PUMP ASM; WATER, W/GSKT	000000	000000
1136500592	1-1365	0059	PUMP ASM; WATER, W/GSKT	000000	000032
1136500610	1-1365	0061	PUMP ASM; WATER, W/GSKT	000000	000000
1136500611	1-1365	0061	PUMP ASM; WATER, W/GSKT	000000	000000
1136500680	1-1365	0068	PUMP ASM;WATER,W/GASKET	000000	000000
1136500681	1-1365	0068	PUMP ASM;WATER,W/GASKET	000000	000000
1136500682	1-1365	0068	PUMP ASM;WATER,W/GASKET	000000	000001
1136500793	1-1365	0079	WATER PUMP ASM	000000	000000
1136500830	1-1365	0083	PUMP ASM;WATER W/GASKET	000000	000000
1136500900	1-1365	0090	PUMP ASM;WATER	000000	000000
1136500901	1-1365	0090	PUMP ASM;WATER	000000	000002
1136500921	1-1365	0092	PUMP ASM;WATER,W/GSKT	000000	000000
1136500922	1-1365	0092	PUMP ASM;WATER,W/GSKT	000000	000001
1136500930	1-1365	0093	PUMP ASM; WTER W/GASKET	000000	000000
1136500931	1-1365	0093	PUMP ASM; WTER W/GASKET	000000	000001
1136500940	1-1365	0094	PUMP ASM;WATER	000000	000000
1136500941	1-1365	0094	PUMP ASM;WATER	000000	000077
1136500950	1-1365	0095	PUMP ASM; WATER	000000	000000
1136500951	1-1365	0095	PUMP ASM; WATER	000000	000002
1136500961	1-1365	0096	PUMP ASM; WATER W/GASKET	000000	000001
1136500990	1-1365	0099	PUMP ASM; WATER	000000	000000
1136500991	1-1365	0099	PUMP ASM; WATER	000000	000015
1136501000	1-1365	0100	PUMP ASM; WATER W/GASKET	000000	000000
1136501020	1-1365	0102	PUMP ASM: WATER	000000	000001
1136501090	1-1365	0109	PUMP ASM;WATER W/GASKET	000000	000001
1136501120	1-1365	0112	PUMP ASM; WATER,W/ GASKET	000000	000000
1136501121	1-1365	0112	PUMP ASM; WATER,W/ GASKET	000000	000000
1136501122	1-1365	0112	PUMP ASM; WATER,W/ GASKET	000000	000000

1136501123	1-1365	0112	PUMP ASM; WATER,W/ GASKET	000000	000000
1136501124	1-1365	0112	PUMP ASM; WATER,W/ GASKET	000000	000000
1136501125	1-1365	0112	PUMP ASM; WATER,W/ GASKET	000000	000000
1136501126	1-1365	0112	PUMP ASM; WATER,W/ GASKET	000000	000042
113650133T			PUMP ASM;WATER W/GASKET	000000	000000
1136501331	1-1365	0133	PUMP ASM;WATER W/GASKET	000000	000000
1136501332	1-1365	0133	PUMP ASM;WATER W/GASKET	000000	000000
1136501333	1-1365	0133	PUMP ASM;WATER W/GASKET	000000	000107
1136501604	1-1365	0160	PUMP ASM; WATER,W/GASKET	000000	000000
1136501605	1-1365	0160	PUMP ASM; WATER,W/GASKET	000000	000000
1136501606	1-1365	0160	PUMP ASM; WATER,W/GASKET	000000	000000
1136501640	1-1365	0164	WATER PUMP	000000	000003
1136600290	1-1366	0029	FAN ASM; COOLING	000000	000002
1136600410	1-1366	0041	FAN ASM; COOLING D=710	000000	000001
1136600420	1-1366	0042	FAN ASM; COOLING E120	000000	000003
1136600441	1-1366	0044	FAN ASM; COOLING D=610	000000	000000
1136600510	1-1366	0051	FAN ASM; COOLING	000000	000000
1136600540	1-1366	0054	FAN ASM; COOLING	000000	000000
1136600610	1-1366	0061	FAN ASM; COOLING	000000	000000
1136600710	1-1366	0071	FAN ASM; COOLING E120	000000	000000
1136600760	1-1366	0076	FAN ASM; COOLING E120	000000	000000
1136600870	1-1366	0087	FAN ASM; COOLING D500	000000	000000
1136601000	1-1366	0100	FAN ASM; COOLING E120	000000	000003
1136601020	1-1366	0102	FAN ASM; COOLING E120	000000	000000
1136601070	1-1366	0107	FAN ASM.	000000	000001
1136601180	1-1366	0118	FAN ASM; COOLING D=480	000000	000000
1136601181	1-1366	0118	FAN ASM; COOLING D=480	000000	000000
1136601182	1-1366	0118	FAN ASM; COOLING D=480	000000	000009
1136601200	1-1366	0120	FAN**	000000	000000
1136601230	1-1366	0123	FAN ASM; COOLING D=430	000000	000000
1136601250	1-1366	0125	FAN ASM; COOLING	000000	000000
1136601290	1-1366	0129	FAN ASM; COOLING	000000	000000
1136601292	1-1366	0129	FAN ASM; COOLING	000000	000001
1136601390	1-1366	0139	FAN ASM; COOLING D=520	000000	000000
1136601391	1-1366	0139	FAN ASM; COOLING D=520	000000	000000
1136601400	1-1366	0140	FAN ASM; COOLING 6BD1	000000	000011
1136601410	1-1366	0141	FAN ASM; COOLING	000000	000000
1136601433	1-1366	0143	FAN ASM; COOLING	000000	000015
1136601550	1-1366	0155	FAN ASM; COOLING	000000	000000
1136601560	1-1366	0156	FAN; COOLING	000000	000000
1136601561	1-1366	0156	FAN; COOLING	000000	000007
1136601682	1-1366	0168	FAN ASM; COOLING	000000	000001
1136601780	1-1366	0178	FAN ASM; COOLING D=510	000000	000000
1136601800	1-1366	0180	FAN ASM; COOLING D=700	000000	000000
1136601830	1-1366	0183	FAN ASM; COOLING 6BF1	000000	000001
1136601950	1-1366	0195	PULLEY ASM; IDLE	000000	000000
1136602041	1-1366	0204	FAN ASM; COOLING 6SA1	000000	000000

1136602042	1-1366	0204	FAN ASM; COOLING 6SA1	000000	000024
1136602093	1-1366	0209	FAN ASM; COOLING	000000	000000
1136602101	1-1366	0210	FAN ASM; COOLING	000000	000000
1136602102	1-1366	0210	FAN ASM; COOLING	000000	000006
1136602120	1-1366	0212	PULLEY ASM	000000	000000
1136602130	1-1366	0213	FAN ASM; 8 BLADE	000000	000000
1136602140	1-1366	0214	CASE ASM.; BRG., FAN	000000	000000
1136602190	1-1366	0219	FAN; COOLING	000000	000001
1136602200	1-1366	0220	FAN ASM; COOLING	000000	000002
1136602234	1-1366	0223	CASE ASM;BRG. FAN	000000	000000
1136602240	1-1366	0224	FAN ASM; COOLING	000001	000000
1136602280	1-1366	0228	W/PUMP PULLEY	000000	000001
1136602340	1-1366	0234	FAN ASM; COOLING	000000	000000
1136602341	1-1366	0234	FAN ASM; COOLING	000000	000000
1136602380	1-1366	0238	PULLEY ASM	000000	000000
1136602390	1-1366	0239	FAN ASM.;D=700,8,SUCT.PP	000000	000006
1136602520	1-1366	0252	CASE ASM.;BRG.,FAN	000000	000000
1136602560	1-1366	0256	PULLEY ASM IDLE	000000	000000
1136602570	1-1366	0257	FAN HUB CENTER	000000	000000
1136602571	1-1366	0257	FAN HUB CENTER	000000	000000
1136602870	1-1366	0287	FAN ASM;COOLING	000000	000000
1136602871	1-1366	0287	FAN ASM;COOLING	000000	000022
1136602890	1-1366	0289	FAN ASM;COOLING	000000	000000
1136602891	1-1366	0289	FAN ASM;COOLING	000000	000004
1136602900	1-1366	0290	FAN HUB CENTER	000000	000006
1136602910	1-1366	0291	IDLE PULLEY	000000	000000
1136602912	1-1366	0291	IDLE PULLEY	000000	000000
1136602950	1-1366	0295	FAN ASM.;D=706,BLADE	000000	000001
1136602970	1-1366	0297	FAN ASM; D=800, 6BLADE	000000	000012
1136603020	1-1366	0302	CENTER ASM; FAN	000000	000000
1136603280	1-1366	0328	FAN;COOLING	000000	000000
1136603281	1-1366	0328	FAN;COOLING	000000	000029
1136603310	1-1366	0331	FAN; COOLING	000000	000000
1136603311	1-1366	0331	FAN; COOLING	000000	000033
1136603320	1-1366	0332	FAN COOLING	000000	000000
1136603321	1-1366	0332	FAN COOLING	000000	000038
1136603370	1-1366	0337	FAN; COOLING	000000	000003
1136603371	1-1366	0337	FAN; COOLING	000000	000000
1136603390	1-1366	0339	PULLEY ASM; CEENTER	000000	000001
1136603400	8-9803	0345	CENTER ASM; FAN	000000	000000
1136603450	1-1366	0345	FAN; COOLING	000000	000000
1136603451	1-1366	0345	FAN; COOLING	000000	000004
1136603500	1-1366	0350	PULLEY ASM;CEN	000000	000004
1136603510	1-1366	0351	FAN; COOLING	000000	000003
1136603550	1-1366	0355	FAN ; COOLING	000000	000008
1136603600	1-1366	0360	CENTER ASML FAN	000000	000005
1136603680	1-1366	0368	PULLEY; IDLE	000000	000000

1136603681	1-1366	0368	PULLEY; IDLE	000000	000028
1136603690	1-1366	0369	FAN; COOLING	000000	000000
1136603710	1-1366	0371	FAN; COOLING	000000	000011
1136610160	1-1366	1016	PULLEY CENTER	000002	000000
1136610170	1-1366	1017	COUPLING ASM; FAN	000000	000000
1136610201	1-1366	1020	COUPLING ASM; FAN	000000	000000
1136610260	1-1366	1026	COUPLING ASM; FAN	000000	000000
1136610441	1-1366	1044	CASE; BRG	000000	000000
1136610500	1-1366	1050	BODY CENTER FAN	000000	000002
1136610530	1-1366	1053	RING; SNAP, BRG CASE	000000	000000
1136630100	1-1366	3010	PULLEY: IDLER	000000	000000
1136630101	1-1366	3010	PULLEY; IDLE	000000	000000
1136630430	1-1366	3043	PULLEY	000015	000000
1136630510	1-1366	3051	PULLEY ASM	000000	000000
1136630511	1-1366	3051	PULLEY ASM	000000	000000
1136630521	1-1366	3052	PULLEY; IDLE	000000	000005
1136630670	1-1366	3067	PULLEY; IDLE	000000	000000
1136630700	1-1366	3070	PULLEY IDLE	000000	000000
1136630702	1-1366	3070	PULLEY IDLE	000000	000011
1136630720	1-1366	3072	PULLEY DRIVE FAN	000000	000000
1136630721	1-1366	3072	PULLEY DRIVE FAN	000000	000002
1136630980	1-1366	3098	PULLEY; FAN STARTER	000000	000000
1136631111	1-1366	3111	PULLEY; IDLE	000000	000024
1136631220	1-1366	3122	PULLEY; IDLE	000000	000000
1136631900	1-1366	3190	PULLEY ASM	000000	000003
1136640091	1-1366	4009	COVER; DUST	000000	000000
1136640092	1-1366	4009	COVER; DUST	000000	000025
1136640100	1-1366	4010	IDLER PULLEY COVER	000000	000004
1136640110	1-1366	4011	COVER DUST	000000	000005
1136640120	1-1366	4012	COVER DUST	000000	000022
1136640170	1-1366	4017	DUST COVER	000000	000002
1136640240	1-1366	4024	PLATE; FAN CLU	000000	000000
1136640270	1-1366	4027	COVER; DUST	000000	000000
1136650140	1-1366	5014	SHAFT	000000	000000
1136650160	1-1366	5016	ROTOR ASM.	000000	000000
1136650220	1-1366	5022	SPINDLE; IDLE	000000	000000
1136650262	1-1366	5026	PIECE; SLIDING	000000	000097
1136650301	1-1366	5030	SHAFT; BRG CASE	000000	000000
1136650310	1-1366	5031	SPINDLE IDLE	000000	000000
1136650311	1-1366	5031	SPINDLE IDLE	000000	000019
1136650540	1-1366	5054	SPINDLE; IDLE PULLEY	000000	000002
1136650650	1-1366	5065	SPINDLE; IDLE PULLEY	000000	000000
1136650651	1-1366	5065	SPINDLE; IDLE PULLEY	000000	000003
1136660070	1-1366	6007	SPACER; IDLE PULLEY BRG	000000	000003
1136660170	1-1366	6017	SPACER	000001	000000
1136660200	1-1366	6020	WASHER	000001	000000
1136660211	1-1366	6021	WASHER; PL, ADJ PLATE	000003	000013

1136660250	1-1366	6025	SPACER IDLE PULEY	000000	000000
1136660251	1-1366	6025	SPACER IDLE PULEY	000000	000013
1136660260	1-1366	6026	SPACER BRKT IDLE PULLEY	000000	000049
1136660290	1-1366	6029	SPACER CENTER FAN	000000	000006
1136660320	1-1366	6032	SPACER;IDLE PULLEY BRG	000000	000005
1136660490	1-1366	6049	SPACER; FAN DRIVE	000000	000016
1136660500	1-1366	6050	SPACER; IDLE PULLY BRG	000000	000000
1136680150	1-1366	8015	BRACKET ASM.	000000	000000
1136680181	1-1366	8018	BRACKET; IDLE PULLEY	000000	000000
1136680210	1-1366	8021	BRACKET;IDLE PULLEY	000000	000000
1136680240	1-1366	8024	BRACKET IDLE PULLEY	000000	000000
1136680242	1-1366	8024	BRACKET IDLE PULLEY	000000	000000
1136680480	1-1366	8048	SPACER; IDLE PULLEY BRG	000000	000000
1136680540	1-1366	8054	BRACKET;IDLE PULLEY	000000	000000
1136690100	1-1366	9010	SPACER; FAN	000001	000000
1136690600	1-1366	9060	SPACER	000000	000000
1136690700	1-1366	9070	SPACER	000000	000000
1136690750	1-1366	9075	SPACER; FAN	000000	000000
1136690790	1-1366	9079	ADAPTOR; COOLING 6RB1	000000	000000
1136690800	1-1366	9080	ADAPTER; FAN FIX	000000	000000
1136690870	1-1366	9087	SPACER; FAN-PULLEY	000000	000000
1136690980	1-1366	9098	ADAPTOR; FAN FIX	000000	000000
1136691001	1-1366	9100	ADAPTOR; FAN FIX	000006	000000
1136691040	1-1366	9104	ADAPTOR; COOLING, FAN PUL	000000	000002
1136691060	1-1366	9106	ADAPTOR; COOLING FAN	000000	000005
1136691080	1-1366	9108	ADAPTER; FAN FIX.	000000	000000
1136691161	1-1366	9116	NUT;BRG.FIX	000000	000000
1136691240	1-1366	9124	PIECE; SLIDING	000000	000000
1136691890	1-1366	9189	ADAPTER,FAN TO PULLEY	000000	000002
1136691971	1-1366	9197	BRACKET;IDLE PULLEY	000000	000000
1136691972	1-1366	9197	BRACKET;IDLE PULLEY	000000	000003
1136710011	1-1367	1001	BELT; SEA WATER PUMP	000000	000000
1136710070	1-1367	1007	BELT; FAN	000000	000000
1136710080	1-1367	1008	BELT; COOLING L-1000	000000	000000
1136710081	1-1367	1008	BELT; COOLING L-1000	000003	000000
1136710110	1-1367	1011	BELT; FAN	000000	000000
1136710170			BELT; FAN	000000	000000
1136710270	1-1367	1027	FAN BELT	000000	000000
1136710340	1-1367	1034	BELT ASM; FAN	000001	000000
1136710360	1-1367	1036	BELT; FAN	000000	000000
1136710450	1-1367	1045	BELT ASM; FAN E120	000000	000000
1136710500	1-1367	1050	BELT ASM; FAN DA120	000000	000000
1136710600	1-1367	1060	BELT ASM; FAN E120	000000	000000
1136710640	1-1367	1064	BELT ASM; FAN, 2, L=1640	000000	000000
1136710890	1-1367	1089	BELT ASM; FAN DA220	000000	000000
1136710950	1-1367	1095	BELT; COOLING FAN	000000	000000
1136710980	1-1367	1098	BELT ASM; FAN DA220	000000	000000

1136711060	1-1367	1106	BELT	000000	000000
1136711090	1-1367	1109	BELT	000000	000000
1136711100	1-1367	1110	BELT ASM; FAN L=1716	000000	000000
1136711130	1-1367	1113	BELT;	000000	000001
1136711140	1-1367	1114	BELT ASM; FAN	000001	000002
1136711200	1-1367	1120	BELT ASM.; FAN, L=1356	000000	000000
1136711260	1-1367	1126	BELT ASM; FAN	000000	000000
1136711270	1-1367	1127	BELT; A/C COMPR.	000000	000010
1136711320	1-1367	1132	BELT ASM; FAN	000004	000000
1136711370	1-1367	1137	BELT SET; WATER	000000	000000
1136711400	1-1367	1140	BELT; FAN	000000	000000
1136711410	1-1367	1141	BELT; FAN	000001	000000
1136711420	1-1367	1142	BELT	000002	000021
1136711430	1-1367	1143	BELT; COOLING F	000000	000047
1136711440	1-1367	1144	BELT ASM; FAN	000000	000000
1136711450	1-1367	1145	BELT	000000	000000
1136711460	1-1367	1146	BELT ASM; FAN DA120	000000	000002
1136711470	1-1367	1147	BELT	000000	000000
1136711480	1-1367	1148	BELT ASSY;FAN	000000	000000
1136711490	1-1367	1149	BELT	000000	000000
1136711500	1-1367	1150	BELT ASM; FAN	000000	000002
1136711520	1-1367	1152	B E L T	000000	000000
1136711540			BELT;FAN	000000	000026
1136711550			BELT ASM;FAN	000000	000000
1136711660	1-1367	1166	BELT ASM; FAN	000000	000002
1136711670	1-1367	1167	BELT*	000000	000002
1136711680	1-1367	1168	BELT ASM; FAN E120	000000	000000
1136711690	1-1367	1169	BELT ASM; FAN E120	000000	000000
1136711700	1-1367	1170	BELT*	000000	000000
1136711710	1-1367	1171	BELT ASM; FAN	000000	000006
1136711720	1-1367	1172	BELT*	000003	000000
1136711730	1-1367	1173	BELT; COOLING FAN	000018	000001
1136711740	1-1367	1174	BELT; FAN	000000	000001
1136711750	1-1367	1175	BELT ASM; FAN	000000	000000
1136711830	1-1367	1183	BELT AIR CMPR	000001	000004
1136711870	1-1367	1187	BELT ASM; FAN 12PB1	000000	000000
1136711880	1-1367	1188	BELT ASM; FAN 12PB1	000001	000000
1136711970	1-1367	1197	BELT;A/C	000000	000001
1136711980	1-1367	1198	BELT ASM; FAN	000001	000000
1136712060	1-1367	1206	BELT; COOLING FAN	000001	000000
1136712070	1-1367	1207	BELT; FAN	000000	000000
1136712080	1-1367	1208	BELT;A/C COMPR	000000	000000
1136712090	1-1367	1209	BELT*	000000	000000
1136712100	1-1367	1210	BELT ASM; FAN	000000	000000
1136712150	1-1367	1215	BELT ASM; FAN	000000	000000
1136712161	1-1367	1216	BELT;FAN	000000	000000
1136712170	1-1367	1217	BELT: A/C COMP.	000001	000012

1136712220	1-1367	1222	BELT: SEA WTR PMP T/GEN	000000	000001
1136712260	1-1367	1226	BELT; COOLING	000000	000000
1136712270	1-1367	1227	BELT; FAN	000000	000000
1136712340	1-1367	1234	BELT ASM; FAN	000000	000004
1136712350	1-1367	1235	BELT ASM; FAN	000000	000000
1136712370	1-1367	1237	BELT ASM; FAN	000000	000000
1136712380	1-1367	1238	DISCONTINUED	000000	000000
1136712510	1-1367	1251	BELT	000000	000000
1136712520	1-1367	1252	BELT ASM; FAN	000000	000002
1136712570	1-1367	1257	BELT ASM; FAN	000000	000000
1136712580	1-1367	1258	BELT ASM; FAN	000000	000000
1136712640	1-1367	1264	BELT; FAN	000000	000001
1136712710	1-1367	1271	BELT ASM; FAN	000000	000006
1136712720	1-1367	1272	BELT,	000000	000010
1136712730	1-1367	1273	BELT ASM; FAN	000000	000002
1136712780	1-1367	1278	BELT ASM; FAN 6SA1	000000	000000
1136712820	1-1367	1282	BELT	000000	000005
1136712830	1-1367	1283	BELT ASM; FAN	000000	000012
1136712880	1-1367	1288	BELT ASM; FAN 6BD1	000000	000005
1136712890	1-1367	1289	BELT	000009	000000
1136712901	1-1367	1290	BELT ASM; FAN 6BD1TPQ03	000000	000000
1136712910	1-1367	1291	BELT	000000	000000
1136713020	1-1367	1302	BELT ASM.	000000	000010
1136713040	1-1367	1304	BELT ASM; FAN	000000	000000
1136713060	1-1367	1306	BELT;FAN	000000	000008
1136713090	1-1367	1309	BELT ASM.	000000	000000
1136713140	1-1367	1314	BELT ASM; FAN	000003	000002
1136713210	1-1367	1321	BELT ASM.	000000	000014
1136713220	1-1367	1322	BELT ASM; FAN	000000	000002
1136713270	1-1367	1327	BELT;COOLING FAN	000000	000027
1136713350	1-1367	1335	BELT ASM; FAN	000000	000002
1136713400	1-1367	1340	BELT ASM; FAN	000000	000006
1136713440	1-1367	1344	BELT ASM.	000000	000000
1136713520	1-1367	1352	BELT	000000	000001
1136713600	1-1367	1360	BELT; COOLING FAN	000000	000000
1136713610			BELT ASM FAN L=1126 SET 3	000000	000000
1136713611			BELT ASM FAN L=1126 SET 3	000000	000002
1136713780	1-1367	1378	BELT ASM; FAN	000000	000000
1136713870	1-1367	1387	BELT ASM; FAN	000000	000000
1136714000	1-1367	1400	BELT; COOLING F	000000	000000
1136714040	1-1367	1404	BELT	000000	000004
1136714160	1-1367	1416	BELT ASM FAN L=1141 SET 3	000000	000000
1136714161	1-1367	1416	BELT ASM FAN L=1141 SET 3	000000	000017
1136714190	1-1367	1419	BELT ASM; FAN	000000	000000
1136714320	1-1367	1432	BELT ASM; FAN	000002	000000
1136714350	1-1367	1435	BELT ASM. ; L=1240	000000	000002
1136714360	1-1367	1436	BELT; A/C COMP	000000	000068

1136714430	1-1367	1443	BELT ASM; FAN L=1256	000000	000046
1136714490	1-1367	1449	BELT ASM; FAN	000000	000003
1136714520	1-1367	1452	BELT ASM; FAN DRIVE	000000	000001
1136714641			BELT; WATER PUMP DRIVE	000051	000131
1136714660			BELT ASM;FAN	000000	000004
1136714670	1-1367	1467	BELT ASM; FAN	000000	000009
1136714690	1-1367	1469	BELT; GEN DRIVE	000000	000032
1136714730	1-1367	1473	BELT; COOLING FAN	000000	000169
1136714770	1-1367	1477	BELT;WATER PUMP TO GEN	000000	000000
1136714880	1-1367	1488	BELT; COOLING FAN	000000	000011
1136714890	1-1367	1489	BELT; GEN DRIVE	000000	000000
1136714990	1-1367	1499	BELT; COOLING FAN	000000	000032
1136715030	1-1367	1503	BELT;COOLING FAN	000000	000008
1136715060	1-1367	1506	BELT; COOLING FAN	000000	000024
1136715070	1-1367	1507	BELT;GEN DRIVE	000000	000003
1136715080	1-1367	1508	BELT; COOLING FAN	000000	000000
1136715100	1-1367	1510	BELT; COOLING FAN	000000	000001
1136715110	1-1367	1511	BELT; GEN, DRIVE	000000	000002
113671516D			BELT ASM;L=1240	000000	000000
1136715160	1-1367	1516	BELT ASM;L=1240	000000	000077
1136715200	1-1367	1520	BELT; COOLING FAN	000000	001569
1136715220	1-1367	1522	BELT; COOLING FAN	000000	000027
1136740010	1-1367	4001	PLATE; ADJ E120	000000	000000
1136740190	1-1367	4019	ADJUSTING STRAP; ALTERNAT	000000	000000
1136740260	1-1367	4026	ADJ PLATE,BELT	000000	000000
1136740550	1-1367	4055	PLATE; ADJ,FAN BELT	000000	000000
1136740720	1-1367	4072	PLATE; ADJ E120	000000	000000
1136740750	1-1367	4075	PLATE; ADJ., FAN BELT	000000	000000
1136740930	1-1367	4093	PLATE; ADJ,FAN BELT	000000	000000
1136740940	1-1367	4094	PLATE; ADJ. FAN	000000	000000
1136740950	1-1367	4095	PLATE; ADJ,FAN	000000	000000
1136740960	1-1367	4096	PIECE;SLIDING	000000	000000
1136741040	1-1367	4104	PLATE; ADJ FAN	000002	000000
1136741070	1-1367	4107	PLATE; ADJ 6RB1	000001	000000
1136741080	1-1367	4108	PIECE; SLIDING	000000	000000
1136741160	1-1367	4116	PLATE; ADJUSTER GEN	000000	000000
1136741180	1-1367	4118	PLATE; ADJ,FAN BELT	000000	000000
1136741181	1-1367	4118	PLATE; ADJ,FAN BELT	000000	000000
1136741191	1-1367	4119	PLATE; ADJUSTER FAN BELT	000000	000000
1136741192	1-1367	4119	PLATE; ADJUSTER FAN BELT	000000	000015
1136741210	1-1367	4121	PLATE; ADJUSTER PLATE	000002	000000
1136741260	1-1367	4126	PLATE; ADJ,FAN	000000	000002
1136741300	1-1367	4130	PLATE; ADJUSTER, FAN BELT	000000	000000
1136741301	1-1367	4130	PLATE; ADJUSTER, FAN BELT	000002	000000
1136741350	1-1367	4135	PLATE; ADJUSTER	000001	000001
1136741411	1-1367	4141	PLATE; ADJUSTER	000001	000000
1136741550	1-1367	4155	PLATE; ADJ,FAN	000000	000002

1136741600	1-1367	4160	PIECE; SLIDING,	000000	000182
1136741610	1-1367	4161	PIECE; SLIDING	000000	000011
1136741690	1-1367	4169	PLATE; ADJUSTER	000000	000000
1136741730	1-1367	4173	PALTE; ADJUSTER	000000	000000
1136741810	1-1367	4181	PLATE; ADJUSTER	000000	000000
1136741830	1-1367	4183	PLATE; ADJ-BELT	000000	000001
1136741910	1-1367	4191	PLATE; ADJUSTER	000002	000000
1136742200	1-1367	4220	PLATE; ADJ. FAN BELT	000000	000001
1136742220	1-1367	4222	PLATE ADJ	000002	000000
1136742230	1-1367	4223	PLATE	000000	000000
1136742251	1-1367	4225	PLATE; ADJ, FAN	000000	000000
1136742260	1-1367	4226	PLATE; ADJ. FAN BELT	000000	000000
1136742470	1-1367	4247	PLATE; ADJ., FAN BELT	000000	000003
1136742820	1-1367	4282	PLATE; ADJ	000000	000000
1136742821	1-1367	4282	PLATE; ADJ	000003	000004
1136742840	1-1367	4284	PLATE; ADJ	000007	000000
1136742950	1-1367	4295	PLATE; ADJ	000000	000010
1136743011	1-1367	4301	BRACKET; IDLE PULLEY	000000	000000
1136760250	1-1367	6025	PLATE; ADJUSTER	000000	000000
1136760251	1-1367	6025	PLATE; ADJUSTER	000000	000000
1136760630	1-1367	6063	BRKT;FAN ADJ LINK ROD	000000	000000
1136790030	1-1367	9003	PLATE; ADJUSTER	000002	000000
1136790060	1-1367	9006	SPACER; ADJ.	000000	000016
1137102167	1-1371	0216	HOUSING ASM; THERMOSTAT	000000	000000
1137103601	1-1371	0360	OUTLET; WATER PIPE ASM	000000	000000
1137103734	1-1371	0373	HOUSING; THERMOSTAT	000001	000000
1137104450	1-1371	0445	DUCT ASM.; WATER, SUCTION	000000	000000
1137105661	1-1371	0566	DUCT; WATER BYPASS	000000	000000
1137105662	1-1371	0566	DUCT; WATER BYPASS	000000	000001
1137105690	1-1371	0569	HOUSING; THERMOSTAT	000000	000000
1137105890	1-1371	0589	DUCT; WATER, BYPASS	000006	000000
1137110361	1-1371	1036	PIPE ASM; W/DRAIN E120	000000	000000
1137110362	1-1371	1036	PIPE ASM; W/DRAIN E120	000000	000000
1137110363	1-1371	1036	PIPE ASM; W/DRAIN E120	000000	000000
1137110523	1-1371	1052	WATER DUCT SUCT	000000	000000
1137110580	1-1371	1058	SUPERSEDED**PIPE	000000	000000
1137110731	1-1371	1073	DUCT ASM; WATER, PUMP	000000	000000
1137110841	1-1371	1084	DUCT; WATER, TO OIL C	000000	000000
1137110852	1-1371	1085	DUCT; WATER, OUTLET	000000	000000
1137110952	1-1371	1095	WATER OUTLET DU	000000	000000
1137111041	1-1371	1104	DUCT; WATER PIPE 12PB1	000000	000000
1137111113	1-1371	1111	DUCT:WATER	000000	000000
1137111262	1-1371	1126	PIPE; WATER OUTLET DA220	000002	000000
1137111411	1-1371	1141	DUCT;WATER,	000000	000000
1137111510	1-1371	1151	SUPERSEDED**PIPE	000000	000000
1137111520	1-1371	1152	SUPERSEDED**PIPE	000000	000000
1137111530	1-1371	1153	SUPERSEDED**PIPE	000000	000000

1137111610	1-1371	1161	DUCT; WATER, OUT	000000	000000
1137111620	1-1371	1162	PIPE; WATER OUT	000000	000000
1137111630	1-1371	1163	DUCT A WATER (LH)	000000	000000
1137111640	1-1371	1164	DUCT A WATER (RH)	000000	000000
1137111660	1-1371	1166	DUCT; WATER OUT	000000	000000
1137112460	1-1371	1246	DUCT; WATER, OUT	000000	000000
1137113180	1-1371	1318	COVER; THERMOSTAT	000000	000000
1137113181	1-1371	1318	COVER; THERMOSTAT	000000	000001
1137113270	1-1371	1327	PIPE ASM; WATER E210	000000	000000
1137113271	1-1371	1327	PIPE ASM; WATER E210	000000	000001
1137113341	1-1371	1334	DUCT; WATER, TO	000000	000000
1137113820	1-1371	1382	DUCT ASM; WATER	000000	000000
1137113892	1-1371	1389	DUCT; WATER, SUCTION 6SA1	000000	000000
1137113893	1-1371	1389	DUCT; WATER, SUCTION 6SA1	000000	000000
1137113993	1-1371	1399	HOUSING;THERMOSTAT	000001	000000
1137114020	1-1371	1402	PIPE ASM.; WATER OUTLET	000000	000000
1137114060	1-1371	1406	PIPE ASM.; WATER OUTLET	000000	000000
1137114100	1-1371	1410	DUCT; WATER, T-STAT HSG/E	000000	000000
1137114110	1-1371	1411	DUCT; WATER T-STAT HSG/EX	000002	000000
1137114241	1-1371	1424	DUCT; WATER, SUC	000000	000000
1137114242	1-1371	1424	DUCT; WATER, SUC	000000	000002
1137114351	1-1371	1435	PIPE ASM; WATER TURBO TO	000001	000000
1137114360	1-1371	1436	PIPE ASM; WATER TURBO TO	000000	000000
1137114710	1-1371	1471	PIPE ASM; WATER OUTLET	000000	000001
1137114721	1-1371	1472	PIPE ASM.; WATER DRAIN	000000	000000
1137115061	1-1371	1506	PIPE ASM; WATER PUMP	000003	000001
1137115320	1-1371	1532	DUCT: WATER COOLER OUT	000000	000003
1137115350	1-1371	1535	PIPE ASM; WATER, PUMP INL	000002	000000
1137115990	1-1371	1599	PIPE WATER PUMP INLET	000000	000004
1137116070	1-1371	1607	PIPE;WATER HEATER	000000	000000
1137116080	1-1371	1608	PIPE; WATER OUTLET	000000	000000
1137116081	1-1371	1608	PIPE; WATER OUTLET	000000	000000
1137116112	1-1371	1611	PIPE;WATER PUMP, INL	000000	000000
1137116240	1-1371	1624	PIPE ASM WATER OUTLET	000000	000000
1137116430	1-1371	1643	PIPE; WATER DRAIN	000001	000000
1137116490	1-1371	1649	PIPE; WATER TUR	000000	000000
1137116770	1-1371	1677	PIPE ASM WATER OUTLET	000000	000000
1137116771	1-1371	1677	PIPE ASM WATER OUTLET	000000	000000
1137117590	1-1371	1759	DUCT; WATER	000000	000003
1137117600	1-1371	1760	DUCT; WATER	000000	000001
1137117830	1-1371	1783	PIPE; WATER OUTLET	000000	000001
1137117860	1-1371	1786	DUCT; WATER PUMP, INL	000000	000001
1137117870	1-1371	1787	DUCT; WATER	000000	000002
1137117910	1-1371	1791	DUCT; WATER	000000	000003
1137118040	1-1371	1804	HOUSING;THERMOSTAT	000000	000000
1137118042	1-1371	1804	HOUSING;THERMOSTAT	000000	000004
1137118062	1-1371	1806	DUCT; WATER	000000	000003

1137118100	1-1371	1810	PIPE; WATER PUMP, INL	000001	000000
1137118490	1-1371	1849	WATER DUCT	000000	000001
1137118500	1-1371	1850	WATER DUCT	000000	000001
1137118510	1-1371	1851	PIPE; WATER	000000	000001
1137118520	1-1371	1852	WATER DUCT	000000	000000
1137118570	1-1371	1857	PIPE; WATER, EGR	000001	000003
1137118580	1-1371	1858	DUCT; WATER, EXH	000000	000001
1137118590	1-1371	1859	DUCT; WATER	000000	000001
1137118600	1-1371	1860	DUCT; WATER	000000	000001
1137118610	1-1371	1861	DUCT; WATER	000000	000001
1137130030	1-1371	3003	JOINT; UME120	000000	000000
1137130200	1-1371	3020	DUCT; WATER, DL	000000	000000
1137130220	1-1371	3022	DUCT; WATER, DR	000000	000000
1137130230	1-1371	3023	DUCT; WATER E L	000000	000000
1137130310	1-1371	3031	JOINT; HOUSING	000001	000000
1137130350	1-1371	3035	JOINT; THERMOSTAT E120	000000	000005
1137130370	1-1371	3037	PIPE; OUTLET, WATER	000000	000000
1137130381	1-1371	3038	PIPE; WATER OUT.	000000	000000
1137130400	1-1371	3040	JOINT; THERMOSTAT	000001	000000
1137130440	1-1371	3044	PIPE; WATER OUT.	000000	000000
1137130450	1-1371	3045	PIPE; WATER, OUTLET	000000	000000
1137130460	1-1371	3046	PIPE; WATER OUTLET	000000	000002
1137130470			JOINT	000000	000001
1137130500	1-1371	3050	PIPE; WATER OUT.	000000	000001
1137130611	1-1371	3061	PIPE; WATER OUTLET	000001	000003
1137130700	1-1371	3070	JOINT; THERMOSTAT C240	000000	000000
1137130710	1-1371	3071	PIPE; WATER OUTLET	000000	000000
1137130712	1-1371	3071	PIPE; WATER OUTLET	000000	000005
1137160280	1-1371	6028	HOUSING; THERMOSTAT 12PB1	000000	000000
1137160285	1-1371	6028	HOUSING; THERMOSTAT 12PB1	000000	000000
1137160800	1-1371	6080	HOUSING; THERMOSTAT UME12	000003	000000
1137160821	1-1371	6082	HOUSING; THERMOSTAT	000000	000002
1137161200	1-1371	6120	HOUSING; THERMOSTAT	000000	000000
1137161220	1-1371	6122	HOUSING; THERMO	000000	000000
1137161221	1-1371	6122	HOUSING; TH	000000	000000
1137161222	1-1371	6122	HOUSING; TH	000000	000001
1137161250	1-1371	6125	HSG; THERMOSTAT	000000	000000
1137161251	1-1371	6125	HOUSING; T	000000	000000
1137161252	1-1371	6125	HOUSING; THERMOSTAT	000000	000003
1137161290	1-1371	6129	HOUSING; THERMO	000000	000000
1137161291	1-1371	6129	HOUSING; THERMO	000000	000002
1137161300	1-1371	6130	HOUSING; THERMOSTAT	000000	000000
1137161310	1-1371	6131	HOUSING; THERMOSTAT	000000	000000
1137161312	1-1371	6131	HOUSING; THERMOSTAT	000000	000000
1137161362	1-1371	6136	HOUSING; THERMOSTAT	000000	000000
1137161364	1-1371	6136	HOUSING; THERMOSTAT	000000	000000
1137161400	1-1371	6140	HOUSING; THERMOSTAT	000000	000000

1137161401	1-1371	6140	HOUSING; THERMOSTAT	000000	000000
1137161472	1-1371	6147	HOUSING;THERMOSTAT	000000	000001
1137161561	1-1371	6156	HOUSING; THERMOSTAT	000000	000000
1137161570	1-1371	6157	HOUSING; THERMOSTAT	000000	000000
1137161571	1-1371	6157	HOUSING; THERMOSTAT	000000	000000
1137161580	1-1371	6158	HOUSING; THERMOSTAT	000000	000000
1137161591	1-1371	6159	HOUSING; THERMOSTAT	000000	000011
1137161671	1-1371	6167	THERMOSTAT HSG	000000	000001
1137161681	1-1371	6168	HOUSING; THERMOSTAT	000000	000001
1137161940	1-1371	6194	HOUSING; THERMOSTAT	000000	000000
1137161941	1-1371	6194	HOUSING; THERMOSTAT	000000	000000
1137161990	1-1371	6199	THERMOSTAT HSG	000000	000001
1137162000	1-1371	6200	HOUSING; THERMOSTAT	000000	000002
1137190360	1-1371	9036	BRACKET; HARNESS, STAY	000000	000000
1137190581	1-1371	9058	STAY; WATER PIP	000001	000000
1137190630	1-1371	9063	BRACKET	000000	000000
1137190800	1-1371	9080	HOSE;WATER DRAIN	000000	000023
1137191070	1-1371	9107	BRACKET; DUCT	000000	000001
1137191110	1-1371	9111	COVER; OIL COOLER	000000	000001
1137191260	1-1371	9126	BRACKET; WATER PIPE	000000	000001
1137210400	1-1372	1040	WATER PIPE,COMP	000000	000000
1137210410	1-1372	1041	WATER PIPE,HEAD	000000	000000
1137210910	1-1372	1091	WATER PIPE ASSY	000000	000000
1137210920	1-1372	1092	WATER PIPE ASSY	000000	000000
1137210940	1-1372	1094	HOSE; RUBBER	000022	000014
1137211561	1-1372	1156	PIPE; WATER	000000	000000
1137211780	1-1372	1178	HOSE; FLEX 6RB1	000000	000005
1137211830	1-1372	1183	HOSE; FLEX 6RB1	000000	000000
1137211850	1-1372	1185	HOSE; RUBBER, AIR COMP OU	000001	000008
1137211860	1-1372	1186	HOSE; FLEX, WATER OUTLET	000000	000000
1137211870	1-1372	1187	HOSE; RUBBER E120	000000	000003
1137211880	1-1372	1188	HOSE; RUBBER E120	000001	000000
1137212010	1-1372	1201	PIPE ASM; WATER AIR COMP	000000	000006
1137212520	1-1372	1252	PIPE ASM; DRAIN 6BG1	000002	000000
1137212531	1-1372	1253	PIPE ASM;WTR	000000	000000
1137212541	1-1372	1254	PIPE ASM;WTR	000000	000000
1137212760	1-1372	1276	HOSE; RUBBER, WATER BY-PA	000004	000000
1137212800	1-1372	1280	PIPE; WATER, AIR	000000	000006
1137212810	1-1372	1281	PIPE ASM;WATER	000000	000000
1137212860	1-1372	1286	PIPE; WATER	000002	000000
1137212890	1-1372	1289	HOSE; RUBBER,WATER	000001	000001
1137212990	1-1372	1299	PIPE ASM;WATER	000000	000000
1137213030	1-1372	1303	PIPE; WATER, AIR	000000	000000
1137213040	1-1372	1304	PIPE; WATER, AIR	000000	000000
1137213061	1-1372	1306	PIPE ASM; WATER	000000	000002
1137213070	1-1372	1307	PIPE; WATER	000000	000000
1137213150	1-1372	1315	PIPE ASM; WATER	000001	000000

1137213160	1-1372	1316	PIPE; WATER,AIR	000000	000003
1137213342	1-1372	1334	PIPE ASM; WATER DRAIN 6BD	000000	000001
1137213401	1-1372	1340	PIPE; AIR CMPR. OUT	000000	000000
1137213412	1-1372	1341	DRAIN PIPE; WATER	000000	000002
1137213900	1-1372	1390	PIPE; WATER, AIR COMP OUT	000000	000008
1137214090	1-1372	1409	PIPE;WATER,AIR	000000	000004
1137214200	1-1372	1420	PIPE ASM.;WATER DRAIN	000000	000000
1137214830	1-1372	1483	PIPE ASM; OIL PAN	000000	000000
1137214963	1-1372	1496	PIPE; WATER DRAIN	000000	000002
1137218751	1-1372	1875	HOSE; WATER PIPE	000000	000001
1137219030	1-1372	1903	PIPE; WATER, AIR	000000	000003
1137220400	1-1372	2040	PIPE; WATER,TURBO OUT	000000	000003
1137220411	1-1372	2041	PIPE; WATER,TURBO IN	000000	000003
1137220482	1-1372	2048	PIPE; WATER,COOLER	000004	000000
1137220570	1-1372	2057	PIPE; WATER,COOLER	000003	000000
1137290960	1-1372	9096	BRACKET; FUEL PIPE CLIP	000002	000000
1137290961	1-1372	9096	BRACKET; FUEL PIPE CLIP	000001	000000
1137290962	1-1372	9096	BRACKET; FUEL PIPE CLIP	000000	000000
1137290970	1-1372	9097	BRACKET; FUEL PIPE CLIP	000004	000000
1137290971	1-1372	9097	BRACKET; FUEL PIPE CLIP	000000	000000
1137290980	1-1372	9098	HOSE; RUBBER	000000	000004
1137410010	1-1374	1001	PACKING; OUTLET	000000	000000
1137410040	1-1374	1004	PACKING E120	000039	000000
1137410050	1-1374	1005	PACKING; OUTLET	000000	000000
1137410070	1-1374	1007	PACKING; PIPE, WATER	000000	000000
1137410080	1-1374	1008	GASKET;THERMO HOUSING	000000	000000
1137410100	1-1374	1010	GASKET;THERMO HOUSING	000000	000000
1137410110	1-1374	1011	PACKING;PIPE-PUMP	000000	000062
1137410120	1-1374	1012	PACKING;OUTLET PIPE	000005	000012
1137410130	1-1374	1013	PACKING;HOUSE-CYL.HEAD	000010	000029
1137410160	1-1374	1016	PACKING; OUTLET	000393	000000
1137420040	1-1374	2004	PACKING; THERMOSTAT HSG-J	000000	000145
1137420090	1-1374	2009	GASKET; DUCT TO	000000	000000
1137420100	1-1374	2010	PACKING	000000	000000
1137420110	1-1374	2011	PACKING E120	000000	000000
1137420120	1-1374	2012	GASKET; DUCT TO HSG	000003	000000
1137420130	1-1374	2013	PACKING; DUCT TO	000000	000000
1137420140	1-1374	2014	GASKET; DUCT TO	000000	000000
1137420150	1-1374	2015	PACKING; DUCT TO	000000	000000
1137420170	1-1374	2017	PACKING;W/PUMP-HSG.	000000	000070
1137420190	1-1374	2019	PACKING; DUCT TO	000000	000000
1137420200	1-1374	2020	GASKET; DUCT	000008	000113
1137420260	1-1374	2026	GASKET DUCT TO	000000	000010
1137430160	1-1374	3016	GASKET; THERMOSTAT	000310	000629
1137430190	1-1374	3019	PACKING 12PB1	000000	000000
1137430211	1-1374	3021	GASKET; HSG TO	000000	000013
1137430230	1-1374	3023	PACKING 12PB1	000000	000000

1137430240	1-1374	3024	GASKET;THERMOS	000000	000000
1137430260	1-1374	3026	PACKING;HSG.TO CYL.HEAD	000000	000000
1137430330	1-1374	3033	PACKING;HSG.TO CYL.HEAD	000000	000000
1137430340	1-1374	3034	GASKET; HSG. TO CYL HEAD	000277	000000
1137430361	1-1374	3036	GASKET, THERMOSTAT HSG	000000	000197
1137430410	1-1374	3041	GASKET; THERMOSTAT HSG	000000	000021
1137430420	1-1374	3042	PACKING 12PB1	000001	000000
1137430421	1-1374	3042	PACKING 12PB1	000001	000000
1137430460	1-1374	3046	GASKET; OUTLET PIPE TO HS	000000	000009
1137700100	1-1377	0010	THERMOSTAT	000000	000000
1137700210	1-1377	0021	THERMOSTAT (82 C) E120	000000	000000
1137700370	1-1377	0037	THERMOSTAT	000000	000000
1137700371	1-1377	0037	THERMOSTAT	000000	000000
1137700411	1-1377	0041	THERMOSTAT (79 C) 12PB1	000000	000000
1137700412	1-1377	0041	THERMOSTAT (79 C) 12PB1	000000	000000
1137700420	1-1377	0042	THERMOSTAT	000002	000001
1137700550	1-1377	0055	THERMOSTAT (82 C) E120	000000	000000
1137700560	1-1377	0056	THERMOSTAT	000000	000000
1137700590	1-1377	0059	THERMOSTAT	000001	000001
1137700611	1-1377	0061	THERMOSTAT (71 C)	000000	000000
1137700620	1-1377	0062	THERMOSTAT	000000	000000
1137700621	1-1377	0062	THERMOSTAT	000000	000002
1137700670	1-1377	0067	THERMOSTAT (82 C) E120	000000	000014
1137700680	1-1377	0068	THERMOSTAT	000029	000000
1137700690	1-1377	0069	THERMOSTAT (76.5 C)	000000	000000
1137700691	1-1377	0069	THERMOSTAT (76.5 C)	000000	000020
1137700700	1-1377	0070	THERMOSTAT;WATR	000000	000388
1137700710	1-1377	0071	THERMOSTAT (76.5 C)	000000	000015
1137700730	1-1377	0073	THERMOSTAT	000054	000092
1137700740	1-1377	0074	THERMOSTAT (76.5 C)	000000	000004
1137700760	1-1377	0076	THERMOSTAT	000000	000000
1137700761	1-1377	0076	THERMOSTAT	000000	000004
1137700801	1-1377	0080	THERMOSTAT	000000	000021
1137700821	1-1377	0082	THERMOSTAT	000000	000003
1137700850	1-1377	0085	THERMOSTAT	000000	000003
1137700860	1-1377	0086	THERMOSTAT	000000	000004
1137700890	1-1377	0089	THERMOSTAT	000000	000000
1137700891	1-1377	0089	THERMOSTAT	000000	000155
1137700940	1-1377	0094	VALVE; THERMO,OIL	000000	000002
1137790050	1-1377	9005	SEALING; THERMOSTAT 12PB1	000000	000004
1137790070	1-1377	9007	SEAL;VLV	000000	000004
1137790090	1-1377	9009	STOPPER;VLV	000000	000004
1137790100	1-1377	9010	SUPPORT;OIL COO	000001	000000
1137790110	1-1377	9011	RING; SEAL	000000	000307
1141100292	1-1411	0029	COVER ASM; INLET	000000	000000
1141101552	1-1411	0155	COVER ASM; INLET	000000	000000
1141101807	1-1411	0180	MANIFOLD ASM	000000	000000

1141101808	1-1411	0180	MANIFOLD ASM	000000	000001
1141102130	1-1411	0213	PIPE ASM; INLET 6BD1	000000	000000
1141102240	1-1411	0224	COVER ASM; INLET 6RB1	000000	000000
1141102250	1-1411	0225	MANIFOLD ASM; INLET	000000	000002
1141102370	1-1411	0237	PIPE ASM; INLET	000000	000000
1141102540	1-1411	0254	ELBOW	000000	000000
1141102541	1-1411	0254	ELBOW	000000	000000
1141102671	1-1411	0267	COVER ASM.; INLET	000000	000000
1141102880	1-1411	0288	PIPE ASM; INLET	000000	000000
1141102940	1-1411	0294	PIPE ASM; INLET 6BD1	000000	000000
1141103000	1-1411	0300	PIPE; INL.	000000	000000
1141103327	1-1411	0332	MANIFOLD ASM; INTAKE	000000	000000
1141103420	1-1411	0342	PIPE ASM; INLET	000000	000000
1141103611	1-1411	0361	MANIFOLD; INLET 6BD1	000000	000000
1141103640	1-1411	0364	COVER; INLET	000000	000000
1141104012	1-1411	0401	PIPE;INL TURBO	000002	000000
1141104020	1-1411	0402	PIPE; INLET	000000	000000
1141104021	1-1411	0402	PIPE; INLET	000000	000000
1141104142	1-1411	0414	COVER; INLET	000000	000000
1141104262	1-1411	0426	INLET COVER	000000	000000
1141104370	1-1411	0437	PIPE;INLET,W/SEALING CUP	000000	000006
1141104720	1-1411	0472	PIPE ASM; INLET	000000	000000
1141104780	1-1411	0478	PIPE ASM; INLET	000000	000000
1141104810	1-1411	0481	COVER;INLET MANIFOL	000000	000000
1141104970	1-1411	0497	PIPE ASM.;INLET	000000	000000
1141104971	1-1411	0497	PIPE ASM.;INLET	000000	000000
1141105071	1-1411	0507	PIPE ASM; INLET	000000	000000
1141105120	1-1411	0512	PIPE ASM; INLET	000000	000000
1141105150	1-1411	0515	PIPE; INLET	000000	000000
1141105260	1-1411	0526	PIPE;INTAKE	000000	000000
1141106121	1-1411	0612	MANIFOLD;INL W/SEAL CUP	000000	000000
1141106130	1-1411	0613	PIPE; INL	000000	000000
1141106131	1-1411	0613	PIPE; INL	000000	000008
1141106200	1-1411	0620	MANIFOLD;INL W/SEAL CUP	000000	000002
1141110770	1-1411	1077	PIPE; INLET CLEANER-TURBO	000000	000000
1141111010	1-1411	1101	MANIFOLD ASM; INLET	000000	000000
1141111011	1-1411	1101	MANIFOLD ASM; INLET	000000	000000
1141111020	1-1411	1102	PIPE; INLET	000000	000000
1141111770	1-1411	1177	PIPE; INLET, TURBO-INTAKE	000000	000000
1141114341	1-1411	1434	MANIFOLD;INLET	000000	000000
1141114361	1-1411	1436	MANIFOLD;INLET	000000	000000
1141114380	1-1411	1438	PIPE; INL, CLNR-TURBO	000000	000000
1141114390	1-1411	1439	PIPE; INLET-TURBO	000000	000000
1141114810	1-1411	1481	PIPE; INLET	000000	000000
1141114820	1-1411	1482	PIPE; INLET	000000	000000
1141114830	1-1411	1483	PIPE; INLET E120	000000	000000
1141114840	1-1411	1484	PIPE; INLET, TURBO E120	000000	000000

1141115011	1-1411	1501	PIPE; INLET E120	000000	000000
1141115620	1-1411	1562	PIPE; INLET	000000	000000
1141115678	1-1411	1567	MANIFOLD ASM	000000	000000
1141115781	1-1411	1578	MANIFOLD ASM; INLET 6BB1	000000	000000
1141115783	1-1411	1578	MANIFOLD ASM; INLET 6BB1	000000	000001
1141116300	1-1411	1630	MANIFOLD; INLET	000000	000000
1141116321	1-1411	1632	PIPE; INLET	000000	000000
1141116322	1-1411	1632	PIPE; INLET	000000	000000
1141116411	1-1411	1641	PIPE ASM;INL	000000	000000
1141116412	1-1411	1641	PIPE; INL,TURBO	000002	000000
1141116421	1-1411	1642	PIPE; INLET	000000	000000
1141116422	1-1411	1642	PIPE; INLET	000001	000000
1141116580	1-1411	1658	PIPE; INLET	000000	000000
1141116611	1-1411	1661	MANIFOLD ASM; INLET, W/O	000000	000000
1141116612	1-1411	1661	MANIFOLD ASM; INLET, W/O	000000	000000
1141116620	1-1411	1662	PIPE; INLET MANIFOLD	000000	000000
1141116821	1-1411	1682	COVER; INLET	000000	000000
1141116940	1-1411	1694	PIPE; INLET	000000	000000
1141116950	1-1411	1695	MANIFOLD; INL, LB	000000	000000
1141117080	1-1411	1708	PIPE; INLET 6BD1	000001	000000
1141117130	1-1411	1713	PIPE; INLET, TURBO-A/CLNR	000000	000000
1141117360	1-1411	1736	MANIFOLD; INLET, WO/STUD	000000	000000
1141117363	1-1411	1736	MANIFOLD; INLET, WO/STUD	000000	000000
1141117373	1-1411	1737	MANIFOLD ASM; INLET	000000	000000
1141117383	1-1411	1738	MANIFOLD; INLET	000000	000000
1141117390	1-1411	1739	PIPE; INLET, SILENCER-TURBO	000000	000000
1141117561	1-1411	1756	MANIFOLD ASM; INLET 6BD1	000000	000000
1141117562	1-1411	1756	MANIFOLD ASM; INLET 6BD1	000000	000002
1141117642	1-1411	1764	PIPE; INLET AIR 6RB1	000000	000002
1141117655	1-1411	1765	DUCT; INLET	000000	000000
1141117656	1-1411	1765	DUCT; INLET	000000	000001
1141117730	1-1411	1773	PIPE; INLET	000000	000000
1141117920	1-1411	1792	MANIFOLD ASM; INLET W/O S	000000	000000
1141117930	1-1411	1793	PIPE; INLET E120	000000	000000
1141118140	1-1411	1814	MANIFOLD ASM; INLET	000000	000000
1141118143	1-1411	1814	MANIFOLD; INLET	000000	000000
1141118147	1-1411	1814	MANIFOLD; INLET	000000	000000
1141118410	1-1411	1841	PIPE; INLET	000000	000000
1141118640	1-1411	1864	PIPE; INLET, MANIF-CLEANE	000000	000000
1141119004	1-1411	1900	MANIFOLD; INLET	000000	000000
1141119091	1-1411	1909	MANIFOLD ASM; INLET W/O S	000000	000000
1141119360	1-1411	1936	PIPE; INLET	000000	000000
1141119370	1-1411	1937	PIPE; INLET	000000	000000
1141119640	1-1411	1964	PIPE; INLET	000000	000002
1141119960	1-1411	1996	PIPE; INL.	000000	000000
1141120060	1-1411	2006	COVER; INLET	000000	000000
1141120320	1-1411	2032	PIPE; INLET	000000	000000

1141120672	1-1411	2067	PIPE; INLET 6SA1	000000	000001
1141120790	1-1411	2079	PIPE; INLET	000000	000000
1141120860	1-1411	2086	PIPE; INLET	000000	000000
1141120883	1-1411	2088	MANIFOLD; INL	000000	000000
1141120885	1-1411	2088	MANIFOLD; INLET	000000	000000
1141120886	1-1411	2088	MANIFOLD; INLET	000000	000000
1141120887	1-1411	2088	MANIFOLD; INLET	000000	000001
1141120932	1-1411	2093	MANIFOLD ASM; INLET	000000	000000
1141120935	1-1411	2093	MANIFOLD ASM; INLET	000000	000000
1141121120	1-1411	2112	PIPE; INLET 6SA1	000000	000000
1141121130	1-1411	2113	COVER; INLET 6SA1	000000	000000
1141121780	1-1411	2178	PIPE; INLET, TUR	000000	000000
1141121781	1-1411	2178	PIPE; INLET, TURB	000000	000000
1141121800	1-1411	2180	MANIFOLD ASM; INLET	000000	000000
1141121801	1-1411	2180	MANIFOLD ASM; INLET	000000	000000
1141121802	1-1411	2180	MANIFOLD ASM; INLET	000000	000000
1141121803	1-1411	2180	MANIFOLD ASM; INLET	000000	000001
1141121830	1-1411	2183	COVER; INLET 6SA1T	000000	000000
1141121841	1-1411	2184	MANIFOLD; INLET	000000	000000
1141121842	1-1411	2184	MANIFOLD; INLET	000000	000000
1141121951	1-1411	2195	PIPE; INL.	000000	000000
1141121960	1-1411	2196	PIPE; INLET, TURBO	000000	000000
1141122071	1-1411	2207	COVER; INLET	000000	000000
1141122091	1-1411	2209	MANIFOLD ASM; INLET	000000	000000
1141122092	1-1411	2209	MANIFOLD ASM; INLET	000000	000000
1141122110	1-1411	2211	PIPE; INLET TURBO COVER	000000	000000
1141122150	1-1411	2215	PIPE; INLET	000000	000000
1141122240	1-1411	2224	PIPE; INLET	000000	000000
1141122300	1-1411	2230	PIPE; INL TURBO	000000	000000
1141122302	1-1411	2230	PIPE; INL TURBO	000000	000000
1141122310	1-1411	2231	PIPE; INLET 6SA1	000000	000000
1141122412	1-1411	2241	MANIFOLD; INLET	000000	000000
1141122450	1-1411	2245	MANIFOLD; INL.	000000	000000
1141122452	1-1411	2245	MANIFOLD; INL.	000000	000000
1141122731	1-1411	2273	MANIFOLD; INLET	000000	000000
1141122732	1-1411	2273	MANIFOLD; INLET	000000	000000
1141123050	1-1411	2305	PIPE; INTAKE	000000	000000
1141123110	1-1411	2311	PIPE; INLET	000000	000000
1141123120	1-1411	2312	PIPE; INLET, H=55	000000	000000
1141123130	1-1411	2313	PIPE; INLET	000000	000000
1141123140	1-1411	2314	PIPE; INLET	000000	000000
1141123150	1-1411	2315	PIPE; INLET	000000	000001
1141123190	1-1411	2319	PIPE; INLET	000000	000000
1141123220	1-1411	2322	PIPE; INLET	000000	000000
1141123230	1-1411	2323	PIPE; INLET	000000	000000
1141123301	1-1411	2330	PIPE; INLET	000000	000000
1141123330	1-1411	2333	PIPE; INLET, TUR	000000	000000

1141123550	1-1411	2355	PIPE; INLET, TURBO	000000	000009
1141123740	1-1411	2374	PIPE; INLET	000000	000000
1141123750	1-1411	2375	PIPE; INLET	000000	000000
1141123951	1-1411	2395	PIPE ASM; INLET	000000	000000
1141123952	1-1411	2395	PIPE ASM; INLET	000000	000000
1141123953	1-1411	2395	PIPE ASM; INLET	000000	000000
1141124000	1-1411	2400	PIPE; INLET	000000	000000
1141124011	1-1411	2401	MANIFOLD; INLET, W/O STUD	000000	000000
1141124040	1-1411	2404	MANIFOLD; INLET, WO/STUD	000000	000000
1141124041	1-1411	2404	MANIFOLD; INLET, WO/STUD	000000	000001
1141124050	1-1411	2405	MANIFOLD; INLET, WO/STUD	000000	000000
1141124051	1-1411	2405	MANIFOLD; INLET, WO/STUD	000000	000001
1141124490	1-1411	2449	PIPE; INTAKE	000000	000000
1141124940	1-1411	2494	PIPE; INLET, D=79	000001	000000
1141124951	1-1411	2495	PIPE; INLET	000000	000000
1141124970	1-1411	2497	PIPE; INL, CLNR-TURBO	000000	000000
1141125000	1-1411	2500	PIPE; INLET	000000	000000
1141125150	1-1411	2515	PIPE; INLET	000000	000000
1141125590	1-1411	2559	PIPE INLET CLEANER TURBO	000000	000000
1141125600	1-1411	2560	PIPE INLET TURBO INT DUCT	000000	000000
1141126030	1-1411	2603	PIPE; INTAKE	000000	000000
1141126031	1-1411	2603	PIPE; INTAKE	000001	000000
1141126150	1-1411	2615	PIPE ASM; INTAKE, TURBO	000000	000001
1141126220	1-1411	2622	PIPE; INTAKE	000000	000000
1141126221	1-1411	2622	PIPE; INTAKE	000000	000001
1141126280	1-1411	2628	PIPE; INTAKE	000000	000000
1141126281	1-1411	2628	PIPE; INTAKE	000001	000000
1141126310	1-1411	2631	PIPE; INLET	000001	000000
1141126560	1-1411	2656	PIPE; INLET, TURBO	000000	000000
1141127240	1-1411	2724	COVER; INL	000000	000001
1141127250	1-1411	2725	PIPE; INL TRBCHARGER TO I	000000	000000
1141127260	1-1411	2726	PIPE; INL	000000	000000
1141127300	1-1411	2730	MANIFOLD; INL	000000	000003
1141127391	1-1411	2739	PIPE; INL	000000	000000
1141127411	1-1411	2741	COVER; INL	000000	000003
1141127541	1-1411	2754	PIPE; INL	000000	000000
1141127551	1-1411	2755	PIPE; INL	000000	000003
1141127570	1-1411	2757	COVER	000000	000001
1141127670	1-1411	2767	PIPE; INL	000000	000000
1141127760	1-1411	2776	PIPE; INL	000005	000000
1141127791	1-1411	2779	MANIFOLD; INL	000000	000000
1141127810	1-1411	2781	PIPE; INL	000000	000000
1141127811	1-1411	2781	PIPE; INL	000000	000000
1141141740	1-1411	4174	PIPE E120	000000	000000
1141141741	1-1411	4174	PIPE; INLET CLEANER-TURBO	000000	000000
1141142422	1-1411	4242	DUCT; INL	000000	000000
1141142941	1-1411	4294	DUCT; AIR	000000	000000

1141143050	1-1411	4305	DUCT; INTAKE	000000	000000
1141143080	1-1411	4308	DUCT; AIR	000000	000000
1141143200	1-1411	4320	PIPE; INLET	000000	000000
1141143210	1-1411	4321	DUCT ASM:AIR	000000	000000
1141144460	1-1411	4446	DUCT ASM.; AIR	000000	000001
1141145380	1-1411	4538	PIPE; INL, TURBO	000001	000000
1141146670	1-1411	4667	PIPE; INL.	000000	000000
1141146731	1-1411	4673	DUCT ASM; INLET	000000	000000
1141146732	1-1411	4673	DUCT ASM; INLET	000000	000008
1141146741	1-1411	4674	DUCT; INLET	000000	000000
1141146960	1-1411	4696	DUCT; INLET 6SA1T	000000	000000
1141147211	1-1411	4721	PIPE; INLET TURBO-INL COV	000000	000000
1141147370	1-1411	4737	PIPE; INLET A, TURBO TO P	000000	000002
1141147380	1-1411	4738	PIPE; INLET B, PIPE A-MAN	000001	000000
1141147550	1-1411	4755	DUCT; AIR TURBO OUTER	000000	000000
1141147630	1-1411	4763	DUCT;INL,A/CL	000000	000005
1141148120	1-1411	4812	PIPE; INLET	000000	000000
1141148511	1-1411	4851	PIPE; INLET, TURBO TO INL	000000	000000
1141148600	1-1411	4860	DUCT; INLET	000000	000000
1141148601	1-1411	4860	DUCT; INLET	000000	000000
1141148670	1-1411	4867	PIPE; INLET A, TURBO TO P	000000	000000
1141148680	1-1411	4868	PIPE; INLET TURBO INL COV	000000	000000
1141148930	1-1411	4893	DUCT; INTAKE	000000	000000
1141148941	1-1411	4894	DUCT; INTAKE	000000	000000
1141149030	1-1411	4903	DUCT; INTAKE **UNLISTED**	000000	000000
1141149150	1-1411	4915	DUCT; INLET CLEANER-TURBO	000000	000000
1141149680	1-1411	4968	DUCT;INL,A/CL	000000	000000
1141149681	1-1411	4968	DUCT;INL,A/CL	000000	000000
1141149683	1-1411	4968	DUCT ASM; A/C	000000	000000
1141149881	1-1411	4988	DUCT; INLET	000000	000002
1141150080	1-1411	5008	PACKING	000000	000000
1141150090	1-1411	5009	PACKING; MANIFOLD	000000	000000
1141150310	1-1411	5031	PACKING; INLET COVER	000000	000000
1141150330	1-1411	5033	PACKING; INLET MANIFOLD	000000	000002
1141150350	1-1411	5035	PACKING	000000	000000
1141150351	1-1411	5035	PACKING	000000	000005
1141150360	1-1411	5036	GASKET; INL MANIF TO HD	000000	000000
1141150370	1-1411	5037	GSKT;INL PIPE	000000	000000
1141150390	1-1411	5039	PACKING; MANIFOLD	000000	000003
1141150420	1-1411	5042	PACKING; INLET COVER-CYL	000000	000001
1141150460	1-1411	5046	GASKET; FIX NUT	000000	000043
1141150520	1-1411	5052	GASKET; INL MANIF TO HD	000000	000000
1141150540	1-1411	5054	GSKT;INL PIPE	000000	000000
1141150590	1-1411	5059	PACKING;MANIF.-INLET PIPE	000020	000034
1141150610	1-1411	5061	GASKET;INTAKE MANIFOLD-HE	000014	000003
1141150631	1-1411	5063	GASKET; INL MANIF TO HD	000045	000000
1141150820	1-1411	5082	GASKET;INTAKE DUCT	000000	000015

1141150830	1-1411	5083	GASKET; INL MANIF TO HD	000000	000005
1141150860	1-1411	5086	GASKET; DUCT	000000	000005
1141150940	1-1411	5094	GASKET; PLUG,INT DUCT	000000	000000
1141150941	1-1411	5094	GASKET; PLUG,INT DUCT	000000	000011
1141150961	1-1411	5096	GASKET;INL MAINF TO HD	000000	000135
1141151040	1-1411	5104	GASKET; INL MANIF TO HD	000000	000057
1141151050	1-1411	5105	GASKET;INL MANIF TO HD	000000	000005
1141151060	1-1411	5106	GASKET;INL MANIF TO HD	000000	000005
1141170220	1-1411	7022	PACKING; A/CLNR.-INL. PIP	000000	000000
1141170250	1-1411	7025	PACKING 6RB1/E120	000000	000000
1141170331	1-1411	7033	PACKING	000000	000000
1141170370	1-1411	7037	PACKING 6RB1/E120	000000	000000
1141170371	1-1411	7037	PACKING 6RB1/E120	000008	000000
1141170410	1-1411	7041	PACKING; INTAKE	000167	000000
1141170430	1-1411	7043	PACKING; A/CLNR.-INL. PIP	000000	000000
1141170431	1-1411	7043	PACKING; A/CLNR.-INL. PIP	000019	000019
1141170440	1-1411	7044	GASKET; MANIFOLD	000000	000000
1141170510	1-1411	7051	PACKING	000000	000000
1141170550	1-1411	7055	GASKET;INLET PIPE TO MANF	000000	000000
1141170551	1-1411	7055	GASKET;INLET PIPE TO MANF	000000	000011
1141170620	1-1411	7062	PACKING; AIR DUCT	000000	000000
1141170700	1-1411	7070	PACKING; INTAKE	000000	000000
1141170790	1-1411	7079	GASKET	000000	000009
1141170870	1-1411	7087	GASKET;INTAKE DUCT	000004	000016
1141170900	1-1411	7090	PACKING, DUCT	000001	000000
1141171010	1-1411	7101	GASKET; PIPE	000000	000001
1141190360	1-1411	9036	BRACKET; INLET PIPE FIX	000000	000000
1141190530	1-1411	9053	BRACKET; INLET PIPE FIX	000000	000000
1141190720	1-1411	9072	BRACKET; INLET PIPE FIX	000000	000000
1141190910	1-1411	9091	STAY;INLET DUCT	000000	000000
1141191100	1-1411	9110	COVER; INLET E120	000001	000000
1141191160	1-1411	9116	STAY; DUCT-W/PUMP	000000	000000
1141191590	1-1411	9159	BRACKET; INLET PIPE 6RB1	000000	000000
1141191601	1-1411	9160	BRACKET; INLET 6RB1	000000	000000
1141191611	1-1411	9161	BRACKET; INLET PIPE 6RB1	000000	000000
1141191612	1-1411	9161	BRACKET; INLET PIPE 6RB1	000000	000000
1141191651	1-1411	9165	BRACKET; INLET PIPE	000000	000000
1141192000	1-1411	9200	BRACKET; INLET PIPE	000000	000000
1141192052	1-1411	9205	BRACKET; AIR BREATHER	000000	000000
1141192141	1-1411	9214	BRACKET; INLET PIPE	000000	000000
1141192150	1-1411	9215	PLATE; INLET CO	000000	000011
1141192220	1-1411	9222	BRACKET; INLET PIPE	000000	000000
1141192221	1-1411	9222	BRACKET; INLET PIPE	000000	000000
1141192410	1-1411	9241	STAY;SILENCER BRKT	000000	000000
1141192520	1-1411	9252	STAY; SILENCER BRKT.	000000	000000
1141192560	1-1411	9256	STOPPER: AIR DUCT	000000	000010
1141192600	1-1411	9260	BRACKET; INLET PIPE	000000	000000

1141192610	1-1411	9261	PLATE; INLET COVER	000000	000040
1141192650	1-1411	9265	BRACKET; BREATHER HOSE 6S	000000	000000
1141192660	1-1411	9266	BRACKET; BREATHER HOSE 6S	000000	000000
1141192742	1-1411	9274	BRACKET; INLET PIPE	000002	000000
1141192800	1-1411	9280	STAY; SILENCER BRKT	000000	000000
1141192810	1-1411	9281	STAY; SILENCER BRKT.	000000	000000
1141192820	1-1411	9282	BRACKET; INLET PIPE	000000	000000
1141193100	1-1411	9310	BRACKET; INLET PIPE	000000	000000
1141193300	1-1411	9330	BRACKET; INLET PIPE	000000	000000
1141194160	1-1411	9416	RUBBER	000000	000006
1141194422	1-1411	9442	BRACKET; INL PIPE ACL TU	000003	000000
1141194730	1-1411	9473	BRACKET; INL PIPE,ACL TO	000000	000003
1141194770	1-1411	9477	BRACKET; AIR PIPE	000000	000001
1141194780	1-1411	9478	BRACKET; INL PIPE	000000	000001
1141210500	1-1412	1050	PIPE ASM; BOOST	000002	000000
1141210610	1-1412	1061	PIPE ASM; BOOST	000000	000000
1141210830	1-1412	1083	PIPE; INLET	000000	000000
1141210841	1-1412	1084	PIPE ASM: AIR, BOOST	000000	000001
1141210850	1-1412	1085	PIPE; INLET	000000	000000
1141210910	1-1412	1091	PIPE; INLET	000000	000000
1141210950	1-1412	1095	PIPE; INLET	000000	000000
1141210970	1-1412	1097	PIPE ASM.;BOOST SENSOR	000000	000000
1141211010	1-1412	1101	PIPE ASM.;BOOST SENSOR	000000	000000
1141211140	1-1412	1114	PIPE ASM: AIR BOOST	000000	000001
1141211170			PIPE; AIR BOOST	000000	000001
1141211200			PIPE; AIR, BOOST	000000	000001
1141211220	1-1412	1122	PIPE;BOOST,DUCT-I/PUMP	000000	000010
1141211230	1-1412	1123	PIPE ASM.; BOOT SENSOR	000000	000000
1141211240	1-1412	1124	PIPE ASM.;BOOST SENSOR	000000	000000
1141211260	1-1412	1126	PIPE ASM.; BOOT SENSOR	000001	000000
1141211310	1-1412	1131	PIPE ASM; BOOST SENSOR	000000	000002
1141211611	1-1412	1161	PIPE; AIR BOOST	000000	000001
1141211870	1-1412	1187	PIPE; AIR,BOOST	000000	000001
1141220151	1-1412	2015	BRACKET	000000	000000
1141340020	1-1413	4002	DUCT; INTAKE	000000	000000
1141340022	1-1413	4002	DUCT; INTAKE	000000	000000
1141340390	1-1413	4039	DUCT; INLET	000000	000000
1141340392	1-1413	4039	DUCT; INLET	000000	000000
1141340490	1-1413	4049	PIPE; INLET-TURBO	000000	000002
1141341271	1-1413	4127	PIPE INLET TURBO INT DUCT	000000	000000
1141341272	1-1413	4127	PIPE INLET TURBO INT DUCT	000000	000001
1141341670	1-1413	4167	DUCT; INTAKE, CLNR-TURBO	000000	000000
1141341690	1-1413	4169	DUCT;INTAKE	000000	000000
1141341691	1-1413	4169	DUCT;INTAKE	000000	000002
1141341830	1-1413	4183	PIPE ASM;INTAKE,TURBO-INT	000000	000000
1141342230	1-1413	4223	DUCT; INL,CLEANER-TURB	000000	000003
1141342280	1-1413	4228	DUCT ASM; INTAKE	000000	000000

1141343230	1-1413	4323	DUCT; INL,TURBOCHARGER	000000	000001
1141343520	1-1413	4352	DUCT; AIR	000000	000016
1141343610	1-1413	4361	COVER;INL	000000	000003
1141344890	1-1413	4489	DUCT; INLET	000000	000001
1141344900	1-1413	4490	FLANGE; AIR DUCT	000000	000001
1141344910	1-1413	4491	PIPE; INL,TURBOCHARGER TO	000000	000001
1141344960	1-1413	4496	DUCT; AIR,TURBOCHARGER	000000	000001
1141370400	1-1413	7040	PACKING; PIPE	000000	000000
1141402132	1-1414	0213	MANIFOLD ASM; EXHAUST	000000	000000
1141402173	1-1414	0217	MANIFOLD ASM; EXHAUST R.R	000000	000000
1141402460	1-1414	0246	RIDGE;MAIN	000000	000000
1141403121	1-1414	0312	MANIFOLD ASM; EXHAUST	000000	000000
1141403810	1-1414	0381	MANIFOLD; EXH RR	000000	000004
1141410070	1-1414	1007	EXH. MANIFOLD	000000	000000
1141410080	1-1414	1008	EXH. MANIFOLD	000000	000001
1141410110	1-1414	1011	MANIFOLD ASM; EXHAUST E12	000001	000000
1141410561	1-1414	1056	MANIFOLD ASM; EXHAUST UME	000000	000001
1141410793	1-1414	1079	MANIFOLD; EXH, RR-LH	000000	000000
1141410803	1-1414	1080	MANIFOLD; EXH, RR-RH	000000	000000
1141411400	1-1414	1140	MANIFOLD CTR	000000	000000
1141413374	1-1414	1337	MANIFOLD ASM; EXHAUST E12	000000	000000
1141413384	1-1414	1338	MANIFOLD ASM; EXHAUST E12	000000	000000
1141413385	1-1414	1338	MANIFOLD ASM; EXHAUST E12	000000	000001
1141413394	1-1414	1339	MANIFOLD ASM; EXHAUST E12	000000	000000
1141413395	1-1414	1339	MANIFOLD ASM; EXHAUST E12	000000	000001
1141413780	1-1414	1378	MANIFOLD;EXH R	000000	000000
1141413850	1-1414	1385	MANIFOLD;EXH R	000000	000000
1141413910	1-1414	1391	MANIFOLD ASM; EXHAUST	000000	000000
1141414040	1-1414	1404	MANIFOLD; EXH, FRT-RH	000000	000000
1141414560	1-1414	1456	EXH MANIFOLD;R	000000	000000
1141414570	1-1414	1457	EXH MANIFOLD;R	000000	000000
1141415402	1-1414	1540	MANIFOLD ASM; EXHAUST 6RB	000000	000000
1141415412	1-1414	1541	MANIFOLD ASM; EXHAUST 6RB	000000	000000
1141415420	1-1414	1542	ADAPTOR; EXHAUST MANIFOLD	000000	000000
1141415670	1-1414	1567	MANIFOLD ASM; EXHAUST	000000	000000
1141415671	1-1414	1567	MANIFOLD ASM; EXHAUST	000000	000005
1141415722	1-1414	1572	MANIFOLD ASM; EXHAUST FRO	000000	000001
1141415743	1-1414	1574	MANIFOLD ASM: EXHAUST	000000	000001
1141416121	1-1414	1612	MANIFOLD ASM; (DISCONTINU	000000	000000
1141416140	1-1414	1614	MANIFOLD ASM; EXHAUST W/O	000000	000000
1141416150	1-1414	1615	MANIFOLD ASM; EXHAUST W/O	000000	000000
1141416172	1-1414	1617	MANIFOLD ASM; EXHAUST, CE	000000	000000
1141416250	1-1414	1625	MANIFOLD; EXH, FTR	000000	000000
1141416270	1-1414	1627	MANIFOLD;EXH	000000	000000
1141416271	1-1414	1627	MANIFOLD;EXH	000000	000000
1141416291	1-1414	1629	MANIFOLD;EXH	000000	000000
1141416292	1-1414	1629	MANIFOLD;EXH	000000	000000

1141416293	1-1414	1629	MANIFOLD;EXH	000000	000000
1141416294	1-1414	1629	MANIFOLD;EXH	000000	000003
1141416313	1-1414	1631	MANIFOLD ASM; EXHAUST	000000	000001
1141416591	1-1414	1659	MANIFOLD ASM; EXHAUST FRO	000000	000000
1141416690	1-1414	1669	MANIFOLD ASM; EXHAUST R.R	000000	000000
1141416710	1-1414	1671	FLANGE; EXHAUST	000000	000000
1141416720	1-1414	1672	MANIFOLD ASM; EXHAUST	000000	000001
1141416730	1-1414	1673	MANIFOLD; EXH, RR-LH	000000	000000
1141416740	1-1414	1674	MANIFOLD; EXH, RR-RH	000000	000000
1141416830	1-1414	1683	PIPE; LEAD,TURBO	000000	000000
1141416852	1-1414	1685	MANIFOLD; EXH	000000	000000
1141416853	1-1414	1685	MANIFOLD; EXH	000000	000000
1141416854	1-1414	1685	MANIFOLD; EXH	000000	000005
1141416900	1-1414	1690	EXHAUST;MANIFOLD	000000	000000
1141416910	1-1414	1691	PIPE; EXHAUST TURBO	000000	000000
1141416920	1-1414	1692	MANIFOLD ASM; EXHAUST	000000	000000
1141416921	1-1414	1692	MANIFOLD ASM; EXHAUST	000000	000000
1141416940	1-1414	1694	MANIFOLD; EXH,C	000000	000000
1141416941	1-1414	1694	MANIFOLD;EXH,C	000000	000001
1141417001	1-1414	1700	MANIFOLD ASM; EXHAUST RR	000000	000000
1141417002	1-1414	1700	MANIFOLD ASM; EXHAUST RR	000000	000000
1141417010	1-1414	1701	PIPE; LEAD, TURBO	000002	000003
1141417041	1-1414	1704	MANIFOLD ASM	000000	000000
1141417042	1-1414	1704	MANIFOLD ASM	000000	000004
1141417050	1-1414	1705	MANIFOLD ASM; EXHAUST RR	000000	000000
1141417150	1-1414	1715	MANIFOLD;	000000	000000
1141417151	1-1414	1715	MANIFOLD;	000000	000001
1141417561	1-1414	1756	PIPE; LEAD, TURBO	000002	000001
1141417850	1-1414	1785	MANIFOLD ASM; EXHAUST RR	000000	000004
1141417851	1-1414	1785	MANIFOLD ASM; EXHAUST RR	000000	000000
1141417900	1-1414	1790	MANIFOLD;EXH	000000	000000
1141417901	1-1414	1790	MANIFOLD;EXH	000000	000000
1141417912	1-1414	1791	MANIFOLD; EXH., WO/STUD	000000	000000
1141418040	1-1414	1804	MANIFOLD; EXH. W/O STUD	000000	000000
1141418041	1-1414	1804	MANIFOLD; EXH. W/O STUD	000000	000000
1141418042	1-1414	1804	MANIFOLD; EXH. W/O STUD	000000	000001
1141418810	1-1414	1881	MANIFOLD;EXH, FRT	000001	000000
1141418830	1-1414	1883	MANIFOLD;EXH, RR	000001	000000
1141419010	1-1414	1901	MANIFOLD;EXH.,WO/STUD	000000	000001
1141419030	1-1414	1903	MANIFOLD; EXH	000000	000001
1141419041	1-1414	1904	MANIFOLD; EXHAUST	000000	000000
1141419380	1-1414	1938	MANIFOLD;EXH, CENTER	000001	000000
1141419600	1-1414	1960	MANIFOLD; EXHAUST	000000	000001
1141419671	1-1414	1967	MANIFOLD; EXH FRT	000000	000004
1141419672	1-1414	1967	MANIFOLD; EXH FRT	000000	000000
1141419970	1-1414	1997	ADAPTER; EXH PIPE	000000	000000
1141419990	1-1414	1999	MANIFOLD;EXH, FRT	000002	000000

1141420010	1-1414	2001	MANIFOLD;EXH, RR	000000	000011
1141420190	1-1414	2019	EXH MANIFOLD	000000	000002
1141420280	1-1414	2028	MANIFOLD; EXH,RR	000000	000000
1141420301	1-1414	2030	MANIFOLD; EXH,FRT	000000	000000
1141420302	1-1414	2030	MANIFOLD; EXH,FRT	000000	000006
1141420310	1-1414	2031	MANIFOLD; EXH, CENTER	000000	000000
1141420311	1-1414	2031	MANIFOLD; EXH, CENTER	000000	000000
1141420320	1-1414	2032	MANIFOLD; EXH,FRT	000000	000002
1141420330	1-1414	2033	MANIFOLD; EXH,CENTER	000000	000003
1141420340	1-1414	2034	MANIFOLD; EXH,FRT	000000	000004
1141420350	1-1414	2035	PIPE; LEAD,TURBOCHARGER	000000	000001
1141441060	1-1414	4106	CONNECTOR; TURBO UME120	000000	000000
1141441431	1-1414	4143	PIPE; EXHAUST 6BB1	000000	000000
1141442131	1-1414	4213	ADAPTER; EXHAUST PIPE 6BD	000002	000000
1141442150	1-1414	4215	PIPE; EXHAUST W/SEAL	000000	000000
1141442341	1-1414	4234	PIPE, EXHAUST	000000	000000
1141442381	1-1414	4238	ADAPTOR; TURBO 6BD1T	000000	000001
1141442551	1-1414	4255	ADAPTOR; MANIFOLD 6BD1 TU	000000	000003
1141442561	1-1414	4256	ADAPTER	000000	000000
1141442571	1-1414	4257	ADAPTOR; TURBO	000000	000000
1141442572	1-1414	4257	ADAPTOR; TURBO	000000	000000
1141442580	1-1414	4258	ADAPTER;EXH	000000	000007
1141443910	1-1414	4391	DUCT; EXHAUST TURBO	000001	000000
1141443950	1-1414	4395	CONNECTOR; TURBO	000000	000000
1141443970	1-1414	4397	PIPE; EXHAUST TURBO 6SA1T	000000	000002
1141444111	1-1414	4411	PIPE; EXHAUST TURBO OUT 6	000000	000000
1141444261	1-1414	4426	ADAPTER	000000	000000
1141444262	1-1414	4426	ADAPTER	000000	000000
1141444263	1-1414	4426	ADAPTER	000000	000000
1141444264	1-1414	4426	ADAPTER	000001	000000
1141444310	1-1414	4431	ADAPTER; EXHAUST PIPE	000000	000000
1141444311	1-1414	4431	ADAPTER; EXHAUST PIPE	000000	000001
1141444320	1-1414	4432	TURBO ADAPTER	000003	000001
1141444340	1-1414	4434	PIPE; EXHAUST	000000	000001
1141444360	1-1414	4436	PIPE; EXHAUST	000000	000000
1141444420	1-1414	4442	PIPE; EXHAUST 6SA1T	000001	000000
1141444500	1-1414	4450	ADAPTER; EXH PI	000000	000001
1141444520	1-1414	4452	ADAPTER; EXHAUST PIPE C	000000	000000
1141444620	1-1414	4462	ELBO; EXHAUST	000000	000000
1141444810	1-1414	4481	ADAPTOR; EXHAUST PIPE	000000	000000
1141444811	1-1414	4481	ADAPTOR; EXHAUST PIPE	000000	000000
1141444841	1-1414	4484	ADAPTER	000000	000000
1141445130	1-1414	4513	ADAPTER; TURBO., EXH.PIPE	000000	000000
1141445620	1-1414	4562	DUCT; EXH. TURBO	000000	000000
1141445630	1-1414	4563	ADAPTER; TURBO., EXH.PIPE	000000	000000
1141445632	1-1414	4563	ADAPTER; TURBO., EXH.PIPE	000000	000000
1141446050	1-1414	4605	ADAPTER;EXH PIPE	000000	000003

1141446070	1-1414	4607	ADAPTER; EXH. PIPE	000000	000000
1141446323	1-1414	4632	PIPE; EXH,TURBOCHARGER	000001	000000
1141446324	1-1414	4632	PIPE; EXH,TURBOCHARGER	000000	000001
1141446581	1-1414	4658	PIPE; EXH,TURBOCHARGER	000000	000003
1141446590	1-1414	4659	PIPE; EXH,TURBOCHARGER	000000	000001
1141450070	1-1414	5007	GASKET; ADAPTOR	000000	000000
1141450080	1-1414	5008	GASKET; BRAKE E120	000023	000000
1141450170	1-1414	5017	GASKET; EXH. PIPE MAN.	000000	000000
1141450210	1-1414	5021	GSKT;TURBO,EXH	000000	000000
1141450220	1-1414	5022	GASKET; SUPPORT-EXHAUST P	000000	000000
1141450230	1-1414	5023	GASKET; EXH. MANIF. -ADAP	000000	000000
1141450270	1-1414	5027	GASKET; TURBO	000001	000001
1141450300			GASKET; MANIFOLD	000000	000000
1141450380			GASKET; MANIFOLD	000000	000000
1141450390	1-1414	5039	GASKET,MANIFOLD	000000	000000
1141450540	1-1414	5054	GASKET	000000	000007
1141450550	1-1414	5055	GASKET; FLANGE UME120	000000	000000
1141450620	1-1414	5062	GASKET; EXHAUST MAINFOLD	000000	000000
1141450690	1-1414	5069	GASKET; EXHAUST PIPE	000000	000016
1141450770	1-1414	5077	GASKET; EXHAUST PIPE	000000	000000
1141450820	1-1414	5082	GASKET; EXHAUST MAINFOLD	000000	000000
1141450830	1-1414	5083	GSKT;EXH MANIF	000003	000020
1141450840	1-1414	5084	GASKET; EXHAUST	000007	000000
1141450860	1-1414	5086	GASKET; COVER	000000	000002
1141450900	1-1414	5090	GASKET; DUCT 6RB1	000000	000003
1141450910	1-1414	5091	GASKET; ADAPTOR	000000	000024
1141451030	1-1414	5103	GASKET 6RB1	000000	000000
1141451060	1-1414	5106	GASKET; EX	000000	000000
1141451120	1-1414	5112	GASKET; EXHAUST PIPE	000003	000000
1141451140	1-1414	5114	GSKT;EXH MANIF	000000	000055
1141451151	1-1414	5115	GASKET; EXHAUST MAINFOLD	000000	000013
1141451210	1-1414	5121	GASKET; TURBOCHARGER	000000	000008
1141451211	1-1414	5121	GASKET; TURBOCHARGER	000000	000000
1141451220	1-1414	5122	GASKET; TURBO	000000	000042
1141451261	1-1414	5126	GASKET; EXHAUST MAINFOLD	000000	000000
1141451280	1-1414	5128	GASKET; EXH. PIPE TO FLAN	000002	000000
1141451370	1-1414	5137	GASKET; EXHAUST MAN.	000008	000004
1141451380	1-1414	5138	BASKET; EXH MANIF TO HD	000000	000005
1141451390	1-1414	5139	GASKET; EXHAUST PIPE	000000	000003
1141451400	1-1414	5140	GASKET;TURBO TO EXH MANIF	000054	000079
1141451401	1-1414	5140	GASKET;TURBO TO EXH MANIF	000000	000000
1141451410	1-1414	5141	GASKET; LEAD PIPE TO TURB	000000	000010
1141451440	1-1414	5144	GASKET; EX	000000	000143
1141451441	1-1414	5144	GASKET; EX	000000	000000
1141451490	1-1414	5149	GASKET; TURBOCHARGER TO E	000001	000000
1141451500	1-1414	5150	GASKET; MANIFOLD-PIPE	000000	000009
1141451550	1-1414	5155	GASKET; EXHAUST MAINFOLD	000000	000014

1141451560	1-1414	5156	GASKET: TURBO-LEAD PIPE	000000	000005
1141451570	1-1414	5157	GSKT;TURBO	000000	000003
1141451660	1-1414	5166	EXH PIPE GASKET	000035	000000
1141451670	1-1414	5167	GSKT; ENH MANIF	000001	000001
1141451711	1-1414	5171	GASKET; ADAPTER-EXH.PIPE	000000	000002
1141451750	1-1414	5175	GASKET: TURBO-EX PIPE	000000	000005
1141451821	1-1414	5182	GASKET;EXH MANIF TO HD	000000	000120
1141451822	1-1414	5182	GASKET;EXH MANIF TO HD	000000	000000
1141451823	1-1414	5182	GASKET;EXH MANIF TO HD	000000	000000
1141451840	1-1414	5184	GASKET;MANIFOLD-PIPE	000000	000058
1141451850	1-1414	5185	GASKET;EXHAUST	000000	000000
1141451870	1-1414	5187	GASKET; TURBOCH	000000	000085
1141451910	1-1414	5191	GASKET; EXH MANIF TO LEAD	000000	000000
1141451920	1-1414	5192	GASKET;EXH.PIPE	000000	000003
1141452010	1-1414	5201	GASKET; EXH MANIF TO LEAD	000000	000001
1141452030	1-1414	5203	GASKET;TURBOCHARGER TO EX	000000	000106
1141452050	1-1414	5205	GASKET; EXH MANIF	000000	000003
1141452051	1-1414	5205	GASKET; EXH MANIF	000000	000000
1141452052	1-1414	5205	GASKET; EXH MANIF	000000	000000
1141452081	1-1414	5208	GASKET; TURBOCHAR	000000	000002
1141460030	1-1414	6003	GASKET 6SA1	000012	000000
1141490092	1-1414	9009	COVER; MANIFOLD UME120	000000	000000
1141490100	1-1414	9010	PACKING UME120	000027	000000
1141490210	1-1414	9021	TUBE;DIST.RAD.	000000	000022
1141490400	1-1414	9040	RING; SEAL,EXHAUST	000000	000000
1141490401	1-1414	9040	RING; SEAL,EXHAUST	000000	000028
1141490420	1-1414	9042	WASHER; EXH MANIF	000000	000598
1141490481	1-1414	9048	COLLAR; DISTANC	000000	000429
1141490740	1-1414	9074	RING; SEAL, TURBO	000000	000000
1141490830	1-1414	9083	RING; SEAL	000000	000000
1141490831	1-1414	9083	RING; SEAL	000000	000002
1141490841	1-1414	9084	RING; SEAL	000000	000000
1141490842	1-1414	9084	RING; SEAL	000000	000040
1141490970	1-1414	9097	FLANGE; EXH/CONNECTOR	000000	000000
1141491110	1-1414	9111	RING; SEAL	000000	000011
1141491171	1-1414	9117	RING; SEAL, EXHAUST PIPE	000000	000003
1141491180	1-1414	9118	COLLAR;DISTANCE,EXH.MANIF	000000	000000
1141491200	1-1414	9120	WASHER;EXH.MANI	000000	000173
1141491240	1-1414	9124	BRACKET; EXHAUST DUCT	000000	000000
1141491280	1-1414	9128	COVER; EXHAUST MANIFOLD	000000	000000
1141491301	1-1414	9130	BRACKET;ADAPTER	000000	000000
1141491311	1-1414	9131	PIPE; SEAL,EXH MANIF	000000	000012
1141491321	1-1414	9132	RING; SEAL,EXH MANIF	000000	000000
1141491470	1-1414	9147	BRACKET; ADAPTOR FIX	000000	000000
1141491480	1-1414	9148	BRACKET; ADAPTOR FIX	000000	000001
1141491510	1-1414	9151	RING; SEAL,EXH MANIF	000072	000162
1141491520	1-1414	9152	COVER; MANIFOLD UME120	000004	000000

1141491522	1-1414	9152	COVER; MANIFOLD UME120	000000	000000
1141491660	1-1414	9166	SPACER EXH MANIFOLD	000000	000000
1141491670	1-1414	9167	COVER;WASTE GATE	000001	000000
1141491701	1-1414	9170	COLLAR;DISTANCE,EXH.MANIF	000000	000119
1141491840	1-1414	9184	RING;SEAL, EXH MANIF	000055	000348
1141492010	1-1414	9201	RING, SEAL, EXH MANIF	000000	000014
1141492120	1-1414	9212	BRACKET;ADAPTER FIX	000000	000000
1141492193	1-1414	9219	BRACKET; EXH PIPE	000000	000011
1141492630	1-1414	9263	COLLAR;DIST,EXH MANIF	000000	000069
1141492650	1-1414	9265	BRACKET; EXH PIPE	000000	000002
1141492660	1-1414	9266	COVER; EXH MANIF	000000	000001
1141492680	1-1414	9268	GASKET; COVER	000000	000001
1141510050	1-1415	1005	PIPE; EXH. PIPE	000000	000000
1141591090	1-1415	9109	BRACKET; EXH PIPE	000000	000001
1141591100	1-1415	9110	BRACKET; EXH PIPE	000000	000001
1141810080	1-1418	1008	PROTECTOR; HEAT RUBBER HO	000000	000000
1141810353	1-1418	1035	PROTECTOR;HEAT	000000	000000
1141810383	1-1418	1038	PROTECTOR;HEAT	000000	000000
1141810561	1-1418	1056	HEAT PROTECTOR	000000	000000
1141810960	1-1418	1096	PROTECTOR; HEAT	000000	000000
1141811060	1-1418	1106	PROTECTOR; HEAT 6RB1	000000	000001
1141811191	1-1418	1119	PROTECTOR; HEAT 6RB1	000001	000000
1141811230	1-1418	1123	HEAT PROTECTOR	000000	000000
1141811411	1-1418	1141	PROTECTOR;HEAT	000000	000000
1141811420	1-1418	1142	PROTECTOR;HEAT	000000	000008
1141811561	1-1418	1156	PROTECTOR; HEAT	000000	000003
1141811700	1-1418	1170	PROTECTOR; HEAT	000000	000002
1141811750	1-1418	1175	PROTECTOR; HEAT	000000	000000
1141811831	1-1418	1183	PROTECTOR; HEAT,SEAL	000000	000000
1141811911	1-1418	1191	PROTECTOR; HEAT 6RB1T	000019	000000
1141812190	1-1418	1219	PROTECTOR; HEAT	000000	000000
1141812210	1-1418	1221	PROTECTOR;HEAT,HOSE,AIR D	000000	000000
1141812360	1-1418	1236	PROTECTOR; HEAT	000000	000002
1141812390	1-1418	1239	PROTECTOR;HEAT	000000	000002
1141812420	1-1418	1242	PROTECTOR; HEAT	000002	000000
1141812440	1-1418	1244	PROTECTOR; HEAT, HOSE, AI	000000	000000
1141812720	1-1418	1272	PROTECTOR, HEAT HOSE AIR	000000	000003
1141813140	1-1418	1314	INSULATOR; HEAT	000000	000001
1141813530	1-1418	1353	INSULATOR; HEAT,LEAD PIPE	000000	000001
1141890070	1-1418	9007	SUPERSEDED**MOUNT	000000	000000
1141890080	1-1418	9008	SUPERSEDED**MOUNT	000000	000000
1141890100	1-1418	9010	MOUNT E120/DH100	000002	000002
1141890190	1-1418	9019	BRACKET;M/PRO.	000000	000000
1141890650	1-1418	9065	BRACKET; HEAT PROTECTOR 6	000000	000000
1141890670	1-1418	9067	BRACKET; HEAT PROTECTOR 6	000000	000000
1142100300	1-1421	0030	CLEANER ASM; AIR E120	000000	000000
1142100301	1-1421	0030	CLEANER ASM; AIR E120	000000	000000

1142100702	1-1421	0070	CLEANER ASM; AIR E120	000000	000000
1142100710	1-1421	0071	CLEANER ASM; AIR E120	000000	000000
1142100711	1-1421	0071	CLEANER ASM; AIR E120	000000	000000
1142100990	1-1421	0099	CLEANER ASM; AIR DA SERIE	000000	000001
1142102360	1-1421	0236	CLEANER ASM; AIR	000000	000000
1142102461	1-1421	0246	CLEANER ASM AIR	000000	000000
1142102462	1-1421	0246	CLEANER ASM AIR	000000	000000
1142102522	1-1421	0252	CLEANER ASM; AIR	000000	000000
1142102690	1-1421	0269	CLEANER ASM; AIR	000000	000000
1142102850	1-1421	0285	CLEANER ASM; AIR	000000	000000
1142103370	1-1421	0337	CLEANER ASM; AIR	000000	000000
1142103500	1-1421	0350	CLEANER ASM; AIR	000000	000000
1142103750	1-1421	0375	CLEANER ASM;AIR	000000	000000
1142103885	1-1421	0388	CLEANER ASM; AIR	000000	000000
1142103886	1-1421	0388	CLEANER ASM; AIR	000000	000002
1142104681	1-1421	0468	CLEANER ASM; AIR	000000	000000
1142104682	1-1421	0468	CLEANER ASM; AIR	000000	000001
1142105161	1-1421	0516	CLEANER ASM; AIR	000000	000000
1142105430	1-1421	0543	CLEANER ASM; AIR	000000	000002
1142105810	1-1421	0581	CLEANER ASM; AIR	000000	000000
1142105910	1-1421	0591	CLEANER ASM.;	000000	000000
1142106021	1-1421	0602	CLEANER ASM; AIR	000000	000000
1142106130	1-1421	0613	FILLER ASM: AIR	000000	000001
1142106410	1-1421	0641	CLEANER ASM.; AIR, FIG.74	000000	000000
1142106920	1-1421	0692	CLEANER ASM;	000000	000000
1142110200	1-1421	1020	COVER ASM; AIR CLEANER	000000	000000
1142110580	1-1421	1058	BODY ASM 6RB1	000000	000000
1142110601	1-1421	1060	BODY ASM;AIR	000000	000000
1142110670	1-1421	1067	BODY ASM; AIR CLEANER	000000	000000
1142111170	1-1421	1117	BODY ASM; AIR CLEANER	000000	000000
1142111180	1-1421	1118	COVER ASM; AIR CLEANER	000000	000000
1142111322	1-1421	1132	PINION	000000	000000
1142111700	1-1421	1170	BODY	000000	000000
1142111720	1-1421	1172	BODY; PRE CLEANER	000000	000000
1142111770	1-1421	1177	BODY ASM; AIR C	000000	000000
1142111790	1-1421	1179	BODY ASM; AIR CLEANER	000000	000000
1142112300	1-1421	1230	BODY ASM.;AIR CLEANER	000000	000000
1142120120	1-1421	2012	PAN; DUST	000000	000000
1142120190	1-1421	2019	COVER W/PACKING	000000	000000
1142120410	1-1421	2041	PAN ASM; DUST W/BAFFLE	000000	000000
1142120440	1-1421	2044	CVR ASM;A/CL	000000	000001
1142120940	1-1421	2094	COVER; PRE CLEANER	000000	000000
1142150050	1-1421	5005	ELEMENT; AIR CLEANER E120	000000	000000
1142150051	1-1421	5005	ELEMENT; AIR CLEANER E120	000000	000000
1142150200	1-1421	5020	ELEMENT; AIR CLEANER	000000	000000
1142150230	1-1421	5023	ELEMENT; AIR CLEANER	000000	000000
1142150231	1-1421	5023	ELEMENT; AIR CLEANER	000000	000000

1142150240	1-1421	5024	ELEMENT;AIR CLEANER 4BD1	000000	000004
1142150241	1-1421	5024	ELEMENT; AIR CLEANER 4BD1	000000	000000
1142150320	1-1421	5032	ELEMENT ASM	000031	000000
1142150340	1-1421	5034	ELEMENT; AIR CLEANER 6RB1	000000	000000
1142150341	1-1421	5034	ELEMENT; AIR CLEANER 6RB1	000000	000006
1142150360	1-1421	5036	ELEMENT; AIR CLEANER	000000	000019
1142150461	1-1421	5046	ELEMENT; AIR CLEANER 6RB1	000000	000000
1142150470	1-1421	5047	ELEMENT; A/CLEANER	000000	000000
1142150530	1-1421	5053	ELEMENT; AIR CLEANER	000000	000000
1142150531	1-1421	5053	ELEMENT; AIR CLEANER	000000	000000
1142150540	1-1421	5054	ELEMENT; A/CLEANER	000000	000000
1142150541	1-1421	5054	ELEMENT; A/CLEANER	000000	000001
1142150591	1-1421	5059	ELEMENT; AIR CLEANER	000000	000000
1142150600	1-1421	5060	AIR FILTER	000000	000000
1142150750	1-1421	5075	ELIMENT OUTER	000000	000000
1142151250	1-1421	5125	FILTER	000043	000000
1142151510	1-1421	5151	FILTER; ACL,INNER	000000	000000
1142151520	1-1421	5152	ELEMENT; ACL,OUTER FILTER	000000	000000
1142151530	1-1421	5153	AIR FILTER	000001	000000
1142151610	1-1421	5161	ELEMENT; AIR CLEANER UM6B	000000	000003
1142151620	1-1421	5162	ELEMENT; A/CLEANER	000000	000000
1142151680	1-1421	5168	FILLER: AIR6)	000000	000003
1142151710	1-1421	5171	AIR FILTER	000000	000001
1142151720	1-1421	5172	ELEMENT;A/FILTER	000000	000000
1142151730	1-1421	5173	ELEMENT ASM; AIR CLEANER	000000	000000
1142151750	1-1421	5175	ELEMENT; A/CLEANER	000000	000000
1142151830	1-1421	5183	FILTER	000000	000002
1142151880	1-1421	5188	FILTER;ACL OUTER	000000	000008
1142152081	1-1421	5208	SILENCER	000000	000000
1142152090	1-1421	5209	PRECLEANER	000000	000003
1142152100			AIR FILTER ELEMENT	000000	000001
1142152130	1-1421	5213	AIR FILTER ELEMENT	000000	000013
1142152140	1-1421	5214	AIR FILTER; TURBO	000000	000010
1142152260	1-1421	5226	FILTER; ACL, INNER	000000	000000
1142152270	1-1421	5227	FILTER; ACL, OUTER	000000	000000
1142170030	1-1421	7003	NUT; WING,ELEME	000000	000005
1142170260	1-1421	7026	NUT; WING	000000	000000
1142170270	1-1421	7027	NUT; WING	000000	000000
1142170330	1-1421	7033	NUT; WING ELEMENT	000000	000000
1142170360	1-1421	7036	NUT; WING	000000	000001
1142170490	1-1421	7049	NUT; WING,ELEMENT	000000	000007
1142170500	1-1421	7050	NUT ASM;A/CL	000000	000005
1142190320	1-1421	9032	GASKET; ELEMENT	000000	000000
1142190640	1-1421	9064	BOLT; HANGER, DUST PAN FI	000000	000000
1142190650	1-1421	9065	VALVE; VACUATOR 6RB1	000009	000000
1142190750	1-1421	9075	VALVE ASM;VACUATOR	000000	000000
1142191020	1-1421	9102	VALVE; VACUATOR 3KC1	000000	000009

1142191090	1-1421	9109	BAFFLE ASM.	000000	000000
1142191130	1-1421	9113	CAP ASM; AIR INLET 6RB1	000000	000000
1142191140	1-1421	9114	PAN ASM; DUST 6RB1	000000	000000
1142191150	1-1421	9115	JOINT ASM.; HOSE	000000	000000
1142191170	1-1421	9117	BAND; AIR CLEANER FIX	000000	000000
1142191180	1-1421	9118	WASHER; SEAL,WING NUT	000000	000008
1142191290	1-1421	9129	VALVE;VACUATOR	000000	000001
1142191400	1-1421	9140	VLV;VACUATOR	000000	000000
1142191410	1-1421	9141	GSKT;CVR,A/CL	000000	000000
1142191470	1-1421	9147	GASKET; CVR. A/CL	000000	000002
1142191490	1-1421	9149	VALVE; VACUATOR	000000	000000
1142191530	1-1421	9153	GASKET; COVER T	000000	000000
1142191560	1-1421	9156	WASHER; SEAL,WING NUT	000001	000111
1142191880	1-1421	9188	HOOD ASM; AIR INLET	000000	000000
1142191920	1-1421	9192	VALVE;VACUATOR	000000	000016
1142191940	1-1421	9194	SCREEN CAP;AIR CL.	000000	000000
1142191970	1-1421	9197	SLEEVE ASM; PRE CLEANER	000000	000000
1142192000	1-1421	9200	HOOD; AIR INLET, W/BOLT	000000	000000
1142192040	1-1421	9204	CLAMP; VALVE	000000	000000
1142192120	1-1421	9212	INDICATOR; SERVICE	000000	000015
1142192180	1-1421	9218	BAND; A/CLEANER	000000	000000
1142192340	1-1421	9234	INDICATOR ASM.; INL.PIPE	000000	000000
1142192410	1-1421	9241	PAN;DUST	000000	000000
1142192570	1-1421	9257	CAP ASM.	000000	000000
1142192680	1-1421	9268	CLAMP; TURBINE HSG, TUR	000004	000004
1142250110	1-1422	5011	PLATE;SEAL 6SA1T	000000	000000
1142300470	1-1423	0047	BAFFLE; AIR CLEANER	000001	000001
1142300750	1-1423	0075	CAP ASM; AIR CLEANER	000000	000002
1142300821	1-1423	0082	TUBE; EXTENSION, D=102	000000	000000
1142311920	1-1423	1192	HOSE; RUBBER AIR	000004	000000
1142312031	1-1423	1203	HOSE; RUBBER AIR E120	000000	000000
1142312790	1-1423	1279	PIPE; A/CLEANER	000000	000000
1142315430	1-1423	1543	HOSE; RUBBER, AIR CLEANER	000000	000000
1142316830	1-1423	1683	CONNECTING HOSE	000000	000000
1142317610	1-1423	1761	HOSE; RUBBER	000000	000004
1142321560	1-1423	2156	HOSE;RUBBER,AIR CLEANER	000000	000004
1142340011	1-1423	4001	BRACKET; AIR CLEANER	000000	000000
1142340020	1-1423	4002	STAY; A, AIR CLEANER BRAC	000000	000000
1142340043	1-1423	4004	BRACKET; AIR CLEANER E120	000000	000000
1142340110	1-1423	4011	BRACKET; AIR CLEANER	000001	000000
1142340130	1-1423	4013	STAY; B, AIR CLEANER BRAC	000001	000000
1142340150	1-1423	4015	STAY; AIR CLEANER BRACKET	000000	000000
1142340551	1-1423	4055	BRACKER; AIR CLEANER	000000	000000
1142340614	1-1423	4061	BRACKET; AIR CLEANER	000000	000000
1142340900	1-1423	4090	BRACKET; AIR CLEANER	000000	000000
1142340910	1-1423	4091	BRACKET; A/CLEANER	000000	000000
1142340951	1-1423	4095	BRACKET; AIR CLEANER	000000	000000

1142341010	1-1423	4101	BRACKET; AIR CLEANER	000000	000000
1142341020	1-1423	4102	BRACKET; A/CLEANER	000000	000000
1142341030	1-1423	4103	BRACKET; INLET PIPE	000000	000000
1142360010	1-1423	6001	PIPE, VENTILATOR	000000	000000
1142360650	1-1423	6065	PIPE*	000000	000000
1142390070	1-1423	9007	BAND; CLEANER 6RB1	000000	000005
1142392130	1-1423	9213	CLIP; WIRE, COVER	000000	000000
1142392630	1-1423	9263	CLIP; HOSE ACL	000000	000038
1143100851	1-1431	0085	SHUTTER; INTAKE E120	000000	000000
1143101170	1-1431	0117	SHUTTER; INTAKE	000000	000000
1143101360	1-1431	0136	INTAKE SHUTTER	000000	000000
1143101791	1-1431	0179	SHUTTER	000000	000000
1143101870	1-1431	0187	SHUTTER; INTAKE	000000	000000
1143101940	1-1431	0194	SHUTTER	000000	000000
1143110380	1-1431	1038	CASE; INTAKE SHUTTER	000000	000000
1143141110	1-1431	4111	LEVER; ENG. STOP	000000	000000
1143170130	1-1431	7013	PACKING; DUCT TO	000000	000000
1143170200	1-1431	7020	PACKING E120	000000	000000
1143170210	1-1431	7021	PACKING; INTAKE E120/6RB1	000000	000000
1143170220	1-1431	7022	GASKET	000000	000000
1143170250	1-1431	7025	GASKET; INTAKE	000016	000000
1143170260	1-1431	7026	PACKING	000000	000000
1143170280	1-1431	7028	GASKET	000000	000000
1143170300	1-1431	7030	PACKING E120	000007	000000
1143170310	1-1431	7031	PACKING; INTAKE E120/6RB1	000014	000240
1143170320	1-1431	7032	GASKET	000000	000000
1143170330	1-1431	7033	GASKET THROTTLE	000000	000003
1143170350	1-1431	7035	GASKET; INLET DUCT T	000000	000000
1143170360	1-1431	7036	PACKING; SHUTTER	000000	000000
1143170400	1-1431	7040	PACKING; INTAKE E120/6RB1	000000	000344
1143190042	1-1431	9004	LINK; INTAKE SHUTTER	000000	000000
1143190340	1-1431	9034	WASHER; PL, STAY/BRKT	000076	000053
1143190342	1-1431	9034	WASHER; PL, STAY/BRKT	000046	000001
1143190520	1-1431	9052	BKT WIRE CLIP	000000	000000
1143190760	1-1431	9076	BRKT: CABLE	000000	000000
1143320210	1-1433	2021	ROD; ENG STOP	000000	000002
1143330580	1-1433	3058	LEVER; ENG CONT	000000	000002
1143340190	1-1433	4019	EYE; SPRING, INTAKE SHUTT	000000	000000
1143360020	1-1433	6002	SHAFT; LVR, CYL.	000000	000000
1143360021	1-1433	6002	SHAFT; LVR, CYL	000000	000000
1143600100	1-1436	0010	VENTILATOR ASM.	000000	000000
1143600342	1-1436	0034	VENTILATOR ASM.	000000	000000
1143600343	1-1436	0034	VENTILATOR ASM.	000000	000000
1143600352	1-1436	0035	VENTILATOR; CYL	000000	000000
1143600361	1-1436	0036	VENTILATOR ASM	000000	000000
1143600362	1-1436	0036	VENTILATOR ASM	000000	000000
1143600410	1-1436	0041	VENTILATOR; CYL	000001	000000

1143600490	1-1436	0049	VENTILATOR; CYL. HD	000000	000000
1143600491	1-1436	0049	VENTILATOR; CYL. HD	000000	000000
1143620020	1-1436	2002	COVER; PCV	000001	000071
1143690470	1-1436	9047	PLATE; BAFFLE	000000	000000
1143690471	1-1436	9047	PLATE; BAFFLE	000000	000000
1143690510	1-1436	9051	BAFFLE PLATE;IN	000000	000000
1143690520	1-1436	9052	BAFFLE PLATE;OU	000000	000000
1143690561	1-1436	9056	HOSE;RUBBER,VENT-INLT.	000000	000002
1143790860	1-1437	9086	SCREW	000000	000000
1143790880	1-1437	9088	BOLT; FLANGE	000000	000010
1143790890	1-1437	9089	NUT; LOCK, SHAFT END	000001	000000
1143790900	1-1437	9090	STUD	000000	000058
1144000150	1-1440	0015	TURBOCHARGER	000000	000000
1144000151	1-1440	0015	TURBOCHARGER; RH (FIG.65B	000000	000003
1144000470	1-1440	0047	TURBOCHARGER ASM (TQB)	000000	000003
1144000640	1-1440	0064	TURBOCHARGER ASM UME120	000000	000000
1144000821	1-1440	0082	TURBOCHARGER ASM	000000	000001
1144000960	1-1440	0096	TURBOCHARGER ASM 6RB1	000000	000003
1144001070	1-1440	0107	TURBOCHARGER ASM 6BD1/TPQ	000000	000001
1144001331	1-1440	0133	TURBOCHARGER ASM.	000000	000001
1144001351	1-1440	0135	TURBOCHARGER ASM	000000	000001
1144001385	1-1440	0138	TURBOCHARGER ASM.	000000	000002
1144001461	1-1440	0146	TURBOCHARGER ASM	000000	000000
1144001480	1-1440	0148	TURBO	000000	000000
1144001621	1-1440	0162	TURBOCHARGER ASM.;	000000	000001
1144001631	1-1440	0163	TURBOCHARGER ASM 6BG1	000000	000000
1144001642	1-1440	0164	TURBOCHARGER ASM 6SA1T	000000	000000
1144001730	1-1440	0173	TURBO ASM, NEW	000000	000000
1144001790	1-1440	0179	TURBOCHARGER ASM	000000	000001
1144001821	1-1440	0182	TURBOCHARGER ASM.	000000	000000
1144001822	1-1440	0182	TURBOCHARGER ASM.	000000	000003
1144001870	1-1440	0187	TURBOCHARGER ASM.	000000	000001
1144002000	1-1440	0200	TURBO ASM, NEW	000000	000000
1144002001	1-1440	0200	TURBO ASM, NEW	000000	000000
1144002060	1-1440	0206	TURBOCHARGER ASM	000000	000000
1144002080	1-1440	0208	TURBOCHARGER ASM	000000	000001
1144002100	1-1440	0210	TURBOCHARGER ASM	000000	000003
1144002120	1-1440	0212	TURBO ASM, NEW	000000	000000
1144002241	1-1440	0224	TURBOCHARGER ASM	000000	000001
1144002250	1-1440	0225	TURBOCHARGER UM6BD1	000000	000000
1144002360	1-1440	0236	TURBOCHARGER ASM	000000	000001
1144002460	1-1440	0246	TURBOCHARGER ASM	000000	000000
1144002461	1-1440	0246	TURBOCHARGER ASM	000000	000000
1144002480	1-1440	0248	TURBOCHARGER ASM.	000000	000003
1144002540	1-1440	0254	TURBOCHARGER ASM.	000000	000000
1144002630	1-1440	0263	TURBOCHARGER	000000	000000
1144002631	1-1440	0263	TURBOCHARGER	000000	000002

1144002680	1-1440	0268	TURBOCHARGER AS	000000	000000
1144002720	1-1440	0272	TURBOCHARGER ASM.	000000	000000
1144002750	1-1440	0275	TURBOCHARGER ASM.	000000	000000
1144002790	1-1440	0279	TURBOCHARGER	000000	000002
1144002961	1-1440	0296	TURBOCHARGER ASM	000000	000001
1144002980	1-1440	0298	TURBOCHARGER ASM.	000000	000000
1144002990	1-1440	0299	TORBOCHARGER ASM.	000000	000000
1144003010	1-1440	0301	TURBOCHARGER ASM	000000	000000
1144003011	1-1440	0301	TURBOCHARGER ASM	000000	000000
1144003140	1-1440	0314	TURBOCHARGER ASM.	000000	000002
1144003171	1-1440	0317	TURBOCHARGER ASM	000000	000001
1144003220	1-1440	0322	TURBOCHARGER	000000	000000
1144003221	1-1440	0322	TURBOCHARGER	000000	000001
1144003230	1-1440	0323	TURBOCHARGER	000000	000001
1144003310	1-1440	0331	TURBOCHARGER ASM.	000000	000000
1144003320	1-1440	0332	TURBOCHARGER ASM; FIG.	000000	000007
1144003331	1-1440	0333	TURBOCHARGER ASM; FIG.	000000	000000
1144003332	1-1440	0333	TURBOCHARGER ASM	000000	000000
1144003340	1-1440	0334	TURBOCHARGER ASM	000000	000008
1144003341	1-1440	0334	TURBOCHARGER ASM	000000	000000
1144003350	1-1440	0335	1-14400-335-0ASM.; FIG.65	000000	000000
1144003360	1-1440	0336	TURBOCHARGER ASM., FIG B	000000	000036
1144003400	1-1440	0340	TURBOCHARGER ASM	000000	000001
1144003480	1-1440	0348	TURBOCHARGER ASM; FIG.	000000	000002
1144003500	1-1440	0350	TURBOCHARGER ASM.; FIG	000000	000000
1144003520	1-1440	0352	TURBOCHARGER ASM.; FIG	000000	000002
1144003530	1-1440	0353	TURBOCHARGER ASM; FIG.	000000	000004
1144003550	1-1440	0355	TURBOCHARGER ASM	000000	000001
1144003770	1-1440	0377	TURBOCHARGER ASM	000000	000017
1144003830	1-1440	0383	TURBOCHARGER ; ASM	000000	000039
1144003840	1-1440	0384	TURBOCHARGER ASM	000000	000000
1144003841	1-1440	0384	TURBOCHARGER ASM	000000	000000
1144003880	1-1440	0388	TURBOCHARGER ASM	000000	000007
1144003890	1-1440	0389	TURBOCHARGER ASM	000000	000004
1144003900	1-1440	0390	TURBOCHARGER ASM	000000	000009
1144003920	1-1440	0392	TURBOCHARGER ASM	000000	000001
1144003970	1-1440	0397	TURBOCHARGER ; ASM	000000	000001
1144003980	1-1440	0398	TURBOCHARGER ASM	000000	000001
1144004030	1-1440	0403	TURBOCHARGER ASM	000000	000001
1144004050	1-1440	0405	TURBOCHARGER ASM	000000	000005
1144004111	1-1440	0411	TURBOCHARGER	000000	000001
1144004160	1-1440	0416	TURBOCHARGER ASM	000000	000001
1144004170	1-1440	0417	TURBOCHARGER ASM	000000	000000
1144004180	1-1440	0418	TURBOCHARGER ASM	000000	000004
1144004221	1-1440	0422	TURBOCHARGER ASM	000000	000001
1144004260	1-1440	0426	TURBOCHARGER ASM	000000	000002
1144004320	1-1440	0432	TURBO CHARGER ASM	000000	000001

1144004370	1-1440	0437	TURBOCHARGER ASM	000000	000000
1144004371	1-1440	0437	TURBOCHARGER ASM	000000	000000
1144004380	1-1440	0438	TURBOCHARGER ASM	000000	000025
1144004390	1-1440	0439	TURBOCHARGER ASM	000000	000002
1144004420	1-1440	0442	TURBOCHARGER ASM	000000	000004
1144004430	1-1440	0443	TURBOCHARGER ASM	000000	000009
1144004440	1-1440	0444	TURBOCHARGER ASM	000000	000000
1144004441	1-1440	0444	TURBOCHARGER ASM	000000	000000
1144004450	1-1440	0445	TURBOCHARGER ASM	000000	000000
1144004460	1-1440	0446	TURBOCHARGER ASM	000000	000001
1144004581	1-1440	0458	TURBOCHARGER ASM	000000	000004
1144004633	1-1440	0463	TURBOCHARGER ASM	000000	000003
1144100090	1-1441	0009	CASE ASM; TURBINE	000000	000000
1144100100	1-1441	0010	CASE ASM; BEARING TURBO	000000	000000
1144100260	1-1441	0026	CARTRIDGE; TURBO	000000	000000
1144110110	1-1441	1011	HOUSING; TURBO	000000	000003
1144110150	1-1441	1015	HOUSING; TURBO	000000	000000
1144110160	1-1441	1016	HOUSING; TURBO	000000	000000
1144110170	1-1441	1017	HOUSING ASM.;BRG.	000000	000000
1144110180	1-1441	1018	HOUSING;	000000	000000
1144110200	1-1441	1020	HOUSING	000000	000000
1144110210	1-1441	1021	HOUSING; TURBO	000000	000000
1144110220	1-1441	1022	HOUSING	000000	000000
1144110230	1-1441	1023	HOUSING; TURBO	000000	000000
1144110330	1-1441	1033	REPAIR KIT; TURBO	000000	000000
1144110360	1-1441	1036	HOUSING ASM.;BRG.	000000	000000
1144110450	1-1441	1045	HOUSING	000000	000000
1144110520	1-1441	1052	HOUSING;COMP	000000	000000
1144110600	1-1441	1060	BEARING; THRUST; TURBO	000001	000000
1144110610	1-1441	1061	HOUSING; BRG, TURBOCHRG	000000	000000
1144110650	1-1441	1065	BEARING, JRNL, TURBOCHARGER	000000	000002
1144110840	1-1441	1084	CARTRIDGE; TURBO	000000	000000
1144120030	1-1441	2003	GASKET; COVER	000001	000000
1144120080	1-1441	2008	GASKET TURBINE HSG TURBOC	000001	000001
1144120090	1-1441	2009	GASKET;TURBINE HSG, TURBOC	000000	000000
1144140080	1-1441	4008	HOUSING; TURBO	000002	000000
1144140090	1-1441	4009	HOUSING; TURBO	000000	000000
1144140150	1-1441	4015	HOUSING;TURBO!!!DISCONTIN	000000	000000
1144140160	1-1441	4016	HOUSING; TURBO 6BD1T	000000	000000
1144140170	1-1441	4017	HOUSING	000002	000001
1144140180	1-1441	4018	HOUSING; TURBO	000000	000000
1144140200	1-1441	4020	HOUSING;BLOWER	000000	000000
1144140210	1-1441	4021	HOUSING; TURBO 6SA1	000000	000000
1144140230	1-1441	4023	HOUSING; TURBO	000000	000000
1144140240	1-1441	4024	HOUSING; TURBO	000000	000000
1144140250	1-1441	4025	HOUSING; TURBO	000002	000000
1144140260	1-1441	4026	HOUSING	000000	000000

1144140280	1-1441	4028	HOUSING; TURBO	000000	000000
1144140340	1-1441	4034	HOUSING; TURBO	000000	000000
1144140350	1-1441	4035	HOUSING; TURBO	000000	000000
1144140380	1-1441	4038	HOUSING;COMPRES	000001	000000
1144140390	1-1441	4039	HOUSING	000000	000000
1144140430	1-1441	4043	HOUSING	000000	000000
1144140440	1-1441	4044	HOUSING; BLOWER	000000	000000
1144140490	1-1441	4049	HOUSING; COMP.	000000	000000
1144140570	1-1441	4057	HOUSING;TURBINE	000000	000000
1144140640	1-1441	4064	HOUSING ASM.;BRG.	000000	000000
1144140750	1-1441	4075	HOUSING; BLOWER	000000	000000
1144140770	1-1441	4077	HOUSING	000000	000000
1144140780	1-1441	4078	HOUSING ASM	000000	000000
1144140820	1-1441	4082	HOUSING	000000	000000
1144140830	1-1441	4083	HOUSING; BLOWER	000000	000000
1144140840	1-1441	4084	HOUSING ASM.	000000	000000
1144140870	1-1441	4087	HOUSING ASM.	000000	000000
1144140900	1-1441	4090	HOUSING; BLOWER	000000	000000
1144140910	1-1441	4091	HOUSING ASM.; BRG.	000000	000000
1144140930	1-1441	4093	HOUSING; BLOWER	000000	000000
1144140940	1-1441	4094	HOUSING ASM.; BRG.	000002	000000
1144141060	1-1441	4106	HOUSING; BLOWER; TURBO	000000	000000
1144141070	1-1441	4107	GSKET;BRG HSG,TURBOCHAGER	000001	000020
1144141290	1-1441	4129	HOUSING;BLOWER,TURBOCHARG	000000	000000
1144141360	1-1441	4136	HOUSING;TURBINE TURBOCHAR	000000	000000
1144150080	1-1441	5008	HOUSING; TURBO	000000	000000
1144150090	1-1441	5009	IMPELLER	000000	000000
1144150110	1-1441	5011	COVER	000001	000000
1144150150	1-1441	5015	HSG;TURBINE	000000	000000
1144150260	1-1441	5026	WHEEL ASM	000000	000000
1144150390	1-1441	5039	HOUSING;TURBINE	000000	000000
1144150391	1-1441	5039	HOUSING; TURBINE,TUR	000000	000000
1144150400	1-1441	5040	HOUSING; TURBO 6SA1	000000	000000
1144150410	1-1441	5041	HOUSING; TURBO 6SA1	000000	000000
1144150430	1-1441	5043	HOUSING; TURBO (W/INSULAT	000000	000000
1144150431	1-1441	5043	HOUSING; TURBO (W/INSULAT	000000	000000
1144150450	1-1441	5045	HOUSING; TURBO	000000	000000
1144150500	1-1441	5050	HOUSING; TURBO	000002	000000
1144150510	1-1441	5051	HOUSING	000000	000000
1144150570	1-1441	5057	HOUSING; TURBO	000000	000000
1144150610	1-1441	5061	HOUSING; TURBINE	000000	000000
1144150621	1-1441	5062	HOUSING:TURBINE,W/LAGG	000001	000000
1144150650	1-1441	5065	HOUSING; TURBO	000000	000001
1144150660	1-1441	5066	HOUSING	000000	000000
1144150860	1-1441	5086	HOUSING	000000	000000
1144150890	1-1441	5089	HOUSING;TURBINE	000000	000000
1144150910	1-1441	5091	HOUSING;TURBINE	000000	000000

1144150920	1-1441	5092	HOUSING;TURBINE	000000	000000
1144151080	1-1441	5108	HOUSING; TURBINE, TURBO	000001	000000
1144190030	1-1441	9003	NUT	000000	000000
1144190040	1-1441	9004	WASHER; LOCK	000000	000000
1144190130	1-1441	9013	WASHER***DISCONTINUED***	000000	000000
1144190140	1-1441	9014	STUD:	000000	000000
1144190150	1-1441	9015	NUT	000000	000000
1144190160	1-1441	9016	STUD; TURBINE CASE (M8 X	000000	000000
1144190170	1-1441	9017	PLATE; TURBINE CASE	000000	000000
1144190180	1-1441	9018	PLATE; LOCK E120	000000	000000
1144190190	1-1441	9019	STUD E120	000000	000020
1144190200	1-1441	9020	NUT E120	000000	000006
1144190210	1-1441	9021	PLATE E120	000000	000000
1144190220	1-1441	9022	STUD; TURBINE CASE (M8 X	000000	000000
1144190230	1-1441	9023	NUT	000012	000000
1144190480	1-1441	9048	RING; SNAP, PISTON	000000	000000
1144190630	1-1441	9063	BAND ASM; COUPLING	000002	000000
1144190640	1-1441	9064	BAND ASM; COUPLING	000000	000000
1144190650	1-1441	9065	SEAL,	000000	000000
1144190660	1-1441	9066	LOCK	000000	000000
1144190750	1-1441	9075	BOLT; TURBO 6SA1	000000	000000
1144190830	1-1441	9083	RING; SNAP	000005	000000
1144190880	1-1441	9088	RING; PISTON-TURBO	000001	000000
1144190890	1-1441	9089	RING; PISTON-TURBO	000008	000000
1144190900	1-1441	9090	PLATE; CLAMP	000001	000000
1144190910	1-1441	9091	CLAMP; TURBINE TURBO	000003	000000
1144190930	1-1441	9093	PLATE	000000	000000
1144190940	1-1441	9094	BOLT*	000000	000000
1144190950	1-1441	9095	SCREW	000000	000000
1144190960	1-1441	9096	CLAMP;TURBINE	000000	000000
1144191010	1-1441	9101	BOLT	000000	000000
1144191170	1-1441	9117	RING; JOURNAL BRG. TURBO	000000	000000
1144191180	1-1441	9118	GASKET; BRG HSG. TURBO	000000	000000
1144191460	1-1441	9146	INSERT; IMPELLER, TURBO	000000	000000
1144191470	1-1441	9147	DEFLECTOR; OIL, TURBO	000000	000000
1144191480	1-1441	9148	PROTECTOR; HEAT, TURBO	000000	000000
1144191630	1-1441	9163	HOUSING ASM;TURBOCHARGER	000000	000000
1144191700	1-1441	9170	PIN; SPRIT, TURBOCHARGER	000000	000000
1144191730	1-1441	9173	ACTUATOR; TURBOCHARGER	000000	000001
1144191790	1-1441	9179	HOUSING ASM; TURBOCHARGER	000000	000006
1144200060	1-1442	0006	CHAMBER; AIR SEAL	000000	000000
1144210040	1-1442	1004	BEARING; BUSH	000000	000000
1144210050	1-1442	1005	PROTECTOR; HEAT	000000	000000
1144210060	1-1442	1006	PLATE; TURBO	000000	000000
1144210100	1-1442	1010	PLATE; TURBO	000000	000000
1144210110	1-1442	1011	SHROUD; WHEEL	000000	000000
1144210120	1-1442	1012	PLATE ASM; BACK	000000	000000

1144210140	1-1442	1014	PLATE; TURBO 6SA1	000000	000000
1144210150	1-1442	1015	PROTECTOR; HEAT	000000	000000
1144210160	1-1442	1016	PLATE; BLOWER, FIX	000016	000000
1144210170	1-1442	1017	PLATE; TURBO FIX	000000	000000
1144210180	1-1442	1018	PLATE; TURBINE HOUSING FI	000000	000003
1144210200	1-1442	1020	PLATE; TURBO FIX	000006	000000
1144210220	1-1442	1022	SHAFT;TURBINE	000002	000000
1144210230	1-1442	1023	PLATE	000000	000000
1144210240	1-1442	1024	PROTECTOR; HEAT	000000	000000
1144240420	1-1442	4042	BEARING SET;TURBOCHARGER	000000	000000
1144250050	1-1442	5005	PLATE; SEAL	000003	000000
1144250060	1-1442	5006	PROTECTOR; HEAT	000001	000000
1144250070	1-1442	5007	PLATE: SEAL	000000	000000
1144250090	1-1442	5009	PLATE; SEAL	000000	000000
1144250100	1-1442	5010	PLATE; TURBO 6SA1	000000	000001
1144250110	1-1442	5011	PLATE; SEAL 6SA1T	000000	000001
1144250140	1-1442	5014	PLATE; SEAL	000000	000000
1144250160	1-1442	5016	PROTECTOR; HEAT, TURB	000000	000000
1144250180	1-1442	5018	PLATE;SEAL, TURBOCHARGER	000000	000000
1144250190	1-1442	5019	PLATE; SEAL	000000	000000
1144250210	1-1442	5021	PROTECTOR; HEAT	000000	000000
1144250230	1-1442	5023	PROTECTOR; HEAT	000000	000000
1144250270	1-1442	5027	PROTECTOR; HEAT	000000	000000
1144250280	1-1442	5028	PLATE; SEAL	000000	000000
1144250290	1-1442	5029	PLATE; SEAL	000002	000000
1144250350	1-1442	5035	PROTECTOR;HEAT TURBOCHARG	000000	000000
1144250370	1-1442	5037	INSERT, IMPELLER, TRBOCHRG	000000	000000
1144250460	1-1442	5046	PLATE;SEAL TURBOCHARGER	000000	000001
1144290090	1-1442	9009	SCREW	000000	000000
1144290100	1-1442	9010	WASHER	000000	000000
1144290190	1-1442	9019	PROTECTOR; HEAT E120T	000000	000000
1144290200	1-1442	9020	RING; SNAP E120	000000	000000
1144290210	1-1442	9021	O-RING E120	000000	000000
1144290220	1-1442	9022	PACKING	000005	000000
1144290230	1-1442	9023	RING; SEAL ,TURBO 6SA1	000005	000000
1144290240	1-1442	9024	PACKING	000000	000000
1144290440	1-1442	9044	PACKING; OIL, TURBO DRAIN	000019	000007
1144290451	1-1442	9045	ORING	000000	000000
1144290460	1-1442	9046	ORING	000000	000000
1144290470	1-1442	9047	PACKING; OIL PIPE	000000	000000
1144290510	1-1442	9051	PACKING; OIL PIPE	000000	000000
1144290590	1-1442	9059	RING; SNAP	000001	000000
1144290610	1-1442	9061	PROTECTOR; HEAT TURBO	000000	000000
1144290620	1-1442	9062	SEAL; RING	000001	000000
1144290630	1-1442	9063	PACKING; OIL PIPE	000000	000000
1144290631	1-1442	9063	PACKING; OIL PIPE	000000	000000
1144290632	1-1442	9063	PACKING; OIL PIPE	000009	000062

1144290670	1-1442	9067	PACKING	000010	000000
1144290690	1-1442	9069	LAGGING	000000	000000
1144410030	1-1444	1003	PLATE	000000	000000
1144410040	1-1444	1004	PROTECTOR; HEAT	000000	000000
1144410050	1-1444	1005	PROTECTOR;HEAT	000000	000000
1144410070	1-1444	1007	PROTECTOR	000000	000000
1144410100	1-1444	1010	PROTECTOR; HEAT	000000	000000
1144500040	1-1445	0004	ROTOR ASM E120	000000	000000
1144500060	1-1445	0006	SHAFT; TURBINE 6BD1	000000	000000
1144500100	1-1445	0010	WHEEL ASM; SHAFT	000000	000000
1144500110	1-1445	0011	SHAFT; TURBINE	000000	000000
1144500111	1-1445	0011	SHAFT; TURBINE	000000	000000
1144500120	1-1445	0012	SHAFT; TURBINE	000000	000000
1144500121	1-1445	0012	SHAFT; TURBINE	000002	000000
1144500160	1-1445	0016	SHAFT; TURBINE	000001	000000
1144500180	1-1445	0018	SHAFT; TURBINE	000000	000000
1144500200	1-1445	0020	SHAFT; TURBINE, TURBO	000002	000000
1144500290	1-1445	0029	SHAFT; TURBINE	000001	000000
1144500370	1-1445	0037	SHAFT;TURBINE	000000	000001
1144500390	1-1445	0039	SHAFT;TURBINE	000000	000000
1144500400	1-1445	0040	SHAFT; TURBOCHARGER	000000	000001
1144500470	1-1445	0047	SHAFT; TURBINE	000001	000000
1144500510	1-1445	0051	SHAFT; TURBINE	000000	000000
1144500511	1-1445	0051	SHAFT; TURBINE	000000	000000
1144500520	1-1445	0052	SHAFT; TURBINE	000001	000000
1144500540	1-1445	0054	SHAFT; TURBINE	000000	000000
1144500570	1-1445	0057	SHAFT; TURBINE, TURBO	000000	000000
1144500630	1-1445	0063	SHAFT;TURBINE TURBOCHARGE	000000	000000
1144500710	1-1445	0071	SHAFT; TURBINE TURBOCHARG	000000	000000
1144510020	1-1445	1002	IMPELLER; BLOWER	000000	000000
1144510090	1-1445	1009	IMPELLER; TURBO	000003	000000
1144510100	1-1445	1010	IMPELLER; TURBO	000000	000000
1144510120	1-1445	1012	IMPELLER	000000	000000
1144510150	1-1445	1015	BLOWER	000003	000001
1144510160	1-1445	1016	IMPELLER: TURBO	000000	000000
1144510170	1-1445	1017	WHEEL ASM; SHAFT TURBO 6S	000000	000000
1144510180	1-1445	1018	IMPELLER; TURBO 6SA1	000000	000002
1144510190	1-1445	1019	IMPELLER; REAR	000000	000000
1144510200	1-1445	1020	IMPELLER: TURBO	000000	000002
1144510220	1-1445	1022	IMPELLER	000000	000000
1144510230	1-1445	1023	IMPELLER; TURBO	000000	000000
1144510240	1-1445	1024	IMPELLER; TURBO	000000	000000
1144510250	1-1445	1025	WHEEL	000000	000000
1144510260	1-1445	1026	IMPELLER; TURBO	000000	000000
1144510280	1-1445	1028	IMPELLER	000000	000001
1144510300	1-1445	1030	IMPELLER	000000	000000
1144510350	1-1445	1035	IMPELLER	000002	000000

1144510450	1-1445	1045	IMPELLER; TURBOCHARGER	000000	000000
1144510490	1-1445	1049	WHEEL; COMPRESSOR	000000	000000
1144510500	1-1445	1050	IMPELLER	000001	000000
1144510550	1-1445	1055	IMPELLER	000001	000000
1144510560	1-1445	1056	IMPELLER	000000	000000
1144510570	1-1445	1057	IMPELLER	000000	000002
1144510620	1-1445	1062	IMPELLER; TURBO CHARGER	000000	000000
1144510640	1-1445	1064	IMPELLER; TURBOCHARGER	000000	000000
1144510730	1-1445	1073	IMPELLER; TURBOCHARGER	000000	000000
1144510740	1-1445	1074	IMPELLER; TUROBCHARGER	000003	000000
1144510760	1-1445	1076	IMPELLER;TURBOCHARGER	000000	000000
1144510790	1-1445	1079	IMPELLER;TURBOCHARGER	000000	000000
1144510840	1-1445	1084	IMPELLER;TURBOCHARGER	000001	000000
1144510880	1-1445	1088	IMPELLER; TURBOCHARGER	000000	000001
1144520100	1-1445	2010	COMPRESSOR WHEEL; TURBO	000000	000000
1144520110	1-1445	2011	IMPELLER	000000	000000
1144520120	1-1445	2012	SHAFT; TURBINE	000000	000000
1144530090	1-1445	3009	BUSHING; THRUST E120	000000	000000
1144530100	1-1445	3010	BEARING; JOURNAL E120	000000	000000
1144530150	1-1445	3015	BEARING	000000	000000
1144530170	1-1445	3017	BUSHING; THRUST	000000	000000
1144530180	1-1445	3018	BEARING	000002	000000
1144530210	1-1445	3021	REPAIR KIT;TURBO	000000	000000
1144530220	1-1445	3022	RING; SEAL	000000	000000
1144530230	1-1445	3023	RING; SEAL, TURBO	000000	000000
1144530250	1-1445	3025	RING; SEAL TURBO 6SA1	000000	000000
1144530300	1-1445	3030	REPAIR KIT; TURBOCHARGER	000002	000000
1144530310	1-1445	3031	BEARING 6RB1	000001	000000
1144530320	1-1445	3032	REPAIR KIT; TURBOCHARGER	000001	000000
1144530330	1-1445	3033	REPAIR KIT; TURBOCHARGER	000000	000000
1144530340	1-1445	3034	BUSH; THRUST	000008	000000
1144530350	1-1445	3035	RING; SEAL	000000	000000
1144530360	1-1445	3036	RING; SEAL	000000	000000
1144530370	1-1445	3037	RING; SEAL, TURBO	000000	000002
1144530380	1-1445	3038	REPAIR KIT;TURBO	000000	000000
1144530390	1-1445	3039	REPAIR KIT; TURBO OVERHAU	000000	000002
1144530400	1-1445	3040	REPAIR KIT;TURBO	000000	000000
1144530430	1-1445	3043	METAL; THRUST	000000	000000
1144530440	1-1445	3044	BEARING	000003	000000
1144530450	1-1445	3045	RING; RETAINING	000004	000000
1144530460	1-1445	3046	BEARING; JOURNAL, TURBO	000006	000000
1144530470	1-1445	3047	BEARING	000000	000000
1144530480	1-1445	3048	REPAIR KIT; TURBO OVERHAU	000000	000000
1144530570	1-1445	3057	REPAIR KIT; TURBOCHARGER	000000	000000
1144530580	1-1445	3058	RING; SEAL, TURBINE SIDE	000000	000000
1144530590	1-1445	3059	SEAL; RING, BLOWER	000000	000000
1144530600	1-1445	3060	BUSH; THRUST	000000	000000

1144530690	1-1445	3069	REPAIR KIT;TURBOCHARGER	000000	000000
1144530710	1-1445	3071	BEARING; THRUST	000000	000000
1144530720	1-1445	3072	REPAIR KIT; TURBOCHARGER	000000	000000
1144530730	1-1445	3073	BUSH; THRUST	000000	000000
1144530820	1-1445	3082	REPAIR KIT; OVERHAUL	000000	000000
1144530830	1-1445	3083	REPAIR KIT; TURBOCHARGER	000000	000001
1144530840	1-1445	3084	BUSH; THRUST	000000	000000
1144530850	1-1445	3085	RING; SEAL	000003	000000
1144530860	1-1445	3086	RING; SEAL	000003	000000
1144530990	1-1445	3099	REPAIR KIT; TURBOCHARGER	000000	000000
1144531000	1-1445	3100	BUSHING; THRUST, TURBOCHA	000001	000000
1144550090	1-1445	5009	RING; SEAL E120	000001	000000
1144550100	1-1445	5010	RING; SEAL E120	000000	000000
1144550110	1-1445	5011	THROWER; OIL, TURBO	000000	000000
1144550180	1-1445	5018	RING SET; PISTON	000000	000000
1144550190	1-1445	5019	RING SET; PISTON	000000	000000
1144550230	1-1445	5023	THROWER	000000	000000
1144550231	1-1445	5023	THROWER	000002	000000
1144550240	1-1445	5024	THROWER; OIL TURBO	000000	000000
1144550250	1-1445	5025	RING; SNAP TURBO 6SA1	000026	000000
1144550260	1-1445	5026	RING; SNAP E120	000000	000000
1144550310	1-1445	5031	THROWER; OIL	000001	000000
1144550320	1-1445	5032	THROWER; OIL	000000	000000
1144550340	1-1445	5034	THROWER; OIL	000000	000000
1144550370	1-1445	5037	THROWER; OIL	000000	000000
1144550410	1-1445	5041	THROWER; OIL	000001	000000
1144550420	1-1445	5042	RING; RETAINING	000004	000000
1144550440	1-1445	5044	SLEEVE;SPACER TURBOCHRGER	000002	000000
1144560040	1-1445	6004	COLLAR; THRUST 6RB1	000001	000000
1144560050	1-1445	6005	SPACER 6RB1	000000	000000
1144590030	1-1445	9003	BUSHING; THRUST E120	000000	000000
1144590040	1-1445	9004	NUT	000002	000000
1144590110	1-1445	9011	LOCK; NUT	000000	000000
1144590150	1-1445	9015	NUT; LOCK TURBO 6SA1	000000	000000
1144590160	1-1445	9016	PLATE ASM; BACK TURBO 6SA	000000	000000
1144590190	1-1445	9019	COLLAR; THRUST	000000	000000
1144590200	1-1445	9020	PLATE	000000	000000
1144590210	1-1445	9021	NUT; LK, TURBINE	000000	000000
1144590220	1-1445	9022	NUT**	000000	000000
1144590230	1-1445	9023	WASHER	000000	000000
1144590240	1-1445	9024	BOLT*	000024	000000
1144590250	1-1445	9025	NUT**	000000	000010
1144590270	1-1445	9027	COLLAR; THRUST TURBO	000001	000000
1144590280	1-1445	9028	THROWER; OIL TURBO	000001	000000
1144590290	1-1445	9029	PLATE ASM.; BACK	000001	000000
1144590300	1-1445	9030	BOLT*	000000	000000
1144590310	1-1445	9031	BOLT*	000000	000000

1144590320	1-1445	9032	PLATE ASM; BACK	000000	000000
1144590360	1-1445	9036	O-RING	000000	000000
1144590370	1-1445	9037	O-RING	000000	000000
1144590560	1-1445	9056	RING; SNAP, BLOWER HSG	000000	000018
1144590570	1-1445	9057	NUT; LK, TURBINE SHAFT	000000	000000
1144590580	1-1445	9058	SLEEVE; SPACER, TURBO	000000	000000
1144590590	1-1445	9059	THROWER; OIL, TURBO	000001	000000
1144590600	1-1445	9060	RING; THRUST, TURBO	000000	000000
1144590610	1-1445	9061	RING; THRUST, TURBO	000000	000000
1144590620	1-1445	9062	RING; JOURNAL BRG, TURBO	000001	000000
1144590630	1-1445	9063	RING; SEAL, TURBINE SIDE	000000	000000
1144590760	1-1445	9076	TURBINE KIT;TURBOCHARGER	000000	000000
1144590770	1-1445	9077	TURBINE KIT; TURBOCHARGER	000003	000000
1144600031	1-1446	0003	VALVE ASM; SAFETY 6BD1T	000002	000000
1144600040	1-1446	0004	CONTROL ASM; WAST GATE	000002	000000
1144600131	1-1446	0013	GATE ASM; WASTE, TURB	000000	000000
1144610010	1-1446	1001	VALVE ASM; WASTEGATE	000000	000000
1144690010	1-1446	9001	PLATE 6BD1T	000000	000000
1144690030	1-1446	9003	ADAPTOR 6BD1T	000000	000000
1144690040	1-1446	9004	PIPE 6BD1T	000003	000000
1144690060	1-1446	9006	ANTISEIZE LUBRICANT	000000	000000
1144690070	1-1446	9007	PLATE;ACTUATER	000000	000000
1144690080	1-1446	9008	PIPE;ACTUATER,	000000	000000
1144690100	1-1446	9010	HOSE:ACTUATER	000000	000000
1144690110	1-1446	9011	CLIP;ACTUATER	000000	000000
1144690130	1-1446	9013	COVER	000000	000000
1144690140	1-1446	9014	COVER	000000	000000
1144690150	1-1446	9015	PLATE; SUPPORT	000000	000000
1144690160	1-1446	9016	WASHER; PLATE	000000	000000
1144690170	1-1446	9017	BOLT; COVER FIX	000000	000000
1144690180	1-1446	9018	PACKING; COVER	000001	000000
1144690190	1-1446	9019	BOLT; COVER	000000	000000
1144690200	1-1446	9020	WASHER; SPRING	000000	000000
1144690210	1-1446	9021	INSULATOR; TURBINE HOUSIN	000000	000000
1144690320	1-1446	9032	LAGGING; TURBINE HOUSING	000000	000000
1152500800	1-1525	0080	FEED PUMP	000000	000000
1153000411	1-1530	0041	NOZZLE ASM; INJ.	000000	000000
1153000412	1-1530	0041	NOZZLE ASM; INJ.	000000	000031
1153000421	1-1530	0042	SUPERSEDED**	000000	000000
1153000573	1-1530	0057	NOZZLE ASM; INJ.	000000	000000
1153000574	1-1530	0057	NOZZLE ASM; INJ.	000000	000000
1153001031	1-1530	0103	NOZZLE ASM; INJ.	000000	000000
1153001032	1-1530	0103	NOZZLE ASM; INJ.	000003	000001
1153001041	1-1530	0104	NOZZLE ASM; INJ.	000000	000000
1153001042	1-1530	0104	NOZZLE ASM; INJ.	000000	000000
1153001051	1-1530	0105	NOZZLE ASM; INJECTION 4BD	000000	000000
1153001052	1-1530	0105	NOZZLE ASM; INJECTION 4BD	000000	000000

1153001201	1-1530	0120	NOZZLE ASM; INJECTION	000000	000000
1153001202	1-1530	0120	NOZZLE ASM; INJECTION	000000	000005
1153001340	1-1530	0134	NOZZLE ASM; INJ	000000	000000
1153001341	1-1530	0134	NOZZLE ASM; INJ	000000	000001
1153001420	1-1530	0142	NOZZLE ASM; INJ	000000	000000
1153001421	1-1530	0142	NOZZLE ASM; INJ	000000	000010
1153001580	1-1530	0158	INJECTOR ASM; W/O-RING	000000	000000
1153001581	1-1530	0158	INJECTOR ASM; W/O-RING	000000	000000
1153001590	1-1530	0159	NOZZLE ASM; INJ.	000000	000000
1153001591	1-1530	0159	NOZZLE ASM; INJECTION	000000	000067
1153001610	1-1530	0161	NOZZLE ASM; INJ. 6SA1/6BD	000000	000000
1153001611	1-1530	0161	NOZZLE ASM; INJ. 6SA1/6BD	000000	000005
1153001660	1-1530	0166	NOZZLE ASM; INJECTION	000000	000000
1153001661	1-1530	0166	NOZZLE ASM; INJECTION	000004	000000
1153001690	1-1530	0169	NOZZLE ASM; INJ	000000	000000
1153001691	1-1530	0169	INJECTOR ASM: FUEL	000000	000000
1153001700	1-1530	0170	NOZZLE ASM; INJ.	000000	000000
1153001701	1-1530	0170	NOZZLE ASM; INJ.	000000	000000
1153001860	1-1530	0186	NOZZLE ASM;	000000	000000
1153001861	1-1530	0186	NOZZLE ASM; INJECTION	000000	000011
1153001962	1-1530	0196	NOZZLE & HOLDER	000000	000000
1153001991	1-1530	0199	NOZZLE ASM; INJECTION	000000	000000
1153001992	1-1530	0199	NOZZLE ASM; INJECTION	000000	000000
1153002120	1-1530	0212	NOZZLE ASM; INJ	000000	000000
1153002121	1-1530	0212	NOZZLE ASM; INJ	000000	000015
1153002401	1-1530	0240	INJECTOR ASM: FUEL	000000	000006
1153002470	1-1530	0247	NOZZLE ASM; INJ.	000000	000000
1153002471	1-1530	0247	NOZZLE ASM; INJ.	000006	000000
1153002501	1-1530	0250	NOZZLE ASM; INJ.	000000	000000
1153002502	1-1530	0250	NOZZLE ASM; INJ.	000000	000007
1153002510	1-1530	0251	NOZZLE ASM; INJ	000000	000000
1153002511	1-1530	0251	NOZZLE ASM; INJ	000000	000004
1153002720	1-1530	0272	NOZZLE ASM; INJ.	000000	000000
1153002721	1-1530	0272	NOZZLE ASM; INJ.	000000	000000
1153002770	1-1530	0277	NOZZLE ASM; INJ.	000000	000000
1153002771	1-1530	0277	NOZZLE ASM; INJ.	000002	000003
1153002890	1-1530	0289	NOZZLE ASM; INJ	000000	000000
1153002891	1-1530	0289	NOZZLE ASM; INJ	000000	000000
1153002892	1-1530	0289	NOZZLE ASM; INJ	000000	000009
1153002910	1-1530	0291	NOZZLE ASM; INJ.	000000	000000
1153002911	1-1530	0291	NOZZLE ASM; INJ.	000000	000000
1153002912	1-1530	0291	NOZZLE ASM; INJ.	000000	000003
1153002930	1-1530	0293	NOZZLE ASM; INJ.	000000	000000
1153002931	1-1530	0293	NOZZLE ASM; INJ.	000003	000000
1153003032	1-1530	0303	INJECTOR ASM: FUEL	000000	000000
1153003073	1-1530	0307	INJECTOR ASM: FUEL	000000	000006
1153003200	1-1530	0320	INJ NOZZLE ASM	000000	000006

1153003310	1-1530	0331	NOZZLE ASM.; INJ. FIG.58	000000	000064
1153003430	1-1530	0343	NOZZLE ASM	000000	000006
1153003600	1-1530	0360	NOZZLE ASM; INJ.	000000	000000
1153003601	1-1530	0360	NOZZLE ASM; INJ.	000000	000027
1153003750	1-1530	0375	NOZZLE ASM; INJ	000017	000000
1153003891	1-1530	0389	NOZZLE ASM;INJ	000000	000000
1153003910	1-1530	0391	NOZZLE ASM; INJ	000000	000000
1153003920	1-1530	0392	NOZZLE ASM; INJ	000000	000000
1153003921	1-1530	0392	NOZZLE ASM; INJ	000000	000000
1153003922	1-1530	0392	NOZZLE ASM; INJ	000000	000004
1153003931	1-1530	0393	NOZZLE ASM; INJ	000000	000000
1153003932	1-1530	0393	NOZZLE ASM; INJ	000000	000014
1153003940	1-1530	0394	NOZZLE ASM;INJ	000000	000006
1153004070	1-1530	0407	NOZZLE ASM; INJ	000000	000000
1153004130	1-1530	0413	NOZZLE ASM; INJ	000000	000139
1153004210	1-1530	0421	NOZZLE ASM; INJ	000000	000217
1153004321	1-1530	0432	NOZZLE ASM;INJ	000000	000000
1153004360	1-1530	0436	NOZZLE ASM; INJ	000000	000000
1153004361	1-1530	0436	NOZZLE ASM; INJ	000000	000000
1153004362	1-1530	0436	NOZZLE ASM; INJECTOR	000000	000000
1153004363	1-1530	0436	NOZZLE ASM; INJECTOR	000000	000236
1153110730	1-1531	1073	NOZZLE; FUEL INJ.	000000	000000
1153110780	1-1531	1078	NOZZLE; FUEL	000000	000000
1153111070	1-1531	1107	NOZZLE; INJ.	000000	000000
1153111150	1-1531	1115	NOZZLE; INJ.	000013	000005
1153111370	1-1531	1137	NOZZLE;INJ	000000	000010
1153111430	1-1531	1143	NOZZLE; INJECT	000000	000010
1153111460	1-1531	1146	NOZZLE; INJ	000029	000000
1153111560	1-1531	1156	NOZZLE; INJ.	000000	000009
1153111580	1-1531	1158	NOZZLE; INJ.	000000	000002
1153111640	1-1531	1164	NOZZLE;	000000	000005
1153111820	1-1531	1182	NOZZLE; INJECTION UM6SD	000001	000000
1153111850	1-1531	1185	NOZZLE; INJ.	000001	000000
1153111970	1-1531	1197	NOZZLE	000000	000000
1153112080	1-1531	1208	NOZZLE ASM; INJECTION	000005	000001
1153112090	1-1531	1209	NOZZLE ASM;INJ	000000	000004
1153112240	1-1531	1224	NOZZLE; INJ.	000000	000000
1153112370	1-1531	1237	NOZZLE; INJ.	000000	000000
1153112371	1-1531	1237	NOZZLE; INJ.	000000	000009
1153112410	1-1531	1241	INJ TIP	000000	000012
1153112630	1-1531	1263	NOZZLE; INJ.	000000	000068
1153112730	1-1531	1273	NOZZLE	000002	000006
1153112820			NOZZLE; INJ	000000	000000
1153112821			NOZZLE; INJ	000000	000004
1153113000	1-1531	1300	NOZZLE;INJ	000000	000009
1153113010	1-1531	1301	NOZZLE;INJ	000008	000009
1153113020	1-1531	1302	NOZZLE ; INJ	000000	000000

1153113040	1-1531	1304	NOZZLE; INJ	000000	000000
1153113041	1-1531	1304	NOZZLE; INJ	000000	000000
1153113070	1-1531	1307	NOZZLE; INJ	000000	000000
1153113100	1-1531	1310	NOZZLE ; INJ	000000	000000
1153113160	1-1531	1316	NOZZLE; INJ	000000	000017
1153150030	1-1531	5003	DUST COVER	000000	000010
1153150070	1-1531	5007	COVER; DUST 8MA1	000000	000000
1153150110	1-1531	5011	GASKET; INJ NOZZLE	000000	000040
1153150130	1-1531	5013	GASKET; INJ NOZ	000000	000000
1153150131	1-1531	5013	GASKET; INJ NOZ	000547	001054
115315019D			GASKET; INJ. NOZ.	000000	000000
1153150190			GASKET; INJ. NOZ.	000000	000627
1153190020	1-1531	9002	CAP; INJ NOZZLE	000000	000000
1153190100	1-1531	9010	NOZZLE KIT; INJ	000033	000000
1153190110	1-1531	9011	NOZZLE KIT; INJ	000000	000000
1153190130	1-1531	9013	NOZZLE KIT	000000	000001
1153190260	1-1531	9026	NOZZLE KIT; INJ	000006	000007
1153190280	1-1531	9028	NOZZLE KIT	000000	000018
1153190360	1-1531	9036	NOZZLE KIT; INJ	000000	000016
1153300090	1-1533	0009	HOLDER; NOZZLE 6BD/BG1	000000	000000
1153300121	1-1533	0012	HOLDER; NOZZLE 12PB1	000000	000000
1153300171	1-1533	0017	HOLDER ASM; NOZZLE	000000	000000
1153300222	1-1533	0022	NOZZLE HOLDER	000000	000000
1153300230	1-1533	0023	HOLDER ASM; NOZZLE	000000	000000
1153300260	1-1533	0026	HOLDER; NOZZLE	000000	000000
1153300360	1-1533	0036	HOLDER; NOZZLE 6BD/BG1	000000	000000
1153300370	1-1533	0037	HOLDER; NOZZLE	000000	000000
1153300380	1-1533	0038	HOLDER; NOZZLE	000000	000000
1153300381	1-1533	0038	HOLDER; NOZZLE	000000	000000
1153300421	1-1533	0042	HOLDER; NOZZLE	000000	000000
1153300422	1-1533	0042	HOLDER; NOZZLE	000000	000005
1153300440	1-1533	0044	HOLDER ASM; NOZZLE 6BD1	000000	000000
1153300441	1-1533	0044	HOLDER ASM; NOZZLE 6BD1	000000	000000
1153300442	1-1533	0044	HOLDER ASM; NOZZLE 6BD1	000000	000000
1153300520	1-1533	0052	HOLDER ASM;	000000	000000
1153300530	1-1533	0053	HOLDER ASM;	000000	000000
1153300540	1-1533	0054	HOLDER ASM; NOZZLE	000000	000000
1153300541	1-1533	0054	HOLDER ASM; NOZZLE	000000	000000
1153300570	1-1533	0057	HOLDER; NOZZLE 6BD/BG1	000000	000000
1153300580	1-1533	0058	HOLDER; NOZZLE	000000	000000
1153300590	1-1533	0059	HOLDER; NOZZLE	000000	000000
1153300630	1-1533	0063	HOLDER ASM	000000	000000
1153300631	1-1533	0063	HOLDER ASM	000000	000000
1153300640	1-1533	0064	HOLDER; NOZZLE	000000	000000
1153300641	1-1533	0064	HOLDER; NOZZLE	000002	000000
1153300650	1-1533	0065	HOLDER; NOZZLE	000000	000000
1153300651	1-1533	0065	HOLDER; NOZZLE	000000	000000

1153300690	1-1533	0069	HOLDER ASM; NOZZLE	000000	000000
1153300721	1-1533	0072	HOLDER ASM: NOZZLE	000000	000006
1153300820	1-1533	0082	HOLDER ASM; NOZZLE	000000	000000
1153300870	1-1533	0087	HOLDER;NOZZLE	000000	000000
1153300871	1-1533	0087	HOLDER;NOZZLE	000000	000008
1153300940	1-1533	0094	HOLDER; NOZZLE	000000	000000
1153300941	1-1533	0094	HOLDER; NOZZLE	000000	000000
1153301010	1-1533	0101	HOLDER ASM	000000	000000
1153301110	1-1533	0111	NOZZLE HOLDER	000000	000006
1153301171	1-1533	0117	HOLDER ASM; NOZZLE	000000	000006
1153301270	1-1533	0127	HOLDER ASM; NOZZLE	000000	000000
1153301280	1-1533	0128	HOLDER ASM; NOZZLE	000000	000007
1153301281	1-1533	0128	HOLDER ASM; NOZZLE	000000	000000
1153301290	1-1533	0129	HOLDER ASM;NOZZLE	000000	000010
1153301291	1-1533	0129	HOLDER ASM;NOZZLE	000000	000000
1153301310	1-1533	0131	HOLDER ASM;NOZZLE	000000	000000
1153320010	1-1533	2001	NUT; LOCK	000000	000000
1153320020	1-1533	2002	NUT LOCK	000000	000000
1153320050	1-1533	2005	CAP NUT	000000	000000
1153320100	1-1533	2010	NUT	000000	000000
1153320110	1-1533	2011	NUT	000000	000010
1153320170	1-1533	2017	NUT; NOZZLE RET,NOZZ	000000	000032
1153320190	1-1533	2019	NUT RETAINING	000004	000000
1153340010	1-1533	4001	NUT; CAP	000000	000000
1153340011	1-1533	4001	NUT; CAP	000000	000000
1153340020	1-1533	4002	NUT;CAP,ADJ	000000	000000
1153340040	1-1533	4004	CAP NUT	000000	000000
1153340060	1-1533	4006	NUT;NOZZLE	000000	000000
1153340070	1-1533	4007	NUT; CAP,NOZZLE	000000	000000
1153340110	1-1533	4011	NUT	000000	000000
1153370030	1-1533	7003	CLAMP; NOZZLE HOLDER	000000	000000
1153370050	1-1533	7005	FLANGE; INJ NOZZLE HOLDER	000000	000000
1153370120	1-1533	7012	CLAMP; NOZZLE	000000	000000
1153370210	1-1533	7021	FLANGE; INJ,NOZZLE HOLDER	000000	000056
1153370220	1-1533	7022	FLANGE; INJ NOZZLE HOLDER	000000	000000
1153370280	1-1533	7028	BRACKET; INJ NOZZ	000000	000006
1153370290	1-1533	7029	FLANGE; INJ NOZZLE HOLDER	000013	000000
1153390061	1-1533	9006	SLEEVE; INJ PUMP	000000	000000
1153390090	1-1533	9009	BOLT; EYE FUEL RET NOZZLE	000002	000000
1153390100	1-1533	9010	GASKET;RETURN PIPE NOZZLE	000000	000000
1153390170	1-1533	9017	SHIM;	000000	000000
1153390190	1-1533	9019	SHIM; INJ. NOZ. 78	000000	000122
1153390230	1-1533	9023	SHIM; INJ. NOZ 82	000000	000091
1153390250	1-1533	9025	SHIM;	000002	000000
1153390270	1-1533	9027	SHIM, (T+O.86)	000000	000070
1153390310	1-1533	9031	SHIM;INJ NOZ. 90	000000	000048
1153390350	1-1533	9035	SHIM; INJ NOZ 1	000000	000102

1153390390	1-1533	9039	SHIM;INJ NOZ. 98	000000	000085
1153390410	1-1533	9041	SHIM	000000	000083
1153390450	1-1533	9045	SHIM T=1.04	000000	000000
1153390890	1-1533	9089	SHIM	000000	000000
1153410010	1-1534	1001	PUSH ROD	000000	000000
1153410030	1-1534	1003	ROD; PUSH	000000	000000
1153430010	1-1534	3001	SPRING: NOZZLE	000000	000006
1153430030	1-1534	3003	SPRING;NOZZLE,NOZZLE HOLD	000000	000008
1153450010	1-1534	5001	ADJUST SCREW	000000	000000
1153450040	1-1534	5004	SCREW: ADJUSTING	000000	000006
1153490040	1-1534	9004	SHIM;NOZZLE SPRING,NOZZLE	000000	000008
1153490410	1-1534	9041	NUT;NOZZLE RET,NOZZLE HOL	000000	000000
1153490440	1-1534	9044	SHIM;NOZZLE SPRING,NOZZLE	000000	000012
1153490450	1-1534	9045	SHIM;NOZZLE SPRING,NOZZLE	000000	000012
1153490460	1-1534	9046	SHIM;NOZZLE SPRING,NOZZLE	000000	000012
1153490470	1-1534	9047	SHIM;NOZZLE SPRING,NOZZLE	000000	000008
1153490480	1-1534	9048	SHIM;NOZZLE SPRING,NOZZLE	000000	000012
1153490490	1-1534	9049	SHIM;NOZZLE SPRING,NOZZLE	000000	000012
1153490500	1-1534	9050	GASKET; INL CONNECTOR NO	000000	000061
1153491371	1-1534	9137	NUT; NOZZLE RET, NOZZLE H	000000	000000
1153491390	1-1534	9139	SHIM; NOZZLE 1.000	000000	000000
1153510010	1-1535	1001	CONNECTOR; INLET	000014	000000
1153510050	1-1535	1005	CONNECTOR; INLET, NOZZLE	000017	000000
1153510060	1-1535	1006	CONNECTOR; INLET, NOZZLE	000008	000000
1153690080	1-1536	9008	GASKET	000000	000000
1153900090	1-1539	0009	BOLT;EYE NOZZLE HOLDER	000000	000000
1154110761	1-1541	1076	PIPE ASM; NOZZLE, LEAK 8M	000000	000000
1154111870	1-1541	1187	PIPE ASM; INJECTION NO 1	000000	000000
1154111890	1-1541	1189	PIPE ASM; INJECTION	000000	000000
1154111910	1-1541	1191	PIPE ASM; INJECTION NO 5	000000	000000
1154111920	1-1541	1192	PIPE; INJ #6	000000	000000
1154111930	1-1541	1193	PIPE ASM; INJECTION	000000	000000
1154111940	1-1541	1194	PIPE ASM; INJECTION NO 8	000000	000000
1154112240	1-1541	1224	FUEL PIPE,FRONT	000000	000000
1154113780	1-1541	1378	FUEL PIPE,LB	000000	000000
1154113982	1-1541	1398	PIPE ASM; PUMP TO FILTER	000003	000000
1154113992	1-1541	1399	PIPE ASM; FILTER	000000	000003
1154114011	1-1541	1401	PIPE ASM; FUEL FILTER TO	000001	000000
1154114021	1-1541	1402	PIPE ASM; LEAK OFF, FUEL	000000	000002
1154114032	1-1541	1403	PIPE ASM; FUEL RETURN	000001	000001
1154114042	1-1541	1404	PIPE ASM; INJECTION	000002	000000
1154114052	1-1541	1405	PIPE ASM; INJECTION	000000	000000
1154114091	1-1541	1409	PIPE ASM; INJECTION LEAK	000000	000000
1154114152	1-1541	1415	PIPE ASM; INJECTION FUEL	000000	000000
1154114280	1-1541	1428	PIPE ASM; INJECTION FILTE	000000	000000
1154114711	1-1541	1471	PIPE ASM; FUEL	000000	000000
1154115062	1-1541	1506	PIPE ASM; FUEL,PUMP-FILTE	000000	000000

1154115900	1-1541	1590	FUEL PIPE, INJ P	000000	000000
1154115910	1-1541	1591	FUEL PIPE, INJ P	000000	000000
1154116111	1-1541	1611	PIPE ASM; INJ #3	000000	000000
1154116131	1-1541	1613	PIPE ASM; INJ #5	000000	000000
1154116151	1-1541	1615	PIPE ASM; INJ #7	000000	000000
1154116161	1-1541	1616	PIPE ASM; INJ #8	000000	000000
1154116171	1-1541	1617	PIPE ASM; INJ #9	000000	000000
1154116181	1-1541	1618	INJ PIPE ASM.	000000	000000
1154116191	1-1541	1619	PIPE ASM; INJ #11	000000	000000
1154116201	1-1541	1620	INJ PIPE ASM.	000000	000000
1154116211	1-1541	1621	PIPE ASM; INJ #1	000000	000000
1154116460	1-1541	1646	PIPE ASM; FUEL PUMP TO FI	000000	000000
1154116470	1-1541	1647	PIPE ASM; INJECTION #4 8M	000000	000000
1154116480	1-1541	1648	PIPE ASM; INJECTION #4	000000	000000
1154116491	1-1541	1649	PIPE ASM; INJECTION	000000	000000
1154116501	1-1541	1650	PIPE ASM; INJ #4	000000	000000
1154116511	1-1541	1651	PIPE ASM; INJ #6	000000	000000
1154116981	1-1541	1698	PIPE ASM; FUEL E120	000000	000001
1154117341	1-1541	1734	PIPE ASM; INJ #1 E120	000001	000001
1154117351	1-1541	1735	PIPE ASM; INJ #2 E120	000001	000000
1154117361	1-1541	1736	PIPE ASM; INJ #3 E120	000003	000000
1154117371	1-1541	1737	PIPE ASM; INJ #4 E120	000001	000001
1154117381	1-1541	1738	PIPE ASM; INJ #5 E120	000004	000000
1154117391	1-1541	1739	PIPE ASM; INJ #6 E120	000001	000002
1154117400	1-1541	1740	PIPE ASM; INJ #6 E120	000000	000000
1154117401	1-1541	1740	PIPE ASM; INJ #6 E120	000000	000000
1154117411	1-1541	1741	FUEL PIPE ASSY	000000	000000
1154117420	1-1541	1742	PIPE ASM; FUEL	000000	000000
1154117571	1-1541	1757	FUEL PIPE ASSY	000000	000000
1154117581	1-1541	1758	FUEL PIPE ASSY	000000	000000
1154117591	1-1541	1759	FUEL PIPE ASSY	000000	000000
1154117670	1-1541	1767	FUEL PIPE	000000	000000
1154118000	1-1541	1800	PIPE ASM; FEED PUMP-FILTE	000000	000000
1154118001	1-1541	1800	PIPE ASM; FEED PUMP-FILTE	000004	000000
1154118051	1-1541	1805	FUEL PIPE	000000	000000
1154118161	1-1541	1816	PIPE ASM.; FILTER-INJ. PUM	000000	000000
1154118171	1-1541	1817	PIPE ASM; FUEL DA220	000002	000000
1154118181	1-1541	1818	PIPE ASM; FILTER	000000	000000
1154118231	1-1541	1823	PIPE ASM; FILTER DA SERIE	000000	000000
1154118321	1-1541	1832	PIPE; INJ NOZZLE LEA	000000	000000
1154118400	1-1541	1840	PIPE ASM; NOZZLE	000000	000001
1154118681	1-1541	1868	INJECTION PIPE ASM.	000000	000000
1154118691	1-1541	1869	PIPE ASM; INJECTION DA120	000000	000000
1154118790	1-1541	1879	PIPE ASM.; FUEL, SUCTION	000000	000000
1154118800	1-1541	1880	PIPE ASM.; FUEL, LEAK-OFF	000000	000000
1154118921	1-1541	1892	PIPE ASM; INJECTION	000000	000000
1154118931	1-1541	1893	PIPE ASM; FILTER	000000	000000

1154118961	1-1541	1896	PIPE ASM; INJECTION DH100	000000	000000
1154120260	1-1541	2026	FUEL PIPE ASM;	000000	000000
1154120280	1-1541	2028	FUEL PIPE ASM;	000000	000000
1154120301	1-1541	2030	PIPE ASM;FUEL	000000	000000
1154120500	1-1541	2050	PIPE; FUEL	000000	000000
1154120510	1-1541	2051	PIPE; FUEL	000000	000000
1154120520	1-1541	2052	PIPE; FUEL	000000	000000
1154120550	1-1541	2055	PIPE ASM; NOZZLE	000000	000000
1154120590	1-1541	2059	PIPE; FUEL	000000	000000
1154120610	1-1541	2061	PIPE; FUEL OVERFLOW	000000	000000
1154121031	1-1541	2103	PIPE ASM; INJ #2	000000	000000
1154121190	1-1541	2119	PIPE; FUEL, FEED-INJ	000000	000000
1154121520			PIPE; FUEL FEED	000000	000000
1154121571			PIPE ASM; INJ #10	000000	000000
1154121590	1-1541	2159	FUEL PIPE ASM	000000	000000
1154121601	1-1541	2160	PIPE ASM; INJ #12	000000	000000
1154121710	1-1541	2171	PIPE ASM; INJECTION #3	000000	000000
1154121730	1-1541	2173	PIPE ASM; LEAK OFF DA640	000000	000000
1154121790	1-1541	2179	FUEL PIPE ASM;	000000	000000
1154121810	1-1541	2181	FUEL PIPE ASM	000000	000000
1154121970	1-1541	2197	PIPE; FUEL-SUCTION	000000	000000
1154122431	1-1541	2243	PIPE ASM;FUEL	000000	000000
1154122441	1-1541	2244	PIPE ASM;FUEL	000000	000000
1154122460	1-1541	2246	PIPE ASM:FUEL	000000	000000
1154122470	1-1541	2247	FUEL PIPE	000000	000000
1154122620	1-1541	2262	PIPE ASM; NOZZLE	000000	000000
1154122670	1-1541	2267	PIPE; FUEL	000000	000000
1154122691	1-1541	2269	PIPE; FUEL	000000	000000
1154122890	1-1541	2289	PIPE; FUEL	000000	000000
1154123150	1-1541	2315	PIPE; FUEL	000000	000000
1154123151	1-1541	2315	PIPE; FUEL	000000	000000
1154123160	1-1541	2316	PIPE; FUEL, LEAK OFF	000000	000000
1154123170	1-1541	2317	PIPE; FUEL OVERFLOW	000000	000000
1154123340	1-1541	2334	PIPE ASM; INJECTION FILTE	000000	000000
1154123350	1-1541	2335	PIPE ASM; INJECTION VALVE	000000	000000
1154123361	1-1541	2336	PIPE ASM; FUEL E120	000000	000001
1154123371	1-1541	2337	PIPE ASM; FUEL 6RB1	000000	000000
1154123421	1-1541	2342	PIPE ASM;FUEL	000000	000000
1154123431	1-1541	2343	PIPE ASM;FUEL	000000	000000
1154123432	1-1541	2343	PIPE ASM;FUEL	000000	000000
1154123830	1-1541	2383	P I P E	000000	000000
1154123840	1-1541	2384	PIPE ASM;FUEL	000000	000000
1154124600	1-1541	2460	PIPE ASM.; FUEL	000001	000001
1154124610	1-1541	2461	PIPE; FUEL	000003	000000
1154124620	1-1541	2462	PIPE; FUEL	000000	000000
1154124640	1-1541	2464	PIPE;INJ NO 1	000000	000000
1154124650	1-1541	2465	PIPE;INJ NO 2	000000	000000

1154124660	1-1541	2466	PIPE; INJ NO 3	000000	000000
1154124670	1-1541	2467	PIPE; INJ NO 4	000000	000000
1154124680	1-1541	2468	PIPE; INJ NO 5	000000	000000
1154124711	1-1541	2471	PIPE ASM; FUEL	000000	000021
1154124840	1-1541	2484	PIPE; FUEL, LEAK OFF	000000	000000
1154125041	1-1541	2504	PIPE ASM; INJ 6RB1	000000	000004
1154125051	1-1541	2505	PIPE ASM; INJ 6RB1	000000	000001
1154125061	1-1541	2506	PIPE ASM; INJ 6RB1	000000	000002
1154125071	1-1541	2507	PIPE ASM; INJ 6RB1	000000	000002
1154125081	1-1541	2508	PIPE ASM; INJ 6RB1	000000	000001
1154125091	1-1541	2509	PIPE ASM; INJ 6RB1	000000	000004
1154125223	1-1541	2522	PIPE ASM; INJ	000001	000000
1154125233	1-1541	2523	PIPE ASM; INJ	000000	000004
1154125241	1-1541	2524	PIPE ASM; INJ. #4	000000	000000
1154125252	1-1541	2525	PIPE ASM; INJ	000000	000000
1154125253	1-1541	2525	PIPE ASM; INJ	000001	000000
1154125262	1-1541	2526	PIPE ASM; INJ	000000	000000
1154125263	1-1541	2526	PIPE ASM; INJ	000001	000001
1154125270	1-1541	2527	PIPE ASM; INJ	000000	000000
1154125273	1-1541	2527	PIPE ASM; INJ	000003	000004
1154125380	1-1541	2538	PIPE ASM; INJECTION	000000	000000
1154126310			FUEL PIPE ASM	000000	000000
1154126400			PIPE ASM; FUEL	000000	000000
1154126401	1-1541	2640	PIPE ASM; FUEL	000000	000001
1154126460	1-1541	2646	PIPE ASM; FUEL 6BD1	000000	000000
1154126461	1-1541	2646	PIPE ASM; FUEL 6BD1	000001	000007
1154126470	1-1541	2647	PIPE ASM; FUEL	000001	000000
1154126480	1-1541	2648	PIPE ASM; FUEL	000001	000000
1154126540	1-1541	2654	PIPE ASM; E/PUMP E120	000003	000000
1154126550	1-1541	2655	PIPE ASM; FILTER-INJ PUMP	000000	000000
1154126570	1-1541	2657	PIPE ASM; LEAK E120	000000	000000
1154126680	1-1541	2668	PIPE: #1	000000	000000
1154126690	1-1541	2669	PIPE: #2	000000	000000
1154126700	1-1541	2670	PIPE: #3	000000	000000
1154126710	1-1541	2671	PIPE: #4	000000	000000
1154127090	1-1541	2709	PIPE ASM; INJECTION	000002	000000
1154127412	1-1541	2741	PIPE ASM; INJECTION LEAK	000000	000000
1154127431	1-1541	2743	PIPE; INJECTOR	000000	000001
1154127750	1-1541	2775	PIPE ASM; INJ	000000	000000
1154127751	1-1541	2775	PIPE ASM; INJ	000000	000000
1154127752	1-1541	2775	PIPE ASM; INJ	000002	000000
1154127760	1-1541	2776	PIPE; INJ. NO 6	000000	000000
1154128330	1-1541	2833	PIPE ASM; INJECTION	000000	000000
1154128580	1-1541	2858	PIPE ASM; INJECTION 6SA1	000000	000000
1154128590	1-1541	2859	PIPE ASM; INJECTION	000001	000000
1154128600	1-1541	2860	PIPE ASM; FILTER	000000	000000
1154128611	1-1541	2861	PIPE ASM; FUEL	000000	000000

1154128630	1-1541	2863	PIPE ASM;FEED P	000000	000000
1154128800	1-1541	2880	PIPE ASM; INJECTION #1	000000	000000
1154128810	1-1541	2881	PIPE ASM; INJ #2	000000	000000
1154128820	1-1541	2882	PIPE ASM; INJ #3	000000	000000
1154128830	1-1541	2883	PIPE ASM; INJ #4	000000	000000
1154128840	1-1541	2884	PIPE ASM; INJ #5	000000	000000
1154128850	1-1541	2885	PIPE ASM; INJ #6	000000	000000
1154128851	1-1541	2885	PIPE ASM; INJ #6	000000	000000
1154129180	1-1541	2918	PIPE ASM; F/F-PUMP-LEAK	000007	000000
1154130170	1-1541	3017	PIPE ASM; FUEL, M/V-F/F	000000	000000
1154130410	1-1541	3041	PIPE ASM; INJ.	000000	000012
1154130420	1-1541	3042	PIPE ASM; INJ.	000000	000008
1154130430	1-1541	3043	PIPE ASM; INJ.	000001	000004
1154130440	1-1541	3044	PIPE ASM; INJ.	000000	000004
1154130450	1-1541	3045	PIPE ASM; INJ.	000000	000003
1154130460	1-1541	3046	PIPE ASM; INJ.	000000	000012
1154131131	1-1541	3113	PIPE ASM; FILTER-INJ PUMP	000002	000000
1154131520	1-1541	3152	PIPE; FUEL FEED	000006	000000
1154131690	1-1541	3169	PIPE;INJ NO 1	000000	000000
1154131691	1-1541	3169	PIPE;INJ NO 1	000000	000000
1154131692	1-1541	3169	PIPE;INJ NO 1	000000	000000
1154131693	1-1541	3169	PIPE;INJ NO 1	000000	000000
1154131700	1-1541	3170	PIPE;INJ NO 2	000000	000000
1154131701	1-1541	3170	PIPE;INJ NO 2	000000	000000
1154131702	1-1541	3170	PIPE;INJ NO 2	000001	000001
1154131710	1-1541	3171	PIPE; INJ NO 3	000000	000000
1154131711	1-1541	3171	PIPE; INJ NO 3	000000	000000
1154131712	1-1541	3171	PIPE; INJ NO 3	000000	000003
1154131720	1-1541	3172	PIPE;INJ NO 4	000000	000000
1154131721	1-1541	3172	PIPE;INJ NO 4	000000	000000
1154131722	1-1541	3172	PIPE;INJ NO 4	000000	000002
1154131730	1-1541	3173	PIPE; INJ NO 5	000000	000000
1154131731	1-1541	3173	PIPE; INJ NO 5	000000	000000
1154131732	1-1541	3173	PIPE; INJ NO 5	000001	000001
1154131741	1-1541	3174	PIPE;INJ.NO 6	000000	000000
1154131742	1-1541	3174	PIPE;INJ.NO 6	000000	000000
1154131743	1-1541	3174	PIPE;INJ.NO 6	000000	000003
1154131750	1-1541	3175	PIPE; SED-TO-F/PUMP	000003	000000
1154131760	1-1541	3176	PIPE ASM; FUEL INJ. NO. 1	000000	000000
1154131761	1-1541	3176	PIPE ASM; FUEL INJ. NO. 1	000001	000000
1154131771	1-1541	3177	PIPE ASM; FUEL INJ. NO. 2	000002	000000
1154131780	1-1541	3178	PIPE ASM; FUEL INJ. NO. 3	000000	000000
1154131781	1-1541	3178	PIPE ASM; FUEL INJ. NO. 3	000004	000000
1154131790	1-1541	3179	PIPE ASM; FUEL INJ. NO. 4	000000	000000
1154131791	1-1541	3179	PIPE ASM; FUEL INJ. NO. 4	000001	000003
1154131801	1-1541	3180	PIPE ASM; FUEL INJ. NO. 5	000000	000002
1154131810	1-1541	3181	PIPE ASM; FUEL INJ. NO. 6	000000	000000

1154131811	1-1541	3181	PIPE ASM; FUEL INJ. NO. 6	000001	000001
1154131880	1-1541	3188	PIPE ASM:FUEL	000000	000000
1154132051	1-1541	3205	PIPE ASM; FUEL, INJ PUMP-	000000	000000
1154132170	1-1541	3217	PIPE ASM:FUEL	000000	000000
1154132180	1-1541	3218	PIPE ASM:FUEL	000000	000000
1154132190	1-1541	3219	PIPE ASM:FUEL	000000	000000
1154132353	1-1541	3235	PIPE ASM; INJ #1 6BG1	000000	000012
1154132363	1-1541	3236	PIPE ASM; INJ #2 6BG1	000000	000014
1154132372	1-1541	3237	PIPE ASM; INJECTION NO. 3	000000	000000
1154132383	1-1541	3238	PIPE ASM; INJ #4 6BG1	000000	000021
1154132393	1-1541	3239	PIPE ASM; INJ #5 6BG1	000000	000011
1154132403	1-1541	3240	PIPE ASM; INJ #6 6BG1	000000	000010
1154132510	1-1541	3251	PIPE ASM; FUEL 6SA1T	000000	000000
1154133570	1-1541	3357	PIPE ASM; FUEL	000000	000003
1154133580	1-1541	3358	PIPE ASM; FUEL	000002	000000
1154133590	1-1541	3359	PIPE ASM; INJ #1	000000	000000
1154133600	1-1541	3360	PIPE ASM; INJ	000000	000000
1154133610	1-1541	3361	PIPE ASM; INJ	000000	000000
1154133620	1-1541	3362	PIPE ASM; INJ	000000	000000
1154133630	1-1541	3363	PIPE ASM; INJ	000000	000000
1154133640	1-1541	3364	PIPE ASM; INJ	000000	000000
1154133960	1-1541	3396	PIPE ASM;FUEL	000000	000003
1154134100	1-1541	3410	PIPE ASM; FUEL FILER	000001	000002
1154134110			PIPE ASM; INJECTION VALVE	000000	000000
1154134111			PIPE ASM; INJECTION VALVE	000004	000000
1154135080	1-1541	3508	PIPE ASM;FUEL	000000	000000
1154135081	1-1541	3508	PIPE ASM;FUEL	000000	000005
1154135090	1-1541	3509	PIPE ASM;FUEL	000000	000007
1154135210	1-1541	3521	PIPE ASM;FUEL	000000	000001
1154135220	1-1541	3522	PIPE; FUEL,FILT	000000	000000
1154135230	1-1541	3523	PIPE ASM; FUEL	000000	000000
1154135231	1-1541	3523	PIPE ASM; FUEL	000000	000000
1154135232	1-1541	3523	PIPE ASM; FUEL	000000	000008
1154135400	1-1541	3540	PIPE;INJ NO.2	000000	000000
1154135401	1-1541	3540	PIPE; INJ,NO.2	000000	000000
1154135501	1-1541	3550	PIPE ASM; FUEL	000001	000015
1154135511	1-1541	3551	PIPE ASM; FUEL	000001	000008
1154137711	1-1541	3771	PIPE ASM; FUEL, SEDI-F/P	000002	000000
1154138261	1-1541	3826	PIPE ASM; INJECTION #1	000000	000000
1154138271	1-1541	3827	PIPE ASM; INJ.#2	000000	000000
1154138273	1-1541	3827	PIPE ASM; INJ.#2	000002	000000
1154138282	1-1541	3828	PIPE ASM; INJ.#3	000000	000000
1154138283	1-1541	3828	PIPE ASM; INJ#3	000000	000001
1154138292	1-1541	3829	PIPE ASM; INJ.#4	000000	000000
1154138293	1-1541	3829	PIPE ASM; INJ.#4	000000	000000
1154138301	1-1541	3830	PIPE ASM; INJ.#5	000000	000000
1154138303	1-1541	3830	PIPE ASM; INJ.#5	000001	000000

1154138311	1-1541	3831	PIPE ASM; INJ. #6	000000	000000
1154138313	1-1541	3831	PIPE ASM; INJ. #6	000000	000002
1154138610	1-1541	3861	PIPE; INJ NO.1	000000	000000
1154138611	1-1541	3861	PIPE; INJ,NO.1	000000	000000
1154138630	1-1541	3863	PIPE; INJ NO.3	000000	000000
1154138631	1-1541	3863	3PIPE; INJ,NO.3	000000	000000
1154138640	1-1541	3864	PIPE; INJ NO.4	000000	000000
1154138641	1-1541	3864	PIPE; INJ,NO.4	000000	000000
1154138740	1-1541	3874	PIPE ASM; FEED PUMP TO FI	000002	000003
1154138750	1-1541	3875	PIPE ASM; FUEL FILTER TO	000001	000001
1154138790	1-1541	3879	PIPE ASM; INJECTION	000000	000001
1154138800	1-1541	3880	PIPE ASM; INJECTION	000002	000002
1154138810	1-1541	3881	PIPE ASM; FUEL, FILTER 6B	000000	000000
1154138811	1-1541	3881	PIPE ASM; FUEL, FILTER 6B	000000	000001
1154138820	1-1541	3882	PIPE ASM; FEED PUMP-FILTE	000001	000002
1154138830	1-1541	3883	PIPE ASM; FILTER-INJ PUMP	000000	000000
1154138840	1-1541	3884	PIPE ASM; RETURN 6BD1TPW-	000000	000000
1154138841	1-1541	3884	PIPE ASM; RETURN 6BD1TPW-	000000	000005
1154139200	1-1541	3920	PIPE ASM; FUEL 6SA1	000002	000000
1154139290	1-1541	3929	PIPE; FUEL,FEED	000000	000001
1154139300	1-1541	3930	PIPE; FUEL,FUEL	000000	000001
1154139350	1-1541	3935	PIPE ASM; FUEL, INJ LEAK	000000	000000
1154139351	1-1541	3935	PIPE ASM; FUEL, INJ LEAK	000003	000000
1154139360	1-1541	3936	PIPE ASM; INJECTION	000000	000000
1154139380	1-1541	3938	PIPE ASM; FUEL RETURN	000000	000000
1154139400	1-1541	3940	PIPE ASM; INJ. #1	000000	000000
1154139401	1-1541	3940	PIPE ASM; INJ. #1	000001	000000
1154139410	1-1541	3941	PIPE ASM; INJ. #2	000000	000000
1154139411	1-1541	3941	PIPE ASM; INJ. #2	000001	000000
1154139420	1-1541	3942	PIPE ASM; INJ. #3	000000	000000
1154139421	1-1541	3942	PIPE ASM; INJ. #3	000000	000001
1154139430	1-1541	3943	PIPE ASM; INJ.#4	000000	000000
1154139431	1-1541	3943	PIPE ASM; INJ.#4	000000	000001
1154139440	1-1541	3944	PIPE ASM; INJ. #5	000000	000000
1154139441	1-1541	3944	PIPE ASM; INJ. #5	000001	000000
1154139450	1-1541	3945	PIPE ASM; INJ. #6	000000	000000
1154139451	1-1541	3945	PIPE ASM; INJ. #6	000000	000001
1154139540	1-1541	3954	PIPE; INJ NO.5	000000	000000
1154139541	1-1541	3954	PIPE; INJ,NO.5	000000	000000
1154139590	1-1541	3959	PIPE; INJ NOZZL	000000	000003
1154139820	1-1541	3982	PIPE ASM; SEDIMENT-F/PUMP	000000	000000
1154140220	1-1541	4022	PIPE; INJ NO 5	000000	000007
1154140221	1-1541	4022	PIPE; INJ NO 5	000000	000000
1154140230	1-1541	4023	PIPE; INJ NO 6	000000	000000
1154140231	1-1541	4023	PIPE; INJ NO 6	000000	000003
1154140360	1-1541	4036	PIPE ASM; FUEL F/PUMP-FLT	000000	000000
1154140371	1-1541	4037	PIPE ASM; FUEL, F/FILTER	000000	000000

1154140380	1-1541	4038	PIPE ASM; NOZZLE 6SA1T	000000	000000
1154140391	1-1541	4039	PIPE ASM; FUEL RETURN	000000	000000
1154140441	1-1541	4044	PIPE ASM; INJ #1	000002	000000
1154140450	1-1541	4045	PIPE; INJ NO 2	000000	000006
1154140451	1-1541	4045	PIPE; INJ NO 2	000000	000000
1154140461	1-1541	4046	PIPE ASM; INJ #3	000000	000001
1154140471	1-1541	4047	PIPE ASM; INJ #4	000000	000001
1154140491	1-1541	4049	PIPE; INJ,NO.6	000000	000000
1154140570	1-1541	4057	PIPE; SED-TO-F/PUMP	000000	000001
1154140780	1-1541	4078	PIPE ASM; NOZZLE LEAK OFF	000000	000000
1154140930	1-1541	4093	PIPE ASM; FUEL 6SA1T	000000	000000
1154140931	1-1541	4093	PIPE ASM; FUEL 6SA1T	000001	000000
1154140940	1-1541	4094	PIPE ASM; FUEL 6SA1T	000001	000000
1154140950	1-1541	4095	PIPE ASM; FUEL 6SA1T	000000	000000
1154141200	1-1541	4120	PIPE ASM; FUEL, FILTER	000000	000000
1154141201	1-1541	4120	PIPE ASM; FUEL, FILTER	000000	000000
1154141470	1-1541	4147	PIPE ASM; INJECTION	000000	000000
1154141471	1-1541	4147	PIPE ASM; INJECTION	000000	000000
1154141830	1-1541	4183	PIPE; FUEL,FUEL	000000	000003
1154141850	1-1541	4185	PIPE; INJ NOZZL	000000	000003
1154141920	1-1541	4192	PIPE ASM; INJECTION 6SA1	000002	000000
1154141930	1-1541	4193	PIPE ASM; FUEL, RETURN	000000	000000
1154141940	1-1541	4194	PIPE FUEL	000001	000000
1154142020	1-1541	4202	PIPE ASM; INJECTION FILTE	000001	000000
1154142340	1-1541	4234	PIPE; INJ. NOZZLE	000002	000002
1154142511	1-1541	4251	PIPE ASM; INJECTION	000000	000000
1154142940	1-1541	4294	PIPE ASM; FUEL, PUMP-FILT	000000	000002
1154142950	1-1541	4295	PIPE ASM;FILTER-INJ PUMP	000000	000010
1154142962	1-1541	4296	PIPE ASM; FUEL FILTER	000000	000004
1154143100	1-1541	4310	PIPE ASM; INJECTION NO. 3	000001	000000
1154143330	1-1541	4333	PIPE ASM; INJ. LEAK-OFF	000000	000000
1154143400	1-1541	4340	PIPE; FUEL	000000	000000
1154143401	1-1541	4340	PIPE; FUEL	000004	000003
1154143420	1-1541	4342	PIPE; FUEL	000004	000000
1154143430	1-1541	4343	PIPE ASM; INJECTION NO. 6	000000	000000
1154143432	1-1541	4343	PIPE ASM; INJECTION NO. 6	000001	000000
1154143440	1-1541	4344	PIPE;FUEL,FUEL	000000	000001
1154143470	1-1541	4347	PIPE; FUEL,FEED	000000	000000
1154143560	1-1541	4356	PIPE ASM; INJECTION	000000	000000
1154143741	1-1541	4374	PIPE ASM; SEDIMENTER-PUMP	000000	000000
1154143830	1-1541	4383	PIPE ASM; INJECTION NO. 4	000000	000001
1154143930	1-1541	4393	PIPE ASM; INJ FEED PUMP-F	000001	000001
1154143940	1-1541	4394	PIPE ASM; INJ FILTER-PUMP	000000	000002
1154143951	1-1541	4395	PIPE ASM; INJECTION RETUR	000002	000001
1154143970	1-1541	4397	PIPE ASM; INJECTION LEAK-	000000	000009
1154143990	1-1541	4399	PIPE ASM; SEDIMENT F/PUMP	000000	000000
1154144070	1-1541	4407	PIPE ASM; INJ. FLTR-VALVE	000001	000000

1154144080	1-1541	4408	PIPE ASM; INJ. VALVE-HTR	000000	000000
1154144090	1-1541	4409	PIPE ASM; FUEL FEED PUMP	000000	000000
1154144100	1-1541	4410	PIPE ASM; FILTER LEAK-OFF	000000	000000
1154144110	1-1541	4411	PIPE ASM; F.F.-INJ. PUMP	000000	000000
1154144260	1-1541	4426	PIPE ASM; FUEL PUMP-FILTE	000000	000003
1154144270	1-1541	4427	PIPE ASM; FUEL PUMP-FILTE	000003	000000
1154144280	1-1541	4428	PIPE ASM; FUEL FILTER	000000	000000
1154144281	1-1541	4428	PIPE ASM; FUEL FILTER	000003	000000
1154144320	1-1541	4432	PIPE ASM; F/PUMP-FILTER	000000	000000
1154144330	1-1541	4433	PIPE ASM; FILTER-INJECTIO	000000	000000
1154144350	1-1541	4435	PIPE ASM; FUEL RETURN	000000	000000
1154145040	1-1541	4504	PIPE ASM; INJECTION FILTE	000000	000013
1154145080	1-1541	4508	PIPE ASM; FUEL, PUMP-FILT	000000	000002
1154145090	1-1541	4509	PIPE ASM; FUEL, FILTER-PU	000000	000001
1154145100	1-1541	4510	PIPE ASM; F/F PUMP-LEAK	000000	000000
1154145101	1-1541	4510	PIPE ASM; F/F PUMP-LEAK	000000	000001
1154145190	1-1541	4519	PIPE ASM; INJECTION NO. 6	000000	000002
1154145340	1-1541	4534	FUEL PIPE ASM	000000	000000
1154145350	1-1541	4535	PIPE; FUEL, NOZZLE LEAK	000000	000000
1154145410	1-1541	4541	PIPE ASM; FUEL SED-FEED P	000000	000005
1154145560	1-1541	4556	PIPE ASM; INJECTION SEDI-	000000	000005
1154145570	1-1541	4557	PIPE ASM; FUEL RETURN	000000	000001
1154145960	1-1541	4596	PIPE	000000	000007
1154145970	1-1541	4597	PIPE ASM; INJECTION	000000	000000
1154145971	1-1541	4597	PIPE ASM; INJECTION	000000	000005
1154145980	1-1541	4598	PIPE ASM; INJECTION	000000	000000
1154146000	1-1541	4600	PIPE ASM; INJECTION	000000	000001
1154146010	1-1541	4601	PIPE ASM; INJECTION	000000	000000
1154146011	1-1541	4601	PIPE ASM; INJECTION	000000	000001
1154146020	1-1541	4602	PIPE ASM; INJECTION	000000	000001
1154146180	1-1541	4618	PIPE ASM.; FUEL, FILER-PUMP	000000	000000
1154146190	1-1541	4619	PIPE ASM.; FUEL,	000002	000000
1154146280	1-1541	4628	PIPE ASM; INJECTION NO. 1	000000	000001
1154146460	1-1541	4646	PIPE ASM; INJECTION NO. 2	000000	000000
1154146470	1-1541	4647	PIPE ASM; INJECTION NO. 5	000000	000001
1154146801	1-1541	4680	PIPE ASM., F/F-PUMP-LEAK	000000	000000
1154146860	1-1541	4686	PIPE ASM; FUEL	000000	000005
1154146870	1-1541	4687	PIPE ASM; FUEL	000006	000000
1154146880	1-1541	4688	PIPE ASM; FUEL	000000	000006
1154147100	1-1541	4710	PIPE ASM; INJECTION #1	000000	000000
1154147111	1-1541	4711	PIPE ASM; INJECTION	000000	000000
1154147112	1-1541	4711	PIPE ASM; INJECTION	000000	000001
1154147120	1-1541	4712	PIPE; INJ. #1	000000	000000
1154147121	1-1541	4712	PIPE; INJ. #1	000003	000000
1154147521	1-1541	4752	PIPE ASM; INJECTION	000000	000001
1154147531	1-1541	4753	PIPE ASM; INJECTION	000001	000001
1154147541	1-1541	4754	PIPE ASM; INJECTION	000001	000001

1154147551	1-1541	4755	PIPE ASM; INJECTION	000001	000000
1154147561	1-1541	4756	PIPE ASM; INJECTION	000000	000001
1154147571	1-1541	4757	PIPE; INJ. NO. 6	000000	000001
1154147590	1-1541	4759	PIPE ASM:FD-PMP-FUEL FILT	000000	000000
1154147600	1-1541	4760	PIPE ASM:FUEL FILT-INJ PM	000000	000000
1154147690	1-1541	4769	PIPE ASM;FUEL,PUMP-FILTER	000000	000004
1154148040	1-1541	4804	PIPE ASM; FILTER LEAK OFF	000000	000001
1154148050	1-1541	4805	PIPE ASM: FUEL RETURN	000000	000000
1154148102	1-1541	4810	PIPE ASM; INJECTION #4	000000	000001
1154148111	1-1541	4811	PIPE ASM; INJECTION NO. 3	000000	000011
1154148121	1-1541	4812	PIPE ASM; INJECTION	000000	000000
1154148122	1-1541	4812	PIPE ASM; INJECTION	000001	000001
1154148130	1-1541	4813	PIPE ASM; INJ. #3	000000	000000
1154148131	1-1541	4813	PIPE ASM; INJ. #3	000000	000000
1154148210	1-1541	4821	PIPE ASM., INJ., NO.5	000000	000000
1154148211	1-1541	4821	PIPE ASM., INJ., NO.5	000000	000000
1154148650	1-1541	4865	PIPE; FUEL, PUMP-FLTR	000000	000000
1154148820	1-1541	4882	PIPE ASM.;SUCTION, F/PUMP	000000	000000
1154149160	1-1541	4916	PIPE; FUEL,FEED	000000	000001
1154149290	1-1541	4929	PIPE; FUEL, OVERFLOW	000000	000000
1154149340	1-1541	4934	PIPE ASM.;SEDIMENTER-PUMP	000000	000000
1154149360	1-1541	4936	PIPE ASM.;FUEL,FILTER-INJ	000000	000001
1154149370	1-1541	4937	PIPE ASM LEAK OFF	000000	000000
1154149371	1-1541	4937	PIPE ASM LEAK OFF	000002	000001
1154149380	1-1541	4938	FUEL LINE	000000	000001
1154149390	1-1541	4939	PIPE ASM.; INJ. LEAK-OFF	000001	000001
1154149402	1-1541	4940	PIPE ASM; INJECTION, NO.	000001	000000
1154149412	1-1541	4941	PIPE ASM; INJECTION, NO.	000000	000002
1154149422	1-1541	4942	PIPE ASM; INJECTION, NO.	000002	000000
1154149432	1-1541	4943	PIPE ASM; INJECTION, NO.	000002	000000
1154149442	1-1541	4944	PIPE ASM; INJECTION, NO.	000000	000001
1154149452	1-1541	4945	PIPE ASM; INJECTION, NO.	000002	000000
1154149471	1-1541	4947	PIPE ASM; FEED PUMP-FILTE	000000	000000
1154149481	1-1541	4948	PIPE ASM; FILTER-INJ PUMP	000000	000001
1154149491	1-1541	4949	PIPE ASM; FILTER LEAK OFF	000000	000001
1154149560	1-1541	4956	FUEL LINE	000000	000001
1154149570	1-1541	4957	FUEL LINE	000001	000000
1154149571	1-1541	4957	FUEL LINE	000000	000000
1154149580	1-1541	4958	FUEL LINE	000001	000000
1154149590	1-1541	4959	FUEL LINE	000000	000000
1154149730	1-1541	4973	PIPE ASM; FUEL,	000000	000001
1154149740			FUEL PIPE	000000	000000
1154149741			FUEL PIPE	000000	000000
1154149991			FUEL PIPE	000000	000000
1154150020			PIPE ASM; F/FLTR-F/PUMP	000000	000007
1154150030	1-1541	5003	PIPE ASM; F/FLTR-I/PUMP	000000	000001
1154150040	1-1541	5004	PIPE ASM; FUEL/LEAK	000000	000000

1154150051	1-1541	5005	PIPE ASM; FUEL/RETURN	000000	000007
1154150100	1-1541	5010	PIPE ASM; INJ. #1	000000	000006
1154150110	1-1541	5011	PIPE ASM; INJ. #2	000018	000000
1154150120	1-1541	5012	PIPE ASM; INJ. #3	000014	000000
1154150130	1-1541	5013	PIPE ASM; INJ. #4	000002	000000
1154150140	1-1541	5014	PIPE ASM; INJ. #5	000003	000002
1154150150	1-1541	5015	PIPE ASM; INJ. #6	000003	000000
1154150480	1-1541	5048	PIPE ASM: LEAK OFF, OUT	000000	000001
1154151070	1-1541	5107	PIPE FUEL VALVE HEATER	000000	000001
1154151470	1-1541	5147	PIPE ASM; INJ.#1	000001	000000
1154151480	1-1541	5148	PIPE ASM; INJ.#2	000000	000000
1154151490	1-1541	5149	PIPE ASM; INJ.#3	000001	000000
1154151500	1-1541	5150	PIPE ASM; INJ.#4	000000	000000
1154151510	1-1541	5151	PIPE ASM; INJ.#5	000000	000000
1154151520	1-1541	5152	PIPE ASM; INJ.#6	000000	000000
1154151830	1-1541	5183	PIPE ASM; INJ.#1	000000	000000
1154151831	1-1541	5183	PIPE ASM; INJ.#1	000000	000000
1154151832	1-1541	5183	PIPE ASM; INJ.#1	000000	000003
1154151840	1-1541	5184	PIPE ASM; INJ.#2	000000	000000
1154151841	1-1541	5184	PIPE ASM; INJ.#2	000000	000000
1154151842	1-1541	5184	PIPE ASM; INJ.#2	000000	000002
1154151850	1-1541	5185	PIPE ASM; INJ.#3	000000	000000
1154151851	1-1541	5185	PIPE ASM; INJ.#3	000000	000000
1154151852	1-1541	5185	PIPE ASM; INJ.#3	000000	000003
1154151860	1-1541	5186	PIPE ASM; INJ.#4	000000	000000
1154151861	1-1541	5186	PIPE ASM; INJ.#4	000000	000000
1154151862	1-1541	5186	PIPE ASM; INJ.#4	000000	000004
1154151870	1-1541	5187	PIPE ASM; INJ.#5	000000	000000
1154151871	1-1541	5187	PIPE ASM; INJ.#5	000000	000000
1154151872	1-1541	5187	PIPE ASM; INJ.#5	000000	000004
1154151880	1-1541	5188	PIPE ASM; INJ.#6	000000	000000
1154151881	1-1541	5188	PIPE ASM; INJ.#6	000000	000000
1154151882	1-1541	5188	PIPE ASM; INJ.#6	000000	000002
1154151971	1-1541	5197	PIPE ASM: INJ #1	000000	000001
1154151981	1-1541	5198	PIPE ASM: INJ #2	000000	000001
1154151991	1-1541	5199	PIPE ASM: INJ #3	000000	000001
1154152001	1-1541	5200	PIPE ASM: INJ #4	000000	000001
1154152011	1-1541	5201	PIPE ASM: INJ #4	000000	000001
1154152021	1-1541	5202	PIPE ASM: INJ #6	000000	000001
1154152370	1-1541	5237	PIPE ASM: FUEL	000000	000001
1154152371	1-1541	5237	PIPE ASM: FUEL	000000	000000
1154152380	1-1541	5238	PIPE ASM; FUEL, INJ PUMP-	000000	000000
1154152390	1-1541	5239	PIPE ASM; FUEL	000002	000000
1154152420	1-1541	5242	PIPE ASM; INJ #1	000001	000000
1154152430	1-1541	5243	PIPE ASM; INJ #2	000001	000000
1154152440	1-1541	5244	PIPE ASM; INJ #3	000001	000000
1154152450	1-1541	5245	PIPE; INJ #4	000001	000000

1154152460	1-1541	5246	PIPE; INJ #5	000001	000000
1154152470	1-1541	5247	PIPE; INJ #6	000001	000000
1154152580	1-1541	5258	PIPE ASM: NOZ LEAK OFF	000000	000000
1154154440	1-1541	5444	PIPE ASM: INJ #1	000000	000001
1154154450	1-1541	5445	PIPE ASM: INJ #2	000000	000001
1154154460	1-1541	5446	PIPE ASM: INJ #3	000000	000001
1154154470	1-1541	5447	PIPE ASM: INJ #5	000000	000001
1154154480	1-1541	5448	PIPE ASM: INJ #5	000000	000001
1154154651	1-1541	5465	PIPE ASM:FUEL FILT-LEAK	000000	000001
1154154750	1-1541	5475	PIPE	000000	000001
1154154760	1-1541	5476	PIPE	000000	000001
1154154770	1-1541	5477	PIPE	000000	000001
1154154780	1-1541	5478	PIPE	000000	000001
1154154790	1-1541	5479	PIPE	000000	000001
1154154800	1-1541	5480	PIPE	000000	000001
1154156990	1-1541	5699	PIPE ASM: INJ #6	000000	000001
1154157592	1-1541	5759	PIPE	000000	000001
1154157601	1-1541	5760	PIPE	000000	000001
1154158100	1-1541	5810	PIPE ASM;FUEL,SEDIMENTER-	000000	000000
1154158102	1-1541	5810	PIPE ASM;FUEL,SEDIMENTER-	000000	000000
1154158150	1-1541	5815	PIPE;FUEL,RETURN	000000	000004
1154158160	1-1541	5816	PIPE ASM.;SEDIMENT-F/PUMP	000000	000003
1154158430	1-1541	5843	PIPE ASM;FUEL,SEDIMENTER-	000000	000003
1154158440	1-1541	5844	PIPE ASM;FEED PUMP-FILTER	000000	000021
1154158450	1-1541	5845	PIPE ASM;FILTER-INJ.PUMP	000000	000003
1154158460	1-1541	5846	PIPE ASM;FILTER LEAK OFF	000000	000002
1154158470	1-1541	5847	PIPE ASM;INJECTION,NO.1	000000	000000
1154158471	1-1541	5847	PIPE ASM;INJECTION,NO.1	000000	000005
1154158480	1-1541	5848	PIPE ASM;INJECTION,NO.2	000000	000000
1154158481	1-1541	5848	PIPE ASM;INJECTION,NO.2	000000	000029
1154158490	1-1541	5849	PIPE ASM;INJECTION,NO.3	000000	000000
1154158491	1-1541	5849	PIPE ASM;INJECTION,NO.3	000000	000021
1154158500	1-1541	5850	PIPE ASM;INJECTION,NO.4	000000	000000
1154158501	1-1541	5850	PIPE ASM;INJECTION,NO.4	000000	000054
1154158511	1-1541	5851	PIPE ASM;INJECTION,NO.5	000000	000000
1154158512	1-1541	5851	PIPE ASM;INJECTION,NO.5	000000	000013
1154158521	1-1541	5852	PIPE ASM;INJECTION,NO.6	000000	000000
1154158522	1-1541	5852	PIPE ASM;INJECTION,NO.6	000000	000017
1154158540	1-1541	5854	PIPE ASM; FUEL SEDIMENT	000001	000005
1154158840	1-1541	5884	PIPE ASM;FUEL,SEDIMENTER-	000001	000000
1154159350	1-1541	5935	PIPE	000000	000001
1154159360	1-1541	5936	INJECTION PIPE	000000	000001
1154159370	1-1541	5937	INJECTION PIPE	000000	000001
1154159380	1-1541	5938	INJECTION PIPE	000000	000001
1154159390	1-1541	5939	INJECTION PIPE	000000	000001
1154159410	1-1541	5941	INJECTION PIPE	000000	000001
1154159990	1-1541	5999	PIPE ASM.; INJ., NO. 1(S)	000000	000000

1154160010	1-1541	6001	PIPE ASM.; INJ., NO. 2(S)	000000	000000
1154160020	1-1541	6002	PIPE ASM.; INJ., NO. 3(S)	000000	000000
1154160030	1-1541	6003	PIPE ASM.; INJ., NO. 4(S)	000000	000000
1154160040	1-1541	6004	PIPE ASM.; INJ., NO. 5(S)	000000	000000
1154160050	1-1541	6005	PIPE ASM.; INJ., NO. 6(S)	000000	000000
1154160110	1-1541	6011	PIPE ASM.; INJ., NO. 1(S)	000001	000000
1154160120	1-1541	6012	PIPE ASM.; INJ., NO. 2(S)	000003	000000
1154160130	1-1541	6013	PIPE ASM.; INJ., NO. 3(S)	000001	000000
1154160140	1-1541	6014	PIPE ASM.; INJ., NO. 4(S)	000000	000001
1154160150	1-1541	6015	PIPE ASM.; INJ., NO. 5(S)	000000	000003
1154160160	1-1541	6016	PIPE ASM.; INJ., NO. 6(S)	000000	000002
1154160280	1-1541	6028	PIPE	000000	000001
1154160290	1-1541	6029	PIPE	000000	000001
1154160300	1-1541	6030	PIPE	000000	000001
1154160310	1-1541	6031	PIPE;INJ,NOZZLE LEAK OFF	000000	000001
1154160890	1-1541	6089	PIPE;FUEL,RETURN	000000	000000
1154161390	1-1541	6139	PIPE ASM; LEAK OFF	000000	000000
1154162090	1-1541	6209	PIPE; FUEL, RETURN	000000	000010
1154164130	1-1541	6413	PIPE; FUEL,FUEL FILTER TO	000000	000001
1154164140	1-1541	6414	PIPE;FUEL,FUEL FILT LEAK	000000	000001
1154164170	1-1541	6417	PIPE ASM; FUEL,FILTER TO	000000	000002
1154164180	1-1541	6418	PIPE; FUEL,SEDIMENTER TO	000000	000001
1154164420	1-1541	6442	PIPE; FUEL,FEED PUMP TO F	000000	000001
1154164660	1-1541	6466	PIPE; INJ NO 2	000000	000005
1154164681	1-1541	6468	PIPE; INJ NO 4	000000	000002
1154164691	1-1541	6469	PIPE; INJ NO 5	000000	000005
1154164700	1-1541	6470	PIPE; INJ NO 6	000000	000005
1154164870	1-1541	6487	PIPE: INJ NO.1	000000	000006
1154164880	1-1541	6488	PIPE: INJ NO.2	000000	000015
1154164890	1-1541	6489	PIPE: INJ NO.3	000000	000001
1154164900	1-1541	6490	PIPE: INJ NO.4	000000	000000
1154164910	1-1541	6491	PIPE: INJ NO.5	000000	000010
1154164920	1-1541	6492	PIPE: INJ NO.6	000000	000004
1154165120	1-1541	6512	PIPE;INJ NO.1	000000	000000
1154165121	1-1541	6512	PIPE;INJ NO.1	000000	000003
1154165130	1-1541	6513	PIPE;INJ NO.2	000000	000003
1154165140	1-1541	6514	PIPE INJ, NO.2	000000	000003
1154165150	1-1541	6515	PIPE INJ,NO.4	000000	000003
1154165160	1-1541	6516	PIPEN INJ, NO.5	000000	000003
1154165170	1-1541	6517	PIPE INJ NO.6	000000	000005
1154165230	1-1541	6523	PIPE;FUEL FEED PUMP TO FU	000000	000009
1154165240	1-1541	6524	PIPE;FUEL,FUEL FILTER TO	000000	000000
1154165250	1-1541	6525	PIPE ASM; INJ	000000	000007
1154165260	1-1541	6526	PIPE; FUEL FUEL FILTER LE	000000	000007
1154165380	1-1541	6538	PIPE;FUEL FILTER LEAK OFF	000000	000000
1154166170	1-1541	6617	PIPE; INJ NO. 1	000000	000005
1154166180	1-1541	6618	PIP; INJ NO. 3	000000	000005

1154166380	1-1541	6638	PIPE; FUEL, FUEL FILTER L	000000	000002
1154166390	1-1541	6639	PIPE;FUEL, FUEL FILTER TO	000000	000007
1154166400	1-1541	6640	PIPE;FUEL,FEED PMP TO FUE	000000	000003
1154166410	1-1541	6641	PIPE; FUEL, SEDIMENTER TO	000000	000006
1154166540	1-1541	6654	PIPE ASM; INJ	000000	000003
1154166660	1-1541	6666	PIPE ASM;FUEL FILT INJ PM	000002	000001
1154166670	1-1541	6667	PIPE ASM;FD-PMP-FUEL FILT	000001	000001
1154167230	1-1541	6723	PIPE FUEL FEED PUMP FILTE	000000	000001
1154167240	1-1541	6724	PIPE FUEL FILTER INJ PUMP	000000	000000
1154167630	1-1541	6763	PIPE; FUEL FILTER LEAK OF	000000	000001
1154167700	1-1541	6770	PIPE FUEL FILTER LEAK OFF	000000	000000
1154168010	1-1541	6801	PIPE; INJ NOZZLE LEAK OFF	000000	000001
1154168020	1-1541	6802	PIPE; FUEL, SEDIMENTER TO	000000	000001
1154168110	1-1541	6811	PIPE; INJ,C/R	000000	000000
1154168111	1-1541	6811	PIPE; INJ,C/R	000000	000006
1154168120	1-1541	6812	PIPE; INJ,C/R	000000	000000
1154168121	1-1541	6812	PIPE; INJ,C/R	000000	000016
1154168240	1-1541	6824	PIPE; INJ NO. 5	000000	000001
1154168420	1-1541	6842	PIPE; INJ NO.1	000000	000000
1154168421	1-1541	6842	PIPE; INJ NO.1	000000	000000
1154168422	1-1541	6842	PIPE; INJ NO.1	000000	000172
1154168431	1-1541	6843	PIPE; INJ NO.2	000000	000000
1154168432	1-1541	6843	PIPE; INJ NO.2	000000	000000
1154168433	1-1541	6843	PIPE; INJ NO.2	000000	000019
1154168440	1-1541	6844	PIPE; INJ NO.3	000000	000000
1154168441	1-1541	6844	PIPE; INJ NO.3	000000	000000
1154168442	1-1541	6844	PIPE; INJ NO.3	000000	000017
1154168451	1-1541	6845	PIPE; INJ NO.4	000000	000000
1154168452	1-1541	6845	PIPE; INJ NO.4	000000	000031
1154168462	1-1541	6846	PIPE; INJ NO.5	000000	000000
1154168463	1-1541	6846	PIPE; INJ NO.5	000000	000016
1154168470	1-1541	6847	PIPE; INJ NO.6	000000	000000
1154168471	1-1541	6847	PIPE; INJ NO.6	000000	000000
1154168472	1-1541	6847	PIPE; INJ NO.6	000000	000002
1154168510	1-1541	6851	PIPE ASM; LEAK OFF	000000	000000
1154168660	1-1541	6866	PIPE; FUEL,FUEL FILTER LE	000003	000000
1154168700	1-1541	6870	PIPE; FUEL, F/FILTER TO F	000004	000000
1154168710	1-1541	6871	SIPE; FUEL,FEED PUMP TO F	000000	000019
1154168720	1-1541	6872	PIPE; FUEL,FUEL FILTER TO	000000	000003
1154168730	1-1541	6873	PIPE ASM; INJ	000000	000000
1154168731	1-1541	6873	PIPE ASM; INJ	000000	000000
1154168732	1-1541	6873	PIPE ASM; INJ	000000	000002
1154168740	1-1541	6874	PIPE; FUEL,FUEL FILTER LE	000000	000005
1154168750	1-1541	6875	PIPE; FUEL, F/FILTER TO F	000000	000015
1154168770	1-1541	6877	PIPE ASM; FUEL,LEAK OFF	000000	000010
1154168800	1-1541	6880	PIPE; INJ NO 1	000000	000001
1154168810	1-1541	6881	PIPE; INJ NO 2	000000	000001

1154168820	1-1541	6882	PIPE; INJ NO 3	000000	000001
1154168830	1-1541	6883	PIPE; INJ NO 4	000000	000001
1154168840	1-1541	6884	PIPE; INJ NO 5	000000	000001
1154168850	1-1541	6885	PIPE; INJ NO 6	000000	000001
1154168920	1-1541	6892	PIPE ASM; INJECTION	000000	000001
1154168930	1-1541	6893	PIPE ASM; INJECTION	000000	000001
1154190271	1-1541	9027	PACKING;DUST COVER	000000	000000
1154190280	1-1541	9028	COVER; DUST	000000	000000
1154190340	1-1541	9034	BRACKET; FRT	000000	000000
1154190341	1-1541	9034	BRACKET; FRT	000000	000000
1154190351	1-1541	9035	BRACKET; I/PIPE	000000	000000
1154190361	1-1541	9036	CLIP*	000000	000000
1154190610	1-1541	9061	BKT,AIR PIPE FI	000000	000000
1154190720	1-1541	9072	BRACKET; FRT	000000	000000
1154190880	1-1541	9088	STAY; FUEL PIPE	000000	000001
1154190970	1-1541	9097	BRACKET; HARNESS/SENSOR	000000	000007
1154190990	1-1541	9099	CLIP; INJECTION PIPE 6RB1	000000	000023
1154191000	1-1541	9100	CLIP; A FUEL PIPE	000000	000000
1154191010	1-1541	9101	CLIP; B FUEL PIPE	000000	000000
1154191020	1-1541	9102	CLIP; INJECTION PIPE FIX	000000	000000
1154191030	1-1541	9103	BRACKET; INJ. PIPE	000000	000054
1154191040	1-1541	9104	BRACKET; INJECTION PIPE N	000000	000008
1154191060	1-1541	9106	BRACKET; FUEL PIPE CLIP	000000	000000
1154191440	1-1541	9144	BRACKET; FUEL PIPE 6RB1	000001	000002
1154191450	1-1541	9145	BRACKET/CLIP; OIL PIPE	000000	000004
1154191490	1-1541	9149	BRKT;ENG.CONT.W	000003	000000
1154191510	1-1541	9151	BRKT;FUEL PIPE	000000	000020
1154192130	1-1541	9213	BRACKET; INJ. PIPE FIX.	000000	000000
1154192140	1-1541	9214	BRACKET; INJ. PIPE FIX.	000000	000000
1154192151	1-1541	9215	CLIP; FUEL PIPE	000000	000662
1154192162	1-1541	9216	BRACKET; FUEL PIPE	000000	000000
1154192250	1-1541	9225	BRACKET	000000	000000
1154192390	1-1541	9239	BRACKET; INJECTION PIPE F	000001	000000
1154192460	1-1541	9246	BRKT;FUEL PIPE	000000	000001
1154192490	1-1541	9249	BRACKER; INJECTION PIPE F	000000	000000
1154192500	1-1541	9250	BRACKET; INJECTION PIPE F	000000	000000
1154192580	1-1541	9258	CLIP; FUEL PIPE	000000	000000
1154192600	1-1541	9260	BRACKET; CLIP FIX	000000	000000
1154192610	1-1541	9261	BRACKET; INJECTION PIPE F	000000	000000
1154192710	1-1541	9271	BRACKET; FUEL PIPE	000000	000000
1154192850	1-1541	9285	BRACKET; FUEL PIPE	000000	000000
1154192980	1-1541	9298	BRACKET; FUEL PIPE CLIP	000000	000000
1154193340	1-1541	9334	BRACKET; INJ PIPE CLIP	000000	000002
1154195252	1-1541	9525	ADAPTER; FUEL LEAK OFF	000000	000013
1154195830	1-1541	9583	BRACKET; INJ PIPE CLIP	000000	000000
1154195840	1-1541	9584	BRACKET; INJ PIPE CLIP	000000	000014
1154195940	1-1541	9594	BRACKET;OVERFLOW TO LEAK	000000	000000

1154196350	1-1541	9635	GASKET; EYE BOLT LEAK OFF	000000	000000
1154196351	1-1541	9635	GASKET; EYE BOLT LEAK OFF	000000	000067
1154196810	1-1541	9681	BRACKET; FUEL PIPE CLIP	000000	000001
1154196840	1-1541	9684	BRACKET; OIL PAN	000000	000013
1154197160	1-1541	9716	BOLT; JOINT,FUEL FILTER	000006	000001
1154197161	1-1541	9716	BOLT; JOINT,FUEL FILTER	000023	000000
1154197280	1-1541	9728	BRACKET; INJ PIPE	000000	000001
1154197290	1-1541	9729	BRACKET; OIL LEVEL SW	000001	000003
1154197330	1-1541	9733	BRACKET; OVERFLOW TO LEAK	000000	000001
1154197340	1-1541	9734	BRACKET; FUEL PIPE CLIP	000000	000001
1154197350	1-1541	9735	BRACKET; SEA WATER PIPE	000000	000001
1154197360	1-1541	9736	BRACKET; SEA WATER PIPE	000000	000001
1154490090	1-1544	9009	WIRE CONNECTOR	000002	000043
1154796870	1-1547	9687	SPRING; TIMER	000000	000000
1155470020	1-1554	7002	BRACKET; SPRING RETURN	000000	000000
1155710090			REPAIR KIT;OIL	000000	000000
1155740080	1-1557	4008	REPAIR KIT;OIL	000000	000000
1156000332	1-1560	0033	PUMP ASM; INJ.	000000	000000
1156000462	1-1560	0046	PUMP ASM; INJ.	000000	000000
1156001073	1-1560	0107	PUMP ASM; INJ.	000000	000000
1156001951	1-1560	0195	PUMP ASM; INJ.	000000	000000
1156002220	1-1560	0222	PUMP ASM; INJ E120-UNLIST	000000	000000
1156002601	1-1560	0260	PUMP ASM; INJ.	000000	000001
1156002973	1-1560	0297	PUMP ASM. INJ.	000000	000000
1156002983	1-1560	0298	PUMP ASM; INJ.	000000	000000
1156003160	1-1560	0316	PUMP ASM; INJ.	000000	000000
1156003170	1-1560	0317	PUMP ASM; INJ.	000000	000000
1156003440	1-1560	0344	PUMP ASM; INJ.	000000	000000
1156004382	1-1560	0438	INJECTION PUMP	000000	000000
1156005450	1-1560	0545	PUMP ASM; INJ.	000000	000000
1156005451	1-1560	0545	PUMP ASM; INJ.	000000	000000
1156005480	1-1560	0548	PUMP ASM; INJ.	000000	000000
1156006211	1-1560	0621	PUMP ASM; INJ.	000000	000000
1156006221	1-1560	0622	PUMP ASM; INJ.	000000	000000
1156006860	1-1560	0686	PUMP ASM; INJ.	000000	000000
1156006941	1-1560	0694	PUMP ASM;INJ	000000	000000
1156007076	1-1560	0707	PUMP ASM; INJ.	000000	000000
1156007331	1-1560	0733	PUMP ASM; INJ.	000000	000000
1156007350	1-1560	0735	PUMP ASM; INJ.	000000	000000
1156007360	1-1560	0736	PUMP ASM; INJ.	000000	000000
1156007371	1-1560	0737	PUMP ASM; INJ.	000000	000000
1156007381	1-1560	0738	PUMP ASM; INJ.	000000	000000
1156007390	1-1560	0739	PUMP ASM; INJ.	000000	000000
1156007400	1-1560	0740	PUMP ASM; INJ.	000000	000000
1156007410	1-1560	0741	PUMP ASM; INJ.	000000	000000
1156007421	1-1560	0742	PUMP ASM; INJ.	000000	000000
1156007820	1-1560	0782	PUMP ASM; INJ.	000000	000000

1156007862	1-1560	0786	PUMP ASM; INJ.	000000	000000
1156007972	1-1560	0797	PUMP ASM; INJ.	000000	000000
1156008016	1-1560	0801	PUMP ASM; INJ.	000000	000000
1156008221	1-1560	0822	PUMP ASM; INJ.	000000	000000
1156008261	1-1560	0826	PUMP ASM; INJ.	000000	000000
1156008264	1-1560	0826	PUMP ASM; INJ.	000000	000000
1156008471	1-1560	0847	PUMP ASM; INJ.	000000	000000
1156008490	1-1560	0849	PUMP ASM; INJ.	000000	000000
1156008531	1-1560	0853	PUMP ASM; INJ.	000000	000000
1156008532	1-1560	0853	PUMP ASM; INJ.	000000	000000
1156008774	1-1560	0877	PUMP ASM; INJ.	000000	000000
1156008814	1-1560	0881	PUMP ASM; INJ.	000000	000000
1156008823	1-1560	0882	PUMP ASM; INJ.	000000	000000
1156008940	1-1560	0894	PUMP ASM; INJ.	000000	000000
1156008951	1-1560	0895	PUMP ASM; INJ.	000000	000000
1156009000	1-1560	0900	PUMP ASM; INJ.	000000	000000
1156009214	1-1560	0921	PUMP ASM; INJ.	000000	000000
1156009233	1-1560	0923	PUMP ASM.; INJ., FIG.52	000000	000000
1156009241	1-1560	0924	PUMP ASM; INJ.	000000	000000
1156009311	1-1560	0931	PUMP ASM; INJ.	000000	000000
1156009320	1-1560	0932	PUMP ASM; INJ.	000000	000000
1156009331	1-1560	0933	PUMP ASM; INJ.	000000	000000
1156009341	1-1560	0934	PUMP ASM; INJ.	000000	000000
1156009351	1-1560	0935	PUMP ASM; INJ.	000000	000000
1156009361	1-1560	0936	PUMP ASM; INJ.	000000	000000
1156009373	1-1560	0937	PUMP ASM; INJ.	000000	000000
1156009383	1-1560	0938	PUMP ASM; INJ.	000000	000000
1156009391	1-1560	0939	PUMP ASM; INJ.	000000	000000
1156009480	1-1560	0948	PUMP ASM; INJ.	000000	000000
1156009483	1-1560	0948	PUMP ASM; INJ.	000000	000000
1156009902	1-1560	0990	PUMP ASM; INJ.	000000	000000
1156010251	1-1560	1025	PUMP ASM; INJ.	000000	000000
1156010283	1-1560	1028	PUMP ASM.; INJ., FIG.52	000000	000000
1156010330	1-1560	1033	PUMP ASM; INJ.	000000	000000
1156010343	1-1560	1034	PUMP ASM.; INJ.	000000	000000
1156010470	1-1560	1047	PUMP ASM; INJ.	000000	000000
1156010580	1-1560	1058	PUMP ASM; INJ.	000000	000000
1156011003	1-1560	1100	PUMP ASM; INJ.	000000	000000
1156011005	1-1560	1100	PUMP ASM; INJ.	000000	000000
1156011010	1-1560	1101	PUMP ASM; INJ.	000000	000000
1156011026	1-1560	1102	PUMP ASM; INJ.	000000	000000
1156011101	1-1560	1110	PUMP ASM; INJ.	000000	000000
1156011113	1-1560	1111	PUMP ASM; INJ.	000000	000000
1156011513	1-1560	1151	PUMP ASM; INJ.	000000	000000
1156011524	1-1560	1152	PUMP ASM; INJ.	000000	000000
1156011652	1-1560	1165	PUMP ASM.; INJ., FIG.52	000000	000000
1156011660	1-1560	1166	PUMP ASM; INJ.	000000	000000

1156011661	1-1560	1166	PUMP ASM; INJ.	000000	000001
1156011673	1-1560	1167	PUMP ASM.; INJ., FIG.52	000000	000000
1156011737	1-1560	1173	PUMP ASM; INJ.	000000	000000
1156011793	1-1560	1179	PUMP ASM; INJ.	000000	000000
1156011851	1-1560	1185	PUMP ASM; INJ.	000000	000000
1156012183	1-1560	1218	PUMP ASM.; INJ., FIG.52	000000	000000
1156012251	1-1560	1225	PUMP ASM; INJ.	000000	000000
1156012581	1-1560	1258	PUMP ASM; INJ.	000000	000000
1156012591	1-1560	1259	PUMP ASM; INJ.	000000	000000
1156012613	1-1560	1261	PUMP ASM; INJ.	000000	000000
1156012634	1-1560	1263	PUMP ASM.; INJ., FIG.52	000000	000000
1156012644	1-1560	1264	PUMP ASM.; INJ., FIG.52	000000	000000
1156012883	1-1560	1288	PUMP ASM; INJ.	000000	000000
1156012942	1-1560	1294	INJ PUMP ASSY	000000	000000
1156013371	1-1560	1337	PUMP ASM.; INJ., FIG.52	000000	000000
1156013792	1-1560	1379	PUMP ASM; INJ.	000000	000000
1156014061	1-1560	1406	PUMP ASM; INJ.	000000	000000
1156014071	1-1560	1407	PUMP ASM; INJ.	000000	000000
1156014081	1-1560	1408	PUMP ASM; INJ.	000000	000000
1156014091			PUMP ASM; INJ.	000000	000000
1156014121	1-1560	1412	PUMP ASM.; INJ.	000000	000000
1156014131	1-1560	1413	PUMP ASM.; INJ.	000000	000000
1156014132	1-1560	1413	PUMP ASM.; INJ.	000000	000000
1156014160	1-1560	1416	PUMP ASM; INJ.	000000	000000
1156014342	1-1560	1434	PUMP ASM; INJ.	000000	000000
1156014421	1-1560	1442	PUMP ASM; INJ.	000000	000000
1156015273	1-1560	1527	PUMP ASM; INJ.	000000	000000
1156015274	1-1560	1527	PUMP ASM; INJ.	000000	000000
1156015521	1-1560	1552	PUMP ASM; INJ.	000000	000000
1156015592	1-1560	1559	PUMP ASM.; INJ., FIG.52	000000	000000
1156015602	1-1560	1560	PUMP ASM; INJ.	000000	000001
1156015630	1-1560	1563	PUMP ASM; INJ.	000000	000000
1156015652	1-1560	1565	PUMP ASM; INJ.	000000	000000
1156015920	1-1560	1592	PUMP ASM; INJ	000000	000000
1156015921	1-1560	1592	PUMP ASM; INJ.	000000	000000
1156015922	1-1560	1592	PUMP ASM; INJ.	000000	000000
1156016455	1-1560	1645	PUMP ASM; INJ.	000000	000000
1156016574	1-1560	1657	PUMP ASM; INJ.	000000	000000
1156016581	1-1560	1658	PUMP ASM; INJ.	000000	000000
1156016780	1-1560	1678	PUMP ASM; INJ.	000000	000000
1156016795	1-1560	1679	PUMP ASM; INJ.	000000	000000
1156017150	1-1560	1715	PUMP ASM; INJ.	000000	000000
1156017271	1-1560	1727	PUMP ASM.; INJ., FIG.52	000000	000000
1156017341	1-1560	1734	PUMP ASM.; INJ., FIG.52	000000	000000
1156017904	1-1560	1790	PUMP ASM.; INJ., FIG.52	000000	000000
1156018200	1-1560	1820	PUMP ASM; INJ.	000000	000000
1156018210	1-1560	1821	PUMP ASM; INJ.	000000	000000

1156018212	1-1560	1821	PUMP ASM; INJ.	000000	000000
1156018220	1-1560	1822	PUMP ASM; INJ.	000000	000004
1156018233	1-1560	1823	PUMP ASM; INJ.	000000	000002
1156018252	1-1560	1825	PUMP ASM; INJ.	000000	000000
1156018260	1-1560	1826	PUMP ASM; INJ.	000000	000000
1156018280	1-1560	1828	PUMP ASM; INJ.	000000	000000
1156018340	1-1560	1834	PUMP ASM; INJ.	000000	000000
1156018370	1-1560	1837	PUMP ASM; INJ.	000000	000000
1156018400	1-1560	1840	PUMP ASM; INJ.	000000	000000
1156018490	1-1560	1849	PUMP ASM; INJ.	000000	000000
1156018500	1-1560	1850	PUMP ASM; INJ.	000000	000000
1156018561	1-1560	1856	PUMP ASM; INJ.	000000	000000
1156018670	1-1560	1867	PUMP ASM; INJ.	000000	000000
1156018700	1-1560	1870	PUMP ASM; INJ.	000000	000000
1156018760	1-1560	1876	PUMP ASM., INJ., FIG.52	000000	000000
1156019800	1-1560	1980	PUMP ASM; INJ.	000000	000000
1156020410	1-1560	2041	PUMP ASM; INJ.	000000	000000
1156020411	1-1560	2041	PUMP ASM; INJ.	000000	000000
1156020430	1-1560	2043	PUMP ASM; INJ.	000000	000002
1156020443	1-1560	2044	PUMP ASM; INJ.	000000	000000
1156020451	1-1560	2045	PUMP ASM; INJ.	000000	000000
1156020460	1-1560	2046	PUMP ASM; INJ.	000000	000000
1156020462	1-1560	2046	PUMP ASM; INJ.	000000	000002
1156020553	1-1560	2055	PUMP ASM; INJ.	000000	000000
1156020562	1-1560	2056	PUMP ASM; INJ.	000000	000000
1156020580	1-1560	2058	PUMP ASM; INJ.	000000	000006
1156020594	1-1560	2059	PUMP ASM.; INJ., FIG.52	000000	000000
1156020740	1-1560	2074	PUMP ASM; INJ.	000000	000000
1156021030	1-1560	2103	PUMP ASM; INJ.	000000	000000
1156021040	1-1560	2104	PUMP ASM; INJ.	000000	000000
1156021050	1-1560	2105	PUMP ASM; INJ.	000000	000000
1156021051	1-1560	2105	PUMP ASM; INJ.	000000	000000
1156021061	1-1560	2106	PUMP INJ.	000000	000000
1156021202	1-1560	2120	PUMP ASM; INJ.	000000	000000
1156021260	1-1560	2126	PUMP ASM; INJ.	000000	000000
1156021275	1-1560	2127	PUMP ASM; INJ.	000000	000000
1156021281	1-1560	2128	PUMP ASM; INJ.	000000	000001
1156021310	1-1560	2131	PUMP ASM; INJ.	000000	000000
1156021360	1-1560	2136	PUMP ASM; INJ.	000000	000000
1156021361	1-1560	2136	PUMP ASM; INJ.	000000	000000
1156021370	1-1560	2137	PUMP ASM; INJ.	000000	000000
1156021391	1-1560	2139	PUMP ASM; INJ.	000000	000000
1156021450	1-1560	2145	PUMP ASM; INJ.	000000	000000
1156021500	1-1560	2150	PUMP ASM; INJ.	000000	000000
1156021530	1-1560	2153	PUMP ASM; INJ.	000000	000000
1156021542	1-1560	2154	PUMP ASM; INJ.	000000	000000
1156021740	1-1560	2174	PUMP ASM.; INJ., FIG.52	000000	000000

1156021760	1-1560	2176	PUMP ASM; INJ.	000000	000000
1156021810	1-1560	2181	PUMP ASM; INJ	000000	000000
1156021811	1-1560	2181	PUMP ASM; INJ.	000000	000000
1156021812	1-1560	2181	PUMP ASM; INJ	000000	000000
1156021830	1-1560	2183	PUMP ASM; INJ.	000000	000000
1156021850	1-1560	2185	PUMP ASM; INJ.	000000	000000
1156021860	1-1560	2186	PUMP ASM.; INJ., FIG.52	000000	000000
1156022050	1-1560	2205	PUMP ASM.; INJ., FIG.52	000000	000000
1156022090	1-1560	2209	PUMP ASM; INJ.	000000	000000
1156022100	1-1560	2210	PUMP ASM; INJ.	000000	000000
1156022110	1-1560	2211	PUMP ASM; INJ.	000000	000000
1156022120	1-1560	2212	PUMP ASM; INJ.	000000	000000
1156022131	1-1560	2213	PUMP ASM.; INJ., FIG.52	000000	000000
1156022140	1-1560	2214	PUMP ASM; INJ.	000000	000000
1156022160	1-1560	2216	PUMP ASM; INJ.	000000	000000
1156022171	1-1560	2217	PUMP ASM; INJ.	000000	000000
1156022181	1-1560	2218	PUMP ASM; INJ.	000000	000000
1156022220	1-1560	2222	PUMP ASM; INJ.	000000	000000
1156022280	1-1560	2228	PUMP ASM; INJ	000000	000000
1156022281	1-1560	2228	PUMP ASM; INJ	000000	000000
1156022282	1-1560	2228	PUMP ASM; INJ	000000	000001
1156022320	1-1560	2232	PUMP ASM.; INJ., FIG.52	000000	000000
1156022330	1-1560	2233	PUMP ASM; INJ.	000000	000000
1156022364	1-1560	2236	PUMP ASM; INJ. FIG. 52	000000	000000
1156022740	1-1560	2274	PUMP ASM; INJ	000000	000000
1156022741	1-1560	2274	PUMP ASM; INJ.	000000	000000
1156022742	1-1560	2274	PUMP ASM; INJ.	000000	000000
1156022982	1-1560	2298	PUMP ASM; INJ.	000000	000000
1156023070	1-1560	2307	PUMP ASM; INJ.	000000	000000
1156023081	1-1560	2308	PUMP ASM; INJ.	000000	000000
1156023090	1-1560	2309	PUMP ASM.; INJ., FIG.52	000000	000000
1156023190	1-1560	2319	PUMP ASM: INJ.	000000	000000
1156023201	1-1560	2320	PUMP ASM; INJ.	000000	000001
1156023221	1-1560	2322	PUMP ASM.; INJ., FIG.52	000000	000000
1156023232	1-1560	2323	PUMP ASM; INJ.	000000	000000
1156023233	1-1560	2323	PUMP ASM; INJ.	000000	000000
1156023271	1-1560	2327	PUMP ASM; INJ	000000	000000
1156023272	1-1560	2327	PUMP ASM; INJ	000000	000000
1156023273	1-1560	2327	PUMP ASM	000000	000000
1156023530	1-1560	2353	PUMP ASM; INJ.	000000	000000
1156023550	1-1560	2355	PUMP ASM; INJ.	000000	000000
1156023560	1-1560	2356	PUMP ASM; INJ.	000000	000000
1156023750	1-1560	2375	PUMP ASM; INJ.	000000	000000
1156023770	1-1560	2377	PUMP ASM; INJ.	000000	000000
1156023780	1-1560	2378	PUMP ASM; INJ.	000000	000000
1156023900	1-1560	2390	PUMP ASM.; INJ.	000000	000000
1156024601	1-1560	2460	PUMP ASM.;	000000	000000

1156024611	1-1560	2461	PUMP ASM;	000000	000000
1156024620	1-1560	2462	PUMP ASM INJ	000000	000000
1156024740	1-1560	2474	PUMP ASM; INJ.	000000	000000
1156024801	1-1560	2480	PUMP ASM; INJ.	000000	000000
1156024820	1-1560	2482	PUMP ASM; INJ	000000	000000
1156024821	1-1560	2482	PUMP ASM; INJ	000000	000000
1156024822	1-1560	2482	PUMP ASM; INJ	000000	000002
1156024940	1-1560	2494	PUMP ASM.;	000000	000002
1156024950	1-1560	2495	PUMP ASM.; INJ.	000000	000000
1156024962	1-1560	2496	PUMP ASM; INJ.	000000	000000
1156024970	1-1560	2497	PUMP ASM; INJ.	000000	000000
1156025150	1-1560	2515	PUMP ASM; INJ	000000	000000
1156025151	1-1560	2515	PUMP ASM; INJ	000000	000000
1156025231	1-1560	2523	PUMP ASM; INJ.	000000	000000
1156025330	1-1560	2533	PUMP ASM; INJ.	000000	000000
1156025340	1-1560	2534	PUMP ASM; INJ.	000000	000000
1156025350	1-1560	2535	PUMP ASM; INJ.	000000	000000
1156025360	1-1560	2536	PUMP ASM; INJ.	000000	000000
1156025371	1-1560	2537	PUMP ASM; INJ.	000000	000000
1156025380	1-1560	2538	PUMP ASM; INJ.	000000	000000
1156025390	1-1560	2539	PUMP ASM; INJ.	000000	000000
1156025400	1-1560	2540	PUMP ASM; INJ.	000000	000000
1156025480	1-1560	2548	PUMP ASM.;	000000	000000
1156025490	1-1560	2549	PUMP ASM; INJ.	000000	000000
1156025530	1-1560	2553	PUMP ASM; INJ	000000	000001
1156025540	1-1560	2554	PUMP ASM.; INJ.	000000	000000
1156025541	1-1560	2554	PUMP ASM.; INJ.	000000	000000
1156025600	1-1560	2560	PUMP ASM; INJ.	000000	000000
1156025620	1-1560	2562	PUMP ASM; INJ.	000000	000000
1156025641	1-1560	2564	PUMP ASM; INJ.	000000	000000
1156025790	1-1560	2579	PUMP ASM.; INJ., FIG.52	000000	000000
1156025880	1-1560	2588	PUMP ASM; INJ.	000000	000000
1156025970	1-1560	2597	PUMP ASM.; INJ., FIG.52	000000	000000
1156026200	1-1560	2620	PUMP ASM.; INJ.	000000	000000
1156026220	1-1560	2622	PUMP ASM.; INJ., FIG.52	000000	000000
1156026231	1-1560	2623	PUMP ASM; INJ	000000	000000
1156026311	1-1560	2631	PUMP ASM.; INJ.	000000	000000
1156026312	1-1560	2631	PUMP ASM.; INJ.	000000	000001
1156026321	1-1560	2632	PUMP ASM.; INJ., FIG.52	000000	000000
1156026582	1-1560	2658	PUMP ASM; INJ.	000000	000002
1156026600	1-1560	2660	PUMP ASM.; INJ., FIG.52	000000	000000
1156026700	1-1560	2670	PUMP ASM; INJ	000000	000000
1156026741	1-1560	2674	INJ. PUMP	000000	000000
1156026751	1-1560	2675	PUMP ASM; INJ.	000000	000000
1156026800	1-1560	2680	PUMP ASM.; INJ., FIG.52	000000	000000
1156026810	1-1560	2681	PUMP ASM; INJ.	000000	000000
1156026811	1-1560	2681	PUMP ASM; INJ.	000000	000000

1156026851	1-1560	2685	PUMP ASM.;INJ.	000000	000000
1156026860	1-1560	2686	PUMP ASM; INJ.	000000	000000
1156026872	1-1560	2687	PUMP ASM; INJECTION	000000	000000
1156026873	1-1560	2687	PUMP ASM; INJECTION	000000	000003
1156026890	1-1560	2689	PUMP ASM; INJ.	000000	000000
1156026900	1-1560	2690	PUMP ASM; INJ. FIG. 52	000000	000000
1156026990	1-1560	2699	PUMP ASM; INJ.	000000	000003
1156027152	1-1560	2715	PUMP ASM; INJ.	000000	000000
1156027153	1-1560	2715	PUMP ASM; INJ.	000000	000000
1156027320	1-1560	2732	PUMP ASM; INJ.	000000	000000
1156027321	1-1560	2732	PUMP ASM; INJ.	000000	000000
1156027330	1-1560	2733	PUMP ASM; INJ.	000000	000000
1156027420	1-1560	2742	PUMP ASM.;INJ.	000000	000000
1156027810	1-1560	2781	PUMP ASM; INJ.	000000	000000
1156027840	1-1560	2784	PUMP ASM; INJ.	000000	000000
1156027850	1-1560	2785	PUMP ASM; INJ.	000000	000000
1156027855	1-1560	2785	PUMP ASM; INJ.	000000	000000
1156027940	1-1560	2794	PUMP ASM.;INJ.	000000	000000
1156027951	1-1560	2795	PUMP ASM.;INJ.	000000	000000
1156027960	1-1560	2796	PUMPASM; INJ	000000	000000
1156028000	1-1560	2800	PUMP ASM.; INJ., FIG.52	000000	000000
1156028061	1-1560	2806	PUMP ASM; INJ.	000000	000000
1156028071	1-1560	2807	PUMP ASM.; INJ., FIG.52	000000	000000
1156028081	1-1560	2808	PUMP ASM.;INJ.	000000	000000
1156028100	1-1560	2810	PUMP ASM.; INJ., FIG.52	000000	000000
1156028140	1-1560	2814	PUMP ASM.;INJ.	000000	000000
1156028160	1-1560	2816	PUMP ASM; INJ.	000000	000000
1156028430	1-1560	2843	PUMP ASM.; INJ., FIG.52	000000	000000
1156028520	1-1560	2852	PUMP ASM; INJ	000000	000000
1156028530	1-1560	2853	PUMP ASM; INJ	000000	000000
1156028540	1-1560	2854	PUMP ASM; INJ	000000	000000
1156028560	1-1560	2856	PUMP ASM; INJ	000000	000000
1156028592	1-1560	2859	PUMP ASM.; INJ., FIG.52	000000	000000
1156028641	1-1560	2864	PUMP ASM.; INJ., FIG.52	000000	000000
1156028660	1-1560	2866	PUMP ASM.; INJ., FIG.52	000000	000000
1156028702	1-1560	2870	PUMP ASM.; INJ.	000000	000000
1156028821	1-1560	2882	PUMP ASM.;INJ.	000000	000000
1156029200	1-1560	2920	PUMP ASM INJ	000000	000000
1156029210	1-1560	2921	PUMP ASM; INJ.	000000	000000
1156029690	1-1560	2969	PUMP ASM.;INJ.	000000	000000
1156029750	1-1560	2975	PUMP ASM; INJ.	000000	000000
1156029752	1-1560	2975	PUMP ASM; INJ.	000000	000000
1156029800	1-1560	2980	PUMP ASM.;INJ.	000000	000000
1156029801	1-1560	2980	PUMP ASM.;INJ.	000000	000015
1156029811	1-1560	2981	PUMP ASM.;INJ. FIG.	000000	000003
1156029910	1-1560	2991	PUMP ASM.; INJ. FIG. 52	000000	000000
1156029920	1-1560	2992	PUMP ASM;INJ.	000000	000000

1156030230	1-1560	3023	PUMP ASM.; INJ.	000000	000000
1156030400	1-1560	3040	PUMP ASM; INJECTION	000000	000000
1156030410	1-1560	3041	PUMP ASM; INJ.	000000	000001
1156030470	1-1560	3047	PUMP ASM.; INJ., FIG.52	000000	000002
1156030480	1-1560	3048	PUMP ASM.; INJ., FIG.52	000000	000000
1156030490	1-1560	3049	PUMP ASM; INJ.	000000	000004
1156030520	1-1560	3052	PUMP ASM.; INJ.	000000	000000
1156030530	1-1560	3053	PUMP ASM.; INJ.	000000	000000
1156030540	1-1560	3054	PUMP ASM.; INJ.	000000	000002
1156030550	1-1560	3055	PUMP ASM.; INJ.	000000	000000
1156030640	1-1560	3064	PUMP ASM; INJ. FIG. 52	000000	000000
1156030660	1-1560	3066	PUMP ASM; INJ.	000000	000000
1156030740	1-1560	3074	PUMP ASM.; INJ. FIG.52	000000	000000
1156030750	1-1560	3075	PUMP ASM.; INJ. FIG.52	000000	000000
1156030780	1-1560	3078	PUMP ASM; INJ. FIG.	000000	000001
1156030800	1-1560	3080	PUMP ASM; INJ. FIG. 52	000000	000000
1156030810	1-1560	3081	PUMP ASM.; INJ. FIG.	000000	000000
1156030820	1-1560	3082	PUMP ASM; INJ., FIG. 52	000000	000000
1156030830	1-1560	3083	PUMP ASM; INJ. FIG.	000000	000000
1156030840	1-1560	3084	PUMP ASM; INJ. FIG.	000000	000000
1156030850	1-1560	3085	PUMP ASM.; INJ. FIG.	000000	000000
1156030860	1-1560	3086	PUMP ASM; INJ. FIG52A	000000	000000
1156030890	1-1560	3089	PUMP ASM; INJ. FIG52A	000000	000000
1156030900	1-1560	3090	PUMP ASM; INJ., FIG. 52	000000	000000
1156030910	1-1560	3091	PUMP ASM.; INJ. FIG.	000000	000000
1156030920	1-1560	3092	PUMP ASM.; INJ. FIG.	000000	000000
1156030930	1-1560	3093	PUMP ASM.; INJ. FIG.	000000	000000
1156030940	1-1560	3094	PUMP ASM.; INJ. FIG. 52	000000	000000
1156030950	1-1560	3095	PUMP ASM; INJ. FIG52A	000000	000000
1156030960	1-1560	3096	PUMP ASM.; INJ. FIG.	000000	000000
1156030970	1-1560	3097	PUMP ASM.; INJ. FIG.	000000	000000
1156030980	1-1560	3098	PUMP ASM; INJ. FIG52A	000000	000000
1156030990	1-1560	3099	PUMP ASM.; INJ. FIG.	000000	000000
1156031000	1-1560	3100	PUMP ASM; INJ. FIG52A	000000	000000
1156031010	1-1560	3101	PUMP ASM.; INJ. FIG.	000000	000000
1156031020	1-1560	3102	PUMP ASM; INJ., FIG. 52	000000	000000
1156031030	1-1560	3103	PUMP ASM; INJ. FIG. 52	000000	000000
1156031040	1-1560	3104	PUMP ASM; INJ. FIG. 52	000000	000002
1156031050	1-1560	3105	PUMP ASM.; INJ. FIG. 52	000000	000000
1156031060	1-1560	3106	PUMP ASM.; INJ. FIG.	000000	000000
1156031070	1-1560	3107	PUMP ASM; INJ., FIG. 52	000000	000000
1156031080	1-1560	3108	PUMP ASM; INJ., FIG. 52	000000	000000
1156031090	1-1560	3109	PUMP ASM; INJ., FIG. 52	000000	000000
1156031100	1-1560	3110	PUMP ASM; INJ., FIG. 52	000000	000000
1156031110	1-1560	3111	PUMP ASM; INJ., FIG. 52	000000	000000
1156031170	1-1560	3117	PUMP ASM.; INJ., FIG.52A	000000	000000
1156031200	1-1560	3120	PUMP ASM.; INJ., FIG.52	000000	000000

1156031240	1-1560	3124	PUMP ASM.; INJ., FIG.52	000000	000000
1156031242	1-1560	3124	PUMP ASM.; INJ., FIG.52	000000	000002
1156031250	1-1560	3125	PUMP ASM.; INJ., FIG.52A	000000	000003
1156031351	1-1560	3135	PUMP ASM; INJ. FIG52A	000000	000000
1156031370	1-1560	3137	PUMP ASM; INJ. FIG52A	000000	000000
1156031380	1-1560	3138	PUMP ASM; INJ. FIG52A	000000	000000
1156031411	1-1560	3141	PUMP ASM; INJ. FIG52	000000	000000
1156031420	1-1560	3142	PUMP ASM; INJ. FIG52A	000000	000000
1156031430	1-1560	3143	PUMP ASM.; INJ. FIG	000000	000000
1156031431	1-1560	3143	PUMP ASM.; INJ. FIG	000000	000002
1156031440	1-1560	3144	PUMP ASM; INJ. FIG52A	000000	000000
1156031450	1-1560	3145	PUMP ASM; INJ. FIG52A	000000	000000
1156031520	1-1560	3152	PUMP ASM; INJ. FIG52	000000	000000
1156031570	1-1560	3157	PUMP ASM; INJ. FIG52A	000000	000000
1156031590	1-1560	3159	PUMP ASM; INJ. FIG52	000000	000000
1156031630	1-1560	3163	PUMP ASM; INJ. FIG52	000000	000000
1156031641	1-1560	3164	PUMP ASM. ; INJ. FIG.	000000	000001
1156031971	1-1560	3197	PUMP ASM; INJ. FIG52A	000000	000000
1156031980	1-1560	3198	PUMP ASM; INJ. FIG52A	000000	000000
1156032200	1-1560	3220	PUMP ASM; INJ.	000000	000000
1156032211	1-1560	3221	PUMP ASM; INJ.	000000	000000
1156032212	1-1560	3221	PUMP ASM; INJ.	000000	000000
1156032220	1-1560	3222	PUMP ASM; INJ.	000000	000000
1156032221	1-1560	3222	PUMP ASM; INJ.	000000	000000
1156032222	1-1560	3222	PUMP ASM; INJ.	000000	000000
1156032230	1-1560	3223	PUMP ASM; INJ.	000000	000000
1156032231	1-1560	3223	PUMP ASM; INJ.	000000	000001
1156032290	1-1560	3229	PUMP ASM; INJ.	000000	000000
1156032320	1-1560	3232	PUMP ASM; INJ.	000000	000001
1156032330	1-1560	3233	PUMP ASM; INJ.	000000	000000
1156032331	1-1560	3233	PUMP ASM; INJ.	000000	000001
1156032411	1-1560	3241	PUMP ASM; INJ.	000000	000005
1156032430	1-1560	3243	PUMP ASM; INJ.	000000	000000
1156032440	1-1560	3244	PUMP ASM; INJ.	000000	000000
1156032470	1-1560	3247	PUMP ASM; INJ.	000000	000000
1156032471	1-1560	3247	PUMP ASM; INJ.	000000	000001
1156032500	1-1560	3250	PUMP ASM; INJ.	000000	000001
1156032510	1-1560	3251	PUMP ASM; INJ.	000000	000000
1156032590	1-1560	3259	PUMP ASM; INJ.	000000	000000
1156032620	1-1560	3262	PUMP ASM; INJ	000000	000005
1156032630	1-1560	3263	PUMP ASM; INJ.	000000	000002
1156032750	1-1560	3275	PUMP ASM; INJ	000000	000002
1156033030	1-1560	3303	PUMP ASM; INJ	000000	000000
1156033342	1-1560	3334	PUMP ASM; INJ	000000	000032
1156033410	1-1560	3341	PUMP; ASM INJ	000000	000000
1156033420	1-1560	3342	PUMP ASM; INJ	000000	000000
1156033421	1-1560	3342	PUMP ASM; INJ	000000	000004

1156033460	1-1560	3346	PUMP ASM; INJECTION	000000	000002
1156033483	1-1560	3348	PUMP ASM; INJ	000000	000000
1156033490	1-1560	3349	PUMP ASM; INJ	000000	000000
1156033491	1-1560	3349	PUMP ASM; INJ	000000	000000
1156033570	1-1560	3357	PUMP ASM; INJ	000000	000001
1156033782	1-1560	3378	PUMP ASM; INJ	000000	000000
1156033783	1-1560	3378	PUMP ASM; INJ	000001	000028
1156033870	1-1560	3387	PUMP; ASM INJ	000000	000000
1156033871	1-1560	3387	PUMP; ASM INJ	000000	000000
1156033950	1-1560	3395	PUMP ASM; INJ	000000	000000
1156033960	1-1560	3396	PUMP ASM; INJ	000000	000001
1156034050	1-1560	3405	PUMP ASM; INJ	000000	000000
1156034161	1-1560	3416	PUMP; ASM INJ	000000	000000
1156034271	1-1560	3427	PUMP ASM; INJ	000000	000000
1156034280	1-1560	3428	PUMP ASM; INJ	000000	000000
1156034340	1-1560	3434	PUMP ASM; INJ	000000	000000
1156034391	1-1560	3439	PUMP ASM; INJ	000000	000001
1156034441	1-1560	3444	PUMP ASM; INJ	000000	000000
1156034540	1-1560	3454	PUMP ASM; INJ	000000	000002
1156034820	1-1560	3482	PUMP ASM; INJ	000000	000000
1156034830	1-1560	3483	PUMP ASM; INJ	000000	000001
1156034840	1-1560	3484	PUMP ASM; INJ	000000	000000
1156034850	1-1560	3485	PUMP ASM; INJ	000000	000000
1156034860	1-1560	3486	PUMP ASM; INJ	000000	000011
1156034900	1-1560	3490	PUMP ASM; INJ	000000	000002
1156034910	1-1560	3491	PUMP ASM; INJ	000000	000000
1156034930	1-1560	3493	PUMP ASM; INJ	000000	000000
1156034932	1-1560	3493	PUMP ASM; INJ	000000	000001
1156034940	1-1560	3494	PUMP ASM; INJ	000000	000000
1156034941	1-1560	3494	PUMP ASM; INJ	000000	000003
1156035080	1-1560	3508	PUMP ASM; INJ	000000	000000
1156035081	1-1560	3508	PUMP ASM; INJ	000000	000006
1156035090	1-1560	3509	PUMP ASM; INJ	000000	000000
1156035150	1-1560	3515	PUMP ASM; INJ	000000	000000
1156035153	1-1560	3515	PUMP ASM; INJ	000000	000000
1156110060	1-1561	1006	HOUSING; PUMP	000000	000000
1156110260	1-1561	1026	HOUSING; PUMP	000000	000000
1156110270	1-1561	1027	HOUSING PUMP	000000	000000
1156110360	1-1561	1036	HOUSING; PUMP	000000	000000
1156110390	1-1561	1039	HOUSING; PUMP	000000	000000
1156110640	1-1561	1064	HOUSING; PUMP	000000	000000
1156110650	1-1561	1065	HOUSING; PUMP	000000	000001
1156110680	1-1561	1068	HOUSING; PUMP	000000	000000
1156110740	1-1561	1074	HOUSING; PUMP	000000	000000
1156110750	1-1561	1075	HOUSING; PUMP	000000	000000
1156110760	1-1561	1076	HOUSING; PUMP	000000	000000
1156110860	1-1561	1086	HOUSING ASM; I/PUMP	000000	000000

1156110880	1-1561	1088	HOUSING; PUMP	000000	000000
1156110900	1-1561	1090	HOUSING; PUMP	000000	000000
1156110910	1-1561	1091	HOUSING; I/PUMP	000000	000000
1156110990	1-1561	1099	HOUSING; PUMP,FUEL I	000000	000000
1156111040	1-1561	1104	HOUSING; PUMP	000001	000000
1156111220	1-1561	1122	HOUSING; INJ. PUMP	000000	000000
1156111240	1-1561	1124	HOUSING ASM.; PUMP	000000	000000
1156111270	1-1561	1127	HOUSING; I/PUMP	000000	000000
1156111340	1-1561	1134	HOUSING;INJ.PUMP	000000	000000
1156111390	1-1561	1139	HOUSING ASM.;INJ.PUMP	000000	000000
1156111490	1-1561	1149	HOUSING; I/PUMP	000000	000000
1156111550	1-1561	1155	HOUSING; I/PUMP	000000	000002
1156111840	1-1561	1184	HOUSING;INJ.PUMP	000000	000000
1156112050	1-1561	1205	HOUSING; PUMP,FUEL INLET	000000	000000
1156112180	1-1561	1218	HOUSING;PUMP FUEL INJ	000000	000000
1156112220	1-1561	1222	HOUSING; PUMP FUEL INJ	000000	000000
1156112251	1-1561	1225	HOUSING;PUMP,FUEL INJ	000001	000000
1156120010	1-1561	2001	COVER; HOUSING SIDE	000000	000000
1156120040	1-1561	2004	COVER	000000	000000
1156120050	1-1561	2005	COVER	000000	000000
1156120070	1-1561	2007	COVER	000000	000000
1156120080	1-1561	2008	COVER	000000	000000
1156120100	1-1561	2010	COVER	000000	000001
1156120110	1-1561	2011	COVER; INJ PUMP	000000	000000
1156120120	1-1561	2012	COVER; HOUSING	000000	000000
1156120200	1-1561	2020	BRG COVER	000000	000000
1156120210	1-1561	2021	COVER	000000	000000
1156120360	1-1561	2036	COVER; BRG.	000000	000000
1156120420	1-1561	2042	COVER;FRT,PUMP HSG	000000	000000
1156120460	1-1561	2046	ACTUATOR	000000	000000
1156120500	1-1561	2050	COVER; HOUSING	000000	000000
1156190010	1-1561	9001	NUT;TIMER FLANGE,INJ.PUMP	000000	000009
1156190030	1-1561	9003	SCREW; INJ PUMP	000000	000027
1156190240	1-1561	9024	BOLT;AIR BLEED,INJ PUMP	000000	000028
1156190260	1-1561	9026	GASKET,GEAR CAS	000000	000000
1156190310	1-1561	9031	COUPLING:	000000	000000
1156190330	1-1561	9033	BEARING; CENTER	000008	000000
1156190341	1-1561	9034	BOLT C240	000000	000000
1156190350	1-1561	9035	ADAPTER	000000	000000
1156190390	1-1561	9039	BOLT;SPRING BRKT,GVRNR	000000	000002
1156190420	1-1561	9042	GEAR CASE	000000	000000
1156190430	1-1561	9043	BOLT*	000000	000000
1156190440	1-1561	9044	BUSH*	000000	000000
1156190460	1-1561	9046	BOLT*	000000	000000
1156190480	1-1561	9048	BRACKET	000000	000000
1156190500	1-1561	9050	PLATE,HOLDER	000000	000000
1156190510	1-1561	9051	SCREW	000000	000000

1156190520	1-1561	9052	THRUST BEARING	000000	000000
1156190560	1-1561	9056	BOLT, PLATE TO I	000000	000000
1156190580	1-1561	9058	OIL SEAL	000000	000000
1156190590	1-1561	9059	BOLT*	000000	000000
1156190610	1-1561	9061	WASHER	000000	000000
1156190620	1-1561	9062	WASHER	000000	000000
1156190630	1-1561	9063	BEARING; BALL, CAMSHAFT	000000	000000
1156190660	1-1561	9066	SCREW	000128	000000
1156190670	1-1561	9067	GASKET	000229	000000
1156190680	1-1561	9068	GASKET; FUEL FEED PUMP, INJ	000004	000000
1156190690	1-1561	9069	BOLT	000000	000000
1156190710	1-1561	9071	CASE ASSY; GEAR	000000	000000
1156190730	1-1561	9073	PLUG; HUSNG, INJ. PUMP	000000	000000
1156190770	1-1561	9077	GEAR*	000000	000000
1156190780	1-1561	9078	COVER	000000	000000
1156190800	1-1561	9080	BOLT*	000000	000000
1156190820	1-1561	9082	EYE BOLT; FUEL	000000	000836
1156190840	1-1561	9084	SEAL; OIL CAM SHAFT	000001	000000
1156190850	1-1561	9085	POINTER	000000	000000
1156190880			LEVER	000000	000000
1156190890			CONNECTOR	000000	000000
1156190900	1-1561	9090	SHIM; RR BEARING CAMSHAFT	000000	000000
1156190901	1-1561	9090	SHIM; RR BEARING CAMSHAFT	000000	000000
1156190910	1-1561	9091	BOLT; EYE, OIL	000000	000001
1156190920	1-1561	9092	BOLT; EYE, OIL PIPE	000000	000000
1156190930	1-1561	9093	GASKET; JOINT, OIL PIPE	000000	000000
1156190940	1-1561	9094	BOLT INJ PUMP	000000	000000
1156190950	1-1561	9095	GASKET INJ PUMP	000000	000000
1156190960	1-1561	9096	EYE BOLT INJ PU	000000	000000
1156190980	1-1561	9098	GEAR INJ GOVERN	000000	000000
1156190990	1-1561	9099	CONNECTOR INJ G	000000	000000
1156191020	1-1561	9102	GSKT; PLUG, FUEL FEED PUMP	000000	000000
1156191030	1-1561	9103	GASKET; DELIVERY VALVE	000000	000048
1156191210	1-1561	9121	PACKING	000000	000000
1156191220	1-1561	9122	OIL SEAL	000001	000000
1156191380	1-1561	9138	GEAR CASE ASM	000000	000000
1156191390	1-1561	9139	CASE ASM; GEAR	000000	000000
1156191410	1-1561	9141	BRACKET	000000	000000
1156191420	1-1561	9142	PLATE HOLDER	000000	000000
1156191430	1-1561	9143	CONNECTOR	000000	000000
1156191450	1-1561	9145	STUD;	000000	000000
1156191460	1-1561	9146	BRACKET	000000	000000
1156191470	1-1561	9147	HANGER	000000	000000
1156191480	1-1561	9148	POINTER	000008	000000
1156191560	1-1561	9156	POINTER; TIMING INJ PUMP	000000	000000
1156191590	1-1561	9159	RING*	000001	000000
1156191600	1-1561	9160	NUT; FUEL FEED PUMP FIX	000000	000000

1156191620	1-1561	9162	BUSH*	000000	000000
1156191650	1-1561	9165	GEAR CASE	000000	000000
1156191810	1-1561	9181	PLATE; COUPLING, SIDE	000000	000007
1156191830	1-1561	9183	BOLT; PLATE TO CROSS COUPL	000000	000036
1156191860	1-1561	9186	COVER	000000	000000
1156191880	1-1561	9188	POINTER	000000	000000
1156191900	1-1561	9190	ADAPTER; FUEL PIPE	000000	000003
1156191910	1-1561	9191	BOLT, INJ P	000000	000001
1156192170	1-1561	9217	BOLT*	000000	000000
1156192310	1-1561	9231	FUEL CUT VALVE	000000	000000
1156192370	1-1561	9237	BEARING; CENTER	000002	000001
1156192430	1-1561	9243	COVER/4BD1-PD05	000005	000000
1156192450	1-1561	9245	PLATE; LOCK, TIMING SET	000001	000000
1156192460	1-1561	9246	LOCK PLATE	000009	000000
1156192470	1-1561	9247	PLATE; LOCK	000007	000000
1156192590	1-1561	9259	PLUG	000000	000000
1156192620	1-1561	9262	ADAPTER; FUEL PIPE	000000	000003
1156192640	1-1561	9264	BEARING; CENTER	000003	000000
1156192660	1-1561	9266	BRACKET	000000	000001
1156192740	1-1561	9274	BEARING; CAMSHAFT CTR.	000005	000000
1156192800	1-1561	9280	SPACER	000000	000000
1156192820	1-1561	9282	BOLT; CLIP, HOSE	000000	000026
1156192830	1-1561	9283	COVER	000001	000000
1156192850	1-1561	9285	ADAPTER	000000	000000
1156192900	1-1561	9290	VALVE: OVERFLOW	000000	000000
1156193010	1-1561	9301	POINTER	000000	000000
1156193020	1-1561	9302	SHIM	000002	000000
1156193030	1-1561	9303	PICK UP	000000	000000
1156193060	1-1561	9306	SEAL; OIL	000010	000000
1156193090	1-1561	9309	BOLT; EYE, OIL RTN, INJ PUMP	000000	000006
1156193180	1-1561	9318	GASKET; FRT CVR TO HSG	000000	000008
1156193200	1-1561	9320	GASKET; FUEL FEED PUMP, IN	000086	000068
1156193210	1-1561	9321	VALVE; OVERFLOW, INJ PUMP	000000	000022
1156193230	1-1561	9323	COUPLING	000000	000000
1156193260	1-1561	9326	BRACKET	000000	000000
1156193380	1-1561	9338	BOLT; FRT COVER TO HSG	000000	000000
1156193530	1-1561	9353	ADAPTER; HOUSING	000000	000000
1156193560	1-1561	9356	POINTER	000000	000000
1156193580	1-1561	9358	BEARING: CENTER	000000	000000
1156193620	1-1561	9362	BRACKET	000000	000000
1156194070	1-1561	9407	POINTER	000000	000000
1156194100	1-1561	9410	POINTER	000000	000000
1156194130	1-1561	9413	GASKET; HOLDER, DLVRY VALVE	000001	000000
1156194140	1-1561	9414	GASKET; DLVRY VLV, INJ PUMP	000001	000000
1156194150	1-1561	9415	GASKET; FRT COVER TO HSG	000000	000006
1156194180	1-1561	9418	VALVE; DELIVERY, INJ PUMP	000000	000000
1156194240	1-1561	9424	GASKET; PLUNGER	000000	000266

1156194480	1-1561	9448	GASKET; HOLDER, DELIVERY	000000	000020
1156194490	1-1561	9449	GASKET; PLUNGER, BARREL	000000	000003
1156194880	1-1561	9488	VALVE; OVERFLOW INJ PUMP	000000	000030
1156194960	1-1561	9496	VALVE;OVER FLOW,INJ PUMP	000000	000080
1156194970	1-1561	9497	BOLT;EYE, OIL OUTLET	000193	000019
1156195000	1-1561	9500	PLUG; INJ PUMP	000000	000004
1156195010	1-1561	9501	GASKET; EYE BOLT,OUTLET,P	000273	000000
1156195020	1-1561	9502	GASKET; PLUG	000000	000128
1156195040	1-1561	9504	GASKET;EYE BOLT,OIL OUTLE	000011	000241
1156195070	1-1561	9507	GASKET; EYE BOLT	000324	000548
1156195080	1-1561	9508	GASKET; EYE BOLT,OIL INLE	000000	000000
1156195090	1-1561	9509	BOLT; EYE,FEED PUMP	000000	000045
1156195130	1-1561	9513	BOLT; EYE,OIL OUT	000000	000000
1156210120	1-1562	1012	CAMSHAFT: INJ PUMP	000000	000000
1156210130	1-1562	1013	CAMSHAFT	000000	000000
1156210140	1-1562	1014	CAMSHAFT INJ PU	000000	000000
1156210150	1-1562	1015	CAMSHAFT INJ PU	000000	000000
1156210300	1-1562	1030	CAMSHAFT	000000	000000
1156210420	1-1562	1042	CAMSHAFT	000000	000000
1156210430	1-1562	1043	CAMSHAFT	000000	000000
1156210550	1-1562	1055	CAMSHAFT	000000	000000
1156210570	1-1562	1057	CAMSHAFT; I/PUMP	000000	000001
1156210590	1-1562	1059	CAMSHAFT	000000	000000
1156210630	1-1562	1063	CAMSHAFT	000000	000001
1156210640	1-1562	1064	CAMSHAFT	000000	000000
1156210690	1-1562	1069	CAMSHAFT	000000	000000
1156210700	1-1562	1070	CAMSHAFT	000000	000000
1156211280	1-1562	1128	CAMSHAFT; INJ PUMP	000000	000000
1156220010	1-1562	2001	TAPPET	000000	000000
1156220030	1-1562	2003	ROLLER; TAPPET	000008	000002
1156220060	1-1562	2006	TAPPET	000001	000000
1156220090	1-1562	2009	TAPPET	000000	000000
1156230160	1-1562	3016	O-RING.FEED PUM	000119	000055
1156290010	1-1562	9001	BUSHING; TAPPET, INJ PUMP	000009	000000
1156290020	1-1562	9002	BEARING	000001	000000
1156290030	1-1562	9003	BEARING	000002	000000
1156290040	1-1562	9004	RING*	000000	000000
1156290060	1-1562	9006	NUT;PULLEY	000000	000000
1156290061	1-1562	9006	NUT;PULLEY	000000	000000
1156290070	1-1562	9007	SHIM; T=0.3	000000	000000
1156290080	1-1562	9008	SHIM; T=1.0	000000	000000
1156290090	1-1562	9009	KEY; DRIVE GEAR,INJ PUMP	000085	000000
1156290100	1-1562	9010	ROLLER	000012	000000
1156290130	1-1562	9013	SEAL; OIL, CAMSHAFT	000000	000000
1156290140	1-1562	9014	BEARING; I/PUMP	000000	000000
1156290150	1-1562	9015	RING	000000	000000
1156290170	1-1562	9017	SCREW	000000	000000

1156290180	1-1562	9018	GUIDE	000000	000000
1156290330	1-1562	9033	SHIM* T=0.725	000000	000000
1156290420	1-1562	9042	UNION	000000	000000
1156290470	1-1562	9047	COVER	000000	000000
1156290480	1-1562	9048	GASKET	000001	000000
1156290490	1-1562	9049	O-RING	000000	000000
1156290580	1-1562	9058	O-RING	000000	000000
1156290600	1-1562	9060	O-RING	000000	000028
1156290610	1-1562	9061	O-RING	000127	000000
1156290620	1-1562	9062	O-RING	000000	000083
1156290630	1-1562	9063	GUIDE	000000	000000
1156290640	1-1562	9064	o-RING	000000	000016
1156290650	1-1562	9065	O-RING	000000	000002
1156290670	1-1562	9067	FLANGE	000000	000004
1156290710	1-1562	9071	O-RING	000000	000000
1156290760	1-1562	9076	SHIM;FRT COVER INJ PUMP H	000000	000015
1156290940	1-1562	9094	GASKET	000000	000006
1156290960	1-1562	9096	GASKET;PLUNGER,BARREL SD	000001	000000
1156290990	1-1562	9099	BEARING;CM/SHF FRT, INJ	000001	000000
1156291000	1-1562	9100	SEAL;OIL,CM/SHF FRT, INJ	000000	000001
1156291050	1-1562	9105	SHIM (D=27,T=0.70)	000000	000000
1156291170	1-1562	9117	NUT; ENG STOP LEVER GOV	000012	000000
1156296490	1-1562	9649	BRACKET	000000	000000
1156310010	1-1563	1001	BLOCK ASM.; PLUNGER	000000	000000
1156310040	1-1563	1004	PLUNGER ASM	000000	000000
1156310060	1-1563	1006	PLUNGER; BLOCK	000000	000002
1156310070	1-1563	1007	BLOCK ASM.; PLUNGER	000000	000000
1156310100			PLUNGER ASM 4BD1	000000	000000
1156310120	1-1563	1012	PLUNGER ASM 6BD1 PW	000001	000000
1156310170	1-1563	1017	BLOCK ASM.; PLUNGER	000003	000000
1156310220	1-1563	1022	PLUNGER ASM.	000000	000000
1156310260	1-1563	1026	CAPSULE; SPRING	000000	000000
1156310300			PLUNGER ASSY	000000	000000
1156310340	1-1563	1034	PLUNGER COMPL;	000001	000000
1156310390	1-1563	1039	PLUNGER ASM.	000000	000000
1156310400	1-1563	1040	PLUNGER ASM.	000003	000003
1156310430	1-1563	1043	PLUNGER ASM	000000	000000
1156310440	1-1563	1044	PLUNGER ASM; 6SA1	000000	000000
1156310450	1-1563	1045	PLUNGER ASM. 6SA1	000001	000008
1156310600	1-1563	1060	BLOCK ASM; PLUNGER	000007	000000
1156310670	1-1563	1067	PLUNGER ASM.;	000000	000000
1156310690	1-1563	1069	PLUNGER ASSY	000000	000009
1156310700	1-1563	1070	PLUNGER ASM.	000004	000000
1156310710	1-1563	1071	BLOCK ASM; PLUNGER	000008	000000
1156310720	1-1563	1072	PLUNGER ASM.	000000	000000
1156310730	1-1563	1073	PLUNGER BLOCK	000003	000000
1156310740	1-1563	1074	BLOCK ASM; PLUNGER	000002	000000

1156310750	1-1563	1075	PLUNGER ASM.	000000	000000
1156310760	1-1563	1076	PLUNGER BLOCK	000000	000000
1156310770	1-1563	1077	PLUNGER ASM.	000000	000004
1156310810	1-1563	1081	PLUNGER ASM.	000000	000000
1156311080	1-1563	1108	BLOCK ASM; PLUNGER	000000	000000
1156311090	1-1563	1109	PLUNGER ASM.	000000	000000
1156311260	1-1563	1126	BLOCK ASM; PLUNGER	000000	000000
1156311280	1-1563	1128	PLUNGER ASM.	000000	000000
1156311290	1-1563	1129	PLUNGER ASM	000000	000000
1156311300	1-1563	1130	PLUNGER ASM	000000	000000
1156311310	1-1563	1131	PLUNGER ASM.	000004	000000
1156311580	1-1563	1158	PLUNGER BLOCK	000000	000000
1156311630	1-1563	1163	BLOCK ASM; PLUNGER	000000	000000
1156311720	1-1563	1172	BLOCK ASM PLUNGER	000000	000004
1156311730	1-1563	1173	BLOCK ASM PLUNGER	000000	000000
1156311920	1-1563	1192	BLOCK ASM; PLUNGER	000000	000002
1156311960	1-1563	1196	PLUNGER COMPL;	000000	000000
1156312000	1-1563	1200	PLUNGER COMPL; INJ PUMP	000000	000000
1156312050	1-1563	1205	PLUNGER COMPL; INJ PUMP	000000	000005
1156312060	1-1563	1206	PLUNGER COMPL; INJ PUMP	000000	000011
1156312230	1-1563	1223	PLUNGER COMPL; INJ PUMP	000000	000000
1156312240	1-1563	1224	PLUNGER COMPL; INJ PUMP	000000	000005
1156312250	1-1563	1225	PLUNGER COMPL; INJ PUMP	000000	000000
1156312290	1-1563	1229	PLUNGER COMPL; INJ PUMP	000000	000000
1156312300	1-1563	1230	PLUNGER COMPL; INJ PUMP	000000	000000
1156320060	1-1563	2006	PLUNGER ASM.	000000	000005
1156320080	1-1563	2008	PLUNGER ASM.	000000	000000
1156320140	1-1563	2014	PLUNGER ASM	000008	000000
1156320150	1-1563	2015	PLUNGER ASM	000000	000000
1156320360	1-1563	2036	PLUNGER ASM	000001	000000
1156320400	1-1563	2040	PLUNGER ASM.	000000	000003
1156320430	1-1563	2043	PLUNGER ASM	000000	000001
1156320460	1-1563	2046	PLUNGER ASM; INJ PUMP	000000	000000
1156320580	1-1563	2058	PLUNGER ASM; INJ PUMP	000000	000007
1156320590	1-1563	2059	PLUNGER ASM; INJ PUMP	000000	000014
1156320600	1-1563	2060	PLUNGER ASM; INJ PUMP	000000	000013
1156320610	1-1563	2061	PLUNGER ASM; INJ PUMP	000000	000001
1156340020	1-1563	4002	SPRING; PLUNGER	000000	000000
1156340040	1-1563	4004	SPRING; PLUNGER	000000	000000
1156340050	1-1563	4005	SPRING; PLUNGER	000000	000000
1156340070	1-1563	4007	SPRING; PLUNGER	000000	000000
1156340080	1-1563	4008	SPRING; PLUNGER	000000	000000
1156340110	1-1563	4011	SPRING	000001	000005
1156350010	1-1563	5001	SLEEVE; CONT. PLUNGER	000003	000013
1156350020	1-1563	5002	SLEEVE	000000	000002
1156350040	1-1563	5004	SLEEVE; FRT COVER	000000	000000
1156370030	1-1563	7003	CONTROL PACK	000000	000000

1156370070	1-1563	7007	CONT,RACK	000000	000000
1156370080	1-1563	7008	PACK; CONTROL	000000	000000
1156370100	1-1563	7010	CONTROL RACK	000000	000000
1156370170	1-1563	7017	RACK; CONTROL	000000	000000
1156370180	1-1563	7018	RACK; CONTROL	000000	000000
1156370630	1-1563	7063	PACK; CONTROL	000001	000000
1156390030	1-1563	9003	SCREW;AIR BLEED	000000	000000
1156390040	1-1563	9004	POINTER	000000	000000
1156390050	1-1563	9005	COVER	000000	000000
1156390060	1-1563	9006	BOLT; JOINT OVER FLOW	000002	000000
1156390070	1-1563	9007	GASKET	000000	000000
1156390080	1-1563	9008	GASKET;BL	000000	000000
1156390090	1-1563	9009	GASKET; INJ PUMP	000000	000000
1156390120	1-1563	9012	SEAL; OIL	000001	000011
1156390130	1-1563	9013	OIL SEAL	000000	000000
1156390160	1-1563	9016	O-RING	000000	000488
1156390180	1-1563	9018	SHIM T=1.50	000015	000000
1156390190	1-1563	9019	SHIM T=0.60	000000	000000
1156390200	1-1563	9020	WASHER	000097	000000
1156390210	1-1563	9021	POINTER	000000	000000
1156390220	1-1563	9022	SEAT; SPRING	000000	000000
1156390230	1-1563	9023	SEAT; SPRING	000000	000000
1156390240	1-1563	9024	SHIM T=0.500	000018	000077
1156390250	1-1563	9025	SHIM T=0.525	000000	000000
1156390260	1-1563	9026	SHIM T=0.550	000000	000042
1156390270	1-1563	9027	SHIM T=0.575	000000	000000
1156390280	1-1563	9028	SHIM T=0.600	000100	000000
1156390290	1-1563	9029	SHIM T=0.625	000000	000000
1156390300	1-1563	9030	SHIM T=0.650	000000	000042
1156390310	1-1563	9031	SHIM T=0.675	000000	000000
1156390320	1-1563	9032	SHIM T=0.700	000012	000000
1156390330	1-1563	9033	SHIM T=0.725	000000	000000
1156390340	1-1563	9034	SHIM T=0.750	000000	000000
1156390350	1-1563	9035	SHIM T=0.775	000000	000000
1156390360	1-1563	9036	SHIM T=0.800	000000	000000
1156390370	1-1563	9037	SHIM T=0.825	000104	000000
1156390380	1-1563	9038	SHIM T=0.850	000000	000000
1156390390	1-1563	9039	SHIM T=0.875	000000	000000
1156390400	1-1563	9040	SHIM T=0.900	000000	000000
1156390410	1-1563	9041	SHIM T=0.925	000000	000000
1156390420	1-1563	9042	SHIM T=0.950	000000	000000
1156390430	1-1563	9043	SHIM T=0.975	000000	000000
1156390440	1-1563	9044	SHIM T=1.000	000021	000000
1156390450	1-1563	9045	SHIM T=1.025	000000	000000
1156390460	1-1563	9046	SHIM T=1.050	000000	000000
1156390470	1-1563	9047	SHIM T=1.075	000000	000000
1156390480	1-1563	9048	SHIM T=1.100	000016	000000

1156390490	1-1563	9049	SHIM T=1.125	000000	000000
1156390500	1-1563	9050	SHIM T=1.150	000000	000000
1156390510	1-1563	9051	SHIM T=1.175	000000	000000
1156390520	1-1563	9052	SHIM T=1.200	000000	000000
1156390530	1-1563	9053	SHIM T=1.225	000000	000000
1156390540	1-1563	9054	SHIM T=1.250	000000	000000
1156390550	1-1563	9055	SHIM T=1.275	000000	000000
1156390560	1-1563	9056	SHIM T=1.300	000034	000000
1156390570	1-1563	9057	SHIM T=1.325	000000	000000
1156390580	1-1563	9058	SHIM T=1.350	000000	000000
1156390590	1-1563	9059	SHIM T=1.375	000000	000000
1156390600	1-1563	9060	SHIM T=1.400	000000	000000
1156390610	1-1563	9061	SHIM T=1.425	000026	000000
1156390620	1-1563	9062	SHIM T=1.450	000000	000000
1156390630	1-1563	9063	SHIM T=1.475	000000	000000
1156390640	1-1563	9064	SHIM T=1.500	000001	000000
1156390650	1-1563	9065	SHIM T=1.525	000000	000000
1156390660	1-1563	9066	SHIM T=1.550	000000	000000
1156390670	1-1563	9067	SHIM T=1.575	000000	000000
1156390680	1-1563	9068	SHIM T=1.600	000020	000000
1156390690	1-1563	9069	SHIM T=1.625	000000	000000
1156390700	1-1563	9070	SHIM T=1.650	000000	000000
1156390710	1-1563	9071	SHIM T=1.675	000000	000000
1156390720	1-1563	9072	SHIM T=1.700	000018	000000
1156390730	1-1563	9073	SHIM T=1.725	000000	000000
1156390740	1-1563	9074	SHIM T=1.750	000026	000000
1156390750	1-1563	9075	SHIM T=1.775	000000	000000
1156390760	1-1563	9076	SHIM T=1.800	000040	000000
1156390770	1-1563	9077	SHIM T=1.825	000000	000000
1156390780	1-1563	9078	SHIM T=1.850	000061	000000
1156390790	1-1563	9079	SHIM T=1.875	000000	000000
1156390800	1-1563	9080	SHIM T=1.900	000000	000000
1156390810	1-1563	9081	SHIM T=1.925	000000	000000
1156390820	1-1563	9082	SHIM T=1.950	000000	000000
1156390830	1-1563	9083	SHIM T=1.975	000005	000000
1156390860	1-1563	9086	DEFLECTOR	000003	000005
1156390880	1-1563	9088	SHIM RR BRG	000000	000000
1156390890	1-1563	9089	SHIM*	000002	000000
1156390900	1-1563	9090	SHIM	000002	000000
1156390910	1-1563	9091	SHIM	000002	000000
1156390920	1-1563	9092	SHIM*	000002	000000
1156390970	1-1563	9097	SHIM;FRT COVER, INJ PUMP	000001	000000
1156390980	1-1563	9098	SHIM;FRT COVER, INJ PUMP	000000	000000
1156390990	1-1563	9099	SHIM;FRT COVER, INJ PUMP	000001	000000
1156391000	1-1563	9100	SHIM;FRT COVER, INJ PUMP	000000	000000
1156391010	1-1563	9101	SHIM;FRT COVER, INJ PUMP	000001	000000
1156391020	1-1563	9102	SHIM;FRT COVER, INJ PUMP	000000	000000

1156391030	1-1563	9103	SHIM;FRT COVER,INJ PMP	000001	000000
1156410060	1-1564	1006	VALVE ASM; DELIVERY 4BD1	000000	000000
1156410090	1-1564	1009	VALVE; DELIVERY	000004	000001
1156410110	1-1564	1011	VALVE; DELIVERY	000000	000011
1156410130	1-1564	1013	VALVE; DELIVERY	000000	000010
1156410160	1-1564	1016	VALVE; DELIVERY	000002	000000
1156410180	1-1564	1018	DELIVERY VALVE	000000	000000
1156410190	1-1564	1019	VALVE ASM; DEL.	000000	000000
1156410200	1-1564	1020	VALVE; DELIVERY	000000	000000
1156410210	1-1564	1021	VALVE ASM.; DELIVERY	000000	000000
1156410240	1-1564	1024	VALVE; DELIVERY 6SA1	000000	000000
1156410250	1-1564	1025	VALVE; DELIVERY 6SA1	000000	000000
1156410310	1-1564	1031	DELIVERY; VALVE	000000	000012
1156410350	1-1564	1035	VALVE; DELIVERY, INJ PUMP	000000	000015
1156410460	1-1564	1046	GASKET	000243	000260
1156430010	1-1564	3001	SPRING,PLUNGER	000000	000000
1156430030	1-1564	3003	SPRING	000000	000000
1156430040	1-1564	3004	SPRING SEAT	000000	000000
1156430140	1-1564	3014	SPRING; DELIVERY VALVE	000001	000000
1156440070	1-1564	4007	HOLDER	000002	000000
1156440090	1-1564	4009	HOLDER; DELIVERY VALVE	000000	000000
1156440100	1-1564	4010	HOLDER;DELIVERY VALVE	000003	000000
1156440110	1-1564	4011	HOLDER; DELIVERY VLV, INJ	000001	000000
1156490010	1-1564	9001	GASKET	000000	000000
1156490030	1-1564	9003	GASKET	000038	000000
1156490050	1-1564	9005	STOPPER	000045	000000
1156490080	1-1564	9008	RING	000000	000729
1156490220	1-1564	9022	BRACKET; ACTUAT	000000	000006
1156621050	1-1566	2105	PUMP ASM; INJ.	000000	000000
1156630010	1-1566	3001	SCREW	000000	000000
1156710040	1-1567	1004	PUMP ASM; PRIME	000000	000000
1156725270	1-1567	2527	GOVERNOR ASM	000000	000000
1157120050	1-1571	2005	DIAPHRAGM	000001	000000
1157120070	1-1571	2007	DIAPHRAGM	000000	000000
1157130010	1-1571	3001	SPRING; GOV.	000000	000000
1157150010	1-1571	5001	GEAR	000000	000000
1157150020	1-1571	5002	GEAR*	000000	000000
1157190020	1-1571	9002	GASKET	000000	000000
1157190050	1-1571	9005	BOLT;CONT.WIRE	000000	000038
1157190120	1-1571	9012	GSKT;OIL RETURN BOLT,INJ	000000	000000
1157190930	1-1571	9093	GASKET; JOINT,OIL PIPE	000000	000000
1157200051	1-1572	0005	GOVERNOR ASM.	000000	000000
1157200280	1-1572	0028	PUMP ASM; FEED 6BD1	000000	000000
1157200623	1-1572	0062	GOVERNOR	000000	000000
1157200962	1-1572	0096	GOVERNOR ASM E120	000000	000000
1157201202	1-1572	0120	GOVERNOR ASM	000000	000000
1157201341	1-1572	0134	GOVERNOR ASM E120	000000	000000

1157201400	1-1572	0140	GOVERNOR ASM.;	000000	000000
1157201530	1-1572	0153	GOVERNOR ASM.	000000	000000
1157201670	1-1572	0167	GOVERNOR ASM E120	000000	000000
1157201940	1-1572	0194	GOVERNOR ASM.	000000	000000
1157201990	1-1572	0199	GOVERNOR ASM	000000	000000
1157202020	1-1572	0202	GOVERNOR; INJ. PUMP	000000	000000
1157202210	1-1572	0221	GOVERNOR ASM.	000000	000000
1157202620	1-1572	0262	GOVERNOR ASM.	000000	000000
1157202801	1-1572	0280	GOVERNOR ASM. 6BD1T	000000	000000
1157202940	1-1572	0294	GOVERNOR ASM 6BB1 / 6BD1	000000	000000
1157202980	1-1572	0298	GOVERNOR ASM.	000000	000000
1157202981	1-1572	0298	GOVERNOR ASM.	000000	000000
1157203011	1-1572	0301	GOVERNOR ASM.	000000	000000
1157203020	1-1572	0302	GOVERNOR ASM	000000	000000
1157203040	1-1572	0304	GOVERNOR ASM.	000000	000000
1157203042	1-1572	0304	GOVERNOR ASM.	000000	000000
1157203180	1-1572	0318	GOVERNOR ASM.	000000	000000
1157203240	1-1572	0324	GOVERNOR ASM.	000000	000000
1157203370	1-1572	0337	GOVERNOR ASM	000000	000000
1157203410	1-1572	0341	GOVERNOR ASM. E120	000000	000000
1157203420	1-1572	0342	GOVERNOR ASM E120	000000	000000
1157203430	1-1572	0343	GOVERNOR ASM.	000000	000000
1157203440	1-1572	0344	GOVERNOR ASM. E120	000000	000000
1157203460	1-1572	0346	GOVERNOR ASM.;	000000	000000
1157203530	1-1572	0353	GOVERNOR ASM.	000001	000000
1157203620	1-1572	0362	GOVERNOR ASM.	000000	000000
1157204050	1-1572	0405	GOVERNOR ASM.	000000	000000
1157204130	1-1572	0413	GOVERNOR ASM.	000000	000000
1157204190	1-1572	0419	GOVERNOR ASM	000000	000000
1157204220	1-1572	0422	GOVERNOR ASM;	000000	000000
1157204230	1-1572	0423	GOVERNOR ASM.	000000	000000
1157204690	1-1572	0469	GOVERNOR ASM **FAX585***	000000	000000
1157204700	1-1572	0470	GOVERNOR ASM.	000000	000000
1157204720	1-1572	0472	GOVERNOR ASM	000000	000000
1157204780	1-1572	0478	GOVERNOR ASM	000000	000000
1157204810	1-1572	0481	GOVERNOR ASM.	000000	000000
1157204820	1-1572	0482	GOVERNOR ASM.	000000	000000
1157204830	1-1572	0483	GOVERNOR ASM.	000000	000000
1157204880	1-1572	0488	GOVERNOR ASM.	000000	000000
1157204890	1-1572	0489	GOVERNOR ASM	000000	000000
1157204930	1-1572	0493	GOVERNOR ASM.	000000	000000
1157204940	1-1572	0494	GOVERNOR ASM.	000000	000000
1157204951	1-1572	0495	GOVERNOR ASM.	000000	000000
1157205110	1-1572	0511	GOVERNOR ASM.	000000	000000
1157205500	1-1572	0550	GOVERNOR ASM.	000000	000000
1157205570	1-1572	0557	GOVERNOR ASM.	000000	000000
1157205580	1-1572	0558	GOVERNOR ASM	000000	000000

1157205590	1-1572	0559	GOVERNOR ASM		000000	000000
1157205600	1-1572	0560	GOVERNOR ASM.		000000	000000
1157205641	1-1572	0564	GOVERNOR ASM.		000000	000000
1157205651	1-1572	0565	GOVERNOR ASM.		000000	000000
1157205661	1-1572	0566	GOVERNOR ASM.	(6BD1	000000	000000
1157205670	1-1572	0567	GOVERNOR ASM.		000000	000000
1157205671	1-1572	0567	GOVERNOR ASM.		000000	000000
1157205701	1-1572	0570	GOVERNOR ASM.		000000	000000
1157205711	1-1572	0571	GOVERNOR ASM.		000000	000000
1157205910	1-1572	0591	GOVERNOR ASM.		000000	000000
1157205911	1-1572	0591	GOVERNOR ASM.		000000	000000
1157205970	1-1572	0597	GOVERNOR ASM		000000	000000
1157205980	1-1572	0598	GOVERNOR ASM		000000	000000
1157206080	1-1572	0608	GOVERNOR ASM		000000	000000
1157206090	1-1572	0609	GOVERNOR ASM		000000	000000
1157206112	1-1572	0611	GOVERNOR ASM.		000000	000000
1157206120	1-1572	0612	GOVERNOR ASM.		000000	000000
1157206130	1-1572	0613	GOVERNOR ASM.		000000	000000
1157206191	1-1572	0619	GOVERNOR ASM.		000000	000000
1157206650	1-1572	0665	GOVERNOR ASM.		000000	000000
1157206870	1-1572	0687	GOVERNOR ASM		000000	000000
1157207020	1-1572	0702	GOVERNOR ASM.		000000	000000
1157207050	1-1572	0705	GOVERNOR ASM.		000000	000000
1157207070	1-1572	0707	GOVERNOR ASM.		000000	000000
1157207270	1-1572	0727	GOVERNOR ASM.		000000	000000
1157207281	1-1572	0728	GOVERNOR ASM.		000000	000000
1157207291	1-1572	0729	GOVERNOR ASM.		000000	000000
1157207300	1-1572	0730	GOVERNOR ASM.		000000	000000
1157207440	1-1572	0744	GOVERNOR ASM.		000000	000000
1157207500	1-1572	0750	GOVERNOR ASM.		000000	000000
1157207650	1-1572	0765	GOVERNOR ASM;		000000	000000
1157207690	1-1572	0769	GOVERNOR ASM.		000000	000000
1157207710	1-1572	0771	GOVERNOR ASM.*INVALID*		000000	000000
1157207870	1-1572	0787	GOVERNOR ASM.		000000	000000
1157208150	1-1572	0815	GOVERNOR ASM.		000000	000000
1157208171	1-1572	0817	GOVERNOR ASM.		000000	000000
1157208340	1-1572	0834	GOVERNOR ASM.		000000	000000
1157208350	1-1572	0835	PUMP ASM; INJECTION		000000	000000
1157208352	1-1572	0835	PUMP ASM; INJECTION		000000	000000
1157208510	1-1572	0851	GOVERNOR ASM.		000000	000000
1157208520	1-1572	0852	GOVERNOR ASM.		000000	000000
1157208630	1-1572	0863	GOVERNOR ASM.		000000	000000
1157208880	1-1572	0888	GOVERNOR ASM.		000000	000000
1157209140	1-1572	0914	GOVERNOR ASM.		000000	000000
1157209221	1-1572	0922	GOVERNOR ASM.		000000	000000
1157209240	1-1572	0924	GOVERNOR ASM.		000000	000000
1157209250	1-1572	0925	GOVERNOR ASM.		000000	000000

1157209260	1-1572	0926	GOVERNOR ASM.	000000	000000
1157209270	1-1572	0927	GOVERNOR ASM.	000000	000000
1157209291	1-1572	0929	GOVERNOR ASM.	000000	000000
1157209320	1-1572	0932	GOVERNOR ASM.	000000	000000
1157209371	1-1572	0937	ASM.RSV.	000000	000000
1157209390	1-1572	0939	GOVERNOR ASM.	000000	000000
1157209400	1-1572	0940	GOVERNOR ASM.	000000	000000
1157209410	1-1572	0941	GOVERNOR ASM.	000000	000000
1157209430	1-1572	0943	GOVERNOR ASM	000000	000000
1157209450	1-1572	0945	GOVERNOR ASM	000000	000000
1157209460	1-1572	0946	GOVERNOR ASM.	000000	000000
1157209490	1-1572	0949	GOVERNOR ASM.	000000	000000
1157209491	1-1572	0949	GOVERNOR ASM.	000000	000000
1157209500	1-1572	0950	GOVERNOR ASM.	000000	000000
1157209510	1-1572	0951	GOVERNOR ASM	000000	000000
1157209530	1-1572	0953	GOVERNOR ASM	000000	000000
1157209540	1-1572	0954	GOVERNOR ASM.	000000	000000
1157209550	1-1572	0955	GOVERNOR ASM	000000	000000
1157209830	1-1572	0983	GOVERNOR ASM.	000000	000000
1157209840	1-1572	0984	GOVERNOR ASM.	000000	000000
1157209870	1-1572	0987	GOVERNOR ASM.	000000	000000
1157209871	1-1572	0987	GOVERNOR ASM.	000000	000001
1157209940	1-1572	0994	GOVERNOR ASM.	000000	000000
1157209980	1-1572	0998	GOVERNOR ASM.;	000000	000000
1157209991	1-1572	0999	GOVERNOR ASM.	000000	000000
1157210020	1-1572	1002	COVER; GOVERNOR COVER	000000	000000
1157210040	1-1572	1004	HOUSING	000000	000000
1157210140	1-1572	1014	COVER; GOVERNOR	000000	000000
1157210150	1-1572	1015	COVER; GOVERNOR COVER	000000	000000
1157210160	1-1572	1016	COVER; GOVERNOR	000000	000000
1157210230	1-1572	1023	COVER	000000	000001
1157210300	1-1572	1030	HOUSING; GOVERNOR	000000	000000
1157210320	1-1572	1032	COVER; GOVERNOR COVER	000000	000000
1157210330	1-1572	1033	HOUSING; GOVERNOR	000000	000000
1157210430	1-1572	1043	COVER; GOVERNOR COVER	000000	000000
1157210650	1-1572	1065	HOUSING	000000	000000
1157210660	1-1572	1066	COVER; GOVERNOR	000000	000000
1157210670	1-1572	1067	HOUSING; GOVERNOR	000000	000000
1157210730	1-1572	1073	COVER; GOVERNOR COVER	000000	000000
1157210840	1-1572	1084	HOUSING; GOVERNOR	000000	000000
1157210890	1-1572	1089	HOUSING	000000	000000
1157211020	1-1572	1102	HOUSING; GOVERNOR	000000	000000
1157211030	1-1572	1103	COVER; GOVERNOR	000000	000000
1157211040	1-1572	1104	HOUSING; GOVERNOR	000001	000000
1157211190	1-1572	1119	COVER; GOVERNOR	000000	000000
1157211290	1-1572	1129	HOUSING; GOVERNOR	000000	000000
1157211500	1-1572	1150	HOUSING; GOVERNOR	000000	000000

1157211670	1-1572	1167	COVER; GOV.	000000	000000
1157211680	1-1572	1168	COVER ASM.	000000	000000
1157211700	1-1572	1170	HOUSING; GOVERNOR	000000	000000
1157211800	1-1572	1180	COVER	000000	000000
1157211850	1-1572	1185	HOUSING; ACTUATOR	000003	000000
1157211910	1-1572	1191	COVER	000000	000000
1157212000	1-1572	1200	COVER; GOV.	000000	000000
1157212020	1-1572	1202	HOUSING; GOV.	000000	000000
1157212030	1-1572	1203	HOUSING; GOV.	000000	000000
1157212080	1-1572	1208	COVER; GOVERNOR	000000	000000
1157212360	1-1572	1236	COVER; GOV.	000000	000000
1157212370	1-1572	1237	COVER	000000	000000
1157212380	1-1572	1238	COVER; GOV.	000000	000000
1157212410	1-1572	1241	COVER	000000	000000
1157212510	1-1572	1251	COVER; GOV.	000000	000000
1157212520	1-1572	1252	COVER	000000	000000
1157212950	1-1572	1295	COVER GOVERNOR	000000	000000
1157213280	1-1572	1328	GOVERNOR BODY	000003	000000
1157213360	1-1572	1336	COVER	000000	000000
1157213410	1-1572	1341	COVER	000001	000000
1157213480	1-1572	1348	COVER	000000	000000
1157213500	1-1572	1350	HOUSING; GOV. INJ PUMP	000000	000000
1157213510	1-1572	1351	COVER; GOV HSG, INJ PUMP	000000	000000
1157213520	1-1572	1352	COVER; GOV COVER	000005	000000
1157213600	1-1572	1360	COVER;GOV HSG INJ PUMP	000005	000000
1157220050	1-1572	2005	FLYWEIGHT ASM	000000	000000
1157220080	1-1572	2008	FLYWEIGHT ASM;GOV	000000	000000
1157220120	1-1572	2012	BOLT; EYE	000002	000000
1157220140	1-1572	2014	FLYWEIGHT ASM.	000001	000001
1157220160	1-1572	2016	FLYWEIGHT ASM.	000000	000000
1157220170	1-1572	2017	FLYWEIGHT ASM.	000000	000001
1157220180	1-1572	2018	FLYWEIGHT ASM.	000000	000000
1157220210	1-1572	2021	FLYWEIGHT ASM; GOV.	000000	000001
1157230200	1-1572	3020	CAPSULE; SPRING	000000	000000
1157230250	1-1572	3025	CAPSULE; SPRING	000002	000000
1157230260	1-1572	3026	SPRING	000000	000000
1157230280	1-1572	3028	SPRING	000000	000015
1157230284	1-1572	3028	SPRING	000000	000000
1157230300	1-1572	3030	SPRING	000000	000000
1157230340	1-1572	3034	CAPSULE; SPRING	000000	000000
1157230350	1-1572	3035	CAPSULE; SPRING	000000	000000
1157230360	1-1572	3036	CAPSULE; SPRING	000000	000000
1157230370	1-1572	3037	CAPSULE; SPRING	000000	000000
1157230380	1-1572	3038	CAPSULE; SPRING	000000	000000
1157230400	1-1572	3040	SPRING; CAPSULE	000000	000000
1157230410	1-1572	3041	SPRING; GOV.	000000	000000
1157230470	1-1572	3047	CAPSULE; SPR.	000000	000000

1157230480	1-1572	3048	SPRING; CAPSULE	000000	000000
1157230620	1-1572	3062	SPRING;GOV	000000	000000
1157230630	1-1572	3063	SPRING	000000	000000
1157230640	1-1572	3064	SPRING	000000	000000
1157230730	1-1572	3073	CAPSULE; SPRING 4JC1	000000	000000
1157230740	1-1572	3074	CAPSULE; SPRING	000000	000000
1157230750	1-1572	3075	CAPSULE; SPRING	000000	000000
1157230760	1-1572	3076	BOLT	000000	000000
1157230770	1-1572	3077	SPRING	000000	000000
1157230790	1-1572	3079	SPRING CAPSULE	000000	000000
1157230830	1-1572	3083	CAPSULE; SPRING	000000	000000
1157230840	1-1572	3084	SPRING	000000	000000
1157230850	1-1572	3085	SPRING	000000	000000
1157230860	1-1572	3086	SPRING	000000	000000
1157230870	1-1572	3087	SPRING	000000	000000
1157230881	1-1572	3088	SPRING	000000	000000
1157230940	1-1572	3094	SPRING; GOVERNOR	000000	000000
1157230950	1-1572	3095	CAPSULE; SPRING	000000	000000
1157230970	1-1572	3097	SPRING; GOV-OUTER	000000	000000
1157230980	1-1572	3098	CAPSULE; SPRING	000000	000000
1157231010	1-1572	3101	CAPSULE; SPRING	000000	000000
1157231020	1-1572	3102	CAPSULE; SPRING	000000	000000
1157231030	1-1572	3103	CAPSULE; SPRING	000000	000000
1157231070	1-1572	3107	CAPSULE; SPRING	000000	000000
1157231130	1-1572	3113	CAPSULE SPR IDEL SUB	000000	000000
1157231140	1-1572	3114	CAPSULE; SPRING	000000	000000
1157231210	1-1572	3121	SPRING	000000	000000
1157231220	1-1572	3122	CAPSULE; SPRING	000000	000000
1157231230	1-1572	3123	CAPSULE; SPRING	000000	000000
1157231240	1-1572	3124	CAPSULE; SPRING, IDLING	000000	000000
1157231270	1-1572	3127	CAPSULE; SPRING	000000	000000
1157231310	1-1572	3131	SPRING	000000	000000
1157231320	1-1572	3132	SPRING	000000	000000
1157231390	1-1572	3139	CAPSULE; SPRING	000000	000000
1157231450	1-1572	3145	CAPSULE;SPRING	000002	000000
1157231460	1-1572	3146	SPRING; GOVERNOR	000003	000000
1157231490	1-1572	3149	SPRING RETURN LEVER	000000	000000
1157231500	1-1572	3150	SPRING GOVERNOR	000000	000000
1157231510	1-1572	3151	SPRING	000000	000000
1157231610	1-1572	3161	SPRING	000000	000000
1157231770	1-1572	3177	SPRING; GOVERNOR	000000	000000
1157231780	1-1572	3178	CAPSULE; SPRING	000000	000000
1157231790	1-1572	3179	SPRING;RETURN	000000	000008
1157231800	1-1572	3180	CAPSULE; SPRING	000000	000000
1157231860	1-1572	3186	SPRING	000000	000000
1157231920	1-1572	3192	SPRING; GOV.	000000	000000
1157231940	1-1572	3194	SPRING; GOVERNOR OUTER	000000	000000

1157232000	1-1572	3200	SPRING; GOVERNOR	000000	000000
1157232120	1-1572	3212	SPRING; GOVERNOR	000000	000005
1157232150	1-1572	3215	SPRING;GOV	000000	000000
1157232190	1-1572	3219	SPRING; GOVERNOR	000000	000004
1157232200	1-1572	3220	SPRING CAPSULE	000000	000000
1157232210	1-1572	3221	SPRING;	000000	000000
1157232230	1-1572	3223	SPRING	000000	000000
1157232240	1-1572	3224	CAPSULE; SPRING	000000	000000
1157232300	1-1572	3230	SPRING;GOV.	000000	000000
1157232340	1-1572	3234	SPRING;GOV.	000000	000000
1157232390	1-1572	3239	SPRING	000000	000000
1157232420	1-1572	3242	SPRING; GOVERNOR	000000	000000
1157232430	1-1572	3243	SPRING; GOV-INNER	000000	000000
1157232460	1-1572	3246	CAPSULE; SPRING	000000	000000
1157232470	1-1572	3247	SPRING	000000	000000
1157232560	1-1572	3256	SPRING; GOV.	000000	000000
1157232570	1-1572	3257	SPRING	000000	000000
1157232580	1-1572	3258	SPRING	000000	000000
1157232600	1-1572	3260	WASHER: SPRING	000002	000000
1157232610	1-1572	3261	SPRING WASHER	000000	000101
1157232640	1-1572	3264	SPRING	000000	000000
1157232680	1-1572	3268	CAPSULE; SPRING	000000	000000
1157232690	1-1572	3269	CAPSULE; SPRING	000000	000000
1157232840	1-1572	3284	CAPSULE; SPRING	000000	000000
1157232890	1-1572	3289	SPRING	000000	000000
1157232900	1-1572	3290	SPRING	000000	000000
1157232910	1-1572	3291	SPRING	000000	000000
1157232920	1-1572	3292	SPRING	000000	000000
1157232940	1-1572	3294	SPRING	000001	000000
1157232950	1-1572	3295	SPRING;CONTROL LEVER,GOV	000000	000000
1157232980	1-1572	3298	CAPSULE; SPRING	000000	000000
1157233000	1-1572	3300	SPRING; INNER, G	000000	000000
1157233010	1-1572	3301	SPRING CAPSULE; IDLE	000000	000000
1157233020	1-1572	3302	SPRING	000001	000000
1157233030	1-1572	3303	SPRING	000000	000000
1157233040	1-1572	3304	SPRING	000000	000000
1157233050	1-1572	3305	CAPSULE; SPRING	000000	000000
1157233060	1-1572	3306	SPRING	000000	000000
1157233070	1-1572	3307	SEAT; SPRING	000000	000000
1157233080	1-1572	3308	SEAT; SPRING	000000	000000
1157233140	1-1572	3314	SPRING RETURN LEVER	000000	000000
1157233190	1-1572	3319	CAPSULE; SPRING	000000	000000
1157233450	1-1572	3345	SEAT; SPR.	000000	000000
1157233690	1-1572	3369	CAPSULE; SPRING	000000	000000
1157233900	1-1572	3390	SPRING ASM.	000000	000000
1157233970	1-1572	3397	CAPSULE;SPRING	000000	000000
1157234320	1-1572	3432	CAPSULE SPRING	000000	000000

1157234370	1-1572	3437	CAPSULE SPRING	000000	000000
1157234380	1-1572	3438	CAPSULE SPRING	000000	000000
1157235320	1-1572	3532	SPRING CAPSULE	000000	000000
1157235330	1-1572	3533	SPRING	000000	000000
1157235350	1-1572	3535	SPRING	000000	000000
1157235380	1-1572	3538	SPRING	000000	000000
1157235610	1-1572	3561	SPRING CAPSULE; IDLE	000000	000000
1157236110	1-1572	3611	SPRING; STOP LEVER, GOV	000000	000000
1157236120	1-1572	3612	SPRING; STOP LEVER GOV	000005	000000
1157250110	1-1572	5011	LINK	000000	000003
1157250150	1-1572	5015	LEVER ASM; GUIDE 4JC1	000000	000000
1157250170	1-1572	5017	LEVER	000000	000000
1157250200	1-1572	5020	LINK; FLOATING LEVER	000000	000000
1157250270	1-1572	5027	LEVER ASM; GUIDE	000000	000000
1157250311	1-1572	5031	LEVER SWIVEL	000000	000000
1157250330	1-1572	5033	LEVER ASM; GUIDE	000000	000000
1157250340	1-1572	5034	LEVER	000000	000000
1157250350	1-1572	5035	LEVER	000000	000000
1157250360	1-1572	5036	LEVER	000000	000000
1157250370	1-1572	5037	LEVER ASM; GUIDE	000000	000000
1157250470	1-1572	5047	LEVER ASM; GUIDE	000000	000000
1157250480	1-1572	5048	LEVER; SWIVEL LEVER	000000	000000
1157250740	1-1572	5074	LEVER; SWIVEL LEVER	000000	000000
1157250770	1-1572	5077	LEVER	000000	000000
1157250800	1-1572	5080	LEVER	000000	000000
1157250810	1-1572	5081	GUIDE LEVER ASM	000000	000000
1157250830	1-1572	5083	LINK*	000000	000000
1157250840	1-1572	5084	TENSION LEVER	000000	000000
1157250850	1-1572	5085	LEVER ASM	000000	000000
1157250870	1-1572	5087	LEVER	000000	000000
1157250910	1-1572	5091	LEVER; FLOATING	000000	000000
1157250930	1-1572	5093	LEVER; GUIDE	000000	000000
1157250940	1-1572	5094	LEVER; FLOATING	000000	000000
1157250960	1-1572	5096	LEVER	000000	000000
1157251010	1-1572	5101	LEVER	000000	000000
1157251100	1-1572	5110	LEVER TENSION	000000	000000
1157251110	1-1572	5111	LEVER	000000	000000
1157251150	1-1572	5115	LEVER; GUIDE	000000	000000
1157251160	1-1572	5116	LEVER	000000	000000
1157251180	1-1572	5118	LEVER	000000	000000
1157251380	1-1572	5138	LEVER	000000	000000
1157251400	1-1572	5140	LEVER	000000	000000
1157251460	1-1572	5146	LEVER	000000	000000
1157251550	1-1572	5155	LEVER	000000	000000
1157251580	1-1572	5158	LEVER	000000	000000
1157251590	1-1572	5159	AEVER; SWIVEL LEVER	000003	000000
1157251700	1-1572	5170	LEVER	000000	000000

1157251720	1-1572	5172	LEVER	000000	000000
1157251970	1-1572	5197	LEVER	000000	000000
1157251980	1-1572	5198	LEVER	000000	000000
1157252000	1-1572	5200	LEVER; SWIVEL LEVER	000000	000000
1157252010	1-1572	5201	LEVER	000000	000000
1157252020	1-1572	5202	LEVER; SHIFT	000000	000000
1157252090	1-1572	5209	LEVER; SWIVEL 4JC1	000000	000000
1157252200	1-1572	5220	LEVER; GUIDE	000000	000000
1157252250	1-1572	5225	LEVER	000000	000000
1157252260	1-1572	5226	LEVER ASM GUIDE	000000	000000
1157252330	1-1572	5233	LEVER	000002	000000
1157252390	1-1572	5239	LEVER	000000	000000
1157252400	1-1572	5240	LEVER	000000	000000
1157252690	1-1572	5269	LEVER 6BD1	000001	000000
1157252700	1-1572	5270	LEVER 6BD1	000000	000000
1157252860	1-1572	5286	LEVER	000000	000000
1157253050	1-1572	5305	LEVER ASM; GUIDE	000000	000000
1157253190	1-1572	5319	LEVER	000000	000000
1157253200	1-1572	5320	LEVER	000000	000000
1157253380	1-1572	5338	LEVER	000003	000000
1157253440	1-1572	5344	LEVER	000000	000000
1157253450	1-1572	5345	LEVER; SWIVEL LEVER	000000	000000
1157253770	1-1572	5377	LEVER	000000	000000
1157253790	1-1572	5379	LEVER	000000	000000
1157253800	1-1572	5380	LEVER	000000	000000
1157253810	1-1572	5381	LEVER	000000	000000
1157253830	1-1572	5383	LEVER	000000	000001
1157253850	1-1572	5385	LEVER	000000	000000
1157254110	1-1572	5411	LEVER	000000	000001
1157254130	1-1572	5413	LEVER ASM.;GUIDE	000000	000000
1157254150	1-1572	5415	LEVER	000000	000000
1157254180	1-1572	5418	LEVER	000000	000000
1157254490	1-1572	5449	LEVER	000005	000000
1157254621	1-1572	5462	LEVER	000000	000000
1157254630	1-1572	5463	LEVER	000000	000000
1157254640	1-1572	5464	LEVER	000000	000000
1157254681	1-1572	5468	ROD	000000	000000
1157254700	1-1572	5470	LINK	000000	000000
1157254720	1-1572	5472	LEVER	000000	000000
1157254730	1-1572	5473	LEVER	000000	000000
1157254780	1-1572	5478	LEVER	000000	000000
1157254790	1-1572	5479	LEVER	000000	000000
1157254810	1-1572	5481	LEVER ASM; TENS.	000000	000000
1157254830	1-1572	5483	LINK*	000001	000000
1157254840	1-1572	5484	LEVER ASM.	000000	000000
1157254850	1-1572	5485	LEVER	000000	000000
1157254860	1-1572	5486	LEVER	000000	000000

1157254870	1-1572	5487	LEVER	000000	000000
1157254890	1-1572	5489	LEVER; INJ PUMP	000000	000000
1157254900	1-1572	5490	LEVER ASM.	000000	000000
1157254910	1-1572	5491	LEVER	000000	000000
1157254930	1-1572	5493	LEVER; EXTERNAL, ENGI	000000	000000
1157254940	1-1572	5494	LEVER; ENGINE STOP, G	000000	000000
1157254960	1-1572	5496	LEVER	000000	000000
1157255000	1-1572	5500	SHAFT	000000	000000
1157255010	1-1572	5501	LEVER	000000	000000
1157255041	1-1572	5504	LEVER ASM	000000	000000
1157255050	1-1572	5505	LEVER	000000	000000
1157255060	1-1572	5506	LEVER	000000	000000
1157255070	1-1572	5507	LEVER	000000	000000
1157255080	1-1572	5508	LEVER	000000	000000
1157255090	1-1572	5509	LEVER	000000	000000
1157255100	1-1572	5510	LEVER; SWIVEL LEVER	000000	000000
1157255110	1-1572	5511	LEVER	000000	000000
1157255120	1-1572	5512	LEVER; SWIVEL LEVER	000000	000000
1157255270	1-1572	5527	LEVER; CONT, GOVERNOR	000000	000000
1157255340	1-1572	5534	LEVER ASM.	000000	000000
1157255420	1-1572	5542	LEVER	000000	000000
1157255690	1-1572	5569	LEVER	000003	000000
1157255700	1-1572	5570	LEVER	000000	000000
1157255710	1-1572	5571	LEVER ASM; TENSION	000000	000000
1157255840	1-1572	5584	LEVER ASM.	000000	000000
1157255930	1-1572	5593	LEVER	000000	000000
1157255940	1-1572	5594	LEVER	000000	000000
1157256680	1-1572	5668	LEVER; SWIVAL	000000	000000
1157256690	1-1572	5669	LEVER; SWIVEL LEVER	000001	000000
1157256700	1-1572	5670	LEVER	000000	000004
1157256710	1-1572	5671	LEVER, LOAD CONT. GOV	000000	000000
1157256790	1-1572	5679	LEVER	000000	000000
1157256820	1-1572	5682	LEVER ASM; TENSION	000000	000000
1157256830	1-1572	5683	LEVER	000000	000000
1157256900	1-1572	5690	LEVER	000000	000000
1157256990	1-1572	5699	LEVER	000000	000000
1157257110	1-1572	5711	LEVER	000000	000000
1157257310	1-1572	5731	LEVER	000000	000000
1157257320	1-1572	5732	LEVER	000000	000003
1157257470	1-1572	5747	LEVER; SWIVEL LEVER	000000	000000
1157257480	1-1572	5748	LEVER	000000	000000
1157257500	1-1572	5750	LEVER	000000	000000
1157257510	1-1572	5751	LEVER	000000	000000
1157257520	1-1572	5752	LEVER SWIVEL	000000	000000
1157257570	1-1572	5757	LEVER	000002	000000
1157257890	1-1572	5789	LEVER	000000	000000
1157257910	1-1572	5791	LEVER	000000	000000

1157257960	1-1572	5796	LEVER ASM; GUIDE	000000	000000
1157258220	1-1572	5822	LEVER	000000	000000
1157258790	1-1572	5879	GUIDE LEVER ASM	000000	000000
1157258800	1-1572	5880	LEVER	000000	000000
1157258810	1-1572	5881	LINK	000000	000000
1157258820	1-1572	5882	LEVER	000000	000002
1157258850	1-1572	5885	LEVER	000000	000000
1157258860	1-1572	5886	LEVER	000000	000000
1157258870	1-1572	5887	LEVER ASM	000002	000000
1157258890	1-1572	5889	LEVER	000000	000000
1157258900	1-1572	5890	LEVER	000001	000002
1157259080	1-1572	5908	LEVER	000000	000000
1157259100	1-1572	5910	LEVER	000000	000000
1157259120	1-1572	5912	LEVER ASM; GUIDE, GOV	000000	000000
1157259130	1-1572	5913	LEVER ASM; TENSION, GOV	000000	000000
1157259170	1-1572	5917	LEVER; SPD CONT GOVERNOR	000000	000001
1157259210	1-1572	5921	LEVER; SPD CONT GOV	000000	000003
1157259690	1-1572	5969	LEVER; ENG STOP, GOV	000003	000000
1157259790	1-1572	5979	LINK;LVR TO CONT RACK GOV	000000	000000
1157280060	1-1572	8006	GASKET	000004	000000
1157280090	1-1572	8009	COMPENSATOR BOOST 6BD1	000000	000000
1157280130	1-1572	8013	BOOST COMPENSATOR	000000	000000
1157280180	1-1572	8018	COMPENSATOR ASM.; BOOST	000000	000000
1157280181	1-1572	8018	COMPENSATOR ASM.; BOOST	000000	000000
1157280301	1-1572	8030	BOOST COMPENSATOR	000000	000000
1157280370	1-1572	8037	COMPENSATOR	000000	000000
1157280410	1-1572	8041	COMPENSATOR ASM; ANE	000000	000000
1157280430	1-1572	8043	BOOST COMPENSATOR	000000	000000
1157280440	1-1572	8044	LEVER ASM.	000000	000000
1157280490	1-1572	8049	COMPENSATOR; ANERIOD	000000	000000
1157280860	1-1572	8086	COMPENSATOR ASM	000000	000000
1157281020	1-1572	8102	COMPENSATOR; ANEROID	000000	000000
1157290010	1-1572	9001	GASKET; INJ GOVERNOR	000000	000000
1157290020	1-1572	9002	GASKET E120/4JB1	000000	000000
1157290060	1-1572	9006	NUT; INJ PUMP	000000	000072
1157290140	1-1572	9014	GASKET; COVER TO GOVERNOR	000000	000000
1157290150	1-1572	9015	O-RING	000000	002378
1157290180	1-1572	9018	GASKET	000000	000000
1157290210	1-1572	9021	RING; SNAP	000000	000000
1157290230	1-1572	9023	RING/RETAINER; SNAP	000000	000000
1157290270	1-1572	9027	LIMITER	000000	000000
1157290280	1-1572	9028	BOLT*	000000	000000
1157290310	1-1572	9031	BOLT*	000000	000000
1157290320	1-1572	9032	NUT SPRING CAPSULE	000000	000000
1157290340	1-1572	9034	SPRING WASHER	000000	000000
1157290380	1-1572	9038	PLUG	000000	000380
1157290390	1-1572	9039	BOLT;	000000	000000

1157290410	1-1572	9041	LIMITER	000007	000000
1157290420	1-1572	9042	LIMITER	000000	000000
1157290500	1-1572	9050	NUT;MAGNET VALV	000001	000000
1157290530	1-1572	9053	B O L T	000000	000000
1157290550	1-1572	9055	NUT; CAP SPRING CAPSULE	000001	000000
1157290600	1-1572	9060	COLLARSWIVEL LEVER	000000	000000
1157290660	1-1572	9066	GSKT;OIL PIPE	000000	000014
1157290670	1-1572	9067	BOLT; COVER FIXING	000000	000000
1157290671	1-1572	9067	BOLT; COVER FIXING	000000	000000
1157290680	1-1572	9068	BOLT; COVER FIXING	000000	000000
1157290690	1-1572	9069	BOLT; COVER FIXING	000000	000000
1157290710	1-1572	9071	BUSH GOVERNOR COVER	000000	000000
1157290720	1-1572	9072	SEAL; OIL	000000	000000
1157290730	1-1572	9073	SCREW	000000	000000
1157290760	1-1572	9076	SHIM T=0.95	000000	000000
1157290770	1-1572	9077	SHIM T=0.20	000000	000000
1157290780	1-1572	9078	SHIM T=0.25	000001	000000
1157290790	1-1572	9079	SHIM T=0.30	000000	000000
1157290800	1-1572	9080	SHIM T=0.35	000000	000000
1157290810	1-1572	9081	SHIM T=0.40	000000	000000
1157290820	1-1572	9082	SHIM T=0.50	000000	000000
1157290850	1-1572	9085	SHIM; GOVERNOR	000000	000000
1157290860	1-1572	9086	SHIM; GOVERNOR	000000	000000
1157290870	1-1572	9087	BOLT; FEED PUMP	000084	000000
1157290890	1-1572	9089	ROD; PUSH	000000	000000
1157290900	1-1572	9090	ROD; PUSH	000000	000000
1157290910	1-1572	9091	ROD; PUSH	000000	000000
1157290920	1-1572	9092	NUT; CAP	000007	000003
1157290930	1-1572	9093	NUT; CAP	000015	000005
1157290940	1-1572	9094	NUT GOVERNOR IN	000000	000000
1157290950	1-1572	9095	CAP NUT INJ GOV	000000	000000
1157290971	1-1572	9097	BUSH SWIVEL LEVER	000000	000000
1157290980	1-1572	9098	SEAL; OIL	000032	000000
1157290990	1-1572	9099	SHIM/4BD1-PD05	000040	000000
1157291000	1-1572	9100	LIMITER	000000	000000
1157291010	1-1572	9101	SCREW	000000	000000
1157291040	1-1572	9104	BOLT;COVER FIX,GOV COVER	000000	000000
1157291320	1-1572	9132	BOLT*	000000	000000
1157291490	1-1572	9149	WASHER; LOCK	000000	000000
1157291500	1-1572	9150	NUT**	000000	000000
1157291520	1-1572	9152	WIRE; LEAD SEAL	000000	000000
1157291560	1-1572	9156	BOLT*	000000	000000
1157291590	1-1572	9159	BRACKET ASM	000000	000000
1157291610	1-1572	9161	PLUG	000001	000000
1157291650	1-1572	9165	BOLT; COVER FIXING	000000	000000
1157291660	1-1572	9166	BOLT*	000000	000000
1157291670	1-1572	9167	BUSH*	000000	000000

1157291680	1-1572	9168	SHAFT	000000	000000
1157291690	1-1572	9169	LINK FLOTING LEVER	000000	000000
1157291710	1-1572	9171	BRACKET	000000	000000
1157291720	1-1572	9172	SCREW	000001	000000
1157291760	1-1572	9176	SCREW TENSION LEVER	000000	000000
1157291790	1-1572	9179	LEVER;LOAD CONT. GOV.	000000	000003
1157291800	1-1572	9180	PICK-UP	000000	000000
1157291810	1-1572	9181	N U T	000000	000000
1157291820	1-1572	9182	C L I P	000000	000000
1157291830	1-1572	9183	CONNECTOR	000000	000000
1157291840	1-1572	9184	SEAT; SPR.	000000	000000
1157291850	1-1572	9185	G E A R	000000	000000
1157291860	1-1572	9186	N U T	000000	000000
1157291870	1-1572	9187	SHAFT	000000	000000
1157291880	1-1572	9188	MAGNET	000000	000000
1157291890	1-1572	9189	C O I L	000000	000000
1157291900	1-1572	9190	SEAT; SPR.	000000	000000
1157291910	1-1572	9191	P I N	000000	000000
1157291920	1-1572	9192	SCREW	000000	000000
1157291930	1-1572	9193	LEVER 6BD1	000000	000000
1157291940	1-1572	9194	NUT; CAP	000000	000000
1157291950	1-1572	9195	INSULATOR	000000	000000
1157291960	1-1572	9196	B O L T	000000	000000
1157291970	1-1572	9197	B O L T	000000	000000
1157291980	1-1572	9198	COLLAR	000000	000000
1157291990	1-1572	9199	S H I M	000000	000000
1157292000	1-1572	9200	SENSOR; RACK	000000	000000
1157292010	1-1572	9201	N U T	000000	000000
1157292020	1-1572	9202	GAUGE; LEVEL	000000	000000
1157292030	1-1572	9203	C L I P	000000	000000
1157292060	1-1572	9206	GASKET	000000	000000
1157292070	1-1572	9207	GASKET	000000	000000
1157292080	1-1572	9208	GASKET	000000	000000
1157292100	1-1572	9210	T U B E	000000	000000
1157292140	1-1572	9214	BOLT; CLIP	000000	000000
1157292170	1-1572	9217	SNAP RING SWIVEL LEVER	000000	000000
1157292260	1-1572	9226	BOLT*	000000	000000
1157292290	1-1572	9229	SHAFT	000000	000000
1157292320	1-1572	9232	PLATE; CAM	000000	000000
1157292330	1-1572	9233	LIMITER	000000	000000
1157292350	1-1572	9235	SEAL OIL	000000	000000
1157292360	1-1572	9236	NUT; CONT LEVER FIX,GOV	000000	000198
1157292380	1-1572	9238	BOLT;ADJ.,LEVER	000000	000000
1157292420	1-1572	9242	BOLT;CONT.WIRE	000000	000011
1157292430	1-1572	9243	BOLT;WIRE BRKT	000000	000007
1157292450	1-1572	9245	ROD; PUSH	000000	000000
1157292460	1-1572	9246	DIAPHRAGM	000002	000001

1157292470	1-1572	9247	SCREW; GUIDE	000000	000000
1157292480	1-1572	9248	DISK*	000000	000000
1157292490	1-1572	9249	NUT**	000000	000000
1157292500	1-1572	9250	BOLT*	000000	000000
1157292510	1-1572	9251	BOLT*	000000	000000
1157292520	1-1572	9252	GASKET	000000	000000
1157292530	1-1572	9253	GASKET	000000	000000
1157292540	1-1572	9254	SCREW	000000	000000
1157292560	1-1572	9256	NUT**	000000	000000
1157292570	1-1572	9257	PLATE; CAM	000000	000000
1157292580	1-1572	9258	SPRING; TIMER	000000	000000
1157292630	1-1572	9263	SPACER	000000	000000
1157292640	1-1572	9264	DIAPHRAGM	000001	000000
1157292650	1-1572	9265	ROD; PUSH	000000	000000
1157292651	1-1572	9265	ROD; PUSH	000000	000000
1157292660	1-1572	9266	SPRING	000000	000000
1157292670	1-1572	9267	SPRING	000000	000000
1157292680	1-1572	9268	BOLT*	000000	000000
1157292690	1-1572	9269	GASKET	000000	000000
1157292700	1-1572	9270	GASKET	000000	000000
1157292710	1-1572	9271	SPACER	000000	000000
1157292720	1-1572	9272	BOLT*	000000	000000
1157292730	1-1572	9273	SCREW	000000	000000
1157292740	1-1572	9274	SCREW	000000	000000
1157292750	1-1572	9275	SCREW	000000	000000
1157292760	1-1572	9276	SCREW	000000	000000
1157292770	1-1572	9277	BOLT*	000000	000000
1157292780	1-1572	9278	CAPSULE; SPRING, IDLING	000000	000000
1157292790	1-1572	9279	CAPSULE; SPRING	000000	000000
1157292800	1-1572	9280	LINK; FLOATING LEVER	000000	000000
1157292810	1-1572	9281	SPRING; CAPSULE	000000	000000
1157292830	1-1572	9283	NUT**	000000	000000
1157292840	1-1572	9284	BOLT	000000	000000
1157292900	1-1572	9290	GASKET	000000	000000
1157292930	1-1572	9293	BUSH	000000	000000
1157292940	1-1572	9294	SHIM; T=0.2	000013	000025
1157292950	1-1572	9295	SHIM; T=0.25	000000	000001
1157292960	1-1572	9296	SHIM; T=0.30	000025	000000
1157292970	1-1572	9297	SHIM; T=0.35	000000	000001
1157292980	1-1572	9298	SHIM; T=0.40/4BD1-PD05	000033	000000
1157292990	1-1572	9299	SHIM; T=0.50	000000	000048
1157293010	1-1572	9301	COLLAR 4BD1-PD05	000005	000029
1157293040	1-1572	9304	SPACER	000000	000000
1157293050	1-1572	9305	GASKET	000000	000000
1157293060	1-1572	9306	GASKET	000000	000000
1157293080	1-1572	9308	WASHER	000000	000000
1157293090	1-1572	9309	DIAPHRAGM	000000	000000

1157293100	1-1572	9310	SCREW	000000	000000
1157293120	1-1572	9312	BOLT*	000000	000000
1157293160	1-1572	9316	PIN; SNAP	000003	000000
1157293250	1-1572	9325	BOLT; EYE	000012	000008
1157293350	1-1572	9335	BOLT	000000	000000
1157293370	1-1572	9337	SHIM*	000000	000000
1157293380	1-1572	9338	SHIM*	000000	000000
1157293390	1-1572	9339	SPRING	000000	000000
1157293410	1-1572	9341	ROD; PUSH	000000	000000
1157293420	1-1572	9342	BOLT; SET	000000	000000
1157293430	1-1572	9343	O-RING	000000	000000
1157293440	1-1572	9344	NUT**	000000	000000
1157293450	1-1572	9345	SPACER	000000	000000
1157293460	1-1572	9346	ROD; PUSH L=102	000000	000000
1157293470	1-1572	9347	ROD; PUSH	000000	000000
1157293480	1-1572	9348	ROD; PUSH L=103	000000	000000
1157293490	1-1572	9349	NUT; SPR CAPSULE	000000	000000
1157293500	1-1572	9350	NUT**	000000	000000
1157293510	1-1572	9351	PLATE	000000	000000
1157293520	1-1572	9352	SEAL; OIL	000000	000000
1157293550	1-1572	9355	SPACER	000000	000000
1157293560	1-1572	9356	SHAFT	000000	000000
1157293590	1-1572	9359	NUT**	000000	000000
1157293600	1-1572	9360	JOINT; HOSE	000000	000000
1157293610	1-1572	9361	CAP**	000000	000000
1157293630	1-1572	9363	BOLT*	000000	000000
1157293700	1-1572	9370	PIN	000000	000000
1157293701	1-1572	9370	P I N	000000	000000
1157293711	1-1572	9371	COLLAR	000000	000000
1157293720	1-1572	9372	SLEEVE	000000	000000
1157293830	1-1572	9383	BOLT*	000000	000000
1157293860	1-1572	9386	SPRING	000000	000000
1157293950	1-1572	9395	NUT**	000000	000000
1157293960	1-1572	9396	BOLT; COVER FIXING	000000	000000
1157293970	1-1572	9397	BRACKET	000000	000000
1157293980	1-1572	9398	BOOST COMPENSATOR	000000	000000
1157293990	1-1572	9399	HOUSING	000000	000000
1157294000	1-1572	9400	SPACER	000000	000000
1157294010	1-1572	9401	SPRING	000000	000000
1157294050	1-1572	9405	TUBE SPRING	000000	000000
1157294070	1-1572	9407	SHIM*	000000	000000
1157294080	1-1572	9408	SHIM*	000000	000000
1157294090	1-1572	9409	SHIM*	000000	000000
1157294100	1-1572	9410	SHIM*	000000	000000
1157294180	1-1572	9418	SHAFT	000000	000000
1157294190	1-1572	9419	WASHER	000000	000000
1157294200	1-1572	9420	LIMITER	000006	000000

1157294210	1-1572	9421	O-RING	000002	000000
1157294420	1-1572	9442	PLUG*	000000	000000
1157294590	1-1572	9459	LEVER	000000	000000
1157294591	1-1572	9459	LEVER	000000	000000
1157294620	1-1572	9462	OIL SEAL	000002	000004
1157294630	1-1572	9463	SHAFT	000001	000000
1157294640	1-1572	9464	COLLAR	000015	000000
1157294750	1-1572	9475	SPRING WASHER	000000	000000
1157294760	1-1572	9476	SCREW; POTENTIO	000000	000000
1157294930	1-1572	9493	PLATE; CAM	000000	000000
1157294960	1-1572	9496	PLATE; CAM	000000	000000
1157294970	1-1572	9497	BELLOWS	000000	000000
1157294990	1-1572	9499	SEAL; OIL	000000	000001
1157295030	1-1572	9503	BOLT*	000000	000000
1157295170	1-1572	9517	SHIM*	000000	000000
1157295270	1-1572	9527	TUBE; RETURN SPR	000000	000021
1157295350	1-1572	9535	BOLT*	000000	000000
1157295360	1-1572	9536	GASKET	000000	000000
1157295370	1-1572	9537	GASKET	000000	000000
1157295380	1-1572	9538	EYE BOLT	000001	000000
1157295390	1-1572	9539	BRACKET	000000	000000
1157295400	1-1572	9540	COLLAR	000000	000000
1157295440	1-1572	9544	BRKT; RETURN SPR	000000	000000
1157295480	1-1572	9548	BRACKET RETURN	000000	000000
1157295560	1-1572	9556	PIN**	000000	000000
1157295640	1-1572	9564	SHIM T=0.30	000000	000000
1157295650	1-1572	9565	SHIM T=0.30	000000	000000
1157295660	1-1572	9566	PLATE; CAM	000000	000000
1157295670	1-1572	9567	COMPENSATOR; ANEROID	000000	000000
1157295680	1-1572	9568	PLATE; CAM	000000	000000
1157295690	1-1572	9569	SEAL RING	000001	000007
1157295780	1-1572	9578	ROD PUSH	000000	000000
1157295790	1-1572	9579	CLEVIS	000000	000000
1157295810	1-1572	9581	PIN**	000000	000000
1157295820	1-1572	9582	PLATE; CAM	000000	000000
1157295830	1-1572	9583	PLATE; CAM	000000	000000
1157296000	1-1572	9600	PIN**	000000	000000
1157296170	1-1572	9617	SHIM T=0.70	000000	000000
1157296180	1-1572	9618	SHIM T=0.90	000000	000000
1157296190	1-1572	9619	SHIM T=0.80	000000	000000
1157296200	1-1572	9620	SPACER	000000	000000
1157296220	1-1572	9622	DIAPHRAGM	000000	000000
1157296230	1-1572	9623	ROD; PUSH L=103.5	000000	000000
1157296240	1-1572	9624	ROD; PUSH L=104	000000	000000
1157296310	1-1572	9631	ROD; PUSH L=97	000000	000000
1157296320	1-1572	9632	ROD; PUSH L=98	000000	000000
1157296330	1-1572	9633	ROD; PUSH L=99	000000	000000

1157296340	1-1572	9634	ROD; PUSH L=100	000000	000000
1157296350	1-1572	9635	ROD; PUSH L=101	000000	000000
1157296360	1-1572	9636	CAP**	000000	000000
1157296410	1-1572	9641	PIN**	000000	000000
1157296420	1-1572	9642	SCREW; FULL LOAD ADJ,GOV	000001	000003
1157296430	1-1572	9643	NUT;ADJ BOLT LOCK,GOVERNOR	000000	000010
1157296440	1-1572	9644	BOLT; HOUSING	000000	000000
1157296710	1-1572	9671	S T U D	000000	000000
1157296720	1-1572	9672	BRACKET	000000	000000
1157296730	1-1572	9673	S H I M	000000	000000
1157296810	1-1572	9681	CONNECTOR	000000	000000
1157296830	1-1572	9683	BOLT*	000000	000000
1157296870	1-1572	9687	PLATE; CAM	000000	000000
1157296890	1-1572	9689	SPRING/4BD1-PDO5	000001	000000
1157296930	1-1572	9693	WASHER	000003	000005
1157296940	1-1572	9694	WASHER	000002	000003
1157297000	1-1572	9700	SHIM T=0.20	000000	000000
1157297010	1-1572	9701	SHIM T=1.40	000000	000000
1157297020	1-1572	9702	SHIM T=0.20	000000	000000
1157297030	1-1572	9703	SHIM T=0.40	000000	000000
1157297040	1-1572	9704	PLATE; CAM	000000	000000
1157297170	1-1572	9717	BRACKET	000000	000000
1157297180	1-1572	9718	SPACER	000000	000000
1157297250	1-1572	9725	SHAFT	000000	000000
1157297300	1-1572	9730	P I N	000000	000011
1157297330	1-1572	9733	SCREW	000047	000000
1157297350	1-1572	9735	BOLT	000000	000000
1157297410	1-1572	9741	CONNECTOR	000000	000000
1157297420	1-1572	9742	PLATE	000000	000000
1157297450	1-1572	9745	PIN TENSION LEVER	000000	000000
1157297550	1-1572	9755	BOLT*	000000	000000
1157297560	1-1572	9756	NUT LOCK	000000	000000
1157297610	1-1572	9761	SCREW;LOAD,CONT	000000	000006
1157297870	1-1572	9787	GASKET	000050	000000
1157297950	1-1572	9795	PLATE	000000	000000
1157297960	1-1572	9796	PLUG*	000000	000000
1157297970	1-1572	9797	BOLT*	000000	000000
1157297981	1-1572	9798	SHAFT	000000	000000
1157297990	1-1572	9799	BOLT; SPRING BRKT,GOV	000000	000000
1157298000	1-1572	9800	BOLT; SPRING BRKT,GOV	000000	000000
1157298010	1-1572	9801	BOLT; SPRING BRKT,GOV	000000	000000
1157298020	1-1572	9802	BOLT; SPRING BRKT,GOV	000000	000000
1157298030	1-1572	9803	BOLT; SPRING BRKT,GOV	000000	000000
1157298040	1-1572	9804	GASKET	000000	000000
1157298050	1-1572	9805	BRACKET;RETURN	000000	000000
1157298070	1-1572	9807	NUT;CONTROL LEVER FIX GOV	000000	000003
1157298100	1-1572	9810	ROD	000000	000000

1157298102	1-1572	9810	R O D	000000	000000
1157298110	1-1572	9811	SHAFT	000000	000000
1157298120	1-1572	9812	BRACKET; A	000000	000001
1157298130	1-1572	9813	PLATE; CAM	000000	000000
1157298200	1-1572	9820	SHAFT; CONT GOV	000000	000000
1157298210	1-1572	9821	SHAFT	000000	000000
1157298220	1-1572	9822	SHIM*	000000	000000
1157298250	1-1572	9825	BRACKET;RETURN	000000	000000
1157298260	1-1572	9826	SHIM; T=0.35	000000	000000
1157298270	1-1572	9827	SHIM; T=0.25	000000	000000
1157298280	1-1572	9828	SHIM*	000000	000000
1157298290	1-1572	9829	PLATE; CAM, GOVERNOR	000000	000000
1157298300	1-1572	9830	BOLT*	000000	000000
1157298310	1-1572	9831	BUSH*	000000	000000
1157298320	1-1572	9832	WASHER	000000	000000
1157298330	1-1572	9833	PLATE;GOV CVR	000000	000000
1157298340	1-1572	9834	BOLT*	000000	000000
1157298370	1-1572	9837	BOLT	000000	000000
1157298380	1-1572	9838	PLATE; CAM	000000	000000
1157298400	1-1572	9840	BRACKET	000000	000000
1157298410	1-1572	9841	BRACKET	000000	000000
1157298420	1-1572	9842	BOLT; SPRING BRKT, GOV	000000	000037
1157298430	1-1572	9843	BOLT; SPRING BRKT, GOV	000000	000000
1157298450	1-1572	9845	ACTUATOR ASM.	000000	000000
1157298460	1-1572	9846	BOLT*	000000	000000
1157298510	1-1572	9851	SPACER	000000	000000
1157298540	1-1572	9854	COVER;GOV HSE INJ PUMP	000000	000000
1157298750	1-1572	9875	SEAL; OIL	000000	000000
1157298760	1-1572	9876	SHAFT	000002	000000
1157298790	1-1572	9879	BOLT; SOCKET HEAD	000000	000000
1157298800	1-1572	9880	BOLT; SOCKET HEAD	000000	000000
1157298850	1-1572	9885	O- RING	000000	000001
1157298890	1-1572	9889	BOLT*	000000	000000
1157298910	1-1572	9891	SHIM* T=2.00	000000	000000
1157298920	1-1572	9892	SHIM* T=3.00	000000	000000
1157298930	1-1572	9893	SHIM* T=4.00	000000	000000
1157298940	1-1572	9894	ACTUATOR	000000	000000
1157298941	1-1572	9894	ACTUATOR	000000	000000
1157298960	1-1572	9896	SHIM; T=0.60	000000	000000
1157298970	1-1572	9897	SHIM; T=0.60	000000	000000
1157298980	1-1572	9898	SHIM; T=0.80	000000	000000
1157298990	1-1572	9899	SHIM; T=0.90	000000	000000
1157299130	1-1572	9913	WASHER	000000	000058
1157299170	1-1572	9917	SHAFT	000000	000000
1157299360	1-1572	9936	SHAFT	000000	000000
1157299380	1-1572	9938	BOLT SEM COVER FIXING	000000	000000
1157299390	1-1572	9939	BRACKET	000000	000000

1157299420	1-1572	9942	SCREW STOPPER	000000	000000
1157299550	1-1572	9955	NUT; CAP	000000	000000
1157299560	1-1572	9956	NUT	000000	000000
1157299600	1-1572	9960	GASKET	000016	000000
1157299660	1-1572	9966	SHIM; T=0.30	000000	000000
1157299670	1-1572	9967	SHIM; T=0.50	000000	000000
1157299680	1-1572	9968	SHIM; T=0.80	000000	000000
1157299790	1-1572	9979	GASKET; GOV HSG	000000	000009
1157300050	1-1573	0005	ACTUATOR ASM.	000000	000000
1157300051	1-1573	0005	ACTUATOR ASM.	000000	000000
1157300080	1-1573	0008	GOVERNOR ASM.	000000	000000
1157300090	1-1573	0009	GOVERNOR ASM.	000000	000000
1157300130	1-1573	0013	GOVERNOR ASM.	000000	000000
1157300131	1-1573	0013	GOVERNOR ASM.	000000	000000
1157300280	1-1573	0028	GOVERNOR ASM; INJ PUMP	000000	000000
1157300291	1-1573	0029	GOVERNOR ASM; FIG 53	000000	000000
1157300300	1-1573	0030	GOVERNOR ASM; FIG 53	000000	000000
1157300320	1-1573	0032	GOVERNOR ASM; FIG 53	000000	000000
1157300340	1-1573	0034	GOVERNOR ASM; FIG 53	000000	000000
1157300380	1-1573	0038	GOVERNOR ASM; FIG 53	000000	000000
1157300480	1-1573	0048	GOVERNOR ASM; INJ PUMP	000000	000000
1157300530	1-1573	0053	GOVERNOR ASM; INJ PUMP	000000	000000
1157300830	1-1573	0083	GOVERNOR; ASM. INJ	000000	000000
1157301050	1-1573	0105	GOVERNOR;ASM INJ	000000	000000
1157301230	1-1573	0123	GOVERNOR ASM;INJ PUMP	000000	000001
1157390010	1-1573	9001	WIRE*	000000	000000
1157390020	1-1573	9002	SEAL; LEAD	000004	000000
1157390030	1-1573	9003	ADAPTER; GOV.	000000	000000
1157400130	1-1574	0013	TIMER ASM.	000000	000000
1157400600	1-1574	0060	TIMER ASM	000000	000000
1157400730	1-1574	0073	TIMER ASSY	000000	000000
1157401000	1-1574	0100	TIMER ASM; AUTO	000000	000000
1157401012	1-1574	0101	TIMER ASM; AUTO	000000	000000
1157401060	1-1574	0106	TIMER ASM	000000	000000
1157401140	1-1574	0114	TIMER ASM; AUTO	000000	000010
1157401160	1-1574	0116	TIMER ASM.	000000	000000
1157401230	1-1574	0123	TIMER ASM; AUTO	000000	000000
1157401251	1-1574	0125	GOVERNOR ASM DA640	000000	000000
1157401300	1-1574	0130	TIMER ASM.	000000	000001
1157401610	1-1574	0161	TIMER ASM; AUTO	000000	000000
1157401620	1-1574	0162	TIMER ASM INJ	000000	000001
1157401630	1-1574	0163	TIMER ASM INJ	000000	000001
1157401640	1-1574	0164	TIMER; AUT	000000	000000
1157401790	1-1574	0179	TIMER ASM INJ	000000	000000
1157401910	1-1574	0191	TIMER ASM; AUTO	000000	000000
1157401980	1-1574	0198	TIMER ASM; AUTO	000000	000060
1157402010	1-1574	0201	COUPLING ASM; INJ PUMP	000000	000000

1157402090	1-1574	0209	TIMER;AUTO	000000	000000
1157402170	1-1574	0217	TIMER ASM; AUTO	000000	000000
1157402320	1-1574	0232	TIMER	000000	000000
1157402370	1-1574	0237	TIMER ASM.	000000	000002
1157402390	1-1574	0239	COUPLING; INJ. PUMP	000002	000000
1157402400	1-1574	0240	TIMER ASM; AUTO	000001	000001
1157402490	1-1574	0249	TIMER ASM.	000000	000000
1157402500	1-1574	0250	TIMER ASM AUTOM	000000	000002
1157402530	1-1574	0253	COUPLING ASM; INJECTION P	000000	000000
1157402720	1-1574	0272	TIMER ASM;	000000	000001
1157402740	1-1574	0274	COUPLING; INJ PUMP	000000	000000
1157402810	1-1574	0281	AUTO TIMER	000000	000002
1157402820	1-1574	0282	TIMER	000000	000000
1157402840	1-1574	0284	TIMER	000000	000000
1157402920	1-1574	0292	TIMER ASM;	000000	000001
1157403060	1-1574	0306	TIMER ASM	000000	000000
1157403061	1-1574	0306	TIMER ASM	000000	000000
1157403620	1-1574	0362	TIMER ASM;	000000	000000
1157404100	1-1574	0410	AUTO TIMER	000002	000000
1157404350	1-1574	0435	TIMER ASM; AUTO	000000	000000
1157404390	1-1574	0439	TIMER ASM; AUTO	000000	000000
1157404420	1-1574	0442	TIMER;AUTO	000001	000000
1157404480	1-1574	0448	TIMER ASM;	000000	000001
1157404520	1-1574	0452	TIMER ASM	000000	000000
1157404850	1-1574	0485	TIME ASM; AUTO	000000	000006
1157404860	1-1574	0486	TIMER ASM; AUTO	000000	000000
1157404861	1-1574	0486	TIMER ASM; AUTO	000003	000000
1157404930	1-1574	0493	TIMER ASM.;AUTO	000000	000000
1157405080	1-1574	0508	TIMER ASM; INJ PUMP	000000	000000
1157405130	1-1574	0513	TIMER ASM; INJ PUMP	000002	000000
1157405140	1-1574	0514	TIMER ASM;INJ PUMP	000000	000000
1157405320	1-1574	0532	TIMER ASM; INJ PUMP	000000	000000
1157405330	1-1574	0533	TIMER ASM;INJ PUMP	000000	000000
1157405390	1-1574	0539	TIMER ASM;INJ PUMP	000000	000002
1157405400	1-1574	0540	TIMER ASM;INJ PUMP	000000	000001
1157405420	1-1574	0542	TIMER ASM; INJ PUMP	000000	000002
1157405500	1-1574	0550	TIMER ASM; INJ PUMP	000000	000001
1157410040	1-1574	1004	HOUSING TIMER I	000000	000000
1157410090	1-1574	1009	HOUSING; TIMER	000000	000000
1157410091	1-1574	1009	HOUSING; TIMER	000000	000000
1157410280	1-1574	1028	HOUSING; TIMER	000000	000000
1157410281	1-1574	1028	HOUSING; TIMER	000001	000001
1157410590	1-1574	1059	HOUSING; TIMER	000000	000000
1157410620	1-1574	1062	HOUSING TIMER	000000	000000
1157410740	1-1574	1074	HOUSING; TIMER, INJ PUMP	000000	000000
1157410800	1-1574	1080	HOUSING;TIMER	000000	000000
1157410810	1-1574	1081	HOUSING TIMER;INJ PUMP	000000	000000

1157420020	1-1574	2002	FLANGE	000000	000000
1157420090	1-1574	2009	FLANGE	000000	000000
1157420210	1-1574	2021	FLANGE	000000	000000
1157420220	1-1574	2022	FLANGE	000000	000000
1157420260	1-1574	2026	FLANGE	000000	000000
1157420610	1-1574	2061	FLANGE	000000	000000
1157420780	1-1574	2078	FLANGE	000000	000001
1157420790	1-1574	2079	FLANGE	000000	000000
1157420820	1-1574	2082	FLANGE	000000	000015
1157420850	1-1574	2085	FLANGE; TIMER, INJ PU	000000	000000
1157420990	1-1574	2099	FLANGE	000000	000000
1157421010	1-1574	2101	FLANGE	000000	000000
1157421020	1-1574	2102	FLANGE	000000	000000
1157421390	1-1574	2139	FLANGE	000001	000001
1157421410	1-1574	2141	FLANGE; PLUNGER	000001	000000
1157421520	1-1574	2152	FLANGE; TIMER, INJ PUMP	000000	000000
1157430030	1-1574	3003	FLYWEIGHT TIMER	000000	000000
1157430070	1-1574	3007	FLYWEIGHT	000000	000000
1157430080	1-1574	3008	ELY WEIGHT	000000	000000
1157430150	1-1574	3015	FLYWEIGHT	000000	000000
1157430170	1-1574	3017	FLYWEIGHT	000000	000000
1157430190	1-1574	3019	FLYWEIGHT	000000	000000
1157430300	1-1574	3030	FLYWEIGHT	000000	000000
1157430440	1-1574	3044	FLYWEIGHT	000000	000000
1157430510	1-1574	3051	FLYWEIGHT	000000	000000
1157430620	1-1574	3062	FLYWEIGHT	000000	000000
1157430650	1-1574	3065	FLYWEIGHT	000003	000000
1157430670	1-1574	3067	FLYWEIGHT; TIMER, INJ PUM	000000	000000
1157430690	1-1574	3069	FLYWEIGHT	000000	000000
1157430820	1-1574	3082	FLYWEIGHT	000000	000000
1157431510	1-1574	3151	FLYWEIGHT;TIMER INJ PUMP	000000	000000
1157431670	1-1574	3167	FLYWEIGHT ASM;TIMER I/P	000000	000000
1157470010	1-1574	7001	SEAL; OIL	000000	000000
1157490020	1-1574	9002	SEAL; OIL	000000	000015
1157490030	1-1574	9003	SEAL; OIL	000056	000000
1157490040	1-1574	9004	GASKET	000000	000000
1157490060	1-1574	9006	SUPERSEDED**SHIM	000000	000000
1157490070	1-1574	9007	WASHER;LK,AUTO	000000	000005
1157490090	1-1574	9009	SUPERSEDED**SHIM	000000	000000
1157490140	1-1574	9014	SHIM; T=0.20	000002	000000
1157490150	1-1574	9015	SHIM; T=0.40	000000	000000
1157490160	1-1574	9016	SHIM; T=0.50	000000	000000
1157490170	1-1574	9017	SHIM; T=0.60	000000	000000
1157490180	1-1574	9018	SHIM; T=0.70	000000	000000
1157490190	1-1574	9019	SHIM; T=1.00	000000	000000
1157490210	1-1574	9021	BUSH*	000005	000000
1157490220	1-1574	9022	ROLLER	000003	000000

1157490230	1-1574	9023	WASHER	000016	000000
1157490240	1-1574	9024	RETAINER	000000	000000
1157490250	1-1574	9025	O-RING	000000	000000
1157490260	1-1574	9026	COVER	000000	000000
1157490270	1-1574	9027	SEAL; OIL	000000	000003
1157490280	1-1574	9028	GASKET	000000	000000
1157490290	1-1574	9029	BOLT*	000000	000000
1157490300	1-1574	9030	GASKET	000414	000000
1157490310	1-1574	9031	PLUG*	000000	000000
1157490340	1-1574	9034	WASHER; LK	000000	000000
1157490360	1-1574	9036	O-RING	000001	000000
1157490370	1-1574	9037	SEAT; SPRING	000008	000003
1157490420	1-1574	9042	GASKET	000000	000000
1157490430	1-1574	9043	C A P	000000	000000
1157490440	1-1574	9044	WASHER; SPRING	000000	000012
1157490450	1-1574	9045	NUT**	000006	000000
1157490460	1-1574	9046	O-RING	000003	000000
1157490480	1-1574	9048	SPRING TIMER IN	000000	000000
1157490490	1-1574	9049	ROLLER	000000	000000
1157490491	1-1574	9049	ROLLER	000000	000000
1157490500	1-1574	9050	ROLLER	000002	000000
1157490510	1-1574	9051	ROLLER	000000	000000
1157490520	1-1574	9052	SPRING; TIMER	000000	000000
1157490560	1-1574	9056	SPRING; TIMER	000000	000000
1157490590	1-1574	9059	SPRING TIMER	000000	000000
1157490610	1-1574	9061	SHIM T=0.15	000000	000000
1157490720	1-1574	9072	COVER	000000	000000
1157490730	1-1574	9073	SEAL; OIL	000010	000000
1157490780	1-1574	9078	HOLDER	000000	000000
1157490790	1-1574	9079	HOLDER	000000	000000
1157490820	1-1574	9082	SHIM; T=0.30	000000	000000
1157490830	1-1574	9083	SHIM; T=0.80	000000	000000
1157490840	1-1574	9084	SHIM; T=0.90	000000	000000
1157490850	1-1574	9085	SHIM; T=1.00	000002	000000
1157490860	1-1574	9086	GASKET	000000	000000
1157490890	1-1574	9089	SPRING; TIMER	000000	000000
1157490910	1-1574	9091	CAP	000000	000000
1157490950	1-1574	9095	SPRING; TIMER	000000	000000
1157490960	1-1574	9096	SPRING; TIMER	000000	000000
1157490970	1-1574	9097	SHIM; T=0.30	000000	000000
1157490980	1-1574	9098	SHIM; T=0.40	000000	000000
1157490990	1-1574	9099	SHIM; T=0.50	000000	000000
1157491000	1-1574	9100	SHIM; T=0.60	000000	000000
1157491010	1-1574	9101	SHIM; T=0.70	000000	000000
1157491011	1-1574	9101	SHIM; T=0.70	000000	000000
1157491020	1-1574	9102	SHIM; T=0.80	000000	000000
1157491030	1-1574	9103	SHIM; T=0.90	000000	000000

1157491040	1-1574	9104	GASKET	000001	000000
1157491070	1-1574	9107	SPRING; TIMER	000000	000000
1157491100	1-1574	9110	RETAINER	000003	000001
1157491110	1-1574	9111	O-RING	000000	000008
1157491130	1-1574	9113	GASKET	000016	000000
1157491150	1-1574	9115	CAP;TIMER HOUSE	000000	000001
1157491160	1-1574	9116	WASHER; LK, TIMER FLANGE	000000	000000
1157491170	1-1574	9117	NUT; TIMER FLANGE	000000	000000
1157491180	1-1574	9118	BOLT*	000028	000000
1157491200	1-1574	9120	GASKET	000000	000000
1157491210	1-1574	9121	SEAL OIL	000000	000000
1157491220	1-1574	9122	CAP**	000000	000000
1157491340	1-1574	9134	SEAT; SPLING	000000	000000
1157491350	1-1574	9135	RING; SNAP	000000	000000
1157491440	1-1574	9144	NUT; COUPLING FIX, INJ PUM	000000	000019
1157491450	1-1574	9145	WASHER; COUPLING FIX, INJ	000000	000020
1157491470	1-1574	9147	WASHER; SPR.	000000	000000
1157491500	1-1574	9150	SHIM T=1.0	000000	000000
1157492260	1-1574	9226	SPRING; TIMER	000000	000000
1157492270	1-1574	9227	SPRING; TIMER	000000	000000
1157492280	1-1574	9228	SPRING; TIMER	000000	000000
1157492690	1-1574	9269	SPRING; TIMER	000000	000000
1157492700	1-1574	9270	SPRING;TIMER	000000	000000
1157492750	1-1574	9275	SPRING; TIMER	000000	000000
1157492760	1-1574	9276	FLANGE	000000	000000
1157492840	1-1574	9284	SPRING; TIMER	000000	000000
1157492900	1-1574	9290	SHIM*	000000	000000
1157492910	1-1574	9291	SHIM*	000000	000000
1157493300	1-1574	9330	SHIM; T=1.50	000000	000000
1157493310	1-1574	9331	SHIM; T=2.00	000000	000000
1157493320	1-1574	9332	COVER	000003	000000
1157493730	1-1574	9373	SPRING; TIMER	000000	000000
1157494040	1-1574	9404	SPRING; TIMER	000000	000000
1157494050	1-1574	9405	SPRING; TIMER	000000	000000
1157494060	1-1574	9406	SPRING; TIMER	000000	000000
1157494070	1-1574	9407	SPRING; TIMER	000000	000000
1157494080	1-1574	9408	SPRING; TIMER	000000	000000
1157494190	1-1574	9419	SPRING; TIMER	000004	000000
1157494320	1-1574	9432	WASHER	000006	000000
1157494491	1-1574	9449	O-RING	000000	000000
1157494660	1-1574	9466	SPRING;TIMER	000000	000000
1157494880	1-1574	9488	BOLT; PLATE TO	000000	000014
1157494900	1-1574	9490	SPRING; TIMER	000000	000000
1157494910	1-1574	9491	SPRING; PISTON, TIMER	000000	000000
1157494920	1-1574	9492	SPRING; PISTON, TIMER	000000	000000
1157494980	1-1574	9498	SEAL OIL CAMSHAFT	000000	000008
1157495000	1-1574	9500	SPRING; TIMER	000000	000000

1157495010	1-1574	9501	BOLT	000004	000000
1157495660	1-1574	9566	SPRING TIMER	000000	000000
1157496850	1-1574	9685	SPRING; TIMER	000000	000000
1157496870	1-1574	9687	SPRING TIMER	000000	000000
1157497350	1-1574	9735	CAP; TIMER HSG, INJ PUMP	000000	000000
1157497360	1-1574	9736	GASKET	000000	000005
1157497770	1-1574	9777	SPRING; TIMER	000000	000000
1157497800	1-1574	9780	O-RING	000000	000002
1157497890	1-1574	9789	SEAL; OIL, TIMER CVR	000000	000003
1157497900	1-1574	9790	SPRING; TIMER	000000	000000
1157497910	1-1574	9791	SPRING; TIMER	000000	000000
1157497920	1-1574	9792	COVER	000005	000000
1157497930	1-1574	9793	SPRING; TIMER	000000	000000
1157498010	1-1574	9801	SPRING TIMER	000000	000000
1157498690	1-1574	9869	PIM;PLT,TMR SPRG,INJ PUM	000000	000000
1157498700	1-1574	9870	SEAT;INER SPNG TMR,INJ P	000002	000000
1157498710	1-1574	9871	SEAT;OUTR SPNG TMR,INJ P	000002	000000
1157499210	1-1574	9921	SPRING,TIMER,OTR INJ PUM	000000	000000
1157499220	1-1574	9922	SPRING,TIMER,INNER INJ P	000000	000000
1157499230	1-1574	9923	COVER; TIMER INJ PUMP	000000	000000
1157500170	1-1575	0017	PUMP ASM; FEED 6BD1	000000	000000
1157500200	1-1575	0020	PUMP ASM; FEED E120	000000	000000
1157500260	1-1575	0026	PUMP ASM; FEED	000000	000000
1157500280	1-1575	0028	PUMP;FEED	000000	000000
1157500290	1-1575	0029	PUMP ASM; FEED 6BD1	000000	000000
1157500300	1-1575	0030	PUMP ASM; FUEL	000000	000000
1157500340	1-1575	0034	PUMP ASM; FEED	000001	000000
1157500350	1-1575	0035	PUMP ASM; FEED 12PB1	000000	000000
1157500370	1-1575	0037	PUMP ASM; FEED	000000	000000
1157500380	1-1575	0038	PUMP ASM; FEED	000000	000000
1157500400	1-1575	0040	PUMP ASM; FEED E120	000000	000000
1157500430	1-1575	0043	PUMP ASM FEED	000000	000000
1157500440	1-1575	0044	PUMP ASM FEED	000000	000000
1157500460	1-1575	0046	PUMP ASM;FUEL	000000	000000
1157500480	1-1575	0048	PUMP;FEED	000000	000015
1157500490	1-1575	0049	PUMP ASM;FUEL	000000	000000
1157500500	1-1575	0050	PUMP ASM; FEED	000001	000000
1157500520	1-1575	0052	PUMP;FEED	000000	000000
1157500530	1-1575	0053	PUMP ASM; FEED	000000	000000
1157500550	1-1575	0055	PUMP ASM; FEED	000000	000000
1157500570	1-1575	0057	FEED PUMP	000000	000002
1157500600	1-1575	0060	PUMP ASM; FUEL	000005	000000
1157500620	1-1575	0062	PUMP ASM;FEED 6RB1T	000000	000000
1157500680	1-1575	0068	PUMP ASM; FEED	000002	000000
1157500760	1-1575	0076	PUMP ASM; FUEL FEED	000000	000001
1157500800	1-1575	0080	PUMP ASM; FEED	000000	000000
1157500810	1-1575	0081	PUMP ASM; FEED	000000	000011

1157500900	1-1575	0090	PUMP ASM; FUEL	000000	000000
1157501000	1-1575	0100	PUMP ASM; FEED	000000	000000
1157501010	1-1575	0101	PUMP ASM; FUEL F	000000	000000
1157501020	1-1575	0102	PUMP ASM; FUEL F	000000	000000
1157501040	1-1575	0104	PUMP ASM; FUEL F	000000	000000
1157501190	1-1575	0119	PUMP ASM; FEED	000000	000000
1157501210	1-1575	0121	PUMP ASM; FEED	000000	000020
1157501230	1-1575	0123	PUMP ASM; FEED	000003	000000
1157501250	1-1575	0125	PUMP ASM; FEED	000000	000000
1157501300	1-1575	0130	PUMP ASM; FUEL FEED, INJ PU	000000	000031
1157501301	1-1575	0130	PUMP ASM; FUEL FEED, INJ PU	000000	000000
1157501350	1-1575	0135	PUMP ASM: FEED	000000	000001
1157501390	1-1575	0139	PUMP ASM: FEED	000000	000000
1157501450	1-1575	0145	PUMP ASM.; FEED	000000	000000
1157501480	1-1575	0148	PUMP; ASM FEED	000000	000000
1157501510	1-1575	0151	PUMP ASM; FUEL FEDD, INJ P	000000	000000
1157501511	1-1575	0151	PUMP ASM; FUEL FEDD, INJ P	000000	000012
1157501540	1-1575	0154	PUMP ASM.; FEED	000000	000000
1157501590	1-1575	0159	PUMP ASM; FEED	000000	000004
1157501600	1-1575	0160	PUMP ASM; FEED	000000	000018
1157501620	1-1575	0162	PUMP ASM.; FEED	000000	000000
1157501641	1-1575	0164	PRIMER PUMP	000002	000001
1157501650	1-1575	0165	PUMP ASM.; FEED	000000	000003
1157501670	1-1575	0167	PUMP ASM; FUEL FEED INJ	000000	000000
1157501671	1-1575	0167	PUMP ASM; FUEL FEED INJ	000000	000000
1157501801	1-1575	0180	FUEL FEED PUMP	000001	000004
1157501910	1-1575	0191	PUMP ASM	000000	000000
1157501920	1-1575	0192	PUMP ASM; FUEL FEED INJ PU	000000	000000
1157501940	1-1575	0194	PUMP ASM; FUEL FEED INJ PU	000000	000013
1157501970	1-1575	0197	PUMP ASM; FUEL	000000	000037
1157501980	1-1575	0198	PUMP ASM; FEED	000000	000076
1157502000	1-1575	0200	PUMP ASM FEED	000000	000006
1157502010	1-1575	0201	PUMP ASM; FUEL	000000	000003
1157502020	1-1575	0202	PUMP ASM; FEED	000000	000001
1157502030	1-1575	0203	PUMP ASM; FUEL FEED, INJ PU	000000	000002
1157502050	1-1575	0205	PUMP; FEED	000000	000000
1157502060	1-1575	0206	PUMP ASM; FUEL	000000	000000
1157502090	1-1575	0209	PUMP ASM, FEED 6BD1	000000	000016
1157502110	1-1575	0211	PUMP ASM; FEED	000000	000002
1157510010	1-1575	1001	HOUSING	000000	000000
1157510030	1-1575	1003	HOUSING; FEED PUMP	000000	000000
1157510040	1-1575	1004	HOUSING; FEED PUMP	000000	000000
1157510060	1-1575	1006	HOLDER	000000	000000
1157510100	1-1575	1010	HOUSING; FEED PUMP	000000	000000
1157510110	1-1575	1011	HOUSING; FEED PUMP	000000	000000
1157510120	1-1575	1012	HOUSING; F.P.	000000	000000
1157510130	1-1575	1013	HOUSING; FEED PUMP	000000	000000

1157510131	1-1575	1013	HOUSING; FEED PUMP	000000	000000
1157510170	1-1575	1017	HOUSING; FEED PUMP	000000	000000
1157510190	1-1575	1019	HOUSING;FUEL FEED PUMP	000000	000004
1157510200	1-1575	1020	HOUSING; FEED PUMP	000000	000000
1157510250	1-1575	1025	HOUSING; FEED PUMP	000000	000000
1157510260	1-1575	1026	HOUSING; FEED PUMP	000000	000000
1157510280	1-1575	1028	HOUSING; FEED PUMP	000000	000000
1157510400	1-1575	1040	BRACKET; INJ. PUMP, SPACE	000000	000000
1157520010	1-1575	2001	PISTON; FUEL FEED PUMP	000000	000003
1157540010	1-1575	4001	TAPPET ASM.	000000	000000
1157540020	1-1575	4002	TAPPET; FEE	000000	000013
1157540030	1-1575	4003	TAPPET ASM.	000000	000000
1157540040	1-1575	4004	TAPPET ASM.	000001	000000
1157540050	1-1575	4005	TAPPET ASM	000000	000000
1157550010	1-1575	5001	VALVE	000003	000015
1157550020	1-1575	5002	VALVE; FUEL FEED PUMP	000005	000116
1157590010	1-1575	9001	GASKET; FEED PUMP	000000	000000
1157590020	1-1575	9002	GUIDE;TAP.,FEED	000000	000014
1157590030	1-1575	9003	ADAPTER;EYE BOLT,FUEL FEE	000000	000004
1157590040	1-1575	9004	PLUG; HSNQ,FUEL FEED PUMP	000000	000060
1157590050	1-1575	9005	EYE;FUEL INL,FUEL FD PMP	000000	000000
1157590070	1-1575	9007	GASKET;PLUG,FUEL FD PUMP	000135	000000
1157590080	1-1575	9008	GUIDE; TAPPET	000000	000000
1157590090	1-1575	9009	PLUG; CHECK VALVE	000000	000006
1157590110	1-1575	9011	BOLT; EYE,AIR PIPE TO CMP	000000	000000
1157590120	1-1575	9012	GASKET;EYE BOLT,FUEL F/P	000000	000000
1157590130	1-1575	9013	SHIM;	000000	000000
1157590140	1-1575	9014	SHIM;	000000	000000
1157590260	1-1575	9026	JOINT BOLT; FUEL SUCTION	000000	000000
1157590290	1-1575	9029	BOLT; EYE,AIR PIPE TO CMP	000000	000117
1157590420	1-1575	9042	GASKET;PISTON PLUG,FUEL	000000	000019
1157590430	1-1575	9043	ROLLER; TAPPET,FUEL	000000	000000
1157590450	1-1575	9045	BOLT; EYE W/SCREEN	000000	000005
1157590460	1-1575	9046	GASKET	000000	000023
1157590510	1-1575	9051	BOLT;EYE,FUEL OUTLET	000000	000002
1157590520	1-1575	9052	ADAPTER;EYE BOLT,FUEL F/P	000000	000001
1157590600	1-1575	9060	PLUG*	000000	000000
1157590660	1-1575	9066	PLUG; VALVE SPRING, FUEL	000000	000008
1157590670	1-1575	9067	ADAPTER; EYE BOLT, FUEL F	000001	000000
1157610010	1-1576	1001	PUMP PRIMING	000000	000003
1157610040	1-1576	1004	PUMP ASM; PRIME	000000	000004
1157610050	1-1576	1005	PUMP; PRIMING,FUEL FEED	000000	000000
1157610060	1-1576	1006	PUMP;PRIMING,FUEL FEED	000000	000000
1157610061	1-1576	1006	PUMP;PRIMING,FUEL FEED	000069	000160
1157700210	1-1577	0021	GOVERNOR ASM.	000000	000000
1157700240	1-1577	0024	GOVERNOR ASM.	000000	000000
1157700310	1-1577	0031	GOVERNOR ASM.	000000	000000

1157700450	1-1577	0045	GOVERNOR ASM.	000000	000000
1157700451	1-1577	0045	GOVERNOR ASM.	000000	000000
1157700460	1-1577	0046	GOVERNOR ASM.	000000	000000
1157700610	1-1577	0061	GOVERNOR ASM.	000000	000000
1157700670	1-1577	0067	GOVERNOR ASM.	000000	000000
1157700700	1-1577	0070	GOVERNOR ASM.	000000	000000
1157700720	1-1577	0072	GOVERNOR ASM.	000000	000000
1157700750	1-1577	0075	GOVERNOR ASM.	000000	000000
1157700860	1-1577	0086	GOVERNOR ASM.	000000	000000
1157700870	1-1577	0087	GOVERNOR ASM.	000000	000000
1157700880	1-1577	0088	GOVERNOR ASM.	000000	000000
1157701050	1-1577	0105	GOVERNOR ASM.	000000	000000
1157701060	1-1577	0106	GOVERNOR ASM.	000000	000000
1157701080	1-1577	0108	GOVERNOR ASM.	000000	000000
1157701530	1-1577	0153	GOVERNOR ASM.	000000	000000
1157701571	1-1577	0157	GOVERNOR ASM.	000000	000000
1157701572	1-1577	0157	GOVERNOR ASM.	000000	000000
1157701580	1-1577	0158	GOVERNOR ASM.	000000	000000
1157701710	1-1577	0171	GOVERNOR ASM.	000000	000000
1157701830	1-1577	0183	GOVERNOR ASM.	000000	000000
1157702020	1-1577	0202	GOVERNOR ASM. FIG. 53B	000000	000000
1157702260	1-1577	0226	GOVERNOR ASM.	000000	000000
1157703150	1-1577	0315	GOVERNOR ASM;	000000	000000
1157703210	1-1577	0321	GOVERNOR ASM.	000000	000000
1157703501	1-1577	0350	GOVERNOR ASM.	000000	000000
1157703611	1-1577	0361	GOVERNOR ASM	000000	000000
1157704570	1-1577	0457	GOVERNOR ASM.	000000	000000
1157704590	1-1577	0459	GOVERNOR ASM.	000000	000000
1157704760	1-1577	0476	GOVERNOR ASM.	000000	000000
1157704769	1-1577	0476	GOVERNOR ASM.	000000	000000
1157705090	1-1577	0509	GOVERNOR ASM.	000000	000000
1157705150	1-1577	0515	GOVERNOR ASM.	000000	000000
1157705161	1-1577	0516	GOVERNOR ASM. FIG. 53A	000000	000000
1157705222	1-1577	0522	GOVERNOR ASM.	000000	000000
1157705330	1-1577	0533	GOVERNOR ASM; INJ. PUMP	000000	000000
1157705400	1-1577	0540	GOVERNOR ASM.	000000	000000
1157705560	1-1577	0556	GOVERNOR ASM.	000000	000000
1157705600	1-1577	0560	GOVERNOR ASM.	000000	000000
1157705630	1-1577	0563	GOVERNOR ASM; INJ. PUMP	000000	000000
1157705651	1-1577	0565	GOVERNOR ASM.	000000	000000
1157706070	1-1577	0607	GOVERNOR ASM.	000000	000000
1157706080	1-1577	0608	GOVERNOR ASM.	000000	000000
1157706090	1-1577	0609	GOVERNOR ASM.	000000	000000
1157706100	1-1577	0610	GOVERNOR ASM.	000000	000000
1157706711	1-1577	0671	GOVERNOR ASM	000000	000000
1157706911	1-1577	0691	GOVERNOR ASM.; MECHANICAL	000000	000000
1157706960	1-1577	0696	GOVERNOR ASM.	000000	000000

1157706971	1-1577	0697	GOVERNOR ASM.; INJ, PUMP	000000	000000
1157707330	1-1577	0733	GOVERNOR ASM; INJ.	000000	000000
1157707420	1-1577	0742	GOVERNOR	000000	000000
1157707650	1-1577	0765	GOVERNOR ASM.; FIG. 53	000000	000000
1157708170	1-1577	0817	GOVERNOR ASM.	000000	000000
1157708601	1-1577	0860	GOVERNOR ASM	000000	000000
1157708650	1-1577	0865	GOVERNOR ASM.; FIG. 53	000000	000000
1157708700	1-1577	0870	GOVERNOR ASM.	000000	000000
1157708710	1-1577	0871	GOVERNOR ASM.	000000	000000
1157708720	1-1577	0872	GOVERNOR ASM.	000000	000000
1157708790	1-1577	0879	GOVERNOR ASM.; FIG. 53B	000000	000000
1157708800	1-1577	0880	GOVERNOR ASM.; FIG. 53	000000	000000
1157708811	1-1577	0881	GOVERNOR ASM.; FIG. 53C	000000	000000
1157708820	1-1577	0882	GOVERNOR ASM.	000000	000000
1157708860	1-1577	0886	GOVERNOR ASM.; FIG. 53C	000000	000000
1157708861	1-1577	0886	GOVERNOR ASM.; FIG. 53C	000000	000000
1157709161	1-1577	0916	GOVERNOR ASM; INJ PUMP	000000	000000
1157709850	1-1577	0985	GOVERNOR ASM; INJ PUMP	000000	000000
1157709880	1-1577	0988	GOVERNOR ASM; FIG. 53B	000000	000000
1157709970	1-1577	0997	GOVERNOR ASM.	000000	000000
1157790010	1-1577	9001	NUT**	000000	000000
1157790020	1-1577	9002	PLATE; CAM	000000	000000
1157790030	1-1577	9003	SCREW; GUIDE	000000	000000
1157790031	1-1577	9003	SCREW; GUIDE	000000	000000
1157790112	1-1577	9011	ACTUATOR	000000	000000
1157790120	1-1577	9012	NUT**	000000	000000
1157790190	1-1577	9019	PIN**	000000	000000
1157790270	1-1577	9027	BOLT	000003	000000
1157790280	1-1577	9028	ACTUATOR	000000	000000
1157790281	1-1577	9028	ACTUATOR	000000	000000
1157790310	1-1577	9031	PIN	000001	000000
1157790400	1-1577	9040	NUT**	000003	000000
1157790580	1-1577	9058	BRACKET	000000	000000
1157790590	1-1577	9059	PLATE; CAM	000000	000000
1157790600	1-1577	9060	NUT**	000000	000000
1157790650	1-1577	9065	PUSH ROD	000000	000000
1157790660	1-1577	9066	PUSH ROD	000000	000000
1157790700	1-1577	9070	PLATE; CAM	000000	000000
1157790860	1-1577	9086	GASKET	000024	000020
1157790930	1-1577	9093	GASKET	000000	000016
1157790940	1-1577	9094	GASKET	000000	000007
1157791060	1-1577	9106	GASKET	000000	000000
1157791070	1-1577	9107	GASKET	000000	000000
1157791290	1-1577	9129	GASKET	000039	000000
1157791460	1-1577	9146	GASKET	000000	000000
1157791470	1-1577	9147	GASKET	000000	000000
1157791910	1-1577	9191	BRACKET	000000	000000

1157791920	1-1577	9192	BOLT; HOUSING	000000	000000
1157791960	1-1577	9196	RING; SNAP, CONT SHAFT	000002	000000
1157791970	1-1577	9197	SCREW	000000	000000
1157792050	1-1577	9205	BRACKET	000000	000000
1157792300	1-1577	9230	SHIM; STOP LEVER, GOV	000000	000000
1157792310	1-1577	9231	SHIM; STOP LEVER, GOV	000000	000000
1157793790	1-1577	9379	GASKET; GOV. TO COV.	000000	000000
1157794590	1-1577	9459	SHIM	000000	000002
1157794600	1-1577	9460	SHIM	000000	000003
1157794610	1-1577	9461	CONNECTOR	000000	000000
1157794640	1-1577	9464	BRACKET	000000	000000
1157794820	1-1577	9482	SCREW	000000	000000
1157794970	1-1577	9497	SCREW	000000	000000
1157795020	1-1577	9502	SCREW	000000	000000
1157795030	1-1577	9503	SCREW	000000	000000
1157795040	1-1577	9504	BOLT	000000	000000
1157795050	1-1577	9505	BOLT	000000	000000
1157795060	1-1577	9506	BRACKET	000000	000000
1157795070	1-1577	9507	CAP NUT	000025	000000
1157795080	1-1577	9508	NUT	000014	000000
1157795090	1-1577	9509	SCREW	000000	000011
1157795630	1-1577	9563	PLATE; CAM	000000	000000
1157795640	1-1577	9564	NUT; CAP	000015	000037
1157795650	1-1577	9565	CAP	000167	000000
1157795660	1-1577	9566	CAP	000000	000006
1157795670	1-1577	9567	ADAPTER	000031	000040
1157795680	1-1577	9568	SCREW	000000	000000
1157795730	1-1577	9573	GASKET; SWIVEL LEVER	000003	000001
1157795740	1-1577	9574	GASKET;COVER TO GOV CVER	000000	000016
1157795750	1-1577	9575	SEAL; OIL, CM/SHF FRT	000000	000015
1157795760	1-1577	9576	SEAL; OIL, SWIVEL LEVER	000000	000004
1157795770	1-1577	9577	SHAFT; CONT, GOV HSG	000000	000000
1157795780	1-1577	9578	WASHER; CONT SHAFT, GOV	000000	000000
1157795790	1-1577	9579	PLATE; GOV	000000	000000
1157795800	1-1577	9580	SCREW; LEVER ADJ. GOV	000000	000000
1157795810	1-1577	9581	GASKET; CVR TO GOV CVR	000000	000000
1157795820	1-1577	9582	ADAPTER; GOV HSG	000000	000003
1157796370	1-1577	9637	GASKET;COVER TO HSG GO	000000	000000
1157796960	1-1577	9696	ACTUATOR;GOV, ELEC	000000	000000
1157797020	1-1577	9702	ACTUATOR; GOV, ELEC	000000	000000
1157797021	1-1577	9702	ACTUATOR; GOV, ELEC	000000	000005
1157797070	1-1577	9707	ACTUATOR;GOV ELEC	000000	000000
1157797071	1-1577	9707	ACTUATOR;GOV ELEC	000000	000000
1157797220	1-1577	9722	ACTUATOR; GOV, ELEC	000000	000003
1157797280	1-1577	9728	PLATE; GOV	000000	000000
1157797290	1-1577	9729	SHAFT; CONT GOV HSG INJ P	000002	000000
1157797300	1-1577	9730	SHIM; CONT SHAFT GOV	000005	000000

1157797310	1-1577	9731	SEAL; OIL CONT SHAFT GOV	000000	000000
1157797340	1-1577	9734	CONTROL; UNIT	000002	000000
1157797360	1-1577	9736	GROMMET; GOVERNOR	000001	000000
1157797380	1-1577	9738	COLLAR; CONT SHAFT GOV	000005	000000
1157797390	1-1577	9739	SCREW; LEVER TO SHAFT GOV	000011	000000
1157797450	1-1577	9745	PLATE;GOV	000000	000000
1157797480	1-1577	9748	MOTOR; GOVERNOR	000003	000000
1157797490	1-1577	9749	CONTROL UNIT	000003	000000
1157797630	1-1577	9763	LIP;GOVERNOR	000002	000000
1157797650	1-1577	9765	PICKUP;HSG	000001	000000
1157797660	1-1577	9766	GASKET;COV HSG, INJ PUMP	000007	000000
1157798020	1-1577	9802	BOLT,GOV,COVER INJ PUMP	000000	000000
1157798040	1-1577	9804	BOLT,GOV COVER INJ PUMP	000000	000001
1157798140	1-1577	9814	CABLE ASM;GOVERNOR	000010	000001
1157798150	1-1577	9815	ACTUATOR;GOV ELEC	000000	000002
1157798170	1-1577	9817	BRACKET;COVER	000001	000000
1157798190	1-1577	9819	GEAR;HSG TO MAGNET	000004	000000
1157800070	1-1578	0007	COUPLING	000000	000000
1157800170	1-1578	0017	TIMER; AUTO	000002	000000
1157800202	1-1578	0020	COUPLING;INJ PU	000000	000005
1157800330	1-1578	0033	COUPLING ASM.	000000	000005
1157800351	1-1578	0035	COUPLING; I/PUMP	000000	000000
1157800460	1-1578	0046	COUPLING ASM	000000	000000
1157800470	1-1578	0047	COUPLING ASM.	000000	000001
1157800510	1-1578	0051	COUPLING ASM.	000000	000000
1157800792	1-1578	0079	COUPLING ASM.	000000	000000
1157800793	1-1578	0079	COUPLING ASM.	000000	000000
1157800794	1-1578	0079	COUPLING ASM.	000000	000002
1157800810	1-1578	0081	COUPLING;INJ	000000	000000
1157800811	1-1578	0081	COUPLING;INJ.	000000	000000
1157800812	1-1578	0081	COUPLING ASM;IN	000000	000000
1157800813	1-1578	0081	COUPLING;INJ.	000000	000003
1157800830	1-1578	0083	COUPLING ASM;IN	000000	000000
1157800890	1-1578	0089	COUPLING ASM;IN	000000	000000
1157800891	1-1578	0089	COUPLING ASM;IN	000000	000000
1157800892	1-1578	0089	COUPLING ASM;IN	000000	000003
1157800950	1-1578	0095	COUPLING ASM; I	000000	000000
1157801030	1-1578	0103	COUPLING ASM.	000000	000000
1157801031	1-1578	0103	COUPLING ASM.	000000	000000
1157801041	1-1578	0104	COUPLING ASM; I	000000	000000
1157801042	1-1578	0104	COUPLING ASM	000000	000000
1157801050	1-1578	0105	COUPLING ASM.	000000	000000
1157801100	1-1578	0110	COUPLING	000000	000000
1157801102	1-1578	0110	COUPLING	000003	000002
1157801121	1-1578	0112	COUPLING ASM IN	000000	000000
1157801130	1-1578	0113	COUPLING ASM; I	000000	000000
1157801131	1-1578	0113	COUPLING ASM	000000	000000

1157801132	1-1578	0113	COUPLING ASM	000000	000000
1157801140	1-1578	0114	COUPLING ASM.	000000	000000
1157801210	1-1578	0121	COUPLING; PUMP	000000	000000
1157801220	1-1578	0122	COUPLING; INJ. PUMP	000000	000000
1157801230	1-1578	0123	COUPLING; INJ. PUMP	000000	000000
1157801250	1-1578	0125	COUPLING ASM.	000001	000000
1157801270	1-1578	0127	COUPLING ASM.	000000	000000
1157801290	1-1578	0129	COUPLING ASM.	000000	000003
1157801340	1-1578	0134	COUPLING ASM.	000000	000000
1157801350	1-1578	0135	COUPLING	000001	000000
1157801351	1-1578	0135	COUPLING	000002	000002
1157801360	1-1578	0136	COUPLING ASM; IN	000000	000000
1157801431	1-1578	0143	COUPLING ASM; INJ PUMP	000000	000002
1157801461	1-1578	0146	COUPLING ASM; INJ PUMP	000000	000000
1157801482	1-1578	0148	COUPLING ASM; INJ. PUMP	000000	000000
1157801520	1-1578	0152	COUPLING	000001	000000
1157801551	1-1578	0155	COUPLING ASM	000000	000003
1157801570	1-1578	0157	COUPLING ASM.	000000	000003
1157801640	1-1578	0164	COUPLING ASM.; FIG57	000000	000000
1157801641	1-1578	0164	COUPLING ASM.; FIG57	000000	000000
1157801660	1-1578	0166	COUPLING; INJ. PUMP FIG. 57	000000	000000
1157801680	1-1578	0168	COUPLING ASM.	000000	000000
1157801710	1-1578	0171	COUPLING; INJ. PUMP FIG. 57B	000001	000000
1157801720	1-1578	0172	COUPLING ASM.	000000	000000
1157801730	1-1578	0173	COUPLING ASM.	000000	000001
1157801740	1-1578	0174	COUPLING ASM; FIG	000000	000000
1157801741	1-1578	0174	COUPLING ASM; FIG	000000	000001
1157801750	1-1578	0175	COUPLING; INJ. PUMP FIG. 57B	000001	000000
1157801760	1-1578	0176	TIMER; AUTO	000004	000000
1157801770	1-1578	0177	COUPLING; INJ. PUMP FIG. 57B	000000	000000
1157801780	1-1578	0178	COUPLING; INJ. PUMP FIG. 57	000000	000000
1157801790	1-1578	0179	COUPLING; INJ. PUMP FIG. 57	000002	000000
1157801800	1-1578	0180	COUPLING; INJ. PUMP FIG. 57	000000	000000
1157801810	1-1578	0181	COUPLING; INJ. PUMP FIG. 57	000000	000000
1157801900	1-1578	0190	COUPLING ASM; INJ PUMP	000000	000001
1157801920	1-1578	0192	SOUPLING ASM; INJ PUMP	000000	000059
1157801950	1-1578	0195	COUPLING ASM; INJ PUMP	000002	000002
1157801960	1-1578	0196	COUPLING ASM; INJ PUMP	000000	000000
1157801990	1-1578	0199	COUPLING ASM; INJ PUMP	000000	000000
1157802000			PUMP ASM FEED	000000	000010
1157802020	1-1578	0202	COUPLING ASM; INJ	000000	000000
1157802021	1-1578	0202	COUPLING ASM; INJ	000000	000000
1157810020	1-1578	1002	CROSS COUPLING	000000	000000
1157810050	1-1578	1005	COUPLING ASM.	000000	000002
1157810060	1-1578	1006	COUPLING ASM.	000000	000000
1157810090	1-1578	1009	COUPLING	000000	000000
1157810100	1-1578	1010	COUPLING ASM.	000000	000000

1157810120	1-1578	1012	COUPLING ASM.	000000	000000
1157810130	1-1578	1013	COUPLING	000000	000000
1157810140	1-1578	1014	COUPLING ASM.	000000	000000
1157810160	1-1578	1016	COUPLING ASM.	000000	000001
1157810170	1-1578	1017	COUPLING	000000	000008
1157810180	1-1578	1018	COUPLING ASM.	000000	000001
1157810190	1-1578	1019	COUPLING ASM.	000000	000000
1157810200	1-1578	1020	COUPLIN INJ PUM	000000	000001
1157810210	1-1578	1021	COUPLING ASM.	000000	000000
1157810240	1-1578	1024	COUPLING; INJ. PUMP	000000	000000
1157810250	1-1578	1025	COUPLING	000000	000001
1157810350	1-1578	1035	COUPLING	000000	000000
1157810351	1-1578	1035	COUPLING	000000	000002
1157810352	1-1578	1035	COUPLING	000000	000000
1157810370	1-1578	1037	COUPLING	000000	000000
1157810400	1-1578	1040	COUPLING	000000	000000
1157810420	1-1578	1042	COUPLING; INJ PUMP DRIVE	000007	000000
1157820040	1-1578	2004	COUPLING INJ PU	000000	000000
1157820050	1-1578	2005	COUPLING ASM.	000000	000000
1157820060	1-1578	2006	COUPLING ASM.	000000	000002
1157820070	1-1578	2007	COUPLING (TIMER LESS)	000000	000000
1157820080	1-1578	2008	COUPLING (TIMER LESS)	000000	000000
1157820090	1-1578	2009	COUPLING	000000	000000
1157820100	1-1578	2010	COUPLING ASM.	000002	000001
1157820130	1-1578	2013	COUPLING	000000	000000
1157820150	1-1578	2015	COUPLING; INJ PUMP DRIVE	000000	000003
1157820180	1-1578	2018	COUPLING; INJ. PUMP	000000	000001
1157820200	1-1578	2020	COUPLING; INJ PUMP DRIVE	000000	000000
1157820210	1-1578	2021	COUPLING; INJ PUMP DRIVE	000000	000012
1157820220	1-1578	2022	COUPLING	000000	000005
1157840020	1-1578	4002	DISK,	000000	000001
1157845010	1-1578	4501	BOLT; PLATE TIMER SIDE	000000	000000
1157890030	1-1578	9003	PLATE; COUPLING	000000	000000
1157890040	1-1578	9004	COUPLING; INJ. PUMP ASM.	000000	000000
1157890050	1-1578	9005	PLATE; COUPLING	000007	000002
1157890070	1-1578	9007	WASHER	000000	000004
1157890080	1-1578	9008	WASHER	000000	000000
1157890090	1-1578	9009	BUSH*	000000	000008
1157890100	1-1578	9010	BOLT	000000	000000
1157890110	1-1578	9011	WASHER	000000	000025
1157890140	1-1578	9014	BUSHING	000008	000009
1157890160	1-1578	9016	BOLT*	000000	000000
1157890170	1-1578	9017	WASHER	000001	000000
1157890180	1-1578	9018	BOLT*	000000	000000
1157890190	1-1578	9019	BUSH*	000000	000000
1157890200	1-1578	9020	BOLT; COUPLING	000022	000000
1157890210	1-1578	9021	WASHER; COUPLING FIX, INJ	000000	000051

1157890230	1-1578	9023	PLATE COUPLING	000000	000000
1157890240	1-1578	9024	BOLT; COUPLING	000003	000009
1157890290	1-1578	9029	BOLT; PLATE TO COUPLING	000000	000022
1157890330	1-1578	9033	NUT; COUPLING	000001	000020
1157890360	1-1578	9036	PLATE; COUPLING	000000	000003
1157890370	1-1578	9037	COUPLING; CROSS	000000	000001
1157890380	1-1578	9038	PLATE; COUPLING	000000	000004
1157890390	1-1578	9039	PLATE	000000	000017
1157890400	1-1578	9040	BOLT,	000000	000023
1157890430	1-1578	9043	BOLT; COUPLING TO INJ PUM	000000	000098
1157890460	1-1578	9046	SHAFT	000000	000000
1157890470	1-1578	9047	O-RING	000000	000000
1157890580	1-1578	9058	COVER; COUPLING	000000	000005
1157890590	1-1578	9059	BOLT; COVER	000016	000055
1157890600	1-1578	9060	BOLT	000000	000020
1157890640	1-1578	9064	BOLT	000000	000000
1157890650	1-1578	9065	PLATE	000000	000000
1157890660	1-1578	9066	NUT**	000005	000000
1157890670	1-1578	9067	BOLT;	000000	000000
1157890680	1-1578	9068	COUPLING; CROSS	000000	000000
1157890690	1-1578	9069	BOLT PLATE TO	000000	000000
1157890700	1-1578	9070	BOLT COUPLING F	000000	000036
1157890720	1-1578	9072	BOLT*	000000	000000
1157890730	1-1578	9073	NUT; PLATE TO COUPLING	000000	000004
1157890740	1-1578	9074	BOLT*	000000	000000
1157890750	1-1578	9075	BOLT*	000004	000009
1157890760	1-1578	9076	WASHER	000005	000000
1157890770	1-1578	9077	PLATE	000000	000004
1157890790	1-1578	9079	BOLT	000002	000000
1157890800	1-1578	9080	PLATE	000001	000000
1157890810	1-1578	9081	BOLT*	000000	000000
1157890820	1-1578	9082	COUPLING; CROSS	000000	000000
1157890840	1-1578	9084	BOLT PLATE TO C	000000	000000
1157890870	1-1578	9087	BOLT*	000000	000000
1157890900	1-1578	9090	COUPLING; CROSS	000000	000001
1157890910	1-1578	9091	PLATE	000000	000001
1157890920	1-1578	9092	WASHER	000003	000000
1157890930	1-1578	9093	PLATE	000001	000000
1157890940	1-1578	9094	NUT	000000	000000
1157890950	1-1578	9095	WASHER	000022	000000
1157890960	1-1578	9096	PLATE; COUPLING	000000	000008
1157890980	1-1578	9098	BOLT	000000	000013
1157891040	1-1578	9104	COUPLING CROSS	000000	000004
1157891050	1-1578	9105	BOLT	000000	000000
1157891060	1-1578	9106	COUPLING; CROSS	000000	000000
1157891080	1-1578	9108	BOLT; PLATE	000000	000000
1157891160	1-1578	9116	BOLT*	000000	000000

1157891170	1-1578	9117	BOLT*	000002	000000
1157891180	1-1578	9118	BOLT*	000000	000000
1157891190	1-1578	9119	BOLT	000000	000003
1157891200	1-1578	9120	BOLT,	000000	000007
1157891210	1-1578	9121	BOLT*	000000	000004
1157891220	1-1578	9122	BOLT; PLATE TO	000000	000011
1157891230	1-1578	9123	COUPLING; CROSS	000000	000000
1157891240	1-1578	9124	PLATE	000002	000001
1157891250	1-1578	9125	BOLT*	000002	000001
1157891260	1-1578	9126	BOLT	000000	000000
1157891270	1-1578	9127	BOLT	000000	000000
1157891290	1-1578	9129	BOLT*	000000	000000
1157891300	1-1578	9130	BOLT*	000000	000000
1157891310	1-1578	9131	BOLT*	000003	000000
1157891320	1-1578	9132	BOLT*	000001	000000
1157891330	1-1578	9133	BOLT*	000000	000040
1157891350	1-1578	9135	BOLT; COUPLING	000000	000008
1157891360	1-1578	9136	NUT**	000000	000000
1157891560	1-1578	9156	BOLT*	000002	000000
1157891570	1-1578	9157	COUPLING	000000	000000
1157891590	1-1578	9159	BOLT; PLATE TO CO	000000	000000
1157891610	1-1578	9161	COUPLING; CROSS, INJ PUMP	000001	000000
1157891620	1-1578	9162	BOLT; CPLNG FIX INJ PUMP	000000	000008
1157891630	1-1578	9163	BOLT; PLATE TO COUPLING, IN	000000	000008
1157891640	1-1578	9164	BOLT; COUPLING TO INJ PMP	000010	000000
1157891650	1-1578	9165	NUT; PLATE TO COUPLING, I/P	000000	000009
1157891720	1-1578	9172	BOLT; PLATE TO COUPLING,	000052	000002
1157891730	1-1578	9173	PLATE; COUPLING, COUPLING	000000	000009
1157891740	1-1578	9174	NUT; PLATE TO COUPLING, IN	000000	000000
1157891750	1-1578	9175	BOLT; COUPLING TO INJ PUMP	000070	000000
1157891760	1-1578	9176	COUPLING; CROSS, INJ PUMP	000000	000018
1157891770	1-1578	9177	BOLT; COUPLING FIX INJ PU	000000	000000
1157891790	1-1578	9179	NUT	000000	000000
1157891800	1-1578	9180	COUPLING; CROSS, INJ PUMP	000000	000000
1157891810	1-1578	9181	COUPLING CROSS	000000	000001
1157891850	1-1578	9185	COUPLING; CROSS	000000	000003
1157891880	1-1578	9188	WSHR; PLATE TO COUPLING IN	000000	000000
1157891891	1-1578	9189	PLATE; COUPLING COUPLING S	000000	000002
1157891950	1-1578	9195	SHAFT	000000	000000
1157891960	1-1578	9196	COUPLING; CROSS	000001	000000
1157891970	1-1578	9197	NUT	000000	000000
1157892030	1-1578	9203	GEAR; INJ. PUMP	000000	000000
1157892070	1-1578	9207	COUPLING; INJ PUMP DRIVE	000000	000000
1157892080	1-1578	9208	COUPLING; CROSS, INJ PUMP	000000	000000
1157892090	1-1578	9209	PLATE; COUPLING, COUPLING	000000	000000
1157892100	1-1578	9210	BOLT; PLATE TO COUPLING, I	000000	000000
1157892110	1-1578	9211	BOLT; PLATE TO CROSS COUP	000000	000000

1157892120	1-1578	9212	BOLT; COUPLING FIX, INJ PU	000000	000015
1157892130	1-1578	9213	NUT; PLATE TO COUPLING, IN	000000	000000
1157892140	1-1578	9214	BOLT; COUPLING TO INJ PUM	000023	000003
1157892160	1-1578	9216	PLATE; LK COUPLING FIX, I	000000	000001
1157892210	1-1578	9221	COUPLING; CROSS, I	000000	000000
1157892230	1-1578	9223	COUPLING; CROSS, INJ PUMP D	000000	000000
1157900900	1-1579	0090	GOVERNOR ASM; INJ PUMP	000000	000000
1157900901	1-1579	0090	GOVERNOR ASM; INJ PUMP	000000	000001
1157901061	1-1579	0106	GOVERNOR ASM; INJ PUMP	000000	000000
1157901062	1-1579	0106	GOVERNOR ASM; INJ PUMP	000000	000001
1157901070	1-1579	0107	GOVERNOR ASM; INJ PUMP	000000	000001
1157901120	1-1579	0112	GOVERNOR ASM; INJ PUMP	000000	000004
1157901220	1-1579	0122	GOVERNOR ASM; INJ PUMP	000001	000000
1157901860	1-1579	0186	GOVERNOR ASM INJ PUMP	000000	000002
1161100172	1-1611	0017	VALVE; EGR	000000	000000
1161100173	1-1611	0017	VALVE; EGR	000000	000047
1161100174	1-1611	0017	VALVE; EGR	000000	000000
1161100175	1-1611	0017	VALVE; EGR	000000	000000
1161270210	1-1612	7021	COOLER; EGR	000000	000000
1161270211	1-1612	7021	COOLER; EGR	000000	000000
1161270213	1-1612	7021	COOLER; EGR	000000	000000
1161270214	1-1612	7021	COOLER; EGR	000000	000016
1161270220	1-1612	7022	COOLER; EGR	000000	000000
1161270221	1-1612	7022	COOLER; EGR	000000	000000
1161270223	1-1612	7022	COOLER; EGR	000000	000000
1161270224	1-1612	7022	COOLER; EGR	000000	000042
1161510321	1-1615	1032	BRACKET; EGR COOLER	000000	000003
1161510330	1-1615	1033	BRACKET; DUCT	000002	000000
1161570150	1-1615	7015	GASKET; EGR PIPE	000000	000003
1161570160	1-1615	7016	GASKET; INL COVER	000000	000005
1161570171	1-1615	7017	GASKET; EGR PIPE	000000	000013
1161570210	1-1615	7021	GASKET; EGR PIPE	000000	000007
1161570270	1-1615	7027	GASKET; EGR VLV	000000	000013
1161811211	1-1618	1121	PIPE; EGR	000000	000006
1161830591	1-1618	3059	DUCT; EGR	000000	000000
1161830592	1-1618	3059	DUCT; EGR	000000	000000
1161830660	1-1618	3066	BRACKET; INL DUCT	000000	000001
1161850040	1-1618	5004	GASKET; REED VLV	000000	000046
1161850060	1-1618	5006	COVER; EXH MANIF	000000	000001
1163711750	1-1637	1175	BELT ASM; FAN	000000	000000
1164114032	1-1641	1403	PIPE ASM; INJECTION	000000	000000
1182290400	1-1822	9040	BOLT; THROUGH	000000	000000
1182291560	1-1822	9156	VALVE ASM.	000000	000000
1191000430	1-1910	0043	COMPRESSOR; AIR E120	000000	000001
1191000620	1-1910	0062	COMPRESSOR; AIR E120	000000	000000
1191000693	1-1910	0069	COMPRESSOR ASM.	000000	000000
1191000711	1-1910	0071	COMPRESSOR; AIR E120	000000	000001

1191000982	1-1910	0098	COMPRESSOR ASM; AIR	000000	000000
1191001060	1-1910	0106	AIR COMPRESSOR	000000	000000
1191001061	1-1910	0106	COMPRESSOR ASM; AIR	000000	000000
1191001072	1-1910	0107	COMPRESSOR ASM; AIR 6RB1	000000	000000
1191001073	1-1910	0107	COMPRESSOR ASM; AIR 6RB1	000000	000001
1191001122	1-1910	0112	COMPRESSOR ASM; AIR	000000	000000
1191001142	1-1910	0114	COMPRESSOR, AIR	000000	000000
1191001462	1-1910	0146	COMPRESSOR ASM; AIR	000000	000000
1191001511	1-1910	0151	AIR COMPRESSOR;	000000	000000
1191001850	1-1910	0185	COMPRESSOR ASM; AIR	000000	000000
1191001881	1-1910	0188	COMPRESSOR ASM; AIR	000000	000000
1191001882	1-1910	0188	COMPRESSOR ASM; AIR	000000	000000
1191001891	1-1910	0189	COMPRESSOR	000000	000000
1191002080	1-1910	0208	COMPRESSOR ASM;	000000	000000
1191002081	1-1910	0208	COMPRESSOR ASM; AIR	000000	000000
1191002100	1-1910	0210	AIR COMPRESSOR	000000	000000
1191002200	1-1910	0220	AIR COMPRESSOR	000001	000000
1191002230	1-1910	0223	COMPRESSOR ASM; AIR	000000	000000
1191002270	1-1910	0227	COMPRESSOR ASM; AIR	000000	000000
1191002290	1-1910	0229	AIR COMPRESSOR	000000	000000
1191002291	1-1910	0229	AIR COMPRESSOR	000000	000000
1191002301	1-1910	0230	COMPRESSOR ASM; AIR	000000	000001
1191002323	1-1910	0232	COMPRESSOR ASM; AIR	000000	000000
1191002324	1-1910	0232	COMPRESSOR ASM; AIR	000000	000000
1191002325	1-1910	0232	COMPRESSOR ASM; AIR	000000	000000
1191002410	1-1910	0241	COMPRESSOR ASM	000000	000000
1191002411	1-1910	0241	COMPRESSOR ASM	000000	000000
1191002412	1-1910	0241	COMPRESSOR ASM	000000	000000
1191002413	1-1910	0241	COMPRESSOR ASM; AIR	000000	000000
1191002420	1-1910	0242	COMPRESSOR ASM	000000	000000
1191002422	1-1910	0242	COMPRESSOR ASM	000000	000000
1191002423	1-1910	0242	COMPRESSOR ASM	000000	000000
1191002432	1-1910	0243	COMPRESSOR ASM; AIR	000000	000000
1191002482	1-1910	0248	COMPRESSOR ASM; AIR	000000	000000
1191002483	1-1910	0248	COMPRESSOR ASM; AIR	000000	000000
1191002484	1-1910	0248	COMPRESSOR ASM; AIR	000000	000000
1191002485	1-1910	0248	COMPRESSOR ASM; AIR	000000	000000
1191002486	1-1910	0248	COMPRESSOR ASM; AIR	000000	000000
1191002487	1-1910	0248	COMPRESSOR ASM; AIR	000000	000001
1191002491	1-1910	0249	COMPRESSOR ASM; AIR	000000	000000
1191002492	1-1910	0249	COMPRESSOR ASM; AIR	000000	000002
1191002531	1-1910	0253	COMPRESSOR ASM; AIR	000000	000000
1191002532	1-1910	0253	COMPRESSOR ASM; AIR	000000	000000
1191002533	1-1910	0253	COMPRESSOR ASM; AIR	000000	000000
1191002534	1-1910	0253	COMPRESSOR ASM; AIR	000000	000000
1191002535	1-1910	0253	COMPRESSOR ASM; AIR	000000	000001
1191002551	1-1910	0255	AIR COMPRESSOR	000000	000000

1191002552	1-1910	0255	AIR COMPRESSOR	000000	000000
1191002591	1-1910	0259	COMPRESSOR ASM; AIR	000000	000000
1191002592	1-1910	0259	COMPRESSOR ASM; AIR	000000	000000
1191002593	1-1910	0259	COMPRESSOR ASM; AIR	000000	000000
1191002594	1-1910	0259	COMPRESSOR ASM; AIR	000000	000001
1191002600	1-1910	0260	COMPRESSOR ASM; AIR	000000	000000
1191002601	1-1910	0260	COMPRESSOR ASM; AIR	000000	000000
1191002602	1-1910	0260	COMPRESSOR ASM; AIR	000000	000000
1191002603	1-1910	0260	COMPRESSOR ASM; AIR	000000	000031
1191002611	1-1910	0261	COMPRESSOR ASM; AIR	000000	000000
1191002612	1-1910	0261	COMPRESSOR ASM; AIR	000000	000000
1191002613	1-1910	0261	COMPRESSOR ASM; AIR	000000	000002
1191002740	1-1910	0274	COMPRESSOR ASM; AIR	000000	000001
1191002750	1-1910	0275	COMPRESS. ASM.;AIR	000000	000000
1191002751	1-1910	0275	COMPRESS. ASM.;AIR	000000	000000
1191003250	1-1910	0325	AIR COMPRESSOR	000000	000004
1191100081	1-1911	0008	HEAD; CYL, AIR COMP	000003	000000
1191100111	1-1911	0011	HEAD ASM; CYL E120	000001	000000
1191100130	1-1911	0013	HEAD ASM;CYL,AIR CMPR	000000	000000
1191100131	1-1911	0013	HEAD ASM;CYL,AIR CMPR	000000	000000
1191100132	1-1911	0013	HEAD ASM;CYL,AIR CMPR	000000	000000
1191100140	1-1911	0014	HEAD ASM.; CYL. AIR COMP	000003	000000
1191100160	1-1911	0016	HEAD ASM; CYL,A	000000	000003
1191100170	1-1911	0017	HEAD ASM; CYL	000000	000000
1191100180	1-1911	0018	HEAD ASM; AIR C	000000	000000
1191100190	1-1911	0019	HEAD ASM;CYL,AI	000000	000001
1191100200	1-1911	0020	HEAD ASM; CYL,A	000000	000000
1191100201	1-1911	0020	HEAD ASM; CYL,A	000000	000000
1191100202	1-1911	0020	HEAD; CYL	000000	000000
1191100250			HEAD ASM; CYL,A	000000	000000
1191100252			HEAD ASM;CYL,AIR COMPRESS	000000	000000
1191100260	1-1911	0026	HEAD ASM;CYL,AIR CMPR	000000	000000
1191100262	1-1911	0026	HEAD ASM;CYL,AIR CMPR	000000	000000
1191100263	1-1911	0026	HEAD ASM;CYL,AIR CMPR	000000	000000
1191100270	1-1911	0027	HEAD ASM;CYL. AIR COMP.	000000	000000
1191100440	1-1911	0044	HEAD ASM;CYL AIR COMP	000000	000000
1191100470	1-1911	0047	HEAD; CYL	000000	000000
1191100480	1-1911	0048	HEAD ASM; CYL.	000000	000000
1191100481	1-1911	0048	HEAD ASM; CYL.	000000	000000
1191100510	1-1911	0051	HEAD; CYL	000000	000000
1191100520	1-1911	0052	HEAD ASM; CYL.	000000	000000
1191100550	1-1911	0055	HEAD ASM; CYL,AIR CMPR	000000	000000
1191100560	1-1911	0056	HEAD ASM; CYL,AIR CMPR	000000	000000
1191100561	1-1911	0056	HEAD ASM; CYL,AIR CMPR	000000	000002
1191100580	1-1911	0058	HEAD ASM; CYL AIR,CMPR	000000	000000
1191100581	1-1911	0058	HEAD ASM.; CYL. AIR CMPR	000000	000003
1191100590	1-1911	0059	HEAD ASM.; CYLINDER	000000	000000

1191110030	1-1911	1003	CYLINDER HEAD	000000	000000
1191110110	1-1911	1011	HEAD ASM; CYL E120	000000	000000
1191110120	1-1911	1012	HEAD; CYL.	000000	000000
1191110130	1-1911	1013	HEAD ASM.; CYL. AIR COMP	000000	000000
1191110251	1-1911	1025	HEAD ASM;CYL AIR COMPRSS	000000	000000
1191150020	1-1911	5002	PACKING,HEAD	000000	000000
1191150050	1-1911	5005	GASKET/PACKING HEAD	000000	000000
1191150060	1-1911	5006	GASKET;AIR CMPR	000000	000000
1191150061	1-1911	5006	GASKET;AIR CMPR	000000	000000
1191190030	1-1911	9003	PIPE; AIR,AIR C	000000	000002
1191200010	1-1912	0001	VALVE;UNLOADER	000004	000000
1191200020	1-1912	0002	VALVE ASM; UNLO	000000	000005
1191200030	1-1912	0003	VALVE ASM.; UNLOADER	000001	000000
1191200040	1-1912	0004	VALVE;UNLOADER	000000	000000
1191200050	1-1912	0005	VALVE ASM;UNLOADER,AIR CO	000000	000000
1191200080	1-1912	0008	VALVE ASM.; UNLOADER	000000	000000
1191200160	1-1912	0016	VALVE ASM;UNLOADER,AIR CM	000000	000000
1191200170	1-1912	0017	VALVE ASM;UNLOADER,AIR CM	000000	000000
1191200171	1-1912	0017	VALVE ASM;UNLOADER,AIR CM	000000	000002
1191200190	1-1912	0019	VALVE ASM; UNLOADER	000000	000000
1191200210	1-1912	0021	VALVE ASM; UNLOADER,	000000	000000
1191200211	1-1912	0021	VALVE ASM; UNLOADER,	000001	000000
1191200220	1-1912	0022	VALVE; UNLOADER	000001	000000
1191200230	1-1912	0023	VALVE ASM.; UNLOADER	000000	000000
1191200231	1-1912	0023	VALVE ASM.; UNLOADER	000000	000001
1191290010	1-1912	9001	CONNECTOR	000004	000001
1191290020	1-1912	9002	PACKING;COMPRESSOR	000000	000080
1191300020	1-1913	0002	VALVE; DELIVERY	000000	000003
1191300030	1-1913	0003	VALVE KIT;COMPRESSOR	000000	000003
1191300040	1-1913	0004	VALVE ASM; DEL	000000	000000
1191300050	1-1913	0005	VALVE KIT;SUCTI	000000	000000
1191300060	1-1913	0006	VALVE KIT;DELIV	000000	000000
1191300070	1-1913	0007	HOLDER;DELIVERY	000000	000000
1191360010	1-1913	6001	VALVE ASM;COMPRESSOR	000001	000000
1191390010	1-1913	9001	GASKET; AIR CMP	000010	000000
1191390020	1-1913	9002	GASKET;O-RING,A/C	000000	000000
1191390040	1-1913	9004	HEAD GASKET;A/C	000000	000000
1191390160	1-1913	9016	GASKET; AIR CMPR	000000	000074
1191390171	1-1913	9017	GASKET; AIR COMP	000000	000000
1191510080	1-1915	1008	CYLINDER	000000	000000
1191510120	1-1915	1012	CYLINDER; AIR COMP	000001	000000
1191510150	1-1915	1015	CASE;CRANK	000000	000000
1191510160	1-1915	1016	CYLINDER; AIR COMP	000000	000000
1191510170	1-1915	1017	CYLINDER; AIR COMP	000000	000000
1191510180	1-1915	1018	CASE; CRANK AIR COMP	000000	000000
1191512050	1-1915	1205	CRANKCASE ASM; AIR COMP	000000	000000
1191512071	1-1915	1207	CRANK CASE	000000	000000

1191512090	1-1915	1209	CYLINDER; AIR C	000000	000000
1191512100	1-1915	1210	CASE; CRANK AIR COMP	000000	000000
1191512120	1-1915	1212	CASE; CRANK, AIR CMPR.	000000	000000
1191512130	1-1915	1213	CYLINDER; AIR CMPR.	000001	000000
1191512180	1-1915	1218	CYLINDER; AIR COMPRESSOR	000001	000006
1191512190	1-1915	1219	CYLINDER;AIR COMPRESSOR	000000	000002
1191512210	1-1915	1221	CASE; AIR COMPRESSOR	000000	000000
1191512220	1-1915	1222	CYLINDER;AIR CM	000000	000001
1191512230	1-1915	1223	CASE;AIR COMP	000000	000000
1191512231	1-1915	1223	CASE;AIR COMP.	000000	000000
1191512280	1-1915	1228	CASE; CRANK, AIR COMP	000000	000000
1191512300	1-1915	1230	CASE; CRANK, COMPRESSOR	000001	000000
1191512301	1-1915	1230	CASE; CRANK, COMPRESSOR	000000	000000
1191512302	1-1915	1230	CASE; CRANK, COMPRESSOR	000000	000000
1191512310	1-1915	1231	CASE; CRANK,AIR	000000	000000
1191512330	1-1915	1233	CASE;CRANK,AIR COMP.	000000	000000
1191512410	1-1915	1241	CASE;AIR COMPRESSOR	000000	000002
1191512510	1-1915	1251	CYLINDER; AIR COMPRESSOR	000000	000002
1191512550	1-1915	1255	CRANKCASE; AIR, CMPR	000001	000000
1191512740	1-1915	1274	CRANKCASE; AIR CMPR	000000	000008
1191512770	1-1915	1277	CASE; CRANK	000000	000000
1191512880	1-1915	1288	CRANKCASE;AIR CMPR	000001	000000
1191512890	1-1915	1289	CASE;COUPLING	000001	000000
1191560150	1-1915	6015	COVER ASM; BEARING	000001	000000
1191560250	1-1915	6025	COVER;BRG	000000	000000
1191560260	1-1915	6026	COVER ASM; FRT	000000	000001
1191560300	1-1915	6030	COVER ASM.; BRG., W/OIL S	000000	000000
1191560310	1-1915	6031	BEARING COVER	000000	000000
1191560341	1-1915	6034	COVER;BRG	000000	000000
1191560350	1-1915	6035	COVER; A/COMP	000000	000000
1191560370	1-1915	6037	COVER; BRG. AIR COMP.	000000	000000
1191560390	1-1915	6039	COVER ASM; BRG, AIR CMPR	000001	000005
1191560400	1-1915	6040	COVER ASM;BRG,A	000001	000002
1191560410	1-1915	6041	CVR;BRG,A/CMPR	000000	000000
1191560411	1-1915	6041	CVR.BRG;A/CMPR	000000	000001
1191560420	1-1915	6042	COVER;BRG,A/CMP	000000	000000
1191560421	1-1915	6042	COVER;BRG,A/CMP	000002	000000
1191560430	1-1915	6043	COVER ASM; BRG,	000000	000000
1191560450	1-1915	6045	COVER; BRG,AIR COMP.	000000	000000
1191560480	1-1915	6048	COVER;BRG.,AIR COMP.	000000	000000
1191560490	1-1915	6049	COVER ASM;BRG.,AIR COMP.	000001	000000
1191560520	1-1915	6052	COVER ASM; BRG	000000	000002
1191560570	1-1915	6057	BRKT;OIL PIPE	000000	000003
1191570010	1-1915	7001	FLANGE;AIR CMPR	000000	000003
1191570020	1-1915	7002	FLANGE; A/C	000000	000000
1191570021	1-1915	7002	FLANGE;A/C	000000	000001
1191580110	1-1915	8011	PACKING E120	000000	000000

1191580130	1-1915	8013	GSKT;AIR COMP.	000000	000000
1191580150	1-1915	8015	PACKING E120	000000	000000
1191580151	1-1915	8015	PACKING E120	000000	000014
1191580160	1-1915	8016	GSKT;AIR COMP	000000	000000
1191580180	1-1915	8018	SEAL;OIL,BRG COVER,AIR CM	000000	000000
1191580181	1-1915	8018	SEAL;OIL,BRG COVER,AIR CM	000000	000002
1191580190	1-1915	8019	GSKT;AIR CMPR	000001	000000
1191580200	1-1915	8020	GSKT;AIR CMPR	000000	000001
1191580210	1-1915	8021	OIL SEAL; A/C	000000	000000
1191580220	1-1915	8022	GSKT;ORING,A/C	000000	000000
1191580240	1-1915	8024	SEAL;OIL,BRG,CVR,AIR CMPR	000000	000000
1191580241	1-1915	8024	SEAL;OIL,BRG,CVR,AIR CMPR	000000	000000
1191580290	1-1915	8029	PACKING; AIR COMPRES	000000	000002
1191580293	1-1915	8029	PACKING; AIR COMPRES	000000	000000
1191590020	1-1915	9002	BOLT**DISCONTINUED**	000000	000000
1191590030	1-1915	9003	BOLT; FENDER	000000	000000
1191590040	1-1915	9004	BOLT;CLIP,SIDE	000000	000000
1191590050	1-1915	9005	WASHER; PL.,COV	000000	000000
1191610050	1-1916	1005	PISTON; AIR COMP	000000	000001
1191610060	1-1916	1006	PISTON	000000	000000
1191610080	1-1916	1008	PISTON;AIR CMPR	000000	000003
1191610090	1-1916	1009	PISTON; AIR CMP	000001	000002
1191610110	1-1916	1011	RING SET; PISTON	000000	000000
1191610130	1-1916	1013	PISTON;A/CMPR	000000	000001
1191610160	1-1916	1016	PISTON;AIR COMP	000000	000011
1191610210	1-1916	1021	PISTON;AIR COMP	000000	000001
1191630030	1-1916	3003	RING KIT;PISTON	000000	000000
1191630070	1-1916	3007	RING SET;PISTON	000000	000000
1191630080	1-1916	3008	PISTON RING	000000	000000
1191630090	1-1916	3009	RING KIT PISTON	000000	000000
1191630100	1-1916	3010	RING KIT;PISTON	000000	000001
1191630110	1-1916	3011	POINTER	000000	000000
1191630121	1-1916	3012	POINTER	000000	000000
1191630130	1-1916	3013	RING KIT; COMPRESSOR	000000	000003
1191630140	1-1916	3014	RING KIT; PISTON A/COMP	000000	000000
1191630170	1-1916	3017	RING KIT;PISTON	000000	000005
1191630210	1-1916	3021	RING KIT; PISTO	000000	000010
1191630270	1-1916	3027	PISTON RINGS;A/	000000	000023
1191630340	1-1916	3034	RING KIT;PISTON	000000	000000
1191630380	1-1916	3038	LINER KIT; CYL, AIR COMP	000000	000000
1191630430	1-1916	3043	RING KIT;PISTON	000000	000003
1191630440	1-1916	3044	LINER KIT;CYL	000000	000000
1191630480	1-1916	3048	LINER KIT;CYL,AIR COMP	000000	000004
1191630510	1-1916	3051	RING KIT; PISTON	000000	000000
1191630511	1-1916	3051	RING KIT; PISTON	000000	000059
1191630521	1-1916	3052	LINER KIT; CYL, AIR COMP	000000	000002
1191630530	1-1916	3053	LINER KIT; CYL,AIR COMP	000000	000000

1191630531	1-1916	3053	LINER KIT; CYL,AIR COMP	000000	000000
1191630532	1-1916	3053	LINER KIT; CYL,AIR COMP	000000	000004
1191630540	1-1916	3054	LINER KIT; CYL.	000000	000000
1191630541	1-1916	3054	LINER KIT; CYL.	000000	000000
1191630601	1-1916	3060	LINER KIT; CYL.	000000	000001
1191670010	1-1916	7001	PIN; PISTON AIR COMP	000001	000000
1191670020	1-1916	7002	PIN; PISTON A/COMP	000000	000000
1191670030	1-1916	7003	PIN; PISTON	000000	000000
1191690010	1-1916	9001	RING; SNAP AIR COMP	000000	000000
1191690020	1-1916	9002	RING; SNAP A/COMP	000000	000000
1191710110	1-1917	1011	CRANKSHAFT; AIR COMPRESSO	000001	000000
1191710171	1-1917	1017	CRANKSHAFT	000000	000000
1191710201	1-1917	1020	CRANKSHAFT; AIR COMPRESSO	000000	000000
1191710230	1-1917	1023	CRANKSHAFT;AIR COMP.	000000	000000
1191710231	1-1917	1023	CRANKSHAFT;AIR COMP.	000000	000000
1191710270	1-1917	1027	CRANKSHAFT; AIR	000000	000000
1191710271	1-1917	1027	CRANKSHAFT; AIR	000000	000000
1191710280	1-1917	1028	CRANKSHAFT; AIR CMPR	000002	000004
1191710290	1-1917	1029	CRANKSHAFT,AIR	000000	000000
1191710300	1-1917	1030	CRANKSHAFT;A/C	000000	000000
1191710330	1-1917	1033	CRANKSHAFT; AIR COMP	000000	000000
1191710341	1-1917	1034	CRANKSHAFT; AIR COMP.	000000	000000
1191710342	1-1917	1034	CRANKSHAFT; AIR COMP.	000004	000000
1191710370	1-1917	1037	CRANKSHAFT;	000000	000001
1191710390	1-1917	1039	CRANKSHAFT; AIR COMPSR	000000	000000
1191710391	1-1917	1039	CRANKSHAFT; AIR COMPSR	000000	000000
1191710420	1-1917	1042	CRANKSHAFT;AIR	000000	000000
1191710460	1-1917	1046	CRANKSHAFT;AIR	000000	000003
1191710550	1-1917	1055	CRANKCASE; AIR, CMPR	000000	000000
1191710570	1-1917	1057	CRANKSHAFT; A/COMP	000000	000000
1191710720	1-1917	1072	SHAFT	000000	000000
1191710721	1-1917	1072	SHAFT	000000	000000
1191730040	1-1917	3004	CONNROD,COMPRES	000000	000000
1191730041	1-1917	3004	CONNROD,COMPRES	000000	000000
1191730070	1-1917	3007	ROD ASM; CONN,AIR CMPR	000002	000001
1191730080	1-1917	3008	ROD ASM.; CONN. AIR COMP	000001	000000
1191730100	1-1917	3010	CONN ROD; A/C	000000	000005
1191730110	1-1917	3011	ROD ASM;CONN,AI	000000	000004
1191770010	1-1917	7001	BEARING;COMPRES	000000	000001
1191770040	1-1917	7004	METAL	000000	000000
1191770060	1-1917	7006	METAL;CRANK COMPRESSOR	000002	000001
1191770070	1-1917	7007	BEARING; ROD A/COMP	000000	000000
1191790040	1-1917	9004	BOLT	000000	000000
1191790050	1-1917	9005	NUT; CONN. ROD BOLT	000000	000000
1191790060	1-1917	9006	WASHER;COMPRESSOR	000015	000000
1191790070	1-1917	9007	BOLT	000000	000000
1191790080	1-1917	9008	WASHER	000000	000000

1191790090	1-1917	9009	NUT	000000	000000
1191790100	1-1917	9010	SPACER; BEARING, CAMSHAFT	000000	000000
1191790110	1-1917	9011	BOLT; COVER FIX	000020	000040
1191790160	1-1917	9016	SPACER; BEARING	000000	000001
1191790180	1-1917	9018	SLEEVE;CR/SHF	000000	000003
1191910800	1-1919	1080	AIR PIPE,CHARGE	000000	000000
1191910940	1-1919	1094	AIR SUCTION	000000	000000
1191911360	1-1919	1136	AIR PIPE ASM;	000000	000000
1191911370	1-1919	1137	PIPE ASM	000000	000000
1191912080	1-1919	1208	PIPE; AIR E120	000000	000000
1191912660	1-1919	1266	PIPE; AIR E120	000000	000000
1191912820	1-1919	1282	AIR PIPE ASSY	000000	000000
1191913210	1-1919	1321	PIPE; AIR, CMPR. SUCTION	000001	000000
1191913311	1-1919	1331	PIPE: AIR	000000	000000
1191913450	1-1919	1345	HOSE; RUBBER, CMP 6RB1	000002	000000
1191913460	1-1919	1346	HOSE; RUBBER, AIR PIPE	000000	000000
1191914210	1-1919	1421	PIPE; AIR 6BD1	000000	000000
1191914370	1-1919	1437	PIPE ASM.; AIR, COMP. INT	000000	000000
1191914441	1-1919	1444	PIPE ASM.; AIR COMP. OUTL	000000	000000
1191914442	1-1919	1444	PIPE ASM.; AIR COMP. OUTL	000000	000000
1191914450	1-1919	1445	PIPE ASM.; AIR, GOVERNOR	000000	000000
1191914840	1-1919	1484	PIPE ASM; AIR	000000	000000
1191915010	1-1919	1501	PIPE ASM.; AIR COMP. OUTL	000000	000000
1191915280	1-1919	1528	PIPE; A/COMP	000000	000000
1191915290	1-1919	1529	PIPE; A/COMP	000000	000000
1191916280	1-1919	1628	PIPE; AIR, AIR COMPR. SUC	000000	000000
1191916440	1-1919	1644	PIPE; BOOCON	000001	000000
1191916710	1-1919	1671	PIPE; AIR, AIR CMPR. SUCT	000000	000001
1191916730	1-1919	1673	PIPE; AIR,AIR CMPR,S	000000	000000
1191916740	1-1919	1674	PIPE ASM.; AIR, COMP. INL	000000	000000
1191916900	1-1919	1690	PIPE;AIR,AIR	000005	000003
1191916970	1-1919	1697	PIPE;AIR,AIR CM	000000	000003
1191917000	1-1919	1700	PIPE ASM.; AIR, COMP. INL	000000	000000
1191917080	1-1919	1708	PIPE ASM.; AIR COMP. OUTL	000000	000000
1191917220	1-1919	1722	PIPE; AIR 6RB1	000001	000000
1191917451	1-1919	1745	PIPE ASM.; AIR, GOVERNOR	000000	000000
1191918350	1-1919	1835	PIPE ASM; AIR	000000	000000
1191918390	1-1919	1839	PIPE ASM;AIR	000000	000000
1191918650	1-1919	1865	PIPE ASM.; AIR, GOVERNOR	000000	000000
1191918681	1-1919	1868	PIPE; BOOCON	000001	000000
1191918830	1-1919	1883	PIPE; A/COMP.	000000	000000
1191919140	1-1919	1914	PIPE ASM.; A/CMPR. SUCTIO	000002	000000
1191919500	1-1919	1950	PIPE; AIR,AIR C	000000	000002
1191919551	1-1919	1955	PIPE ASM; AIR 6SA1T	000000	000000
1191919600	1-1919	1960	PIPE ASM.; AIR COMP. OUTL	000000	000000
1191919601	1-1919	1960	PIPE ASM.; AIR COMP. OUTL	000000	000000
1191919610	1-1919	1961	PIPE ASM.; AIR, GOVERNOR	000000	000000

1191919621	1-1919	1962	PIPE ASM; AIR CHARGE	000000	000000
1191919650	1-1919	1965	PIPE ASM.; AIR COMP. OUTL	000000	000000
1191919670	1-1919	1967	PIPE ASM; AIR COMP INTAKE	000000	000000
1191920130	1-1919	2013	PIPE ASM; AIR COMP.	000000	000000
1191921150	1-1919	2115	PIPE ASM; AIR GOVERNOR	000000	000000
1191921340	1-1919	2134	PIPE SUCTION; AIR	000003	000000
1191922080	1-1919	2208	PIPE CHARGE; AIR	000008	000000
1191922090	1-1919	2209	AIR PIPE GOVERNOR	000003	000000
1191922100	1-1919	2210	PIPE; AIR-SUCTION	000000	000000
1191922780	1-1919	2278	PIPE; A/COMP.	000000	000000
1191922790	1-1919	2279	PIPE; AIR COMP SUCTION	000000	000000
1191923560	1-1919	2356	PIPE ASM; AIR	000000	000001
1191924461	1-1919	2446	PIPE ASM.	000000	000001
1191925810	1-1919	2581	PIPE ASM; A/CMP SUCT.	000002	000000
1191927510	1-1919	2751	PIPE; AIR-GOV.	000000	000000
1191927550	1-1919	2755	PIPE; AIR	000000	000000
1191929290	1-1919	2929	PIPE ASM; BOOST, INTAKE	000005	000000
1191932231	1-1919	3223	PIPE; AIR BOOST	000000	000000
1191932390	1-1919	3239	PIPE ; AIR BOOST	000000	000014
1191933990	1-1919	3399	PIPE;AIR,BOOST	000003	000000
1191990350	1-1919	9035	BRACKET; CABLE CLIP/FRAME	000000	000000
1191990490	1-1919	9049	BRKT; PIPE	000000	000000
1191990590	1-1919	9059	BRACKET; AIR PIPE	000000	000000
1191990600	1-1919	9060	BRACKET; AIR PIPE	000000	000000
1191990940	1-1919	9094	BRKT;PIPE CLIP	000000	000000
1191991030	1-1919	9103	BRKT;AIR PIPE	000000	000000
1191991060	1-1919	9106	BRACKET; CLIP FIX	000000	000000
1191991250	1-1919	9125	BRACKET; AIR GO	000000	000000
1191991280	1-1919	9128	BRACKET; AIR PIPE CLIP FI	000000	000000
1191991420	1-1919	9142	BRACKET; CLIP, FIX	000000	000000
1191991430	1-1919	9143	BRACKET; CLIP AIR PIPE FI	000000	000000
1191991900	1-1919	9190	BRACKET HARNESS	000000	000000
1191992440	1-1919	9244	BRACKET; HARNESS	000000	000000
1191994110	1-1919	9411	BRACKET; INJ PIPE CLIP	000004	000000
1193020480	1-1930	2048	STUD;GEAR CASE COVER	000000	000000
1193100020	1-1931	0002	ELBOW ASM; TACHOMETER	000000	000000
1193100030	1-1931	0003	ELBOW ASM; TACHOMETER	000000	000000
1193100060	1-1931	0006	ELBOW ASM.,TACHOMETER	000000	000000
1193100070	1-1931	0007	ELBOW; TACHOMETER DRIVE	000000	000000
1193100071	1-1931	0007	ELBOW; TACHOMETER DRIVE	000000	000000
1193810301	1-1938	1030	COVER;OIL PAN	000000	000000
1193810500	1-1938	1050	COVER;CYL HEAD	000000	000000
1193810510	1-1938	1051	COVER;CYL,HEAD	000000	000000
1193811742	1-1938	1174	COVER; HD COVER, OUTER	000000	000002
1193811760	1-1938	1176	COVER; OIL PAN	000000	000000
1193811772	1-1938	1177	COVER; HD. COVER OUTER	000000	000000
1193812770	1-1938	1277	COVER; HD COVER	000000	000000

1193870041	1-1938	7004	SEALING	000000	000000
1193870070	1-1938	7007	RUBBER SEAL;CVR	000000	000006
1193870080	1-1938	7008	SEAL; RUBBER	000000	000000
1193870180	1-1938	7018	SEAL; NOISE COVER	000000	000000
1193890040	1-1938	9004	GROMMET; HD COVER, OUTER	000101	000031
1193890050	1-1938	9005	RUBBER; MTG.	000000	000000
1195001470	1-1950	0147	PUMP ASM; OIL P/S	000000	000000
1195001893	1-1950	0189	PUMP ASM; P/S	000000	000000
1195001894	1-1950	0189	P/S PUMP	000003	000000
1195001961	1-1950	0196	PUMP ASM; OIL 4BD1T/6BD1	000000	000002
1195001962	1-1950	0196	PUMP ASM; OIL 4BD1T/6BD1	000000	000000
1195001981	1-1950	0198	PUMP ASM; OIL P/S	000000	000000
1195001982	1-1950	0198	PUMP ASM; OIL P/S	000000	000000
1195001990	1-1950	0199	PUMP ASM, ;OIL	000000	000000
1195002052	1-1950	0205	OIL PUMP	000000	000000
1195002180	1-1950	0218	PUMP ASM.;OIL	000000	000000
1195002181	1-1950	0218	PUMP ASM.;OIL	000000	000000
1195002424	1-1950	0242	PUMP; POWER STEERING	000001	000000
1195002451	1-1950	0245	PUMP ASM; OIL E120	000000	000000
1195002452	1-1950	0245	PUMP ASM; OIL E120	000001	000000
1195003103	1-1950	0310	PUMP ASM; OIL	000000	000000
1195003104	1-1950	0310	PUMP ASM; OIL	000000	000000
1195003502	1-1950	0350	PUMP ASM; OIL	000000	000000
1195003503	1-1950	0350	PUMP ASM; OIL	000000	000000
1195003504	1-1950	0350	PUMP ASM; OIL	000001	000001
1195003510	1-1950	0351	PUMP ASM; OIL, P	000000	000000
1195003511	1-1950	0351	PUMP ASM; OIL, P/S	000000	000000
1195003512	1-1950	0351	PUMP ASM; OIL, P/S	000000	000000
1195003513	1-1950	0351	PUMP ASM; OIL, P/S	000000	000001
1195003582	1-1950	0358	PUMP ASM	000000	000000
1195003583	1-1950	0358	PUMP ASM	000001	000000
1195003710	1-1950	0371	PUMP ASM;OIL	000000	000000
1195003711	1-1950	0371	PUMP ASM; OIL, P	000000	000000
1195003712	1-1950	0371	PUMP ASM; OIL P/S	000000	000000
1195003713	1-1950	0371	PUMP ASM; OIL P/S	000000	000000
1195003714	1-1950	0371	PUMP ASM; OIL P/S	000000	000000
1195110080	1-1951	1008	BODY ASM; FRONT	000000	000000
1195110270	1-1951	1027	BODY ASM.;REAR	000000	000000
1195110290	1-1951	1029	BODY ASM; REAR, OIL PUMP	000000	000000
1195110320	1-1951	1032	BODY;FRT PUMP	000000	000005
1195110360	1-1951	1036	BODY ASM;RR.	000000	000000
1195110510	1-1951	1051	BODY; FRT	000000	000000
1195110570	1-1951	1057	BODY ASM; FRT,OIL PUMP	000001	000000
1195110571	1-1951	1057	BODY ASM; FRT,OIL PUMP	000000	000001
1195110580	1-1951	1058	BODY; O/PUMP	000000	000000
1195110581	1-1951	1058	BODY ASM; RR,OIL PUMP	000000	000000
1195110590	1-1951	1059	BODY; O/PUMP	000000	000000

1195110591	1-1951	1059	BODY; O/PUMP	000000	000000
1195110621	1-1951	1062	BODY ADM; RR, OIL PUMP 6S	000000	000000
1195110630	1-1951	1063	BODY ASM; RR	000000	000000
1195110631	1-1951	1063	BODY ASM; RR,OI	000000	000000
1195110640	1-1951	1064	BODY ASM; FRT,O	000000	000000
1195110800	1-1951	1080	BODY ASM W/BUSH FRT	000000	000000
1195150010	1-1951	5001	RETAINER;BALL	000000	000000
1195150040	1-1951	5004	BEARING;BALL OIL PMP FRT	000000	000000
1195190010	1-1951	9001	WASHER;PL.	000000	000000
1195190020	1-1951	9002	WASHER;SPR.	000000	000000
1195190030	1-1951	9003	NUT	000000	000000
1195190660	1-1951	9066	CARTRIDGE; OIL PUMP,P/S	000000	000000
1195190740	1-1951	9074	SPRING	000000	000000
1195190760	1-1951	9076	SCREW; PLATE	000000	000008
1195190790	1-1951	9079	SHIM;VLV,	000000	000000
1195190800	1-1951	9080	PLUG; OIL PUMP,RR	000000	000000
1195190830	1-1951	9083	PLUG;OIL PUMP	000000	000000
1195190870	1-1951	9087	CARTRIDGE ASM	000000	000005
1195190890	1-1951	9089	VALVE;OIL PUMP	000000	000000
1195190900	1-1951	9090	VALVE ASM; OIL PUMP	000000	000000
1195190940	1-1951	9094	RING; RETAINING	000000	000000
1195190950	1-1951	9095	RING; RETAINING	000000	000000
1195190980	1-1951	9098	VALVE; OIL PUMP	000000	000000
1195191000	1-1951	9100	GASKET; PUMP HOUSING	000000	000079
1195191010	1-1951	9101	BOLT; RR,OIL PUMP	000000	000000
1195191020	1-1951	9102	PLATE PRESSURE	000000	000000
1195191030	1-1951	9103	PLATE; SIDE OIL	000000	000000
1195191040	1-1951	9104	VALVE.ASM;OIL P	000000	000001
1195191050	1-1951	9105	SPRING; OIL PUMP	000000	000000
1195191060	1-1951	9106	SCREW; PRESS PLATE	000000	000002
1195191070	1-1951	9107	VALVE;CONTROL	000000	000000
1195191080	1-1951	9108	SPRING	000000	000000
1195191100	1-1951	9110	PLATE PRESSURE	000000	000000
1195191110	1-1951	9111	PLATE; SIDE OIL	000000	000000
1195191130	1-1951	9113	CARTRIDGE; OIL PUMP,P/S	000000	000000
1195191170	1-1951	9117	SPRING;O/PUMP	000000	000000
1195191300	1-1951	9130	PLATE; SIDE,OIL PUMP	000000	000000
1195191310	1-1951	9131	PLATE;PRESS,PUM	000000	000000
1195191320	1-1951	9132	CARTRIDGE; OIL PUMP,P/S	000000	000000
1195191330	1-1951	9133	PLATE; SIDE,OIL PUMP	000000	000000
1195191331	1-1951	9133	PLATE; SIDE,OIL	000000	000000
1195191350	1-1951	9135	RING; RETAINING,OIL PUMP	000000	000000
1195191380	1-1951	9138	SPRING; O/PUMP	000000	000000
1195191390	1-1951	9139	SPRING;INNER OIL PUMP	000000	000003
1195191440	1-1951	9144	SEAL; OIL,OIL PUMP	000000	000002
1195191720	1-1951	9172	RING; RETAINING,OIL PUMP	000000	000003
1195191760	1-1951	9176	PLATE; PRESSURE,OIL PUMP	000000	000000

1195191770	1-1951	9177	RING; RETAINING,BALL BRG	000000	000109
1195191780	1-1951	9178	VALVE ASM; OIL PUMP	000000	000000
1195191781	1-1951	9178	VALVE ASM; OIL PUMP	000000	000001
1195191790	1-1951	9179	VALVE; OIL PUMP	000000	000000
1195191810	1-1951	9181	VALVE; OIL PUMP	000000	000000
1195191820	1-1951	9182	SPRING;INNER,OIL PUMP	000000	000000
1195191830	1-1951	9183	VALVE ASM; OIL PUMP	000000	000000
1195191831	1-1951	9183	VALVE ASM; OIL PUMP	000000	000002
1195191850	1-1951	9185	PLATE; PRESSURE	000000	000000
1195191940	1-1951	9194	CARTRIDGE; OIL PUMP,P/S	000000	000000
1195192281	1-1951	9228	PLATE; PRESSURE, OIL PUMP	000000	000000
1195192300	1-1951	9230	PLUG; OIL PUMP,RR	000000	000001
1195192330	1-1951	9233	PLATE; PRESSURE,OIL PUMP	000000	000000
1195192340	1-1951	9234	PLATE; SIDE,OIL PUMP	000000	000000
1195192350	1-1951	9235	VALVE ASM; O/P	000000	000000
1195192351	1-1951	9235	VALVE ASM; OIL PUMP	000000	000001
1195192390	1-1951	9239	VALVE ASM; O/P	000000	000000
1195192391	1-1951	9239	VALVE ASM; O/P	000000	000000
1195192420	1-1951	9242	BOLT*	000000	000000
1195192440	1-1951	9244	BOLT; RR,OIL PUMP	000000	000003
1195192520	1-1951	9252	SEAL; OIL,OIL PUMP	000000	000001
1195192640	1-1951	9264	BEARING; BALL, OIL PUMP	000000	000000
1195192860	1-1951	9286	VALVE; OIL PUMP	000000	000000
1195192870	1-1951	9287	VALVE; OIL PUMP	000000	000000
1195192930	1-1951	9293	WASHER;PL SHAFT,OIL PUMP	000000	000114
1195193140			GASKET;FRT BODY TO RR BOD	000000	000001
1195193210	1-1951	9321	PACKING;O-RING	000000	000000
1195193540	1-1951	9354	CARTRIDGE; OIL PUMP, P/S	000000	000002
1195210110	1-1952	1011	SHAFT ASM.	000000	000000
1195210120	1-1952	1012	SHAFT ASM; P/S	000000	000000
1195210150	1-1952	1015	SHAFT;OIL PUMP	000000	000000
1195210180	1-1952	1018	SHAFT; OIL PUMP	000000	000001
1195210260	1-1952	1026	SHAFT	000000	000000
1195810054	1-1958	1005	GEAR; P/S PUMP	000000	000002
1195810063	1-1958	1006	GEAR; PUMP DRIVE	000000	000000
1195810180	1-1958	1018	GEAR: SEA WTR PUMP	000000	000000
1195810300	1-1958	1030	OIL PUMP GEAR	000003	000000
1196000030	1-1960	0003	PUMP ASM; VACUUM	000000	000000
1196000140	1-1960	0014	PUMP ASM.; VACUUM	000000	000001
1196000170	1-1960	0017	PUMP; VACUUM 6BD1	000000	000000
1196000180	1-1960	0018	PUMP ASM; VACUUM	000000	000000
1196000190	1-1960	0019	PUMP; VACUUM 6BD1	000000	000000
1196230160	1-1962	3016	O-RING.FEED PUMP	000000	000000
1196232430	1-1962	3243	GASKET; AIR CMP	000000	000000
1196235390	1-1962	3539	GASKET; CRANKCASE	000000	000000
1197110040	1-1971	1004	REAR BRKT ASSY	000000	000000
1197110110	1-1971	1011	BRACKET;ACG	000000	000000

1197110140	1-1971	1014	BRKT:ACG	000000	000000
1197110220	1-1971	1022	BRACKET; GENERATOR	000000	000000
1197110290	1-1971	1029	NUT; GEN	000003	000006
1197110330	1-1971	1033	BRACKET	000000	000000
1197110332	1-1971	1033	BRACKET	000000	000004
1197110380	1-1971	1038	BRKT;GENERATOR	000003	000000
1197110450	1-1971	1045	BRACKET; GENERATOR	000000	000009
1197110690	1-1971	1069	BRACKET	000000	000000
1197111250	1-1971	1125	BRACKET; GEN	000000	000001
1197111361	1-1971	1136	BRACKET; GEN	000002	000000
1197111430	1-1971	1143	BRACKET;GEN	000000	000000
1197190120	1-1971	9012	COVER; GENERATOR FAN	000000	000000
1197190170	1-1971	9017	SPACER; GENERATOR	000032	000000
1197190250	1-1971	9025	SPACER; GENERATOR	000000	000000
1197190280	1-1971	9028	SPACER; ADJ/P-G/C	000009	000000
1197190290	1-1971	9029	COVER; ALTERNATOR FIX	000001	000000
1197190360	1-1971	9036	COVER; GENERATOR PULLEY	000000	000000
1197190362	1-1971	9036	COVER; GENERATOR PULLEY	000000	000003
1197190380	1-1971	9038	COVER	000000	000000
1197190420	1-1971	9042	SPACER	000000	000000
1197190430	1-1971	9043	SPACER	000002	000000
1197190440	1-1971	9044	COVER; BELT	000000	000000
1197190490	1-1971	9049	BRACKET; PROTECTOR	000000	000001
1197190500	1-1971	9050	BRACKET; PROTECTOR	000000	000001
1197190510	1-1971	9051	BRACKET; PROTECTOR	000000	000001
1197190520	1-1971	9052	PROTECTOR; BELT,ACG	000000	000001
1197320110	1-1973	2011	CONNECTOR; GLOW	000000	000004
1197320111	1-1973	2011	CONNECTOR; GLOW	000000	000000
1197320140	1-1973	2014	CONNECTOR; GLOW PLUG	000001	000000
1197320150	1-1973	2015	CONNECTOR; GLOW PLUG	000000	000000
1197320301	1-1973	2030	CONNECTOR; GLOW PLUG	000000	000000
1197320302	1-1973	2030	CONNECTOR; GLOW PLUG	000000	000000
1197320371	1-1973	2037	CONNECTOR; GLOW PLUG	000000	000014
1197510150	1-1975	1015	BRACKET; I/PUMP	000000	000000
1197510300	1-1975	1030	BRACKET	000000	000000
1197510360	1-1975	1036	BRACKET	000000	000000
1197510411	1-1975	1041	BRACKET; INJ. PUMP REAR	000000	000000
1197510460	1-1975	1046	BRACKET; INJ. PUMP	000000	000000
1197510490	1-1975	1049	BRACKET; INJ PUMP	000000	000001
1197510580	1-1975	1058	BRACKET; INJ. PUMP	000000	000000
1197510600	1-1975	1060	BRACKET;INJ PUM	000000	000000
1197510601	1-1975	1060	BRACKET; INJ PU	000000	000000
1197510710	1-1975	1071	BRACKET; INJ PUMP	000002	000000
1197510870	1-1975	1087	BRKT;INJ.PUMP	000000	000002
1197511010	1-1975	1101	BRACKET; ENG. STOPPER CAB	000001	000000
1197511200	1-1975	1120	BRACKET;INJ.PUMP RR.	000002	000000
1197511341	1-1975	1134	BRACKET;ENGINE STOPPER CA	000001	000000

1197511410	1-1975	1141	BRACKET;ENG.STOP.CABLE	000001	000000
1197511560	1-1975	1156	BRACKET; INJ PUMP TP C/BL	000000	000002
1197511650	1-1975	1165	BRACKET;INJ PUMP TO C/BL	000002	000001
1197511651	1-1975	1165	BRACKET;INJ PUMP TO C/BL	000000	000000
1197511790	1-1975	1179	BRACKET; INJ PUMP TO C/BL	000000	000002
1197550270			OIL FILLER	000000	000000
1197550330			BRACKET; FUEL FILTER	000000	000000
1197550460	1-1975	5046	STAY; ADAPTER 6RB1	000000	000000
1197550520	1-1975	5052	BRACKET; FUEL FILTER	000000	000000
1197550621	1-1975	5062	BRACKET; PARTIA	000000	000000
1197550820	1-1975	5082	BRACKET; SEDIMENTER	000000	000000
1197550831	1-1975	5083	BRACKET; PARTIAL OIL FILT	000000	000000
1197550840	1-1975	5084	BRACKET; SEDIMENTER	000000	000000
1197550860	1-1975	5086	BRACKET; PARTIAL OIL FILT	000000	000000
1197550880	1-1975	5088	BRACKET; FUEL FILTER	000000	000000
1197550881	1-1975	5088	BRACKET; FUEL FILTER	000000	000000
1197550921	1-1975	5092	BRKT;SEDIMENTER FIX	000000	000000
1197550941	1-1975	5094	BRACKET; SEDIMENTER	000000	000000
1197550980	1-1975	5098	BRACKET; FUEL FILTER SED	000001	000000
1197551120	1-1975	5112	BRACKET; FUEL FILTER SED	000000	000002
1197551130	1-1975	5113	BRACKET; SEDIMENTER	000000	000000
1197551140	1-1975	5114	BRACKET; FUEL FILTER	000000	000000
1197551150	1-1975	5115	BRACKET; FUEL FILTER	000000	000000
1197551160	1-1975	5116	BRKT;FUEL FILTER	000000	000000
1197551240	1-1975	5124	BRACKET; SEDIMENTER	000000	000000
1197551241	1-1975	5124	BRACKET; SEDIMENTER	000001	000000
1197551380	1-1975	5138	BRACKET; F/FILTER	000000	000000
1197551440	1-1975	5144	BRACKET;FUEL FILTER	000001	000000
1197551451	1-1975	5145	BRACKET; F/FILLER	000000	000000
1197551460	1-1975	5146	BRACKET; FUEL FILTER	000001	000000
1197551470	1-1975	5147	STAY; BRACKET-F/FLTR	000002	000000
1197551990	1-1975	5199	BRACKET; FUEL FILTER	000000	000004
1197552061	1-1975	5206	BRACKET; FUEL FILTER	000001	000000
1197552091	1-1975	5209	BRACKET; COVER INJ	000000	000001
1197552130	1-1975	5213	BRACKET; COVER INJ	000000	000001
1197552200	1-1975	5220	BRACKET;OIL FILTER	000003	000000
1197552290	1-1975	5229	BRACKET; FUEL FILTER	000000	000000
1197552321	1-1975	5232	BRACKET; FUEL FILTER	000000	000001
1197590010	1-1975	9001	SPACER	000000	000000
1197590020	1-1975	9002	SPACER	000000	000000
1197890170	1-1978	9017	BRACKET; ENGINE STOPPER E	000000	000002
1197890180	1-1978	9018	BRACKET; ENGINE STOPPER E	000000	000000
1197890210	1-1978	9021	STAY; WIRE CLIP E120	000000	000000
1197890322	1-1978	9032	BRACKET; ENG. STOPPER	000000	000000
1197890340	1-1978	9034	BRACKET; ENGINE STOPPER E	000001	000000
1197890350	1-1978	9035	BRACKET; STOP CABLE	000000	000000
1211220051	1-2112	2005	CONNECTOR;	000000	000005

1211220080	1-2112	2008	CONNECTOR; P/S PUMP	000000	000000
1211220111	1-2112	2011	CONNECTOR; P/S	000000	000003
1211220192	1-2112	2019	CONNECTOR; P/S	000000	000002
1212101526	1-2121	0152	TANK ASM; OIL, PAN	000000	000000
1214019830	1-2140	1983	RADIATOR ASM	000000	000000
1214311711	1-2143	1171	HOSE	000000	000000
1214360260	1-2143	6026	PIPE; VINYL	000000	000000
1214370560			RAD INLET HOSE	000000	000000
1214371210			RAD OUTLET HOSE	000000	000000
1214371380			HOSE; RUBBER	000004	000002
1214371710	1-2143	7171	HOSE;RUBBER,RAD	000000	000000
1214371711	1-2143	7171	HOSE;RUBBER,RAD	000000	000000
1214371713	1-2143	7171	HOSE;RUBBER,RAD	000000	000003
1214372040	1-2143	7204	HOSE; RAD.	000000	000002
1214373240	1-2143	7324	HOSE; WATE	000000	000000
1214373241	1-2143	7324	HOSE;WATER	000000	000032
1214500420	1-2145	0042	CAP ASM.; RAD.	000000	000000
1214500460	1-2145	0046	CAP ASM	000000	000001
1214500870	1-2145	0087	CAP;RADIATOR	000000	000000
1214501040	1-2145	0104	RADIATOR CAP	000000	000000
1214501041	1-2145	0104	RADIATOR CAP	000000	000000
1214501130	1-2145	0113	RADIATOR CAP	000000	000012
1214501230	1-2145	0123	CAP SURGE TANK	000000	000010
1214501330	1-2145	0133	CAP ASM RAD	000004	000000
1214800272	1-2148	0027	TANK ASM; RSV, WATER	000000	000000
1214800290	1-2148	0029	TANK; SURGE	000000	000000
1214800291	1-2148	0029	TANK; SURGE	000000	000006
1214800390	1-2148	0039	TANK ASM;RESERV	000000	000001
1214800560	1-2148	0056	TANK;SURGE,R	000000	000000
1214800561	1-2148	0056	TANK; SURGE,RAD	000000	000011
1214800610	1-2148	0061	TANK ASM SURGE	000000	000000
1214800611	1-2148	0061	TANK ASM SURGE	000000	000000
1214810412	1-2148	1041	TANK ASM SURGE	000000	000000
1214890180	1-2148	9018	BAFFLE;SW.RES.T	000002	000008
1214890450	1-2148	9045	CAP ASM TANK	000000	000000
1214890541	1-2148	9054	CAP ASM SURGE TANK	000000	000000
1214890952	1-2148	9095	BRACKET; RSV TANK FRT	000000	000000
1214890960	1-2148	9096	BRACKET;RESERVE	000000	000000
1214890961	1-2148	9096	BRACKET;RESERVE	000000	000000
1214890962	1-2148	9096	BRACKET;RESERVE	000000	000000
1214891400	1-2148	9140	BRACKET; RSV TANK FRT	000001	000000
1214900510	1-2149	0051	EXCHANGER ASM; HEAT	000000	000000
1214900600	1-2149	0060	INTERCOOLER ASM. UME120	000000	000000
1214900650	1-2149	0065	CORE ASM	000000	000001
1214900690	1-2149	0069	INTERCOOLER	000000	000000
1214900700	1-2149	0070	COOLER ASM; INTER	000000	000000
1214900951	1-2149	0095	EXCHANGER ASM; HEAT	000000	000000

1214900970	1-2149	0097	INTER. COOLER	000000	000001
1214901070	1-2149	0107	EXCHANGER ASM	000000	000000
1214901110	1-2149	0111	CORE ASM	000000	000001
1214901122	1-2149	0112	HEAT EXCHANGER	000000	000000
1214901140	1-2149	0114	COOLER ASM.; INTER	000000	000000
1214901160	1-2149	0116	HEAT EXCH.	000000	000001
1214901170	1-2149	0117	COOLER ASM.; INTER	000000	000000
1214901250	1-2149	0125	COOLER ASM: INTER	000000	000001
1214901371	1-2149	0137	HEAT EXCHANGER	000000	000001
1214901410	1-2149	0141	EXCHANGER ASM; HEAT	000000	000002
1214901421	1-2149	0142	COOLER; CHARGE AIR	000000	000001
1214901470	1-2149	0147	HEAT EXCH	000000	000001
1214901520	1-2149	0152	EXCHANGER ASM; HEAT	000000	000001
1214901530	1-2149	0153	COOLER; CHARGE AIR	000000	000001
1214910190	1-2149	1019	CORE ASM.	000000	000000
1214910260	1-2149	1026	TANK; EXPANTION	000000	000000
1214910270	1-2149	1027	FILLER NECK	000000	000000
1214910280	1-2149	1028	TANK; EXPANTION	000000	000001
1214910290	1-2149	1029	EXCHANGER ASM; HEAT	000000	000000
1214910310	1-2149	1031	FILLER NECK	000000	000003
1214910320	1-2149	1032	FILLER; NECK ASM.	000000	000003
1214910321	1-2149	1032	FILLER; NECK ASM.	000000	000000
1214910590	1-2149	1059	FILLER;EXPANSION TANK	000000	000000
1214910660	1-2149	1066	CORE; HEAT EXCHANGER	000000	000001
1214930222	1-2149	3022	COVER; HEAT EXCHANGER, FR	000000	000000
1214930270	1-2149	3027	COVER; HEAT EXCHANGER REA	000000	000000
1214930280	1-2149	3028	COVER; EXHAUST MANIFOLD	000000	000000
1214930290	1-2149	3029	COVER; EXPANTION TANK	000000	000000
1214930310	1-2149	3031	COVER; INNER COOLER UPPER	000000	000000
1214930320	1-2149	3032	COVER; HEAT EXCHANGER FRO	000000	000000
1214930330	1-2149	3033	COVER; INTERCOOLER	000000	000000
1214930340	1-2149	3034	COVER; INTERCOOLER	000000	000001
1214930350	1-2149	3035	COVER; INTERCOOLER	000001	000001
1214930450	1-2149	3045	COVER:CASE HEAT EXCHANGER	000000	000000
1214930460	1-2149	3046	COVER; HEAT EXCHANGER	000000	000000
1214930461	1-2149	3046	COVER; HEAT EXCHANGER	000000	000001
1214930570	1-2149	3057	COVER	000001	000001
1214930590	1-2149	3059	COVER	000001	000000
1214930600	1-2149	3060	COVER; TANK	000000	000000
1214930620	1-2149	3062	COVER: INT COOL. FRT	000002	000000
1214930631	1-2149	3063	COVER: HEAT EXCG FRT	000000	000000
1214930640	1-2149	3064	COVER: INT. COOL RR	000002	000000
1214930670	1-2149	3067	COVER; INTER COOLER, FRON	000000	000000
1214930680	1-2149	3068	COVER; INTER COOLER, REAR	000000	000000
1214930700	1-2149	3070	COVER; INTER COOLER, FRON	000000	000001
1214930710	1-2149	3071	COVER; INTER COOLER, REAR	000000	000001
1214930720	1-2149	3072	COVER CASE:HEAT EXCHANGER	000000	000000

1214930740	1-2149	3074	COVER; HEAT EXCHANGER	000001	000000
1214931060	1-2149	3106	CASE; HEAT EXCHANGER	000000	000001
1214931070	1-2149	3107	COVER; HEAT EXCHANGER	000000	000002
1214931120	1-2149	3112	COVER; HEAT EXCHANGER	000000	000002
1214931130	1-2149	3113	COVER; HEAT EXCHANGER	000000	000001
1214931140	1-2149	3114	COVER; HEAT EXCHANGER	000000	000001
1214931150	1-2149	3115	COVER; CHARGE AIR COOLER	000000	000001
1214931160	1-2149	3116	COVER; CHARGE AIR COOLER	000000	000001
1214931180	1-2149	3118	COVER; HEAT EXCHANGER	000000	000001
1214931190	1-2149	3119	COVER; HEAT EXCHANGER	000000	000001
1214960060	1-2149	6006	BRACKET; INTER COOLER FIX	000000	000000
1214960080	1-2149	6008	BRACKET, INNER COOLER FIX	000000	000000
1214960090	1-2149	6009	BRACKET; TURBO	000000	000000
1214960100	1-2149	6010	BRACKET; TURBO	000000	000000
1214960110	1-2149	6011	STAY; TURBO	000000	000000
1214960290	1-2149	6029	BRACKET; CHARGE AIR COOLE	000000	000001
1214960300	1-2149	6030	BRACKET; CHARGE AIR COOLE	000000	000001
1214990020			HEAT EXCH CAP	000000	000000
1214990030			PACKING; CAP	000000	000000
1214990031	1-2149	9003	PACKING; CAP	000000	000000
1214990050	1-2149	9005	PACKING	000000	000000
1214990320	1-2149	9032	DUCT ASM; AIR UME120	000000	000000
1214990321	1-2149	9032	DUCT ASM; AIR UME120	000000	000000
1214990360	1-2149	9036	PACKING; COVER TO EXHAUST	000000	000000
1214990370	1-2149	9037	PACKING; EXP TANK/EXHAUST	000001	000001
1214990380	1-2149	9038	PACKING; EXHAUST MANIFOLD	000000	000003
1214990391	1-2149	9039	PACKING; COVER	000000	000000
1214990530	1-2149	9053	PACKING: HEAT EXC-EXHAUST	000000	000000
1214990570	1-2149	9057	PACKING: COVER	000001	000000
1214990610	1-2149	9061	PACKING	000006	000003
1214990630	1-2149	9063	PACKING: COVER	000002	000010
1214990650	1-2149	9065	PACKING; COVER TO EXHAUST	000000	000000
1214990690	1-2149	9069	PACKING: HEAT EXCH-EXHAUS	000000	000000
1214990740	1-2149	9074	GASKET;COVER,C	000000	000002
1214990750	1-2149	9075	BAR; ZINC,HEAT EXCHANGER	000000	000003
1214990760	1-2149	9076	BAR; ZINC	000012	000000
1214990770	1-2149	9077	CAP; ZINC,HEAT EXCHANGER	000000	000003
1214990800	1-2149	9080	GASKET; COVER, CHARGE AIR	000000	000005
1214990810	1-2149	9081	GSKT; COVER	000000	000000
1214990840	1-2149	9084	BRACKET; HEAT EXCHANGER, F	000000	000001
1214990850	1-2149	9085	GASKET; COVER,CHARGE AIR	000000	000003
1214990860	1-2149	9086	BRACKET; HEAT EXCHANGER, F	000000	000001
1215111080	1-2151	1108	GUARD ASM.; FAN	000000	000001
1215111140	1-2151	1114	GUIDE; FAN	000000	000000
1215111141	1-2151	1114	GUIDE; FAN	000000	000002
1215111150	1-2151	1115	GUIDE; FAN	000000	000010
1215111151	1-2151	1115	GUIDE; FAN	000000	000000

1215513880	1-2155	1388	GUIDE ASM FAN	000000	000000
1215514640	1-2155	1464	GUIDE; FAN	000000	000000
1215514641	1-2155	1464	GUIDE; FAN	000000	000003
1215514760	1-2155	1476	GUIDE; FAN	000000	000010
1215514761	1-2155	1476	GUIDE; FAN	000000	000000
1215514830	1-2155	1483	GUIDE;FAN	000000	000000
1215514850	1-2155	1485	GUIDE; FAN	000000	000005
1215514861	1-2155	1486	GUIDE; FAN	000000	000004
1215515430	1-2155	1543	GUIDE; FAN	000000	000000
1215515431	1-2155	1543	GUIDE; FAN	000000	000002
1215590710	1-2155	9071	TUBE; DISTANCE	000084	000000
1215591490	1-2155	9149	TUBE; DISTANCE;	000000	000000
1215591640	1-2155	9164	BRACKET;FAN GDE	000001	000004
1215591641	1-2155	9164	BRACKET;FAN GUI	000000	000000
1215592350	1-2155	9235	SPACER;GUIDE TUBE	000009	000001
1215593520	1-2155	9352	GUARD ASM FAN	000000	000000
1215594320	1-2155	9432	STAY ;FAN	000000	000000
1215594340	1-2155	9434	BRACKET; FAN GUIDE	000000	000000
1215594381	1-2155	9438	STAY; FAN	000000	000044
1215594382	1-2155	9438	STAY; FAN	000006	000000
1215594390	1-2155	9439	STAY; FAN	000000	000044
1215594400	1-2155	9440	BRACKET; FAN GUIDE	000009	000000
1215594440	1-2155	9444	STAY;FAN GUIDE	000003	000002
1215594450	1-2155	9445	BRACKET; FAN GUIDE	000000	000000
1215594451	1-2155	9445	BRACKET; FAN GUIDE	000002	000000
1215594500	1-2155	9450	STAY;FAN GUIDE	000000	000000
1215594510	1-2155	9451	BRACKET; FAN GUIDE	000000	000000
1215594600	1-2155	9460	STAY; FAN	000001	000005
1215594610	1-2155	9461	BRACKET; FAN GUIDE	000000	000000
1215594612	1-2155	9461	BRACKET; FAN GUIDE	000000	000004
1215594870	1-2155	9487	BRACKET; FAN GUIDE	000000	000003
1215594890	1-2155	9489	BRACKET; FAN GUIDE	000000	000000
1215594891	1-2155	9489	BRACKET; FAN GUIDE	000000	000007
1216500660			DRIVE ASM; FAN	000000	000000
1216500980	1-2165	0098	COUPLING;FAN	000000	000004
1216501390	1-2165	0139	COUPLING; FAN	000000	000000
1216501391	1-2165	0139	COUPLING; FAN	000000	000004
1216590060	1-2165	9006	ADAPTER, FAN TO	000000	000000
1216590061	1-2165	9006	ADAPTER; FAN TO	000000	000001
1217000621	1-2170	0062	COOLER ASM; OIL E120	000000	000000
1217000630	1-2170	0063	COOLER ASM; OIL	000000	000000
1217000631	1-2170	0063	COOLER ASM; OIL	000000	000000
1217000640	1-2170	0064	OIL COOLER ASM	000000	000000
1217000784	1-2170	0078	COOLER ASM; OIL E120	000000	000000
1217000841	1-2170	0084	COOLER ASM; OIL E120	000000	000000
1217000843	1-2170	0084	COOLER ASM; OIL E120	000000	000000
1217000890	1-2170	0089	COOLER ASM; OIL	000000	000000

1217000891	1-2170	0089	COOLER ASM; OIL	000000	000000
1217001260	1-2170	0126	COOLER ASM, ;OIL	000000	000000
1217001371	1-2170	0137	COOLER ASM; OIL	000000	000000
1217001424	1-2170	0142	COOLER ASM; OIL 6RB1	000000	000000
1217001425	1-2170	0142	COOLER ASM; OIL 6RB1	000000	000000
1217001426	1-2170	0142	COOLER ASM; OIL 6RB1	000000	000000
1217001441	1-2170	0144	COOLER ASM; OIL	000000	000000
1217001442	1-2170	0144	COOLER ASM; OIL	000000	000000
1217001481	1-2170	0148	COOLER ASM; OIL E120	000000	000000
1217001560	1-2170	0156	COOLER ASM; OIL E120	000000	000000
1217001563	1-2170	0156	COOLER ASM; OIL E120	000000	000000
1217001700	1-2170	0170	COOLER ASM; OIL	000000	000000
1217001701	1-2170	0170	COOLER ASM; OIL	000000	000000
1217001720	1-2170	0172	COOLER ASM; OIL	000000	000000
1217001721	1-2170	0172	COOLER ASM; OIL	000000	000000
1217001890	1-2170	0189	COOLER ASM; OIL	000000	000000
1217002061	1-2170	0206	COOLER ASM; OIL	000000	000000
1217002062	1-2170	0206	COOLER ASM; OIL	000000	000000
1217002220	1-2170	0222	COOLER ASM; OIL	000000	000000
1217002221	1-2170	0222	COOLER ASM; OIL	000000	000000
1217002222	1-2170	0222	COOLER ASM; OIL	000000	000000
1217002223	1-2170	0222	COOLER ASM; OIL	000000	000001
1217002250	1-2170	0225	COOLER ASM; OIL	000000	000000
1217002260	1-2170	0226	COOLER ASM; OIL	000000	000000
1217002261	1-2170	0226	COOLER ASM; OIL	000000	000000
1217002262	1-2170	0226	COOLER ASM; OIL	000000	000000
1217002263	1-2170	0226	COOLER ASM; OIL	000000	000000
1217002321	1-2170	0232	COOLER ASM; OIL	000000	000000
1217002322	1-2170	0232	COOLER ASM; OIL	000000	000000
1217002480	1-2170	0248	COOLER ASM; OIL	000000	000000
1217002481	1-2170	0248	COOLER ASM; OIL	000000	000000
1217002482	1-2170	0248	COOLER ASM; OIL	000000	000000
1217002490	1-2170	0249	COOLER ASM; OIL	000000	000000
1217002491	1-2170	0249	COOLER ASM; OIL	000000	000000
1217002492	1-2170	0249	COOLER ASM; OIL	000000	000004
1217002680	1-2170	0268	COOLER ASM; OIL	000000	000000
1217002752	1-2170	0275	COOLER ASM: OIL	000000	000001
1217002930	1-2170	0293	COOLER ASM;OIL	000000	000000
1217002980	1-2170	0298	COOLER ASM;OIL	000000	000000
1217002981	1-2170	0298	COOLER ASM;OIL	000000	000000
1217003251	1-2170	0325	COOLER ASM; OIL	000000	000002
1217003310	1-2170	0331	COOLER ASM; OIL	000000	000000
1217003311	1-2170	0331	COOLER ASM; OIL	000000	000000
1217003570	1-2170	0357	COOLER ASM; OIL	000000	000000
1217003840	1-2170	0384	SPACER; OIL FILTER	000000	000001
1217003860	1-2170	0386	SPACER; OIL FILTER	000000	000000
1217003861	1-2170	0386	SPACER; OIL FILTER	000000	000001

1217003890	1-2170	0389	SCREW; SPACER	000000	000003
1217003900	1-2170	0390	SCREW; SPACER	000000	000001
1217003930	1-2170	0393	SCREW; SPACER	000000	000002
1217003940			COOLER; OIL	000000	000001
1217210271	1-2172	1027	CASE; OIL COOLER	000000	000000
1217210300	1-2172	1030	COVER; OIL COOLER E120	000000	000000
1217210342	1-2172	1034	COVER; OIL COOLER E120	000000	000000
1217210351	1-2172	1035	COVER; OIL COOLER E120	000000	000001
1217210453	1-2172	1045	COVER; OIL COOLER E120	000000	000000
1217210454	1-2172	1045	COVER; OIL COOLER E120	000000	000001
1217210482	1-2172	1048	COVER; OIL COOLER	000000	000000
1217210980	1-2172	1098	BODY; CASE, OIL COOLER	000000	000000
1217210983	1-2172	1098	BODY; CASE, OIL COOLER	000000	000003
1217220080	1-2172	2008	COVER "B";COOLER	000000	000000
1217220090	1-2172	2009	COVER "A";COOLER	000000	000000
1217220200	1-2172	2020	COVER;COOLER	000000	000000
1217220400	1-2172	2040	COVER THERMOSTAT	000000	000002
1217220410	1-2172	2041	COVER; THERMOSTAT	000001	000000
1217220670	1-2172	2067	COVER; OIL COOLER DA640	000000	000000
1217230123	1-2172	3012	CORE ASM;COOLER	000001	000001
1217230133	1-2172	3013	CORE ASM; COOLER	000000	000000
1217230140	1-2172	3014	ELEMENT ASM; OIL COOLER	000000	000000
1217230171	1-2172	3017	ELEMENT ASM; OIL COOLER	000000	000000
1217230181	1-2172	3018	ELEMENT ASM; OIL COOLER	000000	000000
1217230192	1-2172	3019	FILTER PAPER ELEMENT; OIL	000000	000000
1217230251	1-2172	3025	ELEMENT ASM; OIL COOLER E	000000	000004
1217230290	1-2172	3029	ELEMENT;O/COOL	000000	000000
1217230291	1-2172	3029	ELEMENT;O/COOL	000000	000002
1217230350	1-2172	3035	ELEMENT ASM; OIL COOLER	000000	000000
1217230380	1-2172	3038	CORE ASM; OIL COOLER	000000	000000
1217230390	1-2172	3039	CORE ASM;COOLER	000000	000005
1217230400	1-2172	3040	CORE ASM; OIL COOLER	000001	000000
1217230410	1-2172	3041	ELEMENT ASM; OIL COOLER E	000000	000000
1217230540	1-2172	3054	CORE ASM; OIL COOLER	000000	000005
1217230610	1-2172	3061	CORE ASM; OIL COOLER	000000	000001
1217230620	1-2172	3062	CORE ASM;OIL COOLER	000000	000003
1217230630	1-2172	3063	CORE ASM;OIL COOLER	000000	000001
1217230650	1-2172	3065	CORE ASM; OIL COOLER	000000	000005
1217230660	1-2172	3066	CORE ASM; OIL COOLER	000000	000006
1217260080	1-2172	6008	PIPE; OIL, INL	000000	000000
1217260150	1-2172	6015	CONNECTOR; BYPASS	000000	000000
1217260301	1-2172	6030	PIPE; OIL, INL	000000	000000
1217260440	1-2172	6044	CONNECTOR; WATER	000000	000000
1217260532	1-2172	6053	JOINT ; THERMOSTAT	000002	000001
1217290070	1-2172	9007	PACKING	000000	000000
1217290152	1-2172	9015	PACKING	000000	000000
1217290162	1-2172	9016	PACKING	000000	000000

1217290281	1-2172	9028	PACKING	000000	000000
1217290351	1-2172	9035	PLATE; BAFFLE E120	000000	000000
1217290370	1-2172	9037	COLLAR DA640	000000	000000
1217290380	1-2172	9038	COLLAR DA640	000000	000000
1217290420	1-2172	9042	BOLT; CAP	000000	000000
1217290421	1-2172	9042	BOLT; CAP	000000	000000
1217290430	1-2172	9043	GASKET,OIL COOL	000033	000063
1217290550	1-2172	9055	PACKING	000000	000002
1217290560	1-2172	9056	PACKING;COOLER	000000	000000
1217290580	1-2172	9058	PACKING	000005	000000
1217290590	1-2172	9059	PACKING	000000	000000
1217290610	1-2172	9061	PACKING	000000	000001
1217290650	1-2172	9065	PACKING E120	000000	000001
1217290710	1-2172	9071	PLATE; BAFFLE E120	000000	000001
1217290730	1-2172	9073	PLATE; BAFFLE, OIL COOLER	000000	000001
1217290740	1-2172	9074	NUT;RBND,HSG TO CASE	000000	000000
1217290750	1-2172	9075	WASHER;PL.TRANS TO PIN	000000	000000
1217290760	1-2172	9076	GASKET;O-RING	000000	000047
1217290770	1-2172	9077	GASKET;	000000	000048
1217290854	1-2172	9085	SUPPORT; THERMOSTAT	000000	000000
1217290861	1-2172	9086	PLATE; BAFFLE, OIL COOLER	000000	000000
1217290931	1-2172	9093	GASKET; ELEMENT TO BODY	000000	000001
1217290941	1-2172	9094	SUPPORT; THERMOSTAT	000000	000007
1217290980	1-2172	9098	GASKET;	000000	000000
1217291070	1-2172	9107	ADAPTER ASM; COOLER	000000	000001
1217291080	1-2172	9108	ADAPTER; OIL COOLER	000000	000000
1217291170	1-2172	9117	GASKET; CORE TO BODY	000000	000083
1217291180	1-2172	9118	PLUG;THERMOSTAT OIL COOLE	000000	000000
1217400020	1-2174	0002	VALVE ASM; COOLER	000000	000000
1217430140	1-2174	3014	ELEMENT: COOLER	000001	000000
1217650170	1-2176	5017	BRACKET; OIL COOLER	000000	000000
1217650180	1-2176	5018	BRACKET; OIL COOLER	000000	000000
1217700040	1-2177	0004	THERMOSTAT;OIL COOLER	000000	000479
1217700100	1-2177	0010	THERMOSTAT; OIL COOLER	000002	000000
1217790010	1-2177	9001	RING; SEAL, THERMO VLV	000000	000002
1221150680	1-2211	5068	FLANGE; EXH. PIPE	000000	000000
1221150681	1-2211	5068	FLANGE; EXH. PIPE	000000	000000
1221160090	1-2211	6009	GSKT; FLANGE (COLLAR)	000001	000016
1221160300	1-2211	6030	GASKET; EXH PIPE	000000	000004
1221213200	1-2212	1320	PIPE; FLEX EXHAUST	000000	000000
1221218140	1-2212	1814	PIPE; FLEXIBLE	000000	000000
1221220640	1-2212	2064	PIPE: FLEX FAN	000000	000000
1221222410	1-2212	2241	PIPE ASM EXH FLEX	000000	000000
122122374T			PIPE ASM: FLEX EXH.	000000	000000
1221223741	1-2212	2374	PIPE ASM: FLEX EXH.	000000	000000
1221231043			PIPE; EXH	000000	000001
1221312792	1-2213	1279	BRACKET; ADAPTER	000000	000002

1221313021	1-2213	1302	BRACKET; ADAPTOR EXHAUST	000000	000000
1221315160	1-2213	1516	BRACKER; ADAPTER EXHAUST	000000	000000
1221330580	1-2213	3058	CLAMP; EXHAUST PIPE	000000	000000
1221330960	1-2213	3096	CLAMP; EXHAUST	000000	000000
1221331060	1-2213	3106	BRACKET EXH PIP	000000	000006
1221331780	1-2213	3178	CLAMP; EXH. PIPE	000000	000000
1221331781	1-2213	3178	CLAMP; EXH. PIPE	000000	000000
1221401211	1-2214	0121	SILENCER;EXH	000000	000000
1221402961	1-2214	0296	SILENCER ASM.; EXHAUST	000000	000000
1221404840	1-2214	0484	SILENCER ASM EXHAUST	000000	000001
1221404955	1-2214	0495	SILENCER ASM; EXHAUST	000000	000000
1221404956	1-2214	0495	SILENCER ASM; EXHAUST	000000	000000
1221405351	1-2214	0535	MUFFLER	000000	000000
1221405473	1-2214	0547	SILENCER; EXH	000000	000000
1221405474	1-2214	0547	SILENCER;EXH	000000	000000
1221405570	1-2214	0557	SILENCER;EXH.	000000	000000
1221405571	1-2214	0557	SILENCER;EXH	000000	000000
1221405572	1-2214	0557	SILENCER;EXH	000000	000000
1221405610	1-2214	0561	SILENCER ASM.	000000	000000
1221405613	1-2214	0561	SILENCER ASM.	000000	000001
1221405800	1-2214	0580	SILENCER;EXH	000000	000001
1221405940	1-2214	0594	SILENCER ASM.; EXHAUST	000000	000000
1221405941	1-2214	0594	SILENCER ASM.; EXHAUST	000000	000002
1221406072	1-2214	0607	EXHAUST SILENCER ASM	000000	000000
1221406073	1-2214	0607	EXHAUST SILENCER ASM	000000	000001
1221406541	1-2214	0654	SILENCER;EXH	000000	000000
1221406560	1-2214	0656	SILENCER;EXH	000000	000000
1221406870	1-2214	0687	SILENCER; EXHAUST	000000	000000
1221406871	1-2214	0687	SILENCER; EXHAUST	000004	000006
1221406920	1-2214	0692	SILENCER; EXH	000000	000000
1221409782	1-2214	0978	SILENCER ASM;EXH	000000	000001
1221514230	1-2215	1423	BRACKET; EXH. SILENCER	000000	000000
1221514240	1-2215	1424	BRACKET; EXH. SILENCER	000000	000000
1221514600	1-2215	1460	BRACKET; SILENCER	000000	000000
1221514601	1-2215	1460	BRACKET; SILENCER	000000	000000
1221514630	1-2215	1463	BRACKET; EXH. SILENCER	000000	000000
1221514640	1-2215	1464	BRACKET; EXH. SILENCER	000000	000000
1221514660	1-2215	1466	BRKT;EXH SILENCER	000000	000001
1221514670	1-2215	1467	BRACKET; HEAD.-BRKT.	000000	000000
1221514672	1-2215	1467	BRACKET; HEAD.-BRKT.	000000	000000
1221514684	1-2215	1468	BRKT;HEAD-BRKT	000000	000000
1221514700	1-2215	1470	BRACKET; EXH. SILENCER	000000	000000
1221514710	1-2215	1471	STAY; HEAD-STAY 6SA1	000000	000000
1221514720	1-2215	1472	STAY; STAY-BRKT 6SA1	000000	000000
1221514730	1-2215	1473	STAY; HEAD-BRKT.	000000	000000
1221515250	1-2215	1525	BRACKET; HEAD.-BRKT.	000000	000000
1221515251	1-2215	1525	BRACKET; HEAD.-BRKT.	000000	000000

1221515470	1-2215	1547	BRACKET; EXH. SILENCER	000000	000000
1221515600	1-2215	1560	BRACKET; EXH SILENCER	000000	000000
1221515610	1-2215	1561	BRACKET; EXH SILENCER	000000	000000
1221515620	1-2215	1562	BRACKET;EXH SILENCER	000000	000002
1221515630	1-2215	1563	BRACKET;EXH SILENCE	000000	000002
1221515640	1-2215	1564	STAY; HEAD-BRACKET	000000	000000
1221517001	1-2215	1700	BRACKET;HEAD-BRKT.	000000	000000
1221517140	1-2215	1714	STAY;SILENCER BRKT	000000	000000
1221517141	1-2215	1714	STAY;SILENCER BRKT	000000	000000
1221517390	1-2215	1739	STAY; SILENCER BRKT	000000	000000
1221520860	1-2215	2086	BRACKET; EXH SILENCER	000002	000000
1221591200	1-2215	9120	BAND;SILENCER FIX	000000	000001
1221801661	1-2218	0166	VALVE ASM; EXH	000000	000000
1221801662	1-2218	0166	VALVE ASM; EXH	000000	000000
1221802242	1-2218	0224	VALVE;EXH,BRK	000000	000000
1221802243	1-2218	0224	VALVE;EXH,BRK	000000	000001
1221802341	1-2218	0234	VALVE ASM	000000	000000
1221802342	1-2218	0234	VALVE ASM	000000	000000
1221802403	1-2218	0240	VALVE ASM.; EXH. (DOUKON)	000000	000007
1221810890	1-2218	1089	VALVE;EXH,BRK	000000	000000
1221890160	1-2218	9016	SEAL;DUST,CONT	000000	000021
1221903000	1-2219	0300	CONT,CYL ASM	000000	000000
1221960280	1-2219	6028	BRACKET; AIR PIPE	000000	000000
1221990160	1-2219	9016	SHAFT	000000	000000
1221990180	1-2219	9018	SPRING	000000	000000
1224190080	1-2241	9008	SCREW;SEMS	000000	000000
1224350010	1-2243	5001	STRAINER	000003	000001
1224400130			CAP; INLET	000000	000000
1224400140			CAP; DRAIN	000000	000000
1224400220	1-2244	0022	CAP;RESERVE TAN	000000	000000
1224400221	1-2244	0022	CAP;RESERVE TAN	000000	000000
1224400271	1-2244	0027	CAP; FUEL TANK 3KC1	000000	000000
1224400280			CAP ASM; FILTER	000000	000003
1224400390	1-2244	0039	CAP;SURGE TANK	000000	000022
1224400450	1-2244	0045	CAP; FUEL TANK 3KC1	000000	000001
1225180170	1-2251	8017	BRKT,FUEL TANK	000000	000000
1225180360	1-2251	8036	BRACKET; FUEL PIPE	000000	000000
1225501630			BAND ASM	000000	000000
1225590260	1-2255	9026	TUBE;DIST FAN GUIDE	000000	000041
1232100121	1-2321	0012	CABLE	000000	000000
1232100131	1-2321	0013	CABLE	000000	000000
1232100141	1-2321	0014	CABLE; CONTROL	000000	000000
1232102860	1-2321	0286	BUTTON ASM.	000000	000000
1232105131	1-2321	0513	CABLE-FUEL	000000	000000
1232105831	1-2321	0583	CABLE; FUEL	000000	000000
1232105840	1-2321	0584	CABLE; ENG STOP	000000	000000
1232105890	1-2321	0589	CABLE; ENG. CONTROL L=200	000000	000000

1232105970	1-2321	0597	CABLE; ENG. CONTROL L=150	000000	000000
1232105980	1-2321	0598	CABLE ASM.; ENG. CONTROL	000000	000002
1232106811	1-2321	0681	BUTTON ASM; ENG. STOP	000000	000000
1232106861	1-2321	0686	CABLE; ASM	000000	000000
1232107180	1-2321	0718	CABLE:FUEL CUT	000000	000000
1232107430	1-2321	0743	CABLE ASM; STOP	000005	000000
1232107670	1-2321	0767	BUTTON ASM; ENG. CONTROL	000001	000000
1232107870	1-2321	0787	ENGINE CONTROL	000000	000000
1232107871	1-2321	0787	ENGINE CONTROL	000000	000000
1232108000			CABLE ASM	000000	000000
1232108012			CABLE; ENG CONT	000000	000012
1232108520	1-2321	0852	CABLE; ASM	000000	000001
1232108570	1-2321	0857	CABLE; ENG. STOP	000000	000000
1232109670	1-2321	0967	CABLE ASM; STOPPER	000000	000000
1232109680	1-2321	0968	CABLE ASM; STOPPER	000000	000000
1232190052	1-2321	9005	CLIP; CABLE END	000000	000000
1232190540	1-2321	9054	BRACKET;CLUTCH CONTROL	000000	000000
1232190610	1-2321	9061	BRACKET;VALVE CONTROL	000000	000000
1232190890	1-2321	9089	EYE; END	000000	000000
1232190900	1-2321	9090	PLATE; SET	000000	000000
1232190901	1-2321	9090	PLATE; SET	000000	000000
1232303730	1-2323	0373	CABLE;ENG STOP	000001	000000
1233000281	1-2330	0028	ENGINE CONTROL	000000	000000
1233000783	1-2330	0078	CONTROL,ENG.	000000	000000
1233001840	1-2330	0184	CONTROL ASM ENG	000000	000000
1233002220	1-2330	0222	CONTROL ASM; ENG.	000000	000000
1233002480	1-2330	0248	LEVER ASM.; ENGINE STOP	000000	000000
1233002870	1-2330	0287	LEVER ASM.	000000	000000
1233003180	1-2330	0318	CONTROL ASM.; ENGINE	000000	000000
1233102260			ENG LINK	000000	000000
1233111130			LEVER,ENG.CONT	000000	000000
1233111590	1-2331	1159	LEVER	000000	000000
1233111930	1-2331	1193	LEVER ASM.;W/BUSH ENG. CO	000000	000000
1233112320	1-2331	1232	LEVER ASM.;	000000	000000
1233112341	1-2331	1234	LEVER; ENGINE STOP	000000	000000
1233112410	1-2331	1241	LEVER; ENGINE STOP 6BD1	000000	000000
1233112680	1-2331	1268	LVR ASM;ENG STO	000000	000000
1233112740	1-2331	1274	LEVER	000001	000000
1233112790	1-2331	1279	LEVER; ENGINE STOP 6BD1	000000	000000
1233112871	1-2331	1287	LEVER; ENGINE STOP 6BG1/C	000000	000000
1233113260	1-2331	1326	LEVER; ENG. CONTROL	000000	000000
1233113331	1-2331	1333	LEVER: RELAY, ENG CONT	000000	000005
1233140960	1-2331	4096	LINK ASM	000000	000000
1233141190	1-2331	4119	ROD; LINK	000000	000000
1233141200	1-2331	4120	ROD; LINK,ENG.STOP	000001	000000
1233141220	1-2331	4122	LINK; ROD, ENG. CONT.	000000	000004
1233141280	1-2331	4128	ROD ASM 6BD1	000000	000000

1233141290	1-2331	4129	ROD; LINK 6BG1/C240	000004	000000
1233141520	1-2331	4152	ROD ASM.; LINK	000001	000000
1233141530	1-2331	4153	ROD; LINK	000001	000001
1233141550	1-2331	4155	ROD;LINK	000002	000000
1233141750	1-2331	4175	LINK ASM.; ENGINE CO	000000	000000
1233190450	1-2331	9045	BRACKET; FUEL C	000000	000000
1233310130	1-2333	1013	SHAFT;ENG STOP LEVER	000000	000000
1233310330	1-2333	1033	SHAFT;	000000	000000
1233310510	1-2333	1051	SHAFT	000000	000000
1233311211	1-2333	1121	SHAFT: LEVER SOLENOID	000000	000002
1233350580	1-2333	5058	BRACKET; SPR EYE	000000	000000
1233350930	1-2333	5093	BRACKET ASM.	000000	000000
1233351070	1-2333	5107	BRKT;E/CONTROL	000000	000000
1233351821	1-2333	5182	BRACKET; ENGINE CONTROL	000000	000000
1233351881	1-2333	5188	BRACKET; SOLENOID	000002	000000
1233351890	1-2333	5189	BRACKET; ENGINE 6BD1	000000	000000
1233351891	1-2333	5189	BRACKET; ENGINE 6BD1	000000	000000
1233352360	1-2333	5236	BRACKET; ENG. CONTROL	000000	000000
1233352411	1-2333	5241	BRACKET; ENGINE	000000	000000
1233352430	1-2333	5243	BRACKET	000000	000000
1233352431	1-2333	5243	BRACKET	000000	000000
1233352530	1-2333	5253	BRACKET; ENG CONTROL	000000	000000
1233352532	1-2333	5253	BRACKET; ENG CONTROL	000000	000000
1233352660	1-2333	5266	BRKT;FUEL OUT CONT (1.6)	000000	000000
1233352700	1-2333	5270	BRACKET; ENG. CONTROL	000000	000000
1233352720	1-2333	5272	BRACKET; ENGINE CONTROL 6	000000	000000
1233352721	1-2333	5272	BRACKET; ENGINE CONTROL 6	000004	000000
1233352730	1-2333	5273	BRACKET;ENG,CON	000000	000000
1233352731	1-2333	5273	BRACKET;ENG CON	000000	000000
1233352880	1-2333	5288	BRACKET; FUEL CUT, ENG. C	000000	000000
1233353091	1-2333	5309	BRACKET; ENG. STOPPER	000000	000001
1233353130	1-2333	5313	BRACKET; ENG. STOPPER CAB	000000	000000
1233353150	1-2333	5315	BRACKET; FUEL	000000	000000
1233353170	1-2333	5317	BRACKET; ENGINE CONTROL	000000	000000
1233353180	1-2333	5318	BRACKET; ENGINE CONT.	000000	000000
1233353190	1-2333	5319	BRACKET; ENG CONTROL	000000	000000
1233353230	1-2333	5323	BRACKET; ENG. CONTROL	000000	000000
1233353231	1-2333	5323	BRACKET; ENG. CONTROL	000000	000000
1233353440	1-2333	5344	BRACKET;STOP,BRKT-OIL PAN	000000	000000
1233353580	1-2333	5358	BRACKET; FUEL	000000	000000
1233353700	1-2333	5370	BRACKET;ENG	000000	000005
1233353731	1-2333	5373	BRACKET; ENGINE CONTROL	000000	000000
1233353931	1-2333	5393	BRACKET; ENG. CONTROL	000000	000000
1233354000	1-2333	5400	BRACKET; ENG. STOP	000000	000000
1233354120	1-2333	5412	BRACKET	000000	000000
1233354130	1-2333	5413	BRACKET	000000	000000
1233354170	1-2333	5417	BRKT FUEL CUT	000000	000000

1233354250	1-2333	5425	BRACKET; ENG. CONTROL	000000	000000
1233354401	1-2333	5440	BRACKET; SOLENOID VALVE	000000	000000
1233354730	1-2333	5473	BRACKET; ENG. CONTROL	000000	000000
1233354770	1-2333	5477	BRACKET;ENGINE STOPPER	000000	000000
1233354910	1-2333	5491	BRACKET; STOPPER CABLE	000000	000000
1233355011	1-2333	5501	BRACKET	000000	000001
1233355020	1-2333	5502	BRACKET; COUPLING COVER	000000	000001
1233355291	1-2333	5529	BRACKET; FAN	000000	000000
1233355320	1-2333	5532	BRACKET;ENG CONT WIRE	000000	000001
1233355381	1-2333	5538	BRACKET; FAN	000000	000034
1233355391	1-2333	5539	BRACKET; ENG CONT	000000	000000
1233356100	1-2333	5610	BRACKET; BOOST SENSOR	000004	000000
1233356150	1-2333	5615	BRACKET; ENG CONT LEVER	000000	000001
1234512345			TEST1	000000	000000
1262300290	1-2623	0029	OIL DRAIN PUMP	000000	000000
1262300440	1-2623	0044	SEA WATER PUMP	000000	000001
1262300451	1-2623	0045	PUMP ASM; SEA	000000	000000
1262300460	1-2623	0046	RAW WATER PUMP	000000	000000
1262300481	1-2623	0048	SEA PUMP	000000	000000
1262300490	1-2623	0049	SEA WATER PUMP	000000	000003
1262300520	1-2623	0052	SEA PUMP	000000	000001
1262300530	1-2623	0053	PUMP ASM; SEA WATER	000000	000000
1262310260	1-2623	1026	PLATE	000000	000000
1262310270	1-2623	1027	PLATE	000003	000002
1262310280	1-2623	1028	HOLDER; WATER PUMP, SEA	000001	000002
1262310351	1-2623	1035	HOLDER	000000	000000
1262310360	1-2623	1036	CASING	000000	000000
1262310510	1-2623	1051	CASE; SEA WATER PUMP	000000	000001
1262310520	1-2623	1052	PLATE; SEA WATER PUMP	000000	000001
1262310530	1-2623	1053	HOUSING; SEAL UNIT	000000	000003
1262320050	1-2623	2005	COVER	000000	000001
1262320100	1-2623	2010	COVER	000000	000000
1262320170	1-2623	2017	COVER; SEA WATER PUMP	000000	000001
1262330080	1-2623	3008	PACKING	000004	000002
1262330090	1-2623	3009	PACKING	000004	000000
1262330110	1-2623	3011	PACKING	000008	000000
1262330170	1-2623	3017	SEA WATER FILTER	000000	000005
1262330180	1-2623	3018	FILTER; SEA WATER PUMP OU	000000	000001
1262350051	1-2623	5005	SHAFT	000000	000002
1262350191	1-2623	5019	SHAFT	000000	000000
1262350260	1-2623	5026	SHAFT; SEA WATER PUMP	000000	000001
1262360050	1-2623	6005	CAM; SEA WATER	000000	000001
1262360061	1-2623	6006	IMPELLER; W/PUMP	000000	000000
1262360100	1-2623	6010	CAM; SEA WATER PUMP	000000	000000
1262360180	1-2623	6018	IMPELLER; SEA WATER	000000	000000
1262360200	1-2623	6020	IMPELLER; SEA WATER PUMP	000000	000000
1262360220	1-2623	6022	RAW WATER PUMP IMPELLER	000000	000000

1262360230	1-2623	6023	IMPELLER	000001	000000
1262360270	1-2623	6027	IMPELLER; SEA WATER PUMP	000000	000000
1262360300	1-2623	6030	IMPELLER	000000	000002
1262360320	1-2623	6032	IMPELLER; SEA WATER PUMP	000000	000000
1262390020	1-2623	9002	SEAL; SEA WATER PUMP	000002	000000
1262390380	1-2623	9038	BRACKET; WATER PUMP UME12	000000	000000
1262390790	1-2623	9079	BUSHING	000001	000000
1262390800	1-2623	9080	SEAL WATER	000000	000000
1262390940	1-2623	9094	SEAL: OIL(16)	000001	000000
1262391030	1-2623	9103	BEARING	000001	000002
1262391100	1-2623	9110	SEAL UNIT; SEA WATER PUMP	000000	000003
1262391120	1-2623	9112	SEAL; OIL	000000	000002
1262391160	1-2623	9116	BOLT; SEA WATER PUMP	000000	000008
1262410180	1-2624	1018	PULLEY; WATER PUMP, SEA	000000	000000
1262410190	1-2624	1019	PULLEY; WATER PUMP, SEA	000000	000000
1262410200	1-2624	1020	PULLEY	000000	000001
1262490110	1-2624	9011	COVER; BELT	000000	000000
1262610660	1-2626	1066	PIPE; SEA WATER	000000	000000
1262610740	1-2626	1074	PIPE ASM; MARINE GEAR	000000	000000
1262611130	1-2626	1113	PIPE; 6BD1 MARINE	000000	000000
1262611250	1-2626	1125	PIPE; SEA WATER UME120	000000	000000
1262611320	1-2626	1132	PIPE	000000	000000
1262611350			PIPE ASM; WATER	000000	000001
1262611420			PIPE;SEA WATER,HEAT EXCHA	000001	000000
1262611480	1-2626	1148	PIPE ASM.;SEA WATER,PUMP	000000	000000
1262611500	1-2626	1150	PIPE;SEA WATER,MARINE GEA	000000	000000
1262611511	1-2626	1151	PIPE;SEA WATER,MARINE GEA	000000	000000
1262611540	1-2626	1154	PIPE;SEA WATER,MARINE GEA	000000	000000
1262611550	1-2626	1155	PIPE;SEA WATER,MARINE GEA	000000	000000
1262611560	1-2626	1156	PIPE; SEA WATER PUMP INLE	000000	000000
1262611570	1-2626	1157	JOINT;SEA WATER PUMP TO H	000000	000000
1262611580	1-2626	1158	PIPE; SEA WATER PUMP TO O	000000	000000
1262611590	1-2626	1159	PIPE; SEA WATER PUMP/HEAT	000000	000000
1262611620	1-2626	1162	PIPE;SEA WATER,INTOR COOL	000000	000000
1262611760	1-2626	1176	WATER TUBE & FLANGE ASM	000000	000000
1262611810	1-2626	1181	PIPE ASM:SEAWTR HEAT EX O	000000	000000
1262612361	1-2626	1236	PIPE: SEA WATER	000000	000001
1262612370	1-2626	1237	PIPE: SEA WTR HEAT EXC	000000	000001
1262612380	1-2626	1238	PIPE; SEA WATER	000000	000000
1262612390	1-2626	1239	PIPE ASM: SEA WATER	000000	000000
1262612540			PIPE ASM; SEA W	000000	000001
1262612560			PIPE; SEA WATER	000000	000001
1262612570			PIPE; SEA WATER	000001	000000
1262612580	1-2626	1258	PIPE; SEA WATER, H/EXCH.	000000	000000
1262612650	1-2626	1265	PIPE ASM; SEA WATER	000000	000000
1262612940	1-2626	1294	DUCT; WATER	000000	000000
1262612980	1-2626	1298	PIPE; SEA WATER PUMP OUT	000000	000001

1262613010	1-2626	1301	PIPE;SEA WATER,CHARGE AIR	000000	000001
1262613030	1-2626	1303	PIPE; CHARGER AIR COOLER	000000	000001
1262613040	1-2626	1304	PIPE ASM; SEA WATER,MARIN	000000	000001
1262613070	1-2626	1307	SEA PIPE	000000	000001
1262613080	1-2626	1308	SEA PIPE	000000	000001
1262613090	1-2626	1309	SEA PIPE	000000	000001
1262613100	1-2626	1310	PIPE; SEA WATER, OIL COOL	000000	000001
1262613220	1-2626	1322	DUCT; SEA WATER	000000	000001
1262613230	1-2626	1323	PIPE; SEA WATER PUMP,OUT	000000	000001
1262613240	1-2626	1324	PIPE; SEA WATER,CHARGE AI	000000	000001
1262613250	1-2626	1325	PIPE; SEA WATER,CHARGE AI	000000	000001
1262613260	1-2626	1326	PIPE; SEA WATER	000000	000001
1262613300	1-2626	1330	PIPE; SEA WATER,CHARGE AI	000000	000001
1262613320	1-2626	1332	PIPE; WATER,HEAT EXCHANGE	000000	000001
1262690360	1-2626	9036	DUCT E WATER	000000	000000
1262690620	1-2626	9062	STAY; WATER PIPE	000000	000002
1262690660	1-2626	9066	STAY; SEA WATER PIPE	000000	000003
1262990640	1-2629	9064	CONNECTOR	000000	000000
1262990700	1-2629	9070	BRACKET; OIL DRAIN	000000	000000
1262990890	1-2629	9089	PIPE; OIL, OIL PAN DRAIN	000000	000001
1262990920	1-2629	9092	PIPE ASM;OIL,OIL DRAIN	000000	000001
1262990950	1-2629	9095	PIPE;OIL,OIL PAN DRAIN	000000	000001
1263390010	1-2633	9001	COVER; CLUTCH	000000	000000
1263390030	1-2633	9003	COLVER; CLUTCH	000000	000000
1263440020	1-2634	4002	PIECE; DIST.	000000	000000
1263440030	1-2634	4003	SHIM; FOOT	000000	000000
1263460020	1-2634	6002	CLIP; FUEL PIPE	000000	000000
1263460190	1-2634	6019	CLIP;FUEL PIPE	000000	000000
1263790010	1-2637	9001	RUBBER;CUSHION	000005	000000
1311100440	1-3111	0044	HOUSING;CLUTCH	000000	000000
1311100852	1-3111	0085	HOUSING;CLUTCH	000001	000001
1311101220	1-3111	0122	HOUSING CLUTCH W/BUSH	000000	000000
1311101270	1-3111	0127	POWER DRIVE ASM	000000	000000
1311101271	1-3111	0127	POWER DRIVE ASM	000000	000000
1311102070			HOUSING;CLU	000000	000001
1311110210			HOUSING CLUTCH W/BUSH	000000	000000
1311110340	1-3111	1034	HOUSING CLUTCH; W/BUSH	000000	000000
1311110440	1-3111	1044	HOUSING; CLU W/BUSH	000000	000000
1311110900	1-3111	1090	SPACER;HOUSING	000000	000000
1311190011	1-3111	9001	CUP SEALING	000000	000000
1311190020	1-3111	9002	CUP SEALING	000000	000000
1311290400	1-3112	9040	PIN; LEVER	000000	000000
1311310030	1-3113	1003	COVER CHECK HOLE LEVER	000000	000000
1311310070	1-3113	1007	COVER CHECK HOLE	000000	000000
1311310170	1-3113	1017	COVER; CHECK HOLE	000000	000000
1311310190	1-3113	1019	COVER;CHECK	000000	000000
1311310270	1-3113	1027	COVER;CHECK HOLE UPR	000000	000000

1311310300	1-3113	1030	COVER CHECK HOLE	000000	000000
1311310410	1-3113	1041	COVER; CHECK HOLE,UPR	000000	000001
1311390080	1-3113	9008	PACKING COVER	000000	000000
1312001770	1-3120	0177	PLATE ASM.; PRESSURE	000000	000000
1312100080	1-3121	0008	COVER CLUTCH	000000	000000
1312100160	1-3121	0016	COVER SUB ASM;C	000000	000000
1312110050	1-3121	1005	COVER CLUTCH	000000	000000
1312110111	1-3121	1011	COVER CLUTCH	000000	000000
1312110180	1-3121	1018	COVER; CLU	000000	000000
1312140120	1-3121	4012	SPRING PRESS CLUTCH	000000	000000
1312190090	1-3121	9009	SEAT SPRING	000000	000000
1312190100	1-3121	9010	SEAT SPRING	000000	000000
1312190110	1-3121	9011	CAP SUPPORT	000000	000000
1312190120	1-3121	9012	SEAT;SPR.	000000	000000
1312190130	1-3121	9013	SEAT;SPR.	000000	000000
1312190320	1-3121	9032	SEAT SPRING	000000	000000
1312190330	1-3121	9033	SEAT SPRING	000000	000000
1312190340	1-3121	9034	ADAPTER ASM.; FLYWHEEL	000000	000000
1312190350	1-3121	9035	ADAPTER; FLYWHEEL	000000	000000
1312190360	1-3121	9036	B O L T	000000	000000
1312190370	1-3121	9037	WASHER; PL.	000000	000000
1312190380	1-3121	9038	ADAPTER ASM.; FLYWHEEL	000000	000000
1312190390	1-3121	9039	B O L T	000000	000000
1312201150	1-3122	0115	PLATE ASM,PRESS	000000	000000
1312201280	1-3122	0128	PLATE ASM; PRES	000000	000000
1312201500	1-3122	0150	PLATE ASM PRESSURE 17"	000000	000000
1312201561	1-3122	0156	CLUTCH COVER ASM.; (14")	000000	000000
1312201570	1-3122	0157	PLATE ASM;	000000	000000
1312201572	1-3122	0157	PLATE ASM;	000000	000000
1312201573	1-3122	0157	PLATE ASM;	000000	000002
1312201580	1-3122	0158	PLATE ASM;PRESS	000000	000000
1312201581	1-3122	0158	PLATE ASM	000000	000000
1312201681	1-3122	0168	CLUTCH COVER ASM; 14"	000000	000000
1312201730	1-3122	0173	PLATE ASM; PRES	000000	000000
1312201731	1-3122	0173	PLATE ASM; PRES	000000	000000
1312201732	1-3122	0173	PLATE ASM; PRES	000000	000000
1312201741	1-3122	0174	PLATE ASM,PRESS	000000	000000
1312201760	1-3122	0176	PLATE ASM;PRESS	000000	000000
1312201761	1-3122	0176	PLATE ASM;PRESS	000000	000000
1312201770	1-3122	0177	PLATE ASM.; PRESSURE	000000	000003
1312201981	1-3122	0198	PLATE ASM PRESSURE	000000	000000
1312202230	1-3122	0223	PLATE ASM PRESSURE	000000	000000
1312202430	1-3122	0243	PLATE ASM; PRES	000000	000000
1312202540			PRESSURE PLATE;	000000	000003
1312203552	1-3122	0355	PLATE ASM;PRESSURE,CLU	000000	000000
1312203560	1-3122	0356	PLATE;ASM	000000	000000
1312203561	1-3122	0356	PLATE;ASM	000000	000000

1312203562	1-3122	0356	PLATE;ASM	000000	000000
1312203572	1-3122	0357	PLATE ASM; PRESSURE, CLU	000000	000000
1312203642			PLATE ASM; PRES	000000	000000
1312203710	1-3122	0371	PLATE ASM; PRES	000000	000000
1312203711	1-3122	0371	PLATE ASM; PRES	000000	000000
1312203712	1-3122	0371	PLATE ASM; PRES	000000	000000
1312203742			PLATE ASM; PRES	000000	000000
1312204190			PLATE ASM; PRESSURE, CLU S	000000	000009
1312210240	1-3122	1024	PLATE PRESSURE	000000	000000
1312210290	1-3122	1029	PLATE PRESSURE; WO/STUD	000000	000000
1312210300	1-3122	1030	PLATE PRESSURE WO/STUD	000000	000000
1312210410	1-3122	1041	PLATE PRESSURE W/ STUD	000000	000000
1312210430	1-3122	1043	PLATE;PRE	000000	000001
1312210440	1-3122	1044	PLATE; PRE	000000	000001
1312210790	1-3122	1079	PLATE PRESSURE WO/ STUD	000000	000000
1312290010	1-3122	9001	PLATE; STRAP, C	000000	000000
1312290050	1-3122	9005	PLATE STRAP	000000	000000
1312290060	1-3122	9006	WASHER SPECIAL STRAP FIX	000000	000000
1312290090	1-3122	9009	WASHER; LOCK, S	000001	000000
1312310040	1-3123	1004	PLATE;LK, LEVER	000000	000000
1312310160	1-3123	1016	LEVER ASM RELEASE	000000	000000
1312310350	1-3123	1035	LEVER ASM RELEASE	000000	000000
1312320020	1-3123	2002	PIN;RELEA	000000	000000
1312320030	1-3123	2003	PIN;RELEA	000001	000000
1312320050	1-3123	2005	PIN;RELEASE LEV	000000	000005
1312320080	1-3123	2008	PIN;RELEASE LEV	000000	000000
1312320100	1-3123	2010	PIN LEVER	000000	000000
1312320120	1-3123	2012	PIN; RELEASE LEV	000000	000000
1312330010	1-3123	3001	SPRING RETURN	000000	000000
1312330030	1-3123	3003	SPRING;RTN.;R	000000	000010
1312330040	1-3123	3004	SPRING;RE	000000	000000
1312330060	1-3123	3006	SPRING; RELEASE LEVER	000000	000000
1312330100	1-3123	3010	SPRING;RE	000000	000007
1312350040	1-3123	5004	SUPPORT LEVER	000000	000000
1312390020	1-3123	9002	PLATE LOCK LEVER SUPPORT	000000	000000
1312390040	1-3123	9004	BUSHING; RELEAS	000001	000000
1312390060	1-3123	9006	NUT; SUPPORT	000000	000000
1312390080	1-3123	9008	BOLT; LK PLATE	000000	000000
1312390100	1-3123	9010	BOLT PLATE FIX	000000	000000
1312390150	1-3123	9015	BOLT; LOCK, PLATE FIX.	000000	000000
1312390170	1-3123	9017	PLATE; LOCK, LEVER SUPPORT	000000	000000
1312390190	1-3123	9019	PLATE LOCK LEVER SUPPORT	000000	000000
1312390200	1-3123	9020	BOLT PLATE FIX	000002	000006
1312401720	1-3124	0172	PLATE ASM; CLUTCH	000000	000000
1312401770	1-3124	0177	PLATE ASM	000000	000000
1312401850	1-3124	0185	PLATE ASM.; DRIVEN, CLUTC	000000	000000
1312401970			CLUTCH DISC	000000	000000

1312402752			PLATE ASM DRIVEN D410 Z14	000000	000000
1312402840	1-3124	0284	DRIVE PLATE	000000	000000
1312402890	1-3124	0289	CLUTCH DISC.	000000	000000
1312403010	1-3124	0301	PLATE ASM;DRIVE	000000	000000
1312403050	1-3124	0305	PLATE ASM DRIVEN D430 Z16	000000	000000
1312403080	1-3124	0308	CLUTCH PLATE	000000	000000
1312403100	1-3124	0310	PLATE ASM.; DRIVEN	000000	000000
1312403650	1-3124	0365	PLATE; DRIVEN	000000	000001
1312403660	1-3124	0366	PLATE;DRIV	000000	000000
1312405290	1-3124	0529	PLATE ASM; DRIVE (13")	000000	000000
1312405500	1-3124	0550	PLATE ASM.;	000000	000000
1312405860	1-3124	0586	PLATE ASM; DRIVE	000000	000000
1312405900	1-3124	0590	PLATE ASM	000000	000000
1312405920	1-3124	0592	PLATE ASM; DRIVE	000000	000000
1312406370	1-3124	0637	PLATE ASM DRIVEN D430 Z16	000000	000000
1312406580			DISC ASM.; CLUTCH	000000	000000
1312406710	1-3124	0671	PLATE ASM; DRIVEN	000000	000000
1312406750	1-3124	0675	CLUTCH DISC ASM	000000	000000
1312406780	1-3124	0678	ASSY; PLATE DRIVEN	000002	000000
1312406860	1-3124	0686	PLATE; DRIVEN	000000	000000
1312408690	1-3124	0869	PLATE ASM; DRIVE	000001	000000
1312408890			DISC; CLUTCH	000000	000000
1312409000			DISC;CLUTCH	000000	000000
1312409010	1-3124	0901	PLATE ASM; DRIVEN	000000	000001
1312409860			DISC; CLUTCH	000000	000007
1313210060	1-3132	1006	PLATE; REL	000000	000000
1313210220	1-3132	1022	BLOCK;SHIFT,CLU	000000	000000
1313210380	1-3132	1038	BLOCK;SHIFT,CLU	000000	000000
1313210390	1-3132	1039	BLOCK SHIFT CLUTCH	000000	000000
1313210470	1-3132	1047	BLOCK;SHIFT	000000	000000
1313210540	1-3132	1054	BLOCK;SHIFT,CLU	000000	000004
1313290030	1-3132	9003	SPRING; SHIFT FORK-SHIFT	000000	000000
1313290100	1-3132	9010	SPRING;SHIFT FO	000000	000000
1313290110	1-3132	9011	SPRING;SHIFT FO	000000	000000
1313290140	1-3132	9014	SPRING;SHIFT FORK (RH)	000000	000007
1313290150	1-3132	9015	SPRING;SHIFT FORK (LH)	000000	000033
1313410030			SHIFT FORK	000000	000000
1313410280	1-3134	1028	FORK;SHIFT,CLU	000000	000005
1313410290	1-3134	1029	FORK SHIFT CLUTCH	000000	000000
1313410310	1-3134	1031	FORK SHIFT CLUTCH	000000	000000
1313410320	1-3134	1032	FORK;SHIFT	000000	000000
1313420590	1-3134	2059	SHAFT; W/BUSH, CLUTCH	000000	000000
1313421250	1-3134	2125	SHAFT CLUTCH SHIFT FORK	000000	000000
1313421490	1-3134	2149	SHAFT; W/BUSH, CLUTCH	000000	000000
1313421860	1-3134	2186	SHAFT CLUTCH	000000	000000
1313490061	1-3134	9006	COVER; DUST, CLUTCH SHIFT	000000	000000
1318003020	1-3180	0302	CLUTCH	000000	000000

1318110070	1-3181	1007	SHELL ASM	000000	000000
1318293520			REPAIR KIT; CLU	000000	000000
1321110061	1-3211	1006	DISTANCE; FLYWHEEL 6SA1	000000	000000
1321110090	1-3211	1009	DISTANCE;FLYWHEEL	000000	000001
1321110140	1-3211	1014	SPACER;FLYWHEEL HSG	000000	000004
1322110011	1-3221	1001	FLYWHEEL	000000	000000
1322110012	1-3221	1001	FLYWHEEL	000000	000000
1322110042	1-3221	1004	FLYWHEEL 6BD1	000000	000000
1322120070	1-3221	2007	ADAPTER; FLEX PLATE	000000	000022
1322130091	1-3221	3009	WASHER; FLEX PLATE	000000	000004
1322130210	1-3221	3021	PLATE; WEAR, FLEX	000000	000000
1322130211	1-3221	3021	PLATE; WEAR, FLEX	000000	000000
1322130220	1-3221	3022	PLATE; FLEX,A/T	000000	000008
1322130410	1-3221	3041	PLATE; FLEX	000000	000000
1322190040	1-3221	9004	ADAPTER; F/W	000000	000000
1325690210	1-3256	9021	FILTER; TRANS	000000	000000
1330070870			GEAR ASM.;MARINE (G/RATIO=	000000	000000
1330070880	1-3300	7088	GEARASM.;MARINE (G/RATIO=3	000000	000000
1330070890	1-3300	7089	GEAR ASM.;MARINE (G/RATIO=	000000	000000
1330070900	1-3300	7090	GEAR ASM.;MARINE (GRATIO=2	000000	000000
1330070910	1-3300	7091	GEAR ASM.;MARINE (G/RATIO (000000	000000
1330102590	1-3301	0259	GEAR ASM.;MARINE (G/RATIO=	000000	000000
1330102600	1-3301	0260	GEAR ASM.;MARINE (G/RATIO=	000000	000000
1330102610	1-3301	0261	GEAR ASM.;MARINE (G/RATIO=	000000	000000
1330102620	1-3301	0262	GEAR ASM.;MARINE (G/RATIO=	000000	000000
1330102630	1-3301	0263	GEAR ASM.;MARINE (G/RATIO=	000000	000000
1330102640	1-3301	0264	GEAR ASM.;MARINE (G/RATIO=	000000	000000
1330102650	1-3301	0265	GEAR ASM.;MARINE (G/RATIO=	000000	000000
1330102660	1-3301	0266	GEAR ASM.;MARINE (G/RATIO=	000000	000000
1330282420	1-3302	8242	GEAR ASM; MARINE	000000	000000
1330282430	1-3302	8243	GEAR ASM; MARINE	000000	000000
1330282440	1-3302	8244	GEAR ASM; MARINE	000000	000000
1330282450	1-3302	8245	GEAR ASM; MARINE	000000	000000
1331101410	1-3311	0141	HOUSING	000000	000000
1331101420	1-3311	0142	HOUSING	000000	000000
1331120210	1-3311	2021	GASKET	000000	000000
1331120220	1-3311	2022	PACKING;CASE	000000	000000
1331120230	1-3311	2023	PACKING;VALVE BODY	000000	000000
1331120320	1-3311	2032	GASKET	000000	000000
1331120330	1-3311	2033	GASKET	000000	000000
1331120340	1-3311	2034	GASKET	000000	000000
1331190100	1-3311	9010	COVER	000000	000000
1331190420	1-3311	9042	CAP;OIL, INLET	000000	000000
1331190490	1-3311	9049	PLUG;OIL FILLER	000000	000000
1331190500	1-3311	9050	BREATHER	000000	000000
1331210213	1-3312	1021	COVER;FRT.TRANS	000000	000000
1331210214	1-3312	1021	COVER;FRT,TRANS	000000	000002

1331210222	1-3312	1022	COVER;FRT.TRANS	000000	000000
1331210223	1-3312	1022	COVER;FRT,TRANS	000000	000000
1331210343	1-3312	1034	COVER ASM FRT	000000	000000
1331210361	1-3312	1036	COVER;FRT.TRANS	000000	000000
1331210362	1-3312	1036	COVER;FRT,TRANS	000000	000000
1331210363	1-3312	1036	COVER;FRT,TRANS	000000	000003
1331210672	1-3312	1067	COVER ASM; FRT	000000	000000
1331220080	1-3312	2008	GASKET;FRT COVE	000000	000072
1331310581	1-3313	1058	COVER;RR,TRANS	000000	000000
1331310582	1-3313	1058	COVER;RR TRANS	000000	000000
1331310583	1-3313	1058	COVER;RR TRANS	000000	000000
1331310585	1-3313	1058	COVER;RR,TRANS	000000	000002
1331320270	1-3313	2027	GASKET;RR COVER	000000	000000
1331320271	1-3313	2027	GASKET;RR COVER	000000	000000
1331320272	1-3313	2027	GASKET;RR COVER	000000	000022
1331390011	1-3313	9001	COVER;OIL SEAL	000000	000004
1331410180	1-3314	1018	COVER	000000	000000
1331420360	1-3314	2036	GSKT;SD.CVR TO TRNS CASE	000000	000007
1331510330	1-3315	1033	CARRIER;SEAL	000000	000000
1331520070	1-3315	2007	PACKING BRG CASE	000000	000000
1331530010	1-3315	3001	CASE BRG POWER DRIVE	000000	000000
1331560090	1-3315	6009	SHIM*	000000	000000
1331560120	1-3315	6012	SHIM*	000000	000000
1332113481	1-3321	1348	GEAR SHAFT;INPUT	000000	000000
1332113490	1-3321	1349	GEAR ASM.;PINION(G.R=3.75	000000	000000
1332113500	1-3321	1350	GEAR ASM.;PINION(G.R=3.52	000000	000000
1332113510	1-3321	1351	GEAR ASM.;PINION(G.R=3.13	000000	000000
1332113520	1-3321	1352	GEAR ASM.;PINION(G.R=2.52	000000	000000
1332113530	1-3321	1353	GEAR ASM.;PINION(G.R=2.06	000000	000000
1332113541	1-3321	1354	GEAR SAFT;REVERSE	000000	000000
1332113560	1-3321	1356	GEAR SHAFT;OUTPUT(G.R=3.5	000000	000000
1332113580	1-3321	1358	GEAR SHAFT;OUTPUT(G.R=2.5	000000	000000
1332113590	1-3321	1359	GEAR SHAFT;OUTPUT(G.R=2.0	000000	000000
1332114700	1-3321	1470	COUPLING ASM.;INPUT	000000	000000
1332114710	1-3321	1471	GEAR ASM.;PINION(G/RATIO=	000000	000000
1332114720	1-3321	1472	GEAR ASM.;PINION(G/RATIO=	000000	000000
1332114730	1-3321	1473	GEAR ASM.;PINION(G/RATIO=	000000	000000
1332114740	1-3321	1474	GEAR ASM.;PINION(G/RATIO=	000000	000000
1332114750	1-3321	1475	SHAFT ASM.;INPUT	000000	000000
1332114760	1-3321	1476	SHAFT ASM.;GEAR	000000	000000
1332114770	1-3321	1477	SHAFT ASM.;OUTPUT(G/RATIO	000000	000000
1332114780	1-3321	1478	SHAFT ASM.;OUTPUT(G/RATIO	000000	000000
1332114790	1-3321	1479	SHAFT ASM.;OUTPUT(G/RATIO	000000	000000
1332114800	1-3321	1480	SHAFT ASM.;OUTPUT(G/RATIO	000000	000000
1332115290	1-3321	1529	SHAFT POWER DRIVE	000000	000000
1332116520	1-3321	1652	SHIFT ASM	000000	000000
1332117430	1-3321	1743	SHAFT ASM.; INPUT	000000	000000

1332117940	1-3321	1794	SHAFT ASM.; INPUT	000000	000000
1332118130	1-3321	1813	PISTON; CLUTCH	000000	000000
1332118780	1-3321	1878	SHAFT ASM: GEAR	000000	000000
1332130290	1-3321	3029	WASHER;THRUST	000000	000000
1332130300	1-3321	3030	WASHER;THRUST	000000	000000
1332190010	1-3321	9001	RING;DRIVE	000000	000000
1332190020	1-3321	9002	PLATE;LOCK	000000	000000
1332190120	1-3321	9012	BUSH;COUPLING	000000	000000
1332190150	1-3321	9015	BUSH	000000	000000
1332191070	1-3321	9107	RING: SECTION	000000	000000
1332191100	1-3321	9110	BUSH;	000000	000000
1332350040			DIST PIECE	000000	000000
1332390160	1-3323	9016	WASHER;THRUST,MAINSHAFT	000000	000003
1332390180	1-3323	9018	WASHER;THRUST,REV GEAR	000000	000000
1332390181	1-3323	9018	WASHER;THRUST,REV GEAR	000000	000001
1332390680	1-3323	9068	WASHER	000000	000000
1332512530	1-3325	1253	GEAR ASM	000000	000000
1332520380			GEAR	000000	000000
1332521591			3RD GEAR	000000	000000
1332521611			GEAR ASM.;3RD MAIN (Z=31)	000000	000000
1332531480			GEAR	000000	000000
1332534080			GEAR ASM; 4TH	000000	000000
1332534100			GEAR ASM.; 5TH MAIN(Z=33)	000000	000000
1332550211	1-3325	5021	GEAR;1ST,MAINSHAFT	000000	000000
1332550540	1-3325	5054	GEAR; 1ST MAINSHAFT	000000	000000
1332550541	1-3325	5054	GEAR; 1ST MAINSHAFT	000000	000003
1332570520	1-3325	7052	GEAR;REV MAINSHAFT	000000	000000
1332570590	1-3325	7059	GEAR; REV MAINSHAFT	000000	000001
1332610021			CLUTCH HUB	000000	000000
1332610060			INSERT	000000	000000
1332610832			HUB; CLUTCH 4TH	000000	000000
1332611103	1-3326	1110	HUB CLUTCH 3-2 MAIN	000000	000000
1332611330	1-3326	1133	CLUTCH;SYN 1ST	000000	000001
1332611862			HUB; CLU,4TH AND	000000	000000
1332620670			SLEEVE	000000	000000
1332620840	1-3326	2084	SLEEVE	000000	000000
1332621130	1-3326	2113	SLEEVE; 4TH - 5TH	000000	000000
1332630060	1-3326	3006	INSERT	000000	000000
1332630200			PLUNGER; SYNCHRO	000000	000000
1332630252			INSERT; CLUTCH	000000	000000
1332640180			SPRING; INSERT	000000	000000
1332640300			SPRING; INSERT	000000	000000
1332650770			BLOCK RING	000000	000000
1332651540			RING; BLOCK, 4TH	000000	000000
1332651730	1-3326	5173	RING; BLOCK 2ND	000000	000000
1333130040	1-3331	3004	PLATE;LOCK	000000	000000
1333190560	1-3331	9056	COVER;SEAL,COUNTER FRT.	000000	000000

1333190561	1-3331	9056	COVER;SEAL,COUNTER FRT.	000000	000003
1333321130			GEAR; 5TH COUNT	000000	000003
1333340170	1-3333	4017	GEAR;2ND,COUNTER	000000	000000
1333340190	1-3333	4019	GEAR, 2ND,COUNTER	000000	000003
1333510130	1-3335	1013	SHAFT;REV	000000	000000
1333510131	1-3335	1013	SHAFT;REV	000000	000000
1333610170	1-3336	1017	GEAR;REV IDLER	000000	000000
1333610620	1-3336	1062	GEAR; REV IDLER	000000	000000
1333630050	1-3336	3005	COLLAR;THRUST,REV SHAFT	000001	000004
1333630250	1-3336	3025	SPACER	000000	000000
1333690010	1-3336	9001	BLOCK;PUMP DRIVE	000000	000000
1333710431	1-3337	1043	GEAR; SPEED.	000000	000000
1333710432	1-3337	1043	GEAR; SPEED.	000000	000001
1333730391	1-3337	3039	BUSHING;DRVN.GEAR,SPDMTR.	000000	000003
1335110781	1-3351	1078	ARM;SHIFT,1ST & REV	000000	000000
1335110782	1-3351	1078	ARM;SHIFT,1ST & REV	000000	000000
1335110783	1-3351	1078	ARM;SHIFT,1ST & REV	000000	000001
1335111540	1-3351	1154	BLOCK;SHIFT,1ST	000000	000000
1335111541	1-3351	1154	BLOCK;SHIFT,1ST	000000	000007
1335111560	1-3351	1156	ARM; SHIFT, 2ND-3RD	000000	000000
1335160020	1-3351	6002	SLEEVE;REV	000000	000005
1335160031	1-3351	6003	CAP; RETURN SPR,SHIFT BLK	000000	000010
1335210440	1-3352	1044	LEVER; SELECT,	000000	000002
1335210620	1-3352	1062	LEVER;SHIFT,INT	000000	000003
1335220162	1-3352	2016	SHAFT; SHIFT LE	000000	000000
1335220320	1-3352	2032	LEVER;SELECT,INTERNAL	000000	000000
1335340020	1-3353	4002	PIN;INTER LK	000000	000032
1335340030	1-3353	4003	PIN;SWTCH,NEUTRAL/QUAD BX	000000	000006
1335370031	1-3353	7003	STOPPER;LOW	000000	000005
1335370041	1-3353	7004	STOPPER;6TH	000000	000010
1335370060	1-3353	7006	STOPPER;4TH	000000	000025
1335414720			BOX;QUAD, TRANS	000000	000003
1335440100	1-3354	4010	GASKET	000000	000000
1335440130	1-3354	4013	GASKET	000000	000000
1335450020	1-3354	5002	CAP;QUADRANT BO	000000	000000
1335450021	1-3354	5002	CAP;QUADRANT BOX	000000	000014
1335470130	1-3354	7013	BREATHER;AIR,AIR QUAD BOX	000000	000003
1335490240	1-3354	9024	SEAT;REV	000000	000005
1335491020	1-3354	9102	PLATE;BAFFLE,AIR BREATHER	000000	000003
1335491030	1-3354	9103	COVER;AIR BREATHER	000000	000052
1336140450	1-3361	4045	BOOT; CHANGE LEVER	000000	000000
1336140460	1-3361	4046	BOOT;CHANGE LEVER	000000	000002
1336150081	1-3361	5008	BOSS CHANGE LEVER	000000	000000
1336590450	1-3365	9045	BOLT;SELECT LEVER	000000	000000
1336591710	1-3365	9171	BOLT;	000000	000009
1336591861	1-3365	9186	SPACER; FUEL LEAK OFF	000000	000014
1336604301			CABLE; SELECT	000000	000002

1336604881			CABLE; SHIFT	000000	000001
1336604913	1-3366	0491	CABLE;SHIFT,TRANS CONT	000000	000009
1336606850			WIRE; SHIFT,TRANS CONT	000000	000000
1336606851			WIRE; SHIFT,TRANS CONT	000000	000002
1336702880			TR SHIFT CABLE	000000	000000
1337390650			GASKET; HYDRO BRK BOOSTER	000000	000059
1341210250	1-3412	1025	GAUGE ASM; OIL LEVEL	000000	000000
1341210360	1-3412	1036	GAUGE;LEVEL	000000	000000
1341420100	1-3414	2010	O-RING	000005	000000
1341420210	1-3414	2021	GASKET	000000	000000
1341420220	1-3414	2022	GASKET	000000	000000
1341420350	1-3414	2035	GASKET; SEA WATER PUMP	000000	000008
1341500220	1-3415	0022	PUMP ASM; GEAR	000000	000000
1341500221	1-3415	0022	PUMP ASM; GEAR	000000	000000
1341500250	1-3415	0025	PUMP ASM.;GEAR	000000	000000
1341590190	1-3415	9019	PACKING;OUTPUT	000000	000000
1341590200	1-3415	9020	PACKING;PUMP	000000	000000
1342510100	1-3425	1010	PLATE: SINTERED	000000	000000
1342510190	1-3425	1019	PLATE;SINTER	000000	000000
1342510240	1-3425	1024	PLATE;SINTERED	000000	000000
1342510250	1-3425	1025	SHROUD	000000	000000
1342510370	1-3425	1037	PLATE; SINTERED	000000	000000
1342520010	1-3425	2001	PLATE: STEEL6)	000000	000000
1342520060	1-3425	2006	PLATE;STEEL	000000	000000
1342520070	1-3425	2007	PLATE;STEEL	000000	000000
1342560100	1-3425	6010	PLATE;END	000000	000000
1342560110	1-3425	6011	PLATE;STEEL	000000	000000
1342610110	1-3426	1011	PISTON; CLUTCH	000000	000000
1342610182	1-3426	1018	PISTON;CLUTCH	000000	000000
1342610220	1-3426	1022	PISTON;CLUTCH	000000	000000
1342610250	1-3426	1025	PISTON; CLUTCH	000000	000000
1342630020	1-3426	3002	RING: SQUARE	000000	000000
1342630030	1-3426	3003	RING;OIL SEAL	000001	000001
1342630100	1-3426	3010	O-RING	000001	000000
1342630180	1-3426	3018	RING*	000000	000000
1342630200	1-3426	3020	RING;SQUARE	000000	000000
1342630210	1-3426	3021	RING;SQUARE	000001	000000
1342690070	1-3426	9007	WASHER	000000	000000
1342690080	1-3426	9008	PLATE;BACK	000000	000000
1342690090	1-3426	9009	COLLAR;THRUST	000000	000000
1342698130	1-3426	9813	WASHER	000000	000000
1343310760	1-3433	1076	PIPE;SPACER TO COOLER	000000	000000
1343310770	1-3433	1077	PIPE;COOLER TO BODY	000000	000000
1343310990	1-3433	1099	PIPE ASM.;SUCTION	000000	000000
1343311000	1-3433	1100	PIPE ASM.	000000	000000
1343311010	1-3433	1101	PIPE ASM.	000000	000000
1343390130	1-3433	9013	GASKET	000000	000000

1343390150	1-3433	9015	STRAINER	000000	000000
1343390311	1-3433	9031	FLANGE;OUTPUT	000000	000000
1343390320	1-3433	9032	FLANGE;PROP.	000000	000000
1343390420	1-3433	9042	FLANGE;OUTPUT	000000	000000
1343390430	1-3433	9043	FLANGE;COMPANION	000000	000000
1343390550	1-3433	9055	GASKET	000000	000002
1345100630	1-3451	0063	CONTROL ASM.	000000	000000
1345100631	1-3451	0063	CONTROL ASM.	000000	000000
1345100760	1-3451	0076	BODY ASM.;VALVE	000000	000000
1345100790	1-3451	0079	VALVE KIT;TROLLING	000000	000000
1345100870	1-3451	0087	GOVERNOR ASM.	000000	000000
1345101020	1-3451	0102	PUMP ASM.;GEAR	000000	000000
1345101030	1-3451	0103	VALVE ASM.;SELECTOR	000000	000000
1345101040	1-3451	0104	VALVEASM.;TROLLING	000000	000000
1345110390	1-3451	1039	BODY;VALVE	000000	000000
1345160020	1-3451	6002	ELEMENT;OIL FILTER	000000	000000
1345160220	1-3451	6022	ELEMENT; FILTER	000000	000000
1345210070	1-3452	1007	PLATE;BASE	000000	000000
1345220040	1-3452	2004	GASKET	000000	000000
1345220120	1-3452	2012	GASKET	000000	000000
1345220130	1-3452	2013	GASKET	000000	000000
1345220190	1-3452	2019	GASKET	000000	000000
1345220210	1-3452	2021	PACKING;SPACER	000000	000000
1345220220	1-3452	2022	PACKING	000000	000000
1345220231	1-3452	2023	PACKING	000000	000000
1345220232	1-3452	2023	PACKING	000000	000000
1345220240	1-3452	2024	PACKING;BODY REAR	000000	000000
1345220270	1-3452	2027	PACKING;SHIFTER	000000	000000
1345220290	1-3452	2029	PACKING;TROLLING VALVE	000000	000000
1345310120	1-3453	1012	STEM;VALVE	000000	000000
1345310190	1-3453	1019	VALVE ASM.; TROLLING (G/R	000000	000000
1345320040	1-3453	2004	PISTON	000000	000000
1345320140	1-3453	2014	STEAM;VALVE	000000	000000
1345320330	1-3453	2033	PISTON	000000	000000
1345320340	1-3453	2034	PISTON	000000	000000
1345320350	1-3453	2035	PISTON	000000	000000
1345330030	1-3453	3003	SPRING	000000	000000
1345330060	1-3453	3006	SPRING	000000	000000
1345330200	1-3453	3020	SPRING	000000	000000
1345330210	1-3453	3021	SPRING	000000	000000
1345330220	1-3453	3022	SPRING	000000	000000
1345330230	1-3453	3023	SPRING	000000	000000
1345350010	1-3453	5001	BALL	000000	000000
1345390040	1-3453	9004	SHIM*	000000	000000
1345390060	1-3453	9006	RING;OIL SEAL	000000	000000
1345390160	1-3453	9016	CARRIER;BRG.	000000	000000
1345390170	1-3453	9017	BIMETAL	000000	000000

1345390180	1-3453	9018	NUT	000000	000000
1345390190	1-3453	9019	CAP;NUT	000000	000000
1345390200	1-3453	9020	PLATE;SET	000000	000000
1345410040	1-3454	1004	LEVER	000000	000000
1345440080	1-3454	4008	PACKING;CHECK HOLE	000000	000000
1345880020	1-3458	8002	GASKET	000029	000000
1346110040	1-3461	1004	LEVER ASM.	000000	000000
1346500490	1-3465	0049	CABLE; CONT	000000	000022
1346500790	1-3465	0079	CABLE; A&T CONT	000000	000000
1346501020	1-3465	0102	CABLE; A/T CONT	000000	000000
1360007040			TRANSFER ASM	000000	000000
1361210050			COVER;RR,OUTPU	000000	000000
1361320030			GASKET; COVER T	000000	000001
1361560050			GASKET; RET,RR	000000	000000
1361560060			GASKET; RR COVE	000000	000000
1361560080			GASKET; RR COVE	000000	000000
1361890262			RUBBER; CUSHION	000000	000000
1361890270			RUBBER; T/F UPR CUSHION	000000	000000
1362510230			SHAFT; GEAR, IDL	000000	000000
1362620200			SLEEVE;LOW,IDL	000000	000000
1362620210			SLEEVE;HIGH,IN	000000	000000
1363510410			SHAFT; GEAR, OUT	000000	000000
1365610191			FORK;SHIFT, LOW	000000	000000
1365640260			ROD;SHIFT,LOW	000000	000000
1365640270			ROD; SHIFT, NEUT	000000	000000
1365690090			CYLINDER; AIR S	000000	000000
1365690100			CYLINDER; AIR S	000000	000000
1365720021			SEAT;SPRING	000000	000000
1365790010			GASKET; AIR CYL	000000	000000
1371218440			SHAFT ASM; PROP	000000	000000
1371220050			TUBE ASM; PROP.	000000	000000
1371310890			SHAFT ASM; PROP	000000	000000
1372110221			YOKE; FLANGE	000000	000000
1372110231			YOKE; FLANGE	000000	000000
1372400491			FLANGE; PARKING	000000	000000
1372400791			FLANGE; INPUT	000000	000000
1372400910			FLANGE; OUTPUT,	000000	000000
1372432250	1-3724	3225	FLANGE; PARKING	000000	000002
1372450251	1-3724	5025	FLANG POWER DRIVE	000000	000000
1372450310	1-3724	5031	FLANGE ASM.	000000	000000
1372450622	1-3724	5062	FLANGE ASM	000000	000000
1372450623	1-3724	5062	FLANGE ASM;	000000	000000
1372450626	1-3724	5062	FLANGE ASM;	000000	000000
1372450627	1-3724	5062	FLANGE ASM;	000000	000006
1372450634	1-3724	5063	COUPLING; DRIVING	000000	000000
1372450635	1-3724	5063	COUPLING; DRIVING	000000	000000
1372450672	1-3724	5067	COUPLING;DRIVING PINION	000000	000000

1372450674	1-3724	5067	COUPLING;DRIVING PINION	000000	000003
1372452090	1-3724	5209	FLANGE ASM.	000000	000000
1372452091	1-3724	5209	FLANGE ASM.	000000	000000
1373000580	1-3730	0058	JOURNAL ASM	000000	000000
1373000840	1-3730	0084	JOURNAL ASM; PROP SHAFT	000043	000053
1375100911			CENTER BEARING; SHAFT	000000	000000
1375160450			"TRC" CUSHION; RUB.	000000	000000
1380001660	1-3800	0166	POWER TAKE OFF	000000	000000
1380001861	1-3800	0186	POWER TAKE OFF ASM.	000000	000000
1380002050	1-3800	0205	POWER TAKE OFF ASM.	000000	000000
1380003911	1-3800	0391	POWER TAKE OFF ASM; ENG R	000000	000000
1380003912	1-3800	0391	POWER TAKE OFF ASM; ENG R	000000	000002
1380003930	1-3800	0393	PTO ASM; ENG RR	000000	000001
1381100330	1-3811	0033	CASE;BEARING	000000	000000
1381110600	1-3811	1060	CASE BRG	000000	000000
1381130180	1-3811	3018	PACKING BRG CASE PTO	000000	000000
1381190230	1-3811	9023	SHAFT OUTPUT	000000	000000
1381190240	1-3811	9024	COVER BRG CASE PTO	000000	000000
1381810211	1-3818	1021	HOUSING; PTO	000000	000000
1381810212	1-3818	1021	HOUSING; PTO	000000	000003
1381820050	1-3818	2005	COVER;BRG.CASE	000000	000000
1381830060	1-3818	3006	PACKING	000000	000000
1381890010	1-3818	9001	THROTTLE OIL	000000	000000
1381890100	1-3818	9010	FLANGE PTO	000000	000000
1382210310	1-3822	1031	SHAFT;PTO,FLYWH	000000	000000
1382210320	1-3822	1032	SHAFT;IDLE GEAR	000000	000000
1382260120			DUST PIECE	000000	000000
1382260980	1-3822	6098	SPACER; FLYWHEEL PTO	000002	000000
1382410520	1-3824	1052	GEAR;	000000	000000
1382410530	1-3824	1053	GEAR ASM;IDEL DRIVEN	000000	000000
1382410540	1-3824	1054	GEAR;IDLE	000000	000000
1382420010	1-3824	2001	BEARING	000000	000000
1382450180	1-3824	5018	WASHER;THRUST	000000	000000
1382610080	1-3826	1008	GEAR;	000000	000000
1382610082	1-3826	1008	GEAR;	000000	000000
1382610091	1-3826	1009	SUPERSEDED**GEAR	000000	000000
1411140100			PACKING; CARRIER	000000	000000
1411190010			SIDE COVER	000000	000000
1411510101	1-4115	1010	CAGE	000000	000000
1411540080	1-4115	4008	S H I M	000000	000000
1411540210	1-4115	4021	SHIM; .50	000000	000000
1411540211	1-4115	4021	SHIM;FINAL PINION, 0.50	000000	000007
1411540780	1-4115	4078	SHIM; PINION	000000	000000
1412102210	1-4121	0221	GEAR SET; PINIO	000000	000000
1412102211	1-4121	0221	GEAR SET; PINIO	000000	000000
1412103912	1-4121	0391	GEAR SET; FINAL	000000	000000
1412104561	1-4121	0456	GEAR ASM	000000	000000

1412105280	1-4121	0528	GEAR SET;	000000	000005
1412106010			GEAR SET;FINAL	000000	000000
1412111322			PINION	000000	000000
1412190010	1-4121	9001	SPACER;COLLAPSA	000000	000000
1412190040	1-4121	9004	SPCR/CLLR;DIST,COLLAPSIBL	000000	000008
1412270040	1-4122	7004	RETAINER	000000	000000
1412270080	1-4122	7008	RETAINER	000005	000000
1412270150	1-4122	7015	RETAINER; PILOT BRG	000000	000008
1412290900			SHIM;RR OUTPUT	000000	000000
1412290910			SHIM;RR OUTPUT	000000	000000
1412290920			SHIM;RR OUTPUT	000000	000000
1412290940			SHIM; RR OUTPUT	000000	000000
1412290950			SHIM; RR OUTPUT	000000	000000
1412290960			SHIM; RR OUTPUT	000000	000000
1412290970			SHIM; RR OUTPUT	000000	000000
1412290990			SHIM; RR OUTPUT	000000	000000
1412291000			SHIM; RR OUTPUT	000000	000000
1412292430	1-4122	9243	SPACER	000000	000000
1412292450	1-4122	9245	S H I M	000000	000000
1412292520	1-4122	9252	S H I M	000000	000000
1412292530	1-4122	9253	S H I M	000001	000000
1412690070			WASHER	000000	000000
1415101410			CAGE ASM; DIFF.	000000	000000
1415101550			C A G E	000000	000000
1415210350	1-4152	1035	PIN;CROSS,DIFF PINION	000000	000000
1415210352			PIN;CROSS,DIFF PINION	000000	000000
1415210520	1-4152	1052	GEAR; SPIDER	000000	000000
1415210620			SPIDER; DIFF PINION	000001	000081
1415510040			PINION	000000	000000
1415510240	1-4155	1024	GEAR; PINION,DIFF	000000	000000
1415510340	1-4155	1034	PINION	000000	000000
1415510500	1-4155	1050	GEAR; PINION, DIFF	000000	000223
1415520030	1-4155	2003	WASHER	000000	000000
1415520200	1-4155	2020	WASHER;THRUST,PINION	001799	001866
1415610230			SIDE GEAR	000000	000000
1415610310			G E A R	000000	000000
1415610810	1-4156	1081	GEAR SIDE DIFF.	000000	000000
1415610930	1-4156	1093	GEAR;SIDE,DIFF	000000	000023
1415611110	1-4156	1111	GEAR; SIDE, DIF.	000000	000000
1415620770	1-4156	2077	TASHER;THRUST,SIDE GEAR	000000	000060
1415621760	1-4156	2176	THRUST WASHER	000000	000000
1415621780	1-4156	2178	WASHER	000000	000000
1415622600	1-4156	2260	WASHER,THRUST	000000	000000
1415622610	1-4156	2261	WASHER	000000	000000
1415622620	1-4156	2262	WASHER THRUST	000000	000000
1415622630	1-4156	2263	WASHER	000000	000000
1415622640	1-4156	2264	WASHER	000000	000000

1415622650	1-4156	2265	WASHER	000000	000000
1415622660	1-4156	2266	WASHER	000000	000000
1421241010			PAD	000000	000000
1421713452	1-4217	1345	SHAFT; AXLE, RR	000000	000000
1423120880	1-4231	2088	HUB; FRONT AXLE	000000	000000
1423130191	1-4231	3019	CAP; HUB, FRT AXLE	000000	000000
1423130290	1-4231	3029	CAP;HUB FRT AXLE	000000	000000
1423130300	1-4231	3030	CAP;HUB FRT AXLE	000000	000000
1423152662			BRAKE DRUM	000000	000000
1423153591	1-4231	5359	DRUM;BRK,FRT	000019	000018
1423310410	1-4233	1041	WHEEL PIN	000000	000000
1423310420	1-4233	1042	WHEEL PIN	000000	000000
1423310422	1-4233	1042	WHEEL PIN	000077	000011
1423310440			WHEEL PIN RH	000000	000000
1423310570			WHEEL PIN;RH	000000	000000
1423311360	1-4233	1136	WHEEL PIN	000000	000000
1423320570			WHEEL PIN LH	000000	000000
1423321170			PIN WHEEL	000000	000000
1423321360	1-4233	2136	WHEEL PIN	000000	000000
1423330300	1-4233	3030	NUT DRUM	000000	000000
1423330420	1-4233	3042	NUT; WHEEL FR AXLE	000000	000124
1423330481			NUT; WHEEL	000000	000015
1423360021			WHEEL NUT	000000	000000
1423370100	1-4233	7010	PIN; WHEEL, RR AXLE	000000	000000
1423370101	1-4233	7010	PIN; WHEEL, RR AXLE	000270	000130
1423390250	1-4233	9025	WHEEL PIN	000000	000000
1423390251	1-4233	9025	WHEEL PIN	000000	000000
1423390261	1-4233	9026	RING; SPR, FRT.	000000	000000
1431110843	1-4311	1084	AXLE; FRT	000000	000001
1431330546			KNUCKLE	000000	000000
1431501910			TIE ROD END; RIGHT	000000	000000
1431501920			TIE ROD END; LEFT	000000	000000
1440006934			STEERING UNIT;	000000	000000
1440006937			STEERING UNIT;	000000	000002
1440007673			STEERING UNIT	000000	000000
1440008081			STEERING UNIT;RH DRV	000000	000000
1440008082			STEERING UNIT;RH DRV	000000	000001
1443290120	1-4432	9012	BEARING;BALL	000000	000000
1443414040			PITMAN ARM, RH	000000	000000
1443509470	1-4435	0947	LINK; DRAG	000000	000000
1443710021	1-4437	1002	SEAT JOINT BALL	000000	000000
1443800011			DRAG LINK	000000	000000
1443800071			DRAG LINK ASM	000000	000000
1443801112			DRAG LINK	000000	000002
1443801330			LINK; DRAG	000000	000000
1445191020			SEAL SECTOR SHA	000000	000003
1445691400	1-4456	9140	PIN;COTTER	000000	000000

1461430140	1-4614	3014	LEVER	000000	000000
1461471010	1-4614	7101	BRACKET; C	000000	000007
1461511352			CABLE	000000	000000
1462110041	1-4621	1004	DRUM; PARKING BR	000000	000001
1462130190	1-4621	3019	COVER; DUST, PARK	000000	000000
1462130230	1-4621	3023	PLATE; SUPPORT, PRKG. BRK.	000000	000000
1462130670	1-4621	3067	COVER; DUST, PARKING BRAKE	000000	000000
1462190190			COVER; CHECK HOLE, PRK BRK	000000	000018
1462200080	1-4622	0008	SHOE ASM; P/BRK	000000	000000
1462200120	1-4622	0012	SHOE; PARKING BRK.	000000	000000
1462200240	1-4622	0024	SHOE; PARKING B.	000000	000024
1462510020	1-4625	1002	SHAFT; CAM, PARKING BRK	000000	000004
1462520030	1-4625	2003	LEVER; CAM SHAFT PRKG BRK	000000	000002
1471101210			BRAKE SHOE	000000	000000
1471108580			SHOE; BRK, RR	000000	000000
1471154091			LINING	000000	000000
1471206320			SHOE; BRK, RR	000000	000007
1471700080			SHOE; BRK, FRT	000000	000002
1471700090			SHOE; BRK, FRT	000000	000001
1471700100			SHOE, BRK, FRT	000000	000001
1471700140			SHOE; BRK, RR	000000	000002
1471700150			SHOE; BRK, RR	000000	000001
1471700160			SHOE; BRK, RR	000000	000001
1474237504			PIPE; OIL, FLEX	000000	000000
1474379640	1-4743	7964	PIPE ASM; AIR	000000	000000
1474379641	1-4743	7964	PIPE ASM; AIR	000000	000001
1474414241	1-4744	1424	PIPE VAC GEN	000001	000003
1474472900	1-4744	7290	PIPE ASM; VACUUM	000000	000000
1474655180	1-4746	5518	BRACKET; HARNESS	000000	000006
1474756480	1-4747	5648	BRACKET; PIPE FIX	000000	000000
1474756890	1-4747	5689	BRACKET; CLIP	000000	000006
1474756941	1-4747	5694	BRKT; CABLE CLIP TO FRAME	000000	000004
1474758680	1-4747	5868	BRACKET; CLIP HARNESS	000000	000000
1474760980	1-4747	6098	BRKT; FUEL OUT CONT (1.6)	000000	000000
1474761610	1-4747	6161	BRKT; CABLE CLIP TO FRAME	000000	000000
1474766580	1-4747	6658	BRACKET; HARNESS	000000	000006
1474770881	1-4747	7088	BRACKET; HARNESS CLIP, QUAD	000000	000005
1474779081	1-4747	7908	BRACKET; CLIP	000000	000003
1474781130	1-4747	8113	BRACKET; HARNESS	000000	000006
1474924522			PIPE; AIR, FLEX	000000	000000
1475000830			MASTER CYL	000000	000000
1475001151			BRAKE MASTER CYL. SINGLE	000000	000000
1475001431			BRAKE MASTER CYL	000000	000000
1475001580			CLUTCH MASTER CYL	000000	000000
1475001900			MASTER CYLINDER CLUT	000000	000000
1475001910			CLUTCH MASTER CYL	000000	000000
1475001930			CYL.; ASM.	000000	000000

1475001960		CYLINDER ASM	000000	000000
1475001961	1-4750 0196	CYLINDER ASM	000000	000000
1475002071	1-4750 0207	CYLINDER ASM	000000	000000
1475170020		CONNECTOR	000000	000000
1475410210	1-4754 1021	ROD; PUSH, SLAVE CYL.	000000	000000
1475700130	1-4757 0013	CYL SLAVE SBR	000000	000000
1475700360	1-4757 0036	SLAVE CYL.	000000	000000
1475700390	1-4757 0039	SLAVE CYL	000000	000000
1475700411	1-4757 0041	SLAVE CYL	000000	000000
1475700500	1-4757 0050	CYLINDER	000000	000000
1475700502	1-4757 0050	CYLINDER	000006	000000
1475720060	1-4757 2006	PISTON;SLAVE CYL.	000000	000006
1475790480	1-4757 9048	BOOT;SLAVE,CYL	000000	000009
1476001080		WHEEL CYL	000000	000000
1476003061		CYLINDER ASM; WHEEL	000000	000000
1476005682		CYLINDER; WHEEL	000000	000001
1476005692		CYLINDER; WHEEL	000000	000000
1476008680		LEFT R. WHEEL CYL.	000000	000000
1476008690		LEFT R. WHEEL CYL.	000000	000000
1476009390	1-4760 0939	CYLINDER;WHEEL,FRT BRK,LH	000048	000028
1476290300		REPAIR KIT	000000	000000
1476290340		REPAIR KIT	000000	000000
1476290551		SPRING LOCK	000000	000000
1478003392		HYDROMASTER ASM	000000	000001
1478700050	1-4787 0005	AIR CLEANER EXH	000000	000000
1478700052	1-4787 0005	AIR CLEANER;EXH	000000	000003
1481005810		VALVE; BRK.	000000	000000
1481008410		VALVE;BRK	000000	000000
1481190890	1-4811 9089	NUT;SCREW,PEDAL BRK VLV	000000	000000
1481192460	1-4811 9246	COVER;PEDAL,BRK	000000	000008
1482500030		DIAPHRAGM	000000	000000
1482590450	1-4825 9045	NUT;RBND,HSG TO CASE	000000	000000
1482590460	1-4825 9046	WASHER;LK	000000	000000
1482590570	1-4825 9057	WASHER;LK	000000	000000
1482590580	1-4825 9058	NUT;SPR.CHAMBER	000000	000000
1483120150	1-4831 2015	COCK; DRAIN,AIR TANK	000000	000056
1483173672		U BOLT; AIR TAN	000000	000000
1483190580	1-4831 9058	ADAPT;DRAIN COC	000000	000000
1483500370	1-4835 0037	GOVERNOR	000000	000021
1483500400	1-4835 0040	GOVERNOR;ASM	000000	000000
1483500500	1-4835 0050	GOVERNOR ASM; A/C	000000	000000
1483500501	1-4835 0050	GOVERNOR; AIR CONT	000000	000000
1483500590	1-4835 0059	GOVERNOR; AIR CONT	000019	000008
1484101381	1-4841 0138	VALVE;CHECK	000000	000013
1484104120	1-4841 0412	VALVE; CHECK, AIR TANK	000000	000020
1491227770		PIPE; AIR UNION	000000	000000
1491227780		PIPE; AIR UNION	000000	000000

1511115140			SPRING; LEAF	000000	000000
1511125140			SPRING; LEAF	000000	000000
1511135140			SPRING; LEAF	000000	000000
1511145140			SPRING; LEAF	000000	000000
1511155140			SPRING; LEAF	000000	000000
1511165140			SPRING; LEAF	000000	000000
1511175140			SPRING; LEAF	000000	000000
1511185140			SPRING; LEAF	000000	000000
1511312670			SPRING; LEAF	000000	000000
1511322670			SPRING; LEAF	000000	000000
1511324330			SPRING; LEAF, NO	000000	000003
1511510320	1-5115	1032	BUSHING; L	000000	000000
1511720251			RUBBER; CLAMP	000000	000000
1511720770	1-5117	2077	RUBBER;CLAMP,U-	000000	000001
1513104434			SPRING ASM; LEAF	000000	000000
1513890580			WASHER	000000	000000
1516001760			ABSORBER ASM;SHCOK/SHIMMY	000000	000000
1516301511			ABSORBER ASM.	000000	000000
1516301521			ABSORBER ASM.	000000	000000
1516301600	1-5163	0160	ABSORBER ASM; SHOCK,FRT	000000	000062
1516302080	1-5163	0208	ABSORBER	000000	000000
1531819754			MEMBER; CROSS 1	000000	000000
1532150410	1-5321	5041	RUBBER; CUSHION	000000	000000
1532150411	1-5321	5041	RUBBER; CUSHION	000000	000000
1532150480	1-5321	5048	RUBBER; CUSHION, FRT.	000012	000000
1532150601	1-5321	5060	RUBBER; CUSHION	000026	000000
1532150620			RUBBER;ENG FOOT	000000	000005
1532150691			RUBBER; ENGINE FOOT	000000	000000
1532150890	1-5321	5089	RUBBER; CUSHION	000000	000000
1532150891	1-5321	5089	RUBBER; CUSHION	000000	000000
1532150911	1-5321	5091	RUBBER; CUSHION	000000	000000
1532150990	1-5321	5099	RUBBER; ENG FOO	000000	000011
1532151260	1-5321	5126	RUBBER; CUSHION	000001	000000
1532190030	1-5321	9003	RUBBER; COVER CUSHION	000000	000000
1532250332	1-5322	5033	CUSHION;RUBBER	000000	000000
1532250381	1-5322	5038	CUSHION RUBBER	000000	000000
1532250510	1-5322	5051	RUBBER; CUSHION RR	000000	000000
1532250620	1-5322	5062	CUSHION RUBBER	000000	000000
1532250621	1-5322	5062	RUBBER; CUSHION RR	000000	000000
1532251280	1-5322	5128	CUSHION;RUBBER	000000	000000
1532251281	1-5322	5128	RUBBER; CUSHION RR	000000	000000
1532251410	1-5322	5141	MOTOR MOUNT	000000	000000
1532251411	1-5322	5141	MOTOR MOUNT	000000	000044
1532252250	1-5322	5225	RUBBER; CUSHION	000000	000000
1532252260	1-5322	5226	RUBBER; CUSHION	000000	000000
1532253660	1-5322	5366	RUBBER;CUSHION	000000	000000
1532253670	1-5322	5367	RUBBER CUSHION	000000	000000

1532290140	1-5322	9014	PLATE; LOCK	000000	000000
1533183386			BRACKET; AIR TA	000000	000000
1533511940			BRACKET; FRT. SPR.	000000	000000
1533660721			RUBBER CUSHION	000000	000000
1533660731			RUBBER CUSHION	000000	000000
1533661220			RUBBER; CUSHION	000000	000000
1534571330	1-5345	7133	SPACER;WATER PIPE TO BRKT	000004	000000
1534586410	1-5345	8641	BRACKET; CLIP	000000	000001
1534593152			BUSHING; RUBBER	000000	000000
1534593450			ROLLER	000000	000000
1534595370			BUSHING; RUBBER	000000	000000
1542043100	1-5420	4310	BUSHING	000000	000000
1572500500	1-5725	0050	LEVER; GOVERNOR	000000	000000
1572500501	1-5725	0050	LEVER	000000	000000
1578424420	1-5784	2442	COUPLING	000000	000001
1579165320	1-5791	6532	SPANNER	000003	000000
1579165420	1-5791	6542	SPANNER	000003	000000
1579209620	1-5792	0962	EXTRACTOR	000000	000003
1579241620	1-5792	4162	INSERTER	000003	000000
1579265821	1-5792	6582	EXTRACTOR	000002	000000
1579266220	1-5792	6622	EXTRACTOR	000000	000000
1579314100	1-5793	1410	SPRING HOLDER	000001	000000
1579316120	1-5793	1612	CLAMP	000000	000000
1579447820	1-5794	4782	BRACKET	000001	000000
1579448520	1-5794	4852	UNIVERSAL VISE	000000	000001
1610845040			CAB ASM; SERVIC	000000	000000
1647600040			HINGE	000000	000000
1654601860			FENDER	000000	000000
1656601890			SIDE PLATE ASSY	000000	000000
1711082353			LID;FRT	000000	000001
1711170944			RIM	000000	000000
1711187023			GRILLE; RAD	000000	000002
1712105833			BUMPER ASM; FRT	000000	000000
1712105834			BUMPER ASM; FRT	000000	000000
1712112840			LID; BUMPER	000000	000000
1712112841			LID; BUMPER	000000	000000
1712112842			LID; BUMPER	000000	000000
1712114271			BUMPER ASM; FRT	000000	000000
1717376331			PIVOT; MAIN MIR	000000	000002
1717376332			PIVOT; MAIN MIR	000000	000000
1717377040			SPACER	000000	000001
1717377600			COVER; STAY OUT	000000	000001
1717377601			COVER; STAY OUT	000000	000000
1717379181			MIRROR ASM; OUT	000000	000000
1717379182			MIRROR ASM; OUT	000000	000000
1717379183			MIRROR ASM; OUT	000000	000000
1717984912			STAY; MIRROR SI	000000	000003

1717984923		STAY; MIRROR SI	000000	000000
1717984924		STAY; MIRROR SI	000000	000000
1717986271		STAY;OUTSIDE MIRROR	000000	000000
1719074640		CLOSING; SIDE S	000000	000000
1719075810		RUBBERL CUSHION	000000	000000
1725382330		BRACKET; CTR CO.	000000	000000
1725382870		BOX; CONSOLE	000000	000000
1733488644		TRIM; ROOM, QUARTER	000000	000000
1739082070		CURTAIN ASM	000000	000000
1739082080		CURTAIN ASM	000000	000000
1739082110		CURTAIN; BACK	000000	000000
1739082120		CURTAIN; BACK	000000	000000
1739083741		RAIL; CURTAIN	000000	000000
1739963860		RAIL; CURTAIN	000000	000000
1749981170		LOCK ASM;DOOR	000000	000001
1756184360		BELT; SEAT	000000	000000
1756184840		BELT; SEAT	000000	000000
1761480950		GLASS; FRT DOOR	000000	000000
1761480952		GLASS; FRT DOOR	000000	000003
1762100341	1-7621 0034	ISUZU EMBLEM	000000	000000
1763784130		DUCT; HTR AIR	000000	000000
1763784262		DUCT; HTR AIR	000000	000000
1767380520		WEATHERSTRIP	000000	000000
1767380521		WEATHERSTRIP;FR	000000	000002
1767380522		WEATHERSTRIP;FR	000000	000000
1767380623		WEATHERSTRIP; W	000000	000000
1767380800		WEATHERSTRIP,W	000000	000005
1791380320	1-7913 8032	SWITCH;BARREL	000000	000001
1791980080	1-7919 8008	BOLT; S/ABS,CAB FRT SUSPE	000000	000000
1791980081	1-7919 8008	BOLT; S/ABS,CAB FRT SUSPE	000000	000006
1799964733		CABLE; PARKING	000000	000001
1801101780		CONTROL UNIT; ELEC	000000	000002
1801114250		CONTROL UNIT;E	000000	000000
1801901580		CONTROL UNIT; S	000000	000000
1802100051	1-8021 0005	SENSOR; WATER TEMP	000002	000046
1802200140	1-8022 0014	SENSOR; BOOST	000000	000068
1809091040	1-8090 9104	CABLE ASM;ENG STOP	000000	000004
1810294190	1-8102 9419	BOLT	000000	000000
1811000430	1-8110 0043	STARTER ASM	000000	000000
1811000431	1-8110 0043	STARTER ASM	000000	000000
1811000432	1-8110 0043	STARTER	000000	000000
1811000440	1-8110 0044	STARTER; 24V:7.4KW	000000	000002
1811000450	1-8110 0045	STARTER; 24V:7.4KW	000000	000000
1811000512	1-8110 0051	STARTER	000000	000000
1811000961	1-8110 0096	STARTER: 24V:11KW	000000	000000
1811001131	1-8110 0113	STARTER	000000	000000
1811001410	1-8110 0141	STARTER; 24V 4KW	000000	000000

1811001411	1-8110	0141	STARTER; 24V 4KW	000000	000004
1811001570	1-8110	0157	STARTER ASM	000000	000000
1811001640	1-8110	0164	STARTER; 24V:7.4KW	000000	000001
1811001661	1-8110	0166	*INVALID*	000000	000000
1811001800	1-8110	0180	STARTER; 24V/ 11KW	000000	000000
1811001801	1-8110	0180	STARTER ASM	000000	000000
1811001810	1-8110	0181	STARTER: 24V:7.4KW	000000	000000
1811001870	1-8110	0187	STARTER	000000	000001
1811001891	1-8110	0189	STARTER ASM	000000	000000
1811001892	1-8110	0189	STARTER ASM	000000	000002
1811001900	1-8110	0190	STARTER; NIKKO	000000	000003
1811001910	1-8110	0191	STARTER; NIKKO	000000	000000
1811001911	1-8110	0191	STARTER; NIKKO	000000	000000
1811001912	1-8110	0191	STARTER; NIKKO	000000	000003
1811001920	1-8110	0192	STARTER	000000	000002
1811001931	1-8110	0193	STARTER; NIKKO	000000	000000
1811001970	1-8110	0197	STARTER; NIKKO	000000	000000
1811001971	1-8110	0197	STARTER; NIKKO	000000	000000
1811001972	1-8110	0197	STARTER; NIKKO	000000	000001
1811002040	1-8110	0204	STARTER; NIKKO	000000	000000
1811002041	1-8110	0204	STARTER; NIKKO	000000	000000
1811002060	1-8110	0206	STARTER; NIKKO	000000	000000
1811002061	1-8110	0206	STARTER; NIKKO	000000	000000
1811002080	1-8110	0208	STARTER; NIKKO	000000	000000
1811002101	1-8110	0210	STARTER; NIKKO	000000	000000
1811002141	1-8110	0214	STARTER	000000	000000
1811002161	1-8110	0216	STARTER	000000	000000
1811002171	1-8110	0217	STARTER; NIKKO	000000	000000
1811002232	1-8110	0223	STARTER; HITACHI	000000	000007
1811002270	1-8110	0227	STARTER; NIKKO	000000	000000
1811002301	1-8110	0230	STARTER; 24V 5.5KW	000000	000000
1811002302	1-8110	0230	STARTER; 24V 5.5KW	000000	000000
1811002310	1-8110	0231	STARTER ASM	000000	000000
1811002320	1-8110	0232	STARTER; HITACHI	000000	000001
1811002321	1-8110	0232	STARTER; HITACHI	000000	000000
1811002330	1-8110	0233	STARTER	000000	000000
1811002340	1-8110	0234	STARTER, NEW	000000	000000
1811002341	1-8110	0234	STARTER, NEW	000000	000000
1811002371	1-8110	0237	STARTER; NIKKO	000000	000000
1811002380	1-8110	0238	STARTER; NIKKO	000000	000001
1811002381	1-8110	0238	STARTER; NIKKO	000000	000000
1811002390	1-8110	0239	STARTER; 24V 5.5KW	000000	000000
1811002431	1-8110	0243	STARTER	000000	000000
1811002451	1-8110	0245	STARTER; NIKKO	000000	000000
1811002452	1-8110	0245	STARTER; NIKKO	000000	000001
1811002461	1-8110	0246	STARTER; 24V 5.5KW	000000	000000
1811002462	1-8110	0246	STARTER; 24V 5.5KW	000000	000000

1811002463	1-8110	0246	STARTER; 24V 5.5KW	000000	000000
1811002510	1-8110	0251	STARTER; HITACHI	000000	000000
1811002520	1-8110	0252	STARTER; HITACHI	000000	000000
1811002521	1-8110	0252	STARTER; HITACHI	000000	000005
1811002530	1-8110	0253	STARTER; NIKKO	000000	000000
1811002531	1-8110	0253	STARTER; NIKKO	000000	000000
1811002532	1-8110	0253	STARTER; NIKKO	000000	000002
1811002550	1-8110	0255	STARTER	000000	000000
1811002580	1-8110	0258	STARTER; NIKKO	000000	000000
1811002610	1-8110	0261	STARTER; 12V 3KW	000000	000000
1811002641	1-8110	0264	STARTER ASM	000000	000000
1811002660	1-8110	0266	STARTER ASM;	000000	000000
1811002681	1-8110	0268	STARTER ASM: 24V-7.4KW	000000	000004
1811002722	1-8110	0272	STARTER	000000	000001
1811002741	1-8110	0274	STARTER; NIKO	000000	000001
1811002770	1-8110	0277	STARTER; NIKKO	000000	000000
1811002880	1-8110	0288	STARTER; NIKKO	000000	000000
1811002890	1-8110	0289	STARTER	000000	000000
1811002891	1-8110	0289	STARTER	000000	000001
1811002910	1-8110	0291	STARTER; NIKKO	000000	000000
1811002940	1-8110	0294	STARTER; NIKKO	000000	000000
1811002941	1-8110	0294	STARTER; NIKKO	000000	000016
1811003201	1-8110	0320	STARTER ASM	000000	000000
1811003202	1-8110	0320	STARTER ASM	000000	000017
1811003205	1-8110	0320	STARTER ASM	000000	000000
1811003312	1-8110	0331	STARTER ASM	000001	000001
1811003380	1-8110	0338	STARTER ASM	000000	000000
1811003381	1-8110	0338	STARTER ASM	000000	000141
1811003411	1-8110	0341	STARTER ASM	000000	000000
1811003412	1-8110	0341	STARTER ASM	000000	000000
1811003413	1-8110	0341	STARTER ASM	000009	000000
1811003414	1-8110	0341	STARTER ASM	000000	000040
1811003421	1-8110	0342	STARTER ASM	000000	000000
1811003430	1-8110	0343	STARTER; NIKKO	000000	000000
1811003431	1-8110	0343	STARTER; NIKKO	000000	000000
1811004010	1-8110	0401	STARTER ASM	000000	000000
1811004011	1-8110	0401	STARTER ASM	000000	000000
1811004013	1-8110	0401	STARTER ASM	000000	000000
1811004080	1-8110	0408	STARTER ASM	000000	000000
1811004121	1-8110	0412	STARTER	000000	000002
1811004140	1-8110	0414	STARTER ASM	000000	000000
1811004142	1-8110	0414	STARTER ASM	000000	000045
1811004150	1-8110	0415	STARTER ASM	000000	000005
1811004212	1-8110	0421	STARTER ASM	000000	000002
1811004213	1-8110	0421	STARTER ASM	000000	000000
1811004220	1-8110	0422	STARTER ASM	000000	000000
1811004322	1-8110	0432	STARTER ASM	000000	000020

1811091210	1-8110	9121	TERMINAL ASM	000000	000000
1811100280	1-8111	0028	BRUSH	000000	000000
1811110010	1-8111	1001	YOKE ASM	000000	000000
1811110030	1-8111	1003	YOKE ASM; STARTER	000000	000000
1811110040	1-8111	1004	YOKE ASM; STARTER	000000	000000
1811110070	1-8111	1007	YOKE ASM.	000000	000000
1811110090	1-8111	1009	YOKE; STARTER	000000	000000
1811110110	1-8111	1011	YOKE; STARTER	000000	000000
1811110120	1-8111	1012	YOKE; STARTER	000000	000000
1811120010	1-8111	2001	COIL; FIELD	000000	000000
1811120020	1-8111	2002	COIL; FIELD	000000	000000
1811120030			FIELD COIL	000000	000000
1811120050			COIL; FIELD	000000	000000
1811120070	1-8111	2007	COIL FIELD	000000	000000
1811120090	1-8111	2009	COIL; FIELD	000001	000000
1811120100	1-8111	2010	COIL; FIELD, STARTER E120	000000	000000
1811120140	1-8111	2014	COIL; FIELD	000000	000000
1811120150	1-8111	2015	COIL; FIELD	000000	000000
1811120180	1-8111	2018	COIL; FIELD	000000	000000
1811120190	1-8111	2019	COIL; FIELD	000000	000000
1811120200	1-8111	2020	COIL ASM ;FIELD	000000	000000
1811120220	1-8111	2022	COIL; FIELD 6RB1	000000	000001
1811120280	1-8111	2028	COIL; FIELD	000000	000000
1811120290	1-8111	2029	COIL;FIELD	000002	000000
1811120330	1-8111	2033	COIL; FIELD	000000	000000
1811120370	1-8111	2037	FIELD COIL	000000	000000
1811124250	1-8111	2425	PACKING	000000	000000
1811130070	1-8111	3007	FRT COVER	000000	000000
1811130090	1-8111	3009	CASE ASM; GEAR	000000	000000
1811130150	1-8111	3015	CASE ASM; GEAR	000000	000000
1811130270	1-8111	3027	BRACKET;CENTER	000000	000000
1811130330	1-8111	3033	BRACKET ASM	000000	000000
1811130350	1-8111	3035	BRACKET ASM FRT	000000	000000
1811130360	1-8111	3036	COVER ASM; (DISCONTINUED)	000000	000000
1811130400	1-8111	3040	BRACKET; FRONT	000000	000000
1811130530	1-8111	3053	BRACKET; FRONT	000000	000000
1811130560	1-8111	3056	COVER ASM; CENTER	000001	000000
1811130570	1-8111	3057	BRACKET; CENTER	000000	000000
1811130590	1-8111	3059	BRACKET ASM;FRT	000000	000000
1811130730	1-8111	3073	BRACKET; CENTER	000000	000000
1811130740	1-8111	3074	BRACKET; CENTER	000000	000000
1811130750	1-8111	3075	COVER ASM; FRONT	000000	000001
1811130760	1-8111	3076	COVER ASM; CENTER	000001	000000
1811130770	1-8111	3077	BRACKET; CENTER	000000	000002
1811130790	1-8111	3079	CASE ASM; GEAR	000000	000000
1811130810	1-8111	3081	BRACKET; CENTER	000000	000000
1811130820	1-8111	3082	BRACKET; CENTER	000002	000000

1811130830	1-8111	3083	BRACKET ASM; CENTER	000000	000000
1811130840	1-8111	3084	BRACKET; CENTER	000001	000000
1811130870	1-8111	3087	CASE ASM; GEAR	000000	000000
1811130880	1-8111	3088	CASE ASM; GEAR	000000	000000
1811130920	1-8111	3092	CASE; PINION, STARTER	000000	000000
1811130930	1-8111	3093	BRACKET FRT	000000	000000
1811130940	1-8111	3094	BRACKET; CENTER	000000	000000
1811130950	1-8111	3095	BRACKET; CENTER	000000	000000
1811131040	1-8111	3104	BRACKET; FRONT	000000	000000
1811131120	1-8111	3112	BRACKET ASM; FRT	000000	000000
1811131180	1-8111	3118	CASE; PINION STARTER	000000	000000
1811131190	1-8111	3119	BRACKET; CENTER	000000	000000
1811131200	1-8111	3120	BRACKET ASM; FRT.	000000	000000
1811131210	1-8111	3121	BRACKET ASM; CENTER	000000	000000
1811131220	1-8111	3122	COVER; RR COVER STARTER	000000	000002
1811131230	1-8111	3123	BRACKET ASM.; FRT.	000000	000000
1811131310	1-8111	3131	HOLDER; BRUSH STARTER	000001	000000
1811140010	1-8111	4001	FIELD, COIL	000000	000000
1811140130	1-8111	4013	BRACKET; CENTER	000000	000000
1811140180	1-8111	4018	HOUSING; STARTER	000000	000000
1811140190	1-8111	4019	CASE ASM; GEAR	000000	000000
1811140200	1-8111	4020	CASE ASM; GEAR	000000	000000
1811140210	1-8111	4021	CASE ASM; GEAR	000002	000001
1811140250	1-8111	4025	BRACKET ASM	000000	000000
1811140260	1-8111	4026	CASE ASM; GEAR	000000	000000
1811140280	1-8111	4028	CASE ASM; GEAR	000000	000000
1811140300	1-8111	4030	BRACKET; CENTER	000000	000000
1811140330	1-8111	4033	CASE; PINION, ST	000000	000002
1811140340	1-8111	4034	BRACKET ASM; CENTER	000000	000000
1811140420	1-8111	4042	CASE; PINION, STARTER	000000	000002
1811150010	1-8111	5001	COVER; REAR BRACKET DA640	000000	000000
1811150070	1-8111	5007	REAR COVER ASSY	000000	000000
1811150080	1-8111	5008	COVER ASM; REAR	000000	000000
1811150140	1-8111	5014	COVER ASM; REAR	000000	000000
1811150240	1-8111	5024	REAR COVER; STARTER END	000000	000000
1811150250	1-8111	5025	COVER ASM; REAR	000001	000000
1811150280	1-8111	5028	COVER ASM; REAR 6RB1	000001	000000
1811150290	1-8111	5029	BRACKET; RR	000000	000000
1811150300	1-8111	5030	BRACKET ASM ; RR	000000	000000
1811150360	1-8111	5036	BRACKET; REAR	000000	000000
1811150370	1-8111	5037	COVER; REAR	000000	000000
1811150460	1-8111	5046	COVER ASM; REAR	000000	000000
1811150470	1-8111	5047	COVER; REAR	000000	000000
1811150480	1-8111	5048	BRACKET ASM: REAR	000000	000000
1811150620	1-8111	5062	BRACKET REAR	000000	000000
1811150650	1-8111	5065	COVER ASM; REAR	000000	000000
1811150660	1-8111	5066	COVER; REAR	000004	000000

1811150690	1-8111	5069	COVER ASM; REAR 6BD1	000001	000000
1811150700	1-8111	5070	BRACKET REAR	000001	000000
1811151790	1-8111	5179	COVER ASM; REAR	000000	000000
1811151800	1-8111	5180	COVER; REAR	000001	000000
1811151860	1-8111	5186	COVER; REAR	000000	000000
1811151880	1-8111	5188	COVER; RR COVER STARTER	000006	000000
1811151890	1-8111	5189	BRACKET ASM RR	000000	000000
1811151900	1-8111	5190	BRACKET RR	000000	000000
1811151970	1-8111	5197	BRACKET;REAR	000000	000000
1811152020	1-8111	5202	BRACKET ASM; RR	000000	000000
1811152030	1-8111	5203	BRACKET; RR	000000	000000
1811152160	1-8111	5216	BRACKET ASM; RR.	000000	000000
1811152190	1-8111	5219	COVER; RR COVER STARTER	000000	000000
1811152300	1-8111	5230	COVER ASM;RR STARTER	000000	000000
1811152330	1-8111	5233	COVER;RR COVER STARTER	000000	000000
1811152340	1-8111	5234	COVER;RR COVER STARTER	000002	000000
1811160010	1-8111	6001	BRUSH ASM	000000	000000
1811160060	1-8111	6006	BRUSH	000011	000005
1811160070	1-8111	6007	BRUSH; STARTER	000011	000000
1811160090	1-8111	6009	BRUSH; STARTER E120	000000	000012
1811160120	1-8111	6012	BAR; CONNECTOR	000000	000000
1811160170	1-8111	6017	BRUSH (+)	000039	000000
1811160180	1-8111	6018	BRUSH (-)	000000	000000
1811160210	1-8111	6021	BRUSH	000010	000000
1811160220	1-8111	6022	BRUSH	000015	000000
1811160230	1-8111	6023	BRUSH (+)	000000	000000
1811160240	1-8111	6024	BRUSH (+)	000000	000000
1811160250	1-8111	6025	BRUSH	000000	000000
1811160260	1-8111	6026	LEAD WIRE	000000	000000
1811160270	1-8111	6027	BRUSH	000000	000000
1811160280	1-8111	6028	BRUSH	000000	000029
1811160340	1-8111	6034	WIRE;LEAD	000002	000000
1811160350	1-8111	6035	BRUSH ASM.	000021	000000
1811160420	1-8111	6042	BRUSH (+) 6BB/BD1	000002	000000
1811160430	1-8111	6043	HOLDER ASM;	000003	000000
1811160440	1-8111	6044	WIRE ASM; LEAD	000000	000000
1811160450	1-8111	6045	BRUSH (+)	000000	000000
1811160480	1-8111	6048	BRUSH; NEG. (-), STARTER	000000	000045
1811160490	1-8111	6049	BRUSH; POS. (+), STARTER	000000	000389
1811160500	1-8111	6050	BRUSH (+-)	000003	000000
1811160570	1-8111	6057	BRUSH	000007	000000
1811160580	1-8111	6058	BRUSH	000003	000005
1811160600	1-8111	6060	BRUSH (+) 6BB/BD1	000000	000000
1811160610	1-8111	6061	COVER ASM;RR STARTER	000000	000000
1811160640	1-8111	6064	HOLDER ASM;	000000	000003
1811160660	1-8111	6066	BRUSH; (+), STARTER	000002	000000
1811160670	1-8111	6067	BRUSH ASM; STARTER	000053	000000

1811160680	1-8111	6068	BRUSH; (+) STARTER	000002	000000
1811160720	1-8111	6072	BRUSH (+) STARTER	000000	000000
1811160760	1-8111	6076	WIRE; LEAD STAR	000002	000000
1811170030	1-8111	7003	BRUSH SPRING	000000	000000
1811170040	1-8111	7004	BRUSH; SPRING	000000	000000
1811170090	1-8111	7009	BRUSH; SPRING	000000	000000
1811170100	1-8111	7010	SPRING; BRU	000000	000000
1811170110	1-8111	7011	BRUSH; SPRING E120	000008	000000
1811170120	1-8111	7012	BRUSH SPRING	000000	000000
1811170140	1-8111	7014	SPRING; BRUSH	000000	000000
1811170150	1-8111	7015	SPRING; BRUSH	000000	000000
1811170160	1-8111	7016	SPRING; BRUSH	000000	000020
1811180010	1-8111	8001	BRUSH; HOLDER	000001	000003
1811180020	1-8111	8002	BRUSH HOLDER	000000	000000
1811180040	1-8111	8004	HOLDER ASM; BRUSH	000000	000000
1811180050	1-8111	8005	HOLDER; BRUSH E120	000004	000000
1811180060	1-8111	8006	HOLDER ASM; BRUSH	000000	000000
1811180070	1-8111	8007	COVER ASM; REAR, ALT	000000	000000
1811180080	1-8111	8008	CASE ASM; GEAR, ALT	000000	000000
1811180090	1-8111	8009	HOLDER	000161	000000
1811180110	1-8111	8011	CLIP; WIRE	000006	000000
1811180140	1-8111	8014	HOLDER SET; SUB SWITCH	000000	000000
1811180180	1-8111	8018	HOLDER; BRUSH	000003	000000
1811180190	1-8111	8019	HOLDER ASM; BRUSH	000000	000000
1811180210	1-8111	8021	HOLDER ASM; BRUSH	000000	000001
1811180230	1-8111	8023	HOLDER ASM; BRUSH 6RB1	000000	000001
1811180250	1-8111	8025	HOLDER; BRUSH	000000	000000
1811180310	1-8111	8031	BRACKET; CENTER	000000	000000
1811180320	1-8111	8032	HOLDER; BRUSH	000001	000000
1811180330	1-8111	8033	BRACKET ASM; CENTER	000000	000000
1811180360	1-8111	8036	HOLDER; BRUSH	000001	000002
1811180380	1-8111	8038	CLIP	000000	000000
1811180390	1-8111	8039	HOLDER	000000	000000
1811180420	1-8111	8042	HOLDER ASM; BRUSH	000000	000000
1811180430	1-8111	8043	HOLDER ASM; BRUSH STARTER	000000	000001
1811180440	1-8111	8044	COVER; YOKE, WTR DR	000000	000004
1811180450	1-8111	8045	HOLDER; BRUSH STARTER	000000	000000
1811180480	1-8111	8048	HOLDER; BRUSH	000000	000000
1811180540	1-8111	8054	COVER ASM; REAR, ALT	000000	000000
1811180600	1-8111	8060	RETAINER; PINION STARTER	000001	000000
1811180610	1-8111	8061	HOLDER; BRUSH STARTER	000000	000000
1811180650	1-8111	8065	HOLDER; BRUSH STARTER	000000	000000
1811190010	1-8111	9001	SEAL ASM	000000	000000
1811190020	1-8111	9002	METAL; CENTER	000004	000000
1811190030	1-8111	9003	PINION; METAL	000000	000000
1811190040	1-8111	9004	BRUSH; STARTER	000005	000000
1811190330	1-8111	9033	BRUSH ASM.	000000	000000

1811210010	1-8112	1001	ARMATURE	000000	000000
1811210070	1-8112	1007	ARMATURE	000000	000000
1811210080	1-8112	1008	ARMATURE; STARTER	000000	000000
1811210120	1-8112	1012	ARMATURE ASM.	000000	000000
1811210160	1-8112	1016	ARMATURE ASM. E120	000000	000000
1811210200	1-8112	1020	ARMATURE ASM.	000000	000000
1811210240	1-8112	1024	ARMATURE ASM.	000000	000000
1811210250	1-8112	1025	ARMATURE ASM.	000000	000001
1811210260	1-8112	1026	ARMATURE ASM.	000000	000000
1811210280	1-8112	1028	ARMATURE ASM	000003	000000
1811210281	1-8112	1028	ARMATURE ASM	000000	000000
1811210310	1-8112	1031	ARMATURE ASM.	000000	000000
1811210330	1-8112	1033	ARMATURE ASM.	000000	000000
1811210370	1-8112	1037	ARMATURE ASM.	000001	000000
1811210371	1-8112	1037	ARMATURE ASM.	000000	000000
1811210420	1-8112	1042	ARMATURE; STARTER	000000	000000
1811210430	1-8112	1043	ARMATURE ASM.	000000	000000
1811210440	1-8112	1044	ARMATURE ASM.	000001	000000
1811210480	1-8112	1048	ARMATURE ASM.	000000	000000
1811210521	1-8112	1052	ARMATURE ASM.	000000	000001
1811210550	1-8112	1055	ARMATURE; STARTER	000000	000000
1811210560	1-8112	1056	ARMATURE; STARTER	000000	000000
1811210600	1-8112	1060	ARMATURE ASM.	000000	000000
1811210620	1-8112	1062	ARMATURE; STARTER	000000	000000
1811210660	1-8112	1066	HOLDER; BRUSH STARTER	000009	000000
1811210670	1-8112	1067	ARMATURE; STARTER	000000	000001
1811210710	1-8112	1071	HOLDER; BRUSH STARTER	000004	000001
1811210740	1-8112	1074	ARMATURE; STARTER	000002	000000
1811211750	1-8112	1175	WASHER KIT; THRUST	000002	000000
1811220040	1-8112	2004	PINION CLUTCH ASSY	000003	000000
1811220120	1-8112	2012	PINION; STARTER	000001	000000
1811220130	1-8112	2013	PINION; STARTER DH100	000001	000000
1811220240	1-8112	2024	PULLEY**DISCONTINUED**	000000	000000
1811220310	1-8112	2031	CLUTCH ASM	000000	000000
1811220390	1-8112	2039	CLUTCH ASM	000000	000000
1811220400	1-8112	2040	PINION; STARTER	000001	000000
1811220410	1-8112	2041	CLUTCH ASM; PINION	000004	000000
1811220490	1-8112	2049	CLUTCH; PINION, STARTER	000000	000000
1811220500	1-8112	2050	O.R. CLUTCH ASM.	000000	000000
1811220510	1-8112	2051	CLUTCH ASM.;	000000	000000
1811220560	1-8112	2056	CLUTCH ASM; PINION	000001	000000
1811220600	1-8112	2060	SHAFT ASM; STARTER	000000	000000
1811220610	1-8112	2061	SHAFT; STARTER	000000	000000
1811230030	1-8112	3003	PINION; STARTER E120	000004	000000
1811230040	1-8112	3004	PINION; STARTER	000001	000000
1811230080	1-8112	3008	PINION; STARTER	000000	000000
1811230090	1-8112	3009	CLUTCH; PINION STARTER	000000	000000

1811230096	1-8112	3009	CLUTCH; PINION STARTER	000000	000000
1811230110	1-8112	3011	PINION ASM	000000	000000
1811230120	1-8112	3012	PINION ASM.	000000	000000
1811230140	1-8112	3014	PINION; STARTER	000005	000000
1811230170	1-8112	3017	SHAFT ASM.	000000	000000
1811230190	1-8112	3019	PINION; STARTER	000000	000000
1811230240	1-8112	3024	SHAFT ASM.	000002	000000
1811230250	1-8112	3025	COVER ASM; FRONT	000000	000000
1811230310	1-8112	3031	PINION; STARTER	000000	000000
1811230340	1-8112	3034	GEAR; CLU STARTER, (LOWER)	000000	000000
1811230350	1-8112	3035	GEAR; CLU STARTER	000000	000007
1811230360	1-8112	3036	SHAFT ASM	000000	000000
1811230450	1-8112	3045	SHAFT ASM; STARTER	000000	000000
1811230560	1-8112	3056	GEAR; STARTER	000002	000001
1811230570	1-8112	3057	WASHER; THRUST AMTR STARTE	000002	000000
1811230580	1-8112	3058	CASE; PINION, STARTER	000003	000000
1811230590	1-8112	3059	GEAR; STARETER	000002	000000
1811230610	1-8112	3061	WASHER; THRUST, ARMATURE,	000000	000001
1811230650	1-8112	3065	CASE; PINION, STARTER	000000	000000
1811234350	1-8112	3435	SHAFT ASM.	000000	000000
1811240010	1-8112	4001	PLATE; CLUTCH, BENDIX E12	000000	000000
1811260020	1-8112	6002	SLEEVE ASM; ADVANCE	000000	000000
1811270020	1-8112	7002	LEVER; SHIFT 8MA1	000000	000000
1811270060	1-8112	7006	PINION; STARTER	000000	000000
1811270070	1-8112	7007	FORK; STARTER	000000	000000
1811270090	1-8112	7009	LEVER; SHIFT	000001	000000
1811270110	1-8112	7011	PINION; STARTER	000000	000000
1811270120	1-8112	7012	LEVER; SHIFT	000000	000000
1811270200	1-8112	7020	LEVER; SHIFT	000003	000000
1811270220	1-8112	7022	LEVER; SHAFT	000000	000000
1811270310	1-8112	7031	LEVER; SHIFT	000002	000000
1811270320	1-8112	7032	LEVER; SHIFT	000000	000000
1811270400	1-8112	7040	LEVER; SHIFT	000000	000000
1811270420	1-8112	7042	LEVER; SHIFT	000000	000000
1811290010	1-8112	9001	BUSH	000000	000000
1811290020	1-8112	9002	METAL	000000	000000
1811290030			THROUGH BOLT	000000	000000
1811290040			METAL	000000	000000
1811290050	1-8112	9005	METAL	000000	000000
1811290060	1-8112	9006	METAL	000000	000000
1811290070	1-8112	9007	BRUSH; HOLDER	000000	000000
1811290090	1-8112	9009	CONTACTER	000000	000000
1811290110	1-8112	9011	METAL	000000	000000
1811290220			PACKING	000000	000000
1811290250			BOLT; THROUGH	000000	000000
1811290270	1-8112	9027	WASHER	000000	000000
1811290280	1-8112	9028	WASHER	000000	000000

1811290290	1-8112	9029	WASHER; THRUST SET DA220	000000	000000
1811290300	1-8112	9030	METAL "C"	000001	000000
1811290330	1-8112	9033	WASHER; THRUST, FRONT	000000	000000
1811290340	1-8112	9034	BOLTS	000000	000000
1811290360	1-8112	9036	PINION; STARTER	000000	000000
1811290380	1-8112	9038	CONNECT BAR; STARTER	000000	000000
1811290400	1-8112	9040	LEVER PIN; STARTER	000001	000000
1811290410	1-8112	9041	BUSH	000002	000010
1811290420	1-8112	9042	BUSHING	000004	000000
1811290430	1-8112	9043	SCREW; SET, CORE E120	000000	000000
1811290470	1-8112	9047	METAL	000000	000000
1811290480	1-8112	9048	METAL	000000	000000
1811290550	1-8112	9055	METAL RR	000003	000000
1811290590	1-8112	9059	PLATE SET; ADJ	000000	000000
1811290630	1-8112	9063	HOLDER; CLIP	000000	000000
1811290640	1-8112	9064	SPRING SET E120	000000	000000
1811290660	1-8112	9066	BOLT; THROUGH	000000	000000
1811290670	1-8112	9067	ARMATURE; STARTER	000000	000000
1811290700	1-8112	9070	STOPPER SET; PINION	000005	000000
1811290710	1-8112	9071	WASHER SET; THRUST	000000	000000
1811290720	1-8112	9072	BRACKET; CENTER	000000	000000
1811290740	1-8112	9074	METAL	000008	000000
1811290770	1-8112	9077	STOPPER SET; PINION	000000	000000
1811290780	1-8112	9078	WASHER; THRUST E120	000000	000000
1811290790	1-8112	9079	METAL	000005	000000
1811290802	1-8112	9080	METAL 8MA1-UNLISTED	000000	000000
1811290810	1-8112	9081	BOLT; THROUGH E120	000000	000000
1811290870	1-8112	9087	BEARING	000000	000000
1811290930	1-8112	9093	O-RING	000000	000000
1811290940	1-8112	9094	SUPERSEDED**CONTACTOR	000000	000000
1811290960	1-8112	9096	BEARING; BALL	000000	000000
1811290980	1-8112	9098	TUBE; INSULATE	000000	000000
1811291010	1-8112	9101	WASHER; TUBE	000003	000000
1811291020	1-8112	9102	TUBE; INSULATE	000003	000000
1811291030	1-8112	9103	WASHER; INSULATE	000003	000000
1811291040	1-8112	9104	RING; STOP	000000	000000
1811291090	1-8112	9109	METAL	000000	000000
1811291200	1-8112	9120	CAP	000000	000000
1811291210	1-8112	9121	TERMINAL ASM.	000000	000000
1811291220	1-8112	9122	PLUNGER ASM.	000000	000000
1811291430	1-8112	9143	STOPPER SET; PINION	000000	000000
1811291440	1-8112	9144	BEARING	000000	000000
1811291450	1-8112	9145	METAL	000000	000000
1811291460	1-8112	9146	METAL	000000	000000
1811291480	1-8112	9148	COVER SET; DUST	000000	000000
1811291490	1-8112	9149	METAL	000000	000000
1811291540	1-8112	9154	WASHER; THROUGH BOLT	000000	000000

1811291550	1-8112	9155	SEAL KIT; STARTER	000002	000000
1811291580	1-8112	9158	CONTACTOR; MAGNETIC	000000	000000
1811291640	1-8112	9164	COVER SET; DUST	000005	000000
1811291650	1-8112	9165	SPRING 6RB1	000001	000000
1811291740	1-8112	9174	WASHER	000000	000000
1811291750	1-8112	9175	WASHER KIT	000000	000000
1811291760	1-8112	9176	STOPPER SET; PINION	000001	000000
1811291770	1-8112	9177	PIPE; DRAIN, STARTER	000004	000000
1811291780	1-8112	9178	SPRING; BRUSH	000001	000000
1811291790	1-8112	9179	SEAL; OIL	000000	000000
1811291800	1-8112	9180	O-RING	000000	000000
1811291810	1-8112	9181	SHAFT	000000	000000
1811291820	1-8112	9182	COVER SET; DUST	000002	000000
1811291830	1-8112	9183	BOLT; THROUGH	000000	000000
1811291840	1-8112	9184	NUT	000000	000000
1811291850	1-8112	9185	PIN; LEVER, STARTER	000003	000000
1811291870	1-8112	9187	METAL	000000	000000
1811291890	1-8112	9189	RING; CLIP	000000	000000
1811291900	1-8112	9190	STOPPER; PINION	000000	000000
1811291910	1-8112	9191	SCREW	000000	000000
1811291920	1-8112	9192	BUSH; INSULATE	000000	000000
1811291930	1-8112	9193	CONTACTOR; MAGNETIC	000000	000000
1811291940	1-8112	9194	WASHER	000000	000000
1811291950	1-8112	9195	TERMINAL ASM	000000	000000
1811291960	1-8112	9196	BEARING; BALL, REAR	000005	000000
1811292000	1-8112	9200	BEARING; BALL	000000	000000
1811292020	1-8112	9202	BOLT;	000000	000000
1811292050	1-8112	9205	PACKING	000000	000000
1811292060	1-8112	9206	WASHER	000000	000000
1811292090	1-8112	9209	WASHER	000000	000000
1811292100	1-8112	9210	WASHER	000000	000000
1811292110	1-8112	9211	WASHER	000000	000000
1811292120	1-8112	9212	WASHER	000000	000000
1811292130	1-8112	9213	BEARING BALL	000002	000005
1811292140	1-8112	9214	WASHER KIT; THRUST 6RB1T	000025	000000
1811292160	1-8112	9216	METAL	000009	000000
1811292170	1-8112	9217	SPRING; BRUSH, STARTER	000000	000000
1811292180	1-8112	9218	COVER; DUST	000003	000000
1811292210	1-8112	9221	SHAFT	000003	000000
1811292220	1-8112	9222	BEARING; BALL	000003	000001
1811292230	1-8112	9223	BRACKET; CENTER	000000	000000
1811292240	1-8112	9224	BRACKET; CENTER, STARTER	000001	000000
1811292250	1-8112	9225	METAL	000000	000000
1811292260	1-8112	9226	LEVER; SHIFT	000000	000000
1811292270	1-8112	9227	COVER; TERMINAL	000001	000000
1811292300	1-8112	9230	BOLT*	000000	000000
1811292320	1-8112	9232	BOLT; THROUGH	000007	000000

1811292350	1-8112	9235	SEAL WASHER	000000	000000
1811292360	1-8112	9236	BUSHING; RUBBER	000000	000000
1811292410	1-8112	9241	TERMINAL ASM	000000	000000
1811292450	1-8112	9245	WASHER; INSULATE	000000	000000
1811292460	1-8112	9246	BOLT;	000000	000000
1811292480	1-8112	9248	SEAL ASM	000000	000000
1811292590	1-8112	9259	TERMINAL ASM; (2)	000000	000000
1811292650	1-8112	9265	CAP; RUBBER	000000	000000
1811292750	1-8112	9275	SEAL*DISCONTINUED*	000000	000000
1811292860	1-8112	9286	METAL	000008	000000
1811292870	1-8112	9287	PLATE; MAGNETIC SWITCH	000000	000000
1811292890	1-8112	9289	WASHER; STARTER CORE,4BB1	000018	000001
1811292900	1-8112	9290	WASHER; ADJUST	000017	000000
1811292910	1-8112	9291	METAL	000001	000000
1811292920	1-8112	9292	BOLT*	000005	000010
1811292930	1-8112	9293	BOLT*	000000	000000
1811292940	1-8112	9294	BEARING; BALL	000000	000001
1811292950	1-8112	9295	WASHER; INSULATE	000000	000000
1811292980	1-8112	9298	BEARING; BALL	000000	000001
1811292990	1-8112	9299	PACKING	000000	000000
1811293000	1-8112	9300	PACKING	000000	000000
1811293010	1-8112	9301	SEAL KIT	000000	000000
1811293020	1-8112	9302	METAL; FRONT-BUSH FOR STA	000002	000000
1811293030	1-8112	9303	RING; CLIP	000025	000030
1811293040	1-8112	9304	STOPPER; PINION	000003	000000
1811293050	1-8112	9305	COVER; STARTER	000000	000000
1811293060	1-8112	9306	COVER; TERMINAL	000001	000000
1811293070	1-8112	9307	BOLT; THROUGH	000001	000000
1811293720	1-8112	9372	STOPPER SET; PINION	000005	000000
1811293730	1-8112	9373	CLIP;PINION STO	000000	000000
1811293740	1-8112	9374	BRACKET; CENTER	000000	000000
1811293750	1-8112	9375	STOPPER SET; PINION	000000	000000
1811293800	1-8112	9380	BRACKET; CENTER	000000	000000
1811293830	1-8112	9383	BRACKET; CENTER	000000	000000
1811293840	1-8112	9384	TERMINAL	000002	000000
1811293850	1-8112	9385	BEARING; BALL	000000	000000
1811293860	1-8112	9386	BEARING BALL	000000	000000
1811293870	1-8112	9387	BOLT	000003	000000
1811293880	1-8112	9388	CAP; RUBBER MAGNETIC SWIT	000000	000000
1811293890	1-8112	9389	O-RING	000000	000000
1811293900	1-8112	9390	O-RING	000000	000000
1811293920	1-8112	9392	O-RING	000001	000000
1811293930	1-8112	9393	O-RING	000000	000000
1811293940	1-8112	9394	SEAL KIT	000000	000000
1811293950	1-8112	9395	BEARING; BALL	000000	000000
1811293960	1-8112	9396	COIL ASM; FIELD	000003	000000
1811293970	1-8112	9397	METAL	000004	000000

1811294010	1-8112	9401	BOLT	000013	000003
1811294020	1-8112	9402	SHAFT ASM.	000000	000000
1811294030	1-8112	9403	BOLT*	000000	000000
1811294060	1-8112	9406	SEAL KIT	000006	000000
1811294170	1-8112	9417	CAP;RUBBER,TERMINAL	000000	000000
1811294180	1-8112	9418	SEAL KIT	000000	000000
1811294190	1-8112	9419	BOLT	000000	000000
1811294210	1-8112	9421	COVER SET; DUST	000000	000000
1811294220	1-8112	9422	LEVER ASM; SHIFT	000000	000000
1811294340	1-8112	9434	SPACER; STARTER-BLOCK	000000	000000
1811294360	1-8112	9436	COVER	000000	000000
1811294370	1-8112	9437	TERMINAL ASM.	000000	000000
1811294380	1-8112	9438	SEAL KIT; STARTER	000006	000000
1811294400	1-8112	9440	SEAL KIT; STARTER	000000	000000
1811294420	1-8112	9442	LEVER ASM; SHIFT	000000	000000
1811294450	1-8112	9445	WASHER; INSUALTE	000000	000000
1811294460	1-8112	9446	WASHER; INSULATE	000000	000000
1811294470	1-8112	9447	WASHER; INSULATE	000000	000000
1811294480	1-8112	9448	WASHER; INSUALTE	000000	000000
1811294590	1-8112	9459	BOLT;	000000	000000
1811294680	1-8112	9468	STOPPER SET; PINION	000000	000000
1811294690	1-8112	9469	O-RING	000000	000000
1811294700	1-8112	9470	COVER SET; DUST	000000	000000
1811294710	1-8112	9471	PACKING	000000	000000
1811294720	1-8112	9472	WASHER; SEAL	000000	000000
1811294780	1-8112	9478	RETAINER;	000000	000000
1811294790	1-8112	9479	COVER;DUST,RR COVER,START	000000	000000
1811294830	1-8112	9483	SCREW; SWITCH,STARTER	000021	000000
1811294950	1-8112	9495	BEARING; ARMATURE,STARTER	000000	000000
1811294980	1-8112	9498	BOLT; END FRAME	000000	000000
1811294990	1-8112	9499	PLUNGER;SUB ASM	000000	000000
1811295000	1-8112	9500	GASKET; SW. COVER	000000	000000
1811295010	1-8112	9501	COVER; DUST SW STARTER	000000	000000
1811295020	1-8112	9502	SEAL;YOKE,STARTER	000000	000000
1811295030	1-8112	9503	SCREW;SW. COVER	000000	000000
1811295040	1-8112	9504	COVER; TERMINAL STARTER	000000	000007
1811295060	1-8112	9506	TERMINAL KIT	000000	000000
1811295070	1-8112	9507	TERMINAL KIT	000000	000000
1811295090	1-8112	9509	TERMINAL ASM	000000	000000
1811295100	1-8112	9510	TERMINAL ASM.	000000	000000
1811295110	1-8112	9511	WASHER	000000	000000
1811295140	1-8112	9514	SEAL KIT; STARTER	000000	000000
1811295150	1-8112	9515	PLUNGER;COVER	000000	000000
1811295160	1-8112	9516	COIL ASM; FIELD	000000	000000
1811295170	1-8112	9517	SEAL KIT	000000	000000
1811295180	1-8112	9518	BUSHING; STARTER	000001	000000
1811295190	1-8112	9519	BOLT; THROUGH S	000000	000000

1811295200	1-8112	9520	COVER; RR COVER STARTER	000001	000004
1811295230	1-8112	9523	WASHER; INSULATE	000000	000000
1811295350	1-8112	9535	FRAME; END	000000	000000
1811295460	1-8112	9546	TERMINAL ASM.	000000	000000
1811295470	1-8112	9547	WASHER	000000	000000
1811295480	1-8112	9548	WASHER; INSULATE	000000	000000
1811295490	1-8112	9549	BOLT*	000000	000000
1811295500	1-8112	9550	O-RING	000000	000000
1811295510	1-8112	9551	TUBE; INSULATE	000000	000000
1811295520	1-8112	9552	TUBE; INSULATE	000000	000000
1811295540	1-8112	9554	WASHER	000000	000000
1811295550	1-8112	9555	SCREW	000000	000000
1811295560	1-8112	9556	METAL	000000	000000
1811295570	1-8112	9557	SHAFT ASM	000000	000000
1811295580	1-8112	9558	SCREW	000000	000000
1811295670	1-8112	9567	CAP; GUM	000028	000000
1811295680	1-8112	9568	CAP	000000	000000
1811295690	1-8112	9569	SEAL KIT; STARTER	000000	000000
1811295700	1-8112	9570	SEAL ASM;	000000	000000
1811295980	1-8112	9598	PLATE	000003	000000
1811296010	1-8112	9601	SEAL KIT; STARTER	000000	000003
1811296020	1-8112	9602	SCREW	000005	000000
1811296040	1-8112	9604	BOLT*	000000	000000
1811296090	1-8112	9609	BEARING; BALL	000000	000000
1811296140	1-8112	9614	CLUTCH; PINION, STARTER	000000	000000
1811296270	1-8112	9627	BUSH; INSULATE	000000	000000
1811296290	1-8112	9629	SHAFT ASM.	000000	000000
1811296300	1-8112	9630	BEARING; BALL	000000	000000
1811296460	1-8112	9646	RIVET	000000	000000
1811296500	1-8112	9650	YOKE ASM.	000000	000000
1811296510	1-8112	9651	BRACKET ASM; FRT.	000000	000000
1811296511	1-8112	9651	BRACKET ASM; FRT.	000000	000001
1811296520	1-8112	9652	ARMATURE ASM.	000001	000000
1811296670	1-8112	9667	SCREW; RR COVER, STARTER	000000	000000
1811296680	1-8112	9668	PIPE; DRAIN, RR COVER STRTR	000000	000004
1811296690	1-8112	9669	PLUNGER; ENGAGE SW STARTE	000000	000000
1811296730	1-8112	9673	WASHER	000000	000000
1811296750	1-8112	9675	BOLT; THROUGH, STARTER	000000	000000
1811296760	1-8112	9676	BOLT; THROUGH, STARTER	000000	000027
1811296770	1-8112	9677	PIPE; DRAIN-STR	000000	000000
1811296980	1-8112	9698	BOLT; THROUGH	000036	000000
1811297060	1-8112	9706	BOLT; THROUGH STARTER	000000	000000
1811297080	1-8112	9708	BOLT; THROUGH, STARTER	000001	000000
1811297090	1-8112	9709	WASHER; GEAR SHAFT STARTE	000000	000001
1811297130	1-8112	9713	BEARING; ARMATURE STARTER	000003	000000
1811297170	1-8112	9717	PIPE; DRAIN RR COVER STRTR	000000	000000
1811297180	1-8112	9718	PIPE; DRAIN RR COVER STRTR	000000	000000

1811297190	1-8112	9719	SEAL KIT; STARTER	000000	000000
1811297220	1-8112	9722	BOLT; THROUGH STARTER	000002	000000
1811297370	1-8112	9737	PIPE; DRAIN RR COVER STAR	000000	000000
1811297580	1-8112	9758	BEARING; STARTER	000000	000000
1811297670	1-8112	9767	GASKET; ARMATURE	000000	000000
1811297680	1-8112	9768	SPRING; BRUSH HOLDER START	000000	000000
1811297690	1-8112	9769	BOLT; THROUGH, STARTER	000000	000017
1811297720	1-8112	9772	SPRING; PINION STARTER	000003	000000
1811297730	1-8112	9773	CLUTCH; PINION STARTER	000000	000001
1811297740	1-8112	9774	WASHER; GEAR SHAFT STARTE	000003	000000
1811297750	1-8112	9775	SEAL KIT; STARTER	000000	000001
1811297800	1-8112	9780	BEARING; STARTER	000000	000000
1811297810	1-8112	9781	WASHER; GEAR STARTER	000006	000000
1811297820	1-8112	9782	CLUTCH; PINION STARTER	000002	000001
1811297830	1-8112	9783	LEVER ; SHIFT STARTER	000001	000000
1811297840	1-8112	9784	PINION; CLU, STARTER	000000	000000
1811297850	1-8112	9785	STOPPER; PINION STARTER	000002	000001
1811297870	1-8112	9787	SCREW; SWITCH, STARTER	000000	000000
1811297900	1-8112	9790	BEARING; ARMATURE, STARTER	000000	000001
1811297940	1-8112	9794	SHAFT; GEAR STARTER	000000	000000
1811297950	1-8112	9795	GEAR; CLU STARTER	000000	000000
1811297960	1-8112	9796	GASKET; FRT CASE	000002	000000
1811297970	1-8112	9797	BEARING; STARTER	000003	000000
1811297980	1-8112	9798	SHAFT; GEAR STARTER	000003	000000
1811298000	1-8112	9800	CLUTCH; PINION, STARTER	000003	000000
1811298010	1-8112	9801	LEVER SHIFT, STARTER	000000	000000
1811298020	1-8112	9802	PINION; CLU, STARTER	000002	000000
1811298030	1-8112	9803	STOPPER; PINION STARTER	000002	000000
1811298040	1-8112	9804	COVER; STARTER	000004	000000
1811298050	1-8112	9805	SCREW; SWITCH STARTER	000000	000000
1811298060	1-8112	9806	GASKET; FRT CASE	000005	000000
1811298070	1-8112	9807	YOKE STARTER	000000	000000
1811298080	1-8112	9808	GASKET; ARMATURE	000005	000000
1811298090	1-8112	9809	SPG; BRUSH HOLDER STARTER	000004	000000
1811298270	1-8112	9827	GASKET; ARMATURE	000002	000000
1811298280	1-8112	9828	SPRING; BRUSH HOLDER STAR	000001	000001
1811298370	1-8112	9837	BEARING; ARMATURE	000000	000002
1811298400	1-8112	9840	YOKE; STARTER	000002	000000
1811298640	1-8112	9864	BEARING; ARMATURE STARTER	000000	000000
1811298650	1-8112	9865	BEARING; ARMATURE STARTER	000000	000000
1811299340	1-8112	9934	CLUTCH; PINION, STARTER	000000	000002
1811299570	1-8112	9957	SWITCH; ENGAGE STARTER	000000	000001
1811510020	1-8115	1002	SWITCH	000002	000000
1811510170	1-8115	1017	SWITCH ASM; MAGNETIC STAR	000004	000000
1811510180	1-8115	1018	SWITCH ASM; MAGNETIC E120	000002	000000
1811510220	1-8115	1022	ENGAGE ASM	000000	000000
1811510230	1-8115	1023	ENGAGE ASM; MAGNETIC SWIT	000000	000000

1811510261	1-8115	1026	SWITCH ASM E120	000000	000001
1811510300	1-8115	1030	SOLENOID	000000	000000
1811510310	1-8115	1031	SWITCH; MAGNETIC	000000	000000
1811510340	1-8115	1034	SWITCH ASM;	000001	000000
1811510350	1-8115	1035	SWITCH;MAGNETIC	000000	000000
1811510360	1-8115	1036	SWITCH ASM; MAGNETIC	000000	000002
1811510370	1-8115	1037	SWITCH ASM, MAGN.	000004	000002
1811510380	1-8115	1038	SWITCH ASM; MAGNETIC	000000	000000
1811510390	1-8115	1039	SWITCH ASM; MAGNETIC	000002	000000
1811510410	1-8115	1041	SWITCH ASM; MAGNETIC	000000	000000
1811510420	1-8115	1042	SWITCH ASM; MAGNETIC 6SA1	000000	000002
1811510470	1-8115	1047	SOLENOID	000003	000000
1811510620	1-8115	1062	SWITCH ASM; MAGNETIC 6RB1	000000	000000
1811510630	1-8115	1063	SWITCH ASM; MAGNETIC	000000	000000
1811510640	1-8115	1064	SWITCH ASM; MAGNETIC	000000	000000
1811510670	1-8115	1067	SWITCH; ENGAGE STARTER	000000	000000
1811510690	1-8115	1069	SWITCH ASM; MAGNETIC	000000	000000
1811510700	1-8115	1070	SWITCH ASM; MAG	000000	000000
1811510710	1-8115	1071	SWITCH ASM; MAGNETIC	000001	000000
1811510740	1-8115	1074	SWITCH ASM; MAGNETIC	000000	000000
1811510750	1-8115	1075	SWITCH ASM; MAGNETIC	000000	000000
1811510760	1-8115	1076	SWITCH; ENGAGE	000000	000000
1811510770	1-8115	1077	SWITCH ASM;	000003	000000
1811510780	1-8115	1078	SWITCH ASM; MAGNETIC	000000	000000
1811510800	1-8115	1080	SWITCH ASM; MAGNETIC E120	000000	000000
1811510840	1-8115	1084	SWITCH ASM.; MAGNETIC	000000	000000
1811510900	1-8115	1090	SWITCH	000000	000006
1811510980	1-8115	1098	SWITCH; ENGAGE STARTER	000000	000000
1811510981	1-8115	1098	SWITCH; ENGAGE STARTER	000000	000001
1811511000	1-8115	1100	SWITCH ASM; MAGNETIC	000000	000000
1811511010	1-8115	1101	SWITCH ASM; MAGNETIC	000000	000000
1811511050	1-8115	1105	SWITCH ASM;MAGNETIC	000000	000000
1811511060	1-8115	1106	SWITCH ASM; MAGNETIC 6RB1	000000	000002
1811511070	1-8115	1107	SWITCH ASM.;MAGNETIC	000003	000000
1811511100	1-8115	1110	SWITCH;ENGAGE STARTER	000000	000000
1811511130	1-8115	1113	SWITHC; ENGAGE STARTER	000002	000000
1811511150	1-8115	1115	SWITCH; ENGAGE STARTER	000004	000000
1811511180	1-8115	1118	SWITCH; ENGAGE STARTER	000000	000000
1811511210	1-8115	1121	SWITCH; ENGAGE STARTER	000000	000001
1811511240	1-8115	1124	SWITCH;ENGAGE STARTER	000005	000000
1811511290	1-8115	1129	SWITCH; ENGAGE STARTER	000000	000001
1811511360	1-8115	1136	SWITCH; ENGAGE STARTER	000000	000001
1811511370	1-8115	1137	SWITCH; ENGINE STARTER	000000	000000
1811511850	1-8115	1185	COVER ASM; REAR	000000	000000
1811590010	1-8115	9001	HOLDER SET; SWITCH	000000	000000
1811600340	1-8116	0034	READ; WIRE	000000	000000
1811710130	1-8117	1013	RELAY; STARTER	000000	000000

1811710151	1-8117	1015	RELAY STARTER	000000	000000
1811710161	1-8117	1016	SWITCH ASM	000000	000000
1811710190	1-8117	1019	RELAY ASM DA640	000000	000000
1811710251	1-8117	1025	RELAY; SAFETY, SWITCH	000000	000000
1811710252	1-8117	1025	RELAY; SAFETY, SWITCH	000000	000000
1811710270	1-8117	1027	SWITCH ASM.	000000	000000
1811710280	1-8117	1028	RELAY; SAFTEY	000000	000000
1811710341	1-8117	1034	RELAY	000000	000000
1811710360	1-8117	1036	RELAY; STARTER 6SA1	000000	000000
1811710410	1-8117	1041	SWITCH ASM.	000000	000000
1811710420	1-8117	1042	SWITCH ASM.	000004	000000
1811710590	1-8117	1059	SWITCH; SAFETY RELAY	000001	000000
1811710920	1-8117	1092	SWITCH; ENGAGE STARTER	000000	000000
1812000052	1-8120	0005	GENERATOR ASM;	000000	000000
1812000290	1-8120	0029	SUPERSEDED**GENERATOR	000000	000000
1812000321	1-8120	0032	GENERATOR; HITACHI	000000	000000
1812000760	1-8120	0076	GENERATOR; NIKKO	000000	000000
1812000781	1-8120	0078	GENERATOR; 24V/20A	000000	000000
1812000800	1-8120	0080	GENERATOR; NIKKO	000000	000000
1812001461	1-8120	0146	GENERATOR; HITACHI	000000	000000
1812001680	1-8120	0168	GENERATOR; NIKKO (W/O REG	000000	000000
1812001812	1-8120	0181	GENERATOR ASM.	000000	000000
1812001940	1-8120	0194	GENERATOR; NIKKO	000000	000000
1812002001	1-8120	0200	GENERATOR ASM;	000000	000000
1812002020	1-8120	0202	GENERATOR; NIKKO	000001	000000
1812002030	1-8120	0203	GENERATOR; NIKKO	000000	000000
1812002050	1-8120	0205	GENERATOR; NIKKO	000000	000000
1812002051	1-8120	0205	GENERATOR; NIKKO	000000	000000
1812002060	1-8120	0206	GENERATOR; NIKKO	000000	000000
1812002070	1-8120	0207	GENERATOR; NIKKO	000000	000000
1812002090	1-8120	0209	GENERATOR	000000	000000
1812002130	1-8120	0213	GENERATOR	000000	000000
1812002131	1-8120	0213	GENERATOR	000000	000000
1812002180	1-8120	0218	GENERATOR; NIKKO	000000	000039
1812002190	1-8120	0219	GENERATOR; NIKKO, FIG.63J	000000	000000
1812002330	1-8120	0233	GENERATOR; NIKKO	000000	000000
1812002360	1-8120	0236	GENERATOR; NIKKO	000000	000002
1812002450	1-8120	0245	GENERATOR; NIKKO	000000	000001
1812002493	1-8120	0249	GENERATOR; NIKKO	000000	000002
1812002500	1-8120	0250	GENERATOR; HITACHI	000000	000000
1812002580	1-8120	0258	GENERATOR ASM	000000	000002
1812002622	1-8120	0262	GENERATOR; HITACHI	000000	000000
1812002640	1-8120	0264	GENERATOR; NIKKO	000000	000000
1812002650	1-8120	0265	GENERATOR; NIKKO	000000	000000
1812002700	1-8120	0270	GENERATOR; NIKKO	000000	000000
1812002761	1-8120	0276	GENERATOR; NIKKO	000000	000000
1812002780	1-8120	0278	GENERATOR; NIKKO	000000	000000

1812002871	1-8120	0287	ALT, NEW	000000	000000
1812002872	1-8120	0287	ALT, NEW	000000	000000
1812002881	1-8120	0288	ALT, NEW	000000	000000
1812002882	1-8120	0288	ALT, NEW	000000	000000
1812002883	1-8120	0288	ALT, NEW	000000	000000
1812002980	1-8120	0298	GENERATOR; HITACHI	000000	000000
1812003030	1-8120	0303	GENERATOR; HITACHI	000000	000000
1812003130	1-8120	0313	GENERATOR; NIKKO	000000	000006
1812003140	1-8120	0314	GENERATOR; NIKKO	000000	000000
1812003160	1-8120	0316	GENERATOR; HITACHI	000000	000000
1812003191	1-8120	0319	GENERATOR; 24V 40A	000000	000001
1812003192	1-8120	0319	GENERATOR; 24V 40A	000000	000000
1812003213	1-8120	0321	GENERATOR; 24V 30A	000000	000000
1812003214	1-8120	0321	GENERATOR; 24V 30A	000000	000000
1812003350	1-8120	0335	GENERATOR; NIKKO	000000	000001
1812003360	1-8120	0336	GENERATOR; HITACHI	000000	000000
1812003372	1-8120	0337	GENERATOR; NIKKO	000000	000000
1812003380	1-8120	0338	ALT, NEW	000000	000000
1812003390	1-8120	0339	GENERATOR; HITACHI	000000	000001
1812003420	1-8120	0342	GENERATOR; NIKKO	000000	000000
1812003490	1-8120	0349	GENERATOR; HITACHI	000000	000000
1812003520			GENERATOR ASM	000000	000000
1812003530			GENERATOR; NIKKO	000000	000001
1812003540	1-8120	0354	GENERATOR; NIKKO	000000	000000
1812003590	1-8120	0359	GENERATOR	000000	000000
1812003610	1-8120	0361	GENERATOR; NIKKO	000000	000000
1812003650	1-8120	0365	GENERATOR; NIKKO	000000	000000
1812003651	1-8120	0365	GENERATOR; NIKKO	000000	000004
1812003660	1-8120	0366	GENERATOR; NIKKO	000000	000001
1812003740	1-8120	0374	GENERATOR; NIKKO	000000	000000
1812003790	1-8120	0379	GENERATOR ASM.	000000	000000
1812003820	1-8120	0382	GENERATOR; NIKKO	000001	000004
1812003871	1-8120	0387	GENERATOR ASM.	000000	000000
1812003872	1-8120	0387	GENERATOR ASM.	000000	000001
1812003920	1-8120	0392	GENERATOR	000000	000001
1812003921	1-8120	0392	GENERATOR	000000	000000
1812003930	1-8120	0393	GENERATOR; 24V/40A	000000	000000
1812003931	1-8120	0393	GENERATOR; 24V/40A	000000	000000
1812003940			GENERATOR; NIKKO	000000	000001
1812003970	1-8120	0397	GENERATOR; NIKKO	000000	000001
1812003990	1-8120	0399	GENERATOR; NIKKO	000000	000000
1812004110	1-8120	0411	GENERATOR; NIKKO	000000	000000
1812004160	1-8120	0416	GENERATOR; NIKKO	000000	000000
1812004163	1-8120	0416	GENERATOR; NIKKO	000000	000000
1812004164	1-8120	0416	GENERATOR; NIKKO	000000	000000
1812004221	1-8120	0422	GENERATOR ASM W/REG 40A	000000	000001
1812004230	1-8120	0423	GENERATOR ASM;	000000	000000

1812004360	1-8120	0436	GENERATOR; NIKKO	000000	000000
1812004371	1-8120	0437	GENERATOR ASM.	000000	000000
1812004373	1-8120	0437	GENERATOR ASM.	000000	000000
1812004374	1-8120	0437	GENERATOR ASM.	000000	000011
1812004401	1-8120	0440	GENERATOR; NIKKO	000000	000000
1812004402	1-8120	0440	GENERATOR; NIKKO	000001	000014
1812004450	1-8120	0445	GENERATOR; NIKKO	000000	000000
1812004520	1-8120	0452	GENERATOR; NIKKO	000000	000000
1812004591	1-8120	0459	GENERATOR; NIKKO	000000	000000
1812004651	1-8120	0465	GENERATOR ASM	000000	000000
1812004710	1-8120	0471	ALTERNATOR	000000	000121
1812004780	1-8120	0478	GENERATOR; NIKKO	000000	000000
1812004790	1-8120	0479	GENERATOR; NIKKO	000000	000002
1812004820	1-8120	0482	GENERATOR; DENSO FIG.	000000	000000
1812004821	1-8120	0482	GENERATOR; DENSO FIG.	000000	000008
1812005000	1-8120	0500	GENERATOR	000000	000002
1812005120	1-8120	0512	GENERATOR ASM	000000	000000
1812005130	1-8120	0513	GENERATOR; ASM	000000	000004
1812005140	1-8120	0514	GENERATOR ASM	000000	000000
1812005161	1-8120	0516	GENERATOR ASM	000000	000000
1812005250	1-8120	0525	GENERATOR; ASM	000000	000000
1812005251	1-8120	0525	GENERATOR; ASM	000000	000013
1812005270	1-8120	0527	GENERATOR ASM	000000	000000
1812005280	1-8120	0528	GENERATOR ASM	000000	000000
1812005281	1-8120	0528	GENERATOR ASM	000000	000000
1812005300	1-8120	0530	GENERATOR; ASM	000000	000000
1812005302	1-8120	0530	GENERATOR; ASM	000000	000000
1812005303	1-8120	0530	GENERATOR; ASM	000000	000000
1812005304	1-8120	0530	GENERATOR; ASM	000000	000000
1812005305	1-8120	0530	GENERATOR; ASM	000000	000000
1812005306	1-8120	0530	GENERATOR; ASM	000000	000000
1812005307	1-8120	0530	GENERATOR; ASM	000000	000121
1812005338	1-8120	0533	GENERATOR ASM	000001	000003
1812005341	1-8120	0534	GENERATOR; ASM	000000	000000
1812005342	1-8120	0534	GENERATOR; ASM	000000	000000
1812005343	1-8120	0534	GENERATOR; ASM	000000	000000
1812005344	1-8120	0534	GENERATOR; ASM	000000	000001
1812005630	1-8120	0563	GENERATOR ASM	000000	000002
1812005890	1-8120	0589	GENERATOR ASM	000000	000000
1812005902	1-8120	0590	GENERATOR ASM	000000	000000
1812005903	1-8120	0590	GENERATOR ASM	000000	000000
1812005904	1-8120	0590	GENERATOR ASM	000000	000009
1812006031	1-8120	0603	GENERATOR ASM	000000	000000
1812006032	1-8120	0603	GENERATOR ASM	000000	000000
1812006034	1-8120	0603	GENERATOR ASM	000000	000000
1812006035	1-8120	0603	GENERATOR ASM	000000	000026
1812006036	1-8120	0603	GENERATOR ASM	000000	000000

1812006110	1-8120	0611	GENERATOR ASM	000000	000000
1812006111	1-8120	0611	GENERATOR ASM	000000	000000
1812006150	1-8120	0615	GENERATOR ASM	000000	000000
1812006151	1-8120	0615	GENERATOR ASM	000000	000000
1812006152	1-8120	0615	GENERATOR ASM	000000	000001
1812006260	1-8120	0626	GENERATOR ASM	000000	000004
1812006281	1-8720	2628	GENERATOR ASM	000000	000000
1812006330	1-8120	0633	GENERATOR ASM	000000	000000
1812006332	1-8120	0633	GENERATOR ASM	000000	000001
181200640D			GENERATOR ASM (24 VOLT)	000000	000000
1812006400	1-8120	0640	GENERATOR ASM (24 VOLT)	000000	000000
1812006402	1-8120	0640	GENERATOR ASM (24 VOLT)	000000	000009
1812090050	1-8120	9005	PULLEY ASM.	000001	000000
1812110020	1-8121	1002	STATOR ASM.	000000	000000
1812110160	1-8121	1016	STATOR ASM; GEN E120	000002	000000
1812110200	1-8121	1020	STATOR ASM.	000000	000000
1812110240	1-8121	1024	STATOR ASM.	000000	000000
1812110250	1-8121	1025	STATOR ASM.	000000	000000
1812110260	1-8121	1026	STATOR ASM.	000000	000000
1812110290	1-8121	1029	STATOR ASM.	000000	000000
1812110310	1-8121	1031	STATOR ASM 6BB1	000006	000000
1812110320	1-8121	1032	STATOR ASM	000000	000000
1812110330	1-8121	1033	STATOR	000000	000000
1812110360	1-8121	1036	STATOR ASM.	000000	000000
1812110370	1-8121	1037	STATOR*DISCONTINUED*	000000	000000
1812110420	1-8121	1042	STATOR ASM.	000000	000000
1812110430	1-8121	1043	STATOR ASM.	000000	000000
1812110480	1-8121	1048	STATOR ASM	000001	000000
1812110510	1-8121	1051	STATER ASM.	000000	000000
1812110590	1-8121	1059	ROTOR; GEN	000000	000000
1812110610	1-8121	1061	STATOR ASM; 6SA1	000000	000000
1812110620	1-8121	1062	STATOR ASM.	000001	000001
1812110630	1-8121	1063	STATOR ASM.	000000	000000
1812110650	1-8121	1065	STATOR ASM; GENERATOR	000000	000000
1812110660	1-8121	1066	STATOR ASM. GENERATOR	000000	000000
1812110670	1-8121	1067	STATOR;GEN	000000	000001
1812110680	1-8121	1068	STATOR ASM;GEN, (12V-80A)	000000	000001
1812110730	1-8121	1073	ROTOR ASM.	000000	000000
1812110780	1-8121	1078	FAN;GENERATOR	000001	000006
1812110870	1-8121	1087	ROTOR ASM.	000000	000000
1812110880	1-8121	1088	STATOR	000000	000000
1812110890	1-8121	1089	STATOR ASM.	000000	000000
1812110900	1-8121	1090	STATOR ASM.	000003	000000
1812110920	1-8121	1092	STATOR ASM.	000000	000000
1812110930	1-8121	1093	ROTOR ASM.	000000	000000
1812110960	1-8121	1096	STATOR ASM.	000000	000000
1812110970	1-8121	1097	STATOR ASM	000000	000000

1812110990	1-8121	1099	STATOR; GEN	000000	000000
1812111040	1-8121	1104	STATOR ASM.	000000	000000
1812111050	1-8121	1105	ROTOR; GEN	000000	000000
1812111060	1-8121	1106	STATOR ASM.	000000	000000
1812111061	1-8121	1106	STATOR ASM.	000003	000000
1812111090	1-8121	1109	ROTOR ASM.	000000	000000
1812111100	1-8121	1110	STATOR ASM.	000000	000000
1812111110	1-8121	1111	STATOR ASM	000000	000000
1812111130	1-8121	1113	STATOR ASM.	000000	000000
1812111140	1-8121	1114	STATOR; GEN ASM	000000	000000
1812111290	1-8121	1129	STATOR; GEN	000000	000004
1812111320	1-8121	1132	STATOR; GEN	000000	000000
1812111321	1-8121	1132	STATOR; GEN	000000	000002
1812112760	1-8121	1276	STATOR ASM.	000000	000000
1812112770	1-8121	1277	STATOR ASM.	000000	000000
1812120010	1-8121	2001	COIL; FIELD	000000	000000
1812120030	1-8121	2003	COIL; FIELD	000003	000000
1812120040	1-8121	2004	COIL; FIELD	000001	000000
1812120050	1-8121	2005	COIL; FIELD	000000	000000
1812120060	1-8121	2006	SUB COIL ASM.	000000	000000
1812120080	1-8121	2008	COIL SUB ASM; ROTOR	000000	000000
1812120090	1-8121	2009	COIL ASM; FEED	000000	000000
1812120100	1-8121	2010	FIELD COIL ASM.	000000	000000
1812120110	1-8121	2011	FIELD COIL ASM.	000000	000000
1812120120	1-8121	2012	COVER; FRONT	000000	000000
1812120140	1-8121	2014	COIL; FIELD	000000	000000
1812120160	1-8121	2016	COIL; ROTOR GEN	000007	000006
1812130080	1-8121	3008	COVER; FRONT	000000	000000
1812130100	1-8121	3010	COVER; FRONT	000000	000000
1812130120	1-8121	3012	COVER; FRONT	000000	000000
1812130140	1-8121	3014	COVER; FRONT	000000	000000
1812130210	1-8121	3021	BRACKET ASM.	000000	000000
1812130220	1-8121	3022	BRACKET ASM.; FRONT	000000	000000
1812130240	1-8121	3024	BRACKET ASM	000000	000000
1812130290	1-8121	3029	BRACKET ASM.; FRT.	000000	000000
1812130300	1-8121	3030	COVER; FRONT	000000	000000
1812130310	1-8121	3031	COVER; FRONT	000000	000000
1812130320	1-8121	3032	BRACKET; FRONT	000000	000000
1812130350	1-8121	3035	COVER; FRT	000000	000000
1812130360	1-8121	3036	FRAME; DRIVE END	000000	000000
1812130370	1-8121	3037	BRACKET ASM; FRONT	000000	000000
1812130440	1-8121	3044	COVER; FRONT	000000	000000
1812130520	1-8121	3052	BRACKET; FRONT	000000	000000
1812130521	1-8121	3052	BRACKET; FRONT	000002	000000
1812130530	1-8121	3053	BRACKET; FRONT	000001	000001
1812130540	1-8121	3054	COVER; FRONT	000000	000000
1812130550	1-8121	3055	COVER ASM; FRONT, GEN.	000000	000000

1812130560	1-8121	3056	FRAME ASM;	000000	000009
1812130570	1-8121	3057	FRAME; DRIVE END, 6SD1	000000	000000
1812130630	1-8121	3063	COVER ASM; FRT,	000000	000000
1812130670	1-8121	3067	BRACKET; FRONT	000001	000001
1812130730	1-8121	3073	BRACKET ASM; FRT	000000	000000
1812130760	1-8121	3076	BRACKET ASM; FRT	000000	000000
1812130780	1-8121	3078	BRACKET ASM.; FRT.	000000	000000
1812130800	1-8121	3080	BRACKET ASM; FRONT	000000	000000
1812130820	1-8121	3082	BRACKET ASM; FRT	000000	000000
1812130850	1-8121	3085	BRACKET	000000	000001
1812130920	1-8121	3092	BRACKET ASM; FRT	000000	000000
1812130930	1-8121	3093	BRACKET ASM; FRONT	000000	000000
1812130960	1-8121	3096	COVER ASM; FRT,GEN	000000	000000
1812131010	1-8121	3101	COVER ASM;FRT GEN	000000	000000
1812140090	1-8121	4009	BRACKET;RR	000000	000000
1812140200	1-8121	4020	FRAME; REAR END	000000	000000
1812140280	1-8121	4028	COVER; REAR	000000	000000
1812140360	1-8121	4036	BRACKET; REAR	000000	000000
1812140370	1-8121	4037	BRACKET; REAR	000000	000000
1812140540	1-8121	4054	COVER; REAR	000000	000000
1812140640	1-8121	4064	COVER	000000	000000
1812140660	1-8121	4066	COVER; REAR	000000	000000
1812140690	1-8121	4069	BRACKET; REAR	000000	000000
1812140700	1-8121	4070	BRACKET	000000	000000
1812140750	1-8121	4075	COVER	000000	000000
1812140770	1-8121	4077	COVER	000000	000000
1812140780	1-8121	4078	BRACKET ASM; REAR	000000	000000
1812140810	1-8121	4081	COVER; REAR	000000	000000
1812140820	1-8121	4082	COVER; REAR	000000	000000
1812140830	1-8121	4083	BEARING; COVER	000000	000000
1812140860	1-8121	4086	BRACKET; REAR	000000	000000
1812140870	1-8121	4087	BRACKET ASM.; REAR	000000	000000
1812140920	1-8121	4092	BRACKET; REAR	000000	000000
1812140950	1-8121	4095	BRACKET; REAR	000000	000000
1812140960	1-8121	4096	COVER ASM; RR	000000	000000
1812140970	1-8121	4097	COVER; RR	000000	000000
1812141020	1-8121	4102	COVER; FELT WASHER, ROTOR	000001	000009
1812141100	1-8121	4110	BRACKET; REAR	000000	000000
1812141120	1-8121	4112	BRACKET; REAR	000000	000000
1812141130	1-8121	4113	BRACKET; REAR	000000	000000
1812141140	1-8121	4114	BRACKET; REAR	000000	000000
1812141150	1-8121	4115	BRACKET ASM; REAR	000000	000000
1812141210	1-8121	4121	COVER REAR	000000	000000
1812141280	1-8121	4128	RR, BRACKET	000000	000000
1812141350	1-8121	4135	COVER; REAR	000000	000000
1812141420	1-8121	4142	BRACKET; REAR	000000	000000
1812141500	1-8121	4150	COVER	000000	000000

1812141540	1-8121	4154	COVER; REAR	000000	000000
1812141680	1-8121	4168	COVER	000000	000000
1812141690	1-8121	4169	COVER; REAR	000000	000000
1812141700	1-8121	4170	COVER; REAR	000000	000000
1812141750	1-8121	4175	BRACKET ASM; REAR	000000	000000
1812141760	1-8121	4176	BRACKET; REAR	000000	000001
1812141790	1-8121	4179	BRACKET; REAR	000000	000000
1812141800	1-8121	4180	BRACKET; REAR	000001	000002
1812141840	1-8121	4184	COVER	000000	000000
1812141850	1-8121	4185	FRAME ASM; GEN	000000	000002
1812141860	1-8121	4186	COVER;END,RR,GE	000000	000000
1812141870	1-8121	4187	FRAME ASM;80AMP	000000	000000
1812141880	1-8121	4188	COVER; END,RR COVER,GEN	000000	000008
1812141910	1-8121	4191	COVER; RR	000000	000000
1812142020	1-8121	4202	COVER; GENERATOR	000000	000000
1812142070	1-8121	4207	BRACKET; RR	000000	000000
1812142240	1-8121	4224	BRACKET;REAR	000001	000000
1812142250	1-8121	4225	COVER ASM; RR	000000	000000
1812142260	1-8121	4226	COVER; RR	000000	000000
1812142290	1-8121	4229	BRACKET; REAR	000001	000000
1812142350	1-8121	4235	BRACKET ASM; RR	000000	000000
1812142410	1-8121	4241	BRACKET; REAR	000000	000000
1812142420	1-8121	4242	BRACKET; REAR COVER	000000	000003
1812142470	1-8121	4247	COVER	000000	000000
1812142520	1-8121	4252	FRAME END; REAR	000000	000000
1812142580	1-8121	4258	BRACKET; REAR, GEN.	000001	000000
1812142590	1-8121	4259	BRACKET; REAR	000000	000000
1812142630	1-8121	4263	BRACKET ASM.;REAR	000000	000000
1812142720	1-8121	4272	COVER; REAR	000001	000000
1812142760	1-8121	4276	BRACKET ASM; RR	000000	000000
1812142900	1-8121	4290	BRACKET; RR	000000	000000
1812142941	1-8121	4294	COVER; RR,GEN	000000	000000
1812142950	1-8121	4295	BRACKET; RR	000000	000000
1812142951	1-8121	4295	BRACKET; RR	000000	000001
1812142960	1-8121	4296	COVER	000002	000000
1812143010	1-8121	4301	BRACKET COVER; RR	000000	000000
1812143080	1-8121	4308	BRACKET ASM; RR	000000	000000
1812143110	1-8121	4311	COVER;RR GEN	000000	000000
1812143120	1-8121	4312	COVER ASM; RR,GEN	000000	000000
1812143150	1-8121	4315	COVER; RR GEN	000000	000000
1812143190	1-8121	4319	BRACKET ASM; RR	000000	000000
1812143220	1-8121	4322	BRACKET ASM; REAR	000000	000000
1812143230	1-8121	4323	BRACKET ASM; RR	000000	000000
1812143240	1-8121	4324	COVER ASM; RR	000000	000000
1812143460	1-8121	4346	BRACKET ASM; REAR	000000	000000
1812143470	1-8121	4347	BRACKET; REAR	000000	000000
1812143480	1-8121	4348	COVER ASM; RR,GEN	000000	000000

1812143560	1-8121	4356	COVER ASM; RR GEN	000000	000000
1812143632	1-8121	4363	COVER ASM;RR GEN	000000	000000
1812143670	1-8121	4367	COVER ASM;RR GEN	000000	000000
1812143672	1-8121	4367	COVER ASM;RR GEN	000000	000001
1812150040	1-8121	5004	BRUSH	000000	000000
1812150050	1-8121	5005	BRUSH	000000	000000
1812150070	1-8121	5007	BRUSH; GENERATOR	000000	000000
1812150170	1-8121	5017	BRUSH	000000	000000
1812150220	1-8121	5022	BRUSH; HOLDER	000000	000000
1812150240	1-8121	5024	BRUSH	000000	000000
1812150250	1-8121	5025	BRUSH E120	000000	000000
1812150310	1-8121	5031	WIRE SUB ASM, 6SD1	000000	000000
1812150390	1-8121	5039	WIRE;LEAD,GEN	000000	000000
1812150400	1-8121	5040	LEAD WIRE; GEN.	000006	000000
1812160050	1-8121	6005	SPRING; BRUSH,GEN	000000	000000
1812170020	1-8121	7002	HOLDER	000000	000000
1812170060	1-8121	7006	HOLDER; BRUSH	000002	000000
1812170100	1-8121	7010	BRUSH; HOLDER	000000	000000
1812170150	1-8121	7015	HOLDER; BRUSH	000001	000000
1812170160	1-8121	7016	COVER E120 (DISCONTINUED)	000000	000000
1812170170	1-8121	7017	HOLDER BRUSH, W/O BRUSH	000000	000000
1812170220	1-8121	7022	HOLDER; BRUSH	000000	000000
1812170230	1-8121	7023	HOLDER; BUSHING	000000	000000
1812170240	1-8121	7024	HOLDER; BRUSH	000003	000000
1812170260	1-8121	7026	HOLDER; BRUSH	000000	000000
1812170280	1-8121	7028	HOLDER ASM; BRUSH	000001	000000
1812170330	1-8121	7033	HOLDER; BUSHING	000000	000002
1812170390	1-8121	7039	BRUSH ASM.	000000	000000
1812170410	1-8121	7041	HOLDER ASM; BRUSH,GEN	000000	000003
1812170420	1-8121	7042	RECTIFIER; (-), GEN	000003	000009
1812170430	1-8121	7043	RECTIFIER; (+), GEN	000000	000013
1812170440	1-8121	7044	COVER; BUSH,GEN	000000	000001
1812170450	1-8121	7045	RECTIFIER; (-), GEN.	000000	000000
1812170460	1-8121	7046	RECTIFIER; (+), GEN.	000000	000000
1812170470	1-8121	7047	COVER; BUSH,GEN	000000	000003
1812170480	1-8121	7048	HOLDER ASM; BRUSH,GEN	000000	000000
1812170530	1-8121	7053	HOLDER	000008	000000
1812170550	1-8121	7055	BRUSH, HOLDER	000001	000000
1812170620	1-8121	7062	SUPERSEDED**HOLDER	000000	000000
1812170630	1-8121	7063	HOLDER; BRUSH	000000	000000
1812170690	1-8121	7069	RECTIFIRE ASM.	000004	000000
1812170700	1-8121	7070	HOLDER ASM; BRUSH	000001	000000
1812170710	1-8121	7071	COVER; BRUSH	000000	000000
1812170720	1-8121	7072	HOLDER ASM; BRUSH	000000	000000
1812170740	1-8121	7074	HOLDER ASM; BRUSH	000000	000000
1812170750	1-8121	7075	HOLDER ASM.; BRUSH	000000	000000
1812180020	1-8121	8002	DIODE	000000	000000

1812180050	1-8121	8005	DIODE (+)	000000	000000
1812180060	1-8121	8006	DIODE	000000	000000
1812180070	1-8121	8007	DIODE (-)	000000	000000
1812180110	1-8121	8011	DIODE	000000	000000
1812180120	1-8121	8012	DIODE	000000	000000
1812180140	1-8121	8014	DIODE ASM.	000001	000001
1812180150	1-8121	8015	DIODE ASM.; SUB	000000	000000
1812190030	1-8121	9003	RECTIFIRE (+)	000000	000000
1812190040	1-8121	9004	RECTIFIRE (-)	000000	000000
1812190130	1-8121	9013	RECTIFIRE ASM; (+.-)	000000	000000
1812190140	1-8121	9014	RECTIFIER (+) ALT	000000	000000
1812190150	1-8121	9015	RECTIFIER (-) ALT	000000	000000
1812190210	1-8121	9021	RECTIFIER ASM	000000	000000
1812190220	1-8121	9022	BEARING; BALL, REAR	000000	000000
1812190270	1-8121	9027	DIODE	000000	000000
1812190300	1-8121	9030	RECTIFIRE ASM.	000000	000000
1812190320	1-8121	9032	RECTIFIER ASM	000000	000000
1812190330	1-8121	9033	RECTIFIER ASM (F/1-8120 0	000002	000000
1812190400	1-8121	9040	RECTIFIER ASM.	000000	000000
1812190410	1-8121	9041	RECTIFIER ASM.	000000	000000
1812190420	1-8121	9042	RECTIFIER ASM.	000000	000000
1812190440	1-8121	9044	RECTIFIER ASM.	000000	000000
1812190450	1-8121	9045	RECTIFIER ASM	000000	000000
1812190540	1-8121	9054	REGULATOR ASM.;BRUSH	000000	000000
1812190560	1-8121	9056	RECTIFIER ASM.	000000	000000
1812190561	1-8121	9056	RECTIFIER ASM.	000004	000000
1812190580	1-8121	9058	COLLAR; STEEL	000000	000000
1812190600	1-8121	9060	RECTIFIER 6SA1	000000	000000
1812190630	1-8121	9063	RECTIFIER; (+) ,GEN.	000000	000000
1812190640	1-8121	9064	RECTIFIER; (-) ,GEN.	000000	000000
1812190650	1-8121	9065	RECTIFIER (+)	000000	000000
1812190740	1-8121	9074	RECTIFIER (-)	000000	000000
1812190790	1-8121	9079	RECTIFIRE ASM.	000000	000000
1812190800	1-8121	9080	RECTIFIER; "+"	000000	000002
1812190810	1-8121	9081	RECTIFIER; "-",	000002	000002
1812190840	1-8121	9084	RECTIFIER ASM.	000001	000000
1812190860	1-8121	9086	HOLDER SUB ASM; RECTIFIER	000000	000000
1812190870	1-8121	9087	HOLDER SUB ASM;RECTIFIE	000000	000000
1812190900	1-8121	9090	HOLDER SUB ASM; RECTIFIER	000000	000000
1812190920	1-8121	9092	HOLDER SUB ASM; RECTIFIER	000000	000000
1812190980	1-8121	9098	RECTIFIER ASM	000001	000000
1812191010	1-8121	9101	HOLDER SUB ASM.	000000	000000
1812191020	1-8121	9102	HOLDER SUB ASM.	000000	000000
1812191070	1-8121	9107	RECTIFIER; GEN	000000	000000
1812191080	1-8121	9108	RECTIFIER ASM.	000000	000000
1812191090	1-8121	9109	RECTIFIER ASM.	000000	000000
1812191110	1-8121	9111	HOLDER SUB ASM.	000000	000000

1812191120	1-8121	9112	HOLDER SUB ASM.	000000	000000
1812191130	1-8121	9113	RECTIFIER ASM.	000000	000000
1812191140	1-8121	9114	RECTIFIER; GEN.	000000	000000
1812191190	1-8121	9119	RETAINER; ROTOR GEN	000002	000000
1812191250	1-8121	9125	RECTIFIER GEN	000000	000000
1812191330	1-8121	9133	RECTIFIER; GEN	000000	000000
1812191340	1-8121	9134	RECTIFIER; GEN	000000	000000
1812193030	1-8121	9303	BEARING; BALL	000001	000000
1812193620	1-8121	9362	RECTIFIRE ASM.	000000	000000
1812210010	1-8122	1001	ARMATURE	000000	000000
1812210020	1-8122	1002	ARMATURE ASM.	000000	000000
1812210030	1-8122	1003	ROTOR ASM	000000	000000
1812210050	1-8122	1005	ROTOR ASM.	000000	000000
1812210120	1-8122	1012	ROTOR ASM	000000	000000
1812210150	1-8122	1015	ROTOR ASM.	000002	000000
1812210190	1-8122	1019	ROTOR ASM.	000000	000000
1812210230	1-8122	1023	ROTOR ASM.	000000	000000
1812210240	1-8122	1024	ROTOR ASM.	000000	000000
1812210260	1-8122	1026	ROTOR ASM.	000000	000000
1812210300	1-8122	1030	ROTOR ASM	000002	000000
1812210320	1-8122	1032	ROTOR ASM.	000000	000000
1812210330	1-8122	1033	ROTOR ASM.	000002	000000
1812210360	1-8122	1036	ROTOR ASM.	000001	000000
1812210370	1-8122	1037	ROTOR ASM.	000000	000000
1812210410	1-8122	1041	ROTOR ASM.	000000	000000
1812210440	1-8122	1044	ROTOR ASM.	000000	000000
1812210510	1-8122	1051	ROTOR ASM.	000000	000000
1812210520	1-8122	1052	ROTOR ASM.	000006	000000
1812210530	1-8122	1053	ROTOR ASM.	000000	000000
1812210560	1-8122	1056	ROTOR ASM.	000001	000001
1812210580	1-8122	1058	ROTOR ASM; GEN	000000	000003
1812210590	1-8122	1059	ROTOR ASM; 80AMP	000000	000001
1812210600	1-8122	1060	ROTOR; GEN	000001	000000
1812210610	1-8122	1061	ROTOR ASM.	000000	000000
1812210620	1-8122	1062	ROTOR ASM.	000000	000000
1812210630	1-8122	1063	ROTOR ASM.	000000	000003
1812210640	1-8122	1064	ROTOR ASM.	000000	000000
1812210660	1-8122	1066	ROTOR ASM.	000000	000000
1812210670	1-8122	1067	STATOR ASM.	000001	000000
1812210680	1-8122	1068	ROTOR ASM.	000000	000000
1812210720	1-8122	1072	ROTOR ASM.	000000	000005
1812210740	1-8122	1074	ROTOR ASM.	000000	000000
1812210800	1-8122	1080	ROTOR ASM.	000000	000000
1812210840	1-8122	1084	ROTOR ASM.	000000	000000
1812210850	1-8122	1085	ROTOR ASM.	000000	000000
1812210870	1-8122	1087	ROTOR ASM.	000000	000000
1812210900	1-8122	1090	STATOR ASM.	000001	000001

1812210920	1-8122	1092	ROTOR; GEN	000000	000000
1812210940	1-8122	1094	ROTOR ASM.	000002	000000
1812211020	1-8122	1102	ROTOR GEN	000000	000000
1812220030	1-8122	2003	PULLEY ASM.	000000	000000
1812220080	1-8122	2008	PULLEY ASM	000000	000000
1812220090	1-8122	2009	PULLEY ASM.	000000	000000
1812220130	1-8122	2013	PULLEY ASM.	000000	000000
1812220140	1-8122	2014	PULLEY ASM.	000000	000000
1812220180	1-8122	2018	PULLEY ASM.	000000	000000
1812220220	1-8122	2022	PULLEY ASM.	000000	000000
1812220240	1-8122	2024	PULLEY ASM.	000000	000000
1812220300	1-8122	2030	PULLEY	000000	000000
1812220310	1-8122	2031	PULLEY	000000	000000
1812220330	1-8122	2033	PULLEY ASM.	000000	000000
1812220340	1-8122	2034	PULLEY ASM	000000	000001
1812220350	1-8122	2035	PULLEY ASM.	000000	000000
1812220370	1-8122	2037	PULLEY ASM.	000000	000000
1812220390	1-8122	2039	PULLEY ASM.	000002	000000
1812220410	1-8122	2041	PULLEY	000000	000000
1812220470	1-8122	2047	PULLEY ASM.	000000	000000
1812220510	1-8122	2051	PULLEY; GEN	000000	000000
1812220520	1-8122	2052	PULLEY ASM.	000000	000000
1812220530	1-8122	2053	PULLEY ASM	000000	000000
1812220550	1-8122	2055	PULLEY ASM.	000000	000000
1812220580	1-8122	2058	PULLEY ASM.	000000	000000
1812220590	1-8122	2059	PULLEY ASM;	000000	000003
1812220600	1-8122	2060	PULLEY ASM.	000000	000000
1812220630	1-8122	2063	PULLEY	000000	000000
1812220700	1-8122	2070	PULLEY ASM.	000000	000000
1812220720	1-8122	2072	PULLEY ASM.	000000	000001
1812220730	1-8122	2073	PULLEY	000000	000000
1812220740	1-8122	2074	PULLEY	000000	000000
1812220750	1-8122	2075	PULLEY	000000	000000
1812220890	1-8122	2089	PULLEY ASM.	000000	000000
1812220900	1-8122	2090	PULLEY	000000	000000
1812220910	1-8122	2091	PULLEY ASM.	000000	000001
1812220920	1-8122	2092	COIL ASM.; FIELD	000000	000000
1812220940	1-8122	2094	BRACKET ASM.; RR	000000	000000
1812220970	1-8122	2097	BRACKET; RR	000000	000000
1812221000	1-8122	2100	PULLEY	000000	000000
1812221040	1-8122	2104	BRACKET ASM; REAR	000000	000000
1812221050	1-8122	2105	PULLEY;GEN	000000	000002
1812221060	1-8122	2106	BRACKET; REAR	000000	000000
1812221070	1-8122	2107	PULLEY; GEN	000000	000000
1812221080	1-8122	2108	PULLEY	000001	000000
1812221090	1-8122	2109	PULLEY; GEN	000000	000000
1812221230	1-8122	2123	PULLEY;GEN	000000	000000

1812221300	1-8122	2130	PULLEY;GEN	000000	000000
1812221301	1-8122	2130	PULLEY;GEN	000000	000000
1812221302	1-8122	2130	PULLEY;GEN	000000	000008
1812221310	1-8122	2131	PULLEY;GEN	000000	000000
1812221361	1-8122	2136	PULLEY; GEN	000000	000000
1812221362	1-8122	2136	PULLEY; GEN	000000	000006
1812221390	1-8122	2139	PULLEY; GEN	000000	000000
1812221391	1-8122	2139	PULLEY; GEN	000000	000000
1812221502	1-8122	2150	PULLEY; GEN	000000	000000
1812221503	1-8122	2150	PULLEY; GEN	000000	000002
1812221790	1-8122	2179	PULLEY; GEN	000000	000001
1812230020	1-8122	3002	FAN/GEN*DISCONTINUED*	000000	000000
1812230030	1-8122	3003	FAN; GENERATOR	000000	000000
1812230040	1-8122	3004	FAN; GENERATOR 6SA1	000000	000000
1812230050	1-8122	3005	FAN; GENERATOR	000001	000000
1812230090	1-8122	3009	FAN; GENERATOR	000002	000001
1812230100	1-8122	3010	FAN	000000	000000
1812230110	1-8122	3011	F A N	000000	000000
1812230120	1-8122	3012	FAN**	000000	000000
1812230160	1-8122	3016	FAN**	000002	000000
1812230170	1-8122	3017	F A N	000000	000000
1812240010	1-8122	4001	RING; SLIP	000000	000000
1812240020	1-8122	4002	RING; SLIP	000000	000000
1812240080	1-8122	4008	RING; SLIP	000000	000000
1812240090	1-8122	4009	RING; SLIP	000000	000000
1812240140	1-8122	4014	RING; SLIP	000001	000000
1812243050	1-8122	4305	RETAINER; BRG.	000000	000000
1812273060	1-8122	7306	CLAMP	000000	000000
1812290010	1-8122	9001	BUSH*	000001	000010
1812290080	1-8122	9008	BOLT*	000000	000000
1812290110	1-8122	9011	TUBE	000000	000000
1812290210	1-8122	9021	BEARING	000000	000000
1812290220	1-8122	9022	BEARING	000000	000000
1812290230	1-8122	9023	BOLT; THROUGH	000000	000000
1812290310	1-8122	9031	BOLT; THROUGH	000000	000000
1812290320	1-8122	9032	NUT**	000000	000000
1812290330	1-8122	9033	COLLAR; STEEL	000000	000000
1812290370	1-8122	9037	RETAINER	000000	000000
1812290400	1-8122	9040	BOLT; THROUGH	000000	000000
1812290420	1-8122	9042	BUSH; INSULATOR	000000	000000
1812290450	1-8122	9045	PACKING	000000	000000
1812290490	1-8122	9049	NUT; PULLEY GENERATOR	000000	000000
1812290500	1-8122	9050	RETAINER	000000	000000
1812290510	1-8122	9051	RECTIFIER E120	000001	000000
1812290520	1-8122	9052	RECTIFIER (-) E120	000002	000000
1812290690	1-8122	9069	BOLT; THROUGH	000000	000000
1812290890	1-8122	9089	TUBE; INSULATE	000000	000000

1812290940	1-8122	9094	BUSH; INSULATE	000000	000000
1812290970	1-8122	9097	BOLT	000000	000000
1812291030	1-8122	9103	PLATE	000000	000000
1812291040	1-8122	9104	PACKING	000000	000000
1812291050	1-8122	9105	BUSHING; INSULATE	000000	000000
1812291060	1-8122	9106	SCREW; SR HOLDER	000000	000000
1812291080	1-8122	9108	BOLT ASM	000001	000000
1812291090	1-8122	9109	COLLER	000000	000000
1812291100	1-8122	9110	TUBE; INSULATE	000000	000000
1812291110	1-8122	9111	BUSH; INSULATE	000000	000000
1812291120	1-8122	9112	B O L T	000000	000000
1812291140	1-8122	9114	WASHER	000000	000000
1812291160	1-8122	9116	BOLT ASM	000000	000000
1812291210	1-8122	9121	SCREW SET	000000	000000
1812291220	1-8122	9122	CLIP; GENERATOR	000010	000000
1812291230	1-8122	9123	PLATE	000007	000000
1812291240	1-8122	9124	COLLAR	000000	000000
1812291250	1-8122	9125	COLLAR	000000	000000
1812291290	1-8122	9129	B O L T	000000	000000
1812291310	1-8122	9131	BUSH; INSULATOR	000000	000000
1812291350	1-8122	9135	WASHER; INSULATE	000011	000000
1812291380	1-8122	9138	BRUSH; INSULATE	000000	000000
1812291400	1-8122	9140	BOLT, 4BB1	000000	000000
1812291540	1-8122	9154	COVER	000000	000000
1812291550	1-8122	9155	VANE; VACUUM PUMP	000007	000000
1812291560	1-8122	9156	VALVE ASM	000013	000000
1812291570	1-8122	9157	SEAL ASM; VACUUM PUMP, AL	000002	000000
1812291600	1-8122	9160	COLLAR	000001	000000
1812291610	1-8122	9161	RETAINER	000001	000000
1812291620	1-8122	9162	WASHER	000003	000000
1812291630	1-8122	9163	RETAINER	000000	000003
1812291640	1-8122	9164	WASHER	000018	000000
1812291650	1-8122	9165	WASHER	000002	000000
1812291670	1-8122	9167	BUSH; GUM DA220	000002	000000
1812291680	1-8122	9168	STOPPER	000000	000000
1812291700	1-8122	9170	RETAINER	000000	000000
1812291710	1-8122	9171	RETAINER	000000	000000
1812291740	1-8122	9174	RETAINER	000000	000000
1812291800	1-8122	9180	BOLT*	000000	000000
1812291810	1-8122	9181	BOLT*	000000	000000
1812291820	1-8122	9182	WASHER; INSULATE	000000	000000
1812291830	1-8122	9183	SCREW	000000	000000
1812291840	1-8122	9184	TUBE; INSULATE	000000	000000
1812291850	1-8122	9185	BUSH; INSULATE	000000	000000
1812291870	1-8122	9187	BEARING; BALL	000000	000000
1812291880	1-8122	9188	BEARING; BALL	000000	000000
1812291890	1-8122	9189	RETAINER	000000	000000

1812291900	1-8122	9190	RETAINER	000001	000000
1812291910	1-8122	9191	RETAINER	000000	000000
1812291930	1-8122	9193	RETAINER	000000	000000
1812291940	1-8122	9194	COLLAR	000000	000000
1812291950	1-8122	9195	CLIP; ROTOR	000000	000000
1812291990	1-8122	9199	BOLT*	000000	000000
1812292040	1-8122	9204	PACKING	000000	000000
1812292050	1-8122	9205	PACKING	000000	000000
1812292060	1-8122	9206	PACKING	000000	000000
1812292090	1-8122	9209	RING*	000000	000000
1812292150	1-8122	9215	RING*	000000	000000
1812292220	1-8122	9222	SCREW	000000	000000
1812292240	1-8122	9224	BEARING; BALL	000010	000000
1812292250	1-8122	9225	BEARING; BALL	000000	000001
1812292260	1-8122	9226	PACKING	000018	000000
1812292270	1-8122	9227	PLATE; INSULATE	000000	000000
1812292280	1-8122	9228	BOLT*	000000	000000
1812292290	1-8122	9229	BOLT*	000000	000000
1812292300	1-8122	9230	CLIP	000000	000002
1812292310	1-8122	9231	PACKING	000005	000000
1812292320	1-8122	9232	PACKING	000008	000000
1812292330	1-8122	9233	PACKING	000007	000000
1812292340	1-8122	9234	TUBE; INSULATE	000000	000000
1812292350	1-8122	9235	BUSH; INSULATOR	000005	000000
1812292360	1-8122	9236	TUBE; INSULATE	000000	000000
1812292370	1-8122	9237	BUSH; INSULATOR	000000	000000
1812292380	1-8122	9238	BOLT	000000	000000
1812292390	1-8122	9239	SEAL; VAC PUMP	000000	000000
1812292410	1-8122	9241	PACKING	000025	000000
1812292420	1-8122	9242	PACKING DA640	000021	000000
1812292450	1-8122	9245	BEARING; BALL	000000	000000
1812292460	1-8122	9246	BEARING; BALL, FRONT	000000	000000
1812292480	1-8122	9248	BUSH; INSULATE	000000	000000
1812292490	1-8122	9249	KEY**	000000	000000
1812292510	1-8122	9251	STOPPER; BEARING	000000	000000
1812292530	1-8122	9253	HOLDER ASM. (+)	000000	000000
1812292540	1-8122	9254	HOLDER ASM (-)	000000	000000
1812292550	1-8122	9255	TERMINAL ASM. (1)	000000	000000
1812292560	1-8122	9256	SPACER DIODE	000000	000000
1812292570	1-8122	9257	TERMINAL ASM (+)	000000	000000
1812292580	1-8122	9258	PLATE A TERMINAL	000000	000000
1812292590	1-8122	9259	TERMINAL ASM (2)	000000	000000
1812292600	1-8122	9260	WIRE; LEAD	000000	000000
1812292630	1-8122	9263	BEARING; BALL	000000	000000
1812292640	1-8122	9264	BEARING; BALL	000000	000000
1812292660	1-8122	9266	PACKING	000000	000000
1812292670	1-8122	9267	RETAINER; PKG	000000	000000

1812292680	1-8122	9268	PACKING	000000	000000
1812292690	1-8122	9269	O-RING	000016	000000
1812292700	1-8122	9270	WASHER	000000	000000
1812292710	1-8122	9271	PACKING	000000	000000
1812292730	1-8122	9273	BAR; CONNECT	000000	000000
1812292750	1-8122	9275	COVER; REGULATOR	000000	000000
1812292780	1-8122	9278	BOLT*	000000	000000
1812292790	1-8122	9279	BEARING; BALL	000001	000000
1812292910	1-8122	9291	BALL BEARING	000000	000000
1812292930	1-8122	9293	SCREW	000000	000000
1812292940	1-8122	9294	PACKING	000000	000000
1812292960	1-8122	9296	BUSH; INSULATOR	000000	000000
1812292970	1-8122	9297	INSULATE; SHEET	000000	000000
1812292980	1-8122	9298	BEARING; BALL	000000	000000
1812293020	1-8122	9302	BEARING; BALL	000000	000000
1812293030	1-8122	9303	BEARING; BALL	000000	000000
1812293040	1-8122	9304	PACKING	000000	000000
1812293050	1-8122	9305	PACKING	000000	000000
1812293060	1-8122	9306	CLIP**DISCONTINUED	000000	000000
1812293090	1-8122	9309	SCREW; SR HOLDER	000000	000000
1812293100	1-8122	9310	BOLT	000000	000000
1812293180	1-8122	9318	BOLT;"E" TERMINAL	000000	000000
1812293250	1-8122	9325	BUSH; GUM	000001	000000
1812293390	1-8122	9339	BOLT THROUGH.	000000	000000
1812293400	1-8122	9340	BEARING; BALL, FRT.	000000	000000
1812293490	1-8122	9349	RETAINER	000000	000000
1812293520	1-8122	9352	BUSH*	000000	000002
1812293570	1-8122	9357	RETANER	000000	000000
1812293630	1-8122	9363	BAR; CONNECTOR	000000	000000
1812293700	1-8122	9370	SEAL ASM; VACUUM PUMP, AL	000000	000000
1812293710	1-8122	9371	BEARING	000000	000000
1812293720	1-8122	9372	BOLT; THROUGH, AL	000000	000000
1812293730	1-8122	9373	COLLAR	000000	000000
1812293740	1-8122	9374	COLLAR	000000	000000
1812293750	1-8122	9375	RETAINER	000000	000000
1812293760	1-8122	9376	RETAINER	000000	000000
1812293770	1-8122	9377	RETAINER	000000	000000
1812293780	1-8122	9378	TERMINAL ASM.	000000	000000
1812293800	1-8122	9380	BEARING; BALL	000000	000000
1812293810	1-8122	9381	BEARING; ROLLAR	000000	000008
1812293820	1-8122	9382	BOLT; FRONT COVER	000020	000000
1812293830	1-8122	9383	PACKING	000000	000000
1812293840	1-8122	9384	PACKING	000008	000000
1812293890	1-8122	9389	BAR; CONNECTOR	000000	000000
1812293920	1-8122	9392	BAR; CONNECT	000000	000000
1812293930	1-8122	9393	BEARING; BALL	000000	000001
1812293940	1-8122	9394	CLIP; HOUSING	000011	000000

1812293950	1-8122	9395	COVER; REGULATOR	000000	000000
1812293980	1-8122	9398	PACKING; RETAINER	000000	000000
1812294000	1-8122	9400	BEARING; BALL	000000	000000
1812294020	1-8122	9402	SET SCREW ASM.	000000	000000
1812294030	1-8122	9403	SPACER; ROTOR, GEN.	000000	000005
1812294040	1-8122	9404	RING; SNAP	000000	000264
1812294050	1-8122	9405	PLATE; SUB ASM	000000	000000
1812294060	1-8122	9406	BOLT; SET, RETAIN	000000	000000
1812294070	1-8122	9407	RING; SEAL, BRUSH	000000	000039
1812294080	1-8122	9408	CLIP ASM; CODE	000000	000000
1812294090	1-8122	9409	SCREW; SET, CODE	000000	000007
1812294100	1-8122	9410	BUSH; INSULATION TERMINAL	000000	000069
1812294110	1-8122	9411	BUSHING; INSULATION TERMNL	000002	000035
1812294120	1-8122	9412	WASHER; PLATE	000000	000000
1812294130	1-8122	9413	BUSH; INSULATION TERMINAL	000000	000051
1812294140	1-8122	9414	BOLT; EARTH	000000	000000
1812294150	1-8122	9415	SPACER; PULLEY, GEN	000010	000004
1812294160	1-8122	9416	SCREW; RR END CVR	000000	000078
1812294170	1-8122	9417	CAP; RUBBER, TERMINAL	000018	000028
1812294180	1-8122	9418	WASHER; RUBBER	000000	000000
1812294190	1-8122	9419	REGULATOR SCREW	000000	000008
1812294210	1-8122	9421	RING; SNAP	000000	000000
1812294240	1-8122	9424	PLATE; SUB ASM	000000	000000
1812294250	1-8122	9425	BEARING; BALL	000000	000000
1812294270	1-8122	9427	WASHER; FELT, ROTOR, GEN	000000	000000
1812294300	1-8122	9430	RING; SEAL, BRUSH	000000	000000
1812294320	1-8122	9432	SCREW; SET, CODE	000000	000000
1812294330	1-8122	9433	BUSH; INSULATION TERMINAL	000000	000000
1812294340	1-8122	9434	BUSHING; INSULATION TERMNL	000000	000000
1812294350	1-8122	9435	BUSHING; INSULATION TERMNL	000000	000000
1812294360	1-8122	9436	WASHER; PLATE	000000	000000
1812294380	1-8122	9438	BUSH; INSULATION TERMINAL	000000	000000
1812294400	1-8122	9440	BOLT; STATOR	000000	000000
1812294420	1-8122	9442	WASHER; PULLEY	000000	000000
1812294430	1-8122	9443	WASHER; FELT, ROTOR, GEN	000000	000000
1812294460	1-8122	9446	SCREW; END	000000	000000
1812294480	1-8122	9448	NUT**DISCONTINUED**	000000	000000
1812294540	1-8122	9454	COVER; FRONT, GEN.	000000	000000
1812294560	1-8122	9456	BEARING; BALL	000000	000000
1812294580	1-8122	9458	SCREW; DRAIN	000000	000000
1812294590	1-8122	9459	BOLT	000000	000000
1812294610	1-8122	9461	PUMP ASM; VACUUM	000000	000000
1812294620	1-8122	9462	BOLT*	000030	000000
1812294640	1-8122	9464	BOLT; THROUGH, 6SD1	000000	000000
1812294660	1-8122	9466	BEARING;	000000	000000
1812294661	1-8122	9466	BEARING;	000002	000000
1812294690	1-8122	9469	SCREW;	000000	000000

1812294730	1-8122	9473	SCREW	000000	000000
1812294740	1-8122	9474	NUT; PULLEY	000003	000000
1812294750	1-8122	9475	SCREW; DISCONTINUED	000000	000000
1812294760	1-8122	9476	SCREW	000000	000000
1812294770	1-8122	9477	SCREW; COVER	000000	000000
1812294780	1-8122	9478	WASHER; PLAIN	000042	000000
1812294790	1-8122	9479	WASHER; SPRING	000099	000000
1812294800	1-8122	9480	VALVE ASM	000000	000000
1812294820	1-8122	9482	BOLT	000000	000000
1812294830	1-8122	9483	SEAL	000000	000000
1812294850	1-8122	9485	BOLT*	000000	000000
1812294860	1-8122	9486	TERMINAL SUB ASM.6SD1	000000	000000
1812294880	1-8122	9488	SCREW	000000	000000
1812295130	1-8122	9513	RETAINER ASM.	000000	000000
1812295140	1-8122	9514	BEARING; BALL	000000	000004
1812295160	1-8122	9516	CLIP; WIRE	000000	000003
1812295170	1-8122	9517	TERMINAL; RECTI	000001	000000
1812295200	1-8122	9520	BUSHING; GENERATOR	000030	000000
1812295240	1-8122	9524	RETAINER	000000	000000
1812295250	1-8122	9525	RETAINER	000000	000000
1812295260	1-8122	9526	RETAINER	000000	000000
1812295270	1-8122	9527	COLLAR; GENERATOR	000000	000000
1812295280	1-8122	9528	TERMINAL ASM.	000000	000001
1812295340	1-8122	9534	CLIP; WIRE, GEN.	000000	000000
1812295380	1-8122	9538	COVER; RR, GEN	000000	000000
1812295390	1-8122	9539	CONDENSER	000001	000000
1812295400	1-8122	9540	TERMINAL ASM.	000000	000000
1812295430	1-8122	9543	COLLAR; GENERATOR	000000	000000
1812295440	1-8122	9544	COVER; GENERATOR	000000	000000
1812295450	1-8122	9545	TERMINAL ASM.	000000	000000
1812295460	1-8122	9546	BAR; CONNECTOR	000000	000000
1812295470	1-8122	9547	BOLT**	000000	000000
1812295480	1-8122	9548	B O L T	000000	000000
1812295490	1-8122	9549	BAR; CONNECT	000000	000000
1812295500	1-8122	9550	COVER; REG.	000000	000000
1812295560	1-8122	9556	LEAD; WIRE	000018	000000
1812295580	1-8122	9558	BAR; CONNECTOR	000000	000000
1812295590	1-8122	9559	BEARING; BALL	000000	000000
1812295690	1-8122	9569	CAP; GUM	000000	000000
1812295740	1-8122	9574	TERMINAL ASM.	000000	000000
1812295760	1-8122	9576	BEARING; BALL	000000	000000
1812295770	1-8122	9577	TERMINAL ASM.	000000	000000
1812295820	1-8122	9582	TERMINAL ASM; GENERATOR	000000	000000
1812295860	1-8122	9586	NUT**	000000	000000
1812295870	1-8122	9587	BOLT ASM; TERMINAL	000000	000000
1812295880	1-8122	9588	TERMINAL ASSY.	000003	000000
1812295890	1-8122	9589	TERMINAL; BOLT ASM	000000	000000

1812295900	1-8122	9590	BUSH*	000000	000000
1812295960	1-8122	9596	NUT; PULLEY	000000	000000
1812295990	1-8122	9599	BOLT*	000000	000000
1812296010	1-8122	9601	BUSH*	000000	000000
1812296020	1-8122	9602	TUBE*	000000	000000
1812296030	1-8122	9603	STOPPER	000000	000000
1812296050	1-8122	9605	BOLT*	000000	000000
1812296060	1-8122	9606	PACKING	000000	000000
1812296070	1-8122	9607	PACKING	000000	000000
1812296080	1-8122	9608	SEAL; OIL	000000	000000
1812296090	1-8122	9609	O-RING	000000	000000
1812296100	1-8122	9610	BEARING; BALL, RR	000000	000000
1812296120	1-8122	9612	RING*	000000	000000
1812296260	1-8122	9626	COLLAR	000000	000000
1812296270	1-8122	9627	COLLAR	000000	000000
1812296280	1-8122	9628	BEARING; BALL	000002	000000
1812296290	1-8122	9629	RETAINER	000000	000000
1812296300	1-8122	9630	PACKING	000010	000000
1812296310	1-8122	9631	BEARING; BALL	000002	000000
1812296320	1-8122	9632	BOLT*	000000	000000
1812296340	1-8122	9634	CLIP; WIRE, GEN	000000	000010
1812296350	1-8122	9635	BUSH*	000024	000000
1812296360	1-8122	9636	BAR; CONNECT	000000	000000
1812296380	1-8122	9638	HOLDER	000000	000000
1812296390	1-8122	9639	COVER	000000	000000
1812296400	1-8122	9640	BUSH*	000000	000000
1812296410	1-8122	9641	SCREW	000000	000000
1812296420	1-8122	9642	COLLAR	000006	000000
1812296430	1-8122	9643	RETAINER	000000	000000
1812296440	1-8122	9644	PACKING	000000	000000
1812296450	1-8122	9645	BEARING; BALL	000000	000000
1812296460	1-8122	9646	BOLT*	000000	000000
1812296470	1-8122	9647	BOLT*	000000	000000
1812296480	1-8122	9648	BUSH*	000000	000000
1812296490	1-8122	9649	BUSH*	000000	000000
1812296500	1-8122	9650	BUSH*	000000	000000
1812296510	1-8122	9651	GUM CAP	000000	000000
1812296520	1-8122	9652	GUM CAP	000000	000000
1812296530	1-8122	9653	GUM CAP	000000	000000
1812296540	1-8122	9654	WASHER; PL.	000000	000000
1812296581	1-8122	9658	BEARING; ROTOR, GEN	000000	000003
1812296600	1-8122	9660	BOLT	000000	000015
1812296610	1-8122	9661	BOLT; THROUGH, GEN	000009	000000
1812296630	1-8122	9663	COVER	000000	000000
1812296640	1-8122	9664	SCREW; RR END COVER	000009	000006
1812296720	1-8122	9672	WASHER	000029	000000
1812296730	1-8122	9673	WASHER	000020	000000

1812296750	1-8122	9675	CLIP*	000000	000000
1812296760	1-8122	9676	TERMINAL ASM.	000000	000000
1812296780	1-8122	9678	BEARING; BALL	000000	000000
1812296790	1-8122	9679	TERMINAL ASM.	000000	000000
1812296810	1-8122	9681	COLLAR; SPACE, GEN	000000	000000
1812296850	1-8122	9685	TERMINAL ASM.	000000	000000
1812296870	1-8122	9687	HOLDER	000000	000000
1812297030	1-8122	9703	HOLDER	000000	000000
1812297120	1-8122	9712	SEAL	000001	000000
1812297180	1-8122	9718	BOLT ASM.; TERMINAL	000000	000000
1812297190	1-8122	9719	COVER ASM.; REAR	000000	000000
1812297200	1-8122	9720	ROTOR ASM.	000000	000000
1812297210	1-8122	9721	BEARING; BALL	000000	000000
1812297230	1-8122	9723	BEARING; ROTOR GEN	000003	000000
1812297280	1-8122	9728	BUSHING; RECTIFIER, GEN	000010	000000
1812297330	1-8122	9733	SCREW; RR END COVER	000005	000000
1812297350	1-8122	9735	BEARING	000000	000000
1812297360	1-8122	9736	BRACKET ASM; FTR	000000	000000
1812297370	1-8122	9737	COLLAR	000000	000000
1812297390	1-8122	9739	BEARING; ROTOR	000000	000005
1812297420	1-8122	9742	BEARING; ROTOR, GEN	000002	000005
1812297430	1-8122	9743	BEARING; ROTOR, GEN	000002	000003
1812297440	1-8122	9744	WASHER; FELT, ROTOR, GEN	000000	000001
1812297450	1-8122	9745	COVER; END, RR COVER, GEN	000000	000000
1812297460	1-8122	9746	BUSHING; INSULATION TERMI	000000	000010
1812297470	1-8122	9747	BUSHING; RR COVER, GEN	000000	000000
1812297480	1-8122	9748	NUT; RECTIFIER, GEN	000000	000013
1812297530	1-8122	9753	CAP OIL PAN DRAIN PIPE	000001	000014
1812297550	1-8122	9755	WASHER; PLATE	000008	000008
1812297580	1-8122	9758	BEARING; ROTOR, GEN	000004	000000
1812297600	1-8122	9760	RETAINER; ROTOR, GEN	000003	000000
1812297670	1-8122	9767	BOLT SET; GEN	000000	000006
1812297680	1-8122	9768	SCREW; FRT COVER	000000	000000
1812297690	1-8122	9769	BEARING; ROTOR GEN	000003	000000
1812297700	1-8122	9770	BEARING; ROTOR GEN	000008	000000
1812297710	1-8122	9771	TRMNAL ASM; RECTIFIER; GEN	000000	000008
1812297720	1-8122	9772	NUT; RECTIFIER GEN	000021	000000
1812297730	1-8122	9773	SCREW; RR END COVER	000000	000000
1812297740	1-8122	9774	CSREW; RR END COVER	000000	000000
1812297990	1-8122	9799	BEARING; ROTOR, GEN	000000	000000
1812298090	1-8122	9809	CONNECTOR; GEN	000000	000000
1812298150	1-8122	9815	BEARING; ROTOR GEN	000000	000000
1812298160	1-8122	9816	BEARING; ROTOR GEN	000000	000000
1812298220	1-8122	9822	KEY; ROTOR GEN	000000	000000
1812298260	1-8122	9826	TERMINAL ASM; RECTFER GEN	000000	000000
1812298280	1-8122	9828	CONNECTOR; GEN	000000	000000
1812298320	1-8122	9832	SCREW; RR ENG COVER	000000	000005

1812298330	1-8122	9833	RECTIFIER; GEN	000001	000000
1812298340	1-8122	9834	PACKING	000000	000000
1812298350	1-8122	9835	TERMINAL BRUSH GEN	000001	000000
1812298360	1-8122	9836	CLIP;WIRE GEN	000000	000000
1812298370	1-8122	9837	NUT;RECTIFIER	000000	000000
1812298390	1-8122	9839	TERMINAL;BRUSH, GEN	000000	000004
1812441220	1-8124	4122	BRACKET ASM; REAR	000000	000000
1812441230	1-8124	4123	COVER; GENERATOR 6BD1	000003	000000
1812510020	1-8125	1002	REGULATOR	000000	000008
1812510040	1-8125	1004	REGULATOR	000000	000000
1812510050	1-8125	1005	REGULATOR	000001	000000
1812510071	1-8125	1007	REGULATOR	000000	000000
1812510072	1-8125	1007	REGULATOR	000000	000001
1812510110	1-8125	1011	REGULATOR	000000	000000
1812510190	1-8125	1019	REGULATOR	000000	000000
1812510191	1-8125	1019	REGULATOR	000001	000000
1812510210	1-8125	1021	REGULATOR	000000	000000
1812510240	1-8125	1024	REGULATOR	000000	000001
1812510250	1-8125	1025	REGULATOR	000000	000000
1812510260	1-8125	1026	REGULATOR	000000	000002
1812510280	1-8125	1028	REGULATOR ASM.	000000	000000
1812510290	1-8125	1029	REGULATOR	000004	000000
1812510310	1-8125	1031	REGULATOR	000000	000000
1812510330	1-8125	1033	REGULATOR ASM 24 V	000000	000000
1812510380	1-8125	1038	REGULATOR ASM.	000000	000000
1812510382	1-8125	1038	REGULATOR ASM.	000000	000000
1812510383	1-8125	1038	REGULATOR ASM.	000000	000000
1812510430	1-8125	1043	REGULATOR ASM.	000000	000000
1812510480	1-8125	1048	REGULATOR ASM.	000000	000003
1812520010	1-8125	2001	REGULATOR ASM;VOLTAGE, GEN	000000	000000
1812520020	1-8125	2002	REGULATOR ASM;VOLTAGE, GEN	000000	000000
1812570020	1-8125	7002	RESISTOR ASM.	000000	000000
1812600040	1-8126	0004	REGULATOR	000000	000000
1812600060	1-8126	0006	REGULATOR ASM.	000000	000000
1812600070	1-8126	0007	REGULATOR ASM.	000000	000006
1812600080	1-8126	0008	REGULATOR ASM.	000000	000000
1812600110	1-8126	0011	REGULATOR	000000	000000
1812600150	1-8126	0015	REGULATOR ASM; VOLTAGE	000000	000003
1812600170	1-8126	0017	REGULATOR ASM;VOLTAGE GEN	000000	000000
1812600171	1-8126	0017	REGULATOR ASM;VOLTAGE GEN	000000	000000
1812600180	1-8126	0018	REGULATOR ASM;VOLTAGE GEN	000000	000000
1812600210	1-8126	0021	REGULATOR ASM;VOLTAGE, GEN	000000	000000
1812700010	1-8127	0001	REGULATOR	000000	000000
1812700011	1-8127	0001	REGULATOR	000000	000000
1812700040	1-8127	0004	REGULATOR ASM;VOLTAGE, GEN	000000	000000
1812700050	1-8127	0005	REGULATOR	000005	000000
1812700060	1-8127	0006	REGULATOR ASM.	000000	000000

1812700070	1-8127	0007	REGULATOR	000001	000000
1812700090	1-8127	0009	REGULATOR ASM.	000000	000000
1812700100	1-8127	0010	REGULATOR	000000	000001
1812700110	1-8127	0011	REGULATOR ASM;VOLTAGE, GEN	000000	000004
1812700120	1-8127	0012	REGULATOR	000000	000000
1812700130	1-8127	0013	REGULATOR	000000	000003
1812700140	1-8127	0014	REGULATOR	000000	000003
1812700150	1-8127	0015	REGULATOR	000000	000002
1812700170	1-8127	0017	ALT, NEW W/O V PUMP	000000	000000
1812996890	1-8129	9689	TERMINAL	000000	000000
1813750020	1-8137	5002	REGISTER; INTAKE HEAT 6RB	000000	000000
1813750030	1-8137	5003	REGISTER; INTAKE HEAT 6RB	000003	000000
1814020031	1-8140	2003	RESISTANCE ASM 24V 6BB/BD	000000	000017
1814020070	1-8140	2007	RESISTANCE; CONTROL	000000	000303
1814100111	1-8141	0011	PLUG; GLOW (24V)	000000	000000
1814100112	1-8141	0011	PLUG; GLOW (24V)	000000	000000
1814200030	1-8142	0003	RESISTANCE; CONTROL	000000	000021
1814200040	1-8142	0004	RESISTANCE ASM 24V 6BB/BD	000000	000000
1814200070	1-8142	0007	RESISTANCE; CONTROL, 24V	000000	000000
1814200080	1-8142	0080	RESISTOR;CON'T GLOW PLUG	000000	000007
1814300040	1-8143	0004	HEATER; INTAKE E120	000001	000000
1814300050	1-8143	0005	HEATER; INTAKE	000000	000000
1814300130	1-8143	0013	HEATER; INTAKE	000000	000000
1814300150	1-8143	0015	HEATER; INTAKE	000000	000000
1814300220	1-8143	0022	HEATER; INTAKE	000000	000000
1814300230	1-8143	0023	HEATER; INTAKE 6RB1T	000000	000011
1814300240	1-8143	0024	HEATER; INTAKE	000002	000001
1814300260	1-8143	0026	HEATER; INTAKE	000000	000000
1814300330	1-8143	0033	HEATER; INTAKE	000000	000000
1814400100	1-8144	0010	CONTROLLER	000000	000001
1815100072	1-8151	0007	SENSOR; N&TOC, F/W HSG	000003	000001
1815100200	1-8151	0020	UNIT ASM.; CONTROL	000000	000000
1815100250	1-8151	0025	TIMER ASM.; GLOW PLUG	000000	000001
1815100290	1-8151	0029	TIMER; GLOW PLUG	000000	000002
1815101250	1-8151	0125	CONTROL UNIT ASM.	000000	000000
1815102620	1-8151	0262	SENSOR.	000000	000007
1815102823	1-8151	0282	UNIT ASM.	000000	000000
1815102830	1-8151	0283	SENSOR; ENGINE REVOLUTION	000000	000000
1815103432	1-8151	0343	SENSOR;REVOLUTION,ENG SPD	000000	000000
1815103893	1-8151	0389	UNIT ASM.	000000	000000
1815104173	1-8151	0417	CONTROL UNIT	000000	000000
1815104651	1-8151	0465	SENSOR ASM TACHO	000000	000000
1815104652	1-8151	0465	SENSOR ASM TACHO	000000	000011
1815105130	1-8151	0513	SENSOR; TACHOMETER, F/HSG	000000	000001
1815105530	1-8151	0553	SENSOR; N&TDC, FLYWHEEL H	000000	000000
1815105531	1-8151	0553	SENSOR; N&TDC, FLYWHEEL H	000000	000001
1815107060	1-8151	0706	CONTROL UNIT; ELEC GOV	000000	000000

1815107070	1-8151	0707	CONTROL UNIT;ELEC GOV	000001	000000
1815107120	1-8151	0712	CONTROL UNIT; ELEC GOV	000000	000001
1815107130	1-8151	0713	SENSOR; REVOLUTION, ENG S	000000	000000
1815107131	1-8151	0713	SENSOR; REVOLUTION, ENG S	000000	000004
1815107150	1-8151	0715	CONTROL UNIT; ELEC GOV	000001	000000
1815107170	1-8151	0717	SENSOR; REVOLUTION, ENG S	000000	000000
1815107171	1-8151	0717	SENSOR; REVOLUTION, ENG S	000000	000000
1815107190	1-8151	0719	CONTROL UNIT; ELEC GOV	000002	000000
1815107200	1-8151	0720	CONTROL UNIT; ELEC GOV	000003	000000
1815107240	1-8151	0724	CONTROL UNIT; ELEC GOV	000000	000000
1815107260	1-8151	0726	CONTROL UNIT;ELEC GOV	000003	000000
1815107320	1-8151	0732	CONTROL UNIT; ELEC GOV	000004	000000
1815107330	1-8151	0733	CONTROL UNIT; ELEC GOV	000001	000000
1815107340	1-8151	0734	CONTROL UNIT; ELEC GOV	000000	000000
1815107350	1-8151	0735	CONTROL UNIT; ELEC GOV	000001	000000
1815107370	1-8151	0737	SENSOR;REVOLUTION,ENG SPD	000000	000001
1815107400	1-8151	0740	CONTROL UNIT; ELEC	000000	000000
1815107410	1-8151	0741	CONTROL UNIT; ELEC	000000	000004
1815107420	1-8151	0742	CONTROL UNTI;ELEC GOV	000000	000000
1815107450	1-8151	0745	CONTROL UNIT;ELEC GOV	000000	000001
1815107480	1-8151	0748	CONTROL UNIT;ELEC GOV	000000	000000
1815107490	1-8151	0749	CONTROL UNIT;ELEC GOV	000000	000000
1815107510	1-8151	0751	CONTROL UNIT	000002	000000
1815107670	1-8151	0767	CONTROL UNIT; ELEC GOV	000000	000000
1815107690	1-8151	0769	ECU 6BG1TRB04	000000	000002
1815107700	1-8151	0770	CONTROL UNIT, ELEC	000000	000011
1815107710	1-8151	0771	ECU 6WG1XQB	000000	000002
1815107720	1-8151	0772	ECU 6BG1TRB02	000000	000000
1815107730	1-8151	0773	ECU 6BG1TRB03	000000	000002
1815107740	1-8151	0774	ECU 6BG1TRB02	000000	000002
1815107750	1-8151	0775	ECU 6BG1TRB03	000000	000000
1815107760	1-8151	0776	ECU 6HK1XQB	000000	000006
1815107800	1-8151	0780	CONTROL UNIT;ELEC GOV	000000	000000
1815107810	1-8151	0781	CONTROL UNIT;ELEC GOV	000000	000000
1815107820	1-8151	0782	CONTROL UNIT;ELEC GOV	000000	000000
1815107840	1-8151	0784	CONTROL UNIT; ELEC GOV	000000	000002
1815140020	1-8151	4002	DIODE ASM.	000002	000000
1815140081	1-8151	4008	DIODE ASM	000001	000000
1815150210	1-8151	5021	RESISTOR; ENG.	000000	000000
1815150220	1-8151	5022	RESISTOR; ENG.	000000	000002
1815150230	1-8151	5023	RESISTOR; ENG.	000000	000000
1815150240	1-8151	5024	RESISTOR; ENG.	000000	000000
1815150250	1-8151	5025	RESISTOR; ENG.	000000	000000
1815150260	1-8151	5026	RESISTOR; ENG.	000000	000000
1815150270	1-8151	5027	RESISTOR; ENG.	000000	000000
1815150280	1-8151	5028	RESISTOR; ENG.	000000	000000
1815300011	1-8153	0001	SWITCH; A/	000000	000000

1815300050	1-8153	0005	SWITCH; A/	000000	000000
1815300100	1-8153	0010	SWITCH; A/	000000	000000
1815300110	1-8153	0011	SWITCH; A/	000000	000002
1815300120	1-8153	0012	INDICATOR	000000	000000
1815300140	1-8153	0014	SWITCH; A/	000000	000000
1815300150	1-8153	0015	SWITCH; A/	000002	000004
1815350031	1-8153	5003	SENSOR; WATER TEMP	000000	000000
1815350050	1-8153	5005	SENSOR; WATER TEMP	000000	000000
1815350051	1-8153	5005	SENSOR; WATER TEMP	000000	000001
1815410160	1-8154	1016	SENSOR; TACHO	000000	000000
1815410161	1-8154	1016	SENSOR; TACHO	000002	000000
1815530390	1-8155	3039	RELAY; SAFETY PULSE	000000	000000
1819000150	1-8190	0015	STOPPER ASM.; ENGINE	000000	000000
1819000161	1-8190	0016	STOPPER; ENGINE	000000	000000
1819000202	1-8190	0020	RACK ASM; BATTERY	000000	000000
1819000320	1-8190	0032	HEATER; OIL PAN	000000	000000
1819000330	1-8190	0033	HEATER; OIL PAN	000000	000000
1819000340	1-8190	0034	HEATER; OIL PAN	000000	000000
1819000350	1-8190	0035	HEATER; OIL PAN	000000	000000
1819000360	1-8190	0036	HEATER; OIL PAN	000000	000000
1819000370	1-8190	0037	HEATER; OIL PAN	000000	000000
1819000380	1-8190	0038	HEATER; OIL PAN	000000	000000
1819000390	1-8190	0039	HEATER; OIL PAN	000000	000000
1819000393	1-8190	0039	HEATER; OIL PAN	000000	000000
1819000410	1-8190	0041	COVER ASM; BATTERY	000000	000000
1819000710	1-8190	0071	STOPPER; ENGINE D500	000000	000000
1819000730	1-8190	0073	STOPPER; ENGINE	000000	000001
1819000980	1-8190	0098	HEATER; OIL PAN	000000	000000
1819001030	1-8190	0103	STOPPER ASM E120	000000	000000
1819001040	1-8190	0104	ENGINE STOP ASM	000000	000000
1819001080	1-8190	0108	STOPPER ASM.; ENGINE	000000	000000
1819001122	1-8190	0112	STOPPER ASM	000000	000021
1819001170	1-8190	0117	HEATER; CYL BLOCK	000000	000000
1819001190	1-8190	0119	HEATER;ENGINE B	000000	000000
1819001200	1-8190	0120	OIL PAN HEATER	000000	000000
1819001372	1-8190	0137	STOPPER; ENGINE 4BA1	000000	000008
1819001522	1-8190	0152	ENGINE STOPPER ASM.	000000	000000
1819001523	1-8190	0152	ENGINE STOPPER ASM.	000000	000001
1819001542	1-8190	0154	STOPPER ASM.	000000	000006
1819001833	1-8190	0183	STOPPER; ENGINE 6BD1T	000000	000000
1819001834	1-8190	0183	STOPPER; ENGINE 6BD1T	000000	000001
1819001901	1-8190	0190	STOPPER ASM; ENGINE	000000	000000
1819001902	1-8190	0190	STOPPER ASM; ENGINE	000000	000016
1819001931	1-8190	0193	ENGINE STOPPER	000000	000008
1819002260	1-8190	0226	STOPPER ASM; ENG.	000000	000012
1819002270	1-8190	0227	STOPPER ASM; ENGINE	000000	000047
1819002290	1-8190	0229	STOPPER; ENG.	000000	000014

1819002291	1-8190	0229	STOPPER; ENG.	000000	000000
1819002301	1-8190	0230	STOPPER ASM; ENG.	000001	000000
1819002330	1-8190	0233	HEATER ASM; OIL	000000	000000
1819002340	1-8190	0234	HEATER; OIL PAN	000000	000000
1819002391	1-8190	0239	STOPPER ASM ENGINE	000000	000000
1819002400	1-8190	0240	STOPPER ASM ;ENG	000000	000002
1819002460	1-8190	0246	HEATER; OIL PAN	000000	000000
1819002530	1-8190	0253	STOP. ASM.; ENG.	000000	000001
1819002550	1-8190	0255	STOPPER ASM ENGINE	000000	000049
1819090090	1-8190	9009	CABLE ASM; ENG STOP	000000	000000
1819090320	1-8190	9032	BRACKET; ENGINE STOPPER	000000	000000
1819090321	1-8190	9032	BRACKET; ENGINE STOPPER	000000	000000
1819090381	1-8190	9038	BRACKET; FUEL PIPE CLIP	000000	000000
1819090420	1-8190	9042	BRACKET;ENGINE	000000	000000
1819090530	1-8190	9053	MOTOR ASM; ENG STOP	000000	000000
1819090950	1-8190	9095	MOTOR ASM;ENG STOP	000000	000001
1819090970	1-8190	9097	CABLE ASM;ENG STOP	000001	000013
1819090990	1-8190	9099	CABLE ASM; ENG STOP	000000	000000
1819091020	1-8190	9102	CABLE ASM;ENG STOP	000000	000002
1819091030	1-8190	9103	CABLE ASM;ENG STOP	000000	000000
1819091060	1-8190	9106	CABLE ASM;ENG STOP	000000	000000
1819091070	1-8190	9107	CABLE ASM;ENG STOP	000000	000005
1819091170	1-8190	9117	MOTOR ASM;ENG STOP	000002	000007
1819100240	1-8191	0024	TIMER ASM.; EMAGENCY, 24V	000001	000000
1819100371	1-8191	0037	VALVE: SOLENOID 24V	000000	000000
1819100491	1-8191	0049	VALVE; SOLENOID	000000	000000
1819100520	1-8191	0052	SOLENOID ASM	000000	000011
1819100650	1-8191	0065	SWITCH: BILGE PMP	000001	000000
1819100690	1-8191	0069	VALVE; SOLENOID	000000	000002
1819190170	1-8191	9017	BRACKET;SOLENOID	000002	000000
1821102031			LAMP ASM; FOG	000000	000000
1821102041			LAMP ASM; FOG	000000	000000
1821102103			LAMP ASSY	000000	000000
1821102916			HEAD LAMP ASM	000000	000000
1821113230			GEAR CASE STARTER	000000	000000
1821170860			RUBBER; CUSHION	000000	000000
1821171000			BRACKET; LAMP	000000	000000
1821171010			BRACKET; LAMP	000000	000000
1821171770			BRACKET; LAMP	000000	000000
1821171820			STAY; BRKT, HEAD	000000	000000
1821190190	8-8211	9019	SCREW;RING	000000	000000
1821191040	1-8211	9104	SCREW, HEAD LAMP	000000	000083
1821910230			SEALED BEAM; HE	000000	000002
1822100991	1-8221	0099	LAMP ASM.	000000	000000
1822100993	1-8221	0099	LAMP ASM.	000000	000000
1822101411			FRT. COMB. LAMP LH	000000	000000
1822102021			LAMP; FRT FLASH	000000	000005

1822102031			LAMP; FRT FLASH	000000	000006
1822150340			LENS	000000	000000
1822150540	1-8221	5054	BUSH;RR COVER,GEN	000023	000000
1822301172	1-8223	0117	LAMP ASM	000000	000000
1822301173	1-8223	0117	LAMP ASM; RR CO	000000	000000
1822301182	1-8223	0118	L A M P	000000	000000
1822301183	1-8223	0118	LAMP ASM; RR CO	000000	000000
1822301322			LAMP ASM; RR	000000	000002
1822301332			LAMP ASM; RR	000000	000003
1822301342			LAMP ASM; RR CO	000000	000003
1822302080			LAMP ASM; RR CO	000000	000001
1822302090			LAMP ASM; RR CO	000000	000001
1822400310	1-8224	0031	POSITION LED;MARINE GEAR	000000	000000
1822400320	1-8224	0032	POSITION LED;MARINE GEAR	000000	000000
1822400510	1-8224	0051	LAMP; PILOT	000004	000014
1822400540	1-8224	0054	BULB;TACHOMETER	000004	000005
1822400570	1-8224	0057	LAMP ASM; WARNING	000000	000001
1822400580	1-8224	0058	BULB; TACHOMETER	000000	000000
1822401090	1-8224	0109	BULB; TACHOMETER	000006	000007
1823100060	1-8231	0006	SWITCH; STARTER 6RB1	000000	000000
1823100080	1-8231	0008	SWITCH; STARTER C240	000000	000079
1823100100	1-8231	0010	SWITCH;STARTER	000000	000000
1823130050	1-8231	3005	SWITCH ASM.; STARTER	000000	000000
1823130070	1-8231	3007	SWITCH ASM; STARTER 3KC1/	000000	000000
1823160070	1-8231	6007	KEY; STARTER	000000	000000
1823170020	1-8231	7002	KEY & BARREL ASM	000000	000000
1823170060	1-8231	7006	LOCK BARREL E120	000000	000000
1823170070	1-8231	7007	KEY AND CYL.	000000	000041
1823200010	1-8232	0001	SWITCH; BATTERY	000000	000007
1823300151	1-8233	0015	SWITCH ASM;INTA	000000	000000
1823300230	1-8233	0023	SWITCH; INTAKE 6RB1	000011	000000
1823300250	1-8233	0025	SWITCH; INTAKE HEATER	000000	000000
1823360031	1-8233	6003	KNOB; SW,INTAKE	000000	000000
1823400900			SWITCH; 2 SPD	000000	000000
1823401770	1-8234	0177	SWITCH;NEUTRAL	000000	000007
1823500121	1-8235	0012	SWITCH;AUTO	000000	000000
1823500390	1-8235	0039	SWITCH; ENG. STOP	000000	000000
1823500660	1-8235	0066	SWITCH ASM.; INS.IDLE	000000	000000
1823501970	1-8235	0197	SWITCH: ENG. STOP	000000	000000
1823502730	1-8235	0273	SWITCH; ENGINE STOP	000000	000001
1823503390	1-8235	0339	SWITCH; BUZZER STOP	000000	000001
1823503400	1-8235	0340	SWITCH; BILGE PUMP	000000	000001
1823602310	1-8236	0231	SWITCH;COMB	000000	000000
1823602312	1-8236	0231	SWITCH;COMB.	000000	000000
1823602313	1-8236	0231	SWITCH;COMB	000000	000000
1823602314	1-8236	0231	SWITCH;COMB.	000000	000000
1823602315	1-8236	0231	SWITCH;COMB.	000000	000000

1823602317	1-8236	0231	SWITCH;COMB	000000	000000
1823602318	1-8236	0231	SWITCH; COMB	000000	000000
1823602319	1-8236	0231	SWITCH; COMB	000000	000000
1823800093	1-8238	0009	SWITCH;CLUTCH	000000	000000
1823800094	1-8238	0009	SWITCH;CLUTCH	000000	000006
1823800620	1-8238	0062	SWITCH; ENGINE STOP	000000	000000
1823800650	1-8238	0065	SWITCH; STARTER	000000	000005
1823800680	1-8238	0068	RESISTOR 6BD1	000000	000000
1823800990	1-8238	0099	SPEED VOLUME	000001	000000
1823801671			SWITCH; POWER W	000000	000001
1824100081	1-8241	0008	PRESSURE; WARNING	000000	000000
1824100082	1-8241	0008	PRESSURE; WARNING	000000	000000
1824100091	1-8241	0009	PRESSURE UNIT; OIL E120	000000	000000
1824100092	1-8241	0009	PRESSURE UNIT; OIL E120	000000	000077
1824100180	1-8241	0018	SWITCH; OIL PRESSURE	000000	000000
1824100181	1-8241	0018	SWITCH; OIL PRESSURE	000002	000000
1824100310	1-8241	0031	SWITCH; WARNING	000000	000000
1824100330	1-8241	0033	PRESSURE; WARNING	000027	000096
1824100400	1-8241	0040	SWITCH; OIL PRESSURE 2/3K	000000	000000
1824100410	1-8241	0041	SWITCH; OIL PRESSURE	000003	000000
1824100660	1-8241	0066	SWITCH; OIL PRESSURE	000000	000000
1824100690	1-8241	0069	SWITCH; OIL PRESSURE	000000	000000
1824100710	1-8241	0071	SWITCH; OIL PRESSURE MARI	000000	000000
1824100760	1-8241	0076	SWITCH; OIL PRESSURE	000000	000000
1824100761	1-8241	0076	SWITCH; OIL PRESSURE	000001	000000
1824100820	1-8241	0082	SWITCH	000000	000002
1824100880	1-8241	0088	SWITCH;OIL PRESS.WARNING	000000	000000
1824100910	1-8241	0091	SWITCH; OIL PRESSURE	000000	000000
1824100911	1-8241	0091	SWITCH; OIL PRESSURE	000000	000000
1824100912	1-8241	0091	SWITCH; OIL PRESSURE	000000	000000
1824100922	1-8241	0092	SWITCH	000000	000000
1824100980	1-8241	0098	SWITCH; OIL PRESS WARNING	000000	000000
1824100990	1-8241	0099	SWITCH; OIL PRESSURE 4JC1	000000	000101
1824101000	1-8241	0100	UNIT; THERMO METER	000001	000000
1824101110	1-8241	0111	SWITCH; BOOST PRESSURE	000000	000000
1824101132	1-8241	0113	UNIT; OIL PRESS	000000	000000
1824101133	1-8241	0113	UNIT; OIL PRESS	000004	000000
1824101310	1-8241	0131	SW; W/ADAPTER, OIL PRESS.	000000	000000
1824101311	1-8241	0131	SW; W/ADAPTER, OIL PRESS.	000000	000000
1824101420	1-8241	0142	SWITCH; OIL PRESSURE WARN	000000	000000
1824101450	1-8241	0145	SWITCH; OIL PRESSURE	000000	000000
1824101470	1-8241	0147	SWITCH; BOOST/PRESSURE	000000	000000
1824101510	1-8241	0151	SWITCH;OIL PRESSURE	000000	000000
1824101511	1-8241	0151	SWITCH;OIL PRESSURE	000000	000001
1824101600	1-8241	0160	SWITCH;OIL PRESS.WARNING	000000	000000
1824101601	1-8241	0160	SWITCH;OIL PRESS.WARNING	000001	000059
1824101610	1-8241	0161	SWITCH: OIL PRESS	000000	000000

1824101690	1-8241	0169	SWITCH; OIL PRESSURE WARN	000002	000000
1824101691	1-8241	0169	SWITCH; OIL PRESSURE WARN	000000	000000
1824101700	1-8241	0170	SWITCH; OIL PRE	000000	000000
1824101701	1-8241	0170	SWITCH; OIL PRE	000000	000019
1824101830	1-8241	0183	SWITCH; BOOST	000000	000000
1824101870	1-8241	0187	SENSOR; BOOST	000000	000000
1824101880	1-8241	0188	SWITCH;OIL PRESSURE WARNI	000000	000005
1824101890	1-8241	0189	SWITCH; OIL PRESSURE WARN	000000	000000
1824101900	1-8241	0190	SWITCH;OIL PRESSURE WRNG	000000	000000
1824101920	1-8241	0192	BOOST SWITCH	000000	000002
1824101930	1-8241	0193	SWITCH; OIL PRESSURE WARN	000000	000000
1824101940	1-8241	0194	SWITCH; BOOST/PRESSURE	000000	000002
1824101990	1-8241	0199	SWITCH;OIL PRESSURE WARNI	000000	000000
1824102000	1-8241	0200	SWITCH;OIL PRESSURE WARNI	000000	000000
1824102001	1-8241	0200	SWITCH;OIL PRESSURE WARNI	000000	000000
1824102010	1-8241	0201	SWITHC;OIL PRESSURE	000001	000000
1824200064	1-8242	0006	SWITCH;VACUUM	000000	000001
1824200230	1-8242	0023	SWITCH; BOOST	000000	000000
1824200231	1-8242	0023	SWITCH; BOOST	000001	000000
1824400132	1-8244	0013	SWITCH:MICRO	000000	000000
1824400430	1-8244	0043	SWITCH;REV LAMP	000000	000000
1824400501	1-8244	0050	SWITCH; REV LAMP	000000	000000
1824400820			SWITCH; REV LAM	000000	000000
1824400880	1-8244	0088	LAMP: 24V 1.5	000014	000010
1824400890	1-8244	0089	LAM: 24V 3W	000004	000000
1824401120	1-8244	0112	LAMP	000000	000000
1824401130	1-8244	0113	SOCKET & BULB	000000	000000
1824500051	1-8245	0005	SWITCH ASM	000000	000000
1824500090	1-8245	0009	SWITCH; WARNING	000004	000000
1824500120	1-8245	0012	SWITCH; THERMOMETER E120	000003	000000
1824500130	1-8245	0013	SENDER; WARN LI	000000	000033
1824500140	1-8245	0014	SWITCH ASM	000000	000005
1824500141	1-8245	0014	SWITCH ASM	000000	000000
1824500180	1-8245	0018	SWITCH; AUTOMATIC	000000	000003
1824500190	1-8245	0019	SWITCH; AUTOMATIC/DH100	000001	000000
1824500230	1-8245	0023	SWITCH; OVER HEAT (98C)	000000	000000
1824500290			SENDER; WARN LI	000000	000000
1824500350	1-8245	0035	SWITCH; OIL THERMO	000000	000000
1824500440	1-8245	0044	UNIT; THERMOMETER	000000	000000
1824500460	1-8245	0046	SWITCH THERMO	000000	000008
1824500520	1-8245	0052	SWITCH; OIL THERMO	000000	000003
1824600110	1-8246	0011	SWITCH ASM.	000000	000000
1824600113	1-8246	0011	SWITCH ASM.	000000	000000
1824800191	1-8248	0019	SWITCH; WATER LEVEL	000000	000000
1824800250	1-8248	0025	SWITCH;WTR LVL	000000	000009
1824800270	1-8248	0027	SENSOR;OIL LEVEL	000002	000000
1824800280	1-8248	0028	SENSOR; OIL LEVEL	000000	000000

1824800290	1-8248	0029	SAFETY SWITCH	000000	000000
1824800610	1-8248	0061	SWITCH ASM.; SAFETY	000001	000000
1825100890	1-8251	0089	BOX; FUSE	000000	000000
1825101430	1-8251	0143	FUSE BOX	000000	000000
1825101431	1-8251	0143	FUSE BOX	000000	000000
1825102150	1-8251	0215	FUSE BOX ASM	000000	000004
1825130060	1-8251	3006	HOLDER ASM.; FUSE	000000	000000
1825130430	1-8251	3043	PLUG; GLOW 24V	000000	000000
1825130431	1-8251	3043	PLUG; GLOW 24V	000000	000302
1825130432	1-8251	3043	PLUG; GLOW 24V	000000	000000
1825130440	1-8251	3044	GLOW PLUGS	000000	000000
1825130441	1-8251	3044	GLOW PLUGS	000000	000000
1825130442	1-8251	3044	GLOW PLUGS	000000	000000
1825130443	1-8251	3044	GLOW PLUGS	000000	000130
1825130450	1-8251	3045	PLUG; GLOW	000000	000000
1825130451	1-8251	3045	PLUG; GLOW	000000	000000
1825130452	1-8251	3045	PLUG; GLOW	000000	000036
1825160010	1-8251	6001	FUSE (30 AMP)	000000	000000
1825160070	1-8251	6007	FUSE; METER BOARD	000000	000000
1825160190	1-8251	6019	FUSE UNIT	000000	000000
1825160290	1-8251	6029	HOLDER; FUSE	000000	000001
1825300010	1-8253	0001	JUNCTION, BLOCK	000000	000000
1825300070	1-8253	0007	BLOCK; JUNCTION	000000	000000
1825500730	1-8255	0073	RELAY; EMERGENCY E120	000000	000000
1825500732	1-8255	0073	RELAY; EMERGENCY E120	000000	000005
1825500850	1-8255	0085	DIODE; CABLE HARNESS, BODY	000001	000000
1825501080			HARNESS	000000	000000
1825501090			RELAY ASM; BATTERY	000000	000000
1825501091	1-8255	0109	RELAY ASM; BATTERY	000000	000000
1825501100	1-8255	0110	RELAY; BATTERY E120	000000	000000
1825501101	1-8255	0110	RELAY; BATTERY E120	000000	000002
1825501120	1-8255	0112	RELAY; BATTERY	000000	000000
1825501311			RELAY; BATTERY	000000	000000
1825501312	1-8255	0131	RELAY; BATTERY	000000	000000
1825501321	1-8255	0132	TIMER; INT HEATER	000000	000000
1825501330	1-8255	0133	RELAY	000000	000000
1825501451	1-8255	0145	RELAY; EMERGENCY	000001	000000
1825501452	1-8255	0145	RELAY; EMERGENCY	000000	000000
1825501580	1-8255	0158	RELAY	000000	000000
1825501760	1-8255	0176	RELAY; HEADLAMP	000002	000000
1825501840	1-8255	0184	TIMER; INTAKE HEATER	000000	000000
1825501920	1-8255	0192	RELAY	000000	000000
1825501921	1-8255	0192	RELAY	000000	000002
1825501980	1-8255	0198	TIMER; INTAKE HEATER	000000	000000
1825502260			RELAY; BATTERY	000000	000000
1825502610	1-8255	0261	RELAY	000000	000000
1825503100	1-8255	0310	CONTROL UNIT ASM	000000	000003

1825503160	1-8255	0316	RELAY	000000	000001
1825503200	1-8255	0320	RELAY; EMERGENCY	000000	000000
1825503220	1-8255	0322	RELAY;EMERGENCY	000000	000000
1825503250	1-8255	0325	CONTROL UNIT	000000	000005
1825530080	1-8255	3008	RELAY; SAFETY E120	000000	000000
1825530100	1-8255	3010	RELAY; AUTO	000000	000000
1825530110	1-8255	3011	RELAY; SAFETY	000001	000000
1825530120	1-8255	3012	RELAY; SAFETY, STARTER	000000	000000
1825530131	1-8255	3013	RELAY;AUTO. START	000000	000000
1825530140	1-8255	3014	RELAY 6RB1	000000	000000
1825530180	1-8255	3018	RELAY; SAFETY E120	000000	000000
1825530212	1-8255	3021	RELAY; SAFETY	000000	000000
1825530213	1-8255	3021	RELAY; SAFETY	000000	000000
1825530221	1-8255	3022	SWITCH	000001	000000
1825530230	1-8255	3023	SWITCH; SAFETY RELAY	000000	000000
1825530240	1-8255	3024	SWITCH ASM	000000	000000
1825530260	1-8255	3026	RELAY; SAFETY 4BD1	000001	000001
1825530290	1-8255	3029	SWITCH ASM.	000000	000000
1825530321	1-8255	3032	RELAY; SAFETY,PULSE, 24V	000000	000000
1825530350	1-8255	3035	RELAY ASM; AUTO	000012	000000
1825530360	1-8255	3036	SWITCH;SAFETY RELAY	000000	000000
1825530370	1-8255	3037	SWITCH; SAFETY RELAY	000000	000000
1825530390	1-8255	3039	RELAY; SAFETY, STARTER	000000	000000
1825530391	1-8255	3039	RELAY; SAFETY	000000	000027
1825530400	1-8255	3040	RELAY; SAFETY, ST. 12V	000000	000000
1825530401	1-8255	3040	RELAY; SAFETY, ST. 12V	000000	000053
1825530430	1-8255	3043	RELAY;SAFETY STARTER	000000	000000
1825530440	1-8255	3044	RELAY; SAFETY	000000	000000
1825530460	1-8255	3046	RELAY;SAFETY STARTER	000000	000000
1825530510	1-8255	3051	SWITCH; MICRO STARTER	000000	000000
1825530511	1-8255	3051	SWITCH; MICRO STARTER	000000	000000
1825530512	1-8255	3051	SWITCH; MICRO STARTER	000000	000005
1825530541	1-8255	3054	SWITCH;ENGAGE STARTER	000000	000002
1825530550	1-8255	3055	SWITCH; SAFTY RELAY	000000	000000
1825530551	1-8255	3055	SWITCH; SAFTY RELAY	000000	000009
1825600133	1-8256	0013	VALVE,SHUTT OFF	000000	000000
1825600340	1-8256	0034	VALVE	000000	000000
1825630220	1-8256	3022	VALVE ASSY. MAGNETIC	000000	000000
1825630221	1-8256	3022	VALVE ASSY. MAGNETIC	000000	000000
1825630250			VALVE; MAGNETIC	000000	000000
1825630580			MAGNETIC VALVE	000000	000000
1825630660			VALVE; MAGNETIC E120	000000	000000
1825630661	1-8256	3066	VALVE; MAGNETIC E120	000000	000000
1825630810	1-8256	3081	VALVE ASSY. MAGNETIC	000000	000000
1825630981	1-8256	3098	VALVE;FUEL CUT	000000	000000
1825631960			VALVE; MAG, EXH BRK	000000	000000
1825633441	1-8256	3344	VALVE; MAGNETIC E120	000000	000009

1825690021	1-8256	9002	BRACKET	000000	000000
1825690030	1-8256	9003	BRACKET; MAG. VALVE	000000	000000
1825690070	1-8256	9007	BRACKET; MAGNETIC VALVE	000003	000001
1825690210	1-8256	9021	BRACKET; MAGNETIC 6RB1	000000	000000
1825690340	1-8256	9034	BRACKET; MAGNETIC VALVE	000000	000000
1825690450	1-8256	9045	BRACKET; MAGNETIC VALVE	000000	000000
1825690810	1-8256	9081	BRACKET; CLIP	000000	000000
1825690880	1-8256	9088	BRACKET; MAGNETIC VALVE	000003	000001
1826263650			HARNESS; CAB	000000	000000
1826325141	1-8263	2514	HARNESS; EXT	000000	000000
1826335300	1-8263	3530	HARNESS;EXTENSION	000000	000000
1826347370	1-8263	4737	HARNESS; GEN.	000000	000000
1826347380	1-8263	4738	HARNESS; GEN.	000000	000000
1826358260	1-8263	5826	HARNESS: EXTENSION	000000	000000
1826358280	1-8263	5828	HARNESS: EXT. BILGE EARTH	000000	000000
1826359900	1-8263	5990	HARNESS EXT: ENG. STOP	000000	000000
1826368150	1-8263	6815	TERMINAL ASM.	000004	000000
1826376190	1-8263	7619	HARNESS EXT: BATT RELAY	000000	000000
1826385050	1-8263	8505	HARNESS EXTENSION	000000	000000
1826391550	1-8263	9155	EXT. HARNESS	000000	000003
1826401300	1-8264	0130	HARNESS;START.	000000	000007
1826402511	1-8264	0251	HARNESS; ENGINE	000000	000000
1826402820	1-8264	0282	HARNESS	000000	000000
1826402890	1-8264	0289	HARNESS; E/CONTROL-S/CONT	000000	000000
1826403220	1-8264	0322	HERNESS; E/G CONTROL	000000	000000
1826403241	1-8264	0324	HARNESS;ENG.	000000	000000
1826403510	1-8264	0351	CABLE; OIL PRESS SWITCH	000002	000000
1826403820	1-8264	0382	HARNESS; STARTER	000000	000000
1826403821	1-8264	0382	HARNESS; STARTER	000000	000000
1826403822			HARNESS; STARTER	000000	000001
1826404091			HARNESS	000000	000000
1826404940	1-8264	0494	TERMINAL ASM.	000000	000000
1826405980	1-8264	0598	HARNESS; EXT.	000000	000000
1826407990	1-8264	0799	HARNESS; CABLE	000000	000000
1826412713	1-8264	1271	HARNESS;ENG	000000	000002
1826412970	1-8264	1297	ENG HARNESS	000000	000001
1826412980	1-8264	1298	HARNESS; ENG	000000	000001
1826413381	1-8264	1338	HARNESS; INJECTOR	000000	000004
1826413511	1-8264	1351	HARNESS; ENG	000000	000000
1826413513	1-8264	1351	HARNESS; ENG	000000	000000
1826413514	1-8264	1351	HARNESS; ENG	000000	000000
1826413515	1-8264	1351	HARNESS; ENG	000000	000000
1826413516	1-8264	1351	HARNESS; ENG	000000	000003
1826413581	1-8264	1358	HARNESS; ENG	000000	000000
1826413582	1-8264	1358	HARNESS; ENG	000000	000000
1826413583	1-8264	1358	HARNESS; ENG	000000	000000
1826413584	1-8264	1358	HARNESS; ENG	000000	000000

1826413751	1-8264	1375	HARNESS; ENG	000000	000000
1826413753	1-8264	1375	HARNESS; ENG	000000	000000
1826413755	1-8264	1375	HARNESS; ENG	000000	000000
1826413756	1-8264	1375	HARNESS; ENG	000000	000000
1826413757	1-8264	1375	HARNESS; ENG	000000	000024
1826413790	1-8264	1379	HARNESS; ENG	000000	000001
1826413810	1-8264	1381	HARNESS; GLOW PLUG CONNEC	000000	000001
1826501070	1-8265	0107	CABLE ASM.	000000	000000
1826501120	1-8265	0112	CABLE; STARTER	000000	000004
1826501990	1-8265	0199	CABLE;OIL PRESS.SW.-FILTE	000000	000000
1826502380	1-8265	0238	CABLE; STARTER EARTH	000002	000002
1826502390	1-8265	0239	CABLE; STARTER EARTH	000000	000004
1826502410	1-8265	0241	CABLE;STARTER	000001	000003
1826502430	1-8265	0243	CABLE;STARTER	000000	000000
1826503510	1-8265	0351	CABLE; STARTER EARTH	000000	000001
1826521510			BATTERY CABLE	000000	000000
1826522150			BATTERY CABLE	000000	000000
1826525450			BATTERY CABLE	000000	000000
1826525740			BATTERY CABLE	000000	000000
1826590400	1-8265	9040	CORD ASM; BLOCK HTR	000000	000003
1826591550	1-8265	9155	CORD;BLOCK HTR	000000	000002
1826592081	1-8265	9208	LINK ASM; FUSIBLE	000000	000005
1826701751	1-8267	0175	HARNESS: EXTENSION	000000	000001
1826714960	1-8267	1496	HARNESS; EXT	000000	000005
1826912500	1-8269	1250	CONNECTOR	000000	000004
1826950341	1-8269	5034	TERMINAL; BATTERY, (RH)	000000	000000
1826950351	1-8269	5035	TERMINAL; BATTE	000000	000000
1826950690	1-8269	5069	TERMINAL; BATTERY (RH)	000000	000001
1826950691	1-8269	5069	TERMINAL; BATTERY (RH)	000000	000006
1826985090	1-8269	8509	CONNECTOR	000003	000005
1826990360	1-8269	9036	CAP; BATTERY CABLE	000000	000000
1826990400	1-8269	9040	CAP; BATTERY CABLE	000002	000000
1826990440	1-8269	9044	CAP; INSULATOR	000000	000000
1826990480	1-8269	9048	BRKT,HARNESS	000000	000000
1826990660	1-8269	9066	CAP;BAT.CABLE	000000	000000
1826990680	1-8269	9068	BRKT;HARNESS	000000	000000
1826991140	1-8269	9114	CAP; INSULATOR, STARTER	000000	000000
1826991220	1-8269	9122	CAP; TERMINAL	000041	000000
1826992050	1-8269	9205	CAP; INSULATOR	000000	000000
1826992280	1-8269	9228	BRACKET; HARNES	000000	000003
1826992390	1-8269	9239	BRACKET; HARNESS	000000	000000
1826992651	1-8269	9265	BRACKET; HARNESS	000000	000000
1826994160	1-8269	9416	RECTIFIER ASM	000000	000003
1826994310	1-8269	9431	CAP; INSULATOR, STARTER	000000	000012
1826995880	1-8269	9588	BRACKET; CLIP HARNESS	000000	000000
1827100500	1-8271	0050	SUPERSEDED**	000000	000000
1828104170	1-8281	0417	LINER; SET	000000	000000

1828400410	1-8284	0041	STOPPER ASM.	000000	000000
1828400411	1-8284	0041	STOP ASM	000000	000000
1828400412	1-8284	0041	STOP ASM.	000000	000000
1828400414	1-8284	0041	STOP ASM; ENGINE	000000	000000
1828400415	1-8284	0041	STOP ASM; ENGINE	000000	000000
1828400416	1-8284	0041	STOP ASM; ENGINE	000000	000002
1828480361	1-8284	8036	CABLE ASM.; L=460	000000	000000
1828490050	1-8284	9005	CABLE ASM D500	000005	000000
1828490240			SCREW;CABLE	000000	000000
1828490470	1-8284	9047	CABLE; STOPPER	000000	000000
1831116680	1-8311	1668	BOARD ASM.;METER	000000	000000
1831119960	1-8311	1996	BOARD ASM.;METER	000000	000000
1831152374	1-8311	5237	METER SUB ASM	000000	000000
1831152421	1-8311	5242	METER SUB ASM	000000	000000
1831152422	1-8311	5242	METER SUB ASM	000000	000001
1831160260	1-8311	6026	BOARD;METER	000000	000000
1831160290	1-8311	6029	BOARD;METER	000000	000000
1831160480	1-8311	6048	PANEL; METER	000000	000001
1831160490	1-8311	6049	PANEL; METER	000000	000001
1831160500	1-8311	6050	BRACKET	000000	000001
1831160510	1-8311	6051	BRACKET	000000	000003
1831160520	1-8311	6052	BRACKET	000000	000001
1831160530	1-8311	6053	PANEL; METER	000000	000001
1831160540	1-8311	6054	PANEL; METER	000000	000001
1831163940	1-8311	6394	BOARD; METER	000000	000000
1831163941	1-8311	6394	BOARD; METER	000000	000001
1831163971	1-8311	6397	METER	000000	000006
1831182121	1-8311	8212	HARNESS METER	000000	000000
1831182601	1-8311	8260	HARNESS;METER BOARD	000000	000000
1831182670	1-8311	8267	HARNESS;METER BOARD	000000	000000
1831183140	1-8311	8314	HARNESS; METER	000000	000001
1831183150	1-8311	8315	HARNESS; METER	000000	000000
1831183180	1-8311	8318	HARNESS; METER	000000	000001
1831183190	1-8311	8319	HARNESS; METER	000000	000001
1831183202	1-8311	8320	HARNESS; METER	000000	000000
1831183260	1-8311	8326	HARNESS	000002	000002
1831201230	1-8312	0123	METER ASM.; TACHO	000000	000000
1831201231	1-8312	0123	METER ASM.; TACHO	000000	000001
1831201270	1-8312	0127	TACHOMETER 24V (4000RPM)	000000	000000
1831201590	1-8312	0159	TACHOMETER ASM.	000000	000000
1831202270	1-8312	0227	TACHOMETER (WO/HOUR METER)	000000	000000
1831202271	1-8312	0227	TACHOMETER (WO/HOUR METER)	000001	000000
1831202530	1-8312	0253	METER: SPEEDO	000000	000000
1831202610	1-8312	0261	TACHOMETER	000000	000000
1831202840	1-8312	0284	TACHOMETER	000000	000003
1831203280	1-8312	0328	GAUGE TACH	000000	000000
1831203281	1-8312	0328	GAUGE TACH	000000	000000

1831204180		TACHOMETER; CLU	000000	000000
1831204340		TACHOMETER; CLU	000000	000000
1831204901		SPEEDOMETER	000000	000001
1831205451	1-8312	0545 TACHOMETER: W/HOUR MET	000000	000000
1831208950	1-8312	0895 TACHOMETER: W/HOUR MET	000001	000001
1831208980	1-8312	0898 METER ASM; TACHO	000000	000001
1831209010	1-8312	0901 METER ASM; TACHO	000013	000000
1831209020	1-8312	0902 METER ASM; TACHO	000003	000000
1831209040	1-8312	0904 METER ASM; TACHO	000000	000000
1831209041	1-8312	0904 METER ASM; TACHO	000000	000005
1831209050	1-8312	0905 METER ASM; TACHO	000001	000000
1831209060	1-8312	0906 METER ASM; TACHO	000001	000000
1831230560	1-8312	3056 CABLE	000000	000000
1831231021	1-8312	3102 SHAFT ASM.; FLEX. L=4500	000000	000000
1831231041	1-8312	3104 SHAFT FLEX	000000	000000
1831231070	1-8312	3107 SHAFT; FLEX, SPD	000000	000000
1831232581		SPEEDO CABLE	000000	000000
1831233830	1-8312	3383 SHAFT; FLEX	000000	000000
1831233930	1-8312	3393 FLEX SHAFT: TACHOMETER	000000	000000
1831235351		SHAFT; FLEX	000000	000005
1831237630	1-8312	3763 SHAFT: FLEX	000001	000010
1831237850	1-8312	3785 SHAFT; FLEX, TAC	000000	000002
1831238230	1-8312	3823 SHAFT; FLEX, SPEE	000000	000005
1831241450	1-8312	4145 CABLE; TACHOMETER	000000	000001
1831242190	1-8312	4219 SHAFT ASM; FLEX	000000	000003
1831242200	1-8312	4220 CABLE ASM; FLEX	000005	000000
1831270021	1-8312	7002 GENERATOR; TACHO	000000	000000
1831270030	1-8312	7003 SENSOR; TACHOMETER	000000	000000
1831270140	1-8312	7014 SENSOR; TACHOMETER	000000	000010
1831270270	1-8312	7027 SENSOR ASM., TAC.	000000	000000
1831270391	1-8312	7039 SENSOR ASM; TACH.	000000	000001
1831270392	1-8312	7039 SENSOR ASM; TACH.	000000	000000
1831270440	1-8312	7044 SENSOR ASM; TACH.	000000	000000
1831270441	1-8312	7044 SENSOR ASM; TACH.	000000	000000
1831278720	1-8312	7872 TACH SENSOR	000000	000001
1831290920	1-8312	9092 PACKING; CAP, ELBOW	000024	000000
1831300030	1-8313	0003 AMMETER ASM. (60A) JAPANE	000001	000000
1831400400	1-8314	0040 METER; FUEL	000000	000006
1831400410	1-8314	0041 METER: FUEL	000000	000000
1831400540	1-8314	0054 METER; OIL PRESSURE	000006	000000
1831410620		UNIT ASM; TANK	000000	000000
1831500010	1-8315	0001 METER: OIL PRESS	000000	000000
1831500620	1-8315	0062 UNIT; OIL PRESSURE 4BD1	000000	000000
1831500800		GAUGE; PRESSURE, BOOST	000000	000000
1831500960	1-8315	0096 METER ASM.; OIL PRESS.	000000	000000
1831500961	1-8315	0096 METER ASM.; OIL PRESS.	000000	000000
1831500990	1-8315	0099 OIL PRESS GAUGE	000000	000000

1831501500	1-8315	0150	METER; AIR PRES	000000	000003
1831501510	1-8315	0151	METER; BOOST PRESS	000000	000000
1831501740	1-8315	0174	METER: OIL PRESSURE	000000	000000
1831501741	1-8315	0174	METER: OIL PRESSURE	000000	000000
1831502071	1-8315	0207	METER; OIL PRESSURE	000000	000000
1831502072	1-8315	0207	METER; OIL PRESSURE	000000	000001
1831502250	1-8315	0225	METER; OIL PRESSURE	000000	000000
1831502300	1-8315	0230	METER; BOOST	000000	000000
1831502301	1-8315	0230	METER; BOOST	000000	000001
1831510040	1-8315	1004	PRESS GAUGE	000000	000000
1831510050	1-8315	1005	UNIT; OIL PRESSURE	000000	000000
1831510052	1-8315	1005	UNIT; OIL PRESSURE	000000	000000
1831510061	1-8315	1006	UNIT; OIL PRESS. METER 24	000000	000000
1831510260	1-8315	1026	UNIT; OIL PRESS, METER 12	000000	000000
1831510261	1-8315	1026	UNIT; OIL PRESS, METER 12	000000	000001
1831510271	1-8315	1027	UNIT; OIL PRESSURE 4BD1	000000	000000
1831510272	1-8315	1027	UNIT; OIL PRESSURE 4BD1	000000	000005
1831510340	1-8315	1034	UNIT; OIL PRESS	000000	000000
1831510370	1-8315	1037	UNIT; O/PRESSURE	000000	000000
1831510371	1-8315	1037	UNIT; O/PRESSURE	000002	000000
1831510430	1-8315	1043	UNIT; OIL PRESSURE	000000	000004
1831600320	1-8316	0032	METER THERMO	000000	000000
1831600480	1-8316	0048	GAUGE 6BD1	000001	000000
1831600500	1-8316	0050	TEMP GUAGE	000000	000000
1831600580	1-8316	0058	THERMOMETER	000000	000000
1831600581	1-8316	0058	THERMOMETER	000000	000001
1831600700	1-8316	0070	THERMOMETER; CEN	000000	000013
1831600740	1-8316	0074	METER: TEMPERATURE	000000	000001
1831600980	1-8316	0098	METER; THERMO	000000	000000
1831600981	1-8316	0098	METER; THERMO	000000	000001
1831610070	1-8316	1007	UNIT; THERMOMETER	000000	000000
1831610080	1-8316	1008	UNIT; THERMOMETER	000000	000000
1831610090	1-8316	1009	THERMOMETER UNIT	000003	000000
1831610191	1-8316	1019	UNIT; THERMOMETER	000030	000087
1831610311			SWITCH	000000	000033
1831610330	1-8316	1033	SWITCH; WATER TEMP, QOS	000000	000042
1831900181	1-8319	0018	METER; VOLTAGE	000001	000000
1831900190			REGULATOR	000000	000000
1831900200			BRACKET; METER BOARD	000000	000000
1831900300	1-8319	0030	METER; HOUR	000000	000000
1831900450	1-8319	0045	CAP; ELBOW	000016	000000
1831900590	1-8319	0059	HOUR METER ASM.; 24V	000000	000003
1831900600	1-8319	0060	HOURLMETER	000001	000000
1831900750	1-8319	0075	BRACKET	000000	000001
1833140500	1-8331	4050	ARM; WIPER	000000	000000
1833140510	1-8331	4051	ARM; WIPER	000000	000000
1833150241	1-8331	5024	BLADE; WIPER	000001	000000

1833181170	1-8331	8117	WASHER; TERMINAL	000000	000011
1834100050			HORN	000000	000000
1834100060			HORN	000000	000000
1834100170			HORN ASM.	000000	000000
1834100430	1-8341	0043	HORN; HIGH NOTE	000000	000000
1834600280			BUZZER	000001	000002
1834600680	1-8346	0068	BUZZER	000000	000001
1834700360	1-8347	0036	FLASHER; UNIT	000000	000000
1834700480	1-8347	0048	UNIT; FLASHER	000000	000000
1834700481	1-8347	0048	UNIT; FLASHER	000032	000013
1835111751			HEATER UNIT	000000	000000
1835390440	1-8353	9044	WASHER; LK, FAN	000000	000011
1835390450	1-8353	9045	WASHER; PL, FAN	000000	000013
1835430500			CONTROL ASM	000000	000000
1835653691	1-8356	5369	HOSE; WATER L=1515	000000	000000
1835657480			HOSE; WATER, HTR	000000	000000
1835672290			PIPE	000000	000000
1835672380			PIPE; EXPANSION	000000	000000
1835672382			PIPE; EXPANSION	000000	000000
1835690390	1-8356	9039	SCREW	000000	000000
1835690790	1-8356	9079	BOLT*	000000	000000
1835760060	1-8357	6006	GROMMET; WT	000000	000000
1835792190			BOLT; COMPRESSOR	000000	000000
1835794920	1-8357	9492	WASHER; LK, ADJ. BOLT	000000	000000
1835796170			COVER; INL DUCT	000000	000000
1835796180			COVER; INL DUCT	000000	000000
1841220323			DECK ASM; STEREO	000000	000001
1841320080	1-8413	2008	CONDENSER	000000	000000
1841320090	1-8413	2009	CONDENSER; GEN	000000	000000
1841320120	1-8413	2012	CONDENSER; GENERATOR	000002	000000
1851110010	1-8511	1001	WRENCH; 54MM	000000	000000
1851110030	1-8511	1003	WRENCH; CYL. HEAD BOLT	000000	000000
1851110031	1-8511	1003	WRENCH; CYL. HEAD BOLT	000009	000000
1851120010	1-8511	2001	WRENCH; OFFSET, INJ. PUMP	000000	000000
1851510030	1-8515	1003	DRIVER; SCREW (-) L=173	000000	000000
1851770031	1-8517	7003	WRENCH; MONKEY	000000	000000
1852100270	1-8521	0027	REMOVER WEAR RING E120	000000	000000
1852100280	1-8521	0028	TOOL	000002	000000
1852100360	1-8521	0036	REMOVER; AIR COMPRESSOR	000000	000001
1852100530	1-8521	0053	REMOVER; WAR RING	000000	000016
1852100560			SEAL W/R REMOVER	000000	000000
1852100620			REMOVER; IMPELLAR	000000	000000
1852100670	1-8521	0067	PULLER; SEAL RING	000000	000091
1852100770			REMOVER; OIL S	000000	000000
1852200010	1-8522	0001	SETTING KIT; VALVE GUIDE	000000	000000
1852200110	1-8522	0011	TOOL; SETTING (INSTALLER	000000	000000
1852200140	1-8522	0014	INSTALLER; WEAR RING E120	000000	000000

1852200150	1-8522	0015	INSTALLER;FRT OIL SEAL 6Q	000000	000000
1852200310			SEAL W/R INSTALLER	000000	000000
1852200350			TOOL; SETTING (INSTALLER	000000	000000
1852200430	1-8522	0043	OIL SEAL INSTALLER	000000	000001
1852200470	1-8522	0047	INSTALLER; SEAL UNIT	000000	000002
1852200520	1-8522	0052	REMOVER; SLINGER	000000	000001
1852200570			INSTALLER; OIL	000000	000010
1852210050	1-8522	1005	REPLACER; VALVE SEAL	000002	000000
1852210250	1-8522	1025	INSTALLER	000000	000000
1852210251	1-8522	1025	INSTALLER	000000	000000
1852210290	1-8522	1029	SETTING TOOL; PISTON	000000	000001
1852210340	1-8522	1034	INSTALLER;SEAL RING	000000	000002
1852210700	1-8522	1070	INSTALLER; CYL LINER	000000	000001
1852210720	1-8522	1072	INSTALLER; CRANKSHAFT GEA	000000	000000
1852210730	1-8522	1073	INSALLER; CYL LINER	000000	000000
1852210790	1-8522	1079	INSTALLER; WEAR RING	000000	000001
1852210970	1-8522	1097	WRENCH; OIL FILTER	000000	000000
1852211840	1-8522	1184	INSTALLER;VALVE STEM SEAL	000000	000000
1852211870	1-8522	1187	INSTALLER;VALVE STEM SEAL	000000	000000
1852300060	1-8523	0006	F/W REMOVER	000001	000000
1852300130	1-8523	0013	REMOVER; NOZZLE HOLDER	000000	000003
1852310030	1-8523	1003	REPLACER; CYL 6BD1A	000000	000000
1852310050	1-8523	1005	REMOVER; CYLINDER LINER	000000	000001
1852310160	1-8523	1016	REMOVER,CYL LINER	000000	000000
1852310210	1-8523	1021	REMOVER,CYL LINER	000000	000003
1852320010	1-8523	2001	RING; VALVE GUIDE SEAT	000000	000007
1852350060	1-8523	5006	REPLACER ASM; VALVE	000000	000000
1852350070	1-8523	5007	COMPRESSOR; VALVE SPRING	000000	000000
1852690070	1-8526	9007	ADJUSTER; BRAKE	000000	000000
1852690080	1-8526	9008	ADJUSTER; BRAKE	000000	000000
1853170190	1-8531	7019	ADAPTER;COMPRESSION GAUGE	000000	000003
1855610140	1-8556	1014	BOX ASM; TOOL.	000000	000002
1855650110	1-8556	5011	BAG;TOOL	000000	000003
1855710080	1-8557	1008	REPAIR KIT; OIL PUMP	000000	000000
1855710090	1-8557	1009	REPAIR KIT; OIL PUMP	000000	000000
1855710100	1-8557	1010	REPAIR KIT; TURBO 6RB1	000001	000000
1855710160	1-8557	1016	PLUG ASM. W/GASKET	000000	000011
1855710170	1-8557	1017	O-RING SET	000000	000000
1855710180	1-8557	1018	PLUG; DRAIN	000000	000013
1855710190	1-8557	1019	PLATE; BAFFLE	000000	000007
1855710200	1-8557	1020	CASE;	000000	000000
1855710220	1-8557	1022	REPAIR KIT;TURBOCHAGER	000000	000009
1855710230	1-8557	1023	REPAIR KIT;TUBROCHARGER	000000	000003
1855720100	1-8557	2010	REPAIR KIT;CLU	000000	000027
1855740060	1-8557	4006	REPAIR KIT; OIL, P/S	000000	000000
1855740080	1-8557	4008	REPAIR KIT; OIL PUMP	000000	000003
1858600080	1-8586	0008	SUPERSEDED**BOX ASM.	000000	000000

1858600100	1-8586	0010	ELBOW ASM.	000000	000000
1858600121	1-8586	0012	GEAR BOX ASM	000000	000000
1858600130	1-8586	0013	ELBOW ASM E120	000001	000000
1858600210	1-8586	0021	ELBOW ASM.:TACH	000000	000000
1858600302	1-8586	0030	BOX; GEAR,TACHO	000000	000000
1858600311	1-8586	0031	BOX; GEAR, TACH	000000	000000
1858600312	1-8586	0031	BOX; GEAR, TACH	000000	000003
1858600340	1-8586	0034	ELBOW ASM; TACH DRIVE 3BO	000000	000000
1858600350	1-8586	0035	ELBOW ASM; TACH DRIVE 3BO	000000	000000
1858600351	1-8586	0035	ELBOW ASM; TACH DRIVE 3BO	000001	000000
1858600400	1-8586	0040	ELBOW;TACH/METER	000000	000000
1858600440	1-8586	0044	ELBOW; TACH/METER	000000	000000
1858600441	1-8586	0044	ELBOW; TACH/METER	000000	000000
1858600460	1-8586	0046	ELBOW; TACH/METER	000002	000000
1858600490	1-8586	0049	ELBOW ASM	000000	000003
1858600500	1-8586	0050	BOX; GEAR,TACHO	000000	000002
1858754360	1-8587	5436	PLATE; CAUTION,HIGH TEMP	000000	000001
1858850540	1-8588	5054	CAUTION PAPER;AIR CL.	000000	000000
1858852391	1-8588	5239	PLATE; CAUTION, HEAD COVE	000000	000000
1858852451	1-8588	5245	PLATE; CAUTION, HEAD COVE	000000	000000
1858855630	1-8588	5563	PLATE; CAUTION, HEAD COVE	000000	000000
1858856641	1-8588	5664	PLATE; CAUTION,HEAD COVER	000000	000001
1858857031	1-8588	5703	PLATE; CAUTION	000000	000000
1858857880	1-8588	5788	PLATE; CAUTION	000000	000000
1858857881	1-8588	5788	PLATE; CAUTION	000000	000000
1858858140	1-8588	5814	PLATE; CAUTION	000000	000000
1858858141	1-8588	5814	PLATE; CAUTION	000000	000000
1858858330	1-8588	5833	CAUTION PLATE	000000	000000
1858858401	1-8588	5840	PLATE; CAUTION,HEAD COVER	000000	000000
1858858600	1-8588	5860	PLATE; CAUTION	000000	000000
1858858610	1-8588	5861	PLATE; CAUTION	000000	000000
1858858611	1-8588	5861	PLATE; CAUTION	000000	000000
1858862430	1-8588	6243	PLATE; CAUTION	000000	000000
1858863070	1-8588	6307	PLATE; CAUTION	000001	000000
1858863071	1-8588	6307	PLATE; CAUTION	000000	000000
1858864100	1-8588	6410	PLATE; CAUTION	000000	000000
1858864101	1-8588	6410	PLATE; CAUTION	000000	000001
1858864540	1-8588	6454	CAUTION PLATE	000000	000000
1858864570	1-8588	6457	CAUTION PLATE	000000	000000
1858864600	1-8588	6460	PLATE; CAUTION	000000	000000
1858864610	1-8588	6461	CAUTION PLATE	000000	000000
1858864780	1-8588	6478	PLATE; CAUTION	000000	000000
1858864970	1-8588	6497	LABEL; EMISSION (6BD1T)	000003	000000
1858868150	1-8588	6815	PLATE;CAUTION,ENG.14,200	000000	000000
1858868160	1-8588	6816	PLATE; CAUTION	000000	000000
1858868560	1-8588	6856	PLATE; CAUTION	000000	000000
1858869540	1-8588	6954	LABEL;ENG MAINTENANCE	000000	000002

1858869550	1-8588	6955	LABEL;ENG MAINTENANCE	000001	000000
1858869630	1-8588	6963	LABEL;ENG MAINTENANCE	000000	000002
1858869690	1-8588	6969	LABEL;ENG MAINTENANCE	000001	000000
1858869700	1-8588	6970	LABEL;ENG MAINTENANCE	000000	000002
1858869710	1-8588	6971	LABEL;ENG MAINTENANCE	000010	000000
1858869720	1-8588	6972	LABEL;ENG MAINTENANCE	000003	000000
1858869730	1-8588	6973	LABEL;ENG MAINTENANCE	000005	000000
1858875750	1-8588	7575	CAUTION PLATE	000000	000000
1858875751	1-8588	7575	CAUTION PLATE	000000	000000
1858875760	1-8588	7576	CAUTION PLATE	000000	000000
1858875761	1-8588	7576	CAUTION PLATE	000000	000000
1858875900	1-8588	7590	CAUTION PLATE	000000	000000
1858875901	1-8588	7590	CAUTION PLATE	000001	000000
1858876901	1-8588	7690	CAUTION PLATE	000000	000000
1858876960	1-8588	7696	PLATE; CAUTION	000000	000000
1858876961	1-8588	7696	PLATE; CAUTION	000000	000000
1858877031	1-8588	7703	PLATE; CAUTION	000000	000000
1858879371	1-8588	7937	CAUTION PLATE	000000	000000
1858882391	1-8588	8239	PLATE; CAUTION, HEAD COVE	000000	000000
1858882401	1-8588	8240	PLATE;CAUTION	000000	000000
1858882451	1-8588	8245	PLATE; CAUTION, HEAD COVE	000000	000000
1858886430	1-8588	8643	CAUTION PLATE	000000	000000
1858886780	1-8588	8678	CAUTION PLATE	000000	000000
1868300035			HINGE; HEADLAMP	000000	000000
1868300045			HINGE; HEADLAMP	000000	000000
1868300075			LAMP ASM; SIDE	000000	000003
1868300076			LAMP ASM; SIDE	000000	000000
1868300115			LAMP ASM; SIDE	000000	000000
1868300116			LAMP ASM; SIDE	000000	000000
1868301234			LAMP ASM; HEAD	000000	000001
1868302652			LAMP ASM; SIDE	000000	000001
1868302661			LAMP UNIT; SIDE	000000	000000
1868302920			LAMP; MARKER	000000	000001
1868302930			LAMP; MARKER	000000	000001
1870100750	1-8701	0075	BRACKET; CUSHION	000000	000000
1870100751	1-8701	0075	BRACKET; CUSHION	000000	000000
1870901300	1-8709	0130	GEAR BOX; TACH DRIVE ASM	000000	000000
1870901301	1-8709	0130	GEAR BOX; TACH DRIVE ASM	000000	000000
1870902110	1-8709	0211	BALL JOINT;ROD	000000	000000
1873100400	1-8731	0040	PISTON;GRADE C	000000	000000
1873100411	1-8731	0041	PISTON;GRADE A	000000	000000
1873100421	1-8731	0042	PISTON;GRADE C	000000	000000
1873100510	1-8731	0051	PISTON; (GRADE	000000	000000
1873100520	1-8731	0052	PISTON; (GRADE	000000	000000
1873100530			PISTON	000000	000000
1873100531			PISTON	000000	000000
1873100534			PISTON	000000	000000

1873100550	1-8731	0055	P I S T O N, (GRADE=A)	000000	000000
1873100560	1-8731	0056	P I S T O N, (GRADE=C)	000000	000000
1873100570	1-8731	0057	PISTON; GRADE	000000	000000
1873100580	1-8731	0058	PISTON; GRADE	000000	000000
1873100800	1-8731	0080	BELT; COOLING FAN	000000	000027
1873101050	1-8731	0105	ELEMENT KIT; FUEL	000000	000000
1873101051	1-8731	0105	ELEMENT KIT; FUEL	000000	000329
1873101320	1-8731	0132	CARTRIDGE; OIL	000000	000000
1873101321	1-8731	0132	CARTRIDGE; OIL	000000	000000
1873101322	1-8731	0132	CARTRIDGE; OIL	000000	000399
1873101360	1-8731	0136	PACKING	000002	000000
1873101420	1-8731	0142	SEAL & BRG KIT	000000	000004
1873101940	1-8731	0194	VALVE KIT;EGR	000000	000010
1873101950	1-8731	0195	VALVE KIT; EGR	000000	000011
1873103740	1-8731	0374	VALVE KIT; EGR	000000	000008
1873104710	1-8731	0471	PUMP ASM;WATER,W/GSKT	000000	000002
1873104860	1-8731	0486	PUMP ASM; WATER,W/GASKET	000000	000005
1873104870	1-8731	0487	PUMP AS; WATER,W/GASKET	000000	000021
1873106850	1-8731	0685	FILTER FUEL	000000	000000
1873106851	1-8731	0685	FILTER FUEL	000000	000000
1873106852	1-8731	0685	FILTER FUEL	000000	000304
1873106860			BELT; A/C COMPRESSOR	000000	000000
1874100030			LEVER KIT RELEASE	000000	000000
1874100360	1-8741	0036	LEVER KIT; RELEASE LEVER	000000	000000
1874100460	1-8741	0046	LEVER KIT; RELEASE, CLUTC	000000	000000
1874102250	1-8741	0225	REGULATOR ASM	000000	000000
1874102310	1-8741	0231	HOLDER;BRUSH	000000	000000
1874102420	1-8741	0242	COVER ASM;CENTER	000000	000000
1874117300	1-8741	1730	ELEMENT; OIL FILTER	000000	000000
1874117320			ELEMENT; FUEL FILTER	000000	000000
1874117380			FILTER	000000	000000
1874117430			ELEMENT KIT; FUEL FILTER	000000	000000
1874117460			RING SET; PISTON	000000	000000
1874117470			RING SET; PISTON	000000	000000
1874117480			RING SET; PISTON	000000	000000
1874118700			ELEMENT; OIL FILTER	000000	000000
1874118820			ELEMENT;FUEL FILTER	000000	000000
1874118850			ELEMENT; FUEL FILTER	000000	000000
1875200340			REPAIR KIT	000000	000000
1875201040			REPAIR KIT; OIL PUMP	000000	000000
1875201130			REPAIR KIT	000000	000000
1875201770	1-8752	0177	REPAIR KIT	000000	000000
1875202020			REPAIR KIT; HYD	000000	000000
1875202030	1-8752	0203	REPAIR KIT; HYD	000000	000000
1875202430	1-8752	0243	REPAIR KIT	000007	000000
1875202460	1-8752	0246	REPAIR KIT	000000	000003
1875202710			REPAIR KIT	000000	000000

1875300010		SEAL KIT; GENERATOR	000000	000000
1878100090	1-8781 0009	LINER KIT; CYL	000000	000000
1878100155	1-8781 0015	LINER KIT; CYL	000000	000000
1878100200	1-8781 0020	FUEL FILTER	000000	000000
1878100210	1-8781 0021	ELEMENT KIT	000000	000000
1878100220	1-8781 0022	FILTER PAPER ELEMENT; OIL	000000	000002
1878100261	1-8781 0026	REPAIR KIT; O/H	000000	000000
1878100272	1-8781 0027	ELEMENT KIT; F.	000000	000000
1878100284	1-8781 0028	LINER KIT;CYLINDER	000000	000000
1878100306	1-8781 0030	REPAIR KIT; O/H	000000	000000
1878100311	1-8781 0031	ENG OVERHAUL	000000	000000
1878100315	1-8781 0031	ENG OVERHAUL	000000	000000
1878100316	1-8781 0031	ENG OVERHAUL	000000	000000
1878100320	1-8781 0032	REPAIR KIT; OH	000000	000000
1878100321	1-8781 0032	REPAIR KIT; OH	000000	000000
1878100332	1-8781 0033	REPAIR KIT ENG.	000000	000000
1878100352	1-8781 0035	REPAIR KIT; ENG,	000000	000000
1878100490	1-8781 0049	FILTER;FUEL PAPER ELEMENT	000000	000000
1878100501	1-8781 0050	FILTER;OIL PAPER ELEMENT	000000	000000
1878100502	1-8781 0050	FILTER;OIL PAPER ELEMENT	000000	000000
1878100510	1-8781 0051	ELEMENTL; FUEL FILTER	000000	000000
1878100522	1-8781 0052	REPAIR KIT; OIL	000000	000000
1878100524	1-8781 0052	REPAIR KIT; OIL	000002	000000
1878100680	1-8781 0068	ELEMENT; AIR CLEANER E120	000000	000001
1878100690	1-8781 0069	ELEMENT; AIR CLEANER E120	000000	000000
1878100710	1-8781 0071	ELEMENT KIT; F.	000000	000000
1878100750	1-8781 0075	OIL FILTER	000000	000000
1878100751	1-8781 0075	OIL FILTER	000000	000000
1878100752	1-8781 0075	OIL FILTER	000021	000238
1878100753	1-8781 0075	OIL FILTER	000000	000000
1878100780	1-8781 0078	REPAIR KIT;ENG.	000000	000000
1878100781	1-8781 0078	REPAIR KIT;ENG.	000000	000000
1878100792	1-8781 0079	FILTER;OIL PAPER ELEMENT	000000	000026
1878100802	1-8781 0080	REPAIR KIT	000000	000000
1878100810	1-8781 0081	REPAIR KIT; WATER PUMP	000000	000000
1878100863	1-8781 0086	LINER SET; CYL	000000	000000
1878100872	1-8781 0087	LINER KIT; CYL	000000	000000
1878100885	1-8781 0088	LINER KIT CYL	000000	000000
1878100886	1-8781 0088	LINER KIT	000000	000000
1878100901	1-8781 0090	REPAIR KIT	000000	000000
1878100902	1-8781 0090	REPAIR KIT	000000	000002
1878100931	1-8781 0093	REPAIR KIT; WATER PUMP	000000	000000
1878100932	1-8781 0093	REPAIR KIT; WATER PUMP	000000	000000
1878100952	1-8781 0095	REPAIR KIT; WATER PUMP	000000	000000
1878100954	1-8781 0095	REPAIR KIT; WATER PUMP	000000	000002
1878100972	1-8781 0097	REPAIR KIT; W/P	000000	000000
1878101031	1-8781 0103	REPAIR KIT; WATER PUMP	000000	000000

1878101091	1-8781	0109	REPAIR KIT; WATER PUMP	000000	000000
1878101095	1-8781	0109	REPAIR KIT; WATER PUMP	000000	000000
1878101102	1-8781	0110	REPAIR KIT; WATER PUMP	000000	000000
1878101160	1-8781	0116	LINER KIT	000000	000000
1878101161	1-8781	0116	LINER KIT	000000	000000
1878101292	1-8781	0129	ELEMENT; OIL	000001	000000
1878101320	1-8781	0132	LINER SET 12PB1	000000	000000
1878101421	1-8781	0142	REPAIR KIT; WATER PUMP	000000	000000
1878101422	1-8781	0142	REPAIR KIT; WATER PUMP	000000	000002
1878101430	1-8781	0143	REPAIR KIT; WATER PUMP	000000	000000
1878101442	1-8781	0144	REPAIR KIT; WATER PUMP	000000	000000
1878101451	1-8781	0145	REPAIR KIT; WATER	000000	000000
1878101452	1-8781	0145	REPAIR KIT; WATER	000002	000000
1878101504	1-8781	0150	REPAIR KIT; WATER PUMP	000001	000001
1878101510	1-8781	0151	REPAIR KIT; WATER PUMP	000000	000000
1878101514	1-8781	0151	REPAIR KIT; WATER PUMP	000000	000001
1878101533	1-8781	0153	REPAIR KIT;W/PU	000000	000000
1878101543	1-8781	0154	REPAIR KIT; W/P	000000	000000
1878101612	1-8781	0161	REPAIR KIT; ENGINE O/H	000000	000000
1878101615	1-8781	0161	OVERHAUL GASKET KIT	000000	000000
1878101616	1-8781	0161	OVERHAUL GASKET KIT	000003	000000
1878101630	1-8781	0163	REPAIR KIT; O/H	000000	000000
1878101632	1-8781	0163	REPAIR KIT; ENGINE O/H	000000	000000
1878101637	1-8781	0163	REPAIR KIT; ENGINE O/H	000000	000000
1878101670	1-8781	0167	REPAIR KIT; O/H	000000	000000
1878101675	1-8781	0167	REPAIR KIT; O/H	000000	000000
1878101710	1-8781	0171	TOP OVERHAUL KIT; ENGINE	000000	000000
1878101715	1-8781	0171	REPAIR KIT; TOP O/H	000000	000003
1878101722	1-8781	0172	REPAIR KIT; ENG TOP O/H	000000	000000
1878101724	1-8781	0172	REPAIR KIT; ENG TOP O/H	000000	000000
1878101740	1-8781	0174	TOP OVERHAUL KIT; ENGINE	000000	000000
1878101742	1-8781	0174	REPAIR KIT; TOP O/H	000000	000002
1878101794	1-8781	0179	REPAIR KIT; O/H	000000	000000
1878101831	1-8781	0183	REPAIR KIT; O/H E120	000000	000000
1878101842	1-8781	0184	REPAIR KIT; ENGINE O/H	000000	000000
1878101845	1-8781	0184	REPAIR KIT; O/H	000000	000000
1878101846	1-8781	0184	REPAIR KIT; O/H	000000	000000
1878101851	1-8781	0185	CAMSHAFT & TAPPET SET	000000	000000
1878101873	1-8781	0187	REPAIR KIT;ENG.	000000	000000
1878101904	1-8781	0190	LINER SET 12PB1	000000	000000
1878101905	1-8781	0190	LINER SET	000000	000000
1878101996	1-8781	0199	REPAIR KIT; ENGINE	000000	000000
1878102071	1-8781	0207	FUEL FILTER(EXZ	000000	000000
1878102080	1-8781	0208	GEAR SET; OIL PUMP 6BB1 P	000000	000000
1878102082	1-8781	0208	GEAR SET; OIL PUMP 6BB1 P	000002	000000
1878102100	1-8781	0210	GEAR SET; OIL PUMP 6BB1 P	000000	000000
1878102102	1-8781	0210	GEAR SET; OIL PUMP 6BB1 P	000000	000000

1878102142	1-8781	0214	REPAIR KIT; ENG. TOP O/H	000000	000000
1878102185	1-8781	0218	REPAIR KIT; O/H	000000	000000
1878102191	1-8781	0219	LINER SET	000000	000000
1878102201	1-8781	0220	FILTER;OIL PAPER ELEMENT	000000	000137
1878102211	1-8781	0221	REPAIR KIT; WATER PUMP	000000	000000
1878102234	1-8781	0223	REPAIR KIT; WATER PUMP	000000	000000
1878102235	1-8781	0223	REPAIR KIT; WATER PUMP	000000	000000
1878102237	1-8781	0223	REPAIR KIT; WATER PUMP	000000	000001
1878102240	1-8781	0224	FUEL FILTER	000004	000000
1878102250	1-8781	0225	REPAIR KIT; O/H	000000	000000
1878102257	1-8781	0225	REPAIR KIT; O/H	000000	000001
1878102261	1-8781	0226	LINER KIT	000000	000000
1878102265	1-8781	0226	LINER KIT	000000	000000
1878102270	1-8781	0227	FILTER;OIL PAPER ELEMENT	000000	000000
1878102300	1-8781	0230	GASKET SET	000000	000000
1878102322	1-8781	0232	LINER KIT	000000	000000
1878102347	1-8781	0234	REPAIR KIT; O/H	000000	000000
1878102348	1-8781	0234	REPAIR KIT; O/H	000000	000000
1878102349	1-8781	0234	REPAIR KIT; O/H	000000	000002
1878102350	1-8781	0235	REPAIR KIT; TOP O/H	000000	000000
1878102390	1-8781	0239	FILTER;OIL PAPER-PARTIAL	000000	000000
1878102450	1-8781	0245	REPAIR KIT; WATER PUMP	000000	000000
1878102454	1-8781	0245	REPAIR KIT; WATER PUMP	000000	000000
1878102475	1-8781	0247	REPAIR KIT; O/H	000000	000000
1878102476	1-8781	0247	REPAIR KIT; O/H	000000	000000
1878102477	1-8781	0247	REPAIR KIT; O/H	000000	000000
1878102484	1-8781	0248	REPAIR KIT; WATER PUMP	000000	000000
1878102492	1-8781	0249	LINER SET E120	000000	000000
1878102512	1-8781	0251	1-8781 0518 ("C")	000000	000000
1878102600	1-8781	0260	OIL FILTERS	000000	000000
1878102601	1-8781	0260	FILTER;OIL PAPER ELEMENT	000012	000000
1878102678	1-8781	0267	REPAIR KIT; O/H	000000	000000
1878102679	1-8781	0267	REPAIR KIT; O/H	000000	000000
1878102683	1-8781	0268	GASKET SET	000000	000000
1878102730	1-8781	0273	REPAIR KIT; WATER PUMP	000000	000000
1878102741	1-8781	0274	REPAIR KIT; WATER PUMP	000001	000000
1878102751	1-8781	0275	REP.KIT, HEAD	000000	000000
1878102752	1-8781	0275	REPAIR KIT; TOP O/H	000000	000000
1878102753	1-8781	0275	REPAIR KIT; TOP O/H	000000	000000
1878102754	1-8781	0275	REPAIR KIT; TOP O/H	000000	000003
1878102760	1-8781	0276	REPAIR KIT;ENG.	000000	000000
1878102762	1-8781	0276	REPAIR KIT;ENG.	000000	000000
1878102763	1-8781	0276	REPAIR KIT;ENG.	000000	000000
1878102764	1-8781	0276	REPAIR KIT;ENG.	000000	000000
1878102770	1-8781	0277	REPAIR KIT; W/P	000000	000000
1878102771	1-8781	0277	REPAIR KIT; W/P	000000	000001
1878102772	1-8781	0277	REPAIR KIT; W/P	000000	000000

1878102773	1-8781	0277	REPAIR KIT; W/P	000000	000000
1878102795	1-8781	0279	REPAIR KIT; O/H	000000	000004
1878102796	1-8781	0279	REPAIR KIT; O/H	000000	000000
1878102797	1-8781	0279	REPAIR KIT; O/H	000000	000002
1878102798	1-8781	0279	REPAIR KIT; O/H	000000	000000
1878102799	1-8781	0279	REPAIR KIT; O/H	000000	000000
1878102804	1-8781	0280	REPAIR KIT; O/H	000000	000000
1878102813	1-8781	0281	REPAIR KIT; TOP O/H	000000	000000
1878102821	1-8781	0282	LINER SET E120T	000000	000000
1878102861	1-8781	0286	O/H GASKET KIT	000000	000000
1878102862	1-8781	0286	O/H GASKET KIT	000000	000000
1878102864	1-8781	0286	REPAIR KIT; O/H	000000	000000
1878102865	1-8781	0286	O/H GASKET KIT	000000	000000
1878102866	1-8781	0286	O/H GASKET KIT	000003	000000
1878102873	1-8781	0287	REPAIR KIT; O/H	000000	000000
1878102875	1-8781	0287	REPAIR KIT; O/H	000000	000001
1878102908	1-8781	0290	REPAIR KIT; O/H WO/TURBO	000000	000000
1878102909	1-8781	0290	REPAIR KIT; O/H WO/TURBO	000000	000000
1878102914	1-8781	0291	REPAIR KIT; TOP O/H	000000	000000
1878102915	1-8781	0291	REPAIR KIT; TOP O/H	000000	000000
1878102916	1-8781	0291	REPAIR KIT; TOP O/H	000000	000000
1878102917	1-8781	0291	REPAIR KIT; TOP O/H	000000	000002
1878102933	1-8781	0293	REPAIR KIT; O/H	000000	000000
1878102941	1-8781	0294	REPAIR KIT; TOP O/H	000000	000001
1878102953	1-8781	0295	LINER SET; CYL	000000	000000
1878102991	1-8781	0299	LINER KIT; CYL.	000000	000000
1878103001	1-8781	0300	LINER KIT	000000	000000
1878103014	1-8781	0301	REPAIR KIT; TURBO	000000	000000
1878103082	1-8781	0308	REPAIR KIT; WATER PUMP	000000	000000
1878103083	1-8781	0308	REPAIR KIT; WATER PUMP	000000	000000
1878103091	1-8781	0309	REPAIR KIT; WATER PUMP	000000	000000
1878103105	1-8781	0310	ENG OVERHAUL	000000	000000
1878103112	1-8781	0311	REPAIR KIT; WATER PUMP	000000	000000
1878103113	1-8781	0311	REPAIR KIT; WATER PUMP	000000	000000
1878103114	1-8781	0311	REPAIR KIT; WATER PUMP	000000	000000
1878103132	1-8781	0313	ELEMENT KIT	000000	000000
1878103142	1-8781	0314	ELEMENT KIT	000000	000000
1878103186	1-8781	0318	REPAIR KIT	000000	000000
1878103321	1-8781	0332	REPAIR KIT	000000	000000
1878103340	1-8781	0334	OIL FILTER	000000	000012
1878103370	1-8781	0337	REPAIR KIT; ENG.	000000	000000
1878103400	1-8781	0340	ENG.LINER KIT	000000	000000
1878103401	1-8781	0340	LINER KIT;CYLINDER	000000	000000
1878103402	1-8781	0340	LINER KIT W/TURBO	000000	000000
1878103420	1-8781	0342	REPAIR KIT; WATER PUMP	000000	000000
1878103611	1-8781	0361	REPAIR KIT; O/H	000000	000000
1878103612	1-8781	0361	REPAIR KIT; O/H	000000	000000

1878103663	1-8781	0366	LINER KIT; CYLINDER	000000	000000
1878103670	1-8781	0367	SEDIMENTER (EXZ)	000000	000014
1878103721			ELEMENT KIT, OIL	000000	000000
1878103760			REPAIR KIT; O/H WO/TURBO	000000	000000
1878103762	1-8781	0376	REPAIR KIT; ENGINE O/H	000000	000000
1878103771			GASKET SET; ENG	000000	000000
1878103772			GASKET SET; ENG	000000	000001
1878103791			LINER SET; ENG CYL	000000	000000
1878103820	1-8781	0382	REPAIR KIT; O/H WO/TURBO	000000	000002
1878103823	1-8781	0382	REPAIR KIT; ENGINE O/H	000000	000000
1878103832	1-8781	0383	REPAIR KIT; TOP O/H	000000	000000
1878103833	1-8781	0383	REPAIR KIT; ENG. TOP O/H	000000	000000
1878103834	1-8781	0383	REPAIR KIT; ENG. TOP O/H	000000	000002
1878103842	1-8781	0384	LINER SET	000000	000000
1878103850	1-8781	0385	REPAIR KIT; WATER PUMP 6S	000000	000000
1878103852	1-8781	0385	REPAIR KIT; WATER PUMP 6S	000000	000000
1878103853	1-8781	0385	REPAIR KIT; WATER PUMP 6S	000000	000000
1878103861	1-8781	0386	REPAIR KIT; WATER PUMP	000000	000000
1878103862	1-8781	0386	REPAIR KIT; WATER PUMP	000000	000000
1878103870	1-8781	0387	REPAIR KIT;W/PU	000000	000000
1878103871	1-8781	0387	REPAIR KIT;W/PU	000000	000000
1878103900	1-8781	0390	GSKT SET;HEAD	000000	000000
1878103902	1-8781	0390	GSKT SET;HEAD	000000	000000
1878103903	1-8781	0390	GASKET SET; ENG	000000	000000
1878103910	1-8781	0391	GSKT SET;ENG.	000000	000000
1878103913	1-8781	0391	GSKT SET;ENG.	000000	000000
1878103914	1-8781	0391	GASKET SET; ENG	000000	000000
1878103915	1-8781	0391	GASKET SET;ENG	000000	000000
1878103916	1-8781	0391	REPAIR KIT; O/H	000000	000000
1878103922	1-8781	0392	LINER SET	000000	000000
1878103933	1-8781	0393	LINER SET	000000	000000
1878104045	1-8781	0404	GASKET SET;ENG	000000	000000
1878104046	1-8781	0404	GASKET SET ENG	000000	000000
1878104062	1-8781	0406	LINER SET;CYLINDER	000000	000000
1878104073	1-8781	0407	REPAIR KIT; O/H W/TURBO	000000	000000
1878104083	1-8781	0408	REPAIR KIT; TOP O/H W/TU	000000	000000
1878104095	1-8781	0409	REPAIR KIT; O/H WO/TURBO	000000	000000
1878104096	1-8781	0409	REPAIR KIT; O/H WO/TURBO	000000	000000
1878104097	1-8781	0409	REPAIR KIT; O/H WO/TURBO	000000	000000
1878104098	1-8781	0409	REPAIR KIT; O/H WO/TURBO	000000	000000
1878104099	1-8781	0409	REPAIR KIT; O/H WO/TURBO	000000	000000
1878104108	1-8781	0410	REPAIR KIT; O/H W/TURBO	000000	000000
1878104109	1-8781	0410	REPAIR KIT; O/H W/TURBO	000000	000000
1878104112			LINER KIT; TURBO 6BG1	000000	000000
1878104113			LINER KIT; TURBO 6BG1	000000	000000
1878104121	1-8781	0412	ELEMENT KIT; FUEL 6BG1	000000	000046
1878104122	1-8781	0412	ELEMENT KIT; FUEL 6BG1	000000	000000

1878104140	1-8781	0414	GSKT SET;ENGINE	000000	000000
1878104141	1-8781	0414	GSKT SET;ENGINE	000000	000000
1878104143	1-8781	0414	GASKET SET;ENG	000000	000000
1878104160	1-8781	0416	REPAIR KIT;WATER PUMP	000000	000000
1878104161	1-8781	0416	REPAIR KIT;WATER PUMP	000000	000000
1878104162	1-8781	0416	REPAIR KIT;WATER PUMP	000000	000000
1878104163	1-8781	0416	REPAIR KIT;WATER PUMP	000000	000000
1878104164	1-8781	0416	REPAIR KIT;WATER PUMP	000000	000002
1878104170	1-8781	0417	LINER SET	000000	000000
1878104180	1-8781	0418	LINER SET; CYL.	000000	000000
1878104181	1-8781	0418	LINER SET; CYL.	000000	000006
1878104210	1-8781	0421	GSKT SET; HEAD.	000000	000000
1878104211	1-8781	0421	GSKT SET; HEAD	000001	000000
1878104212	1-8781	0421	GKST SET; HEAD	000000	000000
1878104432	1-8781	0443	REPAIR KIT; O/H	000000	000000
1878104440	1-8781	0444	REPAIR KIT; TOP O/H	000000	000000
1878104442	1-8781	0444	REPAIR KIT; ENG. TOP O/H	000000	000000
1878104451	1-8781	0445	LINER SET 6 CYL.	000000	000000
1878104467	1-8781	0446	REPAIR KIT; ENGINE O/H	000000	000000
1878104468	1-8781	0446	REPAIR KIT; ENGINE O/H	000000	000000
1878104477	1-8781	0447	REPAIR KIT; ENGINE O/H	000000	000000
1878104486	1-8781	0448	REPAIR KIT; ENGINE O/H	000000	000000
1878104487	1-8781	0448	REPAIR KIT; ENGINE O/H	000000	000000
1878104530	1-8781	0453	LINER; ENG.	000000	000000
1878104531	1-8781	0453	LINER SET	000000	000000
1878104560	1-8781	0456	LINER; ENG.	000000	000000
1878104561	1-8781	0456	LINER SET TURBO	000000	000000
1878104562	1-8781	0456	LINER SET;ENG.	000000	000000
1878104570	1-8781	0457	LINER; ENG.	000000	000000
1878104571	1-8781	0457	LINER SET TURBO	000000	000000
1878104572	1-8781	0457	LINER SET;ENG.	000000	000000
1878104580	1-8781	0458	LINER; ENG.	000000	000000
1878104581	1-8781	0458	LINER SET TURBO	000000	000000
1878104582	1-8781	0458	LINER SET;ENG	000000	000000
1878104590	1-8781	0459	LINER; ENG.	000000	000000
1878104591	1-8781	0459	LINER SET TURBO	000000	000000
1878104592	1-8781	0459	LINER SET;ENG	000000	000000
1878104700	1-8781	0470	LINER SET;CYL(G	000000	000000
1878104710	1-8781	0471	LINER SET;CYL(G	000000	000000
1878104852			REPAIR KIT; O/H	000000	000000
1878104855	1-8781	0485	REPAIR KIT; O/H	000000	000000
1878105100	1-8781	0510	LINER SET; CYL E120	000000	000000
1878105101	1-8781	0510	GASKET SET;TRANS	000000	000000
1878105130	1-8781	0513	LINER SET; CYL E120T	000000	000000
1878105140	1-8781	0514	LINER SET; CYL	000000	000000
1878105141	1-8781	0514	LINER SET; CYL	000000	000000
1878105150	1-8781	0515	LINER SET; ENG.	000000	000000

1878105160	1-8781	0516	LINER SET; CYL E120T	000000	000001
1878105170	1-8781	0517	LINER SET E120	000000	000000
1878105180	1-8781	0518	LINER SET; WO/TURBO	000000	000000
1878105190	1-8781	0519	REPAIR KIT; O/H	000000	000000
1878105192	1-8781	0519	REPAIR KIT; ENGINE O/H	000000	000000
1878105193	1-8781	0519	REPAIR KIT; ENGINE O/H	000000	000000
1878105194	1-8781	0519	REPAIR KIT; ENGINE O/H	000000	000001
1878105200	1-8781	0520	REPAIR KIT; TOP O/H	000000	000000
1878105240	1-8781	0524	REPAIR KIT; WATER PUMP	000000	000000
1878105313	1-8781	0531	GASKET KIT	000000	000000
1878105322	1-8781	0532	GASKET SET	000000	000000
1878105350	1-8781	0535	LINER SET;CYL	000000	000000
1878105352	1-8781	0535	LINER SET; CYL	000000	000000
1878105360	1-8781	0536	LINER SET;CYL	000000	000000
1878105362	1-8781	0536	LINER SET; CYL	000000	000000
1878105370	1-8781	0537	LINER SET; CYL	000000	000000
1878105371	1-8781	0537	LINER SET; CYL	000000	000000
1878105372	1-8781	0537	LINER SET; CYL	000000	000000
1878105390	1-8781	0539	GSKT SET;ENGINE	000000	000000
1878105391	1-8781	0539	GSKT SET;ENGINE	000000	000000
1878105392	1-8781	0539	GSKT.SET;ENGINE	000000	000000
1878105393	1-8781	0539	GSKT.SET;ENGINE	000000	000000
1878105394	1-8781	0539	GSKT.SET;ENGINE	000000	000000
1878105395	1-8781	0539	GSKT.SET;ENGINE	000000	000005
1878105400	1-8781	0540	GSKT SET;HEAD	000000	000000
1878105401	1-8781	0540	GSKT SET; HEAD	000000	000000
1878105450	1-8781	0545	REPAIR KIT;	000000	000000
1878105451	1-8781	0545	REPAIR KIT;	000000	000000
1878105460	1-8781	0546	REPAIR KIT; WATER PUMP	000000	000000
1878105482	1-8781	0548	LINER SET 6 CYL.	000000	000000
1878105510	1-8781	0551	LINER SET;W/TURBO 6RB1	000000	000000
1878105530	1-8781	0553	REPAIR KIT; O/H	000000	000000
1878105531	1-8781	0553	REPAIR KIT; O/H	000000	000000
1878105540	1-8781	0554	REPAIR KIT; O/H	000000	000000
1878105600	1-8781	0560	LINER SET;W/W-PIN BUSHING	000000	000000
1878105642	1-8781	0564	REPAIR KIT; TOP O/H	000000	000000
1878105650	1-8781	0565	FUEL FILTER	000000	000000
1878105670	1-8781	0567	LINER SET; CYL.	000000	000000
1878105680	1-8781	0568	LINER SET	000000	000000
1878105690	1-8781	0569	LINER KIT CYL	000000	000000
1878105700	1-8781	0570	REPAIR KIT; O/H	000000	000000
1878105750	1-8781	0575	REPAIR KIT; WATER PUMP 6R	000000	000000
1878105770	1-8781	0577	LINER SET	000000	000000
1878105780	1-8781	0578	LINER SET	000000	000000
1878105812	1-8781	0581	REPAIR KIT; ENG. TOP O/H	000000	000000
1878105813	1-8781	0581	REPAIR KIT; TOP O/H	000000	000000
1878105814	1-8781	0581	REPAIR KIT; TOP O/H	000000	000000

1878105820	1-8781	0582	REPAIR KIT; TOP O/H	000000	000000
1878105821	1-8781	0582	REPAIR KIT; TOP O/H	000000	000000
1878105830	1-8781	0583	REPAIR KIT; TOP O/H	000000	000000
1878105831	1-8781	0583	REPAIR KIT; TOP O/H	000000	000000
1878105834	1-8781	0583	REPAIR KIT; TOP O/H	000000	000000
1878105841	1-8781	0584	REPAIR KIT; O/H	000000	000000
1878105844	1-8781	0584	REPAIR KIT; O/H	000000	000000
1878105847	1-8781	0584	REPAIR KIT; O/H	000000	000000
1878105848	1-8781	0584	REPAIR KIT; O/H	000000	000001
1878105850	1-8781	0585	REPAIR KIT; O/H	000000	000000
1878105853	1-8781	0585	REPAIR KIT; O/H	000000	000001
1878105860	1-8781	0586	REPAIR KIT; O/H	000000	000000
1878105861	1-8781	0586	REPAIR KIT; ENGINE O/H	000000	000000
1878105870	1-8781	0587	REPAIR KIT; O/H	000000	000000
1878105880	1-8781	0588	REPAIR KIT; O/H	000000	000000
1878105890	1-8781	0589	REPAIR KIT; O/H	000000	000000
1878105900	1-8781	0590	REPAIR KIT; O/H	000000	000000
1878105902	1-8781	0590	REPAIR KIT; O/H	000000	000000
1878105970	1-8781	0597	LINER SET; CYL	000000	000000
1878105971	1-8781	0597	LINER SET; ENGINE CYL	000000	000000
1878106050	1-8781	0605	LINER SET	000000	000000
1878106051	1-8781	0605	LINER SET; NON-TURBO	000000	000000
1878106090	1-8781	0609	GASKET SET;ENG	000000	000000
1878106091	1-8781	0609	GASKET SET;ENG	000000	000000
1878106152	1-8781	0615	REPAIR KIT; TOP O/H	000000	000000
1878106153	1-8781	0615	REPAIR KIT; TOP O/H	000000	000000
1878106162	1-8781	0616	REPAIR KIT; O/H	000000	000000
1878106164	1-8781	0616	REPAIR KIT; O/H	000000	000000
1878106165	1-8781	0616	REPAIR KIT; O/H	000000	000000
1878106166	1-8781	0616	REPAIR KIT; O/H	000000	000000
1878106167	1-8781	0616	REPAIR KIT; O/H	000000	000000
1878106169	1-8781	0616	REPAIR KIT; O/H	000000	000020
1878106190	1-8781	0619	REPAIR KIT; O/H WO/TURBO	000000	000000
1878106192	1-8781	0619	REPAIR KIT; O/H WO/TURBO	000000	000000
1878106193	1-8781	0619	REPAIR KIT; ENGINE O/H	000000	000000
1878106202	1-8781	0620	REPAIR KIT; O/H W/TURBO	000000	000000
1878106210	1-8781	0621	REPAIR KIT; TOP O/H WO/TU	000000	000000
1878106212	1-8781	0621	REPAIR KIT; TOP O/H WO/TU	000000	000001
1878106220	1-8781	0622	REPAIR KIT; TOP O/H W/TU	000000	000000
1878106320	1-8781	0632	REPAIR KIT; O/H	000000	000000
1878106330	1-8781	0633	REPAIR KIT; O/H WO/TURBO	000000	000000
1878106331	1-8781	0633	REPAIR KIT; O/H WO/TURBO	000000	000000
1878106340	1-8781	0634	REPAIR KIT; O/H WO/TURBO	000000	000000
1878106343	1-8781	0634	REPAIR KIT; O/H WO/TURBO	000000	000000
1878106351	1-8781	0635	REPAIR KIT; O/H WO/TURBO	000000	000000
1878106352	1-8781	0635	GASKET SET	000000	000000
1878106353	1-8781	0635	GASKET SET	000000	000000

1878106354	1-8781	0635	GASKET SET	000000	000000
1878106355	1-8781	0635	GASKET SET	000000	000000
1878106356	1-8781	0635	GASKET SET	000000	000000
1878106357	1-8781	0635	GASKET SET	000000	000000
1878106358	1-8781	0635	GASKET SET	000000	000000
1878106359	1-8781	0635	GASKET SET	000000	000000
1878106360	1-8781	0636	REPAIR KIT; O/H WO/TURBO	000000	000000
1878106362	1-8781	0636	REPAIR KIT; O/H WO/TURBO	000000	000000
1878106363	1-8781	0636	REPAIR KIT; O/H WO/TURBO	000000	000000
1878106364	1-8781	0636	REPAIR KIT; O/H WO/TURBO	000000	000005
1878106370	1-8781	0637	REPAIR KIT; O/H WO/TURBO	000000	000000
1878106373	1-8781	0637	REPAIR KIT; O/H WO/TURBO	000000	000000
1878106374	1-8781	0637	REPAIR KIT; ENGINE O/H	000000	000000
1878106375	1-8781	0637	REPAIR KIT; ENGINE O/H	000000	000002
1878106382	1-8781	0638	REPAIR KIT; O/H WO/TURBO	000000	000000
1878106383	1-8781	0638	REPAIR KIT; O/H WO/TURBO	000000	000000
1878106384	1-8781	0638	REPAIR KIT; O/H WO/TURBO	000000	000000
1878106386	1-8781	0638	REPAIR KIT; O/H WO/TURBO	000000	000000
1878106387	1-8781	0638	REPAIR KIT; O/H WO/TURBO	000000	000001
1878106393	1-8781	0639	GASKET SET;ENG. OVERHAUL	000000	000000
1878106394	1-8781	0639	GASKET SET;ENG. OVERHAUL	000000	000000
1878106395	1-8781	0639	GASKET SET;ENG OVERHAUL	000000	000000
1878106396	1-8781	0639	GASKET SET;ENG.OVERHAUL	000000	000000
1878106397	1-8781	0639	GASKET SET; ENG.OVERHAUL	000000	000000
1878106398	1-8781	0639	GASKET SET; ENG OVERHAUL	000000	000000
1878106399	1-8781	0639	GASKET SET; ENG OVERHAUL	000000	000000
1878106402	1-8781	0640	REPAIR KIT; O/H W/TURBO	000000	000000
1878106405	1-8781	0640	REPAIR KIT; O/H W/TURBO	000000	000001
1878106413	1-8781	0641	REPAIR KIT; O/H W/TURBO	000000	000004
1878106421	1-8781	0642	REPAIR KIT; O/H W/TURBO	000000	000000
1878106430	1-8781	0643	REPAIR KIT; O/H W/TURBO	000000	000000
1878106442	1-8781	0644	REPAIR KIT; O/H	000000	000000
1878106451	1-8781	0645	REPAIR KIT; O/H W/TURBO	000000	000000
1878106452	1-8781	0645	REPAIR KIT; O/H W/TURBO	000000	000000
1878106453	1-8781	0645	REPAIR KIT; O/H W/TURBO	000000	000001
1878106461	1-8781	0646	REPAIR KIT; O/H W/TURBO	000000	000000
1878106462	1-8781	0646	REPAIR KIT; O/H W/TURBO	000000	000000
1878106470	1-8781	0647	GASKET SET	000000	000000
1878106480	1-8781	0648	REPAIR KIT; TOP O/H	000000	000000
1878106490	1-8781	0649	REPAIR KIT; O/H WO/TURBO	000000	000000
1878106492	1-8781	0649	REPAIR KIT; O/H WO/TURBO	000000	000000
1878106500	1-8781	0650	REPAIR KIT; TOP O/H	000000	000000
1878106502	1-8781	0650	REPAIR KIT; TOP O/H	000000	000000
1878106503	1-8781	0650	REPAIR KIT; TOP O/H	000000	000000
1878106504	1-8781	0650	REPAIR KIT; TOP O/H	000000	000000
1878106505	1-8781	0650	REPAIR KIT; TOP O/H	000000	000002
1878106510	1-8781	0651	LINER KIT; CYL 6BD1	000000	000000

1878106520	1-8781	0652	LINER SET	000000	000000
1878106521	1-8781	0652	LINER SET W/TURBO	000000	000000
1878106530	1-8781	0653	LINER KIT;CYLINDER	000000	000000
1878106564	1-8781	0656	REPAIR KIT; O/H	000000	000000
1878106565	1-8781	0656	REPAIR KIT; O/H	000000	000000
1878106566	1-8781	0656	REPAIR KIT; O/H	000000	000000
1878106567	1-8781	0656	REPAIR KIT; O/H	000000	000000
1878106568	1-8781	0656	REPAIR KIT; O/H	000000	000000
1878106569	1-8781	0656	REPAIR KIT; O/H	000000	000000
1878106573	1-8781	0657	REPAIR KIT; O/H	000000	000000
1878106574	1-8781	0657	REPAIR KIT; O/H	000000	000000
1878106575	1-8781	0657	REPAIR KIT; ENGINE O/H	000000	000000
1878106580	1-8781	0658	REPAIR KIT; O/H	000000	000000
1878106586	1-8781	0658	REPAIR KIT; ENGINE O/H	000000	000001
1878106587	1-8781	0658	REPAIR KIT; ENGINE O/H	000000	000001
1878106600	1-8781	0660	LINER SET	000000	000000
1878106602	1-8781	0660	LINER SET	000000	000000
1878106620	1-8781	0662	REPAIR KIT; WATER PUMP	000000	000000
1878106621	1-8781	0662	REPAIR KIT; WATER PUMP	000000	000000
1878106622	1-8781	0662	REPAIR KIT; WATER PUMP	000000	000000
1878106631	1-8781	0663	REPAIR KIT; WATER PUMP	000000	000000
1878106632	1-8781	0663	REPAIR KIT; WATER PUMP	000000	000002
1878106640	1-8781	0664	REPAIR KIT;	000000	000000
1878106790	1-8781	0679	ELEMENT KIT; OIL PART	000000	000019
1878106932	1-8781	0693	REPAIR KIT; TOP O/H W/TU	000000	000000
1878106933	1-8781	0693	REPAIR KIT; TOP O/H W/TU	000000	000000
1878106934	1-8781	0693	REPAIR KIT; TOP O/H W/TU	000000	000000
1878106944	1-8781	0694	REPAIR KIT; O/H W/TURBO	000000	000000
1878106945	1-8781	0694	REPAIR KIT; O/H W/TURBO	000000	000000
1878106947			REPAIR KIT; O/H W/TURBO	000000	000000
1878106948			REPAIR KIT; O/H W/TURBO	000000	000001
1878106950			LINER KIT	000000	000000
1878107080	1-8781	0708	GASKET SET; HEAD	000000	000000
1878107091	1-8781	0709	LINER SET; CYL.	000000	000000
1878107092	1-8781	0709	LINER SET; CYL.	000000	000000
1878107110	1-8781	0711	REPAIR KIT; WATER PUMP	000000	000000
1878107121	1-8781	0712	LINER SET	000000	000000
1878107200	1-8781	0720	REPAIR KIT; WATER PUMP	000001	000000
1878107210	1-8781	0721	REPAIR KIT; WATER PUMP	000001	000000
1878107251	1-8781	0725	REPAIR KIT; TOP O/H	000000	000000
1878107252	1-8781	0725	REPAIR KIT; TOP O/H	000000	000000
1878107253	1-8781	0725	REPAIR KIT; TOP O/H	000000	000000
1878107254	1-8781	0725	REPAIR KIT; TOP O/H	000000	000000
1878107255	1-8781	0725	REPAIR KIT; TOP O/H	000000	000000
1878107260	1-8781	0726	REPAIR KIT; TOP O/H	000000	000000
1878107261	1-8781	0726	REPAIR KIT; TOP O/H	000000	000000
1878107274	1-8781	0727	REPAIR KIT; O/H	000000	000000

1878107275	1-8781	0727	REPAIR KIT; ENGINE O/H	000000	000000
1878107276	1-8781	0727	REPAIR KIT; ENGINE O/H	000000	000000
1878107277	1-8781	0727	REPAIR KIT; ENGINE O/H	000000	000003
1878107311	1-8781	0731	REPAIR KIT; TOP O/H	000000	000000
1878107321	1-8781	0732	REPAIR KIT; O/H	000000	000000
1878107322	1-8781	0732	REPAIR KIT; ENGINE O/H	000000	000000
1878107363	1-8781	0736	REPAIR KIT; O/H	000000	000000
1878107364	1-8781	0736	REPAIR KIT; O/H	000000	000000
1878107365	1-8781	0736	REPAIR KIT; O/H	000000	000000
1878107366	1-8781	0736	REPAIR KIT; O/H	000000	000000
1878107368	1-8781	0736	REPAIR KIT; O/H	000000	000000
1878107369	1-8781	0736	REPAIR KIT; O/H	000000	000000
1878107370	1-8781	0737	ELEMENT KIT; PAPER (AIR)	000000	000000
1878107390	1-8781	0739	LINER SET WO/TURBO	000000	000000
1878107392	1-8781	0739	LINER SET WO/TURBO	000000	000000
1878107401	1-8781	0740	REPAIR KIT; TOP O/H	000000	000000
1878107402	1-8781	0740	REPAIR KIT; TOP O/H	000000	000000
1878107403	1-8781	0740	REPAIR KIT; TOP O/H	000000	000000
1878107404	1-8781	0740	REPAIR KIT; TOP O/H	000000	000002
1878107410	1-8781	0741	REPAIR KIT; O/H	000000	000000
1878107413	1-8781	0741	REPAIR KIT; O/H	000000	000000
1878107414	1-8781	0741	REPAIR KIT; O/H	000000	000000
1878107415	1-8781	0741	REPAIR KIT; O/H	000000	000001
1878107470	1-8781	0747	GASKET SET	000000	000000
1878107493	1-8781	0749	REPAIR KIT; O/H	000000	000000
1878107496	1-8781	0749	REPAIR KIT; O/H	000000	000001
1878107500	1-8781	0750	LINER KIT;CYLINDER	000000	000000
1878107621	1-8781	0762	REPAIR KIT, O/H	000000	000000
1878107730	1-8781	0773	REPAIR KIT; WATER PUMP	000000	000000
1878107731	1-8781	0773	REPAIR KIT; WATER PUMP	000000	000000
1878107741	1-8781	0774	REPAIR KIT; W/P	000000	000000
1878107850	1-8781	0785	OIL FILTER	000000	000000
1878107861	1-8781	0786	REPAIR KIT; O/H	000000	000000
1878107890	1-8781	0789	REPAIR KIT; OIL	000000	000000
1878107911	1-8781	0791	REPAIR KIT; O/H	000000	000000
1878108000	1-8781	0800	REPAIR KIT: WATER PUMP	000001	000000
1878108101	1-8781	0810	LINER SET	000001	000000
1878108140	1-8781	0814	LINER SET; CYL. 6SA1	000000	000000
1878108151	1-8781	0815	LINER SET;CYLINDER	000000	000000
1878108171	1-8781	0817	REPAIR KIT; WATER PUMP	000000	000007
1878108180	1-8781	0818	REPAIR KIT; WATER PUMP	000000	000000
1878108181	1-8781	0818	REPAIR KIT; WATER PUMP	000000	000000
1878108190	1-8781	0819	REPAIR KIT; W/PUMP	000000	000000
1878108191	1-8781	0819	REPAIR KIT; W/PUMP	000000	000004
1878108200	1-8781	0820	REPAIR KIT; O/H	000000	000000
1878108202	1-8781	0820	REPAIR KIT; ENGINE O/H	000000	000000
1878108250	1-8781	0825	REPAIR KIT; O/H	000000	000000

1878108251	1-8781	0825	REPAIR KIT; O/H	000000	000000
1878108260	1-8781	0826	REPAIR KIT; O/H	000000	000000
1878108261	1-8781	0826	REPAIR KIT; ENGINE O/H	000000	000000
1878108270	1-8781	0827	REPAIR KIT; O/H	000000	000000
1878108272	1-8781	0827	REPAIR KIT; ENGINE O/H	000000	000000
1878108282	1-8781	0828	REPAIR KIT; O/H	000000	000000
1878108283	1-8781	0828	REPAIR KIT; ENGINE O/H	000000	000000
1878108284	1-8781	0828	REPAIR KIT; ENGINE O/H	000000	000000
1878108285	1-8781	0828	REPAIR KIT; ENGINE O/H	000000	000000
1878108286	1-8781	0828	REPAIR KIT; ENGINE O/H	000000	000000
1878108287	1-8781	0828	REPAIR KIT; ENGINE O/H	000000	000000
1878108288	1-8781	0828	REPAIR KIT; ENGINE O/H	000000	000002
1878108290	1-8781	0829	REPAIR KIT; TOP O/H	000000	000000
1878108291	1-8781	0829	REPAIR KIT; TOP O/H	000000	000001
1878108300	1-8781	0830	REPAIR KIT; TOP O/H	000000	000000
1878108301	1-8781	0830	REPAIR KIT; TOP O/H	000000	000000
1878108302	1-8781	0830	REPAIR KIT; TOP O/H	000000	000000
1878108303	1-8781	0830	REPAIR KIT; TOP O/H	000000	000001
1878108310	1-8781	0831	REPAIR KIT; TOP O/H	000000	000000
1878108311	1-8781	0831	REPAIR KIT; TOP O/H	000000	000000
1878108313	1-8781	0831	REPAIR KIT; TOP O/H	000000	000001
1878108331	1-8781	0833	LINER KIT; CYL	000000	000000
1878108332	1-8781	0833	LINER KIT; CYL	000000	000000
1878108344	1-8781	0834	REPAIR KIT; ENGINE O/H	000000	000000
1878108345	1-8781	0834	REPAIR KIT; ENGINE O/H	000000	000000
1878108471	1-8781	0847	REPAIR KIT; O/H	000000	000000
1878108560	1-8781	0856	LINER SET; CYL.	000000	000000
1878108580	1-8781	0858	REPAIR KIT; O/H	000000	000000
1878108581	1-8781	0858	REPAIR KIT; O/H	000000	000000
1878108590	1-8781	0859	REPAIR KIT; O/H	000000	000000
1878108592	1-8781	0859	REPAIR KIT; O/H	000000	000000
1878108600	1-8781	0860	REPAIR KIT; O/H	000000	000000
1878108601	1-8781	0860	REPAIR KIT; O/H	000000	000000
1878108602	1-8781	0860	REPAIR KIT; O/H	000000	000000
1878108605	1-8781	0860	REPAIR KIT; O/H	000000	000002
1878108610	1-8781	0861	REPAIR KIT; O/H	000000	000000
1878108620	1-8781	0862	REPAIR KIT; O/H	000000	000000
1878108621	1-8781	0862	REPAIR KIT; O/H	000000	000000
1878108622	1-8781	0862	REPAIR KIT; ENGINE O/H	000000	000000
1878108623	1-8781	0862	REPAIR KIT; ENGINE O/H	000000	000001
1878108625	1-8781	0862	REPAIR KIT; ENGINE O/H	000000	000003
1878108630	1-8781	0863	REPAIR KIT; O/H	000000	000000
1878108631	1-8781	0863	REPAIR KIT; ENGINE O/H	000000	000000
1878108640	1-8781	0864	REPAIR KIT; O/H	000000	000000
1878108641	1-8781	0864	REPAIR KIT; ENGINE O/H	000000	000000
1878108645	1-8781	0864	REPAIR KIT; ENGINE O/H	000000	000001
1878108650	1-8781	0865	REPAIR KIT; O/H	000000	000000

1878108651	1-8781	0865	REPAIR KIT; ENGINE O/H	000000	000002
1878108660	1-8781	0866	REPAIR KIT; O/H	000000	000000
1878108670	1-8781	0867	REPAIR KIT; O/H	000000	000000
1878108672	1-8781	0867	REPAIR KIT; ENGINE O/H	000000	000000
1878108673	1-8781	0867	REPAIR KIT; O/H	000000	000000
1878108674	1-8781	0867	REPAIR KIT; O/H	000000	000000
1878108681			GASKET SET; ENG OVERHAUL	000000	000000
1878108700	1-8781	0870	REPAIR KIT; WATER PUMP	000000	000000
1878108701	1-8781	0870	REPAIR KIT; WATER PUMP	000000	000000
1878108702	1-8781	0870	REPAIR KIT; WATER PUMP	000000	000000
1878108703	1-8781	0870	REPAIR KIT; WATER PUMP	000000	000000
1878108720	1-8781	0872	LINER KIT; CYL	000000	000000
1878108740	1-8781	0874	REPAIR KIT; O/H	000000	000000
1878108741	1-8781	0874	REPAIR KIT; ENGINE O/H	000000	000000
1878108744	1-8781	0874	REPAIR KIT; ENGINE O/H	000000	000001
1878108750	1-8781	0875	REPAIR KIT; O/H	000000	000000
1878108751	1-8781	0875	REPAIR KIT; ENGINE O/H	000000	000000
1878108754	1-8781	0875	REPAIR KIT; ENGINE O/H	000000	000001
1878108760	1-8781	0876	REPAIR KIT; O/H	000000	000000
1878108770	1-8781	0877	REPAIR KIT; ENG. OVERHAUL	000000	000000
1878108771	1-8781	0877	REPAIR KIT; ENG. OVERHAUL	000000	000000
1878108772	1-8781	0877	REPAIR KIT; ENG. OVERHAUL	000000	000001
1878108801	1-8781	0880	REPAIR KIT; O/H	000000	000000
1878108802	1-8781	0880	REPAIR KIT; O/H	000000	000000
1878108803	1-8781	0880	REPAIR KIT; O/H	000000	000000
1878108804	1-8781	0880	REPAIR KIT; O/H	000000	000000
1878108805	1-8781	0880	REPAIR KIT; O/H	000000	000000
1878108806	1-8781	0880	REPAIR KIT; O/H	000000	000001
1878108810	1-8781	0881	LINER KIT; CYL.	000000	000000
1878108831	1-8781	0883	REPAIR KIT; O/H	000000	000000
1878108832	1-8781	0883	REPAIR KIT; O/H	000000	000000
1878108833	1-8781	0883	REPAIR KIT; O/H	000000	000000
1878108835	1-8781	0883	REPAIR KIT; O/H	000000	000000
1878108836	1-8781	0883	REPAIR KIT; O/H	000000	000000
1878108838	1-8781	0883	REPAIR KIT; O/H	000000	000007
1878108840	1-8781	0884	REPAIR KIT; O/H W/TURBO	000000	000000
1878108841	1-8781	0884	REPAIR KIT; O/H W/TURBO	000000	000002
1878108842	1-8781	0884	REPAIR KIT; O/H W/TURBO	000000	000000
1878108850	1-8781	0885	REPAIR KIT; O/H W/TURBO	000000	000000
1878108851	1-8781	0885	REPAIR KIT; ENGINE O/H	000000	000000
1878108852	1-8781	0885	REPAIR KIT; ENGINE O/H	000000	000000
1878108853	1-8781	0885	REPAIR KIT; ENGINE O/H	000000	000000
1878108854	1-8781	0885	REPAIR KIT; ENGINE O/H	000000	000000
1878108860	1-8781	0886	REPAIR KIT; TOP O/H	000000	000000
1878108861	1-8781	0886	REPAIR KIT; TOP O/H	000000	000000
1878108862	1-8781	0886	REPAIR KIT; TOP O/H	000000	000000
1878108891	1-8781	0889	REPAIR KIT; ENGINE O/H	000000	000000

1878108901	1-8781	0890	REPAIR KIT; O/H	000000	000000
1878108902	1-8781	0890	REPAIR KIT; O/H	000000	000000
1878108903	1-8781	0890	REPAIR KIT; O/H	000000	000000
1878108904	1-8781	0890	REPAIR KIT; O/H	000000	000000
1878108906	1-8781	0890	REPAIR KIT; O/H	000000	000000
1878108907	1-8781	0890	REPAIR KIT; O/H	000000	000000
1878108908	1-8781	0890	REPAIR KIT; O/H	000000	000000
1878108909	1-8781	0890	REPAIR KIT; O/H	000000	000003
1878108940	1-8781	0894	REPAIR KIT; O/H	000000	000000
1878108990	1-8781	0899	REPAIR KIT; O/H	000000	000000
1878108991	1-8781	0899	REPAIR KIT; O/H	000000	000000
1878108993	1-8781	0899	REPAIR KIT; ENGINE O/H	000000	000000
1878108995	1-8781	0899	REPAIR KIT; ENGINE O/H	000000	000001
1878109010	1-8781	0901	REPAIR KIT; TOP O/H	000000	000000
1878109020	1-8781	0902	LINER SET; W/TURBO	000000	000000
1878109030	1-8781	0903	LINER KIT; CYL.	000000	000000
1878109032	1-8781	0903	LINER KIT; NON-TURBO	000000	000000
1878109040	1-8781	0904	LINER SET; ENG. CYL	000000	000000
1878109050	1-8781	0905	LINER SET; ENG. CYL	000000	000000
1878109060	1-8781	0906	LINER SET; ENG. CYL	000000	000000
1878109070	1-8781	0907	LINER SET; ENG. CYL	000000	000000
1878109080	1-8781	0908	LINER SET; CYL.	000000	000000
1878109160	1-8781	0916	GASKET SET; ENG	000000	000000
1878109161	1-8781	0916	GASKET SET; ENG	000000	000000
1878109163	1-8781	0916	GASKET SET; ENG	000000	000000
1878109164	1-8781	0916	GASKET SET; ENG	000000	000001
1878109180	1-8781	0918	LINER KIT; CYL.	000000	000000
1878109190	1-8781	0919	REPAIR KIT; O/H	000000	000000
1878109193	1-8781	0919	REPAIR KIT; O/H	000000	000000
1878109194	1-8781	0919	REPAIR KIT; O/H	000000	000000
1878109195	1-8781	0919	REPAIR KIT; O/H	000000	000000
1878109196	1-8781	0919	REPAIR KIT; O/H	000000	000000
1878109197	1-8781	0919	REPAIR KIT; O/H	000000	000009
1878109201	1-8781	0920	REPAIR KIT; TOP O/H	000000	000000
1878109202	1-8781	0920	REPAIR KIT; TOP O/H	000000	000000
1878109203	1-8781	0920	REPAIR KIT; TOP O/H	000000	000000
1878109204	1-8781	0920	REPAIR KIT; TOP O/H	000000	000000
1878109205	1-8781	0920	REPAIR KIT; TOP O/H	000000	000002
1878109210	1-8781	0921	REPAIR KIT; O/H	000000	000000
1878109211	1-8781	0921	REPAIR KIT; O/H	000000	000000
1878109320	1-8781	0932	GASKET SET	000000	000000
1878109322	1-8781	0932	GASKET SET	000000	000000
1878109323	1-8781	0932	GASKET SET	000004	000000
1878109370	1-8781	0937	REPAIR KIT; W/P	000000	000000
1878109380	1-8781	0938	REPAIR KIT; O/H	000000	000000
1878109390	1-8781	0939	REPAIR KIT; O/H W/TURBO	000000	000000
1878109400	1-8781	0940	REPAIR KIT; O/H W/TURBO	000000	000000

1878109420	1-8781	0942	REPAIR KIT; W/PUMP	000000	000000
1878109421	1-8781	0942	REPAIR KIT; W/PUMP	000000	000000
1878109430	1-8781	0943	REPAIR KIT; TOP O/H	000000	000000
1878109431	1-8781	0943	REPAIR KIT; TOP O/H	000000	000000
1878109432	1-8781	0943	REPAIR KIT; TOP O/H	000000	000000
1878109433	1-8781	0943	REPAIR KIT; TOP O/H	000000	000003
1878109440	1-8781	0944	REPAIR KIT; TOP O/H	000000	000000
1878109441	1-8781	0944	REPAIR KIT; TOP O/H	000000	000000
1878109450	1-8781	0945	REPAIR KIT; TOP O/H	000000	000000
1878109451	1-8781	0945	REPAIR KIT; TOP O/H	000000	000000
1878109452	1-8781	0945	REPAIR KIT; TOP O/H	000000	000000
1878109453	1-8781	0945	REPAIR KIT; TOP O/H	000000	000002
1878109460	1-8781	0946	REPAIR KIT ENG. TOP O/H	000000	000000
1878109560	1-8781	0956	ENG OVERHAUL REPR KIT	000000	000000
1878109561	1-8781	0956	ENG OVERHAUL REPR KIT	000000	000000
1878109568	1-8781	0956	ENG OVERHAUL REPR KIT	000000	000000
1878109570	1-8781	0957	LINER SET	000000	000000
1878109580	1-8781	0958	LINER SET	000000	000000
1878109611	1-8781	0961	REPAIR KIT	000000	000000
1878109620	1-8781	0962	LINER SET, ENG CYL	000000	000000
1878109650	1-8781	0965	REPAIR KIT; ENGINE O/H	000000	000000
1878109710	1-8781	0971	REPAIR KIT; O/H	000000	000000
1878109720	1-8781	0972	AEOP PART	000000	000000
1878109721	1-8781	0972	REPAIR KIT ENG O/H	000000	000000
1878109722	1-8781	0972	REPAIR KIT ENG O/H	000000	000000
1878109750	1-8781	0975	REPAIR KIT; ENGINE O/H	000000	000000
1878109751	1-8781	0975	REPAIR KIT; ENGINE O/H	000000	000000
1878109760	1-8781	0976	FILTER;FUEL PAPER ELEMENT	000000	000006
1878109830	1-8781	0983	REPAIR KIT; ENGINE O/H	000000	000000
1878109840	1-8781	0984	REPAIR KIT; ENGINE O/H	000000	000000
1878109841	1-8781	0984	REPAIR KIT; ENGINE O/H	000000	000000
1878109843	1-8781	0984	REPAIR KIT; ENGINE O/H	000000	000000
1878109846	1-8781	0984	REPAIR KIT; ENGINE O/H	000000	000012
1878109920	1-8781	0992	LINER SET; ENG CYL	000000	000000
1878109940	1-8781	0994	REPAIR KIT; ENGINE O/H	000000	000000
1878109941	1-8781	0994	REPAIR KIT; ENGINE O/H	000000	000000
1878109950	1-8781	0995	REPAIR KIT; ENGINE O/H	000000	000000
1878109951	1-8781	0995	REPAIR KIT; ENGINE O/H	000000	000000
1878109953	1-8781	0995	REPAIR KIT; ENGINE O/H	000000	000000
1878109955	1-8781	0995	REPAIR KIT; ENGINE O/H	000000	000000
1878109960	1-8781	0996	REPAIR KIT; ENGINE O/H	000000	000000
1878109962	1-8781	0996	REPAIR KIT; ENGINE O/H	000000	000000
1878109965	1-8781	0996	REPAIR KIT; ENGINE O/H	000000	000001
1878110240	1-8781	1024	LINER SET	000000	000000
1878110251	1-8781	1025	REPAIR KIT; ENG O/H	000000	000000
1878110257	1-8781	1025	REPAIR KIT; ENG O/H	000000	000001
1878110270	1-8781	1027	REPAIR KIT; ENGINE O/H	000000	000000

1878110271	1-8781	1027	REPAIR KIT; ENGINE O/H	000000	000000
1878110278	1-8781	1027	REPAIR KIT; ENGINE O/H	000000	000002
1878110280	1-8781	1028	LINER SET; CYL.	000000	000000
1878110281	1-8781	1028	LINER SET; CYL.	000000	000000
1878110290	1-8781	1029	LINER SET; NON-TURBO	000000	000000
1878110300	1-8781	1030	REPAIR KIT; ENGINE O/H	000000	000000
1878110301	1-8781	1030	REPAIR KIT; ENGINE O/H	000000	000000
1878110303	1-8781	1030	REPAIR KIT; ENGINE O/H	000000	000000
1878110305	1-8781	1030	REPAIR KIT; ENGINE O/H	000000	000003
1878110310	1-8781	1031	REPAIR KIT; ENGINE O/H	000000	000000
1878110312	1-8781	1031	REPAIR KIT; ENGINE O/H	000000	000000
1878110313	1-8781	1031	REPAIR KIT; ENGINE O/H	000000	000000
1878110314	1-8781	1031	REPAIR KIT; ENGINE O/H	000000	000000
1878110315	1-8781	1031	REPAIR KIT; ENGINE O/H	000000	000000
1878110316	1-8781	1031	REPAIR KIT; ENGINE O/H	000000	000000
1878110317	1-8781	1031	REPAIR KIT; ENGINE O/H	000000	000003
1878110320	1-8781	1032	REPAIR KIT; ENGINE O/H	000000	000000
1878110330	1-8781	1033	REPAIR KIT; ENGINE O/H	000000	000000
1878110340	1-8781	1034	REPAIR KIT; ENGINE O/H	000000	000000
1878110350	1-8781	1035	REPAIR KIT; ENGINE O/H	000000	000000
1878110351	1-8781	1035	REPAIR KIT; ENGINE O/H	000000	000000
1878110353	1-8781	1035	REPAIR KIT; ENGINE O/H	000000	000000
1878110354	1-8781	1035	REPAIR KIT; ENGINE O/H	000000	000000
1878110360	1-8781	1036	REPAIR KIT; ENGINE O/H	000000	000000
1878110370	1-8781	1037	REPAIR KIT; ENGINE O/H	000000	000000
1878110390	1-8781	1039	GASKET SET; ENG.	000000	000000
1878110391	1-8781	1039	GASKET SET; ENG.	000000	000000
1878110392	1-8781	1039	GASKET SET; ENG.	000000	000000
1878110393	1-8781	1039	GASKET SET; ENG.	000000	000000
1878110394	1-8781	1039	GASKET SET; ENG.	000000	000003
1878110400	1-8781	1040	GASKET SET; ENG.	000000	000000
1878110410	1-8781	1041	GASKET SET; ENG.	000000	000000
1878110420	1-8781	1042	ELEMENT KIT: FUEL	000000	000000
1878110460	1-8781	1046	LINER SET;W/W-PIN BUSHING	000000	000000
1878110520	1-8781	1052	REPAIR KIT; ENGINE O/H	000000	000000
1878110522	1-8781	1052	REPAIR KIT; ENGINE O/H	000000	000000
1878110524	1-8781	1052	REPAIR KIT; ENGINE O/H	000000	000000
1878110530	1-8781	1053	REPAIR KIT; ENGINE O/H	000000	000000
1878110531	1-8781	1053	REPAIR KIT; ENGINE O/H	000000	000000
1878110532	1-8781	1053	REPAIR KIT; ENGINE O/H	000000	000000
1878110533	1-8781	1053	REPAIR KIT; ENGINE O/H	000000	000000
1878110534	1-8781	1053	REPAIR KIT; ENGINE O/H	000000	000000
1878110535	1-8781	1053	REPAIR KIT; ENGINE O/H	000000	000001
1878110540	1-8781	1054	REPAIR KIT; ENGINE O/H	000000	000000
1878110780			GASKET SET;ENG	000000	000000
1878110783			GASKET SET;ENG	000000	000000
1878110962			REPAIR KIT; WATER PUMP 6S	000000	000014

1878111060	1-8781	1106	REPAIR KIT; ENGINE O/H	000000	000000
1878111061	1-8781	1106	REPAIR KIT; ENGINE O/H	000000	000000
1878111200	1-8781	1120	REPAIR KIT; ENG O/H	000000	000000
1878111203	1-8781	1120	REPAIR KIT; ENG O/H	000000	000000
1878111204	1-8781	1120	REPAIR KIT; ENG O/H	000000	000000
1878111205	1-8781	1120	REPAIR KIT; ENG O/H	000000	000003
1878111430	1-8781	1143	LINER SET	000000	000000
1878111620	1-8781	1162	REPAIR KIT; O/H	000000	000000
1878111621	1-8781	1162	REPAIR KIT; O/H	000000	000001
1878111880	1-8781	1188	REPAIR KIT;WTR PUMP	000000	000000
1878111890	1-8781	1189	REPAIR KIT; WATER PUMP	000000	000000
1878111920	1-8781	1192	REPAIR KIT ENG'N O/H	000000	000000
1878111921	1-8781	1192	REPAIR KIT ENG'N O/H	000000	000000
1878111922	1-8781	1192	REPAIR KIT ENG'N O/H	000000	000000
1878111930	1-8781	1193	REPAIR KIT ENG'N O/H	000000	000000
1878111931	1-8781	1193	REPAIR KIT ENG'N O/H	000000	000000
1878111940	1-8781	1194	LINER SET	000000	000000
1878111941	1-8781	1194	LINER SET	000000	000000
1878111950	1-8781	1195	REPAIR KIT; WATER PUMP	000000	000003
1878111960	1-8781	1196	REPAIR KIT; WATER PUMP	000000	000000
1878111970	1-8781	1197	REPAIR KIT; WATER PUMP	000000	000000
1878112030	1-8781	1203	GASKET SET; ENG	000000	000000
1878112031	1-8781	1203	GASKET SET; ENG	000000	000004
1878112032			GASKET SET; ENG	000000	000001
1878112160	1-8781	1216	GASKET SET; ENG.	000000	000000
1878112161			GASKET SET; ENG.	000000	000008
1878112170	1-8781	1217	GASKET SET; ENG.	000000	000000
1878112171	1-8781	1217	GASKET SET; ENG.	000000	000004
1878112190	1-8781	1219	REPAIR KIT; ENGINE O/H	000000	000000
1878112192	1-8781	1219	REPAIR KIT; ENGINE O/H	000000	000000
1878112200	1-8781	1220	REPAIR KIT; ENGINE O/H	000000	000000
1878112210	1-8781	1221	REPAIR KIT; ENGINE O/H	000000	000000
1878112220	1-8781	1222	REPAIR KIT; ENGINE O/H	000000	000000
1878112221	1-8781	1222	REPAIR KIT; ENGINE O/H	000000	000000
1878112222	1-8781	1222	REPAIR KIT; ENGINE O/H	000000	000000
1878112223	1-8781	1222	REPAIR KIT; ENGINE O/H	000000	000000
1878112224	1-8781	1222	REPAIR KIT; ENGINE O/H	000000	000001
1878112230	1-8781	1223	REPAIR KIT; ENGINE O/H	000000	000000
1878112231	1-8781	1223	REPAIR KIT; ENGINE O/H	000000	000000
1878112232	1-8781	1223	REPAIR KIT; ENGINE O/H	000000	000000
1878112233	1-8781	1223	REPAIR KIT; ENGINE O/H	000000	000000
1878112234	1-8781	1223	REPAIR KIT; ENGINE O/H	000000	000000
1878112235	1-8781	1223	REPAIR KIT; ENGINE O/H	000000	000035
1878112240	1-8781	1224	REPAIR KIT; ENGINE O/H	000000	000000
1878112241	1-8781	1224	REPAIR KIT; ENGINE O/H	000000	000000
1878112242	1-8781	1224	REPAIR KIT; ENGINE O/H	000000	000000
1878112243	1-8781	1224	REPAIR KIT; ENGINE O/H	000000	000000

1878112244	1-8781	1224	REPAIR KIT; ENGINE O/H	000000	000000
1878112245	1-8781	1224	REPAIR KIT; ENGINE O/H	000000	000002
1878112280	1-8781	1228	REPAIR KIT; W/PU	000000	000000
1878112300	1-8781	1230	REPAIR KIT; WATER PUMP	000000	000000
1878112330	1-8781	1233	REPAIR KIT; ENG O/H	000000	000000
1878112332	1-8781	1233	REPAIR KIT; ENG O/H	000000	000000
1878112333	1-8781	1233	REPAIR KIT; ENG O/H	000000	000000
1878112334	1-8781	1233	REPAIR KIT; ENG O/H	000000	000002
1878112337	1-8781	1233	REPAIR KIT; ENG O/H	000000	000000
1878112343	1-8781	1234	REPAIR KIT; ENG O/H	000000	000000
1878112347	1-8781	1234	REPAIR KIT; ENG O/H	000000	000001
1878112350	1-8781	1235	REP.KIT ENG OVHL-6RB1	000000	000000
1878112351	1-8781	1235	REP.KIT ENG OVHL-6RB1	000000	000000
1878112352	1-8781	1235	REP.KIT ENG OVHL-6RB1	000000	000000
1878112353	1-8781	1235	REP.KIT ENG OVHL-6RB1	000000	000000
1878112354	1-8781	1235	REP.KIT ENG OVHL-6RB1	000000	000000
1878112360	1-8781	1236	REP.KIT ENG.TOP OVHL-6RB1	000000	000000
1878112361	1-8781	1236	REP.KIT ENG.TOP OVHL-6RB1	000000	000000
1878112362	1-8781	1236	REP.KIT ENG.TOP OVHL-6RB1	000000	000000
1878112370	1-8781	1237	LINER SET (W/ TURBO)	000000	000000
1878112420	1-8781	1242	REPAIR KIT; TOP O/H	000000	000000
1878112421	1-8781	1242	REPAIR KIT; TOP O/H	000000	000000
1878112422	1-8781	1242	REPAIR KIT; TOP O/H	000000	000000
1878112423	1-8781	1242	REPAIR KIT; TOP O/H	000000	000015
1878112430	1-8781	1243	LINER KIT	000000	000000
1878112441	1-8781	1244	REPAIR KIT; WATER	000000	000000
1878112443	1-8781	1244	REPAIR KIT; WATER	000000	000001
1878112500	1-8781	1250	REPAIR KIT; WATER PUMP	000000	000001
1878112520	1-8781	1252	REPAIR KIT; WATER PUMP	000000	000002
1878112530	1-8781	1253	REPAIR KIT; W/P	000000	000000
1878112640	1-8781	1264	REPAIR KIT, O/H	000000	000000
1878112690	1-8781	1269	REPAIR KIT; ENG. O/H	000000	000000
1878112691	1-8781	1269	REPAIR KIT; ENG. O/H	000000	000000
1878112693	1-8781	1269	REPAIR KIT; ENG. O/H	000000	000000
1878112700	1-8781	1270	REPAIR KIT; ENG. O/H	000000	000000
1878112720	1-8781	1272	REPAIR KIT; ENG. O/H	000000	000000
1878112721	1-8781	1272	REPAIR KIT; ENG. O/H	000000	000000
1878112730	1-8781	1273	REPAIR KIT; ENG. O/H	000000	000000
1878112750	1-8781	1275	REPAIR KIT; ENG. TOP O/H	000000	000000
1878112760	1-8781	1276	REPAIR KIT; ENG. TOP O/H	000000	000000
1878112770	1-8781	1277	REPAIR KIT; ENG. O/H	000000	000000
1878112780	1-8781	1278	REPAIR KIT; ENG. O/H	000000	000000
1878112781	1-8781	1278	REPAIR KIT; ENG. O/H	000000	000000
1878112783	1-8781	1278	REPAIR KIT; ENG. O/H	000000	000001
1878112790	1-8781	1279	REPAIR KIT; ENG. O/H	000000	000003
1878112801	1-8781	1280	REPAIR KIT; ENG. O/H	000000	000000
1878112810	1-8781	1281	REPAIR KIT; ENG. O/H	000000	000000

1878112820	1-8781	1282	REPAIR KIT; ENG. O/H	000000	000000
1878112823	1-8781	1282	REPAIR KIT; ENG. O/H	000000	000000
1878112824	1-8781	1282	REPAIR KIT; ENG. O/H	000000	000003
1878112830	1-8781	1283	REPAIR KIT; ENG. O/H	000000	000000
1878112832	1-8781	1283	REPAIR KIT; ENG. O/H	000000	000000
1878112840	1-8781	1284	REPAIR KIT; ENG. O/H	000000	000000
1878112842	1-8781	1284	REPAIR KIT; ENG. O/H	000000	000000
1878112843	1-8781	1284	REPAIR KIT; ENG. O/H	000000	000000
1878112844	1-8781	1284	REPAIR KIT; ENG. O/H	000000	000002
1878112850	1-8781	1285	REPAIR KIT; ENG. O/H	000000	000000
1878112851	1-8781	1285	REPAIR KIT; ENG. O/H	000000	000000
1878112852	1-8781	1285	REPAIR KIT; ENG. O/H	000000	000000
1878112853	1-8781	1285	REPAIR KIT; ENG. O/H	000000	000000
1878112855	1-8781	1285	REPAIR KIT; ENG. O/H	000000	000000
1878112856	1-8781	1285	REPAIR KIT; ENG. O/H	000000	000005
1878112860	1-8781	1286	REPAIR KIT; ENG. O/H	000000	000000
1878112870	1-8781	1287	REPAIR KIT; ENG. O/H	000000	000000
1878112880	1-8781	1288	REPAIR KIT; ENG. O/H	000000	000002
1878112882	1-8781	1288	REPAIR KIT; ENG. O/H	000000	000000
1878113020	1-8781	1302	LINER KIT; ENG CYL GRD#3	000000	000000
1878113150	1-8781	1315	REPAIR KIT; WATER PUMP	000000	000000
1878113151	1-8781	1315	REPAIR KIT; WATER PUMP	000000	000000
1878113152	1-8781	1315	REPAIR KIT; WATER PUMP	000000	000001
1878113170	1-8781	1317	ELEMENT KIT; OIL, PART	000000	000000
1878113250	1-8781	1325	REPAIR KIT; ENG. O/H	000000	000000
1878113251	1-8781	1325	REPAIR KIT; ENG. O/H	000000	000000
1878113252	1-8781	1325	REPAIR KIT; ENG. O/H	000000	000000
1878113253	1-8781	1325	REPAIR KIT; ENG. O/H	000000	000000
1878113254	1-8781	1325	REPAIR KIT; ENG. O/H	000000	000000
1878113260	1-8781	1326	REPAIR KIT; ENG. O/H	000000	000000
1878113270	1-8781	1327	REPAIR KIT; ENG. O/H	000000	000000
1878113272	1-8781	1327	REPAIR KIT; ENG. O/H	000000	000000
1878113273	1-8781	1327	REPAIR KIT; ENG. O/H	000000	000000
1878113274	1-8781	1327	REPAIR KIT; ENG. O/H	000000	000000
1878113280	1-8781	1328	REPAIR KIT; ENG. O/H	000000	000000
1878113290	1-8781	1329	REPAIR KIT; ENG. O/H	000000	000000
1878113300	1-8781	1330	REPAIR KIT; ENG. O/H	000000	000000
1878113310	1-8781	1331	REPAIR KIT; ENG. O/H	000000	000000
1878113312	1-8781	1331	REPAIR KIT; ENG. O/H	000000	000000
1878113313	1-8781	1331	REPAIR KIT; ENG. O/H	000000	000002
1878113320	1-8781	1332	REPAIR KIT; ENG. O/H	000000	000000
1878113330	1-8781	1333	REPAIR KIT; ENG. O/H	000000	000000
1878113340	1-8781	1334	REPAIR KIT; ENG. O/H	000000	000000
1878113341	1-8781	1334	REPAIR KIT; ENG. O/H	000000	000000
1878113342	1-8781	1334	REPAIR KIT; ENG. O/H	000000	000002
1878113350	1-8781	1335	REPAIR KIT; ENG. O/H	000000	000000
1878113520	1-8781	1352	LINER KIT	000000	000000

1878113530	1-8781	1353	LINER KIT	000010	000000
1878113540	1-8781	1354	LINER KIT	000029	000000
1878113550	1-8781	1355	LINER KIT	000000	000000
1878113560	1-8781	1356	LINER KIT	000000	000000
1878113570	1-8781	1357	LINER KIT	000000	000003
1878113571	1-8781	1357	LINER KIT	000000	000002
1878113580	1-8781	1358	LINER KIT	000000	000000
1878113581	1-8781	1358	LINER KIT	000000	000006
1878113590	1-8781	1359	LINER KIT	000000	000000
1878113600	1-8781	1360	LINER KIT	000000	000006
1878113610	1-8781	1361	LINER KIT	000000	000000
1878113620	1-8781	1362	LINER KIT	000000	000000
1878113630	1-8781	1363	LINER KIT	000000	000000
1878113640	1-8781	1364	LINER KIT	000000	000000
1878113670	1-8781	1367	LINER KIT	000000	000003
1878113680	1-8781	1368	LINER KIT	000000	000003
1878113720	1-8781	1372	LINER KIT	000000	000047
1878113730	1-8781	1373	LINER KIT	000000	000000
1878113740	1-8781	1374	LINER KIT	000000	000000
1878113750	1-8781	1375	LINER KIT	000000	000000
1878113760	1-8781	1376	LINER KIT	000000	000000
1878113770	1-8781	1377	LINER KIT	000000	000000
1878113780	1-8781	1378	LINER KIT	000000	000000
1878113790	1-8781	1379	LINER KIT	000000	000000
1878113800	1-8781	1380	LINER KIT	000000	000000
1878113810	1-8781	1381	LINER KIT	000000	000000
1878113820	1-8781	1382	LINER KIT	000000	000000
1878113830	1-8781	1383	LINER KIT	000000	000000
1878113940	1-8781	1394	LINER KIT	000000	000000
1878113950	1-8781	1395	LINER KIT	000000	000000
1878114010	1-8781	1401	LINER KIT	000000	000000
1878114020	1-8781	1402	LINER KIT	000000	000000
1878114030	1-8781	1403	LINER KIT	000000	000000
1878114040	1-8781	1404	LINER KIT	000000	000000
1878114060	1-8781	1406	LINER KIT	000000	000000
1878114070	1-8781	1407	LINER KIT	000000	000002
1878114080	1-8781	1408	LINER KIT	000000	000084
1878114090	1-8781	1409	LINER KIT	000050	000240
1878114100	1-8781	1410	LINER KIT	000000	000008
1878114150	1-8781	1415	LINER KIT	000000	000000
1878114160	1-8781	1416	LINER KIT	000000	000010
1878114180	1-8781	1418	LINER SET;W/W-PIN BUSHING	000000	000000
1878114190	1-8781	1419	LINER SET;W/W-PIN BUSHING	000000	000000
1878114200	1-8781	1420	LINER SET;W/W-PIN BUSHING	000000	000000
1878114210	1-8781	1421	LINER SET;W/W-PIN BUSHING	000000	000000
1878114270	1-8781	1427	LINER KIT	000000	000000
1878114272	1-8781	1427	LINER KIT	000000	000000

1878114273	1-8781	1427	LINER KIT	000000	000000
1878114300	1-8781	1430	LINER KIT	000000	000005
1878114500	1-8781	1450	LINER KIT	000000	000000
1878114620	1-8781	1462	LINER KIT	000000	000000
1878114670	1-8781	1467	LINER KIT	000000	000000
1878114720	1-8781	1472	LINER KIT	000003	000000
1878114730	1-8781	1473	LINER KIT	000000	000023
1878114740	1-8781	1474	LINER KIT	000000	000016
1878114750	1-8781	1475	LINER KIT	000000	000000
1878114760	1-8781	1476	LINER KIT	000000	000000
1878114780	1-8781	1478	LINER KIT	000000	000000
1878114781	1-8781	1478	LINER KIT	000000	000001
1878114790	1-8781	1479	LINER KIT	000000	000000
1878114810	1-8781	1481	LINER KIT	000000	000000
1878114820	1-8781	1482	LINER KIT	000000	000000
1878114830	1-8781	1483	LINER KIT	000000	000000
1878114840	1-8781	1484	LINER KIT	000000	000000
1878114850	1-8781	1485	LINER KIT	000000	000000
1878114860	1-8781	1486	LINER KIT	000000	000000
1878114890	1-8781	1489	LINER KIT	000000	000001
1878114900	1-8781	1490	LINER KIT	000000	000003
1878114910	1-8781	1491	LINER KIT	000001	000000
1878114920	1-8781	1492	LINER KIT	000000	000004
1878114950	1-8781	1495	LINER KIT	000000	000000
1878114960	1-8781	1496	LINER KIT	000000	000003
1878114970	1-8781	1497	LINER KIT	000000	000000
1878114980	1-8781	1498	LINER KIT	000000	000000
1878114990	1-8781	1499	LINER KIT	000000	000000
1878115000	1-8781	1500	LINER KIT	000000	000000
1878115010	1-8781	1501	LINER KIT	000001	000001
1878115020	1-8781	1502	LINER KIT	000000	000000
1878115030	1-8781	1503	LINER KIT	000000	000000
1878115040	1-8781	1504	LINER KIT	000000	000000
1878115050	1-8781	1505	LINER KIT	000000	000000
1878115060	1-8781	1506	LINER KIT	000000	000000
1878115070	1-8781	1507	LINER KIT	000000	000000
1878115080	1-8781	1508	LINER KIT	000000	000000
1878115090	1-8781	1509	LINER KIT	000002	000000
1878115100	1-8781	1510	LINER KIT	000000	000000
1878115110	1-8781	1511	LINER KIT	000000	000000
1878115120	1-8781	1512	LINER KIT	000000	000000
1878115130	1-8781	1513	LINER KIT	000000	000000
1878115140	1-8781	1514	LINER KIT	000000	000000
1878115150	1-8781	1515	LINER KIT	000000	000000
1878115160	1-8781	1516	LINER KIT	000000	000000
1878115170	1-8781	1517	LINER KIT	000001	000001
1878115180	1-8781	1518	LINER KIT	000000	000000

1878115190	1-8781	1519	LINER KIT	000001	000001
1878115200	1-8781	1520	LINER KIT	000000	000000
1878115210	1-8781	1521	LINER KIT	000000	000000
1878115220	1-8781	1522	LINER KIT	000000	000000
1878115230	1-8781	1523	LINER KIT	000000	000000
1878115240	1-8781	1524	LINER KIT	000000	000002
1878115250	1-8781	1525	LINER KIT	000000	000000
1878115260	1-8781	1526	LINER KIT	000000	000003
1878115270	1-8781	1527	LINER KIT	000001	000000
1878115280	1-8781	1528	LINER KIT	000000	000013
1878115290	1-8781	1529	LINER KIT	000000	000000
1878115300	1-8781	1530	LINER KIT	000000	000000
1878115310	1-8781	1531	LINER KIT	000000	000000
1878115320	1-8781	1532	LINER KIT	000000	000000
1878115330	1-8781	1533	LINER KIT	000000	000000
1878115331	1-8781	1533	LINER KIT	000000	000000
1878115340	1-8781	1534	LINER KIT	000000	000000
1878115350	1-8781	1535	LINER KIT	000000	000000
1878115360	1-8781	1536	LINER KIT	000000	000000
1878115370	1-8781	1537	LINER KIT	000000	000007
1878115380	1-8781	1538	LINER KIT	000000	000021
1878115390	1-8781	1539	LINER KIT	000000	000013
1878115400	1-8781	1540	LINER KIT	000000	000009
1878115410	1-8781	1541	LINER KIT	000000	000009
1878115420	1-8781	1542	LINER KIT	000000	000003
1878115430	1-8781	1543	LINER KIT	000001	000029
1878115440	1-8781	1544	LINER KIT	000000	000007
1878115450	1-8781	1545	LINER KIT	000002	000000
1878115460	1-8781	1546	LINER KIT	000000	000000
1878115470	1-8781	1547	LINER KIT	000000	000000
1878115480	1-8781	1548	LINER KIT	000000	000000
1878115490	1-8781	1549	LINER KIT	000000	000000
1878115500	1-8781	1550	LINER KIT	000000	000000
1878115510	1-8781	1551	LINER KIT	000000	000000
1878115520	1-8781	1552	LINER KIT	000001	000000
1878115530	1-8781	1553	LINER KIT	000000	000000
1878115531	1-8781	1553	LINER KIT	000000	000000
1878115540	1-8781	1554	LINER KIT	000000	000000
1878115541	1-8781	1554	LINER KIT	000000	000000
1878115550	1-8781	1555	LINER KIT	000000	000000
1878115551	1-8781	1555	LINER KIT	000000	000000
1878115560	1-8781	1556	LINER KIT	000002	000000
1878115570	1-8781	1557	LINER KIT	000000	000000
1878115580	1-8781	1558	LINER KIT	000000	000000
1878115590	1-8781	1559	LINER KIT	000000	000000
1878115600	1-8781	1560	LINER KIT	000000	000000
1878115610	1-8781	1561	LINER KIT	000000	000000

1878115620	1-8781	1562	LINER KIT	000000	000000
1878115630	1-8781	1563	LINER KIT	000000	000000
1878115640	1-8781	1564	LINER KIT	000000	000000
1878115650	1-8781	1565	LINER KIT	000000	000000
1878115660	1-8781	1566	LINER KIT	000000	000000
1878115670	1-8781	1567	LINER KIT	000000	000000
1878115680	1-8781	1568	LINER KIT	000000	000000
1878115730	1-8781	1573	LINER KIT	000000	000000
1878115740	1-8781	1574	LINER KIT	000000	000000
1878115750	1-8781	1575	LINER KIT	000000	000000
1878115760	1-8781	1576	LINER KIT	000000	000000
1878115770	1-8781	1577	LINER KIT	000000	000000
1878115830	1-8781	1583	LINER KIT	000000	000003
1878115860	1-8781	1586	LINER KIT	000000	000000
1878115870	1-8781	1587	LINER KIT	000000	000000
1878115900	1-8781	1590	LINER KIT	000000	000000
1878115910	1-8781	1591	LINER KIT	000000	000000
1878115920	1-8781	1592	LINER KIT	000000	000000
1878115930	1-8781	1593	LINER KIT	000000	000000
1878115940	1-8781	1594	LINER KIT	000000	000000
1878115950	1-8781	1595	LINER KIT	000000	000000
1878115960	1-8781	1596	LINER KIT	000000	000006
1878115970	1-8781	1597	LINER KIT	000000	000000
1878115980	1-8781	1598	LINER KIT	000000	000000
1878115990	1-8781	1599	LINER KIT	000000	000007
1878116000	1-8781	1600	LINER KIT	000000	000000
1878116010	1-8781	1601	LINER KIT	000000	000000
1878116020	1-8781	1602	LINER KIT	000000	000000
1878116030	1-8781	1603	LINER KIT	000000	000000
1878116040	1-8781	1604	LINER KIT	000000	000000
1878116041	1-8781	1604	LINER KIT	000000	000000
1878116044	1-8781	1604	LINER KIT	000000	000001
1878116050	1-8781	1605	LINER KIT	000000	000000
1878116051	1-8781	1605	LINER KIT	000000	000061
1878116060	1-8781	1606	LINER KIT	000000	000000
1878116061	1-8781	1606	LINER KIT	000000	000000
1878116070	1-8781	1607	LINER KIT	000000	000000
1878116071	1-8781	1607	LINER KIT	000000	000000
1878116072	1-8781	1607	LINER KIT	000000	000000
1878116080	1-8781	1608	LINER KIT	000000	000000
1878116110	1-8781	1611	LINER KIT	000000	000000
1878116111	1-8781	1611	LINER KIT	000000	000004
1878116211			GASKET SET;ENG OVERHAUL	000000	000000
1878116280	1-8781	1628	REPAIR KIT; ENG. O/H	000000	000000
1878116283	1-8781	1628	REPAIR KIT; ENG. O/H	000000	000000
1878116284	1-8781	1628	REPAIR KIT; ENG. O/H	000000	000000
1878116285	1-8781	1628	REPAIR KIT; ENG. O/H	000000	000001

1878116290	1-8781	1629	REPAIR KIT; ENG. O/H TURB	000000	000000
1878116291	1-8781	1629	REPAIR KIT; ENG. O/H TURB	000000	000000
1878116292	1-8781	1629	REPAIR KIT; ENG. O/H TURB	000000	000000
1878116293	1-8781	1629	REPAIR KIT; ENG. O/H TURB	000000	000000
1878116294	1-8781	1629	REPAIR KIT; ENG. O/H TURB	000000	000004
1878116440	1-8781	1644	LINER KIT	000000	000004
1878116450	1-8781	1645	LINER KIT	000001	000003
1878116470	1-8781	1647	LINER KIT	000000	000010
1878116480	1-8781	1648	LINER KIT	000000	000010
1878116490	1-8781	1649	LINER KIT	000000	000057
1878116500	1-8781	1650	LINER KIT	000000	000000
1878116510	1-8781	1651	LINER KIT	000000	000000
1878116520	1-8781	1652	LINER KIT	000000	000000
1878116570	1-8781	1657	LINER KIT	000000	000007
1878116580	1-8781	1658	LINER KIT	000000	000005
1878116590	1-8781	1659	LINER KIT	000001	000000
1878116620	1-8781	1662	LINER KIT	000000	000000
1878116630	1-8781	1663	LINER KIT/SET; ENG CYL	000000	000000
1878116631	1-8781	1663	LINER KIT/SET; ENG CYL	000000	000000
1878116632			LINER KIT/SET; ENG CYL	000000	000000
1878116633			LINER KIT/SET; ENG CYL	000000	000012
1878116640	1-8781	1664	LINER KIT	000000	000000
1878116641	1-8781	1664	LINER KIT	000000	000000
1878116642	1-8781	1664	LINER KIT	000000	000000
1878116643	1-8781	1664	LINER KIT	000000	000042
1878116650			LINER KIT	000000	000000
1878116654			LINER SET;ENG	000000	000000
1878116730	1-8781	1673	LINER SET(6SD1)	000000	000000
1878116740	1-8781	1674	LINER KIT	000000	000001
1878116750	1-8781	1675	LINER KIT	000000	000000
1878116770	1-8781	1677	LINER KIT	000000	000010
1878116780	1-8781	1678	LINER KIT	000000	000000
1878116790	1-8781	1679	LINER KIT	000000	000000
1878116800	1-8781	1680	LINER KIT	000000	000000
1878116810	1-8781	1681	LINER KIT	000000	000000
1878116820	1-8781	1682	LINER KIT	000000	000000
1878116830	1-8781	1683	LINER KIT	000000	000000
1878116840	1-8781	1684	LINER KIT	000000	000000
1878116850	1-8781	1685	LINER KIT	000000	000000
1878116860	1-8781	1686	LINER KIT	000000	000000
1878116870	1-8781	1687	LINER KIT	000000	000009
1878116880	1-8781	1688	LINER KIT	000000	000029
1878116890	1-8781	1689	LINER KIT	000000	000034
1878116900	1-8781	1690	LINER KIT	000000	000000
1878116910	1-8781	1691	LINER KIT	000000	000000
1878116920	1-8781	1692	LINER KIT	000000	000000
1878116930	1-8781	1693	LINER KIT	000000	000000

1878116940	1-8781	1694	LINER KIT	000000	000000
1878116950	1-8781	1695	LINER KIT	000000	000001
1878116960	1-8781	1696	LINER KIT	000000	000000
1878116961	1-8781	1696	LINER KIT	000000	000000
1878116970	1-8781	1697	LINER KIT	000000	000000
1878116980	1-8781	1698	LINER KIT	000000	000003
1878116990	1-8781	1699	LINER KIT	000000	000000
1878117310	1-8781	1731	REPAIR KIT; ENG. O/H	000000	000000
1878117330	1-8781	1733	REPAIR KIT; ENG. O/H	000000	000000
1878117470	1-8781	1747	REPAIR KIT; ENG. O/H	000000	000000
1878117474	1-8781	1747	REPAIR KIT; ENG. O/H	000000	000001
1878117510			REPAIR KIT; ENG. O/H	000000	000000
1878117511			REPAIR KIT; ENG. O/H	000000	000002
1878117530	1-8781	1753	REPAIR KIT; ENG. O/H	000000	000000
1878117540	1-8781	1754	REPAIR KIT; ENG. O/H	000000	000000
1878117580	1-8781	1758	REPAIR KIT; ENG. O/H	000000	000000
1878117950	1-8781	1795	LINER SET; GRADE 1	000000	000000
1878117960	1-8781	1796	LINER SET; GRADE 2	000000	000000
1878117970	1-8781	1797	LINER SET; GRADE 3	000000	000000
1878117980	1-8781	1798	LINER SET; GRADE 4	000000	000000
1878118161	1-8781	1816	LINER SET; GRADE 1X	000000	000000
1878118171	1-8781	1817	LINER SET; GRADE 3X	000000	000000
1878118290			LINER SET;CYL QTY 6	000000	000014
1878118430	1-8781	1843	REPAIR KIT; WATER PUMP	000000	000004
1878118640	1-8781	1864	LINER SET; GRADE 1	000000	000000
1878118650	1-8781	1865	LINER SET; GRADE 2	000000	000000
1878118660	1-8781	1866	LINER SET; GRADE 3	000000	000000
1878118670	1-8781	1867	LINER SET; GRADE 4	000000	000000
1878118760	1-8781	1876	REPAIR KIT; WATER PUMP	000002	000000
1878118802			GASKET SET; ENG	000000	000000
1878118840	1-8781	1884	REPAIR KIT;WATER PUMP	000000	000000
1878118841	1-8781	1884	REPAIR KIT;WATER PUMP	000001	000001
1878118970	1-8781	1897	REPAIR KIT;WATER PUMP	000000	000002
1878118990	1-8781	1899	LINER KIT	000000	000000
1878119000	1-8781	1900	LINER KIT	000000	000000
1878119010	1-8781	1901	LINER KIT	000000	000000
1878119020	1-8781	1902	LINER SET;ENGINE CYLINDER	000000	000000
1878119030	1-8781	1903	LINER SET;ENGINE CYLINDER	000000	000000
1878119040	1-8781	1904	LINER SET;ENGINE CYLINDER	000000	000000
1878119050	1-8781	1905	LINER SET;ENGINE CYLINDER	000000	000000
1878119060	1-8781	1906	LINER SET;ENGINE CYLINDER	000000	000000
1878119070	1-8781	1907	REPAIR KIT	000000	000000
1878119071	1-8781	1907	REPAIR KIT	000000	000000
1878119072	1-8781	1907	REPAIR KIT	000000	000000
1878119073	1-8781	1907	REPAIR KIT	000000	000000
1878119074	1-8781	1907	REPAIR KIT	000000	000000
1878119090	1-8781	1909	REPAIR KIT;WATER PUMP	000000	000000

1878119320	1-8781	1932	LINER SET;W/W-PIN BUSHING	000000	000047
1878119330	1-8781	1933	LINER SET;W/W-PIN BUSHING	000000	000000
1878119331	1-8781	1933	LINER SET;W/W-PIN BUSHING	000000	000000
1878119332	1-8781	1933	LINER SET;W/W-PIN BUSHING	000000	000000
1878119340	1-8781	1934	LINER SET;W/W-PIN BUSHING	000000	000000
1878119341	1-8781	1934	LINER SET;W/W-PIN BUSHING	000000	000000
1878119342	1-8781	1934	LINER SET;W/W-PIN BUSHING	000000	000000
1878119350	1-8781	1935	LINER SET;W/W-PIN BUSHING	000000	000000
1878119351	1-8781	1935	LINER SET;W/W-PIN BUSHING	000000	000000
1878119352	1-8781	1935	LINER SET;W/W-PIN BUSHING	000000	000000
1878119380	1-8781	1938	LINER SET;ENG CYL	000002	000000
1878119390	1-8781	1939	LINER SET;ENG CYL	000002	000000
1878119400	1-8781	1940	LINER SET;ENG CYL	000002	000000
1878119410	1-8781	1941	LINER SET;ENG CYL	000000	000002
1878119420	1-8781	1942	LINER KIT	000000	000000
1878119430	1-8781	1943	LINER KIT	000000	000000
1878119440	1-8781	1944	LINER KIT	000000	000000
1878119450	1-8781	1945	LINER SET;ENG CYL	000000	000000
1878119460	1-8781	1946	LINER SET;ENG CYL	000000	000000
1878119470	1-8781	1947	LINER KIT	000000	000000
1878119480	1-8781	1948	LINER SET;ENG	000000	000000
1878119490	1-8781	1949	LINER SET;ENG CYL	000000	000000
1878119500	1-8781	1950	LINER SET;ENG CYL	000000	000000
1878119510	1-8781	1951	LINER SET;ENG CYL	000000	000000
1878119520	1-8781	1952	LINER SET;ENG CYL	000000	000000
1878119530	1-8781	1953	LINER SET;ENG CYL	000000	000000
1878119540	1-8781	1954	LINER SET;ENG CYL	000000	000000
1878119541	1-8781	1954	LINER SET;ENG CYL	000000	000000
1878119550	1-8781	1955	LINER SET;ENG CYL	000000	000000
1878119551	1-8781	1955	LINER SET;ENG CYL	000000	000000
1878119560	1-8781	1956	LINER SET;ENG CYL	000000	000000
1878119570	1-8781	1957	LINER SET;ENG CYL	000000	000000
1878119580	1-8781	1958	LINER SET;ENG CYL	000000	000000
1878119581	1-8781	1958	LINER SET;ENG CYL	000000	000000
1878119590	1-8781	1959	LINER KIT	000000	000000
1878119600	1-8781	1960	LINER SET;ENG CYL	000000	000000
1878119601	1-8781	1960	LINER SET;ENG CYL	000000	000000
1878119610	1-8781	1961	LINER SET;ENG CYL	000000	000000
1878119611	1-8781	1961	LINER SET;ENG CYL	000000	000000
1878119620	1-8781	1962	LINER SET;ENG CYL	000000	000000
1878119630	1-8781	1963	LINER SET;ENG CYL	000000	000000
1878119640	1-8781	1964	LINER SET;ENG CYL	000000	000000
1878119641	1-8781	1964	LINER SET;ENG CYL	000000	000000
1878119650	1-8781	1965	LINER SET;ENG CYL	000000	000000
1878119743	1-8781	1974	GASKET SET; ENGINE	000000	000001
1878119803	1-8781	1980	GASKET SET; HEAD	000000	000001
1878119840	1-8781	1984	LINER KIT	000000	000000

1878119841	1-8781	1984	LINER KIT	000000	000000
1878119850	1-8781	1985	LINER KIT	000000	000000
1878119851	1-8781	1985	LINER KIT	000000	000000
1878119860	1-8781	1986	LINER KIT	000000	000000
1878119861	1-8781	1986	LINER KIT	000000	000000
1878119870	1-8781	1987	LINER KIT	000000	000000
1878120401	1-8781	2040	REPAIR KIT; WATER PUMP	000000	000002
1878120471	1-8781	2047	GASKET SET;ENG OVERHAUL	000000	000000
1878120491	1-8781	2049	GASKET SET;ENG HD OVERHAU	000000	000000
1878120500	1-8781	2050	LINER SET;ENG CYL	000000	000000
1878120510	1-8781	2051	LINER SET;ENG CYL	000000	000000
1878120520	1-8781	2052	LINER SET;ENG CYL	000000	000000
1878120530	1-8781	2053	LINER SET;ENG CYL	000000	000000
1878120681	1-8781	2068	GASKET SET;ENG OVERHAUL	000000	000000
1878120701	1-8781	2070	GASKET SET;ENG HD OVERHAU	000000	000000
1878120702	1-8781	2070	GASKET SET;ENG HD OVERHAU	000000	000014
1878120710	1-8781	2071	LINER SET;ENG CYL	000000	000000
1878120711	1-8781	2071	LINER SET;ENG CYL	000000	000000
1878120712	1-8781	2071	LINER SET;ENG CYL	000000	000000
1878120720	1-8781	2072	LINER SET;ENG CYL	000000	000000
1878120721	1-8781	2072	LINER SET;ENG CYL	000000	000000
1878120722	1-8781	2072	LINER SET;ENG CYL	000000	000000
1878120730	1-8781	2073	GASKET SET; ENG OVERHAUL	000000	000000
1878120731	1-8781	2073	GASKET SET; ENG OVERHAUL	000000	000001
1878120740	1-8781	2074	GASKET SET; ENG HD OVERHA	000000	000000
1878120750	1-8781	2075	REPAIR KIT; WATER PUMP	000000	000000
1878120751	1-8781	2075	REPAIR KIT; WATER PUMP	000000	000010
1878120752	1-8781	2075	REPAIR KIT; WATER PUMP	000000	000000
1878120753	1-8781	2075	REPAIR KIT; WATER PUMP	000000	000000
1878120840	1-8781	2084	LINER SET;ENG CYL	000000	000000
1878120850	1-8781	2085	LINER SET;ENG CYL	000000	000000
1878121010	1-8781	2101	GASKET SET; ENG HD OVERHA	000000	000000
1878121020	1-8781	2102	GASKET SET;ENG OVERHAUL	000000	000006
1878121030	1-8781	2103	GASKET SET;ENG HD OVERHAL	000000	000005
1878121230	1-8781	2123	REPAIR KIT;WATER PUMP	000002	000000
1878121240	1-8781	2124	REPAIR KIT ; WATER PUMP	000000	000003
1878121250	1-8781	2125	REPAIR KIT; W/P	000000	000000
1878121251	1-8781	2125	REPAIR KIT; W/P	000046	000031
1878121360	1-8781	2136	GASKET SET; ENG OVERHAUL	000000	000000
1878121361	1-8781	2136	GASKET SET; ENG OVERHAUL	000000	000004
1878121370	1-8781	2137	GASKET SET; ENG HD OVERHA	000000	000000
1878121371	1-8781	2137	GASKET SET; ENG HD OVERHA	000000	000002
1878121380	1-8781	2138	LINER SET; ENG CYL	000000	000000
1878121390	1-8781	2139	LINER SET; ENG CYL	000000	000000
1878121400	1-8781	2140	LINER SET; ENG CYL	000000	000000
1878121410	1-8781	2141	LINER SET; ENG CYL	000000	000000
1878121422	1-8781	2142	REPAIR KIT; ENGINE O/H	000000	000005

1878121480	1-8781	2148	GASKET SET;ENG OVERHAUL	000000	000000
1878121481	1-8781	2148	GASKET SET;ENG OVERHAUL	000000	000001
1878121490	1-8781	2149	LINER SET;ENG CYL	000000	000000
1878121500	1-8781	2150	LINER SET;ENG CYL	000000	000000
1878121510	1-8781	2151	REPAIR KIT;WATER PUMP	000000	000000
1878121511	1-8781	2151	REPAIR KIT;WATER PUMP	000000	000004
1878121950	1-8781	2195	GASKET SET	000000	000000
1878121951	1-8781	2195	GASKET SET	000000	000000
1878121952	1-8781	2195	GASKET SET	000000	000000
1878121953	1-8781	2195	GASKET SET	000000	000002
1878122090	1-8781	2209	REPAIR KIT; O/H W/TURBO	000000	000000
1878122091	1-8781	2209	REPAIR KIT; O/H W/TURBO	000000	000000
1878122092	1-8781	2209	REPAIR KIT; O/H W/TURBO	000000	000001
1878122110	1-8781	2211	LINER SET; ENG CYL	000000	000000
1878122111	1-8781	2211	LINER SET; ENG CYL	000000	000000
1878122120	1-8781	2212	LINER SET; ENG CYL	000000	000000
1878122121	1-8781	2212	LINER SET; ENG CYL	000000	000000
1878122380	1-8781	2238	REPAIR KIT; O/H	000000	000000
1878122381	1-8781	2238	REPAIR KIT; O/H	000000	000000
1878122382	1-8781	2238	REPAIR KIT; O/H	000000	000002
1878122612	1-8781	2261	GASKET SET; ENG	000000	000002
1878122613	1-8781	2261	GASKET SET; ENG	000000	000000
1878122620	1-8781	2262	REPAIR KIT; O/H	000000	000000
1878122621	1-8781	2262	REPAIR KIT; O/H	000000	000000
1878122622	1-8781	2262	REPAIR KIT; O/H	000000	000000
1878122624	1-8781	2262	REPAIR KIT; O/H	000000	000002
1878122661	1-8781	2266	GASKET SET; ENG OVERHAUL	000000	000000
1878122681	1-8781	2268	GASKET SET; ENG OVERHAUL	000000	000000
1878122702	1-8781	2270	GASKET SET; ENG HD OVERHA	000000	000000
1878122703	1-8781	2270	GASKET SET; ENG HD OVERHA	000000	000000
1878122704	1-8781	2270	GASKET SET; ENG HD OVERHA	000000	000004
1878122710	1-8781	2271	GASKET SET; ENG HD OVERHA	000000	000000
1878122711	1-8781	2271	GASKET SET; ENG HD OVERHA	000000	000000
1878122712	1-8781	2271	GASKET SET; ENG HD OVERHA	000000	000000
1878122713	1-8781	2271	GASKET SET; ENG HD OVERHA	000000	000000
1878122714	1-8781	2271	GASKET SET; ENG HD OVERHA	000000	000003
1878123110	1-8781	2311	GASKET SET; ENG OVERHAUL	000000	000000
1878123111	1-8781	2311	GASKET SET; ENG OVERHAUL	000000	000000
1878123112	1-8781	2311	GASKET SET; ENG OVERHAUL	000000	000000
1878123113	1-8781	2311	GASKET SET; ENG OVERHAUL	000000	000000
1878123114	1-8781	2311	GASKET SET; ENG OVERHAUL	000000	000000
1878123115	1-8781	2311	GASKET SET; ENG OVERHAUL	000000	000000
1878123116	1-8781	2311	GASKET SET; ENG OVERHAUL	000000	000027
1878123130	1-8781	2313	REPAIR KIT, WATER PUMP	000000	000000
1878123160	1-8781	2316	GASKET SET; ENG OVERHAUL	000000	000000
1878124041	1-8781	2404	GASKET SET; ENG HD OVERHA	000000	000002
1878124080	1-8781	2408	GASKET SET ENG OVERHAUL	000000	000002

1878124300	1-8781	2430	LINER SET;ENG CYL	000000	000000
1878124310	1-8781	2431	LINER SER;ENG CYL	000000	000000
1878124320	1-8781	2432	REPAIR KIT;WATER PUMP	000000	000000
1878124321	1-8781	2432	REPAIR KIT;WATER PUMP	000000	000000
1878124322	1-8781	2432	REPAIR KIT;WATER PUMP	000000	000016
1878124430	1-8781	2443	REPAIR KIT; WATER PUMP	000000	000000
1878124850	1-8781	2485	LINER SET;ENG CYL	000000	000000
1878124860	1-8781	2486	LINER SET;ENG CYL	000000	000000
1878124870	1-8781	2487	LINER SET;ENG CYL	000000	000000
1878124880	1-8781	2488	LINER SET;ENG CYL	000000	000000
1878124881	1-8781	2488	LINER SET; ENG CYL	000000	000012
1878124890	1-8781	2489	LINER SET;ENG CYL	000000	000000
1878124900	1-8781	2490	LINER KIT	000000	000008
1878124910	1-8781	2491	LINER SET	000000	000000
1878124920	1-8781	2492	LINER SET;ENG CYL	000000	000000
1878124950	1-8781	2495	GASKET SET;ENG OVERHAUL	000000	000000
1878124990	1-8781	2499	GASKET SET;ENG HD OVERHAU	000000	000000
1878125000	1-8781	2500	GASKET SET;ENG OVERHAUL	000000	000000
1878125010	1-8781	2501	GASKET SET;ENG HD OVERHAU	000000	000000
1878125160	1-8781	2516	LINER KIT	000000	000195
1878125170	1-8781	2517	LINER KIT	000000	000034
1878125180	1-8781	2518	LINER KIT	000000	000004
1878125190	1-8781	2519	LINER KIT	000000	000000
1878126060	1-8781	2606	LINER SET;W/O W-PIN BUSHI	000000	000000
1878126061	1-8781	2606	LINER SET;W/O W-PIN BUSHI	000000	000000
1878126070	1-8781	2607	LINER SET;W/O W-PIN BUSHI	000000	000000
1878126071	1-8781	2607	LINER SET;W/O W-PIN BUSHI	000000	000006
1878126080	1-8781	2608	LINER SET;W/O W-PIN BUSHI	000000	000000
1878126081	1-8781	2608	LINER SET;W/O W-PIN BUSHI	000000	000046
1878126090	1-8781	2609	LINER SET;W/O W-PIN BUSHI	000000	000000
1878126091	1-8781	2609	LINER SET;W/O W-PIN BUSHI	000000	000001
1878126100	1-8781	2610	LINER SET; ENG CYL	000000	000000
1878126101	1-8781	2610	LINER SET; ENG CYL	000000	000003
1878126110	1-8781	2611	LINER SET; ENG CYL	000000	000000
1878126111	1-8781	2611	LINER SET; ENG CYL	000000	000003
1878126120	1-8781	2612	LINER SET; ENG CYL	000000	000000
1878126121	1-8781	2612	LINER SET; ENG CYL	000000	000002
1878126130	1-8781	2613	LINER SET; ENG CYL	000000	000000
1878126131	1-8781	2613	LINER SET; ENG CYL	000000	000008
1878126410	1-8781	2641	LINER KIT	000000	000000
1878126450	1-8781	2645	LINER KIT	000000	000000
1878126460	1-8781	2646	LINER KIT	000000	000020
1878126470	1-8781	2647	LINER KIT	000000	000000
1878126471	1-8781	2647	LINER KIT	000000	000010
1878126480	1-8781	2648	LINER KIT	000000	000000
1878126481	1-8781	2648	LINER KIT	000000	000002
1878126490	1-8781	2649	LINER KIT	000000	000036

1878126500	1-8781	2650	LINER KIT	000000	000011
1878126510	1-8781	2651	LINER KIT	000000	000016
1878126520	1-8781	2652	LINER KIT	000000	000003
1878126540	1-8781	2654	LINER KIT	000000	000009
1878126580	1-8781	2658	LINER KIT	000000	000000
1878126720	1-8781	2672	LINER SET	000000	000006
1878126730	1-8781	2673	LINER SET	000000	000006
1878126740	1-8781	2674	LINER KIT	000000	000000
1878126750	1-8781	2675	LINER KIT	000000	000000
1878126760	1-8781	2676	LINER KIT	000000	000002
1878126780	1-8781	2678	LINER KIT	000000	000004
1878126790	1-8781	2679	LINER KIT	000000	000000
1878126830	1-8781	2683	LINER KIT	000000	000004
1878126860	1-8781	2686	LINER KIT	000000	000004
1878126870	1-8781	2687	LINER KIT	000000	000001
1878126880	1-8781	2688	LINER KIT	000000	000004
1878126900	1-8781	2690	LINER KIT	000000	000003
1878126910	1-8781	2691	LINER KIT	000000	000000
1878126920	1-8781	2692	LINER KIT	000000	000000
1878126930	1-8781	2693	LINER KIT	000000	000001
1878126980	1-8781	2698	LINER KIT	000000	000000
1878126990	1-8781	2699	LINER KIT	000000	000005
1878127040	1-8781	2704	LINER KIT	000000	000000
1878127120	1-8781	2712	LINER KIT	000000	000000
1878127130	1-8781	2713	LINER KIT	000000	000000
1878127131	1-8781	2713	LINER KIT	000000	000000
1878127140	1-8781	2714	LINER KIT	000000	000010
1878127141	1-8781	2714	LINER KIT	000000	000001
1878127150	1-8781	2715	LINER KIT	000000	000010
1878127151	1-8781	2715	LINER KIT	000000	000014
1878127160	1-8781	2716	LINER KIT	000000	000016
1878127170	1-8781	2717	LINER KIT	000000	000000
1878127171	1-8781	2717	LINER KIT	000000	000000
1878127180	1-8781	2718	LINER KIT (GRD1)	000000	000004
1878127181	1-8781	2718	LINER KIT (GRD1)	000000	000004
1878127190	1-8781	2719	LINER KIT (GRD2)	000000	000077
1878127200	1-8781	2720	LINER SET; ENG CYL	000000	000000
1878127202	1-8781	2720	LINER SET; ENG CYL	000000	000003
1878127203	1-8781	2720	LINER SET; ENG CYL	000000	000008
1878127210	1-8781	2721	LINER SET; ENG CYL	000000	000000
1878127212	1-8781	2721	LINER SET; ENG CYL	000000	000000
1878127213	1-8781	2721	LINER SET; ENG CYL	000000	000008
1878127220	1-8781	2722	LINNER SET; ENG CYL	000000	000000
1878127221	1-8781	2722	LINNER SET; ENG CYL	000000	000000
1878127222	1-8781	2722	LINNER SET; ENG CYL	000000	000000
1878127223	1-8781	2722	LINNER SET; ENG CYL	000000	000004
1878127230	1-8781	2723	LINER SET; ENG CYL	000000	000000

1878127231	1-8781	2723	LINER SET; ENG CYL	000000	000000
1878127240	1-8781	2724	LINER SET; ENG CYL	000000	000000
1878127241	1-8781	2724	LINER SET; ENG CYL	000000	000000
1878127242	1-8781	2724	LINER SET; ENG CYL	000000	000000
1878127243	1-8781	2724	LINER SET; ENG CYL	000000	000007
1878127250	1-8781	2725	LINER SET; ENG CYL	000000	000000
1878127251	1-8781	2725	LINER SET; ENG CYL	000000	000000
1878127252	1-8781	2725	LINER SET; ENG CYL	000000	000000
1878127253	1-8781	2725	LINER SET; ENG CYL	000000	000000
1878127260	1-8781	2726	LINER SET;CYL	000000	000005
1878127270	1-8781	2727	LINER SET; CYL	000000	000002
1878127280	1-8781	2728	LINER SET; CYL	000000	000010
1878127290	1-8781	2729	LINER KIT	000000	000002
1878127300	1-8781	2730	LINER KIT	000000	000008
1878127350	1-8781	2735	LINER SET; ENG CYL	000000	000000
1878127351	1-8781	2735	LINER SET; ENG CYL	000000	000012
1878127360	1-8781	2736	LINER SET; ENG CYL	000000	000000
1878127361	1-8781	2736	LINER SET; ENG CYL	000000	000001
1878127450	1-8781	2745	LINER SET; ENG CYL	000001	000000
1878127451	1-8781	2745	LINER SET; ENG CYL	000000	000000
1878127460	1-8781	2746	LINER SET; ENG CYL	000000	000000
1878127461	1-8781	2746	LINER SET; ENG CYL	000000	000006
1878127470	1-8781	2747	LINER SET; ENG CYL	000000	000000
1878127471	1-8781	2747	LINER SET; ENG CYL	000000	000001
1878127480	1-8781	2748	LINER SET; ENG CYL	000000	000006
1878127490	1-8781	2749	LINER SET; ENG CYL	000000	000000
1878127491	1-8781	2749	LINER SET; ENG CYL	000000	000007
1878127500	1-8781	2750	LINER; SET; ENG CYL	000000	000000
1878127501	1-8781	2750	LINER; SET; ENG CYL	000000	000014
1878127510	1-8781	2751	LINER SET; ENG CYL	000000	000000
1878127511	1-8781	2751	LINER SET; ENG CYL	000000	000003
1878127520	1-8781	2752	LINER SET; ENG CYL	000000	000000
1878127521	1-8781	2752	LINER SET; ENG CYL	000000	000001
1878127530	1-8781	2753	LINER SET; ENG CYL	000000	000000
1878127531	1-8781	2753	LINER SET; ENG CYL	000000	000047
1878127540	1-8781	2754	LINER SET; ENG CYL	000000	000000
1878127541	1-8781	2754	LINER SET; ENG CYL	000000	000076
1878127550	1-8781	2755	LINER SET; ENG CYL	000000	000000
1878127551	1-8781	2755	LINER SET; ENG CYL	000000	000003
1878127560	1-8781	2756	LINER SET; ENG CYL	000000	000000
1878127561	1-8781	2756	LINER SET; ENG CYL	000000	000002
1878127570	1-8781	2757	LINER SET; ENG CYL	000000	000000
1878127571	1-8781	2757	LINER SET; ENG CYL	000000	000019
1878127580	1-8781	2758	LINER SET; ENG CYL	000000	000000
1878127581	1-8781	2758	LINER SET; ENG CYL	000000	000051
1878127590	1-8781	2759	LINER SET; ENG CYL	000000	000000
1878127591	1-8781	2759	LINER SET; ENG CYL	000000	000042

1878127600	1-8781	2760	LINER SET; ENG CYL	000000	000000
1878127601	1-8781	2760	LINER SET; ENG CYL	000000	000002
1878127630	1-8781	2763	LINER SET; ENG CYL	000000	000000
1878127631	1-8781	2763	LINER SET; ENG CYL	000002	000004
1878127640	1-8781	2764	LINER SET; ENG CYL	000000	000000
1878127641	1-8781	2764	LINER SET; ENG CYL	000002	000004
1878127650	1-8781	2765	LINER SET; ENG CYL	000000	000000
1878127651	1-8781	2765	LINER SET; ENG CYL	000002	000004
1878127660	1-8781	2766	LINER SET; ENG CYL	000000	000000
1878127661	1-8781	2766	LINER SET; ENG CYL	000002	000004
1878127670	1-8781	2767	LINER KIT	000000	000000
1878127672	1-8781	2767	LINER SET; ENG	000000	000004
1878127680	1-8781	2768	LINER KIT	000000	000000
1878127682	1-8781	2768	LINER KIT	000000	000004
1878127690	1-8781	2769	LINER KIT	000000	000000
1878127692	1-8781	2769	LINER KIT	000000	000004
1878127700	1-8781	2770	LINER KIT	000000	000000
1878127702	1-8781	2770	LINER KIT	000000	000006
1878127730	1-8781	2773	LINER SET; ENG CYL	000000	000000
1878127731	1-8781	2773	LINER SET; ENG CYL	000000	000045
1878127740	1-8781	2774	LINER SET; ENG CYL	000000	000000
1878127741	1-8781	2774	LINER SET; ENG CYL	000000	000000
1878127750	1-8781	2775	LINER SE; ENG CYL	000000	000000
1878127751	1-8781	2775	LINER SE; ENG CYL	000000	000000
1878127752	1-8781	2775	LINER SE; ENG CYL	000000	000000
1878127753	1-8781	2775	LINER SE; ENG CYL	000000	000000
1878127754	1-8781	2775	LINER SE; ENG CYL	000000	000033
1878127760	1-8781	2776	LINER SET; ENG CYL	000000	000000
1878127761	1-8781	2776	LINER SET; ENG CYL	000000	000000
1878127762	1-8781	2776	LINER SET; ENG CYL	000000	000000
1878127763	1-8781	2776	LINER SET; ENG CYL	000000	000000
1878127764	1-8781	2776	LINER SET; ENG CYL	000000	000030
1878127830	1-8781	2783	LINER SET; ENG CYL	000000	000000
1878127831	1-8781	2783	LINER SET; ENG CYL	000000	000006
1878127840	1-8781	2784	LINER SET; ENG CYL	000000	000000
1878127870	1-8781	2787	LINER KIT	000000	000006
1878127880	1-8781	2788	LINER KIT	000000	000006
1878127890	1-8781	2789	LINER SET; ENG CYL	000000	000000
1878127891	1-8781	2789	LINER SET; ENG CYL	000000	000000
1878127900	1-8781	2790	LINER SET; ENG CYL	000000	000000
1878127901	1-8781	2790	LINER SET; ENG CYL	000000	000000
1878127910	1-8781	2791	LINER SET; ENG CYL	000000	000000
1878127911	1-8781	2791	LINER SET; ENG CYL	000000	000129
1878127920	1-8781	2792	LINER SET; ENG CYL	000000	000000
1878127921	1-8781	2792	LINER SET; ENG CYL	000000	000057
1878127930	1-8781	2793	LINER SET; ENG CYL	000000	000000
1878127931	1-8781	2793	LINER SET; ENG CYL	000000	000087

1878127940	1-8781	2794	LINER SET; ENG CYL	000000	000000
1878127941	1-8781	2794	LINER SET; ENG CYL	000000	000000
1878127950	1-8781	2795	LINER KIT	000000	000000
1878127960	1-8781	2796	LINER KIT	000000	000000
1878127970	1-8781	2797	LINER KIT	000000	000000
1878128090	1-8781	2809	REPAIR KIT,O/H	000000	000000
1878128091	1-8781	2809	REPAIR KIT,O/H	000000	000001
1878128222	1-8781	2822	REPAIR KIT; ENGINE O/H	000000	000000
1878128224	1-8781	2822	REPAIR KIT; ENGINE O/H	000000	000001
1878128360	1-8781	2836	GASKET SET;ENG HD OVERHAU	000000	000003
1878128380	1-8781	2838	GASKET SET	000000	000001
1878128390	1-8781	2839	GASKET SET	000000	000001
1878128400	1-8781	2840	GASKET SET	000000	000005
1878128410	1-8781	2841	GASKET SET	000000	000000
1878128420	1-8781	2842	GASKET SETS ENG OVER HAUX	000000	000000
1878128422	1-8781	2842	GASKET SETS ENG OVER HAUX	000000	000000
1878128470	1-8781	2847	LINER SET; ENG CYL	000000	000000
1878128472	1-8781	2847	LINER SET; ENG CYL	000000	000009
1878128480	1-8781	2848	LINER SET; ENG CYL	000000	000000
1878128482	1-8781	2848	LINER SET; ENG CYL	000000	000000
1878128490	1-8781	2849	LINER SET; ETG CYL	000000	000000
1878128492	1-8781	2849	LINER SET; ETG CYL	000000	000002
1878128500	1-8781	2850	LINER SET; ENG CYL	000000	000000
1878128502	1-8781	2850	LINER SET; ENG CYL	000000	000005
1878128510	1-8781	2851	LINER SET; ENG CYL	000003	000000
1878128511	1-8781	2851	LINER SET; ENG CYL	000000	000000
1878128520	1-8781	2852	LINER KIT	000000	000019
1878128521	1-8781	2852	LINER KIT	000000	000000
1878128530	1-8781	2853	LINER SET	000000	000007
1878128531	1-8781	2853	LINER SET	000003	000000
1878128590	1-8781	2859	LINER SET; ENG CYL	000000	000000
1878128591	1-8781	2859	LINER SET; ENG CYL	000000	000000
1878128592	1-8781	2859	LINER SET; ENG CYL	000000	000047
1878128600	1-8781	2860	LINER SET; ENG CYL	000000	000000
1878128601	1-8781	2860	LINER SET; ENG CYL	000000	000000
1878128602	1-8781	2860	LINER SET; ENG CYL	000000	000011
1878129210	1-8781	2921	REPAIR KIT; WATER PUMP	000000	000000
1878129470	1-8781	2947	GASKET SET; ENG OVERHAUL	000000	000000
1878129490	1-8781	2949	GASKET SET;ENG HD OVERHAU	000000	000002
1878129491	1-8781	2949	GASKET SET;ENG HD OVERHAU	000000	000000
1878129560	1-8781	2956	LINER SET; ENG CYL	000000	000006
1878129570	1-8781	2957	LINER SET; ENG CYL	000000	000006
1878129660	1-8781	2966	GASKET SET; ENG OVERHAUL	000000	000000
1878129661	1-8781	2966	GASKET SET; ENG OVERHAUL	000000	000000
1878129662	1-8781	2966	GASKET SET; ENG OVERHAUL	000000	000003
1878129670	1-8781	2967	GASKET SET; ENG HD OVERHA	000000	000000
1878129671	1-8781	2967	GASKET SET; ENG HD OVERHA	000000	000000

1878129672	1-8781	2967	GASKET SET; ENG HD OVERHA	000000	000000
1878129700	1-8781	2970	GASKET SET;ENG OVERHAUL	000000	000000
1878129701	1-8781	2970	GASKET SET;ENG OVERHAUL	000000	000000
1878129702	1-8781	2970	GASKET SET;ENG OVERHAUL	000000	000007
1878129710	1-8781	2971	GASKET SET;ENG OVERHAUL	000000	000003
1878129720	1-8781	2972	GASKET SET;ENG HD OVERHAU	000000	000000
1878129721	1-8781	2972	GASKET SET;ENG HD OVERHAU	000000	000002
1878129801	1-8781	2980	GASKET SET; ENG OVERHAUL	000000	000002
1878129820	1-8781	2982	GASKET SET; ENG OVERHAUL	000000	000000
1878129821	1-8781	2982	GASKET SET; ENG OVERHAUL	000000	000000
1878129822	1-8781	2982	GASKET SET; ENG OVERHAUL	000000	000231
1878129831	1-8781	2983	GASKET SET;ENG HD OVERHAU	000000	000001
1878129850	1-8781	2985	GASKET SET; ENG HD OVERHA	000000	000000
1878129851	1-8781	2985	GASKET SET; ENG HD OVERHA	000000	000032
1878129860	1-8781	2986	LINER SET; ENG CYL	000000	000000
1878129861	1-8781	2986	LINER SET; ENG CYL	000000	000000
1878129862	1-8781	2986	LINER SET; ENG CYL	000000	000000
1878129870	1-8781	2987	LINER SET; ENG CYL	000000	000000
1878129871	1-8781	2987	LINER SET; ENG CYL	000000	000000
1878129872	1-8781	2987	LINER SET; ENG CYL	000000	000000
1878130020	1-8781	3002	GASKET SET; ENG OVERHAUL	000000	000000
1878130021	1-8781	3002	GASKET SET;ENG. OVERHAUL	000000	000000
1878130022	1-8781	3002	GASKET SET;ENG. OVERHAUL	000000	000000
1878130023	1-8781	3002	GASKET SET;ENG. OVERHAUL	000000	000005
1878130030	1-8781	3003	GASKET SET; ENG OVERHAUL	000000	000002
1878130160	1-8781	3016	GASKET SET; ENG HD OVERHA	000000	000001
1878130260	1-8781	3026	GASKET SET; ENG OVERHAUL	000000	000000
1878130360	1-8781	3036	GASKET SET; ENG OVERHAUL	000000	000000
1878130361	1-8781	3036	GASKET SET; ENG OVERHAUL	000000	000000
1878130380	1-8781	3038	GASKET SET,ENG OVERHAUL	000000	000006
1878130551	1-8781	3055	GASKET KIT; ENGINE	000000	000001
1878130561	1-8781	3056	GASKET SET; ENG OVERHAUL	000000	000000
1878130562	1-8781	3056	GASKET SET; ENG OVERHAUL	000000	000003
1878130600	1-8781	3060	GASKET KIT; CYL HEAD	000000	000002
1878130640	1-8781	3064	GASKET SET; ENG OVERHAUL	000000	000002
1878130650	1-8781	3065	GASKET SET;ENG OVERHAUL	000000	000003
1878130670	1-8781	3067	GASKET SET; ENG OVERHAUL	000000	000000
1878130680	1-8781	3068	GASKET SET;ENG HD OVERHAU	000000	000001
1878130700	1-8781	3070	GASKET SET; ENG HD OVERHA	000000	000001
1878130710	1-8781	3071	GASKET SET; ENG O	000000	000000
1878130720	1-8781	3072	REPAIR KIT; WATER PUMP	000000	000002
1878130730	1-8781	3073	GASKET SET; ENG H	000000	000003
1878130740	1-8781	3074	LINER SET; ENG CY	000000	000005
1878130750	1-8781	3075	LINER SET; ENG CY	000000	000000
1878130760	1-8781	3076	REPAIR KIT; WATER	000000	000006
1878130900	1-8781	3090	GASKET SET; ENG OVERHAUL	000000	000000
1878131261	1-8781	3126	LINER SET; ENG CYL	000000	000006

1878131271	1-8781	3127	LINER SET; ENG CYL	000000	000000
1878131275	1-8781	3127	LINER SET; ENG CYL	000000	000005
1878131550	1-8781	3155	GASKET SET; ENG OVERHAUL	000000	000003
1878131630	1-8781	3163	GASKET SET; ENG OVERHAUL	000000	000001
1878131640	1-8781	3164	GASKET SET;ENG OVERHAUL	000000	000000
1878131650	1-8781	3165	GASKET SET; ENG OVERHAUL	000000	000000
1878131660	1-8781	3166	GASKET SET; ENG OVERHAUL	000000	000000
1878131682	1-8781	3168	GASKET SET;ENG OVERHAUL	000000	000000
1878131684	1-8781	3168	GASKET SET;ENG OVERHAUL	000000	000000
1878131685	1-8781	3168	GASKET SET;ENG OVERHAUL	000000	000002
1878131891	1-8781	3189	REPAIR KIT; O/H	000000	000004
1878132010	1-8781	3201	LINER SET; ENG CYL	000000	000001
1878132011	1-8781	3201	LINER SET; ENG CYL	000000	000000
1878132012	1-8781	3201	LINER SET; ENG CYL	000000	000003
1878132020	1-8781	3202	LINER SET; ENG CYL	000000	000005
1878132021	1-8781	3202	LINER SET; ENG CYL	000000	000000
1878132022	1-8781	3202	LINER SET; ENG CYL	000000	000000
1878132080	1-8781	3208	GASKET SET;ENG OVERHAUL	000000	000010
1878132980	1-8781	3298	GASKET SET; ENG OVERHAUL	000000	000013
1878132981	1-8781	3298	GASKET SET; ENG OVERHAUL	000000	000000
1878132990	1-8781	3299	GASKET SET;ENG HD OVERHAU	000000	000000
1878132991	1-8781	3299	GASKET SET;ENG HD OVERHAU	000000	000019
1878133000	1-8781	3300	GASKET SET;ENG OVERHAUL	000000	000004
1878133010	1-8781	3301	GASKET SET;ENG HD OVERHAU	000000	000003
1878133020	1-8781	3302	GSKT SET	000000	000000
1878133030	1-8781	3303	GSKT SET	000000	000002
1878133031	1-8781	3303	GSKT SET	000000	000000
1878133141	1-8781	3314	REPAIR KIT; WATER PUMP	000000	000003
1878133250	1-8781	3325	GASKET SET;ENG OVERHAUL	000000	000000
1878133251	1-8781	3325	GASKET SET;ENG OVERHAUL	000000	000000
1878133252	1-8781	3325	GASKET SET;ENG OVERHAUL	000000	000003
1878133280	1-8781	3328	GASKET SET; ENG OVERHAUL	000000	000001
1878133282	1-8781	3328	GASKET SET; ENG OVERHAUL	000000	000000
1878133310	1-8781	3331	GASKET SET;ENG HD OVERHAU	000000	000003
1878133371	1-8781	3337	GASKET SET; ENG	000000	000001
1878133380	1-8781	3338	GASKET SET;ENG OVERHAUL	000000	000000
1878133390	1-8781	3339	GASKET SET;ENG HD OVERHAU	000000	000000
1878133391	1-8781	3339	GASKET SET;ENG HD OVERHAU	000000	000000
1878133392	1-8781	3339	GASKET SET;ENG HD OVERHAU	000000	000024
1878133521	1-8781	3352	GASKET SET	000000	000002
1878133522	1-8781	3352	GASKET SET	000000	000000
1878133530	1-8781	3353	GASKET SET;ENG OVERHAUL	000000	000000
1878133570	1-8781	3357	GASKET SET; ENG	000000	000000
1878133571	1-8781	3357	GASKET SET; ENG	000000	000000
1878133572	1-8781	3357	GASKET SET; ENG	000000	000000
1878133642	1-8781	3364	GASKET SET; ENG OVERHAUL	000000	000000
1878133643	1-8781	3364	GASKET SET; ENG OVERHAUL	000000	000001

1878133810	1-8781	3381	GASKET SET; ENG OVERHAUL	000000	000000
1878133811	1-8781	3381	GASKET SET; ENG OVERHAUL	000000	000004
1878133814	1-8781	3381	GASKET SET; ENG OVERHAUL	000000	000000
1878133820	1-8781	3382	GASKET SET; ENG HD OVHAUL	000000	000003
1878133822	1-8781	3382	GASKET SET; ENG HD OVHAUL	000000	000000
1878133890	1-8781	3389	GASKET SET; ENG OVERHAUL	000000	000000
1878133891	1-8781	3389	GASKET SET; ENG OVERHAUL	000000	000003
1878133900	1-8781	3390	GASKET SET; ENG HD OVERHA	000000	000002
1878133910	1-8781	3391	LINER SET; ENG CYL	000002	000004
1878133920	1-8781	3392	LINER SET; ENG CYL	000000	000006
1878133930	1-8781	3393	REPAIR KIT; WATER PUMP	000001	000001
1878134020	1-8781	3402	REP KIT;ENG OVHL-6RB1	000000	000020
1878134030	1-8781	3403	GASKET SET;ENG	000000	000003
1878134280	1-8781	3428	REPAIR KIT; WATER PUMP	000001	000002
1878134550	1-8781	3455	GASKET SET;ENG OVERHAUL	000000	000000
1878134560	1-8781	3456	GASKET SET;ENG HD OVERHAU	000000	000000
1878134720	1-8781	3472	GASKET SET; ENG OVERHAUL	000000	000000
1878134722	1-8781	3472	GASKET SET; ENG OVERHAUL	000000	000001
1878134730	1-8781	3473	GASKET SET;ENG HD OVERHAU	000000	000000
1878134732	1-8781	3473	GASKET SET;ENG HD OVERHAU	000000	000001
1878134740	1-8781	3474	GASKET SET;ENG	000003	000000
1878134800	1-8781	3480	GASKET SET;ENG OVERHAUL	000000	000000
1878134801	1-8781	3480	GASKET SET;ENG OVERHAUL	000000	000003
1878135010	1-8781	3501	GASKET SET;ENG HD OVERHAU	000000	000000
1878135011	1-8781	3501	GASKET SET;ENG HD OVERHAU	000000	000003
1878135030	1-8781	3503	GASKET SET; ENG OVERHAUL	000000	000000
1878135031	1-8781	3503	GASKET SET; ENG OVERHAUL	000000	000000
1878135032	1-8781	3503	GASKET SET; ENG OVERHAUL	000000	000000
1878135033	1-8781	3503	GASKET SET; ENG OVERHAUL	000000	000000
1878135034	1-8781	3503	GASKET SET; ENG OVERHAUL	000000	000000
1878135035	1-8781	3503	GASKET SET; ENG OVERHAUL	000000	000015
1878135040	1-8781	3504	GASKET SET;ENG HD OVERHAU	000000	000000
1878135041	1-8781	3504	GASKET SET;ENG HD OVERHAU	000000	000000
1878135042	1-8781	3504	GASKET SET;ENG HD OVERHAU	000000	000000
1878135043	1-8781	3504	GASKET SET;ENG HD OVERHAU	000000	000000
1878135044	1-8781	3504	GASKET SET;ENG HD OVERHAU	000000	000000
1878135045	1-8781	3504	GASKET SET;ENG HD OVERHAU	000000	000000
1878135390	1-8781	3539	LINER SET; ENG CYL	000000	000000
1878135391	1-8781	3539	LINER SET; ENG CYL	000000	000027
1878135400	1-8781	3540	LINER SET; ENG CYL	000000	000030
1878135401	1-8781	3540	LINER SET; ENG CYL	000000	000112
1878135460	1-8781	3546	GASKERT SET; ENG	000000	000001
1878135470	1-8781	3547	GASKET SET; ENG HD OVERHA	000000	000001
1878135970	1-8781	3597	GASKET SET; ENG OVERHAUL	000000	000000
1878135981	1-8781	3598	GASKET SET;ENG HD OVERHAU	000000	000007
1878135990	1-8781	3599	LINER SET; ENG CYL	000000	000014
1878135991	1-8781	3599	LINER SET; ENG CYL	000000	000000

1878135993	1-8781	3599	LINER SET; ENG CYL	000000	000000
1878136000	1-8781	3600	LINER SET; ENG CYL	000000	000003
1878136001	1-8781	3600	LINER SET; ENG CYL	000000	000000
1878136003	1-8781	3600	LINER SET; ENG CYL	000000	000000
1878136010	1-8781	3601	GASKET SET;ENG OVER HAUX	000000	000002
1878136040	1-8781	3604	GASKET SET;ENG OVERHAUL	000000	000005
1878136190	1-8781	3619	GASKET SET; ENG OVERHAUL	000000	000003
1878136200	1-8781	3620	GASKET SET;ENG HD OVERHAU	000000	000000
1878136202	1-8781	3620	GASKET SET;ENG HD OVERHAU	000000	000006
1878136330	1-8781	3633	GASKET SET; ENG OVERHAUL	000000	000002
1878136331	1-8781	3633	GASKET SET; ENG OVERHAUL	000000	000002
1878136332	1-8781	3633	GASKET SET; ENG OVERHAUL	000000	000000
1878136361	1-8781	3636	GASKET SET; ENG OVERHAUL	000000	000000
1878136362	1-8781	3636	GASKET SET; ENG OVERHAUL	000000	000000
1878136363	1-8781	3636	GASKET SET; ENG OVERHAUL	000000	000000
1878136364	1-8781	3636	GASKET SET; ENG OVERHAUL	000000	000000
1878136365			GASKET SET; ENG OVERHAUL	000000	000004
1878136371	1-8781	3637	GASKET SET; ENG HD OVERHA	000000	000000
1878136372	1-8781	3637	GASKET SET; ENG HD OVERHA	000000	000000
1878136373	1-8781	3637	GASKET SET; ENG HD OVERHA	000000	000005
1878136380	1-8781	3638	LINER SET; ENG CYL	000000	000005
1878136390	1-8781	3639	LINER SET; ENG CYL	000000	000005
1878136401	1-8781	3640	GASKET SET; ENG OVERHAUL	000000	000000
1878136410	1-8781	3641	GASKET SET; ENG HD OVERHA	000000	000004
1878136411	1-8781	3641	GASKET SET; ENG HD OVERHA	000000	000000
1878136430	1-8781	3643	GASKET SET; ENG OVERHAUL	000000	000004
1878136620	1-8781	3662	REPAIR KIT;WATER PUMP	000000	000000
1878136630	1-8781	3663	REPAIR KIT;WATER PUMP	000000	000003
1878136750	1-8781	3675	GASKET SET; ENG	000000	000000
1878136751	1-8781	3675	GASKET SET; ENG	000000	000002
1878136950	1-8781	3695	GASKET SET; ENG	000000	000005
1878136960	1-8781	3696	GASKET SET;ENG OVERHAUL	000000	000000
1878136962	1-8781	3696	GASKET SET;ENG OVERHAUL	000000	000002
1878136963	1-8781	3696	GASKET SET;ENG OVERHAUL	000000	000003
1878137120	1-8781	3712	LINER SET; ENG	000000	000007
1878137130	1-8781	3713	LINER SET; ENG CYL	000000	000016
1878137360	1-8781	3736	REPAIR KIT; WATER	000000	000032
1878137640	1-8781	3764	LINER SET; ENG	000000	000025
1878137650	1-8781	3765	LINER SET; ENG	000000	000012
1878137660	1-8781	3766	LINER SET; ENG	000000	000000
1878137661	1-8781	3766	LINER SET; ENG	000000	000000
1878137670	1-8781	3767	LINER SET; ENG CYL	000000	000000
1878138080	1-8781	3808	GASKET SET; ENG OVERHAUL	000000	000000
1878138090	1-8781	3809	GASKET SET; ENG OVERHAUL	000000	000000
1878138150	1-8781	3815	REPAIR KIT; WAT	000000	000000
1878300411			REPAIR KIT	000000	000000
1878300421			REPAIR KIT	000000	000000

1878300432			REPAIR KIT	000000	000000
1878300590			GASKET KIT	000000	000000
1878300721	1-8783	0072	REP. KIT;P/S	000000	000000
1878300772			WATER PUMP REPAIR KIT	000000	000000
1878300773			REPAIR KIT;M/C	000000	000000
1878300774			REPAIR KIT; M/C	000000	000000
1878300818			REPAIR KIT; M/T O/H	000000	000000
1878302000			CYLINDER KIT	000000	000000
1878302131			REPAIR KIT	000000	000000
1878302186			REPAIR KIT; TRA	000000	000000
1878302222	1-8783	0222	REPAIR KIT;RELE	000000	000000
1878302670	1-8783	0267	REPAIR KIT:P/S	000000	000000
1878302750	1-8783	0275	REP KIT;PS PUMP	000000	000007
1878303280	1-8783	0328	CUP SET;SLAVE	000000	000116
1878303400			CYLINDER KIT	000000	000000
1878303930	1-8783	0393	REPAIR KIT; AIR MASTER	000000	000001
1878303940			REPAIR KIT	000000	000008
1878304710			CUPS; REPAIR KIT	000000	000000
1878305160	1-8783	0516	LINER SET; CYL. E120T	000000	000000
1878305161	1-8783	0516	LINER SET; CYL. E120T	000000	000000
1878305250			CUP SET; RR WHEEL	000000	000003
1878305270	1-8783	0527	CUP SET;WHL,CYL	000000	000013
1878305330	1-8783	0533	REPAIR KIT;CLUTCH CYL	000005	000019
1878305420			CYL. KIT "M1YACO"	000000	000000
1878305690			CUPS; REPAIR KIT	000000	000000
1878306200	1-8783	0620	LEVER KIT; RELEASE,CLUTCH	000000	000000
1878307350	1-8783	0735	REPAIR KIT; M/T O/H	000000	000000
1878307470	1-8783	0747	REPAIR KIT; BRAKE	000000	000000
1878701663			U-BOLT SET	000000	000000
1878703500			U-BOLT SET; FRT	000000	000000
1878900280	1-8789	0028	CAP ASM; FILLER	000000	000000
1882301182	1-8823	0118	LAMP ASM	000000	000000
1883026950			LINER SET	000000	000000
1884301540	1-8843	0154	TOOL; TAPPET SETTING E120	000000	000001
1885710200	1-8857	1020	CASE SET; W/CAUTION PL.	000000	000000
1885710230	1-8857	1023	REPAIR KIT;TURBOCHARGER	000000	000000
1887100873	1-8871	0087	PARTS CATALOG DA640	000000	000000
1887101019	1-8871	0101	1-8871 0344("C")	000000	000000
1887101043	1-8871	0104	PARTS CATALOG DA220	000000	000000
1887101053	1-8871	0105	PARTS CATALOG DA120	000000	000000
1887101229	1-8871	0122	PARTS CATALOG 6BB1	000000	000000
1887101253	1-8871	0125	PARTS CATALOG DH100	000000	000000
1887101262	1-8871	0126	PARTS CATALOG 8MA1	000000	000000
1887101335	1-8871	0133	PARTS CATALOG D500	000000	000000
1887101391	1-8871	0139	PARTS CATALOG UMD500	000000	000000
1887101439	1-8871	0143	PARTS CATALOG 6BD1	000000	000000
1887101455	1-8871	0145	PARTS CATALOG UME120	000000	000000

1887101459	1-8871	0145	UME120 PARTS CATALOG	000000	000000
1887101542	1-8871	0154	PARTS CATALOG UMDH100	000000	000000
1887101679	1-8871	0167	PARTS CATALOG UM6BB/BD1	000000	000000
1887101775	1-8871	0177	PARTS CATALOG 10PB1	000000	000000
1887101872	1-8871	0187	PARTS CATALOG 10PB1	000000	000000
1887101876	1-8871	0187	10PB1 PARTS CATALOG	000000	000000
1887101877	1-8871	0187	10PB1 PARTS CATALOG	000000	000000
1887101910			PARTS MANUAL	000000	000000
1887101966			PARTS CATALOG 12PB1	000000	000000
1887101967	1-8871	0196	UM12PB1 PARTS CATALOG	000000	000000
1887101977	1-8871	0197	PARTS CATALOG 12PB1	000000	000000
1887101979	1-8871	0197	12PB1 PARTS CATALOG	000000	000000
1887102093	1-8871	0209	PARTS CATALOG 8PA1	000000	000000
1887102098	1-8871	0209	8PA1 PARTS CATALOG	000000	000000
1887102099	1-8871	0209	8PA1 PARTS CATALOG	000000	000000
1887102110	1-8871	0211	PARTS CATALOG 6BD1/SCR	000000	000000
1887102300	1-8871	0230	E120 PARTS CATALOG	000000	000000
1887102312	1-8871	0231	UM6QA PARTS CATALOG	000000	000000
1887102473			UM8PB1 PARTS CATALOG	000000	000000
1887102496			6RB1 PART CATALOG	000000	000000
1887102497	1-8871	0249	6RB1 PART CATALOG	000000	000000
1887102498	1-8871	0249	6RB1 PART CATALOG	000000	000000
1887102499	1-8871	0249	6RB1 PARTS CATALOG	000000	000000
1887102502	1-8871	0250	PARTS CATALOG UM6SA1	000000	000000
1887102506	1-8871	0250	UM6SA1 PARTS CATALOG	000000	000000
1887102587			6QA1 PARTS CATALOG	000000	000000
1887102632			PARTS CATALOG 6BF1	000000	000000
1887102633	1-8871	0263	6BF1 PARTS CATALOG	000000	000000
1887102670			MR CATALOG 85	000000	000000
1887102680			LT CATALOG 85	000000	000000
1887102807			PARTS CATALOG 6SA1	000000	000000
1887102808	1-8871	0280	6SA1 PARTS CATALOG	000000	000000
1887102809	1-8871	0280	6SA1 PARTS CATALOG	000000	000000
1887102975	1-8871	0297	PARTS CATALOG 6BG1	000000	000000
1887102976	1-8871	0297	6BG1 PARTS CATALOG	000000	000000
1887102977	1-8871	0297	6BG1 PARTS CATALOG	000000	000000
1887102978	1-8871	0297	6BG1 PARTS CATALOG	000000	000000
1887102979	1-8871	0297	6BG1 PARTS CATALOG	000000	000000
1887103000	1-8871	0300	PARTS CATALOG UM6BB/BD1	000000	000000
1887103031	1-8871	0303	PARTS CATALOG	000000	000000
1887103032	1-8871	0303	PARTS CATALOG	000000	000000
1887103033	1-8871	0303	PARTS CATALOG	000000	000000
1887103034	1-8871	0303	PARTS CATALOG 6BD1 (EXPOR	000000	000000
1887103045	1-8871	0304	PARTS CATALOG UM6BG1	000000	000000
1887103074	1-8871	0307	PARTS CATALOG UM6RB1	000000	000000
1887103075	1-8871	0307	UM6RB1 PARTS CATALOG	000000	000000
1887103270	1-8871	0327	PARTS CATALOG 6BB1 (B)	000000	000000

1887103290	1-8871	0329	SUPERSEDED**P/C	000000	000000
1887103335	1-8871	0333	PARTS CATALOG UM6SD1	000000	000000
1887103336	1-8871	0333	UM6SD1 PARTS CATALOG	000000	000000
1887103338	1-8871	0333	UM6SD1 PARTS CATALOG	000000	000000
1887103344	1-8871	0334	6SD1 PARTS CATALOG	000000	000000
1887103345	1-8871	0334	6SD1 PARTS CATALOG	000000	000000
1887103346	1-8871	0334	6SD1 PARTS CATALOG	000000	000000
1887103347	1-8871	0334	6SD1 PARTS CATALOG	000000	000000
1887103348	1-8871	0334	6SD1 PARTS CATALOG	000000	000000
1887103403	1-8871	0340	PARTS CATALOG 6BD1	000000	000000
1887103412	1-8871	0341	PARTS CATALOG 6BB1	000000	000000
1887103413	1-8871	0341	6BB1 PARTS CATALOG	000000	000000
1887103441	1-8871	0344	PARTS CATALOG E120	000000	000000
1887103442	1-8871	0344	E120 PARTS CATALOG	000000	000000
1887103453			UM12PD1 PTS CATALOG	000000	000000
1887103455			UM12PD1 PTS CATALOG	000000	000000
1887103503			UM6BD1 PARTS CATALOG	000000	000000
1887103521	1-8871	0352	6BD1 PARTS CATALOG	000000	000000
1887103522	1-8871	0352	6BD1 PARTS CATALOG	000000	000000
1887103523	1-8871	0352	6BD1 PARTS CATALOG	000000	000000
1887103530	1-8871	0353	6BD1 PARTS CAT.	000000	000000
1887103532	1-8871	0353	6BD1 PARTS CAT.	000000	000000
1887103533	1-8871	0353	6BD1 PARTS CAT.	000000	000000
1887103540	1-8871	0354	UM6RB1 PARTS CATALOG	000000	000000
1887103542	1-8871	0354	UM6RB1 PARTS CATALOG	000000	000000
1887103560	1-8871	0356	6BB1 PARTS CAT.	000000	000000
1887103561	1-8871	0356	6BB1 PARTS CAT.	000000	000000
1887103570	1-8871	0357	12PB1 PARTS CATALOG	000000	000000
1887103580	1-8871	0358	UM6BG1 PTS CATALOG	000000	000000
1887103582	1-8871	0358	UM6BG1 PTS CATALOG	000000	000000
1887103720	1-8871	0372	6RB1 PARTS CATALOG	000000	000000
1887103721	1-8871	0372	6RB1 PARTS CATALOG	000000	000000
1887103750	1-8871	0375	6BG1 PARTS CATALOG	000000	000000
1887103751	1-8871	0375	6BG1 PARTS CATALOG	000000	000000
1887103880	1-8871	0388	PARTS CATALOG UM6BB/BD1	000000	000000
1887105231	1-8871	0523	CX/EX PARTS CATALOG	000000	000000
1887105481			FSR CATALOG	000000	000000
1887105482			FSR/FTR CATALOG	000000	000000
1887105610			FVR/EVR CATALOG	000000	000000
1887105611			FVR/EVR PTS.CAT	000000	000000
1887105612			EVR/FVR PTS CTG	000000	000000
1887105613			'91 EVR/FVR CATALOG	000000	000000
1887105614			`92 EVR/FVR PTS. CATALOG	000000	000000
1887105615			`93 EV/FV CAT W/'94 SUP	000000	000000
1887105616			'95 EVR/FVR PTS. CATG.	000000	000000
1887105617			'96 EVR/FVR FINAL PTS CAT	000000	000000
1887105670			NRR CATALOG '88	000000	000000

1887105671		89 NRR PTS.CATG	000000	000000
1887105672		90 NRR PTS CATG	000000	000000
1887105673		'91 NRR CATALOG	000000	000000
1887105674		'92 NRR PARTS CATALOG	000000	000000
1887105675		'93 NRR CAT W/'94 SUP	000000	000000
1887105676		'94 NRR FINAL ED. PTS CAT	000000	000000
1887105780		FSR/FTR PTS.CAT	000000	000000
1887105781		FSR/FTR PTS.CAT	000000	000000
1887105782		FSR/FTR PTS CTG	000000	000000
1887105783		'91 FSR/FTR CATALOG	000000	000000
1887105784		'92 FSR/FTR PTS. CATALOG	000000	000000
1887105785		'92.5 FS/FTR PARTS CATG.	000000	000000
1887105786		'93 FS/FT CAT W/'94 SUP	000000	000000
1887105787		'95 FSR/FTR PTS. CATG.	000000	000000
1887105788		96 FSR/FTR FINAL PTS CAT	000000	000000
1887106630		MR PARTS CATALOG	000000	000000
1887106692		CXM/Z LHD PARTS CATALOG	000000	000000
1887106840		'95 FRR PARTS CATALOG	000000	000000
1887106841		'96 FRR PARTS CATALOG	000000	000000
1887106842		'97 FRR PARTS CATALOG	000000	000000
1887106843		'98 FRR PARTS CATALOG	000000	000000
1887106844		99 FRR PTS CATG(FINAL ED)	000000	000000
1887107013		FSR LHD PARTS CATALOG	000000	000001
1887107043		FVR (RHD) PARTS CATALOG	000000	000000
1887107162		FSS/FTS/RHD PARTS CATALOG	000000	000001
1887107310		'97 FSR/FTR/FVR PCN	000000	000000
1887107350		'97 FSR/FTR/FVR PCN	000000	000000
1887107380		'97 FSR/FTR/FVR PTS CAT	000000	000000
1887107381		'98 FSR/FTR/FVR PTS CAT	000000	000000
1887107382		'98.5 FSR/FTR/FVR PTS CAT	000000	000000
1887107383		'99 FSR/FTR/FVR PTS CAT	000000	000000
1887107384		2000 FS/FT/FV PARTS CATG	000000	000000
1887107385		2001 FS/FT/FV PARTS CATG	000000	000000
1887107386		2002 FS/FT/FV PARTS CATG	000000	000000
1887107387		2002 FS/FT/FV PARTS CATG	000000	000000
1887107660	1-8871 0766	6SD1 PARTS CATALOG	000000	000000
1887107661	1-8871 0766	6SD1 PARTS CATALOG	000000	000000
1887107662	1-8871 0766	6SD1 PARTS CATALOG	000000	000000
1887107664	1-8871 0766	6SD1 '88-'00 CATALOG	000000	000000
1887107665	1-8871 0766	6SD1 PARTS CATALOG	000000	000000
1887107666	1-8871 0766	6SD1 PARTS CATALOG	000000	000000
1887107667	1-8871 0766	6SD1 PARTS CATALOG	000000	000000
1887107668	1-8871 0766	2003 6SD1 PARTS CAT	000000	000000
1887107669	1-8871 0766	2004 6SD1 PARTS CAT	000000	000000
1887107670	1-8871 0767	6BD1 PARTS CATALOG	000000	000000
1887107671	1-8871 0767	6BD1 PARTS CATALOG	000000	000000
1887107672	1-8871 0767	6BD1 PARTS CATALOG	000000	000000

1887107673	1-8871	0767	6BD1 PARTS CATALOG	000000	000000
1887107674	1-8871	0767	6BD1 PARTS CATALOG	000000	000000
1887107680	1-8871	0768	6BG1 PARTS CATALOG	000000	000000
1887107681	1-8871	0768	6BG1 PARTS CATALOG	000000	000000
1887107683	1-8871	0768	6BG1 PARTS CATALOG	000000	000000
1887107684	1-8871	0768	6BG1 PARTS CATALOG	000000	000000
1887107686	1-8871	0768	6BG1 PARTS CATALOG	000000	000000
1887107687	1-8871	0768	6BG1 PARTS CATALOG	000000	000000
1887107688	1-8871	0768	6BG1 PARTS CATALOG	000000	000000
1887107689			2003 6BG1 PARTS CAT	000000	000000
1887107690			6RB1 PARTS CATALOG	000000	000000
1887107691	1-8871	0769	6RB1 PARTS CATALOG	000000	000000
1887107692	1-8871	0769	6RB1 PARTS CATALOG	000000	000000
1887107693	1-8871	0769	6RB1 PARTS CATALOG	000000	000000
1887107694	1-8871	0769	6RB1 PARTS CATALOG	000000	000000
1887107695	1-8871	0769	6RB1 PARTS CATALOG	000000	000000
1887107820			2000 FRR PRTS CAT.	000000	000000
1887107821			2001 FRR PARTS CATALOG	000000	000000
1887107822			2002 FRR PARTS CATALOG	000000	000000
1887107823			2003 FRR PARTS CATALOG	000000	000000
1887107824			2004 FRR PARTS CATALOG	000000	000000
1887107979			2008 UM6HE1 PTS CAT	000000	000000
1887108029			2008 UM6SD1 CATALOG	000000	000000
1887108220			6BD1 EXPORT PARTS CATALOG	000000	000000
1887108221	1-8871	0822	6BD1 EXPORT PARTS CATALOG	000000	000000
1887108222	1-8871	0822	6BD1 EXPORT PARTS CATALOG	000000	000000
1887108223	1-8871	0822	6BD1 EXPORT PARTS CATALOG	000000	000000
1887108551	1-8871	0855	'00 6HK1 ENGINE CATALOG	000000	000000
1887108552	1-8871	0855	'00 6HK1 ENGINE CATALOG	000000	000000
1887108554	1-8871	0855	'03 6HK1 ENGINE CATALOG	000000	000000
1887108555	1-8871	0855	'03 6HK1 ENGINE CATALOG	000000	000000
1887108556	1-8871	0855	'04 6HK1 ENGINE CATALOG	000000	000000
1887108557	1-8871	0855	2004 6HK1 PTS CATALOG	000000	000000
1887108558	1-8871	0855	'00-'06 6HK1 PTS CATALOG	000000	000000
1887108561	1-8871	0856	'00 6WG1 PARTS CATALOG	000000	000000
1887108562	1-8871	0856	'01 6WG1 PARTS CATALOG	000000	000000
1887108563	1-8871	0856	'01 6WG1 PARTS CATALOG	000000	000000
1887108564	1-8871	0856	'02 6WG1 PARTS CATALOG	000000	000000
1887108565	1-8871	0856	'03 6WG1 PARTS CATALOG	000000	000000
1887108566	1-8871	0856	'05 6WG1 PARTS CATALOG	000000	000000
1887108567	1-8871	0856	'00-'06 6WG1 PTS CATALOG	000000	000000
1887108568	1-8871	0856	'00-'06 6WG1 PTS CATALOG	000000	000000
1887108569	1-8871	0856	'00-'07 6WG1 PTS CATALOG	000000	000000
1887108841	1-8871	0884	REPAIR KIT; ENGINE O/H	000000	000000
1887109040			2004 FT/FV/FX PTS CATG	000000	000000
1887109060			2004 FT/FV/FX PTS CATG	000000	000000
1887109061			2004I FT/FV/FX PTS CATG	000000	000000

1887109064		2004I FT/FV/FX PTS CATG	000000	000000
1887109310		6BG1 (NA) PTS CATG	000000	000000
1887109311	1-8871 0931	2004 6BG1 (NA) PTS CATG	000000	000000
1887109313	1-8871 0931	2005 6BG1 (NA) PTS CATG	000000	000000
1887109314	1-8871 0931	85-05 6BG1 (N) PTS CATG	000000	000000
1887109315	1-8871 0931	'85-'06 6BG1 (N) PTS CATG	000000	000000
1887109316	1-8871 0931	'85-'06 6BG1 (N) PTS CATG	000000	000000
1887109317	1-8871 0931	'85-'07 6BG1 (N) PTS CATG	000000	000000
1887109318	1-8871 0931	'85-'07 6BG1 (N) PTS CATG	000000	000000
1887109319	1-8871 0931	'85-'08 6BG1 (N) PTS CATG	000000	000000
1887109320	1-8871 0932	6BG1 (T) PTS CATG	000000	000000
1887109321	1-8871 0932	6BG1 (T) PTS CATG	000000	000000
1887109322	1-8871 0932	6BG1 (T) PTS CATG	000000	000000
1887109324	1-8871 0932	2005 6BG1 (T) PTS CATG	000000	000000
1887109325	1-8871 0932	85-05 6BG1 (T) PTS CATG	000000	000000
1887109326	1-8871 0932	'85-'065 6BG1 (T) PTS CATG	000000	000000
1887109327	1-8871 0932	'85-'06 6BG1 (T) PTS CATG	000000	000000
1887109328	1-8871 0932	'85-'07 6BG1 (T) PTS CATG	000000	000000
1887109329	1-8871 0932	'85-'07 6BG1 (T) PTS CATG	000000	000000
1887110070	1-8871 1007	05 6HK1 COM.RAIL PTS CATG	000000	000000
1887110071	1-8871 1007	05-06 6HK1 COM RL PTS CAT	000000	000000
1887110072	1-8871 1007	05-06 6HK1 COM RL PTS CAT	000000	000000
1887110073	1-8871 1007	05-07 6HK1 COM RL PTS CAT	000000	000000
1887110074	1-8871 1007	05-07 6HK1 COM RL PTS CAT	000000	000000
1887110075	1-8871 1007	05-08 6HK1 COM RL PTS CAT	000000	000000
1887110076	1-8871 1007	05-08 6HK1 COM RL PTS CAT	000000	000000
1887110077	1-8871 1007	05-09 6HK1 COM RL PTS CAT	000000	000000
1887110078	1-8871 1007	05-09 6HK1 COM RL PTS CAT	000000	000000
1887110079		05-10 6HK1 COM RL PTS CAT	000000	000000
1887110080		05 6WG1 COM.RAIL PTS CATG	000000	000000
1887110081	1-8871 1008	05-06 6WG1 CM RL PTS CAT	000000	000000
1887110082	1-8871 1008	05-06 6WG1 PTS CAT	000000	000000
1887110083	1-8871 1008	05-07 6WG1 PTS CAT	000000	000000
1887110084	1-8871 1008	05-07 6WG1 PTS CAT	000000	000000
1887110085	1-8871 1008	05-08 6WG1 PTS CAT	000000	000000
1887110086	1-8871 1008	05-08 6WG1 COMMON RL CAT	000000	000000
1887110087	1-8871 1008	05-09 6WG1 COMMON RL CAT	000000	000000
1887110088	1-8871 1008	05-09 6WG1 COMMON RL CAT	000000	000000
1887110089		05-10 6WG1 COMMON RL CAT	000000	000000
1887110090		2005 6SD1 PARTS CAT	000000	000000
1887110091	1-8871 1009	2006 6SD1 PARTS CAT	000000	000000
1887110092	1-8871 1009	2007 6SD1 PARTS CAT	000000	000000
1887110093	1-8871 1009	1988-2009 6SD1 PTS CAT	000000	000000
1887110094		6SD1 PTS CATALOG	000000	000000
1887110095		88-10 6SD1 PTS CAT	000000	000000
1887110220		CYZ (RHD) PARTS CATALOG	000000	000000
1887110340		2006 6UZ1 PTS CATG	000000	000000

1887110341	1-8871	1034	2007 6UZ1 PTS CATG	000000	000000
1887110342	1-8871	1034	2007 6UZ1 PTS CATG	000000	000000
1887110343	1-8871	1034	2007 6UZ1 PTS CATG	000000	000000
1887110344	1-8871	1034	2006-2008 6UZ1 PTS CAT	000000	000000
1887110345	1-8871	1034	2006-2009 6UZ1 PTS CAT	000000	000000
1887110347			2006-2010 6UZ1 PTS CAT	000000	000000
1887110349			2005-2011 6UZ1 TIER 3	000000	000000
1887110891	1-8871	1089	2007 UM6HK1 PTS CAT	000000	000000
1887110892	1-8871	1089	2007-2008 UM6HK1 PTS CAT	000000	000000
1887110893	1-8871	1089	2007-2009 UM6HK1 PTS CAT	000000	000000
1887110894			2007-2010 UM6HK1 PTS CAT	000000	000000
1887110895			2007-2012 UM6HK1 PTS CAT	000000	000000
1887111012			FRR(RHD) EXC.SP	000000	000000
1887111080			99-07 UM6WG1 PTS CAT	000000	000000
1887111081	1-8871	1108	99-08 UM6WG1 PTS CAT	000000	000000
1887111082	1-8871	1108	99-08 UM6WG1 PTS CAT	000000	000000
1887111083			99-09 UM6WG1 PTS CAT	000000	000000
1887111085			99-10 UM6WG1 PTS CAT	000000	000000
1887111086			99-10 UM6WG1 PTS CAT	000000	000000
1887111087			99-12 UM6WG1 PTS CAT	000000	000000
1887111192			2007-2008 UM6HK1 COMMON R	000000	000000
1887111193			UM6HK1 (C/RAIL) PRTS CAT	000000	000000
1887111194			UM6HK1 (C/RAIL) PRTS CAT	000000	000000
1887111195			07-12 UM6HK1 (C/RAIL) CAT	000000	000000
1887111350			'00-'07 6HK1 PTS CATALOG	000000	000000
1887111351	1-8871	1135	'00-'08 6HK1 PTS CATALOG	000000	000000
1887111352	1-8871	1135	'00-'09 6HK1 PTS CATALOG	000000	000000
1887111353			'00-'10 6HK1 PTS CATALOG	000000	000000
1887111590			1993-2008 UM6BG1 PTS CAT	000000	000000
1887111591			1993-2009 UM6BG1 PTS CAT	000000	000000
1887111592			1993-2010 UM6BG1 PTS CAT	000000	000000
1887111593			1993-2012 UM6BG1 PTS CAT	000000	000000
1887111910			2008 UM6WG1 COMMON RL	000000	000000
1887111911			08-09 UM6WG1 COMMON RL	000000	000000
1887111913			08-12 UM6WG1 COMMON RL	000000	000000
1887111920			'00-'08 6WG1 PTS CATALOG	000000	000000
1887111921	1-8871	1192	'00-'09 6WG1 PTS CATALOG	000000	000000
1887111922			'00-'10 6WG1 PTS CATALOG	000000	000000
1887111930			'85-'09 6BG1(T) PTS CATG	000000	000000
1887111931	1-8871	1193	6BG1(T) PRTS CATALOG	000000	000000
1887111932			85-11 6BG1(T) PTS CAT	000000	000000
1887111934			85-11 6BG1(T) PTS CAT	000000	000000
1887112042			1995-2011 UM6HE1 PTS CAT	000000	000000
1887112530			6BG1(N) PRTS CATALOG	000000	000000
1887112531			85-10 6BG1(N) PTS CAT	000000	000000
1887112532			85-11 6BG1(N) PTS CAT	000000	000000
1887112991			10-11 6HK1 TIER 4	000000	000000

1887112994		10-12 6HK1 TIER 4	000000	000000
1887113000		2010 6WG1 TIER 4	000000	000000
1887113002		10-12 6WG1 TIER 4	000000	000000
1887113010		2010 6UZ1 TIER 4	000000	000000
1887113011		2010-20116UZ1 TIER 4	000000	000000
1887113310		05-10 6HK1 TIER 3	000000	000000
1887113311		05-10 6HK1 TIER 3	000000	000000
1887113320		05-10 6WG1 TIER 3	000000	000000
1887113321		05-10 6WG1 TIER 3	000000	000000
1887400022		VEHICLE REF CATALOG	000000	000000
1887400032	1-8874	0003 REPLACING PARTS & CEASED	000000	000000
1887400036	1-8874	0003 REPLACING PARTS & CEASED	000000	000000
1887400037	1-8874	0003 REPLACING PARTS & CEASED	000000	000000
1887400041	1-8874	0004 "ITC" PARTS BOOK	000000	000000
1887400042	1-8874	0004 "ITC" PARTS BOOK	000000	000000
1887400061		"ITC" PARTS BOOK	000000	000000
1887400062	1-8874	0006 "ITC" PARTS BOOK	000003	000000
1887512330		SUPERSEDED PARTS CATALOG	000000	000000
1887512450	1-8875	1245 "ITC" PARTS BOOK	000000	000000
1887512500	1-8875	1250 "ITC" PARTS BOOK	000000	000000
1887512631	1-8875	1263 "ITC" PARTS BOOK	000000	000000
1887512690	1-8875	1269 SUPERSEDED PARTS CATALOG	000000	000000
1891423020		ADAPTER	000000	000001
1891423041	1-8914	2304 PIPE; AIR CLEANER	000000	000000
1891541050	1-8915	4105 HOSE; TANK-FLTR	000000	000000
1891541061	1-8915	4106 FLEX; TUBE ASSY.	000000	000000
1892140131	1-8921	4013 RADIATOR ASM.	000000	000000
1892140151	1-8921	4015 RADIATOR ASM.	000000	000000
1892140251	1-8921	4025 RADIATOR ASM.;	000000	000000
1892140252	1-8921	4025 RADIATOR ASM.;	000000	000000
1892140261	1-8921	4026 RADIATOR ASM.	000000	000000
1892140262	1-8921	4026 RADIATOR ASM.	000000	000001
1892140271	1-8921	4027 RADIATOR ASM.	000000	000001
1892140401	1-8921	4040 RADIATOR ASM.	000000	000000
1892140550	1-8921	4055 RADIATOR KIT	000000	000000
1892140620	1-8921	4062 RADIATOR KIT	000000	000000
1892140630	1-8921	4063 RADIATOR ASM	000000	000000
1892143010	1-8921	4301 HOSE; UPPER	000000	000001
1892143021	1-8921	4302 HOSE; LOWER	000003	000000
1892143100	1-8921	4310 HOSE; RUBBER	000000	000000
1892143190	1-8921	4319 HOSE UPPER	000000	000000
1892143230	1-8921	4323 HOSE; LOWER	000000	000000
1892143420	1-8921	4342 HOSE; RUBBER, UPPER	000001	000000
1892143430	1-8921	4343 HOSE; RUBBER, LOWER	000000	000003
1892143480	1-8921	4348 HOSE; RADIATOR, UPPER	000000	000001
1892143490	1-8921	4349 HOSE; RADIATOR, LOWER	000000	000000
1892152010	1-8921	5201 BRACKET; RADIATOR	000000	000000

1892212041	1-8922	1204	PIPE; EXH., FLEX	000001	000000
1892212200	1-8922	1220	PIPE ASM.; EXHAUST	000000	000000
1892212210	1-8922	1221	PIPE ASM.; EXH., FLEX.	000000	000000
1892212220	1-8922	1222	PIPE; EXH.	000000	000000
1892214040	1-8922	1404	SILENCER; EXH.	000000	000000
1892214050	1-8922	1405	SILENCER ASM.; EXHAUST	000000	000000
1892214171	1-8922	1417	SILENCER; EXH	000000	000005
1892214181	1-8922	1418	SILENCER ASM.; EXHAUST	000000	000000
1892240011	1-8922	4001	TANK ASM.; FUEL	000000	000000
1892240130	1-8922	4013	TANK ASM;FUEL	000000	000000
1892255010	1-8922	5501	BRACKET ASM;FUE	000000	000000
1892255020	1-8922	5502	BAND ASM;FUEL T	000000	000000
1892255030	1-8922	5503	LINING	000000	000000
1892333031	1-8923	3303	BRACKET	000000	000000
1892633050	1-8926	3305	LEVER	000000	000000
1892633060	1-8926	3306	STUD;LEVER	000000	000000
1892633070	1-8926	3307	STUD;LEVER	000000	000000
1892634070	1-8926	3407	HOSE; FLEX	000000	000000
1892634071	1-8926	3407	HOSE; FLEX	000000	000001
1892635341	1-8926	3534	COVER; LOWER	000000	000000
1892635671	1-8926	3567	COVER; FRONT	000000	000000
1892635681	1-8926	3568	COVER; UPPER	000000	000000
1892635691	1-8926	3569	COVER; UPPER	000000	000000
1892635701	1-8926	3570	COVER; UPPER	000000	000000
1892635711	1-8926	3571	COVER; UPPER	000000	000000
1892635721	1-8926	3572	COVER; RR	000000	000000
1892635731	1-8926	3573	COVER ASM.; REAR	000000	000000
1892635751	1-8926	3575	COVER; LOWER	000000	000000
1892635761	1-8926	3576	DOOR; SIDE	000000	000000
1892636010	1-8926	3601	CUSHION	000000	000000
1892637141	1-8926	3714	PANEL; METER	000000	000000
1892637151	1-8926	3715	PANEL; RELAY	000000	000000
1893102110	1-8931	0211	DRUM ASM.	000000	000000
1893112020	1-8931	1202	PACKING	000000	000000
1893113090	1-8931	1309	CASE; BRG., POWER DRIVE	000000	000000
1893113091	1-8931	1309	CASE; BRG., POWER DRIVE	000000	000000
1893113110	1-8931	1311	COVER	000000	000000
1893134100	1-8931	3410	SHAFT CLUTCH SIFT FORK	000000	000000
1893800260	1-8938	0026	POWER DRIVE	000000	000000
1893800390	1-8938	0039	POWER DRIVE ASM.;	000000	000000
1893800391	1-8938	0039	POWER DRIVE ASM.;	000000	000000
1893800410	1-8938	0041	POWER DRIVE ASM	000000	000000
1893851080	1-8938	5108	SHAFT;POWER DRI	000000	000000
1898292110			CABLE; HARNESS	000000	000000
1899620909	1-8996	2090	LEVERT	000001	000000
1899620910	1-8996	2091	BRACKET	000002	000000
1899642867	1-8996	4286	SPRING;LEVER	000000	000007

1899977570		LOCK ASM; DOOR	000000	000000
1924WE1010	1924-WE-101	WORKSHOP MANUAL C240 (IN	000000	000000
1970728231		SEAL; OIL CR/SHF RR	000000	000000
2222222222Y		TEST PART	000000	000000
2222222222Z		I/C TEST PART	000000	000000
290D040000		METER; POTENTIO	000000	000000
2900000DR0		DISPLAY RACK	000004	000000
2900001020		DLR PTS P&P CD (SUV)	000000	000000
2900004000		TEST-DMAX PACKING LIST	000000	000000
2900004010		TEST-INTELLABAR PRINTER	000000	000000
2900004020		TEST-INTELLIBAR PRINTERHE	000000	000000
2900004030		TEST-12X8 1/2,3-PART MULT	000000	000000
2900004100		TEST-DMAX PICK LABEL	000000	000001
2900004200		TEST-PARTS PICK LABEL	000000	000000
2900004300		TEST-GENUINE PARTS LABEL	000000	000000
2900004400		TEST-PARTS PACKING LIST	000000	000000
2900004500		TEST-PTS RECEIVING TICKET	000000	000000
2900004600		TEST-PTS INV TAG PINK	000000	000000
2900004700		TEST-PTS INV TAG WHITE	000000	000000
2900004800		TEST-6400 NYLON PRINTER	000000	000000
2900005000		HAZARDOUS MATERIAL MANUAL	000000	000000
2900005100		SERIAL NUMBER CD	000000	000000
2900005101	2-9000 0510	SERIAL NUMBER CD	000000	000000
2900008040	2-9000 0804	NUT; TURBO MOUNTING	000000	000000
2900009100	2-9000 0910	HOSE; TURBO COUPLING	000006	000000
2900009200		"TOOLING FOR NC100"	000000	000000
29001E3000		TRANSM.CORE RTN POLYBAG	000000	000159
29001H8010	2-9001 H801	ISUZU DIESEL BG-PDC	000000	000026
2900100030		P&A DLR.RTN.REQ	000000	000000
2900100031		P&A DLR.RTN.REQUEST	008100	000000
2900102000	2-9001 0200	FORM;CORE RTN. (PSGR.)	000000	000000
2900104000	2-9001 0400	FORM; CORE RETURN	000000	000000
29003E0010	2-9003 E001	WELDMENT;RH SUPPORT	000000	000000
29003E0070	2-9003 E007	ISOLATOR	000000	000000
2900354000		P&A DLR.RTN.REQ	000000	000000
29004N0000	2-9004 N000	KEY SWITCH W/2 KEYS	000000	000002
29004N0010	2-9004 N001	SWITCH,RTY,3POS,C3 CONTRO	000000	000002
29004N0020	2-9004 N002	KIT;SERV,CONN,RCP,31SE	000000	000003
29004N0030	2-9004 N003	SVC POTENTIOMETER ASSY	000000	000000
29004N0040	2-9004 N004	KIT,SERV,CONN,PLG,31PE	000000	000003
29004N0050	2-9004 N005	SWITCH, RKR,SPDT,MOM, QD	000000	000003
29004N0060	2-9004 N006	KIT,SERV,ENC MOUNT,BRKT	000000	000002
29004N0070	2-9004 N007	KIT,SERV,PKG,DIODE	000000	000001
29004N0080	2-9004 N008	KIT,SERV,ENC,BLK,DLX	000000	000003
29004N0090	2-9004 N009	KIT,SERV,ENC,BLK,STD	000000	000002
29004N0100	2-9004 N010	KIT,SERV,ENC,REMOTE	000000	000003
29004N0110	2-9004 N011	KIT,SERV,PCB,12V	000000	000002

29004N0120	2-9004	N012	KIT, SERV, PCB, 24V	000000	000000
29004N0130	2-9004	N013	KIT, SERV, KEYS	000000	000009
29004N0140	2-9004	N014	SERV, ASSY, SHOCKMOUNTS	000041	000033
29004N0150	2-9004	N015	RELAY SERVICE KIT, 12V ISU	000000	000000
29004N0160	2-9004	N016	RELAY SERVICE KIT, 24V-IS	000000	000000
29004N0170	2-9004	N017	FLANGE; SHEET METAL	000000	000003
2900559000	2-9005	5900	ENGINE BLOCK HEATER ASSY	000022	000886
2900559050	2-9005	5905	OIL PAN HEATER KIT; PIO	000000	000000
2900559051	2-9005	5905	OIL PAN HEATER KIT; PIO	000000	000047
2900559070	2-9005	5907	OIL PAN HEATER	000038	000034
2900670030	2-9006	7003	PRIMER; RBR. SL. WND. QTR PNL	000000	000001
2900677000	2-9006	7700	TRANS. SEALER #8 (TB1281)	000043	000000
2900677100	2-9006	7710	SEALER; SIL. 3-BOND 1215	000019	000006
290067801T			SILICONE SEALANT	000000	000000
2900678010	2-9006	7801	SILICONE GASKET	000131	000099
2900940000			IPN CV N-SERIES MODULE	000000	000000
2900949020			IPN CV PP&P MODULE	000306	000000
2900949030			00 IPN BKLT SPECIAL ORDER	000000	000000
2900949040			00 PN BKLT TELE SKILLS	000000	000000
2900949400			ICS IPN BOOKLET - SUV	000000	000000
2900949500			ICS IPN BOOKLET- CV	000025	000000
2900949600			IPN PTS CAT MODULE SUV	000000	000000
2900949700			IPN PTS CAT MODULE-CV	000000	000000
2900949800			IPN SUV ACCSRY MKTG MDLE	000000	000000
2900949900			IPN SUV PP&P MODULE	000000	000000
2900959000			BINDER; PTS. CATG (3")	000012	000000
2901140000			P&A BULL. BINDER	000000	000000
2901230000			COVER; INJ CORE; NOZZLE TIP	000010	000000
2901230100			CVR; INJ CORE, H/PRESS LINE	000665	002270
2901230200			CVR; ING CORE, L/PRESS LINE	000787	002323
290123100C			CORE; INJ ASM; REMAN 4HK1	025826	000307
2901231000	2-9012	3100	REMAN NOZZLE ASM; INJECTOR	002509	000571
290123900D			ALT; REMAN	000000	000000
2901239000	2-9012	3900	ALT; REMAN	000015	000022
290146204C			CORE; ROD ASM; CONN	000000	000000
2901462040	2-9014	6204	ROD ASM; CONN	000000	000000
290146205C			CORE; ROD ASM; CONN	000000	000000
2901462050	2-9014	6205	ROD ASM; CONN	000000	000000
2901463262	2-9014	6326	92-98 REMAN WATER PUMP	000202	000079
2901842200			WARRANTY PARTS TAG	048875	000000
2901842210			LABEL; WARRANTY PTS RTN	009399	000019
2901843000			2004 ASCENDER CATG PAGES	000000	000000
2901845000			DPPM - INSERT ONLY	000000	000000
2901845050			OPEN & ENCLOSED P UNIT BK	000000	000000
2901845051	2-9018	4505	OPEN & ENCLOSED P UNIT BK	000000	000000
2901845060	2-9018	4506	OPEN & ENCLOSED P UNIT CD	000016	000000
2901849090			03 ACCY SRVC PTS GUIDE	000000	000000

2901849400			99 ARG SEVR PARTS INSERT	000000	000000
2901849440			ARG SERVICE PTS CATALOG	000000	000000
2901849450			ARG SVR PARTS CATG INSERT	000000	000000
2901849510	2-9018	4951	CORE TAG;SUV,CV,CANADA	027125	000000
2902211000			WORKSHOP MANUAL; C240 SER	000000	000000
2902211010			WORKSHOP MANUAL;DA SERIES	000000	000000
2902300000	2-9023	0000	2ND QTR SUPERSESSION CATG	000000	000000
2902485500	2-9024	8550	4BD1 MICROFICHE; IDNA	000000	000000
2902930000	2-9029	3000	2ND QTR SUPERSESSION CATG	000000	000000
2902930001	2-9029	3000	3RD QTR SUPERSESSION CATG	000000	000000
2902930002	2-9029	3000	4RD QTR SUPERSESSION CATG	000000	000000
2902930003	2-9029	3000	1ST QTR 01 SUPERSESN CATG	000000	000000
2902931300	2-9029	3130	2ND QTR 01 SUPERSESN CATG	000000	000000
2902931301	2-9029	3130	SUPERSESSION CATALOG	000000	000000
2902931302	2-9029	3130	SUPERSESSION CATALOG	000000	000000
2902931303	2-9029	3130	SUPERSESSION CATALOG	000000	000000
2902931304	2-9029	3130	SUPERSESSION CATALOG	000000	000000
2902931322			2003 SUV QRG	000000	000000
2902931323			2004 SUV QRG	000000	000000
2902931332			2003 CV QRG	000000	000000
2902931333			2004 CV QRG	000000	000000
2902934400	2-9029	3440	DISTRIBUTOR PRICE BOOK	000000	000000
2902934500	2-9029	3450	DEALER PRICE BOOK IDNA	000000	000000
2902934600	2-9029	3460	RETAIL PRICE BOOK IDNA	000000	000000
2902935000	2-9029	3500	SERIAL NUMBER BOOK	000000	000000
2902935001	2-9029	3500	SERIAL NUMBER BOOK	000000	000000
2902935030	2-9029	3503	'95 SUPERSESSION CATG.	000000	000000
2902935031	2-9029	3503	'95 SUPERSESSION CATG.	000000	000000
2902935050	2-9029	3505	OPEN & ENCLOSED P/U BOOK	000000	000000
2902935052	2-9029	3505	OPEN & ENCLOSED P/U BOOK	000000	000000
2902935060			MARINE PART LIST	000003	000000
2902935400	2-9029	3540	DISTRIBUTOR PRICE BOOK	000000	000000
2902935500	2-9029	3550	DEALER PRICE BOOK IDNA	000000	000000
2902935600	2-9029	3560	RETAIL PRICE BOOK IDNA	000000	000000
2902936030	2-9029	3603	'96 SUPERSESSION CATALOG	000000	000000
2902936031	2-9029	3603	'96 SUPERSESSION CATALOG	000000	000000
2902936400	2-9029	3640	DISTRIBUTOR PRICE BOOK	000000	000000
2902936500	2-9029	3650	DEALER PRICE BOOK AIMIE/C	000000	000000
2902936600	2-9029	3660	RETAIL PRICE BOOK AIMIE/C	000000	000000
2902936700			2" BINDER SPINE	000000	000000
2902937000	2-9029	3700	'97 SUPERSESSION CATALOG	000000	000000
2902938000	2-9029	3800	'98 SUPERSESSION CATALOG	000000	000000
2902938001	2-9029	3800	`99 SUPERSESSION CATALOG	000000	000000
2902939000	2-9029	3900	SUPERSESSION CATALOG	000001	000000
2902939001	2-9029	3900	SUPERSESSION CATALOG	000000	000000
2903311043	2-9033	1104	DA220 MICROFICHE	000000	000000
2903311797	2-9033	1179	3KR1 MICROFICHE	000000	000000

2903311830	2-9033	1183	4JA/JB/JC1 MICROFICHE	000000	000000
2903311838	2-9033	1183	4JB1 MICROFICHE	000000	000000
2903312457	2-9033	1245	3KC2 MICROFICHE	000000	000000
2903312466	2-9033	1246	4BG1 MICRO-FISCHE	000000	000000
2903312468	2-9033	1246	4BG1 DIESEL MICROFICHE	000000	000000
2903312469	2-9033	1246	4BG1 DIESEL MICROFICHE	000000	000000
2903312490	2-9033	1249	6RB1 MICROFICHE	000000	000000
2903312497	2-9033	1249	6RB1 MICROFICHE	000000	000000
2903312498	2-9033	1249	6RB1 MICROFICHE	000000	000000
2903312499	2-9033	1249	6RB1 MICROFICHE	000000	000000
2903312504	2-9033	1250	4BD1 MICROFICHE	000000	000000
2903312612	2-9033	1261	3LA1 MICROFICHE	000000	000000
2903312614	2-9033	1261	3LA1 MICROFICHE	000000	000000
2903312615	2-9033	1261	3LA1/B1/D1 MICROFICHE	000000	000000
2903312702	2-9033	1270	4JG2 MICROFICHE	000000	000000
2903312704	2-9033	1270	4JG2 MICROFICHE	000000	000000
2903312705	2-9033	1270	4JG2 MICROFICHE	000000	000000
2903312711	2-9033	1271	2KC1 MICROFICHE	000000	000000
2903312720	2-9033	1272	3KR1 MICROFICHE	000000	000000
2903312761	2-9033	1276	C240 MICROFICHE	000000	000000
2903312762	2-9033	1276	C240 MICROFICHE	000060	000000
2903312770	2-9033	1277	C240 (EXP) MICROFICHE	000000	000000
2903312772	2-9033	1277	C240 (EXP) MICROFICHE	000000	000000
2903312808	2-9033	1280	6SA1 MICROFICHE	000000	000000
2903312809	2-9033	1280	6SA1 MICROFICHE	000000	000000
2903312820	2-9033	1282	3KA1/3KB1/3KC1 MICROFICHE	000000	000000
2903312821	2-9033	1282	3KA1/3KB1/3KC1 MICROFICHE	000000	000000
2903312831	2-9033	1283	4BD1 (EXP) MICROFICHE	000000	000000
2903312832	2-9033	1283	4BD1 (EXP) MICROFICHE	000000	000000
2903312850	2-9033	1285	4BD1 MICROFICHE	000000	000000
2903312851	2-9033	1285	4BD1 MICROFICHE	000000	000000
2903312892	2-9033	1289	4LB1/C1/E1 MICROFICHE	000000	000000
2903312893	2-9033	1289	4LB1/LC1/LE1 MICRO-FICHE	000000	000000
2903312894	2-9033	1289	4LB1/LC1/LE1 MICRO-FICHE	000000	000000
2903312895	2-9033	1289	4LB1/LC1/LE1 MICRO-FICHE	000000	000000
2903312976	2-9033	1297	6BG1 MICROFICHE	000000	000000
2903312978	2-9033	1297	6BG1 DIESEL MICROFICHE	000000	000000
2903312979	2-9033	1297	6BG1 DIESEL MICROFICHE	000000	000000
2903313000	2-9033	1300	4JA1/JC1 MICROFICHE	000000	000000
2903313001	2-9033	1300	4JA1/JC1 MICROFICHE	000000	000000
2903313010	2-9033	1301	4JB1 MICROFICHE	000000	000000
2903313011	2-9033	1301	4JB1 MICROFICHE	000000	000000
2903313012	2-9033	1301	4JB1 MICROFICHE	000000	000000
2903313020	2-9033	1302	3LA1 / 3LB1 MICROFICHE	000000	000000
2903313021	2-9033	1302	3LA1 / 3LB1 MICROFICHE	000000	000000
2903313030	2-9033	1303	3LD1 MICROFICHE	000000	000000
2903313031	2-9033	1303	3LD1 MICROFICHE	000000	000000

2903313032	2-9033	1303	3LD1 MICROFICHE	000000	000000
2903313345	2-9033	1334	6SD1 MICROFICHE	000000	000000
2903313346	2-9033	1334	6SD1 MICROFICHE	000000	000000
2903313347	2-9033	1334	6SD1 MICROFICHE	000000	000000
2903313348	2-9033	1334	6SD1 MICROFICHE	000000	000000
2903313521	2-9033	1352	6BD1 MICROFICHE	000000	000000
2903313522	2-9033	1352	6BD1 DIESEL MICROFICHE	000000	000000
2903313523	2-9033	1352	6BD1 DIESEL MICROFICHE	000000	000000
2903313530	2-9033	1353	6BD1 (EXP) MICROFICHE	000000	000000
2903313532	2-9033	1353	6BD1 (EXP) MICROFICHE	000000	000000
2903313560	2-9033	1356	6BB1 MICROFICHE	000000	000000
2903313561	2-9033	1356	6BB1 MICROFICHE	000000	000000
2903313720	2-9033	1372	6RB1 MICROFICHE	000000	000000
2903313721	2-9033	1372	6RB1 MICROFICHE	000000	000000
2903313751	2-9033	1375	6BG1 DIESEL MICROFICHE	000000	000000
2903314000	2-9033	1400	6RB1 MICROFICHE	000000	000000
2903314010	2-9033	1401	6SA1 MICROFICHE	000000	000000
2903314020	2-9033	1402	6BG1 MICROFICHE	000000	000000
2903314030	2-9033	1403	6BD1 (EXP) MICROFICHE	000000	000000
2903314040	2-9033	1404	6SD1 MICROFICHE	000000	000000
2903314050	2-9033	1405	6BD1 MICROFICHE	000000	000000
2903314060	2-9033	1406	6BB1 MICROFICHE	000000	000000
2903314070			E120 MICROFICHE	000000	000000
2903314100			4BB1 MICROFICHE	000000	000000
2903314110	2-9033	1411	2KA/KB/KCI MICROFICHE	000002	000000
2903314120	2-9033	1412	3KR1 MICROFICHE	000000	000000
2903314130	2-9033	1413	4JA/JB/JCI MICROFICHE	000000	000000
2903314140	2-9033	1414	4BD1 (EXP) MICROFICHE	000000	000000
2903314150			3KA/KB/KC1 MICROFICHE	000000	000000
2903314160			C240 (EXP) MICROFICHE	000003	000000
2903314170	2-9033	1417	C240 MICROFICHE	000020	000000
2903314180	2-9033	1418	4BD1 MICROFICHE	000000	000000
2903314190			3AA/AB/AD1 MICROFICHE	000000	000000
2903314200			2AA/AB1 MICROFICHE	000000	000000
2903315700	2-9033	1570	SERIAL NUMBER MICROFICHE	000000	000000
2903317910	2-9033	1791	4BG1 MICROFICHE 89-97	000000	000000
2903412000			1995 IDNA COUNTERMAT	000000	000000
2903416200			96 AEOP COUNTERMATS	000000	000000
2903417200			'97 AEOP COUNTERMATS	000000	000000
2903417400			'98 ENGINE COUNTER MATS	000000	000000
2903709200	2-9037	0920	POWER TRAIN COUNTER MAT	000000	000000
2903902833	2-9039	0283	4BD1 EXPORT MICROFICHE	000000	000000
2903903533	2-9039	0353	6BD1 EXPT MICRFICHE 93-98	000000	000000
2903907660	2-9039	0766	6SD1 MICROFICHE	000000	000000
2903907661	2-9039	0766	6SD1 MICROFICHE	000000	000000
2903907662	2-9039	0766	6SD1 MICROFICHE 1999	000000	000000
2903907664			6SD1 MICROFICHE '88-'00	000000	000000

2903907665		6SD1 MICROFICHE '88-'01	000012	000000
2903907670		6BD1 MICROFICHE 92-98	000000	000000
2903907671	2-9039 0767	1999 6BD1 FICHE	000000	000000
2903907672	2-9039 0767	6BD1 MICRO FCH '92-'00	000016	000000
2903907680	2-9039 0768	6BG1 DIESEL MICROFICHE	000000	000000
2903907681	2-9039 0768	6BG1 DIESEL MICROFICHE	000000	000000
2903907683	2-9039 0768	6BG1 '85-'00 MICROFICHE	000000	000000
2903907684	2-9039 0768	6BG1 '85-'00 MICROFICHE	000022	000000
2903907690	2-9039 0769	6RB1 MICROFICHE 83-98	000000	000000
2903907691	2-9039 0769	6RB1 MICROFICHE 1999	000000	000000
2903907692	2-9039 0769	6RB1 MICROFICHE 1999	000016	000000
2903907911	2-9039 0791	4BG1 MICROFICHE 89-98	000000	000000
2903907913	2-9039 0791	4BG1 MICROFICHE 1999	000001	000000
2903907914	2-9039 0791	4BG1 MICROFICHE 2000	000000	000000
2903907915	2-9039 0791	4BG1 1989-2000 MICRO FICH	000000	000000
2903907916	2-9039 0791	4BG1 1989-2000 MICRO FICH	000032	000000
2903907917	2-9039 0791	4BG1 1989-2000 MICRO FICH	000200	000000
2903907920	2-9039 0792	3LA/LB1 MICROFICHE	000000	000000
2903907921	2-9039 0792	3LA/LB1 MICROFICHE	000000	000000
2903907922	2-9039 0792	3LA/3LB1 MICROFICHE 1999	000000	000000
2903907930		3LD1 MICROFICHE	000000	000000
2903907931	2-9039 0793	3LD1 MICROFICHE	000000	000000
2903907932		3LD1 MICROFICHE	000000	000000
2903907933		3LD1/3LD2 MICROFICHE 1999	000000	000000
2903907934		3LD1/3LD2 '92-'00 MICROFI	000000	000000
2903907935		3LD1/LD2 '92-'00 MICRO FI	000000	000000
2903907936	2-9039 0793	3LD1/LD2 '92-'00 MICRO FI	000032	000000
2903907940	2-9039 0794	4BD1 MICROFICHE	000000	000000
2903907941	2-9039 0794	1999 4BD1 MICROFICHE	000000	000000
2903907942		1999 4BD1 MICROFICHE	000012	000000
2903907950		4JA1/4JCI MICROFICHE	000000	000000
2903907952	2-9039 0795	'99 4JA1/4JC1 MICRO FICHE	000000	000000
2903907953	2-9039 0795	95-00 4JA1/4JC1 DSL ENG M	000012	000000
2903907960	2-9039 0796	4JB1 MICROFICHE	000000	000000
2903907961	2-9039 0796	4JB1 MICROFICHE	000000	000000
2903907962	2-9039 0796	4JB1 MICROFICHE 1999	000000	000000
2903907963	2-9039 0796	4JB1 MICROFICHE 1999	000016	000000
2903907964	2-9039 0796	4JB1 1995-2000 MICRO FICH	000009	000000
2903907966		4JB1 1995-2001 CATALOG	000200	000000
2903907970		4JG2 MICROFICHE	000000	000000
2903907971		4JG2 MICROFICHE	000000	000000
2903907972		4JG1/4JG2 MICROFICHE	000000	000000
2903907973		4JG1/4JG2 1999 MICROFICHE	000000	000000
2903907974		4JG1/4JG2 '93-00 MICROFIC	000009	000000
2903907980		4LB/LC/LE1 MICROFICHE	000000	000000
2903907982	2-9039 0798	4LB/LC/LE1 MICROFICHE '99	000000	000000
2903907983	2-9039 0798	4LB/LC/LE1 2000MICROFICHE	000000	000000

2903907984	2-9039	0798	4LB/LC/LE1'94-'00 MICRO F	000016	000000
2903907990	2-9039	0799	C240 MICROFICHE 92-98	000000	000000
2903907991	2-9039	0799	C240 MICROFICHE 1999	000000	000000
2903907992	2-9039	0799	C240 1992-2000 MICRO FICH	000016	000000
2903907993	2-9039	0799	C240 1992-2000 MICRO FICH	000200	000000
2903908220			'99 6BD1 XPORT MICROFICHE	000000	000000
2903908221			'99 6BD1 XPORT MICROFICHE	000012	000000
2903908440			3YA1/3YC1 MICROFICHE 95-98	000000	000000
2903908442	2-9039	0844	95-00 3YA1/YB1/YC1/YE1 MI	000016	000000
2903908451			2YA1 DSL MICRO FCH'91-'00	000012	000000
2903908511			UM4BD1 '93-'00 MICRO FICH	000009	000000
2903908521	2-9039	0852	UM4BG1 '89-'00 MICRO FICH	000009	000000
2903908541	2-9039	0854	UMC240 '93-'00 MICRO FICH	000009	000000
2903908551			6HK1 ENGINE,MICRO FICHE	000041	000000
2903908561			6WG1 ENGINE, MICRO FICHE	000000	000000
2903908562			6WG1 ENGINE, MICRO FICHE	000041	000000
2903908720			93-99 4BD1 (EXPORT) FICHE	000000	000000
2903908721	2-9039	0872	4BD1 (EXPT)'93-'00 MICRO F	000016	000000
2903908722	2-9039	0872	4BD1 (EXPT)'93-'00 MICRO F	000200	000000
2903908730			'99 C240 XPORT MICROFICHE	000000	000000
2903908750			'99 4BG1 XPORT MICROFICHE	000000	000000
2903909000			1999 4JA1/4JC1 FICHE	000000	000000
2903909100	2-9039	0910	C240 (EXPORT) FICHE	000003	000000
2903909200			2000 ARG SVR PARTS INSERT	000000	000000
2904119100			CO-OP CV RIMBSMNT FORM	000000	000000
2904230400	2-9042	3040	DIST PRICE LIST (ENGINE)	000000	000000
2904230410	2-9042	3041	DIST PRICE LIST (PT)	000000	000000
2904230500	2-9042	3050	DEALER PRICE LIST (ENG)	000000	000000
2904230510	2-9042	3051	DEALER PRICE LIST (PT)	000000	000082
2904230600	2-9042	3060	RETAIL PRICE LIST (ENG)	000000	000000
2904230610	2-9042	3061	RETAIL PRICE LIST (PT)	000000	000000
2904231400	2-9042	3140	DIST PRICE LIST (PT)	000000	000000
2904231410	2-9042	3141	DIST PRICE LIST (PT)	000000	000000
2904231420	2-9042	3142	DIST PRICE LIST (PT)	000000	000000
2904231500	2-9042	3150	DEALER PRICE LIST (PT)	000000	000000
2904231510	2-9042	3151	DEALER PRICE LIST (PT)	000000	000000
2904231520	2-9042	3152	DEALER PRICE LIST (PT)	000000	000000
2904231600	2-9042	3160	RETAIL PRICE LIST (PT)	000000	000000
2904231610	2-9042	3161	RETAIL PRICE LIST (PT)	000000	000000
2904231620	2-9042	3162	RETAIL PRICE LIST (PT)	000000	000000
2904232400	2-9042	3240	DIST PRICE LIST (PT)	000000	000000
2904232500	2-9042	3250	DEALER PRICE LIST (PT)	000000	000000
2904232600	2-9042	3260	RETAIL PRICE LIST (PT)	000000	000000
2904233400	2-9042	3340	DIST PRICE LIST (PT)	000000	000000
2904233410	2-9042	3341	DIST PRICE LIST (PT)	000000	000000
2904233500	2-9042	3350	DEALER PRICE LIST (PT)	000000	000000
2904233510	2-9042	3351	DEALER PRICE LIST (PT)	000000	000000

2904233600	2-9042	3360	RETAIL PRICE LIST (PT)	000000	000000
2904233610	2-9042	3361	RETAIL PRICE LIST (PT)	000000	000000
2904234400	2-9042	3440	DIST PRICE LIST (PT)	000000	000000
2904234410	2-9042	3441	DIST PRICE LIST (PT)	000000	000000
2904234500	2-9042	3450	DEALER PRICE LIST (PT)	000000	000000
2904234510	2-9042	3451	DEALER PRICE LIST (PT)	000000	000000
2904234600	2-9042	3460	RETAIL PRICE LIST (PT)	000000	000000
2904234610	2-9042	3461	RETAIL PRICE LIST (PT)	000000	000000
2904235400	2-9042	3540	DIST PRICE LIST (PT)	000000	000000
2904235410	2-9042	3541	DIST PRICE LIST (PT)	000000	000000
2904235500	2-9042	3550	DEALER PRICE LIST (PT)	000000	000048
2904235510	2-9042	3551	DEALER PRICE LIST (PT)	000000	000000
2904235600	2-9042	3560	RETAIL PRICE LIST (PT)	000000	000000
2904235610	2-9042	3561	RETAIL PRICE LIST (PT)	000000	000026
2904236400	2-9042	3640	DIST PRICE LIST (PT)	000000	000000
2904236401	2-9042	3640	DIST. PRICE LIST (ENG)	000000	000000
2904236410	2-9042	3641	DIST PRICE LIST (PT)	000000	000022
2904236500	2-9042	3650	DEALER PRICE LIST (PT)	000044	000000
2904236501	2-9042	3650	DEALER PRICE LIST (ENG)	000000	000000
2904236510	2-9042	3651	DEALER PRICE LIST (PT)	000000	000017
2904236600	2-9042	3660	RETAIL PRICE LIST (PT)	000000	000000
2904236601	2-9042	3660	RETAIL PRICE LIST (ENG)	000000	000000
2904236610	2-9042	3661	RETAIL PRICE LIST (PT)	000006	000000
2904237400	2-9042	3740	DIST. PRICE LIST (ENG)	000000	000000
2904237401	2-9042	3740	DIST. PRICE LIST (ENG)	000000	000000
2904237500	2-9042	3750	DEALER PRICE LIST (ENG)	000000	000000
2904237501	2-9042	3750	DEALER PRICE LIST (ENG)	000000	000067
2904237600	2-9042	3760	RETAIL PRICE LIST (ENG)	000000	000000
2904237601	2-9042	3760	RETAIL PRICE LIST (ENG)	000000	000000
2904237700	2-9042	3770	DIST PRICE LIST (PT)	000002	000000
2904237710	2-9042	3771	DIST PRICE LIST (PT)	000003	000002
2904237800	2-9042	3780	DEALER PRICE LIST (PT)	000010	000000
2904237810	2-9042	3781	DEALER PRICE LIST (PT)	000000	000031
2904237900	2-9042	3790	RETAIL PRICE LIST (PT)	000000	000000
2904237910	2-9042	3791	RETAIL PRICE LIST (PT)	000003	000002
2904238400	2-9042	3840	DIST PRICE LIST (ENG)	000000	000000
2904238410	2-9042	3841	DIST PRICE LIST (ENG)	000000	000000
2904238500	2-9042	3850	DEALER PRICE LIST (ENG)	000000	000000
2904238510	2-9042	3851	DEALER PRICE LIST (ENG)	000000	000000
2904238600	2-9042	3860	RETAIL PRICE LIST (ENG)	000000	000000
2904238610	2-9042	3861	RETAIL PRICE LIST (ENG)	000000	000000
2904238700	2-9042	3870	DIST PRICE LIST (PT)	000000	000007
2904238710	2-9042	3871	DIST PRICE LIST (PT)	000002	000000
2904238720	2-9042	3872	DIST PRICE LIST (PT)	000000	000000
2904238800	2-9042	3880	DEALER PRICE LIST (PT)	000000	000048
2904238810	2-9042	3881	DEALER PRICE LIST (PT)	000000	000017
2904238820	2-9042	3882	DEALER PRICE LIST (PT)	000017	000000

2904238900	2-9042	3890	RETAIL PRICE LIST (PT)	000000	000012
2904238910	2-9042	3891	RETAIL PRICE LIST (PT)	000002	000000
2904238920	2-9042	3892	RETAIL PRICE LIST (PT)	000003	000000
2904239400	2-9042	3940	DIST PRICE LIST (ENGINE)	000000	000000
2904239410	2-9042	3941	DIST PRICE LIST (ENGINE)	000000	000000
2904239500	2-9042	3950	DEALER PRICE LIST (ENG)	000000	000000
2904239510	2-9042	3951	DEALER PRICE LIST (ENG)	000000	000000
2904239600	2-9042	3960	RETAIL PRICE LIST (ENG)	000000	000000
2904239610	2-9042	3961	RETAIL PRICE LIST (ENG)	000000	000000
2904239700	2-9042	3970	DIST PRICE LIST (PT)	000000	000000
2904239710	2-9042	3971	DIST PRICE LIST (PT)	000000	000006
2904239800	2-9042	3980	DEALER PRICE LIST (PT)	000000	000008
2904239810	2-9042	3981	DEALER PRICE LIST (PT)	000000	000007
2904239900	2-9042	3990	RETAIL PRICE LIST (PT)	000000	000000
2904239910	2-9042	3991	RETAIL PRICE LIST (PT)	000007	000000
2905268100			PLAST.BAGS (CORE FORM&TAG)	000000	001943
2905269100			RED TAGS	000000	000000
2905313000			ATF PUMP	000000	000000
2905318010			CLEANER; BRAKE	000000	000000
2905318020			CLEANER; BRK NON-CHLORNTD	000000	000000
2905318030			CLEANER; CARBURETOR	000000	000000
2905318040			SILICONE LUBE, AEROSOL	000012	000000
2905318050			CLEANER; GLASS	000000	000000
2905318060			CLEANER;FUEL INJECTO RAIL	000012	000000
2905318070			CLEANER;FUEL INJECT FLUID	000024	000000
2905318080			CLEANER; TOP ENGINE	000036	000000
2905318090	2-9053	1809	COOLANT; ENGINE	000209	000000
2905318100			FLUID; BRAKE	000096	000000
2905318110			WINDSHIELD WASHER SOLVENT	000000	000000
2905318120			REFRIGERANT;R-12, 30LB	000000	000000
2905318130			REFRIGERANT; R-134A, 30LB	000000	000000
2905318140			FLUID; POWER STEERING	000000	000000
2905318150			DEXTRON ATF/PS FLD.-QT	000012	000000
2905318160			DEXTRON ATF - 5 GAL TUB	000000	000000
2905318700			WNDSHLD WASHER SOLV 32OZ	000048	000000
2905318800			ULTRALOW VOC BRK CLEANER	000000	000000
2905318801			ULTRALOW VOC BRK CLEANER	000000	000000
2905449000	2-9054	4900	SERIAL NUMBER CD ROM	000000	000000
2905549000			PLASTIC BAG;10X13 W/HOLES	000000	001998
290631001C			STARTER CORE; IDNA	000000	000000
290631002C			ALTERNATOR CORE; IDNA	000000	000000
290631004C			CORE; TURBO	000000	000000
2906546000	2-9065	4600	OIL FILTER; MAIN	000580	000690
2906546400	2-9065	4640	ELEMENTS FUEL FILTER	000000	000000
290654820D			FILTER; OIL	000000	000000
290654820T			FILTER; OIL	000000	000000
2906548200	2-9065	4820	FILTER; OIL	000480	000178

2906548300	2-9065	4830	FILTER; OIL	000000	000259
2906548400	2-9065	4840	FILTER; OIL	000000	000434
2906549000	2-9065	4900	FILTER; LUBE OIL	000000	000018
2906549100	2-9065	4910	FILTER; FUEL	000043	004428
290654930T			OIL FILTER	000000	000000
2906549300			OIL FILTER	000183	000231
2906549400	2-9065	4940	ELEMENT FUEL FILTER	003178	001206
2906549500	2-9065	4950	OIL;FILTER MAIN	000000	000007
2906549501	2-9065	4950	OIL;FILTER MAIN	000480	000405
2906675000	2-9066	7500	P & S MERCHANDISING	000000	000000
2906675100	2-9066	7510	P & S MERCHANDISING	000000	000000
2906678000	2-9066	7800	P&S MERCHANDISING CATALOG	000000	000000
2906678100	2-9066	7810	P&S MERCHNDSG ORDER FORMS	000000	000000
2906679100			PWRTRN MRCHNDNG FLYER	000000	000000
2906679200			PWRTRN MRCHNSG, FYR ORDR	000000	000000
2906808000			NECK ASM; RADIATOR FILLER	000000	000444
2906994000	2-9069	9400	6RB1 MICROFICHE	000000	000000
2906994010	2-9069	9401	6SA1 MICROFICHE	000000	000000
2906994020	2-9069	9402	6BG1 MICROFICHE	000000	000000
2906994030	2-9069	9403	6BD1 (EXP) MICROFICHE	000000	000000
2906994040	2-9069	9404	6SD1 MICROFICHE	000000	000000
2906994050	2-9069	9405	6BD1 MICROFICHE	000000	000000
2906994060	2-9069	9406	6BB1 MICROFICHE	000000	000000
2906994070	MF1-8871	0344	E120 MICROFICHE	000000	000000
2906994080	2-9069	9408	2AA/AB1 MICROFICHE	000000	000000
2906994090	2-9069	9409	3AA/AB/AD1 MICROFICHE	000000	000000
2906994100	2-9069	9410	4BB1 MICROFICHE	000000	000000
2906994110	2-9069	9411	2KA/KB/KC1 MICROFICHE	000000	000000
2906994120	2-9069	9412	3KR1 MICROFICHE	000000	000000
2906994130	2-9069	9413	4JA/JB/JC1 MICROFICHE	000000	000000
2906994140	2-9069	9414	4BD1 (EXP) MICROFICHE	000000	000000
2906994150	MF5-8871	0206	3KA/KB/KC1 MICROFICHE	000000	000000
2906994160	2-9069	9416	C240 (EXP) MICROFICHE	000000	000000
2906994170	2-9069	9417	C240 MICROFICHE	000000	000000
2906994180	2-9069	9418	4BD1 MICROFICHE	000000	000000
2906994190	MF5-8871	0255	3AA/AB/AD1 MICROFICHE	000000	000000
2906994200	2-9069	9420	2AA/AB1 MICROFICHE	000000	000000
2908750010			2010 1ST QTR EPC	000000	000000
2908750011			2010 2ND QTR EPC	000000	000000
2908750012			2010 3RD QTR EPC	000000	000000
2908750013			2010 4TH QTR EPC	000000	000000
2908750110			2011 1ST QTR CV EPC	000000	000000
2908750111			2011 2ND QTR CV EPC	000000	000000
2908750112			2011 3RD QTR CV EPC	000000	000000
2908750113			2011 4TH QTR CV EPC	000000	000000
2908750120			2012 1ST QTR CV EPC	000000	000000
2908752040			SPECIAL CV EPC CD	000000	000000

2908752050	SPECIAL SUV EPC CD	000000	000000
2908752140	CV ARCHIVE EPC CD	000000	000000
2908752150	SUV ARCHIVE EPC CD	000000	000000
2908753000	2003 SUV EPC CD	000000	000000
2908753001	2ND QTR 2003 SUV CD	000000	000000
2908753002	3RD QTR 2003 SUV CD	000000	000000
2908753003	4TH QTR SUV EPC CD	000000	000000
2908753010	2003 CV EPC CD	000000	000000
2908753011	2ND QTR 2003 CV CD	000000	000000
2908753012	3RD QTR 2003 CV CD	000000	000000
2908753013	4TH QTR CV EPC CD	000000	000000
2908754000	04 1ST QTR SUV EPC CD	000000	000000
2908754001	04 2ND QTR SUV EPC CD	000000	000000
2908754002	04 3RD QTR SUV EPC CD	000000	000000
2908754003	04 4TH QTR SUV EPC CD	000000	000000
2908754010	04 1ST QTR CV EPC CD	000000	000000
2908754011	04 2ND QTR CV EPC CD	000000	000000
2908754012	04 3RD QTR CV EPC CD	000000	000000
2908754013	04 4TH QTR CV EPC CD	000000	000000
2908755000	05 1ST QTR SUV EPC CD	000000	000000
2908755001	05 2ND QTR SUV EPC CD	000000	000000
2908755002	05 3RD QTR SUV EPC CD	000000	000000
2908755003	4TH QUARTER EPC CD	000000	000000
2908755010	05 1ST QTR CV EPC CD	000000	000000
2908755011	05 2ND QTR CV EPC CD	000000	000000
2908755012	05 3RD QTR CV EPC CD	000000	000000
2908755013	4TH QUARTER EPC CD	000000	000000
2908756000	06 1ST QTR SUV EPC CD	000000	000000
2908756001	06 2ND QTR SUV EPC CD	000000	000000
2908756002	06 3RD QTR SUV EPC CD	000000	000000
2908756003	06 4TH QTR SUV EPC CD	000000	000000
2908756010	06 1ST QTR CV EPC CD	000000	000000
2908756011	06 2ND QTR CV EPC CD	000000	000000
2908756012	06 3RD QTR CV EPC CD	000000	000000
2908756013	06 4TH QTR CV EPC CD	000000	000000
2908757000	1ST QTR 2007 SUV EPC	000000	000000
2908757001	2ND QTR 2007 SUV EPC	000000	000000
2908757002	3RD QTR 2007 SUV EPC	000000	000000
2908757003	4TH QTR 2007 SUV EPC	000001	000000
2908757010	07 1ST QTR CV EPC CD	000000	000000
2908757011	07 2ND QTR CV EPC CD	000000	000000
2908757012	07 3RD QTR CV EPC CD	000000	000000
2908757013	4TH QTR CV EPC CD	000000	000000
2908758000	2008 SUV EPC SUV EPC	000000	000000
2908758001	2008 2ND QTR SUV EPC	000000	000000
2908758002	2008 3RD QTR SUV EPC	000000	000000
2908758003	2008 4TH QTR SUV EPC	000000	000000

2908758010		2008 CV EPC	000000	000000
2908758011		2008 2ND QTR CV EPC	000000	000000
2908758012		2008 3RD QTR CV EPC	000000	000000
2908758013		2008 4TH QTR CV EPC	000000	000000
2908758020		2008 US/CAN ENG EPC	000000	000000
2908758021		2008 2ND QTR ENG EPC	000000	000000
2908758030		2008 CANADIAN EPC	000000	000000
2908758031		2008 2ND QTR CAN EPC	000000	000000
2908759000		2009 SUV EPC	000000	000000
2908759001		2009 SUV EPC - JULY	000000	000000
2908759002		2009 SUV EPC - JULY	000000	000000
2908759010		2009 CV EPC	000000	000000
2908759011		2009 CV EPC, 2ND QTR	000000	000000
2908759012		2009 CV EPC, 3RD QTR	000000	000000
2908759013		2009 CV EPC, 4TH QTR	000000	000000
2908880110		PARTS MASTER CD	000008	000000
2908880120		ISZA US DLR PTS MSTR FILE	000088	000000
2908880130		GM US PARTS MSTR FILE	000407	000000
2908880140		GM US DLR PRTS MSTR FILE	000300	000000
2908880150		GM CAN PARTS MSTR FILE	000456	000000
2908880160		GM CAN DLR PTS MSTR FILE	000288	000000
2908880170		ISZA CAN PARTS MASTR FILE	000408	000000
2908880180		ISZA CAN DLR PRTS MST FIL	000300	000000
2909991015	2-9099	9101 85 PF SHOP MAN	000000	000000
2909991022	2-9099	9102 82 KB SHOP MAN	000000	000000
2909991024	2-9099	9102 84 KB SHOP MANU	000000	000000
2909991025	2-9099	9102 85 KB SHOP MAN	000000	000000
2909991045	2-9099	9104 85KB83 SHOP MAN	000000	000000
2909991046	2-9099	9104 86 KT SHOP MAN	000000	000000
2909991047	2-9099	9104 '87 KT SHOP MAN	000000	000000
291009601C		CORE; TURBO (R) FSR/LT	000008	000000
291009601R		TURBO (R) FSR/LT	000000	000000
2910096010	2-9100	9601 TURBO (R) FSR/LT	000000	000006
291009804C		CORE; TURBO ASM, REMAN	000013	000000
291009804D		TURBO ASM, REMAN	000000	000000
291009804R		TURBO ASM, REMAN	000000	000000
2910098040	2-9100	9804 TURBO ASM, REMAN	000000	000000
291009806C		CORE; TURBO ASM, REMAN	000004	000000
291009806R		TURBO (R) FVR/EVR	000000	000000
2910098060	2-9100	9806 TURBO ASM, REMAN	000000	000027
291009900C		CORE; TURBO ASM, REMAN	000093	000000
291009900D		TURBO ASM, REMAN	000000	000000
291009900R		TURBO ASM, REMAN	000000	000000
2910099000	2-9100	9900 TURBO ASM, REMAN	000000	000000
2910099001	2-9100	9900 TURBO ASM, REMAN	000000	000006
291010601C		CORE; TURBO ASM, REMAN	000198	000000
291010601R		TURBO ASM, REMAN	000000	000000

2910106010	2-9101	0601	TURBO ASM, REMAN	000000	000006
2910135000	2-9101	3500	ENGINE BLOCK HEATER	000000	000165
2910135003	2-9101	3500	BLOCK HEATER KIT	000000	000000
291123001C			CORE;STARTER	000000	000000
291123003C			CORE;STARTER	000000	000000
291123005C			CORE;STARTER	000000	000000
291123007C			CORE;STARTER	000000	000000
2911234200			STARTER, REMAN	000026	000021
2911239500	2-9112	3950	ALT, REMAN W/O PUMP	000000	000000
291146324C			CORE; W/PUMP	000096	000001
2911463240	2-9114	6324	W/PUMP, REMAN	000000	000000
2911463241	2-9114	6324	W/PUMP; REMAN	000000	000007
291146325C			CORE; PUMP ASM, WATER	000456	000002
2911463250	2-9114	6325	W/PUMP, REMAN	000000	000000
2912559000	2-9125	5900	STARTER, REMAN	000000	000001
291255901C			CORE;STARTER	000000	000000
291255902C			CORE; STARTER	000887	000012
291255902D			STARTER, REMAN	000000	000000
2912559020	2-9125	5902	STARTER, REMAN	000058	000025
291255903C			CORE;STARTER	000000	000000
291255904C			CORE; STARTER	000001	000000
2912559040			STARTER ; REMAN	000000	000009
291255905C			CORE;STARTER	000000	000000
291255907C			CORE;STARTER	000000	000000
291255909C			CORE;STARTER	000000	000000
291255911C			CORE;STARTER	000000	000000
291255913C			CORE;STARTER	000000	000000
291255915C			CORE;STARTER	000000	000000
291255917C			CORE;STARTER	000000	000000
291255919C			CORE;STARTER	000000	000000
291255920C			CORE; ALTERNATOR	000062	000001
2912559200	2-9125	5920	ALT, REMAN	000000	000006
291255922C			CORE; ALTERNATOR	000089	000001
2912559220	2-9125	5922	ALT, REMAN	000000	000008
291255926C			CORE; ALTERNATOR	000003	000000
2912559260	2-9125	5926	ALT, REMAN	000000	000002
291255953C			CORE;STARTER	000000	000000
2912769160			ALT ;REMAN W/V PUMP	000000	000000
2912769180			ALT ;REMAN W/V PUMP	000000	000000
2912769220			ALT, REMAN W/V PUMP	000000	000000
291276924C			CORE: ALTW/VAC PUMP REMAN	000000	000000
2912769240			ALT, W/VAC PUMP REMAN	000000	000000
291276926C			CORE: STARTER ; REMAN	000003	000000
2912769260			STARTER ; REMAN	000001	000001
291276928C			CORE: STARTER ; REMAN	000000	000000
2912769280			STARTER ; REMAN	000001	000050
2930010080	2-9300	1008	BOLT; FRT COVER/QUAD BOX	000000	000000

2930010090	2-9300	1009	NUT;HNGER,BREATHR,CASE FR	000000	000000
2944566410	2-9445	6641	OIL FILTER ELEMENT	000000	005252
2961052200			CLAMP	000000	000000
3333333330			TESTPART	000000	000000
3333333331			TEST PART	000000	000000
3333333333			TEST PART	000011	000000
3333333334			TEST PART	000100	000000
3333333335			TEST PART	000000	000000
3333333336			TEST PN	000100	000000
3333333337			TEST PN	000000	000000
3333333339			TEST PART	000000	000000
4BCDWE2210	4BCD-WE-221		WORKSHOP MANUAL 4BC2	000000	000000
43320P0	43320-P		CRITICAL EXHAUST	000000	000000
43330P0	43330-P		CRITICAL EXHAUST	000000	000000
5019110250	5-0191	1025	BOLT;STRUT BAR LWR LINK	000000	000000
5090000040	5-0900	0004	BOLT 6BD1	000000	000000
5090000041	5-0900	0004	BOLT 6BD1	000000	000002
5090000050	5-0900	0005	BOLT	000000	000000
5090000051	5-0900	0005	B O L T	000000	000009
5090000060	5-0900	0006	BOLT	000000	000000
5090000061	5-0900	0006	BOLT:	000000	000000
5090000070	5-0900	0007	BOLT; OIL FILTER FIX	000000	000000
5090000071	5-0900	0007	BOLT; OIL FILTER FIX	000000	000054
5090000171	5-0900	0017	BOLT*	000000	000000
5090000181	5-0900	0018	BOLT; FLYWHEEL FIX	000001	000000
5090000310	5-0900	0031	BOLT,INL&EXH MA	000015	000000
5090000311	5-0900	0031	BOLT; OIL COOLER	000000	000000
5090000690	5-0900	0069	BOLT; CAM GEAR C240	000000	000011
5090000720	5-0900	0072	BOLT*	000000	000000
5090000770	5-0900	0077	BOLT; SHAFT	000000	000000
5090000840	5-0900	0084	BOLT; IDLE GEAR	000000	000000
5090000841	5-0900	0084	BOLT;GEAR CASE CVR,TO C/B	000000	000000
5090000850	5-0900	0085	BOLT; CASE	000000	000000
5090000860	5-0900	0086	BOLT;OIL PIPE	000000	000000
5090000870	5-0900	0087	BOLT,CRANK CASE	000000	000000
5090000880	5-0900	0088	BOLT; WATER PUMP TO C/BL	000000	000000
5090000890	5-0900	0089	BOLT; OIL PUMP P/S	000000	000000
5090000900	5-0900	0090	BOLT,FLY WHEEL	000020	000000
5090000940	5-0900	0094	BOLT; OIL FILTER	000003	000000
5090000950	5-0900	0095	BOLT; OIL FILTER C240	000000	000000
5090000951	5-0900	0095	BOLT; OIL FILTER C240	000000	000000
5090000960	5-0900	0096	BOLT;HEAD COVER	000000	000000
5090000961	5-0900	0096	BOLT;HEAD COVER	000000	000000
5090000970	5-0900	0097	BOLT; CRANK CASE	000000	000000
5090000971	5-0900	0097	BOLT; CRANK CASE	000000	000000
5090001240	5-0900	0124	BOLT;FLYWHEEL	000000	000006
5090001320	5-0900	0132	BOLT; PULLEY C240	000003	000000

5090001330	5-0900	0133	BOLT; BEARING CAP	000000	000000
5090001340	5-0900	0134	BOLT	000000	000000
5090001360	5-0900	0136	BOLT; HOLDER	000000	000000
5090001390	5-0900	0139	BOLT; FLY WHEEL FIX.	000000	000000
5090001420	5-0900	0142	BOLT;F/W!!DISCONTINUED!!	000000	000000
5090001461	5-0900	0146	BOLT, FLYWHEEL	000000	000000
5090001501	5-0900	0150	BOLT; CYL HEAD 3KR1	000000	000000
5090001503	5-0900	0150	BOLT; CYL HEAD 3KR1	000000	000019
5090001580	5-0900	0158	BOLT; SEMS,OIL	000000	000000
5090001680	5-0900	0168	BOLT; CHAMBER	000000	000000
5090001690	5-0900	0169	BOLT; OIL FILTER	000000	000000
5090001720	5-0900	0172	BOLT; 4BD1T	000000	000000
5090001770	5-0900	0177	BOLT	000000	000000
5090001970	5-0900	0197	BOLT;GENERATOR	000000	000000
5090001990	5-0900	0199	BOLT	000000	000000
5090002000	5-0900	0200	BOLT; FAN FIX. L=110	000000	000007
5090002100	5-0900	0210	BOLT;FRAME FIX.	000000	000000
5090002140	5-0900	0214	BOLT;TOP CASE	000000	000024
5090002200	5-0900	0220	BOLT; SEMS, FAN-PULLEY CE	000000	000000
5090002201	5-0900	0220	BOLT; SEMS, FAN-PULLEY CE	000000	000000
5090002220	5-0900	0222	BOLT, INJ PUMP	000000	000000
5090002221	5-0900	0222	BOLT; INJ PUMP	000000	000055
5090002270	5-0900	0227	BOLT,CYL.BODY	000000	000086
5090002280	5-0900	0228	BOLT;BRG COVER,{M8X78}	000000	000003
5090002281	5-0900	0228	BOLT;BRG COVER,{M8X78}	000000	000000
5090002300	5-0900	0230	BOLT (E)	000000	000000
5090002341	5-0900	0234	BOLT; ADAPTOR FIX	000000	000000
5090002360	5-0900	0236	BOLT;CAM GEAR	000000	000028
5090002380	5-0900	0238	BOLT (E)	000000	000000
5090002390	5-0900	0239	BOLT (R)	000000	000000
5090002400	5-0900	0240	BOLT	000000	000000
5090002410	5-0900	0241	BOLT	000000	000000
5090002420	5-0900	0242	BOLT; MANIF TO HD	000000	000000
5090002421	5-0900	0242	BOLT; MANIF TO HD	000000	000000
5090002430	5-0900	0243	BOLT; WATER PUMP TO C/BL	000000	000000
5090002431	5-0900	0243	BOLT; WATER PUMP TO C/BL	000000	000000
5090002440	5-0900	0244	BOLT; OIL PUMP P/S	000000	000000
5090002450	5-0900	0245	BOLT	000000	000000
5090002460	5-0900	0246	BOLT*	000000	000000
5090002631	5-0900	0263	BOLT; PULLEY	000000	000000
5090002680	5-0900	0268	BOLT OIL PAN FIX	000000	000000
5090002721	5-0900	0272	BOLT; PULLEY 3KC1	000000	000000
5090002731	5-0900	0273	BOLT; PULLEY	000000	000000
5090002732	5-0900	0273	BOLT; PULLEY	000000	000027
5090002760	5-0900	0276	BOLT; EXHAUST MANIFOLD FI	000000	000000
5090002770	5-0900	0277	BOLT; RR PLATE 4JA1	000000	000000
5090002790	5-0900	0279	BOLT	000000	000000

5090003420	5-0900	0342	CLIP; FUEL LINE	000000	000000
5090090170	5-0900	9017	BOLT,HEAD	000000	000000
5090090180	5-0900	9018	BOLT, HEAD	000000	000000
5090090212			CORE SUPPORT B.	000000	000000
5090090360	5-0900	9036	BOLT,CYL HEAD F	000000	000069
5090090370	5-0900	9037	BOLT,CYL HEAD	000000	000016
5090090500	5-0900	9050	BOLT; GEAR FIX	000000	000000
5090090530	5-0900	9053	BOLT; CYL HEAD FRONT	000000	000000
5090090540	5-0900	9054	BOLT; CYL HEAD FRONT	000000	000014
5090090600	5-0900	9060	BOLT; CYL HEAD TO BLOCK	000000	000000
5090090601	5-0900	9060	BOLT; CYL HEAD TO BLOCK	000000	000027
5090090620	5-0900	9062	BOLT; BLANCER SHAFT	000000	000000
5090200030	5-0902	0003	BOLT*	000000	000000
5090200060	5-0902	0006	BOLT;	000000	000000
5090200190	5-0902	0019	BOLT	000000	000000
5090300080	5-0903	0008	BOLT,SEMS SHAFT	000000	000000
5090300100	5-0903	0010	BOLT; SEM.TRANS	000000	000000
5090300101	5-0903	0010	BOLT; PULLEY TO CENTER	000000	000020
5090300120	5-0903	0012	BOLT,SEMS.THROT	000000	000000
5090300130	5-0903	0013	BOLT; EXH MANIFOLD	000000	000000
5090300131	5-0903	0013	BOLT;	000000	000117
5090300140	5-0903	0014	BOLT;VAC P	000000	000000
5090300150	5-0903	0015	BOLT; SEMS, GEAR	000000	000000
5090300151	5-0903	0015	BOLT; SEMS, GEAR	000000	000000
5090300200	5-0903	0020	BOLT;SEMS, ADAP	000000	000000
5090300201	5-0903	0020	BOLT;SEMS, ADAP	000000	000000
5090300210	5-0903	0021	BOLT; P/S BRKT	000000	000000
5090300230	5-0903	0023	BOLT,BRKT TO RR	000000	000000
5090300240	5-0903	0024	BOLT; TRANS	000000	000039
5090300241	5-0903	0024	BOLT; TRANS	000000	000000
5090300250	5-0903	0025	BOLT;A/C CMPR	000000	000000
5090300270	5-0903	0027	BOLT*	000000	000000
5090300280	5-0903	0028	BOLT;	000000	000000
5090300290	5-0903	0029	BOLT	000000	000000
5090300300	5-0903	0030	BOLT; CASE-BODY FIX.	000000	000000
5090300310	5-0903	0031	BOLT	000000	000000
5090300330	5-0903	0033	BOLT,SEMS FOOT	000000	000000
5090300350	5-0903	0035	B O L T	000000	000000
5090300351	5-0903	0035	B O L T	000000	000000
5090300361	5-0903	0036	BOLT;RR,WHEEL	000000	000020
5090300370	5-0903	0037	BOLT; GEAR CASE	000000	000000
5090300380	5-0903	0038	BOLT; COMPRESSOR	000000	000000
5090300381	5-0903	0038	BOLT; BRACKET	000001	000006
5090300410	5-0903	0041	BOLT; STAY FIX	000000	000000
5090300420	5-0903	0042	BOLT;OIL PUMP FIX	000000	000000
5090300421	5-0903	0042	BOLT;OIL PUMP FIX	000030	000050
5090300430	5-0903	0043	BOLT; INLET & E	000000	000000

5090300440	5-0903	0044	BOLT; SEMS, OIL PAN L=192	000000	000000
5090300450			BOLT;SEMS	000000	000000
5090300451			BOLT;GEAR CASE	000000	000000
5090300491			BOLT; SEMS,CASE	000000	000759
5090400150	5-0904	0015	BOLT; REAMER C240	000000	000000
5090440031	5-0904	4003	BOLT 2KC1	000000	000000
5090440042	5-0904	4004	BOLT; OIL PUMP FIX 3KC1	000000	000000
5090520050	5-0905	2005	BOLT; TAPPET	000000	000000
5090520080	5-0905	2008	BOLT;HEAD COVER	000000	000000
5090540010	5-0905	4001	BOLT; FLYWHEEL 14MM SOCKE	000013	000000
5090540020	5-0905	4002	BOLT; FLYWHEEL	000000	000009
5090540130	5-0905	4013	NIPPLE;INJ PUMP	000000	000000
5090590010	5-0905	9001	BOLT,RADIATOR T	000000	000000
5090700010	5-0907	0001	BOLT; BEARING CAP FIX	000000	000000
5090700031	5-0907	0003	BOLT; MAIN BRG CAP 2/3KC1	000000	000000
5090700061	5-0907	0006	BOLT; FLYWHEEL 3KC1/3KR1	000000	000000
5090700073	5-0907	0007	BOLT; CYL HEAD 3KC1	000000	000000
5091200120	5-0912	0012	SCREW SET; IDLE SPRING 3K	000001	000000
5091200141	5-0912	0014	SCREW SET; IDLE 2KC1	000000	000000
5091200142	5-0912	0014	SCREW SET;IDLE 2KC1/3KR1	000000	000000
5091200151	5-0912	0015	SCREW SET 3KC1	000000	000026
5093000190	5-0930	0019	STUD; ENGINE SUPPORT	000000	000000
5093000200	5-0930	0020	STUD; ENGINE SUPPORT	000000	000000
5093000221	5-0930	0022	STUD; FLYWHEEL HSG. 6BD1	000000	000000
5093000231	5-0930	0023	STUD; FLYWHEEL HOUSING	000027	000000
5093000290	5-0930	0029	STUD; ENG FOOT (RH)	000000	000000
5093000360	5-0930	0036	STUD,TRANS.CASE	000000	000000
5093000500	5-0930	0050	STUD; TRANSFER	000000	000020
5093000530	5-0930	0053	STUD; WATER PUMP TO BLOCK	000000	000000
5093000541	5-0930	0054	STUD; GUIDE CHAIN	000000	000000
5093000580	5-0930	0058	STUD;EXH.PIPE F	000000	000000
5093000620	5-0930	0062	STUD; CASE COVER	000000	000000
5093000650	5-0930	0065	STUD; ROCKER AR	000000	000129
5093000670	5-0930	0067	STUD; COVER	000004	000000
5093000681	5-0930	0068	STUD: EXH MANIFOLD	000000	000000
5093000690	5-0930	0069	STUD; TURBO EXHAUST	000030	000000
5093000710	5-0930	0071	STUD; EXHAUST MANIFOLD 3K	000008	000000
5093000711	5-0930	0071	STUD; EXHAUST MANIFOLD 3K	000000	000000
5093009341	5-0930	0934	HOSE; RUBBER	000000	000000
5093020010	5-0930	2001	STUD; EXHAUST MANIFOLD	000001	000003
5093020020	5-0930	2002	STUD,EXH.PIPE T	000000	000081
5093020030	5-0930	2003	STUD; BEARING COVER	000000	000016
5093020040	5-0930	2004	STUD; EXHAUST MANIFOLD FI	000000	000000
5093020070	5-0930	2007	STUD; EXHAUST MANIFOLD	000000	000000
5093020080	5-0930	2008	STUD; EXH MANIFO	000000	000000
5093020081	5-0930	2008	STUD; EXH MANIFO	000000	000000
5093020100	5-0930	2010	STUD; CYL BLOCK REAR	000000	000000

5093020110	5-0930	2011	STUD;QUAD. BOX	000000	000017
5093030021	5-0930	3002	STUD; EXHAUST PIPE	000000	000084
5093030040	5-0930	3004	STUD; EXHAUST MANIFOLD FI	000004	000000
5093030051	5-0930	3005	STUD	000000	000006
5093030150	5-0930	3015	STUD;RR.PLATE FIX.	000000	000000
5093300030	5-0933	0003	CAP;OIL FILLER	000000	000000
5093320120	5-0933	2012	BOOT;SLAVE CYL.	000000	000009
5093330350	5-0933	3035	GROMMET 6BG1	000000	000000
5093600531	5-0936	0053	HOSE; RUBBER, FUEL L=100	000000	000000
5093601301	5-0936	0130	HOSE; RUBBER L=200	000000	000000
5093601340	5-0936	0134	HOSE, RUBBER, BRE	000000	000000
5093602500	5-0936	0250	HOSE; RUBBER	000000	000000
5093603120	5-0936	0312	HOSE; RUBBER, INJ. PUMP	000000	000000
5093603200	5-0936	0320	SUPERSEDED**RUBBER HOSE	000000	000000
5093603210	5-0936	0321	HOSE; RUBBER, AIR 6GB1	000000	000000
5093603610	5-0936	0361	HOSE; RUBBER AIR BREATHER	000000	000000
5093603620	5-0936	0362	HOSE; RUBBER AIR BREATHER	000000	000000
5093604570	5-0936	0457	HOSE; RUBBER	000000	000000
5093605790	5-0936	0579	HOSE, RUBBER, FUE L660	000000	000000
5093605810	5-0936	0581	HOSE; RUBBER, VAC PUMP	000000	000000
5093606211	5-0936	0621	HOSE; RUBBER	000000	000000
5093606370	5-0936	0637	HOSE; RUBBER L=270	000000	000000
5093607210	5-0936	0721	HOSE; RUBBER (L=550)	000000	000000
5093607280	5-0936	0728	HOSE; RUBBER, AIR BREATHE	000000	000000
5093607731	5-0936	0773	SUPERSEDED**HOSE	000000	000000
5093607950	5-0936	0795	HOSE; RADIATOR	000000	000000
5093608170	5-0936	0817	SUPERSEDED**HOSE	000000	000000
5093608180	5-0936	0818	SUPERSEDED**HOSE	000000	000000
5093608190	5-0936	0819	SUPERSEDED**HOSE	000000	000000
5093608221	5-0936	0822	HOSE; RUBBER	000001	000000
5093608430	5-0936	0843	HOSE; RUBBER	000000	000000
5093608460	5-0936	0846	HOSE; DUCT	000000	000002
5093608820	5-0936	0882	PIPE; VINYL, (L=800)	000000	000001
5093608912	5-0936	0891	HOSE; RUBBER WATER DRAIN	000000	000000
5093609110	5-0936	0911	PIPE; VINYL	000000	000000
5093609260	5-0936	0926	RUBBER SLEEVE	000000	000000
5093609261	5-0936	0926	RUBBER SLEEVE	000000	000000
5093609262	5-0936	0926	SLEEVE; RUBBER, HARNESS	000000	000000
5093609270	5-0936	0927	HOSE; RUBBER	000000	000004
5093609341	5-0936	0934	HOSE, RUBBER, CON	000000	000000
5093609350	5-0936	0935	HOSE; RUBBER	000000	000000
5093609601	5-0936	0960	HOSE; RUBBER, OIL DRAIN 4	000000	000000
5093609780	5-0936	0978	HOSE; BREATHER	000000	000011
5093609801	5-0936	0980	HOSE; RUBBER, TURBO OUTLET	000000	000000
5093609870	5-0936	0987	HOSE; RUBBER	000000	000001
5093609881	5-0936	0988	HOSE; RUBBER	000000	000009
5093609890	5-0936	0989	HOSE; RUBBER	000003	000000

5093609900	5-0936	0990	HOSE; RUBBER	000011	000000
5093609990	5-0936	0999	HOSE; RUBBER	000000	000000
5093610040	5-0936	1004	HOSE;BREATHER	000000	000000
5093610240	5-0936	1024	HOSE,RUBBER BY-	000000	000006
5093610420	5-0936	1042	PIPE ASM.;FUEL	000000	000000
5093610450	5-0936	1045	HOSE; RUBBER, SEA WATER	000000	000000
5093610460	5-0936	1046	HOSE; RUBBER, L=1500	000000	000000
5093610470	5-0936	1047	HOSE: RUBBER, SEA WTR	000000	000000
5093610590	5-0936	1059	HOSE;RUBBER,BRE	000000	000000
5093610591	5-0936	1059	HOSE;RUBBER,BRE	000000	000000
5093610700	5-0936	1070	HOSE; RUBBER BY-PASS	000000	000033
5093610730	5-0936	1073	HOSE;VAC,PUMP	000001	000001
5093610811	5-0936	1081	HOSE:RUBBER, TURBO	000000	000001
5093610851	5-0936	1085	HOSE; RUBBER, VENTILATOR	000000	000000
5093611120	5-0936	1112	HOSE;RUBBER,BREATHER	000000	000000
5093611280	5-0936	1128	HOSE	000000	000000
5093611330	5-0936	1133	HOSE;RUBBER L=3050	000000	000000
5093611381	5-0936	1138	HOSE; RUBBER	000000	000000
5093611390	5-0936	1139	FUEL HOSE SERVE	000000	000000
5093611391	5-0936	1139	FUEL HOSE SERVE	000000	000000
5093611410	5-0936	1141	HOSE;BREATHER	000000	000000
5093611440	5-0936	1144	HOSE; RUBBER	000000	000009
5093611490	5-0936	1149	HOSE; RUBBER	000000	000000
5093611491	5-0936	1149	HOSE; RUBBER	000002	000000
5093611520	5-0936	1152	HOSE; WATER HOUSING	000000	000002
5093611670	5-0936	1167	HOSE; RUBBER 2AB1	000000	000003
5093611680	5-0936	1168	ELBOW; AIR CLEANER 3KC/3K	000000	000000
5093611691	5-0936	1169	HOSE; FUEL	000000	000000
5093611700	5-0936	1170	HOSE CONNECTOR	000002	000000
5093630021	5-0936	3002	TUBE; FLEXIBLE BREATHER	000003	000000
5093630030	5-0936	3003	HOSE;RUBBER	000000	000007
5093640240			FLEX HOSE	000000	000000
5093640340			HOSE; FLEXIBLE, FRT.	000000	000000
5093640963			HOSE; FLEX,CLU CONT	000000	000000
5093641040			HOSE; FLEX RR, BR.	000000	000000
5093641071			HOSE; FLEX FRT.	000000	000000
5093660210	5-0936	6021	HOSE;BREATHER	000000	000000
5093660212	5-0936	6021	HOSE;BREATHER	000000	000000
5093660260	5-0936	6026	PIPE;VINYL, (14X12X105)	000000	000000
5093660310	5-0936	6031	HOSE; VINYL BREATHER	000000	000000
5093660320	5-0936	6032	VINYL PIPE	000000	000000
5093660360	5-0936	6036	HOSE; VINYL BREATHER	000005	000000
5093660370	5-0936	6037	PIPE; VINYL,DRAIN	000000	000000
5093660390	5-0936	6039	PIPE; VINYL BREATHER 3KC1	000000	000000
5094000250	5-0940	0025	NUT; STARTER CORE	000000	000000
5094000280	5-0940	0028	NUT;FLANGE,ELEM	000000	000022
5094000400	5-0940	0040	NUT;KNOB,LVR	000000	000013

5094000420	5-0940	0042	N U T	000080	000000
5094000430	5-0940	0043	NUT,STARTER	000000	000000
5094000460	5-0940	0046	NUT; CRANK SHAFT, PULLEY	000002	000000
5094000480	5-0940	0048	NUT; HEX HEAD	000000	000005
5094000530	5-0940	0053	NUT; HEX HEAD	000002	000000
5094090160	5-0940	9016	NUT,CONNECTING	000000	000000
5094090181	5-0940	9018	NUT,OUTPUT SHAF	000000	000000
5094090260	5-0940	9026	NUT; SET SCREW	000001	000000
5094090261	5-0940	9026	NUT; SET SCREW	000000	000000
5094200020	5-0942	0002	NUT**	000000	000000
5094400040			NUT;WIPER MOTOR/OIL PAN	000006	000574
5094400050	5-0944	0005	NUT;BACK BAR/INLET MANIF	000000	000000
5094400060	5-0944	0006	NUT;RR.BMPR/BRKT,BTRY CBL	000342	000745
5094400100	5-0944	0010	NUT,UPPER LINK	000000	000000
5094420020	5-0944	2002	NUT,MAIN SHF.	000002	000000
5094420050	5-0944	2005	NUT**	000000	000000
5094490140	5-0944	9014	NUT,MAIN SHAFT	000000	000000
5094490141	5-0944	9014	NUT,MAIN SHAFT	000000	000000
5095000070	5-0950	0007	WASHER,LK,FILLR	000000	000018
5095000120	5-0950	0012	WASHER; EXH VLV	000526	001288
5095000130	5-0950	0013	WASHER;EXH.PIPE	000039	000064
5095000160	5-0950	0016	WASHER;SPR	000000	000000
5095030030	5-0950	3003	WASHER; LOCK	000000	000000
5095030200	5-0950	3020	WASHER,PL., FUSE	000000	000000
5095030240	5-0950	3024	WASHER;CRANK.PU	000000	000016
5095030310	5-0950	3031	WASHER; OIL PAN FIX	000000	000000
5095030320	5-0950	3032	WASHER	000000	000000
5095030390	5-0950	3039	WASHER;PL.	000000	000000
5095030450	5-0950	3045	WASHER; STARTER (DISCONTI	000000	000000
5095030460	5-0950	3046	WASHER; INSULATE	000010	000000
5095030480	5-0950	3048	WASHER;SPEED	000000	000000
5095030630	5-0950	3063	WASHER;PLAIN	000000	000000
5095030640	5-0950	3064	WASHER	000000	000000
5095030700	5-0950	3070	WASHER	000000	000000
5095030720	5-0950	3072	WASHER;ELEMENT	000000	000033
5095030760	5-0950	3076	PLATE;	000000	000000
5095030820	5-0950	3082	WASHER; THRUST	000010	000000
5095030900	5-0950	3090	WASHER; CRANKSHAFT	000000	000000
5095030990	5-0950	3099	WASHER; WATER P	000000	000067
5095031011	5-0950	3101	WASHER; CRANK SHAFT PULLE	000000	000000
5095031030	5-0950	3103	WASHER; TIMING GEAR	000000	000000
5095031110	5-0950	3111	WASHER; PLAIN, BRACKET 6R	000000	000058
5095031120	5-0950	3112	WASHER; DRIVE	000000	000000
5095031130	5-0950	3113	SUPERSEDED**SHIM	000000	000000
5095031140	5-0950	3114	SUPERSEDED**SHIM	000000	000000
5095031171	5-0950	3117	PIECE;DISTANCE	000000	000000
5095031181	5-0950	3118	SPACER; REAR 2KC1	000000	000028

5095031230	5-0950	3123	WASHER; THRUST	000000	000000
5095031241	5-0950	3124	WASHER; THRUST	000000	000000
5095031250	5-0950	3125	WASHER; THRUST IDLE	000000	000050
5095031260	5-0950	3126	PLATE 2KC1	000001	000000
5095031270	5-0950	3127	WASHER; CRANK BOLT	000000	001090
5095031271	5-0950	3127	WASHER; CRANK BOLT	000000	000000
5095031280	5-0950	3128	SPACER; FRONT 2KC1	000000	000183
5095031290	5-0950	3129	SUPERSEDED**SHIM	000000	000000
5095031300	5-0950	3130	SUPERSEDED**SHIM	000000	000000
5095031310	5-0950	3131	SUPERSEDED**SHIM	000000	000000
5095031320	5-0950	3132	PACKING; SCREW 2KC1	000000	000000
5095031321	5-0950	3132	PACKING; SCREW 2KC1	000000	000006
5095031331	5-0950	3133	PACKING; SCREW SET 2KC1	000000	000000
5095031350	5-0950	3135	WASHER; STOP LVR	000000	000021
5095031360	5-0950	3136	SPACER; GUIDE TUBE FIX.	000005	000000
5095090010	5-0950	9001	WASHER; CURVED, SELECT CONT	000000	000059
5095090011	5-0950	9001	WASHER; PRK BRK	000000	000000
5095090090	5-0950	9009	WASHER, SEAL, VAL	000000	000012
5095320010	5-0953	2001	WASHER; LOCK	000020	000000
5095330040	5-0953	3004	WASHER, LK, MAIN	000000	000036
5095330070	5-0953	3007	WASHER; OIL PUMP/SHAFT	000000	000006
5095390020	5-0953	9002	WASHER; LOCK	000001	000000
5095390040	5-0953	9004	PLATE; LOCK	000000	000000
5095633340	5-0956	3334	GASKET; SENSOR TO CASE	000000	000000
5095800010	5-0958	0001	SPRING; COIL	000000	000000
5095800200	5-0958	0020	SPRING; ROCKER	000000	000000
5095800430	5-0958	0043	SPRING	000000	000000
5095800810	5-0958	0081	SPRING, DETENT, B	000002	000002
5095800920	5-0958	0092	SPRING; BYPASS VALVE	000000	000014
5095800980	5-0958	0098	SPRING; COIL REL	000000	000086
5095801050	5-0958	0105	SPRING; INLET M	000000	000000
5095801051			SPRING; INLET M	000000	000007
5095801080	5-0958	0108	SPRING: SECONDARY	000000	000000
5095830200			SPRING, SHIFT FO	000000	000056
5095830401			SPRING; RETURN	000000	000021
5095830410	5-0958	3041	SPRING; INTAKE SHUTTER	000000	000000
5095830810	5-0958	3081	SPRING; SHUTTER	000000	000000
5095830910	5-0958	3091	SPRING; SHUTTER RETURN	000000	000000
5095830950	5-0958	3095	SPRING; RETURN	000000	000000
5095830990	5-0958	3099	SPRING; RETURN	000000	000000
5095831000	5-0958	3100	SPRING, ROCKER A	000000	000000
5095831020	5-0958	3102	SPRING; RETURN	000000	000000
5095831050	5-0958	3105	SPRING; INTAKE SHUTTER	000012	000000
5095831090	5-0958	3109	SPRING, VALVE	000000	000000
5095850150	5-0958	5015	SPRING; THROTTLE	000000	000000
5095850391	5-0958	5039	SPRING	000000	000000
5095850410	5-0958	5041	SPRING; THROTTLE	000000	000000

5095850420	5-0958	5042	WASHER;WAVE	000000	000000
5095850520	5-0958	5052	SPRING; INT SHUTTER RET	000000	000000
5095860100	5-0958	6010	SPRING; OIL PUMP	000000	000020
5095860110	5-0958	6011	SPRING; OIL PUMP	000000	000006
5095870010	5-0958	7001	RING,SNAP,PISTO	000000	000056
5095870030	5-0958	7003	RING; SNAP,PISTON PIN	000000	000000
5095870031	5-0958	7003	RING; SNAP,PISTON PIN	000000	000000
5095870100	5-0958	7010	SNAP RING	000000	000000
5095880190	5-0958	8019	RING,SNAP.	000000	000000
5095880200	5-0958	8020	RING;SNAP H=1.5	000000	000000
5095880201	5-0958	8020	RING;SNAP H=1.5	000023	000000
5095880210	5-0958	8021	RING;SNAP H=1.5	000000	000000
5095880211	5-0958	8021	RING;SNAP H=1.5	000011	000008
5095880220			RING;SNAP H=1.6	000000	000000
5095880221			RING;SNAP H=1.6	000000	000000
5095880230	5-0958	8023	RING;SNAP H=1.6	000000	000000
5095880231	5-0958	8023	RING;SNAP H=1.6	000011	000031
5095880270	5-0958	8027	RING; SNAP OIL PUMP MARIN	000000	000000
5095880340	5-0958	8034	RING; SNAP, OIL PUMP	000000	000006
5095880350	5-0958	8035	RING; SNAP, OIL	000000	000038
5095880370	5-0958	8037	RING; E-TYPE	000000	000000
5095890040	5-0958	9004	RING,SNAP,CSTR	000001	000000
5095890050	5-0958	9005	RING,SNAP,MAIN	000000	000000
5095890090	5-0958	9009	SNAP RING; BRG TO TOP GR	000000	000022
5095890100	5-0958	9010	SNAP RING;GEAR	000000	000018
5095890110	5-0958	9011	RING,SNAP,BRG	000000	000000
5096000070			PLUG;OIL DRAIN	000000	000106
5096000090			PLUG; OIL HEATER 3KC/6BG/	000022	000000
5096000100	5-0960	0010	PLUG; OIL PAN	000000	000000
5096000120	5-0960	0012	PLUG OIL PUMP	000003	000000
5096000130	5-0960	0013	CUP;SEALING,CYL HEAD	000009	000487
5096000140	5-0960	0014	CUP; SEALING,CYLINDER	000000	000000
5096040070	5-0960	4007	PLUG;OIL DRAIN	000000	000002
5096040100	5-0960	4010	PLUG; BYPASS	000000	000000
5096040120	5-0960	4012	PLUG; SCREW,LK	000000	000534
5096040150	5-0960	4015	PLUG; OIL DRAIN	000002	000000
5096040160	5-0960	4016	PLUG; CYL HEAD COVER	000000	000057
5096040190	5-0960	4019	PLUG*	000000	000000
5096040200	5-0960	4020	PLUG; TENSIONER	000000	000000
5096050050	5-0960	5005	PLUG;INL.MANIF	000092	000164
5096050060	5-0960	5006	PLUG, (PT 1/4)	000000	000003
5096050070	5-0960	5007	PLUG; INLET PIPE	000000	000084
5096050080	5-0960	5008	PLUG	000000	000000
5096050090	5-0960	5009	PLUG;OIL GALLER	000000	000000
5096050110	5-0960	5011	P L U G	000002	000000
5096050121	5-0960	5012	JPTKG DRAIN	000000	000000
5096050130	5-0960	5013	PLUG; TAPER	000003	000000

5096050170	5-0960	5017	PLUG; TAPER,O/C	000000	000005
5096050180	5-0960	5018	PLUG;OIL GALLERY (LH)	000000	000070
5096050190	5-0960	5019	PLUG,1/8 PT OIL	000000	000000
5096050191	5-0960	5019	PLUG;TAPER 1/8	000000	000000
5096050192	5-0960	5019	PLUG; OIL GALLERY	000002	000086
5096090040	5-0960	9004	PLUG;SHIFT ROD	000000	000000
5096170250	5-0961	7025	PACKING	000000	000000
5096230020	5-0962	3002	GASKET;GUIDE,TUBE,OIL LEV	000116	002428
5096230023	5-0962	3002	GASKET;GUIDE,TUBE,OIL LEV	000000	000000
5096230030	5-0962	3003	GASKET; RELIEF VALVE	000000	000000
5096230060	5-0962	3006	GSKT;PLUG	000000	000193
5096230160	5-0962	3016	GSKT;RR/FRT CVR.VAC PUMP	000000	000024
5096230170	5-0962	3017	GASK;ORING,PUMP	000007	000000
5096230190	5-0962	3019	PACKING; O-RING	000001	000001
5096230220	5-0962	3022	PACKING,O-RING	000000	000000
5096230240	5-0962	3024	O RING;DRAIN PL	000044	000125
5096230241	5-0962	3024	O-RING; DRAIN PLUG	000000	000000
5096230260	5-0962	3026	GSKT;O-RING,	000000	000000
5096230290	5-0962	3029	O-RING;	000000	000000
5096230300	5-0962	3030	O-RING	000001	000000
5096230350	5-0962	3035	GASKET; RELIEF VALVE	000000	000042
5096230360	5-0962	3036	ORING;PIPE	000000	000000
5096230510	5-0962	3051	PACKING,O-RING	000000	000000
5096230600	5-0962	3060	GASKET; O-RING	000000	000089
5096230620	5-0962	3062	GASKET;PLUG TO VLV	000000	000025
5096230630	5-0962	3063	GASKET; CONNECT	000000	000000
5096230640	5-0962	3064	GASKET;CONNECTOR	000000	000000
5096230660	5-0962	3066	GSKT;CONNECTOR	000000	000000
5096230670	5-0962	3067	PACKING; O-RING OIL FILT	000032	000000
5096230680	5-0962	3068	PACKING; O-RING	000000	000000
5096230690	5-0962	3069	O-RING 6BG1/C240	000063	000009
5096230700	5-0962	3070	O-RING 6BG1/C240	000000	000516
5096230750	5-0962	3075	GSKT;BODY	000022	000015
5096230760	5-0962	3076	PACKING: O-RING PMP FIX	000004	000000
5096230770	5-0962	3077	PACKING; RETAINER 3KC1	000001	000000
5096230780	5-0962	3078	O-RING; COVER-BLOCK 3KC1/	000000	000000
5096250030	5-0962	5003	OIL SEAL	000000	000000
5096250090	5-0962	5009	SEAL,OIL,RR.CVR	000012	000000
5096250141	5-0962	5014	SEAL; OIL	000000	000000
5096250150	5-0962	5015	OIL SEAL;C/PULL	000000	000000
5096250170	5-0962	5017	SEAL;	000000	000000
5096250180	5-0962	5018	SEAL,OIL,FRT.CV	000000	000000
5096250220	5-0962	5022	SEAL,OIL	000000	000004
5096250270	5-0962	5027	OIL SEAL	000000	000000
5096250330	5-0962	5033	SEAL; OIL VAC/P	000000	000000
5096250331	5-0962	5033	SEAL;OIL VAC/P	000000	000004
5096250360	5-0962	5036	SEAL; CRANKSHAFT	000000	000019

5096250520	5-0962	5052	SEAL; OIL	000000	000051
5096250540	5-0962	5054	SEAL;OIL	000000	000000
5096250550	5-0962	5055	SEAL; SECONDARY	000000	000000
5096250570	5-0962	5057	SEAL;2ND.W/PUMP	000000	000000
5096250620	5-0962	5062	SEAL;OIL TRFER.	000000	000000
5096250621	5-0962	5062	SEAL;OIL TRFER.	000000	000000
5096250720	5-0962	5072	SEAL;CRANK SHAFT REAR	000001	000000
5096250730	5-0962	5073	SEAL; OIL	000000	000003
5096250740	5-0962	5074	SEAL KIT OIL PU	000000	000000
5096250770	5-0962	5077	SEAL; OIL	000000	000000
5096250780	5-0962	5078	SEAL;2ND,W/PUMP	000001	000060
5096250790	5-0962	5079	SEAL; OIL	000000	000000
5096250820	5-0962	5082	OIL SEAL	000000	000000
5096250830	5-0962	5083	SEAL,OIL CRANKS	000000	000017
5096250850	5-0962	5085	SEAL; OIL	000002	000000
5096250870	5-0962	5087	SEAL; CYL HEAD 4FB1	000000	000000
5096250920			SEAL;OIL, AXLE CASE	000000	000012
5096250940			SEAL; OIL, RETAINER 3KC1/	000000	000086
5096250970	5-0962	5097	SEAL; OIL, SEA WATER PUMP	000000	000000
5096250980	5-0962	5098	SEAL; CYL HEAD 4FB1	000001	000000
5096250990	5-0962	5099	SEAL	000002	000000
5096251000	5-0962	5100	SEAL; OIL, CRANK PULLEY	000000	000000
5096290070	5-0962	9007	SEAL; SPLINED, M/SHAFT	000000	000000
5096300010	5-0963	0001	PACKING;CAP	000000	000126
5096300080	5-0963	0008	PACKING 2KC1	000000	000003
5096300240	5-0963	0024	WASHER; GASKET 6BG1/C240	000090	000000
5096300290	5-0963	0029	GASKET; O RING	000000	000013
5096310130	5-0963	1013	PACKING;WATER OUTLET PIPE	000000	000000
5096350010			WASHER;SEAL	000000	000000
5096370040	5-0963	7004	GSKT;INL PIPE	000000	000000
5096370060	5-0963	7006	GASKET,INLET	000000	000000
5096370110	5-0963	7011	GASKET,INLET	000000	000000
5096370130	5-0963	7013	GASKET,OUTLET	000000	000000
5096370150	5-0963	7015	GASKET;INLET	000000	000000
5096370160	5-0963	7016	PACKING; COVER	000000	000000
5096370250	5-0963	7025	PACKING	000002	000000
5096370260	5-0963	7026	GSKT;INL PIPE	000000	000000
5096370281	5-0963	7028	PACKING; INLET	000000	000000
5096370301	5-0963	7030	PACKING; WATER PIPE HEAD	000000	000000
5096390071	5-0963	9007	RUBBER SEAL;CVR	000000	000007
5096500100	5-0965	0010	NIPPLE; DRAIN COCK	000000	000000
5096500130	5-0965	0013	NIPPLE; DRAIN COCK SPACER	000001	000000
5096500151	5-0965	0015	NIPPLE; OIL	000000	000000
5096500160	5-0965	0016	NIPPLE; OIL	000000	000000
5096500161	5-0965	0016	NIPPLE; OIL	000000	000000
5096500200	5-0965	0020	ADAPTER,OIL GAL	000000	000000
5096500210	5-0965	0021	NIPPLE; INJ PUMP, OIL FEE	000000	000000

5096500211	5-0965	0021	NIPPLE; INJ PUMP, OIL FEE	000000	000076
5096500270	5-0965	0027	NIPPLE	000000	000000
5096500300	5-0965	0030	ADAPTER; THERMOSTAT	000002	000001
5096500400	5-0965	0040	ADAPTOR; PRESSURE UNIT	000000	000000
5096540080	5-0965	4008	UNION; FLARE	000000	000000
5096540081	5-0965	4008	UNION; FLARE	000000	000000
5096540130	5-0965	4013	NIPPLE;INJ PUMP	000000	000000
5096540180	5-0965	4018	CONNECTOR OUTER	000000	000000
5096560100	5-0965	6010	NIPPLE; WATER DRAIN	000000	000000
5096600312	5-0966	0031	CONNECTOR	000000	000000
5096600330	5-0966	0033	NIPPLE;INJ PUMP	000000	000021
5096600390	5-0966	0039	PLUG; CYL BODY	000000	000000
5096660021	5-0966	6002	NIPPLE 6BD/BG1	000002	000000
5096660100	5-0966	6010	NIPPLE,TAPPET C	000000	000001
5096740360	5-0967	4036	EYE JOINT	000000	000000
5096740540	5-0967	4054	PIPE;FUEL, SEDIM	000000	000000
5096740690	5-0967	4069	JOINT; EYE	000000	000000
5096740810	5-0967	4081	PIPE ASM; FILTER	000063	000000
5096740820	5-0967	4082	PIPE ASM; FUEL FILTER	000001	000000
5096750061	5-0967	5006	BOLT; JT. PIPE	000000	000000
5096750181	5-0967	5018	BOLT.JOINT.OIL	000000	000028
5096750220	5-0967	5022	BOLT; EYE C240	000000	000001
5096750240	5-0967	5024	BOLT,JOINT,PIPE	000000	000088
5096750321	5-0967	5032	BOLT; JOINT, OIL	000000	000005
5096750330	5-0967	5033	BOLT; JOINT, OIL GAL	000000	000000
5096750350	5-0967	5035	BOLT	000000	000000
5096750380	5-0967	5038	BOLT; JOINT, OIL	000000	000000
5096750400	5-0967	5040	BOLT; JOINT FEED PIPE	000000	000000
5096750430	5-0967	5043	BOLT; JOINT, OIL PIPE	000211	000000
5096750460	5-0967	5046	BOLT; JOINT	000002	000000
5096750480	5-0967	5048	BOLT;JOINT	000000	000000
5096750490	5-0967	5049	BOLT;JOINT OIL PIPE	000000	000000
5096750521	5-0967	5052	BOLT; JOINT, FEED PIPE	000000	000000
5096750770	5-0967	5077	BOLT; JOINT, OIL GALLERY-	000000	000000
5096800051	5-0968	0005	COCK ASM;WTR DR	000000	000000
5096800101	5-0968	0010	COCK ASM; WATER DRAIN	000000	000000
5096800110	5-0968	0011	COCK ASM; WATER DRAIN	000005	000001
5096800130	5-0968	0013	COCK ASM; WATER E120	000000	000000
5096800140	5-0968	0014	PLUG 6BG1/C240	000019	000000
5097001100	5-0970	0110	CLIP; FUEL PIPE	000000	000000
5097001320	5-0970	0132	CLIP;AIR PIPE	000000	000000
5097001510	5-0970	0151	CLIP*	000000	000000
5097001910	5-0970	0191	CLIP; OIL PIPE, P.T.O.	000000	000000
5097001920	5-0970	0192	CLIP; PIPE	000000	000004
5097001941	5-0970	0194	CLIP; SHUTTER	000000	000000
5097001950	5-0970	0195	CLIP; FUEL PIPE	000000	000000
5097002330	5-0970	0233	CLIP	000000	000000

5097002370	5-0970	0237	CLIP; VACUUM PIPE	000000	000000
5097002390	5-0970	0239	CLIP, AIR PIPE, W/NUT	000000	000000
5097002400	5-0970	0240	CLIP, AIR PIPE, W/NUT	000007	000001
5097002420	5-0970	0242	CLIP; AIR	000000	000000
5097002440	5-0970	0244	CLIP; RUBBER HOSE	000000	000000
5097002750	5-0970	0275	CLIP; CONSOLE HARNESS	000000	000000
5097002900	5-0970	0290	HOSE; RUBBER, CLIP C223	000000	000000
5097002930	5-0970	0293	CLIP; HARNESS	000000	000010
5097002931	5-0970	0293	CLIP; FRAME HARNESS	000000	000000
5097002940	5-0970	0294	CLIP; GUIDE TUBE	000000	000000
5097002990	5-0970	0299	CLIP; OIL PIPE FIX.	000000	000000
5097003000	5-0970	0300	CLIP; BODY HARNESS	000000	000000
5097003001	5-0970	0300	CLIP; HARNESS	000000	000000
5097003071	5-0970	0307	CLIP;ANTENNA CABLE	000000	000000
5097003080	5-0970	0308	CLIP;WIRING HARNESS	000000	000000
5097003310	5-0970	0331	CLIP; HARNESS	000000	000000
5097003380	5-0970	0338	CLIP;HARNESS,ECGI	000000	000000
5097003420	5-0970	0342	CLIP; FUEL LINE	000000	000000
5097003480	5-0970	0348	CLIP;CABLE HARN	000000	000000
509700350F			CLIP; TAPPET/HARNESS	000000	000000
5097003500	5-0970	0350	CLIP; TAPPET/HARNESS	000000	000041
5097003510	5-0970	0351	CLIP; PIPE TO FRAME	000000	000064
5097003560	5-0970	0356	CLIP;BREATHER HOSE,RR AXL	000000	000000
5097003580	5-0970	0358	CLIP; HARNESS	000000	000000
5097003590	5-0970	0359	CLIP;HARN.CABLE	000000	000000
5097003600	5-0970	0360	CLIP;HOSE TO H	000000	000000
5097003770	5-0970	0377	CLIP; PIPE,FUEL, (L=33)	000000	000002
5097003860	5-0970	0386	CLIP; AIR PIPE SUCTION	000000	000000
5097003950	5-0970	0395	CLIP; FUEL PIPE 2KC1	000000	000000
5097040271	5-0970	4027	CLIP,HOSE FIX	000000	000000
5097040313	5-0970	4031	CLIP;BY-PASS HO	000002	000040
5097040331	5-0970	4033	CLIP; VINYL BREATHER PIPE	000000	000034
5097040371	5-0970	4037	CLIP; OIL PIPE	000005	000000
5097040421	5-0970	4042	CLIP,WATER HOSE	000000	000000
5097040460	5-0970	4046	CLIP; HOSE	000000	000003
5097040471	5-0970	4047	CLIP; WATER PIPE	000037	000034
5097040480	5-0970	4048	CLIP;WATER HOSE	000000	000000
5097040490	5-0970	4049	CLAMP; HOSE	000000	000000
5097040501	5-0970	4050	CLIP;TOP HOSE,ENGINE SIDE	000000	000000
5097040510	5-0970	4051	CLIP;WATER HOSE,ENG SIDE	000000	000000
5097040541	5-0970	4054	CLIP; OIL PIPE	000000	000009
5097040590	5-0970	4059	CLIP; NOZZLE LEAK OFF	000000	000010
5097070020	5-0970	7002	CLIP,CONT CABLE	000000	000000
5097070041	5-0970	7004	CLIP,BREATHER H	000000	000000
5097070051	5-0970	7005	CLIP;RUB.HOSE,BREATHER,RR	000000	000000
5097070061	5-0970	7006	CLIP,RUB.HOSE,F	000000	000000
5097070232	5-0970	7023	CLIP,VACUUM PIP	000000	000055

5097070250	5-0970	7025	CLIP;HOSE, FIX	000000	000000
5097070253	5-0970	7025	CLIP,RUBBER HOS	000000	000000
5097070300	5-0970	7030	CLIP;CABLE,WTR HOSE/HRNSS	004830	004061
5097070301	5-0970	7030	CLIP;CABLE,WTR HOSE/HRNSS	000358	004404
5097070310	5-0970	7031	CLIP;BAND,FUEL/BRTHR.HOSE	000000	000000
5097070311	5-0970	7031	CLIP;BAND,FUEL/BRTHR.HOSE	000318	000172
5097070360	5-0970	7036	CLIP;ACCEL CONT, HRNSS	000000	000000
5097070361	5-0970	7036	CLIP;ACCEL CONT, HRNSS	000000	000000
5097070570	5-0970	7057	CLIP;TURBO,HOSE	000007	000000
5097071040	5-0970	7104	CLIP; FUEL PIPE (L=45)	000000	000000
5097090051	5-0970	9005	CLIP; FUEL-PIPE	000000	000000
5097090330	5-0970	9033	CLIP	000000	000000
5097090340	5-0970	9034	CLIP;WATER HOSE	000004	000106
5097090380	5-0970	9038	CLIP; INTAKE	000000	000000
5097090410	5-0970	9041	CLIP; FUEL PIPE	000002	000000
5097090420	5-0970	9042	CLIP; FUEL PIPE	000002	000000
5097090450	5-0970	9045	CLIP; VACUUM PIPE	000000	000000
5097090720	5-0970	9072	CLIP,OIL COOLER	000000	000000
5097090950	5-0970	9095	CLIP,ENG.HARN.	000002	002495
5097091030	5-0970	9103	CLIP;FUEL PIPE, (L=48)	000005	000012
5097091040	5-0970	9104	CLIP;FUEL PIPE, (L=45)	000000	000003
5097370012	5-0973	7001	KEY;STRT,GEAR	000000	000000
5097370030	5-0973	7003	KEY; WOODRUFF,CR/SHF	000029	000032
5097380010	5-0973	8001	KEY; DRIVE GEAR	000000	000116
5097400090	5-0974	0009	PIN;PUMP HSG	000000	000000
5097400110	5-0974	0011	PIN; STRAIGHT, RR. PLATE	000000	000000
5097400140	5-0974	0014	PIN,KNOCK,TRFER	000000	000000
5097400180	5-0974	0018	PIN;KNOCK	000005	000000
5097400181	5-0974	0018	PIN;KNOCK	000000	000000
5097400190	5-0974	0019	DOWEL;OIL PUM/PIN;HSG,P/S	000000	000003
5097440151	5-0974	4015	NIPPLE;VAC PUMP	000000	000000
5097440152	5-0974	4015	NIPPLE;VAC.BUMP	000000	000001
5097480040	5-0974	8004	PIN**	000000	000000
5097490072	5-0974	9007	PIN; CHAIN TENSIONER	000001	000000
5097600180	5-0976	0018	ROD END;	000000	000000
5097600190			JOINT BALL, (RH)	000000	000000
5097600200			JOINT BALL, (LH)	000000	000000
5097650010			ROD;LINK,ENG,CO	000000	000000
5097830010	5-0978	3001	KEY; DRIVE GEAR-UNLISTED	000000	000000
5098000030	5-0980	0003	BALL BRG:AIMI E/C PRT(16)	000000	000002
5098000040	5-0980	0004	BEARING;BA	000000	000000
5098000041	5-0980	0004	BEARING; BA	000000	000000
5098000080	5-0980	0008	BEARING; BALL, WATER PUMP	000000	000001
5098000140	5-0980	0014	BEARING; BALL	000000	000000
5098000150	5-0980	0015	BEARING; BALL 4BA1	000000	000000
5098000200	5-0980	0020	BEARING,BALL,CN	000000	000000
5098000300	5-0980	0030	BEARING 4BB1	000004	000004

5098000320	5-0980	0032	BEARING; IDLE, GEAR PTO	000000	000001
5098000360	5-0980	0036	BEARING; BALL UM3KC1-MEG	000000	000000
5098000380	5-0980	0038	BEARING; INJ PUMP	000000	000001
5098000400	5-0980	0040	BEARING;BALL,ARMTURE STRT	000006	000000
5098000410	5-0980	0041	BALL BEARING, (REAR)	000000	000000
5098000460	5-0980	0046	BEARING,BALL,OU	000000	000009
5098000500	5-0980	0050	BEARING; BALL, REAR 6BD1	000000	000042
5098000510	5-0980	0051	BEARING; BALL, FRONT 6BD1	000004	000018
5098000520	5-0980	0052	BEARING; BALL,	000000	000000
5098000550	5-0980	0055	BEARING, BALL, OU	000000	000000
5098000551	5-0980	0055	BEARING, BALL, OU	000000	000004
5098000590	5-0980	0059	BRG;WTR PUMP	000000	000006
5098000600	5-0980	0060	BRG; WTR PUMP	000002	000002
5098000610	5-0980	0061	BEARING; BALL	000000	000000
5098000621	5-0980	0062	BRG; BALL	000000	000000
5098000632	5-0980	0063	BRG; BALL	000000	000000
5098000640	5-0980	0064	BEARING; BALL, (FRONT)	000000	000000
5098000670	5-0980	0067	BEARING	000000	000000
5098000680	5-0980	0068	BEARING;CENTER	000000	000003
5098000720	5-0980	0072	BEARING; CLUTCH RELEASE	000000	000000
5098000770	5-0980	0077	BRG.;BALL.PTO SHAFT REAR	000000	000000
5098000780	5-0980	0078	BEARING; RADIAL	000004	000000
5098000790	5-0980	0079	BEARING; BALL/ARMATURE, ST	000009	000001
5098000800	5-0980	0080	BEARING; BALL, IDLE GEAR	000000	000000
5098000810	5-0980	0081	BEARING;BALL, STARTER	000000	000000
5098000820	5-0980	0082	BEARING; BALL, CAM 3KC1/3	000000	000002
5098000870	5-0980	0087	BEARING; BALL	000001	000000
5098000890	5-0980	0089	BEARING; WATER PUMP	000000	000259
5098000920	5-0980	0092	BRG.;BALL.PTO SHAFT REAR	000000	000000
5098000980	5-0980	0098	BEARING;BALL, SHAFT	000000	000000
5098000990	5-0980	0099	BRG;BALL	000000	000000
5098010010	5-0980	1001	BEARING; PILOT	000000	000004
5098010070	5-0980	1007	BEARING; RADIAL	000000	000000
5098010080	5-0980	1008	BEARING; BALL,OIL PUMP	000000	000000
5098030040	5-0980	3004	BEARING; RELEASE	000000	000000
5098100100	5-0981	0010	BEARING;ROLLER	000000	000000
5098100110	5-0981	0011	BEARING;ROLLER	000000	000000
5098100120	5-0981	0012	BRG.;ROLLER,CLUSTER RR	000000	000000
5098100131	5-0981	0013	BEARING; ROLLER IDLE GEAR	000003	000000
5098110140	5-0981	1014	BEARING; REV. GEAR	000000	000000
5098110150	5-0981	1015	BEARING; REV. GEAR	000000	000000
5098110160	5-0981	1016	BEARING;NEEDLE,REV/G. (OR)	000000	000000
5098110250	5-0981	1025	BEARING,NEEDLE	000000	000000
5098110251	5-0981	1025	BEARING,NEEDLE	000000	000007
5098110270	5-0981	1027	BEARING,NEEDLE	000000	000000
5098110271	5-0981	1027	BEARING,NEEDLE	000000	000006
5098120621	5-0981	2062	BEARING, PINION	000024	000239

5098140010	5-0981	4001	SCREW;WATER	000007	000055
5098290010	5-0982	9001	BEARING; BALL	000001	000000
5098290020	5-0982	9002	BALL BRG. RR ARMATURE	000000	000000
5098300181	5-0983	0018	RING;FELT,SPEED	000000	000221
5098400020	5-0984	0002	NUT;BRG.;FRONT	000000	000000
5098410010	5-0984	1001	WASHER;LOCK BALL FRONT	000000	000000
5098430030	5-0984	3003	BALL; OIL RELIEF VALVE	000000	000042
5099810980			ICREW;DR STRIKE	000001	000040
5099850560	5-0998	5056	WASHER; PL.,RECLINING	000000	000000
5100028083	5-1000	2808	PARTIAL ENGINE	000000	000000
5100028550	5-1000	2855	PARTIAL ENGINE	000000	000000
5100028551	5-1000	2855	PARTIAL ENGINE	000000	000000
5111100880	5-1111	0088	CYLINDER HEAD ASM	000000	000000
5111100940	5-1111	0094	CYL HEAD	000000	000000
5111100963			HEAD ASM; cyl	000000	000000
5111100964			HEAD ASM; CYL	000000	000000
5111100973	5-1111	0097	HEAD ASM; CYL	000000	000000
5111100995	5-1111	0099	HEAD ASM; CYL	000000	000000
5111101010	5-1111	0101	HEAD ASM; CYL	000000	000000
5111101013	5-1111	0101	HEAD ASM; CYL	000000	000000
5111101101	5-1111	0110	HEAD ASM; CYL	000000	000000
5111101241	5-1111	0124	SUPERSEDED**	000000	000000
5111101380	5-1111	0138	HEAD ASSY,CYL	000000	000000
5111101410	5-1111	0141	CYL HEAD	000000	000000
5111101680	5-1111	0168	CYL HEAD ASM;	000000	000000
5111101681	5-1111	0168	CYL HEAD ASM;	000000	000003
5111101691	5-1111	0169	SUPERSEDED**HEAD ASM.	000000	000000
5111101900	5-1111	0190	HEAD ASM; CYL	000000	000000
5111101961	5-1111	0196	HEAD ASM,CYL.	000000	000000
5111102000	5-1111	0200	HEAD ASM CYL	000000	000000
5111102010	5-1111	0201	HEAD ASM; CYL	000000	000000
5111102020	5-1111	0202	SUPERSEDED**HEAD ASM.	000000	000000
5111102021	5-1111	0202	HEAD ASM CYL	000000	000000
5111102050	5-1111	0205	CYL HEAD ASM;	000000	000000
5111102051	5-1111	0205	CYL HEAD ASM;	000000	000000
5111102070	5-1111	0207	HEAD ASM; CYL C240	000000	000000
5111102071	5-1111	0207	HEAD ASM; CYL C240	000000	000000
5111102072	5-1111	0207	HEAD ASM; CYL C240	000000	000000
5111102110	5-1111	0211	HEAD ASM CYL	000000	000000
5111102311	5-1111	0231	HEAD ASM; CYL	000000	000000
5111102312	5-1111	0231	HEAD ASM; CYL	000000	000001
5111102380	5-1111	0238	HEAD ASM; CYL	000000	000000
5111102390	5-1111	0239	HEAD ASM; CYL	000000	000000
5111102431	5-1111	0243	HEAD ASM.;CYL.	000000	000000
5111102490	5-1111	0249	HEAD ASM; CYL.	000000	000000
5111102558	5-1111	0255	HEAD ASM; CYL 3KC1	000000	000000
5111102559	5-1111	0255	HEAD ASM; CYL 3KC1	000000	000000

5111102587	5-1111	0258	HEAD ASM; CYL 2KC1	000000	000000
5111102588	5-1111	0258	HEAD ASM; CYL 2KC1	000000	000000
5111102589	5-1111	0258	HEAD ASM; CYL 2KC1	000000	000001
5111111491	5-1111	1149	HEAD ASM; CYL	000000	000000
5111190070	5-1111	9007	GLOW PLUG	000000	000000
5111190071	5-1111	9007	GLOW PLUG	000000	000000
5111190090	5-1111	9009	PLUG; CYL HD	000000	000099
5111290030	5-1112	9003	PLUG / SEALING CUP	000008	000050
5111290060	5-1112	9006	CUP; SEALING	000218	000000
5111290070	5-1112	9007	CUP; SEALING 3KC1/3KR1	000013	000000
5111290080	5-1112	9008	CUP; SEALING	000000	000000
5111290110	5-1112	9011	CUP; SEALING, RR	000000	000000
5111290150	5-1112	9015	CUP; SEALING, TAPPET CHMBR	000000	000000
5111290170	5-1112	9017	CUP; SEALING, RR	000000	000000
5111290180	5-1112	9018	CUP; SEALING C/BL FRT & RR	000000	000000
5111410040	5-1114	1004	GASKET; CYL HEAD	000000	000000
5111410172	5-1114	1017	HEAD GASKET	000000	000000
5111410470			GASKET; HEAD (3AE1)	000000	000000
5111410480			GASKET; CYLINDER	000000	000000
5111410561	5-1114	1056	GASKET; CYL HEAD	000000	000000
5111410562			GASKET; CYL HEAD	000000	000006
5111410570			GASKET; CYL HEAD	000000	000001
5111410661	5-1114	1066	GASKET; CYL HEAD 6BF1	000000	000001
5111410670	5-1114	1067	GASKET, CYL. HEAD	000000	000000
5111410671	5-1114	1067	GASKET, CYL. HEAD	000001	000000
5111410690	5-1114	1069	HEAD GASKET	000000	000000
5111410691	5-1114	1069	HEAD GASKET	000000	000033
5111410721	5-1114	1072	GASKET; CYL HEAD	000000	000000
5111410830	5-1114	1083	GASKET; CYL. HE	000000	000000
5111410858	5-1114	1085	GASKET; CYL HEAD 2KC1	000000	000000
5111410880	5-1114	1088	GASKET; CYL HEAD	000000	000000
5111410881	5-1114	1088	GASKET; CYL HEAD	000001	000000
5111410921	5-1114	1092	GASKET; CYLINDER	000001	000000
5111410935	5-1114	1093	GASKET; CYL HEAD 3KR1	000000	000008
5111490010	5-1114	9001	PLATE; HEATER HO	000000	000000
5111500630	5-1115	0063	PLUG ASM; HOT	000000	000000
5111500710	5-1115	0071	PLUG ASM; HOT	000000	000000
5111500920	5-1115	0092	PLUG, ASSY, HOT, C	000000	000000
5111501080	5-1115	0108	PLUG ASM; HOT	000000	000000
5111501120	5-1115	0112	PLUG ASM, HOT, GL	000000	000000
5111501270	5-1115	0127	PLUG ASM; HOT	000000	000000
5111511681	5-1115	1168	PLUG; HOT	000000	000000
5111511751	5-1115	1175	PLUG; HOT 3KR1	000000	000000
5111511761	5-1115	1176	PLUG; HOT 3KB1	000000	000000
5111540010			PACKING	000000	000000
5111700613	5-1117	0061	VALVE COVER	000000	000000
5111700831	5-1117	0083	COVER ASM; CYL HEAD	000000	000000

5111701151	5-1117	0115	COVER ASM; CYL HEAD	000000	000000
5111701402	5-1117	0140	CYL HEAD COVER	000000	000000
5111701422	5-1117	0142	COVER ASM; CYL HEAD	000000	000000
5111701512	5-1117	0151	COVER ASM; CYL HEAD	000000	000000
5111701711	5-1117	0171	COVER ASM. CYL HEAD	000000	000000
5111701721	5-1117	0172	COVER ASM. CYL HEAD	000000	000000
5111701820	5-1117	0182	COVER ASM; CYL HEAD	000000	000000
5111701831	5-1117	0183	COVER ASM; CYL HEAD	000000	000000
511170198D	5-1117	0198D	****DELETION NOT FOR SALE	000000	000000
5111701980	5-1117	0198	COVER ASM; CYL HEAD	000000	000002
5111702010	5-1117	0201	COVER;CYL. HD.	000000	000000
5111702101	5-1117	0210	COVER ASM; CYL HEAD	000000	000000
5111702111	5-1117	0211	COVER ASM,CYL.H	000000	000000
5111702380	5-1117	0238	COVER ASM; CYL HEAD 4BD1	000000	000000
5111702381	5-1117	0238	COVER ASM; CYL HEAD 4BD1	000000	000000
5111702400	5-1117	0240	COVER ASM; CYL HEAD	000000	000000
5111702401	5-1117	0240	COVER ASM; CYL HEAD	000000	000000
5111702410	5-1117	0241	COVER ASM; CYL HEAD	000000	000000
5111702411	5-1117	0241	COVER ASM; CYL HEAD	000000	000001
5111702640	5-1117	0264	COVER ASM; CYL HEAD	000000	000000
5111702660	5-1117	0266	CVR ASM; CYL HD	000000	000000
5111702661	5-1117	0266	CVR ASM; CYL HD	000000	000000
5111702671	5-1117	0267	COVER ASM; CYL HEAD	000000	000000
5111702672	5-1117	0267	COVER ASM; CYL HEAD	000001	000000
5111710170	5-1117	1017	COVER ASM; CYL HEAD	000000	000000
5111710171	5-1117	1017	COVER ASM; CYL HEAD	000000	000000
5111710422	5-1117	1042	COVER ASM; CYL HEAD 3AB1	000000	000000
5111710542	5-1117	1054	COVER ASM; CYL HEAD	000000	000000
5111730040	5-1117	3004	GASKET; CYL. HEAD COVER	000000	000000
5111730050	5-1117	3005	PACKING; HEAD COVER, O-RI	000000	000019
5111730160	5-1117	3016	PACKING; VALVE COVER	000000	000000
5111730170	5-1117	3017	GASKET,HEAD COV	000000	000000
5111730190	5-1117	3019	PACKING; COVER-HEAD COVER	000000	000000
5111730211	5-1117	3021	RUBBER/GROMMET;OIL FILLER	000027	000009
5111750020	5-1117	5002	NUT;CYL HEAD	000000	000000
5111750021	5-1117	5002	NUT;CYL HEAD	000000	000000
5111790120	5-1117	9012	PLATE; BREATHER, HEAD COV	000000	000000
5111790460	5-1117	9046	PLATE	000000	000000
5111790480	5-1117	9048	PIPE,BREATHER,H	000000	000000
5111790520	5-1117	9052	NIPPLE;BREATHER	000000	000000
5111790580	5-1117	9058	COVER ASM; CYL HEAD	000000	000000
5111790670	5-1117	9067	NIPPLE;BREATHER	000000	000000
5111790750	5-1117	9075	SEAL; RUBBER	000000	000000
5112100080	5-1121	0008	BLOCK ASM; CYL.	000000	000000
5112100085	5-1121	0008	BLOCK ASM; CYL.	000000	000000
5112100115	5-1121	0011	BLOCK ASM; CYLINDER	000000	000000
5112100250	5-1121	0025	CYL.BODY ASSY	000000	000000

5112100315	5-1121	0031	SUPERSEDED**	000000	000000
5112100442	5-1121	0044	SUPERSEDED**BODY	000000	000000
5112100531	5-1121	0053	SUPERSEDED**BLOCK	000000	000000
5112100585	5-1121	0058	BLOCK ASM; CYLINDER	000000	000000
5112100770	5-1121	0077	BLOCK ASM; CYLINDER	000000	000000
5112101023	5-1121	0102	SUPERSEDED**BLOCK	000000	000000
5112101040	5-1121	0104	SUPERSEDED**BLOCK	000000	000000
5112101100	5-1121	0110	BODY ASM CYL	000000	000000
5112101172	5-1121	0117	BLOCK ASM; CYLINDER	000000	000000
5112101220	5-1121	0122	BLOCK ASM CYL	000000	000000
5112101361	5-1121	0136	BLOCK ASM,CYL.	000000	000000
5112101420	5-1121	0142	BLOCK ASM,CYL.	000000	000000
5112101475	5-1121	0147	BLOCK ASM; CYLINDER	000000	000000
5112101500	5-1121	0150	BLOCK ASM; CYLINDER	000000	000000
5112101510	5-1121	0151	CYL BODY ASM	000000	000000
5112101571	5-1121	0157	BLOCK ASM; CYLINDER	000000	000000
5112101573	5-1121	0157	BLOCK ASM; CYLINDER	000000	000000
5112101591	5-1121	0159	BODY ASM;CYL	000000	000000
5112101601	5-1121	0160	SUPERSEDED**	000000	000000
5112101650	5-1121	0165	SUPERSEDED**BLOCK	000000	000000
5112101672	5-1121	0167	SUPERSEDED**BLOCK	000000	000000
5112101682	5-1121	0168	BLOCK ASM; CYL 4BD1	000000	000000
5112101715	5-1121	0171	BLOCK ASM; CYLINDER	000000	000000
5112101760	5-1121	0176	BODY ASM:CYL	000000	000000
5112101767	5-1121	0176	BODY ASM:CYL	000000	000000
5112101770	5-1121	0177	BLOCK ASM; CYLINDER	000000	000000
5112101774	5-1121	0177	BLOCK ASM; CYLINDER	000000	000010
5112101784	5-1121	0178	BLOCK ASM; CYLINDER	000000	000000
5112101823	5-1121	0182	BLOCK ASM; CYLINDER	000000	000000
5112101824	5-1121	0182	BLOCK ASM; CYLINDER	000000	000000
5112101831	5-1121	0183	BLOCK ASM.; CYLINDER	000000	000000
5112101832	5-1121	0183	BLOCK ASM.; CYLINDER	000000	000000
5112111582	5-1121	1158	BLOCK ASM; CYLINDER	000000	000000
5112150291	5-1121	5029	CRANK CASE	000000	000000
5112150312	5-1121	5031	CRANK CASE	000000	000000
5112150360	5-1121	5036	CASE; CRANK	000000	000000
5112150401	5-1121	5040	CASE ASM;CRANK	000000	000000
5112150654	5-1121	5065	CASE; CRANK	000000	000000
5112150655	5-1121	5065	CASE; CRANK	000000	000000
5112150680	5-1121	5068	CRANK CASE	000000	000000
5112150811	5-1121	5081	CASE;CRANK	000000	000000
5112150922	5-1121	5092	CASE;CRANK	000000	000000
5112151010	5-1121	5101	CASE;CRANK	000000	000000
5112151035	5-1121	5103	CASE ASM.;CRANK	000000	000000
5112151038	5-1121	5103	CASE ASM.;CRANK	000000	000000
5112190011	5-1121	9001	COVER;OIL PUMP	000000	000000
5112190012	5-1121	9001	COVER; O/PUMP	000000	000000

5112190013	5-1121	9001	CVR;O/PUMP HOLE	000001	000000
5112190060			CUP; SEALING	000000	000000
5112190080	5-1121	9008	CUP;SEALING,CYL/OIL GLLRY	000000	002168
5112190110	5-1121	9011	CUP,SEALING,IDL	000000	000003
5112190140	5-1121	9014	CUP; SEALING	000040	000779
5112190150	5-1121	9015	CUP; SEALING,TAPPET CHMBR	000000	000000
5112190160	5-1121	9016	COVER; DISCONTINUED	000000	000000
5112190170	5-1121	9017	CUP,SEALING,CYL	000000	000238
5112190180	5-1121	9018	CUP,SEALING,CYL	000343	001707
5112190290	5-1121	9029	COVER; CRANK CASE	000000	000000
5112190301	5-1121	9030	PACKING; COVER	000000	000000
5112210020	5-1122	1002	DUCT WATER	000006	000000
5112240040	5-1122	4004	BUSH; O/P DR SH	000000	000010
5112290080	5-1122	9008	DOWEL; CHAIN CASE, CYL BL	000000	000000
5112310052	5-1123	1005	SHAFT; BLANCHER, RH	000000	000000
5112310062	5-1123	1006	SHAFT; BLANCHER, LH	000000	000000
5112310071	5-1123	1007	BALANCER SHAFT;REAR	000000	000000
5112310072	5-1123	1007	BALANCER SHAFT;REAR	000000	000000
5112310082	5-1123	1008	BALANCER SHAFT;LH	000000	000000
5112390010			BUSH; BLANCER SHAFT	000003	000000
5112390110	5-1123	9011	WASHER; BLANCER SHAFT	000000	000000
5112390202	5-1123	9020	COVER; BRG.	000000	000000
5112570010	5-1125	7001	DOWEL; BEARING CAP 4	000000	000000
5112570011	5-1125	7001	DOWEL; BEARING CAP	000000	000000
5112580170	5-1125	8017	PACKING; BRG CAP	000003	000000
5112610040	5-1126	1004	LINER;ENG. CYL.	000000	000000
5112610130	5-1126	1013	LINER;ENG. CYL.	000000	000000
5112610141	5-1126	1014	LINER;CYL COMARAD	000000	000000
5112610151			LINER; CYL BLOC	000000	000000
5112610152			LINER; CYL BLOC	000000	000000
5112800050	5-1128	0005	COOLER ASM; OIL	000000	000000
5112800051	5-1128	0005	COOLER ASM; OIL	000000	000000
5112800082	5-1128	0008	COOLER ASM; OIL	000000	000000
5112800083	5-1128	0008	COOLER ASM; OIL	000000	000000
5112800084	5-1128	0008	COOLER ASM; OIL	000000	000001
5112800090	5-1128	0009	OIL COOLER ASM	000000	000000
5112800092	5-1128	0009	OIL COOLER ASM	000000	000000
5112800093	5-1128	0009	OIL COOLER ASM	000000	000000
5112800102	5-1128	0010	OIL COOLER ASM	000000	000002
5112800111	5-1128	0011	COOLER ASM; OIL	000000	000000
5112800112	5-1128	0011	COOLER ASM; OIL	000000	000000
5112800152	5-1128	0015	COOLER ASM; OIL	000000	000000
5112810072	5-1128	1007	CASE; OIL COOLER	000000	000000
5112810080	5-1128	1008	BODY;OIL COOLER	000000	000000
5112810081	5-1128	1008	BODY;OIL COOLER	000000	000002
5112820010	5-1128	2001	GASKET;OIL COOLER TO C/BL	000000	000000
5112820030	5-1128	2003	GASKET;OIL COOLER TO C/BL	000000	000000

5112820060	5-1128	2006	GSKT;ELEMENT	000000	000065
5112820070	5-1128	2007	ELEMENT;O/COOL	000000	000000
5112820080	5-1128	2008	ELEMENT;O/COOLE	000000	000000
5112820081	5-1128	2008	ELEMENT;O/COOLE	000000	000001
5112820090	5-1128	2009	GASKET; COVER	000000	000000
5112820110	5-1128	2011	GASK;OIL COOL.	000116	000061
5112820130	5-1128	2013	GASKET; O/COOLE	000000	000000
5112880010	5-1128	8001	VALVE; BYPASS O/C	000000	000009
5112880020	5-1128	8002	VLV ASM; O/COOL	000000	000000
5112890030	5-1128	9003	ELEMENT,OIL COO	000000	000000
5112890060	5-1128	9006	PLUG,OIL COOL	000000	000000
5112890080	5-1128	9008	ELEMENT ASM; OIL COOLER	000000	000002
5112890090	5-1128	9009	BOLT;OIL COOLER	000000	000000
5112900821	5-1129	0082	COVER ASM; CHAMBER W/BREA	000000	000000
5112901450	5-1129	0145	COVER; TAPPET	000010	000000
5112901451	5-1129	0145	COVER; TAPPET	000000	000000
5112901860	5-1129	0186	COVER ASM	000000	000000
5112902611	5-1129	0261	COVER ASM TAPPE	000000	000000
5112910060	5-1129	1006	COVER;TAPPET CHAMBER	000000	000000
5112910150	5-1129	1015	COVER;TAPPET	000000	000000
5112910201	5-1129	1020	COVER,TAPPET CH	000000	000001
5112910210	5-1129	1021	COVER; TAPPET	000000	000000
5112920010	5-1129	2001	GASKET;TAPPET	000000	000000
5112920110	5-1129	2011	PACKING; TAPPET	000035	000000
5112920130	5-1129	2013	PACKING,TAPPET	000000	000000
5112920140	5-1129	2014	GASKET;TAPPET	000000	000000
5112920150	5-1129	2015	GASKET,TAPPET C	000000	000000
5112920170	5-1129	2017	GASKET,BREATHER	000000	000000
5112990070	5-1129	9007	PLATE; BAFFLE, TAPPET CMB	000001	000000
5112990120	5-1129	9012	BAFFLE,A,BREATH	000000	000000
5112990130	5-1129	9013	BAFFLE,B,BREATH	000000	000003
5113100241	5-1131	0024	CASE ASM;GEAR	000000	000000
5113101290	5-1131	0129	CASE; TIMING GEARS	000000	000000
5113101294	5-1131	0129	CASE; TIMING GEARS	000000	000000
5113101471	5-1131	0147	CASE; TIMING GEARS	000000	000000
5113110112	5-1131	1011	CASE; TIMING GEARS 6BD/6B	000000	000000
5113110113	5-1131	1011	CASE; TIMING GEARS 6BD/6B	000000	000000
5113110121	5-1131	1012	CASE;TIMING	000000	000000
5113110244	5-1131	1024	CASE; TIMING GEARS	000000	000000
5113110245	5-1131	1024	CASE; TIMING GEARS	000001	000000
5113110280	5-1131	1028	GEAR	000000	000000
5113110281	5-1131	1028	G E A R	000000	000000
5113110282	5-1131	1028	GEAR	000000	000000
5113110460	5-1131	1046	PLATE FRT CYL B	000000	000000
5113110461	5-1131	1046	PLATE FRT CYL B	000000	000001
5113110470	5-1131	1047	CASE; TIMING GEARS	000000	000001
5113110512	5-1131	1051	CASE;TIMING	000000	000000

5113110513	5-1131	1051	CASE;TIMING	000000	000000
5113110672	5-1131	1067	CASE; TIMING GEAR	000001	000000
5113110710	5-1131	1071	TIMING CASE;GEA	000000	000000
5113110711	5-1131	1071	CASE;TIMING	000000	000000
5113110950	5-1131	1095	PLATE;FRT.,CYL.BLOCK	000000	000000
5113111024	5-1131	1102	CASE; TIMING GEARS	000000	000000
5113111042	5-1131	1104	PLATE;FRT.CYL.BLOCK	000000	000000
5113111054	5-1131	1105	CASE; TIMING GEARS	000000	000000
5113120040	5-1131	2004	GASKET; TIMING	000000	000000
5113120110	5-1131	2011	PACKING; FRONT PLATE	000000	000000
5113120210	5-1131	2021	GASKET; GEAR CASE	000000	000000
5113120340	5-1131	2034	PACKING; GEAR CASE	000000	000000
5113120341	5-1131	2034	PACKING; GEAR CASE	000000	000000
5113120391	5-1131	2039	PACKING; CASE TO BLOCK	000000	000000
5113120422	5-1131	2042	PACKING; CASE TO BLOCK	000000	000000
5113120441	5-1131	2044	GASKET; GEAR CASE	000000	000000
5113120450	5-1131	2045	PACKING;TIMING GEAR CASE	000000	000000
5113120461	5-1131	2046	PACKING; TIMING CASE-BLOC	000000	000000
5113120470	5-1131	2047	PACKING; TIMING CASE-BLOC	000000	000000
5113190260	5-1131	9026	GSKT;INJ.PUMP	000000	000000
5113190560	5-1131	9056	PACKING; INJ PUMP	000000	000000
5113190561	5-1131	9056	PACKING; INJ PUMP	000005	000000
5113190570	5-1131	9057	PACKING; BRACKET TO PLATE	000000	000000
5113190880	5-1131	9088	GSKT;INJ.PUMP	000000	000000
5113191181	5-1131	9118	TENSIONER;TIMING CHAIN	000000	000000
5113191210	5-1131	9121	CAP; TIMING CASE	000000	000000
5113191220	5-1131	9122	GUIDE; B IDLE	000000	000000
5113191230	5-1131	9123	GUIDE; A INJ.PUMP	000000	000000
5113191300	5-1131	9130	PACKING; SPACER GEAR CASE	000010	000000
5113191311	5-1131	9131	GUIDE	000000	000000
5113191342	5-1131	9134	LEVER; TENSION 3KC1	000000	000000
5113191352	5-1131	9135	TENSIONER; CHAIN 3KC1	000000	000000
5113191363	5-1131	9136	GUIDE; TIMING CHAIN	000000	000000
5113191380	5-1131	9138	LEVER; TENSION 3KR1	000000	000004
5113191391	5-1131	9139	TENSIONER;CHAIN 3KR1	000000	000003
5113201321	5-1132	0132	COVER;OIL PUMP HOLE	000001	000000
5113201391	5-1132	0139	COVER; TIMING GEAR CASE	000000	000000
5113210090	5-1132	1009	COVER;TIMING CK	000000	000093
5113210123	5-1132	1012	COVER; TIMING GEAR CASE	000000	000000
5113210142	5-1132	1014	COVER;GEAR	000000	000000
5113210143	5-1132	1014	COVER;GEAR	000000	000000
5113210144	5-1132	1014	COVER;GEAR	000000	000000
5113210145	5-1132	1014	COVER;GEAR	000000	000054
5113210210	5-1132	1021	COVER; TIMING GEAR CASE	000000	000002
5113210220	5-1132	1022	COVER; GEAR CASE	000000	000000
5113210250	5-1132	1025	COVER; TIMING GEAR CASE 6	000000	000000
5113210252	5-1132	1025	COVER; TIMING GEAR CASE 6	000000	000003

5113210324	5-1132	1032	COVER; TIMING GEAR CASE	000000	000000
5113210350	5-1132	1035	COVER; TACHOMETER DRIVE (000004	000000
5113210360	5-1132	1036	COVER; HYDRAULIC	000000	000004
5113210380	5-1132	1038	COVER	000004	000000
5113210481	5-1132	1048	COVER; TIMING GEAR CASE	000000	000000
5113210571	5-1132	1057	COVER;INJ. TIMING CHECK	000000	000000
5113210580	5-1132	1058	COVER;TIMING CK	000000	000017
5113210811	5-1132	1081	COVER; TIMING GEAR CASE	000000	000000
5113210900	5-1132	1090	COVER;OIL PUMP HOLE	000000	000000
5113210910	5-1132	1091	SPACER;F/PLATE	000000	000000
5113210940	5-1132	1094	COVER;TIMING CA	000000	000000
5113210953	5-1132	1095	COVER; GEAR CAS	000000	000000
5113210954	5-1132	1095	COVER; GEAR CAS	000000	000005
5113210970	5-1132	1097	COVER;GEAR CASE	000000	000000
5113211000	5-1132	1100	COVER; PTO PUMP	000000	000000
5113211011	5-1132	1101	COVER;TIM.GEAR	000000	000000
5113211012	5-1132	1101	CVR; GEAR CASE	000000	000000
5113211013	5-1132	1101	COVER;GEAR CASE	000000	000000
5113211014	5-1132	1101	COVER;GEAR	000000	000000
5113211122	5-1132	1112	COVER; HOLE	000000	000000
5113211130	5-1132	1113	COVER; TIMING GEAR CASE	000000	000000
5113211150	5-1132	1115	COVER; TIMING GEAR CASE	000000	000000
5113211301	5-1132	1130	COVER;CAM GEAR	000000	000000
5113211353	5-1132	1135	COVER; TIMING GEAR CASE	000000	000000
5113211362	5-1132	1136	SUPERSEDED**	000000	000000
5113211394	5-1132	1139	COVER; TIMING GEAR CASE	000000	000000
5113211441	5-1132	1144	COVER; SEA WATER PUMP	000001	000002
5113211450	5-1132	1145	COVER; HYDRAULIC	000000	000000
5113211468	5-1132	1146	COVER; TIMING GEAR CASE	000000	000000
5113211500	5-1132	1150	SPACER;FRT.PLATE-PUMP	000000	000000
5113211520	5-1132	1152	COVER; CYLINDER BLOCK 2KC	000000	000000
5113211530	5-1132	1153	ADAPTOR	000000	000000
5113211550	5-1132	1155	COVER; T/GEAR CASE 2K/3KC	000000	000000
5113211560	5-1132	1156	COVER;INJ. TIMING CHECK	000000	000603
5113211570	5-1132	1157	COVER; PUMP 2KC1	000000	000000
5113211610	5-1132	1161	COVER; TIMING GEAR CASE W	000002	000000
5113213522	5-1132	1352	COVER; TIMING GEAR CASE	000000	000000
5113220060	5-1132	2006	PACKING;COVER	000000	000000
5113220070	5-1132	2007	GSKT;GEAR CASE	000000	000000
5113220141	5-1132	2014	GASKET;GEAR	000000	000000
5113220161	5-1132	2016	PACKING 4BA1	000000	000000
5113220170	5-1132	2017	PACKING; COVER	000000	000000
5113220180	5-1132	2018	PACKING; SPACER	000000	000501
5113220190	5-1132	2019	GASKET	000017	000000
5113220280	5-1132	2028	GSKT;GEAR CASE	000000	000000
5113220351	5-1132	2035	PACKING; COVER	000000	000000
5113220360	5-1132	2036	GASKET,TIMING	000000	000000

5113220380	5-1132	2038	PACKING; ARCH CASE COVER	000000	000000
5113220381	5-1132	2038	PACKING; ARCH CASE COVER	000001	000000
5113220402	5-1132	2040	PACKING; WATER PUMP	000001	000000
5113220431	5-1132	2043	PACKING	000000	000000
5113220461	5-1132	2046	PACKING; COVER	000002	000000
5113220481	5-1132	2048	PACKING; STIFFNESS	000000	000000
5113220521	5-1132	2052	PACKING	000000	000001
5113220541	5-1132	2054	PACKING; CHECKING	000017	000000
5113220561	5-1132	2056	PACKING; COVER	000000	000000
5113220581	5-1132	2058	PACKING; COVER 6BB1 (OVAL	000000	000000
5113220660	5-1132	2066	PACKING; COVER CAM GEAR	000003	000000
5113220672	5-1132	2067	PACKING; COVER GEAR CASE	000001	000000
5113220682	5-1132	2068	PACKING	000000	000000
5113220701	5-1132	2070	PACKING;COVER GEAR CASE	000000	000000
5113220710	5-1132	2071	PACKING; PUMP FIX/COVER F	000000	000000
5113220720	5-1132	2072	PACKING; G/CASE COVER	000000	000000
5113220740	5-1132	2074	PACKING; TENSIONER 3KR1	000000	000000
5113220750	5-1132	2075	PACKING;SPACER & COVER	000000	000000
5113220760	5-1132	2076	PACKING; COVER	000000	000000
5113220770	5-1132	2077	PACKING; COVER FRT. & REA	000000	000000
5113220780	5-1132	2078	PACKING; COVER 3KC1/3KR1	000012	000000
5113220790	5-1132	2079	PACKING; CHECK COVER 4JA/	000000	000000
5113250011	5-1132	5001	CVR;BRG,GEAR CA	000000	000001
5113250040	5-1132	5004	COVER;BRG.GEAR	000000	000000
5113270090	5-1132	7009	POINTER; TIMING	000000	000030
5113270100	5-1132	7010	POINTER;TIMING GEAR CASE	000000	000000
5113270140	5-1132	7014	POINTER;TIMING	000001	000000
5113270170	5-1132	7017	POINTER; TIMING	000002	000000
5113270180	5-1132	7018	POINTER; TIMING GEAR CASE	000000	000000
5113270190	5-1132	7019	POINTER; TIMING 2KC1	000001	000000
5113290040	5-1132	9004	SPACER;OIL PUMP	000000	000005
5113290061	5-1132	9006	PACKING; WATER PIPE	000000	000000
5113290071	5-1132	9007	CASE;PTO SHAFT	000000	000000
5113290130	5-1132	9013	PACKING; WATER PUMP	000007	000000
5113290140	5-1132	9014	PACKING; COVER (SMALL OVA	000003	000000
5113290160	5-1132	9016	CASE;PTO SHAFT	000000	000000
5113401052	5-1134	0105	SUPERSEDED**HOUSING	000000	000000
5113401170	5-1134	0117	HSG ASM;FLY WHL	000000	000000
5113401260	5-1134	0126	SUPERSEDED**	000000	000000
5113410031	5-1134	1003	PLATE;RR.CYL.BLOCK	000000	000000
5113410077	5-1134	1007	HOUSING; FLYWHEEL	000000	000000
5113410078	5-1134	1007	HOUSING; FLYWHEEL	000000	000000
5113410127	5-1134	1012	HOUSING FLYWHEE	000000	000000
5113410191	5-1134	1019	HOUSING; FLYWHEEL	000000	000000
5113410192	5-1134	1019	HOUSING; FLYWHEEL	000000	000000
5113410193	5-1134	1019	HOUSING; FLYWHEEL	000000	000001
5113410202	5-1134	1020	HOUSING; FLYWHEEL	000000	000000

5113410253	5-1134	1025	HOUSING; FLYWHEEL 6BB1	000000	000000
5113410300	5-1134	1030	PLATE; REAR	000000	000000
5113410370	5-1134	1037	HOUSING; FLYWHEEL	000000	000000
5113410379	5-1134	1037	HOUSING; FLYWHEEL	000000	000001
5113410386	5-1134	1038	HOUSING; FLYWHEEL	000000	000000
5113410411	5-1134	1041	HOUSING; FLYWHEEL	000000	000000
5113410451	5-1134	1045	PLATE;RR.,CYL.BLOCK	000000	000000
5113410476	5-1134	1047	HOUSING; F/W	000000	000000
5113410532	5-1134	1053	PLATE;RR.CYL.BODY	000000	000000
5113410550	5-1134	1055	PLATE,RR,CYL.BO	000000	000000
5113410566	5-1134	1056	HOUSING; FLY WHEEL	000000	000000
5113410567	5-1134	1056	HOUSING; FLY WHEEL	000000	000000
5113410568	5-1134	1056	HOUSING; FLY WHEEL	000000	000000
5113410594	5-1134	1059	HOUSING; FLYWHEEL	000000	000000
5113410673	5-1134	1067	HOUSING; FLYWHEEL 6BD1	000000	000000
5113410675	5-1134	1067	HOUSING; FLYWHEEL 6BD1	000000	000000
5113410676	5-1134	1067	HOUSING; FLYWHEEL 6BD1	000000	000000
5113410745	5-1134	1074	HOUSING; FLYWHEEL 6BG1	000000	000000
5113410749	5-1134	1074	HOUSING; FLYWHEEL	000000	000000
5113410810	5-1134	1081	HOUSING; FLYWHEEL 6BD1	000000	000000
5113410813	5-1134	1081	HOUSING; FLYWHEEL	000000	000000
5113410816	5-1134	1081	HOUSING; FLYWHEEL	000000	000000
5113410817	5-1134	1081	HOUSING; FLYWHEEL	000000	000000
5113410818	5-1134	1081	HOUSING; FLYWHEEL	000000	000000
5113410819	5-1134	1081	HOUSING; FLYWHEEL	000000	000001
5113410830	5-1134	1083	PLATE,REAR,CYL.	000000	000000
5113410840	5-1134	1084	PLATE;REAR	000000	000000
5113410941	5-1134	1094	HOUSING; FLYWHEEL	000000	000000
5113410970	5-1134	1097	PLATE; REAR	000000	000000
5113411016	5-1134	1101	HOUSING; FLYWHEEL	000000	000000
5113411041	5-1134	1104	HOUSING; FLYWHEEL	000000	000000
5113411042	5-1134	1104	HOUSING; FLYWHEEL	000000	000000
5113411043	5-1134	1104	HOUSING; FLYWHEEL	000001	000000
5113411082	5-1134	1108	HOUSING; FLYWHEEL	000000	000000
5113411084	5-1134	1108	HOUSING; FLYWHEEL	000000	000000
5113411100	5-1134	1110	HOUSING; FLYWHEEL	000000	000000
5113411110	5-1134	1111	HOUSING; FLYWHEEL	000000	000000
5113411150	5-1134	1115	PLATE;REAR CYL. BLOCK	000000	000000
5113411201	5-1134	1120	PLATE;RR.,CYL.BLOCK	000000	000000
5113411212	5-1134	1121	PLATE;REAR	000000	000000
5113411213	5-1134	1121	PLATE;REAR	000000	000000
5113411241	5-1134	1124	PLATE ADAPTOR 3KC1	000000	000000
5113411260	5-1134	1126	PLATE;BLOCK REAR	000000	000000
5113411291	5-1134	1129	HOUSING; FLYWHEEL	000000	000000
5113411300	5-1134	1130	PLATE;RR.CYL.BLOCK	000000	000000
5113411314	5-1134	1131	HOUSING; FLYWHEEL 2KC/3KC	000000	000000
5113411315	5-1134	1131	HOUSING; FLYWHEEL 2KC/3KC	000001	000000

5113411320	5-1134	1132	PLATE; REAR, CYL. BLOCK	000000	000000
5113420020	5-1134	2002	POINTER	000000	000000
5113420040	5-1134	2004	POINT;HSG,TIMIN	000000	000000
5113440011	5-1134	4001	PACKING;HOUSING-CYL.BLOCK	000000	000000
5113490140	5-1134	9014	COVER; CHECK HO	000000	000000
5113490240	5-1134	9024	STIFFENER	000000	000000
5113490370	5-1134	9037	STIFFENER; LH	000000	000000
5113490371	5-1134	9037	STIFFENER; LH	000000	000000
5113490380	5-1134	9038	STIFFENER; RH	000000	000000
5113600041	5-1136	0004	PAN ASM;OIL, W/DRAIN PLUG	000000	000000
5113600042	5-1136	0004	PAN ASM;OIL, W/DRAIN PLUG	000000	000002
5113600254	5-1136	0025	PAN ASM; OIL	000000	000003
5113600260	5-1136	0026	PAN ASM; OIL	000000	000000
5113600262	5-1136	0026	PAN ASM; OIL	000000	000000
5113600721	5-1136	0072	PAN ASM; OIL	000000	000000
5113600722	5-1136	0072	PAN ASM; OIL	000000	000000
5113600730	5-1136	0073	PAN ASM; OIL	000002	000000
5113601261	5-1136	0126	PAN ASM; OIL	000000	000000
5113601340	5-1136	0134	PAN ASM;OIL	000000	000000
5113601370	5-1136	0137	*INVALID*SP8/898	000000	000000
5113601481	5-1136	0148	PAN ASM; OIL	000000	000000
5113601562	5-1136	0156	PAN ASM; OIL	000000	000000
5113601563	5-1136	0156	PAN ASM; OIL	000000	000002
5113601580	5-1136	0158	PAN ASM; OIL	000000	000000
5113601721	5-1136	0172	PAN: OIL	000000	000000
5113601722	5-1136	0172	PAN;OIL	000000	000000
5113601723	5-1136	0172	PAN ASM; OIL FRONT SUMP	000000	000000
5113601763	5-1136	0176	PAN ASM; OIL	000000	000000
5113601833	5-1136	0183	PAN ASM; OIL W/DRAIN PLUG	000002	000000
5113601834	5-1136	0183	PAN ASM; OIL W/DRAIN PLUG	000000	000000
5113602130	5-1136	0213	PAN ASM; OIL	000001	000000
5113602240	5-1136	0224	PAN ASM; OIL	000000	000000
5113602360	5-1136	0236	PAN ASM; OIL	000000	000000
5113602731	5-1136	0273	PAN ASM; OIL	000000	000000
5113603103	5-1136	0310	PAN ASM; OIL	000000	000000
5113603120	5-1136	0312	PAN ASM; OIL	000000	000002
5113603201	5-1136	0320	PAN ASM; OIL	000000	000000
5113603542	5-1136	0354	PAN ASM; OIL W/D C240	000000	000000
5113603543	5-1136	0354	PAN ASM; OIL W/D C240	000000	000017
5113603544	5-1136	0354	PAN ASM; OIL W/D C240	000000	000001
5113603550	5-1136	0355	PAN ASM; OIL	000000	000000
5113603613	5-1136	0361	PAN ASM; OIL	000000	000000
5113603614	5-1136	0361	PAN ASM; OIL	000000	000000
5113603721	5-1136	0372	PAN ASM; OIL 6BB/BD1	000000	000000
5113603770	5-1136	0377	PAN ASM;OIL	000000	000000
5113603771	5-1136	0377	PAN ASM;OIL	000000	000004
5113603901	5-1136	0390	PAN ASM; OIL W/DRAIN PLUG	000000	000000

5113603920	5-1136	0392	PAN ASM; OIL	000000	000000
5113603980	5-1136	0398	PAN ASM; OIL 4BB1	000000	000000
5113603982	5-1136	0398	PAN ASM; OIL 4BB1	000000	000000
5113604012	5-1136	0401	PAN ASM; OIL	000000	000000
5113604030	5-1136	0403	PAN ASM; OIL	000000	000000
5113604081	5-1136	0408	PAN ASM; OIL QD150M	000000	000000
5113604310	5-1136	0431	PAN ASM; OIL 3AB1	000000	000000
5113604361	5-1136	0436	PAN ASM; OIL	000000	000000
5113604362	5-1136	0436	PAN ASM; OIL	000000	000000
5113604420	5-1136	0442	PAN ASM; OIL	000000	000000
5113604461	5-1136	0446	PAN ASM; OIL	000000	000001
5113604481	5-1136	0448	PAN ASM; OIL	000000	000000
5113604541	5-1136	0454	PAN ASM; OIL QD100	000000	000000
5113604560	5-1136	0456	PAN ASM; OIL	000000	000000
5113604620	5-1136	0462	PAN ASM; OIL	000000	000002
5113604720	5-1136	0472	PAN ASM; OIL W/DRAIN PLUG	000000	000000
5113604780	5-1136	0478	PAN ASM; OIL	000000	000000
5113604821	5-1136	0482	PAN ASM; OIL	000000	000000
5113604842	5-1136	0484	PAN ASM; OIL	000000	000000
5113604880	5-1136	0488	PAN ASM; OIL W/DRAIN PLUG	000000	000000
5113604890	5-1136	0489	PAN ASM; OIL,W/DRAIN PLUG	000000	000000
5113604953	5-1136	0495	PAN ASM; OIL	000000	000000
5113604980	5-1136	0498	PAN ASM; OIL	000001	000000
5113604990	5-1136	0499	PAN ASM; OIL 4BD1	000000	000000
5113604992	5-1136	0499	PAN ASM; OIL 4BD1	000000	000000
5113605090	5-1136	0509	PAN ASM; OIL	000000	000000
5113605134	5-1136	0513	PAN ASM; OIL 3KC1	000000	000000
5113605142	5-1136	0514	SUPERSEDED**PAN	000000	000000
5113605163	5-1136	0516	PAN ASM; OIL 2KC1	000001	000000
5113605172	5-1136	0517	PAN ASM; OIL	000000	000000
5113605180	5-1136	0518	PAN ASM; OIL,W/DRAIN PLUG	000000	000000
5113605201	5-1136	0520	PAN ASM; OIL 4BD1	000000	000000
5113605222	5-1136	0522	PAN ASM; OIL 3KC1	000000	000000
5113610192	5-1136	1019	PAN ASM; OIL	000000	000000
5113610380	5-1136	1038	PAN ASM; OIL	000000	000000
5113610604	5-1136	1060	PAN ASM; OIL	000000	000000
5113610971	5-1136	1097	PAN ASM; OIL W/DRAIN PLUG	000000	000000
5113611171	5-1136	1117	FILLER ASM.;OIL	000000	000000
5113611240	5-1136	1124	PAN ASM; OIL	000000	000000
5113611320	5-1136	1132	PAN ASM; OIL, FULL SUMP 4	000000	000000
5113611802	5-1136	1180	PAN ASM; OIL	000000	000000
5113611812	5-1136	1181	PAN ASM; OIL	000000	000000
5113611833	5-1136	1183	PAN ASM; OIL	000000	000000
5113611891	5-1136	1189	PAN ASM.;OIL,W/DRAIN PLUG	000000	000000
5113670030	5-1136	7003	GASKET; OIL PAN TO C/BL	000000	000000
5113670040	5-1136	7004	GASKET; OIL PAN	000000	000000
5113670051	5-1136	7005	GASKET;OIL PAN	000000	000000

5113670060	5-1136	7006	PACKING; OIL PAN	000000	000001
5113670100	5-1136	7010	PACKING	000000	000000
5113670101	5-1136	7010	PACKING	000000	000274
5113670410	5-1136	7041	GASKET; OIL PAN TO C/BL	000000	000000
5113670422	5-1136	7042	PACKING;OIL PAN-CYL.BLOCK	000000	000002
5113670440	5-1136	7044	PACKING; OIL PAN 4BA1	000000	000000
5113670441	5-1136	7044	PACKING; OIL PAN 4BA1	000000	000000
5113670442	5-1136	7044	PACKING; OIL PAN 4BA1	000001	000000
5113670520	5-1136	7052	PACKING; OIL PAN	000000	000000
5113670560	5-1136	7056	PACKING; OIL PAN TO CYL B	000000	000001
5113670600	5-1136	7060	PACKING; OIL PAN-CYL. BLO	000000	000000
5113670620	5-1136	7062	GASK;CVR O/PAN	000000	000000
5113670621	5-1136	7062	GSKT;CVR,O/PAN	000000	000000
5113670630	5-1136	7063	GASKET; OIL PAN	000000	000000
5113670640	5-1136	7064	GASKET,PAN PLAT	000000	000002
5113670663	5-1136	7066	PACKING; OIL PAN, BLOCK 3	000000	000000
5113670670	5-1136	7067	PACKING; OIL PAN 3KR1	000000	000000
5113670671	5-1136	7067	PACKING; OIL PAN 3KR1	000000	000000
5113670672	5-1136	7067	PACKING; OIL PAN 3KR1	000000	000000
5113670680	5-1136	7068	PACKING; OIL PAN	000000	000000
5113670690	5-1136	7069	PACKING; OIL PAN	000001	000000
5113690320	5-1136	9032	COVER	000075	000000
5113690380	5-1136	9038	NIPPLE,VAC.PUMP	000003	000000
5113690390	5-1136	9039	HOSE*	000000	000000
5113690480	5-1136	9048	COVER;OIL PAN	000000	000000
5113690500	5-1136	9050	COVER; OIL. PAN	000000	000000
5113690590	5-1136	9059	HOSE; RUBBER	000000	000000
5113690610	5-1136	9061	HOSE	000000	000000
5113690720	5-1136	9072	SPACER 6RB1	000000	000157
5113690790	5-1136	9079	HOSE; RUBBER	000000	000000
5113690810	5-1136	9081	HOSE;RUBBER	000000	000000
5113690820	5-1136	9082	BRKT;SPACR O/PA	000000	000000
5113690840	5-1136	9084	HOSE; RUBBER, OIL PIPE	000000	000000
5113690870	5-1136	9087	HOSE,RUBBER,C/C	000000	000000
5113690880	5-1136	9088	TUBE; DIST L=68	000000	000000
5113690891	5-1136	9089	PLATE;OIL PAN	000000	000000
5113690901	5-1136	9090	PLATE;OIL PAN	000000	000000
5113690912	5-1136	9091	TUBE;RUBBER	000000	000045
5113690924	5-1136	9092	STUD; OIL PAN	000000	000000
5113690953	5-1136	9095	BOLT ASM;O/PAN	000000	000000
5113690954	5-1136	9095	BOLT ASM;O/PAN	000000	000000
5113690955	5-1136	9095	BOLT ASM;O/PAN	000000	000138
5113690960	5-1136	9096	CVR;O/PAN SWITC	000000	000000
5113690970	5-1136	9097	NIPPLE; PAN-BREATHER	000000	000000
5113690990	5-1136	9099	PLATE; O/PAN RH	000000	000000
5113691000	5-1136	9100	PLATE;O/PAN LH	000000	000000
5113691010	5-1136	9101	STUD; OIL PAN	000000	000828

5113691050	5-1136	9105	COVER;OIL PAN	000000	000000
5113698040	5-1136	9804	HOSE; RUBBER, OIL PIPE	000000	000000
5115100020	5-1151	0002	METAL KIT; CRANK	000003	000002
5115100100	5-1151	0010	METAL KIT; CRANK STD	000000	000002
5115100111	5-1151	0011	METAL KIT; MAIN	000005	000000
5115100130	5-1151	0013	METAL KIT	000000	000000
5115100131	5-1151	0013	METAL KIT	000000	000000
5115100200	5-1151	0020	METAL KIT;CRK	000000	000000
5115100202	5-1151	0020	METAL KIT;CRK	000000	000000
511510021T			METAL KIT; MAIN	000000	000000
5115100210			METAL KIT; MAIN	000000	000000
5115100211	5-1151	0021	METAL KIT; MAIN	000009	000405
5115100330			METAL SET; CRANKSHAFT	000000	000000
5115100331			METAL SET; CRANKSHAFT	000000	000000
5115100360			METAL KIT; CRANK	000000	000000
5115100410	5-1151	0041	METAL KIT; CRANK	000000	000000
5115100480	5-1151	0048	METAL KIT	000000	000000
5115100481	5-1151	0048	METAL KIT	000000	000000
5115100510	5-1151	0051	METAL KIT	000000	000000
5115100541	5-1151	0054	METAL KIT; CRANK	000001	000000
5115100600	5-1151	0060	METAL KIT; CRANK	000000	000000
5115100610	5-1151	0061	METAL KIT; CRANK STD	000000	000002
5115100620	5-1151	0062	METAL KIT; CRANK	000000	000000
5115100640	5-1151	0064	METAL SET; MAIN	000000	000000
5115100650	5-1151	0065	METAL KIT; CRANK	000000	000000
5115100660	5-1151	0066	METAL KIT; CRANK	000002	000000
5115300050	5-1153	0005	METAL KIT, MAIN	000000	000000
5115300100	5-1153	0010	METAL KIT; .25 CRANK	000000	000000
5115300111	5-1153	0011	METAL KIT; .25 CRANK	000000	000000
5115300211	5-1153	0021	METAL KIT, MAIN	000000	000013
5115300360	5-1153	0036	METAL KIT; CRANK	000000	000000
5115300480	5-1153	0048	METAL KIT	000000	000000
5115300481	5-1153	0048	METAL KIT	000000	000163
5115300541	5-1153	0054	METAL KIT; .25 MAIN	000001	000002
5115300640	5-1153	0064	METAL KIT	000000	000000
5115400020	5-1154	0002	METAL KIT; .50 CRANK	000000	000015
5115400100	5-1154	0010	METAL KIT; .50 CRANK	000000	000000
5115400111	5-1154	0011	METAL KIT; .50 CRANK	000000	000012
5115400200	5-1154	0020	METAL KIT	000000	000000
5115400201	5-1154	0020	METAL KIT	000000	000000
5115400202	5-1154	0020	METAL KIT	000000	000000
5115400211	5-1154	0021	METAL KIT, MAIN	000000	000009
5115400360	5-1154	0036	METAL KIT; CRANK	000000	000000
5115400410	5-1154	0041	METAL KIT; .50 CRANK	000000	000000
5115400480	5-1154	0048	METAL KITS; CR & S	000000	000000
5115400481	5-1154	0048	METAL KITS; CR & S	000002	000000
5115400510	5-1154	0051	METAL KIT; CRANK	000000	000000

5115400540	5-1154	0054	METAL KIT; .50 CRANK	000000	000000
5115400541	5-1154	0054	METAL KIT; .50 CRANK	000000	000000
5115400600	5-1154	0060	METAL KIT; .50 CRANK	000001	000000
5115400650	5-1154	0065	METAL KIT; .50 CRANK	000004	000000
5115500211	5-1155	0021	METAL KIT; .75 CRANK	000010	000000
5115500640			METAL KIT	000000	000000
5115600020			METAL KIT; CRANK	000000	000001
5115600100	5-1156	0010	METAL KIT; CRANK	000000	000000
5115600111	5-1156	0011	BRG KIT*DISCONTINUED*	000000	000000
5115600211	5-1156	0021	METAL KIT, MAIN	000009	000000
5115600540	5-1156	0054	METAL KIT; 1.00 CRANK	000000	000000
5115600541	5-1156	0054	METAL KIT; 1.00 CRANK	000000	000000
5115600600	5-1156	0060	METAL KIT; 1.00 CRANK	000000	000000
5115600640	5-1156	0064	METAL KIT; 1.00 CRANK	000000	000000
5115600650	5-1156	0065	METAL KIT; 1.00 CRANK	000000	000000
5115990023	5-1159	9002	METAL KIT, THRUST	000000	000029
5115990031	5-1159	9003	METAL KIT, THRUST	000000	000000
5116100010	5-1161	0001	METAL KIT;CAMS	000000	000000
5116100020	5-1161	0002	METAL KIT;CAMS	000000	000018
5116110080	5-1161	1008	BEARING;CAM.	000000	000000
5116110090	5-1161	1009	METAL CAM	000000	000000
5116110100	5-1161	1010	METAL SET	000000	000000
5116110101	5-1161	1010	METAL SET	000000	000000
5116110130	5-1161	1013	METAL BEARING; CAM FRT	000000	000000
5116130010	5-1161	3001	METAL CAM	000000	000000
5116310080	5-1163	1008	METAL; CAM,UNSI=0.25 FRT.	000000	000000
5116310090	5-1163	1009	METAL; CAM,UNSI=0.25 CTR.	000000	000000
5116330010	5-1163	3001	METAL; CAM, UNSI=0.25 RR.	000003	000000
5116410080	5-1164	1008	METAL; CAM,UNSI=0.50 FRT.	000001	000000
5116410090	5-1164	1009	METAL; CAM,UNSI=0.50 CTR.	000001	000000
5116430010	5-1164	3001	METAL; CAM, UNSI=0.50 RR.	000001	000000
5116810080	5-1168	1008	THRUST PLATE;CAM SHAFT	000001	000000
5116850010	5-1168	5001	WASHER; THRUST,CR/SH	000000	000000
5116910080	5-1169	1008	METAL CAM	000000	000000
5116910090	5-1169	1009	METAL CAM	000000	000000
5116910130	5-1169	1013	METAL BEARING; CAM FRT	000000	000001
5116930010	5-1169	3001	METAL CAM	000000	000000
5117110160	5-1171	1016	VALVE SEAT; INSERT, EXHAU	000000	000000
5117110210	5-1171	1021	INSERT; VLV SEAT, EXH.	000000	000161
5117110220	5-1171	1022	INSERT; VLV SEAT, EXH.	000000	000000
5117110260	5-1171	1026	INSERT VALVE,SE	000000	000023
5117110280	5-1171	1028	INSERT; VALVE S	000000	000147
5117110292	5-1171	1029	VALVE SEAT	000000	000016
5117110320	5-1171	1032	SEAT; VALVE INSERT	000000	000019
5117110360	5-1171	1036	VALVE SEAT	000010	000000
5117110371	5-1171	1037	VALVE SEAT,INLET	000000	000000
5117110372	5-1171	1037	VALVE SEAT,INLET	000000	000000

5117150180	5-1171	5018	INTAKE VALVE SEAT	000005	000000
5117150230	5-1171	5023	INSERT VALVE, SE	000000	000016
5117150240	5-1171	5024	VALVE SEAT; INSERT	000000	000000
5117150260	5-1171	5026	VALVE SEAT	000000	000000
5117150290	5-1171	5029	SEAT*DISCONTINUED*	000000	000000
5117150310	5-1171	5031	SEAT; VALVE INSERT	000100	000013
5117150340	5-1171	5034	VALVE SEAT	000010	000000
5117150352	5-1171	5035	VALVE SEAT; INSERT 3KC1	000000	000020
5117210010	5-1172	1001	GUIDE; VALVE, INL & EXH	000000	000000
5117210060	5-1172	1006	VALVE GUIDE; INLET & EXHA	000001	000000
5117210130	5-1172	1013	VALVE GUIDE	000007	000000
5117210151	5-1172	1015	GUIDE; VALVE, INL	000000	000204
5117210160	5-1172	1016	GUIDE, VALVE INL	000077	000569
5117400030	5-1174	0003	BREATHER ASM; AIR	000000	000000
5117400211	5-1174	0021	BREATHER ASM; AIR	000000	000000
5117400212	5-1174	0021	BREATHER ASM; AIR	000000	000000
5117400463	5-1174	0046	FILLER ASM.; OIL	000000	000000
5117400660	5-1174	0066	BREATHER; PIPE	000000	000000
5117400700	5-1174	0070	BREATHER ASM; AIR	000000	000000
5117400720	5-1174	0072	BREATHER ASM; AIR	000000	000000
5117400790	5-1174	0079	FILLER ASM.; OIL	000000	000000
5117400830	5-1174	0083	BREATHER ASM.	000000	000000
5117400870	5-1174	0087	SUPERSEDED**FILLER	000000	000000
5117400871	5-1174	0087	SUPERSEDED**FILLER	000000	000000
5117400920	5-1174	0092	FILLER ASM; OIL	000000	000000
5117401102	5-1174	0110	FILLER ASM; OIL 6BD1	000000	000000
5117401141	5-1174	0114	BREATHER ASM; AIR	000000	000000
5117401200	5-1174	0120	BREATHER ASM; AIR	000000	000001
5117401220	5-1174	0122	BREATHER ASM	000000	000003
5117401230	5-1174	0123	BREATHER ASM; AIR	000000	000000
5117401260	5-1174	0126	BREATHER ASM	000000	000007
5117401270	5-1174	0127	BREATHER ASM; AIR	000000	000000
5117401271	5-1174	0127	BREATHER ASM; AIR	000000	000002
5117401311	5-1174	0131	BREATHER ASM.; AIR	000000	000000
5117401340	5-1174	0134	BREATHER ASM; AIR 4BD1	000000	000001
5117401351	5-1174	0135	BREATHER ASM.; AIR	000000	000000
5117401352	5-1174	0135	BREATHER ASM.; AIR	000000	000000
5117401400	5-1174	0140	BREATHER 6BD1	000002	000000
5117401410	5-1174	0141	BREATHER ASM; AIR	000000	000000
5117401411	5-1174	0141	BREATHER ASM; AIR	000000	000003
5117401420	5-1174	0142	BREATHER ASM; AIR C240	000000	000000
5117401450	5-1174	0145	FILLER ASM; OIL 3KC1/3KR1	000000	000000
5117410010	5-1174	1001	FILLER ASM; OIL	000000	000000
5117410041	5-1174	1004	FILLER ASM; OIL	000000	000000
5117410060	5-1174	1006	PIPE; OIL FILTER	000000	000000
5117410080	5-1174	1008	FILLER ASM; OIL	000000	000000
5117410100	5-1174	1010	FILLER ASM; OIL	000001	000000

5117410101	5-1174	1010	FILLER ASM; OIL	000000	000000
5117410110	5-1174	1011	FILLER ASM; OIL	000000	000000
5117410151	5-1174	1015	FILLER ASM; OIL	000000	000000
5117410221	5-1174	1022	FILLER ASM; OIL	000000	000000
5117410250	5-1174	1025	FILLER ASM; OIL	000000	000000
5117420120	5-1174	2012	PIPE; BREATHER, OIL FILLE	000000	000001
5117420200	5-1174	2020	PIPE; DRAIN	000000	000000
5117420240	5-1174	2024	PIPE; BREATHER	000000	000000
5117420430	5-1174	2043	PIPE; BREATHER 3KC1/3KR1	000000	000000
5117490100	5-1174	9010	BRACKET; OIL FILLER & GUI	000000	000000
5117490220	5-1174	9022	BRKT;BREATHER	000000	000000
5117490320	5-1174	9032	HOSE; BREATHER	000000	000000
5117490321	5-1174	9032	HOSE; BREATHER	000000	000000
5117490330	5-1174	9033	HOSE;BREATHER	000001	000011
5117490340	5-1174	9034	BRACKET; BREATHER	000002	000000
5117490350	5-1174	9035	BRACKET; BREATHER MOUNTIN	000000	000000
5117490440	5-1174	9044	BRACKET; BREATHER	000000	000001
5117500021	5-1175	0002	CAP; OIL FILLER 3KC1/3KR1	000003	000001
5117500030	5-1175	0003	CAP ASM; LEVEL GAUGE	000000	000000
5117510080	5-1175	1008	CAP ASM.;OIL FILLER	000002	000000
5117600030	5-1176	0003	GAUGE ASM; OIL LEVEL	000000	000000
5117600250	5-1176	0025	DIP STICK *FAXDN8/1179**	000000	000000
5117600281	5-1176	0028	GAUGE; OIL LEVEL L1-232	000000	000001
5117600300	5-1176	0030	GAUGE;OIL LEVEL	000000	000000
5117600521	5-1176	0052	GAUGE ASM; OIL LEVEL	000000	000000
5117600531	5-1176	0053	GAUGE ASM; OIL LEVEL	000001	000001
5117600540	5-1176	0054	GAUGE ASM; OIL LEVEL	000000	000000
5117600541	5-1176	0054	GAUGE ASM; OIL LEVEL	000002	000000
5117600542	5-1176	0054	GAUGE ASM; OIL LEVEL	000000	000000
5117600551	5-1176	0055	GAUGE ASM; OIL	000002	000000
5117600552	5-1176	0055	GAUGE ASM; OIL	000000	000000
5117600553	5-1176	0055	GAUGE ASM; OIL	000000	000000
5117600670	5-1176	0067	GAUGE ASM; OIL LEVEL	000000	000000
5117600700	5-1176	0070	GAUGE ASM; OIL LEVEL	000000	000000
5117600750	5-1176	0075	GAUGE; OIL LEVER	000000	000000
5117600890	5-1176	0089	GAUGE ASM; OIL LEVEL	000000	000000
5117600920	5-1176	0092	GAUGE ASM; OIL LEVEL	000000	000000
5117600930	5-1176	0093	GAUGE ASM; OIL LEVEL	000000	000000
5117600931	5-1176	0093	GAUGE ASM; OIL LEVEL	000000	000000
5117600950	5-1176	0095	GAUGE ASM;OIL	000000	000000
5117600970	5-1176	0097	GAUGE ASM; OIL LEVEL	000000	000000
5117601000	5-1176	0100	GAUGE ASM.; OIL LEVEL	000000	000000
5117601020	5-1176	0102	GAUGE ASM; OIL LEVEL	000000	000000
5117601040	5-1176	0104	GAUGE ASM.; OIL LEVEL	000000	000000
5117601100	5-1176	0110	GAUGE ASM; LEVEL	000000	000000
5117601120	5-1176	0112	GAUGE ASM; OIL LEVEL C240	000000	000000
5117601140	5-1176	0114	GAUGE ASM; OIL LEVEL	000000	000000

5117601220	5-1176	0122	GAUGE ASM; OIL LEVEL 3AB1	000000	000000
5117601260	5-1176	0126	GAUGE ASM; OIL LEVEL	000000	000000
5117601320	5-1176	0132	CAP ASM.;OIL	000000	000000
5117601330	5-1176	0133	CAP ASM	000000	000000
5117601370	5-1176	0137	CAP ASM.;OIL	000000	000000
5117601410	5-1176	0141	GAUGE ASM; OIL LEVEL	000000	000000
5117601450	5-1176	0145	CAP ASM.;OIL	000000	000000
5117601470	5-1176	0147	GAUGE ASM; OIL LEVEL C240	000000	000001
5117601491	5-1176	0149	GAUGE ASM; OIL LEVEL	000001	000000
5117601500	5-1176	0150	GAUGE ASM; OIL LEVEL 4BD1	000000	000000
5117601501	5-1176	0150	GAUGE ASM; OIL LEVEL 4BD1	000000	000003
5117601580	5-1176	0158	GAUGE ASM; OIL LEVEL	000000	000000
5117601620	5-1176	0162	GAUGE ASM:LEVEL	000000	000000
5117601631	5-1176	0163	GAUGE ASM; OIL LEVEL	000000	000000
5117601642	5-1176	0164	GAUGE ASM; OIL LEVEL 2KC1	000000	000000
5117601680	5-1176	0168	GAUGE ASM; OIL LEVEL	000000	000000
5117660280	5-1176	6028	TUBE*INVALID*	000000	000000
5117660301	5-1176	6030	TUBE ASM; OIL GUIDE	000000	000000
5117660361	5-1176	6036	TUBE ASM; OIL GUIDE	000000	000000
5117660380	5-1176	6038	TUBE ASM; OIL GUIDE C240	000000	000000
5117660381	5-1176	6038	TUBE ASM; OIL GUIDE C240	000001	000000
5117660430	5-1176	6043	TUBE; OIL GAUGE	000000	000000
5117660560	5-1176	6056	TUBE ASM; OIL GUIDE	000000	000000
5117660620	5-1176	6062	TUBE ASM; OIL GUIDE	000000	000000
5117660711	5-1176	6071	TUBE; GUIDE	000000	000000
5117660720	5-1176	6072	BRACKET; GUIDE TUBE	000000	000000
5117660760	5-1176	6076	TUBE; GUIDE	000000	000000
5117660782	5-1176	6078	TUBE ASM; OIL GUIDE	000000	000000
5117660791	5-1176	6079	TUBE ASM; OIL GUIDE	000000	000000
5117660800	5-1176	6080	TUBE ASM; OIL GUIDE	000000	000000
5117690111	5-1176	9011	BRACKET; GUIDE TUBE CLIP	000000	000000
5117690112	5-1176	9011	BRACKET; GUIDE TUBE CLIP	000000	000000
5117690130	5-1176	9013	TUBE ASM; OIL GUIDE	000000	000000
5117710011	5-1177	1001	FOOT; ENGINE LH	000000	000000
5117710220	5-1177	1022	FOOT; ENGINE RH	000004	000000
5117710280	5-1177	1028	VALVE SEAT;INSERT EXH.	000000	000000
5117710300	5-1177	1030	FOOT; ENGINE, LH.	000000	000000
5117710312	5-1177	1031	FOOT;ENG. (RH)	000000	000007
5117710322	5-1177	1032	FOOT;ENG. (LH)	000000	000007
5117710381	5-1177	1038	FOOT; ENGINE C190	000000	000000
5117710501	5-1177	1050	FOOT; ENGINE LH	000000	000000
5117710521	5-1177	1052	FOOT,ENGINE	000000	000000
5117710551	5-1177	1055	FOOT	000000	000000
5117710580	5-1177	1058	FOOT; ENGINE RR LH	000000	000000
5117710720	5-1177	1072	FOOT; ENGINE, LH.	000000	000000
5117710730	5-1177	1073	FOOT; ENGINE, RH.	000000	000000
5117710750	5-1177	1075	FOOT; ENGINE RH	000000	000000

5117710760	5-1177	1076	FOOT; ENGINE LH	000000	000000
5117710860	5-1177	1086	FOOT; ENGINE, RH 4JB1	000000	000000
5117710861	5-1177	1086	FOOT; ENGINE, RH 4JB1	000006	000000
5117710871	5-1177	1087	FOOT; ENGINE, LH 4JB1	000000	000000
5117710872	5-1177	1087	FOOT; ENGINE, LH 4JB1	000006	000000
5117711070	5-1177	1107	FOOT; ENGINE RH	000000	000000
5117711071	5-1177	1107	FOOT; ENGINE RH	000000	000000
5117711080	5-1177	1108	FOOT; ENGINE LH	000003	000000
5117711081	5-1177	1108	FOOT; ENGINE LH	000000	000000
5117711163	5-1177	1116	FOOT; ENG, RH	000000	000000
5117711173	5-1177	1117	FOOT; ENG, LH	000000	000000
5117711301	5-1177	1130	FOOT; ENGINE	000008	000000
5117711320	5-1177	1132	FOOT; ENGINE FRT RH	000000	000000
5117711330	5-1177	1133	FOOT; ENGINE FRT LH	000000	000000
5117711500	5-1177	1150	FOOT; ENGINE LH	000008	000000
5117711530	5-1177	1153	HANGER; REAR 2KC1	000000	000000
5117711550	5-1177	1155	FOOT; ENG FRT CYL BLOCK	000000	000000
5117711580	5-1177	1158	FOOT; ENG. HANGER 3KB1	000015	000006
5117711600	5-1177	1160	FOOT; ENG HANGER R.R.	000000	000000
5117711620	5-1177	1162	FOOT; ENGINE 2KC1	000000	000000
5117711630	5-1177	1163	HANGER; REAR 2KC1	000000	000000
5117711631	5-1177	1163	HANGER; REAR 2KC1	000000	000000
5117711640	5-1177	1164	FOOT; ENGINE,	000000	000000
5117730030	5-1177	3003	FOOT	000000	000000
5117730120	5-1177	3012	FOOT; ENGINE REAR	000001	000000
5117770010	5-1177	7001	HANGER; FRONT, ENGINE LIF	000000	000000
5117770040	5-1177	7004	HANGER; FRONT, ENGINE LIF	000000	000000
5117770080	5-1177	7008	HANGER; FRONT	000000	000000
5117770380	5-1177	7038	HANGER; ENGINE	000000	000000
5117770480	5-1177	7048	HANGER; FT ENGINE LIFTING	000000	000000
5117770481	5-1177	7048	HANGER; FT ENGINE LIFTING	000000	000000
5117770490	5-1177	7049	HANGER; ENGINE FRONT	000000	000000
5117770521	5-1177	7052	HANGER; FRT ENGINE LIFTIN	000000	000000
5117770540	5-1177	7054	HANGER,ENG.LIFT	000038	000000
5117770550	5-1177	7055	HANGER;ENG.LI	000000	000000
5117770551	5-1177	7055	HANGER; ENG,LIFT	000000	000002
5117770620	5-1177	7062	HANGER; ENGINE RR	000000	000000
5117770640	5-1177	7064	HGR; ENG. LIFT	000000	000000
5117770680	5-1177	7068	HANGER; ENGINE RR	000000	000000
5117770690	5-1177	7069	HANGER; ENGINE LIFT 4BD1	000000	000000
5117790010	5-1177	9001	SPACER	000000	000060
5121110130	5-1211	1013	PISTON; STD	000000	000000
5121110640	5-1211	1064	PISTONS	000000	000000
5121110641	5-1211	1064	PISTONS	000000	000000
5121110650	5-1211	1065	PISTONS	000003	000000
5121110682	5-1211	1068	PISTON; STD	000000	000000
5121111190	5-1211	1119	PISTON; STD	000000	000000

5121111370	5-1211	1137	PISTON; STD	000000	000000
5121111720	5-1211	1172	PISTON	000000	000000
5121111760	5-1211	1176	PISTON	000000	000000
5121111921	5-1211	1192	PISTON	000000	000000
5121111980	5-1211	1198	PISTON; STD	000000	000000
5121111981	5-1211	1198	PISTON; STD	000000	000000
5121112021	5-1211	1202	PISTON; STD	000000	000000
5121112030	5-1211	1203	PISTON; STD	000000	000000
5121112031	5-1211	1203	PISTON; STD	000000	000000
5121112111	5-1211	1211	PISTON; STD	000000	000000
5121112120	5-1211	1212	PISTON,STD.	000000	000000
5121112250	5-1211	1225	PISTON; STD	000000	000000
5121112251	5-1211	1225	PISTON; STD	000000	000000
5121112260	5-1211	1226	PISTON; 3-RING C240/AMC	000006	000000
5121112282	5-1211	1228	PISTON	000000	000000
5121112302	5-1211	1230	PISTON	000000	000000
5121112410	5-1211	1241	PISTON; STD	000000	000000
5121112421	5-1211	1242	PISTON; STD	000000	000006
5121112650	5-1211	1265	PISTON; STD	000000	000000
5121130570	5-1211	3057	PISTONS	000000	000000
5121140641	5-1211	4064	PISTON; .50	000001	000001
5121141191	5-1211	4119	PISTON; .50	000000	000000
5121141371	5-1211	4137	PISTON; .50	000000	000000
5121141980	5-1211	4198	PISTON; .50	000000	000000
5121142021	5-1211	4202	PISTON	000000	000000
5121142031	5-1211	4203	PISTON; .50	000000	000032
5121142120	5-1211	4212	PISTON,OVSI 0.5	000004	000053
5121142282	5-1211	4228	PISTON; .50	000000	000000
5121142310	5-1211	4231	PISTON; O/S	000001	000000
5121142410	5-1211	4241	PISTON*DISCONTINUED*	000000	000000
5121160570	5-1211	6057	PISTON	000000	000000
5121160640	5-1211	6064	PISTON; 1.00	000000	000000
5121160641	5-1211	6064	PISTON; 1.00	000004	000000
5121161190	5-1211	6119	PISTON; 1.00	000000	000000
5121161191	5-1211	6119	PISTON; 1.00	000000	000000
5121161370	5-1211	6137	PISTON	000000	000000
5121161371	5-1211	6137	PISTON; 1.00	000000	000000
5121161980	5-1211	6198	PISTON; 1.00	000000	000000
5121162021	5-1211	6202	PISTON	000000	000004
5121162030	5-1211	6203	PISTON OVSI; 1.00	000000	000000
5121162031	5-1211	6203	PISTON OVSI; 1.00	000000	000003
5121162120	5-1211	6212	PISTON,OVSI 1.0	000000	000000
5121162282			PISTON; O/S=1.0	000000	000003
5121162410			PISTON; 1.00	000000	000000
5121210010	5-1212	1001	RING SET; PISTON	000000	000000
5121210040	5-1212	1004	RING SET; PISTO	000000	000000
5121210042	5-1212	1004	RING SET;PISTON	000059	000047

5121210050	5-1212	1005	RING SET;PISTON	000118	000554
5121210070	5-1212	1007	PISTON RING	000000	000036
5121210090			RING SET; PISTON	000000	000004
5121210100			PISTON RING	000000	000009
5121210110			RING SET; PISTON	000000	000004
5121210120			RING SET; PISTON	000000	000003
5121210130	5-1212	1013	PISTON RING SET	000000	000000
5121210140	5-1212	1014	PISTON RING	000000	000003
5121210152	5-1212	1015	RING SET; PISTON	000020	000000
5121210170	5-1212	1017	PISTON RING SET	000000	000000
5121210190	5-1212	1019	RING SET; PISTON	000000	000021
5121210210	5-1212	1021	RING SET; PISTON	000000	000000
5121210221	5-1212	1022	RING SET; PISTON, STD 3-R	000000	000000
5121210290			RING SET;PISTON	000000	000000
5121210310	5-1212	1031	RING SET; PISTON	000000	000005
5121230130	5-1212	3013	RING SET; .25 PISTON	000000	000000
5121240100	5-1212	4010	4 RING SET; PISTON	000000	000005
5121240110	5-1212	4011	RING SET; PISTON STANDARD	000000	000000
5121240120	5-1212	4012	RING SET; PISTON	000002	000000
5121240130	5-1212	4013	PISTON RING	000000	000000
5121240170	5-1212	4017	PISTON RING SET	000000	000000
5121240220	5-1212	4022	RING SET; PISTON	000000	000000
5121250130	5-1212	5013	RING SET; .75 PISTON	000000	000000
5121260100	5-1212	6010	PISTON RINGS	000000	000012
5121260110			RING SET; PISTON	000001	000000
5121260120			RING SET; PISTON	000000	000003
5121260130			PISTON RINGS	000000	000000
5121260170	5-1212	6017	PISTON RING SET	000000	000000
5121260221	5-1212	6022	RING SET; PISTON	000000	000000
5121410030	5-1214	1003	RING; CMPR 1ST	000000	000000
5121810090	5-1218	1009	SUPERSEDED**	000000	000000
5121810102	5-1218	1010	SUPERSEDED**RING SET	000000	000000
5121810110	5-1218	1011	SUPERSEDED**5-1212 1010 X	000000	000000
5121810150	5-1218	1015	SUPERSEDED**RING SET	000000	000000
5121810200	5-1218	1020	SUPERSEDED**	000000	000000
5121810232	5-1218	1023	SUPERSEDED**RING KIT	000000	000000
5121810250	5-1218	1025	SUPERSEDED**RING SET	000000	000000
5121810270	5-1218	1027	SUPERSEDED**RING KIT	000000	000000
5121810300			PISTON RING KIT; STD.	000000	000000
5121840112			SUPERSEDED**RING KIT	000000	000000
5121860112	5-1218	6011	SUPERSEDED**RING KIT	000000	000000
5122110090	5-1221	1009	PISTON PIN	000000	000000
5122110100	5-1221	1010	PISTON PIN	000000	000003
5122110130	5-1221	1013	PIN; PISTON	000000	000000
5122110170	5-1221	1017	PIN,PISTON	000000	000000
5122110180	5-1221	1018	PIN;PISTON	000000	000046
5122110210	5-1221	1021	PIN; PISTON	000000	000028

5122110220	5-1221	1022	PIN; PISTON	000016	000000
5122110231	5-1221	1023	PIN; PISTON	000000	000005
5122110240	5-1221	1024	PISTON PIN	000000	000000
5122110251	5-1221	1025	PIN; PISTON	000000	000012
5122300140	5-1223	0014	CONNECTOR ROD	000000	000000
5122300230	5-1223	0023	ROD ASM; CONN	000001	000000
5122300250	5-1223	0025	CON ROD ASSY	000000	000000
5122300270	5-1223	0027	ROD ASM; CONN	000000	000000
5122300280	5-1223	0028	CONN ROD	000000	000000
5122300350	5-1223	0035	ROD ASM,CONNECT	000000	000000
5122300351			ROD ASM;CONNECT	000000	000000
5122300360			CONNECTOR ROD	000000	000000
5122300361			CONNECTOR ROD	000000	000002
5122300391	5-1223	0039	ROD ASM; CONN	000000	000013
5122300401	5-1223	0040	ROD ASM; CONN	000000	000000
5122300410	5-1223	0041	ROD ASM; CONN	000000	000000
5122300462	5-1223	0046	ROD ASM; CONN W/O BRG	000004	000000
5122300531	5-1223	0053	ROD ASM; CONN	000000	000002
5122300542			ROD; CONN.	000000	000000
5122300560			ROD ASM; CONN	000006	000000
5122300581	5-1223	0058	ROD ASM; CONN	000000	000000
5122300592	5-1223	0059	ROD ASM; CONN	000000	000000
5122350051	5-1223	5005	BOLT;CONN ROD C	000000	000126
5122350060	5-1223	5006	CON ROD BOLT	000605	000000
5122350081	5-1223	5008	BOLT; CONN ROD	000000	000000
5122350090	5-1223	5009	BOLT,CONNECTING	000000	000000
5122510050	5-1225	1005	BUSHING,CONNECT	000000	000051
5122510060	5-1225	1006	BUSHING;CONN ROD	000000	000000
5122510070	5-1225	1007	BUSHING;SMALL E	000000	000000
5122510071	5-1225	1007	BUSHING;SMALL E	000000	000000
5122510090	5-1225	1009	BUSH; CONN ROD	000113	000000
5122710050	5-1227	1005	METAL SET	000000	000000
5122710100	5-1227	1010	METAL SET; CONN ROD	000000	000000
5122710141	5-1227	1014	METAL SET; C-ROD	000000	000066
5122730050	5-1227	3005	METAL SET; .25 C-ROD	000000	000000
5122730100	5-1227	3010	METAL SET; .25 C-ROD	000001	000000
5122740050	5-1227	4005	METAL SET.CON	000000	000000
5122740100	5-1227	4010	BRG.SET ROD.50	000000	000000
5122750050	5-1227	5005	METAL	000000	000000
5122760050	5-1227	6005	METAL SET; 1.00 C-ROD	000000	000000
5123100021	5-1231	0002	SUPERSEDED**CRANKSHAFT	000000	000000
5123100081	5-1231	0008	CRANKSHAFT ASM	000000	000000
5123100095	5-1231	0009	CRANKSHAFT ASM	000000	000000
5123100171	5-1231	0017	SUPERSEDED**	000000	000000
5123100283	5-1231	0028	CRANKSHAFT ASM; SPLINE	000000	000000
5123100332	5-1231	0033	SUPERSEDED**CRANKSHAFT	000000	000000
5123100400	5-1231	0040	CRANKSHAFT ASM	000000	000000

5123100402	5-1231	0040	CRANKSHAFT ASM	000000	000000
5123100482	5-1231	0048	SUPERSEDED**	000000	000000
5123100491	5-1231	0049	CRANKSHAFT (SUPERCEDED)	000000	000000
5123100501	5-1231	0050	SUPERSEDED**CRANKSHAFT	000000	000000
5123100611	5-1231	0061	SUPERSEDED**CRANKSHAFT	000000	000000
5123100630	5-1231	0063	SUPERSEDED**CRANKSHAFT	000000	000000
5123100660	5-1231	0066	CRANKSHAFT ASM C240-UNLIS	000000	000000
5123100661	5-1231	0066	CRANKSHAFT ASM C240-UNLIS	000000	000000
5123100730	5-1231	0073	SUPERSEDED**CRANKSHAFT	000000	000000
5123100781	5-1231	0078	CRANKSHAFT ASM	000000	000000
5123100791	5-1231	0079	CRANKSHAFT ASM	000000	000000
5123100801	5-1231	0080	CRANKSHAFT ASM; SPLINE	000000	000000
5123100811	5-1231	0081	CRANKSHAFT ASM; SPLINE	000000	000000
5123100880	5-1231	0088	SUPERSEDED**CRANKSHAFT	000000	000000
5123100890	5-1231	0089	CRANKSHAFT ASM	000000	000000
5123100900	5-1231	0090	CRANKSHAFT ASM	000000	000000
5123100920	5-1231	0092	SUPERSEDED**CRANKSHAFT	000000	000000
5123100930	5-1231	0093	SUPERSEDED**CRANKSHAFT	000000	000000
5123100980	5-1231	0098	CRANKSHAFT ASM; SPLINE	000000	000000
5123101040	5-1231	0104	CRANKSHAFT ASM	000000	000000
5123101160	5-1231	0116	SUPERSEDED**CRANKSHAFT	000000	000000
5123101390	5-1231	0139	CRANK SHAFT ASM	000000	000000
5123101560	5-1231	0156	SUPERSEDED**CRANKSHAFT	000000	000000
5123101590	5-1231	0159	CRANKSHAFT ASM	000000	000000
5123101610	5-1231	0161	CRANKSHAFT SUB	000003	000000
5123101620	5-1231	0162	CRANKSHAFT ASM	000000	000000
5123101621	5-1231	0162	CRANKSHAFT ASM	000000	000000
5123101630	5-1231	0163	CRANKSHAFT;W/O	000000	000000
5123101631	5-1231	0163	CRANKSHAFT	000000	000001
5123101670	5-1231	0167	CRANKSHAFT	000000	000000
5123101710	5-1231	0171	CRANKSHAFT ASM	000000	000000
5123101760	5-1231	0176	CRANKSHAFT ASM	000000	000000
5123101780	5-1231	0178	CRANKSHAFT ASM	000000	000000
5123101861	5-1231	0186	CRANKSHAFT ASM	000000	000001
5123101871	5-1231	0187	CRANKSHAFT ASM	000000	000003
5123101880	5-1231	0188	CRANKSHAFT ASM,	000000	000000
5123101890	5-1231	0189	CRANKSHAFT;W/TU	000000	000000
5123101891	5-1231	0189	CRANKSHAFT;W/TU	000015	000000
5123101930			CRANKSHAFT ASM	000000	000000
5123101931	5-1231	0193	CRANKSHAFT ASM	000000	000000
5123102012	5-1231	0201	CRANKSHAFT	000000	000000
5123102061	5-1231	0206	CRANKSHAFT ASM	000000	000000
5123102080	5-1231	0208	CRANKSHAFT ASM	000000	000001
5123102090	5-1231	0209	CRANKSHAFT ASM	000000	000000
5123102110	5-1231	0211	CRANKSHAFT ASM	000000	000000
5123102150	5-1231	0215	CRANKSHAFT ASM	000000	000000
5123102151	5-1231	0215	CRANKSHAFT ASM	000000	000000

5123110731	5-1231	1073	CRANKSHAFT ASM	000000	000000
5123110793	5-1231	1079	CRANKSHAFT ASM	000000	000000
5123110945	5-1231	1094	CRANKSHAFT	000000	000000
5123111023	5-1231	1102	CRANK SHAFT	000000	000000
5123111080	5-1231	1108	CRANKSHAFT ASM	000000	000000
5123190010	5-1231	9001	SPACER; BRG. STOPPER	000000	000000
5123190020	5-1231	9002	SPACER; CRANK	000000	000000
5123190030	5-1231	9003	RING; WEAR, CRANKSHAFT	000000	000000
5123190031	5-1231	9003	RING; WEAR, CRANKSHAFT	000000	000000
5123190032	5-1231	9003	RING; WEAR, CR/SH	000000	000000
5123190033	5-1231	9003	RING; WEAR, CR/SH	000018	000031
5123190110	5-1231	9011	SPACER; BRG.	000000	000000
5123190122	5-1231	9012	SPACER; CRANK PULLEY	000000	000000
5123190130			RING; WEAR, CR/SHF	000000	000202
5123300010			FLYWHEEL ASM	000000	000000
5123300021	5-1233	0002	FLYWHEEL ASM.	000000	000000
5123300130	5-1233	0013	FLYWHEEL ASM.	000000	000000
5123300180	5-1233	0018	FLYWHEEL ASM.	000000	000000
5123300350	5-1233	0035	WHEEL ASM; FLYWHEEL	000000	000000
5123300401	5-1233	0040	FLYWHEEL ASM; W/RING GEAR	000000	000000
5123300403	5-1233	0040	FLYWHEEL ASM; W/RING GEAR	000000	000000
5123300461	5-1233	0046	FLYWHEEL ASM.	000000	000000
5123300462	5-1233	0046	FLYWHEEL ASM.	000000	000002
5123300463	5-1233	0046	FLYWHEEL ASM.	000000	000000
5123300530	5-1233	0053	ROD ASM; CONN	000000	000000
5123300560	5-1233	0056	FLYWHEEL ASM; W/RING GEAR	000000	000000
5123300561	5-1233	0056	FLYWHEEL ASM; W/RING GEAR	000000	000000
5123300562	5-1233	0056	FLYWHEEL ASM; W/RING GEAR	000000	000002
5123300612	5-1233	0061	FLYWHEEL ASM. 4BD1	000000	000001
5123300613	5-1233	0061	FLYWHEEL ASM. 4BD1	000000	000000
5123300660	5-1233	0066	FLYWHEEL ASM	000000	000000
5123300800	5-1233	0080	FLYWHEEL ASM.	000000	000000
5123300921	5-1233	0092	FLY WHEEL ASM, W	000000	000000
5123300923	5-1233	0092	FLY WHEEL ASM, W	000000	000000
5123300930	5-1233	0093	FLYWHEEL ASM	000000	000000
5123300933	5-1233	0093	FLYWHEEL ASM	000000	000001
5123301072	5-1233	0107	FLYWHEEL ASM.	000000	000000
5123301080	5-1233	0108	FLYWHEEL ASM	000000	000001
5123301081	5-1233	0108	FLYWHEEL ASM	000000	000000
5123301090	5-1233	0109	FLYWHEEL ASM	000000	000000
5123301092	5-1233	0109	FLYWHEEL ASM	000000	000002
5123301100	5-1233	0110	FLYWHEEL ASM	000000	000000
5123301121	5-1233	0112	FLYWHEEL	000000	000000
5123301131	5-1233	0113	FLYWHEEL	000000	000000
5123301140	5-1233	0114	FLYWHEEL	000000	000000
5123301160	5-1233	0116	FLYWHEEL ASM	000000	000000
5123301161	5-1233	0116	FLYWHEEL ASM	000000	000000

5123301163	5-1233	0116	FLYWHEEL ASM	000000	000000
5123301170	5-1233	0117	FLYWHEEL ASM.	000000	000000
5123301180	5-1233	0118	FLYWHEEL ASM.	000000	000000
5123301400	5-1233	0140	FLYWHEEL ASM.	000000	000000
5123301401	5-1233	0140	FLYWHEEL ASM.	000000	000000
5123301461	5-1233	0146	FLYWHEEL ASM 4BD1	000000	000000
5123301463	5-1233	0146	FLYWHEEL ASM 4BD1	000000	000002
5123301480	5-1233	0148	FLYWHEEL ASM	000000	000000
5123301481	5-1233	0148	FLYWHEEL ASM	000000	000001
5123301490	5-1233	0149	FLYWHEEL ASM	000000	000000
5123301552	5-1233	0155	FLYWHEEL ASM.	000000	000000
5123301602	5-1233	0160	FLYWHEEL ASM	000000	000000
5123301680	5-1233	0168	FLYWHEEL ASM	000000	000000
5123301711	5-1233	0171	FLYWHEEL ASM;	000000	000000
5123301720	5-1233	0172	FLYWHEEL ASM; W/RING GEAR	000000	000000
5123301740	5-1233	0174	FLYWHEEL ASM	000000	000000
5123301741	5-1233	0174	FLYWHEEL ASM	000000	000000
5123301742	5-1233	0174	FLYWHEEL ASM	000000	000000
5123301743	5-1233	0174	FLYWHEEL ASM;	000000	000000
5123301750	5-1233	0175	FLYWHEEL ASM.	000000	000000
5123301770	5-1233	0177	**DISCONTIUED**F/W ASM	000000	000000
5123301780	5-1233	0178	FLYWHEEL ASM	000000	000002
5123301801	5-1233	0180	FLYWHEEL ASM; W/RING GEAR	000000	000000
5123301810	5-1233	0181	FLYWHEEL ASM.	000000	000000
5123301831	5-1233	0183	FLYWHEEL ASM;	000000	000000
5123301850	5-1233	0185	FLYWHEEL ASM	000000	000000
5123301890	5-1233	0189	FLYWHEEL ASM.;	000000	000000
5123301920	5-1233	0192	FLYWHEEL	000000	000000
5123301940	5-1233	0194	FLYWHEEL ASM.;	000000	000000
5123301950	5-1233	0195	FLYWHEEL ASM.	000000	000000
5123301970	5-1233	0197	FLYWHEEL ASM	000000	000001
5123301971	5-1233	0197	FLYWHEEL ASM	000000	000000
5123302030	5-1233	0203	FLYWHEEL ASM.	000000	000000
5123302062	5-1233	0206	FLYWHEEL ASM.	000000	000000
5123302131	5-1233	0213	FLYWHEEL ASM 2KC1	000000	000000
5123302151	5-1233	0215	FLYWHEEL ASM; W/RING GEAR	000000	000000
5123302162	5-1233	0216	FLYWHEEL 3KC1	000000	000000
5123302190	5-1233	0219	FLYWHEEL ASM	000000	000000
5123302192	5-1233	0219	FLYWHEEL ASM	000000	000000
5123302193	5-1233	0219	FLYWHEEL ASM	000000	000002
5123302200	5-1233	0220	FLYWHEEL ASM	000000	000000
5123302221	5-1233	0222	FLYWHEEL ASM	000000	000000
5123302232	5-1233	0223	FLYWHEEL ASM 8" 2/3KC1/3K	000000	000001
5123302233	5-1233	0223	FLYWHEEL ASM 8" 2/3KC1/3K	000000	000000
5123302273	5-1233	0227	FLYWHEEL ASM. 2/3KC1/3KR1	000000	000000
5123310452	5-1233	1045	FLYWHEEL ASM;13 INCH	000000	000000
5123310500	5-1233	1050	FLYWHEEL; REAR	000000	000000

5123310501	5-1233	1050	FLYWHEEL; REAR	000000	000000
5123310502	5-1233	1050	FLYWHEEL; REAR	000000	000000
5123310510	5-1233	1051	FLYWHEEL	000000	000000
5123310521	5-1233	1052	FLYWHEEL	000000	000000
5123310523	5-1233	1052	FLYWHEEL	000000	000000
5123310531	5-1233	1053	FLYWHEEL;SAE 12 6BD1	000000	000000
5123310552	5-1233	1055	FLYWHEEL 11 1/2	000000	000000
5123310553	5-1233	1055	FLYWHEEL 11 1/2	000000	000001
5123310554	5-1233	1055	FLYWHEEL 11 1/2	000000	000000
5123310790	5-1233	1079	FLYWHEEL 6BD/BG1	000000	000000
5123310792	5-1233	1079	FLYWHEEL 6BD/BG1	000000	000000
5123310793	5-1233	1079	FLYWHEEL 6BD/BG1	000000	000000
5123310794	5-1233	1079	FLYWHEEL 6BD/BG1	000000	000000
5123311051	5-1233	1105	FLYWHEEL	000000	000000
5123311230	5-1233	1123	FLYWHEEL	000000	000000
5123311310	5-1233	1131	FLYWHEEL	000000	000000
5123311402	5-1233	1140	FLYWHEEL	000000	000000
5123311403	5-1233	1140	FLYWHEEL	000000	000000
5123311450	5-1233	1145	FLYWHEEL	000000	000000
5123311451	5-1233	1145	FLYWHEEL	000000	000000
5123311453	5-1233	1145	FLYWHEEL	000000	000000
5123311454	5-1233	1145	FLYWHEEL	000000	000000
5123311470	5-1233	1147	FLYWHEEL ASM	000000	000000
5123311481	5-1233	1148	FLYWHEEL ASM	000000	000000
5123311550	5-1233	1155	FLYWHEEL 6BG1	000000	000000
5123330020	5-1233	3002	RING GEAR	000000	000000
5123330051	5-1233	3005	GEAR;FLYWHEEL	000000	000024
5123330081	5-1233	3008	GEAR, F/W	000000	000000
5123340030	5-1233	4003	BOLT;FLYWHEEL	000000	000031
5123340050	5-1233	4005	BOLT; FLYWHEEL-CRANK	000000	000000
5123340060	5-1233	4006	BOLT; FLYWHEEL FIX	000012	000000
5123360010	5-1233	6001	WASHER; FLYWHEEL FIX	000000	000000
5123360020	5-1233	6002	WASHER; FLYWHEEL FIX	000000	000000
5123360030	5-1233	6003	WASHER;FLYWHEEL	000000	000000
5123360080	5-1233	6008	WASHER; FLYWHEEL	000000	000000
5123360081	5-1233	6008	WASHER;FLYWHEEL	000000	000041
5123360100	5-1233	6010	WASHER;FLYWHEEL	000000	000000
5123360101	5-1233	6010	WASHER;FLYWHEEL	000000	000002
5123360110	5-1233	6011	WASHER; FLYWHEEL FIX	000000	000000
5123360140	5-1233	6014	WASHER;FLYWHEEL	000000	000000
5123360150	5-1233	6015	WASHER; FLYWHEEL FIX	000000	000000
5123360160	5-1233	6016	WASHER; FLYWHEEL FIX	000000	000000
5123360180	5-1233	6018	WASHER; FLYWHEEL BOLT	000000	000000
5123360190	5-1233	6019	WASHER; FLYWHEEL FIX	000000	000000
5123390030	5-1233	9003	HOLDER; BRG FLYWHEEL	000000	000000
5123390031	5-1233	9003	HOLDER; BRG FLYWHEEL	000000	000082
5123390040	5-1233	9004	STUB SHAFT	000000	000008

5123390081	5-1233	9008	STUB SHAFT; PTO	000000	000000
5123620010	5-1236	2001	THROWER; OIL	000027	000000
5123620020	5-1236	2002	THROWER; OIL CRANKSHAFT	000000	000000
5123620031	5-1236	2003	CHROWER; DUST SEAL, PULLEY	000000	000057
5123630031	5-1236	3003	RETAINER; CRANK	000000	000000
5123630061	5-1236	3006	RETAINER; CRANKS	000002	000000
5123630130	5-1236	3013	RETAINER; OIL SEAL	000000	000000
5123630150	5-1236	3015	RETAINER; OIL SEAL, REAR	000000	000000
5123630172	5-1236	3017	RETAINER; OIL SEAL 3KC1	000000	000000
5123630173	5-1236	3017	RETAINER; OIL SEAL 3KC1	000000	000000
5123640030	5-1236	4003	GASK.; OIL SEAL	000000	000000
5123640062	5-1236	4006	PACKING; RETAINER 4BC2	000000	000000
5123640101	5-1236	4010	PACKING; OIL SEAL 3KC1/3K	000000	000000
5123701190	5-1237	0119	PULLEY; CRANKSHAFT	000000	000000
5123701910	5-1237	0191	SUPERSEDED**PULLEY	000000	000000
5123702190	5-1237	0219	SUPERSEDED**PULLEY	000000	000000
5123702331	5-1237	0233	PULLEY; CRANKSHAFT	000000	000000
5123710090	5-1237	1009	PULLEY; CRANKSHAFT, FRT.	000002	000000
5123710210	5-1237	1021	PULLEY; CENTER D500	000000	000000
5123710221	5-1237	1022	PULLEY; CRANKSHAFT 6BB1	000001	000000
5123710231	5-1237	1023	PULLEY; CRANKSHAFT	000000	000000
5123710251	5-1237	1025	PULLEY; CRANKSHAFT	000001	000000
5123710320	5-1237	1032	PULLEY; CRANKSHAFT	000000	000000
5123710401	5-1237	1040	PULLEY; CRANKSHAFT	000000	000000
5123710420	5-1237	1042	PULLEY; CRANKSHAFT	000000	000000
5123710460	5-1237	1046	PULLEY; CRANKSHAFT	000000	000000
5123710490	5-1237	1049	SUPERSEDED**PULLEY	000000	000000
5123710610	5-1237	1061	PULLEY; CRANKSHAFT	000000	000000
5123710681	5-1237	1068	PULLEY; CRANKSHAFT	000000	000004
5123710740	5-1237	1074	PULLEY; CRANKSHAFT	000000	000000
5123710870	5-1237	1087	PULLEY; CRANK SHFT	000000	000000
5123710891	5-1237	1089	PULLEY; CRANKSHAFT	000000	000000
5123710901	5-1237	1090	PULLEY; CRANKSHAFT SPLINE	000000	000005
5123710940	5-1237	1094	PULLEY; CRANKSHAFT	000000	000000
5123711030	5-1237	1103	PULLEY; CRANKSHAFT	000000	000018
5123711040	5-1237	1104	PULLEY; CRANKSHAFT FIT PT	000001	000000
5123711090	5-1237	1109	PULLEY; CRANKSHAFT	000000	000000
5123711130	5-1237	1113	PULLEY; CRANKSHAFT	000000	000000
5123711160	5-1237	1116	PULLEY; BOSS	000000	000000
5123711220	5-1237	1122	PULLEY; CRANKSHAFT,	000001	000000
5123711480	5-1237	1148	PULLEY ASM D500	000000	000000
5123711610	5-1237	1161	PULLEY; CRANKSHAFT 3KC1	000000	000000
5123711670	5-1237	1167	PULLEY	000000	000000
5123711730	5-1237	1173	PULLEY; CRANKSHAFT	000000	000001
5123711760	5-1237	1176	PULLEY; CRANKSHAFT	000000	000001
5123711780	5-1237	1178	PULLEY; CRANKSHAFT	000000	000000
5123711831	5-1237	1183	PULLEY	000000	000000

5123711881	5-1237	1188	PULLEY; CRANKSHAFT	000000	000000
5123711950	5-1237	1195	PULLEY; CRANKSHAFT	000000	000004
5123711991	5-1237	1199	PULLEY; CRANKSHAFT	000000	000000
5123712031	5-1237	1203	PULLEY; CRANKSHAFT	000000	000000
5123712043	5-1237	1204	PULLEY; CRANKSHAFT	000000	000000
5123712051	5-1237	1205	PULLEY; CRANKSHAFT 6BD1	000000	000002
5123712072	5-1237	1207	PULLEY; CRANKSHAFT 6BB1	000000	000000
5123712073	5-1237	1207	PULLEY; CRANKSHAFT 6BB1	000000	000002
5123712082	5-1237	1208	PULLEY; CRANKSHAFT	000000	000000
5123712083	5-1237	1208	PULLEY; CRANKSHAFT	000000	000002
5123712092	5-1237	1209	PULLEY; CRANKSHAFT 6BF1	000000	000001
5123712111	5-1237	1211	PULLEY; CRANKSHAFT	000000	000000
5123712180	5-1237	1218	PULLEY; CRANKSHAFT, SPLINE	000000	000000
5123712200	5-1237	1220	PULLEY; CRANKSHAFT	000000	000000
5123712220	5-1237	1222	PULLEY; CRANKSHAFT	000000	000000
5123712330	5-1237	1233	PULLEY; CRANKSHAFT	000000	000000
5123712331	5-1237	1233	PULLEY; CRANKSHAFT	000000	000000
5123712470	5-1237	1247	PULLEY; CRANKSHAFT	000000	000000
5123712480	5-1237	1248	PULLEY; CRANKSHAFT	000000	000000
5123712631	5-1237	1263	PULLEY; CRANKSHAFT	000000	000000
5123712640	5-1237	1264	PULLEY; CRANKSHAFT	000000	000000
5123712721	5-1237	1272	PULLEY; CRANKSHAFT	000000	000000
5123712770	5-1237	1277	PULLEY; CRANKSHAFT	000000	000000
5123712781	5-1237	1278	PULLEY; CRANKSHAFT	000000	000000
5123712801	5-1237	1280	PULLEY; CRANKSHAFT	000000	000000
5123712813	5-1237	1281	PULLEY; CRANKSHAFT	000000	000000
5123712822	5-1237	1282	PULLEY; CRANKSHAFT	000000	000000
5123712823	5-1237	1282	PULLEY; CRANKSHAFT	000023	000000
5123780020	5-1237	8002	NUT; CRANK. PULLE	000000	000000
5123790010	5-1237	9001	SUPPORT, ADJ. PUL	000003	000003
5123790141	5-1237	9014	BUSH; TAPER-CRANK	000000	000002
5123790150	5-1237	9015	ADAPTER; CRANK PULLEY	000000	000000
5123790161	5-1237	9016	ADAPTER; CRANKSHAFT PULLE	000000	000000
5124120760	5-1241	2076	PAN ASM; DUST W/BAFFLE	000000	000000
5124530220	5-1245	3022	SEAT; SPRING, UPPER-UNLIS	000000	000000
5125100452	5-1251	0045	CAMSHAFT	000000	000000
5125100462	5-1251	0046	CAMSHAFT 3KC1	000000	000000
5125110200	5-1251	1020	CAMSHAFT	000000	000000
5125110210	5-1251	1021	CAMSHAFT	000000	000000
5125110222	5-1251	1022	CAMSHAFT	000000	000009
5125110230	5-1251	1023	CAMSHAFT	000000	000000
5125110232	5-1251	1023	CAMSHAFT	000001	000000
5125110780	5-1251	1078	CAMSHAFT	000000	000000
5125110781	5-1251	1078	CAMSHAFT	000000	000000
5125110782	5-1251	1078	CAMSHAFT	000000	000000
5125110783	5-1251	1078	CAMSHAFT	000000	000000
5125110784	5-1251	1078	CAMSHAFT	000000	000023

5125110810	5-1251	1081	CAMSHAFT	000000	000000
5125110832	5-1251	1083	CAMSHAFT	000000	000000
5125111001	5-1251	1100	CAMSHAFT	000000	000000
5125190010	5-1251	9001	WASHER;CAM PULL	000000	000000
5125190020	5-1251	9002	WASHER;CAM SHAF	000000	000000
5125190021	5-1251	9002	WASHER;CAM SHAF	000000	000021
5125190120	5-1251	9012	PLATE;SEAL TO CHAIN CASE	000000	000001
5125190130	5-1251	9013	PLATE;SEAL TO CHAIN CASE	000001	000000
5125190151	5-1251	9015	KEY; CAM GEAR	000000	000000
5125210250	5-1252	1025	GEAR; CRANK	000000	000000
5125210260	5-1252	1026	GEAR; CRANK	000000	000000
5125210310	5-1252	1031	PULLEY ASM,TIMI	000000	000000
5125210311	5-1252	1031	PULLEY ASM;	000000	000000
5125210330	5-1252	1033	PULLEY; TIMING, CRANK	000000	000000
5125210343	5-1252	1034	TIMING WHEEL; CRANK 3KC1/	000000	000001
5125210413	5-1252	1041	TIMING GEAR; CRANK 3KC1/3	000000	000000
5125210420	5-1252	1042	GEAR; CRANK	000000	000000
5125220180	5-1252	2018	GEAR; CAMSHAFT	000000	000000
5125220380	5-1252	2038	TIMING WHEEL CAM	000001	000000
5125220451	5-1252	2045	TIMING WHEEL; CAM 3KC1	000000	000002
5125220461	5-1252	2046	GEAR; CAMSHAFT	000001	000000
5125220472	5-1252	2047	GEAR*	000000	000000
5125220481	5-1252	2048	GEAR; CAMSHAFT (Z=42)	000000	000000
5125230110			GEAR	000000	000000
5125230231			GEAR; W/BUSH	000000	000002
5125230372	5-1252	3037	GEAR; W/BRUSH, IDLE 'A'	000000	000000
5125230381	5-1252	3038	GEAR; W/BRUSH, IDLE 'B'	000000	000000
5125230492	5-1252	3049	GEAR; W/BUSH, IDLE 3KC1/3	000000	000000
5125230510	5-1252	3051	GEAR;IDLE	000000	000000
5125230530	5-1252	3053	GEAR ASM; IDLE "F"	000000	000000
5125230550	5-1252	3055	GEAR ASM; IDLE 'C'	000000	000000
5125230560	5-1252	3056	GEAR ASM; IDLE 'D'	000000	000000
5125230600	5-1252	3060	GEAR; IDLER	000000	000000
5125240061	5-1252	4006	GEAR;INJ.PUMP	000000	000000
5125240062	5-1252	4006	GEAR;INJ.PUMP	000000	000000
5125240160	5-1252	4016	GEAR; DRIVE,INJ PUMP	000000	000000
5125240200	5-1252	4020	GEAR; INJ. PUMP	000000	000024
5125240260	5-1252	4026	GEAR; DRIVE INJ PUMP	000000	000000
5125240340	5-1252	4034	GEAR; INJ PUMP	000000	000000
5125240350	5-1252	4035	GEAR; INJ PUMP	000000	000000
5125240360	5-1252	4036	GEAR; INJ. PUMP	000000	000000
5125240380	5-1252	4038	GEAR; INJ PUMP	000000	000000
5125240381	5-1252	4038	GEAR; INJ PUMP	000000	000001
5125240400	5-1252	4040	COUPLING	000000	000000
5125240450	5-1252	4045	GEAR; INJ. PUMP	000000	000000
5125240480	5-1252	4048	GEAR; INJ. PUMP	000000	000000
5125240570	5-1252	4057	GEAR;INJ.PUMP	000001	000000

5125240580	5-1252	4058	GEAR; INJ FEDERA	000000	000000
5125240660	5-1252	4066	GEAR; INJ PUMP	000000	000001
5125240670	5-1252	4067	GEAR; INJ. PUMP	000000	000001
5125240691	5-1252	4069	GEAR; INJ. PUMP	000000	000000
5125240740	5-1252	4074	GEAR; INJ CALIF	000000	000000
5125240752	5-1252	4075	GEAR; INJ. PUMP	000000	000000
5125240760	5-1252	4076	GEAR; INJ. PUMP	000001	000000
5125240770	5-1252	4077	GEAR; INJ. PUMP	000001	000000
5125240820	5-1252	4082	GEAR; INJ. PUMP	000000	000000
5125240830	5-1252	4083	GEAR; INJ. PUMP	000001	000004
5125240880	5-1252	4088	GEAR; INJ. PUMP	000000	000000
5125240890	5-1252	4089	GEAR; INJ. PUMP	000000	000000
5125241050	5-1252	4105	GEAR; INJ. PUMP	000000	000000
5125241060	5-1252	4106	GEAR; INJ. PUMP	000000	000000
5125241070	5-1252	4107	GEAR; INJ PUMP	000000	000000
5125241082	5-1252	4108	GEAR; INJ. PUMP	000000	000000
5125241083	5-1252	4108	GEAR; INJ. PUMP	000000	000000
5125250130	5-1252	5013	GEAR; IDLER C240	000002	000001
5125250142	5-1252	5014	GEAR; IDLER C240	000000	000000
5125250252	5-1252	5025	TENSION WHEEL;TIMING	000000	000000
5125250300	5-1252	5030	GEAR ASM; W/SHAFT 3AE1	000000	000000
5125250340	5-1252	5034	DRIVE WHEEL;CRANK PTO	000000	000000
5125250360	5-1252	5036	GEAR; IDLER, PTO	000001	000000
5125250370	5-1252	5037	GEAR;GEAR CASE PTO	000000	000000
5125250480	5-1252	5048	SHAFT;PTO	000000	000000
5125250521	5-1252	5052	SHAFT;PTO	000000	000000
5125250530	5-1252	5053	DRIVE WHEEL;CRANK PTO	000000	000000
5125250560	5-1252	5056	GEAR ASM;HYDRAULIC	000000	000000
5125250570	5-1252	5057	GEAR ASM.;HYDRAULIC PUMP	000000	000000
5125250592	5-1252	5059	GEAR;HYD/PUMP DRIVE	000000	000000
5125250601	5-1252	5060	GEAR ASM.;BALANCER DRIVE	000000	000000
5125250641	5-1252	5064	GEAR; BLANCER, DRIVE, RH	000000	000000
5125250651	5-1252	5065	GEAR; BLANCER, DRIVE, LH	000000	000000
5125250680	5-1252	5068	GEAR;IDLE, HYDRAULIC PUMP	000000	000000
5125250702	5-1252	5070	GEAR; CRANK BALANCER DRIV	000000	000000
5125250712	5-1252	5071	GEAR ASM; PUMP DRIVE 3KC1	000000	000000
5125250722	5-1252	5072	GEAR; CASE	000001	000000
5125250730	5-1252	5073	GEAR; IDLE, GEAR CASE PTO	000001	000000
5125250740	5-1252	5074	GEAR; CASE PTO	000001	000000
5125250790	5-1252	5079	GEAR; PTO C240-UNLISTED	000000	000000
5125270060	5-1252	7006	SPACER;HYDRAULIC	000000	000000
5125280084			BUSH; INJ. PUMP SHAFT, RR	000000	000005
5125280150	5-1252	8015	BUSH; IDLER GEAR	000000	000000
5125310241	5-1253	1024	SHAFT; IDLE GEAR BLOCK 3K	000001	000000
5125310320	5-1253	1032	SHAFT; IDLE, GEAR 'A'	000000	000000
5125310331	5-1253	1033	SHAFT; IDLE, GEAR 'B'	000000	000000
5125310352	5-1253	1035	SHAFT; IDLE GEAR "E"	000000	000000

5125320040	5-1253	2004	SHAFT (DISCONTINUED)	000000	000000
5125320061	5-1253	2006	SHAFT; INJ. PUMP 6BG1	000000	000006
5125320071	5-1253	2007	SHAFT; INJ. PUMP	000001	000000
5125330122	5-1253	3012	GEAR; HYDRAULIC PUMP DRIV	000000	000000
5125330130	5-1253	3013	SHAFT; IDLE GEAR	000000	000001
5125330270	5-1253	3027	SHAFT; IDLER GEAR, (A)	000000	000000
5125330280	5-1253	3028	SHAFT; IDLE GEAR	000000	000000
5125330290	5-1253	3029	SHAFT; DRIVE GEAR	000000	000000
5125330300	5-1253	3030	SHAFT; DRIVE GEAR	000000	000000
5125330312	5-1253	3031	SHAFT; PUMP GEAR (SUPERSE	000000	000000
5125350011	5-1253	5001	COLLAR; THRUST	000000	000003
5125350016	5-1253	5001	COLLAR; THRUST	000000	000000
5125350050	5-1253	5005	COLLAR; THRUST	000000	000000
5125350051	5-1253	5005	COLLAR; THRUST	000000	000111
5125350131	5-1253	5013	COLLAR; THRUST	000000	000000
5125350141	5-1253	5014	COLLAR; THRUST	000000	000000
5125350150	5-1253	5015	COLLAR; THRUST IDLE	000000	000000
5125350160	5-1253	5016	COLLAR; THRUST	000000	000000
5125360010	5-1253	6001	SEAT; SPRING, LOWER	000000	000000
5125360160	5-1253	6016	BELT, TIMING	000000	000025
5125360170	5-1253	6017	BELT; TIMING	000003	000000
5125360190	5-1253	6019	CHAIN; PTO	000000	000000
5125360220	5-1253	6022	CHAIN; TIMING 3KC1	000000	000000
5125360250	5-1253	6025	CHAIN; PTO	000000	000000
5125360290	5-1253	6029	CHAIN; TIMING	000000	000000
5125360311	5-1253	6031	CHAIN; TIMING 3KC1	000000	000004
5125360320	5-1253	6032	CHAIN; TIMING	000000	000000
5125360331	5-1253	6033	CHAIN; TIMING 3KR1	000000	000001
5125390010	5-1253	9001	ADAPTER; TACHO. DRIVE	000000	000000
5125390170	5-1253	9017	ADAPTOR	000000	000000
5125510240	5-1255	1024	VALVE; INLET	000000	000000
5125510280	5-1255	1028	VALVE; INLET	000000	000000
5125510282	5-1255	1028	VALVE; INLET	000032	000133
5125510290	5-1255	1029	VALVE; INL.	000000	000000
5125510300	5-1255	1030	VALVE; INLET	000000	000000
5125510332	5-1255	1033	VALVE; INLET	000000	000000
5125510360	5-1255	1036	VALVE; INLET	000000	000000
5125510371	5-1255	1037	VALVE; INLET	000000	000000
5125510374	5-1255	1037	VALVE; INLET	000000	000013
5125510410	5-1255	1041	VALVE; INLET	000000	000000
5125510424	5-1255	1042	VALVE; INLET 3KC1	000000	000008
5125510500	5-1255	1050	VALVE; INLET	000000	000000
5125520131	5-1255	2013	SUPERSEDED**	000000	000000
5125520140	5-1255	2014	VALVE; EXH	000000	000000
5125520260	5-1255	2026	VALVE; EXH	000000	000018
5125520300	5-1255	2030	VALVE; EXH	000000	000000
5125520310	5-1255	2031	VALVE; EXH	000000	000000

5125520340	5-1255	2034	VALVE;EXH	000000	000000
5125520342	5-1255	2034	VALVE; EXHAUST	000012	000150
5125520360	5-1255	2036	VALVE; EXHAUST	000004	000000
5125520380	5-1255	2038	VALVE;EXH	000000	000000
5125520381	5-1255	2038	VALVE; EXH.	000000	000000
5125520402	5-1255	2040	VALVE; EXHAUST	000000	000000
5125520420	5-1255	2042	EXHAUST VALVE	000000	000000
5125520430	5-1255	2043	VALVE; EXHAUST	000000	000000
5125520455	5-1255	2045	VALVE; EXHAUST	000000	000010
5125520464	5-1255	2046	VALVE; EXHAUST 3KR1	000000	000000
5125520480	5-1255	2048	EXHAUST VALVE	000000	000000
5125610082	5-1256	1008	SPRING;VALVE	000000	000011
5125610090	5-1256	1009	SPRING; VALVE, OUTER	000000	000026
5125610091	5-1256	1009	SPRING; VALVE, OUTER	000000	000000
5125610110	5-1256	1011	SPRING,VALVE OU	000000	001429
5125610160	5-1256	1016	SPRING;VALVE	000000	000013
5125610181	5-1256	1018	SPRING; VALVE 3KC1	000000	000008
5125620040	5-1256	2004	SPRING;VALVE	000000	000000
5125620062	5-1256	2006	SPRING; VALVE	000000	000011
5125620070	5-1256	2007	SPRING,VALVE IN	000000	000218
5125620080	5-1256	2008	SPRING;VALVE	000000	000048
5125630010	5-1256	3001	SEAT; SPRING,LOWER	000000	000350
5125630130	5-1256	3013	SEAT; VALVE SPRING, UPPER	000010	000000
5125630140	5-1256	3014	INSERT; VALVE	000000	000000
5125630160	5-1256	3016	SEAT ASM;SPRING	000000	000000
5125630170	5-1256	3017	SEAT; SPRING, VALVE	000070	000025
5125630220	5-1256	3022	CAP,VALVE SPRIN	000000	000000
5125630221	5-1256	3022	CAP,VALVE SPRIN	000015	000000
5125630230	5-1256	3023	SEAT; VALVE SPRING	000000	000000
5125630250	5-1256	3025	INSERT; VALVE	000000	000015
5125630262	5-1256	3026	SEAT; SPRING 3KC1	000000	000000
5125650030	5-1256	5003	COLLAR SPLIT	000000	000040
5125650040	5-1256	5004	COLLAR;SPLIT	001398	000351
5125650050	5-1256	5005	COLLAR; SPLIT	000000	000000
5125650060	5-1256	5006	COLLAR; SPLIT	000691	000939
5125690010	5-1256	9001	SEAL; VALVE GUIDE	000000	000000
5125690040	5-1256	9004	SEAL;VALVE, INLE	000000	000000
5125690060	5-1256	9006	SEAL;VALVE, INLE	000007	000000
5125690071	5-1256	9007	VALVE SEAL	000000	000083
5125710031	5-1257	1003	TAPPET	000000	000000
5125710032	5-1257	1003	TAPPET	000000	000000
5125710033	5-1257	1003	TAPPET	000000	000510
5125710050	5-1257	1005	TAPPET	000000	000000
5125710210	5-1257	1021	TAPPET	000000	000000
5125710220	5-1257	1022	TAPPET	000000	000000
5125710231	5-1257	1023	TAPPET 3KC1	000004	000000
5125750070	5-1257	5007	ROD; PUSH	000001	000000

5125750150	5-1257	5015	PUSH;ROD,CAMSHA	000000	000000
5125750160	5-1257	5016	ROD; PUSH	000280	000000
5125750170	5-1257	5017	ROD; PUSH	000000	000000
5126110201	5-1261	1020	ARM ROCKER (A) W/	000000	000003
5126110221	5-1261	1022	ARM ROCKER (B) W/	000000	000005
5126110250	5-1261	1025	ARM; ROCKER W/BUSH	000000	000000
5126110260	5-1261	1026	ARM; ROCKER	000001	000000
5126110280	5-1261	1028	ARM; ROCKER	000000	000000
5126110310	5-1261	1031	ARM;ROCKER	000000	000015
5126111180	5-1261	1118	ARM ASM;**INV FAX516 520*	000000	000000
5126180062	5-1261	8006	CAP;ROCKER SHAF	000000	000000
5126210120	5-1262	1012	SHAFT;ROCKER	000000	000000
5126210192	5-1262	1019	SHAFT;ROCKER	000000	000000
5126210200	5-1262	1020	SHAFT;ROCKER	000000	000000
5126210201	5-1262	1020	SHAFT;ROCKET	000000	000003
5126210210	5-1262	1021	SHAFT;ROCKER AR	000000	000004
5126210220	5-1262	1022	SHAFT; ROCKER A	000000	000006
5126210230	5-1262	1023	SHAFT; ROCKER ASM.	000000	000000
5126230011	5-1262	3001	CONN.;ROCKER SH	000000	000008
5126280050	5-1262	8005	BRK;ROCK ARM FR	000000	000000
5126280060	5-1262	8006	BRKT;ROCK ARM	000000	000016
5126280092	5-1262	8009	BRACKET;ROCKER	000000	000000
5126280102	5-1262	8010	BRACKET;ROCKER	000000	000000
5126280110	5-1262	8011	BRKT;FRT ROCKER	000000	000000
5126280111	5-1262	8011	BRKT;ROCK ARM	000000	000000
5126280112	5-1262	8011	BRKT;ROCK ARM	000000	000000
5126280120	5-1262	8012	BRACKET;ROCKER SHAFT,FRT	000000	000001
5129890060	5-1298	9006	**INVALID**	000000	000000
5131000330	5-1310	0033	PUMP ASM; OIL	000000	000000
5131000580	5-1310	0058	PUMP; OIL	000000	000000
5131000583	5-1310	0058	PUMP; OIL	000000	000000
5131000610	5-1310	0061	PUMP ASM; OIL W/STRAINER	000000	000000
5131000611	5-1310	0061	PUMP ASM; OIL W/STRAINER	000000	000000
5131000612	5-1310	0061	PUMP ASM; OIL W/STRAINER	000000	000000
5131000613	5-1310	0061	PUMP ASM; OIL W/STRAINER	000000	000013
5131000893	5-1310	0089	PUMP ASM; OIL	000000	000000
5131000903	5-1310	0090	PUMP ASM; OIL	000000	000000
5131000913	5-1310	0091	PUMP ASM; OIL	000000	000000
5131000923	5-1310	0092	PUMP; OIL	000000	000000
5131000930	5-1310	0093	PUMP ASM,OIL	000000	000000
5131001020	5-1310	0102	PUMP ASM,OIL	000000	000000
5131001021	5-1310	0102	PUMP ASM;OIL	000000	000000
5131001022	5-1310	0102	PUMP ASM; OIL	000000	000000
5131001030	5-1310	0103	PUMP ASM; OIL	000000	000000
5131001050	5-1310	0105	PUMP ASM; OIL C240	000000	000000
5131001052	5-1310	0105	PUMP ASM; OIL C240	000002	000009
5131001140	5-1310	0114	PUMP ASM; OIL	000000	000000

5131001160	5-1310	0116	PUMP ASM; OIL	000001	000000
5131001193	5-1310	0119	PUMP ASM; OIL, W/PINION	000000	000000
5131001240	5-1310	0124	PUMP ASM,OIL	000000	000000
5131001241	5-1310	0124	PUMP ASM,OIL	000000	000000
5131001250	5-1310	0125	PUMP ASM; OIL	000000	000000
5131001252	5-1310	0125	OIL PUMP	000000	000000
5131001263	5-1310	0126	PUMP ASM; OIL	000000	000001
5131001313	5-1310	0131	PUMP ASM.;OIL (DISCONTINU	000000	000000
5131001351	5-1310	0135	PUMP ASM.; OIL	000000	000000
5131001362	5-1310	0136	OIL PUMP	000000	000003
5131001373	5-1310	0137	PUMP ASM; OIL 4BD1	000000	000006
5131001382	5-1310	0138	PUMP ASM; OIL 4BD1	000000	000000
5131001392	5-1310	0139	PUMP ASM; OIL	000000	000000
5131001400	5-1310	0140	PUMP ASM; OIL W/STRAINER	000000	000000
5131001404	5-1310	0140	PUMP ASM; OIL W/STRAINER	000000	000001
5131001421	5-1310	0142	PUMP ASM; OIL	000000	000000
5131001441	5-1310	0144	PUMP ASM; OIL	000000	000000
5131001460	5-1310	0146	PUMP ASM; OIL	000000	000000
5131001502	5-1310	0150	PUMP ASM.; OIL	000000	000001
5131100270	5-1311	0027	PUMP ASM; OIL	000000	000000
5131100472	5-1311	0047	PUMP ASM; OIL 6BB1	000000	000000
5131100681	5-1311	0068	PUMP ASM; OIL	000000	000000
5131130020	5-1311	3002	COVER,OIL PUMP	000000	000000
5131130030	5-1311	3003	COVER ASM	000000	000000
5131130060	5-1311	3006	COVER ASM; OIL PUMP	000000	000000
5131130161	5-1311	3016	COVER ASM; OIL PUMP	000000	000000
5131130290	5-1311	3029	COVER ASM; OIL PUMP	000000	000000
5131130351	5-1311	3035	CVR ASM;O/PUMP	000000	000010
5131130380	5-1311	3038	COVER ASM; OIL PUMP 6BD1/	000002	000000
5131130390	5-1311	3039	COVER ASM; OIL PUMP	000000	000000
5131140061	5-1311	4006	PACKING; OIL PUMP	000000	000000
5131190020	5-1311	9002	PIPE;SUCTION	000001	000000
5131190060	5-1311	9006	PIPE; SUCTION, OIL PUMP	000001	000000
5131200040	5-1312	0004	ROTOR SET	000000	000000
5131200110	5-1312	0011	ROTOR SET; OIL	000000	000000
5131200180	5-1312	0018	ROTOR ASM.	000000	000000
5131200190	5-1312	0019	ROTOR ASM; OIL PUMP	000000	000000
5131210010	5-1312	1001	SUPERSEDED**GEAR	000000	000000
5131210020	5-1312	1002	GEAR ASM; PUMP DRIVING	000000	000000
5131210050	5-1312	1005	GEAR; DRIVE,OIL PUMP	000000	000000
5131210051	5-1312	1005	SHAFT ASM; OIL PUMP	000000	000019
5131210070	5-1312	1007	SUPERSEDED**ROTOR	000000	000000
5131210130	5-1312	1013	CHAIN WHEEL;OIL PUMP DRIV	000000	000000
5131210140	5-1312	1014	GEAR ASM;O/PUMP	000000	000000
5131210230	5-1312	1023	ROTOR ASM	000000	000000
5131210250	5-1312	1025	GEAR; OIL PUMP	000000	000000
5131230100	5-1312	3010	COUPLING; PINION	000000	000000

5131250010	5-1312	5001	GEAR; OIL PUMP	000000	000001
5131250020	5-1312	5002	GEAR; O/PUMP DR	000000	000000
5131250070	5-1312	5007	SUPERSEDED**ROTOR	000000	000000
5131270010	5-1312	7001	SHAFT;OIL PUMP	000000	000000
5131270020	5-1312	7002	SHAFT; DRIVEN GEAR	000000	000000
5131270050	5-1312	7005	SHAFT;DRIVEN GEAR,OIL PMP	000000	000000
5131280070	5-1312	8007	PINION;DR,O/PUM	000000	000000
5131280090	5-1312	8009	PINION; OIL PUMP	000000	000000
5131280100	5-1312	8010	PINION,OIL PUMP GEAR	000000	000000
5131400021	5-1314	0002	PIPE ASM; OIL	000000	000000
5131400130	5-1314	0013	STRAINER ASM; OIL PUMP	000000	000000
5131410010	5-1314	1001	CASE; TOP OIL STRAINER	000000	000000
5131410020	5-1314	1002	CASE;BOTTOM O/P	000000	000000
5131410030	5-1314	1003	CASE; TOP STRAINER	000000	000000
5131410090	5-1314	1009	CASE; STRAINER	000000	000000
5131410110	5-1314	1011	CASE 6BG1	000000	000000
5131410120	5-1314	1012	CASE; TOP STRAINER	000000	000000
5131410140	5-1314	1014	STRAINER ASM; OIL PUMP	000000	000000
5131410171	5-1314	1017	CASE;TOP O/PUMP	000000	000000
5131410180	5-1314	1018	CASE;BOTTOM O/P	000000	000001
5131430010			STRAINER ASM	000000	000000
5131600010			VALVE ASM; RELIEF	000000	000000
5131600021	5-1316	0002	COVER ASM.;W/RELIEF VALVE	000000	000000
5131600030	5-1316	0003	VALVE ASM; RELIEF	000000	000007
5131600060	5-1316	0006	VALVE ASM,RELIE	000000	000000
5131600061	5-1316	0006	VALVE ASM;RELIE	000000	000000
5131600063	5-1316	0006	VALVE ASM;RELIE	000000	000000
5131600070	5-1316	0007	VALVE ASM,RELIE	000000	000000
5131600090	5-1316	0009	VALVE ASM; RELIEF	000000	000000
5131600170			PINS	000000	000000
5131610060			VALVE,OIL COOLE	000000	000000
5131610080	5-1316	1008	CHECK VALVE ASM	000000	000000
5131650040	5-1316	5004	SEAT; SPRG,RELIEF VALVE	000000	000046
5132000010			FILTER; FUEL ASSY.	000000	000000
5132000081			FILTER ASM; OIL	000000	000000
5132000084	5-1320	0008	FILTER ASM; OIL	000000	000000
5132000140	5-1320	0014	FILTER ASM; OIL	000000	000000
5132000162	5-1320	0016	FILTER ASM; FUEL	000000	000000
5132000531	5-1320	0053	FILTER;ASM;FUEL	000000	000000
5132000660	5-1320	0066	FUEL FILTER;GAS	000000	000000
5132000661	5-1320	0066	FUEL FILTER;GAS	000034	000000
5132000726	5-1320	0072	FILTER ASM; OIL	000000	000003
5132000753	5-1320	0075	FILTER ASM; OIL	000000	000000
5132000756	5-1320	0075	FILTER ASM; OIL	000000	000000
5132000764	5-1320	0076	FILTER ASM; OIL	000000	000000
5132000765	5-1320	0076	FILTER ASM; OIL	000000	000000
5132000766	5-1320	0076	FILTER ASM; OIL	000000	000000

5132000800	5-1320	0080	FUEL FILTER ASS	000000	000000
5132000970	5-1320	0097	FILTER ASM; FUEL	000000	000000
5132000971	5-1320	0097	FILTER ASM; FUEL	000000	000000
5132001190	5-1320	0119	FILTER;ASM;FUEL	000000	000000
5132001231	5-1320	0123	FILTER ASM; HORIZONTAL 6B	000000	000000
5132001380	5-1320	0138	FILTER ASM; FUEL 2KC/3KC1	000000	000000
5132001400	5-1320	0140	FUEL FILTER;CENTER BOLT	000000	000000
5132001430	5-1320	0143	FILTER ASM; OIL	000000	000000
5132001712	5-1320	0171	FILTER ASM;OIL	000000	000000
5132001713	5-1320	0171	FILTER ASM;OIL	000000	000000
5132001940	5-1320	0194	FILTER ASM; COOLER OIL	000000	000000
5132001941	5-1320	0194	FILTER ASM; COOLER OIL	000000	000000
5132002011	5-1320	0201	COOLER & FILTER	000000	000000
5132002063	5-1320	0206	FILTER ASM; OIL	000000	000000
5132002070	5-1320	0207	FILTER ASM; OIL 6BB/BD1	000000	000002
5132002110	5-1320	0211	PREFILTER; FUEL	000000	000000
5132002120	5-1320	0212	COOLER & FILTER	000000	000000
5132002141	5-1320	0214	FILTER ASM; OIL	000000	000000
5132002170	5-1320	0217	COOLER & FILTER	000000	000000
5132002171	5-1320	0217	COOLER & FILTER	000000	000000
5132002172	5-1320	0217	COOLER & FILTER	000000	000000
5132002173	5-1320	0217	COOLER & FILTER	000000	000000
5132002183	5-1320	0218	FILTER ASM; COOLER OIL	000000	000004
5132002205			SEDIMENTER FUEL	000000	000000
5132002206			WATER SEDIMENTOR	000000	000000
5132002207			WATER SEDIMENTOR	000000	000000
5132002208			WATER SEDIMENTOR	000000	000002
5132002212			FILTER ASM; OIL	000000	000000
5132002213	5-1320	0221	FILTER ASM; OIL	000000	000000
5132002232	5-1320	0223	FILTER ASM; OIL	000000	000000
5132002233	5-1320	0223	FILTER ASM; OIL	000000	000000
5132002241	5-1320	0224	FILTER ASM; FUEL	000000	000000
5132002244	5-1320	0224	FILTER ASM; FUEL	000000	000000
5132002260	5-1320	0226	FILTER ASM; OIL	000000	000000
5132002261	5-1320	0226	FILTER ASM; OIL	000000	000000
5132002262	5-1320	0226	FILTER ASM; OIL	000000	000001
5132002270	5-1320	0227	FILTER ASM; OIL QD100	000000	000000
5132002271	5-1320	0227	FILTER ASM; OIL QD100	000000	000000
5132002281	5-1320	0228	FILTER ASM; FUEL	000002	000000
5132002290	5-1320	0229	FILTER ASM;FUEL	000000	000000
5132002291	5-1320	0229	FILTER ASM;FUEL	000002	000000
5132002292	5-1320	0229	FILTER ASM;FUEL	000000	000000
5132002310	5-1320	0231	FILTER ASM;OIL	000000	000000
5132002311	5-1320	0231	FILTER ASM;OIL	000000	000000
5132002350	5-1320	0235	FILTER;ASM;FUEL	000000	000000
5132002360	5-1320	0236	FILTER ASM; OIL	000002	000000
5132002370	5-1320	0237	FILTER ASM; OIL	000002	000000

5132002380	5-1320	0238	FILTER ASM; OIL	000000	000000
5132100043	5-1321	0004	FILTER ASM; OIL	000000	000000
5132100111	5-1321	0011	BODY ASM; OIL FILTER	000000	000002
5132100170	5-1321	0017	CASE ASM; PREFILTER	000000	000000
5132110011	5-1321	1001	BODY; FUEL FILTER	000000	000000
5132110051	5-1321	1005	CASE;PRE FUEL	000000	000000
5132110060	5-1321	1006	BODY; FUEL FILTER	000000	000000
5132110061	5-1321	1006	BODY; FUEL FILTER	000002	000000
5132110081	5-1321	1008	BODY; FUEL FILTER	000000	000000
5132110100	5-1321	1010	BODY; OIL FILLER	000000	000000
5132110110	5-1321	1011	BODY; FUEL FILTER 2KC/3KC	000002	000000
5132110150	5-1321	1015	BODY;FUEL FILTE	000000	000000
5132110151	5-1321	1015	BODY;FUEL FILTE	000000	000003
5132110160	5-1321	1016	BODY;OIL FILTER	000000	000007
5132110161	5-1321	1016	BODY;OIL FILTER	000000	000000
5132110180	5-1321	1018	OIL FILTER;DSEL	000000	000000
5132110181	5-1321	1018	OIL FILTER;DSEL	000000	000000
5132110200	5-1321	1020	BODY; OIL FILTER	000000	000000
5132110201	5-1321	1020	BODY; OIL FILTER	000000	000000
5132110230	5-1321	1023	CASE ASM 6BG1/C240	000000	000000
5132110231	5-1321	1023	CASE ASM 6BG1/C240	000000	000002
5132110241	5-1321	1024	FILTER;OIL (SPIN-ON)	000000	000000
5132110251	5-1321	1025	COVER ASM;OIL PORT	000000	000000
5132110290	5-1321	1029	BODY; OIL FILTER	000000	000000
5132110300	5-1321	1030	CASE;WTR SEDIME	000000	000000
5132110301	5-1321	1030	CASE; FUEL SEDIMENTER	000010	000005
5132120040	5-1321	2004	COVER; OIL FILTER	000000	000000
5132120172	5-1321	2017	COVER;FILTER,FU	000000	000000
5132120210	5-1321	2021	COVER; OIL FILTER	000003	000000
5132120212	5-1321	2021	COVER; OIL FILTER	000000	000000
5132120222	5-1321	2022	COVER; O/FILTER	000000	000000
5132120250	5-1321	2025	COVER; OIL FILTER	000000	000000
5132120330	5-1321	2033	COVER; FUEL FILTER 2KC1	000003	000000
5132120340	5-1321	2034	COVER; FULE FILTER	000000	000000
5132120470	5-1321	2047	BODY,OIL FILTER	000000	000000
5132120520	5-1321	2052	COVER; OIL FILTER	000000	000000
5132120540	5-1321	2054	COVER; OIL FILTER	000002	000000
5132120590	5-1321	2059	BODY 6BG1/C240	000000	000000
5132120591	5-1321	2059	BODY 6BG1/C240	000000	000001
5132120610	5-1321	2061	COVER; OIL FILTER	000000	000000
5132120620	5-1321	2062	COVER; OIL FILTER	000000	000000
5132120630	5-1321	2063	COVER; OIL FILTER	000000	000000
5132120681	5-1321	2068	COVER; OIL FILTER	000000	000001
5132120700	5-1321	2070	COVER; FUEL FILTER, UPPER	000000	000000
5132120731	5-1321	2073	COVER; FILTER	000000	000000
5132120750	5-1321	2075	COVER;FILTER,FU	000000	000000
5132120751	5-1321	2075	COVER;FILTER,FU	000000	000007

5132120780	5-1321	2078	BODY ASM;WTR SE	000000	000000
5132120800	5-1321	2080	COVER; OIL FILTER	000000	000000
5132121240	5-1321	2124	BODY ASM.; BODY; OIL FILT	000000	000000
5132130031	5-1321	3003	PACKING; BODY COVER 2KC/3	000000	000000
5132190010	5-1321	9001	GASKET;OIL FILTER	000000	000000
5132190030	5-1321	9003	SPACER;MANIF	000000	000001
5132190120	5-1321	9012	GASKET;OIL FILTER	000000	000000
5132190200	5-1321	9020	BOLT	000063	000000
5132190210	5-1321	9021	FLOAT 6BG1/C240	000007	000055
5132190220	5-1321	9022	RING; RETAINER 6SA1	000000	000000
5132190221	5-1321	9022	RING; RETAINER 6SA1	000000	000056
5132190230	5-1321	9023	PACKING; OIL FILTER TO CY	000000	000000
5132190261	5-1321	9026	SPACER; OIL FILTER TO BLO	000000	000000
5132190262	5-1321	9026	SPACER; OIL FILTER TO BLO	000000	000000
5132190290	5-1321	9029	PACKING; SCREW 2AB1/2KC1	000010	000000
5132200020	5-1322	0002	PLUG ASM; SENSOR	000000	000000
5132200030	5-1322	0003	PLUG ASM;LWR BO	000000	000001
5132260010	5-1322	6001	PLUG; FILTER CO	000000	000002
5132310010	5-1323	1001	BOLT; CENTER	000000	000000
5132310050	5-1323	1005	BOLT;OIL FILTER	000000	000000
5132310080	5-1323	1008	STUD; OIL COOLER	000000	000000
5132340010	5-1323	4001	RING;SEDIMENTER	000000	000000
5132340100	5-1323	4010	RING; BODY TO CASE	000011	000016
5132400091	5-1324	0009	FUEL FILTER	000000	000000
5132400170	5-1324	0017	OIL FILTER;MAIN	000000	000000
5132400230	5-1324	0023	FUEL FILTER	000000	000000
5132400320	5-1324	0032	ELEMENT; FUEL FI	000000	000000
5132400340	5-1324	0034	FILTER;FUEL (SPIN-ON) 4B/	000000	000000
5132400410	5-1324	0041	OIL FILTER;MAIN	000000	000000
5132400420	5-1324	0042	CARTRIDGE;OIL FILTER	000000	000000
5132440010	5-1324	4001	SENSOR ASM; SEDIMENTER	000000	000003
5132580010	5-1325	8001	FLOAT;SEDIMENTER	000001	000005
5132600010	5-1326	0001	VALVE;OVERFLOW	000000	000000
5132600020	5-1326	0002	VALVE;OVERFLOW	000000	000000
5132600040	5-1326	0004	VALVE;OVERFLOW	000000	000000
5132600061	5-1326	0006	VALVE;OVERFLOW	000000	000000
5132600080	5-1326	0008	VALVE ASM; SAFETY	000000	000001
5132600090	5-1326	0009	VALVE;OVERFLOW	000000	000002
5132600101	5-1326	0010	VALVE ASM; OVERFLOW	000002	000000
5132650010	5-1326	5001	PLUG; SAFETY VALVE	000000	000008
5132700221	5-1327	0022	THERMOSTAT UNLISTED	000000	000000
5133100010	5-1331	0001	OIL ASM; PIPE	000000	000000
5133110070	5-1331	1007	PIPE ASM; OIL	000003	000000
5133110152	5-1331	1015	PIPE ASM; OIL	000001	000000
5133110730	5-1331	1073	PIPE ASM; OIL	000000	000000
5133110760	5-1331	1076	PIPE ASM;OIL	000000	000000
5133110761	5-1331	1076	PIPE ASM; OIL	000000	000000

5133110790	5-1331	1079	PIPE ASM;O/FILT	000000	000000
5133110810	5-1331	1081	PIPE ASSY; OIL	000000	000000
5133110820	5-1331	1082	PIPE;OIL,FILTER	000000	000000
5133110850	5-1331	1085	PIPE;OIL,V/PUMP	000000	000001
5133110890	5-1331	1089	PIPE; OIL	000000	000000
5133110940	5-1331	1094	OIL PIPE	000002	000000
5133111010	5-1331	1101	PIPE; OIL VAC PUMP	000000	000000
5133111040			HOSE; FLEX	000000	000000
5133111080	5-1331	1108	PIPE ASM; OIL	000000	000000
5133111101	5-1331	1110	PIPE ASM; OIL	000000	000000
5133111141	5-1331	1114	OIL PIPE ASSY	000090	000000
5133111181	5-1331	1118	PIPE ASM; OIL	000000	000000
5133111190	5-1331	1119	PIPE ASM;O/FILT	000009	000009
5133111210	5-1331	1121	PIPE ASM; OIL DRAIN	000002	000000
5133111220	5-1331	1122	PIPE ASM; OIL DRAIN 6BD1	000000	000000
5133111221	5-1331	1122	PIPE ASM; OIL DRAIN 6BD1	000002	000000
5133111260	5-1331	1126	PIPE ASM.; BREATHER OIL R	000001	000000
5133111350	5-1331	1135	PIPE ASM; OIL	000000	000000
5133111351	5-1331	1135	PIPE ASM; OIL	000013	000000
5133111360	5-1331	1136	PIPE ASM; OIL	000000	000000
5133111370	5-1331	1137	PIPE ASM; OIL	000001	000000
5133111440	5-1331	1144	PIPE ASM; OIL INJ PUMP FE	000000	000039
5133111500	5-1331	1150	PIPE ASM;OIL	000000	000000
5133111510	5-1331	1151	PIPE ASM; OIL	000000	000000
5133111520	5-1331	1152	PIPE ASM,OIL PU	000000	000000
5133111621	5-1331	1162	PIPE,V/P TO OIL	000000	000052
5133111720	5-1331	1172	PIPE ASM; OIL	000000	000000
5133111740	5-1331	1174	PIPE ASM; OIL, INJ PUMP	000026	000000
5133111760	5-1331	1176	PIPE,OIL,ROCKER	000000	000000
5133111811	5-1331	1181	PIPE ASM; OIL	000001	000000
5133111880	5-1331	1188	PIPE ASM.;OIL, INJ. PUMP	000000	000000
5133111890	5-1331	1189	PIPE ASM,OIL,PI	000000	000000
5133111891	5-1331	1189	PIPE ASM,OIL,PI	000000	000000
5133111892	5-1331	1189	PIPE ASM;OIL,PI	000000	000000
5133111900	5-1331	1190	PIPE ASM; OIL	000000	000000
5133111910	5-1331	1191	PIPE ASM; OIL	000000	000005
5133111920	5-1331	1192	PIPE ASM; VACUUM	000002	000001
5133111931	5-1331	1193	PIPE ASM;OIL	000002	000003
5133111940	5-1331	1194	PIPE ASM; OIL, TURBO	000000	000000
5133111970	5-1331	1197	PIPE ASM; OIL VACUUM PUMP	000000	000000
5133111980	5-1331	1198	PIPE ASM; OIL VACUUM PUMP	000000	000000
5133112050	5-1331	1205	PIPE ASM; INJ PUMP	000000	000003
5133112080	5-1331	1208	PIPE ASM; OIL FILTER	000000	000005
5133112090	5-1331	1209	PIPE ASM; OIL	000000	000000
5133112200	5-1331	1220	PIPE ASM; OIL	000000	000000
5133112221	5-1331	1222	PIPE ASM; OIL, BLOCK-CASE	000000	000010
5133112231	5-1331	1223	PIPE ASM; INJECTION	000001	000000

5133112271	5-1331	1227	PIPE ASM; OIL COVER	000000	000000
5133112281	5-1331	1228	PIPE ASM; OIL, HEAD FEED	000000	000000
5133112290	5-1331	1229	PIPE ASM; OIL HEAD FEED	000000	000000
5133112291	5-1331	1229	PIPE ASM; OIL HEAD FEED	000000	000000
5133112430	5-1331	1243	PIPE ASM; OIL BALL-CHAIN	000000	000000
5133112451	5-1331	1245	PIPE ASM; OIL FILTER	000000	000000
5133112470	5-1331	1247	PIPE ASM; OIL FLOW	000000	000000
5133112550	5-1331	1255	PIPE ASM; OIL, INJECTION	000000	000000
5133112561	5-1331	1256	PIPE ASM; OIL FI	000000	000000
5133112570	5-1331	1257	PIPE;BREATHER	000000	000000
5133112580	5-1331	1258	PIPE ASM;OIL	000000	000000
5133112591	5-1331	1259	PIPE ASM; OIL, OIL PUMP	000000	000000
5133112680	5-1331	1268	PIPE ASM; OIL	000000	000000
5133112710	5-1331	1271	PLUG; OIL PAN	000000	000000
5133112740	5-1331	1274	PIPE ASM; OIL	000000	000000
5133112780	5-1331	1278	PIPE ASM; OIL, GEAR CASE	000000	000000
5133112821	5-1331	1282	PIPE ASM; OIL JET	000000	000000
5133112851	5-1331	1285	PIPE ASM; OIL JET	000000	000000
5133112891	5-1331	1289	PIPE ASM;OIL JET	000000	000001
5133112912	5-1331	1291	PIPE ASM.; OIL, CRANK CAS	000000	000000
5133112941	5-1331	1294	PIPE ASM; OIL, BLOCK-CASE	000000	000000
5133112980	5-1331	1298	STRAINER ASM; OIL PUMP	000000	000000
5133113010	5-1331	1301	PIPE ASM; OIL, CASE	000000	000000
5133113021	5-1331	1302	PIPE ASM; OIL	000000	000000
5133113030	5-1331	1303	STRAINER ASM; OIL PUMP 3K	000000	000000
5133113040	5-1331	1304	STRAINER ASM; OIL PUMP 2K	000000	000000
5133113080	5-1331	1308	PIPE ASM; OIL, TURBO DRAI	000000	000000
5133113100	5-1331	1310	PIPE ASM; OIL	000000	000000
5133490010	5-1334	9001	TUBE; DISTANCE	000000	000000
5135311060	5-1353	1106	NOZZLE ASM; INJECTION	000000	000000
5136100122	5-1361	0012	PUMP ASSY,WATER	000000	000000
5136100123	5-1361	0012	PUMP ASSY,WATER	000001	000000
5136100263	5-1361	0026	W/PUMP	000000	000000
5136100272	5-1361	0027	PUMP ASM; WATER	000000	000001
5136100415	5-1361	0041	PUMP ASM; WATER	000000	000000
5136100460	5-1361	0046	WATER PUMP	000000	000000
5136100543	5-1361	0054	PUMP ASM; WATER W/GASKET	000000	000000
5136100570	5-1361	0057	PUMP ASM; WATER W/PACKING	000000	000000
5136100671	5-1361	0067	PUMP ASM; WATER	000000	000000
5136100672	5-1361	0067	PUMP ASM; WATER	000000	000000
5136100760	5-1361	0076	PUMP ASSY,WATER	000000	000000
5136100762	5-1361	0076	PUMP ASSY,WATER	000000	000000
5136100770	5-1361	0077	PUMP ASM; WATER W/PACKING	000000	000000
5136100802	5-1361	0080	PUMP ASM; WATER	000000	000000
5136100812	5-1361	0081	PUMP ASM; WATER	000000	000000
5136100910	5-1361	0091	PUMP ASM; WATER (FRESH)	000000	000000
5136100995	5-1361	0099	PUMP ASM; WATER	000000	000000

5136101440	5-1361	0144	PUMP ASM; WATER	000000	000000
5136101452	5-1361	0145	PUMP ASM; WATER W/PACKING	000000	000000
5136101453	5-1361	0145	PUMP ASM; WATER W/PACKING	000000	000000
5136101572	5-1361	0157	PUMP ASM; WATER W/PACKING	000000	000000
5136101573	5-1361	0157	PUMP ASM; WATER W/PACKING	000000	000000
5136101582	5-1361	0158	PUMP ASM; WATER W/GASKET	000000	000000
5136101591	5-1361	0159	PUMP ASM; WATER	000000	000000
5136101642	5-1361	0164	PUMP ASM; WATER	000000	000000
5136101673	5-1361	0167	WATER PUMP	000000	000000
5136101674	5-1361	0167	WATER PUMP	000000	000000
5136101675	5-1361	0167	WATER PUMP	000000	000000
5136101676	5-1361	0167	WATER PUMP	000000	000000
5136101683	5-1361	0168	PUMP ASM; WATER	000000	000000
5136101693	5-1361	0169	PUMP ASM; WATER W/PACKING	000000	000000
5136101694	5-1361	0169	PUMP ASM; WATER W/PACKING	000000	000000
5136101701	5-1361	0170	PUMP ASM; WATER W/PACKING	000000	000000
5136101712	5-1361	0171	PUMP; WATER	000000	000000
5136101713	5-1361	0171	PUMP, WATER	000000	000000
5136101770	5-1361	0177	PUMP ASM; WATER	000000	000000
5136101780	5-1361	0178	WATER PUMP ASM;	000000	000000
5136101790	5-1361	0179	WATER PUMP ASSY	000000	000000
5136101792	5-1361	0179	WATER PUMP	000000	000000
5136101851	5-1361	0185	PUMP ASM; WATER	000000	000000
5136101870	5-1361	0187	PUMP ASM; WATER	000000	000001
5136101910	5-1361	0191	PUMP ASM; WATER	000002	000000
5136101980	5-1361	0198	PUMP ASM; WATER	000000	000000
5136102022	5-1361	0202	PUMP ASM; WATER	000000	000000
5136102060	5-1361	0206	PUMP ASM; WATER	000000	000000
5136102070			WATER PUMP ASM	000000	000001
5136110500			BODY; WATER PUMP	000000	000000
5136120070	5-1361	2007	COVER; WATER PUMP BODY	000000	000000
5136120100	5-1361	2010	COVER; WTR PUMP	000000	000000
5136120160	5-1361	2016	COVER, WATER PUM	000000	000000
5136120200	5-1361	2020	CASE; VORTEX	000000	000000
5136130040	5-1361	3004	PACKING; WATER PUMP	000000	000000
5136130060	5-1361	3006	PACKING; COVER	000000	000000
5136130061	5-1361	3006	PACKING; COVER	000003	000000
5136130070	5-1361	3007	GASKET, W/PUMP	000000	000000
5136130110	5-1361	3011	PACKING; COVER-PUMP BLOCK	000000	000000
5136130130	5-1361	3013	PACKING; H/EXCHGR-MAN	000000	000000
5136140151	5-1361	4015	PACKING; WATER-CHAIN CASE	000001	000000
5136140170	5-1361	4017	PACKING; WATER PUMP	000007	000000
5136140190	5-1361	4019	PACKING; WATER PUMP	000000	000000
5136140200	5-1361	4020	PACKING; WATER PUMP	000000	000000
5136140381	5-1361	4038	PULLER	000000	000000
5136190220	5-1361	9022	RING; RETAINER	000000	000000
5136190221	5-1361	9022	RING; RETAINER	000000	000000

5136190790	5-1361	9079	BRACKET; CONTROL	000001	000000
5136190982			PACKING;W/PUMP	000000	000000
5136191120			BRACKET; CONTROL CABLE	000000	000000
5136191130	5-1361	9113	REPAIR KIT; ENGINE OVERHA	000000	000000
5136191140	5-1361	9114	REPAIR KIT; WATER PUMP	000005	000000
5136191440	5-1361	9144	REPAIR KIT; W/P	000000	000000
5136200030	5-1362	0003	UNIT; SEAL,WATER	000000	000000
5136200060	5-1362	0006	UNIT; SEAL,WATER	000000	000000
5136200061	5-1362	0006	UNIT; SEAL,WATER	000000	000000
5136200062	5-1362	0006	UNIT; SEAL,WATER	000000	000000
5136200070	5-1362	0007	UNIT; SEAL,WATER	000000	000000
5136210110	5-1362	1011	IMPELLER;W/PUMP	000000	000011
5136210130	5-1362	1013	IMPELLER;	000000	000000
5136310040	5-1363	1004	SHAFT; WATER PUMP	000001	000000
5136310050	5-1363	1005	REPAIR KIT; W/P 3AB1	000000	000000
5136310070	5-1363	1007	SHAFT; WATER PUMP	000001	000000
5136310071	5-1363	1007	SHAFT; WATER PUMP	000000	000000
5136310080	5-1363	1008	UNIT;BRG W	000000	000000
5136310090	5-1363	1009	SHAFT;WTR PUMP	000000	000000
5136310100	5-1363	1010	SHAFT;WTR PUMP	000000	000000
5136310130	5-1363	1013	SHAFT; WATER PU	000000	000000
5136320010	5-1363	2001	SPACER;BRG	000000	000000
5136340020	5-1363	4002	SPACER;BRG.W/PU	000000	000004
5136340030	5-1363	4003	SPACER;SPINDLE	000000	000008
5136340050	5-1363	4005	SPACER; BEARING	000000	000000
5136390010	5-1363	9001	DUST THROWER;W/	000000	000002
5136390020	5-1363	9002	DUST COVER;W/P	000060	000000
5136390060	5-1363	9006	COVER; DUST	000000	000000
5136390070	5-1363	9007	SLINGER 4BD1	000000	000018
5136410140	5-1364	1014	PULLEY; FAN	000000	000000
5136410160	5-1364	1016	PULLEY; FAN	000000	000000
5136410162	5-1364	1016	PULLEY; FAN	000000	000000
5136410163	5-1364	1016	PULLEY; FAN	000003	000000
5136410170	5-1364	1017	PULLEY;WTR PUMP	000000	000000
5136410171	5-1364	1017	PULLEY; WATER PUMP	000000	000000
5136410270	5-1364	1027	PULLEY; WATER PUMP	000000	000001
5136410301	5-1364	1030	PULLEY; CRANKSHAFT 2KC1	000000	000000
5136410330	5-1364	1033	PULLEY;WATER PU	000000	000006
5136410340	5-1364	1034	PULLEY; FAN	000000	000000
5136410381	5-1364	1038	PULLEY; WATER PUMP	000000	000044
5136410391	5-1364	1039	PULLEY; FAN	000000	000000
5136410393	5-1364	1039	PULLEY; FAN	000000	000000
5136410410	5-1364	1041	PULLEY; FAN	000000	000000
5136410422	5-1364	1042	PULLEY; FAN	000000	000000
5136410423	5-1364	1042	PULLEY; FAN	000000	000000
5136410424	5-1364	1042	PULLEY; FAN	000000	000000
5136410433	5-1364	1043	PULLEY; WATER PUMP	000000	000000

5136410434	5-1364	1043	PULLEY; WATER PUMP	000001	000000
5136410441	5-1364	1044	PULLEY; FAN	000000	000002
5136410453	5-1364	1045	PULLEY; FAN	000000	000000
5136420072	5-1364	2007	CENTER; FAN-PULLEY	000001	000001
5136420110	5-1364	2011	SPACER; FAN	000000	000000
5136420160	5-1364	2016	PULLEY; CENTER	000000	000000
5136420191	5-1364	2019	SPACER; FAN-PULLEY, T=35.5	000001	000000
5136420200	5-1364	2020	CENTER; FAN	000001	000000
5136420241	5-1364	2024	SPACER; FAN-PULLEY	000000	000000
5136420280	5-1364	2028	SPACER; FAN	000000	000000
5136420340	5-1364	2034	SPACER; FAN PULLEY	000003	000000
5136420350	5-1364	2035	SPACER; FAN TO PULLEY	000001	000000
5136420510	5-1364	2051	SPACER; FAN	000000	000003
5136420520	5-1364	2052	SPACER; PULLEY	000000	000000
5136420530	5-1364	2053	CNTR; FAN W/PUMP	000000	000001
5136420550	5-1364	2055	SPACER; FAN	000000	000000
5136420580	5-1364	2058	SPACER; FAN	000000	000000
5136420581	5-1364	2058	SPACER; FAN	000000	000000
5136420590	5-1364	2059	SPACER; FAN PULLEY	000000	000000
5136420591	5-1364	2059	SPACER; FAN PULLEY	000000	000000
5136420601	5-1364	2060	SPACER; FAN	000000	000000
5136420610	5-1364	2061	SPACER; FAN	000000	000000
5136420620	5-1364	2062	SPACER; COOLING	000000	000000
5136420621	5-1364	2062	SPACER; COOLING	000000	000001
5136420640	5-1364	2064	CENTER; FAN	000007	000000
5136420651	5-1364	2065	SPACER	000003	000000
5136420670	5-1364	2067	SPACER; FAN-PULLEY	000000	000000
5136420671	5-1364	2067	SPACER; FAN-PULLEY	000001	000000
5136420710	5-1364	2071	SPACER; WATER P	000000	000006
5136420750	5-1364	2075	CENTER; FAN	000000	000000
5136420761	5-1364	2076	CENTER; WATER P	000000	000041
5136420770	5-1364	2077	SPACER	000090	000000
5136420780	5-1364	2078	PLATE; SET, FAN	000000	000000
5136420791	5-1364	2079	SPACER; FAN	000000	000003
5136420801	5-1364	2080	SPACER; FAN	000000	000000
5136600030	5-1366	0003	FAN; COOLING	000000	000000
5136600040	5-1366	0004	FAN ASM; COOLING	000000	000000
5136600130	5-1366	0013	FAN ASM; COOLING	000000	000001
5136600190	5-1366	0019	FAN ASM; COOLING	000000	000007
5136600401	5-1366	0040	FAN ASM; COOLING	000000	000007
5136602220	5-1366	0222	FAN ASM	000000	000001
5136602240	5-1366	0224	FAN ASM; COOLING	000000	000002
5136602340	5-1366	0234	FAN; COOLING	000000	000001
5136602360	5-1366	0236	FAN ASM;	000009	000000
5136602420	5-1366	0242	FAN ASM	000000	000001
5136602711	5-1366	0271	FAN ASM; COOLING	000000	000042
5136602820	5-1366	0282	FAN ASM; COOLING	000000	000002

5136602850	5-1366	0285	FAN ASM; COOLING	000000	000000
5136602860	5-1366	0286	FAN ASM	000006	000000
5136602861	5-1366	0286	FAN ASM	000000	000000
5136602890	5-1366	0289	FAN ASM; COOLING	000000	000000
5136602940	5-1366	0294	FAN ASM; COOLING	000000	000000
5136602950	5-1366	0295	FAN ASM.	000000	000000
5136602990	5-1366	0299	FAN ASM	000000	000000
5136602991	5-1366	0299	FAN ASM; D540,7,SUCT PP	000000	000008
5136603040	5-1366	0304	FAN ASM; COOLING	000000	000000
5136603041	5-1366	0304	FAN ASM; COOLING	000000	000045
5136603060	5-1366	0306	FAN ASM; COOLING	000000	000000
5136603071	5-1366	0307	FAN ASM; COOLING	000000	000000
5136603080	5-1366	0308	FAN ASM; COOLING	000000	000000
5136603081	5-1366	0308	FAN ASM; COOLING	000000	000014
5136603090	5-1366	0309	FAN ASM; COOLING	000000	000005
5136603100	5-1366	0310	FAN ASM; COOLING	000002	000000
5136603130	5-1366	0313	FAN ASM; COOLING	000000	000000
5136603140	5-1366	0314	FAN ASM	000000	000000
5136603150	5-1366	0315	FAN ASM; COOLING	000000	000000
5136603151	5-1366	0315	FAN ASM; COOLING	000000	000000
5136620100	5-1366	2010	FAN ASM; COOLING	000000	000000
5136620110	5-1366	2011	FAN ASM; COOLING	000000	000000
5136620120	5-1366	2012	FAN; COOLING	000000	000000
5136620121	5-1366	2012	FAN; COOLING	000170	000151
5136630090	5-1366	3009	PULLEY; FAN	000000	000000
5136630091	5-1366	3009	PULLEY; FAN	000002	000000
5136630130	5-1366	3013	PULLEY ASM; IDLE FAN	000000	000000
5136630160	5-1366	3016	PULLEY; FAN	000000	000000
5136630290	5-1366	3029	PULLEY; FAN	000000	000000
5136630291	5-1366	3029	PULLEY; FAN	000000	000000
5136630292	5-1366	3029	PULLEY; FAN	000000	000000
5136630301	5-1366	3030	PULLEY; FAN	000000	000000
5136630302	5-1366	3030	PULLEY; FAN	000000	000004
5136630310	5-1366	3031	PULLEY;FAN DR.	000000	000000
5136630311	5-1366	3031	PULLEY;FAN DR.	000000	000000
5136630312	5-1366	3031	PULLEY;FAN DR.	000000	000001
5136630360	5-1366	3036	PULLEY; FAN	000000	000000
5136630392	5-1366	3039	PULLEY ASM; IDL	000001	000000
5136630420	5-1366	3042	PULLEY ASM.; IDLE	000000	000000
5136630451	5-1366	3045	PULLEY; FAN	000000	000000
5136630452	5-1366	3045	PULLEY; FAN	000000	000000
5136630490	5-1366	3049	PULLEY; FAN	000000	000000
5136630491	5-1366	3049	PULLEY; FAN	000001	000000
5136630500	5-1366	3050	PULLEY; FAN	000000	000000
5136630532	5-1366	3053	PULLEY;FAN	000000	000000
5136630570	5-1366	3057	PULLEY; FAN DRI	000000	000006
5136630580	5-1366	3058	PULLEY; FAN	000000	000000

5136700040	5-1367	0004	BELT;COOLING FAN CR/SHF	000000	000000
5136700041	5-1367	0004	BELT;COOLING FAN CR/SHF	000090	000098
5136710100	5-1367	1010	BELT; FAN	000000	000000
5136710160	5-1367	1016	BELT; COOLING F	000000	000000
5136710231	5-1367	1023	BELT; FAN	000001	000004
5136710301	5-1367	1030	DISCONTINUED**PULLEY	000000	000000
5136710400	5-1367	1040	BELT; FAN	000000	000088
5136710410	5-1367	1041	BELT;	000000	000000
5136710450	5-1367	1045	BELT,FAN	000000	000022
5136710560	5-1367	1056	BELT; FAN	000003	000000
5136710610	5-1367	1061	BELT; FAN	000000	000000
5136710650	5-1367	1065	BELT; FAN	000000	000000
5136710680	5-1367	1068	BELT; FAN	000000	000000
5136710700	5-1367	1070	BELT; FAN	000000	000001
5136710910	5-1367	1091	BELT; COOLING F	000000	000000
5136710970	5-1367	1097	BELT ASM; COOLING	000000	000000
5136710981	5-1367	1098	BELT ASM; COOLING	000000	000037
5136711000	5-1367	1100	BELT COMP. DRIVE	000001	000000
5136711080	5-1367	1108	BELT; FAN	000000	000000
5136711160	5-1367	1116	BELT; COOLING	000001	000000
5136711260	5-1367	1126	BELT; FAN	000000	000076
5136711290	5-1367	1129	BELT ASSY;FAN	000000	000000
5136711300	5-1367	1130	BELT ASM; FAN	000000	000000
5136711320	5-1367	1132	BELT; FAN	000000	000000
5136711330	5-1367	1133	BELT; FAN	000021	000007
5136711340	5-1367	1134	BELT; FAN	000000	000000
5136711400	5-1367	1140	BELT; COOLING FAN L=861	000000	000000
5136711420	5-1367	1142	BELT; FAN	000005	000000
5136711430	5-1367	1143	BELT; FAN	000000	000001
5136711440	5-1367	1144	BELT; FAN	000000	000000
5136711450	5-1367	1145	BELT; FAN	000000	000000
5136711520	5-1367	1152	BELT; FAN	000000	000511
5136711560	5-1367	1156	BELT; FAN	000012	000000
5136711570	5-1367	1157	BELT; FAN	000005	000000
5136711580	5-1367	1158	BELT; FAN	000000	000002
5136740160	5-1367	4016	BELT ASM; FAN	000000	000000
5136740180	5-1367	4018	PLATE; ADJ, FAN BELT	000000	000000
5136740320	5-1367	4032	PLATE;ADJ.,GEN.	000000	000010
5136740390	5-1367	4039	PLATE; ADJUSTER FAN BELT	000000	000004
5136740400	5-1367	4040	SLIDE BRACKET	000000	000000
5136740490	5-1367	4049	PLATE;FAN BELT	000000	000000
5136740520	5-1367	4052	PLATE ADJUSTER	000000	000000
5136740790	5-1367	4079	PLATE; ADJUSTER FAN BELT	000000	000000
5136740820	5-1367	4082	PLATE; ADJUSTER FAN	000000	000000
5136740822	5-1367	4082	PLATE; ADJUSTER FAN	000000	000000
5136740900	5-1367	4090	PLATE; ADJ	000003	000000
5136740910	5-1367	4091	PLATE; ADJUSTER FAN BELT	000000	000000

5136740920	5-1367	4092	PLATE; ADJUSTER FAN BELT	000001	000000
5136740940	5-1367	4094	PLATE; ADJUSTER FAN BELT	000000	000001
5136740960	5-1367	4096	PLATE; ADJUSTER FAN BELT	000000	000000
5136740990	5-1367	4099	PLATE; ADJ 3KC1	000000	000133
5136741030	5-1367	4103	PLATE; ADJUSTER FAN BELT	000000	000000
5136741040	5-1367	4104	PLATE; ADJ ACG 3KR1	000000	000000
5136741041	5-1367	4104	PLATE; ADJ ACG 3KR1	000000	000009
5136741090	5-1367	4109	PLATE; ADJUSTER FAN BELT	000000	000004
5136760040	5-1367	6004	BRKT*	000000	000000
5136790020	5-1367	9002	SPACER; ADJUSTER PLATE	000001	000000
5137103011	5-1371	0301	PIPE; THERMOSTAT	000000	000000
5137103521	5-1371	0352	HOUSING; THERMOSTAT	000000	000000
5137103570	5-1371	0357	HOUSING; FLYWHEEL 4BD1	000000	000004
5137103571	5-1371	0357	HOUSING; FLYWHEEL 4BD1	000000	000000
5137103583	5-1371	0358	HOUSING; THERMOSTAT	000005	000000
5137110150	5-1371	1015	CONNECTOR; 3-WAY	000000	000000
5137110220	5-1371	1022	PIPE; WATER OUTLET	000000	000000
5137130091	5-1371	3009	PIPE;WATER,OUT	000000	000000
5137130111	5-1371	3011	PIPE; WATER OUTLET HORZNT	000000	000004
5137130150	5-1371	3015	PIPE; WATER OUTLET, VERTI	000000	000000
5137130160	5-1371	3016	JOINT;THERMOSTA	000000	000000
5137130161	5-1371	3016	JOINT;THERMOSTA	000000	000000
5137130240	5-1371	3024	PIPE; OUTLET, HORIZONTAL/	000001	000000
5137130280	5-1371	3028	PIPE; WATER OUTLET	000000	000000
5137130290	5-1371	3029	PIPE,WATER OUTL	000000	000000
5137130300	5-1371	3030	PIPE; WATER OUTLET	000003	000000
5137130331	5-1371	3033	PIPE; WATER OUTLET	000000	000000
5137130351	5-1371	3035	OUTLET;WTR PIPE	000000	000001
5137130420	5-1371	3042	PIPE; WATER OUTLET	000003	000000
5137130430	5-1371	3043	PIPE; WATER OUTLET	000004	000000
5137130450	5-1371	3045	PIPE; OUTLET,	000000	000001
5137130471	5-1371	3047	PIPE; WATER OUTLET	000000	000002
5137130481	5-1371	3048	PIPE; WATER OUTLET	000000	000001
5137130490	5-1371	3049	PIPE; WATER OUTLET	000000	000000
5137130520	5-1371	3052	PIPE; WATER OUTLET	000000	000000
5137130550	5-1371	3055	PIPE; WATER/HEAT EXC.	000000	000000
5137160031	5-1371	6003	HOUSING; THERMOSTAT	000000	000000
5137160061	5-1371	6006	HOUSING; THERMOSTAT	000000	000001
5137160070	5-1371	6007	SPACER	000000	000001
5137160092	5-1371	6009	HOUSING; THERMOSTAT	000001	000001
5137160140	5-1371	6014	HOUSING; THERMOSTAT	000000	000014
5137160190	5-1371	6019	HOUSING;THERMOSTAT	000000	000000
5137160260	5-1371	6026	HSG;THERMOSTAT	000000	000007
5137160270	5-1371	6027	HOUSING; THERMOSTAT	000000	000000
5137160280	5-1371	6028	HOUSING; THERMOSTAT	000000	000000
5137160290	5-1371	6029	HOUSING; THERMOSTAT	000000	000000
5137160310	5-1371	6031	HOUSING	000000	000000

5137160330	5-1371	6033	HOUSING; THERMOSTAT	000000	000000
5137160341	5-1371	6034	HOUSING; THERMOSTAT	000000	000000
5137160342	5-1371	6034	HOUSING; THERMOSTAT	000000	000000
5137160380	5-1371	6038	HOUSING; THERMOSTAT	000000	000000
5137160451	5-1371	6045	HSG;THERMOSTAT	000000	000003
5137160510	5-1371	6051	HOUSING; THERMOSTAT	000001	000000
5137160530	5-1371	6053	HOUSING; THERMOSTAT	000000	000000
5137160583	5-1371	6058	HOUSING; THERMOSTAT	000000	000000
5137160590	5-1371	6059	HOUSING; THERMOSTAT	000000	000000
5137160611	5-1371	6061	HOUSING; THERMOSTAT	000000	000000
5137190041	5-1371	9004	HOSE; RUBBER BY-PASS	000000	000000
5137190441	5-1371	9044	SUPERSEDED**PIPE	000000	000000
5137190470	5-1371	9047	PIPE;HSG TO HEA	000027	000000
5137190950	5-1371	9095	PLUG; BY-PASS PIPE	000000	000000
5137191041	5-1371	9104	HOSE; RUBBER BY-PASS	000002	000000
5137191060	5-1371	9106	PIPE; AIR PIPE	000000	000003
5137191070	5-1371	9107	HOSE BY-PASS	000000	000000
5137210141	5-1372	1014	HOSE;WTR,BYPASS	000000	000000
5137210150	5-1372	1015	PIPE; WATER,BYPASS	000000	000000
5137210151	5-1372	1015	PIPE; WATER	000000	000009
5137210152	5-1372	1015	PIPE; WATER,BYPASS	000000	000000
5137210240	5-1372	1024	PIPE; HEATER	000000	000009
5137210280	5-1372	1028	NIPPLE; WATER DRAIN	000000	000000
5137210281	5-1372	1028	NIPPLE; WATER DRAIN	000001	000000
5137210330	5-1372	1033	PIPE,WATER	000000	000000
5137210341	5-1372	1034	ELBOW	000000	000013
5137210360	5-1372	1036	COCK;WTR DRAIN	000000	000000
5137210420	5-1372	1042	PIPE; HEATER	000000	000006
5137210430	5-1372	1043	PIPE	000000	000000
5137210431	5-1372	1043	PIPE	000000	000000
5137210540	5-1372	1054	PIPE ASM; DRAIN 6BG1	000000	000000
5137210550	5-1372	1055	COCK ASM; WATER DRAIN	000000	000000
5137210580	5-1372	1058	HOSE; WATER PUMP	000000	000000
5137210632	5-1372	1063	PIPE; WATER PUMP	000000	000000
5137210740	5-1372	1074	COCK ASM.;WATER DRAIN	000000	000000
5137210782	5-1372	1078	PIPE; WATER PUMP	000000	000000
5137210802	5-1372	1080	PIPE; WATER PUMP	000000	000000
5137210851	5-1372	1085	HOSE; RUBBER, THERMOSTAT	000000	000013
5137290080	5-1372	9008	BRACKET;WATER DRAIN COCK	000000	000000
5137410020	5-1374	1002	GSKT;THERM,HSG	000000	000000
5137410030	5-1374	1003	GASKET;THERMO HOUSING	000000	000000
5137410060	5-1374	1006	GSKT;THERM,HSG	000000	000000
5137410061	5-1374	1006	GSKT;THERM,HSG	000000	000000
5137410071	5-1374	1007	GASKET;THERMO HOUSING	000000	000000
5137430040	5-1374	3004	GASKET;THERMOS	000000	000000
5137430050	5-1374	3005	GASKET;HOUSING	000000	000000
5137430130	5-1374	3013	THERMOSTAT	000003	000000

5137430150	5-1374	3015	PACKING	000000	000000
5137430190			GASKET; PUMP TO	000000	000000
5137430200			PACKING; HOUSING-HEAD	000010	000000
5137430210	5-1374	3021	PACKING; HOUSING	000042	000000
5137430220	5-1374	3022	PACKING; OUTLET PIPE 3KC1	000000	000006
5137490010	5-1374	9001	SPACER; THERMOSTAT	000007	000000
5137700081	5-1377	0008	THERMOSTAT	000002	000000
5137700101	5-1377	0010	THERMOSTAT	000000	000000
5137700120	5-1377	0012	THERMOSTAT (76.5 C)	000000	000000
5137700150	5-1377	0015	THERMOSTAT (76.5 C)	000000	000005
5137700180	5-1377	0018	THERMOSTAT (82 C)	000000	000000
5137700210	5-1377	0021	THERMOSTAT (82 C)	000000	000000
5137700211	5-1377	0021	THERMOSTAT (82 C)	000001	000031
5137700220	5-1377	0022	THERMOSTAT	000000	000000
5137700221	5-1377	0022	THERMOSTAT	000000	000267
5137700230	5-1377	0023	THERMOSTAT	000000	000000
5137700231	5-1377	0023	THERMOSTAT	000000	000000
5137700301	5-1377	0030	THERMOSTAT (82 C)	000000	000036
5137700310	5-1377	0031	THERMOSTAT;WAT	000000	000000
5137700320	5-1377	0032	THERMOSTAT	000000	000000
5137700340	5-1377	0034	THERMOSTAT (76.5 C)	000000	000001
5137700360	5-1377	0036	THERMOSTAT (76.5 C)	000000	000000
5137700370	5-1377	0037	THERMOSTAT: BY-PASS CUT	000000	000000
5137700380	5-1377	0038	THERMOSTAT	000000	000000
5137700381	5-1377	0038	THERMOSTAT	000000	000000
5137700400	5-1377	0040	THERMOSTAT (76.5 C)	000000	000003
5137700411	5-1377	0041	THERMOSTAT (76.5 C)	000000	000000
5141100571	5-1411	0057	PIPE ASM; INLET	000000	000000
5141100641	5-1411	0064	PIPE ASM; INLET	000000	000000
5141101191	5-1411	0119	PIPE; INLET, W/AIR PIPE	000000	000000
5141101410	5-1411	0141	MANIFOLD ASM; INLET	000000	000000
5141101580	5-1411	0158	PIPE ASM; INLET	000000	000000
5141102500	5-1411	0250	PIPE; INLET	000000	000000
5141102501	5-1411	0250	PIPE; INLET	000000	000000
5141102630	5-1411	0263	PIPE;INLET	000000	000004
5141102681	5-1411	0268	MANIFOLD; INTAKE	000000	000000
5141102702	5-1411	0270	MANIFOLD; INLER	000000	000001
5141102703	5-1411	0270	MANIFOLD; INLER	000000	000000
5141110032	5-1411	1003	MANIFOLD ASM; INLET	000000	000000
5141110100	5-1411	1010	PIPE ASM;INLET	000000	000000
5141110111	5-1411	1011	PIPE; INLET	000000	000000
5141110160	5-1411	1016	PIPE ASM; INLET	000000	000000
5141110161	5-1411	1016	PIPE ASM; INLET	000000	000002
5141110720	5-1411	1072	PIPE; INLET 2AB1	000000	000000
5141110730	5-1411	1073	MANIFOLD ASM; INLET	000000	000000
5141110732	5-1411	1073	MANIFOLD ASM; INLET	000002	000000
5141110740	5-1411	1074	PIPE; INLET 2AB1	000000	000000

5141110850	5-1411	1085	PIPE; INLET	000000	000000
5141110851	5-1411	1085	PIPE; INLET	000000	000000
5141111100	5-1411	1110	PIPE; INLET	000000	000000
5141111101	5-1411	1110	PIPE; INLET	000000	000000
5141111160	5-1411	1116	PIPE; INLET	000000	000000
5141111161	5-1411	1116	PIPE; INLET	000003	000000
5141111190	5-1411	1119	PIPE; INLET	000001	000000
5141111220	5-1411	1122	MANIFOLD ASM; INLET	000000	000000
5141111260	5-1411	1126	PIPE; INLET	000000	000000
5141111290	5-1411	1129	PIPE; INLET	000000	000000
5141111291	5-1411	1129	PIPE; INLET	000000	000091
5141111310	5-1411	1131	PIPE; INLET	000000	000000
5141111320	5-1411	1132	PIPE; INLET	000000	000000
5141111340	5-1411	1134	PIPE; INLET	000000	000000
5141111350	5-1411	1135	PIPE; INLET	000000	000000
5141111370	5-1411	1137	PIPE; INLET	000000	000004
5141111390	5-1411	1139	MANIFOLD ASM; INLET	000000	000000
5141111410	5-1411	1141	PIPE; INLET	000000	000000
5141111541	5-1411	1154	MANIFOLD; INLET	000000	000000
5141111542	5-1411	1154	MANIFOLD; INLET	000000	000000
5141111600	5-1411	1160	PIPE; INLET-UNLISTED	000000	000000
5141111653	5-1411	1165	MANIFOLD ASM; INLET	000000	000000
5141111660	5-1411	1166	INLET MANIFOLD	000000	000000
5141111731	5-1411	1173	PIPE ASM; INLET	000000	000000
5141111750	5-1411	1175	PIPE; INL, HOSE	000000	000000
5141111770	5-1411	1177	PIPE; INLET	000000	000000
5141111771	5-1411	1177	PIPE; INLET	000000	000000
5141111960	5-1411	1196	MANIFOLD ASM; INLET	000000	000002
5141111970	5-1411	1197	PIPE; INLET	000000	000000
5141112000	5-1411	1200	PIPE; INLET	000000	000000
5141112010	5-1411	1201	PIPE; INL, TURBO TO M	000000	000000
5141112070	5-1411	1207	MANIFOLD ASM; INLET	000000	000000
5141112101	5-1411	1210	PIPE; INLET	000001	000001
5141112150	5-1411	1215	PIPE; INLET	000000	000000
5141112321	5-1411	1232	INLET MANIFOLD	000000	000001
5141112360	5-1411	1236	PIPE; INLET	000000	000000
5141112420	5-1411	1242	MANIFOLD ASM; INLET 6BD1	000000	000000
5141112421	5-1411	1242	MANIFOLD ASM; INLET 6BD1	000000	000002
5141112433	5-1411	1243	MANIFOLD ASM; INLET 6BB1	000000	000000
5141112434	5-1411	1243	MANIFOLD ASM; INLET 6BB1	000000	000000
5141112462	5-1411	1246	MANIFOLD; INLET	000000	000000
5141112463	5-1411	1246	MANIFOLD; INLET	000000	000000
5141112474	5-1411	1247	MANIFOLD; INLET	000000	000002
5141112511	5-1411	1251	PIPE; INLET 6BB1	000000	000000
5141112530	5-1411	1253	PIPE; INLET	000000	000000
5141112540	5-1411	1254	PIPE; INLET	000000	000000
5141112581	5-1411	1258	PIPE; INLET	000000	000000

5141112592	5-1411	1259	MANIFOLD ASM; INLET	000000	000000
5141112622	5-1411	1262	PIPE; INLET	000000	000000
5141112640	5-1411	1264	PIPE; INLET	000000	000000
5141112662	5-1411	1266	MANIFOLD ASM; INTAKE 2KC1	000000	000000
5141112663	5-1411	1266	MANIFOLD ASM; INTAKE 2KC1	000000	000000
5141112681	5-1411	1268	MANIFOLD ASM; INLET	000000	000000
5141112694	5-1411	1269	MANIFOLD ASM; INLET 3KC1	000000	000000
5141112721	5-1411	1272	PIPE; INLET	000000	000000
5141112750	5-1411	1275	PIPE; INLET	000000	000000
5141112771	5-1411	1277	MANIFOLD ASM; INLET 3KC1	000000	000000
5141112780	5-1411	1278	PIPE; INLET	000000	000000
5141112800	5-1411	1280	MANIFOLD; INLET	000000	000000
5141112861	5-1411	1286	MANIFOLD ASM; INLET	000000	000000
5141140020	5-1411	4002	PIPE; INLET, TURBO 6BD1 M	000000	000000
5141150160	5-1411	5016	GASKET; INL MANIF TO HD	000000	000000
5141150221	5-1411	5022	GSKT;INL.MANIF.TO HD	000000	000000
5141150250	5-1411	5025	GSKT;INL,MANIFO	000000	000000
5141150290	5-1411	5029	GASKET;MANIFOLD	000000	000000
5141150300	5-1411	5030	GASKET; INL MANIF TO HD	000000	000000
5141150330	5-1411	5033	GSKT;INL PIPE	000000	000000
5141150363	5-1411	5036	PORT INSERT;W/PKG.MANI	000001	000003
5141150371	5-1411	5037	GASKET;MANIFOLD	000000	000000
5141190130	5-1411	9013	SPACER; INLET MANIFOLD TH	000000	000000
5141190161	5-1411	9016	BRACKET; INLET MANIFOLD F	000000	000000
5141190232	5-1411	9023	BRACKET;INLET	000000	000000
5141190240	5-1411	9024	STAY; INLET MAN	000000	000004
5141290031	5-1412	9003	CLIP; VACUUM	000000	000000
5141290051	5-1412	9005	STUD;INLET MAN	000000	000000
5141290052	5-1412	9005	STUD; INLET MAN	000027	000000
5141290060	5-1412	9006	RUBBER;MTG,1	000000	000000
5141290110	5-1412	9011	NUT; HEAD TO MA	000037	000000
5141400500	5-1414	0050	MANIFOLD ASM; EXHAUST	000000	000000
5141400860	5-1414	0086	MANIFOLD ASM: EXH,W/CUP	000001	000000
5141400920	5-1414	0092	MANIFOLD ASM; EXHAUST	000000	000000
5141410040	5-1414	1004	MANIFOLD ASM; EXHAUST	000000	000000
5141410060	5-1414	1006	MANIFOLD ASM; EXHAUST	000000	000000
5141410350	5-1414	1035	MANIFOLD ASM; EXHAUST	000002	000000
5141410360	5-1414	1036	MANIFOLD ASM; EXH RR	000000	000001
5141410400	5-1414	1040	MANIFOLD ASM; EXHAUST	000000	000000
5141410510	5-1414	1051	MANIFOLD ASM; EXHAUST	000000	000000
5141410552	5-1414	1055	MANIFOLD ASM; EXHAUST W/O	000000	000000
5141410581	5-1414	1058	EX.MAN.	000000	000002
5141410610	5-1414	1061	MANIFOLD ASM; EXHAUST	000000	000000
5141410670	5-1414	1067	MANIFOLD,EXH.	000000	000000
5141410720	5-1414	1072	MANIFOLD ASM; EXHAUST	000000	000000
5141410721	5-1414	1072	MANIFOLD ASM; EXHAUST	000000	000002
5141410811	5-1414	1081	MANIFOLD ASM; EXHAUST	000000	000000

5141410841	5-1414	1084	EXH. MANIFOLD	000001	000005
5141410890	5-1414	1089	MANIFOLD ASM; EXHAUST	000000	000000
5141410920	5-1414	1092	MANIFOLD, EXH	000000	000000
5141410930	5-1414	1093	MANIFOLD ASM; EXHAUST	000000	000000
5141410941	5-1414	1094	MANIFOLD ASM; EXHAUST	000000	000000
5141410971	5-1414	1097	MANIFOLD ASM; EXHAUST 2KC	000000	000071
5141411000	5-1414	1100	MANIFOLD ASM	000000	000000
5141411050	5-1414	1105	MANIFOLD ASM; EXHAUST	000000	000000
5141411061	5-1414	1106	MANIFOLD ASM; EXHAUST	000000	000000
5141411071	5-1414	1107	MANIFOLD ASM; EXHAUST 3KC	000000	000001
5141440160	5-1414	4016	PIPE; EXHAUST	000000	000000
5141440170	5-1414	4017	PIPE; EXHAUST MANIFOLD 3K	000000	000002
5141450040	5-1414	5004	GASKET; EXH. MA	000000	000000
5141450091	5-1414	5009	GASKET; EXHAUST MANIFOLD	000000	000000
5141450100	5-1414	5010	GASKET; TURBOCHARGER	000000	000000
5141450110	5-1414	5011	GASKET; TURBO	000000	000000
5141450190	5-1414	5019	GASKET; TURBO-ADAPTER	000000	000000
5141450210	5-1414	5021	GASKET; EXHAUST MANIFOLD	000000	000000
5141450211	5-1414	5021	GASKET; EXHAUST MANIFOLD	000022	000000
5141450220	5-1414	5022	GASKET; EXHAUST PIPE	000000	000000
5141460180	5-1414	6018	GASKET, INL & EX	000000	000000
5141460190	5-1414	6019	GASKET	000000	000011
5141460291	5-1414	6029	GASKET; MANIFOLD	000000	000000
5141460302	5-1414	6030	GASKET; MANIFOLD 3KB1	000000	000000
5141460310	5-1414	6031	GASKET; EXHAUST MANIFOLD	000000	000000
5141490150	5-1414	9015	TUBE; DISTANCE	000001	000000
5141490151	5-1414	9015	TUBE; DISTANCE	000000	000010
5141490160	5-1414	9016	WASHER; EXH. MA	000000	000048
5141490660	5-1414	9066	PACKING; COVER	000000	000016
5141490671	5-1414	9067	COVER; MANIFOLD 6BD1 MARI	000000	000011
5141490710	5-1414	9071	TUBE; DISTANCE	000000	000000
5141490711	5-1414	9071	TUBE; DISTANCE	000000	000000
5141490790	5-1414	9079	GASKET; COVER 4JA/B/C1	000001	000000
5141490810	5-1414	9081	COVER; EXH. MANIFOLD 4JC1	000000	000000
5142002130	5-1420	0213	CLEANER ASM; AIR, W/CAP-U	000000	000000
5142100490	5-1421	0049	CLEANER ASM; AIR 3KC1	000000	000000
5142100641	5-1421	0064	CLEANER ASM; AIR	000000	000000
5142100650	5-1421	0065	SUPERSEDED**CLEANER	000000	000000
5142101750	5-1421	0175	ELEMENT; AIR CLEANER	000000	000000
5142101830	5-1421	0183	CLEANER ASM; AIR	000000	000000
5142101831	5-1421	0183	CLEANER ASM; AIR	000000	000003
5142102331	5-1421	0233	ELEMENT; AIR CLEANER	000000	000000
5142102332	5-1421	0233	ELEMENT; AIR CLEANER	000000	000003
5142102401	5-1421	0240	CLEANER ASM; AIR	000000	000000
5142102403	5-1421	0240	CLEANER ASM; AIR	000000	000000
5142102610	5-1421	0261	ELEMENT; AIR CLEANER	000000	000000
5142102611	5-1421	0261	ELEMENT; AIR CLEANER	000000	000000

5142102991	5-1421	0299	SHUTTER; INTAKE	000001	000000
5142103070	5-1421	0307	CLEANER ASM; AIR	000000	000000
5142103071	5-1421	0307	CLEANER ASM; AIR	000000	000000
5142103280	5-1421	0328	CLEANER ASM; AIR PAPER	000000	000000
5142103470	5-1421	0347	CLEANER ASM; AIR	000000	000000
5142103741	5-1421	0374	ELEMENT; AIR CLEANER	000000	000000
5142103751	5-1421	0375	CLEANER ASM; AIR	000000	000000
5142103752	5-1421	0375	CLEANER ASM; AIR	000000	000003
5142103760	5-1421	0376	CLEANER ASM; AIR, PAPER	000000	000000
5142103780	5-1421	0378	CLEANER ASM; AIR	000000	000000
5142103820	5-1421	0382	CLEANER ASM; AIR	000000	000000
5142103910	5-1421	0391	CLEANER ASM; AIR	000000	000000
5142103920	5-1421	0392	AIR CLEANER	000000	000000
5142103922	5-1421	0392	AIR CLEANER	000000	000000
5142103923	5-1421	0392	AIR CLEANER	000000	000000
5142103941	5-1421	0394	CLEANER ASM; AIR 2KC1	000000	000000
5142106700	5-1421	0670	COVER ASM-UNLISTED	000000	000000
5142110200	5-1421	1020	BODY ASM; W\CLIP	000000	000000
5142110570	5-1421	1057	BODY ASM; W/CLIP	000000	000000
5142110571	5-1421	1057	BODY ASM; W/CLIP	000000	000000
5142110670	5-1421	1067	BODY ASM; AIR CLEANER 4JA	000000	000000
5142110700	5-1421	1070	BODY; ASM	000000	000000
5142110780	5-1421	1078	BODY ASM; W/CLIP	000000	000000
5142110781	5-1421	1078	BODY ASM; W/CLIP	000000	000000
5142110830	5-1421	1083	COVER ASM.	000000	000000
5142111030	5-1421	1103	BODY ASM; AIR CLEANER	000000	000000
5142111041	5-1421	1104	CASE ASM	000000	000000
5142111121	5-1421	1112	BODY ASM	000000	000000
5142118051	5-1421	1805	BODY ASM	000000	000000
5142120110	5-1421	2011	PAN ASM; DUST W/BAFFLE	000004	000000
5142120230	5-1421	2023	COVER ASM	000001	000000
5142120240	5-1421	2024	COVER ASM.	000000	000000
5142120270	5-1421	2027	PAN ASM; DUST	000000	000000
5142120560	5-1421	2056	PAN ASM; DUST W\BAFFLE	000000	000000
5142120600	5-1421	2060	COVER ASM	000000	000000
5142120601	5-1421	2060	COVER ASM	000000	000000
5142120620	5-1421	2062	COVER ASM; A/C	000000	000000
5142120751	5-1421	2075	COVER ASM.	000000	000000
5142120761	5-1421	2076	PAN ASM; DUST	000000	000030
5142120790	5-1421	2079	COVER ASM.	000000	000000
5142120800	5-1421	2080	COVER ASM.	000000	000000
5142120860	5-1421	2086	COVER ASM.;	000000	000000
5142120861	5-1421	2086	COVER ASM.;	000000	000000
5142120910	5-1421	2091	COVER ASM.	000000	000000
5142130030	5-1421	3003	GASKET, COVER TO	000000	000000
5142130110	5-1421	3011	PACKING; COVER, ELEMENT	000000	000000
5142130190	5-1421	3019	PACKING; COVER	000000	000000

5142136140	5-1421	3614	PACKING; COVER-ELEMENT	000000	000000
5142150021	5-1421	5002	ELEMENT; AIR CLEANER 3KC1	000001	000000
5142150030	5-1421	5003	AIR FILTER;DSEL	000000	000015
5142150040	5-1421	5004	ELEMENT; AIR C240/4FC1	000003	000000
5142150140	5-1421	5014	ELEMENT ASSY	000000	000032
5142150280	5-1421	5028	AIR FILTER	000000	000000
5142150300	5-1421	5030	AIR FILTER	000000	000005
5142150361	5-1421	5036	ELEMENT; AIR CLEANER	000001	000000
5142150390	5-1421	5039	ELEMENT; AIR CLEANER	000000	000000
5142150410	5-1421	5041	FILTER,AIR	000000	000000
5142170010	5-1421	7001	NUT ASM; AIR CLEANER	000000	000000
5142170020	5-1421	7002	CLAMP ASM	000000	000000
5142170040	5-1421	7004	CLAMP ASM	000000	000002
5142170070	5-1421	7007	BODY ASM.	000000	000000
5142170110	5-1421	7011	WING NUT	000000	000000
5142190010	5-1421	9001	BAFFLE ASM	000000	000000
5142190020	5-1421	9002	GASKET; AIR CLEANER 3KB1	000000	000000
5142190190	5-1421	9019	BAFFLE ASM	000000	000000
5142190290	5-1421	9029	INDICATOR	000000	000000
5142190340	5-1421	9034	NUT; CAP INDCTR PLG	000000	000000
5142190380	5-1421	9038	BAFFLE ASM	000005	000000
5142190390	5-1421	9039	BOLT; WING	000000	000000
5142190400	5-1421	9040	SEAL; WASHER	000000	000017
5142310520	5-1423	1052	HOSE*	000000	000000
5142310720	5-1423	1072	HOSE; CONNECTING	000000	000000
5142311180	5-1423	1118	HOSE; CONNECTING	000004	000000
5142311190	5-1423	1119	PIPE; CONNECTING	000000	000000
5142340170	5-1423	4017	BRACKET.A/CL.RR	000000	000000
5142340171	5-1423	4017	BRACKET;A/CL.RR	000000	000000
5142340280	5-1423	4028	BRACKET; AIR CLEANER	000000	000000
5142340291	5-1423	4029	BRACKET; AIR CLEANER	000000	000000
5142340390	5-1423	4039	BRACKET,A/CL.FR	000000	000000
5142340391	5-1423	4039	BRACKET;A/CL,FR	000000	000000
5142340400	5-1423	4040	BRACKET,A/CL.RR	000000	000000
5142340401	5-1423	4040	BRACKET;A/CL,RR	000000	000001
5142340420	5-1423	4042	BRACKET	000003	000002
5142340450	5-1423	4045	BRACKET; AIR CLEANER	000000	000002
5142340510	5-1423	4051	BRACKET; AIR CLEANER	000000	000000
5142340562	5-1423	4056	BRACKET; AIR CLEANER	000000	000000
5142340582	5-1423	4058	BRACKET; AIR CLEANER	000000	000000
5142340590	5-1423	4059	BRACKET; AIR CLEANER	000000	000002
5142340630	5-1423	4063	STAY; AIR CLEANER REAR	000000	000000
5142340641	5-1423	4064	STAY; AIR CLEANER FRONT	000000	000000
5142340660	5-1423	4066	BRACKET; AIR CLEANER, F,	000000	000000
5142340670	5-1423	4067	BRACKET; AIR CLEANER, R,	000000	000000
5142340680	5-1423	4068	BRACKET; A/CLEANER	000000	000000
5142340690	5-1423	4069	BRACKET; A/CLEANER	000000	000000

5142340700	5-1423	4070	BRACKET; AIR CLEANER 3KC/	000000	000000
5142340710	5-1423	4071	BRACKET; AIR CLEANER 2KC1	000000	000000
5142340720	5-1423	4072	BRACKET; AIR CLEANER 2KC1	000000	000000
5142390550	5-1423	9055	INSULATOR,A/CL	000000	000000
5142390700	5-1423	9070	PACKING	000000	000000
5142390720	5-1423	9072	SPACER; AIR CLEANER BRACK	000000	000000
5142600032	5-1426	0003	SILENCER; INTAKE	000000	000000
5143100021	5-1431	0002	INTAKE SHUTTER ASM	000000	000000
5143100030			THROTTLE VALVE	000000	000000
5143100111			SHUTTER; INTAKE	000000	000000
5143100170	5-1431	0017	INTAKE SHUTTER ASM	000000	000000
5143100471	5-1431	0047	INTAKE SHUTTER ASM(4BA1)	000000	000000
5143100591	5-1431	0059	SHUTTER; INTAKE	000001	000000
5143101412	5-1431	0141	SHUTTER; INTAKE	000000	000000
5143101850	5-1431	0185	SUPERSEDED**SHUTTER	000000	000000
5143101961	5-1431	0196	SHUTTER; INTAKE C240	000000	000000
5143101962	5-1431	0196	SHUTTER; INTAKE C240	000001	000000
5143101990	5-1431	0199	DAMPER; CRANKSHAFT	000000	000000
5143102130	5-1431	0213	VALVE; THROTTLE	000000	000000
5143102420	5-1431	0242	VALVE; THROTTLE C240	000000	000001
5143102730	5-1431	0273	THROTTEL VALVE	000000	000000
5143102942	5-1431	0294	VALVE; THROTTLE	000000	000000
5143102950	5-1431	0295	VALVE; THROTTLE	000000	000000
5143102990	5-1431	0299	SHUTTER; INTAKE	000000	000000
5143102991	5-1431	0299	SHUTTER; INTAKE	000000	000005
5143103001	5-1431	0300	SHUTTER ASM; INTAKE	000000	000000
5143103051	5-1431	0305	SHUTTER; INTAKE	000000	000000
5143103061	5-1431	0306	SHUTTER; INTAKE	000000	000000
5143103100	5-1431	0310	SHUTTER; INTAKE	000000	000000
5143103122	5-1431	0312	SHUTTER; INTAKE	000000	000000
5143103131	5-1431	0313	SHUTTER; INTAKE	000000	000000
5143103152	5-1431	0315	SHUTTER; INTAKE	000000	000000
5143103171	5-1431	0317	SHUTTER; INTAKE	000000	000000
5143103181	5-1431	0318	SHUTTER; INTAKE	000000	000000
5143103250	5-1431	0325	VALVE; THROTTLE	000000	000000
5143103430	5-1431	0343	VALVE*DISCONTINUED*	000000	000000
5143103441	5-1431	0344	SHUTTER; INTAKE	000000	000000
5143103580	5-1431	0358	SHUTTER; INTAKE	000000	000000
5143103601	5-1431	0360	SHUTTER; INTAKE	000002	000000
5143103611	5-1431	0361	SHUTTER; INTAKE	000000	000000
5143103850	5-1431	0385	SHUTTER; INTAKE	000000	000000
5143110241	5-1431	1024	CASE ASM.; INTAKE SHUTTER	000000	000000
5143110281	5-1431	1028	CASE ASM; INTAKE SHUTTER	000000	000000
5143110720	5-1431	1072	CASE ASM; THROTTLE	000000	000000
5143110760	5-1431	1076	CASE;	000000	000000
5143111160	5-1431	1116	CASE ASM.	000000	000000
5143111360	5-1431	1136	CASE ASM.; THROTTLE VALVE	000000	000000

5143111510	5-1431	1151	CASE ASM; INTAKE SHUTTER	000000	000000
5143111541	5-1431	1154	CASE ASM.; INTAKE SHUTTER	000000	000000
5143111551	5-1431	1155	CASE; INTAKE SHUTTER	000000	000000
5143120010	5-1431	2001	VALVE; INTAKE SHUTTER	000000	000000
5143120030	5-1431	2003	VALVE; INTAKE SHUTTER	000000	000000
5143120070	5-1431	2007	VALVE;INTAKE S.	000000	000000
5143120100	5-1431	2010	VALVE; THROTTLE	000000	000000
5143120150	5-1431	2015	VALVE; THROTTLE	000000	000000
5143120260	5-1431	2026	VALVE; THROTTLE	000000	000000
5143120290	5-1431	2029	VALVE; INTAKE SHUTTER	000000	000000
5143120580	5-1431	2058	VALVE	000000	000000
5143130241	5-1431	3024	SHAFT; THROTTLE	000000	000000
5143130251	5-1431	3025	SHAFT; THROTTLE VALVE	000000	000000
5143130470	5-1431	3047	SHAFT;INTAKE	000000	000000
5143130550	5-1431	3055	SHAFT; INTAKE SHUTTER	000000	000000
5143130570	5-1431	3057	SHAFT; INT. SHUTTER	000000	000000
5143130710	5-1431	3071	SHAFT; INTAKE	000000	000000
5143130720	5-1431	3072	SHAFT; INTAKE	000000	000000
5143140021	5-1431	4002	LEVER; ENG. STOP	000000	000000
5143140080	5-1431	4008	LEVER; ENG. STOP	000000	000000
5143140251	5-1431	4025	LEVER; CONTROL	000000	000000
5143140420	5-1431	4042	LEVER"A" SHAFT MOTION INT	000000	000000
5143140480	5-1431	4048	LEVER; SHUTTER - CABLE	000000	000000
5143140501	5-1431	4050	LEVER; TH. CONTROL	000000	000000
5143140530	5-1431	4053	LEVER; ENG. STOP	000000	000000
5143140590	5-1431	4059	LEVER; CONTROL	000000	000000
5143140610	5-1431	4061	LEVER; ENG. STOP	000000	000000
5143140640	5-1431	4064	LEVER; ENG. STOP	000000	000000
5143141060	5-1431	4106	LEVER; SHAFT-CABLE	000000	000000
5143141110	5-1431	4111	LEVER; ENG. STOP	000000	000000
5143141250	5-1431	4125	LEVER; ENG. STOP	000000	000000
5143141430	5-1431	4143	LEVER; SHUTTER CONTROL	000000	000000
5143190440	5-1431	9044	STABILIZER; W/PACKING	000000	000000
5143190810	5-1431	9081	PIPE*	000000	000000
5143190831	5-1431	9083	PIECE; DISTANCE	000000	000000
5143190840	5-1431	9084	EYE; SPRING	000000	000000
5143191000	5-1431	9100	CLIP; SHUTTER CONT CABLE	000000	000000
5143191180	5-1431	9118	STABILIZER; INTAKE	000000	000000
5143191310	5-1431	9131	BUSH; CASE-SHAFT	000000	000000
5143191340	5-1431	9134	CLIP;CONTROL CABLE	000000	000000
5143191410	5-1431	9141	WASHER; SPRING SEAT	000000	000000
5143191411	5-1431	9141	WASHER; SPRING SEAT	000000	000000
5143191590	5-1431	9159	BUSH; CASE-SHAFT	000000	000000
5143191610	5-1431	9161	STABILIZER	000000	000000
5143191630	5-1431	9163	STABILIZER W/PACKING	000000	000000
5143192200	5-1431	9220	PIPE; JOINT	000000	000000
5143192291	5-1431	9229	CLIP*	000000	000000

5143192370	5-1431	9237	CLIP; CONTROL WIRE	000000	000000
5143192540	5-1431	9254	CLIP; INTAKE	000000	000000
5143192570	5-1431	9257	COVER; DUST	000000	000000
5143192620	5-1431	9262	COVER; DUST SEAL	000000	000000
5143192750	5-1431	9275	WASHER; SPRING SEAT	000000	000000
5143192770	5-1431	9277	CLIP; INTAKE SHUTTER	000000	000000
5143192870	5-1431	9287	STOPPER; INTAKE SHUTTER	000000	000000
5143192880	5-1431	9288	CLIP; INT. SHUTTER CNTRL	000000	000000
5143193020	5-1431	9302	SPRING; EYE	000000	000000
5143193190	5-1431	9319	STABILIZER	000000	000000
5143193281	5-1431	9328	SPACER	000000	000000
5143193300	5-1431	9330	PLUG; DUST COVER	000000	000000
5143300620	5-1433	0062	CONTROL ASM; ENGINE	000003	000000
5143300690	5-1433	0069	CONTROL ASM; ENGINE	000000	000000
5143310030	5-1433	1003	STOPPER; SHUTTER	000000	000000
5143310041	5-1433	1004	LEVER; THROTTLE	000000	000000
5143310060	5-1433	1006	STOPPER; INTAKE	000000	000000
5143310090	5-1433	1009	STOPPER; INTAKE SHUTTER	000000	000000
5143310110	5-1433	1011	LEVER; STOPPER	000000	000000
5143310160	5-1433	1016	STOPPER; INTAKE	000000	000000
5143310210	5-1433	1021	STOPPER	000000	000000
5143320150	5-1433	2015	LINK ASM 4BA1	000009	000000
5143320331	5-1433	2033	ROD;ENG.STOP	000000	000000
5143320360	5-1433	2036	ROD; ENG STOP	000000	000000
5143320371	5-1433	2037	ROD ASM.;LINK	000000	000000
5143330410	5-1433	3041	LEVER ASM.; ENGINE CONT.	000000	000000
5143330430	5-1433	3043	LEVER ASM.; ENG. CONT.	000000	000000
5143330440	5-1433	3044	LEVER ASM.; W/BUSH	000000	000000
5143340010	5-1433	4001	EYE; SPRING SHUTTER	000000	000000
5143340360	5-1433	4036	BRACKET; THROTTLE	000000	000000
5143340570	5-1433	4057	BRACKET; INTAKE SHUTTER	000000	000000
5143340650	5-1433	4065	EYE; SPRING	000000	000000
5143340670	5-1433	4067	BRACKET; CONTROL WIRE	000000	000000
5143340710	5-1433	4071	EYE; SPRING	000000	000000
5143340770	5-1433	4077	BRACKER; CONTROL WIRE	000000	000000
5143340780	5-1433	4078	BRACKET; WIRE CONTROL	000000	000000
5143340860	5-1433	4086	BRACKET; INTAKE SHUTTER	000000	000000
5143341030	5-1433	4103	BRACKET; STOPPER CABLE	000000	000000
5143341100	5-1433	4110	EYE; SPRING, SHUTTER	000000	000000
5143341110	5-1433	4111	EYE; SPRING, INTAKE SHUTT	000000	000000
5143341120	5-1433	4112	BRACKET; CONTROL WIRE	000000	000000
5143341180	5-1433	4118	BRACKET; SHUTTER CONTROL	000000	000000
5143341200	5-1433	4120	EYE; SPRING	000000	000000
5143341220	5-1433	4122	BRACKET; THROTTLE	000000	000000
5143341250	5-1433	4125	EYE; SPRING	000000	000000
5143341260	5-1433	4126	BRACKET; CONT. WIRE	000000	000000
5143341370	5-1433	4137	BRKT FUEL CUT	000000	000000

5143341410	5-1433	4141	BRACKET; FUEL CUT, CONT.	000000	000000
5143341580	5-1433	4158	BRACKET; WIRE CONTROL	000000	000000
5143341680	5-1433	4168	EYE; SPRING	000000	000000
5143341700	5-1433	4170	BRACKET; SHUTTER CONTROL	000000	000000
5143350050	5-1433	5005	STOPPER; CONTROL	000000	000000
5143350060	5-1433	5006	CLIP; CONTROL	000000	000000
5143360080	5-1433	6008	SHAFT; FUEL CUT	000000	000000
5143390110	5-1433	9011	BRACKET; ENGINE CONTROL	000000	000000
5143390111	5-1433	9011	BRACKET; ENGINE CONTROL	000000	000000
5144000020	5-1440	0002	TURBOCHARGER ASM.	000001	000001
5144000040	5-1440	0004	TURBO (R)FSR/LT	000000	000000
5144000050	5-1440	0005	TURBOCHARGER ASM.	000000	000000
5144000051	5-1440	0005	TURBOCHARGER ASM.	000000	000000
5144100010	5-1441	0001	HOUSING SET; BEARING	000000	000000
5144110010	5-1441	1001	HOUSING; CENTER, TURBO	000000	000000
5144140010	5-1441	4001	HOUSING; COMP. TURBO	000000	000000
5144190010	5-1441	9001	BOLT; LOCK PLATE	000000	000000
5144190020	5-1441	9002	PLATE; LOCK, TURBO	000000	000000
5144190030	5-1441	9003	CLAMP; TURBO 6SA1	000000	000000
5144190040	5-1441	9004	BOLT; TURBO 6SA1	000000	000000
5144190050	5-1441	9005	CLAMP; TURBO 6SA1	000003	000000
5144190060	5-1441	9006	PLATE; LOCK, TURBO	000000	000000
5144190070	5-1441	9007	RING; SEAL, TURBO	000001	000000
5144190080	5-1441	9008	BOLT; TURBO 6SA1	000000	000000
5144190090	5-1441	9009	PLATE; LOCK, TURBO	000000	000000
5144190100	5-1441	9010	RING; PISTON, TURBO	000000	000000
5144190110	5-1441	9011	RETAINING; TURBO 6SA1	000000	000000
5144190170	5-1441	9017	RING; PISTON, TURBO	000000	000000
5144290010	5-1442	9001	FLANGE	000002	000000
5144290020	5-1442	9002	PACKING; O-RING	000001	000000
5144290030	5-1442	9003	WHEEL; STRUDE, TURBO	000000	000000
5144290040	5-1442	9004	SEAL; RING	000002	000000
5144290050	5-1442	9005	BOLT*	000000	000000
5144290060	5-1442	9006	WASHER	000000	000000
5144290070	5-1442	9007	PLATE; LOCK	000000	000000
5144290080	5-1442	9008	PROTECTOR; HEAT	000000	000000
5144290092	5-1442	9009	PACKING; O-RING	000007	000000
5144350011	5-1443	5001	TANK; SURGING	000000	000000
5144500020	5-1445	0002	OVER HAUL KIT; TURBO CHARG	000000	000000
5144500030	5-1445	0003	ROTOR ASM; TURBO	000000	000000
5144520010	5-1445	2001	IMPELLER; TURBO	000000	000000
5144530010	5-1445	3001	BEARING; THRUST TURBO	000000	000000
5144530020	5-1445	3002	BEARING; TURBO 6SA1	000000	000000
5144550010	5-1445	5001	THROWER; OIL	000000	000000
5144550040	5-1445	5004	RETAINING; RING	000000	000000
5144590030	5-1445	9003	COLLAR; TURBO 6SA1	000000	000000
5144590040	5-1445	9004	BUSH; THRUST	000000	000000

5144590050	5-1445	9005	NUT; LOCK	000000	000000
5144590090	5-1445	9009	PLATE; LOCK	000000	000000
5144590120	5-1445	9012	WASHER	000000	000000
5145118980	5-1451	1898	PIPE ASM; INJECTION NO 4	000000	000000
5152190210			NIPPLE SCREW	000000	000000
5152408800			GEAR; INJ. PUMP	000000	000000
5153000011			HOLDER ASM; NOZZLE	000000	000000
5153000160	5-1530	0016	NOZZLE ASM; INJ.	000000	000000
5153000391	5-1530	0039	NOZZLE & HOLDER ASSY	000501	000000
5153000491	5-1530	0049	NOZZLE ASM; INJ.	000000	000000
5153000890	5-1530	0089	NOZZLE ASM; INJECTION	000000	000000
5153000891	5-1530	0089	NOZZLE ASM; INJECTION	000000	000010
5153001031	5-1530	0103	NOZZLE ASM; INJECTION 6BD	000000	000000
5153001032	5-1530	0103	NOZZLE ASM; INJECTION 6BD	000000	000001
5153001130	5-1530	0113	NOZZLE ASM; INJ.	000000	000000
5153001131	5-1530	0113	NOZZLE ASM; INJ.	000000	000000
5153110060	5-1531	1006	NOZZLE; INJ. C240	000000	000211
5153110061	5-1531	1006	INJ NOZZLE	000000	000000
5153110160	5-1531	1016	NOZZLE;FEDERAL	000000	000000
5153110190	5-1531	1019	NOZZLE ASM; INJECTION 4BB	000000	000026
5153110191	5-1531	1019	NOZZLE ASM; INJECTION 4BB	000000	000000
5153110200	5-1531	1020	NOZZLE; INJ. 6BD1T	000000	000059
5153110210	5-1531	1021	NOZZLE ASM;INJ	000001	000018
5153110240	5-1531	1024	NOZZ. INJ;CALIF	000001	000000
5153110270	5-1531	1027	NOZZLE ASM; INJECTION 4BC	000000	000000
5153110290	5-1531	1029	NOZZLE; INJ.	000000	000003
5153150030	5-1531	5003	PACKING;NOZZLE	000000	000000
5153150070	5-1531	5007	PACKING; INJECTION NOZZLE	000000	000011
5153150131	5-1531	5013	PACKING*INVALID*	000000	000000
5153290630	5-1532	9063	BOLT;	000000	000000
5153300011	5-1533	0001	HOLDER ASM; NOZZLE	000000	000000
5153300030	5-1533	0003	HOLDER; NOZZLE C240	000000	000000
5153300071	5-1533	0007	HOLDER;INJ NOZZ	000000	000002
5153300091	5-1533	0009	HOLDER; NOZZLE	000000	000000
5153300150	5-1533	0015	HOLDER ASSY,NOZ	000000	000000
5153300190	5-1533	0019	HOLDER ASM; NOZZLE 4BB/BD	000000	000000
5153300191	5-1533	0019	HOLDER ASM; NOZZLE 4BB/BD	000000	000008
5153300210	5-1533	0021	HOLDER; NOZZLE	000000	000000
5153300230	5-1533	0023	HOLD. INJ;CALF	000000	000000
5153300240	5-1533	0024	HOLDER ASM; NOZZLE	000000	000000
5153300910	5-1533	0091	NOZZLE HOLDER ASM.	000000	000000
5153320010	5-1533	2001	NUT; CAP	000000	000000
5153320020	5-1533	2002	NUT;RETAINING	000000	000010
5153320050	5-1533	2005	NUT;CAP CALIF	000000	000000
5153320060	5-1533	2006	NUT;CAP,NOZZLE	000000	000009
5153320070	5-1533	2007	NUT;RETAINING	000021	000093
5153320100	5-1533	2010	NUT;CAP FEDERAL	000000	000002

5153340010	5-1533	4001	NUT;NOZZLE	000000	000000
5153340020	5-1533	4002	NUT; CAP	000000	000000
5153340030	5-1533	4003	NUT; CAP, NOZZLE	000000	000000
5153340070	5-1533	4007	NUT; CAP, NOZZLE HOLDER	000000	000000
5153340080	5-1533	4008	NUT; CAP,NOZZLE HOLDER/4B	000000	000000
5153390020	5-1533	9002	GSKT;CAP NUT	000000	000000
5153390030	5-1533	9003	GSKT;CONNECTOR	000000	000088
5153390040	5-1533	9004	GASKET	000000	000000
5153390070	5-1533	9007	SHIM;INJ NOZ.50	000000	000068
5153390080	5-1533	9008	SHIM;INJ NOZ.62	000000	000000
5153390090	5-1533	9009	SHIM;INJ NOZ.70	000000	000029
5153390110	5-1533	9011	SHIM;INJ NOZ.90	000000	000000
5153390120	5-1533	9012	SHIM; INJ NOZ 1	000000	000000
5153390140	5-1533	9014	SHIM T=1.20	000000	000000
5153390160	5-1533	9016	SHIM T=1.40	000000	000000
5153390180	5-1533	9018	SHIM (T=0 5.2)	000010	000000
5153390190	5-1533	9019	SHIM;INJ NOZ.54	000000	000252
5153390200	5-1533	9020	SHIM;INJ NOZ.58	000000	000000
5153390210	5-1533	9021	SHIM;INJ NOZ.58	000015	000250
5153390220	5-1533	9022	SHIM;INJ NOZ.62	000000	000269
5153390240	5-1533	9024	SHIM;INJ NOZ.66	000000	000251
5153390270	5-1533	9027	SHIM;INJ NOZ.74	000000	000127
5153390290	5-1533	9029	SHIM;INJ NOZ.78	000000	000000
5153390300	5-1533	9030	SHIM;INJ NOZ.82	000000	000000
5153390320	5-1533	9032	SHIM;INJ NOZ.86	000000	000000
5153390350	5-1533	9035	SHIM;INJ NOZ.94	000000	000000
5153390370	5-1533	9037	SHIM;INJ NOZ.98	000000	000000
5153390390	5-1533	9039	SHIM T=1.04	000000	000000
5153390420	5-1533	9042	SHIM T=1.12	000000	000000
5153390440	5-1533	9044	SHIM T=1.16	000000	000000
5153390470	5-1533	9047	SHIM T=1.24	000000	000000
5153390490	5-1533	9049	SHIM T=1.28	000000	000000
5153390520	5-1533	9052	SHIM T=1.36	000000	000000
5153390550	5-1533	9055	SHIM T=1.44	000000	000000
5153390570	5-1533	9057	SHIM T=1.48	000000	000000
5153390580	5-1533	9058	SHIM T=1.52	000000	000000
5153390600	5-1533	9060	GASKET;NOZZLE	000000	000406
5153410010	5-1534	1001	ROD;PUSH NOZZLE	000004	000000
5153410020	5-1534	1002	PUSH ROD; NOZZLE	000000	000000
5153410030	5-1534	1003	ROD;PUSH	000000	000028
5153430020	5-1534	3002	SPRING; NOZZLE	000001	000000
5153430050	5-1534	3005	SPRING;PUSH ROD	000000	000003
5153430070	5-1534	3007	SPRING; NOZZLE	000000	000000
5153450010	5-1534	5001	SCREW;ADJ.NOZZL	000000	000000
5153450030	5-1534	5003	SPRING; NOZZLE	000000	000000
5153450040	5-1534	5004	SCREW;ADJ	000000	000017
5153450050	5-1534	5005	SCREW;ADJ,NOZZ	000000	000008

5153490010	5-1534	9001	BOLT, JOINT, NOZZ	000000	000007
5153490020	5-1534	9002	CONN; FUEL INJ	000000	000161
5153510010	5-1535	1001	CONN; FUEL INJ	000007	000004
5153510020	5-1535	1002	CONNECTOR; FUEL INL. NOZZLE	000000	000003
5153510030	5-1535	1003	CONNECTOR; INLET	000000	000000
5153510040	5-1535	1004	CONNECTOR; INLET	000001	000000
5153510050	5-1535	1005	CONNECTOR; INL	000000	000000
5154110011	5-1541	1001	PIPE ASM; FUEL	000000	000000
5154110063	5-1541	1006	PIPE ASM; INJ	000000	000000
5154110160	5-1541	1016	PIPE ASM; INJ	000000	000000
5154110260	5-1541	1026	PIPE ASM; INJ	000000	000000
5154110290	5-1541	1029	PIPE ASM; INJ	000000	000000
5154110310	5-1541	1031	PIPE ASM; INJ	000000	000000
5154110420	5-1541	1042	PIPE ASM; FUEL NOZZLE, LE	000000	000021
5154110580	5-1541	1058	PIPE ASM; FILTER TO PUMP	000000	000000
5154110590	5-1541	1059	PIPE ASM, FUEL PUMP FILTE	000001	000000
5154110920	5-1541	1092	PIPE ASM; FUEL OVERFLOW	000003	000000
5154111060	5-1541	1106	PIPE ASM; INJECTION	000000	000000
5154111262	5-1541	1126	PIPE ASM; FUEL TANK	000000	000000
5154111291	5-1541	1129	PIPE ASM; FUEL FILTER LEA	000000	000000
5154111940	5-1541	1194	PIPE ASM; FUEL	000000	000000
5154111960	5-1541	1196	PIPE ASM; FUEL	000001	000000
5154112120	5-1541	1212	PIPE ASM; INJ #1	000001	000000
5154112130	5-1541	1213	PIPE ASM; INJ #2	000000	000000
5154112140	5-1541	1214	PIPE ASM; INJ #3	000001	000000
5154112150	5-1541	1215	PIPE ASM; INJ #4	000000	000000
5154112160	5-1541	1216	PIPE; INJ. #1	000000	000026
5154112161	5-1541	1216	PIPE; INJ. #1	000000	000000
5154112170	5-1541	1217	PIPE; INJ. #2	000000	000000
5154112171	5-1541	1217	PIPE; INJ. #2	000000	000005
5154112180	5-1541	1218	PIPE; INJ. #3	000000	000000
5154112181	5-1541	1218	PIPE; INJ. #3	000000	000000
5154112191	5-1541	1219	PIPE; INJ. #4	000000	000000
5154112192	5-1541	1219	PIPE; INJ. #4	000000	000006
5154112210	5-1541	1221	PIPE, LEAK OFF	000000	000000
5154112221	5-1541	1222	PIPE ASM; INJECTION	000000	000000
5154112230	5-1541	1223	PIPE; FUEL, SEDIM	000000	000000
5154112231	5-1541	1223	PIPE; FUEL, SEDIM	000000	000191
5154112240	5-1541	1224	PIPE, FUEL INLET	000000	000000
5154112250	5-1541	1225	PIPE ASM; INJECTION 2AB1	000000	000003
5154112290	5-1541	1229	PIPE ASM; FUEL	000000	000001
5154112340	5-1541	1234	PIPE; INJ #1	000000	000000
5154112350	5-1541	1235	PIPE; INJ #2	000000	000000
5154112360	5-1541	1236	PIPE; INJ #3	000000	000000
5154112370	5-1541	1237	PIPE; INJ #4	000043	000000
5154112380	5-1541	1238	PIPE; FUEL	000000	000000
5154112381	5-1541	1238	PIPE; FUEL	000023	000003

5154112560	5-1541	1256	PIPE ASM; FUEL NOZZLE LEA	000000	000000
5154112580	5-1541	1258	PIPE ASM; INJECTION	000000	000000
5154112600	5-1541	1260	PIPE ASM; FUEL NOZZLE LEA	000000	000000
5154112610	5-1541	1261	PIPE ASM; INJECTION C240	000000	000000
5154112910	5-1541	1291	PIPE ASM; INJECTION C240/	000000	000002
5154112920	5-1541	1292	PIPE ASM; OVERFLOW	000000	000000
5154112950	5-1541	1295	PIPE ASM; FUEL	000000	000000
5154113060	5-1541	1306	PIPE ASM; FUEL INJECTION	000000	000000
5154113070	5-1541	1307	PIPE ASM; FUEL INJECTION	000000	000000
5154113080	5-1541	1308	PIPE ASM; FUEL INJECTION	000000	000000
5154113090	5-1541	1309	PIPE ASM; FUEL INJECTION	000000	000000
5154113100	5-1541	1310	PIPE ASM; INJ #1	000000	000000
5154113110	5-1541	1311	PIPE ASM; INJ #2	000000	000000
5154113120	5-1541	1312	PIPE ASM; INJ #3	000000	000000
5154113160	5-1541	1316	PIPE ASM; INJ #1	000000	000000
5154113170	5-1541	1317	PIPE ASM; INJ #2	000000	000000
5154113190	5-1541	1319	PIPE;	000000	000000
5154113270	5-1541	1327	PIPE ASM., NOZZLE	000000	000000
5154113271	5-1541	1327	PIPE ASM., NOZZLE	000000	000000
5154113690	5-1541	1369	PIPE;INJ.NOZZLE	000000	000000
5154113990	5-1541	1399	PIPE ASM; FUEL	000000	000000
5154114000	5-1541	1400	PIPE ASM; FUEL TANK	000000	000000
5154114010	5-1541	1401	PIPE ASM; FUEL FILTER	000000	000000
5154114130	5-1541	1413	PIPE ASM; INJECTION	000000	000000
5154114140	5-1541	1414	PIPE ASM; INJECTION	000000	000000
5154114180	5-1541	1418	PIPE ASM; INJECTION 3AB1	000000	000000
5154114220	5-1541	1422	PIPE ASM; FUEL PUMP TO FI	000000	000000
5154114230	5-1541	1423	PIPE ASM; FUEL FILTER-PUM	000000	000000
5154114240	5-1541	1424	PIPE ASM; FUEL FILTER LEA	000000	000000
5154114270	5-1541	1427	PIPE; FUEL,FUEL	000000	000000
5154114280	5-1541	1428	PIPE; FUEL,FEED	000000	000000
5154114430	5-1541	1443	PIPE ASM; INJ #1	000001	000000
5154114450	5-1541	1445	PIPE ASM; FUEL, FEED PUMP	000004	000000
5154114460	5-1541	1446	PIPE ASM; FUEL, FILTER	000000	000001
5154114540	5-1541	1454	PIPE ASM; FILTER	000000	000000
5154114550	5-1541	1455	PIPE ASM; FUEL C240	000000	000001
5154114570	5-1541	1457	PIPE ASM; OIL PUMP TO FIL	000000	000041
5154114580	5-1541	1458	PIPE ASM; FUEL	000000	000000
5154114600	5-1541	1460	PIPE ASM; FUEL TANK	000000	000000
5154114671	5-1541	1467	PIPE ASM; INJECTION LEAK	000000	000000
5154114700	5-1541	1470	PIPE ASSY,FUEL	000000	000000
5154114720	5-1541	1472	JOINT ASM; EYE	000000	000005
5154114770	5-1541	1477	PIPE; FUEL	000001	000000
5154114780	5-1541	1478	PIPE ASM; FUEL	000000	000000
5154114790	5-1541	1479	PIPE ASM; FUEL 4BB1	000000	000000
5154115060	5-1541	1506	PIPE ASM; FUEL	000000	000000
5154115070	5-1541	1507	PIPE; FUEL, FUEL	000002	000000

5154115080	5-1541	1508	PIPE ASM; FUEL	000000	000000
5154115100	5-1541	1510	PIPE; FUEL FEED	000000	000000
5154115110	5-1541	1511	PIPE ASM.; FUEL	000000	000001
5154115150	5-1541	1515	PIPE ASM; FUEL	000000	000000
5154115160	5-1541	1516	PIPE ASM;FUEL	000000	000000
5154115170	5-1541	1517	PIPE ASM;FUEL	000000	000000
5154115260			PIPE ASM FUEL	000000	000001
5154115270			PIPE ASM; FUEL	000000	000000
5154115280	5-1541	1528	PIPE ASM; FUEL (DISCONTIN	000000	000000
5154115290	5-1541	1529	PIPE ASM; FUEL	000000	000000
5154115300	5-1541	1530	PIPE ASM; FUEL	000000	000000
5154115310	5-1541	1531	PIPE ASM, TO FUEL FILTER	000002	000000
5154115440	5-1541	1544	HOSE ASM, FLEX	000000	000000
5154115460	5-1541	1546	PIPE ASM; INJECTION	000001	000000
5154115470	5-1541	1547	PIPE ASM; FUEL,NOZZLE,LEA	000000	000000
5154115560	5-1541	1556	PIPE; FUEL	000000	000000
5154115570	5-1541	1557	PIPE; F/FTR-I/PUMP	000000	000000
5154115661	5-1541	1566	PIPE ASM; INJECTION	000000	000000
5154115662	5-1541	1566	PIPE ASM; INJECTION	000001	000000
5154115680	5-1541	1568	JOINT ASM; EYE	000000	000023
5154115730	5-1541	1573	PIPE ASM; FUEL	000000	000001
5154115750	5-1541	1575	PIPE ASM; FUEL	000001	000000
5154115790	5-1541	1579	PIPE ASM; INJECTION #1	000000	000000
5154115801	5-1541	1580	PIPE OIL	000000	000000
5154115810	5-1541	1581	PIPE	000000	000000
5154115821	5-1541	1582	PIPE	000000	000000
5154115830	5-1541	1583	PIPE ASM; INJECTION	000000	000000
5154115840	5-1541	1584	PIPE ASM; FUEL	000000	000001
5154115850	5-1541	1585	PIPE ASM; INJECTION	000000	000001
5154115861	5-1541	1586	PIPE ASM; INJ #4 6BD1	000000	000000
5154115870	5-1541	1587	PIPE;INJNO5	000000	000000
5154115880	5-1541	1588	PIPE ASM; INJECTION	000000	000001
5154115960	5-1541	1596	PIPE ASM; FUEL	000001	000000
5154115973	5-1541	1597	PIPE ASM; INJECTION	000000	000001
5154116030	5-1541	1603	PIPE ASM; FUEL	000000	000003
5154116160	5-1541	1616	PIPE;INJ.#1	000000	000000
5154116161	5-1541	1616	PIPE;INJ.#1	000000	000000
5154116170	5-1541	1617	PIPE;INJ.NO.2	000000	000000
5154116171	5-1541	1617	PIPE;INJ, NO.2	000000	000000
5154116172	5-1541	1617	PIPE ASM; INJ #2	000000	000002
5154116180	5-1541	1618	PIPE; INJ. NO.#3	000000	000000
5154116181	5-1541	1618	PIPE; INJ. NO.#3	000000	000000
5154116182	5-1541	1618	PIPE; INJ. NO.#3	000000	000004
5154116190	5-1541	1619	PIPE; INJ. NO.#4	000000	000000
5154116191	5-1541	1619	PIPE; INJ. NO.#4	000000	000014
5154116192	5-1541	1619	PIPE; INJ. NO.#4	000000	000000
5154116200	5-1541	1620	PIPE; INJ. NO.#5	000000	000000

5154116201	5-1541	1620	PIPE; INJ. NO.#5	000000	000003
5154116202	5-1541	1620	PIPE ASM; INJ #5	000001	000000
5154116210	5-1541	1621	PIPE ASM; INJ	000000	000000
5154116221	5-1541	1622	PIPE ASM; INJEC	000000	000000
5154116222	5-1541	1622	PIPE ASM; INJ.	000000	000000
5154116223	5-1541	1622	PIPE ASM; INJ.	000000	000000
5154116232	5-1541	1623	PIPE ASM; INJEC	000000	000000
5154116233	5-1541	1623	PIPE ASM; INJ.	000000	000000
5154116241	5-1541	1624	PIPE ASM; INJECT	000000	000000
5154116242	5-1541	1624	PIPE ASM; INJ.	000000	000002
5154116243	5-1541	1624	PIPE ASM; INJ.	000000	000000
5154116251	5-1541	1625	PIPE ASM; INJECT	000000	000000
5154116252	5-1541	1625	PIPE ASM; INJECT	000000	000000
5154116530	5-1541	1653	PIPE ASM; INJ NO. 1	000000	000000
5154116531	5-1541	1653	PIPE ASM; INJ NO. 1	000000	000000
5154116540	5-1541	1654	PIPE ASM; INJ	000000	000000
5154116591	5-1541	1659	PIPE ASM; INJ	000000	000000
5154116600	5-1541	1660	PIPE ASM; INJ	000000	000000
5154116601	5-1541	1660	PIPE ASM; INJ	000000	000000
5154116610	5-1541	1661	PIPE ASM; INJECTION	000000	000000
5154116620	5-1541	1662	PIPE ASM; INJ	000000	000000
5154116621	5-1541	1662	PIPE ASM; INJ	000000	000000
5154116630	5-1541	1663	PIPE ASM; INJ	000000	000000
5154116631	5-1541	1663	PIPE ASM; INJ	000000	000000
5154116640	5-1541	1664	PIPE ASM; INJ	000000	000000
5154116641	5-1541	1664	PIPE ASM; INJ	000000	000000
5154116660	5-1541	1666	PIPE ASM; INJ	000000	000000
5154116700	5-1541	1670	PIPE ASM; INJ	000000	000000
5154116710	5-1541	1671	PIPE ASM; INJ	000000	000000
5154116712	5-1541	1671	PIPE ASM; INJ	000000	000000
5154116720	5-1541	1672	PIPE ASM; INJ	000000	000000
5154116722	5-1541	1672	PIPE ASM; INJ	000000	000000
5154116730	5-1541	1673	PIPE ASM; INJ	000000	000000
5154116731	5-1541	1673	PIPE ASM; INJ	000000	000000
5154116732	5-1541	1673	PIPE ASM; INJ	000000	000000
5154116740	5-1541	1674	PIPE ASM; INJ	000000	000000
5154116742	5-1541	1674	PIPE ASM; INJ	000000	000000
5154116750	5-1541	1675	PIPE ASM; INJ	000000	000000
5154116751	5-1541	1675	PIPE ASM; INJ	000000	000000
5154116760	5-1541	1676	PIPE ASM; INJ	000000	000000
5154116762	5-1541	1676	PIPE ASM; INJ	000000	000000
5154116770	5-1541	1677	PIPE ASM; INJ #1	000000	000000
5154116780	5-1541	1678	PIPE ASM; INJ #2	000001	000000
5154116790	5-1541	1679	PIPE ASM; INJ #3	000001	000000
5154116801	5-1541	1680	PIPE ASM; INJ #4	000000	000000
5154116840	5-1541	1684	PIPE ASM; FUEL, PUMP-TANK	000000	000000
5154116850	5-1541	1685	PIPE ASM; FUEL FILTER	000000	000000

5154116851	5-1541	1685	PIPE ASM; FUEL FILTER	000000	000000
5154116940	5-1541	1694	PIPE ASM; FUEL, PUMP-FILT	000000	000000
5154116950	5-1541	1695	PIPE ASM; INJECTION	000000	000000
5154116952	5-1541	1695	PIPE ASM; INJECTION	000000	000000
5154116960	5-1541	1696	PIPE ASM; FUEL	000000	000000
5154116962	5-1541	1696	PIPE ASM; FUEL	000000	000000
5154116970	5-1541	1697	PIPE ASM; INJECTION	000000	000000
5154116980	5-1541	1698	PIPE ASM; INJ #4 6BD1	000000	000000
5154116982	5-1541	1698	PIPE ASM; INJ #4 6BD1	000000	000000
5154116990	5-1541	1699	PIPE;INJNO5	000000	000000
5154116992	5-1541	1699	PIPE;INJNO5	000000	000000
5154117000	5-1541	1700	PIPE ASM; INJECTION	000000	000000
5154117002	5-1541	1700	PIPE ASM; INJECTION	000000	000000
5154117010	5-1541	1701	PIPE ASM; FUEL	000000	000000
5154117011	5-1541	1701	PIPE ASM; FUEL	000000	000000
5154117040	5-1541	1704	PIPE ASM.; FUEL	000000	000000
5154117060	5-1541	1706	PIPE ASM; FILTER	000000	000000
5154117190	5-1541	1719	PIPE ASM;FUEL	000000	000002
5154117301	5-1541	1730	PIPE ASM; INJ. NO. 2	000000	000000
5154117310	5-1541	1731	PIPE ASM; INJ. NO. 3	000000	000000
5154117321	5-1541	1732	PIPE ASM; INJ. NO. 3	000000	000000
5154117331	5-1541	1733	PIPE ASM; INJ. NO. 5	000000	000000
5154117341	5-1541	1734	PIPE ASM; INJ. NO. 6	000000	000000
5154117342	5-1541	1734	PIPE ASM; INJ. NO. 6	000000	000000
5154117520	5-1541	1752	PIPE ASM,LEAK O	000000	000000
5154117521	5-1541	1752	PIPE ASM,LEAK O	000000	000000
5154117531	5-1541	1753	PIPE ASM; FUEL	000007	000000
5154117600	5-1541	1760	PIPE ASM;FUEL	000000	000001
5154117630	5-1541	1763	FUEL PIPE ASM	000000	000000
5154117740	5-1541	1774	PIPE ASM; FUEL	000001	000147
5154117750	5-1541	1775	PIPE ASM; LEAK-OFF	000051	000002
5154117781	5-1541	1778	PIPE ASM;FUEL	000000	000001
5154117870	5-1541	1787	PIPE ASM; INJ	000004	000000
5154117890	5-1541	1789	PIPE ASM;FUEL	000000	000000
5154117953	5-1541	1795	PIPE ASM; FUEL LEAK OFF	000001	000000
5154117960	5-1541	1796	EYE; JOINT FUEL	000000	000000
5154117972	5-1541	1797	PIPE ASM; INJECTION 4BC2	000000	000000
5154117982	5-1541	1798	PIPE ASM; INJECTION 4BC2	000000	000000
5154117992	5-1541	1799	PIPE ASM; INJ NO. 3	000000	000000
5154118002	5-1541	1800	PIPE ASM; INJ NO. 4	000000	000000
5154118050	5-1541	1805	PIPE ASM; INJ NO. 1	000000	000000
5154118130	5-1541	1813	PIPE ASM; FUEL FILTER TO	000000	000000
5154118140	5-1541	1814	PIPE ASM; FUEL INJ PUMP	000000	000000
5154118150	5-1541	1815	PIPE ASM; FUEL	000000	000003
5154118261	5-1541	1826	PIPE ASM; FUEL PUMP TO FI	000000	000001
5154118281	5-1541	1828	PIPE ASM	000000	000000
5154118300	5-1541	1830	PIPE ASM; FUEL FILTER LEA	000000	000000

5154118310	5-1541	1831	PIPE ASM; FUEL NOZZLE LEA	000001	000000
5154118400	5-1541	1840	PIPE ASM.; FUEL	000000	000000
5154118460	5-1541	1846	PIPE ASM; FUEL	000001	000000
5154118470	5-1541	1847	PIPE ASM; FUEL	000000	000004
5154118480	5-1541	1848	PIPE ASM; FUEL	000000	000001
5154118580	5-1541	1858	PIPE ASM; FUEL FILTER LEA	000001	000002
5154118590	5-1541	1859	PIPE ASM; FUEL PUMP TO FI	000001	000000
5154118631	5-1541	1863	PIPE ASM; INJ NO. 4	000000	000000
5154118680	5-1541	1868	PIPE ASM; INJ #1	000001	000000
5154118690	5-1541	1869	PIPE ASM; INJ #2	000000	000000
5154118700	5-1541	1870	PIPE ASM; INJ #3	000000	000000
5154118710	5-1541	1871	PIPE ASM; INJ #4	000001	000000
5154118850	5-1541	1885	PIPE ASM; FUEL, LEAK-OFF	000000	000003
5154118940	5-1541	1894	PIPE ASM; FUEL FILTER LEA	000000	000000
5154118951	5-1541	1895	PIPE ASM; FUEL, PUMP-FILT	000000	000000
5154118961	5-1541	1896	PIPE ASM; FUEL 2KC1	000000	000000
5154119030	5-1541	1903	PIPE ASM; INJ #1 3KC1	000000	000000
5154119040	5-1541	1904	PIPE ASM; INJ #2 3KC1	000000	000001
5154119050	5-1541	1905	PIPE ASM; INJ #3 3KC1	000000	000003
5154140570	5-1541	4057	PIPE ASM; FUEL	000000	000000
5154143440	5-1541	4344	PIPE ASM**UNLISTED**	000000	000000
5154190010	5-1541	9001	BRACKET; FUEL PIPE CLIP	000000	000000
5154190040	5-1541	9004	CLIP	000000	000002
5154190050			CLIP	000000	000000
5154190051	5-1541	9005	CLIP	000000	000044
5154190070	5-1541	9007	STAY; FUEL PIPE	000001	000000
5154190130	5-1541	9013	CLIP;ASM,INJ.PI	000000	000000
5154190131	5-1541	9013	CLIP;ASM,INJ.PI	000042	000270
5154190160	5-1541	9016	CLIP; FUEL PIPE 6BG1	000000	000000
5154190240	5-1541	9024	BRACKET; FUEL PIPE CLIP	000001	000000
5154190290	5-1541	9029	BRKT;FUEL PIPE	000000	000000
5154190310	5-1541	9031	CLIP; FUEL PIPE	000000	000007
5154190350	5-1541	9035	STAY; FUEL PIPE CLIP	000000	000000
5154190360	5-1541	9036	SPACER; STAY FIX	000019	000000
5154190370	5-1541	9037	BRACKET ASM; INJECTION NO	000000	000000
5154190430	5-1541	9043	CAP; FUEL LEAK-OFF 2KC/3K	000004	000000
5154190440	5-1541	9044	BRACKET; FUEL PIPE CLIP	000000	000000
5155410070	5-1554	1007	LEVER; (B) ,ENG CONT	000000	000000
5155410071	5-1554	1007	LEVER; 'B' ENG CONT	000000	000000
5155430020	5-1554	3002	ROD; LINK SOLENOID 6BG1	000001	000000
5155430030	5-1554	3003	LINK ROD; SOLENOID	000001	000000
5155430040	5-1554	3004	ROD; LINK SOLENOID	000000	000000
5155470010	5-1554	7001	BRACKET; PUMP CONT., HSG.	000000	000000
5155470043	5-1554	7004	BRACKET; FUEL FILTER	000000	000000
5155490010	5-1554	9001	BUSHING;CONT.SH	000000	000000
5155490011	5-1554	9001	BUSHING; ENG. CONT	000000	000046
5156001184	5-1560	0118	PUMP ASM; INJ.	000000	000000

5156001441	5-1560	0144	PUMP ASM; INJ.	000000	000000
5156001480	5-1560	0148	GOVERNOR ASM.	000000	000000
5156001532	5-1560	0153	PUMP ASM; INJ.	000000	000000
5156001750	5-1560	0175	PUMP ASM; INJ.	000000	000000
5156001921	5-1560	0192	PUMP ASM; INJ.	000000	000000
5156002671	5-1560	0267	PUMP ASM; INJ.	000000	000000
5156002681	5-1560	0268	PUMP ASM; INJ.	000000	000000
5156002701	5-1560	0270	PUMP ASM; INJ.	000000	000000
5156003622	5-1560	0362	PUMP ASM; INJ.	000000	000000
5156003640	5-1560	0364	PUMP ASM; INJ.	000000	000000
5156003692	5-1560	0369	PUMP ASM; INJ.	000000	000000
5156003704	5-1560	0370	PUMP ASM; INJ.	000000	000000
5156003806	5-1560	0380	PUMP ASM; INJ.	000000	000000
5156003941	5-1560	0394	PUMP ASM; INJ.	000000	000000
5156004293	5-1560	0429	PUMP ASM; INJ.	000000	000000
5156004464	5-1560	0446	PUMP ASM; INJ.	000000	000000
5156004853	5-1560	0485	PUMP ASM; INJ.	000000	000000
5156004863	5-1560	0486	PUMP ASM; INJ.	000000	000000
5156004873	5-1560	0487	PUMP ASM; INJ.	000000	000000
5156004883	5-1560	0488	PUMP ASM; INJ.	000000	000000
5156004893	5-1560	0489	PUMP ASM; INJ.	000000	000000
5156004914	5-1560	0491	PUMP ASM; INJ.	000000	000000
5156004923	5-1560	0492	PUMP ASM; INJ.	000000	000000
5156004931	5-1560	0493	PUMP ASM; INJ.	000000	000000
5156004933	5-1560	0493	PUMP ASM; INJ.	000000	000000
5156004951	5-1560	0495	PUMP ASM; INJ.	000000	000000
5156004960	5-1560	0496	PUMP ASM; INJ.	000000	000000
5156004970	5-1560	0497	PUMP ASM; INJ.	000000	000000
5156005160	5-1560	0516	PUMP ASM; INJ.	000000	000000
5156005210	5-1560	0521	PUMP ASM; INJ.	000000	000000
5156005252	5-1560	0525	PUMP ASM; INJ.	000000	000000
5156005280	5-1560	0528	PUMP ASM; INJ.	000000	000000
5156005310	5-1560	0531	PUMP ASM; INJ.	000000	000000
5156005501	5-1560	0550	PUMP ASM; INJ.	000000	000000
5156005612	5-1560	0561	PUMP ASM; INJ.	000000	000000
5156005613	5-1560	0561	PUMP ASM; INJ.	000000	000000
5156005640	5-1560	0564	PUMP ASM; INJ.	000000	000000
5156005660	5-1560	0566	PUMP ASM; INJ.	000000	000000
5156005792	5-1560	0579	PUMP ASM; INJ.	000000	000000
5156005900	5-1560	0590	PUMP ASM; INJ.	000000	000000
5156005911	5-1560	0591	PUMP ASM; INJ.	000000	000000
5156005950	5-1560	0595	PUMP ASM; INJ. (DISCONTIN	000000	000000
5156005960	5-1560	0596	PUMP ASM; INJ.	000000	000000
5156006023	5-1560	0602	PUMP ASM; INJ.	000000	000000
5156006443	5-1560	0644	PUMP ASM; INJ.	000000	000000
5156006454	5-1560	0645	PUMP ASM; INJ.	000000	000000
5156006463	5-1560	0646	PUMP ASM; INJ.	000000	000000

5156006474	5-1560	0647	PUMP ASM; INJ.	000000	000000
5156006483	5-1560	0648	PUMP ASM; INJ.	000000	000000
5156006670	5-1560	0667	PUMP ASM; INJ.	000000	000000
5156006715	5-1560	0671	PUMP ASM; INJ.	000000	000000
5156006811	5-1560	0681	PUMP ASM; INJ.	000000	000000
5156006813	5-1560	0681	PUMP ASM; INJ.	000000	000000
5156006820	5-1560	0682	PUMP ASM; INJ.	000000	000000
5156006823	5-1560	0682	PUMP ASM; INJ.	000000	000000
5156006960	5-1560	0696	INJ PUMP ASSY	000000	000000
5156007171	5-1560	0717	PUMP ASM; INJ.	000000	000000
5156007181	5-1560	0718	PUMP ASM; INJ.	000000	000000
5156007403	5-1560	0740	PUMP ASM INJ	000000	000000
5156007404	5-1560	0740	PUMP ASM INJ	000000	000000
5156007580	5-1560	0758	PUMP ASM; INJ.	000000	000000
5156007650	5-1560	0765	PUMP ASM; INJ.	000000	000000
5156007653	5-1560	0765	PUMP ASM; INJ.	000000	000000
5156007863	5-1560	0786	PUMP ASM; INJ.	000000	000000
5156007932	5-1560	0793	PUMP ASM; INJ.	000000	000000
5156008240	5-1560	0824	PUMP ASM; INJ.	000000	000000
5156008513	5-1560	0851	PUMP ASM; INJ.	000000	000000
5156008591	5-1560	0859	PUMP ASM; INJ.	000000	000000
5156008670	5-1560	0867	PUMP ASM; INJ.	000000	000000
5156008671	5-1560	0867	PUMP ASM; INJ.	000000	000000
5156008802	5-1560	0880	PUMP ASM; INJ.	000000	000000
5156008831	5-1560	0883	PUMP ASM; INJ.	000000	000000
5156008842	5-1560	0884	PUMP ASM; INJ.	000000	000000
5156008851	5-1560	0885	PUMP ASM; INJ.	000000	000000
5156008965	5-1560	0896	PUMP ASM; INJ.	000000	000000
5156009000	5-1560	0900	PUMP ASM; INJ.	000000	000000
5156009004	5-1560	0900	PUMP ASM; INJ.	000000	000000
5156009024	5-1560	0902	PUMP ASM; INJ.	000000	000000
5156009133	5-1560	0913	PUMP ASM; INJ.	000000	000000
5156009137	5-1560	0913	PUMP ASM; INJ.	000000	000000
5156009171	5-1560	0917	PUMP ASM; INJ.	000000	000000
5156009183	5-1560	0918	PUMP ASM; INJ	000000	000000
5156009193	5-1560	0919	PUMP ASM; INJ.	000000	000000
5156009194	5-1560	0919	PUMP ASM; INJ.	000000	000000
5156009341	5-1560	0934	PUMP ASM; INJ.	000000	000000
5156009343	5-1560	0934	PUMP ASM; INJ.	000000	000000
5156009352	5-1560	0935	PUMP ASM; INJ.	000000	000000
5156009391	5-1560	0939	PUMP ASM; INJ	000000	000000
5156009392	5-1560	0939	PUMP ASM; INJ	000000	000000
5156009403	5-1560	0940	PUMP ASM; INJ.	000000	000000
5156009413	5-1560	0941	PUMP ASM; INJ.	000000	000000
5156009421	5-1560	0942	PUMP ASM; INJ.	000000	000000
5156009423	5-1560	0942	PUMP ASM; INJ.	000000	000001
5156009823	5-1560	0982	PUMP ASM; INJ.	000000	000000

5156009825	5-1560	0982	PUMP ASM; INJ.	000000	000000
5156009913	5-1560	0991	PUMP ASM; INJ.	000000	000000
5156009920	5-1560	0992	PUMP ASM; INJ.	000000	000000
5156010012	5-1560	1001	PUMP ASM; INJ.	000000	000000
5156010182	5-1560	1018	PUMP ASM; INJ.	000000	000000
5156010242	5-1560	1024	PUMP ASM; INJ.	000000	000000
5156010243	5-1560	1024	PUMP ASM; INJ.	000000	000002
5156010252	5-1560	1025	PUMP ASM; INJ.	000000	000000
5156010253	5-1560	1025	PUMP ASM; INJ.	000000	000001
5156010272	5-1560	1027	PUMP ASM; INJ.	000000	000000
5156010273	5-1560	1027	PUMP ASM; INJ.	000000	000000
5156010284	5-1560	1028	PUMP ASM; INJ.	000000	000000
5156010291	5-1560	1029	PUMP ASM; INJ.	000000	000000
5156010302	5-1560	1030	PUMP ASM; INJ.	000000	000000
5156010313	5-1560	1031	PUMP ASM; INJ.	000000	000000
5156010332	5-1560	1033	PUMP ASM; INJ.	000000	000000
5156010340	5-1560	1034	PUMP ASM; INJ.	000000	000000
5156010342	5-1560	1034	PUMP ASM; INJ.	000000	000000
5156010353	5-1560	1035	PUMP ASM; INJ.	000000	000000
5156010401	5-1560	1040	PUMP ASM; INJ.	000000	000000
5156010474	5-1560	1047	PUMP ASM; INJ.	000000	000000
5156010494	5-1560	1049	PUMP ASM; INJ.	000000	000000
5156010501	5-1560	1050	PUMP ASM; INJ.	000000	000000
5156010505	5-1560	1050	PUMP ASM; INJ.	000000	000000
5156010520	5-1560	1052	PUMP ASM; INJ.	000000	000000
5156010551	5-1560	1055	PUMP ASM INJ	000000	000000
5156010552	5-1560	1055	PUMP ASM INJ	000000	000000
5156010573	5-1560	1057	PUMP ASM; INJ.	000000	000000
5156010672	5-1560	1067	PUMP ASM; INJ.	000000	000000
5156010694	5-1560	1069	PUMP ASM; INJ.	000000	000000
5156010872	5-1560	1087	PUMP ASM; INJ.	000000	000000
5156010943	5-1560	1094	PUMP ASM.; INJ., FIG.52	000000	000000
5156011090	5-1560	1109	PUMP ASM; INJ.	000000	000000
5156011100	5-1560	1110	PUMP ASM; INJ.	000000	000000
5156011102	5-1560	1110	PUMP ASM; INJ.	000000	000000
5156011133	5-1560	1113	PUMP ASM; INJ.	000000	000000
5156011143	5-1560	1114	PUMP ASM; INJ.	000000	000000
5156011220	5-1560	1122	PUMP ASM; INJ.	000000	000000
5156011283	5-1560	1128	PUMP ASM.; INJ., FIG.52	000000	000000
5156011321	5-1560	1132	PUMP ASM; INJ.	000000	000000
5156011322	5-1560	1132	PUMP ASM; INJ.	000000	000000
5156011331	5-1560	1133	PUMP ASM; INJ.	000000	000000
5156011332	5-1560	1133	PUMP ASM; INJ.	000000	000000
5156011432	5-1560	1143	PUMP ASM; INJ.	000000	000001
5156011453	5-1560	1145	PUMP ASM; INJ.	000000	000000
5156011472	5-1560	1147	PUMP ASM; INJ.	000000	000000
5156011632	5-1560	1163	PUMP ASM; INJ.	000000	000000

5156011682	5-1560	1168	PUMP ASM; INJ.	000000	000000
5156011740	5-1560	1174	PUMP ASM; INJ.	000000	000000
5156011750	5-1560	1175	PUMP ASM; INJ.	000000	000000
5156011760	5-1560	1176	PUMP ASM; INJ.	000000	000000
5156011770	5-1560	1177	PUMP ASM; INJ.	000000	000000
5156011780	5-1560	1178	PUMP ASM; INJ.	000000	000000
5156011790	5-1560	1179	PUMP ASM; INJ.	000000	000000
5156011810	5-1560	1181	PUMP ASM; INJ.	000000	000000
5156011830	5-1560	1183	PUMP ASM; INJ.	000000	000000
5156011840	5-1560	1184	PUMP ASM; INJ.	000000	000000
5156011850	5-1560	1185	PUMP ASM; INJ.	000000	000000
5156011860	5-1560	1186	PUMP ASM; INJ.	000000	000000
5156011880	5-1560	1188	PUMP ASM; INJ.	000000	000000
5156011890	5-1560	1189	PUMP ASM; INJ.	000000	000000
5156012003	5-1560	1200	PUMP ASM; INJ.	000000	000000
5156012017	5-1560	1201	PUMP ASM; INJ.	000000	000000
5156012422	5-1560	1242	PUMP ASM; INJ.	000000	000000
5156012423	5-1560	1242	PUMP ASM; INJ.	000000	000000
5156012463	5-1560	1246	PUMP ASM; INJ.	000000	000000
5156012541	5-1560	1254	PUMP ASM; INJ.	000000	000000
5156012563	5-1560	1256	PUMP ASM; INJ.	000000	000000
5156012572	5-1560	1257	PUMP ASM; INJ.	000000	000000
5156012573	5-1560	1257	PUMP ASM; INJ.	000000	000000
5156012672	5-1560	1267	PUMP ASM; INJ.	000000	000000
5156012683	5-1560	1268	PUMP ASM; INJ.	000000	000000
5156012691	5-1560	1269	PUMP ASM; INJ.	000000	000000
5156012743	5-1560	1274	PUMP ASM; INJ.	000000	000000
5156012830	5-1560	1283	PUMP ASM; INJ.	000000	000000
5156012832	5-1560	1283	PUMP ASM; INJ.	000000	000000
5156013082	5-1560	1308	PUMP ASM; INJ.	000000	000000
5156013090	5-1560	1309	PUMP ASM; INJ.	000000	000000
5156013092	5-1560	1309	PUMP ASM; INJ.	000000	000000
5156013182	5-1560	1318	PUMP ASM; INJ.	000000	000000
5156013273	5-1560	1327	PUMP ASM; INJ.	000000	000000
5156013284	5-1560	1328	PUMP ASM; INJ.	000000	000000
5156013300	5-1560	1330	PUMP ASM; INJ.	000000	000000
5156013301	5-1560	1330	PUMP ASM; INJ.	000000	000002
5156013311	5-1560	1331	PUMP ASM; INJ.	000000	000000
5156013312	5-1560	1331	PUMP ASM; INJ.	000000	000000
5156013330	5-1560	1333	PUMP ASM; INJ.	000000	000000
5156013462	5-1560	1346	PUMP ASM; INJ.	000000	000000
5156013572	5-1560	1357	PUMP ASM; INJ.	000000	000000
5156013801	5-1560	1380	PUMP ASM; INJ.	000000	000000
5156013860	5-1560	1386	PUMP ASM; INJ.	000000	000000
5156013910	5-1560	1391	PUMP ASM; INJ.	000000	000000
5156013924	5-1560	1392	PUMP ASM; INJ.	000000	000000
5156013925	5-1560	1392	PUMP ASM; INJ.	000000	000000

5156014040	5-1560	1404	PUMP ASM; INJ.	000000	000000
5156014160	5-1560	1416	PUMP ASM; INJ.	000000	000000
5156014163	5-1560	1416	PUMP ASM; INJ.	000000	000000
5156014180	5-1560	1418	PUMP ASM; INJ.	000000	000000
5156014182	5-1560	1418	PUMP ASM; INJ.	000000	000000
5156014221	5-1560	1422	PUMP ASM; INJ.	000000	000000
5156014231	5-1560	1423	PUMP ASM; INJ.	000000	000000
5156014282	5-1560	1428	PUMP ASM; INJ.	000000	000001
5156014291	5-1560	1429	PUMP ASM; INJ.	000000	000000
5156014362	5-1560	1436	PUMP ASM; INJ.	000000	000000
5156014383	5-1560	1438	PUMP ASM; INJ.	000000	000002
5156100450	5-1561	0045	PUMP; INJ. PROPER**INVALID*	000000	000000
5156101040	5-1561	0104	PUMP ASM; INJ.	000000	000000
5156101372	5-1561	0137	PUMP ASM; INJ	000000	000000
5156110210	5-1561	1021	HOUSING ASM; PUMP	000000	000000
5156110250	5-1561	1025	HOUSING; PUMP	000000	000000
5156110270	5-1561	1027	HOUSING ASM.; PUMP	000000	000002
5156110290	5-1561	1029	HOUSING ASM; PUMP	000000	000000
5156110310	5-1561	1031	HOUSING ASM.; PUMP	000000	000000
5156110320	5-1561	1032	HOUSING ASM.; PUMP	000000	000000
5156110330	5-1561	1033	HOUSING ASM.; PUMP	000000	000000
5156110340	5-1561	1034	HOUSING ASM; PUMP	000000	000000
5156110370	5-1561	1037	HOUSING ASM.; PUMP	000000	000000
5156110410	5-1561	1041	HOUSING ASM.; PUMP	000000	000000
5156110420	5-1561	1042	HOUSING ASM.; PUMP	000000	000000
5156110430	5-1561	1043	HOUSING ASM.; PUMP	000000	000000
5156110440	5-1561	1044	HOUSING ASM; PUMP C240	000000	000000
5156110460	5-1561	1046	HOUSING ASM.; PUMP	000000	000000
5156110470	5-1561	1047	HOUSING ASM.; PUMP	000000	000000
5156110480	5-1561	1048	HOUSING ASM.; PUMP	000000	000000
5156110490	5-1561	1049	HOUSING ASM.; PUMP	000000	000000
5156110550	5-1561	1055	HOUSING ASM.; PUMP	000000	000000
5156110560	5-1561	1056	HOUSING ASM.; PUMP	000000	000000
5156110580	5-1561	1058	HOUSING ASM.; PUMP	000000	000000
5156110590	5-1561	1059	HOUSING ASM.; PUMP	000000	000000
5156110600	5-1561	1060	HOUSING ASM.; PUMP	000000	000000
5156110650	5-1561	1065	HOUSING ASM.; PUMP	000000	000000
5156110700	5-1561	1070	HOUSING ASM.; PUMP	000000	000000
5156110790	5-1561	1079	HOUSING ASM.; PUMP	000000	000000
5156110860	5-1561	1086	HOUSING; PUMP	000000	000000
5156117600	5-1561	1760	PUMP ASM; INJ.	000000	000000
5156120040	5-1561	2004	COVER	000000	000000
5156120050	5-1561	2005	COVER	000000	000000
5156120060	5-1561	2006	COVER	000000	000000
5156120070	5-1561	2007	COVER	000000	000000
5156120080	5-1561	2008	COVER	000000	000000
5156120090	5-1561	2009	COVER	000000	000000

5156120100	5-1561	2010	COVER	000000	000000
5156120120	5-1561	2012	COVER	000000	000000
5156120130	5-1561	2013	COVER	000000	000000
5156120140	5-1561	2014	COVER	000000	000000
5156120160	5-1561	2016	COVER	000000	000000
5156120170	5-1561	2017	COVER	000001	000000
5156120180	5-1561	2018	COVER	000000	000000
5156140010	5-1561	4001	BREATHER; AIR	000000	000000
5156150010	5-1561	5001	GUAGE; LEVEL	000000	000000
5156150020	5-1561	5002	GAUGE; LEVEL	000000	000000
5156190010	5-1561	9001	SHIM; INJ PUMP, TAPPET T=	000011	000000
5156190020	5-1561	9002	SHIM; T=0.7	000001	000000
5156190030	5-1561	9003	SHIM; T=.80MM	000000	000000
5156190040	5-1561	9004	ADAPT;OVRFLW VL	000000	000000
5156190050	5-1561	9005	SHIM; T=1.0	000000	000010
5156190070	5-1561	9007	SHIM; T=1.1	000000	000010
5156190080	5-1561	9008	SHIM; INJ PUMP T=1	000000	000058
5156190090	5-1561	9009	SHIM; T=1.3	000000	000010
5156190100	5-1561	9010	SHIM; INJ PUMP T=1	000000	000216
5156190110	5-1561	9011	SHIM; INJ PUMP T=0 C240	000001	000000
5156190120	5-1561	9012	SHIM; INJ PUMP T=0 C240	000000	000000
5156190130	5-1561	9013	SHIM; T=0.75	000000	000000
5156190150	5-1561	9015	SHIM; T=0.85	000000	000000
5156190230	5-1561	9023	GASKET; INJ PUMP	000000	000000
5156190250	5-1561	9025	SHIM; T=0.2	000000	000000
5156190260	5-1561	9026	SHIM; T=0.25	000000	000000
5156190270	5-1561	9027	SHIM; INJ PUMP, T=0	000000	000000
5156190290	5-1561	9029	KEY; WOODRUFF, INJ	000000	000000
5156190320	5-1561	9032	PLUG; TAPPET PLUG	000000	000000
5156190330	5-1561	9033	CONN.;SUCTION,VAC PUMP	000022	000000
5156190340	5-1561	9034	SHIM; T=0.3	000000	000020
5156190350	5-1561	9035	SHIM; T=0.4	000000	000000
5156190360	5-1561	9036	SHIM; T=0.5	000005	000000
5156190370	5-1561	9037	SHIM; INJ PUMP T=0 C240	000000	000000
5156190380	5-1561	9038	SHIM; INJ PUMP T=1	000000	000000
5156190390	5-1561	9039	SHIM; INJ PUMP T=0.7MM	000035	000000
5156190400	5-1561	9040	BUSHING; TAPPET, INJ PUMP	000000	000000
5156190410	5-1561	9041	GUIDE/4BD1-PD05	000000	000000
5156190440	5-1561	9044	ADAPTER; FUEL PIPE	000000	000003
5156190470	5-1561	9047	NUT; COUPLING FIX	000000	000000
5156190480	5-1561	9048	WSHR;LK,TMR.FLNGE.INJ PUM	000091	000002
5156190490	5-1561	9049	KEY;DRIVE GEAR INJ PUMP	000000	000000
5156190530	5-1561	9053	BOLT; COVER, FIX.	000000	000000
5156190560	5-1561	9056	EYE	000000	000000
5156190570	5-1561	9057	EYE	000000	000000
5156190580	5-1561	9058	BOLT; EYE	000000	000000
5156190600	5-1561	9060	BRACKET; INJ. PUMP SPACER	000000	000000

5156190610	5-1561	9061	O-RING	000003	000000
5156190630	5-1561	9063	CLIP	000000	000000
5156190640	5-1561	9064	CAPSULE; SPRING	000000	000000
5156190650	5-1561	9065	CAPSULE; SPRING	000000	000000
5156190660	5-1561	9066	SPRING	000000	000000
5156190670	5-1561	9067	BOLT*	000000	000000
5156190680	5-1561	9068	SPRING	000000	000000
5156190690	5-1561	9069	SCREW	000000	000000
5156190700	5-1561	9070	SCREW	000000	000000
5156190710	5-1561	9071	SCREW	000000	000000
5156190720	5-1561	9072	BRACKET; INJ. PUMP	000000	000000
5156190780	5-1561	9078	SCREW; INJ GOV	000000	000000
5156190790	5-1561	9079	SEAL; RING, COVER-HSG 2AA	000000	000000
5156190810	5-1561	9081	O-RING	000000	000057
5156190820	5-1561	9082	RING; SEAL, COVER-HOUSING	000000	000000
5156190860	5-1561	9086	CAP 4FB1	000000	000000
5156190890	5-1561	9089	EYE	000000	000000
5156190900	5-1561	9090	SHIM; T=1.40	000000	000000
5156190990	5-1561	9099	PLATE	000000	000000
5156191000	5-1561	9100	POINTER	000000	000000
5156191010	5-1561	9101	RING; SEAL	000000	000000
5156191020	5-1561	9102	RING; SEAL	000000	000000
5156191040	5-1561	9104	PIPE*	000000	000000
5156191050	5-1561	9105	CLIP*	000000	000000
5156191060	5-1561	9106	SHIM; T=1.50	000000	000000
5156191070	5-1561	9107	SHIM; T=1.60	000000	000000
5156191080	5-1561	9108	SHIM; T=1.35	000000	000000
5156191090	5-1561	9109	SHIM; T=1.45	000000	000000
5156191100	5-1561	9110	SHIM; T=1.55	000000	000000
5156191120	5-1561	9112	BOLT*	000000	000000
5156191130	5-1561	9113	SPRING	000000	000000
5156191140	5-1561	9114	SCREW	000000	000000
5156191154	5-1561	9115	SPRING	000000	000000
5156191250	5-1561	9125	NUT**	000000	000000
5156191260	5-1561	9126	SEAL; RING	000000	000000
5156191270	5-1561	9127	SEAL; RING	000000	000000
5156191280	5-1561	9128	HOSE; JOINT	000000	000000
5156191290	5-1561	9129	HOSE; JOINT	000000	000000
5156191360	5-1561	9136	PLUG/4BD1-PD05	000000	000000
5156191421	5-1561	9142	PACKING; COVER	000000	000000
5156191540	5-1561	9154	STUD	000000	000000
5156191560	5-1561	9156	GASKET; FRT COVER TO HSG	000000	000027
5156191570	5-1561	9157	BOLT	000000	000000
5156191590	5-1561	9159	SHIM; T=0.20, INJ PUMP 2K	000000	000000
5156191600	5-1561	9160	SHIM; T=0.30, INJ PUMP 2K	000000	000000
5156191610	5-1561	9161	SHIM; T=0.40, INJ PUMP 2K	000000	000000
5156191620	5-1561	9162	SHIM; T=0.50, INJ PUMP 2K	000000	000000

5156191630	5-1561	9163	SHIM; INJ. PUMP (T=1.0)	000000	000000
5156191640	5-1561	9164	SHIM; INJ PUMP, T=0.3 3KC	000000	000000
5156191650	5-1561	9165	SHIM; INJ PUMP, T=0.4 3KC	000000	000000
5156191660	5-1561	9166	SHIM; INJ. PUMP T=0.5	000000	000000
5156191670	5-1561	9167	SHIM; INJ. PUMP	000000	000000
5156191680	5-1561	9168	SHIM; INJ PUMP, T=0.7 3KC	000000	000000
5156191690	5-1561	9169	SHIM; T=0.8	000000	000000
5156191700	5-1561	9170	SHIM; T=0.60, INJ PUMP 2K	000000	000000
5156191710	5-1561	9171	SHIM; T=0.70, INJ PUMP 2K	000000	000000
5156191720	5-1561	9172	SHIM; T=0.80, INJ PUMP 2K	000000	000000
5156210010	5-1562	1001	SUPERSEDED**CAMSHAFT	000000	000000
5156210020	5-1562	1002	CAMSHAFT	000000	000000
5156210090	5-1562	1009	CAMSHAFT; INJ PUMP	000000	000000
5156210100	5-1562	1010	CAMSHAFT	000000	000000
5156210110	5-1562	1011	CAMSHAFT	000002	000000
5156210120	5-1562	1012	CAMSHAFT	000000	000000
5156210140	5-1562	1014	CAMSHAFT	000000	000000
5156210160	5-1562	1016	CAMSHAFT	000000	000004
5156210170	5-1562	1017	CAMSHAFT	000000	000001
5156210180	5-1562	1018	CAM SHAFT	000000	000000
5156210181	5-1562	1018	CAM SHAFT	000000	000000
5156210190	5-1562	1019	CAMSHAFT	000001	000000
5156210200	5-1562	1020	SHAFT	000000	000000
5156210210	5-1562	1021	CAMSHAFT	000000	000000
5156210250	5-1562	1025	CAMSHAFT	000002	000000
5156210260	5-1562	1026	CAMSHAFT	000000	000000
5156210290	5-1562	1029	CAMSHAFT	000003	000000
5156210300	5-1562	1030	CAMSHAFT	000000	000000
5156210310	5-1562	1031	SCREW	000000	000000
5156210360	5-1562	1036	CAMSHAFT	000000	000000
5156210391	5-1562	1039	CAMSHAFT; INJ.	000000	000000
5156210401	5-1562	1040	SHAFT; CAM, INJ. PUMP	000000	000000
5156220010	5-1562	2001	TAPPET ASM	000000	000000
5156220030	5-1562	2003	TAPPET; CAMSHAF	000000	000000
5156220040	5-1562	2004	TAPPER ASM.	000000	000000
5156220060	5-1562	2006	PIN**	000000	000000
5156220090	5-1562	2009	TAPPET ASM.	000000	000000
5156240020	5-1562	4002	COUPLING ASM; INJ. PUMP	000000	000000
5156250010	5-1562	5001	PLATE; INJ PUMP	000000	000028
5156290010	5-1562	9001	SEAL; OIL, CAMSHAFT	000000	000000
5156290020	5-1562	9002	BEARING; ROLLER, CAMSHAFT	000000	000000
5156290060	5-1562	9006	NUT; TAPPET	000000	000000
5156290070	5-1562	9007	BOLT; TAPPET	000000	000000
5156290140	5-1562	9014	SHIM; TO=0.12	000000	000000
5156290150	5-1562	9015	SHIM; INJ PUMP	000000	000000
5156290160	5-1562	9016	SHIM; INJ PUMP	000000	000000
5156290170	5-1562	9017	SHIM; INJ PUMP	000000	000018

5156290180	5-1562	9018	SHIM; INJ PUMP, T=0	000000	000000
5156290190	5-1562	9019	SHIM; INJ PUMP, T=0	000000	000000
5156290200	5-1562	9020	SHIM; INJ PUMP, T=0	000000	000000
5156290210	5-1562	9021	SHIM T=0.30	000000	000000
5156290220	5-1562	9022	RING*	000000	000000
5156290230	5-1562	9023	RING; CAMSHAFT	000000	000000
5156290240	5-1562	9024	RING;	000000	000000
5156290241	5-1562	9024	RING;	000001	000000
5156290250	5-1562	9025	SHIM; T=0.10	000000	000000
5156290260	5-1562	9026	SHIM; T=0.12	000000	000000
5156290270	5-1562	9027	SHIM; T=0.14	000000	000000
5156290280	5-1562	9028	SHIM; T=0.16	000000	000000
5156290290	5-1562	9029	SHIM; T=0.18	000000	000000
5156290300	5-1562	9030	SHIM; T=0.30	000000	000000
5156290310	5-1562	9031	SHIM; T=0.50	000000	000000
5156290320	5-1562	9032	SHIM; T=1.00	000000	000000
5156290340	5-1562	9034	COVER	000000	000000
5156290350	5-1562	9035	WASHER	000000	000000
5156290360	5-1562	9036	NUT**	000000	000000
5156290380	5-1562	9038	SHIM; T=1.00	000000	000000
5156290450	5-1562	9045	STOPPER	000004	000000
5156290490	5-1562	9049	PACKING; O-RING	000000	000003
5156290900	5-1562	9090	SHIM;RR BEARING CAMSHAFT	000000	000000
5156292430	5-1562	9243	COLLAR	000000	000000
5156310030	5-1563	1003	PLUNGER ASM C240	000000	000000
5156310040	5-1563	1004	PLUNGER ASM	000000	000000
5156310050	5-1563	1005	PLUNGER ASM	000000	000000
5156310060	5-1563	1006	PLUNGER ASM.	000000	000000
5156310070	5-1563	1007	PLUNGER ASM	000000	000005
5156310090	5-1563	1009	PLUNGER ASM C240	000002	000004
5156310120	5-1563	1012	PLUNGER ASM 6BD1T	000001	000000
5156310130	5-1563	1013	PLUNGER ASM 2AB1	000000	000000
5156310150	5-1563	1015	PLUNGER ASM	000000	000000
5156310170	5-1563	1017	PLUNGER ASM.	000000	000000
5156310190	5-1563	1019	PLUNGER ASM.	000000	000000
5156310200	5-1563	1020	PLUNGER ASM 4FB1	000000	000000
5156310220	5-1563	1022	PLUNGER ASM	000000	000000
5156320020	5-1563	2002	PLUNGER ASM.	000000	000000
5156320040	5-1563	2004	PLUNGER	000000	000000
5156320050	5-1563	2005	PLUNGER ASM	000000	000000
5156320100	5-1563	2010	PLUNGER ASM.	000000	000000
5156340010	5-1563	4001	SPRING; PLUNGER	000000	000000
5156340050	5-1563	4005	SPRING; PLUNGER	000000	000000
5156340060	5-1563	4006	SPRING; PLUNGER	000000	000000
5156340090	5-1563	4009	SPRING; PLUNGER	000010	000000
5156350010	5-1563	5001	SLEEVE; CONTROL	000003	000000
5156350020	5-1563	5002	SLEEVE; CONTROL	000000	000000

5156360010	5-1563	6001	PINION; PLUNGER	000000	000000
5156370020	5-1563	7002	RACK; CONT.	000000	000000
5156370030	5-1563	7003	RACK; CONTROL	000000	000000
5156370040	5-1563	7004	RACK; CONT.	000000	000000
5156370050	5-1563	7005	RACK; INJ PUMP	000000	000000
5156370070	5-1563	7007	RACK; CONT.	000000	000000
5156370080	5-1563	7008	RACK; CONTROL	000000	000000
5156370100	5-1563	7010	RACK; CONTROL	000000	000000
5156390020	5-1563	9002	NUT;BRKT, INJ.	000107	000000
5156390030	5-1563	9003	GASKET	000000	000000
5156390040	5-1563	9004	SEAT; SPRING	000000	000000
5156390070	5-1563	9007	SCRW;PINION INJ	000000	000000
5156391580	5-1563	9158	BOLT; EYE	000000	000000
5156410010	5-1564	1001	VALVE ASM; DELIVERY	000008	000000
5156410020	5-1564	1002	VALVE ASM.; DELIVERY	000000	000000
5156410030	5-1564	1003	VALVE ASM.; DELIVERY	000027	000000
5156410040	5-1564	1004	VALVE ASM; DELIVERY	000000	000000
5156410050	5-1564	1005	VALVE ASM; DELIVERY	000000	000000
5156410070	5-1564	1007	VALVE ASM; DELIVERY	000000	000000
5156410100	5-1564	1010	VALVE ASM; DELIVERY	000008	000000
5156410110	5-1564	1011	VALVE ASM; DELIVERY 6BD1	000000	000005
5156410120	5-1564	1012	VALVE ASM.; DELIVERY	000007	000000
5156410130	5-1564	1013	VALVE ASM; DELIVERY	000000	000000
5156410140	5-1564	1014	VLV;OVR FLOW	000000	000000
5156410150	5-1564	1015	VALVE ASM; DELIVERY	000001	000000
5156410180	5-1564	1018	VALVE ASM; DELIVERY	000000	000000
5156410190	5-1564	1019	VALVE ASM; DELIVERY	000000	000000
5156430010	5-1564	3001	SPRING; VALVE	000000	000029
5156430020	5-1564	3002	SPRING; DELIVERY VALVE	000002	000007
5156430070	5-1564	3007	SPRING; DELIVER	000000	000000
5156430080	5-1564	3008	VALVE ASM; DELIVERY	000000	000000
5156430090	5-1564	3009	SPRING; PLUNGER	000000	000000
5156430100	5-1564	3010	SPRING SEAT	000000	000000
5156440010	5-1564	4001	HOLDER	000000	000000
5156440040	5-1564	4004	HOLDER; DELIVERY VALVE	000000	000000
5156440050	5-1564	4005	HOLDER; DELIVERY VALVE	000005	000000
5156440070	5-1564	4007	HOLDER; DELIVERY VALVE	000000	000000
5156440080	5-1564	4008	HOLDER; DELIVERY VALVE	000000	000000
5156440100	5-1564	4010	HOLDER; DELIVERY 4BB1	000003	000000
5156440130	5-1564	4013	HOLDER; DELIVERY VALVE	000000	000000
5156440170	5-1564	4017	HOLDER; DELIVERY	000005	000000
5156440180	5-1564	4018	HOLDER; DELIVERY	000000	000000
5156490010	5-1564	9001	GASKET; VALVE 6BD1	000003	000058
5156490140	5-1564	9014	SEAL*	000000	000000
5156490160	5-1564	9016	PLATE; INJ PUMP	000000	000000
5156690021	5-1566	9002	CAP; FULL, STOPPER 2KC1	000000	000041
5156690030	5-1566	9003	CAP; IDLE SET 2KC1	000001	000000

5157100490	5-1571	0049	GOVERNOR ASM.	000000	000000
5157100500	5-1571	0050	GOVERNOR ASM.	000000	000000
5157100560	5-1571	0056	GOVERNOR, INJ PU	000000	000000
5157100570	5-1571	0057	GOVERNOR ASM.	000000	000000
5157100680	5-1571	0068	GOVERNOR ASM.	000000	000000
5157100820	5-1571	0082	GOVERNOR ASM.	000000	000000
5157100861	5-1571	0086	GOVERNOR ASM.	000000	000000
5157100871	5-1571	0087	GOVERNOR ASM.	000000	000000
5157100890	5-1571	0089	GOVERNOR ASM.	000000	000000
5157110010	5-1571	1001	HOUSING; GOVERNOR	000000	000000
5157110020	5-1571	1002	HOUSING; GOVERNOR	000000	000000
5157120020	5-1571	2002	DIAPHRAGM	000000	000000
5157120040	5-1571	2004	DIAPHRAGM, INJ G	000000	000000
5157120060	5-1571	2006	DIAPHRAGM	000000	000000
5157120090	5-1571	2009	DIAPHRAGM	000000	000000
5157120110	5-1571	2011	DIAPHRAGM	000000	000000
5157120120	5-1571	2012	DIAPHRAGM, GOVERNOR C240	000003	000000
5157120130	5-1571	2013	BUSH; CAMSHAFT	000000	000000
5157130030	5-1571	3003	SPRING; GOVERNOR	000000	000000
5157130050	5-1571	3005	SPRING; GOVERNOR	000000	000000
5157130070	5-1571	3007	SPRING; GOVERNOR PNEUMATI	000001	000000
5157130100	5-1571	3010	SPRING; GOVERNOR	000001	000000
5157130110	5-1571	3011	SPRING; CAPSULE	000000	000000
5157130120	5-1571	3012	SPRING; GOVERNOR	000000	000000
5157130130	5-1571	3013	DIAPHRAGM	000000	000000
5157140021	5-1571	4002	SPRING; IDLE	000006	000000
5157140031	5-1571	4003	SPRING; IDLE 2KC1	000000	000000
5157170060	5-1571	7006	FORK; INJ. GOVERNOR	000000	000000
5157170100	5-1571	7010	LEVER	000000	000000
5157190030	5-1571	9003	CLIP; FUEL LINE C240	000000	000000
5157190050	5-1571	9005	CAPSULE; SPRING	000000	000000
5157190060	5-1571	9006	COVER; FAN GEN. 4JC1	000000	000000
5157190080	5-1571	9008	SLEEVE; GOVERNOR	000000	000000
5157190100	5-1571	9010	KEY; WOODRUFF	000000	000000
5157190110	5-1571	9011	WASHER; PL, DAIP	000000	000000
5157190130	5-1571	9013	BOLT; CASE	000000	000045
5157190140	5-1571	9014	BOLT*	000000	000000
5157190170	5-1571	9017	SHIM*	000000	000000
5157190180	5-1571	9018	SHIM*	000000	000000
5157190190	5-1571	9019	BOLT*	000000	000000
5157190200	5-1571	9020	GASKET; HOUSING TO COVER	000000	000000
5157190230	5-1571	9023	SCREW; INJ GOV C240	000001	000000
5157190330	5-1571	9033	CLIP*	000000	000000
5157190360	5-1571	9036	SPRING; CAPSULE	000000	000000
5157190370	5-1571	9037	SPRING; GOVERNOR	000000	000000
5157190380	5-1571	9038	SPRING; GOVERNOR	000000	000000
5157190390	5-1571	9039	SPRING; GOVERNOR	000000	000000

5157190410	5-1571	9041	SPRING; CAPSULE	000000	000000
5157200051	5-1572	0005	GOVERNOR ASM.	000000	000000
5157200100	5-1572	0010	GOVERNOR ASM.	000000	000000
5157200180	5-1572	0018	GOVERNOR ASM.	000000	000000
5157200351	5-1572	0035	GOVERNOR ASM.	000000	000000
5157200430	5-1572	0043	GOVERNOR ASM.	000000	000000
5157200450	5-1572	0045	GOVERNOR ASM.	000000	000000
5157200770	5-1572	0077	GOVERNOR ASM.	000000	000000
5157200870	5-1572	0087	GOVERNOR ASM.	000000	000000
5157200910	5-1572	0091	GOVERNOR ASM.	000000	000000
5157200920	5-1572	0092	GOVERNOR ASM.	000000	000000
5157200930	5-1572	0093	GOVERNOR ASM.	000000	000000
5157200990	5-1572	0099	GOVERNOR ASM.	000000	000000
5157201060	5-1572	0106	GOVERNOR ASM.	000000	000000
5157201101	5-1572	0110	GOVERNOR ASM.	000000	000000
5157201140	5-1572	0114	GOVERNOR ASM.	000000	000000
5157201180	5-1572	0118	GOVERNOR ASM.	000000	000000
5157201190	5-1572	0119	GOVERNOR ASM.	000000	000000
5157201191	5-1572	0119	GOVERNOR ASM.	000000	000000
5157201210	5-1572	0121	GOVERNOR ASM.	000000	000000
5157201350	5-1572	0135	GOVERNOR ASM.	000000	000000
5157201360	5-1572	0136	GOVERNOR ASM.	000000	000000
5157201390	5-1572	0139	GOVERNOR ASM.	000000	000000
5157201400	5-1572	0140	GOVERNOR ASM.	000000	000000
5157201401	5-1572	0140	GOVERNOR ASM.	000000	000000
5157201420	5-1572	0142	GOVERNOR ASM.	000000	000000
5157201430	5-1572	0143	GOVERNOR ASM.	000000	000000
5157201452	5-1572	0145	GOVERNOR	000000	000000
5157201470	5-1572	0147	GOVERNOR ASM.	000000	000000
5157201520	5-1572	0152	GOVERNOR ASM.	000000	000000
5157201650	5-1572	0165	GOVERNOR ASM.	000000	000000
5157201700	5-1572	0170	GOVERNOR ASM.	000000	000000
5157201760	5-1572	0176	GOVERNOR ASM.	000000	000000
5157201770	5-1572	0177	GOVERNOR ASM.	000000	000000
5157201790	5-1572	0179	GOVERNOR ASM.	000000	000000
5157201820	5-1572	0182	GOVERNOR ASM.	000000	000000
5157201890	5-1572	0189	GOVERNOR ASM.	000000	000000
5157201910	5-1572	0191	GOVERNOR ASM.	000000	000000
5157201920	5-1572	0192	GOVERNOR ASM.	000000	000000
5157201970	5-1572	0197	GOVERNOR ASM.	000000	000000
5157201980	5-1572	0198	GOVERNOR ASM.	000000	000000
5157202010	5-1572	0201	GOVERNOR ASM.	000000	000000
5157202070	5-1572	0207	GOVERNOR ASM.	000000	000000
5157202210	5-1572	0221	GOVERNOR ASM.	000000	000000
5157202220	5-1572	0222	GOVERNOR ASM.	000000	000000
5157202221	5-1572	0222	GOVERNOR ASM.	000000	000000
5157202250	5-1572	0225	GOVERNOR ASM	000000	000000

5157202260	5-1572	0226	GOVERNOR ASM.	000000	000000
5157202261	5-1572	0226	GOVERNOR ASM.	000000	000000
5157202270	5-1572	0227	GOVERNOR ASM.	000000	000000
5157202280	5-1572	0228	GOVERNOR ASM.	000000	000000
5157202300	5-1572	0230	GOVERNOR ASM.	000000	000000
5157202340	5-1572	0234	GOVERNOR	000000	000000
5157202350	5-1572	0235	GOVERNOR ASM.	000000	000000
5157202370	5-1572	0237	GOVERNOR ASM.	000000	000000
5157202390	5-1572	0239	GOVERNOR ASM.	000000	000000
5157202420	5-1572	0242	GOVERNOR ASM.	000000	000000
5157202421	5-1572	0242	GOVERNOR ASM.	000000	000000
5157202460	5-1572	0246	GOVERNOR ASM.	000000	000000
5157202490	5-1572	0249	GOVERNOR ASM.	000000	000000
5157202550	5-1572	0255	GOVERNOR ASM.	000000	000000
5157202560	5-1572	0256	GOVERNOR ASM.	000000	000000
5157202590	5-1572	0259	GOVERNOR ASM.	000000	000000
5157202620	5-1572	0262	GOVERNOR ASM.	000000	000000
5157202651	5-1572	0265	GOVERNOR ASM.	000000	000000
5157202661	5-1572	0266	GOVERNOR ASM.	000000	000000
5157202691	5-1572	0269	GOVERNOR ASM.	000000	000000
5157202750	5-1572	0275	GOVERNOR ASM	000000	000000
5157202760	5-1572	0276	GOVERNOR ASM.	000000	000000
5157202780	5-1572	0278	GOVERNOR ASM	000000	000000
5157202800	5-1572	0280	GOVERNOR ASM	000000	000000
5157202831	5-1572	0283	GOVERNOR ASM.	000000	000000
5157202870	5-1572	0287	GOVERNOR ASM.	000000	000000
5157202910	5-1572	0291	GOVERNOR ASM.	000000	000000
5157202940	5-1572	0294	GOVERNOR ASM.	000000	000000
5157202970	5-1572	0297	GOVERNOR ASM.	000000	000000
5157203700	5-1572	0370	GOVERNOR ASM.	000000	000000
5157205580	5-1572	0558	GOVERNOR**INVALID**	000000	000000
5157210030	5-1572	1003	COVER; GOVERNOR	000000	000000
5157210040	5-1572	1004	HOUSING	000004	000000
5157210070	5-1572	1007	HOUSING	000000	000000
5157210080	5-1572	1008	COVER; GOVERNOR	000000	000000
5157210090	5-1572	1009	HOUSING; GOVERNOR	000000	000000
5157210200	5-1572	1020	COVER	000000	000002
5157210210	5-1572	1021	COVER	000000	000000
5157210220	5-1572	1022	COVER	000001	000000
5157210250	5-1572	1025	COVER	000002	000000
5157210260	5-1572	1026	COVER	000000	000000
5157210270	5-1572	1027	COVER	000000	000000
5157210280	5-1572	1028	COVER	000000	000000
5157210290	5-1572	1029	COVER	000000	000000
5157210300	5-1572	1030	HOUSING; GOVERNOR	000000	000000
5157210310	5-1572	1031	COVER; GOV.	000000	000000
5157210320	5-1572	1032	COVER	000000	000000

5157210330	5-1572	1033	COVER; INJ PUMP	000000	000000
5157210340	5-1572	1034	COVER; GOVERNOR	000000	000000
5157210350	5-1572	1035	HOUSING ASM.	000000	000000
5157210370	5-1572	1037	COVER ASM; GOV.	000000	000000
5157210380	5-1572	1038	HOUSING; GOVERNOR	000000	000000
5157210400	5-1572	1040	HOUSING; GOVERNOR	000000	000000
5157210410	5-1572	1041	COVER; GOVERNOR	000000	000000
5157210500	5-1572	1050	HOUSING	000000	000000
5157210511	5-1572	1051	COVER; FUEL CUT	000000	000000
5157220020	5-1572	2002	FLYWEIGHT ASM	000004	000000
5157220030	5-1572	2003	FLYWEIGHT ASM	000000	000000
5157220040	5-1572	2004	FLYWEIGHT ASM	000000	000000
5157220070	5-1572	2007	FLYWEIGHT ASM.	000000	000000
5157220080	5-1572	2008	FLYWEIGHT ASM.	000000	000000
5157220100	5-1572	2010	FLYWEIGHT ASM	000000	000000
5157220110	5-1572	2011	FLANGE	000000	000000
5157220150	5-1572	2015	FLYWEIGHT ASM.	000000	000000
5157220194	5-1572	2019	FLYWEIGHT	000000	000000
5157220223	5-1572	2022	SLEEVE ASM 3KC1	000000	000001
5157230030	5-1572	3003	SPRING GOV	000000	000000
5157230120	5-1572	3012	SPRING; GOVERNOR	000000	000032
5157230130	5-1572	3013	SPRING; GOVERNOR	000000	000000
5157230140	5-1572	3014	SPRING; GOV.	000000	000000
5157230160	5-1572	3016	CAPSULE; SPR.	000000	000000
5157230190	5-1572	3019	IDLE SPRING ASS	000000	000000
5157230200	5-1572	3020	CAPSULE; SPR. IDLING SUB	000000	000000
5157230210	5-1572	3021	SPRING; GOVERNOR	000003	000000
5157230260	5-1572	3026	SPRING; GOVERNOR	000000	000002
5157230320	5-1572	3032	SPRING; GOVERNOR 6BD1	000000	000000
5157230330	5-1572	3033	SPRING	000000	000000
5157230340	5-1572	3034	SPRING	000000	000000
5157230390	5-1572	3039	SPRING	000000	000000
5157230391	5-1572	3039	SPRING	000000	000000
5157230410	5-1572	3041	SPRING; GOVERNOR	000000	000000
5157230430	5-1572	3043	SPRING; GOVERNOR	000000	000000
5157230440	5-1572	3044	SPRING	000000	000000
5157230510	5-1572	3051	SPRING; INJ GOV C240	000000	000000
5157230560	5-1572	3056	SPRING	000000	000000
5157230570	5-1572	3057	SPRING	000000	000000
5157230610	5-1572	3061	SPRING; LINK	000000	000000
5157230620	5-1572	3062	CAPSULE; SPR. IDLING SUB	000000	000000
5157230630	5-1572	3063	SPRING; CAPSULE	000000	000000
5157230640	5-1572	3064	SPRING; RETURN, SHUT-DOWN	000002	000002
5157230660	5-1572	3066	SPRING; CONT.	000000	000000
5157230670	5-1572	3067	SPRING; GOV.	000000	000000
5157230680	5-1572	3068	SPRING; GOVERNOR	000000	000000
5157230690	5-1572	3069	CAPSULE; SPR.	000000	000000

5157230700	5-1572	3070	CAPSULE; SPR.	000000	000000
5157230710	5-1572	3071	CAPSULE; SPRING	000000	000000
5157230730	5-1572	3073	SPRING; GOVERNOR INNER	000000	000000
5157230740	5-1572	3074	CAPSULE; SPRING	000000	000000
5157230760	5-1572	3076	SPRING; GOV, INJ PUMP	000000	000000
5157230800	5-1572	3080	AEOP PART (16)	000000	000000
5157230810	5-1572	3081	CAPSULE; SPRING	000000	000000
5157230820	5-1572	3082	SPRING; LINK	000021	000000
5157230830	5-1572	3083	CAPSULE; SPRING	000000	000000
5157230850	5-1572	3085	SPRING	000000	000000
5157230880	5-1572	3088	SPRING	000017	000003
5157230900	5-1572	3090	CAPSULE; SPRING	000000	000000
5157230910	5-1572	3091	SPRING; CAPSULE	000000	000000
5157230920	5-1572	3092	SPRING; CAPSULE	000000	000000
5157230930	5-1572	3093	SPRING	000000	000000
5157230940	5-1572	3094	SPRING	000000	000000
5157230960	5-1572	3096	SPRING	000000	000000
5157230970	5-1572	3097	SPRING; GOVERNOR OUTER	000000	000000
5157230980	5-1572	3098	SPRING; GOVERNOR	000000	000000
5157230990	5-1572	3099	SPRING; CAPSULE	000000	000000
5157231010	5-1572	3101	CAPSULE; SPRING	000000	000000
5157231040	5-1572	3104	SPRING; GOVERNOR	000000	000000
5157231050	5-1572	3105	CAPSULE; SPRING	000000	000000
5157231060	5-1572	3106	CAPSULE; SPR. IDLING SUB	000001	000000
5157231070	5-1572	3107	SPRING; GOVERNOR	000000	000000
5157231080	5-1572	3108	CAPSULE; SPRING	000000	000000
5157231090	5-1572	3109	CAPSULE; SPRING	000000	000000
5157231100	5-1572	3110	CAPSULE; SPRING	000000	000000
5157231110	5-1572	3111	SPRING	000000	000000
5157231130	5-1572	3113	CAPSULE; SPRING	000000	000000
5157231140	5-1572	3114	CAPSULE; SPRING	000000	000000
5157231170	5-1572	3117	CAPSULE; SPRING	000000	000000
5157231180	5-1572	3118	CAPSULE; SPRING	000000	000000
5157231190	5-1572	3119	SPRING; GOVERNOR	000000	000000
5157231200	5-1572	3120	CAPSULE; SPR. IDLING SUB	000000	000000
5157231240	5-1572	3124	CAPSULE; SPRING	000000	000005
5157231250	5-1572	3125	SPRING	000000	000000
5157231260	5-1572	3126	CAPSULE; SPRING	000000	000000
5157231270	5-1572	3127	SPRING	000000	000000
5157231280	5-1572	3128	SPRING; GOVERNOR	000000	000003
5157231310	5-1572	3131	SPRING	000002	000000
5157231320	5-1572	3132	SPRING 4BD1	000000	000000
5157231340	5-1572	3134	SPR; RETURN, CALI	000000	000000
5157231350	5-1572	3135	SPRING; CAP C240	000000	000000
5157231360	5-1572	3136	CAPSULE; SPRING 4JC1	000000	000000
5157231370	5-1572	3137	SPRING; GOV.	000000	000000
5157231480	5-1572	3148	SPRING; GOV.	000000	000000

5157231500	5-1572	3150	SPRING; GOVERNOR	000000	000000
5157231530	5-1572	3153	SPRING; CAPSULE	000000	000000
5157231570	5-1572	3157	SPRING; CAPSULE	000000	000000
5157231590	5-1572	3159	SPRING; CAPSULE	000000	000000
5157231600	5-1572	3160	SPRING; GOVERNOR	000024	000000
5157231640	5-1572	3164	SPRING	000000	000000
5157231670	5-1572	3167	SPRING; CAPSULE	000000	000000
5157231691	5-1572	3169	SPRING; MAIN 3KC1	000000	000000
5157231692	5-1572	3169	SPRING; MAIN 3KC1	000007	000021
5157231701	5-1572	3170	GOVERNOR SPRING 3KC1	000000	000000
5157231721	5-1572	3172	SPRING; MAIN, LEVER	000005	000000
5157231731	5-1572	3173	SPRING; MAIN 3KC1	000004	000001
5157231800	5-1572	3180	ANGLEICH KIT	000000	000000
5157231850	5-1572	3185	SUPERSEDED**ANGLEICH SPRI	000000	000000
5157231860	5-1572	3186	CAPSULE; SPRING	000000	000000
5157231920	5-1572	3192	SPRING SET 3KC1	000012	000000
5157231940	5-1572	3194	SPRING; RETURN, CONTROL 3	000002	000000
5157232120	5-1572	3212	SPRING	000000	000000
5157232900	5-1572	3290	SPRING	000000	000000
5157250030	5-1572	5003	LEVER; GOVERNOR, 6BD1	000000	000000
5157250040	5-1572	5004	SHAFT; CONT GOV	000000	000000
5157250050	5-1572	5005	LEVER	000000	000000
5157250060	5-1572	5006	LEVER	000000	000000
5157250070	5-1572	5007	LEVER	000000	000000
5157250080	5-1572	5008	SHAFT	000000	000000
5157250090	5-1572	5009	ROD	000000	000000
5157250091	5-1572	5009	ROD**	000000	000000
5157250100	5-1572	5010	LEVER; GUIDE	000000	000000
5157250110	5-1572	5011	LINK*	000000	000000
5157250120	5-1572	5012	LEVER	000000	000000
5157250160	5-1572	5016	LEVER; GUIDE	000000	000000
5157250170	5-1572	5017	LEVER; TENSION	000000	000007
5157250190	5-1572	5019	LEVER; TENTION	000000	000000
5157250200	5-1572	5020	LEVER	000000	000000
5157250290	5-1572	5029	LEVER; GUIDE	000000	000000
5157250300	5-1572	5030	LEVER; SWIVEL LEVER	000000	000000
5157250310	5-1572	5031	LEVER	000000	000000
5157250320	5-1572	5032	LEVER	000000	000000
5157250330	5-1572	5033	LEVER; GUIDE	000000	000000
5157250360	5-1572	5036	LEVER	000000	000000
5157250400	5-1572	5040	LEVER	000000	000000
5157250410	5-1572	5041	LEVER; SWIVEL	000000	000001
5157250420	5-1572	5042	LEVER ASM C330	000000	000000
5157250450	5-1572	5045	GUIDE LEVER	000000	000000
5157250460	5-1572	5046	LEVER; SWIVEL	000000	000000
5157250470	5-1572	5047	LEVER; GUIDE	000000	000000
5157250480	5-1572	5048	LEVER; SWIVEL LEVER	000000	000000

5157250490	5-1572	5049	LEVER	000000	000000
5157250500	5-1572	5050	LEVER; TENSION	000000	000001
5157250510	5-1572	5051	LEVER	000000	000000
5157250520	5-1572	5052	LEVER; SWIVEL	000000	000000
5157250530	5-1572	5053	LEVER; TENSION	000000	000000
5157250540	5-1572	5054	LEVER	000000	000000
5157250550	5-1572	5055	LEVER; FLOATING	000000	000000
5157250560	5-1572	5056	LEVER 4FB1	000000	000000
5157250570	5-1572	5057	LEVER; GUIDE	000001	000000
5157250580	5-1572	5058	LEVER	000000	000000
5157250590	5-1572	5059	LEVER; GUIDE	000000	000000
5157250600	5-1572	5060	LEVER; TENSION	000001	000000
5157250610	5-1572	5061	LEVER	000000	000000
5157250620	5-1572	5062	LEVER; MECH GOV 4BD1	000000	000000
5157250630	5-1572	5063	LEVER & SHAFT	000000	000000
5157250640	5-1572	5064	LEVER	000002	000000
5157250670	5-1572	5067	LEVER; SWIVEL LEVER	000000	000000
5157250680	5-1572	5068	LEVER; TENTION	000000	000000
5157250700	5-1572	5070	LEVER; INJ. GOV.	000000	000000
5157250780	5-1572	5078	LEVER; SWIVEL	000000	000000
5157250790	5-1572	5079	LEVVER; FLOATING	000000	000000
5157250800	5-1572	5080	LEVER; FLOATING	000000	000000
5157250810	5-1572	5081	LEVER 6BD1	000000	000006
5157250840	5-1572	5084	LEVER	000001	000000
5157250890	5-1572	5089	LEVER	000000	000000
5157250900	5-1572	5090	LEVER; TENSION 4FB1	000000	000000
5157250930	5-1572	5093	LEVER	000003	000000
5157250940	5-1572	5094	LEVER	000000	000000
5157250950	5-1572	5095	LEVER	000000	000000
5157251010	5-1572	5101	LEVER 4FB1	000000	000000
5157251050	5-1572	5105	LEVER	000000	000000
5157251194	5-1572	5119	LEVER; PUMP, LINK PLATE 3	000000	000001
5157251220	5-1572	5122	LEVER	000000	000014
5157251410	5-1572	5141	LEVER	000000	000000
5157251420	5-1572	5142	LEVER	000000	000000
5157251430	5-1572	5143	LEVER; SWIVEL LEVER	000000	000000
5157251450	5-1572	5145	LEVER; FUEL	000000	000000
5157251470	5-1572	5147	LEVER; SWIVEL	000000	000000
5157251481	5-1572	5148	LEVER; CONTROL 2KC/3KC1	000002	000000
5157251491	5-1572	5149	LEVER ASM 3KC1	000000	000000
5157251492	5-1572	5149	LEVER ASM 3KC1	000000	000000
5157251511	5-1572	5151	LEVER ASM	000000	000000
5157251541	5-1572	5154	SHAFT ASM 2KC1	000000	000000
5157251630	5-1572	5163	LEVER;	000000	000000
5157280050	5-1572	8005	DIAPHRAGM	000000	000000
5157290010	5-1572	9001	SLEEVE; FLYWEIGHT	000000	000000
5157290020	5-1572	9002	SCREW; PLUG	000000	000000

5157290070	5-1572	9007	SLEEVE; FLYWEIGHT	000004	000000
5157290090	5-1572	9009	SEAL; OIL	000000	000000
5157290130	5-1572	9013	TUBE SPRING	000000	000000
5157290160	5-1572	9016	SLEEVE	000001	000000
5157290190	5-1572	9019	SEAL; OIL, GOVERNOR 6BD1	000002	000000
5157290200	5-1572	9020	GASKET; GOV.	000000	000003
5157290210	5-1572	9021	GASKET	000000	000000
5157290220	5-1572	9022	GASKET; GOVERNOR	000000	000000
5157290230	5-1572	9023	RING; SNAP, ACTUA	000000	000000
5157290240	5-1572	9024	RING/RETAINER; SNAP	000000	000000
5157290270	5-1572	9027	BOLT; EYE	000000	000040
5157290290	5-1572	9029	PLUG*	000000	000000
5157290300	5-1572	9030	SCREW	000000	000000
5157290310	5-1572	9031	COLLAR	000000	000000
5157290320	5-1572	9032	PIN**	000000	000000
5157290330	5-1572	9033	BOLT; CONT. BRKT	000003	000000
5157290340	5-1572	9034	WASHER	000099	000000
5157290360	5-1572	9036	SHIFTER	000000	000000
5157290370	5-1572	9037	CAPSULE; SPR.	000000	000000
5157290380	5-1572	9038	CAP; NUT	000000	000000
5157290400	5-1572	9040	SCREW; GUIDE	000000	000000
5157290410	5-1572	9041	CAP**	000000	000000
5157290420	5-1572	9042	SEAT; SPRING	000000	000000
5157290430	5-1572	9043	BOLT*	000000	000000
5157290440	5-1572	9044	SCREW; ADJ, GOVERNOR ASM,	000000	000000
5157290460	5-1572	9046	BOLT; GOV. COVER	000000	000002
5157290500	5-1572	9050	PLUG*	000000	000000
5157290510	5-1572	9051	NUT**	000000	000000
5157290520	5-1572	9052	SCREW; TENSION LEVER	000000	000000
5157290530	5-1572	9053	PLUG	000009	000000
5157290540	5-1572	9054	BOLT	000002	000006
5157290560	5-1572	9056	BOLT; COVER FIXING	000000	000000
5157290580	5-1572	9058	BOLT*	000000	000000
5157290590	5-1572	9059	NUT**	000000	000000
5157290630	5-1572	9063	BOLT*	000000	000000
5157290650	5-1572	9065	CAPSULE; SPR.	000000	000000
5157290670	5-1572	9067	NUT**	000000	000000
5157290680	5-1572	9068	NUT**	000000	000000
5157290690	5-1572	9069	NUT**	000000	000000
5157290710	5-1572	9071	BOLT, BRACKET TO	000002	000000
5157290720	5-1572	9072	NUT**	000000	000000
5157290740	5-1572	9074	TUBE; RET SPRING, STOPPER	000000	000026
5157290760	5-1572	9076	PLUG*	000000	000000
5157290780	5-1572	9078	BRACKET	000000	000000
5157290960	5-1572	9096	BOLT; SET, SPR	000000	000010
5157290980	5-1572	9098	PLUG; INJ GOV	000001	000000
5157290990	5-1572	9099	GASKET; CYL HEAD (B)	000000	000109

5157291000	5-1572	9100	BREATHER; AIR	000000	000000
5157291010	5-1572	9101	BOLT	000000	000000
5157291020	5-1572	9102	BOLT*	000000	000000
5157291030	5-1572	9103	LEVEL; GAUGE	000000	000000
5157291040	5-1572	9104	BOLT; COVER FIX	000000	000000
5157291090	5-1572	9109	SHAFT	000000	000000
5157291100	5-1572	9110	CAPSULE; SPRING	000000	000000
5157291120	5-1572	9112	BOLT	000005	000000
5157291130	5-1572	9113	GAUGE; LEVEL	000000	000000
5157291140	5-1572	9114	COVER; FEED PUMP	000000	000000
5157291150	5-1572	9115	GASKET; FEED PUMP	000008	000000
5157291160	5-1572	9116	ADAPTER; HOUSING	000000	000000
5157291220	5-1572	9122	SCREW; STOPPER	000033	000000
5157291230	5-1572	9123	SCREW;ADJ,GOV.	000000	000010
5157291240	5-1572	9124	BOLT; COVER FIXING	000000	000000
5157291250	5-1572	9125	SHAFT	000000	000000
5157291290	5-1572	9129	SPACER	000000	000000
5157291300	5-1572	9130	PIN	000000	000000
5157291320	5-1572	9132	PLUG*	000000	000000
5157291340	5-1572	9134	SHIM*	000000	000000
5157291350	5-1572	9135	SHIM*	000000	000000
5157291370	5-1572	9137	SHIM*	000000	000000
5157291420	5-1572	9142	SLEEVE	000000	000000
5157291430	5-1572	9143	NUT	000000	000000
5157291440	5-1572	9144	SEAT; SPRING	000000	000000
5157291510	5-1572	9151	NUT; LOCK	000000	000000
5157291520	5-1572	9152	SCREW; CONTROL SET 2KC1	000000	000000
5157291600	5-1572	9160	CAPSULE; SPRING	000000	000000
5157291610	5-1572	9161	CAPSULE; RR COVER	000000	000000
5157291630	5-1572	9163	CAPSULE; SPRING	000000	000000
5157291640	5-1572	9164	BOLT; EYE FEED PUMP	000013	000000
5157291650	5-1572	9165	RING; SNAP, FEED PUMP	000000	000000
5157291660	5-1572	9166	CAPSULE; SPRING	000000	000000
5157291670	5-1572	9167	BOLT*	000000	000035
5157291680	5-1572	9168	GASKET	000000	000000
5157291690	5-1572	9169	BOLT*	000000	000000
5157291800	5-1572	9180	PIN	000000	000000
5157291810	5-1572	9181	COLLAR	000000	000000
5157291820	5-1572	9182	BOLT*	000000	000000
5157291830	5-1572	9183	PLATE	000000	000000
5157291860	5-1572	9186	PLATE; CAM	000000	000000
5157291870	5-1572	9187	CAP**	000000	000000
5157291880	5-1572	9188	C A P	000000	000000
5157291910	5-1572	9191	CAP NUT	000000	000000
5157291920	5-1572	9192	BUSH*	000000	000000
5157291930	5-1572	9193	BRKT;RETURN SPR	000000	000000
5157291980	5-1572	9198	BRACKET	000000	000000

5157292000	5-1572	9200	NUT;CAP	000000	000000
5157292030	5-1572	9203	BOLT*	000000	000000
5157292090	5-1572	9209	NUT	000000	000000
5157292100	5-1572	9210	NUT; SPR CAPSULE	000000	000000
5157292110	5-1572	9211	GASKET	000000	000000
5157292120	5-1572	9212	CAP; NUT	000000	000000
5157292130	5-1572	9213	BRACKET	000000	000000
5157292140	5-1572	9214	BOLT;GOV., SUPPO	000000	000000
5157292160	5-1572	9216	PLATE; CAM	000000	000000
5157292180	5-1572	9218	TUBE*	000001	000000
5157292190	5-1572	9219	TUBE;RET. SPRIN	000000	000018
5157292200	5-1572	9220	PLATE; CAM	000000	000000
5157292220	5-1572	9222	BRACKET	000000	000000
5157292230	5-1572	9223	PLATE; CAM	000000	000000
5157292240	5-1572	9224	BUSH	000013	000000
5157292250	5-1572	9225	SPRING CAPSULE	000000	000000
5157292260	5-1572	9226	PLATE; CAM	000000	000000
5157292391	5-1572	9239	EYE; START SPRING 2KC/3KC	000000	000000
5157292392	5-1572	9239	EYE; START SPRING 2KC/3KC	000000	000015
5157292411	5-1572	9241	SUPERSEDED**SLEEVE	000000	000000
5157292440	5-1572	9244	CAM PLATE	000000	000000
5157292450	5-1572	9245	SPRING; CAPSULE 4FB1	000000	000000
5157292530	5-1572	9253	BOLT;CONT.BRKT	000000	000007
5157292550	5-1572	9255	PLATE; CAM	000000	000000
5157292580	5-1572	9258	SHIM*	000000	000000
5157292590	5-1572	9259	SHIM*	000000	000000
5157292600	5-1572	9260	SHIM*	000000	000000
5157292610	5-1572	9261	SHIM*	000000	000000
5157292620	5-1572	9262	SHIM*	000000	000000
5157292630	5-1572	9263	SHIM	000000	000000
5157292680	5-1572	9268	BOLT;ADJUSTING	000000	000000
5157292700	5-1572	9270	ROD; PUSH	000000	000000
5157292710	5-1572	9271	RING SNAP	000000	000000
5157292720	5-1572	9272	GASKET	000000	000000
5157292740	5-1572	9274	PLATE	000000	000000
5157292750	5-1572	9275	SHAFT	000000	000000
5157292770	5-1572	9277	SCREW	000000	000000
5157292780	5-1572	9278	NUT	000000	000000
5157292790	5-1572	9279	BOLT/SCREW;FAN MOTOR	000073	000000
5157292800	5-1572	9280	BOLT; BRKT FIX,GOV	000000	000000
5157292820	5-1572	9282	BOLT	000000	000000
5157292830	5-1572	9283	GASKET	000000	000000
5157292850	5-1572	9285	NUT**	000000	000000
5157292860	5-1572	9286	SHIM; T=0.5	000000	000000
5157292870	5-1572	9287	SHIM; T=1.5	000000	000000
5157292930	5-1572	9293	BUSH; SWIVEL LEVER	000000	000000
5157293490	5-1572	9349	NUT; GOVERNOR	000000	000000

5157293720	5-1572	9372	SLEEVE	000001	000000
5157330100	5-1573	3010	SPRING; LEVER	000000	000000
5157400160	5-1574	0016	TIMER; AUTOMATIC C190	000000	000000
5157400230	5-1574	0023	TIMER; AUTOMATIC	000000	000000
5157400270	5-1574	0027	TIMER; AUTO	000000	000000
5157400320	5-1574	0032	TIMER ASM; AUTO	000000	000000
5157400370	5-1574	0037	TIMER; AUTOMATIC	000000	000002
5157400440	5-1574	0044	TIMER; AUTO	000000	000000
5157400490	5-1574	0049	TIMER 4BD1	000000	000000
5157400540	5-1574	0054	TIMER; AUTOMATIC	000000	000000
5157400580	5-1574	0058	TIMER; AUTOMATIC	000000	000000
5157400640	5-1574	0064	TIMER; AUTO	000006	000001
5157400690	5-1574	0069	TIMER; AUTO	000000	000003
5157400700	5-1574	0070	TIMER; AUTOMATIC	000000	000000
5157400720	5-1574	0072	TIMER; AUTOMATIC	000000	000001
5157400770	5-1574	0077	TIMER; AUTO	000000	000000
5157400780	5-1574	0078	TIMER; AUTO 6BD1 W/AIR CO	000000	000000
5157400790	5-1574	0079	TIMER; AUTO	000000	000000
5157410020	5-1574	1002	HOUSING; TIMER	000000	000000
5157410220	5-1574	1022	COVER; TIMER	000000	000000
5157420040	5-1574	2004	FLANGE; TIMER, I	000000	000000
5157420060	5-1574	2006	FLANGE	000000	000000
5157420070	5-1574	2007	FLANGE	000000	000000
5157420080	5-1574	2008	FLANGE	000000	000000
5157420100	5-1574	2010	FLANGE	000000	000000
5157420110	5-1574	2011	FLANGE	000000	000000
5157420140	5-1574	2014	FLANGE	000000	000000
5157420150	5-1574	2015	FLANGE	000000	000000
5157430010	5-1574	3001	FLYWEIGHT	000000	000000
5157430020	5-1574	3002	FLYWEIGHT	000000	000000
5157430030	5-1574	3003	FLYWEIGHT	000000	000000
5157430040	5-1574	3004	FLYWEIGHT; TIME	000000	000000
5157430070	5-1574	3007	HOLDER	000000	000000
5157430090	5-1574	3009	FLYWEIGHT	000000	000000
5157430120	5-1574	3012	FLYWEIGHT	000000	000000
5157430160	5-1574	3016	FLYWEIGHT	000000	000000
5157490010	5-1574	9001	HOLDER	000001	000000
5157490070	5-1574	9007	WASHER; FLANGE	000000	000000
5157490080	5-1574	9008	BOLT; PUMP GEAR	000000	000009
5157490090	5-1574	9009	SHIM*	000000	000000
5157490100	5-1574	9010	SHIM*	000000	000000
5157490110	5-1574	9011	SHIM*	000000	000000
5157490120	5-1574	9012	SPRING; TIMER	000000	000000
5157490130	5-1574	9013	SPRING; TIMER	000000	000000
5157490160	5-1574	9016	SPRING; TIMER, O	000000	000000
5157490180	5-1574	9018	SPRING; TIMER, I	000000	000000
5157490190	5-1574	9019	SEAT; INNER SPR	000000	000000

5157490210	5-1574	9021	SHIM; OUTER SPR	000000	000000
5157490220	5-1574	9022	SHIM; OUTER SPR	000000	000000
5157490230	5-1574	9023	SHIM; OUTER SPR	000000	000000
5157490240	5-1574	9024	SHIM; INNER SPR	000000	000000
5157490250	5-1574	9025	SHIM; INNER SPRING,T	000000	000000
5157490260	5-1574	9026	SHIM; INNER SPR	000000	000000
5157490270	5-1574	9027	HOUSING; TIMER,	000000	000000
5157490280	5-1574	9028	HOLDER; FLYWEIGHT	000000	000000
5157490320	5-1574	9032	WASHER;LK.	000000	000045
5157490330	5-1574	9033	NUT;TIMER TO IN	000000	000003
5157490370	5-1574	9037	HOLDER	000000	000000
5157490380	5-1574	9038	SPRING; TIMER	000000	000000
5157490400	5-1574	9040	SEAT; SPRING	000000	000000
5157490420	5-1574	9042	BUSH*	000000	000000
5157490430	5-1574	9043	ROLLER	000000	000000
5157490440	5-1574	9044	ROLLER	000000	000000
5157490450	5-1574	9045	ROLLER	000000	000000
5157490460	5-1574	9046	ROLLER	000000	000000
5157490470	5-1574	9047	WASHER	000000	000000
5157490480	5-1574	9048	RETAINER	000000	000000
5157490490	5-1574	9049	O-RING	000000	000000
5157490491	5-1574	9049	O-RING	000000	000009
5157490510	5-1574	9051	NUT;	000000	000003
5157490511	5-1574	9051	NUT	000000	000000
5157490520	5-1574	9052	HOLDER	000000	000000
5157490530	5-1574	9053	SPRING; TIMER	000000	000000
5157490540	5-1574	9054	HOLDER	000000	000000
5157490550	5-1574	9055	ROLLER	000000	000000
5157490570	5-1574	9057	SPRING; TIMER	000000	000000
5157490590	5-1574	9059	SPRING; TIMER	000000	000000
5157490600	5-1574	9060	HOLDER	000000	000000
5157490640	5-1574	9064	SPRING; TIMER	000000	000000
5157490680	5-1574	9068	SHIM*	000000	000000
5157490690	5-1574	9069	SHIM*	000000	000000
5157490700	5-1574	9070	SHIM*	000000	000000
5157490710	5-1574	9071	SHIM*	000000	000000
5157500010	5-1575	0001	PUMP;FEED	000000	000000
5157500011	5-1575	0001	PUMP;FEED	000000	000000
5157500020	5-1575	0002	PUMP ASM; FEED	000000	000000
5157500050	5-1575	0005	PUMP ASM; FEED	000000	000000
5157500060	5-1575	0006	PUMP ASM; FEED 2AB1	000000	000005
5157500080	5-1575	0008	PUMP ASM; FEED	000000	000000
5157500141	5-1575	0014	PUMP ASM; FEED C240	000000	000000
5157500150	5-1575	0015	PUMP; PRIMING	000002	000000
5157500221	5-1575	0022	PUMP; FEED	000000	000000
5157500271	5-1575	0027	PUMP ASM; FEED	000001	000000
5157500281	5-1575	0028	PUMP ASM; FEED 4BD1	000000	000000

5157500291			FUEL PUMP ASM	000000	000000
5157500360	5-1575	0036	PUMP ASM; FEED 4FB1	000000	000001
5157500430	5-1575	0043	PUMP ASM; FUEL 3AB1	000000	000000
5157500510	5-1575	0051	PUMP ASM; FEED	000000	000002
5157500560	5-1575	0056	PUMP; FEED	000000	000000
5157500570	5-1575	0057	PUMP FEED	000000	000000
5157500600	5-1575	0060	PUMP ASM; FEED	000000	000000
5157510020	5-1575	1002	HOUSING; FEED PUMP	000000	000000
5157510030	5-1575	1003	HOUSING; FEED PUMP	000000	000000
5157510040	5-1575	1004	HOUSING; FEED PUMP	000000	000000
5157510050	5-1575	1005	HOUSING; FEED PUMP	000000	000000
5157510060	5-1575	1006	HOUSING; FEED PUMP	000000	000000
5157510110	5-1575	1011	HOUSING; FEED PUMP	000000	000000
5157510120	5-1575	1012	HSG;FEED PUMP	000000	000000
5157510130	5-1575	1013	HOUSING; FEED PUMP	000000	000000
5157510140	5-1575	1014	HOUSING; FEED PUMP	000000	000000
5157510160	5-1575	1016	BODY; BOTTOM 4FB1	000000	000000
5157510170	5-1575	1017	BODY ASM; TOP	000000	000000
5157510180	5-1575	1018	COVER; BOTTOM	000000	000000
5157510190	5-1575	1019	BODY ASM; TOP	000000	000000
5157510200	5-1575	1020	HOUSING; INJ PUMP	000000	000000
5157510210	5-1575	1021	HOUSING	000000	000000
5157530010	5-1575	3001	SPRING; FEED PUMP	000000	000000
5157530020	5-1575	3002	SPRING; LEVER	000000	000000
5157530040	5-1575	3004	SPRING 4FB1	000000	000000
5157530050	5-1575	3005	SPRING; PISTON	000000	000000
5157530060	5-1575	3006	SPRING; DIAPHRAM	000000	000000
5157530070	5-1575	3007	SPRING; PISTON	000000	000000
5157530100	5-1575	3010	SPRING; FEED PUMP	000000	000000
5157540010	5-1575	4001	TAPPET ASM;FEED	000000	000006
5157540020	5-1575	4002	TAPPET ASM.	000000	000000
5157540030	5-1575	4003	TAPPET; FEED PUMP	000000	000000
5157540060	5-1575	4006	PISTON	000000	000000
5157550010	5-1575	5001	VALVE; CHECK	000000	000000
5157550020	5-1575	5002	SPRING; CHECK VALVE	000000	000000
5157550040	5-1575	5004	VALVE; CHECK; FEED PUMP	000005	000000
5157550050	5-1575	5005	DIAPHRAM	000000	000000
5157550320	5-1575	5032	BRACKET; FUEL FILTER	000000	000000
5157590010	5-1575	9001	WASHER; FEED PUMP	000000	000000
5157590020	5-1575	9002	BOLT; EYE, FUEL SUCTION	000000	000000
5157590030	5-1575	9003	BOLT; EYE, FUEL FEED	000023	000044
5157590041	5-1575	9004	PACKING; JOINT BOLT FUEL	000000	000000
5157590120	5-1575	9012	JOINT; EYE	000014	000020
5157590150	5-1575	9015	EYE; FUEL SUCTION	000000	000000
5157590160	5-1575	9016	EYE; FUEL SUCTION	000003	000000
5157590170	5-1575	9017	LEVER; FEED PUMP	000000	000000
5157590180	5-1575	9018	PIN; FEED PUMP	000000	000000

5157590190	5-1575	9019	RETAINER; FEED PUMP	000009	000000
5157590200	5-1575	9020	BOLT; RETAINER	000000	000000
5157590210	5-1575	9021	BOLT; HOUSING-COVER	000000	000000
5157590220	5-1575	9022	GASKET	000002	000056
5157590230	5-1575	9023	SCREW; RETAINER	000000	000000
5157590270	5-1575	9027	BOLT; EYE, FUEL INL, FEED	000000	000159
5157590290	5-1575	9029	BOLT; EYE FEED	000000	000000
5157590300	5-1575	9030	CONN; FEED PUMP	000000	000000
5157590330	5-1575	9033	PIN**	000000	000000
5157590360	5-1575	9036	PACKING	000000	000000
5157590370	5-1575	9037	CAP**	000000	000000
5157590400	5-1575	9040	DIAPHRAGM	000000	000000
5157590410	5-1575	9041	LEVER ASM 4FB1	000000	000000
5157590420	5-1575	9042	PIN**	000000	000000
5157590430	5-1575	9043	COVER 4FB1	000000	000000
5157590440	5-1575	9044	SCREW	000000	000000
5157590450	5-1575	9045	GASKET	000037	000000
5157590460	5-1575	9046	BOLT; EYE	000000	000000
5157590480	5-1575	9048	JOINT; HOSE 4FB1	000000	000000
5157590490	5-1575	9049	DIAPHRAGM	000000	000000
5157590500	5-1575	9050	O-RING	000000	000000
5157590510	5-1575	9051	JOINT; HOSE	000000	000000
5157590520	5-1575	9052	DIAPHRAM; FEED PUMP	000000	000000
5157610010	5-1576	1001	PUMP; PRIMING	000000	000000
5157610020	5-1576	1002	DIAPHRAGM	000000	000000
5157610030	5-1576	1003	PUMP; PRIMING	000000	000000
5157610040	5-1576	1004	PUMP; PRIMING	000000	000006
5157610050	5-1576	1005	PUMP; PRIMING C240	000000	000002
5157630010	5-1576	3001	SPRING; FEED PUMP	000000	000000
5157690080	5-1576	9008	SLEEVE	000000	000000
5157800020	5-1578	0002	COUPLING ASM.	000000	000000
5157800022	5-1578	0002	COUPLING ASM	000000	000000
5157800023	5-1578	0002	COUPLING ASM; INJ PUMP 6B	000000	000000
5157800071	5-1578	0007	COUPLING ASM; INJ PUMP	000000	000000
5157810020	5-1578	1002	COUPLING ASM; INJ PUMP	000000	000000
5157810030	5-1578	1003	COUPLING ASM; INJ PUMP	000000	000000
5157810040	5-1578	1004	COUPLING ASM; INJ PUMP	000000	000000
5157810100	5-1578	1010	COUPLING ASM; INJ PUMP 4F	000000	000000
5157810110	5-1578	1011	COUPLING ASM; INJ PUMP 4F	000000	000000
5157810120	5-1578	1012	COUPLING ASM; INJ PUMP	000000	000000
5157810130	5-1578	1013	COUPLING ASM; INJ PUMP	000000	000000
5157820020	5-1578	2002	COUPLING ASM; INJ PUMP	000000	000000
5157890010	5-1578	9001	WASHER; LK, PWR CLY BRKT	000000	000000
5157890020	5-1578	9002	ADAPTOR; LOCK PLATE	000002	000000
5157890040	5-1578	9004	PLATE; LOCK	000000	000000
5157890060	5-1578	9006	COUPLING ASM; INJ PUMP	000000	000001
5157890090	5-1578	9009	BOLT*	000000	000000

5157890100	5-1578	9010	COUPLING ASM; INJ PUMP	000000	000000
5157890120	5-1578	9012	BOLT*	000000	000000
5157890130	5-1578	9013	BOLT*	000000	000000
5157890140	5-1578	9014	WASHER	000000	000000
5157890150	5-1578	9015	BOLT	000000	000000
5157890160	5-1578	9016	PLATE 6BD1	000007	000000
5157890170	5-1578	9017	BOLT*	000000	000000
5157890180	5-1578	9018	COUPLING ASM; INJ PUMP	000002	000000
5157890190	5-1578	9019	PLATE 6BD1	000014	000019
5157890200	5-1578	9020	BOLT*	000000	000000
5157890210	5-1578	9021	BOLT*	000014	000000
5159292580	5-1592	9258	SHIM T=0.2	000000	000000
5191790060	5-1917	9006	COVER ****INVALID****	000000	000000
5191870100	5-1918	7010	BRKT;AIR COMPRE	000000	000000
5191870101	5-1918	7010	BRKT;AIR COMPRE	000000	000000
5191870570	5-1918	7057	BRACKET; FUEL	000000	000000
5191910010	5-1919	1001	PIPE ASM; AIR COMP, INLET	000000	000001
5191910131	5-1919	1013	PIPE ASM; AIR, COMP. INLE	000000	000000
5191910220	5-1919	1022	PIPE;AIR OUTLET	000000	000000
5191910221	5-1919	1022	PIPE;AIR OUTLET	000000	000000
5191910230	5-1919	1023	PIPE;GOVERNOR	000000	000000
5191910280	5-1919	1028	PIPE ASM; AIR	000002	000000
5193100020	5-1931	0002	DRIVE ASM.;TACHO METER	000001	000000
5193100040	5-1931	0004	ELBOW ASSY	000000	000000
5193100041	5-1931	0004	ELBOW ASSY	000000	000000
5193100060	5-1931	0006	DRIVE ASM; TACH.	000000	000000
5193100151	5-1931	0015	DRIVE ASM; TACH.	000000	000000
5193100152	5-1931	0015	DRIVE ASM; TACH.	000000	000000
5193100171	5-1931	0017	ELBOW ASM	000000	000000
5193110011	5-1931	1001	CASE; TACHOMETER	000000	000000
5193110021	5-1931	1002	COVER; TACHOMETER DRIVE	000000	000002
5193120010	5-1931	2001	PACKING; CASE	000025	000000
5193800171	5-1938	0017	COVER	000000	000000
5193800231	5-1938	0023	COVER ASM;GEAR	000000	000000
5193800232	5-1938	0023	COVER ASM; GEAR	000000	000002
5193800240	5-1938	0024	COVER ASM; CYL HEAD	000000	000000
5193800242	5-1938	0024	COVER ASM; CYL HEAD	000000	000000
5193810013	5-1938	1001	COVER	000000	000003
5193810131	5-1938	1013	COVER; CYL. HEAD COVER	000000	000000
5193810141	5-1938	1014	COVER; GEAR CASE COVER	000000	000000
5193860020	5-1938	6002	BRKT;O/PAN CVR	000000	000000
5193870051	5-1938	7005	RUBBER SEAL;CVR	000000	000004
5193890010	5-1938	9001	GROMMET;DR.PLUG	000000	000003
5193890020	5-1938	9002	GROMMET	000000	000048
5193890061	5-1938	9006	RUBBER; SEAL, C	000058	000092
5193890070	5-1938	9007	RUBBER; MTG.	000000	000000
5193890071	5-1938	9007	RUBBER; MTG.	000000	000000

5193890090	5-1938	9009	BUSHING	000000	000009
5193890091	5-1938	9009	BUSHING	000000	000000
5195000190	5-1950	0019	PUMP ASM; OIL 4BD1T/6BD1	000000	000000
5195000200	5-1950	0020	PUMP; P/S 4BD1	000000	000000
5195000462	5-1950	0046	PUMP ASM; OIL, P/S	000002	000001
5195100041	5-1951	0004	BODY ASM.; OIL PUMP	000000	000000
5195100050	5-1951	0005	VALVE ASM RELIE	000000	000000
5195110030	5-1951	1003	BODY; OIL PUMP	000000	000000
5195140010	5-1951	4001	COVER OIL PUMP	000000	000000
5195150010	5-1951	5001	BRG; BALL, PUMP	000000	000000
5195200050	5-1952	0005	CARTRIDGE ASM O	000000	000000
5195210010	5-1952	1001	SHAFT; OIL PUMP	000000	000000
5195210030	5-1952	1003	SHAFT OIL PUMP	000000	000000
5195290050	5-1952	9005	RING; RET, OIL PUMP	000000	000019
5195290060	5-1952	9006	PLATE SIDE OIL	000000	000000
5195810012	5-1958	1001	GEAR; P/S PUMP	000000	000000
5195810013	5-1958	1001	GEAR; O/PUMP	000000	000006
5195810050	5-1958	1005	GEAR; OIL PUMP	000000	000001
5195870030	5-1958	7003	STAY; BRKT. - CRANK CASE	000000	000000
5195870350	5-1958	7035	BRKT COOLER COM	000000	000000
5195890030	5-1958	9003	CONNECTOR; ELBOW	000000	000000
5196000010	5-1960	0001	PUMP ASM VACUUM	000000	000003
5196000100			VAC PUMP	000000	000000
5196000130			PUMP ASM; VAC.	000000	000000
5196000150	5-1960	0015	PUMP ASM; VACUUM	000000	000000
5196000160	5-1960	0016	PUMP ASM; VAC	000000	000002
5196000210	5-1960	0021	PUMP ASM.; VACUUM	000000	000000
5196000220	5-1960	0022	VACCUM PUMP	000000	000000
5196000260	5-1960	0026	PUMP ASM.; VACUUM	000000	000000
5196000311	5-1960	0031	PUMP ASM.; VACUUM	000000	000000
5196000350	5-1960	0035	PUMP ASM.; VACUUM	000000	000000
5196000460	5-1960	0046	PUMP ASM; VACUUM C240	000000	000000
5196130020	5-1961	3002	COVER ASM.; VAC. PUMP	000000	000000
5196130040	5-1961	3004	FLANGE ASM,	000000	000000
5196140040	5-1961	4004	FLANGE ASM.; VAC. PUMP	000000	000000
5196190010	5-1961	9001	SEAL; OIL, VACUUM PUMP C2	000000	000000
5196190020	5-1961	9002	BOLT; OIL CONN., VAC.PUMP	000000	000000
5196190060	5-1961	9006	BOLT ASM.; CON., VAC.PUMP	000000	000000
5196190070	5-1961	9007	CONNECTOR; RING, VAC.PUMP	000000	000000
5196190090	5-1961	9009	BOLT THROUGH	000000	000005
5196190100	5-1961	9010	BLADE; VAC/PUMP	000003	000000
5196190140	5-1961	9014	PACKING	000000	000000
5196190200	5-1961	9020	PACKING	000000	000000
5196190260	5-1961	9026	BOLT	000001	000000
5196190270	5-1961	9027	BOLT	000000	000000
5196190280	5-1961	9028	BOLT	000016	000007
5196190290	5-1961	9029	BOLT	000002	000000

5196190300	5-1961	9030	BOLT; CONNECTOR	000000	000000
5196190310	5-1961	9031	BOLT;CONNECTOR	000000	000003
5196190330	5-1961	9033	CONNECTOR; VAC PUMP	000000	000001
5196190340	5-1961	9034	CONNECTOR; VAC PUMP	000000	000001
5196190490	5-1961	9049	KEY;DRIVE GEAR INJ PUMP	000087	000000
5196210010	5-1962	1001	ROTOR ASM.; VAC. PUMP	000000	000000
5196220010	5-1962	2001	VANE; VAC. PUMP	000000	000000
5196290010	5-1962	9001	VANE VACUUM PUM	000000	000026
5196650010	5-1966	5001	CHECK VALVE	000000	000001
5196790010	5-1967	9001	SCREW;EXH PORT	000003	000000
5196790020	5-1967	9002	GASKET;VAC PUMP	000002	000012
5196790030	5-1967	9003	GASKET;VAC PUMP	000000	000000
5196790040	5-1967	9004	PACKING	000000	000000
5196790042	5-1967	9004	PACKING	000000	000039
5197110010	5-1971	1001	BRACKET; GENERATOR	000000	000027
5197110011	5-1971	1001	BRACKET; GENERATOR	000000	000000
5197110070	5-1971	1007	BRACKET; GENERATOR	000000	000000
5197110240	5-1971	1024	BRACKET; GENERATOR	000000	000000
5197110310	5-1971	1031	BRACKET; GENERATOR	000000	000000
5197110311	5-1971	1031	BRACKET; GENERATOR	000000	000000
5197110312	5-1971	1031	BRACKET; GENERATOR	000000	000000
5197110332	5-1971	1033	BRKT;GENERATOR	000000	000000
5197110371	5-1971	1037	BRACKET; GENERATOR	000000	000000
5197110460	5-1971	1046	BRACKET; GENERATOR	000000	000000
5197110580	5-1971	1058	BRACKET; GENERATOR	000000	000000
5197110620	5-1971	1062	BRACKET; GENERATOR	000000	000001
5197110650	5-1971	1065	BRACKET; GENERATOR	000000	000000
5197110750	5-1971	1075	BRACKET; GENERATOR	000000	000000
5197110781	5-1971	1078	BRACKET; GENERATOR	000000	000000
5197110840	5-1971	1084	BRACKET; GENERATOR	000000	000000
5197110850	5-1971	1085	BRACKET; GENERATOR	000000	000000
5197110852	5-1971	1085	BRACKET; GENERATOR	000000	000002
5197110860	5-1971	1086	BRACKET; GENERATOR	000000	000000
5197110870	5-1971	1087	SPACER; ACG BRACKET	000000	000000
5197110880	5-1971	1088	BRACKET; GENERATOR	000000	000000
5197110940	5-1971	1094	BRACKET; GENERATOR	000000	000000
5197110941	5-1971	1094	BRACKET; GENERATOR	000000	000000
5197110950	5-1971	1095	BRACKET; GENERATOR	000001	000006
5197110990	5-1971	1099	BRACKET; GENERATOR 4BD1	000000	000000
5197111020	5-1971	1102	BRACKET; GENERATOR	000000	000000
5197111040	5-1971	1104	BRACKET; GENERATOR	000000	000000
5197111060	5-1971	1106	BRACKET; GENERATOR	000000	000000
5197111081	5-1971	1108	BRACKET; GENERATOR	000000	000000
5197111150	5-1971	1115	BRACKET; GENERATOR	000000	000000
5197111160	5-1971	1116	BRACKET; GENERATOR	000000	000000
5197190060	5-1971	9006	COVER; GENERATOR	000000	000000
5197190100	5-1971	9010	SPACER; GENERATOR	000000	000000

5197190111	5-1971	9011	SPACER; GENERATOR	000000	000002
5197190122	5-1971	9012	SPACER; GENERATOR	000000	000001
5197190140	5-1971	9014	SPACER; GENERATOR	000000	000000
5197190180	5-1971	9018	SPACER; GENERATOR	000000	000000
5197300110	5-1973	0011	CONNECTOR; GLOW PLUG	000000	000000
5197320010	5-1973	2001	CONNECTOR; GLOW PLUG	000000	000000
5197320011	5-1973	2001	CONNECTOR; GLOW PLUG	000000	000000
5197320012	5-1973	2001	CONNECTOR; GLOW PLUG	000000	000004
5197320020	5-1973	2002	CONNECTOR; GLOW PLUG	000000	000000
5197320021	5-1973	2002	CONNECTOR; GLOW PLUG	000000	000000
5197320022	5-1973	2002	CONNECTOR; GLOW PLUG	000000	000002
5197320111	5-1973	2011	CONNECTOR; GLOW PLUG	000000	000000
5197320141	5-1973	2014	CONNECTOR, GLOW	000000	000000
5197320142	5-1973	2014	CONNECTOR, GLOW	000000	000109
5197320200	5-1973	2020	CONNECTOR 2KC1	000000	000000
5197500500	5-1975	0050	BRKT; INJ. PUMP	000000	000000
5197510030	5-1975	1003	BRACKET; INJ. PUMP SPACER	000000	000000
5197510041	5-1975	1004	BRACKET; INJ PUMP, REAR	000000	000000
5197510042	5-1975	1004	BRACKET; INJ PUMP, REAR	000000	000000
5197510071	5-1975	1007	BRACKET; INJ PUMP 4BD1A	000000	000000
5197510150	5-1975	1015	BRACKET; INJ PUMP, REAR	000001	000000
5197510280	5-1975	1028	BRACKET	000000	000000
5197510380	5-1975	1038	BRKT; INJ PUMP R	000000	000000
5197510500	5-1975	1050	BRKT; INJ. PUMP	000000	000001
5197510540	5-1975	1054	BRACKET; INJ PUMP	000000	000000
5197510582	5-1975	1058	BRACKET; INJ PUMP	000000	000000
5197510610	5-1975	1061	BRACKET; SHUT OFF VALVE	000000	000000
5197510620	5-1975	1062	BRACKET	000000	000000
5197510680	5-1975	1068	BRACKET	000000	000000
5197510710	5-1975	1071	BRACKET; INJ. P	000000	000002
5197550010	5-1975	5001	BRACKET; FUEL FILTER, 4BB1	000000	000003
5197550250	5-1975	5025	BRACKET; FUEL FILTER	000000	000000
5197550302	5-1975	5030	BRACKET; FUEL FILTER	000000	000000
5197550310	5-1975	5031	BRACKET; FUEL FILTER	000000	000000
5197550381	5-1975	5038	BRACKET; FUEL FILTER	000000	000000
5197550410	5-1975	5041	BRACKET; FUEL FILTER	000000	000000
5197550420	5-1975	5042	BRACKET; FUEL FILTER 2KC1	000000	000000
5197810060	5-1978	1006	BRACKET; SOLENOID	000000	000000
5197810070	5-1978	1007	BRACKET; SOLENOID	000002	000000
5197890030	5-1978	9003	BRACKET; STOPPER CABLE	000000	000000
5197890040	5-1978	9004	BRACKET; STOPPER CABLE	000000	000000
5197890041	5-1978	9004	BRACKET; STOPPER CABLE	000000	000000
5214300570	5-2143	0057	HOSE; RADIATER, LOWER 3KC	000000	000000
5214310180	5-2143	1018	HOSE; RUBBER L=560	000000	000000
5214500020	5-2145	0002	CAP; RADIATOR	000000	000000
5214500021	5-2145	0002	CAP; RADIATOR	000000	000000
5214500052	5-2145	0005	CAP ASM.; FILLE	000000	000000

5214500053	5-2145	0005	CAP;RAD.	000000	000009
5214800021	5-2148	0002	TANK ASM,SURGE	000000	000000
5214800022	5-2148	0002	TANK ASM,SURGE	000000	000000
5214800030	5-2148	0003	TANK ASM; SURGE	000000	000000
5214800031	5-2148	0003	TANK ASM; SURGE	000000	000000
5214800100	5-2148	0010	RESERVE TANK;RAD	000000	000000
5214830010	5-2148	3001	CAP; SURGE TANK	000000	000000
5214830011	5-2148	3001	CAP; SURGE TANK	000000	000000
5214830080	5-2148	3008	CAP;SURGE TANK	000000	000000
5214890030	5-2148	9003	CLIP;HOSE,RAD/SURGE TANK	000000	000000
5214890044	5-2148	9004	BRKT;RESERVE TANK	000000	000000
5214890060	5-2148	9006	GASKET; SURGE TANK	000000	000006
5214910090	5-2149	1009	FILTER ASM	000000	000000
5214910120	5-2149	1012	CORE ASM; HEAT EXCHANGER	000000	000000
5214940101	5-2149	4010	CASE; HEAT EXCHANGER	000000	000000
5214990080	5-2149	9008	RING: RUBBER	000000	000000
5214990090	5-2149	9009	PACKING: RUBBER	000002	000000
5214990100	5-2149	9010	PACKING	000000	000000
5215510340			SHROUD	000000	000000
5217000180	5-2170	0018	COOLER ASM; OIL	000000	000000
5217000190	5-2170	0019	COOLER ASM; OIL	000000	000000
5217000250	5-2170	0025	COOLER ASM, OIL	000000	000000
5217000260	5-2170	0026	COOLER ASM, OIL	000000	000000
5217001900			OIL COOLER	000000	000000
5221150170	5-2211	5017	FLANGE; EXHAUST PIPE	000000	000000
5221156030	5-2211	5603	FLANGE; EXHAUST	000000	000000
5221160021	5-2211	6002	GASKET; EXHAUST	000000	000000
5221190030	5-2211	9003	RING;JOINT ENG	000000	000000
5221190031	5-2211	9003	RING;JOINT ENG	000047	000225
5221210054			PROTECTOR	000000	000000
5221210061			PROTECTOR	000000	000000
5221330122	5-2213	3012	CLAMP;EXH.PIPE	000000	000000
5221330123	5-2213	3012	CLAMP;EXH.PIPE	000000	000000
5221330390	5-2213	3039	CLAMP,EXH.SILEN	000000	000000
5221330490	5-2213	3049	CLAMP,FRT.PIPE	000000	000000
5221400152	5-2214	0015	SILENCER; EXH.	000000	000000
5221400360	5-2214	0036	SILENCER ASM; EXHAUST	000000	000001
5221400630	5-2214	0063	SILENCER; EXH.	000000	000000
5221400700	5-2214	0070	MUFFLER	000000	000000
5221400701	5-2214	0070	MUFFLER	000000	000002
5221840020	5-2218	4002	UNIT ASM; EXH. BRAKE	000000	000000
5221840021	5-2218	4002	UNIT ASM; EXH. BRAKE	000000	000000
5221860061	5-2218	6006	BRACKET	000000	000000
5221860072	5-2218	6007	BRACKET	000000	000000
5224102590			TANK; FUEL	000000	000000
5224390052			HOSE; FILLER NEC	000000	000000
5225536060	5-2255	3606	LINING	000000	000000

5232110170	5-2321	1017	KNOB; ENGINE CONTROL	000000	000000
5232201821			CABLE	000000	000000
5232201822			CABLE	000000	000000
5233110470	5-2331	1047	LEVER; FUEL	000000	000000
5233350271	5-2333	5027	BRACKET; ENGINE CONTROL W	000000	000000
5233350351	5-2333	5035	BRKT; ENG. CONT.	000000	000000
5233350410	5-2333	5041	CLIP; ENGINE CONT. BRKT.	000000	000000
5233350430	5-2333	5043	LEVER	000000	000000
5233350570	5-2333	5057	BRACKET; ENG. CONT. WIRE	000000	000000
5233350810	5-2333	5081	BRACKET; SOLENOID	000000	000000
5233350882	5-2333	5088	BRACKET; SOLENOID FIX	000000	000000
5233360030	5-2333	6003	SPRING; EYE	000000	000000
5241111731	5-2411	1173	INLET PIPE	000000	000000
5262300262	5-2623	0026	PUMP ASM; SEA WATER	000000	000000
5262300440	5-2623	0044	PUMP ASM, ;BILGE	000000	000000
5262300461	5-2623	0046	PUMP ASM; SEA WATER	000000	000000
5262300500	5-2623	0050	PUMP ASM.; SUB	000000	000000
5262300510	5-2623	0051	PUMP KIT	000000	000000
5262300541	5-2623	0054	PUMP ASM; SEA WATER	000000	000000
5262330080	5-2623	3008	GO-TO 1-2623 9002 ITC "C"	000000	000000
5262330100	5-2623	3010	SEAL; OIL	000004	000000
5262330110	5-2623	3011	PACKING	000000	000000
5262330120	5-2623	3012	S E A L	000000	000000
5262350040	5-2623	5004	SHAFT S/W PUMP	000000	000000
5262360010	5-2623	6001	IMPELLER	000000	000000
5262360030	5-2623	6003	IMPELLER; W/PUMP	000000	000005
5262360040	5-2623	6004	IMPELLER; SEA	000002	000000
5262360060	5-2623	6006	IMPELLER; W/PUMP	000000	000012
5262390330	5-2623	9033	BOLT	000000	000010
5262390640	5-2623	9064	BOLT	000038	000000
5262390660	5-2623	9066	C A M	000002	000000
5262390710	5-2623	9071	SWITCH ASM.; AUTO. STOP	000000	000000
5262390720	5-2623	9072	HOSE*	000000	000000
5262390730	5-2623	9073	STRAINER	000000	000000
5262390740	5-2623	9074	PORT; DISCHARGE	000000	000000
5262390750	5-2623	9075	CLAMP	000000	000000
5262390760	5-2623	9076	SPACER	000000	000000
5262390770	5-2623	9077	SCREW SET	000000	000000
5262410081	5-2624	1008	PULLEY; SEA WATER PUMP	000001	000000
5262610170	5-2626	1017	PIPE ASM; WATER	000000	000000
5262610171	5-2626	1017	PIPE ASM; WATER	000000	000000
5262610721	5-2626	1072	PIPE; SEA WATER	000000	000000
5262610761	5-2626	1076	PIPE ASM: MANIFOLD OUT	000002	000000
5262650100	5-2626	5010	COCK ASM	000000	000000
5262710040	5-2627	1004	SUPPORT; ENGINE	000000	000000
5262800621	5-2628	0062	METER	000000	000000
5262910020	5-2629	1002	MOTOR ASM.	000000	000000

5263330010	5-2633	3001	SHAFT;CLUTCH	000000	000000
5263390030	5-2633	9003	COVER; CLUTCH	000000	000000
5263390031	5-2633	9003	COVER; CLUTCH	000000	000000
5263460012	5-2634	6001	BRACKET; FUEL TANK	000000	000000
5263460061	5-2634	6006	BAND ASM.; FUEL TANK	000000	000000
5263460110	5-2634	6011	CLIP; FUEL PIPE	000000	000000
5263460120	5-2634	6012	GUIDE; HARNESS, M6	000000	000000
5263460132	5-2634	6013	BRACKET; FUEL TANK (A)	000000	000000
5263460140	5-2634	6014	BRACKET; FUEL TANK (B)	000000	000000
5263460170	5-2634	6017	GUIDE; HARNESS	000000	000000
5263460180	5-2634	6018	PLUG; OIL DRAIN	000000	000000
5263460190	5-2634	6019	PACKING; OIL DRAIN	000000	000000
5263460240	5-2634	6024	LINING	000000	000000
5263710101	5-2637	1010	BRACKET; BATTERY SWITCH	000000	000000
5263710110	5-2637	1011	COVER; JUNCTION BLOCK	000000	000000
5263710131	5-2637	1013	BOX ASM.; RELAY	000000	000000
5263710141	5-2637	1014	COVER; RELAY BOX	000000	000000
5263780010	5-2637	8001	CUSHION RUBBER	000003	000000
5263780050	5-2637	8005	CUSHION; RUBBER	000000	000174
5311110140	5-3111	1014	HOUSING; FLYWHEEL DISCONT	000000	000000
5311310050	5-3113	1005	COVER,SHIFT FOR	000000	000025
5311310090	5-3113	1009	COVER,DUST	000005	000000
5311310131	5-3113	1013	COVER,UNDER,TRA	000000	000000
5312110030	5-3121	1003	COVER;CLUTCH	000000	000000
5312200021	5-3122	0002	PLATE ASM; PRESSURE,	000000	000001
5312200080	5-3122	0008	PLATE ASM.CLUT	000000	000000
5312200081	5-3122	0008	PLATE ASM;PRESS	000000	000000
5312200082	5-3122	0008	PLATE ASM;PRESS	000000	000015
5312200170	5-3122	0017	PLATE; PRESSURE	000000	000000
5312200220			PRESSURE PLATE	000000	000000
5312200230	5-3122	0023	PLATE ASM; PRESSURE,	000000	000000
5312200240	5-3122	0024	PRESSURE PLATE	000000	000000
5312396020			PLATE	000000	000000
5312400050			FORK ASM.; SHIFT, CLUTCH	000000	000000
5312400100	5-3124	0010	CLUTCH DISC ASM	000000	000000
5312400190	5-3124	0019	DISC ASM	000000	000000
5312400281	5-3124	0028	DISC ASM.; CLUTCH	000000	000000
5312400370	5-3124	0037	PLATE; DRIVEN	000000	000000
5312400390	5-3124	0039	DISC; CLUTCH, INVOLUTE SP	000000	000000
5312400401	5-3124	0040	DISC ASM; CLUTCH	000000	000000
5312400420	5-3124	0042	DISC ASM; CLUTCH	000000	000000
5312400430	5-3124	0043	DISC ASM; CLUTCH	000000	000000
5312400480			DISC,CLUTCH	000000	000000
5313140011	5-3131	4001	BEARING,SHIFT	000002	000000
5313200070	5-3132	0007	BLOCK ASM; SHIFT C240/C19	000000	000000
5313210033	5-3132	1003	COLLAR,CLUTCH S	000000	000034
5313290030	5-3132	9003	SPRING,SHIFT BL	000000	000206

5313400010			SHIFT FORK	000000	000000
5313400040			FORK ASM,CLUT	000000	000000
5313400050	5-3134	0005	FORK ASM.;SHIFT, CLUTCH	000000	000000
5313450011	5-3134	5001	SUPPORT,SHIFT F	000001	000000
5313450021	5-3134	5002	SUPPORT,SHIFT F	000000	000000
5313490011	5-3134	9001	PLATE;ANCHOR	000000	000000
5313490040	5-3134	9004	SPRING; SHIFT BLOCK-FORK	000000	000000
5322120030	5-3221	2003	ADAPTER; FLEX PLATE	000000	000000
5322120031	5-3221	2003	ADAPTER; FLEX PLATE	000000	000000
5322120033	5-3221	2003	ADAPTER; FLEX PLATE	000000	000000
5331120060	5-3311	2006	PACKING	000000	000000
5331190081	5-3311	9008	PLATE;BEARING	000000	000000
5331190110	5-3311	9011	PLATE; BEARING REAR	000000	000000
5331320070	5-3313	2007	GASKET,CASE & R	000000	000000
5331380070	5-3313	8007	COVER,DUST,RR.C	000001	000000
5331410070	5-3314	1007	PLATE,DETENT SP	000000	000000
5331420010	5-3314	2001	GASKET	000000	000000
5331420040	5-3314	2004	GASKET,DETENT,S	000000	000000
5331420042	5-3314	2004	GASKET;DETENT	000000	000000
5331420043	5-3314	2004	GASKET;DETENT	000009	000029
5331560030	5-3315	6003	SHIM*	000000	000000
5332110021			TOP GEAR SHAFT	000000	000000
5332190080	5-3321	9008	BLOCK;DRIVE	000000	000000
5332190090	5-3321	9009	RUBBER BLOCK;	000000	000000
5332190100	5-3321	9010	PLATE;LOCK	000000	000000
5332310350			SHAFT	000000	000000
5332350030	5-3323	5003	SPACER,BRG,DRIV	000000	000000
5332390430	5-3323	9043	WASHER,THRUST,L	000000	000000
5332390431	5-3323	9043	WASHER;REVERSE	000000	000000
5332390433	5-3323	9043	WASHER;REVERSE	000000	000000
5332510141	5-3325	1014	GEAR ASM,2ND	000000	000000
5332510280			GEAR; 2ND MAIN SHAFT	000000	000000
5332510361	5-3325	1036	GEAR;LOW	000000	000000
5332510370			GEAR; LOW	000000	000000
5332510380			2ND GEAR ASM	000000	000000
5332530291			5TH GEAR	000000	000000
5332570191	5-3325	7019	GEAR; REV MAIN SHAFT	000000	000000
5332600100	5-3326	0010	SYNCHRONIZER AS	000000	000000
5332600110			SYCHRO ASSY	000000	000000
5332620123			SLEEVE; SYNCHRO	000000	000000
5332620191			SLEEVE	000000	000000
5332630010	5-3326	3001	INSERT; SYN,REV & 5TH	000000	000057
5332630021	5-3326	3002	INSERT,SYN.REV	000000	000000
5332630022	5-3326	3002	INSERT,SYN.REV	000000	000000
5332630023	5-3326	3002	INSERT,SYN.REV	000000	000013
5332630030	5-3326	3003	INSERT;5TH GEAR	000000	000000
5332630110	5-3326	3011	INSERT; CYN. TOP & 3RD	000000	000000

5332640100	5-3326	4010	SPRING, INSERT, C	000000	000001
5332640120	5-3326	4012	SPRING; INSERT, REV & 5TH	000000	000000
5332650070			BLOCK RING	000000	000000
5332650080			GEAR SLEEVE	000000	000000
5332710070			WASHER, THRUST	000000	000000
5332710160	5-3327	1016	WASHER, THRUST H	000000	000000
5332710161	5-3327	1016	WASHER; THRUST	000000	000000
5332710163	5-3327	1016	WASHER; THRUST	000012	000000
5332710170	5-3327	1017	WASHER, THRUST H	000000	000000
5332710171	5-3327	1017	WASHER; THRUST	000000	000000
5332710173	5-3327	1017	WASHER, THRUST	000000	000002
5332710180	5-3327	1018	WASHER, THRUST H	000000	000000
5332710181	5-3327	1018	WASHER; THRUST	000000	000001
5332710183	5-3327	1018	WASHER, THRUST	000000	000000
5332710190	5-3327	1019	WASHER, THRUST H	000000	000000
5332710191	5-3327	1019	WASHER; THRUST	000006	000000
5332710193	5-3327	1019	WASHER, THRUST	000000	000000
5332710200	5-3327	1020	WASHER, THRUST H	000000	000000
5332710201	5-3327	1020	WASHER; THRUST	000000	000000
5332710202	5-3327	1020	WASHER; THRUST	000000	000000
5332710203	5-3327	1020	WASHER; THRUST	000000	000000
5332710210	5-3327	1021	WASHER, THRUST H	000000	000000
5332710211	5-3327	1021	WASHER; THRUST	000000	000000
5332710213	5-3327	1021	WASHER; THRUST	000001	000001
5332720021	5-3327	2002	COLLAR, NDL. BRG.	000000	000000
5333510070	5-3335	1007	SHAFT, REV. IDLE	000000	000000
5333510071	5-3335	1007	SHAFT, REV. IDLE,	000000	000000
5333610263	5-3336	1026	GEAR; REV IDLER	000000	000000
5333610291			GEAR; REV, IDLE	000000	000000
5333610350			GEAR ASM.; REV. IDLE	000000	000000
5333610372	5-3336	1037	GEAR; REVERSE	000000	000000
5333610420	5-3336	1042	GEAR; REVERSE	000000	000000
5333610421	5-3336	1042	GEAR; REVERSE	000000	000000
5333610422	5-3336	1042	GEAR; REVERSE	000000	000005
5333610460	5-3336	1046	GEAR; REVERSE	000000	000000
5333630031	5-3336	3003	WASHER, THRUST, R	000000	000000
5333630032	5-3336	3003	WASHER, THRUST, REV, IDLE RR	000000	000000
5333630033	5-3336	3003	WASHER, THRUST, REV, IDLE RR	000000	000007
5333630040	5-3336	3004	WASHER, THRUST, R	000000	000000
5333710160	5-3337	1016	GEAR, SPEED DRIV	000000	000000
5333730141	5-3337	3014	BUSHING; SPEED GEAR (Z-14)	000000	000000
5333730150	5-3337	3015	BUSHING; SPEED GEAR (Z-15)	000000	000000
5333730151	5-3337	3015	BUSHING; SPEED GEAR (Z-15)	000000	000000
5333730160	5-3337	3016	BUSHING; SPEED GEAR (Z-16)	000000	000000
5333730161	5-3337	3016	BUSHING; SPEED GEAR (Z-16)	000000	000000
5333730170	5-3337	3017	BUSHING; SPEED GEAR (Z-17)	000000	000000
5333730171	5-3337	3017	BUSHING; SPEED GEAR (Z-17)	000000	000000

5335110061	5-3351	1006	FORK, TOP-3RD. SH	000000	000000
5335110072	5-3351	1007	FORK; LOW - 2ND. SH	000000	000000
5335110083	5-3351	1008	FORK, REV-5TH	000000	000000
5335110084	5-3351	1008	FORK; REV-5TH	000000	000000
5335110085	5-3351	1008	FORK; REV-5TH	000000	000000
5335310452	5-3353	1045	SHAFT, ARM, GEAR	000000	000002
5335310491	5-3353	1049	SHAFT, ARM, GEAR	000000	000000
5335340010	5-3353	4001	PIN; INTER LOCK	000000	000026
5335340020	5-3353	4002	PIN, INTER LOCK	000000	000000
5335340021	5-3353	4002	PIN, INNER LOCK	000000	000048
5336110330			KNOB SRAUS	000000	000000
5336190440	5-3361	9044	GROMMET	000000	000000
5336521910			JOINT ROD ASM	000000	000000
5336570410			HOUSING	000000	000000
5336590530	5-3365	9053	BUSHING; RELAY/LEVER PTO	000000	000020
5336590590	5-3365	9059	WASH. ; RTN. SPR.	000000	000020
5336590600	5-3365	9060	WASH. ; RTN. SPR.	000000	000042
5336590660	5-3365	9066	BRKT; RTN. SPR.	000000	000001
5336590670	5-3365	9067	PIN; LVR. SPR.	000000	000003
5341220160	5-3412	2016	GAUGE ASM.OIL	000000	000000
5341250020	5-3412	5002	COVER; SLEEVE	000000	000020
5341280020	5-3412	8002	BREATHER	000000	000000
5341320010	5-3413	2001	GASKET, OIL PAN	000000	000000
5341320020	5-3413	2002	WASHER, SEALING	000001	000000
5341320030	5-3413	2003	PLUG, WIHD, STGHT	000000	000000
5341380040	5-3413	8004	MAGNET; OIL PAN	000000	000034
5341390010	5-3413	9001	BOLT, OIL PAN TO	000000	000002
5341420020	5-3414	2002	GASKET	000000	000000
5341420050	5-3414	2005	GASKET	000000	000000
5341510010	5-3415	1001	GEAR, PUMP DRIVE	000000	000000
5341690010	5-3416	9001	SCREW, CAP	000000	000000
5341690011	5-3416	9001	SCREW; CAP	000000	000000
5341790010	5-3417	9001	BOLT, RR. CVR. TO	000000	000000
5342180010	5-3421	8001	RACE, THRUST BEA	000000	000000
5342180020	5-3421	8002	BEARING, THRUST	000000	000006
5342180050	5-3421	8005	RACE, THRUST BEA	000000	000005
5342510110	5-3425	1011	PLATE; SINTERE	000001	000000
5342520010	5-3425	2001	PLATE; CLUTCH	000002	000000
5342520020	5-3425	2002	DISC, CLUTCH	000000	000000
5342520040	5-3425	2004	DISC, CLUTCH	000000	000012
5342560020	5-3425	6002	PLATE, CLUTCH BA	000000	000000
5342580020	5-3425	8002	RING, RETAINING	000000	000000
5342630010	5-3426	3001	RING;	000002	000003
5342630020	5-3426	3002	RING;	000018	000000
5342630030	5-3426	3003	RING	000012	000000
5342630040	5-3426	3004	RING; SQUARE	000000	000000
5342630050	5-3426	3005	RING; OIL SEAL	000018	000009

5342650020	5-3426	5002	SPRING, RETURN, F	000000	000158
5342660020	5-3426	6002	RETAINER, BRAKE	000019	000000
5343110031	5-3431	1003	GEAR ASM, SUN	000000	000000
5343150011	5-3431	5001	SHAFT ASM, INTE	000000	000000
5343310360	5-3433	1036	PIPE; SPACER COOL	000000	000000
5343310370	5-3433	1037	PIPE; COOLER BOD	000000	000000
5343680040	5-3436	8004	RING; RETAINING	000000	000000
5343710010	5-3437	1001	GEAR, INTERNAL, P	000000	000000
5343710020	5-3437	1002	GEAR ASM, INTRE	000000	000015
5343780010	5-3437	8001	RING, SEALING	000000	000000
5343780050	5-3437	8005	GASKET, EXT. HSG.	000025	000000
5344620010	5-3446	2001	PACKING; O-RING	000000	000000
5344620030	5-3446	2003	PACKING; O-RING	000000	000000
5344640020	5-3446	4002	SPRING; ACCUMULA	000000	000000
5344680011	5-3446	8001	SCREEN ASM; OIL	000018	000000
5344800020	5-3448	0002	ROD ASM; ACTUAT	000000	000010
5345210080	5-3452	1008	PLUG*	000000	000000
5345220021	5-3452	2002	GASKET; VALVE BO	000000	000000
5345230011	5-3452	3001	PLATE; SEPARATOR	000000	000000
5345310160	5-3453	1016	VALVE; BY-PASS	000000	000000
5345330160	5-3453	3016	SPRING; VALVE PR	000000	000000
5345340010	5-3453	4001	RETAINER; PRESSU	000000	000000
5345380030	5-3453	8003	RETAINER; VALVE	000000	000000
5345380040	5-3453	8004	RETAINER; VALVE	000000	000001
5345380060	5-3453	8006	RETAINER; INTERM	000000	000000
5345380080	5-3453	8008	RETAINER; VALVE	000000	000000
5345380100	5-3453	8010	PLATE; THROTTLE	000043	000000
5345380110	5-3453	8011	RING; THROTTLE V	000000	000000
5345380150	5-3453	8015	RETAINER; SLEEVE	000000	000000
5345390100	5-3453	9010	BOLT; VALVE BODY	000000	000000
5345480070	5-3454	8007	SEAL, TYPE OIL	000000	000000
5345480110	5-3454	8011	PLATE; DETENT SP	000001	000004
5345490090	5-3454	9009	PACKING; O-RING	000005	000000
5345490130	5-3454	9013	BOLT; SOCKET	000000	000000
5362150030	5-3621	5003	SPACER, PILOT BR	000002	000000
5362310050	5-3623	1005	GEAR; INPUT TRANSFER	000000	000000
5362310051	5-3623	1005	GEAR; INPUT TRANSFER	000000	000000
5362310052	5-3623	1005	GEAR; INPUT TRANSFER	000000	000000
5362610041	5-3626	1004	HUB, CLUTCH, TRAN	000000	000000
5362620031	5-3626	2003	SLEEVE, 4X2-4X4	000000	000000
5362620032	5-3626	2003	SLEEVE, 4X2-4X4	000000	000000
5362620033	5-3626	2003	SLEEVE, 4X2, 4X4	000000	000000
5362620034	5-3626	2003	SLEEVE, 4X2, 4X4	000000	000000
5362710110	5-3627	1011	GEAR; CTR TRF	000000	000000
5362710111	5-3627	1011	GEAR; CTR TRF	000000	000000
5362790030	5-3627	9003	WASHER, THRUST, C	000000	000000
5363550050	5-3635	5005	PIECE, DIST, BRG	000000	000000

5363550060	5-3635	5006	SPACER, SPEEDOME	000000	000000
5363790020	5-3637	9002	WASHER, THRUST, O	000000	000000
5381100010	5-3811	0001	CASE; BRG, PTO	000000	000000
5381100051	5-3811	0005	CASE; BEARING	000000	000000
5381830030	5-3818	3003	PACKING; COVER	000000	000000
5382410010	5-3824	1001	GEAR; P.T.O.	000000	000000
5382410021	5-3824	1002	GEAR; CRANKSHAFT	000000	000000
5382410130	5-3824	1013	GEAR; IDLE DRIVEN P.T.O.	000000	000000
5382410142	5-3824	1014	SUPERSEDED**GEAR	000000	000000
5382410151	5-3824	1015	GEAR; CRANK P.T.O.	000000	000000
5423150291			DRUM; BRK RR	000000	000000
5423160090			HUB & DISC ASM.	000000	000000
5423190030			COVER; ADJ HOLE	000000	000000
5423190061			SPLASH SHIELDS FOR BRAKES	000000	000000
5423190071			SPLASH SHIELDS FOR BRAKES	000000	000000
5423290010	5-4232	9001	PIECE; DIST. FRT	000000	000004
5423310120			R. PIN STUD	000000	000000
5423310121			STUD; WHEEL	000000	000000
5423310122			STUD, RR WHEEL	000000	000000
5423310123			PIN/STUD; RR WHEEL, (RH)	000000	000038
5423310141			R. FRT LUG STUDS	000000	000000
5423320151			L. FRT LUG STUDS	000000	000000
5423330080			R. FRT LUG NUTS	000000	000000
5423340020			L. FRT LUG NUTS	000000	000003
5441200080			HORN BAR	000000	000000
5441300650			UNIVERSAL JOINT	000000	000000
5441300651			UNIVERSAL JOINT	000000	000001
5443510760			LINK; DRAG	000000	000000
5445290050			GASKET;	000000	000000
5461290010			PINS	000000	000000
5461510734	5-4615	1073	CABLE ASM; RR, PARKIN	000000	000000
5462100053	5-4621	0005	DRUM	000000	000000
5462190010	5-4621	9001	COVER; DRUM ADJ	000000	000020
5462200010	5-4622	0001	SHOE ASM; BRAKE	000000	000000
5462200011	5-4622	0001	SHOE ASM; BRAKE	000000	000000
5462200012	5-4622	0001	SHOE ASM; BRAKE	000000	000000
5462510070	5-4625	1007	STRUT; PRK BRK	000000	000005
5471003190			BRAKE ASSY	000000	000000
5471100592			SHOE ASM; BRK	000000	000010
5471500570			COVER ASM; RR, BR	000000	000000
5471500580			COVER ASM; RR, BR	000000	000000
5471650250	5-4716	5025	SCREW ASM; ADJ.	000000	000032
5471690020	5-4716	9002	GROMMET; ADJUST	000020	000084
5473190050			SEAL; RUBBER	000000	000000
5474110110			PIPES	000000	000000
5474115840			PIPE	000000	000000
5474115860			PIPE	000000	000000

5474115870		PIPE; BRAKE LH	000000	000000
5474145850		PIPE	000000	000000
5474310711		PIPE ASM; AIR	000000	000000
5474311010	5-4743 1101	PIPE ASM.; VACUUM	000000	000000
5474311080	5-4743 1108	PIPE ASM; VACUUM	000000	000000
5474311220	5-4743 1122	PIPE ASM.; VACUUM	000000	000000
5474312480	5-4743 1248	PIPE ASM; VACUUM	000000	000000
5475700201	5-4757 0020	CYLIN	000000	000000
5475700221		SLAVE CYL	000000	000000
5476600290		INDICATOR	000000	000000
5478000103		MASTER VAC ASM	000000	000000
5478000300		MASTER VAC	000000	000000
5512200280		LINK COMPL; UPR	000000	000000
5512610050		FRT. TORSION BARS	000000	000000
5512610060		FTR. TORSION BARD	000000	000000
5513002900		5 LEAF SPRING	000000	000000
5513390030	5-5133 9003	GASKET	000000	000000
5513610081		FRT. SPRING PINS W/NUTS	000000	000000
5513910140		BUMPERS WITH HARDWARE	000000	000000
5517230930	5-5172 3093	SPRING	000000	000000
5532150300	5-5321 5030	RUBBER; SUPPORT	000064	000000
5532150310	5-5321 5031	SUPPORT RUBBER	000000	000025
5532150320	5-5321 5032	SUPPORT RUBBER	000000	000007
5532150440	5-5321 5044	SUPPORT; RUBBER	000001	000000
5532210201		BRACKET; ENG. MT.	000000	000000
5532250430		RUBBER; SUPPORT	000000	000000
5532510222		BRACKET ASSY.	000001	000000
5534590300		RUBBER; FRT BODY	000000	000000
5534590310		RUBBER; FRT. BODY	000000	000000
5534910020		MUD COVER ASSY	000000	000000
5621006520		PANEL; SIL. LINER	000000	000000
5621006530		PANEL; SIL LINER	000000	000000
5629000530		STAY; BATTERY	000000	000000
5629000583		METAL BATTERY TRAY	000000	000000
5629001820		BRACKET; SURGE TANK	000000	000000
5640001601		DOOR PASS	000000	000000
5640001611		DOOR ASM (LH)	000000	000000
5661000672		BRACKET; RR LIC.	000000	000000
5661000932		BOLSTER; REAR IN.	000000	000000
5665002660		PANEL, RR GATE	000000	000000
5665002670		GATE ASM; RR	000000	000000
5712300672		BAR; BACK, FRT.	000000	000000
5715100430		MOLDING; DRIP F.	000000	000000
5715100440		MOLDING; DRIP F.	000000	000000
5717301650		MIRROR ASM	000000	000000
5717301651	5-7173 0165	MIRROR ASM	000000	000000
5733100531		RAD; TRIM ROOF	000000	000000

5741100180		REST ARM; FRT.	000000	000000
5741370010		PULL HANDLE ASSY	000000	000000
5741370011		HANDLE; PULL, DOOR	000000	000000
5743170050		GLASS RUN	000000	000000
5743170060		GLASS RUN	000000	000000
5744100321		REGULATOR ASM.	000000	000000
5744100331		REGULATOR WITH WINDOWS	000000	000000
5744200542		CHANNEL ASM.	000000	000000
5744200552		CHANNEL ASM.	000000	000000
5745200050		STRIKER; DOOR	000000	000000
5746100220		HANDLE ASSY.; OUT.	000000	000000
5749170020		RUBBER	000000	000000
5755100091		ADJUSTER; SET	000000	000000
5761100490		GLASS; WINDSHIELD	000000	000000
5761400401		GLASS RH-DOOR	000000	000000
5761400411		GLASS LH-DOOR	000000	000000
5762100320	5-7621 0032	MARK; ISUZU	000000	000000
5763470080		GRILLE	000000	000000
5767100711		SEAL; WAIST FRT	000000	000000
5767101201		SEAL; DOOR WAIST	000000	000000
5767101211		SEAL; DOOR WAIST	000001	000000
5767170070		DOOR SEAL	000000	000000
5767170080		DOOR SEAL	000000	000000
5767370420		WAIST SEAL	000000	000000
5767370430		WAIST SEAL	000000	000000
5791300200	5-7913 0020	LOCK SET; CYLINDER	000000	000000
5791300201	5-7913 0020	LOCK SET; CYLINDER	000000	000000
5793100040		LOCK; ENG. HOOD	000000	000000
5799300222		COVER; WHEEL ARC.	000000	000000
5799300232		COVER; WHEEL ARC.	000000	000000
5809002380	5-8090 0238	BOLT	000000	000000
5809002390	5-8090 0239	BOLT	000000	000000
5809002400	5-8090 0240	BOLT	000000	000000
5811000192	5-8110 0019	STARTER	000000	000000
5811000252	5-8110 0025	STARTER ASM	000000	000000
5811000360	5-8110 0036	STARTER ASM	000000	000000
5811000382	5-8110 0038	STARTER; NIKKO	000000	000001
5811000420	5-8110 0042	STARTER	000000	000000
5811000480	5-8110 0048	STARTER; HITACHI	000000	000000
5811000571	5-8110 0057	STARTER; HITACHI	000000	000000
5811000740	5-8110 0074	STARTER; HITACHI	000000	000000
5811000801	5-8110 0080	STARTER ASM	000000	000002
5811000870	5-8110 0087	STARTER; 12V 2KW	000000	000000
5811000932	5-8110 0093	STARTER	000000	000000
5811000990	5-8110 0099	STARTER	000000	000000
5811000991	5-8110 0099	STARTER; HITACHI	000000	000000
5811001081	5-8110 0108	STARTER; 12V 2.5KW	000000	000001

5811001112	5-8110	0111	STARTER; HITACHI	000000	000001
5811001180	5-8110	0118	STARTER	000000	000000
5811001282	5-8110	0128	STARTER; HITACHI	000000	000001
5811001292	5-8110	0129	STARTER; 24V/ 3.5KW	000000	000000
5811001330	5-8110	0133	STARTER; NIKKO	000000	000000
5811001400			STARTER	000000	000000
5811001560	5-8110	0156	STARTER; NIKKO	000000	000000
5811001621	5-8110	0162	STARTER ASM	000000	000000
5811001633	5-8110	0163	STARTER	000000	000001
5811001640	5-8110	0164	STARTER; NIKKO	000000	000000
5811001661	5-8110	0166	STARTER; 12V 2KW	000000	000000
5811001662	5-8110	0166	STARTER; 12V 2KW	000000	000000
5811001663	5-8110	0166	STARTER; 12V 2KW	000000	000000
5811001664	5-8110	0166	STARTER; 12V 2KW	000000	000004
5811001690	5-8110	0169	STARTER; ECR	000000	000000
5811001691	5-8110	0169	STARTER; ECR	000000	000000
5811001692	5-8110	0169	STARTER; ECR	000000	000000
5811001693	5-8110	0169	STARTER; ECR	000000	000000
5811001710	5-8110	0171	STARTER; NIKKO	000000	000000
5811001721	5-8110	0172	STARTER; NIKKO	000000	000000
5811001742	5-8110	0174	STARTER; NIKKO	000000	000000
5811001790	5-8110	0179	STARTER; NIKKO	000000	000002
5811001820	5-8110	0182	STARTER; NIKKO	000000	000000
5811001910	5-8110	0191	STARTER; HITACHI	000000	000000
5811001921	5-8110	0192	STARTER; 12V/ 1KW	000000	000000
5811001930	5-8110	0193	STARTER; NIKKO	000000	000000
5811001982	5-8110	0198	STARTER; HITACHI	000000	000000
5811001992	5-8110	0199	STARTER; HITACHI	000001	000000
5811002070	5-8110	0207	STARTER; HITACHI	000000	000000
5811002090	5-8110	0209	STARTER	000000	000000
5811002140	5-8110	0214	STARTER; HITACHI	000000	000000
5811002151	5-8110	0215	STARTER; 12V/ .8KW	000000	000000
5811080130	5-8110	8013	BRUSH ASM 6BD1-UNLISTED	000000	000000
5811110030	5-8111	1003	YOKE; STARTER	000000	000000
5811110040	5-8111	1004	HOUSING; STARTER	000000	000000
5811110060	5-8111	1006	YOKE SUB ASM	000000	000000
5811110070	5-8111	1007	YOKE ASM	000000	000000
5811110080	5-8111	1008	YOKE ASM; STARTE	000004	000001
5811110100	5-8111	1010	YOKE ASM, STARTE	000000	000000
5811110110	5-8111	1011	YOKE ASM; STARTER	000000	000000
5811120060	5-8111	2006	COIL**DISCONTINUED**	000000	000000
5811120070	5-8111	2007	COIL; FIELD	000000	000000
5811120100	5-8111	2010	COIL; FIELD	000003	000000
5811120110	5-8111	2011	COIL; FIELD STARTER 3AB1	000000	000000
5811120120	5-8111	2012	COIL; FIELD	000000	000000
5811120130	5-8111	2013	COIL; FIELD	000000	000000
5811120140	5-8111	2014	COIL; FIELD	000000	000000

5811120150	5-8111	2015	COIL; FIELD	000000	000001
5811120160	5-8111	2016	COIL; FIELD	000000	000000
5811120190	5-8111	2019	COIL; FIELD	000000	000000
5811120200	5-8111	2020	COIL; FIELD C240	000000	000000
5811120201	5-8111	2020	COIL; FIELD C240	000001	000000
5811120220	5-8111	2022	SOLENOID	000000	000000
5811120250	5-8111	2025	COIL; FIELD	000000	000000
5811120270	5-8111	2027	COIL	000000	000000
5811120290	5-8111	2029	COIL; FIELD	000001	000000
5811120300	5-8111	2030	COIL; FIELD	000000	000000
5811120310	5-8111	2031	COIL; FIELD	000001	000000
5811120340	5-8111	2034	COIL; FIELD	000000	000000
5811120380	5-8111	2038	COIL FIELD 3KC1	000000	000000
5811120520	5-8111	2052	CASE; GEAR	000000	000000
5811130110	5-8111	3011	CASE ASM.;GEAR	000000	000000
5811130120	5-8111	3012	BRACKET ASSY;FRONT	000000	000000
5811130130	5-8111	3013	CASE ASM.;GEAR	000000	000000
5811130150	5-8111	3015	CASE ASM.; GEAR, START	000000	000000
5811130160	5-8111	3016	BRACKET ASM.;FRONT	000000	000000
5811130190	5-8111	3019	HOUSING; SUB	000000	000000
5811130210	5-8111	3021	HOUSING;STARTER	000002	000000
5811130250	5-8111	3025	CASE ASM; GEAR	000000	000000
5811130260	5-8111	3026	CASE ASM; GEAR	000021	000000
5811130290	5-8111	3029	SUPERSEDED**CASE	000000	000000
5811130300	5-8111	3030	CASE ASM.; GEAR	000000	000000
5811130320	5-8111	3032	BRACKET	000000	000000
5811130330	5-8111	3033	COVER ASM.;CENTER	000000	000000
5811130340	5-8111	3034	CASE ASM; GEAR C240	000000	000000
5811130360	5-8111	3036	HOUSING ASM,STA	000000	000000
5811130400	5-8111	3040	BRACKET; FRONT	000000	000000
5811130410	5-8111	3041	BRACKET; FRONT	000000	000000
5811130420	5-8111	3042	BRACKET; CENTER	000000	000000
5811130430	5-8111	3043	BRACKET; CENTER	000000	000000
5811130470	5-8111	3047	BRACKET; CENTER	000000	000000
5811130480	5-8111	3048	BRACKET; CENTER	000000	000000
5811130510	5-8111	3051	CASE; GEAR	000000	000000
5811130530	5-8111	3053	CASE; GEAR	000000	000000
5811130540	5-8111	3054	COVER ASM.;FRONT	000000	000000
5811130550	5-8111	3055	BRACKET; FRONT	000000	000000
5811130570	5-8111	3057	CASE ASM.; GEAR	000000	000000
5811130630	5-8111	3063	CASE ASM; GEAR	000000	000000
5811130790	5-8111	3079	CASE ASM; GEAR	000000	000000
5811140110	5-8111	4011	BRACKET ASM; CENTER	000000	000000
5811140190	5-8111	4019	BRACKET ASM; CENTER C240	000000	000000
5811140230	5-8111	4023	COVER ASM; CENTER	000000	000000
5811150030	5-8111	5003	COVER*DISCONTINUED*	000000	000000
5811150080	5-8111	5008	FRAME; END, START	000000	000000

5811150090	5-8111	5009	BRACKET ASM REAR	000000	000000
5811150100	5-8111	5010	COVER ASM;RR ST	000000	000000
5811150120	5-8111	5012	COVER;REAR ASSY.	000000	000000
5811150130	5-8111	5013	COVER ASM; REAR, 3AB1	000000	000000
5811150140	5-8111	5014	BRACKET*DISCONTINUED*	000000	000000
5811150170	5-8111	5017	HOLDER ASM; BRUSH	000000	000000
5811150270	5-8111	5027	FRAME;END.START	000000	000000
5811150280	5-8111	5028	COVER; REAR	000000	000000
5811150290	5-8111	5029	COVER; REAR	000000	000000
5811150300	5-8111	5030	COVER; REAR	000000	000005
5811150320	5-8111	5032	COVER ASM; REAR C240	000000	000000
5811150400	5-8111	5040	BRACKET ASM; REAR	000000	000000
5811150410	5-8111	5041	BRACKET REAR	000000	000000
5811150460	5-8111	5046	BRACKET ASM; REAR	000000	000000
5811150520	5-8111	5052	COVER ASM; REAR	000000	000000
5811150540	5-8111	5054	COVER ASM.; REAR	000000	000000
5811150590	5-8111	5059	COVER KIT; DUST	000000	000000
5811160050	5-8111	6005	BRUSH; STARTER (DISCONTIN	000000	000000
5811160080	5-8111	6008	BRUSH, (+), START	000000	000023
5811160090	5-8111	6009	BRUSH, (-), START	000006	000000
5811160100	5-8111	6010	HOLDER; BRUSH (-)	000000	000000
5811160110	5-8111	6011	BRUSH (+)	000000	000000
5811160130	5-8111	6013	BRUSH (-)	000000	000000
5811160170	5-8111	6017	HOLDER; BRUSH	000000	000000
5811160180	5-8111	6018	BRUSH (+)	000003	000000
5811160190	5-8111	6019	BRUSH (-)	000000	000000
5811160200	5-8111	6020	HOLDER ASM; BRUSH	000001	000000
5811160210	5-8111	6021	HOLDER ASM; BR	000000	000000
5811160230	5-8111	6023	BRUSH	000000	000000
5811160240	5-8111	6024	BRUSH (+) C240	000000	000000
5811160250	5-8111	6025	BRUSH (-)	000000	000000
5811160261	5-8111	6026	BRUSH (-)	000000	000000
5811160270	5-8111	6027	BRUSH (+)	000000	000000
5811160280	5-8111	6028	WIRE; LEAD	000000	000000
5811160290	5-8111	6029	BRUSH (+)	000000	000000
5811160300	5-8111	6030	BRUSH (-)	000004	000000
5811160310	5-8111	6031	BRUSH; STARTER	000006	000000
5811160320	5-8111	6032	BRUSH; STARTER	000025	000000
5811160380	5-8111	6038	BRUSH ASM.	000000	000000
5811160390	5-8111	6039	BRUSH ASM	000000	000000
5811160400	5-8111	6040	BRUSH, YOKE, STAR	000000	000000
5811160450	5-8111	6045	BRUSH (+)	000000	000000
5811160470	5-8111	6047	BRUSH (-)	000000	000000
5811160480	5-8111	6048	BRUSH (+/-) C240	000012	000000
5811160490	5-8111	6049	BRUSH (+/-) C240	000000	000000
5811160520	5-8111	6052	HOLDER ASM; BRUSH	000000	000000
5811160530	5-8111	6053	BRUSH (+)	000000	000000

5811160540	5-8111	6054	BRUSH (+)	000000	000000
5811160550	5-8111	6055	STATOR KIT	000000	000000
5811160560	5-8111	6056	BRUSH (-) 3KC1	000000	000000
5811170010	5-8111	7001	SPRING, BRUSH, ST	000000	000000
5811170060	5-8111	7006	SPRING; BRUSH, STARTER	000022	000000
5811170070	5-8111	7007	SPRING; BRUSH, HOLDER STRTR	000000	000000
5811170120	5-8111	7012	SPRING; BRUSH C240	000000	000000
5811170140	5-8111	7014	SPRING; BRUSH	000000	000000
5811170150	5-8111	7015	SPRING, BRUSHING	000000	000012
5811170190	5-8111	7019	SPRING; BRUSH	000022	000000
5811170210	5-8111	7021	SPRING; BRUSH	000000	000000
5811170240	5-8111	7024	SPRING; BRUSH	000004	000000
5811180020	5-8111	8002	HOLDER ASM; BRUSH	000038	000000
5811180050	5-8111	8005	HOLDER; STARTER, NIKKO 2A	000000	000000
5811180120	5-8111	8012	HOLDER ASM; BRUSH C240	000000	000000
5811180130	5-8111	8013	HOLDER ASM; BRUS	000001	000005
5811180140	5-8111	8014	HOLDER; BRUSH (+)	000000	000000
5811180150	5-8111	8015	HOLDER; BRUSH (-)	000000	000000
5811180180	5-8111	8018	HOLDER; BRUSH	000000	000000
5811180190	5-8111	8019	HOLDER	000000	000000
5811180200	5-8111	8020	HOLDER ASM C240	000000	000001
5811180210	5-8111	8021	HOLDER ASM, BRUS	000000	000006
5811180220	5-8111	8022	HOLDER ASM; BRUSH STARTER	000000	000000
5811180240	5-8111	8024	HOLDER ASM; BRUSH	000000	000000
5811180290	5-8111	8029	HOLDER ASM; BRUSH	000000	000000
5811180320	5-8111	8032	COVER; DUST	000000	000000
5811180350	5-8111	8035	HOLDER ASM; BRUSH	000000	000000
5811180380	5-8111	8038	HOLDER ASM; BRUSH 3KC1	000000	000008
5811190010	5-8111	9001	BRUSH SET	000000	000000
5811190040	5-8111	9004	BRUSH; STARTER 2AB1	000000	000000
5811190060	5-8111	9006	BEARING; CENTER, STARTER	000000	000000
5811190070	5-8111	9007	BUSH; STARTER	000000	000000
5811190080	5-8111	9008	BUSHING; CENTER	000003	000000
5811190100	5-8111	9010	HOLDER ASM; BRUSH (+)	000000	000000
5811190120	5-8111	9012	METAL BRG	000000	000000
5811190130	5-8111	9013	BEARING ASM; CENTER	000000	000000
5811190140	5-8111	9014	SEAL KIT; STARTER	000000	000000
5811190150	5-8111	9015	BRUSH (+); STARTER	000000	000000
5811190160	5-8111	9016	BRUSH (-); STARTER	000000	000000
5811190170	5-8111	9017	METAL; REAR BUSH	000000	000000
5811190180	5-8111	9018	METAL; FRONT C240	000000	000006
5811190190	5-8111	9019	O-RING	000000	000000
5811190200	5-8111	9020	BUSHING; STARTER 2AA/2AB1	000000	000000
5811190260	5-8111	9026	METAL; GEAR CASE	000105	000000
5811190280	5-8111	9028	METAL; OVER	000000	000000
5811190290	5-8111	9029	CAP; RUBBER-TERMINAL	000000	000000
5811190320	5-8111	9032	HOUSING; CENTER	000000	000000

5811190330	5-8111	9033	BRUSH ASM.	000012	000000
5811190400	5-8111	9040	GEAR; METAL CASE	000000	000000
5811190410	5-8111	9041	COVER KIT; DUST 3KC1	000005	000000
5811191190	5-8111	9119	SPRING	000000	000000
5811210030	5-8112	1003	ARMATURE ASM.	000000	000000
5811210070	5-8112	1007	ARMATURE; STARTER 2AB1	000000	000000
5811210090	5-8112	1009	ARMATURE; STARTER	000000	000000
5811210100	5-8112	1010	ARMATURE	000000	000000
5811210110	5-8112	1011	ARMATURE	000000	000000
5811210130	5-8112	1013	ARMATURE ASM.; ST	000000	000000
5811210140	5-8112	1014	ARMATURE	000000	000000
5811210150	5-8112	1015	ARMATURE	000000	000000
5811210160	5-8112	1016	ARMATURE ASM, ST	000000	000000
5811210170	5-8112	1017	ARMATURE ASM; START	000000	000000
5811210180	5-8112	1018	ARMATURE ASM	000001	000000
5811210200	5-8112	1020	ARMATURE ASM.	000000	000000
5811210210	5-8112	1021	ARMATURE ASM	000000	000000
5811210220	5-8112	1022	ARMATURE	000000	000000
5811210221	5-8112	1022	ARMATURE; STARTER	000001	000001
5811210230	5-8112	1023	ARMATURE	000000	000000
5811210260	5-8112	1026	ARMATURE	000000	000000
5811210270	5-8112	1027	ARMATURE ASM C240	000006	000000
5811210290	5-8112	1029	ARMATURE ASM, ST	000000	000006
5811210310	5-8112	1031	ARMATURE ASM; STARTER	000000	000000
5811210350	5-8112	1035	ARMATURE ASM.	000000	000000
5811210370	5-8112	1037	ARMATURE ASM.	000000	000000
5811210390	5-8112	1039	ARMATURE ASM.	000000	000000
5811210400	5-8112	1040	ARMATURE ASM.	000000	000010
5811210430	5-8112	1043	ARMATURE ASM.	000000	000000
5811210460	5-8112	1046	ARMATURE ASM. 3KC1	000000	000000
5811220030	5-8112	2003	CLUTCH ASM; PINION	000000	000000
5811220050	5-8112	2005	PINION ASM.	000001	000000
5811220070	5-8112	2007	****DISCONTINUED****	000000	000000
5811220090	5-8112	2009	CLUTCH ASM; PINION	000000	000000
5811220110	5-8112	2011	CLUTCH ASM; PINION	000000	000000
5811220150	5-8112	2015	CLUTCH, STARTER	000000	000000
5811220160	5-8112	2016	CLUTCH ASM 6BD1	000002	000001
5811220170	5-8112	2017	PINION ASM	000000	000000
5811220250	5-8112	2025	SHAFT; PINION	000000	000000
5811220270	5-8112	2027	CLUTCH ASM; PINION C240	000002	000000
5811230040	5-8112	3004	PINION ASM.	000000	000000
5811230060	5-8112	3006	CLUTCH ASM; PINION	000000	000000
5811230070	5-8112	3007	PINION	000001	000000
5811230080	5-8112	3008	PINION *DISCONTINUED*	000000	000000
5811230100	5-8112	3010	GEAR, PINION	000000	000000
5811230110	5-8112	3011	GEAR, PINION	000000	000000
5811230150	5-8112	3015	CLUTCH ASM; PINION	000000	000004

5811230160	5-8112	3016	GEAR; IDLE	000000	000000
5811230170	5-8112	3017	STARTER DRIVE C240	000000	000000
5811230180	5-8112	3018	PINION; STARTER	000000	000005
5811230190	5-8112	3019	CLUTCH ASM; PINION	000000	000000
5811230200	5-8112	3020	SHAFT ASM.	000000	000000
5811230270	5-8112	3027	CLUTCH ASM; PINION	000000	000000
5811230280	5-8112	3028	CLUTCH ASM.; PINION	000000	000000
5811230330	5-8112	3033	CLUTCH ASM; PINION	000000	000000
5811230340	5-8112	3034	CLUTCH ASM; PINION	000000	000000
5811230350			CLUTCH ASM	000000	000000
5811230360	5-8112	3036	PINION ASM; STARTER 2KC1	000000	000001
5811240010	5-8112	4001	CLIP C240	000000	000007
5811240020	5-8112	4002	CLUTCH ASM; PINION	000000	000000
5811240030	5-8112	4003	CLUTCH, STARTER	000000	000000
5811240031	5-8112	4003	CLUTCH, STARTER	000000	000000
5811240040	5-8112	4004	CLU.ASM;	000002	000001
5811240050	5-8112	4005	CLUTCH ASM; PINION	000000	000000
5811240060	5-8112	4006	CLUTCH ASM, STAR	000000	000000
5811240300	5-8112	4030	CLUTCH, STARTER	000000	000000
5811260020	5-8112	6002	BRUSH; STARTER	000000	000000
5811270030	5-8112	7003	LEVER	000000	000000
5811270060	5-8112	7006	PIN; SHIFT LEVER ASM	000000	000000
5811270070	5-8112	7007	LEVER; SHIFT	000000	000000
5811270090	5-8112	7009	LEVER; DRIVE	000000	000000
5811270100	5-8112	7010	LEVER; SHIFT	000000	000000
5811270110	5-8112	7011	LEVER ASM; SHIFT	000000	000000
5811270130	5-8112	7013	LEVER SET; SHIFT	000026	000051
5811270140	5-8112	7014	LEVER; SHIFT	000000	000000
5811270160	5-8112	7016	LEVER; SHIFT	000002	000000
5811270170	5-8112	7017	LEVER; SHIFT C240	000003	000000
5811270210	5-8112	7021	LEVER SET; STARTER	000000	000000
5811270270	5-8112	7027	LEVER SET; SHIFT	000000	000003
5811270310	5-8112	7031	LEVER KIT; SHIFT 3KC1	000002	000000
5811280250	5-8112	8025	PACKING; STARTER 2AB1	000000	000000
5811280260	5-8112	8026	STOPPER; PINION 2AB1	000000	000000
5811280270	5-8112	8027	WASHER; THRUST FRONT	000000	000000
5811280280	5-8112	8028	WASHER; ADJ	000000	000000
5811280290	5-8112	8029	O-RING	000000	000000
5811280330	5-8112	8033	WASHER; STARTER CORE	000003	000000
5811280340	5-8112	8034	WASHER; STARTER CORE, 4BB1	000000	000000
5811290030	5-8112	9003	WASHER KIT, THRU	000357	000000
5811290060	5-8112	9006	BOLT; THROUGH	000000	000000
5811290110	5-8112	9011	BOLT; CASE	000000	000000
5811290180	5-8112	9018	BOLT; THROUGH	000000	000000
5811290190	5-8112	9019	CLUTCH ASM; PINION	000000	000000
5811290220	5-8112	9022	WASHER; SEAL	000000	000000
5811290230	5-8112	9023	PACKING; O-RING SWITCH BR	000000	000000

5811290240	5-8112	9024	SCREW; DISH	000000	000000
5811290340	5-8112	9034	BOLT; THROUGH	000000	000000
5811290350	5-8112	9035	SCREW; SEMS	000000	000000
5811290370	5-8112	9037	STOPPER; PINION	000000	000016
5811290380	5-8112	9038	NUT; HEX, STARTER	000000	000000
5811290390	5-8112	9039	LEVER; PIVOT	000000	000000
5811290400	5-8112	9040	COVER; PLUNGER	000000	000000
5811290410	5-8112	9041	RING; SNAP (DISCONTINUED)	000000	000000
5811290420	5-8112	9042	COLLAR; STOP	000000	000000
5811290430	5-8112	9043	TUBE; INSULATION	000000	000000
5811290440	5-8112	9044	CONNECTING TUBE; STARTER	000000	000000
5811290450	5-8112	9045	O-RING	000000	000000
5811290460	5-8112	9046	WASHER; ADJ	000000	000000
5811290470	5-8112	9047	COVER	000000	000000
5811290480	5-8112	9048	SCREW	000000	000000
5811290490	5-8112	9049	BOLT	000000	000000
5811290500	5-8112	9050	SCREW; SEMS, FUEL	000000	000000
5811290510	5-8112	9051	STARTER; COVER	000000	000000
5811290520	5-8112	9052	BOLT	000000	000000
5811290530	5-8112	9053	WIRE; CONN	000000	000000
5811290540	5-8112	9054	BOLT	000000	000000
5811290550	5-8112	9055	STOPPER; PINION C240	000000	000009
5811290560	5-8112	9056	WASHER; THRUST	000000	000000
5811290580	5-8112	9058	BOLT; THROUGH	000000	000000
5811290610	5-8112	9061	BOLT; THROUGH	000000	000000
5811290650	5-8112	9065	WASHER; THROUGH BOLT	000000	000000
5811290660	5-8112	9066	WASHER; THRUST FRONT	000000	000000
5811290670	5-8112	9067	WASHER; THRUST REAR	000000	000000
5811290680	5-8112	9068	COVER SET; DUST	000030	000000
5811290690	5-8112	9069	COVER; TERMINAL	000002	000000
5811290710	5-8112	9071	BOLT; THROUGH	000000	000000
5811290730	5-8112	9073	WASHER; THROUGH BOLT	000005	000000
5811290750	5-8112	9075	WASHER; THRUST REAR	000000	000000
5811290760	5-8112	9076	WASHER; THRUST REAR	000000	000000
5811290770	5-8112	9077	WASHER; THRUST FRONT	000000	000000
5811290790	5-8112	9079	BRAKE; SPRING	000000	000000
5811290800	5-8112	9080	BEARING; CENTER	000000	000000
5811290810	5-8112	9081	BOLT; HEX	000000	000000
5811290820	5-8112	9082	NUT; HEX	000000	000000
5811290830	5-8112	9083	SCREW; SEMS	000000	000000
5811290840	5-8112	9084	NUT; PINION STOPPER	000000	000000
5811290850	5-8112	9085	SNAP; RING	000000	000000
5811290860	5-8112	9086	SCREW	000000	000000
5811290870	5-8112	9087	WASHER	000000	000000
5811290880	5-8112	9088	O-RING	000000	000000
5811290890	5-8112	9089	O-RING; REAR COVER CORE	000000	000000
5811290900	5-8112	9090	BOLT; THROUGH	000000	000000

5811290910	5-8112	9091	SPRING; BRUSH	000000	000000
5811290920	5-8112	9092	BALL; STEEL, STARTER	000140	000350
5811290930	5-8112	9093	HOUSING; STARTER	000000	000000
5811290940	5-8112	9094	BOLT; THROUGH	000000	000000
5811290950	5-8112	9095	SCREW, SEMS, HOUS	000000	000025
5811290960	5-8112	9096	SPRING; CLUTCH, STARTER	000001	000020
5811290970	5-8112	9097	SEAL; FELT	000004	000000
5811290980	5-8112	9098	PACKING; RUBBER	000000	000000
5811290990	5-8112	9099	ROLLER; CLUTCH, STARTER	000116	000038
5811291000	5-8112	9100	RETAINER; PINION STARTER	000022	000000
5811291050	5-8112	9105	STOPPER SET	000140	000000
5811291070	5-8112	9107	WASHER	000000	000000
5811291090	5-8112	9109	METAL; CENTER (DISCONTINU	000000	000000
5811291110	5-8112	9111	SHAFT ASM; GEAR	000000	000000
5811291120	5-8112	9112	WASHER; THRUST	000000	000000
5811291130	5-8112	9113	BEARING; BALL	000000	000000
5811291140	5-8112	9114	BEARING; BALL	000000	000000
5811291160	5-8112	9116	SEAL; OIL	000000	000000
5811291190	5-8112	9119	SPRING; MAG/PINION STARTER	000000	000040
5811291200	5-8112	9120	ROLLER; CLUTCH	000000	000000
5811291210	5-8112	9121	RETAINER; CLU. ROLLER, START	000000	000000
5811291220	5-8112	9122	CVR; END FRAME S	000000	000028
5811291230	5-8112	9123	BOLT; STARTER	000000	000000
5811291240	5-8112	9124	WASHER; STARTER	000000	000000
5811291250	5-8112	9125	BOLT/SCREW; THROUGH, STARTR	000000	000000
5811291260	5-8112	9126	NUT; TERMINAL	000000	000036
5811291270	5-8112	9127	RETAINER; PINION STARTER	000000	000000
5811291280	5-8112	9128	WASH; FELT, ARMAT	000007	000000
5811291290	5-8112	9129	WASHER; TERMINAL	000000	000000
5811291300	5-8112	9130	SCREW; BRUSH HOL	000000	000000
5811291310	5-8112	9131	RING; BOLT, START	000000	000068
5811291320	5-8112	9132	SCREW; HSG START	000000	000000
5811291330	5-8112	9133	CUSHION	000000	000000
5811291340	5-8112	9134	WASHER; WAVE/TERMINAL	000000	000000
5811291350	5-8112	9135	CLIP	000000	000000
5811291360	5-8112	9136	PLATE; LK, STARTE	000000	000000
5811291390	5-8112	9139	BOLT; THROUGH	000000	000000
5811291420	5-8112	9142	PLUG; DISH	000003	000000
5811291430	5-8112	9143	METAL; COVER	000000	000000
5811291440	5-8112	9144	RING; CLIP	000037	000000
5811291450	5-8112	9145	STOPPER; PINION	000003	000000
5811291460	5-8112	9146	PLUNGER ASM.	000000	000000
5811291470	5-8112	9147	PLATE	000003	000000
5811291480	5-8112	9148	CONTACTER	000000	000000
5811291490	5-8112	9149	O-RING; CLIP	000000	000000
5811291500	5-8112	9150	TERMINAL ASM	000002	000001
5811291510	5-8112	9151	WASHER	000000	000000

5811291520	5-8112	9152	BOLT	000000	000000
5811291530	5-8112	9153	TERMINAL ASM.	000000	000000
5811291540	5-8112	9154	BOLT	000000	000000
5811291550	5-8112	9155	BEARING; BALL	000002	000000
5811291560	5-8112	9156	WASHER	000019	000000
5811291570	5-8112	9157	BOLT	000000	000000
5811291580	5-8112	9158	WASHER; INSULATE	000007	000000
5811291590	5-8112	9159	WASHER	000018	000000
5811291600	5-8112	9160	WASHER	000008	000000
5811291610	5-8112	9161	BEARING; BALL	000000	000000
5811291690	5-8112	9169	SEAL KIT	000000	000000
5811291710	5-8112	9171	METAL; CLUTCH C240	000008	000000
5811291720	5-8112	9172	BOLT; THROUGH STARTER	000003	000000
5811291730	5-8112	9173	BUSH; INSULATE	000000	000000
5811291740	5-8112	9174	WASHER; INSULATE	000000	000000
5811291750	5-8112	9175	BOLT, THROUGH	000000	000000
5811291810	5-8112	9181	SCREW; W/WASHER, RR CVR/STR	000000	000000
5811291820	5-8112	9182	SCREW; SEMS	000000	000080
5811291830	5-8112	9183	BOLT; SEMS/THROUGH STRTER	000001	000000
5811291890	5-8112	9189	METAL; CENTER	000000	000000
5811291910	5-8112	9191	PLUNGER ASM	000000	000000
5811291920	5-8112	9192	BOLT; TERMINAL	000000	000000
5811291930	5-8112	9193	CONNECTOR	000000	000000
5811291940	5-8112	9194	TERMINAL ASM.	000000	000000
5811291950	5-8112	9195	SCREW	000000	000000
5811291980	5-8112	9198	WASHER	000000	000000
5811291990	5-8112	9199	SCREW	000000	000000
5811292090	5-8112	9209	BEARING BALL	000000	000000
5811292100	5-8112	9210	PACKING; O-RING	000000	000000
5811292110	5-8112	9211	PACKING; O-RING	000000	000000
5811292120	5-8112	9212	PLATE; WASHER	000000	000000
5811292140	5-8112	9214	BOLT	000000	000000
5811292150	5-8112	9215	BEARING; BALL	000000	000000
5811292160	5-8112	9216	BEARING; BALL	000000	000000
5811292170	5-8112	9217	BEARING BALL	000000	000000
5811292200	5-8112	9220	METAL	000002	000001
5811292310	5-8112	9231	SHAFT ASM.	000000	000000
5811292370	5-8112	9237	BOLT	000000	000000
5811292390	5-8112	9239	METAL	000000	000000
5811292400	5-8112	9240	SCREW; DISH	000000	000000
5811292480	5-8112	9248	BOLT; THROUGH	000000	000025
5811292570	5-8112	9257	RETAINER; BEARING	000000	000000
5811292610	5-8112	9261	COVER SET; DUST	000000	000000
5811292620	5-8112	9262	BOLT; THROUGH, STARTER	000000	000000
5811292630	5-8112	9263	BOLT	000000	000000
5811292660	5-8112	9266	BUSH; GUM 4BD1	000000	000000
5811292690	5-8112	9269	BEARING; BALL	000001	000000

5811292700	5-8112	9270	BEARING;BALL	000000	000000
5811292780	5-8112	9278	SEAL ASM.	000000	000000
5811292830	5-8112	9283	SHAFT ASM.	000000	000000
5811292910	5-8112	9291	BOLT; THROUGH	000000	000000
5811292930	5-8112	9293	BOLT; THROUGH	000000	000000
5811292940	5-8112	9294	BOLT*	000000	000000
5811299320	5-8112	9932	SCREW	000000	000000
5811510020	5-8115	1002	SWITCH; MAG.	000000	000000
5811510030	5-8115	1003	SWITCH	000000	000000
5811510070	5-8115	1007	SWITCH; MAGNETIC STARTER	000000	000000
5811510090	5-8115	1009	SWITCH ASM; MAGNETIC	000000	000000
5811510100	5-8115	1010	SWITCH ASM; MAGNETIC, STA	000001	000000
5811510110	5-8115	1011	SWITCH*DISCONTINUED*	000000	000000
5811510120	5-8115	1012	SWITCH; MAGNETIC	000000	000000
5811510130	5-8115	1013	SWITCH ASM; MAGNETIC STAR	000001	000000
5811510150	5-8115	1015	SWITCH	000000	000000
5811510170	5-8115	1017	SWITCH ASM; MAGNETIC	000000	000000
5811510190	5-8115	1019	SWITCH ASM; MAGNETIC	000001	000000
5811510210	5-8115	1021	SWITCH; MAG.	000000	000000
5811510270	5-8115	1027	SWITCH ASM	000000	000000
5811510280	5-8115	1028	SWITCH ASM; MAGNETIC	000000	000000
5811510290	5-8115	1029	SWITCH	000039	000000
5811510300	5-8115	1030	SWITCH ASM; MAGNETIC	000000	000000
5811510310	5-8115	1031	SWITCH ASM; MAGNETIC	000000	000000
5811510320	5-8115	1032	SWITCH ASM	000000	000000
5811510330	5-8115	1033	SWITCH ASM; MAGNETIC	000000	000000
5811510340	5-8115	1034	SWITCH ASM; MAGNETIC	000000	000000
5811510360	5-8115	1036	SWITCH ASM MAGN	000001	000003
5811510370	5-8115	1037	SWITCH ASM; MAGNETIC	000000	000000
5811510380	5-8115	1038	SWITCH ASM; STARTER C24	000005	000000
5811510390	5-8115	1039	SWITCH ASM;	000000	000000
5811510400	5-8115	1040	SWITCH ASM C240	000000	000001
5811510401	5-8115	1040	SWITCH ASM C240	000004	000000
5811510460	5-8115	1046	SWITCH ASM; MAGNETIC	000007	000000
5811510490	5-8115	1049	SWITCH ASM; MAGNETIC	000000	000000
5811510540	5-8115	1054	SWITCH ASM; MAGNETIC	000000	000001
5811510550	5-8115	1055	SWITCH ASM E120	000000	000000
5811510560	5-8115	1056	SWITCH ASM; MAGNETIC	000000	000000
5811510581	5-8115	1058	SWITCH ASM; MAGNETIC	000000	000003
5811510590	5-8115	1059	SWITCH ASM; MAGNETIC	000000	000000
5811510680	5-8115	1068	SWITCH ASM; MAGNETIC 3KC1	000000	000000
5811590040	5-8115	9004	WIRE; LEAD C240	000000	000000
5811710060	5-8117	1006	SWITCH ASM; MAGNETIC 4BB1	000002	000003
5811770070	5-8117	7007	SPRING;BRUSH HOLDER STR.	000000	000000
5811780010	5-8117	8001	WIRE*	000000	000000
5811780020	5-8117	8002	WIRE	000000	000000
5811780030	5-8117	8003	COVER; SWITCH	000000	000000

5812001000	5-8120	0100	GENERATOR; 12V 20A	000000	000000
5812001011	5-8120	0101	GENERATOR; 24V/15A	000000	000001
5812001030	5-8120	0103	GENERATOR	000000	000000
5812001090	5-8120	0109	GENERATOR; 12V/60A	000001	000000
5812001220	5-8120	0122	GENERATOR; 24V 15A	000000	000000
5812001250	5-8120	0125	GENERATOR; DENSO	000000	000000
5812001320	5-8120	0132	GENERATOR; (W/VAC) 12V 40	000001	000000
5812001330	5-8120	0133	GENERATOR; W/VAC 12V 50A	000000	000000
5812001400	5-8120	0140	GENERATOR; 12V/35A	000000	000000
5812001531	5-8120	0153	GENERATOR; HITACHI	000000	000000
5812001560	5-8120	0156	ALTERNATOR-ECR	000000	000000
5812001570	5-8120	0157	GENERATOR; 12V 40A	000000	000000
5812001631	5-8120	0163	GENERATOR; 12V 35A	000001	000000
5812001641	5-8120	0164	GENERATOR	000002	000000
5812001801	5-8120	0180	GENERATOR	000000	000000
5812001803	5-8120	0180	GENERATOR	000001	000000
5812001842	5-8120	0184	ALTERNATOR ASM.	000000	000000
5812001910	5-8120	0191	GENERATOR	000000	000000
5812002121	5-8120	0212	GENERATOR; NIKKO	000000	000001
5812002350	5-8120	0235	GENERATOR	000000	000000
5812002351	5-8120	0235	GENERATOR	000000	000000
5812002380	5-8120	0238	GENERATOR	000000	000000
5812002390	5-8120	0239	GENERATOR; W/VAC 12V 50A	000000	000004
5812002400	5-8120	0240	GENERATOR	000000	000000
5812002410	5-8120	0241	ALTERNATOR-ECR	000000	000000
5812002411	5-8120	0241	ALTERNATOR-ECR	000000	000004
5812002591	5-8120	0259	GENERATOR; NIKKO	000000	000000
5812002601	5-8120	0260	GENERATOR; (W/VAC) 12V 80	000000	000000
5812002664	5-8120	0266	GENERATOR; 12V/40A	000000	000005
5812002720	5-8120	0272	GENERATOR; 12V/20A	000000	000000
5812002730	5-8120	0273	GENERATOR; NIKKO	000000	000000
5812002751	5-8120	0275	GENERATOR; HITACHI	000000	000000
5812002831	5-8120	0283	GENERATOR; (W/VAC)	000000	000000
5812002880	5-8120	0288	GENERATOR	000000	000000
5812002892	5-8120	0289	GENERATOR	000000	000000
5812002921	5-8120	0292	GENERATOR; NIKKO	000000	000001
5812003000	5-8120	0300	GENERATOR; NIKKO	000000	000000
5812003020	5-8120	0302	GENERATOR	000000	000000
5812003030	5-8120	0303	GENERATOR; NIKKO	000000	000000
5812003163	5-8120	0316	GENERATOR	000000	000000
5812003183	5-8120	0318	GENERATOR	000000	000000
5812003231	5-8120	0323	GENERATOR; HITACHI	000000	000002
5812003300	5-8120	0330	GENERATOR: 24V/20A	000000	000000
5812003320	5-8120	0332	GENERATOR; NIKKO	000000	000000
5812003350	5-8120	0335	GENERATOR; 24V/20A	000000	000000
5812003360	5-8120	0336	GENERATOR; 24V 50A	000000	000001
5812003380	5-8120	0338	GENERATOR; 12V/35A	000000	000000

5812003400	5-8120	0340	GENERATOR; HITACHI	000000	000000
5812003410	5-8120	0341	GENERATOR; 12V/35A	000000	000000
5812003411	5-8120	0341	GENERATOR; 12V/35A	000000	000023
5812003440	5-8120	0344	GENERATOR; NIKKO	000000	000000
5812003470	5-8120	0347	GENERATOR; 12V/50A	000000	000002
5812003540	5-8120	0354	GENERATOR; HITACHI	000000	000000
5812003550	5-8120	0355	GENERATOR	000000	000000
5812003580	5-8120	0358	GENERATOR; 12V/35A	000000	000000
5812110090	5-8121	1009	STATOR ASM	000000	000000
5812110180	5-8121	1018	STATOR; GENERATOR	000000	000000
5812110190	5-8121	1019	STATOR ASM	000000	000000
5812110200	5-8121	1020	STATOR ASM.	000000	000000
5812110210	5-8121	1021	STATOR ASM C240	000000	000000
5812110230	5-8121	1023	STATOR	000000	000000
5812110240	5-8121	1024	STATOR ASM.	000000	000000
5812110250	5-8121	1025	STATOR; GENERATOR	000000	000000
5812110260	5-8121	1026	STATOR ASM.	000000	000000
5812110280	5-8121	1028	STATOR; GENERATOR	000000	000000
5812110330	5-8121	1033	STATOR ASM	000000	000001
5812110350	5-8121	1035	STATOR ASM	000000	000000
5812110370	5-8121	1037	STATOR	000000	000000
5812110390	5-8121	1039	STATOR ASM	000000	000000
5812110410	5-8121	1041	STATOR ASM C240	000001	000000
5812110450	5-8121	1045	STATOR ASM.	000000	000000
5812110480	5-8121	1048	STATOR ASM.	000000	000000
5812110530	5-8121	1053	STATOR ASM.	000000	000000
5812110580	5-8121	1058	STATOR ASM 4FB1	000001	000000
5812110591	5-8121	1059	PLATE ASM; GEN W/BEARING	000000	000000
5812110600	5-8121	1060	STATOR ASM 4BB1	000000	000003
5812110620	5-8121	1062	STATOR ASM	000000	000000
5812110640	5-8121	1064	STATOR ASM	000000	000000
5812110660	5-8121	1066	STATOR ASM.	000000	000000
5812110670	5-8121	1067	STATOR ASM.	000000	000000
5812110680	5-8121	1068	STATOR ASM 3KC1	000001	000000
5812120010	5-8121	2001	STATOR ASM; UM3KC1-MEG	000000	000000
5812130120	5-8121	3012	COVER ASM; FRONT	000000	000000
5812130130	5-8121	3013	COVER ASM; FRONT	000000	000000
5812130170	5-8121	3017	COVER ASM; FRONT C240	000000	000000
5812130180	5-8121	3018	FRAME; DRIVE END	000000	000000
5812130210	5-8121	3021	COVER ASM; FRONT UM3KC1-M	000000	000000
5812130290	5-8121	3029	FRAME/COVER ASM; FRT, GEN.	000000	000000
5812130320	5-8121	3032	FRAME ASM; DRIVE END	000000	000000
5812130350	5-8121	3035	COVER ASM; FRONT	000000	000000
5812130360	5-8121	3036	COVER ASM; FRONT	000000	000000
5812130390	5-8121	3039	BRACKET ASM; FRONT	000000	000000
5812130430	5-8121	3043	COVER ASM 3KC1	000000	000003
5812130440	5-8121	3044	BRACKET ASM; FRONT	000000	000000

5812130450	5-8121	3045	BRACKET ASM; FRONT	000000	000000
5812130470	5-8121	3047	COVER ASM; FRONT	000000	000000
5812130480	5-8121	3048	COVER ASM; FRONT-UNLISTED	000000	000000
5812130560	5-8121	3056	COVER ASM; FRONT	000000	000000
5812140010	5-8121	4001	COVER ASSY., BRU	000000	000000
5812140160	5-8121	4016	COVER ASM; REAR	000000	000000
5812140281	5-8121	4028	COVER; END RR COVER, GEN	000000	000001
5812140290	5-8121	4029	FRAME; REAR END	000000	000000
5812140300	5-8121	4030	COVER; REAR C240	000000	000000
5812140310	5-8121	4031	FRAME SUB ASM; REAR END	000000	000000
5812140330	5-8121	4033	COVER ASM; REAR	000000	000000
5812140340	5-8121	4034	COVER ASM; REAR	000000	000000
5812140350	5-8121	4035	COVER ASM; REAR	000000	000000
5812140360	5-8121	4036	COVER ASM; REAR	000000	000000
5812140380	5-8121	4038	SUB ASM; FRAME	000000	000000
5812140580	5-8121	4058	COVER; REAR	000000	000000
5812140590	5-8121	4059	COVER; FELT, WASHER, ROTOR	000000	000010
5812140610	5-8121	4061	COVER ASM; RR, GEN.	000000	000000
5812140660	5-8121	4066	FRAME SUB ASM.	000000	000000
5812140700	5-8121	4070	COVER; BRUSH ASM, ALTERNA	000000	000000
5812140760	5-8121	4076	COVER ASM; REAR	000000	000000
5812140761	5-8121	4076	COVER ASM; REAR	000000	000000
5812140780	5-8121	4078	COVER; REAR	000000	000000
5812140781	5-8121	4078	COVER; REAR	000000	000000
5812140840	5-8121	4084	BRACKET ASM; REAR	000000	000000
5812140870	5-8121	4087	BRACKET; REAR	000000	000000
5812141050	5-8121	4105	COVER; REAR	000000	000000
5812141060	5-8121	4106	BRACKET ASM; REAR	000000	000000
5812141070	5-8121	4107	BRACKET ASM.	000000	000000
5812141080	5-8121	4108	BRACKET ASM; REAR	000000	000000
5812141120	5-8121	4112	COVER; REAR	000000	000000
5812141130	5-8121	4113	BRACKET; REAR	000000	000000
5812141201	5-8121	4120	BRACKET ASM; REAR	000000	000000
5812141210	5-8121	4121	BRACKET; REAR	000000	000000
5812141211	5-8121	4121	BRACKET; REAR	000000	000000
5812141220	5-8121	4122	COVER ASM; REAR	000000	000000
5812141230	5-8121	4123	COVER ASM; REAR 4BB1	000000	000000
5812141240	5-8121	4124	COVER ASM; REAR 4BB1	000000	000000
5812141280	5-8121	4128	COVER	000000	000000
5812141310	5-8121	4131	COVER ASM; REAR	000000	000000
5812141320	5-8121	4132	COVER; REAR	000000	000001
5812141430	5-8121	4143	COVER ASM; REAR	000000	000000
5812141440	5-8121	4144	COVER; REAR	000000	000000
5812141520	5-8121	4152	COVER ASM; REAR	000000	000000
5812141530	5-8121	4153	COVER; REAR	000000	000000
5812150030	5-8121	5003	BRUSH SET	000000	000000
5812150040	5-8121	5004	WIRE ASM; LEAD	000000	000000

5812150080	5-8121	5008	HOLDER ASM; W/BRUSH	000000	000000
5812150100	5-8121	5010	HOLDER ASM; BRUSH	000000	000000
5812150110	5-8121	5011	COVER; BRUSH	000000	000000
5812150120	5-8121	5012	BRUSH	000000	000000
5812150130	5-8121	5013	BRUSH	000000	000000
5812150180	5-8121	5018	BRUSH SUB. ASM	000000	000150
5812150190	5-8121	5019	HOLDER ASM; BRUSH	000000	000000
5812150210	5-8121	5021	BRUSH ASM	000000	000000
5812150220	5-8121	5022	BRUSH	000000	000000
5812150230	5-8121	5023	BRUSH	000000	000000
5812150240	5-8121	5024	WIRE ASM; LEAD C240	000000	000000
5812150280	5-8121	5028	BRUSH ASM.	000000	000000
5812150290	5-8121	5029	WIRE ASM; LEAD C240	000000	000000
5812150390	5-8121	5039	BRUSH ASM	000000	000000
5812150400	5-8121	5040	BRUSH; 3KC1	000016	000000
5812150410	5-8121	5041	HOLDER ASM; BRUSH	000001	000002
5812150450	5-8121	5045	BRUSH ASM.	000001	000000
5812150460	5-8121	5046	BRUSH ASM	000003	000000
5812150470	5-8121	5047	BRUSH ASM.	000001	000000
5812160020	5-8121	6002	SPRING; BRUSH, GEN	000003	000050
5812170040	5-8121	7004	HOLDER ASM; BRUSH	000000	000000
5812170050	5-8121	7005	COVER; BRUSH	000000	000000
5812170070	5-8121	7007	HOLDER ASM; BRUSH	000006	000000
5812170080	5-8121	7008	HOLDER ASM; BRUSH	000003	000000
5812170090	5-8121	7009	HOLDER ASM; BRUSH, HITACH	000000	000000
5812170140	5-8121	7014	BRUSH HOLDER	000000	000033
5812180030	5-8121	8003	RECTIFIRE (-)	000000	000000
5812180051	5-8121	8005	DIODE ASM; ALT	000000	000000
5812180060	5-8121	8006	COVER; DIODE	000000	000000
5812180100	5-8121	8010	COVER; DIODE, GEN	000000	000000
5812180110	5-8121	8011	HOLDER ASM; (+) UM3KC1-ME	000000	000000
5812180120	5-8121	8012	HOLDER ASM; (-) UM3KC1-ME	000000	000000
5812180130	5-8121	8013	DIODE ASM; UM3KC1-MEG	000000	000000
5812180140	5-8121	8014	HOLDER ASM; BRUSH UM3KC1-	000000	000000
5812180160	5-8121	8016	RECTIFIRE (+)	000000	000000
5812180170	5-8121	8017	RECTIFIRE (-)	000000	000000
5812180230	5-8121	8023	HOLDER SUB ASM; (+) SIDE	000000	000000
5812180240	5-8121	8024	HOLDER SUB ASM; (-) SIDE	000000	000000
5812180250	5-8121	8025	SR HOLDER	000001	000004
5812180260	5-8121	8026	SR HOLDER	000000	000004
5812180270	5-8121	8027	DIODE ASM	000000	000000
5812180290	5-8121	8029	DIODE ASM.	000001	000000
5812190030	5-8121	9003	BRUSH HOLDER	000000	000000
5812190050	5-8121	9005	RECTIFIER; GEN 2AA1	000000	000000
5812190060	5-8121	9006	TERMINAL ASM 2AB1	000000	000000
5812190090	5-8121	9009	HOLDER ASM	000004	000000
5812190100	5-8121	9010	HOLDER; RECTIFIER (+)	000000	000000

5812190110	5-8121	9011	HOLDER; RECTIFIER (-)	000000	000000
5812190120	5-8121	9012	RECTIFIER HOLDER FIN	000000	000000
5812190130	5-8121	9013	RECTIFIER HOLDER FIN	000000	000000
5812190140	5-8121	9014	RECTIFIRE (+)	000000	000000
5812190160	5-8121	9016	RECTIFIER HOLDER	000000	000000
5812190190	5-8121	9019	RECTIFIER ASM	000002	000000
5812190230	5-8121	9023	HOLDER SUB ASM.	000000	000000
5812190240	5-8121	9024	HOLDER SUB ASM.	000000	000000
5812190260	5-8121	9026	RECTIFIRE ASM	000002	000000
5812190310	5-8121	9031	REGULATOR ASM; BRUSH	000000	000000
5812190320	5-8121	9032	REGULATOR ASM; IC	000000	000000
5812190330	5-8121	9033	REGULATOR ASM	000000	000000
5812190360	5-8121	9036	BRUSH; REGULATOR	000001	000000
5812190390	5-8121	9039	REGULATOR ASM; BRUSH	000000	000000
5812191890	5-8121	9189	BOLT; THROUGH	000000	000000
5812191900	5-8121	9190	BOLT; THROUGH, 4BB1	000000	000000
5812210010	5-8122	1001	ROTOR ASM.	000000	000000
5812210040	5-8122	1004	ROTOR ASM.	000000	000000
5812210100	5-8122	1010	ROTOR ASM	000000	000000
5812210160	5-8122	1016	ROTOR ASM.	000000	000000
5812210220	5-8122	1022	ROTOR ASM	000000	000000
5812210230	5-8122	1023	ROTOR; GENERATOR	000000	000000
5812210240	5-8122	1024	ROTOR ASM	000000	000000
5812210260	5-8122	1026	ROTOR	000000	000000
5812210280	5-8122	1028	ROTOR ASM C240	000000	000000
5812210290	5-8122	1029	ROTOR	000000	000000
5812210330	5-8122	1033	ROTOR ASM.	000000	000000
5812210340	5-8122	1034	ROTOR ASM; UM3KC1-MEG	000000	000000
5812210350	5-8122	1035	ROTOR; GENERATOR	000000	000000
5812210410	5-8122	1041	ROTOR	000001	000000
5812210430	5-8122	1043	ROTOR ASM; ALT	000001	000000
5812210440	5-8122	1044	ROTOR	000000	000000
5812210450	5-8122	1045	ROTOR ASM	000000	000000
5812210470	5-8122	1047	ROTOR ASM.	000000	000000
5812210490	5-8122	1049	ROTOR ASM.	000000	000000
5812210540	5-8122	1054	ROTOR ASM 3KC1	000000	000000
5812210550	5-8122	1055	ROTOR ASM.	000000	000000
5812210570	5-8122	1057	ROTOR ASM	000001	000000
5812210600	5-8122	1060	ROTOR ASM; GEN	000000	000000
5812210630	5-8122	1063	ROTOR ASM	000000	000003
5812210640	5-8122	1064	BODY ASM; GEN W/BRG	000000	000000
5812210650	5-8122	1065	ROTOR ASM, 4BB1	000000	000000
5812210710	5-8122	1071	ROTOR ASM.	000000	000000
5812220140	5-8122	2014	PULLEY ASM	000000	000000
5812220200	5-8122	2020	PULLEY ASM.	000000	000000
5812220210	5-8122	2021	PULLEY ASM.	000000	000000
5812220220	5-8122	2022	PULLEY; GENERATOR	000001	000000

5812220240	5-8122	2024	PULLEY ASM.	000000	000000
5812220270	5-8122	2027	PULLEY ASM	000000	000000
5812220280	5-8122	2028	PULLEY C240	000000	000000
5812220290	5-8122	2029	PULLEY	000000	000000
5812220300	5-8122	2030	PULLEY**DISCONTINUED**	000000	000000
5812220320	5-8122	2032	PULLEY ASM.	000000	000000
5812220330	5-8122	2033	PULLEY ASM.	000000	000000
5812220350	5-8122	2035	PULLEY	000000	000000
5812220360	5-8122	2036	PULLEY ASM	000000	000000
5812220390	5-8122	2039	PULLEY	000005	000000
5812220430	5-8122	2043	PULLEY;ALT	000000	000002
5812220490	5-8122	2049	PULLEY GEN	000000	000000
5812220501	5-8122	2050	PULLEY ASM; GEN	000000	000000
5812220530	5-8122	2053	PULLEY ASM.	000000	000000
5812220590	5-8122	2059	PULLEY ASM	000000	000000
5812220600	5-8122	2060	PULLEY ASM;W/FA	000000	000000
5812220670	5-8122	2067	PULLEY ASM	000000	000000
5812220680	5-8122	2068	PULLEY ASM.	000000	000000
5812220740	5-8122	2074	PULLEY ASM.	000000	000000
5812220760	5-8122	2076	PULLEY ASM	000000	000002
5812220770	5-8122	2077	PULLEY FAN ASM; GENERATOR	000000	000000
5812220790	5-8122	2079	PULLEY; ALTERNATOR	000000	000000
5812220850	5-8122	2085	PULLEY	000000	000000
5812220860	5-8122	2086	PULLEY ASM.	000001	000000
5812220870	5-8122	2087	PULLEY ASM 3KC1	000000	000001
5812230020	5-8122	3002	FAN/GEN*DISCONTINUED*	000000	000000
5812230040	5-8122	3004	FAN; ALT.	000001	000000
5812230060	5-8122	3006	FAN; GENERATOR	000000	000000
5812230070	5-8122	3007	FAN; COOL,80AMP	000000	000005
5812240020	5-8122	4002	RING; SLIP	000000	000000
5812280020	5-8122	8002	WIRE ASM.	000000	000000
5812290010	5-8122	9001	SCREW KIT	000000	000000
5812290040	5-8122	9004	RETAINER; BEARING	000000	000000
5812290050	5-8122	9005	BOLT; THROUGH STARTER	000003	000000
5812290140	5-8122	9014	BOLT;THROUGH,GE	000000	000000
5812290170	5-8122	9017	BEARING; BALL	000000	000007
5812290250	5-8122	9025	SCREW KIT	000000	000000
5812290320	5-8122	9032	STOPPER; PINION	000000	000000
5812290350	5-8122	9035	NUT 6BD1	000000	000000
5812290370	5-8122	9037	CLIP; HARNESS 6BD1T	000000	000000
5812290390	5-8122	9039	WASHER; FELT,ROTOR,GEN	000000	000028
5812290450	5-8122	9045	TERMINAL ASM UM3KC1-MEG	000000	000000
5812290460	5-8122	9046	TERMINAL ASM UM3KC1-MEG	000000	000000
5812290470	5-8122	9047	RETAINER; BEARING UM3KC1-	000000	000000
5812290480	5-8122	9048	BOLT; THROUGH UM3KC1-MEG	000000	000000
5812290490	5-8122	9049	BOLT; THROUGH UM3KC1-MEG	000000	000000
5812290500	5-8122	9050	SCREW SET; HOLDER UM3KC1-	000000	000000

5812290520	5-8122	9052	COVER; GENERATOR-UM3KC1-M	000000	000000
5812290530	5-8122	9053	RESISTER ASM; UM3KC1-MEG	000000	000000
5812290540	5-8122	9054	REGULATOR UM3KC1-MEG	000000	000000
5812290550	5-8122	9055	RETAINER;BRG GE	000000	000000
5812290560	5-8122	9056	BOLT ASM; TERMINAL	000000	000000
5812290570	5-8122	9057	CLIP; LEAD WIRE	000000	000000
5812290580	5-8122	9058	RETAINER;GEN	000000	000000
5812290590	5-8122	9059	HOLDER	000000	000000
5812290600	5-8122	9060	HOLDER	000000	000000
5812290610	5-8122	9061	HOLDER	000000	000000
5812290630	5-8122	9063	BOLT; SETTING	000000	000000
5812290710	5-8122	9071	INSULATION; TERMINAL	000000	000000
5812290750	5-8122	9075	INSULATION,TERM	000000	000000
5812290770	5-8122	9077	HARNESS; LEAD WIRE	000005	000001
5812290771	5-8122	9077	HARNESS; LEAD WIRE	000000	000000
5812290780	5-8122	9078	RECTIFIRE ASM; (+ -)	000000	000000
5812290840	5-8122	9084	BOLT; TERMINAL	000000	000000
5812290880	5-8122	9088	BUSHING	000000	000000
5812290980	5-8122	9098	RETAINER	000000	000000
5812290990	5-8122	9099	CAP; GUM	000000	000000
5812291040	5-8122	9104	BEARING; BALL	000000	000008
5812291050	5-8122	9105	BUSHING;INSULATION TERMNL	000000	000033
5812291060	5-8122	9106	BOLT;STATOR	000025	000000
5812291070	5-8122	9107	NUT;PULLEY,GEN	000000	000002
5812291080	5-8122	9108	WASHER;PULLEY	000000	000123
5812291090	5-8122	9109	RING; SNAP	000000	000000
5812291200	5-8122	9120	BUSHING; GEN	000000	000000
5812291220	5-8122	9122	BOLT ASM; TERMINAL	000000	000000
5812291230	5-8122	9123	SCREW ASM; SET	000000	000000
5812291250	5-8122	9125	RETAINER; BEARING	000000	000000
5812291270	5-8122	9127	RETAINER;SNAP	000000	000000
5812291300	5-8122	9130	SCREW KIT	000000	000000
5812291320	5-8122	9132	BEARING; BALL	000000	000000
5812291370	5-8122	9137	TUBE; INSULATE	000000	000000
5812291410	5-8122	9141	BEARING; BALL	000000	000000
5812291430	5-8122	9143	B O L T	000000	000000
5812291440	5-8122	9144	TUBE; INSULATE	000000	000000
5812291450	5-8122	9145	BOLT; (E)	000000	000000
5812291480	5-8122	9148	B O L T	000000	000000
5812291650	5-8122	9165	SCREW KIT	000000	000000
5812291660	5-8122	9166	BOLT M5	000000	000014
5812291670	5-8122	9167	BEARING; BALL	000000	000000
5812291680	5-8122	9168	BEARING; BALL	000000	000000
5812291690	5-8122	9169	BUSH; INSULATOR	000000	000000
5812291760	5-8122	9176	CONDENSER,GEN	000000	000000
5812291820	5-8122	9182	BOLT; THROUGH	000000	000000
5812291830	5-8122	9183	BOLT; THROUGH	000000	000000

5812291850	5-8122	9185	COLLAR	000000	000000
5812291860	5-8122	9186	N U T	000000	000000
5812291870	5-8122	9187	WASHER; LK	000000	000000
5812291880	5-8122	9188	WASHER; PL	000000	000000
5812291920	5-8122	9192	BOLT*	000020	000002
5812291930	5-8122	9193	CLENER BOX	000000	000000
5812291951	5-8122	9195	SPACER; GEN.	000000	000000
5812291970	5-8122	9197	PACKING	000000	000000
5812292390	5-8122	9239	BOLT; (R)	000000	000000
5812303320	5-8123	0332	**INVALID**	000000	000000
5812500100			REGULATOR	000000	000000
5812500130			REGULATOR ASM 24V	000002	000000
5812510030	5-8125	1003	REGULATOR ASM 4BA/4BB	000003	000000
5812510050	5-8125	1005	REGULATOR ASM	000000	000000
5812510081	5-8125	1008	REGULATOR ASM E120	000001	000000
5812510120	5-8125	1012	REGULATOR	000000	000000
5812510130	5-8125	1013	REGULATOR	000000	000000
5812510140	5-8125	1014	REGULATOR ASM 3KC/3KR	000000	000000
5812510150	5-8125	1015	REGULATOR	000001	000000
5812510160	5-8125	1016	REGULATOR ASM	000000	000056
5812510170	5-8125	1017	REGULATOR ASM.	000000	000000
5812520010	5-8125	2001	REGULATOR ASM; VOLTAGE, GEN	000000	000000
5812610050	5-8126	1005	DIODE ASM.	000000	000000
5812620050	5-8126	2005	DIODE ASM; RECTIFIER	000000	000017
5812620060	5-8126	2006	DIODE ASM.	000002	000000
5812700020			REGULATOR ASM	000000	000000
5812700040			REGULATOR ASM	000001	000000
5813120010			DISTRIBUTOR CAP ASM.	000000	000000
5814010232			PLUG; GLOW	000000	000000
5814100231	5-8141	0023	PLUG; GLOW	000000	000000
5814100232	5-8141	0023	PLUG; GLOW	000000	000000
5814100233	5-8141	0023	PLUG; GLOW	000000	000000
5814100234	5-8141	0023	PLUG; GLOW	000000	000000
5814100235	5-8141	0023	PLUG; GLOW	000000	000000
5814100236	5-8141	0023	PLUG; GLOW	000000	000000
5814100237	5-8141	0023	PLUG; GLOW	000061	000019
5814100360	5-8141	0036	RESISTOR	000000	000000
5814100402	5-8141	0040	PLUG; GLOW 3KC1/3KR1	000000	000000
5814100403	5-8141	0040	PLUG; GLOW 3KC1/3KR1	000000	000169
5814100404	5-8141	0040	PLUG; GLOW 3KC1/3KR1	000000	000000
5814100573	5-8141	0057	GLOW PLUG; 24V	000000	000000
5814100584	5-8141	0058	GLOW PLUG	000000	000000
5814100610	5-8141	0061	GLOW PLUG	000000	000011
5814100690	5-8141	0069	GLOW PLUG	000000	000000
5814100691	5-8141	0069	GLOW PLUG	000000	000010
5814200091	5-8142	0009	CONT.RESIST.	000000	000000
5814200240	5-8142	0024	RESISTOR, DROPP	000000	000000

5814200250	5-8142	0025	RESISTANCE; CONTROL	000000	000000
5814200301	5-8142	0030	RESISTOR, SENSIN	000000	000000
5814200310	5-8142	0031	RESISTANCE; CONTROL	000000	000003
5814200330	5-8142	0033	RESISTANCE; CONTROL	000000	000002
5814200340	5-8142	0034	CONT.RESIST.	000000	000000
5814200350	5-8142	0035	RESISTANCE; CONTROL 4BD1	000000	000000
5814200360	5-8142	0036	RESISTANCE; CONTROL 2KC1	000000	000005
5814200410	5-8142	0041	RESISTANCE; CONTROL 3KC1/	000000	000043
5814200591	5-8142	0059	RESISTOR; SENSING	000000	000000
5815810120	5-8158	1012	PUMP ASM; FUEL 3KC1	000000	000000
5815810121	5-8158	1012	PUMP ASM; FUEL 3KC1	000000	000003
5819000071	5-8190	0007	STOPPER ASM; ENGINE	000000	000000
5819000080	5-8190	0008	STOPPER; ENGINE 4BA1	000000	000000
5819000081	5-8190	0008	STOPPER; ENGINE 4BA1	000000	000002
5819000112	5-8190	0011	RACK; BATTERY	000000	000000
5819000122	5-8190	0012	BRACKET; BATTERY CARRIER	000000	000000
5819000200	5-8190	0020	STOPPER; ENGINE C240	000000	000023
5819000230	5-8190	0023	COVER; BATTERY	000000	000000
5819000240	5-8190	0024	COVER; BATTERY	000000	000000
5819000252	5-8190	0025	BOARD ASM.; AUTO STARTING	000000	000000
5819000310	5-8190	0031	BOARD ASM.; AUTO ST. (OR)	000000	000000
5819000320	5-8190	0032	BOARD ASM.; AUTO ST. (OR)	000000	000000
5819000350	5-8190	0035	STOPPER ASM; ENGINE	000000	000002
5819100110	5-8191	0011	SOLENOID	000000	000000
5819100180	5-8191	0018	SOLENOID	000000	000000
5819100201	5-8191	0020	SOLENOID ASM. ENG. STOP	000001	000000
5819100260	5-8191	0026	SOLENOID ASM	000000	000000
5819100291	5-8191	0029	SOLENOID ASM.; ENG.STOPPER	000000	000000
5819100300	5-8191	0030	SOLENOID	000000	000000
5819100310	5-8191	0031	SOLENOID ASM; W/TIMER	000000	000000
5821930020			HEADLAMP REPL. BULBS SET	000000	000000
5821930030			BULT; HEADLAMP, FRT	000000	000000
5822400070	5-8224	0007	LAMP; PILOT-RED	000000	000000
5822400080	5-8224	0008	LAMP; PILOT, AMBE	000000	000000
5822500081			INDICATOR	000000	000000
5822500082	5-8225	0008	INDICATOR	000000	000000
5822500091	5-8225	0009	INDICATOR; GLOW	000002	000002
5822500290	5-8225	0029	RELAY; SOLENO ID	000000	000000
5823460040	5-8234	6004	K N O B	000000	000000
5824100120			SWITCH; OIL PRES WARNING	000000	000000
5824100121	5-8241	0012	SWITCH; OIL PRES WARNING	000001	000000
5824100122	5-8241	0012	SWITCH; OIL PRES WARNING	000000	000006
5824100151			SWITCH	000000	000000
5824100160			SWITCH; OIL PRESSURE	000000	000000
5824100161	5-8241	0016	SWITCH; OIL PRESSURE	000000	000004
5824100231	5-8241	0023	PLUG; GLOW (12V)	000000	000000
5824100270			SWITCH	000000	000000

5824100320			SWITCH; OIL	000000	000000
5824100361	5-8241	0036	SWITCH; OIL PRESSURE 4JC1	000000	000000
5824100362	5-8241	0036	SWITCH; OIL PRESSURE 4JC1	000000	000000
5824400041	5-8244	0004	SWITCH ASM; NEUTRAL	000000	000000
5824400051	5-8244	0005	SWITCH ASM,RE	000000	000000
5824400180	5-8244	0018	SWITCH;NEUTRAL TRNSFR IND	000000	000000
5824500080	5-8245	0008	SWITCH; OVERHEAT WARNING	000000	000000
5824500090	5-8245	0009	SWITCH; THERMO WATER	000000	000000
5824500130	5-8245	0013	SWITCH ASM; WARNING 2K/3K	000000	000205
5824500141	5-8245	0014	SWITCH; OVERHEAT WARNING	000000	000039
5824500150	5-8245	0015	SWITCH; WARNING	000041	000000
5824500180	5-8245	0018	THERMOMETER	000000	000000
5824500200	5-8245	0020	SWITCH; OVERHEAT	000001	000024
5824500330	5-8245	0033	SWITCH; OVER HEAT WARNING	000000	000001
5824800020	5-8248	0002	SENSOR;LEVER	000000	000000
5824800021	5-8248	0002	SENSOR;LEVEL,SU	000000	000000
5825160030			FUSE,15A;AMP,FACIA HARNSS	000000	000078
5825160031			FUSE ASM; B/A	000000	000000
5825301080	5-8253	0108	RESISTANCE; CONTROL	000000	000000
5825400360	5-8254	0036	CONTROLLER	000000	000000
5825500082	5-8255	0008	INDICATOR; GLOW	000000	000000
5825500190	5-8255	0019	RELAY ASM; EMERGENCY	000000	000000
5825500192	5-8255	0019	RELAY ASM; EMERGENCY	000000	000002
5825500241	5-8255	0024	RELAY; EMERGENCY	000000	000000
5825500290	5-8255	0029	RELAY,ENGINE ST	000000	000148
5825500300	5-8255	0030	RELAY; ENG.	000000	000008
5825500350	5-8255	0035	RELAY; PARKING	000000	000032
5825500370	5-8255	0037	RELAY; INTAKE HEATER	000000	000000
5825500420	5-8255	0042	RELAY ASM; EMERGENCY	000000	000000
5825500422	5-8255	0042	RELAY ASM; EMERGENCY	000001	000000
5825500430	5-8255	0043	RELAY ASM; CHARGE C240	000000	000007
5825500440	5-8255	0044	RELAY; SAFETY 2KC1	000000	000000
5825500441	5-8255	0044	RELAY; SAFETY 2KC1	000000	000000
5825530170	5-8255	3017	RELAY	000000	000000
5825530181	5-8255	3018	RELAY; FUEL PUMP	000000	000000
5825530310	5-8255	3031	RELAY ASM; HOUR METER	000000	000000
5825530391	5-8255	3039	RELAY, WSW	000000	000000
5825530443	5-8255	3044	RELAY;GLOW PLUG	000000	000000
5825530444	5-8255	3044	RELAY,GLOW PLUG	000000	000000
5825530454	5-8255	3045	RELAY,GLOW PLUG	000000	000000
5825530465	5-8255	3046	RELAY; GLOW PLUG	000001	000000
5825530475	5-8255	3047	RELAY ASM.; GLOW	000000	000001
5825530520	5-8255	3052	RELAY; SAFETY	000000	000000
5825530521	5-8255	3052	RELAY; SAFETY	000000	000000
5825530581	5-8255	3058	RELAY; AUTO CHOKE	000000	000000
5825530600	5-8255	3060	RELAY ASM.	000000	000000
5825530660	5-8255	3066	RELAY; FUEL PUMP 3KC1	000000	000000

5825530671	5-8255	3067	RELAY ASM; SAFTEY	000000	000000
5825530680	5-8255	3068	RELAY; SAFETY 4BD1	000000	000000
5825533030	5-8255	3303	RELAY; ENGINE	000000	000000
5825600150	5-8256	0015	VALVE ASM; SHUT OFF	000000	000000
5825600151	5-8256	0015	VALVE ASM; SHUT OFF	000000	000000
5826203851			HARNESS	000000	000000
5826300200			SWITCH	000000	000000
5826305800			HARNESS; CABLE	000000	000000
5826401050	5-8264	0105	HARNESS; CABLE INSTRUMENT	000000	000000
5826401090	5-8264	0109	HARNESS	000000	000000
5826401091	5-8264	0109	HARNESS; CAB	000000	000000
5826500930	5-8265	0093	CABLE ASM; OIL	000012	000000
5826570790	5-8265	7079	LINK; FUSEBLE	000000	000013
5826590230	5-8265	9023	LINK; FUSIBLE, WIRE	000000	000000
5826590440	5-8265	9044	LINK, FUSIBLE	000000	000000
5826900810	5-8269	0081	WIRE	000000	000000
5826901050	5-8269	0105	CONNECTOR	000000	000000
5826901060	5-8269	0106	CONNECTOR	000000	000000
5826903380	5-8269	0338	CONNECTOR; 5P FEMALE	000000	000000
5826950060	5-8269	5006	TERMINAL	000183	000000
5826990020	5-8269	9002	PLATE; EARTH, CYL	000000	000000
5826990200	5-8269	9020	TERMINAL CAP KIT	000000	000000
5826990330	5-8269	9033	CAP; INSULATOR	000002	000000
5828400070	5-8284	0007	CONTROL ASM, ENG	000000	000001
5828400440	5-8284	0044	STOP ASM C240	000000	000000
5828480191	5-8284	8019	CABLE; STOP	000000	000000
5828480192	5-8284	8019	CABLE; STOP	000000	000000
5828480220	5-8284	8022	COVER; ENGINE STOPPER	000000	000000
5828480230	5-8284	8023	COVER; ENG STOP	000000	000005
5828480361	5-8284	8036	CABLE ASM; SHUT-DOWN E120	000000	000000
5828480391	5-8284	8039	CABLE; STOP	000000	000001
5828480640	5-8284	8064	CABLE ASM.	000000	000000
5831100080			METER	000000	000000
5831200671	5-8312	0067	TACHOMETER	000002	000000
5831200681	5-8312	0068	TACHOMETER ASM	000000	000000
5831201310	5-8312	0131	TACHOMETER, 12V (3000RPM)	000000	000000
5831201311	5-8312	0131	TACHOMETER, 12V (3000RPM)	000002	000000
5831201401	5-8312	0140	METER ASM; TACHO, MAG SEN	000000	000000
5831201402	5-8312	0140	METER ASM; TACHO, MAG SEN	000003	000000
5831510030	5-8315	1003	SWITCH	000000	000000
5831510031	5-8315	1003	SWITCH	000000	000000
5831510050	5-8315	1005	OIL; PRESSURE	000000	000001
5831600540	5-8316	0054	THERMOMETER	000000	000000
5835190060	5-8351	9006	GRILL SPK.	000000	000000
5835390160	5-8353	9016	BEARING; REAR	000000	000000
5835390240	5-8353	9024	KEY, CLUTCH TO C	000000	000040
5835711590	5-8357	1159	SCREW; LEVER	000000	000000

5844090010	5-8440	9001	TOOL	000000	000000
5851130020	5-8511	3002	SPANNER; OPEN END B=23*21	000000	000000
5851130030	5-8511	3003	SPANNER; OPEN END B=26*23	000000	000000
5851130040	5-8511	3004	WRENCH; B=14*12	000000	000000
5851130050	5-8511	3005	WRENCH; B=19*17	000000	000000
5851130060	5-8511	3006	WRENCH; B=23*21	000000	000000
5851130070	5-8511	3007	WRENCH; B=24*22	000000	000000
5851130080	5-8511	3008	SPANNER; OPEN END B=10*8	000000	000000
5851130090	5-8511	3009	SPANNER; OPEN END B=14*12	000000	000000
5851130100	5-8511	3010	SPANNER; OPEN END B=19*17	000000	000000
5851130110	5-8511	3011	SPANNER; OPEN END B=24*22	000000	000000
5851140010	5-8511	4001	BAND; OPEN ENDED SPANNER	000000	000000
5851140020	5-8511	4002	BAND; OPEN ENDED SPANNER	000000	000000
5851170020	5-8511	7002	WRENCH; MONKEY	000000	000000
5851710010	5-8517	1001	PLIER	000000	000000
5851710020	5-8517	1002	PLIER;150	000000	000000
5852100020	5-8521	0002	PULLER	000000	000002
5852100160	5-8521	0016	REMOVER	000000	000000
5852100200	5-8521	0020	REMOVER	000000	000000
5852200130	5-8522	0013	INSTALLER	000023	000000
5852200240	5-8522	0024	INSTALLER	000000	000000
5852200440	5-8522	0044	SETTING TOOL; OIL SEAL	000000	000000
5852210180	5-8522	1018	INSTALLER; CYL LINER	000000	000004
5852300020	5-8523	0002	INSTALLER	000000	000000
5852300021	5-8523	0002	INSTALLER	000000	000001
5852310040	5-8523	1004	REMOVER; CYL LINER ANKLE	000000	000000
5852310041	5-8523	1004	REMOVER; CYL LINER ANKLE	000000	000004
5852530010	5-8525	3001	CLUTCH TOOL	000000	000000
5853170010	5-8531	7001	ADAPTER; COMPRESS GAGE	000000	000000
5853170020	5-8531	7002	ADAPTOR; COMPRESSION GUAG	000000	000001
5853902400	5-8539	0240	WOODRUFF KEY	000000	000000
5858750290	5-8587	5029	NAME PLATE	000000	000000
5858851781	5-8588	5178	PLATE; CAUTION	000000	000000
5858853070	5-8588	5307	PLATE; CAUTION	000000	000000
5858853320	5-8588	5332	CAUTION PLATE	000000	000000
5858853321	5-8588	5332	CAUTION PLATE	000000	000000
5858853331	5-8588	5333	PLATE; CAUTION,HEAD COVER	000000	000000
5862021980	5-8620	2198	CARTRIDGE, OIL FILTER	000000	000000
5862021990	5-8620	2199	CARTRIDGE, OIL FILTER	000000	000000
5862022000	5-8620	2200	CARTRIDGE SET, OIL FILTER	000000	000000
5862052540	5-8620	5254	CARTRIDGE	000000	000000
5862052550	5-8620	5255	CARTRIDGE	000000	000000
5862054410	5-8620	5441	ELEMENT, OIL FILTER	000000	000000
5862054900	5-8620	5490	FILTER, OIL	000000	000000
5862054910	5-8620	5491	FILTER, OIL	000000	000000
5862071820	5-8620	7182	FILTER, OIL	000000	000000
5863000020	5-8630	0002	BOLT; OIL PAN	000009	000000

5863000030	5-8630	0003	PLUG; DRAIN OIL	000000	000000
5863000040	5-8630	0004	BOLT; STAY	000005	000000
5863000050	5-8630	0005	BOLT; CYL BLOCKL	000000	000000
5863000060	5-8630	0006	BOLT; FLYWHEEL	000000	000000
5863000070	5-8630	0007	BOLT; FLYWHEEL	000000	000000
5863000120	5-8630	0012	BOLT;STOPPER	000000	000010
5863000130	5-8630	0013	BOLT;CLIPINJ PIPE	000004	000000
5863000140	5-8630	0014	BOLT; LEVER	000004	000000
5863000200	5-8630	0020	BOLT; BAND	000005	000000
5863000210	5-8630	0021	BOLT;GEN	000004	000000
5863000220	5-8630	0022	BOLT; BRKT	000000	000000
5863000240	5-8630	0024	BOLT; HSG	000000	000000
5863000280	5-8630	0028	PLUG;DRAIN,OIL	000008	000000
5863000290	5-8630	0029	BOLT; PLATE	000004	000000
5863000300	5-8630	0030	BOLT;INJ PUMP	000000	000020
5863000310	5-8630	0031	BOLT; HOLDER	000004	000000
5863000340	5-8630	0034	BOLT;STARTER	000004	000000
5863000350	5-8630	0035	BOLT; HOLDER	000000	000000
5863000360	5-8630	0036	BOLT; VENTILATOR	000000	000000
5863000370	5-8630	0037	BOLT; COVER	000000	000000
5863000400	5-8630	0040	BOLT; FAN GUIDE	000000	000010
5863000410	5-8630	0041	BOLT; INJ PUMP	000000	000010
5863000430	5-8630	0043	BOLT; HSG TO HD	000000	000000
5863000440	5-8630	0044	BOLT; GEAR CASE	000000	000000
5863000450	5-8630	0045	BOLT; GEAR CASE	000000	000000
5863000460	5-8630	0046	BOLT; GUIDE TUBE	000008	000000
5863000480	5-8630	0048	BOLT;PLATE	000004	000000
5863000490	5-8630	0049	BOLT;OIL FILTER TUBE	000004	000000
5863000500	5-8630	0050	BOLT; EXH MANIF	000004	000000
5863000510	5-8630	0051	BOLT; FAN	000000	000000
5863000520	5-8630	0052	BOLT; EXH MANIF	000000	000000
5863000540	5-8630	0054	BOLT;HEAD COVER	000006	000000
5863000560	5-8630	0056	BOLT; BRKT CLIP	000002	000000
5863000570	5-8630	0057	BOLT; BRKT CLIP	000004	000000
5863000580	5-8630	0058	BOLT; HANGER	000001	000000
5863000590	5-8630	0059	BOLT; GEN	000000	000000
5863000600	5-8630	0060	BOLT; GEN	000000	000000
5863000610	5-8630	0061	BOLT; HOLDER	000004	000000
5863000620	5-8630	0062	BOLT; STAY	000000	000000
5863000670	5-8630	0067	BOLT; GEN	000000	000000
5863000730	5-8630	0073	STUD; C/BL	000000	000000
5863000750	5-8630	0075	STUD; ROCKER SHAFT BRAKE	000000	000006
5863000780	5-8630	0078	STUD; MANIF TO CYL HD	000000	000000
5863000840	5-8630	0084	STUD;CYL HD	000000	000008
5863000870	5-8630	0087	BOLT; WING, AIR CLEANER	000000	000000
5863000900	5-8630	0090	SCREW; RR COVER, STARTER	000000	000000
5863000950	5-8630	0095	NUT; CONNROD	000000	000000

5863000960	5-8630	0096	NUT; ROCKER SHAFT	000004	000000
5863000990	5-8630	0099	NUT; CONNROD	000000	000000
5863001010	5-8630	0101	NUT; LEVER TO SHAFT	000004	000000
5863001030	5-8630	0103	NUT; CR/SHF FRT	000004	000000
5863001040	5-8630	0104	NUT	000000	000000
5863001050	5-8630	0105	NUT; STARTER	000000	000000
5863001070	5-8630	0107	NUT; EXH MANIF	000000	000039
5863001080	5-8630	0108	NUT; HANGER	000005	000000
5863001100	5-8630	0110	NUT; CYL BLOCKL	000003	000000
5863001110	5-8630	0111	NUT; CAP,HD COVER	000000	000000
5863001130	5-8630	0113	GASKET; LEAK OFF PIPE	000001	000042
5863001150	5-8630	0115	GASKET; CYL BLOCK	000010	000000
5863001160	5-8630	0116	GASKET; DRAIN PLUG	000003	000014
5863001170	5-8630	0117	GASKET; DRAIN PLUG	000000	000000
5863001190	5-8630	0119	WASHER; LK	000004	000000
5863001200	5-8630	0120	WASHER; LK, STARTER	000000	000000
5863001220	5-8630	0122	WASHER; PL. GEN	000000	000000
5863001240	5-8630	0124	WASHER; LEVER	000004	000000
5863001250	5-8630	0125	WASHER; LEVER	000004	000000
5863001280	5-8630	0128	WASHER; LK, GEN	000000	000000
5863001300	5-8630	0130	PIN; CAM BRG SET	000000	000000
5863001310	5-8630	0131	PIN; CASE	000000	000000
5863001340	5-8630	0134	DOWEL; C/BL TO HD	000000	000000
5863001350	5-8630	0135	PIN; STRAIGHT	000000	000000
5863001360	5-8630	0136	DOWEL; HOLDER	000000	000000
5863001370	5-8630	0137	PIN; STRAIGHT	000000	000000
5863001400	5-8630	0140	PIN; STRAIGHT	000000	000000
5863001420	5-8630	0142	KEY; FEATHER,CR/SHF	000000	000000
5863001430	5-8630	0143	PIN; SNAP	000000	000000
5863001440	5-8630	0144	KEY; CAM GEAR SET	000000	000000
5863001450	5-8630	0145	RING; SNAP PISTON PIN	000008	000000
5863001460	5-8630	0146	RING; SNAP PISTON PIN	000000	000001
5863001480	5-8630	0148	RING; SNAP METAL	000001	000000
5863001500	5-8630	0150	RING; SNAP, SHAFT	000145	000000
5863001510	5-8630	0151	RING; SNAP, SHAFT	000191	000000
5863001520	5-8630	0152	RING; SNAP, SHAFT	000201	000000
5863001530	5-8630	0153	RING; SNAP EXT	000001	000000
5863001540	5-8630	0154	BEARING; CAMSHAFT	000005	000000
5863001550	5-8630	0155	BEARING; CAMSHAFT	000000	000000
5863001560	5-8630	0156	BEARING; ROTOR, GEN	000000	000000
5863001580	5-8630	0158	METAL; CM/SHF	000002	000000
5863001620	5-8630	0162	GASKET; SHAFT. CONT	000006	000000
5863001630	5-8630	0163	GASKET; ARM	000006	000000
5863001640	5-8630	0164	GASKET; ARM	000000	000000
5863001660	5-8630	0166	GASKET; GUIDE TUBE	000003	000000
5863001680	5-8630	0168	GASKET; OIL FILLER	000191	000018
5863001690	5-8630	0169	GASKET; COVER TO BODY	000000	000000

5863001700	5-8630	0170	GASKET; HD COVER	000001	000000
5863001730	5-8630	0173	GASKET;HD TO COVER	000000	000000
5863001740	5-8630	0174	GASKET; OIL PIPE	000191	000032
5863001750	5-8630	0175	GASKET; RELIEF VLV	000008	000000
5863001760	5-8630	0176	GASKET; COVER	000000	000000
5863001810	5-8630	0181	PLUG; PLATE,C/BL	000000	000000
5863001830	5-8630	0183	CUP; SEALING	000000	000000
5863001850	5-8630	0185	CUP; SEALING,CYL HEAD	000000	000000
5863001890	5-8630	0189	CUP; SEALING	000000	000000
5863001900	5-8630	0190	CUP; SEALING,CYL HEAD	000000	000000
5863001930	5-8630	0193	PLUG; BODY	000000	000000
5863001950	5-8630	0195	PLUG; ROCKER SHAFT END	000004	000000
5863002010	5-8630	0201	CLIP; WATER HOSE, RAD	000000	000000
5863002020	5-8630	0202	CLIP; CONN HOSE	000000	000000
5863002050	5-8630	0205	CLIP; PIPE	000000	000000
5863002060	5-8630	0206	CLIP; HOSE	000000	000000
5863002090	5-8630	0209	HOSE; RUBBER	000000	000000
5863002120	5-8630	0212	HOSE; WATER DRAIN C/BL	000000	000000
5863002140	5-8630	0214	HOSE; HD COVER	000000	000000
5863002200	5-8630	0220	HOSE;FUEL	000004	000000
5863002230	5-8630	0223	BELT;COOLING FAN	000002	000000
5863002240	5-8630	0224	BELT; COOLING FAN	000000	000001
5863002260	5-8630	0226	BELT; COOLING FAN	000000	000000
5863002320	5-8630	0232	SEAT; VLV INSERT	000000	000000
5863002330	5-8630	0233	HOLDER; BRG	000000	000000
5863002340	5-8630	0234	HOLDER; BRG	000000	000000
5863002410	5-8630	0241	HOLDER; BRG	000000	000000
5863002550	5-8630	0255	VENTILATOR; AIR	000000	000004
5863002560	5-8630	0256	STOPPER; OIL	000000	000000
5863002570	5-8630	0257	FILTER	000000	000000
5863002590	5-8630	0259	FILTER	000000	000000
5863002630	5-8630	0263	PAN ASM; OIL	000000	000001
5863002640	5-8630	0264	PAN ASM;OIL	000000	000001
5863002650	5-8630	0265	PAN ASM ; OIL	000001	000000
5863002730	5-8630	0273	TUBE;GUIDE OIL LEVL GAUGE	000000	000000
5863002760	5-8630	0276	GASKET; OIL PAN	000004	000000
5863002770	5-8630	0277	GASKET; OIL PAN	000005	000000
5863002790	5-8630	0279	GASKET;OIL PAN	000000	000001
5863002820	5-8630	0282	HEAD ASM; CYL	000001	000000
5863002850	5-8630	0285	HEAD ASM;CYL	000002	000000
5863002890	5-8630	0289	COVER; CYL HD	000000	000000
5863002940	5-8630	0294	BOLT; CYL HD TO BLOCK	000000	000000
5863002950	5-8630	0295	BOLT; CYL HD TO BLOCK	000001	000000
5863002980			GASKET; CYL HD	000000	000001
5863002990	5-8630	0299	GASKET; CYL HD	000000	000000
5863003000	5-8630	0300	GASKET; CYL HD	000000	000000
5863003010	5-8630	0301	GASKET; CYL HD	000000	000000

5863003020	5-8630	0302	GASKET; CYL HD	000000	000000
5863003030	5-8630	0303	GASKET;CYLINDER	000001	000000
5863003040	5-8630	0304	GASKET;CYL HD	000000	000000
5863003080	5-8630	0308	COVER;CYL HD	000002	000000
5863003100	5-8630	0310	INSERT; NOZZLE	000000	000001
5863003130	5-8630	0313	INSERT; NOZZLE	000011	000000
5863003140	5-8630	0314	CAP; INJ NOZZLE	000002	000000
5863003150	5-8630	0315	GASKET; HD TO COVER	000000	000038
5863003160	5-8630	0316	GASKET; HD TO COVER	000002	000000
5863003170	5-8630	0317	GASKET; HD TO COVER	000000	000039
5863003180	5-8630	0318	GASKET;HD TO COVER	000002	000000
5863003190	5-8630	0319	GASKETLHD TO COVER	000000	000000
5863003200	5-8630	0320	PISTON SET	000000	000001
5863003210	5-8630	0321	PISTON SET; O/S=0.5	000000	000000
5863003220	5-8630	0322	PISTON SET; O/S=0.25	000001	000000
5863003230	5-8630	0323	PISTON SET	000000	000003
5863003240	5-8630	0324	PISTON SET; O/S=0.5	000001	000002
5863003250	5-8630	0325	PISTON SET; O/S=1.0	000003	000000
5863003280	5-8630	0328	ROD ASM; CONN	000000	000001
5863003290	5-8630	0329	ROD ASM; CONN	000001	000000
5863003310	5-8630	0331	RING SET; PISTON, STANDAR	000000	000001
5863003320	5-8630	0332	RING SET; PISTON,O/S=0.5	000002	000000
5863003330	5-8630	0333	RING SET; PISTON,O/S=1.0	000003	000000
5863003370	5-8630	0337	RING SET; PISTON, STANDAR	000000	000004
5863003380	5-8630	0338	RING SET; PISTOM,O/S=0.5	000001	000000
5863003390	5-8630	0339	RING SET; PISTON,O/S=0.2	000002	000000
5863003430	5-8630	0343	BOLT CONNROD	000000	000000
5863003450	5-8630	0345	BOLT; CONNROD	000000	000000
5863003480	5-8630	0348	CRANKSHAFT	000003	000000
5863003490	5-8630	0349	CRANKSHAFT	000001	000000
5863003500	5-8630	0350	GEAR; CR/SHF	000000	000001
5863003520	5-8630	0352	GEAR; CR/SHF	000000	000000
5863003550	5-8630	0355	PIN; PISTON	000000	000002
5863003560	5-8630	0356	PIN; PISTON	000004	000000
5863003630	5-8630	0363	FLYWHEEL	000000	000000
5863003660	5-8630	0366	GEAR; RING	000000	000002
5863003670	5-8630	0367	GEAR; RING	000003	000000
5863003710	5-8630	0371	PULLEY; CR/SHF	000000	000000
5863003720	5-8630	0372	PULLEY; CR/SHF	000000	000000
5863003730	5-8630	0373	GEAR; CM/SHF	000000	000000
5863003780	5-8630	0378	GEAR;CM/SHF	000000	000000
5863003810	5-8630	0381	CAMSHAFT	000000	000000
5863003820	5-8630	0382	CAMSHAFT	000000	000000
5863003840	5-8630	0384	CAMSHAFT	000000	000001
5863003910	5-8630	0391	ARM & SHAFT ASM:ROCKER	000000	000000
5863003940	5-8630	0394	SHAFT; TACHOMETER	000000	000000
5863003950	5-8630	0395	TAPPET; VALVE	000002	000000

5863003970	5-8630	0397	VALVE; INL	000001	000001
5863003990	5-8630	0399	VALVE; INL	000000	000002
5863004010	5-8630	0401	VALVE; EXH	000000	000003
5863004030	5-8630	0403	VALVE; EXH	000000	000000
5863004050	5-8630	0405	SEAT; SPR	000000	000000
5863004060	5-8630	0406	SEAT; SPR	000000	000000
5863004080	5-8630	0408	CAP; ADJ SCREW	000000	000000
5863004090	5-8630	0409	COLLAR; SPLIT	000000	000000
5863004100	5-8630	0410	COLLAR; SPLIT	000000	000023
5863004120	5-8630	0412	SHAFT; ROCKER ARM	000002	000000
5863004150	5-8630	0415	SHAFT;ROCKER ASM	000000	000001
5863004170	5-8630	0417	BRACKET; ROCKER SHAFT, IN	000000	000000
5863004220	5-8630	0422	ARM; ROCKER	000002	000000
5863004230	5-8630	0423	ARM; ROCKER	000002	000000
5863004250	5-8630	0425	SEAL; OIL VALVE GUIDE	000001	000000
5863004260	5-8630	0426	SEAL; OIL VALVE GUIDE	000001	000000
5863004270	5-8630	0427	SEAL; OIL VALVE GUIDE	000000	000003
5863004280	5-8630	0428	ROD; PUSH	000001	000000
5863004330	5-8630	0433	GEAR; CM/SHF	000000	000000
5863004340	5-8630	0434	GASKET; TACHOMETER SHAFT	000005	000000
5863004370	5-8630	0437	LEVER KIT; GOV	000002	000000
5863004400	5-8630	0440	SHAFT; LEVER	000000	000000
5863004420	5-8630	0442	ARM; GOV	000005	000000
5863004430	5-8630	0443	ARM; GOV	000005	000000
5863004450	5-8630	0445	LEVER; STOP	000008	000000
5863004470	5-8630	0447	SLIDER	000000	000000
5863004500	5-8630	0450	LEVER; TENSION. GOV	000000	000000
5863004560	5-8630	0456	STAY; LEVER	000000	000000
5863004590	5-8630	0459	FILTER ASM; FUEL	000005	000000
5863004610	5-8630	0461	FILTER ASM; FUEL	000000	000000
5863004650	5-8630	0465	COVER; FUEL FILTER	000000	000000
5863004680	5-8630	0468	ELEMENT; FUEL FILTER	000000	000005
5863004690	5-8630	0469	ELEMENT; FUEL FILTER	000017	000000
5863004740	5-8630	0474	NUT;FUEL FILTER	000000	000000
5863004750	5-8630	0475	GASKET; PLUG	000000	000000
5863004790	5-8630	0479	PUMP ASM; FUEL	000000	000000
5863004940	5-8630	0494	PIPE; FUEL	000000	000000
5863004990	5-8630	0499	GASKET; COVER	000003	000000
5863005040	5-8630	0504	PUMP ASM; INJ	000000	000002
5863005050	5-8630	0505	PUMP ASM; INJ	000000	000000
5863005060	5-8630	0506	SMOKE SET	000001	000000
5863005120	5-8630	0512	PLUNGER ASM; INJ PUMP	000007	000000
5863005140	5-8630	0514	SCREW; COVER	000004	000000
5863005160	5-8630	0516	NUT; INJ PUMP	000000	000002
5863005170	5-8630	0517	BOLT; COVER	000001	000000
5863005180	5-8630	0518	SCREW; PLATE	000001	000000
5863005200	5-8630	0520	VALVE; DELIVERY INJ PUMP	000000	000000

5863005220	5-8630	0522	VALVE;DELIVERY INJ PUMP	000000	000000
5863005270	5-8630	0527	SPRING;DELIVERY VALVE	000000	000004
5863005280	5-8630	0528	SPRING;PLUNGER INJ PUMP	000000	000006
5863005310	5-8630	0531	GSKT;DELIVERY VLV INJ PUM	000001	000000
5863005360	5-8630	0536	HLDR;DELIVERY VLV INJ PUM	000007	000000
5863005410	5-8630	0541	GSKT;HLDR DELIVERY VLV	000001	000000
5863005420	5-8630	0542	GSKT;PLNGER BARREL SD	000003	000002
5863005430	5-8630	0543	BOLT; EYE, FUEL INL	000011	000001
5863005440	5-8630	0544	BOLT;EYE FUEL INJ PUMP	000000	000005
5863005460	5-8630	0546	JOINT; HOSE, FRT COVER	000000	000000
5863005480	5-8630	0548	CONNECTOR	000000	000005
5863005870	5-8630	0587	FLANGE; PLUNGER	000006	000000
5863005880	5-8630	0588	PIN ; PLUNGER	000002	000000
5863005890	5-8630	0589	RING; SNAP	000000	000005
5863005900	5-8630	0590	SEAT; PLUNGER SPRING INJ	000000	000005
5863005910	5-8630	0591	SEAT;PLNGR SPR LWR INJ PU	000000	000005
5863005940	5-8630	0594	NOZZLE ASM; INJ	000000	000003
5863005950	5-8630	0595	NOZZLE ASM; INJ	000000	000004
5863005970	5-8630	0597	NOZZLE ASM;INJ	000003	000000
5863005980	5-8630	0598	NOZZLE; INJ	000003	000000
5863005990	5-8630	0599	NOZZLE; INJ	000000	000000
5863006000	5-8630	0600	NOZZLE INJ	000000	000000
5863006010	5-8630	0601	GASKET;PLUG	000001	000000
5863006020	5-8630	0602	GSKT;EYE BOLT INJ PUMP	000001	000000
5863006040	5-8630	0604	GASKET; EYE BOLT	000013	000000
5863006050	5-8630	0605	GASKET; NOZZLE HOLDER	000000	000021
5863006060	5-8630	0606	WASHER; NOZZLE HOLDER	000001	000000
5863006070	5-8630	0607	WASHER;NOZZLE HOLDER	000000	000000
5863006620	5-8630	0662	SHIM; INJ PUMP	000002	000000
5863006630	5-8630	0663	SHIM; INJ PUMP	000002	000000
5863006640	5-8630	0664	SHIM; INJ PUMP	000002	000000
5863006650	5-8630	0665	SHIM; INJ PUMP	000002	000000
5863006660	5-8630	0666	SHIM; INJ PUMP	000002	000000
5863006670	5-8630	0667	SHIM; NOZZLE,SP,NOZZLE H	000002	000000
5863006680	5-8630	0668	SHIM; NOZZLE,SP,NOZZLE H	000002	000000
5863006690	5-8630	0669	NUT;RET CONNECTOR NZL H	000024	000000
5863006710	5-8630	0671	SPRING; NOZZLE,NOZZLE HO	000000	000000
5863006800	5-8630	0680	SPRING; NOZZLE,NOZZLE HO	000016	000000
5863006860	5-8630	0686	SEAT NOZZLE SPRING HLDR	000000	000002
5863006870	5-8630	0687	SPACER;NOZZLE SPRING HLDR	000000	000000
5863006880	5-8630	0688	NUT;NOZZLE RET NOZ HLDR	000000	000002
5863006890	5-8630	0689	SMOKE SET	000000	000000
5863006930	5-8630	0693	PIPE INJ NO 1	000000	000000
5863006940	5-8630	0694	PIPE INJ NO 2	000000	000000
5863006950	5-8630	0695	PIPE INJ NO 3	000000	000000
5863006990	5-8630	0699	PIPE INJ NO 1	000000	000000
5863007000	5-8630	0700	PIPE; INJ NO 2	000000	000000

5863007080	5-8630	0708	PIPE; FUEL, NOZZLE LEAK	000001	000000
5863007110	5-8630	0711	PIPE;FUEL NZL HLDR	000001	000000
5863007130	5-8630	0713	COLLAR CONNECTOR	000000	000001
5863007140	5-8630	0714	CLEANER ASM; AIR	000000	000000
5863007200	5-8630	0720	FILTER; ACL. OUTER	000008	000000
5863007270	5-8630	0727	MANIFOLD; EXHAUST	000001	000000
5863007360	5-8630	0736	GASKET; EXH MANIF TO HD	000001	000000
5863007370	5-8630	0737	GASKET; EXH MANIF TO HD	000003	000000
5863007380	5-8630	0738	GASKET;FLANGE	000000	000002
5863007390	5-8630	0739	GASKET;EXH MANIF TO HD	000000	000001
5863007400	5-8630	0740	GASKET;EXH MANIF	000000	000002
5863007450	5-8630	0745	GASKET; EXH MANIF	000001	000000
5863007460	5-8630	0746	VALVE; OIL RELIEF	000000	000000
5863007470	5-8630	0747	COVER; OIL PUMP	000001	000000
5863007480	5-8630	0748	BOLT;EYE LEAK OFF PIPE	000016	000002
5863007490	5-8630	0749	ROTOR; OIL PUMP	000000	000001
5863007530	5-8630	0753	STRAINER; OIL,OIL PUMP	000000	000000
5863007560	5-8630	0756	ELEMENT; OIL FILTER	000000	000000
5863007570	5-8630	0757	ELEMENT; OIL FILTER	000000	000001
5863007580	5-8630	0758	STUD; OIL FILTER	000000	000000
5863007650	5-8630	0765	PIPE; OIL	000001	000000
5863007670	5-8630	0767	PIPE; OIL	000004	000000
5863007680	5-8630	0768	GASKET; NUT,CYL HD COVER	000001	000029
5863007740	5-8630	0774	PUMP ASM; WATER	000000	000001
5863007750	5-8630	0775	PUMP ASM;WATER	000000	000000
5863007810	5-8630	0781	COVER; WATER PUMP	000000	000000
5863007830	5-8630	0783	THERMOSTAT	000002	000000
5863007840	5-8630	0784	THERMOSTAT	000015	000000
5863007850	5-8630	0785	HOUSING; THERMOSTAT	000000	000000
5863007860	5-8630	0786	FAN; COOLING	000002	000000
5863007870	5-8630	0787	FAN COOLING	000001	000000
5863007900	5-8630	0790	PULLEY; FAN CENTER	000000	000000
5863007960	5-8630	0796	SPACER; FAN	000001	000002
5863008000	5-8630	0800	RADIATOR ASM	000000	000001
5863008010	5-8630	0801	CORE; RAD	000000	000000
5863008170	5-8630	0817	CAP; RAD	000001	000000
5863008180	5-8630	0818	PLUG DRAIN	000001	000000
5863008190	5-8630	0819	SEAL; RAD	000000	000002
5863008230	5-8630	0823	HOSE WATER; OVERFLOW RAD	000000	000005
5863008240	5-8630	0824	CLIP;HOSE RAD OVERFLOW	000000	000005
5863008300	5-8630	0830	GASKET; OUTLET PIPE TO H	000000	000001
5863008310	5-8630	0831	GASKET; WATER PUMP	000000	000001
5863008320	5-8630	0832	GASKET; PUMP TO C/BL	000000	000000
5863008330	5-8630	0833	GASKET; PUMP TO C/BL	000000	000000
5863008340	5-8630	0834	GASKET; WATER PUMP	000002	000000
5863008370	5-8630	0837	GASKET; THERMOSTAT HSG	000001	000005
5863008400	5-8630	0840	GEAR ASM; IDLE	000004	000000

5863008410	5-8630	0841	GEAR ASM; IDLE	000001	000000
5863008450	5-8630	0845	CASE; TIMING GEAR	000000	000000
5863008510	5-8630	0851	PLATE; FRT,C/BL	000000	000000
5863008560	5-8630	0856	COVER; GEAR CASE	000000	000000
5863008570	5-8630	0857	COVER; CYL BLOCK	000000	000000
5863008640	5-8630	1850	SHAFT; IDLE GEAR	000000	000000
5863008650	5-8630	0865	SHAFT;IDLE GEAR	000000	000000
5863008660	5-8630	0866	GASKET; COVER	000002	000000
5863008670	5-8630	0867	GASKET; FRT PLATE TO C/B	000006	000000
5863008680	5-8630	0868	GASKET; GEAR CASE TO C/B	000006	000000
5863008690	5-8630	0869	GASKET; COVER	000005	000000
5863008700	5-8630	0870	GASKET; FRT PLATE TO C/B	000001	000000
5863008710	5-8630	0871	GASKET; GEAR CASE TO C/B	000001	000000
5863008750	5-8630	0875	GENERATOR ASM	000000	000000
5863008780	5-8630	0878	STARTER ASM	000001	000000
5863008800	5-8630	0880	STARTER ASM	000000	000000
5863008850	5-8630	0885	SOLENOI;FUEL ENRICH	000000	000000
5863008870	5-8630	0887	SWITCH; OIL PRESSURE	000000	000000
5863008880	5-8630	0888	SWITCH; OIL PRESSURE	000000	000001
5863008900	5-8630	0890	PLUG; GLOW	000000	000000
5863008910	5-8630	0891	PLUG; GLOW	000004	000008
5863008920	5-8630	0892	CONNECTOR; GLOW PLUG	000000	000000
5863008940	5-8630	0894	CONNECTOR; GLOW PLUG	000000	000001
5863008950	5-8630	0895	CONNECTOR; GLOW PLUG	000000	000002
5863008980	5-8630	0898	HOLDER; BRUSH STARTER	000000	000000
5863009160	5-8630	0916	BRUSH;GENERATOR	000000	000000
5863009200	5-8630	0920	NUT ; PULLEY	000005	000000
5863009220	5-8630	0922	BOLT;THROUGH, GENERATOR	000000	000000
5863009270	5-8630	0927	PULLEY; GENERATOR	000002	000000
5863009510	5-8630	0951	REGULATOR; VOLTAGE	000000	000000
5863009570	5-8630	0957	PLATE; ADJ	000000	000000
5863009590	5-8630	0959	SWITCH; ENGAGE STARTER	000000	000000
5863009680	5-8630	0968	COVER; DUST, CASE	000000	000000
5863009690	5-8630	0969	ARMATURE; STARTER	000000	000000
5863009700	5-8630	0970	YOKE; STARTER	000000	000000
5863009750	5-8630	0975	BOLT; THROUGH, STARTER	000000	000000
5863009900	5-8630	0990	STOPPER SET;PINION	000000	000000
5863009910	5-8630	0991	WASHER KIT;STARTER	000000	000001
5863009920	5-8630	0992	METAL;RR COVER STARTER	000000	000001
5863009930	5-8630	0993	CASE; PINION, STARTER	000000	000000
5863010120	5-8630	1012	ROLLER;PINION STARTER	000000	000000
5863010200	5-8630	1020	PINION;CLU STARTER	000000	000001
5863010250	5-8630	1025	SPRING;BRUSH HOLDER START	000000	000003
5863010290	5-8630	1029	STAY; GEN BRKT	000000	000000
5863010310	5-8630	1031	HANGER; ENG RR	000000	000000
5863010360	5-8630	1036	SPRING; VALVE	000000	000000
5863010370	5-8630	1037	SPRING; COIL	000001	000000

5863010390	5-8630	1039	SPRING; LEVER	000008	000000
5863010400	5-8630	1040	SPRING; ROCKER SHAFT	000000	000000
5863010410	5-8630	1041	SPRING; GEAR	000000	000002
5863010440	5-8630	1044	SPRING; VALVE	000000	000028
5863010460	5-8630	1046	SPRING; LEVER	000012	000000
5863010540	5-8630	1054	SPRING; THERMOSTAT	000000	000000
5863010550	5-8630	1055	SPRING; THERMOSTAT	000000	000000
5863010560	5-8630	1056	SPRING; START	000002	000000
5863010620	5-8630	1062	BOLT; STAY	000000	000000
5863010630	5-8630	1063	GAUGE; OIL LEVEL	000000	000000
5863010660	5-8630	1066	CAP; OIL FILLER	000094	000000
5863010690	5-8630	1069	PLUG; BODY	000000	000000
5863010720	5-8630	1072	PLUG; BODY	000000	000000
5863010730	5-8630	1073	PLUG; CYL HD	000000	000000
5863010740	5-8630	1074	PLUG; BODY	000000	000000
5863010750	5-8630	1075	BOLT; EYE,OIL PIPE	000000	000000
5863010780	5-8630	1078	BOLT; EYE LEAK OFF PIPE	000005	000000
5863010800	5-8630	1080	METAL; CM/SHF	000000	000000
5863010810	5-8630	1081	METAL; CM/SHF	000001	000000
5863010820	5-8630	1082	METAL; CM/SHF	000004	000000
5863010830	5-8630	1083	BUSHING; TACHOMETER	000000	000000
5863010840	5-8630	1084	METAL; CR/SHF	000004	000000
5863010850	5-8630	1085	METAL; CRANKSHAFT U/S=0.	000000	000000
5863010860	5-8630	1086	METAL; CRANKSHAFT U/S=0.	000006	000000
5863010870	5-8630	1087	METAL; CR/SHF	000004	000000
5863010880	5-8630	1088	METAL; CRANKSHAFT U/S=0.	000000	000001
5863010890	5-8630	1089	METAL; CRANKSHAFT U/S=0.	000006	000000
5863010900	5-8630	1090	BUSHING; CONNROD	000000	000000
5863010910	5-8630	1091	BUSHIN; CONNROD	000000	000000
5863010920	5-8630	1092	METAL; CONNROD	000000	000000
5863010930	5-8630	1093	METAL; CONNROD	000000	000000
5863010940	5-8630	1094	METAL; CONNROD	000025	000000
5863011100	5-8630	1110	METAL; CM/SHF	000000	000000
5863011130	5-8630	1113	METAL; CONNROD	000000	000000
5863011160	5-8630	1116	BUSHING; CONNROD	000001	000000
5863011270	5-8630	1127	METAL SET; CRANKSHAFT ST	000001	000000
5863011280	5-8630	1128	METAL SET; CRANKSHAFT ST	000000	000000
5863011300	5-8630	1130	SEAL; OIL,CR/SHF,RR	000000	000000
5863011310	5-8630	1131	SEAL; OIL,CRANKSHAFT FRT	000002	000000
5863011340	5-8630	1134	COCK; DRAIN WATER	000000	000000
5863011450	5-8630	1145	GASKET; NOZZLE HOLDER	000000	000010
5863011460	5-8630	1146	GASKET; NOZZLE HOLDER	000000	000000
5863011470	5-8630	1147	CLIP; INJ PIPE	000000	000000
5863011480	5-8630	1148	SPACER; GEAR	000000	000000
5863011500	5-8630	1150	COLLAR; OIL PUMP	000000	000001
5863011510	5-8630	1151	COLLAR; BRKT, GEN	000000	000000
5863011540	5-8630	1154	WASHER; THRUST	000001	000000

5863011560	5-8630	1156	WASHER; ROCKER SPR	000004	000000
5863011620	5-8630	1162	SHIM; OIL PUMP	000001	000000
5863011630	5-8630	1163	NUT; TACHOMETER SHAFT	000000	000000
5863011650	5-8630	1165	CONNECTOR	000000	000001
5863011670	5-8630	1167	SCREW; ADJ,ROCKER ARM	000000	000000
5863011700	5-8630	1170	PLATE; TACHOMETER SHAFT	000000	000000
5863011750	5-8630	1175	CAP; SURGE TANK	000000	000000
5863011760	5-8630	1176	HOSE; WATER, RAD INL	000003	000000
5863011770	5-8630	1177	HOSE; WATER, RAD OUTLET	000000	000000
5863011790	5-8630	1179	TANK; SURGE, RAD	000000	000000
5863011820	5-8630	1182	BAND; IGN COIL	000000	000000
5863011840	5-8630	1184	GASKET; FUEL FILTER	000003	000000
5863011930	5-8630	1193	INDICATOR; ACL	000000	000000
5863011940	5-8630	1194	RELAY; ENG CONT	000000	000002
5863012000	5-8630	1200	SWITCH; THERMO	000000	000001
5863012010	5-8630	1201	SENSOR; THERMO. WATER	000001	000000
5863012020	5-8630	1202	SENSOR;THERMO WATER	000000	000000
5863012040	5-8630	1204	SWITCH; THERMO	000002	000000
5863012050	5-8630	1205	CONTROLLER; FIRE ALARM	000000	000002
5863012060	5-8630	1206	CONTROLLER; FIRE ALARM	000000	000000
5863012150	5-8630	1215	FILTER; AIR CLEANER	000000	000005
5863012170	5-8630	1217	GASKET; ELEMENT	000000	000001
5863012180	5-8630	1218	GASKET; ELEMENT	000000	000001
5863012190	5-8630	1219	PUMP ASM; FUEL	000000	000000
5863012200	5-8630	1220	BOLT; STOPPER	000000	000000
5863012310	5-8630	1231	BOLT; HD COVER	000000	000000
5863012320	5-8630	1232	GASKET; HD TO COVER	000000	000000
5863012330	5-8630	1233	PIPE; HD COVER	000000	000000
5863012350	5-8630	1235	BRACKET; ACL TO HD COVER	000000	000000
5863012370	5-8630	1237	BOLT; CYL HD TO BLOCK	000000	000000
5863012380	5-8630	1238	BOLT; CYL HD TO BLOCK	000000	000000
5863012390	5-8630	1239	CUP; SEALING,CYL HEAD	000000	000000
5863012420	5-8630	1242	BLOCK ASM; CYL	000000	000001
5863012430	5-8630	1243	GASKET; RELIEF VLV	000005	000000
5863012440	5-8630	1244	STUD; C/BL	000000	000000
5863012450	5-8630	1245	STUD; C/BL	000000	000000
5863012470	5-8630	1247	SHAFT; IDLE GEAR	000000	000000
5863012480	5-8630	1248	TUBE; GUIDE OIL LEVEL GA	000000	000000
5863012500	5-8630	1250	VALVE; EXH	000000	000000
5863012520	5-8630	1252	METAL SET; CRANKSHAFT ST	000000	000000
5863012530	5-8630	1253	WASHER; CR/SHF PULLEY	000001	000000
5863012570	5-8630	1257	HOUSING; FLYWHEEL	000000	000000
5863012580	5-8630	1258	BOLT; GEAR CASE	000000	000000
5863012600	5-8630	1260	BOLT; GEAR CASE	000000	000000
5863012630	5-8630	1263	PUMP ASM; WATER	000000	000001
5863012640	5-8630	1264	BOLT; WATER PUMP TO C/BL	000000	000000
5863012650	5-8630	1265	BUSHING; WATER PUMP	000000	000000

5863012660	5-8630	1266	BOLT; ADJ PLATE	000000	000000
5863012670	5-8630	1267	GASKET; NOZZLE HOLDER	000000	000000
5863012680	5-8630	1268	BOLT; CLIP INJ PIPE	000000	000000
5863012690	5-8630	1269	SHIM; INJ PUMP	000000	000000
5863012700	5-8630	1270	GASKET; OIL PIPE	000000	000000
5863012710	5-8630	1271	STARTER ASM	000000	000000
5863012730	5-8630	1273	BOLT; STARTER	000000	000000
5863012760	5-8630	1276	THERMOMETER UNIT	000002	000000
5863012770	5-8630	1277	SOLENOID; FUEL ENRICH	000000	000000
5863012780	5-8630	1278	SOLENOID; FUEL ENRICH	000000	000000
5863012790	5-8630	1279	BOLT; CABLE FIX	000020	000005
5863012800	5-8630	1280	WIRE	000000	000000
5863012810	5-8630	1281	HOSE; RUBBER	000000	000000
5863012820	5-8630	1282	HOSE; RUBBER	000000	000000
5863012830	5-8630	1283	LEVER; GOV	000000	000000
5863012840	5-8630	1284	BOLT; STAY	000000	000000
5863012850	5-8630	1285	RADIATOR ASM	000000	000002
5863012870	5-8630	1287	STUD; ACL BRKT	000000	000000
5863012880	5-8630	1288	HOSE; CONN	000000	000000
5863012890	5-8630	1289	SILENCER ASM; EXH	000000	000002
5863012900	5-8630	1290	BRACKET; EXH SILENCER	000000	000000
5863012910	5-8630	1291	BOLT	000000	000000
5863012920	5-8630	1292	BAND; EXHAUST SILENCER	000002	000000
5863012930	5-8630	1293	PLUG; DRAIN OIL	000166	000027
5863013020	5-8630	1302	BOLT;GEN	000000	000000
5863013340	5-8630	1334	SOLENOID;FUEL ENRICH	000000	000000
5863013420	5-8630	1342	STARTER ASM	000000	000000
5863013550	5-8630	1355	BOLT; BRACKET	000000	000010
5863013560	5-8630	1356	BOLT; HS	000000	000020
5863013570	5-8630	1357	BOLT;CABLE FIX	000000	000000
5863013580	5-8630	1358	BOLT;ENG HANGER	000001	000000
5863013590	5-8630	1359	BOLT;BRACKET	000000	000000
5863013610	5-8630	1361	NUT; CAP HD COVER	000000	000000
5863013630	5-8630	1363	GASKET;OIL PAN	000000	000000
5863013640	5-8630	1364	GASKET;CYL HD	000000	000000
5863013680	5-8630	1368	ARM & SHAFT ASM ROCKER	000000	000000
5863013690	5-8630	1369	GASKET;COVER	000000	000003
5863013720	5-8630	1372	PIPE ;OIL	000000	000005
5863013750	5-8630	1375	GASKET;PUMP TO C/BL	000000	000000
5863013760	5-8630	1376	GASKET; WATER PUMP	000000	000000
5863013770	5-8630	1377	GASKET; THERMOSTAT HSG	000000	000000
5863013790	5-8630	1379	GASKET;GEAR CASE TO C/BL	000001	000000
5863013810	5-8630	1381	BRUSH STARTER MOTOR	000000	000002
5863013820	5-8630	1382	BRUSH;STARTER MOTOR	000000	000002
5863013890	5-8630	1389	CUP ; INNER	000000	000001
5863013910	5-8630	1391	GASKET NOZZLE HOLDER	000000	000008
5863014090	5-8630	1409	DEVICE; SHUT DOWN	000001	000000

5863014250	5-8630	1425	PIPE; OIL	000001	000000
5863014390	5-8630	1439	SHAFT;LEVER	000000	000000
5863014430	5-8630	1443	ROCKER ARM; ASSY	000001	000000
5863014480	5-8630	1448	SHIM SET	000001	000000
5863014490	5-8630	1449	SHIM SET	000002	000000
5863014560	5-8630	1456	GASKET SET ENG OVERHAUL	000000	000000
5863014580	5-8630	1458	GASKET SET	000000	000001
5863014620	5-8630	1462	GASKET; HD TO COVER	000000	000000
5863014640	5-8630	1464	HEAD ASM;CYLINDER	000000	000000
5863014660	5-8630	1466	GASKET; CYL HD	000000	000000
5863014750	5-8630	1475	METAL;CM/SHF	000000	000000
5863014770	5-8630	1477	METAL;CM/SHF	000000	000000
5863014790	5-8630	1479	METAL;CM/SHF	000000	000000
5863014810	5-8630	1481	VALVE; OIL RELIEF	000000	000000
5863014840	5-8630	1484	PAN ASM; OIL	000000	000001
5863014860	5-8630	1486	GAUGE;OIL LEVEL	000008	000000
5863014880	5-8630	1488	TUBE;GUIDE OIL LEVEL	000000	000003
5863014890	5-8630	1489	PIPE; CRANKCASE	000001	000000
5863014910	5-8630	1491	GASKET;OIL PIPE	000012	000000
5863014970	5-8630	1497	ROD; PUSH	000000	000000
5863015010	5-8630	1501	CRANKSHAFT	000000	000002
5863015030	5-8630	1503	METAL;CRANCKSHAFT	000000	000000
5863015040	5-8630	1504	METAL;CRANKSHAFT	000000	000000
5863015060	5-8630	1506	METAL;CRACKSHAFT	000000	000000
5863015070	5-8630	1507	METAL;CRACKSHAFT	000000	000000
5863015090	5-8630	1509	METAL SET;CRACKSHAFT	000000	000000
5863015100	5-8630	1510	METAL SET;CRACKSHAFT	000000	000004
5863015110	5-8630	1511	FLYWHEEL	000000	000000
5863015130	5-8630	1513	PULLEY;CRANKSHAFT	000003	000000
5863015150	5-8630	1515	METAL;CONN ROD	000005	000000
5863015170	5-8630	1517	METAL; CONNROD	000000	000000
5863015190	5-8630	1519	METAL; CONN ROD	000003	000000
5863015210	5-8630	1521	ROD ASM; CONN	000000	000001
5863015230	5-8630	1523	BOLT;HOLDER	000000	000000
5863015240	5-8630	1524	BOLT;HOLDER	000004	000000
5863015260	5-8630	1526	PISTON SET	000000	000002
5863015280	5-8630	1528	HOLDER;BEARING	000000	000000
5863015340	5-8630	1534	METAL; CRACKSHAFT U/S=25	000003	000000
5863015360	5-8630	1536	METAL;CRANKSHAFT U/S=25	000003	000000
5863015380	5-8630	1538	METAL;CRACKSHAFT U/S=50	000003	000000
5863015400	5-8630	1540	METAL;CRACKSHAFT U/S=50	000002	000000
5863015420	5-8630	1542	CASE TIMING GEAR	000000	000000
5863015460			BOLT;GEAR CASE	000004	000000
5863015470	5-8630	1547	BOLT;GEAR CASE	000004	000000
5863015480	5-8630	1548	BOLT;GEAR CASE	000004	000000
5863015490	5-8630	1549	COVER;GEAR CASE	000000	000000
5863015540	5-8630	1554	PUMP ASM;WATER	000001	000001

5863015570	5-8630	1557	COVER;WATER PUMP	000000	000000
5863015600	5-8630	1560	FAN ; COOLING	000000	000000
5863015610	5-8630	1561	BELT;COOLING FAN	000007	000000
5863015630			PUMP ASM;INJ	000003	000000
5863015640			PIPE;INJ NO 2	000002	000000
5863015660	5-8630	1566	PIPE;INJ NO 1	000002	000000
5863015680	5-8630	1568	PIPE;INJ NO 3	000002	000000
5863015700	5-8630	1570	PIPE FUEL NOZZLE LEAK OFF	000003	000000
5863015720	5-8630	1572	PIPE; OIL	000001	000000
5863015740	5-8630	1574	STARTER ASM	000000	000000
5863015760			BOLT;GENERATOR	000004	000000
5863015770			COLLAR;BRACKET GENERATOR	000000	000000
5863015780	5-8630	1578	SOLENOID;FUEL ENRICH	000000	000000
5863015790	5-8630	1579	SMOKE SET	000000	000000
5863015820	5-8630	1582	LEVER;GOV	000000	000000
5863015840	5-8630	1584	FILTER ASM;FUEL	000000	000099
5863015850	5-8630	1585	ELEMENT;FUEL FILTER	000003	000050
5863015860	5-8630	1586	ELEMENT;OIL FILTER	000006	000077
5863015890	5-8630	1589	SWITCH;ENGAGE STARTER	000000	000000
5863016020	5-8630	1602	GASKET;HD TO COVER	000000	000000
5863016080	5-8630	1608	THERMOSTAT	000000	000000
5863016090	5-8630	1609	GASKET;OUTLET PIPE HOUSNG	000000	000013
5863016130	5-8630	1613	HOSE;WATER BY PASS	000006	000000
5863016150	5-8630	1615	CLIP;BY-PASS HOSE	000002	000000
5863016170			SENSOR;THERMO WATER	000002	000000
5863016240	5-8630	1624	SMOKE SET	000000	000001
5863016250	5-8630	1625	SMOKE SET	000000	000001
5863016260	5-8630	1626	SMOKE SET	000000	000001
5863016270	5-8630	1627	BOLT;CON'T SET SPEED	000000	000002
5863016280	5-8630	1628	NUT;SCREW	000000	000002
5863016290	5-8630	1629	CAP;FULL STOPPER	000000	000005
5863016380	5-8630	1638	SWITCH; ENGAGE STARTER	000005	000000
5863016540	5-8630	1654	STARTER ASM	000001	000019
5863016590	5-8630	1659	BELT; COOLING FAN	000000	000021
5863016640	5-8630	1664	NOZZLE ASM; INJ	000003	000000
5863016790	5-8630	1679	BRACKET;ROCKER SHAFT INTE	000000	000000
5863017000	5-8630	1700	PLATE; ADJ	000000	000000
5863017040	5-8630	1704	PIPE; FUEL NOZZLE LEAK OF	000000	000000
5863017070	5-8630	1707	SWITCH; OIL PRESSURE	000001	000000
5863017090	5-8630	1709	SOLENOID; FUEL ENRICH	000000	000000
5863017110	5-8630	1711	FILTER ASM; SUB FUEL	000000	000000
5863017150	5-8630	1715	GASKET; INL MANIFOLD	000000	000000
5863017400	5-8630	1740	RING SET; PISTON STANDARD	000000	000003
5863017530	5-8630	1753	RELAY; GLOW PLUG	000000	000001
5863017590	5-8630	1759	GASKET SET	000000	000000
5863017600	5-8630	1760	GASKET SET	000000	000001
5863017670	5-8630	1767	GASKET; INL MANIFOLD	000000	000000

5863017920	5-8630	1792	PIPE;OIL	000000	000005
5863017930	5-8630	1793	BOLT; BRACKET	000000	000010
5863017950	5-8630	1795	SWITCH; ENGAGE STARTER	000000	000001
5863017990	5-8630	1799	GASKET;CYL HD	000000	000003
5863018350	5-8630	1835	GASKET;CYL HD	000000	000006
5863018450	5-8630	1845	SHAFT; IDLE GEAR	000002	000000
5863018460	5-8630	1846	GASKET;GUIDE TUBE	000020	000000
5863018470	5-8630	1847	GASKET; SHAFT, CONT	000011	000000
5863018480	5-8630	1848	GASKET; ARM	000005	000000
5863018490	5-8630	1849	GASKET; ARM	000005	000000
5863018500	5-8630	1850	SHAFT;IDLE GEAR	000000	000000
5863018520	5-8630	1852	GASKET;PUMP TO C/BL	000000	000021
5863018540	5-8630	1854	FAN;COOLING	000000	000002
5863018550	5-8630	1855	PIPE;FUEL NOZZLE LEAK OFF	000001	000000
5863018560	5-8630	1856	GENERATOR ASM	000000	000001
5863018570	5-8630	1857	SOLENOID;FUEL ENRICH	000005	000000
5863018600	5-8630	1860	HOSE;WATER RAD OUTLET	000003	000000
5863018610	5-8630	1861	HOSE WATER;RAD INL	000003	000000
5863018620	5-8630	1862	BRACKET;EXH SILENCER	000000	000000
5863018660	5-8630	1866	CAP	000006	000000
5863018740	5-8630	1874	PUMP ASM;WATER	000001	000000
5863018800	5-8630	1880	HOSE;WATER BY-PASS	000003	000000
5863018840	5-8630	1884	BELT;COOLING FAN	000002	000000
5863018930	5-8630	1893	SPRING START	000000	000000
5863018950	5-8630	1895	METAL SET;CRANKSHAFT,U/S	000001	000001
5863018960	5-8630	1896	METAL SET;CRANKSHAFT,U/S	000000	000001
5863018970	5-8630	1897	METAL SET;CRANKSHAFT,U/S	000006	000004
5863018980	5-8630	1898	METAL SET;CRANKSHAFT,U/S	000000	000001
5863019110	5-8630	1911	ELEMENTS,OIL FILTER	000014	000000
5863019190	5-8630	1919	FILTER ASM; SUB FUEL	000000	000007
5863019210	5-8630	1921	METAL;CRANKSHAFT,U/S=0.25	000000	000000
5863019220	5-8630	1922	METAL; CRANKSHAFT,U/S=0.5	000003	000000
5863019230	5-8630	1923	METAL;CRANKSHAFT,U/S=0.5	000003	000000
5863019240	5-8630	1924	METAL; CONNROD	000000	000000
5863019250	5-8630	1925	METAL; CONNROD	000006	000000
5863019260	5-8630	1926	METAL; CONNROD	000006	000000
5863019480	5-8630	1948	RETURN PIPE	000002	000000
5863019490	5-8630	1949	EYE BOLT	000008	000000
5863019500	5-8630	1950	FUEL RETURN PIPE	000002	000000
5863019510	5-8630	1951	FUEL PIPE	000002	000000
5863019520	5-8630	1952	SOLENOID; FUEL ENRICH	000002	000000
5863019530	5-8630	1953	SOLENOID;FUEL ENRICH	000000	000002
5863019550	5-8630	1955	SOLENOID; FUEL ENRICH	000000	000005
5863019610	5-8630	1961	CYLINDER HEAD	000000	000001
5863019700	5-8630	1970	METAL; CONNROD	000000	000007
5863019780	5-8630	1978	METAL SET;CRANKSHAFT,STAN	000000	000001
5863019790	5-8630	1979	METAL; CONN ROD	000000	000006

5863019840	5-8630	1984	BEARING; CM/SHF	000000	000002
5863019910	5-8630	1991	METAL; CONNROD	000001	000004
5864000010	5-8640	0001	PLATE ASM; GEN	000000	000003
5864000020	5-8640	0002	STATOR; GEN	000000	000003
5864000030	5-8640	0003	CONNECTOR; GEN	000000	000000
5864000040	5-8640	0004	BEARING; ROTOR,GEN	000000	000000
5864000050	5-8640	0005	CLIP; WIRE,GEN	000000	000003
5864000060	5-8640	0006	COVER; RR END,GEN	000000	000003
5864000070	5-8640	0007	FLYWHEEL ASM; GEN	000000	000000
5864000080	5-8640	0008	SCREW; CLIP	000000	000000
5864000090	5-8640	0009	METAL; PINION CASE STARTE	000000	000020
5864000100	5-8640	0010	NUT; RECTIFIER,GEN	000000	000003
5864000110	5-8640	0011	PIPE; FUEL,FUEL FILTER TO	000001	000000
5864000120	5-8640	0012	SPACER; ROTOR,GEN	000000	000003
5864000130	5-8640	0013	WASHER; FLYWHEEL,GEN	000000	000003
5864000140	5-8640	0014	SWITCH; OIL PRESSURE	000000	000016
5864000150	5-8640	0015	NUT; NOZZLE RET,NOZZLE HO	000000	000013
5864000160	5-8640	0016	SPRING; NOZZLE,NOZZLE HOL	000000	000010
5864000170	5-8640	0017	SEAT; NOZZLE SPRING,NOZZL	000000	000018
5864000180	5-8640	0018	SPACER; NOZZLE SPRING,NOZ	000000	000013
5864000190	5-8640	0019	PIN; NOZZLE SET,NOZZLE HO	000000	000018
5864000200	5-8640	0020	SHIM; NOZZLE SPRING,NOZZL	000000	000010
5864000210	5-8640	0021	GEAR; STARTER	000000	000006
5864000220	5-8640	0022	STUD; LEAD PIPE, M8X22	000000	000006
5864000230	5-8640	0023	HOLDER; BRUSH,GEN	000000	000010
5864000240	5-8640	0024	PUMP ASM; FUEL	000000	000045
5864000250	5-8640	0025	REGULATOR; VOLTAGE, 20A	000000	000000
5864000260	5-8640	0026	CAP; HIGH-IDLE	000000	000003
5864000270	5-8640	0027	CLIP; INJ PIPE	000000	000048
5864000280	5-8640	0028	CAP; PIPE	000000	000000
5864000290	5-8640	0029	GASKET; FRT PLATE, ID=16	000000	000042
5864000300	5-8640	0030	CAP; RUBBER,DUST COVER	000000	000000
5864000310	5-8640	0031	ROTOR; GEN	000000	000002
5864000320	5-8640	0032	COVER ASM; FRT,GEN	000000	000003
5864000330	5-8640	0033	FLAME; DRIVE	000000	000003
5864000340	5-8640	0034	PULLEY; GEN	000000	000010
5864000350	5-8640	0035	NUT; PULLEY,GEN	000000	000003
5864000360	5-8640	0036	BRUSH; GEN	000000	000012
5864000370	5-8640	0037	COLLAR; STEEL	000000	000003
5864000380	5-8640	0038	BEARING; ROTOR,GEN	000000	000004
5864000390	5-8640	0039	RETAINER; ROTOR,GEN	000000	000003
5864000400	5-8640	0040	BOLT; GEN	000000	000003
5864000410	5-8640	0041	BOLT; GEN	000000	000003
5864000420	5-8640	0042	WASHER; PLATE	000000	000003
5864000430	5-8640	0043	HOLDER; TERMINAL,GEN	000000	000002
5864000440	5-8640	0044	SPRING; BRUSH,GEN	000000	000003
5864000450	5-8640	0045	BOLT; THROUGH,GEN	000000	000003

5864000460	5-8640	0046	SCREW; REG	000000	000003
5864000470	5-8640	0047	BOLT; THROUGH,GEN	000000	000003
5864000480	5-8640	0048	SCREW; REG	000000	000003
5864000490	5-8640	0049	BOLT; THROUGH,GEN	000000	000003
5864000500	5-8640	0050	BUSHING; INSULATION TERMI	000000	000003
5864000510	5-8640	0051	NUT; RECTIFIER,GEN	000000	000003
5864000520	5-8640	0052	WASHER; PLATE	000000	000003
5864000530	5-8640	0053	WASHER; HEAT SHIELD	000000	000010
5864000540	5-8640	0054	PLUG; OIL DRAIN, M22	000000	000006
5864000550	5-8640	0055	DIODE ASM	000002	000003
5864000560	5-8640	0056	RELAY; GLOW PLUG	000000	000002
5864000570	5-8640	0057	PLATE; FRT,C/BL	000000	000002
5864000580	5-8640	0058	STUD; INJ PUMP, M8X25	000000	000009
5864000590	5-8640	0059	PLATE; BAFFLE HD COVER	000000	000007
5864000600	5-8640	0060	COVER; DIAPH	000000	000003
5864000610	5-8640	0061	DIAPHRAGM	000000	000001
5864000620	5-8640	0062	SPRING; DIAPH,VENTILATOR	000000	000003
5864000630	5-8640	0063	BRACKET; ROCKER ARM SHAFT	000000	000004
5864000640	5-8640	0064	BRACKET; ROCKER ARM SHAFT	000003	000000
5864000650	5-8640	0065	STUD; COVER	000000	000000
5864000660	5-8640	0066	NOZZLE; HEAT SHIELD	000000	000015
5864000670	5-8640	0067	GEAR; CR/SHF	000004	000000
5864000680	5-8640	0068	SHAFT; IDLE GEAR	000000	000010
5864000690	5-8640	0069	BUSHING; IDLE GEAR	000000	000003
5864000700	5-8640	0070	GEAR; IDLE	000000	000010
5864000710	5-8640	0071	GEAR; INJ PUMP	000000	000003
5864000730	5-8640	0073	COVER ASM; OIL PUMP	000000	000001
5864000740	5-8640	0074	ROTOR; OIL PUMP	000000	000001
5864000750	5-8640	0075	ROTOR; OIL PUMP	000000	000002
5864000760	5-8640	0076	SCREW; OIL PUMP, M6X16	000000	000002
5864000770	5-8640	0077	BRACKET; OIL FILTER	000000	000003
5864000790	5-8640	0079	PIPE; OIL,INJ PUMP TO C/B	000000	000018
5864000800	5-8640	0080	PIPE; WATER	000000	000000
5864000810	5-8640	0081	CLIP; WATER PIPE	000000	000000
5864000820	5-8640	0082	HOLDER ASM; NOZZLE	000000	000036
5864000830	5-8640	0083	SEDIMENTER; FUEL	000000	000004
5864000840	5-8640	0084	ELEMENT; FUEL FILTER	000000	000048
5864000850	5-8640	0085	ELEMENT; FUEL FILTER	000000	000000
5864000860	5-8640	0086	PIPE ASSY, RETURN	000004	000000
5864000870	5-8640	0087	PIPE; FUEL LEAK	000000	000005
5864000880	5-8640	0088	PLATE; ADJ	000000	000003
5864000890	5-8640	0089	BOLT; GEN	000000	000024
5864000900	5-8640	0090	GEAR; RING	000000	000009
5864000910	5-8640	0091	BELT; COOLING FAN	000000	000010
5864000920	5-8640	0092	HOUSING; FLYWHEEL	000000	000000
5864000930	5-8640	0093	GUIDE; VLV	000001	000019
5864000940	5-8640	0094	WASHER; NOZZLE BRKT	000000	000003

5864000950	5-8640	0095	COVER; TACHOMETER DRIVE	000000	000005
5864000960	5-8640	0096	COVER; HYDRAULIC PUMP	000000	000023
5864000970	5-8640	0097	BOLT; FLYWHEEL	000000	000006
5864000980	5-8640	0098	SWITCH; THERMO	000000	000047
5864000990	5-8640	0099	FAN; COOLING	000000	000181
5864001000	5-8640	0100	SPACER; FAN	000000	000001
5864001010	5-8640	0101	SEAL; VLV GUIDE	000000	000009
5864001020	5-8640	0102	PLUG; WATER PUMP	000000	000003
5864001030	5-8640	0103	TUBE; GUIDE,OIL LEVEL GAU	000000	000009
5864001040	5-8640	0104	BOLT; CONNROD	000000	000000
5864001050	5-8640	0105	BOLT; CR/SHF PULLEY	000000	000020
5864001060	5-8640	0106	SCREW; COVER TO BODY,WATE	000000	000003
5864001070	5-8640	0107	GASKET; INJ PUMP	000000	000001
5864001080	5-8640	0108	BEARING; ROTOR,GEN	000004	000000
5864001090	5-8640	0109	STUD; EXH PIPE, M8X80	000000	000012
5864001100	5-8640	0110	BOLT; EXH MANIF, M8X80	000000	000002
5864001110	5-8640	0111	PLUG; C/BL, PT1/8	000000	000001
5864001120	5-8640	0112	CLIP; CAP	000000	000000
5864001130	5-8640	0113	CAP; OIL FILLER	000000	000007
5864001140	5-8640	0114	PLUG; C/BL, PT1/4	000000	000002
5864001150	5-8640	0115	NUT; CAP,HD COVER	000000	000004
5864001160	5-8640	0116	BOLT; JOINT BLOCK	000000	000000
5864001170	5-8640	0117	BOLT; THROUGH,STARTER	000000	000000
5864001180	5-8640	0118	COVER; GEAR CASE	000000	000022
5864001190	5-8640	0119	GASKET; HSG TO HD	000000	000000
5864001200	5-8640	0120	SEAL; VLV GUIDE	000000	000011
5864001210	5-8640	0121	GASKET; PLUG,W/P, ID=16	000000	000013
5864001220	5-8640	0122	CLIP; RUBBER HOSE	000000	000017
5864001230	5-8640	0123	CLIP; FUEL PIPE	000000	000002
5864001240	5-8640	0124	TIMER; GLOW PLUG	000001	000002
5864001250	5-8640	0125	CUP; SEALING, OD=50	000000	000002
5864001260	5-8640	0126	METAL SET; CRANKSHAFT,STA	000000	000000
5864001270	5-8640	0127	GASKET; INL MANIF TO HD	000000	000005
5864001280	5-8640	0128	PLUG; RELIEF VLV	000000	000000
5864001290	5-8640	0129	BOLT; GEAR CASE, M8X85	000000	000000
5864001300	5-8640	0130	GASKET; CYL HD	000000	000003
5864001310	5-8640	0131	COVER; NOISE,C/BL	000000	000003
5864001320	5-8640	0132	PLATE; BREATHER,HD COVER	000000	000003
5864001330	5-8640	0133	VALVE; INL	000000	000019
5864001340	5-8640	0134	SHAFT ASSY, ROCKER	000004	000000
5864001350	5-8640	0135	SHAFT; ROCKER ARM	000003	000000
5864001360	5-8640	0136	GASKET; HD TO COVER	000000	000011
5864001370	5-8640	0137	COVER; CYL HD	000000	000001
5864001380	5-8640	0138	ARM; ROCKER	000000	000044
5864001390	5-8640	0139	HEAD ASM; CYL	000000	000001
5864001400	5-8640	0140	CLAMP; NOZZLE HOLDER	000000	000003
5864001410	5-8640	0141	MANIFOLD; EXHAUST	000000	000001

5864001420	5-8640	0142	GASKET; EXH PIPE	000000	000001
5864001430	5-8640	0143	CAMSHAFT	000000	000003
5864001440	5-8640	0144	CRANKSHAFT	000000	000002
5864001450	5-8640	0145	PULLEY; CR/SHF	000000	000002
5864001460	5-8640	0146	PISTON SET	000000	000006
5864001470	5-8640	0147	RING SET; PISTON,STANDARD	000000	000003
5864001480	5-8640	0148	PISTON SET; O/S=0.25	000000	000001
5864001490	5-8640	0149	RING SET; PISTON,O/S=0.25	000000	000003
5864001500	5-8640	0150	GAUGE; OIL LEVEL	000000	000000
5864001510	5-8640	0151	PUMP ASM; WATER	000000	000000
5864001520	5-8640	0152	JOINT; THERMOSTAT	000000	000000
5864001530	5-8640	0153	HOSE; RUBBER,WATER PIPE	000000	000002
5864001540	5-8640	0154	HOSE; RUBBER,WATER PIPE	000000	000022
5864001550	5-8640	0155	HOSE; RUBBER,WATER PIPE	000000	000002
5864001560	5-8640	0156	HOSE; RUBBER,WATER PIPE	000000	000022
5864001570	5-8640	0157	NOZZLE; INJ	000000	000008
5864001580	5-8640	0158	COVER; UPR,FUEL FILTER	000000	000000
5864001590	5-8640	0159	PIPE; INJ NO.1	000000	000000
5864001600	5-8640	0160	PIPE; INJ NO.2	000000	000000
5864001610	5-8640	0161	PIPE; INJ NO.3	000000	000000
5864001620	5-8640	0162	PLATE; ADJ	000000	000005
5864001630	5-8640	0163	PLATE; FRT,C/BL	000000	000007
5864001640	5-8640	0164	HOSE; RUBBER,HEAD COVER T	000000	000009
5864001650	5-8640	0165	MANIFOLD; INL	000000	000000
5864001660	5-8640	0166	PULLEY; CR/SHF	000000	000001
5864001670	5-8640	0167	BOLT ASSY, JOINT	000000	000005
5864001680	5-8640	0168	FAN; COOLING	000000	000008
5864001690	5-8640	0169	PLATE; ADJ	000000	000029
5864001700	5-8640	0170	SPACER; GEN	000000	000011
5864001710	5-8640	0171	PIN; CR/SHF, OD=8 L=16	000000	000008
5864001720	5-8640	0172	RETAINER; CR/SHF	000000	000000
5864001730	5-8640	0173	PLATE; CRANKCASE	000000	000003
5864001740	5-8640	0174	VALVE; EXH	000000	000007
5864001750	5-8640	0175	BUSHING; CONNROD	000000	000015
5864001760	5-8640	0176	STUD; OIL FILTER	000000	000037
5864001770	5-8640	0177	STRAINER & PIPE ASM; OIL	000004	000000
5864001780	5-8640	0178	GASKET; COVER TO BODY	000000	000008
5864001790	5-8640	0179	COVER; WATER PUMP	000000	000004
5864001800	5-8640	0180	RING; RET	000000	000002
5864001810	5-8640	0181	HEATER; INTAKE	000000	000000
5864001820	5-8640	0182	PLATE; RR,C/BL	000000	000000
5864001830	5-8640	0183	CAMSHAFT	000000	000004
5864001840	5-8640	0184	PAN ASM; OIL	000000	000000
5864001850	5-8640	0185	BOLT; CYL HD TO BLOCK	000000	000090
5864001860	5-8640	0186	BOLT; BRG CAP	000000	000023
5864001870	5-8640	0187	PLATE; THRUST	000000	000005
5864001880	5-8640	0188	METAL SET; CRANKSHAFT,U/S	000000	000004

5864001890	5-8640	0189	WASHER; THRUST,CR/SHF	000000	000000
5864001900	5-8640	0190	WASHER; THRUST, U/S=0.25	000000	000000
5864001910	5-8640	0191	PLATE; BAFFLE,CYL HD COVE	000000	000003
5864001920	5-8640	0192	SCREW; ADJ,ROCKER ARM	000000	000040
5864001930	5-8640	0193	SPRING; ROCKER SHAFT	000000	000007
5864001940	5-8640	0194	CAP; VLV STEM END	000000	000024
5864001950	5-8640	0195	NUT; ADJ SCREW,LK	000000	000034
5864001960	5-8640	0196	GUIDE; VLV	000000	000020
5864001970	5-8640	0197	GASKET; EXH MANIF TO HD	000009	000000
5864001980	5-8640	0198	GEAR; CM/SHF	000004	000000
5864001990	5-8640	0199	TAPPET; VLV	000000	000015
5864002000	5-8640	0200	ROD; PUSH	000000	000000
5864002010	5-8640	0201	METAL SET; CONN ROD,STD	000000	000000
5864002020	5-8640	0202	METAL SET; CONN,U/S=0.25	000000	000000
5864002030	5-8640	0203	BOLT; GEAR	000000	000023
5864002040	5-8640	0204	GASKET; STRAINER	000000	000000
5864002050	5-8640	0205	GASKET; OIL FILTER TO BRK	000000	000008
5864002060	5-8640	0206	ELEMENT; OIL FILTER	000000	000000
5864002070	5-8640	0207	GASKET; OUTLET PIPE TO HS	000000	000013
5864002080	5-8640	0208	CLIP; INJ PIPE	000000	000043
5864002090	5-8640	0209	SCREW; CLIP,I/P, M4X14	000000	000007
5864002100	5-8640	0210	GASKET; HEATER,INTAKE	000000	000000
5864002110	5-8640	0211	PULLEY; FAN CENTER	000000	000003
5864002120	5-8640	0212	THERMOSTAT	000000	000049
5864002130	5-8640	0213	FLYWHEEL ASSY	000000	000012
5864002140	5-8640	0214	PIN; PISTON	000000	000026
5864002150	5-8640	0215	CASE ASSY	000000	000000
5864002160	5-8640	0216	CASE	000000	000003
5864002170	5-8640	0217	PIPE ASSY, FUEL	000004	000000
5864002180	5-8640	0218	PIPE ASSY, FUEL OIL	000004	000000
5864002190	5-8640	0219	TIMER; GLOW PLUG	000000	000002
5864002200	5-8640	0220	STARTER ASM	000000	000028
5864002210	5-8640	0221	ARMATURE; STARTER	000000	000001
5864002220	5-8640	0222	YOKE; STARTER	000000	000003
5864002230	5-8640	0223	HOLDER; BRUSH STARTER	000000	000003
5864002240	5-8640	0224	BRUSH; (+),STARTER	000000	000048
5864002250	5-8640	0225	BRUSH; (-),STARTER	000000	000002
5864002260	5-8640	0226	SPRING; BRUSH HOLDER STAR	000000	000003
5864002270	5-8640	0227	COVER ASM; RR,STARTER	000000	000003
5864002280	5-8640	0228	METAL; RR COVER STARTER	000000	000000
5864002290	5-8640	0229	BRACKET; CENTER STARTER	000000	000003
5864002300	5-8640	0230	BRACKET; CENTER STARTER	000000	000003
5864002310	5-8640	0231	CASE; PINION,STARTER	000000	000003
5864002320	5-8640	0232	LEVER; SHIFT,STARTER	000000	000010
5864002330	5-8640	0233	COVER SET; DUST ENGAGE SW	000000	000003
5864002340	5-8640	0234	NOZZLE; INJ	000000	000003
5864002350	5-8640	0235	PIPE; WATER OUTLET	000000	000003

5864002370	5-8640	0237	PULLEY; FAN CENTER	000000	000002
5864002380	5-8640	0238	CLIP; RUBBER HOSE	000000	000003
5864002390	5-8640	0239	SPRING; RELIEF VLV	000001	000000
5864002400	5-8640	0240	GENERATOR ASM	000000	000022
5864002410	5-8640	0241	COVER; RR END,GEN	000000	000001
5864002420	5-8640	0242	REGULATOR ASM; VOLTAGE,GE	000003	000000
5864002430	5-8640	0243	GEAR; HYDRAULIC PUMP	000000	000023
5864002440	5-8640	0244	GEAR; HYDRAULIC PUMP	000000	000002
5864002450	5-8640	0245	BOLT; RET TO C/BL, M8X30	000000	000005
5864002460	5-8640	0246	GASKET; PUMP TO C/BL	000000	000005
5864002470	5-8640	0247	GASKET; HSG TO HD	000000	000010
5864002480	5-8640	0248	PIPE ASM; LEAK OFF	000000	000006
5864002490	5-8640	0249	PIPE ASM; FUEL,LEAK OFF	000000	000001
5864002500	5-8640	0250	STARTER ASM	000000	000014
5864002510	5-8640	0251	YOKE; STARTER	000000	000002
5864002520	5-8640	0252	SWITCH; ENGAGE STARTER	000000	000001
5864002530	5-8640	0253	ARMATURE; STARTER	000000	000002
5864002540	5-8640	0254	HOLDER; BRUSH STARTER	000000	000003
5864002550	5-8640	0255	BRUSH; (-),STARTER	000000	000000
5864002560	5-8640	0256	BRUSH; (+),STARTER	000000	000000
5864002570	5-8640	0257	SPRING; BRUSH HOLDER STAR	000000	000003
5864002580	5-8640	0258	COVER ASM; RR,STARTER	000000	000003
5864002590	5-8640	0259	METAL; RR COVER STARTER	000000	000006
5864002600	5-8640	0260	BRACKET; CENTER STARTER	000000	000003
5864002610	5-8640	0261	METAL; CENTER BRKT,STARTE	000000	000003
5864002620	5-8640	0262	GEAR; STARTER	000000	000003
5864002630	5-8640	0263	BRACKET; CENTER STARTER	000000	000003
5864002640	5-8640	0264	PINION; CLU,STARTER	000000	000000
5864002650	5-8640	0265	SHAFT; GEAR STARTER	000000	000000
5864002660	5-8640	0266	GEAR; STARTER	000000	000000
5864002670	5-8640	0267	WASHER KIT; STARTER	000000	000003
5864002680	5-8640	0268	CASE; PINION,STARTER	000000	000003
5864002690	5-8640	0269	LEVER; SHIFT,STARTER	000000	000003
5864002700	5-8640	0270	COVER SET; DUST ENGAGE SW	000000	000002
5864002710	5-8640	0271	SEAL; OIL,CR/SHF,RR	000000	000000
5864002720	5-8640	0272	SEAL; OIL,CR/SHF,FRT	000000	000023
5864002730	5-8640	0273	STUD; GEN	000000	000003
5864002740	5-8640	0274	COLLAR; DIST,COVER, L=18	000000	000003
5864002750	5-8640	0275	BEARING; CAMSHAFT	000000	000017
5864002760	5-8640	0276	SPRING; VLV	000000	000044
5864002770	5-8640	0277	SEAT; SPR	000000	000041
5864002780	5-8640	0278	WASHER; CR/SHF PULLEY	000000	000022
5864002790	5-8640	0279	GASKET; OUTLET PIPE TO HS	000000	000013
5864002800	5-8640	0280	HANGER; ENG,RR	000000	000023
5864002810	5-8640	0281	VALVE; RELIEF,OIL PUMP	000001	000005
5864002820	5-8640	0282	PLUG; C/BL	000000	000003
5864002830	5-8640	0283	PLUG; WATER DRAIN	000000	000010

5864002840	5-8640	0284	GENERATOR ASM, 15A	000000	000009
5864002850	5-8640	0285	FLYWHEEL	000000	000001
5864002860	5-8640	0286	GASKET; COVER	000000	000010
5864002870	5-8640	0287	SPACER; FAN	000000	000021
5864002880	5-8640	0288	GASKET; EYE BOLT,OIL PIPE	000000	000023
5864002890	5-8640	0289	GASKET; OIL PIPE TO C/BL	000000	000038
5864002900	5-8640	0290	GASKET; PLUG,OIL DR,ID=22	000000	000035
5864002910	5-8640	0291	WASHER; LK,ROTOR	000000	000000
5864002920	5-8640	0292	RING; SNAP,PISTON,ID=26	000000	000093
5864002930	5-8640	0293	PIN; PULLEY, OD=3 L=10	000000	000013
5864002940	5-8640	0294	PIN; HEAD GSKT,OD=6 L=12	000000	000013
5864002950	5-8640	0295	KEY; CM/SHF	000000	000003
5864002960	5-8640	0296	SCREW; BAFFLE PLATE,M5X10	000000	000028
5864002970	5-8640	0297	WASHER; PL,WATER PUMP	000000	000014
5864002980	5-8640	0298	BOLT; EYE,PIPE TO PUMP	000000	000001
5864002990	5-8640	0299	PLUG; WATER PUMP, PT1/8	000000	000003
5864003000	5-8640	0300	PLUG; WATER PUMP, PT1/4	000000	000003
5864003010	5-8640	0301	PLUG; GEAR CASE, PT3/8	000000	000003
5864003020	5-8640	0302	PLUG; GEAR CASE, PT1/2	000000	000003
5864003030	5-8640	0303	BEARING; GEAR	000001	000001
5864003040	5-8640	0304	GASKET; HD COVER, ID=12	000000	000022
5864003050	5-8640	0305	GASKET, ID=15	000000	000013
5864003060	5-8640	0306	GASKET; FUEL FILTER,ID=16	000000	000007
5864003070	5-8640	0307	GASKET; OIL FILLER, ID=32	000000	000014
5864003080	5-8640	0308	GASKET; UPR COVER,ID=65	000000	000008
5864003090	5-8640	0309	GASKET; COVER, ID=85	000000	000028
5864003100	5-8640	0310	GASKET; COVER, ID=24	000000	000016
5864003110	5-8640	0311	BELT; COOLING FAN	000000	000093
5864003120	5-8640	0312	BOLT; GEN, M8X45	000000	000029
5864003130	5-8640	0313	SCREW; STATOR	000000	000013
5864003140	5-8640	0314	BOLT; COVER, M6X16	000000	000062
5864003150	5-8640	0315	BOLT; COOLING FAN, M6X30	000000	000086
5864003160	5-8640	0316	BOLT; COOLING FAN, M6X40	000000	000086
5864003170	5-8640	0317	BOLT; WATER PUMP,M8X12	000000	000009
5864003180	5-8640	0318	BOLT; HANGER, M8X14	000000	000028
5864003190	5-8640	0319	BOLT; OIL PAN, M8X16	000000	000093
5864003200	5-8640	0320	BOLT; INL MANIF, M8X20	000000	000031
5864003210	5-8640	0321	BOLT; OUTLET PIPE, M8X22	000000	000100
5864003220	5-8640	0322	BOLT; PLATE, M8X25	000000	000019
5864003230	5-8640	0323	BOLT; FUEL FILTER, M8X30	000000	000011
5864003240	5-8640	0324	BOLT; RET TO C/BL, M8X35	000000	000013
5864003250	5-8640	0325	BOLT; IDLE GR SHFT,M8X40	000000	000000
5864003260	5-8640	0326	BOLT; OIL PAN, M8X45	000000	000109
5864003270	5-8640	0327	BOLT; BRKT, M8X50	000000	000012
5864003280	5-8640	0328	BOLT; GEAR CASE, M8X55	000014	000036
5864003290	5-8640	0329	BOLT; W/P TO C/BL, M8X60	000000	000010
5864003300	5-8640	0330	BOLT; INL MANIF, M8X80	000000	000099

5864003310	5-8640	0331	BOLT; COVER, M10X45	000064	000010
5864003320	5-8640	0332	BOLT; STARTER, M12X25	000000	000100
5864003330	5-8640	0333	BOLT; RR PLATE,M10X20	000000	000013
5864003340	5-8640	0334	BOLT; HSG, M10X25	000000	000036
5864003350	5-8640	0335	BOLT; HSG, M10X30	000000	000092
5864003360	5-8640	0336	NUT; STUD,INJ PUMP	000000	000004
5864003370	5-8640	0337	NUT; GEN	000000	000019
5864003380	5-8640	0338	NUT; CLIP,OIL PIPE	000000	000013
5864003390	5-8640	0339	BOLT; GEAR, M8X28	000000	000053
5864003400	5-8640	0340	NUT; FLYWHEEL,GEN	000000	000013
5864003410	5-8640	0341	CUP; SEALING, OD=12	000000	000008
5864003420	5-8640	0342	CUP; SEALING, OD=30	000000	000000
5864003430	5-8640	0343	CUP; SEALING,CYL HD,OD=40	000000	000019
5864003440	5-8640	0344	COLLAR; SPLIT	000016	000020
5864003450	5-8640	0345	CASE; TIMING GEAR	000000	000008
5864003460	5-8640	0346	BLOCK ASM; CYL	000000	000002
5864003470	5-8640	0347	NOZZLE ASM; INJ	000000	000003
5864003480	5-8640	0348	CASE; TIMING GEAR	000000	000023
5864003490	5-8640	0349	NOZZLE ASM; INJ	000000	000006
5864003500	5-8640	0350	GASKET SET; ENG OVERHAUL	000000	000002
5864003510	5-8640	0351	PUMP ASM; INJ	000000	000001
5864003520	5-8640	0352	PUMP ASM; INJ	000001	000005
5864003530	5-8640	0353	ROD ASM; CONN	000000	000002
5864003540	5-8640	0354	GASKET, LIQUID	000000	000003
5864003550	5-8640	0355	SEAL;OIL,CR/SHF,RR	000000	000042
5864003560	5-8640	0356	CONNECTOR; GEN	000000	000014
5864003570	5-8640	0357	BEARING; ROTOR GEN	000000	000005
5864003580	5-8640	0358	SCREW	000000	000006
5864003610	5-8640	0361	CAP; RUBBER	000000	000007
5864003620	5-8640	0362	STUD; COVER	000000	000002
5864003630	5-8640	0363	CLIP; CAP	000000	000002
5864003640	5-8640	0364	BOLT ROUGH STARTER	000000	000000
5864003650	5-8640	0365	PLUG; RELIEF VLL	000000	000003
5864003660	5-8640	0366	BOLT, GEAR CSE, M8X85	000000	000013
5864003670	5-8640	0367	RETAINER; CR/SHR	000000	000001
5864003680	5-8640	0368	WASHER; LK, ROTER	000000	000010
5864003690	5-8640	0369	CUP; SEALING OD=30	000000	000003
5864003700	5-8640	0370	GASKET SET; ENG OVERHAUL	000000	000003
5864003710	5-8640	0371	GASKET SET; ENG OVERHAUL	000000	000000
5864003720	5-8640	0372	COVER; CYL HD	000000	000003
5864003730	5-8640	0373	HEAD ASM; CYL	000000	000005
5864003740	5-8640	0374	BLOCK ASM; CYL	000000	000003
5864003750	5-8640	0375	JET; OIL,PISTON COOLING	000000	000003
5864003760	5-8640	0376	VALVE; CHECK,OIL	000000	000003
5864003770	5-8640	0377	VALVE; EXH	000000	000009
5864003780	5-8640	0378	FLYWHEEL	000000	000001
5864003790	5-8640	0379	HOUSING; FLYWHEEL	000000	000022

5864003800	5-8640	0380	GASKET; GEAR CASE TO COVE	000000	000022
5864003810	5-8640	0381	PLATE; FRT,C/BL	000000	000003
5864003820	5-8640	0382	PLATE; FRT,C/BL	000000	000035
5864003830	5-8640	0383	MANIFOLD; INL	000000	000003
5864003840	5-8640	0384	DUCT; INL,TURBOCHARGER	000000	000000
5864003850	5-8640	0385	HEATER; INTAKE	000000	000000
5864003860	5-8640	0386	GASKET; HEATER,INTAKE	000000	000002
5864003870	5-8640	0387	MANIFOLD; EXHAUST	000000	000002
5864003880	5-8640	0388	DIAPHRAGM	000000	000003
5864003890	5-8640	0389	GASKET; BODY TO HD COVER	000000	000013
5864003900	5-8640	0390	HOSE; BREATHER,OPEN	000000	000012
5864003910	5-8640	0391	PUMP ASM; WATER	000000	000036
5864003920	5-8640	0392	PIPE; WATER	000000	000006
5864003930	5-8640	0393	PLUG; WATER PUMP	000000	000001
5864003940	5-8640	0394	BELT; COOLING FAN	000000	000040
5864003950	5-8640	0395	PLATE; ADJ	000000	000001
5864003960	5-8640	0396	TURBOCHARGER ASM	000000	000000
5864003970	5-8640	0397	GASKET; TURBOCHARGER TO E	000000	000003
5864003980	5-8640	0398	STUD; TURBOCHARGER TO EXH	000000	000012
5864003990	5-8640	0399	CLIP; RUBBER HOSE	000000	000003
5864004000	5-8640	0400	CLIP; RUBBER HOSE,TURBOCH	000000	000003
5864004010	5-8640	0401	HOSE; TURBOCHARGER	000000	000000
5864004020	5-8640	0402	GASKET; TURBOCHARGER TO E	000000	000000
5864004030	5-8640	0403	PUMP ASM; INJ	000000	000002
5864004040	5-8640	0404	WASHER; INJ PUMP	000000	000013
5864004050	5-8640	0405	BRACKET; INJ PUMP	000000	000003
5864004060	5-8640	0406	NOZZLE ASM; INJ	000000	000001
5864004070	5-8640	0407	NOZZLE; INJ	000000	000002
5864004080	5-8640	0408	SPACER; INJ PUMP	000000	000002
5864004090	5-8640	0409	NUT; GEAR,INJ PUMP	000000	000013
5864004100	5-8640	0410	ELEMENT; OIL FILTER	000000	000000
5864004110	5-8640	0411	COOLER ASM; OIL	000000	000003
5864004120	5-8640	0412	PIPE; WATER,OIL COOLER	000000	000003
5864004130	5-8640	0413	CLIP; HOSE,OIL COOLER	000000	000003
5864004140	5-8640	0414	CLIP; HOSE,OIL COOLER	000000	000000
5864004150	5-8640	0415	CLIP; HOSE,OIL COOLER	000000	000003
5864004160	5-8640	0416	HOSE; WATER,OIL COOLER,IN	000000	000003
5864004170	5-8640	0417	HOSE; WATER,OIL COOLER OU	000000	000003
5864004180	5-8640	0418	NUT; OIL COOLER	000000	000003
5864004190	5-8640	0419	BRACKET; OIL FILTER	000000	000003
5864004200	5-8640	0420	STUD; OIL FILTER	000000	000003
5864004210	5-8640	0421	CONNECTOR; WATER	000000	000002
5864004220	5-8640	0422	CONNECTOR; WATER	000000	000003
5864004230	5-8640	0423	PIPE; OIL,INJ PUMP TO C/B	000000	000003
5864004240	5-8640	0424	BOLT; EYE,TURBOCHARGER	000000	000002
5864004250	5-8640	0425	GASKET; OIL PIPE,TURBOCHA	000000	000011
5864004260	5-8640	0426	JOINT; RUBBER HOSE	000000	000003

5864004270	5-8640	0427	HOSE; RUBBER,OIL PIPE,TUR	000000	000002
5864004280	5-8640	0428	CLIP; HOSE,OIL PIPE,TURBO	000000	000003
5864004290	5-8640	0429	PIPE; OIL,TURBOCHARGER RE	000000	000003
5864004300	5-8640	0430	BOLT; STARTER	000000	000013
5864004310	5-8640	0431	BOLT; GEN	000000	000000
5864004320	5-8640	0432	SPACER; GEN	000000	000003
5864004330	5-8640	0433	CLIP; HOSE, OIL COOLER	000000	000003
5864004340	5-8640	0434	NUT, CAP	000000	000003
5864004350	5-8640	0435	STOP SOLENOID	000000	000157
5864004360	5-8640	0436	NUT, GOVERNOR WEIGHT	000000	000003
5864004370	5-8640	0437	RETAINER, SHAFT	000000	000003
5864004380	5-8640	0438	PLUG; HSG	000000	000003
5864004460	5-8640	0446	HOSE; WATER, OILCOOLER OU	000000	000003
5864004500	5-8640	0450	O-RING S6	000000	000030
5864004510	5-8640	0451	BOLT, IDLE LIMIT	000000	000017
5864004520	5-8640	0452	SPACER ASSY	000000	000003
5864004550	5-8640	0455	NUT M6	000000	000002
5864004560	5-8640	0456	CAP NUT	000000	000003
5864004570	5-8640	0457	PLATE	000000	000003
5864004650	5-8640	0465	SPRING CAPSULE; IDLE CON	000000	000001
5864004690	5-8640	0469	LINK; LEVER TO CONT RACK,	000000	000001
5864004790	5-8640	0479	HOUSING; PUMP, FUEL INJ	000000	000000
5864004960	5-8640	0496	EYE; OVER FLOW	000000	000001
5864004980	5-8640	0498	PUMP ASM; FUEL FEED, INJ	000000	000001
5864005170	5-8640	0517	SHIM ASSY	000000	000003
5864005200	5-8640	0520	JOINT; HOSE, FRT CVR	000000	000000
5864005220	5-8640	0522	ELEMENT;THERMO	000000	000000
5864005230	5-8640	0523	GASKET; JOINT HOSE	000000	000001
5864005300	5-8640	0530	GASKET; HSG PLUG	000000	000001
5864005320	5-8640	0532	SPRING; DELIVERY VLV	000000	000002
5864005330	5-8640	0533	FILTER; FUEL, INJ PUMP HS	000000	000010
5864005340	5-8640	0534	STOPPER	000000	000003
5864005390	5-8640	0539	PLUG; HSG, INJ PUMP	000000	000001
5864005480	5-8640	0548	SEAL WASHER 6	000000	000000
5864005500	5-8640	0550	SEAL WASHER 12	000008	000010
5864005510	5-8640	0551	GASKET; PLUG	000000	000021
5864005520	5-8640	0552	CIRCLIP E- 3	000000	000013
5864005550	5-8640	0555	SPRING PIN 5X10	000000	000013
5864005560	5-8640	0556	KEY; DRIVE, GEAR, INJ PUM	000000	000001
5864005580	5-8640	0558	GASKET 12	000000	000010
5864005630	5-8640	0563	O-RING 1A S-7.0	000000	000009
5864005640	5-8640	0564	O-RING 1A S-28.0	000000	000026
5864005650	5-8640	0565	GASKET; FUEL FEED PUMP, I	000000	000015
5864005690	5-8640	0569	BOLT M 6X 10 PLATED	000000	000020
5864005700	5-8640	0570	BOLT M 6X 14 PLATED	000000	000012
5864005710	5-8640	0571	BOLT M 6X 20 PLATED	000000	000017
5864005720	5-8640	0572	BOLT M 6X 35 PLATED	000000	000020

5864005760	5-8640	0576	SCREW; DISTR HD, INJ PUMP	000000	000023
5864005790	5-8640	0579	NUT M12	000000	000013
5864005800	5-8640	0580	LOCK NUT 6	000000	000026
5864005810	5-8640	0581	SCREW; GOV	000000	000000
5864005820	5-8640	0582	SEAL; WASHER 6	000000	000013
5864005830	5-8640	0583	NUT	000050	000000
5864005840	5-8640	0584	COVER SET, TERM	000004	000000
5864005850	5-8640	0585	COVER	000004	000000
5864005860	5-8640	0586	STARTER KIT	000004	000000
5864005870	5-8640	0587	COIL ASSY, FIEL	000004	000000
5864005880	5-8640	0588	ARMATURE ASSY	000004	000000
5864005890	5-8640	0589	CLUTCH SUB-ASSY	000004	000000
5864005900	5-8640	0590	BEARING SUB-ASS	000004	000000
5864005910	5-8640	0591	PLATE	000004	000000
5864005920	5-8640	0592	FRAME ASSY.	000004	000000
5864005930	5-8640	0593	HOLDER ASSY.	000004	000000
5864005940	5-8640	0594	SPRING	000004	000000
5864005950	5-8640	0595	SHAFT SUB-ASSY.	000004	000000
5864005960	5-8640	0596	GEAR	000004	000000
5864005970	5-8640	0597	GEAR	000004	000000
5864005980	5-8640	0598	LEVER	000004	000000
5864005990	5-8640	0599	SWITCH, EMERGENC	000000	000001
5864006000	5-8640	0600	NUT	000050	000000
5864006010	5-8640	0601	HOUSING ASSY, ST	000004	000000
5864006020	5-8640	0602	RING	000004	000000
5864006030	5-8640	0603	SCREW M 4X 6 (B	000050	000000
5864006040	5-8640	0604	WASHER	000050	000000
5864006050	5-8640	0605	WASHER	000050	000000
5864006060	5-8640	0606	WASHER	000050	000000
5864006070	5-8640	0607	BOLT, THROUGH	000000	000000
5864006080	5-8640	0608	NUT	000025	000000
5864006090	5-8640	0609	NUT	000025	000000
5864006100	5-8640	0610	RING	000004	000000
5864006110	5-8640	0611	BEARING	000004	000000
5864006120	5-8640	0612	BEARING	000004	000000
5864006130	5-8640	0613	BEARING	000004	000000
5864006140	5-8640	0614	NEEDLE BEARING	000004	000000
5864006150	5-8640	0615	JOINT 12, PIPE	000008	000000
5864006160	5-8640	0616	PLUG 6	000000	000000
5864006170	5-8640	0617	O-RING	000014	000000
5864006180	5-8640	0618	BOLT, PIPE JOIN	000023	000000
5864006190	5-8640	0619	VALVE, TAPER	000015	000000
5864006200	5-8640	0620	SPRING, TAPER V	000013	000000
5864006210	5-8640	0621	HANDLE, COCK	000004	000000
5864006220	5-8640	0622	SCREW M 4	000050	000000
5864006230	5-8640	0623	CAP, VALVE	000018	000000
5864006240	5-8640	0624	PIPE, FUEL OIL	000018	000000

5864006250	5-8640	0625	PLUG 30 (SUS)	000020	000000
5864006260	5-8640	0626	PLUG M16	000011	000000
5864006270	5-8640	0627	RING, RETAINING	000050	000000
5864006280	5-8640	0628	HOLDER, NOZZLE	000047	000000
5864006290	5-8640	0629	LOCKING	000047	000000
5864006300	5-8640	0630	PLUG 25	000018	000000
5864006310	5-8640	0631	PLUG 35	000017	000000
5864006320	5-8640	0632	FILTER ASSY, LU	000000	000297
5864006330	5-8640	0633	GASKET, SILENCE	000000	000000
5864006340	5-8640	0634	VALVE ASSY,INJE	000000	000000
5864006350	5-8640	0635	NOZZLE ASSY	000014	000000
5864006360	5-8640	0636	LEVER, CONTROL	000000	000003
5864006370	5-8640	0637	CASE ASSY, OIL	000003	000000
5864006380	5-8640	0638	ANGLEICH ASSY	000004	000000
5864006390	5-8640	0639	GASKET, NOZZLE	000000	000071
5864006400	5-8640	0640	PARALLEL PIN 6X	000004	000000
5864006410	5-8640	0641	SEAL, OIL	000000	000001
5864006420	5-8640	0642	BOLT	000050	000000
5864006430	5-8640	0643	SPRING	000050	000000
5864006440	5-8640	0644	TAPPET	000020	000000
5864006450	5-8640	0645	WASHER	000050	000000
5864006460	5-8640	0646	NUT	000049	000000
5864006470	5-8640	0647	BALL BEARING	000004	000000
5864006480	5-8640	0648	HOLDER, BRUSH	000004	000000
5864006490	5-8640	0649	BOLT M12X1.25,F	000050	000000
5864006500	5-8640	0650	PLUG 45	000020	000000
5864006510	5-8640	0651	O-RING P 12.0	000019	000000
5864006520	5-8640	0652	FLYWHEEL ASSY	000000	000003
5864006530	5-8640	0653	PIPE, KNOCK	000004	000000
5864006540	5-8640	0654	GASKET, CYL.HEA	000000	000007
5864006550	5-8640	0655	CASE, GEAR	000000	000004
5864006560	5-8640	0656	COVER, GEAR CAS	000000	000004
5864006570	5-8640	0657	BOLT, STUD M8	000050	000000
5864006580	5-8640	0658	COVER ASSY,GEAR	000000	000004
5864006590	5-8640	0659	HOUSING, FLYWHEEL	000000	000000
5864006600	5-8640	0660	FLANGE, MOUNTIN	000000	000003
5864006610	5-8640	0661	SPACER, OIL SUM	000000	000050
5864006620	5-8640	0662	COVER, PUMP TIM	000004	000000
5864006630	5-8640	0663	BUSH, CAMSHAFT	000020	000000
5864006640	5-8640	0664	BEARING, THRUST	000000	000000
5864006650	5-8640	0665	PLATE, BAFFLE	000004	000000
5864006660	5-8640	0666	BAFFLE, BREATHE	000004	000000
5864006670	5-8640	0667	VALVE, INTAKE	000001	000000
5864006680	5-8640	0668	VALVE, EXHAUST	000001	000001
5864006690	5-8640	0669	SPRING, VALVE	000024	000012
5864006700	5-8640	0670	COTTER, VALVE	000024	000026
5864006710	5-8640	0671	SUPPORT ASSY, A	000004	000000

5864006720	5-8640	0672	SHAFT ASSY, ROC	000004	000000
5864006730	5-8640	0673	SUPPORT, ROCKER	000004	000000
5864006740	5-8640	0674	COVER, BONNET	000002	000000
5864006750	5-8640	0675	GASKET, BONNET C	000000	000007
5864006760	5-8640	0676	SEAL, VALVE STE	000017	000000
5864006770	5-8640	0677	SEAL, VALVE STE	000000	000023
5864006780	5-8640	0678	BONNET ASSY, HE	000003	000000
5864006790	5-8640	0679	ARM ASSY, ROCKE	000000	000047
5864006800	5-8640	0680	GUIDE, VALVE	000000	000004
5864006810	5-8640	0681	MANIFOLD, EXHAU	000000	000145
5864006820	5-8640	0682	GASKET, MANIFOL	000000	000009
5864006830	5-8640	0683	STUD, M8X50	000032	000000
5864006840	5-8640	0684	ROD, PUSH	000012	000000
5864006850	5-8640	0685	CAMSHFT ASSY	000004	000000
5864006860	5-8640	0686	GEAR, CRANKSHAF	000004	000000
5864006870	5-8640	0687	V-PULLEY, CRANK	000000	000000
5864006880	5-8640	0688	CRANKSHAFT ASSY	000000	000004
5864006890	5-8640	0689	PISTON W/RING	000000	000008
5864006900	5-8640	0690	PISTON W/RING	000001	000001
5864006910	5-8640	0691	PIN, PISTON	000000	000006
5864006920	5-8640	0692	RING SET	000000	000004
5864006930	5-8640	0693	RING SET, 0.25	000017	000000
5864006940	5-8640	0694	ROD ASSY, CONNE	000000	000002
5864006950	5-8640	0695	BOLT, CONNECTIN	000004	000020
5864006960	5-8640	0696	METAL ASSY, CRAN	000000	000000
5864006970	5-8640	0697	BEARING, PIN US=	000000	000007
5864006980	5-8640	0698	BUSH, PISTON PI	000001	000011
5864006990	5-8640	0699	SHAFT, IDLE GEA	000004	000020
5864007000	5-8640	0700	GEAR ASSY, IDLE	000004	000000
5864007010	5-8640	0701	GEAR, PUMP	000004	000000
5864007020	5-8640	0702	O-RING, P17.0	000047	000000
5864007030	5-8640	0703	O-RING, P15.0	000050	000000
5864007040	5-8640	0704	COVER, LUB.OIL	000004	000000
5864007050	5-8640	0705	COVER ASSY, PUM	000004	000000
5864007060	5-8640	0706	ROTOR, INNER	000003	000000
5864007070	5-8640	0707	ROTOR, OUTER	000003	000000
5864007080	5-8640	0708	DIPSTICK, LUB.O	000000	000002
5864007090	5-8640	0709	PIPE ASSY, LUB,	000004	000000
5864007100	5-8640	0710	PIPE ASSY, HYDR	000003	000000
5864007110	5-8640	0711	PUMP ASSY, C.W.	000000	000009
5864007120	5-8640	0712	GASKET, WATER P	000000	000003
5864007130	5-8640	0713	GASKET	000021	000000
5864007140	5-8640	0714	COVER	000004	000000
5864007150	5-8640	0715	O-RING	000012	000000
5864007160	5-8640	0716	V-PULLEY, C.W.P	000003	000000
5864007170	5-8640	0717	FAN, COOLING D33	000000	000006
5864007180	5-8640	0718	THERMOSTAT, 71C	000000	000024

5864007190	5-8640	0719	CAMSHAFT	000004	000000
5864007200	5-8640	0720	SUPPORT, BEARIN	000004	000000
5864007210	5-8640	0721	PARALLEL PIN	000004	000000
5864007220	5-8640	0722	PLUNGER ASSY	000000	000002
5864007230	5-8640	0723	FLANGE	000003	000000
5864007240	5-8640	0724	RETAINER, SPRIN	000004	000000
5864007250	5-8640	0725	SPRING, PLUNGER	000004	000000
5864007260	5-8640	0726	TAPPET ASSY	000004	000000
5864007270	5-8640	0727	VALVE ASSY, DEL	000000	000000
5864007280	5-8640	0728	SPRING, DELIVER	000001	000002
5864007290	5-8640	0729	O-RING	000050	000000
5864007300	5-8640	0730	COLLAR. FIC FIX	000004	000000
5864007310	5-8640	0731	BOLT, FIXATION	000004	000000
5864007320	5-8640	0732	RACK, CONTROL	000004	000000
5864007330	5-8640	0733	PACKING	000004	000000
5864007340	5-8640	0734	COVER, BODY SID	000004	000000
5864007350	5-8640	0735	GASKET	000050	000000
5864007360	5-8640	0736	BRACKET, FO FIL	000000	000002
5864007370	5-8640	0737	PIPE ASSY, RETU	000000	000024
5864007380	5-8640	0738	PIPE, FUEL RETU	000014	000000
5864007390	5-8640	0739	GASKET, CASE	000004	000000
5864007400	5-8640	0740	CASE, GOVERNOR	000004	000000
5864007410	5-8640	0741	GASKET, COVER	000004	000000
5864007420	5-8640	0742	LINK, L=29.3	000004	000000
5864007430	5-8640	0743	LINK, L=29.8	000004	000000
5864007440	5-8640	0744	LINK, L=28.8	000004	000000
5864007450	5-8640	0745	LINK, L=303	000004	000000
5864007460	5-8640	0746	WEIGHT ASSY	000004	000000
5864007470	5-8640	0747	SHAFT ASSY, CON	000004	000000
5864007480	5-8640	0748	LEVER ASSY, GOV	000004	000000
5864007490	5-8640	0749	STARTER, P1.1	000000	000000
5864007500	5-8640	0750	ADJUSTER, BELT	000000	000008
5864007510	5-8640	0751	PLUG, GLOW	000000	000032
5864007520	5-8640	0752	CONNECTOR, GLOW	000025	000000
5864007530	5-8640	0753	GASKET, BONNET	000000	000002
5864007540	5-8640	0754	COVER, GEAR CAS	000000	000004
5864007550	5-8640	0755	COVER ASSY,GEAR	000000	000000
5864007560	5-8640	0756	SUMP ASSY, LUB.	000000	000002
5864007570	5-8640	0757	CASE, GEAR	000000	000004
5864007580	5-8640	0758	COVER, PUMP	000004	000000
5864007590	5-8640	0759	GASKET, BRACKET	000004	000000
5864007600	5-8640	0760	CASE ASSY, GOVE	000004	000000
5864007610	5-8640	0761	SPRING, GOVERNO	000001	000000
5864007620	5-8640	0762	GEAR CMP (HO-P	000004	000000
5864007630	5-8640	0763	HEAD ASSY, CYLI	000000	000001
5864007640	5-8640	0764	FLYWHEEL ASSY	000000	000003
5864007650	5-8640	0765	PIPE, FUEL INJE	000002	000000

5864007660	5-8640	0766	PIPE, FUEL INJE	000000	000006
5864007670	5-8640	0767	PIPE, FUEL INJE	000002	000000
5864007680	5-8640	0768	DIAPHRAGM ASSY	000010	000000
5864007690	5-8640	0769	COVER, DIAPHRAG	000001	000000
5864007700	5-8640	0770	DIAPHRAGM	000000	000001
5864007710	5-8640	0771	SPRING, DIAPHRA	000000	000003
5864007720	5-8640	0772	BOLT M 8X 50 PL	000000	000010
5864007730	5-8640	0773	BOLT, CYL. HEAD	000000	000007
5864007740	5-8640	0774	BEARING, THRUST	000004	000018
5864007750	5-8640	0775	LEVER	000002	000000
5864007760	5-8640	0776	ELEMENT	000000	000126
5864007770	5-8640	0777	VALVE ASSY, CHE	000000	000003
5864007780	5-8640	0778	STRAINER ASSY,	000000	000007
5864007790	5-8640	0779	JOINT	000013	000000
5864007800	5-8640	0780	BOLT M 10X 28	000029	000000
5864007810	5-8640	0781	SPRING	000000	000013
5864007820	5-8640	0782	CUP, STRAINER	000004	000000
5864007830	5-8640	0783	SPRING, SCREEN	000004	000000
5864007840	5-8640	0784	FLOAT	000004	000000
5864007850	5-8640	0785	KEY	000004	000000
5864007860	5-8640	0786	PLUG	000024	000000
5864007870	5-8640	0787	BOWL, FUEL STRA	000002	000000
5864007880	5-8640	0788	CLAMP 8	000030	000000
5864007890	5-8640	0789	SEAL, OIL	000000	000004
5864007900	5-8640	0790	GASKET, DELIVER	000001	000002
5864007910	5-8640	0791	SPRING	000004	000000
5864007920	5-8640	0792	SHAFT, GOV. LEV	000004	000000
5864007930	5-8640	0793	PINION	000000	000000
5864007940	5-8640	0794	SCREW	000050	000000
5864007950	5-8640	0795	COVER	000004	000000
5864007960	5-8640	0796	PIPE, FUEL OIL	000020	000000
5864007970	5-8640	0797	STUD, FEED PUMP	000050	000000
5864007980	5-8640	0798	PIN, BARREL LOC	000001	000003
5864007990	5-8640	0799	DEFLECTOR	000004	000000
5864008000	5-8640	0800	SHIM SET, ADJUS	000004	000000
5864008010	5-8640	0801	BUSH, RACK	000004	000000
5864008020	5-8640	0802	SPACER, AUX. SP	000004	000000
5864008030	5-8640	0803	CIRCLIP	000004	000000
5864008040	5-8640	0804	PINION, CONTROL	000004	000000
5864008050	5-8640	0805	O-RING	000050	000000
5864008060	5-8640	0806	SPRING, RACK	000004	000000
5864008070	5-8640	0807	SHIM PACK	000004	000000
5864008080	5-8640	0808	COVER	000004	000000
5864008090	5-8640	0809	GASKET	000042	000000
5864008100	5-8640	0810	SLEEVE	000004	000000
5864008110	5-8640	0811	BOLT, REVOL. LI	000000	000003
5864008120	5-8640	0812	TIMER (3SEC	000000	000002

5864008130	5-8640	0813	LABEL, CAUTION	000004	000000
5864008140	5-8640	0814	SHIM T=0.6	000050	000000
5864008150	5-8640	0815	PIPE ASSY, FUEL	000004	000000
5864008160	5-8640	0816	PIPE ASSY, FUEL	000004	000000
5864008170	5-8640	0817	SEPARATOR, WATER	000000	000000
5864008180	5-8640	0818	BALL BEARING	000004	000000
5864008190	5-8640	0819	BOLT, W/WASHER	000075	000000
5864008200	5-8640	0820	SPRING, SET	000003	000000
5864008210	5-8640	0821	RETAINER, SPRIN	000004	000032
5864008220	5-8640	0822	PROTECTOR, NOZZ	000000	000013
5864008230	5-8640	0823	GASKET, RETURN	000000	000019
5864008240	5-8640	0824	SHIM T=1.0	000025	000000
5864008250	5-8640	0825	SEAT SPRING	000050	000003
5864008260	5-8640	0826	PLUG	000025	000000
5864008270	5-8640	0827	PLUG	000025	000000
5864008280	5-8640	0828	VALVE ASSY, DEL	000000	000000
5864008290	5-8640	0829	PLUG	000025	000000
5864008300	5-8640	0830	GUIDE, RACK	000004	000000
5864008310	5-8640	0831	LIMITER ASSY, F	000004	000000
5864008320	5-8640	0832	SCREEN	000000	000068
5864008330	5-8640	0833	SHIM SET	000050	000000
5864008340	5-8640	0834	SEAL WASHER 16S	000000	000053
5864008350	5-8640	0835	SPRING WASHER	000004	000020
5864008360	5-8640	0836	SPRING WASHER 1	000003	000010
5864008370	5-8640	0837	CIRCLIP 12	000000	000020
5864008380	5-8640	0838	CIRCLIP 22	000000	000006
5864008390	5-8640	0839	SNAP PIN 4	000004	000040
5864008400	5-8640	0840	KEY 4X 12	000004	000000
5864008410	5-8640	0841	SCREW 5X16	000050	000000
5864008420	5-8640	0842	GASKET 6, NYLON	000050	000000
5864008430	5-8640	0843	PLUG PT 1/16, SC	000004	000000
5864008440	5-8640	0844	PLUG 10	000008	000000
5864008450	5-8640	0845	PLUG 10	000000	000000
5864008460	5-8640	0846	BALL BEARING	000002	000000
5864008470	5-8640	0847	BALL BEARING	000000	000000
5864008480	5-8640	0848	BALL BEARING	000004	000000
5864008490	5-8640	0849	O-RING 1A P-10A	000049	000000
5864008500	5-8640	0850	O-RING 4D P15	000037	000000
5864008510	5-8640	0851	V-BELT	000000	000012
5864008520	5-8640	0852	V-BELT A37	000011	000000
5864008530	5-8640	0853	BOLT W/WASHER M	000050	000000
5864008540	5-8640	0854	SCREW M 5X 12	000050	000000
5864008550	5-8640	0855	SCREW M 6X 16	000050	000000
5864008560	5-8640	0856	BOLT M 5X 10 PL	000025	000000
5864008570	5-8640	0857	BOLT M 6X 12 PL	000025	000000
5864008580	5-8640	0858	BOLT M 6X 22 PL	000015	000000
5864008590	5-8640	0859	BOLT M 6X 45 PL	000025	000100

5864008600	5-8640	0860	BOLT M 6X 60 PL	000000	000020
5864008610	5-8640	0861	BOLT M 6X 65 PL	000025	000000
5864008620	5-8640	0862	BOLT M 6X 75 PL	000019	000000
5864008630	5-8640	0863	BOLT M10X 20 PL	000025	000000
5864008640	5-8640	0864	BOLT M10X 25 PL	000017	000050
5864008650	5-8640	0865	BOLT M10X 20 PL	000025	000000
5864008660	5-8640	0866	NUT M 8	000023	000000
5864008670	5-8640	0867	SCREW M 6X 12	000025	000000
5864008680	5-8640	0868	NUT 6	000025	000000
5864008690	5-8640	0869	NUT 12	000024	000000
5864008700	5-8640	0870	SCREW M 5X16	000050	000000
5864008710	5-8640	0871	PLUG 25	000003	000000
5864008720	5-8640	0872	BLOCK ASSY, CYL	000000	000003
5864008730	5-8640	0873	MAIN BEARING SE	000000	000000
5864008740	5-8640	0874	MAIN METAL US=0	000004	000020
5864008750	5-8640	0875	GASKET SET (NON-	000000	000020
5864008760	5-8640	0876	GASKET SET (NON-	000046	000000
5864008770	5-8640	0877	PUMP ASSY (3TNV76	000000	000004
5864008780	5-8640	0878	PINION (B) W/PI	000004	000003
5864008790	5-8640	0879	GASKET; STRAINER	000000	000021
5864008800	5-8640	0880	GASKET, SILENCE	000000	000006
5864008810	5-8640	0881	CLAMP	000000	000003
5864008820	5-8640	0882	WASHER, SPRING	000000	000003
5864008830	5-8640	0883	COLLAR	000000	000003
5864008840	5-8640	0884	WASHER	000000	000000
5864008850	5-8640	0885	WASHER	000000	000003
5864008860	5-8640	0886	PULLEY	000000	000003
5864008870	5-8640	0887	WASHER 10	000000	000003
5864008880	5-8640	0888	NUT	000000	000003
5864008890	5-8640	0889	SCREW	000000	000003
5864008900	5-8640	0890	PLATE	000000	000003
5864008910	5-8640	0891	FLYWHEEL	000000	000003
5864008920	5-8640	0892	STATOR ASSY	000000	000003
5864008930	5-8640	0893	SHAFT	000000	000003
5864008940	5-8640	0894	COUPLER	000000	000000
5864008950	5-8640	0895	SCREW	000000	000000
5864008960	5-8640	0896	HEAD ASM; CYL	000001	000000
5864008970	5-8940	0897	INJECTOR	000000	000006
5864008980	5-8640	0898	NOZZLE; INJ	000000	000003
5864008990	5-8640	0899	PIPE; INJ NO. 1	000000	000001
5864009000	5-8640	0900	PIPE; INJ NO. 2	000000	000001
5864009010	5-8640	0901	PIPE; INJ NO. 3	000000	000001
5864009020	5-8640	0902	ADJUSTER, BELT	000000	000000
5864009030	5-8640	0903	CASE, GOVERNOR	000000	000003
5864009040	5-8640	0904	SPRING, IDLE SUB	000000	000003
5864009050	5-8640	0905	CASE ASSY, GOVERNOR	000000	000003
5864009060	5-8640	0906	LEVER ASSY, GOVERNOR	000000	000003

5864009070	5-8640	0907	ANGLEICH ASSY	000000	000003
5864009090	5-8640	0909	COVER, THERMOSTAT	000000	000018
5864009100	5-8640	0910	BOLT, FUEL CONTROL	000000	000003
5864009110	5-8640	0911	SPRING	000000	000003
5864009120	5-8640	0912	VALVE ASSY, DELIVERY	000000	000000
5864009130	5-8640	0913	FAN; COOLING	000000	000006
5864009140	5-8640	0914	BALL BEARING	000000	000003
5864009150	5-8640	0915	BOLT M 8X 65 PLATED	000000	000023
5864009160	5-8640	0916	BOLT M10X 40 PLATED	000000	000020
5864009170	5-8640	0917	INJECTOR PUMP	000000	000001
5864009190	5-8640	0919	GASKET; FUEL FEED PUMP, I	000000	000008
5864009210	5-8640	0921	JOINT; HOSE, FRT COVER	000000	000001
5864009430	5-8640	0943	GAUGE; OIL LEVEL	000000	000007
5864009440	5-8640	0944	VALVE ASSY, DEL JPIDS	000004	000003
5864009450	5-8640	0945	VALVE ASSY, DEL	000001	000002
5864009460	5-8640	0946	GEAR; CR/SHF	000002	000000
5864009470	5-8640	0947	PISTON SET; O/S=0.25	000000	000002
5864009480	5-8640	0948	HOUSING; FLYWHEEL	000000	000007
5864009490	5-8640	0949	HOUSING; FLYWHEEL	000000	000012
5864009500	5-8640	0950	COVER SET, TERMINAL	000000	000003
5864009510	5-8640	0951	COIL ASSY, FIELD	000000	000003
5864009520	5-8640	0952	ARMATURE ASSY	000000	000003
5864009530	5-8640	0953	BOLT, THROUGH	000000	000003
5864009540	5-8640	0954	PIPE, FUEL (D13XL400)	000000	000006
5864009550	5-8640	0955	RING	000000	000001
5864009560	5-8640	0956	FAN D=310	000000	000001
5864009570	5-8640	0957	COVER ASY	000000	000000
5864009580	5-8640	0958	PLUNGER ASSY	000000	000003
5864009590	5-8640	0959	BOLT, CYLINDER HEAD	000000	000070
5864009600	5-8640	0960	GASKET, CYL.HEAD	000000	000010
5864009610	5-8640	0961	SPACER, OIL SUMP	000000	000001
5864009620	5-8640	0962	VALVE, INTAKE	000000	000012
5864009630	5-8640	0963	VALVE, EXHAUST	000000	000003
5864009640	5-8640	0964	SUPPORT ASSY, ARM	000000	000005
5864009650	5-8640	0965	SHAFT ASSY, ROCKER	000000	000005
5864009660	5-8640	0966	SPRING, SHAFT	000000	000010
5864009670	5-8640	0967	GASKET, BONNET	000000	000054
5864009680	5-8640	0968	PLATE, BAFFLE	000000	000001
5864009690	5-8640	0969	GASKET; HEAD COVER	000000	000009
5864009700	5-8640	0970	BONNET ASSY, HEAD	000000	000004
5864009710	5-8640	0971	HEAD ASSY, CYLINDER	000001	000004
5864009720	5-8640	0972	GUIDE, VALVE	000000	000030
5864009730	5-8640	0973	CLEANER ASSY, AIR	000000	000001
5864009740	5-8640	0974	ELEMENT 4, CLEANER	000001	000001
5864009750	5-8640	0975	BRACKET (AIR CLEANER	000000	000001
5864009760	5-8640	0976	ROD, PUSH	000000	000025
5864009770	5-8640	0977	CAMSHAFT ASSY	000000	000002

5864009780	5-8640	0978	CRANKSHAFT ASSY	000000	000002
5864009790	5-8640	0979	PISTON ASSY	000000	000013
5864009800	5-8640	0980	PIN, PISTON	000000	000009
5864009810	5-8640	0981	RING SET	000000	000056
5864009820	5-8640	0982	RING SET (O.S=0.25)	000000	000012
5864009830	5-8640	0983	PISTON ASSY(O.S=0.25	000000	000010
5864009840	5-8640	0984	ROD ASSY, CONNECTING	000000	000015
5864009850	5-8640	0985	METAL ASSY,CRANK PIN	000000	000003
5864009860	5-8640	0986	BEARING,PIN US=0.25	000000	000015
5864009870	5-8640	0987	DIPSTICK, LUB.OIL	000000	000001
5864009880	5-8640	0988	PIPE ASSY, LUB,OIL	000000	000001
5864009890	5-8640	0989	PUMP ASSY, WATER	000000	000001
5864009900	5-8640	0990	GASKET, WATER PUMP	000132	000000
5864009910	5-8640	0991	COVER	000000	000010
5864009920	5-8640	0992	VALVE ASSY,INJECTION	000000	000018
5864009930	5-8640	0993	PIPE ASSY, RETURN	000000	000000
5864009940	5-8640	0994	PIPE, FUEL RETURN	000000	000001
5864009950	5-8640	0995	STARTER, P1.1	000000	000000
5864009960	5-8640	0996	SUMP ASSY, LUB.OIL	000000	000001
5864009970	5-8640	0997	SPRING, GOVERNOR	000000	000002
5864009980	5-8640	0998	PIPE, FUEL INJECTION	000000	000002
5864009990	5-8640	0999	PIPE, FUEL INJECTION	000000	000002
5864010000	5-8640	1000	PIPE, FUEL INJECTION	000000	000002
5864010010	5-8640	1001	HOUSING, FLYWHEEL	000000	000005
5864010020	5-8640	1002	SEAT SPRING	000000	000000
5864010030	5-8640	1003	MANIFOLD, EXHAUST	000000	000013
5864010040	5-8640	1004	HOSE, AIR INTAKE	000000	000033
5864010050	5-8640	1005	VALVE, UNLOADER	000000	000000
5864010060	5-8640	1006	PUMP ASSY, FUEL FEED	000000	000000
5864010070	5-8640	1007	PUMP ASSY, FUEL FEED	000000	000002
5864010080	5-8640	1008	PIPE ASSY, FUEL OIL	000000	000001
5864010090	5-8640	1009	FLEX HORN	000000	000010
5864010100	5-8640	1010	PIPE, FUEL	000000	000001
5864010110	5-8640	1011	TUBE	000000	000001
5864010120	5-8640	1012	BOLT, ADJUSTING	000000	000007
5864010130	5-8640	1013	V-BELT (A-35.5)	000000	000063
5864010140	5-8640	1014	CLAMP 54	000000	000001
5864010150	5-8640	1015	BOLT M 8X 22	000000	000020
5864010160	5-8640	1016	BOLT M 6X 25 PLATED	000000	000020
5864010170	5-8640	1017	BLOCK ASSY, CYLINDER	000000	000001
5864010180	5-8640	1018	GASKET SET(NON-ASB.)	000000	000003
5864010190	5-8640	1019	FIE ASSY,3TNV70-GZG0	000000	000001
5864010200	5-8640	1020	COVER ASSY,GEAR CASE	000000	000003
5864010210	5-8640	1021	COVER SET; DUST ENGAGE SW	000000	000004
5864010240	5-8640	1024	COVER; USE, FUEL FILTER	000000	000000
5864010260	5-8640	1026	CONNECTOR; GEN	000002	000000
5864010340	5-8640	1034	TUBE; GUIDE,OIL LEVEL GAU	000000	000001

5864010360	5-8640	1036	CLEANER ASM; AIR	000001	000000
5864010380	5-8640	1038	PIPE; FUEL LEAK	000001	000000
5864010400	5-8640	1040	PULLEY; FAN CENTER	000001	000000
5864010450	5-8640	1045	TUBE; GUIDE,OIL LEVEL GAU	000000	000001
5864010460	5-8640	1046	WASHER; THRUST,CR/SHF	000003	000000
5864010470	5-8640	1047	GENERATOR ASM	000002	000000
5864010490	5-8640	1049	SPACER; FAN	000000	000007
5864010500	5-8640	1050	VALVE; INL	000000	000000
5864010510	5-8640	1051	CRANKSHAFT	000000	000001
5864010530	5-8640	1053	GAUGE; OIL LEVEL	000000	000001
5864010540	5-8640	1054	PIPE; FUEL,FUEL FILTER TO	000000	000003
5864010560	5-8640	1056	FILTER ASM; FUEL	000002	000000
5864010570	5-8640	1057	VALVE; EXH	000000	000000
5864010580	5-8640	1058	MANIFOLD; EXHAUST	000000	000000
5864010600	5-8640	1060	STRAINER & PIPE ASM; OIL	000001	000000
5864010610	5-8640	1061	NOZZLE; INJ	000003	000000
5864010640	5-8640	1064	SEDIMENTER; FUEL	000002	000000
5864010650	5-8640	1065	PIPE ASM; FUEL,LEAK OFF	000000	000002
5864010690	5-8640	1069	BLOCK ASM; CYL	000000	000001
5864010700	5-8640	1070	GASKET SET; ENG OVERHAUL	000002	000000
5864010720	5-8640	1072	PAN ASM; OIL	000000	000001
5864010730	5-8640	1073	MANIFOLD;EXHAUST	000000	000000
5864010740	5-8640	1074	NOZZLE ASM; INJ	000003	000000
5864010750	5-8640	1075	GASKET SET; ENG OVERHAUL	000002	000000
5864010770	5-8640	1077	SHAFT; GEAR	000000	000025
5864010840	5-8640	1084	SILENCER	000000	000002
5864010860	5-8640	1086	PIPE; EXH,RR	000000	000002
5864013210	5-8640	1321	GASKET; CYL HD	000000	000000
5864013220	5-8640	1322	MANIFOLD; EXHAUST	000001	000001
5864013230	5-8640	1323	PISTON SET	000002	000003
5864013240	5-8640	1324	RING SET; PISTON,STANDARD	000000	000043
5864013250	5-8640	1325	PISTON SET; O/S=0.25	000003	000000
5864013260	5-8640	1326	RING SET; PISTON,O/S=0.25	000003	000010
5864013270	5-8640	1327	SILENCER ASM; EXH	000000	000002
5864013300	5-8640	1330	FAN; COOLING	000001	000000
5864013310	5-8640	1331	HOSE; SURGE TANK	000001	000000
5864013320	5-8640	1332	GASKET SET; ENG OVERHAUL	000000	000002
5864013330	5-8640	1333	BLOCK ASM; CYL	000000	000001
5864013350	5-8640	1335	NOZZLE ASM; INJ	000003	000000
5864013360	5-8640	1336	GASKET SET; ENG OVERHAUL	000002	000000
5864013370	5-8640	1337	GASKET SET; ENG OVERHAUL	000001	000000
5864013380	5-8640	1338	GASKET SET; ENG OVERHAUL	000002	000000
5864013390	5-8640	1339	COVER; CYL HD	000001	000000
5864013400	5-8640	1340	GASKET; HD COVER	000005	000000
5864013410	5-8640	1341	GASKET; HD TO COVER	000005	000000
5864013420	5-8640	1342	COVER; CYL HEAD COVER	000001	000000
5864013430	5-8640	1343	HEAD ASM; CYL	000001	000000

5864013440	5-8640	1344	GASKET; CYL HD	000005	000000
5864013450	5-8640	1345	CONNECTOR; GLOW PLUG	000002	000000
5864013470	5-8640	1347	BLOCK ASM; CYL	000000	000001
5864013480	5-8640	1348	PAN ASM; OIL	000000	000001
5864013490	5-8640	1349	GAUGE; OIL LEVEL	000001	000000
5864013510	5-8640	1351	CAMSHAFT	000001	000000
5864013520	5-8640	1352	SHAFT; ROCKER ARM	000001	000000
5864013530	5-8640	1353	CRANKSHAFT	000001	000000
5864013560	5-8640	1356	BOLT; FLYWHEEL	000025	000000
5864013590	5-8640	1359	GASKET; EXH MANIF TO HD	000005	000000
5864013600	5-8640	1360	PUMP ASM; WATER	000000	000004
5864013610	5-8640	1361	FAN; COOLING	000000	000001
5864013620	5-8640	1362	FAN; COOLING	000000	000000
5864013650	5-8640	1365	PIPE; INJ NO.1	000001	000000
5864013660	5-8640	1366	PIPE; INJ NO.2	000001	000000
5864013670	5-8640	1367	PIPE; FUEL,NOZZLE LEAK OF	000001	000000
5864013680	5-8640	1368	HOSE; FUEL,OVER FLOW	000001	000000
5864013690	5-8640	1369	PIPE; FUEL,FUEL FILTER TO	000001	000000
5864013700	5-8640	1370	STRAINER & PIPE ASM; OIL	000001	000000
5864013710	5-8640	1371	PIPE; OIL,INJ PUMP TO C/B	000001	000000
5864013850	5-8640	1385	PIPE;INJ NO.1	000000	000000
5864013860	5-8640	1386	PIPE; INJ NO.2	000000	000001
5864013870	5-8640	1387	PIPE; INJ NO.3	000000	000001
5864013900	5-8640	1390	HEAD ASM; CYL	000000	000002
5864013940	5-8640	1394	PAN ASM; OIL	000000	000002
5864013950	5-8640	1395	GAUGE; OIL LEVEL	000000	000011
5864013960	5-8640	1396	STRAINER & PIPE ASM; OIL	000000	000002
5864013980	5-8640	1398	VALVE; INL	000002	000004
5864013990	5-8640	1399	VALVE; EXH	000003	000005
5864014040	5-8640	1404	INJECTION PUMP	000000	000000
5864014050	5-8640	1405	GASKET SEET; ENG OVERHAUL	000002	000005
5864014160	5-8640	1416	SEAL; OIL,CR/SHF, FRT	000000	000007
5864014230	5-8640	1423	CAP; PIPE	000000	000002
5864014270	5-8640	1427	ELEMENT; OIL FILTER	000000	000000
5864014340	5-8640	1434	ELEMENT ASM; INNER	000000	000000
5864014350	5-8640	1435	ELEMENT ASM; OUTER	000000	000000
5864014690	5-8640	1469	COVER; USE, FUEL FILTER	000000	000112
5864014710	5-8640	1471	HOSE; JOINT	000000	000000
5864014720	5-8640	1472	PIPE; FUEL RETURN	000003	000007
5864014740	5-8640	1474	BUSHING; IDLE GEAR	000002	000003
5864014760	5-8640	1476	METAL SET;CRANKSHAFT,STD	000000	000012
5864014780	5-8640	1478	METAL SET;CRANKSHAFT,U/S	000004	000011
5864014790	5-8640	1479	WASHER; THRUST,CR/SHF	000018	000000
5864014800	5-8640	1480	METAL SET;CONN ROD,U/S=	000016	000000
5864014810	5-8640	1481	BEARING; CAMSHAFT	000006	000009
5864014950	5-8640	1495	FILTER, LUB OIL	000006	000006
5864015040	5-8640	1504	METAL ASSY, CRANK PIN	000000	000030

5864015070	5-8640	1507	VAVLE; INL	000000	000001
5864015090	5-8640	1509	GEAR; IDLE	000002	000003
5864015100	5-8640	1510	ELEMENT; FUEL FILTER	000000	000670
5864015130	5-8640	1513	WASHER; THRUST, CR/SFH	000000	000000
5864015140	5-8640	1514	METAL SET; CONN ROD, STD	000000	000001
5864015150	5-8640	1515	ELEMENT; OIL FILTER	000000	000707
5864015170	5-8640	1517	MAIN BEARING SE	000000	000007
5864015300	5-8640	1530	METAL ASSY, CRAN	000000	000008
5864015310	5-8640	1531	HEATER; INTAKE	000000	000001
5864015330	5-8640	1533	HEATER, AIR	000000	000001
5864015450	5-8460	1545	ELEMENT; OIL FILTER	000000	000000
5864016100	5-8640	1610	SHIM; NOZZLE SPRING, NOZZLE	000003	000006
5864017140	5-8640	1714	GEAR; CR/SHF	000001	000002
5864017150	5-8640	1715	SHAFT; IDLE GEAR	000002	000005
5864017170	5-8640	1717	HARNES; GLOW PLUG CONNECT	000001	000002
5864017180	5-8640	1718	CONNECTOR	000000	000002
5864017190	5-8640	1719	VALVE; INL	000000	000008
5864017200	5-8640	1720	HEAD ASM; CYL	000000	000001
5864017210	5-8640	1721	CRANKSHAFT	000000	000002
5864017220	5-8640	1722	PISTON SET	000006	000002
5864017230	5-8640	1723	PISTON SET; O/S=0.25	000000	000025
5864017260	5-8640	1726	PULG; GLOW	000015	000000
5864017270	5-8640	1727	CONNECTOR; GLOW PLUG	000000	000001
5864017300	5-8640	1730	NOZZLE; INJ	000000	000009
5864017340	5-8640	1734	GASKET SET; ENG OVERHAUL	000000	000001
5864017350	5-8640	1735	PUMP ASM; INJ	000000	000002
5864017360	5-8640	1736	NOZZLE ASM; INJ	000000	000000
5864017370	5-8640	1737	PISTON SET	000002	000002
5864017380	5-8640	1738	RING SET; PISTON, STANDARD	000003	000010
5864017390	5-8640	1739	PISTON SET; O/S=0.25	000000	000003
5864017400	5-8640	1740	RING SET; PISTON, O/S=0.25	000002	000003
5864017440	5-8640	1744	HOSE; BREATHER	000001	000002
5864017460	5-8640	1746	COVER; CYL HD	000001	000002
5864017470	5-8640	1747	HEAD ASM; CYL	000000	000001
5864017480	5-8640	1748	HOSE; TURBOCHARGER	000000	000004
5864017490	5-8640	1749	HOSE; RUBBER, OIL PIPE, TURB	000001	000002
5864017500	5-8640	1750	PIPE; OIL, TURBOCHRG RTN	000001	000001
5864017510	5-8640	1751	PUMP ASM; OIL	000000	000001
5864017520	5-8640	1752	GASKET; OIL COOLER	000002	000003
5864017530	5-8640	1753	PIPE; WATER, OIL COOLER	000001	000001
5864017560	5-8640	1756	NOZZLE ASM; INJ	000000	000000
5864017580	5-8640	1758	GASKET SET; ENG OVERHAUL	000000	000003
5864017670	5-8640	1767	GASKET SET; ENG OVERHAUL	000002	000003
5864017680	5-8640	1768	HEAD ASM; CYL	000000	000001
5864017720	5-8640	1772	MANIFOLD; INL	000000	000003
5864017770	5-8640	1777	NOZZLE ASM; INJ	000000	000003
5864017800	5-8640	1780	NOZZLE; INJ	000001	000002

5864017870	5-8640	1787	WATER SEPARATOR	000000	000004
5864017880	5-8640	1788	CAMSHAFT ASSY	000000	000001
5864017960	5-8640	1796	LABEL;F/TANK FILL LOCATIO	000000	000008
5864017980	5-8640	1798	LIMITER, CURRENT	000000	000008
5864018120	5-8640	1812	MANIFOLD;EXHAUST	000000	000001
5864018520	5-8640	1852	SPRING; PINION STARTER	000000	000000
5864018740	5-8640	1874	PUMP ASM;INJ	000000	000001
5864018760	5-8640	1876	PUMP; INJECTION	000000	000001
5864018780	5-8640	1878	PUMP; INJECTION	000000	000001
5864018910	5-8640	1891	ELEMENT;THERMO	000000	000000
5864019060	5-8640	1906	ELEMENT, AIR CLNR	000000	000000
5864019520	5-8640	1952	RELAY; GLOW PLUG	000000	000001
5867000162			AIRCORN KIT	000000	000000
5867000250			AIRCORN NO2 KIT	000000	000000
5871001840	5-8710	0184	REBUILT A/T	000000	000000
5871001850	5-8710	0185	REBUILT A/T	000000	000000
5871001860	5-8710	0186	REBUILT A/T	000000	000000
5871001870	5-8710	0187	REBUILT A/T	000000	000000
5873100420	5-8731	0042	PISTON	000000	000000
5873100430			PISTON	000000	000000
5873100570	5-8731	0057	OIL PUMP KIT	000000	000000
5873100571	5-8731	0057	OIL PUMP KIT	000023	000000
5873100870			BUSHING; CONNROD	000000	000942
5873100901	5-8731	0090	METAL SET;CONN ROD/US .25	000009	000003
5873100911	5-8731	0091	METAL SET;CONN ROD/US .50	000000	000000
5873103350	5-8731	0335	FUEL FILTER	000000	000000
5873103370	5-8731	0337	OIL FILTER	000000	000000
5873104390			CONNECTOR	000000	000000
5873104890	5-8731	0489	ELEMENT; OIL FILTER	000000	000000
5873105030	5-8731	0503	ELEMENT; OIL FILTER	000000	000000
5873105031	5-8731	0503	ELEMENT; OIL FILTER	000000	000000
5873105032	5-8731	0503	ELEMENT; OIL FILTER	000000	000079
5873105394	5-8731	0539	PARTIAL ENGINE	000000	000000
5873105395	5-8731	0539	PARTIAL ENGINE	000002	000000
5873105470			METAL KIT; CRAN	000000	000000
5873105500			ELEMENT; FUEL FILTER	000000	000000
5873105510			ELEMENT; OIL FILTER	000000	000000
5873105520	5-8731	0552	GASKET; CYL HD	000000	000000
5873105580			OIL FILTER CARTRIDGE	000000	000000
5873105590			FUEL FILTER CARTRIDGE	000000	000000
5873105610			PARTIAL ENG (WITH GEAR)	000000	000000
5873105611			PARTIAL ENG (WITH GEAR)	000000	000004
5873105750			ENGINE ASM;PARTIAL	000000	000000
5873106190			CRANKSHAFT KIT	000000	000013
5873107570	5-8731	0757	RING SET	000000	000000
5873107760	5-8731	0776	PARTIAL ENGINE	000000	000004
5873107770	5-8731	0777	PARTIAL ENGINE	000000	000000

5873108840	5-8731	0884	METAL SET; CAMSHAFT	000000	000192
5873109341	5-8731	0934	PARTIAL ENGINE	000000	000000
5873109342	5-8731	0934	PARTIAL ENGINE	000000	000000
5873109343	5-8731	0934	PARTIAL ENGINE	000000	000006
5873109370	5-8731	0937	ELEMENT F/FILT;HIGH EFF	000000	000000
5873110820	5-8731	1082	RING SET; PISTON	000009	000092
5873111090	5-8731	1109	PUMP ASM;WATER,W/GSKT	000000	000000
5873111091	5-8731	1109	PUMP ASM;WATER,W/GSKT	000000	000000
5874107160			FAN BELT	000000	000000
5874115420			ELEMENT F/FILT;HIGH EFF	000000	000000
5874115530			SHOE;PARING, BRK	000000	000000
5874115540			GASKET CYL HEAD	000000	000000
5874115560			GASKET; CYL HEAD	000000	000000
5874115590			DISC, CLUTCH	000000	000000
5874115600			PLATE ASM; PRESS	000000	000000
5874115660			PISTON RING	000000	000000
5874116090			ELEMENT F/FLTR;HIGH EFF	000000	000000
5874118261	5-8741	1826	GASKET KIT; FLA	000000	000001
5874118450	5-8741	1845	GASKET KIT;FLANGE,DPD	000000	000002
5876100290			FILTER;ACL	000000	000000
5876100291			FILTER; ACL	000000	000000
5878100090	5-8781	0009	FUEL FILTER	000376	000000
5878100091	5-8781	0009	FUEL FILTER	000000	000000
5878100123	5-8781	0012	REPAIR KIT; O/H	000000	000000
5878100140	5-8781	0014	REPAIR KIT:W/PU	000000	000000
5878100230	5-8781	0023	FUEL FILTER	000000	000000
5878100352	5-8781	0035	REPAIR KIT; WATER PUMP	000002	000000
5878100360	5-8781	0036	REPAIR KIT	000000	000000
5878100361	5-8781	0036	REPAIR KIT	000000	000000
5878100362	5-8781	0036	REPAIR KIT	000001	000000
5878100370	5-8781	0037	FILTER;FUEL PAPER ELEMENT	000003	000000
5878100390	5-8781	0039	FUEL FILTER	000000	000000
5878100401	5-8781	0040	WATER PUMP REPAIR KIT	000000	000000
5878100410	5-8781	0041	REPAIR KIT; W/P 3AB1	000000	000000
5878100430	5-8781	0043	REPAIR KIT; O/H	000000	000000
5878100500	5-8781	0050	FUEL FILTER	000000	000034
5878100511	5-8781	0051	REPAIR KIT; O/H	000000	000000
5878100512	5-8781	0051	REPAIR KIT; O/H	000002	000000
5878100534	5-8781	0053	REPAIR KIT; O/H	000000	000000
5878100536	5-8781	0053	REPAIR KIT; O/H	000000	000000
5878100540	5-8781	0054	PACKING KIT	000000	000000
5878100570	5-8781	0057	KIT;OIL PUMP	000000	000000
5878100580	5-8781	0058	REPAIR KIT; O/H	000000	000000
5878100680	5-8781	0068	REPAIR KIT; WATER PUMP	000000	000000
5878100711	5-8781	0071	WATER PUMP REPAIR KIT	000000	000000
5878100730	5-8781	0073	REPAIR KIT; WATER PUMP	000000	000000
5878100731	5-8781	0073	REPAIR KIT; WATER PUMP	000000	000000

5878100764	5-8781	0076	REPAIR KIT; WATER PUMP	000000	000003
5878100772	5-8781	0077	REPAIR KIT; WATER PUMP	000000	000001
5878100791	5-8781	0079	REPAIR KIT; WATER PUMP	000000	000000
5878100792	5-8781	0079	REPAIR KIT; WATER PUMP	000000	000003
5878100811	5-8781	0081	REP.KIT;HEAD	000000	000000
5878100823	5-8781	0082	SUPERSEDED**REPAIR KIT	000000	000000
5878100835	5-8781	0083	REPAIR KIT; O/H	000000	000000
5878100836	5-8781	0083	REPAIR KIT; O/H	000000	000000
5878100837	5-8781	0083	REPAIR KIT; O/H	000000	000005
5878100852	5-8781	0085	LINER KIT	000000	000000
5878100863	5-8781	0086	LINER KIT	000001	000000
5878100883	5-8781	0088	LINER KIT; CYL 4BB1	000000	000000
5878100932			LINER KIT; CYL 6BD1	000000	000000
5878100933			LINER KIT; CYL 6BD1	000000	000000
5878100934			LINER KIT; CYL 6BD1	000000	000000
5878100935			LINER KIT; CYL 6BD1	000000	000000
5878100937			LINER KIT; CYL 6BD1	000000	000000
5878100948	5-8781	0094	PACKING KIT	000000	000000
5878100983	5-8781	0098	REPAIR KIT; W/P	000000	000000
5878100992	5-8781	0099	REPAIR KIT; WATER PUMP	000000	000000
5878101050	5-8781	0105	REPAIR KIT W/P	000000	000000
5878101060	5-8781	0106	REPAIR KIT; O/H	000000	000000
5878101093	5-8781	0109	REPAIR KIT; O/H	000000	000000
5878101142	5-8781	0114	REPAIR KIT W/P	000000	000000
5878101144	5-8781	0114	REPAIR KIT W/P	000000	000000
5878101145	5-8781	0114	REPAIR KIT W/P	000000	000008
5878101160	5-8781	0116	REPAIR KIT; TOP O/H	000000	000000
5878101172	5-8781	0117	REPAIR KIT ENG TOP O/H	000000	000000
5878101174	5-8781	0117	REPAIR KIT ENG TOP O/H	000001	000000
5878101181	5-8781	0118	REPAIR KIT; ENG. TOP O/H	000000	000000
5878101201	5-8781	0120	REPAIR KIT; TOP O/H	000000	000000
5878101203	5-8781	0120	REPAIR KIT; TOP O/H	000000	000000
5878101212	5-8781	0121	REPAIR KIT; O/H	000000	000000
5878101213	5-8781	0121	REPAIR KIT; ENGINE O/H	000000	000000
5878101273	5-8781	0127	REPAIR KIT; TOP O/H	000000	000000
5878101274	5-8781	0127	REPAIR KIT; TOP O/H	000000	000000
5878101275	5-8781	0127	REPAIR KIT; TOP O/H	000000	000002
5878101281	5-8781	0128	REPAIR KIT; ENG. TOP O/H	000000	000000
5878101284	5-8781	0128	REPAIR KIT; TOP O/H	000000	000000
5878101285	5-8781	0128	REPAIR KIT; TOP O/H	000000	000000
5878101286	5-8781	0128	REPAIR KIT; TOP O/H	000000	000004
5878101392	5-8781	0139	REPAIR KIT; WATER PUMP	000000	000000
5878101402	5-8781	0140	WATER PUMP REPAIR KIT	000000	000000
5878101420	5-8781	0142	GEAR SET; OIL PUMP C240	000000	000000
5878101433	5-8781	0143	LINER KIT;CYLINDER	000000	000000
5878101453	5-8781	0145	REPAIR KIT; O/H	000000	000000
5878101462	5-8781	0146	REPAIR KIT; O/H	000000	000000

5878101465	5-8781	0146	REPAIR KIT; ENGINE O/H	000000	000000
5878101471	5-8781	0147	REPAIR KIT; TOP O/H	000000	000000
5878101480	5-8781	0148	LINER KIT C190	000000	000000
5878101481	5-8781	0148	LINER KIT C190	000000	000000
5878101491	5-8781	0149	LINER KIT, CYL	000000	000000
5878101507	5-8781	0150	REPAIR KIT; O/H	000000	000000
5878101508	5-8781	0150	REPAIR KIT; O/H	000000	000000
5878101541	5-8781	0154	REPAIR KIT; O/H	000000	000000
5878101542	5-8781	0154	REPAIR KIT; O/H	000000	000000
5878101543	5-8781	0154	REPAIR KIT; O/H	000000	000002
5878101560	5-8781	0156	WATER PUMP REPAIR KIT	000000	000000
5878101562	5-8781	0156	REPAIR KIT; W/P 3AB1	000000	000000
5878101572	5-8781	0157	LINER KIT; CYL	000000	000000
5878101581	5-8781	0158	LINER KIT;CYLINDER	000000	000000
5878101600	5-8781	0160	REPAIR KIT; O/H	000000	000000
5878101601	5-8781	0160	REPAIR KIT; O/H	000000	000000
5878101650	5-8781	0165	REPAIR KIT; O/H	000000	000000
5878101652	5-8781	0165	REPAIR KIT; O/H	000000	000000
5878101662	5-8781	0166	REPAIR KIT; ENGINE O/H	000000	000000
5878101664	5-8781	0166	REPAIR KIT; ENGINE O/H	000001	000001
5878101674	5-8781	0167	REPAIR KIT	000000	000000
5878101681	5-8781	0168	REPAIR KIT; O/H	000000	000000
5878101683	5-8781	0168	REPAIR KIT; O/H	000000	000000
5878101684	5-8781	0168	REPAIR KIT; O/H	000000	000001
5878101692	5-8781	0169	LINER KIT; CYL WO/TURBO	000000	000000
5878101693	5-8781	0169	LINER KIT; CYL WO/TURBO	000000	000000
5878101700	5-8781	0170	REPAIR KIT; O/H	000000	000000
5878101710	5-8781	0171	REPAIR KIT; O/H	000000	000000
5878101712	5-8781	0171	REPAIR KIT; O/H	000000	000000
5878101730	5-8781	0173	REPAIR KIT; WATER PUMP	000000	000000
5878101760	5-8781	0176	REPAIR KIT	000000	000000
5878101761	5-8781	0176	REPAIR KIT	000000	000000
5878101762	5-8781	0176	REPAIR KIT	000002	000001
5878101763	5-8781	0176	REPAIR KIT	000000	000000
5878101764	5-8781	0176	REPAIR KIT	000000	000000
5878101765	5-8781	0176	REPAIR KIT	000000	000000
5878101766	5-8781	0176	REPAIR KIT	000005	000000
5878101780	5-8781	0178	FILTER;FUEL PAPER ELEMENT	000000	000000
5878101790	5-8781	0179	REPAIR KIT; ENGINE O/H	000000	000000
5878101792	5-8781	0179	REPAIR KIT; ENGINE O/H	000001	000000
5878101800	5-8781	0180	REPAIR KIT; ENG. TOP O/H	000000	000000
5878101854	5-8781	0185	KIT	000000	000000
5878101859	5-8781	0185	REPAIR KIT; O/H	000000	000000
5878101861	5-8781	0186	REPAIR KIT; ENG. TOP O/H	000000	000000
5878101862	5-8781	0186	REPAIR KIT; TOP O/H	000000	000000
5878101872	5-8781	0187	REPAIR KIT;ENG.	000000	000000
5878101893	5-8781	0189	REPAIR KIT; TOP O/H	000000	000000

5878101910	5-8781	0191	LINER KIT; CYL.	000000	000000
5878101911	5-8781	0191	LINER KIT; CYL.	000000	000000
5878101912	5-8781	0191	LINER KIT; CYLINDER	000000	000000
5878101920	5-8781	0192	OVERHAUL GASKET SET	000000	000000
5878101970	5-8781	0197	FILTER;FUEL PAPER ELEMENT	000000	000044
5878101987	5-8781	0198	REPAIR KIT; O/H	000000	000000
5878101988	5-8781	0198	REPAIR KIT; O/H	000000	000000
5878101989	5-8781	0198	REPAIR KIT; O/H	000000	000000
5878102003	5-8781	0200	REPAIR KIT; O/H	000000	000000
5878102004	5-8781	0200	REPAIR KIT; O/H	000000	000000
5878102005	5-8781	0200	REPAIR KIT; O/H	000000	000000
5878102006	5-8781	0200	REPAIR KIT; O/H	000000	000000
5878102021	5-8781	0202	GEAR SET; OIL PUMP C240	000000	000000
5878102022	5-8781	0202	GEAR SET; OIL PUMP C240	000003	000000
5878102082	5-8781	0208	REPAIR KIT; O/H	000000	000000
5878102087	5-8781	0208	REPAIR KIT; ENGINE O/H	000000	000000
5878102092	5-8781	0209	LINER KIT;CYLINDER	000000	000000
5878102100	5-8781	0210	LINER KIT; CYL	000000	000000
5878102101	5-8781	0210	LINER KIT; CYL	000000	000000
5878102114	5-8781	0211	LINEN KIT; CYL	000000	000000
5878102122	5-8781	0212	REPAIR KIT; O/H	000000	000000
5878102127	5-8781	0212	REPAIR KIT; O/H	000000	000000
5878102128	5-8781	0212	REPAIR KIT; O/H	000000	000001
5878102151	5-8781	0215	REPAIR KIT; O/H	000000	000000
5878102173	5-8781	0217	REPAIR KIT	000000	000000
5878102201	5-8781	0220	REPAIR KIT; W/PUMP	000004	000002
5878102211	5-8781	0221	LINER KIT;CYLINDER	000000	000000
5878102241	5-8781	0224	REPAIR KIT; O/H	000000	000000
5878102250	5-8781	0225	REPAIR KIT; TOP O/H	000000	000000
5878102296	5-8781	0229	REPAIR KIT; ENG	000000	000000
5878102299	5-8781	0229	REPAIR KIT; ENG	000000	000001
5878102306	5-8781	0230	REPAIR KIT; ENGINE OVERHA	000000	000000
5878102308	5-8781	0230	REPAIR KIT; ENGINE OVERHA	000000	000000
5878102309	5-8781	0230	REPAIR KIT; ENGINE OVERHA	000000	000000
5878102311	5-8781	0231	REPAIR KIT; O/H	000000	000000
5878102340	5-8781	0234	REPAIR KIT; O/H	000000	000000
5878102351	5-8781	0235	LINER KIT; CYL	000000	000000
5878102361	5-8781	0236	LINER KIT; CYL.	000000	000000
5878102371	5-8781	0237	REPAIR KIT; O/H	000000	000000
5878102381	5-8781	0238	REPAIR KIT; O/H	000000	000000
5878102411	5-8781	0241	GEAR SET; OIL PUMP C240	000000	000000
5878102492	5-8781	0249	LINER KIT; CYL WO/TURBO	000000	000000
5878102501	5-8781	0250	REPAIR KIT; O/H	000000	000000
5878102508	5-8781	0250	REPAIR KIT; O/H	000000	000000
5878102517	5-8781	0251	REPAIR KIT; O/H	000000	000000
5878102518	5-8781	0251	REPAIR KIT; O/H	000000	000000
5878102519	5-8781	0251	REPAIR KIT; O/H	000000	000000

5878102520	5-8781	0252	REPAIR KIT; WATER PUMP	000000	000001
5878102590	5-8781	0259	REPAIR KIT; WATER PUMP	000000	000000
5878102610	5-8781	0261	REPAIR KIT; O/H	000000	000000
5878102664	5-8781	0266	REPAIR KIT; O/H	000000	000000
5878102672	5-8781	0267	REPAIR KIT; O/H	000000	000000
5878102676	5-8781	0267	REPAIR KIT; O/H	000000	000000
5878102677	5-8781	0267	REPAIR KIT; O/H	000001	000000
5878102680	5-8781	0268	REPAIR KIT; O/H	000000	000001
5878102690	5-8781	0269	FILTER;FUEL PAPER ELEMENT	000001	000044
5878102740	5-8781	0274	GEAR SET; OIL P	000000	000003
5878102741	5-8781	0274	GEAR SET; OIL P	000000	000006
5878102760	5-8781	0276	REPAIR KIT; WAT	000001	000001
5878102773	5-8781	0277	LINER KIT; CYL.	000000	000000
5878102782	5-8781	0278	LINER KIT; ENGINE	000000	000000
5878102790	5-8781	0279	REPAIR KIT; WATER PUMP	000000	000000
5878102793	5-8781	0279	REPAIR KIT; WATER PUMP	000000	000000
5878102850	5-8781	0285	REPAIR KIT; O/H	000000	000000
5878102880	5-8781	0288	REPAIR KIT; O/H	000000	000000
5878102923	5-8781	0292	LINEN KIT; CYL	000000	000000
5878102930	5-8781	0293	OIL FILTER	000000	000000
5878102963	5-8781	0296	REPAIR KIT; O/H	000000	000000
5878102980	5-8781	0298	REPAIR KIT; WATER PUMP	000000	000009
5878103041			REPAIR KIT; ENG.	000000	000000
5878103061			REPAIR KIT; O/H	000000	000039
5878103071	5-8781	0307	REPAIR KIT; O/H	000000	000000
5878103072	5-8781	0307	GASKET KIT	000000	000002
5878103101	5-8781	0310	LINER KIT	000000	000000
5878103160	5-8781	0316	LINER KIT; ENGI	000000	000000
5878103162	5-8781	0316	LINER KIT;ENG.	000000	000000
5878103164	5-8781	0316	LINER KIT; CYL	000000	000000
5878103180	5-8781	0318	GASKET SET;ENG.	000000	000000
5878103181	5-8781	0318	GASKET SET;ENG.	000000	000000
5878103182	5-8781	0318	GASKET SET; ENG	000000	000000
5878103190	5-8781	0319	REPAIR KIT;ENG	000000	000000
5878103191	5-8781	0319	GASKET SET;ENG	000000	000000
5878103192	5-8781	0319	REPAIR KIT;ENG	000000	000000
5878103193	5-8781	0319	REPAIR KIT;ENG	000000	000000
5878103195	5-8781	0319	REPAIR KIT;ENG	000000	000000
5878103196	5-8781	0319	REPAIR KIT;ENG	000000	000000
5878103261	5-8781	0326	REPAIR KIT; O/H	000000	000000
5878103290	5-8781	0329	REPAIR KIT; O/H	000000	000000
5878103300	5-8781	0330	REPAIR KIT; WATER PUMP	000000	000000
5878103436			GASKET SET; ENGINE	000000	000000
5878103659	5-8781	0365	REPAIR KIT ENG TOP O/H	000000	000000
5878103750	5-8781	0375	REPAIR KIT; O/H	000000	000000
5878103764	5-8781	0376	REPAIR KIT; O/H	000000	000000
5878103775	5-8781	0377	REPAIR KIT; O/H	000000	000000

5878103783	5-8781	0378	REPAIR KIT; O/H	000000	000000
5878103790	5-8781	0379	REPAIR KIT; (DISCONTINUED	000000	000000
5878103806	5-8781	0380	REPAIR KIT; O/H	000000	000000
5878103809	5-8781	0380	REPAIR KIT; O/H	000000	000000
5878103810	5-8781	0381	REPAIR KIT; WATER PUMP	000000	000000
5878103811	5-8781	0381	REPAIR KIT; WATER PUMP	000000	000000
5878103820	5-8781	0382	REPAIR KIT; WATER PUMP	000000	000000
5878103830	5-8781	0383	REPAIR KIT; WATER PUMP	000000	000000
5878103840	5-8781	0384	LINER KIT; ENGINE	000000	000000
5878103850	5-8781	0385	LINER KIT; CYL.	000000	000000
5878103860	5-8781	0386	LINER KIT; CYL 4FC1	000000	000000
5878103940	5-8781	0394	LINER KIT;ENG	000000	000000
5878103941	5-8781	0394	LINER KIT;ENG	000000	000000
5878103950	5-8781	0395	LINER KIT;ENG	000000	000000
5878103951	5-8781	0395	LINER KIT;ENG	000000	000000
5878103960	5-8781	0396	LINER KIT; ENG	000000	000000
5878103961	5-8781	0396	LINER KIT;ENG	000000	000000
5878103970	5-8781	0397	LINER KIT; ENG	000000	000000
5878103971	5-8781	0397	LINER KIT;ENG	000000	000000
5878104050	5-8781	0405	LINER KIT; ENG	000000	000000
5878104103	5-8781	0410	REPAIR KIT; O/H	000000	000000
5878104162	5-8781	0416	REPAIR KIT; O/H	000000	000000
5878104232	5-8781	0423	LINER KIT; CYL. W/TURBO	000000	000000
5878104233	5-8781	0423	LINER KIT; CYL. W/TURBO	000000	000000
5878104562	5-8781	0456	REPAIR KIT; O/H	000000	000000
5878104591			GASKET SET; ENGINE	000000	000000
5878104601			GASKET KIT	000000	000000
5878104620			REPAIR KIT; O/H	000000	000000
5878104640	5-8781	0464	REPAIR KIT; ENG.	000000	000000
5878104650	5-8781	0465	GASKET SET;	000000	000000
5878104653	5-8781	0465	GASKET SET;	000000	000000
5878104654	5-8781	0465	GASKET;SET	000000	000000
5878104690			GASKET SET;	000000	000000
5878104692			GASKET SET;	000000	000000
5878104723			REPAIR KIT; O/H	000000	000000
5878104724	5-8781	0472	REPAIR KIT; O/H	000000	000000
5878104725	5-8781	0472	REPAIR KIT; O/H	000000	000000
5878104726	5-8781	0472	REPAIR KIT; O/H	000000	000000
5878104727	5-8781	0472	REPAIR KIT; O/H	000003	000000
5878104741	5-8781	0474	REPAIR KIT; O/H	000000	000000
5878104791	5-8781	0479	LINER KIT; CYL. WO/TURBO	000000	000000
5878104825	5-8781	0482	REPAIR KIT ENG TOP O/H	000000	000000
5878104840	5-8781	0484	REPAIR KIT; TOP O/H	000000	000000
5878104841	5-8781	0484	REPAIR KIT; TOP O/H	000000	000000
5878104851	5-8781	0485	LINER KIT; CYL.	000000	000000
5878104902			LINER KIT; CYL WO/TURBO	000000	000000
5878105261	5-8781	0526	REPAIR KIT; O/H	000000	000000

5878105280	5-8781	0528	REPAIR KIT; TOP O/H	000000	000000
5878105290	5-8781	0529	LINER KIT; CYL WO/TURBO	000000	000000
5878105291	5-8781	0529	LINER KIT; CYL WO/TURBO	000000	000000
5878105310	5-8781	0531	GEAR SET;OIL PUMP	000000	000000
5878105350	5-8781	0535	REPAIR KIT; WATER PUMP	000000	000000
5878105362	5-8781	0536	LINER KIT; CYL.	000000	000000
5878105375	5-8781	0537	REPAIR KIT; O/H	000000	000000
5878105480			LINER KIT; ENG.	000000	000000
5878105481			LINER KIT;ENG	000000	000000
5878105482	5-8781	0548	LINER KIT;ENG	000000	000000
5878105490	5-8781	0549	LINER KIT; ENG.	000000	000000
5878105491	5-8781	0549	LINER KIT;ENG.	000000	000000
5878105492	5-8781	0549	LINER KIT; ENG	000000	000000
5878105500	5-8781	0550	LINER KIT; ENG.	000000	000000
5878105501	5-8781	0550	LINER KIT;ENG	000000	000000
5878105502	5-8781	0550	LINER KIT; ENG	000000	000000
5878105510	5-8781	0551	LINER KIT; ENG.	000000	000000
5878105511	5-8781	0551	LINER KIT;ENG	000000	000000
5878105512	5-8781	0551	LINER KIT; ENG	000000	000000
5878105535	5-8781	0553	REPAIR KIT; ENGINE O/H	000000	000000
5878105537	5-8781	0553	REPAIR KIT; ENGINE O/H	000000	000000
5878105551	5-8781	0555	LINER KIT	000000	000000
5878105552	5-8781	0555	LINER KIT	000000	000000
5878105660	5-8781	0566	GASKET SET;ENGINE	000000	000000
5878105820	5-8781	0582	REPAIR KIT; O/H	000000	000000
5878105924	5-8781	0592	REPAIR KIT; O/H WO/TURBO	000000	000000
5878105931	5-8781	0593	REPAIR KIT; O/H WO/TURBO	000000	000000
5878105940	5-8781	0594	REPAIR KIT; O/H WO/TURBO	000000	000000
5878105950	5-8781	0595	REPAIR KIT; O/H WO/TURBO	000000	000000
5878105961	5-8781	0596	REPAIR KIT; O/H WO/TURBO	000000	000000
5878105971	5-8781	0597	REPAIR KIT; O/H WO/TURBO	000000	000000
5878105980	5-8781	0598	REPAIR KIT; O/H WO/TURBO	000000	000000
5878105991	5-8781	0599	REPAIR KIT; O/H W/TURBO	000000	000000
5878106003	5-8781	0600	REPAIR KIT; O/H W/TURBO	000000	000000
5878106012	5-8781	0601	REPAIR KIT; O/H W/TURBO	000000	000000
5878106021	5-8781	0602	REPAIR KIT; TOP O/H WO/T	000000	000000
5878106024	5-8781	0602	REPAIR KIT; TOP O/H WO/T	000001	000000
5878106030	5-8781	0603	REPAIR KIT; TOP O/H WO/T	000000	000000
5878106031	5-8781	0603	REPAIR KIT; ENG. TOP O/H	000000	000000
5878106040	5-8781	0604	REPAIR KIT; TOP O/H WO/T	000000	000000
5878106042	5-8781	0604	REPAIR KIT; TOP O/H WO/T	000000	000000
5878106050	5-8781	0605	REPAIR KIT; TOP O/H WO/T	000000	000000
5878106051	5-8781	0605	REPAIR KIT; TOP O/H WO/T	000000	000000
5878106052	5-8781	0605	REPAIR KIT; ENG. TOP O/H	000000	000000
5878106060	5-8781	0606	REPAIR KIT; TOP O/H WO/T	000000	000000
5878106061	5-8781	0606	REPAIR KIT; ENG. TOP O/H	000000	000000
5878106062	5-8781	0606	REPAIR KIT; ENG. TOP O/H	000000	000000

5878106063	5-8781	0606	REPAIR KIT; ENG. TOP O/H	000000	000000
5878106064	5-8781	0606	REPAIR KIT; ENG. TOP O/H	000000	000002
5878106070	5-8781	0607	REPAIR KIT; TOP O/H	000000	000000
5878106071	5-8781	0607	REPAIR KIT; ENG. TOP O/H	000000	000000
5878106072	5-8781	0607	REPAIR KIT; ENG. TOP O/H	000000	000000
5878106074	5-8781	0607	REPAIR KIT; ENG. TOP O/H	000000	000000
5878106076	5-8781	0607	REPAIR KIT; ENG. TOP O/H	000000	000001
5878106083	5-8781	0608	REPAIR KIT; TOP O/H W/TU	000000	000000
5878106270	5-8781	0627	LINER KIT; ENGINE	000000	000000
5878106323	5-8781	0632	REPAIR KIT; O/H 4JB1	000000	000000
5878106325	5-8781	0632	REPAIR KIT; ENGINE O/H	000000	000000
5878106401	5-8781	0640	REPAIR KIT; O/H	000000	000000
5878106410	5-8781	0641	LINER KIT; CYL 4FC1	000000	000000
5878106421	5-8781	0642	LINER KIT; ENGINE	000000	000000
5878106450	5-8781	0645	REPAIR KIT; O/H	000000	000000
5878106454	5-8781	0645	GASKET SET; ENGINE	000000	000000
5878106541	5-8781	0654	REPAIR KIT; O/H	000000	000000
5878106620	5-8781	0662	REPAIR KIT; O/H	000000	000000
5878106622	5-8781	0662	REPAIR KIT; O/H	000000	000000
5878106650	5-8781	0665	REPAIR KIT; WATER PUMP	000000	000000
5878106685	5-8781	0668	REPAIR KIT; ENGINE O/H	000000	000000
5878106686	5-8781	0668	REPAIR KIT; ENGINE O/H	000000	000000
5878107154	5-8781	0715	REPAIR KIT; ENGINE O/H	000000	000000
5878107155	5-8781	0715	REPAIR KIT; ENGINE O/H	000000	000000
5878107158	5-8781	0715	REPAIR KIT; ENGINE O/H	000000	000000
5878107170	5-8781	0717	LINER KIT; CYL.	000000	000000
5878107185	5-8781	0718	REPAIR KIT; O/H	000000	000000
5878107186	5-8781	0718	REPAIR KIT; O/H	000000	000000
5878107187	5-8781	0718	REPAIR KIT; O/H	000000	000000
5878107188	5-8781	0718	REPAIR KIT; O/H	000000	000000
5878107221	5-8781	0722	REPAIR KIT; O/H	000000	000000
5878107222	5-8781	0722	REPAIR KIT; O/H	000000	000000
5878107272	5-8781	0727	REPAIR KIT; O/H	000000	000000
5878107274	5-8781	0727	REPAIR KIT; O/H	000000	000000
5878107290	5-8781	0729	REPAIR KIT; O/H	000000	000000
5878107310	5-8781	0731	REPAIR KIT ENG TOP O/H	000000	000000
5878107313	5-8781	0731	REPAIR KIT ENG TOP O/H	000000	000001
5878107330	5-8781	0733	GASKET SET;ENG	000000	000000
5878107331	5-8781	0733	GASKET SET;ENG	000000	000000
5878107332	5-8781	0733	GASKET SET;ENG	000000	000000
5878107333	5-8781	0733	GASKET SET;ENG	000000	000000
5878107334	5-8781	0733	GASKET SET;ENG	000000	000002
5878107364	5-8781	0736	REPAIR KIT; O/H	000000	000000
5878107367	5-8781	0736	REPAIR KIT; ENGINE O/H	000000	000000
5878107368	5-8781	0736	REPAIR KIT; ENGINE O/H	000000	000000
5878107460	5-8781	0746	REPAIR KIT; O/H	000000	000000
5878107690	5-8781	0769	LINER KIT; CYLINDER	000000	000000

5878107705	5-8781	0770	REPAIR KIT; ENGINE O/H	000000	000000
5878107706	5-8781	0770	REPAIR KIT; ENGINE O/H	000000	000000
5878107730	5-8781	0773	REPAIR KIT; O/H	000000	000000
5878107733	5-8781	0773	REPAIR KIT; O/H	000000	000000
5878107774	5-8781	0777	REPAIR KIT; ENGINE O/H	000000	000000
5878107775	5-8781	0777	REPAIR KIT; ENGINE O/H	000000	000002
5878107780	5-8781	0778	REPAIR KIT; O/H	000000	000000
5878107783	5-8781	0778	REPAIR KIT; O/H	000000	000000
5878107785	5-8781	0778	REPAIR KIT; O/H	000003	000000
5878107800	5-8781	0780	LINER KIT; CYL.	000000	000000
5878108031	5-8781	0803	REPAIR KIT; ENGINE O/H	000000	000000
5878108042	5-8781	0804	REPAIR KIT; ENGINE O/H	000000	000000
5878108052	5-8781	0805	REPAIR KIT; ENG. OVERHAUL	000000	000000
5878108061	5-8781	0806	REPAIR KIT; ENGINE O/H	000000	000000
5878108071	5-8781	0807	REPAIR KIT; ENGINE O/H	000000	000000
5878108081	5-8781	0808	REPAIR KIT; ENGINE O/H	000000	000000
5878108092	5-8781	0809	REPAIR KIT; ENGINE O/H	000000	000000
5878108102	5-8781	0810	REPAIR KIT; ENGINE O/H	000000	000000
5878108120	5-8781	0812	LINER KIT	000000	000000
5878108130	5-8781	0813	LINER KIT	000000	000000
5878108140	5-8781	0814	LINER KIT	000000	000000
5878108141	5-8781	0814	LINER KIT	000000	000000
5878108151	5-8781	0815	REPAIR KIT; O/H	000000	000000
5878108152	5-8781	0815	REPAIR KIT; O/H	000000	000000
5878108157	5-8781	0815	REPAIR KIT; O/H	000000	000000
5878108160	5-8781	0816	REPAIR KIT; O/H	000000	000000
5878108162	5-8781	0816	REPAIR KIT; ENGINE O/H	000000	000000
5878108170	5-8781	0817	REPAIR KIT; O/H	000000	000000
5878108172	5-8781	0817	REPAIR KIT; O/H	000000	000000
5878108180	5-8781	0818	REPAIR KIT; O/H	000000	000000
5878108181	5-8781	0818	REPAIR KIT; O/H	000000	000000
5878108182	5-8781	0818	REPAIR KIT; ENGINE O/H	000000	000000
5878108183	5-8781	0818	REPAIR KIT; ENGINE O/H	000000	000000
5878108184	5-8781	0818	REPAIR KIT; ENGINE O/H	000000	000000
5878108185	5-8781	0818	REPAIR KIT; ENGINE O/H	000000	000000
5878108186	5-8781	0818	REPAIR KIT; ENGINE O/H	000000	000000
5878108187	5-8781	0818	REPAIR KIT; ENGINE O/H	000000	000000
5878108188	5-8781	0818	REPAIR KIT; ENGINE O/H	000000	000000
5878108189	5-8781	0818	REPAIR KIT; ENGINE O/H	000000	000001
5878108190	5-8781	0819	REPAIR KIT; O/H	000000	000000
5878108200	5-8781	0820	REPAIR KIT; TOP O/H	000000	000000
5878108201	5-8781	0820	REPAIR KIT; TOP O/H	000000	000000
5878108210	5-8781	0821	REPAIR KIT; TOP O/H	000000	000000
5878108211	5-8781	0821	REPAIR KIT; TOP O/H	000000	000000
5878108214	5-8781	0821	REPAIR KIT;	000000	000000
5878108220	5-8781	0822	REPAIR KIT; TOP O/H	000002	000000
5878108221	5-8781	0822	REPAIR KIT; ENG. TOP O/H	000000	000000

5878108231	5-8781	0823	REPAIR KIT; ENG, OVERHAUL	000000	000000
5878108241	5-8781	0824	REPAIR KIT; ENGINE O/H	000000	000000
5878108251	5-8781	0825	REPAIR KIT; ENGINE O/H	000000	000000
5878108260	5-8781	0826	REPAIR KIT; O/H	000000	000000
5878108270	5-8781	0827	REPAIR KIT; ENGINE O/H	000000	000000
5878108272	5-8781	0827	REPAIR KIT; ENGINE O/H	000000	000000
5878108281	5-8781	0828	REPAIR KIT; TOP OVERHAUL	000000	000000
5878108290	5-8781	0829	REPAIR KIT; ENG. TOP O/H	000000	000000
5878108291	5-8781	0829	REPAIR KIT; ENG. TOP O/H	000000	000000
5878108293	5-8781	0829	REPAIR KIT; ENG. TOP O/H	000000	000000
5878108294	5-8781	0829	REPAIR KIT; ENG. TOP O/H	000000	000000
5878108295	5-8781	0829	REPAIR KIT; ENG. TOP O/H	000000	000001
5878108301	5-8781	0830	REPAIR KIT; O/H	000000	000000
5878108302	5-8781	0830	REPAIR KIT; O/H	000000	000000
5878108303	5-8781	0830	REPAIR KIT; O/H	000000	000000
5878108304	5-8781	0830	REPAIR KIT; O/H	000000	000000
5878108306	5-8781	0830	REPAIR KIT; O/H	000000	000000
5878108307	5-8781	0830	REPAIR KIT; O/H	000000	000001
5878108311	5-8781	0831	REPAIR KIT; TOP O/H	000000	000000
5878108315	5-8781	0831	REPAIR KIT; TOP O/H	000000	000001
5878108320			LINER KIT	000000	000000
5878108331			REPAIR KIT; O/H WO/TURBO	000000	000000
5878108340	5-8781	0834	REPAIR KIT; O/H W/TURBO	000000	000000
5878108350	5-8781	0835	REPAIR KIT; O/H WO/TURBO	000000	000000
5878108361	5-8781	0836	REPAIR KIT; O/H WO/TURBO	000000	000000
5878108370	5-8781	0837	REPAIR KIT; O/H WO/TURBO	000000	000000
5878108380	5-8781	0838	REPAIR KIT; O/H WO/TURBO	000000	000000
5878108390	5-8781	0839	REPAIR KIT; O/H WO/TURBO	000000	000000
5878108400	5-8781	0840	REPAIR KIT; O/H WO/TURBO	000000	000000
5878108410	5-8781	0841	REPAIR KIT; O/H WO/TURBO	000000	000000
5878108490	5-8781	0849	REPAIR KIT; TOP O/H WO/T	000000	000000
5878108500	5-8781	0850	REPAIR KIT; TOP O/H WO/T	000000	000000
5878108501	5-8781	0850	REPAIR KIT; ENG. TOP O/H	000000	000000
5878108502	5-8781	0850	REPAIR KIT; ENG. TOP O/H	000000	000000
5878108504	5-8781	0850	REPAIR KIT; ENG. TOP O/H	000004	000000
5878108510	5-8781	0851	REPAIR KIT; TOP O/H WO/T	000000	000000
5878108672			REPAIR KIT; O/H	000000	000000
5878108682	5-8781	0868	REPAIR KIT; O/H	000000	000000
5878108692	5-8781	0869	REPAIR KIT; O/H	000000	000000
5878108700	5-8781	0870	REPAIR KIT; O/H	000000	000000
5878108702	5-8781	0870	REPAIR KIT; ENGINE O/H	000000	000000
5878108712	5-8781	0871	REPAIR KIT; O/H	000000	000000
5878108722	5-8781	0872	REPAIR KIT; ENGINE O/H	000000	000000
5878108733	5-8781	0873	REPAIR KIT; O/H	000000	000000
5878108740	5-8781	0874	ELEMENT KIT; SEDIMENTER	000001	000001
5878108750	5-8781	0875	REPAIR KIT; O/H	000000	000000
5878108752	5-8781	0875	REPAIR KIT; O/H	000000	000000

5878108786	5-8781	0878	REPAIR KIT; ENGINE O/H	000000	000000
5878108789	5-8781	0878	REPAIR KIT; ENGINE O/H	000000	000000
5878108790	5-8781	0879	REPAIR KIT; ENG. TOP O/H	000000	000000
5878108795	5-8781	0879	REPAIR KIT; ENG. TOP O/H	000000	000000
5878108800	5-8781	0880	REPAIR KIT; O/H	000000	000000
5878109050	5-8781	0905	REPAIR KIT; O/H	000000	000000
5878109056	5-8781	0905	REPAIR KIT; ENGINE O/H	000000	000000
5878109060	5-8781	0906	REPAIR KIT; O/H	000000	000000
5878109070	5-8781	0907	LINER KIT; CYL.	000000	000000
5878109080	5-8781	0908	REPAIR KIT; O/H	000000	000000
5878109083	5-8781	0908	REPAIR KIT; O/H	000000	000000
5878109090	5-8781	0909	REPAIR KIT; O/H	000000	000000
5878109093	5-8781	0909	REPAIR KIT; ENGINE O/H	000000	000000
5878109213	5-8781	0921	REPAIR KIT; O/H 3KR1	000000	000000
5878109220	5-8781	0922	LINER SET;ENGINE CYLINDER	000000	000000
5878109221	5-8781	0922	LINER SET;ENGINE CYLINDER	000000	000000
5878109230	5-8781	0923	LINER SET;ENGINE CYLINDER	000000	000000
5878109231	5-8781	0923	LINER SET;ENGINE CYLINDER	000000	000000
5878109240	5-8781	0924	LINER SET;ENGINE CYLINDER	000000	000000
5878109241	5-8781	0924	LINER SET;ENGINE CYLINDER	000000	000000
5878109250	5-8781	0925	LINER SET;ENGINE CYLINDER	000000	000000
5878109251	5-8781	0925	LINER SET;ENGINE CYLINDER	000000	000000
5878109260	5-8781	0926	GASKET SET; ENGINE OVHAUL	000000	000000
5878109350	5-8781	0935	REPAIR KIT; ENGINE O/H	000000	000000
5878109380	5-8781	0938	REPAIR KIT; ENGINE O/H	000000	000000
5878109386	5-8781	0938	REPAIR KIT; ENGINE O/H	000000	000000
5878109390	5-8781	0939	REPAIR KIT; O/H	000000	000000
5878109392	5-8781	0939	REPAIR KIT; ENGINE O/H	000000	000000
5878109393	5-8781	0939	REPAIR KIT; ENGINE O/H	000000	000000
5878109401	5-8781	0940	REPAIR KIT; O/H	000000	000000
5878109402	5-8781	0940	REPAIR KIT; O/H	000000	000000
5878109403	5-8781	0940	REPAIR KIT; O/H	000000	000000
5878109404	5-8781	0940	REPAIR KIT; O/H	000000	000000
5878109405	5-8781	0940	REPAIR KIT; O/H	000000	000000
5878109406	5-8781	0940	REPAIR KIT; O/H	000000	000000
5878109407	5-8781	0940	REPAIR KIT; O/H	000000	000423
5878109410	5-8781	0941	LINER KIT	000000	000000
5878109420	5-8781	0942	REPAIR KIT; O/H	000000	000000
5878109423	5-8781	0942	REPAIR KIT; O/H	000000	000000
5878109424	5-8781	0942	REPAIR KIT; O/H	000000	000000
5878109427	5-8781	0942	REPAIR KIT; O/H	000000	000002
5878109432	5-8781	0943	REPAIR KIT; O/H	000000	000000
5878109462	5-8781	0946	REPAIR KIT; O/H	000000	000000
5878109463	5-8781	0946	REPAIR KIT; O/H	000000	000000
5878109464	5-8781	0946	REPAIR KIT; O/H	000000	000011
5878109472	5-8781	0947	REPAIR KIT; O/H	000000	000000
5878109473	5-8781	0947	REPAIR KIT; O/H	000000	000012

5878109481	5-8781	0948	REPAIR KIT; O/H	000000	000000
5878109482	5-8781	0948	REPAIR KIT; O/H	000000	000000
5878109483	5-8781	0948	REPAIR KIT; O/H	000000	000000
5878109484	5-8781	0948	REPAIR KIT; O/H	000000	000002
5878109511	5-8781	0951	REPAIR KIT; O/H	000000	000000
5878109512	5-8781	0951	REPAIR KIT; O/H	000000	000000
5878109513	5-8781	0951	REPAIR KIT; O/H	000000	000003
5878109610	5-8781	0961	REPAIR KIT; O/H	000000	000000
5878109613	5-8781	0961	REPAIR KIT; ENGINE O/H	000000	000000
5878109614	5-8781	0961	REPAIR KIT; ENGINE O/H	000000	000000
5878109615	5-8781	0961	REPAIR KIT; ENGINE O/H	000000	000000
5878109618	5-8781	0961	REPAIR KIT; ENGINE O/H	000000	000000
5878109619	5-8781	0961	REPAIR KIT; ENGINE O/H	000000	000000
5878109620	5-8781	0962	REPAIR KIT; O/H	000000	000000
5878109624	5-8781	0962	REPAIR KIT; ENGINE O/H	000000	000000
5878109625	5-8781	0962	REPAIR KIT; ENGINE O/H	000000	000000
5878109626	5-8781	0962	REPAIR KIT; ENGINE O/H	000000	000000
5878109627	5-8781	0962	REPAIR KIT; ENGINE O/H	000000	000000
5878109630			REPAIR KIT; ENG	000000	000000
5878109632			REPAIR KIT; ENG	000000	000000
5878109660			GASKET SET; ENGINE	000000	000000
5878109670			O/H GASKET KIT	000000	000000
5878109691			REPAIR KIT; O/H	000000	000000
5878109693	5-8781	0969	REPAIR KIT; ENGINE O/H	000000	000000
5878109694	5-8781	0969	REPAIR KIT; ENGINE O/H	000000	000008
5878109700	5-8781	0970	REPAIR KIT; O/H	000001	000000
5878109704	5-8781	0970	REPAIR KIT; O/H	000000	000005
5878109710	5-8781	0971	REPAIR KIT; O/H	000000	000000
5878110700			REPAIR KIT; O/H	000000	000000
5878110701	5-8781	1070	REPAIR KIT; O/H	000000	000001
5878111010	5-8781	1101	REPAIR KIT; O/H	000000	000000
5878111011	5-8781	1101	REPAIR KIT; O/H	000000	000000
5878111012	5-8781	1101	REPAIR KIT; ENGINE O/H	000000	000000
5878111013	5-8781	1101	REPAIR KIT; ENGINE O/H	000000	000000
5878111014	5-8781	1101	REPAIR KIT; ENGINE O/H	000000	000000
5878111020	5-8781	1102	REPAIR KIT; O/H	000000	000000
5878111021	5-8781	1102	REPAIR KIT; ENGINE O/H	000000	000000
5878111026	5-8781	1102	REPAIR KIT; ENGINE O/H	000000	000001
5878111030	5-8781	1103	REPAIR KIT; O/H	000000	000000
5878111032	5-8781	1103	REPAIR KIT; O/H	000000	000000
5878111033	5-8781	1103	REPAIR KIT; O/H	000000	000000
5878111036	5-8781	1103	REPAIR KIT; O/H	000000	000000
5878111037	5-8781	1103	REPAIR KIT; O/H	000000	000002
5878111110	5-8781	1111	REPAIR KIT; O/H WO/TURBO	000000	000000
5878111120	5-8781	1112	REPAIR KIT; TOP O/H WO/T	000000	000000
5878111121	5-8781	1112	REPAIR KIT; ENG TOP O/H	000000	000000
5878111122	5-8781	1112	REPAIR KIT; ENG TOP O/H	000000	000000

5878111124	5-8781	1112	REPAIR KIT; ENG TOP O/H	000000	000001
5878111130	5-8781	1113	REPAIR KIT; O/H WO/TURBO	000000	000000
5878111131	5-8781	1113	REPAIR KIT; O/H WO/TURBO	000000	000000
5878111381	5-8781	1138	REPAIR KIT; O/H	000000	000000
5878111420	5-8781	1142	PUMP ASM; WATER 2/3KC1	000000	000000
5878111430	5-8781	1143	REPAIR KIT; O/H	000000	000000
5878111433	5-8781	1143	REPAIR KIT; ENGINE O/H	000000	000000
5878111434	5-8781	1143	REPAIR KIT; ENGINE O/H	000000	000000
5878111440	5-8781	1144	REPAIR KIT; O/H	000000	000000
5878111442	5-8781	1144	REPAIR KIT; ENGINE O/H	000000	000000
5878111450	5-8781	1145	REPAIR KIT; O/H	000000	000000
5878111530	5-8781	1153	REPAIR KIT; O/H	000000	000000
5878111531	5-8781	1153	REPAIR KIT; O/H	000000	000000
5878111540	5-8781	1154	GASKET SET; ENG.	000000	000000
5878111701			GASKET SET	000000	000000
5878111702			GASKET SET	000000	000000
5878111890			REPAIR KIT; O/H	000000	000000
5878111910	5-8781	1191	REPAIR KIT; O/H	000000	000000
5878111970	5-8781	1197	GASKET SET; ENGINE	000000	000000
5878111971	5-8781	1197	GASKET SET; ENGINE	000000	000000
5878111972	5-8781	1197	GASKET SET; ENGINE	000000	000000
5878111973	5-8781	1197	GASKET SET; ENGINE	000000	000002
5878112292	5-8781	1229	REPAIR KIT; ENGINE O/H	000000	000002
5878112331			GASKET SET	000000	000000
5878112760			GASKET SET; ENG.	000000	000000
5878112761	5-8781	1276	GASKET SET; ENG.	000000	000000
5878112762	5-8781	1276	GASKET SET; ENG.	000000	000000
5878112763	5-8781	1276	GASKET SET; ENG.	000000	000000
5878112770	5-8781	1277	GASKET SET; ENGINE	000000	000000
5878112771	5-8781	1277	GASKET SET; ENGINE	000000	000000
5878112772	5-8781	1277	GASKET SET; ENGINE	000000	000000
5878112910	5-8781	1291	GASKET SET; ENG	000000	000000
5878112912	5-8781	1291	GASKET SET; ENGINE	000000	000000
5878112950	5-8781	1295	REPAIR KIT; O/H	000000	000000
5878113040	5-8781	1304	REPAIR KIT; O/H	000000	000000
5878113050	5-8781	1305	REPAIR KIT; O/H	000000	000000
5878113080			REPAIR KIT; O/H	000000	000000
5878113081	5-8781	1308	REPAIR KIT; O/H	000000	000000
5878113082	5-8781	1308	REPAIR KIT; O/H	000000	000000
5878113083	5-8781	1308	REPAIR KIT; O/H	000000	000000
5878113084	5-8781	1308	REPAIR KIT; O/H	000000	000000
5878113085	5-8781	1308	REPAIR KIT; O/H	000000	000000
5878113086	5-8781	1308	REPAIR KIT; O/H	000000	000016
5878113110	5-8781	1311	REPAIR KIT; O/H	000000	000000
5878113111	5-8781	1311	REPAIR KIT; O/H	000000	000000
5878113112	5-8781	1311	REPAIR KIT; O/H-GASKT SET	000000	000000
5878113113	5-8781	1311	REPAIR KIT; O/H-GASKT SET	000000	000000

5878113114	5-8781	1311	REPAIR KIT; O/H-GASKT SET	000000	000000
5878113115	5-8781	1311	REPAIR KIT; O/H-GASKT SET	000000	000000
5878113116	5-8781	1311	REPAIR KIT; O/H-GASKT SET	000000	000034
5878113180	5-8781	1318	GASKET SET; ENG	000000	000000
5878113181	5-8781	1318	GASKET SET; ENG	000000	000000
5878113200	5-8781	1320	REPAIR KIT; O/H	000000	000000
5878113203	5-8781	1320	REPAIR KIT; O/H	000000	000000
5878113222	5-8781	1322	REPAIR KIT; ENGINE O/H	000000	000000
5878113223	5-8781	1322	REPAIR KIT; ENGINE O/H	000000	000000
5878113228	5-8781	1322	REPAIR KIT; ENGINE O/H	000001	000000
5878113240	5-8781	1324	REPAIR KIT; O/H	000000	000000
5878113250	5-8781	1325	REPAIR KIT; O/H	000000	000000
5878113252	5-8781	1325	REPAIR KIT; O/H	000000	000000
5878113256	5-8781	1325	REPAIR KIT; ENGINE O/H	000000	000000
5878113257	5-8781	1325	REPAIR KIT; ENGINE O/H	000000	000000
5878113260	5-8781	1326	REPAIR KIT; O/H	000000	000000
5878113261	5-8781	1326	REPAIR KIT; O/H	000000	000000
5878113262	5-8781	1326	REPAIR KIT; O/H	000000	000000
5878113266	5-8781	1326	REPAIR KIT; O/H	000000	000001
5878113270	5-8781	1327	REPAIR KIT; O/H	000000	000000
5878113273	5-8781	1327	REPAIR KIT; ENG TOP O/H	000000	000000
5878113274	5-8781	1327	REPAIR KIT; ENG TOP O/H	000000	000000
5878113275	5-8781	1327	REPAIR KIT; ENG TOP O/H	000000	000000
5878113276	5-8781	1327	REPAIR KIT; ENG TOP O/H	000000	000000
5878113277	5-8781	1327	REPAIR KIT; ENG TOP O/H	000000	000000
5878113278	5-8781	1327	REPAIR KIT; ENG TOP O/H	000000	000001
5878113280	5-8781	1328	REPAIR KIT; O/H	000000	000000
5878113281	5-8781	1328	REPAIR KIT; O/H	000000	000000
5878113282	5-8781	1328	REPAIR KIT; O/H	000000	000000
5878113283	5-8781	1328	REPAIR KIT; O/H	000000	000000
5878113284	5-8781	1328	REPAIR KIT; O/H	000000	000000
5878113300	5-8781	1330	REPAIR KIT;ENG,OVERHAUL	000000	000000
5878113310	5-8781	1331	REPAIR KIT; ENGINE O/H	000000	000000
5878113330	5-8781	1333	REPAIR KIT; O/H	000000	000000
5878113350	5-8781	1335	REPAIR KIT; O/H	000000	000000
5878113360	5-8781	1336	REPAIR KIT; O/H	000000	000000
5878113362	5-8781	1336	REPAIR KIT; O/H	000000	000000
5878113370	5-8781	1337	REPAIR KIT; O/H	000000	000000
5878113380	5-8781	1338	REPAIR KIT; O/H	000000	000000
5878113383	5-8781	1338	REPAIR KIT; O/H	000000	000000
5878113384	5-8781	1338	REPAIR KIT; O/H	000001	000000
5878113390	5-8781	1339	REPAIR KIT; O/H	000000	000000
5878113391	5-8781	1339	REPAIR KIT; ENGINE O/H	000000	000000
5878113400	5-8781	1340	REPAIR KIT; ENGINE O/H	000000	000000
5878113401	5-8781	1340	REPAIR KIT; ENGINE O/H	000000	000000
5878113402	5-8781	1340	REPAIR KIT; ENGINE O/H	000000	000000
5878113403	5-8781	1340	REPAIR KIT; ENGINE O/H	000000	000000

5878113404	5-8781	1340	REPAIR KIT; ENGINE O/H	000000	000001
5878113410	5-8781	1341	GASKET SET; ENG.	000000	000000
5878113411	5-8781	1341	REPAIR KIT; ENGINE O/H	000000	000000
5878113412	5-8781	1341	REPAIR KIT; ENGINE O/H	000000	000000
5878113413	5-8781	1341	REPAIR KIT; ENGINE O/H	000000	000027
5878113440	5-8781	1344	REPAIR KIT; O/H	000000	000000
5878113441	5-8781	1344	REPAIR KIT; O/H	000000	000000
5878113442	5-8781	1344	REPAIR KIT; O/H	000000	000011
5878113450	5-8781	1345	REPAIR KIT; O/H	000000	000000
5878113452	5-8781	1345	REPAIR KIT; O/H	000000	000000
5878113453	5-8781	1345	REPAIR KIT; O/H	000000	000001
5878113510	5-8781	1351	GASKET SET; ENG.	000000	000000
5878113540	5-8781	1354	GASKET SET; ENGINE	000000	000000
5878113583	5-8781	1358	REPAIR KIT ENG TOP O/H	000000	000005
5878113591	5-8781	1359	REPAIR KIT; O/H	000000	000000
5878113612	5-8781	1361	GASKET SET; ENGINE	000000	000000
5878113613	5-8781	1361	GASKET SET; ENGINE	000000	000000
5878113615	5-8781	1361	GASKET SET; ENGINE	000001	000000
5878113630	5-8781	1363	REPAIR KIT; O/H WO/TURBO	000000	000000
5878113631	5-8781	1363	REPAIR KIT; O/H WO/TURBO	000000	000000
5878113650	5-8781	1365	REPAIR KIT; ENGINE O/H	000000	000000
5878113651	5-8781	1365	REPAIR KIT; ENGINE O/H	000000	000000
5878113652	5-8781	1365	REPAIR KIT; ENGINE O/H	000000	000000
5878113659	5-8781	1365	REPAIR KIT; ENGINE O/H	000000	000001
5878113660	5-8781	1366	REPAIR KIT; O/H WO/TURBO	000000	000000
5878113661	5-8781	1366	REPAIR KIT; O/H WO/TURBO	000000	000000
5878113663	5-8781	1366	REPAIR KIT; O/H WO/TURBO	000000	000000
5878113667	5-8781	1366	REPAIR KIT; O/H WO/TURBO	000000	000000
5878113668	5-8781	1366	REPAIR KIT; O/H WO/TURBO	000000	000000
5878113680	5-8781	1368	REPAIR KIT; O/H W/TURBO	000000	000000
5878113683	5-8781	1368	REPAIR KIT; O/H W/TURBO	000000	000000
5878113690	5-8781	1369	REPAIR KIT; TOP O/H W/TU	000000	000000
5878113691	5-8781	1369	REPAIR KIT; TOP O/H W/TU	000000	000000
5878113692	5-8781	1369	REPAIR KIT; TOP O/H W/TU	000000	000000
5878113693	5-8781	1369	REPAIR KIT; TOP O/H W/TU	000000	000000
5878113694	5-8781	1369	REPAIR KIT; TOP O/H W/TU	000000	000000
5878113695	5-8781	1369	REPAIR KIT; TOP O/H W/TU	000000	000000
5878113696	5-8781	1369	REPAIR KIT; TOP O/H W/TU	000000	000000
5878113698	5-8781	1369	REPAIR KIT; TOP O/H W/TU	000000	000003
5878113700	5-8781	1370	GASKET SET; ENGINE	000000	000000
5878113703	5-8781	1370	GASKET SET; ENGINE	000000	000001
5878113730	5-8781	1373	REPAIR KIT; ENGINE O/H	000000	000000
5878113731	5-8781	1373	REPAIR KIT; ENGINE O/H	000000	000000
5878113741	5-8781	1374	REPAIR KIT; ENGINE O/H	000000	000000
5878113750	5-8781	1375	REPAIR KIT; ENG OVERHAUL	000000	000000
5878113760	5-8781	1376	REPAIR KIT; ENGINE O/H	000000	000000
5878113770	5-8781	1377	GASKET SET; ENG.	000000	000000

5878113771	5-8781	1377	GASKET SET; ENG.	000000	000000
5878113780	5-8781	1378	GASKET SET; ENG.	000000	000000
5878113781	5-8781	1378	GASKET SET; ENG.	000000	000000
5878113790	5-8781	1379	REPAIR KIT; ENGINE O/H	000000	000000
5878113800	5-8781	1380	REPAIR KIT; ENGINE O/H	000000	000000
5878113810	5-8781	1381	REPAIR KIT; O/H	000000	000000
5878113812	5-8781	1381	REPAIR KIT; O/H	000000	000000
5878113816	5-8781	1381	REPAIR KIT; O/H	000000	000000
5878113819	5-8781	1381	REPAIR KIT; O/H	000000	000003
5878113820	5-8781	1382	REPAIR KIT; O/H W/TURBO	000000	000000
5878113822	5-8781	1382	REPAIR KIT; ENGINE O/H	000000	000000
5878113823	5-8781	1382	REPAIR KIT; ENGINE O/H	000000	000000
5878113830	5-8781	1383	REPAIR KIT; O/H	000000	000000
5878113832	5-8781	1383	REPAIR KIT; O/H	000002	000000
5878113860	5-8781	1386	REPAIR KIT; ENGINE O/H	000000	000000
5878113940	5-8781	1394	REPAIR KIT; TOP O/H	000000	000000
5878113941	5-8781	1394	REPAIR KIT; TOP O/H	000000	000000
5878113942	5-8781	1394	REPAIR KIT; TOP O/H	000000	000000
5878113943	5-8781	1394	REPAIR KIT; TOP O/H	000000	000000
5878113944	5-8781	1394	REPAIR KIT; TOP O/H	000000	000000
5878113946	5-8781	1394	REPAIR KIT; TOP O/H	000000	000000
5878113947	5-8781	1394	REPAIR KIT; TOP O/H	000000	000000
5878113948	5-8781	1394	REPAIR KIT; TOP O/H	000000	000000
5878113949	5-8781	1394	REPAIR KIT; TOP O/H	000000	000000
5878113951	5-8781	1395	REPAIR KIT; TOP O/H	000000	000000
5878113952	5-8781	1395	REPAIR KIT; TOP O/H	000000	000000
5878113954	5-8781	1395	REPAIR KIT; TOP O/H	000000	000000
5878113960	5-8781	1396	REPAIR KIT; TOP O/H	000000	000000
5878113961	5-8781	1396	REPAIR KIT; TOP O/H	000000	000000
5878113962	5-8781	1396	REPAIR KIT; ENGINE O/H	000000	000000
5878113963	5-8781	1396	REPAIR KIT; ENGINE O/H	000000	000000
5878113964	5-8781	1396	REPAIR KIT; ENGINE O/H	000000	000000
5878113966	5-8781	1396	REPAIR KIT; ENGINE O/H	000000	000000
5878113968	5-8781	1396	REPAIR KIT; ENGINE O/H	000000	000000
5878113970	5-8781	1397	REPAIR KIT; TOP O/H	000000	000000
5878113971	5-8781	1397	REPAIR KIT; TOP O/H	000000	000000
5878113972	5-8781	1397	REPAIR KIT; ENGINE O/H	000000	000000
5878113975	5-8781	1397	REPAIR KIT; ENGINE O/H	000000	000000
5878113976	5-8781	1397	REPAIR KIT; ENGINE O/H	000000	000000
5878113980	5-8781	1398	REPAIR KIT; O/H	000000	000000
5878113981	5-8781	1398	REPAIR KIT; O/H	000000	000000
5878113982	5-8781	1398	REPAIR KIT; O/H	000000	000000
5878113983	5-8781	1398	REPAIR KIT; O/H	000000	000001
5878113990	5-8781	1399	REPAIR KIT; O/H	000000	000000
5878113991	5-8781	1399	REPAIR KIT; O/H	000000	000000
5878113992	5-8781	1399	REPAIR KIT; O/H	000000	000000
5878113993	5-8781	1399	REPAIR KIT; O/H	000000	000000

5878113994	5-8781	1399	REPAIR KIT; O/H	000000	000000
5878113995	5-8781	1399	REPAIR KIT; O/H	000000	000000
5878113996	5-8781	1399	REPAIR KIT; O/H	000000	000001
5878114000	5-8781	1400	REPAIR KIT; TOP O/H	000000	000000
5878114002	5-8781	1400	REPAIR KIT; TOP O/H	000000	000000
5878114003	5-8781	1400	REPAIR KIT; TOP O/H	000000	000002
5878114010	5-8781	1401	REPAIR KIT; TOP O/H	000000	000000
5878114040	5-8781	1404	REPAIR KIT; O/H	000000	000000
5878114042	5-8781	1404	REPAIR KIT; O/H	000000	000000
5878114043	5-8781	1404	REPAIR KIT ENG. TOP O/H	000000	000000
5878114044	5-8781	1404	REPAIR KIT ENG. TOP O/H	000000	000000
5878115120			LINER KIT	000000	000000
5878115121	5-8781	1512	LINER KIT	000000	000000
5878115162	5-8781	1516	REPAIR KIT ENG TOP O/H	000000	000000
5878115240	5-8781	1524	LINER KIT; CYL.	000000	000000
5878115250	5-8781	1525	GASKET SET; ENGINE OVHAUL	000000	000000
5878115271	5-8781	1527	REPAIR KIT; O/H	000000	000000
5878115272	5-8781	1527	REPAIR KIT; O/H	000000	000000
5878115273	5-8781	1527	REPAIR KIT; O/H	000000	000011
5878115280	5-8781	1528	REPAIR KIT; O/H	000000	000000
5878115281	5-8781	1528	REPAIR KIT; O/H	000000	000000
5878115284	5-8781	1528	REPAIR KIT; ENGINE O/H	000000	000000
5878115285	5-8781	1528	REPAIR KIT; ENGINE O/H	000000	000000
5878115286	5-8781	1528	REPAIR KIT; ENGINE O/H	000000	000000
5878115287	5-8781	1528	REPAIR KIT; ENGINE O/H	000001	000000
5878115420	5-8781	1542	GASKET KIT	000000	000000
5878115421	5-8781	1542	REPAIR KIT; ENGINE O/H	000000	000000
5878115422	5-8781	1542	GASKET KIT	000000	000000
5878115424	5-8781	1542	GASKET KIT	000000	000000
5878115425	5-8781	1542	GASKET KIT	000000	000000
5878115441	5-8781	1544	REPAIR KIT; O/H	000000	000000
5878115442	5-8781	1544	REPAIR KIT; O/H	000000	000000
5878115443	5-8781	1544	REPAIR KIT; O/H	000000	000000
5878115450	5-8781	1545	REPAIR KIT; O/H	000000	000000
5878115451	5-8781	1545	REPAIR KIT; O/H	000000	000000
5878115452	5-8781	1545	REPAIR KIT; O/H	000000	000008
5878115611	5-8781	1561	REPAIR KIT; ENGINE OVERHA	000000	000000
5878115680	5-8781	1568	REPAIR KIT; ENG. TOP O/H	000000	000000
5878115682	5-8781	1568	REPAIR KIT; ENG. TOP O/H	000000	000000
5878115690	5-8781	1569	REPAIR KIT; ENG. TOP O/H	000000	000000
5878115770	5-8781	1577	GASKET SET; ENG. O/H	000000	000000
5878115980	5-8781	1598	REPAIR KIT; ENGINE O/H	000000	000000
5878116150	5-8781	1615	GASKET SET; TOP	000000	000000
5878116320	5-8781	1632	REPAIR KIT; ENGINE O/H	000000	000000
5878116322	5-8781	1632	REPAIR KIT; ENGINE O/H	000000	000000
5878116323	5-8781	1632	REPAIR KIT; ENGINE O/H	000000	000000
5878116324	5-8781	1632	REPAIR KIT; ENGINE O/H	000000	000000

5878116325	5-8781	1632	REPAIR KIT; ENGINE O/H	000000	000000
5878116327	5-8781	1632	REPAIR KIT; ENGINE O/H	000000	000000
5878116328	5-8781	1632	REPAIR KIT; ENGINE O/H	000000	000002
5878116330	5-8781	1633	REPAIR KIT; O/H	000000	000000
5878116331	5-8781	1633	REPAIR KIT; O/H	000000	000000
5878116332	5-8781	1633	REPAIR KIT; O/H	000000	000000
5878116340	5-8781	1634	REPAIR KIT; O/H	000000	000000
5878116350	5-8781	1635	REPAIR KIT; O/H	000000	000000
5878116351	5-8781	1635	REPAIR KIT; O/H	000000	000000
5878116355	5-8781	1635	REPAIR KIT; O/H	000000	000001
5878116380	5-8781	1638	REPAIR KIT; O/H 4JB1	000000	000000
5878116381	5-8781	1638	REPAIR KIT; O/H 4JB1	000000	000000
5878116382	5-8781	1638	REPAIR KIT; O/H 4JB1	000000	000000
5878116390	5-8781	1639	REPAIR KIT O/H	000000	000000
5878116392	5-8781	1639	REPAIR KIT O/H	000000	000000
5878116394	5-8781	1639	REPAIR KIT O/H	000000	000000
5878116395	5-8781	1639	REPAIR KIT O/H	000000	000000
5878117340	5-8781	1734	REPAIR KIT; ENG.	000000	000000
5878117350	5-8781	1735	REPAIR KIT; ENGINE O/H	000000	000000
5878117352	5-8781	1735	REPAIR KIT; ENGINE O/H	000000	000000
5878117357	5-8781	1735	REPAIR KIT; ENGINE O/H	000000	000002
5878117390	5-8781	1739	REPAIR KIT; O/H W/TURBO	000000	000000
5878117391	5-8781	1739	REPAIR KIT; O/H W/TURBO	000000	000000
5878117392	5-8781	1739	REPAIR KIT; O/H W/TURBO	000000	000000
5878117393	5-8781	1739	REPAIR KIT; O/H W/TURBO	000000	000000
5878117394	5-8781	1739	REPAIR KIT; O/H W/TURBO	000000	000000
5878117396	5-8781	1739	REPAIR KIT; O/H W/TURBO	000000	000000
5878117397	5-8781	1739	REPAIR KIT; O/H W/TURBO	000000	000000
5878117398	5-8781	1739	REPAIR KIT; O/H W/TURBO	000000	000002
5878117400	5-8781	1740	REPAIR KIT; ENGINE O/H	000000	000000
5878117402	5-8781	1740	REPAIR KIT; ENGINE O/H	000001	000000
5878117410	5-8781	1741	REPAIR KIT; ENGINE O/H	000000	000000
5878117420	5-8781	1742	REPAIR KIT; O/N WO/TURBO	000000	000000
5878117430	5-8781	1743	REPAIR KIT; ENG	000000	000000
5878117434	5-8781	1743	REPAIR KIT; ENG	000002	000000
5878117440	5-8781	1744	REPAIR KIT; O/H	000000	000000
5878117441	5-8781	1744	REPAIR KIT; O/H	000000	000000
5878117442	5-8781	1744	REPAIR KIT; O/H	000000	000000
5878117443	5-8781	1744	REPAIR KIT; O/H	000000	000000
5878117445	5-8781	1744	REPAIR KIT; O/H	000000	000000
5878117446	5-8781	1744	REPAIR KIT; O/H	000000	000000
5878117447	5-8781	1744	REPAIR KIT; O/H	000000	000001
5878117450	5-8781	1745	REPAIR KIT; ENGINE O/H	000000	000000
5878117460	5-8781	1746	REPAIR KIT; O/H WO/TURBO	000000	000000
5878117470	5-8781	1747	REPAIR KIT; ENGINE O/H	000000	000000
5878117472	5-8781	1747	REPAIR KIT; ENGINE O/H	000001	000000
5878117480	5-8781	1748	REPAIR KIT; ENGINE O/H	000000	000000

5878117490	5-8781	1749	REPAIR KIT; O/H WO/TURBO	000000	000000
5878117491	5-8781	1749	REPAIR KIT; O/H WO/TURBO	000000	000002
5878117500	5-8781	1750	REPAIR KIT; ENG.	000000	000000
5878117502	5-8781	1750	REPAIR KIT; ENG.	000000	000000
5878117503	5-8781	1750	REPAIR KIT; ENG.	000000	000000
5878117504	5-8781	1750	REPAIR KIT; ENG.	000000	000000
5878117510	5-8781	1751	REPAIR KIT; ENGINE O/H	000000	000000
5878117511	5-8781	1751	REPAIR KIT; ENGINE O/H	000000	000000
5878117512	5-8781	1751	REPAIR KIT; ENGINE O/H	000000	000000
5878117513	5-8781	1751	REPAIR KIT; O/H WO/TURBO	000000	000000
5878117520	5-8781	1752	REPAIR KIT; ENGINE O/H	000000	000000
5878117530	5-8781	1753	REPAIR KIT; ENGINE O/H	000000	000000
5878117540	5-8781	1754	REPAIR KIT; ENGINE O/H	000000	000000
5878117541	5-8781	1754	REPAIR KIT; O/H WO/TURBO	000000	000000
5878117550	5-8781	1755	REPAIR KIT; ENGINE O/H	000000	000000
5878117560	5-8781	1756	REPAIR KIT; OH W/TURBO	000000	000000
5878117561	5-8781	1756	REPAIR KIT; OH W/TURBO	000000	000000
5878117562	5-8781	1756	REPAIR KIT; OH W/TURBO	000000	000000
5878117570	5-8781	1757	REPAIR KIT; ENG	000000	000000
5878117572	5-8781	1757	REPAIR KIT; O/H W/TURBO	000000	000000
5878117580	5-8781	1758	REPAIR KIT; ENGINE O/H	000000	000000
5878117581	5-8781	1758	REPAIR KIT; ENGINE O/H	000000	000000
5878117590	5-8781	1759	REPAIR KIT; ENGINE O/H	000000	000000
5878117591	5-8781	1759	REPAIR KIT; O/H W/TURBO	000000	000000
5878117740	5-8781	1774	REPAIR KIT; O/H	000000	000005
5878117744	5-8781	1774	REPAIR KIT; O/H	000000	000000
5878117780	5-8781	1778	REPAIR KIT; O/H; ENGINE	000000	000000
5878117781	5-8781	1778	REPAIR KIT; O/H; ENGINE	000000	000000
5878117900	5-8781	1790	REPAIR KIT; ENGINE OVERHA	000000	000000
5878118640			LINER SET; ENG CYL	000000	000000
5878118650			LINER SET; ENG CYL	000000	000000
5878118670			LINER SET; ENG CYL	000000	000000
5878118682			GASKET SET	000000	000000
5878118683			GASKET SET	000000	000000
5878118685			GASKET SET	000000	000000
5878120060	5-8781	2006	GASKET SET; ENG	000000	000000
5878120061	5-8781	2006	GASKET SET; ENG	000000	000013
5878120080	5-8781	2008	GEAR SET; OIL PUMP	000000	000000
5878120150	5-8781	2015	REPAIR KIT; ENGINE O/H	000000	000000
5878120160	5-8781	2016	REPAIR KIT; ENGINE O/H	000000	000000
5878120170	5-8781	2017	LINER KIT; CYLINDER	000000	000000
5878120171	5-8781	2017	LINER KIT; CYLINDER	000000	000000
5878120180	5-8781	2018	LINER KIT; CYLINDER W/T	000000	000000
5878120770			GASKET SET; ENGINE	000000	000001
5878120980			GASKET SET; ENG.	000000	000000
5878120981	5-8781	2098	GASKET SET; ENG.	000000	000011
5878122010	5-8781	2201	GASKET KIT; OVERHAUL	000000	000000

5878122011	5-8781	2201	GASKET KIT; OVERHAUL	000000	000000
5878122100	5-8781	2210	GASKET SET	000000	000000
5878122101	5-8781	2210	GASKET SET	000000	000000
5878122290			GASKET SET	000000	000000
5878122510			REPAIR KIT ENG. TOP O/H	000000	000000
5878122511	5-8781	2251	REPAIR KIT ENG. TOP O/H	000000	000000
5878122513	5-8781	2251	REPAIR KIT ENG. TOP O/H	000000	000000
5878122514	5-8781	2251	REPAIR KIT ENG. TOP O/H	000000	000000
5878122515	5-8781	2251	REPAIR KIT ENG. TOP O/H	000000	000000
5878122516	5-8781	2251	REPAIR KIT ENG. TOP O/H	000000	000004
5878122580	5-8781	2258	REPAIR KIT; ENGINE O/H	000000	000000
5878122582	5-8781	2258	REPAIR KIT; ENGINE O/H	000000	000000
5878122583	5-8781	2258	REPAIR KIT; ENGINE O/H	000000	000000
5878122588	5-8781	2258	REPAIR KIT; ENGINE O/H	000000	000000
5878122590	5-8781	2259	REPAIR KIT; ENGINE O/H	000000	000000
5878122591	5-8781	2259	REPAIR KIT; ENGINE O/H	000000	000000
5878122592	5-8781	2259	REPAIR KIT; O/H W/TURBO	000000	000000
5878122593	5-8781	2259	REPAIR KIT; O/H W/TURBO	000000	000000
5878122594	5-8781	2259	REPAIR KIT; O/H W/TURBO	000000	000000
5878122597	5-8781	2259	REPAIR KIT; O/H W/TURBO	000000	000000
5878122598	5-8781	2259	REPAIR KIT; O/H W/TURBO	000000	000000
5878122599	5-8781	2259	REPAIR KIT; O/H W/TURBO	000000	000002
5878122670			GASKET SET	000000	000000
5878122940	5-8781	2294	REPAIR KIT; ENGINE O/H	000000	000000
5878122950	5-8781	2295	REPAIR KIT; ENGINE O/H	000000	000000
5878122951	5-8781	2295	REPAIR KIT; ENGINE O/H	000000	000000
5878123480	5-8781	2348	GASKET SET; ENG.	000000	000000
5878123481	5-8781	2348	GASKET SET; ENG.	000000	000000
5878123482	5-8781	2348	GASKET SET; ENG.	000000	000000
5878123483			GASKET SET; ENG.	000000	000006
5878124842			GASKET SET; ENG	000000	000002
5878125140			GASKET SET	000000	000000
5878125310			GASKET SET	000000	000000
5878126100			GASKET SET; ENG OVE	000000	000000
5878126103			GASKET SET; ENG OVE	000000	000000
5878126104			GASKET SET; ENG OVE	000000	000000
5878126105			GASKET SET; ENG OVE	000000	000000
5878126106			GASKET SET; ENG OVE	000000	000000
5878126107			GASKET SET; ENG OVE	000000	000000
5878126108			GASKET SET; ENG OVE	000000	000000
5878126109			GASKET SET; ENG OVE	000000	000096
5878126241			GASKET SET	000000	000000
5878126310			REPAIR KIT; ENGINE O/H	000000	000000
5878126311	5-8781	2631	REPAIR KIT; ENGINE O/H	000000	000000
5878126312	5-8781	2631	REPAIR KIT; ENGINE O/H	000000	000000
5878126315	5-8781	2631	REPAIR KIT; ENGINE O/H	000000	000001
5878126360	5-8781	2636	REPAIR KIT; ENG	000000	000000

5878126361	5-8781	2636	REPAIR KIT; ENG	000000	000000
5878126364	5-8781	2636	REPAIR KIT; ENG	000000	000003
5878126372	5-8781	2637	REPAIR KIT; ENG. O/H	000000	000000
5878126373	5-8781	2637	REPAIR KIT; ENG. O/H	000000	000000
5878126374	5-8781	2637	REPAIR KIT; ENG. O/H	000000	000000
5878126375	5-8781	2637	REPAIR KIT; ENG. O/H	000000	000000
5878126376	5-8781	2637	REPAIR KIT; ENG. O/H	000000	000001
5878126380	5-8781	2638	GASKET SET;ENG O/H	000000	000000
5878126382	5-8781	2638	GASKET SET;ENG O/H	000000	000000
5878126420	5-8781	2642	REPAIR KIT; ENGINE O/H	000000	000000
5878126421	5-8781	2642	REPAIR KIT; ENGINE O/H	000000	000003
5878126440	5-8781	2644	REPAIR KIT; ENGINE O/H	000000	000000
5878126441	5-8781	2644	REPAIR KIT; ENGINE O/H	000000	000000
5878126442	5-8781	2644	REPAIR KIT; ENGINE O/H	000000	000000
5878126443	5-8781	2644	REPAIR KIT; ENGINE O/H	000000	000001
5878126650	5-8781	2665	LINER KIT; CYLINDER W/T	000000	000000
5878126700	5-8781	2670	REPAIR KIT; GASKET	000000	000000
5878126701	5-8781	2670	REPAIR KIT; GASKET	000001	000000
5878126702	5-8781	2670	REPAIR KIT; GASKET	000000	000000
5878126703	5-8781	2670	REPAIR KIT; GASKET	000000	000000
5878126710	5-8781	2671	REPAIR KIT GSKT	000000	000000
5878126712	5-8781	2671	REPAIR KIT GSKT	000000	000000
5878126713	5-8781	2671	REPAIR KIT GSKT	000000	000000
5878126714	5-8781	2671	REPAIR KIT GSKT	000000	000001
5878126740	5-8781	2674	REPAIR KIT; O/H	000000	000000
5878126744	5-8781	2674	REPAIR KIT; O/H	000001	000000
5878126930	5-8781	2693	REPAIR KIT; O/H WO/TURBO	000000	000000
5878126931	5-8781	2693	REPAIR KIT; O/H WO/TURBO	000000	000000
5878126933	5-8781	2693	REPAIR KIT; O/H WO/TURBO	000000	000000
5878126935	5-8781	2693	REPAIR KIT; O/H WO/TURBO	000000	000000
5878126937	5-8781	2693	REPAIR KIT; O/H WO/TURBO	000000	000003
5878126940	5-8781	2694	GASKET SET; ENG	000000	000000
5878126941	5-8781	2694	GASKET SET; ENG	000000	000000
5878126942	5-8781	2694	GASKET SET; ENG	000000	000000
5878126943	5-8781	2694	GASKET SET; ENG	000000	000000
5878126944	5-8781	2694	GASKET SET; ENG	000000	000000
5878126945	5-8781	2694	GASKET SET; ENG	000000	000000
5878126946	5-8781	2694	GASKET SET; ENG	000000	000000
5878126948	5-8781	2694	GASKET SET; ENG	000000	000002
5878126990	5-8781	2699	GASKET SET; ENG	000000	000000
5878126991	5-8781	2699	GASKET SET; ENG	000000	000000
5878126992	5-8781	2699	GASKET SET; ENG	000000	000002
5878127000	5-8781	2700	REPAIR KIT; ENGINE O/H	000000	000000
5878127001	5-8781	2700	REPAIR KIT; ENGINE O/H	000000	000000
5878127002	5-8781	2700	REPAIR KIT; ENGINE O/H	000000	000000
5878127003	5-8781	2700	REPAIR KIT; ENGINE O/H	000000	000000
5878127004	5-8781	2700	REPAIR KIT; ENGINE O/H	000000	000001

5878127010	5-8781	2701	REPAIR KIT; ENGINE O/H	000000	000000
5878127011	5-8781	2701	REPAIR KIT; ENGINE O/H	000000	000000
5878127012	5-8781	2701	REPAIR KIT; ENGINE O/H	000000	000000
5878127013	5-8781	2701	REPAIR KIT; ENGINE O/H	000000	000000
5878127014	5-8781	2701	REPAIR KIT; ENGINE O/H	000000	000008
5878127020	5-8781	2702	REPAIR KIT ENG. TOP O/H	000000	000000
5878127021	5-8781	2702	REPAIR KIT ENG. TOP O/H	000000	000000
5878127022	5-8781	2702	REPAIR KIT ENG. TOP O/H	000000	000000
5878127023	5-8781	2702	REPAIR KIT ENG. TOP O/H	000000	000012
5878127030	5-8781	2703	REPAIR KIT ENG. TOP O/H	000000	000000
5878127031	5-8781	2703	REPAIR KIT ENG. TOP O/H	000000	000000
5878127032	5-8781	2703	REPAIR KIT ENG. TOP O/H	000000	000000
5878127033	5-8781	2703	REPAIR KIT ENG. TOP O/H	000000	000004
5878127051	5-8781	2705	REPAIR KIT; ENGINE O/H	000000	000000
5878127060			GASKET SET	000000	000000
5878127120			REPAIR KIT; ENG.	000000	000000
5878127130	5-8781	2713	GASKET SET; ENG	000000	000000
5878127131	5-8781	2713	GASKET SET; ENG	000000	000034
5878127240	5-8781	2724	GASKET SET; ENG	000000	000000
5878127241	5-8781	2724	GASKET SET; ENG	000000	000030
5878127406	5-8781	2740	REPAIR KIT; O/H	000000	000000
5878127600			GASKET KIT	000000	000000
5878127667			GASKET SET;ENG OVERHAUL	000000	000001
5878127668	5-8781	2766	GASKET SET;ENG OVERHAUL	000000	000001
5878127710	5-8781	2771	REPAIR KIT; O/H	000000	000000
5878127711	5-8781	2771	REPAIR KIT; O/H	000000	000000
5878127712	5-8781	2771	REPAIR KIT; O/H	000000	000000
5878127713	5-8781	2771	REPAIR KIT; O/H	000000	000000
5878127750	5-8781	2775	REP.KIT ENG.OVERHAUL-4JA1	000000	000000
5878127751	5-8781	2775	REP.KIT ENG.OVERHAUL-4JA1	000000	000000
5878127760	5-8781	2776	REP.KIT ENG.OVERHAUL-4JC1	000000	000000
5878127770	5-8781	2777	REP.KIT ENG.OVERHAUL-4JC1	000000	000000
5878127771	5-8781	2777	REP.KIT ENG.OVERHAUL-4JC1	000000	000000
5878127775	5-8781	2777	REP.KIT ENG.OVERHAUL-4JC1	000001	000000
5878127810	5-8781	2781	GASKET SET; ENG.	000000	000000
5878127930	5-8781	2793	REPAIR KIT; ENG O/H	000000	000000
5878127931	5-8781	2793	REPAIR KIT; ENG O/H	000000	000000
5878127932	5-8781	2793	REPAIR KIT; ENG O/H	000000	000000
5878127933	5-8781	2793	REPAIR KIT; ENG O/H	000000	000004
5878127940	5-8781	2794	REPAIR KIT; ENG O/H	000000	000000
5878127941	5-8781	2794	REPAIR KIT; ENG O/H	000000	000000
5878127942	5-8781	2794	REPAIR KIT; ENG O/H	000000	000000
5878127943	5-8781	2794	REPAIR KIT; ENG O/H	000000	000002
5878127947	5-8781	2794	REPAIR KIT; ENG O/H	000000	000000
5878127950	5-8781	2795	REPAIR KIT; ENG.O/H(C240)	000000	000000
5878127951	5-8781	2795	REPAIR KIT; ENG.O/H(C240)	000000	000000
5878127952	5-8781	2795	REPAIR KIT; ENG.O/H(C240)	000000	000000

5878127965	5-8781	2796	REPAIR KIT; ENG O/H	000000	000001
5878127970	5-8781	2797	REPAIR KIT;ENG'N TOP O/H	000000	000001
5878127980	5-8781	2798	REPAIR KIT; ENG O/H	000000	000000
5878127981	5-8781	2798	REPAIR KIT; ENG O/H	000000	000000
5878127982	5-8781	2798	REPAIR KIT; ENG O/H	000000	000000
5878127983	5-8781	2798	REPAIR KIT; ENG O/H	000000	000002
5878128100	5-8781	2810	GASKET KIT	000000	000000
5878128101	5-8781	2810	GASKET KIT	000000	000000
5878128103	5-8781	2810	GASKET KIT	000000	000000
5878128104	5-8781	2810	GASKET KIT	000000	000000
5878128105	5-8781	2810	GASKET KIT	000000	000000
5878128106	5-8781	2810	GASKET KIT	000000	000000
5878128107	5-8781	2810	GASKET KIT	000000	000022
5878128510	5-8781	2851	REPAIR KIT; O/H WO/TURBO	000000	000000
5878128780	5-8781	2878	REPAIR KIT; ENG. TOP O/H	000001	000000
5878128790	5-8781	2879	LINER KIT; CYLINDER	000000	000000
5878128800	5-8781	2880	REPAIR KIT; ENGINE O/H	000000	000000
5878128802	5-8781	2880	REPAIR KIT; ENGINE O/H	000000	000000
5878128803	5-8781	2880	REPAIR KIT; ENGINE O/H	000000	000000
5878128804	5-8781	2880	REPAIR KIT; ENGINE O/H	000000	000000
5878128807	5-8781	2880	REPAIR KIT; ENGINE O/H	000000	000000
5878128809	5-8781	2880	REPAIR KIT; ENGINE O/H	000000	000000
5878128810	5-8781	2881	REPAIR KIT; ENGINE O/H	000000	000000
5878128820	5-8781	2882	REPAIR KIT; ENGINE O/H	000000	000000
5878128821	5-8781	2882	REPAIR KIT; ENGINE O/H	000000	000000
5878128830	5-8781	2883	REPAIR KIT; ENGINE O/H	000000	000000
5878128840	5-8781	2884	REPAIR KIT;ENGINE O/H	000000	000000
5878128842	5-8781	2884	REPAIR KIT;ENGINE O/H	000000	000000
5878128843	5-8781	2884	REPAIR KIT;ENGINE O/H	000000	000000
5878128844	5-8781	2884	REPAIR KIT;ENGINE O/H	000000	000000
5878128850	5-8781	2885	REPAIR KIT; ENGINE O/H	000000	000000
5878128860	5-8781	2886	REPAIR KIT; ENGINE O/H	000000	000000
5878128861	5-8781	2886	REPAIR KIT; ENGINE O/H	000000	000000
5878128870	5-8781	2887	REPAIR KIT; ENGINE O/H	000000	000000
5878128872	5-8781	2887	REPAIR KIT; ENGINE O/H	000000	000000
5878128874	5-8781	2887	REPAIR KIT; ENGINE O/H	000000	000000
5878128877	5-8781	2887	REPAIR KIT; ENGINE O/H	000000	000001
5878128880	5-8781	2888	REPAIR KIT; ENG'N TOP O/H	000000	000000
5878128881	5-8781	2888	REPAIR KIT; ENG'N TOP O/H	000000	000000
5878128882	5-8781	2888	REPAIR KIT; ENG'N TOP O/H	000000	000000
5878128890	5-8781	2889	REPAIR KIT; ENG'N TOP O/H	000000	000000
5878128900	5-8781	2890	REPAIR KIT; ENG'N TOP O/H	000000	000000
5878128910	5-8781	2891	REPAIR KIT; ENG'N TOP O/H	000000	000000
5878128911	5-8781	2891	REPAIR KIT; ENG'N TOP O/H	000000	000000
5878128913	5-8781	2891	REPAIR KIT; ENG'N TOP O/H	000000	000000
5878128914	5-8781	2891	REPAIR KIT; ENG'N TOP O/H	000000	000000
5878128929			GASKET SET; ENG	000000	000001

5878128939			GASKET SET; ENG	000000	000000
5878129400			REPAIR KIT; O/H WO/TURBO	000000	000000
5878130080	5-8781	3008	REPAIR KIT; O/H WO/TURBO	000000	000000
5878130081	5-8781	3008	REPAIR KIT; O/H WO/TURBO	000000	000000
5878130085	5-8781	3008	REPAIR KIT; O/H WO/TURBO	000000	000000
5878130086	5-8781	3008	REPAIR KIT; O/H WO/TURBO	000000	000000
5878130087	5-8781	3008	REPAIR KIT; O/H WO/TURBO	000000	000001
5878130090	5-8781	3009	REPAIR KIT; O/H WO/TURBO	000000	000000
5878130091	5-8781	3009	REPAIR KIT; O/H WO/TURBO	000000	000000
5878130092	5-8781	3009	REPAIR KIT OH WO/TURBO	000000	000000
5878130093	5-8781	3009	REPAIR KIT OH WO/TURBO	000000	000000
5878130095	5-8781	3009	REPAIR KIT OH WO/TURBO	000000	000000
5878130097	5-8781	3009	REPAIR KIT OH WO/TURBO	000000	000001
5878130100	5-8781	3010	REPAIR KIT; O/H WO/TURBO	000000	000000
5878130110	5-8781	3011	REPAIR KIT; O/H WO/TURBO	000000	000000
5878130120	5-8781	3012	REPAIR KIT; O/H WO/TURBO	000000	000003
5878130122	5-8781	3012	REPAIR KIT; O/H WO/TURBO	000000	000000
5878130124	5-8781	3012	REPAIR KIT; O/H WO/TURBO	000000	000000
5878130130	5-8781	3013	REPAIR KIT; O/H WO/TURBO	000000	000000
5878130140	5-8781	3014	REPAIR KIT; O/H WO/TURBO	000000	000000
5878130160	5-8781	3016	REPAIR KIT; O/H W/TURBO	000000	000000
5878130166	5-8781	3016	REPAIR KIT; O/H W/TURBO	000000	000001
5878130170	5-8781	3017	REPAIR KIT; O/H W/TURBO	000002	000000
5878130171	5-8781	3017	REPAIR KIT; O/H W/TURBO	000000	000000
5878130173	5-8781	3017	REPAIR KIT; O/H W/TURBO	000000	000000
5878130180	5-8781	3018	REPAIR KIT; ENG.O/H,C240	000000	000000
5878130181	5-8781	3018	REPAIR KIT; ENG.O/H,C240	000000	000000
5878130190	5-8781	3019	REPAIR KIT; ENG. TOP O/H	000000	000000
5878130191	5-8781	3019	REPAIR KIT; ENG. TOP O/H	000000	000001
5878130680	5-8781	3068	REPAIR KIT; ENGINE O/H	000000	000000
5878130681	5-8781	3068	REPAIR KIT; ENGINE O/H	000000	000000
5878130684	5-8781	3068	REPAIR KIT; ENGINE O/H	000000	000007
5878130690	5-8781	3069	REPAIR KIT; ENGINE O/H	000000	000000
5878130700	5-8781	3070	REPAIR KIT; ENGINE O/H	000000	000000
5878130710	5-8781	3071	REPAIR KIT; ENGINE O/H	000000	000000
5878130720	5-8781	3072	REPAIR KIT;ENGINE TOP O/H	000000	000000
5878130730	5-8781	3073	REPAIR KIT;ENGINE TOP O/H	000000	000000
5878130740	5-8781	3074	REPAIR KIT;ENGINE TOP O/H	000000	000000
5878130750	5-8781	3075	REPAIR KIT;ENGINE TOP O/H	000000	000000
5878130760	5-8781	3076	REPAIR KIT;ENGINE TOP O/H	000000	000000
5878130761	5-8781	3076	REPAIR KIT;ENGINE TOP O/H	000000	000000
5878130770	5-8781	3077	REPAIR KIT;ENGINE TOP O/H	000000	000000
5878130773	5-8781	3077	REPAIR KIT;ENGINE TOP O/H	000000	000001
5878130970	5-8781	3097	REPAIR KIT; O/H	000000	000000
5878130971	5-8781	3097	REPAIR KIT; O/H	000000	000000
5878130973	5-8781	3097	REPAIR KIT; O/H	000000	000006
5878131000	5-8781	3100	LINER KIT	000000	000000

5878131010	5-8781	3101	LINER KIT	000000	000000
5878131020	5-8781	3102	LINER KIT	000000	000000
5878131030	5-8781	3103	LINER KIT	000000	000000
5878131040	5-8781	3104	LINER KIT	000000	000000
5878131050	5-8781	3105	LINER KIT	000000	000000
5878131060	5-8781	3106	LINER KIT	000000	000000
5878131070	5-8781	3107	LINER KIT	000000	000000
5878131080	5-8781	3108	LINER KIT	000000	000003
5878131090	5-8781	3109	LINER KIT	000000	000000
5878131100	5-8781	3110	LINER KIT	000000	000002
5878131110	5-8781	3111	LINER KIT	000001	000000
5878131150	5-8781	3115	LINER KIT	000000	000000
5878131160	5-8781	3116	LINER KIT	000000	000000
5878131170	5-8781	3117	LINER KIT	000000	000000
5878131180	5-8781	3118	LINER KIT	000000	000000
5878131190	5-8781	3119	LINER KIT	000000	000000
5878131200	5-8781	3120	LINER KIT	000000	000000
5878131210	5-8781	3121	LINER KIT	000000	000000
5878131220	5-8781	3122	LINER KIT	000000	000000
5878131230	5-8781	3123	LINER KIT	000002	000001
5878131240	5-8781	3124	LINER KIT	000000	000000
5878131250	5-8781	3125	LINER KIT	000000	000000
5878131260	5-8781	3126	LINER KIT	000000	000000
5878131270	5-8781	3127	LINER KIT	000000	000000
5878131280	5-8781	3128	LINER KIT	000003	000000
5878131290	5-8781	3129	LINER KIT	000000	000000
5878131300	5-8781	3130	LINER KIT	000000	000000
5878131310	5-8781	3131	LINER KIT	000000	000000
5878131320	5-8781	3132	LINER KIT	000000	000002
5878131330	5-8781	3133	LINER KIT	000000	000001
5878131340	5-8781	3134	LINER KIT	000000	000003
5878131350	5-8781	3135	LINER KIT	000000	000002
5878131360	5-8781	3136	LINER KIT	000000	000003
5878131370	5-8781	3137	LINER KIT	000001	000000
5878131380	5-8781	3138	LINER KIT	000003	000000
5878131390	5-8781	3139	LINER KIT	000000	000000
5878131400	5-8781	3140	LINER KIT	000000	000002
5878131410	5-8781	3141	LINER KIT	000000	000004
5878131420	5-8781	3142	LINER KIT	000000	000003
5878131430	5-8781	3143	LINER KIT	000000	000000
5878131440	5-8781	3144	LINER KIT	000002	000000
5878131450	5-8781	3145	LINER KIT	000000	000008
5878131460	5-8781	3146	LINER KIT	000000	000009
5878131470	5-8781	3147	LINER KIT	000000	000001
5878131480	5-8781	3148	LINER KIT	000000	000000
5878131490	5-8781	3149	LINER KIT	000000	000000
5878131500	5-8781	3150	LINER KIT	000000	000000

5878131510	5-8781	3151	LINER KIT	000000	000000
5878131520	5-8781	3152	LINER KIT	000035	000023
5878131530	5-8781	3153	LINER KIT	000022	000015
5878131540	5-8781	3154	LINER SET; ENG.	000021	000037
5878131550	5-8781	3155	LINER KIT	000000	000087
5878131580	5-8781	3158	LINER KIT	000000	000000
5878131590	5-8781	3159	LINER KIT	000000	000000
5878131600	5-8781	3160	LINER KIT	000002	000000
5878131610	5-8781	3161	LINER KIT	000000	000000
5878131620	5-8781	3162	LINER KIT	000000	000000
5878131630	5-8781	3163	LINER KIT	000002	000000
5878131690	5-8781	3169	LINER KIT	000000	000000
5878131692	5-8781	3169	LINER KIT	000000	000000
5878131700	5-8781	3170	INER KIT	000000	000000
5878131701	5-8781	3170	LINER KIT	000000	000000
5878131710	5-8781	3171	LINER KIT	000000	000000
5878131720	5-8781	3172	LINER KIT	000000	000000
5878131770	5-8781	3177	LINER KIT	000000	000000
5878131771	5-8781	3177	LINER KIT	000000	000000
5878131780	5-8781	3178	LINER KIT	000000	000000
5878131781	5-8781	3178	LINER KIT	000000	000000
5878131790	5-8781	3179	LINER KIT	000000	000000
5878131791	5-8781	3179	LINER KIT	000000	000000
5878131800	5-8781	3180	LINER KIT	000000	000000
5878131801	5-8781	3180	LINER KIT	000000	000000
5878131850	5-8781	3185	LINER KIT	000000	000000
5878131870	5-8781	3187	LINER KIT	000000	000000
5878131940	5-8781	3194	LINER KIT	000000	000000
5878132000	5-8781	3200	LINER KIT	000000	000000
5878132010	5-8781	3201	LINER KIT	000000	000000
5878132050	5-8781	3205	LINER KIT	000000	000000
5878132060	5-8781	3206	LINER KIT	000000	000000
5878132070	5-8781	3207	LINER KIT	000000	000000
5878132080	5-8781	3208	LINER KIT	000000	000000
5878132090	5-8781	3209	LINER KIT	000000	000000
5878132100	5-8781	3210	LINER KIT	000000	000000
5878132110	5-8781	3211	LINER KIT	000000	000000
5878132140	5-8781	3214	LINER KIT	000000	000000
5878132150	5-8781	3215	LINER KIT	000000	000000
5878132200	5-8781	3220	LINER KIT	000000	000000
5878132260	5-8781	3226	REPAIR KIT; ENG. O/H	000000	000000
5878132261	5-8781	3226	REPAIR KIT; ENG. O/H	000000	000000
5878132291	5-8781	3229	REPAIR KIT; ENG. O/H	000000	000000
5878132360	5-8781	3236	LINER KIT	000000	000000
5878132370	5-8781	3237	LINER KIT	000000	000002
5878132380	5-8781	3238	LINER KIT	000002	000000
5878132390	5-8781	3239	LINER KIT	000000	000004

5878132420	5-8781	3242	LINER KIT	000000	000000
5878132470	5-8781	3247	LINER KIT	000000	000000
5878132480	5-8781	3248	LINER KIT	000000	000000
5878132490	5-8781	3249	LINER KIT	000000	000000
5878132500	5-8781	3250	LINER KIT	000000	000000
5878132510	5-8781	3251	LINER KIT	000000	000000
5878132520	5-8781	3252	LINER KIT	000000	000000
5878132530	5-8781	3253	LINER KIT	000000	000000
5878132540	5-8781	3254	LINER KIT	000000	000000
5878132550	5-8781	3255	LINER KIT	000000	000000
5878132560	5-8781	3256	LINER KIT	000000	000000
5878132570	5-8781	3257	LINER KIT	000000	000000
5878132580	5-8781	3258	LINER KIT	000000	000000
5878132590	5-8781	3259	LINER KIT	000000	000005
5878132600	5-8781	3260	LINER KIT	000000	000000
5878132640	5-8781	3264	LINER KIT	000000	000000
5878132650	5-8781	3265	LINER KIT	000000	000012
5878132660	5-8781	3266	LINER KIT	000000	000000
5878132670	5-8781	3267	LINER KIT	000000	000000
5878132680	5-8781	3268	LINER KIT	000000	000000
5878132690	5-8781	3269	LINER KIT	000000	000000
5878132700	5-8781	3270	LINER KIT	000000	000000
5878132710	5-8781	3271	LINER KIT	000000	000000
5878132720	5-8781	3272	LINER KIT	000000	000000
5878132730	5-8781	3273	LINER KIT	000000	000000
5878132740	5-8781	3274	LINER KIT	000000	000000
5878132750	5-8781	3275	LINER KIT	000000	000000
5878132760	5-8781	3276	LINER KIT	000000	000000
5878132770	5-8781	3277	LINER KIT	000000	000000
5878132780	5-8781	3278	LINER KIT	000000	000000
5878132790	5-8781	3279	LINER KIT	000000	000000
5878132800	5-8781	3280	LINER KIT	000001	000000
5878132810	5-8781	3281	LINER KIT	000000	000000
5878132820	5-8781	3282	LINER KIT	000000	000000
5878132830	5-8781	3283	LINER KIT	000000	000000
5878132840	5-8781	3284	LINER KIT	000000	000000
5878132850	5-8781	3285	LINER KIT	000000	000000
5878132860	5-8781	3286	LINER KIT	000000	000000
5878132870	5-8781	3287	LINER KIT	000002	000001
5878132880	5-8781	3288	LINER KIT	000000	000000
5878132890	5-8781	3289	LINER KIT	000000	000000
5878132900	5-8781	3290	LINER KIT	000000	000000
5878132910	5-8781	3291	LINER KIT	000000	000000
5878132960	5-8781	3296	LINER KIT	000000	000000
5878132970	5-8781	3297	LINER KIT	000000	000000
5878132980	5-8781	3298	LINER KIT	000007	000000
5878132990	5-8781	3299	LINER KIT	000000	000000

5878133000	5-8781	3300	LINER KIT	000000	000000
5878133010	5-8781	3301	LINER KIT	000000	000000
5878133020	5-8781	3302	LINER KIT	000000	000000
5878133030	5-8781	3303	LINER KIT	000000	000000
5878133040	5-8781	3304	LINER KIT	000000	000000
5878133050	5-8781	3305	LINER KIT	000000	000000
5878133060	5-8781	3306	LINER KIT	000000	000000
5878133061	5-8781	3306	LINER KIT	000000	000000
5878133070	5-8781	3307	LINER KIT	000000	000000
5878133100	5-8781	3310	LINER KIT	000000	000000
5878133120	5-8781	3312	LINER KIT	000000	000000
5878133121	5-8781	3312	LINER KIT	000000	000000
5878133130	5-8781	3313	LINER KIT	000000	000000
5878133131	5-8781	3313	LINER KIT	000000	000000
5878133140	5-8781	3314	LINER KIT	000000	000000
5878133141	5-8781	3314	LINER KIT	000000	000000
5878133150	5-8781	3315	LINER KIT	000000	000000
5878133151	5-8781	3315	LINER KIT	000000	000000
5878133160	5-8781	3316	LINER KIT	000000	000000
5878133161	5-8781	3316	LINER KIT	000010	000000
5878133200	5-8781	3320	LINER KIT	000000	000000
5878133240	5-8781	3324	LINER KIT	000000	000000
5878133250	5-8781	3325	LINER KIT	000000	000000
5878133260	5-8781	3326	LINER KIT	000000	000000
5878133270	5-8781	3327	LINER KIT	000000	000000
5878133340	5-8781	3334	LINER KIT	000000	000000
5878133400	5-8781	3340	LINER KIT	000000	000000
5878133420	5-8781	3342	LINER KIT	000000	000000
5878133430	5-8781	3343	LINER KIT	000000	000000
5878133440	5-8781	3344	LINER KIT	000000	000000
5878133450	5-8781	3345	LINER KIT	000000	000000
5878133911			ENGINE LINER SET	000000	000003
5878134570	5-8781	3457	LINER SET; ENG. CYL.,	000000	000000
5878134590	5-8781	3459	LINER SET; ENG. CYL.	000000	000000
5878134700	5-8781	3470	GASKET SET; ENGINE	000000	000000
5878134710	5-8781	3471	GASKET SET; ENGINE	000000	000000
5878134720	5-8781	3472	GASKET SET; ENGINE	000000	000000
5878134730	5-8781	3473	LINER SET;ENG CYL	000000	000000
5878134740	5-8781	3474	LINER SET (GRADE 1)	000001	000000
5878134750	5-8781	3475	LINER SET (GRADE 2)	000000	000000
5878134760	5-8781	3476	LINER SET (GRADE 3)	000000	000000
5878134770	5-8781	3477	LINER SET (GRADE 4)	000000	000000
5878134850	5-8781	3485	REPAIR KIT; ENGINE O/H	000000	000000
5878134851	5-8781	3485	REPAIR KIT; ENGINE O/H	000000	000000
5878134861	5-8781	3486	REPAIR KIT; ENGINE O/H	000000	000000
5878134862	5-8781	3486	REPAIR KIT; ENGINE O/H	000000	000000
5878134863	5-8781	3486	REPAIR KIT; ENGINE O/H	000000	000000

5878134864	5-8781	3486	REPAIR KIT; ENGINE O/H	000000	000001
5878134930	5-8781	3493	LINER SET; GRADEL	000000	000000
5878134940	5-8781	3494	LINER SET; GRADE2	000000	000014
5878134950	5-8781	3495	LINER SET; GRADE3	000002	000000
5878134960	5-8781	3496	LINER SET; GRADE 4	000000	000000
5878135110	5-8781	3511	REPAIR KIT;O/H	000000	000000
5878135113	5-8781	3511	REPAIR KIT;O/H	000000	000000
5878135114	5-8781	3511	REPAIR KIT;O/H	000000	000000
5878135116	5-8781	3511	REPAIR KIT;O/H	000000	000007
5878135130	5-8781	3513	REPAIR KIT;O/H	000000	000000
5878135131	5-8781	3513	REPAIR KIT;O/H	000000	000000
5878135132	5-8781	3513	REPAIR KIT;O/H	000000	000000
5878135133	5-8781	3513	REPAIR KIT;O/H	000000	000000
5878135134	5-8781	3513	REPAIR KIT;O/H	000000	000000
5878135135	5-8781	3513	REPAIR KIT;O/H	000000	000000
5878135136	5-8781	3513	REPAIR KIT;O/H	000000	000004
5878135170	5-8781	3517	GASKET SET;ENG O/H	000000	000000
5878135171	5-8781	3517	GASKET SET;ENG O/H	000000	000000
5878135172	5-8781	3517	GASKET SET;ENG O/H	000000	000000
5878135173	5-8781	3517	GASKET SET;ENG O/H	000000	000002
5878135220	5-8781	3522	LINER SET;ENG CYL GRADE1	000000	000000
5878135221	5-8781	3522	LINER SET;ENG CYL GRADE1	000000	000000
5878135230	5-8781	3523	LINER SET;ENG CYL GRADE2	000000	000000
5878135240	5-8781	3524	LINER SET;ENG CYL GRADE3	000000	000000
5878135250	5-8781	3525	LINER SET;ENG CYL GRADE4	000001	000000
5878135260	5-8781	3526	LINER KIT	000000	000008
5878135270	5-8781	3527	LINER KIT	000003	000022
5878135280	5-8781	3528	LINER KIT	000004	000003
5878135290	5-8781	3529	LINER KIT	000008	000004
5878135320	5-8781	3532	LINER SET;ENG	000000	000002
5878135560	5-8781	3556	GASKET SET;ENG OVERHAUL	000000	000000
5878135561	5-8781	3556	GASKET SET;ENG OVERHAUL	000000	000000
5878135562	5-8781	3556	GASKET SET;ENG OVERHAUL	000000	000000
5878135564	5-8781	3556	GASKET SET;ENG OVERHAUL	000000	000000
5878135565	5-8781	3556	GASKET SET;ENG OVERHAUL	000000	000002
5878135580	5-8781	3558	GASKET SET;ENG OVERHAUL	000000	000000
5878135581	5-8781	3558	GASKET SET;ENG OVERHAUL	000000	000000
5878135583	5-8781	3558	GASKET SET;ENG OVERHAUL	000000	000000
5878135590	5-8781	3559	GASKET SET;ENG OVERHAUL	000000	000000
5878135600	5-8781	3560	GASKET SET;ENG OVERHAUL	000000	000000
5878135602	5-8781	3560	GASKET SET;ENG OVERHAUL	000000	000000
5878135610	5-8781	3561	GASKET SET;ENG OVERHAUL	000000	000000
5878135612	5-8781	3561	GASKET SET;ENG OVERHAUL	000000	000000
5878135721			LINER SET; ENG	000000	000000
5878136190	5-8781	3619	GASKET SET; ENG O/H	000000	000000
5878136192	5-8781	3619	GASKET SET; ENG O/H	000000	000000
5878136196	5-8781	3619	GASKET SET; ENG O/H	000000	000000

5878136590	5-8781	3659	LINER SET; ENG CYLINDER	000000	000000
5878136591	5-8781	3659	LINER SET; ENG CYLINDER	000000	000000
5878136600	5-8781	3660	LINER SET; ENG CYLINDER	000000	000000
5878136601	5-8781	3660	LINER SET; ENG CYLINDER	000000	000000
5878136610	5-8781	3661	LINER SET; ENG CYLINDER	000000	000000
5878136611	5-8781	3661	LINER SET; ENG CYLINDER	000000	000000
5878136620	5-8781	3662	LINER SET; ENG CYLINDER	000000	000000
5878136621	5-8781	3662	LINER SET; ENG CYLINDER	000000	000000
5878136700	5-8781	3670	GASKET SET; ENG OVERHAUL	000000	000000
5878136702	5-8781	3670	GASKET SET; ENG OVERHAUL	000000	000000
5878136703	5-8781	3670	GASKET SET; ENG OVERHAUL	000000	000000
5878136704	5-8781	3670	GASKET SET; ENG OVERHAUL	000000	000000
5878136705	5-8781	3670	GASKET SET; ENG OVERHAUL	000000	000000
5878136706	5-8781	3670	GASKET SET; ENG OVERHAUL	000000	000000
5878136710	5-8781	3671	GASKET SET;ENG OVERHAUL	000000	000000
5878136712	5-8781	3671	GASKET SET;ENG OVERHAUL	000000	000000
5878136713	5-8781	3671	GASKET SET;ENG OVERHAUL	000000	000000
5878136714	5-8781	3671	GASKET SET;ENG OVERHAUL	000000	000000
5878136715	5-8781	3671	GASKET SET;ENG OVERHAUL	000000	000000
5878136720			GEAR SET	000000	000171
5878136953	5-8781	3695	REPAIR KIT; OH WO/TURBO	000001	000000
5878136970	5-8781	3697	GASKET SET; ENGINGE	000000	000000
5878136980	5-8781	3698	GASKET SET; ENGINE	000000	000000
5878136990	5-8781	3699	GASKET SET; ENGINE	000000	000000
5878137150	5-8781	3715	REPAIR KIT;ENGINE O/H	000000	000000
5878137152	5-8781	3715	REPAIR KIT:ENGINE O/H	000000	000000
5878137155	5-8781	3715	REPAIR KIT:ENGINE O/H	000000	000000
5878137250	5-8781	3725	GASKET SET;ENG	000000	000000
5878137251			GASKET SET;ENG	000000	000000
5878137252			GASKET SET;ENG	000000	000000
5878137253			GASKET SET;ENG	000000	000000
5878137254			GASKET SET;ENG	000000	000001
5878137320			GASKET SET; ENG OVERHAUL	000000	000000
5878137321	5-8781	3732	GASKET SET; ENG OVERHAUL	000000	000000
5878137322	5-8781	3732	GASKET SET; ENG OVERHAUL	000000	000005
5878137330	5-8781	3733	GASKET SET;ENG OVERHAUL	000000	000000
5878137331	5-8781	3733	GASKET SET;ENG OVERHAUL	000000	000005
5878137580	5-8781	3758	GASKET SET;ENG OVER	000000	000000
5878137581	5-8781	3758	GASKET SET;ENG OVER	000000	000005
5878137582	5-8781	3758	GASKET SET;ENG OVER	000000	000000
5878137590	5-8781	3759	GASKET SET; ENG HD OVERHA	000000	000000
5878137592	5-8781	3759	GASKET SET; ENG HD OVERHA	000000	000000
5878137640	5-8781	3764	GASKET SET;ENG HD OVERHAU	000000	000000
5878137643	5-8781	3764	REPAIR KIT; ENGINE O/H	000000	000001
5878137652	5-8781	3765	REPAIR KIT; ENG N TOP O/H	000000	000000
5878137653	5-8781	3765	REPAIR KIT; ENG N TOP O/H	000002	000000
5878138350	5-8781	3835	GASKET SET;ENG; OVERHAUL	000000	000000

5878138351	5-8781	3835	GASKET SET;ENG; OVERHAUL	000000	000000
5878138352	5-8781	3835	GASKET SET;ENG; OVERHAUL	000000	000000
5878138353	5-8781	3835	GASKET SET;ENG; OVERHAUL	000000	000000
5878138354	5-8781	3835	GASKET SET;ENG; OVERHAUL	000000	000000
5878138355	5-8781	3835	GASKET SET;ENG; OVERHAUL	000000	000000
5878138360	5-8781	3836	GASKET SET; ENG HD OVERHA	000000	000000
5878138361	5-8781	3836	GASKET SET; ENG HD OVERHA	000000	000000
5878138362	5-8781	3836	GASKET SET; ENG HD OVERHA	000000	000000
5878138363	5-8781	3836	GASKET SET; ENG HD OVERHA	000000	000000
5878138370	5-8781	3837	LINER SET;ENG CYL	000000	000000
5878138371	5-8781	3837	LINER SET;ENG CYL	000000	000000
5878138380	5-8781	3838	LINER SET; ENG CYL	000000	000000
5878138381	5-8781	3838	LINER SET; ENG CYL	000000	000000
5878138390	5-8781	3839	LINER SET;ENG CYL	000000	000000
5878138391	5-8781	3839	LINER SET;ENG CYL	000000	000000
5878138400	5-8781	3840	LINER SET; ENG CYL	000000	000000
5878138410	5-8781	3841	GASKET SET;ENG OVERHAUL	000000	000000
5878138412	5-8781	3841	GASKET SET;ENG OVERHAUL	000000	000000
5878138413	5-8781	3841	GASKET SET;ENG OVERHAUL	000000	000000
5878138414	5-8781	3841	GASKET SET;ENG OVERHAUL	000000	000007
5878138420	5-8781	3842	GASKET SET;ENG HD OVERHAU	000000	000000
5878138421	5-8781	3842	GASKET SET;ENG HD OVERHAU	000000	000000
5878138422	5-8781	3842	GASKET SET; ENG HD OVR	000000	000000
5878138423	5-8781	3842	GASKET;ENG HD OVERHAUL	000000	000013
5878138430	5-8781	3843	GASKET SET;ENG OVERHAUL	000000	000000
5878138432	5-8781	3843	GASKET SET;ENG OVERHAUL	000000	000000
5878138433	5-8781	3843	GASKET SET;ENG OVERHAUL	000000	000003
5878138460	5-8781	3846	GASKET SET;ENG HD OVERHAU	000000	000000
5878138461	5-8781	3846	GASKET SET;ENG HD OVERHAU	000000	000001
5878138470			GASKET; ENG HD OVERHAUL	000000	000000
5878138500	5-8781	3850	LINER SET;ENG CYL	000000	000000
5878138510	5-8781	3851	LINER SET;ENG CYL	000000	000000
5878138520	5-8781	3852	LINER SET;ENG CYL	000000	000000
5878138530	5-8781	3853	LINER SET;ENG CYL	000000	000000
5878138730			REPAIR KIT;O/H W/TURBO	000000	000000
5878139901	5-8781	3990	GASKET SET; ENG OVERHAUL	000000	000002
5878139920	5-8781	3992	GASKET SET;ENG OVERHAUL	000000	000019
5878139924	5-8781	3992	GASKET SET;ENG OVERHAUL	000000	000000
5878139930	5-8781	3993	GASKET SET;ENG OVERHAUL	000000	000020
5878139960	5-8781	3996	GSKT SET;ENG HD OVERHAUL	000000	000020
5878139970	5-8781	3997	GASKET SET;ENG HD OVHL	000000	000020
5878140010	5-8781	4001	GASKET SET;ENG OVERHAUL	000000	000000
5878140012	5-8781	4001	GASKET SET;ENG OVERHAUL	000000	000000
5878140014	5-8781	4001	GASKET SET;ENG OVERHAUL	000000	000003
5878140020	5-8781	4002	GASKET SET;ENG OVERHAUL	000000	000000
5878140021	5-8781	4002	GASKET SET;ENG OVERHAUL	000000	000000
5878140023	5-8781	4002	GASKET SET;ENG OVERHAUL	000000	000000

5878140024	5-8781	4002	GASKET SET;ENG OVERHAUL	000000	000000
5878140025	5-8781	4002	GASKET SET;ENG OVERHAUL	000000	000004
5878140030	5-8781	4003	GASKET SET;ENG HD OVRHAUL	000000	000000
5878140031	5-8781	4003	GASKET SET;ENG HD OVRHAUL	000000	000000
5878140032	5-8781	4003	GASKET SET;ENG HD OVRHAUL	000000	000000
5878140040	5-8781	4004	GASKET SET;ENG HD OVERHAL	000000	000000
5878140041	5-8781	4004	GASKET SET;ENG HD OVERHAL	000000	000000
5878140200	5-8781	4020	GASKET SET;ENG HD OVER HA	000000	000000
5878140202	5-8781	4020	GASKET SET;ENG HD OVER HA	000000	000000
5878140203	5-8781	4020	GASKET SET;ENG HD OVER HA	000000	000005
5878140212	5-8781	4021	GASKET SET; ENG HD OVER H	000000	000002
5878140220	5-8781	4022	GASKET SET; ENG HD OVERHA	000000	000000
5878140221	5-8781	4022	GASKET SET; ENG HD OVERHA	000000	000000
5878140222	5-8781	4022	GASKET SET; ENG HD OVERHA	000000	000000
5878140223	5-8781	4022	GASKET SET; ENG HD OVERHA	000000	000001
5878140230	5-8781	4023	GASKET SET;ENG HD OVER HA	000000	000000
5878140231	5-8781	4023	GASKET SET;ENG HD OVER HA	000000	000000
5878140232	5-8781	4023	GASKET SET;ENG HD OVER HA	000000	000001
5878140670	5-8781	4067	LINER SET; ENG CYL	000000	000000
5878140680	5-8781	4068	LINER SET; ENG CYL	000000	000000
5878140690	5-8781	4069	LINER SET; ENG CYL	000000	000008
5878140710	5-8781	4071	GASKET SET;ENG OVERHAUL	000000	000000
5878140711	5-8781	4071	GASKET SET;ENG OVERHAUL	000000	000008
5878141000	5-8781	4100	LINER SET; ENG CYL	000000	000000
5878141010	5-8781	4101	LINER SET; ENG CYL	000000	000000
5878141020	5-8781	4102	LINER SET; ENG CYL	000000	000000
5878141030	5-8781	4103	LINER SET; ENG CYL	000000	000000
5878141204	5-8781	4120	GASKET SET; ENG OVERHAUL	000000	000000
5878141602	5-8781	4160	GASKET SET; ENG OVERHAUL	000000	000000
5878141603	5-8781	4160	GASKET SET; ENG OVERHAUL	000000	000003
5878141652			GASKET SET; ENG	000000	000001
5878141710			GASKET SET; ENG OVERHAUL	000000	000000
5878141760	5-8781	4176	GASKET SET;ENG HD OVERHAU	000000	000000
5878142040	5-8781	4204	GASKET SET;ENG OVERHAUL	000000	000000
5878142041	5-8781	4204	GASKET SET;ENG OVERHAUL	000000	000000
5878142050	5-8781	4205	GASKET SET;ENG OVERHAUL	000000	000000
5878142060	5-8781	4206	GASKET; SET ENG OVERHAUL	000000	000000
5878142061	5-8781	4206	GASKET; SET ENG OVERHAUL	000000	000020
5878142070	5-8781	4207	GASKET SET;ENG OVERHAUL	000001	000000
5878142503	5-8781	4250	GASKET SET;ENG OVERHAUL	000000	000000
5878142640	5-8781	4264	GASKET SET;ENG HD OVERHAU	000000	000000
5878142642	5-8781	4264	GASKET SET;ENG HD OVERHAU	000000	000002
5878142670	5-8781	4267	GASKET SET;ENG HD OVERHAU	000000	000000
5878142700	5-8781	4270	GASKET SET; ENG OVERHAUL	000000	000000
5878142701	5-8781	4270	GASKET SET; ENG OVERHAUL	000000	000000
5878142702	5-8781	4270	GASKET SET; ENG OVERHAUL	000000	000000
5878142723	5-8781	4272	GASKET SET; ENG OVERHAUL	000000	000000

5878142811	5-8781	4281	GASKET SET; ENG.OVERHAUL	000000	000000
5878142812	5-8781	4281	GASKET SET; ENG.OVERHAUL	000000	000000
5878142813	5-8781	4281	GASKET SET; ENG.OVERHAUL	000000	000000
5878142822	5-8781	4282	GASKET SET; ENG.OVERHAUL	000000	000000
5878142823	5-8781	4282	GASKET SET; ENG.OVERHAUL	000000	000002
5878143060	5-8781	4306	GASKET SET;ENG OVERHAUL	000002	000000
5878143100	5-8781	4310	GASKET SET;ENG OVERHAUL	000000	000000
5878143101	5-8781	4310	GASKET SET;ENG OVERHAUL	000000	000000
5878143102	5-8781	4310	GASKET SET;ENG OVERHAUL	000000	000017
5878143110	5-8781	4311	GASKET SET;ENG OVERHAUL	000000	000000
5878143120	5-8781	4312	GASKET SET;ENG OVERHAUL	000000	000000
5878143121	5-8781	4312	GASKET SET;ENG OVERHAUL	000000	000000
5878143130	5-8781	4313	GASKET SET;ENG OVERHAUL	000000	000000
5878143131	5-8781	4313	GASKET SET;ENG OVERHAUL	000000	000021
5878143200	5-8781	4320	REPAIR KIT; WATER PUMP	000000	000000
5878143201	5-8781	4320	REPAIR KIT; WATER PUMP	000000	000004
5878143310	5-8781	4331	GASKET SET; ENG	000000	000000
5878143444			GASKET SET; ENG	000000	000000
5878143445			GASKET SET; ENG	000000	000000
5878143455			ENGINE GASKET SET	000000	000000
5878143456			ENGINE GASKET SET	000000	000001
5878143465			GASKET SET; ENG	000000	000000
5878143466			GASKET SET; ENG	000000	000000
5878143563	5-8781	4356	GASKET SET;ENG OVERHAUL	000000	000001
5878143580	5-8781	4358	GASKET SET;ENG OVERHAUL	000000	000000
5878143581	5-8781	4358	GASKET SET;ENG OVERHAUL	000000	000002
5878143630	5-8781	4363	GASKET SET;ENG OVERHAUL	000000	000000
5878143631	5-8781	4363	GASKET SET;ENG OVERHAUL	000000	000001
5878143640	5-8781	4364	GASKET SET;ENG OVERHAUL	000000	000000
5878143641	5-8781	4364	GASKET SET;ENG OVERHAUL	000000	000000
5878143650	5-8781	4365	GASKET SET;ENG OVERHAUL	000000	000000
5878143651	5-8781	4365	GASKET SET;ENG OVERHAUL	000000	000002
5878143671	5-8781	4367	REPAIR KIT; ENGINE O/H	000000	000000
5878143681	5-8781	4368	REPAIR KIT; ENGINE O/H	000000	000000
5878143810	5-8781	4381	REPAIR KIT;ENGINE O/H	000000	000000
5878143811	5-8781	4381	REPAIR KIT;ENGINE O/H	000000	000002
5878143822	5-8781	1325	REPAIR KIT; ENGINE O/H	000001	000000
5878143830	5-8781	4383	REPAIR KIT; ENGINE O/H	000000	000000
5878143850	5-8781	4385	REPAIR KIT TOP O/H	000000	000000
5878143870	5-8781	4387	REPAIR KIT; O/H	000000	000000
5878143871	5-8781	4387	REPAIR KIT; O/H	000000	000000
5878143890	5-8781	4389	REPAIR KIT; ENGINE O/H	000000	000001
5878143900	5-8781	4390	GASKET SET;ENG OVERHAUL	000000	000000
5878143901	5-8781	4390	GASKET SET;ENG OVERHAUL	000000	000000
5878143902	5-8781	4390	GASKET SET;ENG OVERHAUL	000000	000001
5878143921	5-8781	4392	GASKET SET;ENG OVERHAUL	000000	000000
5878144390	5-8781	4439	LINER KIT	000000	000000

5878144391	5-8781	4439	LINER KIT	000000	000000
5878144400	5-8781	4440	LINER KIT	000000	000000
5878144401	5-8781	4440	LINER KIT	000000	000000
5878144410	5-8781	4441	LINER KIT	000000	000000
5878144411	5-8781	4441	LINER KIT	000000	000000
5878144420	5-8781	4442	LINING KIT	000000	000000
5878144430	5-8781	4443	LINER KIT	000000	000000
5878144431	5-8781	4443	LINER KIT	000000	000000
5878144440	5-8781	4444	LINER KIT	000000	000000
5878144441	5-8781	4444	LINER KIT	000000	000000
5878144450	5-8781	4445	LINER KIT	000000	000000
5878144451	5-8781	4445	LINER KIT	000000	000000
5878144460	5-8781	4446	LINER SET; ENG CYL	000000	000000
5878144461	5-8781	4446	LINER KIT	000000	000000
5878144590	5-8781	4459	LINER SET; ENG CYL	000000	000000
5878144591	5-8781	4459	LINER SET; ENG CYL	000000	000000
5878144601	5-8781	4460	LINER SET; ENG	000000	000000
5878144610	5-8781	4461	LINER SET; ENG BYL	000000	000000
5878144611	5-8781	4461	LINER SET; ENG BYL	000000	000000
5878144620	5-8781	4462	LINER SET;ENG CYL	000000	000000
5878144670	5-8781	4467	LINER KIT	000000	000002
5878144680	5-8781	4468	LINER KIT	000000	000000
5878144690	5-8781	4469	LINER KIT	000000	000001
5878144710	5-8981	4471	LINER KIT	000000	000010
5878144720	5-8781	4472	LINER KIT	000000	000015
5878144730	5-8781	4473	LINER SET	000000	000003
5878144740	5-8781	4474	LINER KIT	000000	000001
5878144830	5-8781	4483	LINER SET; ENG CYL	000000	000003
5878144840	5-8781	4484	LINER SET; ENG CYL	000000	000003
5878144850	5-8781	4485	LINER SET; ENG CYL	000000	000014
5878144860	5-8781	4486	LINER SET; ENG CYL	000000	000000
5878144870	5-8781	4487	LINER SET; ENG CYL	000000	000010
5878144880	5-8781	4488	LINER SET; ENG CYL	000000	000001
5878144890	5-8781	4489	LINER SET; ENG CYL	000001	000008
5878144900	5-8781	4490	LINER SET; ENG CYL	000000	000003
5878145070	5-8781	4507	LINER SET; ENG CYL	000013	000000
5878145080	5-8781	4508	LINER SET; ENG CYL	000016	000000
5878145090	5-8781	4509	LINER SET; ENG CYL	000004	000000
5878145100	5-8781	4510	LINER SET; ENG CYL	000004	000000
5878145500	5-8781	4550	LINER KIT	000000	000000
5878145510	5-8781	4551	LINER KIT	000000	000000
5878145650	5-8781	4565	LINER KIT	000000	000000
5878145660	5-8781	4566	LINER KIT	000000	000016
5878145670	5-8781	4567	LINER KIT	000000	000007
5878145680	5-8781	4568	LINER KIT	000000	000003
5878145691	5-8781	4569	LINER SET; ENG CYL	000000	000001
5878145700	5-8781	4570	LINER SET; ENG CYL	000000	000000

5878145701	5-8781	4570	LINER SET; ENG CYL	000000	000003
5878145710	5-8781	4571	LINER SET; ENG CYL	000000	000000
5878145711	5-8781	4571	LINER SET; ENG CYL	000000	000004
5878145720	5-8781	4572	LINER SET; ENG CYL	000000	000000
5878145721	5-8781	4572	LINER SET; ENG CYL	000000	000012
5878145810	5-8781	4581	LINER SET; ENG CYL	000000	000000
5878145820	5-8781	4582	LINER SET; ENG CYL	000000	000039
5878145830	5-8781	4583	LINER SET; ENG CYL	000000	001052
5878145840	5-8781	4584	LINER SET; ENG CYL	000000	000030
5878145850	5-8781	4585	LINER SET; ENG CYL	000002	000000
5878145860	5-8781	4586	LINER SET; ENG CYL	000000	000001
5878145870	5-8781	4587	LINER SET; ENG CYL	000000	000005
5878145930	5-8781	4593	LINER KIT	000001	000002
5878145940	5-8781	4594	LINER KIT	000000	000005
5878145950	5-8781	4595	LINER KIT	000000	000001
5878145960	5-8781	4596	LINER KIT	000000	000009
5878145970	5-8781	4597	LINER KIT	000000	000003
5878145980	5-8781	4598	LINER KIT	000000	000002
5878145990	5-8781	4599	LINER KIT	000000	000001
5878146000	5-8781	4600	LINER KIT	000000	000002
5878146050	5-8781	4605	LINER SET;ENG CYL GRADE 1	000000	000006
5878146060	5-8781	4606	LINER SET;ENG CYL GRADE 2	000000	000003
5878146070	5-8781	4607	LINER SET;ENG CYL GRADE 3	000000	000009
5878146080	5-8781	4608	LINER SET;ENG CYL GRADE 4	000000	000001
5878146090	5-8781	4609	LINER SET; ENG CYL	000000	000004
5878146100	5-8781	4610	LINER SET; ENG CYL	000000	000004
5878146110	5-8781	4611	LINER SET; ENG CYL	000000	000000
5878146120	5-8781	4612	LINER SET; ENG CYL	000000	000000
5878146130	5-8781	4613	LINER SET; ENG CYL	000000	000046
5878146140	5-8781	4614	LINER SET; ENG CYL	000000	000031
5878146150	5-8781	4615	LINER SET; ENG CYL	000000	000016
5878146160	5-8781	4616	LINER SET; ENG CYL	000000	000002
5878146170	5-8781	4617	LINER SET; ENG CYL	000000	000001
5878146180	5-8781	4618	LINER SET; ENG CYL	000000	000000
5878146190	8-8781	4619	LINER SET; ENG CYL	000000	000009
5878146250	5-8781	4625	LINER KIT	000000	000000
5878146260	5-8781	4626	LINER KIT	000000	000013
5878146270	5-8781	4627	LINER KIT	000000	000002
5878146280	5-8781	4628	LINER KIT	000000	000004
5878146380	5-8781	4638	LINER SET (GRADE 2)	000000	000002
5878146490	5-8781	4649	LINER SET; ENG CYL	000000	000000
5878146491	5-8781	4649	LINER SET; ENG CYL	000000	000006
5878146500	5-8781	4650	LINER SET; ENG CYL	000000	000000
5878146501	5-8781	4650	LINER SET; ENG CYL	000000	000003
5878146510	5-8781	4651	LINER SET; ENG CYL	000000	000000
5878146511	5-8781	4651	LINER SET; ENG CYL	000000	000005
5878146520	5-8781	4652	LINER SET; ENG CYL	000000	000000

5878146521	5-8781	4652	LINER SET; ENG CYL	000000	000003
5878146610	5-8781	4661	LINER SET; ENG CYL	000000	000000
5878146611	5-8781	4661	LINER SET; ENG CYL	000000	000009
5878146620	5-8781	4662	LINER SET; ENG CYL	000000	000000
5878146621	5-8781	4662	LINER SET; ENG CYL	000000	000022
5878146630	5-8781	4663	LINER SET; ENG CYL	000000	000000
5878146631	5-8781	4663	LINER SET; ENG CYL	000000	000014
5878146640	5-8781	4664	LINER SET; ENG CYL	000000	000000
5878146641	5-8781	4664	LINER SET; ENG CYL	000000	000030
5878146720	5-8781	4672	REPAIR KIT;ENGINE OVERHA	000000	000002
5878146871	5-8781	4687	GASKET SET;ENG OVERHAUL	000000	000001
5878146950	5-8781	4695	GASKET SET; ENG OVERHAUL	000001	000000
5878146960	5-8781	4696	GASKET SET; ENG OVERHAUL	000000	000000
5878147360	5-8781	4736	REPAIR KIT; ENGINE O/H	000000	000022
5878147500	5-8781	4750	GASKET SET; ENG OVERHAUL	000000	000000
5878147501	5-8781	4750	GASKET SET; ENG OVERHAUL	000000	000001
5878147520	5-8781	4752	GASKET SET;ENG HD OVERHAL	000000	000000
5878147521	5-8781	4752	GASKET SET;ENG HD OVERHAL	000000	000001
5878147530	5-8781	4753	GASKET SET; ENG OVERHAUL	000000	000000
5878147531	5-8781	4753	GASKET SET; ENG OVERHAUL	000000	000005
5878147540	5-8781	4754	GASKET SET;ENG HD OVERHAL	000000	000000
5878147541	5-8781	4754	GASKET SET;ENG HD OVERHAL	000000	000012
5878147880	5-8781	4788	GASKET SET; ENG OVERHAUL	000000	000000
5878147881	5-8781	4788	GASKET SET; ENG OVERHAUL	000000	000003
5878147950	5-8781	4795	GASKET SET;ENG OVERHAUL	000000	000000
5878147960	5-8781	4796	GASKET SET;ENG HD OVERHAU	000000	000000
5878147970	5-8781	4797	GASKET SET;ENG OVERHAUL	000000	000000
5878148220	5-8781	4822	REPAIR KIT; ENGINE O/H	000000	000000
5878148560	5-8781	4856	GASKET SET; ENG OVERHAUL	000000	000009
5878148570	5-8781	4857	GASKET SET; ENG OVERHAUL	000000	000002
5878148580	5-8781	4858	GASKET SET; ENG OVERHAUL	000000	000013
5878148590	5-8781	4859	GASKET SET; ENG HD OVERHA	000000	000006
5878148600	5-8781	4860	GASKET SET; ENG HD OVERHA	000000	000009
5878148610	5-8781	4861	GASKET SET; ENG HD OVERHA	000000	000009
5878148620	5-8781	4862	LINER SET; ENG CYL	000000	000000
5878148621	5-8781	4862	LINER SET; ENG CYL	000000	000000
5878148630	5-8781	4863	LINER SET; ENG CYL	000000	000000
5878148631	5-8781	4863	LINER SET; ENG CYL	000000	000000
5878148901	5-8781	4890	GASKET SET; ENG OVERHAUL	000000	000000
5878148911	5-8781	4891	GASKET SET; ENG OVERHAUL	000000	000000
5878148921	5-8781	4892	GASKET SET; ENG OVERHAUL	000000	000000
5878148930	5-8781	4893	GASKET SET; ENG HD OVERHA	000000	000000
5878148940	5-8781	4894	GASKET SET; ENG HD OVERHA	000000	000000
5878148950	5-8781	4895	GASKET SET; ENG HD OVERHA	000000	000000
5878149270	5-8781	4927	REPAIR KIT;ENGINE O/H	000000	000001
5878149320	5-8781	4932	GASKET SET; ENG OVERHAUL	000000	000000
5878149322	5-8781	4932	GASKET SET; ENG OVERHAUL	000000	000000

5878149330	5-8781	4933	GASKET SET; ENG OVERHAUL	000000	000000
5878149332	5-8781	4933	GASKET SET; ENG OVERHAUL	000000	000000
5878149340	5-8781	4934	GASKET SET; ENG OVERHAUL	000000	000000
5878149341	5-8781	4934	GASKET SET; ENG OVERHAUL	000000	000000
5878149342	5-8781	4934	GASKET SET; ENG OVERHAUL	000000	000000
5878149410	5-8781	4941	GASKET SET; ENG HD OVERHA	000000	000000
5878149420	5-8781	4942	GASKET SET; ENG HD OVERHA	000000	000002
5878149430	5-8781	4943	GASKET SET; ENG HD OVERHA	000000	000002
5878149920	5-8781	4992	GASKET SET; ENG O	000000	000002
5878149921	5-8781	4992	GASKET SET; ENG O	000002	000000
5878149922	5-8781	4992	GASKET SET; ENG O	000000	000000
5878149930	5-8781	4993	GASKET SET; ENG O	000000	000003
5878149931	5-8781	4993	GASKET SET; ENG O	000000	000000
5878149932	5-8781	4993	GASKET SET; ENG O	000000	000000
5878149940	5-8781	4994	GASKET SET; ENG O	000003	000000
5878149941	5-8781	4994	GASKET SET; ENG O	000000	000000
5878149950	5-8781	4995	GASKET SET; ENG H	000000	000000
5878149951	5-8781	4995	GASKET SET; ENG H	000004	000000
5878149960	5-8781	4996	GASKET SET; ENG H	000000	000000
5878149961	5-8781	4996	GASKET SET; ENG H	000000	000000
5878149970	5-8781	4997	GASKET SET; ENG H	000004	000000
5878149971	5-8781	4997	GASKET SET; ENG H	000000	000000
5878150110	5-8781	5011	GASKET SET; ENG H	000000	000000
5878150120	5-8781	5012	GASKET SET; ENG H	000000	000001
5878150130	5-8781	5013	GASKET SET; ENG H	000000	000001
5878150350	5-8781	5035	GASKET SET;ENG OVERHAUL	000000	000008
5878150360	5-8781	5036	GASKET SET;ENG OVERHAUL	000000	000007
5878150370	5-8781	5037	GASKET SET; ENG OVERHAUL	000000	000002
5878150450	5-8781	5045	GASKET SET; ENG O	000000	000000
5878150460	5-8781	5046	GASKET SET; ENG O	000000	000003
5878150470	5-8781	5047	GASKET SET;ENG OVER HAUL	000000	000000
5878150540	5-8781	5054	GASKET SET;ENG HD OVERHAU	000000	000000
5878150550	5-8781	5055	GASKET SET;ENG HD OVERHAU	000000	000009
5878150560	5-8781	5056	GASKET SET;ENG H	000000	000000
5878151270	5-8781	5127	GASKET SET;ENG HD OVERHAU	000001	000116
5878151280	5-8781	5128	GASKET SET;ENG HD OVERHAU	000001	000229
5878151290	5-8781	5129	GASKET SET;ENG HD OVERHAU	000001	000048
5878151660	5-8781	5166	GASKET SET; ENG OVERHAUL	000000	000000
5878151661	5-8781	5166	GASKET SET; ENG OVERHAUL	000000	000002
5878151670	5-8781	5167	GASKET SET;ENG OVERHAUL	000000	000000
5878151671	5-8781	5167	GASKET SET;ENG OVERHAUL	000000	000005
5878151680	5-8781	5168	GASKET SET;ENG OVERHAUL	000000	000000
5878151681	5-8781	5168	GASKET SET;ENG OVERHAUL	000000	000005
5878151780	5-8781	5178	GASKET SET;ENG O	000000	000002
5878151790	5-8781	5179	GASKET SET; ENG O	000000	000002
5878151800	5-8781	5180	GASKET SSET;ENG OVERHAUL	000000	000003
5878151960	5-8781	5196	GASKET SET; ENG OVERHAUL	000000	000000

5878153020	5-8781	5302	GASKET SET;ENG,OVERHAUL	000000	000000
5878153021	5-8781	5302	GASKET SET;ENG,OVERHAUL	000000	000000
5878153030	5-8781	5303	GASKET SET; ENG OVERHAUL	000000	000000
5878153031	5-8781	5303	GASKET SET; ENG OVERHAUL	000000	000000
5878153032	5-8781	5303	GASKET SET; ENG OVERHAUL	000000	000000
5878153040	5-8781	5304	GASKET SET; ENG OVERHAUL	000000	000000
5878153041	5-8781	5304	GASKET SET; ENG OVERHAUL	000000	000000
5878153050	5-8781	5305	GASKET SET; ENG OVERHAUL	000000	000009
5878153051	5-8781	5305	GASKET SET; ENG OVERHAUL	000000	000007
5878153080	5-8781	5308	GASKET SET; ENG OVERHAUL	000000	000001
5878153100	5-8781	5310	GASKET SET;ENG OVERHAUL	000000	000001
5878153160	5-8781	5316	GASKET SET; ENG	000000	000000
5878153161	5-8781	5316	GASKET SET; ENG	000000	000000
5878153162	5-8781	5316	GASKET SET; ENG	000000	000001
5878153191	5-8781	5319	GASKET SET; ENG	000000	000000
5878153192	5-8781	5319	GASKET SET; ENG	000000	000001
5878153201	5-8781	5320	GASKET SET;ENG	000000	000002
5878153250	5-8781	5325	GASKET SET; ENG OVERHAUL	000000	000000
5878153260	5-8781	5326	GASKET SET;ENG OVERHAUL	000000	000000
5878153270	5-8781	5327	GASKET SET; ENG OVERHAUL	000000	000000
5878153280	5-8781	5328	GASKET SET;ENG HD OVERHAU	000000	000000
5878153290	5-8781	5329	GASKET SET; ENG OVERHAUL	000000	000000
5878153300	5-8781	5330	4HK1 HEAD O/H GASKET SET	000000	000000
5878153340	5-8781	5334	GASKET SET;ENG OVERHAUL	000000	000003
5878153350	5-8781	5335	GASKET SET;ENG OVERHAUL	000000	000003
5878153360	5-8781	5336	GASKET SET; ENG OVERHAUL	000001	000006
5878153430	5-8781	5343	GASKET SET; ENG OVERHAUL	000000	000000
5878153431	5-8781	5343	GASKET SET; ENG OVERHAUL	000000	000000
5878153432	5-8781	5343	GASKET SET; ENG OVERHAUL	000000	000001
5878153440	5-8781	5344	GASKET SET;ENG OVERHAUL	000000	000004
5878153441	5-8781	5344	GASKET SET;ENG OVERHAUL	000000	000000
5878153442	5-8781	5344	GASKET SET;ENG OVERHAUL	000000	000000
5878153450	5-8781	5345	GASKET SET; ENG OVERHAUL	000000	000000
5878153451	5-8781	5345	GASKET SET; ENG OVERHAUL	000000	000000
5878153460	5-8781	5346	GASKET SET;ENG HD OVRHAUL	000000	000000
5878153461	5-8781	5346	GASKET SET;ENG HD OVRHAUL	000000	000000
5878153500	5-8781	5350	GASKET SET; ENG OVERHAUL	000000	000003
5878153510	5-8781	5351	GASKET SET; ENG OVERHAUL	000000	000003
5878153820	5-8781	5382	GASKET SET; ENG OVERHAUL	000000	000000
5878153821	5-8781	5382	GASKET SET; ENG OVERHAUL	000000	000000
5878153822	5-8781	5382	GASKET SET; ENG OVERHAUL	000000	000000
5878153830	5-8781	5383	GASKET SET; ENG OVERHAUL	000000	000000
5878153832	5-8781	5383	GASKET SET; ENG OVERHAUL	000000	000000
5878153840	5-8781	5384	GASKET SET; ENG OVERHAUL	000000	000002
5878153842	5-8781	5384	GASKET SET; ENG OVERHAUL	000000	000000
5878153850	5-8781	5385	GASKET SET; ENG HD OVERHA	000000	000000
5878153852	5-8781	5385	GASKET SET; ENG HD OVERHA	000000	000000

5878153860	5-8781	5386	GASKET SET; ENG HD OVERHA	000000	000000
5878153861	5-8781	5386	GASKET SET; ENG HD OVERHA	000000	000000
5878153862	5-8781	5386	GASKET SET; ENG HD OVERHA	000000	000004
5878153870	5-8781	5387	GASKET SET;ENG HD OVERHAU	000000	000000
5878153872	5-8781	5387	GASKET SET;ENG HD OVERHAU	000000	000000
5878153881	5-8781	5388	GASKET SET;ENG	000000	000000
5878153882	5-8781	5388	GASKET SET;ENG	000000	000002
5878153891	5-8781	5389	GASKET SET;ENG OVERHAUL	000000	000000
5878153892	5-8781	5389	GASKET SET;ENG OVERHAUL	000000	000025
5878155350	5-8781	5535	GASKET SET; ENG OVERHAUL	000000	000000
5878155360	5-8781	5536	GASKET SET;ENG HD OVERHAU	000000	000000
5878155361	5-8781	5536	GASKET SET;ENG HD OVERHAU	000000	000033
5878155362	5-8781	5536	GASKET SET;ENG HD OVERHAU	000000	000129
5878155780	5-8781	5578	GASKET SET;ENG O/H GRD=A	000000	000000
5878155781	5-8781	5578	GASKET SET;ENG O/H GRD=A	000000	000000
5878155790	5-8781	5579	GASKET SET;ENG O/H GRD=C	000000	000000
5878155791	5-8781	5579	GASKET SET;ENG O/H GRD=C	000000	000000
5878155810	5-8781	5581	GASKET SET;ENG O/H GRD=C	000000	000000
5878155820	5-8781	5582	GSKT SET;ENG O/H GRD=A	000000	000000
5878155830	5-8781	5583	GSKT SET;ENG O/H GRD=C	000000	000000
5878155850	5-8781	5585	GASKET SET;ENG O/H GRD=C	000000	000000
5878156000	5-8781	5600	GSKT SET;ENG HD O/H =A	000000	000000
5878156001	5-8781	5600	GSKT SET;ENG HD O/H =A	000000	000002
5878156010	5-8781	5601	GASKET SET;ENG	000000	000000
5878156011	5-8781	5601	GASKET SET;ENG	000000	000000
5878156400	5-8781	5640	GASKET SET; ENG O/H GRD=A	000000	000001
5878156420	5-8781	5642	GASKET SET; ENG	000002	000002
5878156490	5-8781	5649	GASKET SET; ENG OVERHAUL	000000	000000
5878156491	5-8781	5649	GASKET SET; ENG OVERHAUL	000000	000007
5878156500			GASKET SET; ENG	000000	000000
5878156590			REPAIR KIT; WATER PUMP	000000	000002
5878157032	5-8781	5703	GASKET SET;ENG OVERHAUL	000000	000000
5878157033	5-8781	5703	GASKET SET;ENG OVERHAUL	000000	000000
5878157035	5-8781	5703	GASKET SET;ENG OVERHAUL	000000	000003
5878157040	5-8781	5704	GASKET SET;ENG HD OVERHAU	000000	000004
5878157041	5-8781	5704	GASKET SET;ENG HD OVERHAU	000000	000003
5878157820	5-8781	5782	GASKET SET; ENG OVERHAUL	000000	000000
5878157822	5-8781	5782	GASKET SET; ENG OVERHAUL	000000	000000
5878157823	5-8781	5782	GASKET SET; ENG OVERHAUL	000000	000007
5878157824	5-8781	5782	GASKET SET; ENG OVERHAUL	000000	000001
5878159270	5-8781	5927	GASKET SET; ENG OVERHAUL	000000	000002
5878159280	5-8781	5928	GASKET SET;ENG OVERHAUL	000000	000003
5878159290	5-8781	5929	GASKET SRT;ENG OVERHAUL	000000	000001
5878159300	5-8781	5930	GASKET SET; ENG HD OVERHA	000000	000002
5878159310	5-8781	5931	GASKET SET;ENG HD OVERHAU	000000	000002
5878159320	5-8781	5932	GASKET SET;ENG HD OVERHAU	000000	000002
5878159400	5-8781	5940	GASKET SET; ENG OVERHAUL	000000	000023

5878159401	5-8781	5940	GASKET SET; ENG OVERHAUL	000000	000003
5878159410	5-8781	5941	GASKET SET; ENG	000000	000000
5878159411	5-8781	5941	GASKET SET; ENG	000000	000001
5878159430			GASKET SET; ENG OVERHAUL	000000	000002
5878159451	5-8781	5945	GSKT SET; ENG O/N GRD=A	000000	000000
5878159460	5-8781	5946	GASKET SET; ENG	000000	000000
5878159461	5-8781	5946	GASKET SET; ENG	000000	000000
5878159470	5-8781	5947	GASKET SET; ENG	000000	000000
5878159471	5-8781	5947	GASKET SET; ENG	000000	000000
5878160280	5-8781	6028	GASKET SET;ENG OVERHAUL	000000	000006
5878160281	5-8781	6028	GASKET SET;ENG OVERHAUL	000000	000049
5878160870	5-8781	6087	GASKET SET; ENG OVERHAUL	000000	000000
5878160880	5-8781	6088	GASKET SET;ENG OVERHAUL	000000	000000
5878160890	5-8781	6089	GASKET SET; ENG OVERHAUL	000000	000000
5878160900	5-8781	6090	GASKET SET;ENG HD OVERHAU	000000	000000
5878160910	5-8781	6091	GASKET SET;ENG HD OVERHAU	000000	000000
5878160920	5-8781	6092	GASKET SET;ENG HD OVERHAU	000000	000000
5878161232	5-8781	6123	GASKET SET;ENG	000000	000000
5878161240	5-8781	6124	GASKET SET; ENG	000000	000004
5878161241	5-8781	6124	GASKET SET; ENG	000000	000003
5878161250	5-8781	6125	GASKET SET; ENG	000000	000002
5878161251	5-8781	6125	GASKET SET; ENG	000000	000002
5878161260	5-8781	6126	GASKET SET; ENG	000000	000000
5878161270	5-8781	6127	GASKET SET; ENG	000000	000006
5878161280	5-8781	6128	GASKET SET; ENG	000000	000004
5878161620	5-8781	6162	GASKET SET; ENG	000000	000034
5878161630	5-8781	6163	GASKET SET; ENG	000000	000000
5878162600	5-8781	6260	GASKET SET; ENG	000000	000002
5878162610	5-8781	6261	GASKET SET; ENG	000000	000003
5878162620	5-8781	6262	GASKET SET; ENG	000000	000002
5878162630	5-8781	6263	GASKET SET; ENG	000000	000002
5878162640	5-8781	6264	GASKET SET; ENG	000000	000002
5878162650	5-8781	6265	GASKET SET; ENG	000000	000002
5878300311			REPAIR KIT, W/CYL	000000	000000
5878300590			REPAIR KIT	000000	000000
5878300620			REPAIR KIT	000000	000000
5878300830			CUP SET; RR WHEEL	000000	000000
5878300850			CUP SET	000000	000000
5878300860			REPAIR KIT	000000	000000
5878301650			MIRROR ASM	000000	000000
5878305350			REP KIT;TRANS	000000	000000
5878305351			REPAIR KIT;TRAN	000000	000002
5878305357			REPAIR KIT	000000	000000
5878305380			CUP SET; FRT WH	000000	000000
5878305441			REPAIR KIT	000000	000000
5878305460			CUP SET; RR WHE	000000	000000
5878305550			REPAIR KIT; SLAV	000000	000000

5878305770	5-8783	0577	REPAIR KIT;MI	000000	000000
5878305771	5-8783	0577	GKT;TRANS OHAUL	000000	000000
5878305772	5-8783	0577	REPAIR KIT;	000000	000000
5878307141	5-8783	0714	CUP SET; FRT WH	000000	000047
5878307610	5-8783	0761	REPAIR KIT;SLAV	000000	000000
5878307611	5-8783	0761	REPAIR KIT;SLAV	000000	000000
5878307720	5-8783	0772	REPAIR KIT; CLUTCH SLAVE	000000	000000
5878307950	5-8783	0795	REPAIR KIT CLUT	000000	000000
5878307980	5-8783	0798	REPAIR KIT	000000	000000
5878309390	5-8783	0939	REPAIR KIT	000017	000000
5878309391	5-8783	0939	REPAIR KIT	000000	000031
5878309392	5-8783	0939	REPAIR KIT	000000	000000
5878309420	5-8783	0942	REPAIR KIT; CLU	000000	000007
5878309440	5-8783	0944	REPAIR KIT;SLAV	000000	000006
5878310298			KING PIN KIT	000000	000000
5878311560			REPAIR KIT; CLU	000000	000000
5878311970	5-8783	1197	REPAIR KIT; CLUTCH,M/CYL	000000	000003
5878312040	5-8783	1204	REPAIR KIT; CLUTCH	000000	000000
5878312160			CLUTCH RELEASE REPAIR KIT	000000	000000
5878313020	5-8783	1302	REPAIR KIT CLUTCH	000000	000000
5878313670	5-8783	1367	REP. KIT; P/S	000000	000003
5878314020	5-8781	1402	REPAIR KIT;CLU SLAVE CYL	000001	000000
5878315140	5-8783	1514	GASKET SET	000003	000008
5878316020			CUP SET; FRT WHEEL	000000	000004
5878316170			REPAIR KIT;CLU M/CYL	000000	000000
5878316290	5-8783	1629	GASKET SET	000000	000004
5878317310	5-8783	1731	REPAIR KIT;CLU SLAVE CYL	000000	000000
5878320450			SHOE KIT; BRK, RR	000000	000000
5878320470			SHOE KIT; BRK, R	000000	000005
5878320480			REPAIT KIT; CLU	000000	000000
5878320490			REPAIR KIT; CLU	000000	000000
5878700091			U-BOLT ASSY	000000	000000
5884000070	5-8840	0007	DRIVER HANDLE	000000	000001
5884000150	5-8840	0015	REMOVER; BEARING	000000	000002
5884000190	5-8840	0019	SLID HAMMER	000000	000000
5884000191	5-8840	0019	SLID HAMMER	000000	000000
5884000860	5-8840	0086	UNIVERSAL PULLER	000000	000000
5884001410	5-8840	0141	INSTALLER; CRANKSHAFT OIL	000000	000001
5884001450	5-8840	0145	STATIC TIMING TOOL	000000	000001
5884002010			WRENCH; OIL FILTER	000000	000005
5884002660	5-8840	0266	ANGLE GAUGE	000000	000002
5884003880	5-8840	0388	REMOVER	000000	000003
5884006320	5-8840	0632	REMOVER	000000	000003
5884020000	5-8840	2000	REMOVER	000000	000000
5884020080	5-8840	2008	GUAGE / TOOL	000000	000003
5884020081	5-8840	2008	COMP. GAUGE	000000	000000
5884020090	5-8840	2009	COMP.GUAGE ADP.;GLOW PLUG	000000	000000

5884020330	5-8840	2033	INSTALLER; VALVE STEM SEA	000000	000000
5884020340	5-8840	2034	REMOVER; NOZZLE	000000	000000
5884020380	5-8840	2038	REPLACER; CAMSHAFT BEARIN	000000	000000
5884020390	5-8840	2039	REMOVER; CYL LINER	000000	000001
5884020400	5-8840	2040	INSTALLER; CYL LINER	000001	000000
5884020570	5-8840	2057	REMOVER	000000	000010
5884020610	5-8840	2061	INSTALLER; OIL SEAL	000000	000002
5884022220	5-8840	2222	INSTALLER;SEAL RING	000000	000001
5884022300	5-8840	2230	STOPPER;CRANKSHAFT	000000	000001
5884022771			INSTALLER PISTON	000000	000001
5884023040			LINER REMOVER	000000	000003
5884023130	5-8840	2313	LINER INSTALLER	000000	000002
5884023400	5-8840	2340	REMOVER;CONNECTING ROD BU	000000	000001
5884023570	5-8840	2357	CR/SHFT,OIL SEAL INSTALLA	000000	000001
5884023590	5-8840	2359	INSTALLER RR OIL SE	000000	000000
5884023591	5-8840	2359	INSTALLER RR OIL SE	000000	000016
5884023600	5-8840	2360	REMOVER RR OILSEAL	000000	000001
5884023620	5-8840	2362	SEAL REMOVER	000000	000000
5884025910	5-8840	2591	CAMSHAFT GEAR TOOL	000000	000028
5884026210	5-8840	2621	REMOVER;VALVE SPRING	000000	000001
5884026220	5-8840	2622	COMPRESSION GAUGE ADAPTER	000000	000004
5884026230	5-8840	2623	NOZZLE SLEEVE REMOVER	000000	000001
5884026240	5-8840	2624	NOZZLE SLEEVE INSTALLER	000000	000001
5884026250	5-8840	2625	INSTALLER;VALVE GUIDE OIL	000000	000001
5884026260	5-8840	2626	INSTALLER;GUIDE BRIDGE	000000	000001
5884026270	5-8840	2627	INSTALLER;OIL SEAL	000000	000003
5884026280	5-8840	2628	REMOVER;VALVE GUIDE	000000	000001
5884026560	5-8840	2656	COMP.GUAGE ADP.;GLOW PLUG	000000	000000
5884026741	5-8840	2674	WRENCH;SCISSORS GEAR SPRI	000000	000002
5884026750	5-8840	2675	COMPRESSION GAUGE	000000	000000
5884027030	5-8840	2703	INSTALLER KIT;OIL SEAL	000000	000000
5884028150	5-8840	2815	COMPRESSION GAUGE ADAPTER	000000	000009
5884028160	5-8840	2816	VALVE GUIDE REMVER & INST	000000	000002
5884028171	5-8840	2817	VALVE STEM SEAL INSTALLER	000000	000001
5884028180	5-8840	2818	VALVE SPRING INSTALLER	000000	000001
5884028190	5-8840	2819	PIVOT ASM	000000	000001
5884028200	5-8840	2820	INJECTION PIPE OIL SEAL	000000	000001
5884028210	5-8840	2821	FRONT OIL SEAL INSTALLER	000000	000026
5884028220	5-8840	2822	WRENCH	000000	000020
5884028260	5-8840	2826	REMOVER;INJECTOR	000000	000002
5884028820	5-8840	2882	VALVE STEM SEAL INSTALLER	000000	000000
5884029401	5-8840	2940	INSTALLER KIT OIL	000000	000000
5884090010	5-8840	9001	VALVE SPRING TOOL 2AB1/3K	000000	000000
5884090020	5-8840	9002	PISTON TOOL	000000	000000
5884090040	5-8840	9004	INSTALLER	000000	000000
5884090050	5-8840	9005	INSTALLER BUSH; INJ PUMP	000000	000000
5884090060	5-8840	9006	REMOVER BUSH; INJ PUMP CA	000000	000000

5884090070	5-8840	9007	INSTALLER; VALVE GUIDE SE	000002	000000
5884090090	5-8840	9009	INSTALLER PIN; TENSION LE	000000	000000
5884090100	5-8840	9010	REPLACER; HEAD (DISCONTIN	000000	000000
5884090110	5-8840	9011	REPLACER; BODY PISTON PIN	000000	000000
5884090120	5-8840	9012	PUSH ROD & GUIDE ROD	000000	000000
5884090130	5-8840	9013	REPLACER; PISTON PIN	000000	000000
5884090140	5-8840	9014	TOOL PISTON PIN PUSH GUID	000000	000000
5884090150	5-8840	9015	WRENCH	000000	000003
5884090160	5-8840	9016	TESTER	000000	000001
5884090170	5-8840	9017	TOOL KIT	000000	000000
5884090180	5-8840	9018	COMPRESSOR;PISTON RING	000000	000005
5884090190	5-8840	9019	VALVE SETTER	000000	000000
5884090200	5-8840	9020	VALVE SETTER	000000	000000
5884090210	5-8840	9021	REMOVER; CYL LINER	000000	000000
5884090220	5-8840	9022	INSTALLER; CYL LINER	000000	000000
5884090360	5-8840	9036	REAR OIL SEAL TOOL	000000	000001
5884090370	5-8840	9037	REAR OIL SEAL TOOL	000000	000000
5884090610	5-8840	9061	INSTALLER FRONT	000000	000002
5887100390			2005 3LD1/LD2 PTS CTLG	000000	000000
5887100460			G201 PARTS CATALOG	000000	000000
5887100674	5-8871	0067	C240 PARTS CATALOG	000000	000000
5887100699	5-8871	0069	PARTS CATALOG 2AA/AB1	000000	000000
5887100709	5-8871	0070	PARTS CATALOG 3AA/AB/AD1	000000	000000
5887100762	5-8871	0076	PARTS CATALOG C330	000000	000000
5887100782	5-8871	0078	UM3AB1**DISCONTINUED**	000000	000000
5887100787	5-8871	0078	UM3AB1 PARTS CATALOG	000000	000000
5887100797	5-8871	0079	PARTS CATALOG 4BA1	000000	000000
5887100804	5-8871	0080	PARTS CATALOG UM2AB1	000000	000000
5887100806	5-8871	0080	UM2AB1 PARTS CATLOG	000000	000000
5887100833	5-8871	0083	PARTS CATALOG UM4BB1	000000	000000
5887100835	5-8871	0083	UM4BB1 PARTS CATALOG	000000	000000
5887100864	5-8871	0086	PARTS CATALOG C190	000000	000000
5887100882	5-8871	0088	PARTS CATALOG UM4BA1	000000	000000
5887100883	5-8871	0088	UM4BA1 PARTS CATALOG	000000	000000
5887100911	5-8871	0091	UMC330**DISCONTINUED**	000000	000000
5887100970	5-8871	0097	PARTS CATALOG KS	000000	000000
5887100984	5-8871	0098	PARTS CATALOG UMC240	000000	000000
5887100988	5-8871	0098	UMC240 PARTS CATALOG	000000	000000
5887101019	5-8871	0101	PARTS CATALOG 4BB1	000000	000000
5887101100			KS PARTS CATALOG	000000	000000
5887101143			PTS CAT 3AE/AF1	000000	000000
5887101153	5-8871	0115	PARTS CATALOG 2AE1	000000	000000
5887101196	5-8871	0119	PARTS CATALOG 4BD1	000000	000000
5887101230	5-8871	0123	KB CATALG 12/80	000000	000000
5887101258	5-8871	0125	PARTS CATALOG 4FA1	000000	000000
5887101287	5-8871	0128	PARTS CATALOG 4FB1-4FC1	000000	000000
5887101310			PIAZZA CATALOG	000000	000000

5887101365		PARTS CATALOG 4BC2	000000	000000
5887101369	5-8871 0136	4BC2 PARTS CATALOG	000000	000000
5887101383	5-8871 0138	4JA1/JB1/JC1: MANUAL, UV	000000	000000
5887101390		PARTS CATALOG	000000	000000
5887101400		PF CATALG 10/81	000000	000000
5887101410	5-8871 0141	KB CATALG 11/81	000000	000000
5887101443	5-8871 0144	PTS CAT C240	000000	000000
5887101452	5-8871 0145	PARTS CATALOG UM4BC2	000000	000000
5887101453	5-8871 0145	UM4BC2 PARTS CATALOG	000000	000000
5887101462	5-8871 0146	C201 PARTS CATALOG	000000	000000
5887101463	5-8871 0146	C201 PARTS CATALOG	000000	000000
5887101473	5-8871 0147	P/CATAROG	000000	000000
5887101480	5-8871 0148	PF CATALOG '83	000000	000000
5887101490	5-8871 0149	KB CATALOG '83	000000	000000
5887101560		JR CATALOG '83	000000	000000
5887101573		PARTS CATALOG 3KC1	000000	000000
5887101587	5-8871 0158	PARTS CATALOG 2KC1	000000	000000
5887101605		UM4BD1 PARTS CATALOG	000000	000000
5887101630		JR CATALOG '84	000000	000000
5887101650		PF CATALOG '84	000000	000000
5887101660	5-8871 0166	KB CATALOG '84	000000	000000
5887101730		KB82 CATALOG'84	000000	000000
5887101760		KS22 CATALOG 85	000000	000000
5887101797		PARTS CATALOG 3KR1	000000	000000
5887101800		NKR CATALOG	000000	000000
5887101836		PARTS CATALOG 4JB1	000000	000000
5887101837	5-8871 0183	4JB1 PARTS CATALOG	000000	000000
5887101838	5-8871 0183	4JA/JB/JC1 MANUAL, UV	000000	000000
5887101870		JR CATALOG 85	000000	000000
5887101900		84-86 PTS CATG.	000000	000000
5887101910	5-8871 0191	86 KB CATALOG	000000	000000
5887101920		'86 NPR PARTS CATALOG	000000	000000
5887101933		PARTS CAT. 4BD1 (EXPORT)	000000	000000
5887101934	5-8871 0193	PARTS CATALOG 4BD1 (EXPOR	000000	000000
5887101943	5-8871 0194	PARTS CATALOG UM3KC1	000000	000000
5887101946	5-8871 0194	UM3KC1 PARTS CATALOG	000000	000000
5887101947	5-8871 0194	UM3KC1 PART CATALOGS	000000	000000
5887101950	5-8871 0195	PARTS CATALOG 4JB1-PK	000000	000000
5887101973	5-8871 0197	PARTS CATALOG 4FE1	000000	000000
5887101977	5-8871 0197	4FE1 PARTS CATALOG	000000	000000
5887102030	5-8871 0203	86 KB CATALOG	000000	000000
5887102066	5-8871 0206	PARTS CATALOG 3KC1	000000	000000
5887102236		4JD1/JE/JF1 PTS CATALOG	000000	000000
5887102250		PARTS CATALOG 3KR1B	000000	000000
5887102260	5-8871 0226	PARTS CATALOG 4BD1	000000	000000
5887102280	5-8871 0228	PARTS CATALOG C240B	000000	000000
5887102405	5-8871 0240	3KR2 PARTS CATALOG	000000	000000

5887102406	5-8871	0240	3KR2 PARTS CATALOG	000000	000000
5887102414			UM4BG1 PARTS CATALOG	000000	000000
5887102451			PARTS CATALOG 3KC2	000000	000000
5887102455	5-8871	0245	3KC2 PARTS CATALOG	000000	000000
5887102456	5-8871	0245	3KC2 PARTS CATALOG	000000	000000
5887102457	5-8871	0245	3KC2 PARTS CATALOG	000000	000000
5887102465	5-8871	0246	4BG1 PTS CATALOG	000000	000000
5887102466	5-8871	0246	4BG1 PTS CATALOG	000000	000000
5887102467	5-8871	0246	PARTS CATALOG 4BG1	000000	000000
5887102468	5-8871	0246	PARTS CATALOG 4BG1	000000	000000
5887102469	5-8871	0246	PARTS CATALOG 4BG1	000000	000000
5887102473	5-8871	0247	PARTS CATALOG C240 (EXPOR	000000	000000
5887102483	5-8871	0248	PARTS CATALOG C240	000000	000000
5887102503	5-8871	0250	PARTS CATALOG 4BD1	000000	000000
5887102504	5-8871	0250	PARTS CATALOG 4BD1	000000	000000
5887102511	5-8871	0251	PARTS CATALOG 4FB1-4FC1	000000	000000
5887102512	5-8871	0251	PARTS CATALOG 4FB1-4FC1	000000	000000
5887102551	5-8871	0255	PARTS CATALOG 3AA/AB/AD1	000000	000000
5887102560	5-8871	0256	2YA1 PARTS CATALOG	000000	000000
5887102611	5-8871	0261	PARTS CATALOG 3LB1/3LD1	000000	000000
5887102612	5-8871	0261	3LB/LD1 PARTS CATALOG	000000	000000
5887102614	5-8871	0261	3LB/LD1 PARTS CATALOG	000000	000000
5887102615	5-8871	0261	3LB/LD1 PARTS CATALOG	000000	000000
5887102691			3AB1 PARTS CATALOG	000000	000000
5887102702			4JG2 PARTS CATALOG	000000	000000
5887102704	5-8871	0270	4JG2 PARTS CATALOG	000000	000000
5887102705	5-8871	0270	4JG2 PARTS CATALOG	000000	000000
5887102711	5-8871	0271	2KC1 PARTS CATALOG	000000	000000
5887102720	5-8871	0272	3KR1 PARTS CATALOG	000000	000000
5887102721	5-8871	0272	3KR1 PARTS CATALOG	000000	000000
5887102731	5-8871	0273	UM4BD1 PARTS CATALOG	000000	000000
5887102761	5-8871	0276	C240 PARTS CATALOG	000000	000000
5887102762	5-8871	0276	C240 PARTS CATALOG	000000	000000
5887102770	5-8871	0277	C240 PARTS CAT.	000000	000000
5887102772	5-8871	0277	C240 PARTS CAT.	000000	000000
5887102774	5-8871	0277	C240 PARTS CAT.	000000	000000
5887102820	5-8871	0282	3KA/KB/KC1 PTS CATALOG	000000	000000
5887102821	5-8871	0282	3KA/KB/KC1 PTS CATALOG	000000	000000
5887102830	5-8871	0283	4BD1 (EXP) PTS CATALOG	000000	000000
5887102831	5-8871	0283	4BD1 (EXP) PTS CATALOG	000000	000000
5887102832	5-8871	0283	4BD1 (EXP) PARTS CATALOG	000000	000000
5887102833	5-8871	0283	4BD1 (EXP) PARTS CATALOG	000000	000000
5887102850	5-8871	0285	4BD1 ENG #229200+: NBK	000000	000000
5887102851	5-8871	0285	4BD1 PARTS CATALOG	000000	000000
5887102892	5-8871	0289	4LB/C/E1 CATALOG	000000	000000
5887102893	5-8871	0289	PARTS CATALOG 4LB/C/E1	000000	000000
5887102894	5-8871	0289	PARTS CATALOG 4LB/C/E1	000000	000000

5887102895	5-8871	0289	PARTS CATALOG 4LB/C/E1	000000	000000
5887102981	5-8871	0298	UM4LC1 PARTS CATALOG	000000	000000
5887103000	5-8871	0300	4JA/JC1 PARTS CATALOG	000000	000000
5887103001	5-8871	0300	4JA/JC1 PARTS CATALOG	000000	000000
5887103010	5-8871	0301	4JB1 PARTS CATALOG	000000	000000
5887103011	5-8871	0301	4JB1 PARTS CATALOG	000000	000000
5887103012	5-8871	0301	4JB1 PARTS CATALOG	000000	000000
5887103020	5-8871	0302	3LA/LB1 PARTS CATALOG	000000	000000
5887103021	5-8871	0302	3LA/LB1 PARTS CATALOG	000000	000000
5887103030	5-8871	0303	3LD1 PARTS CATALOG	000000	000000
5887103031	5-8871	0303	3LD1 PARTS CATALOG	000000	000000
5887103032	5-8871	0303	3LD1 PARTS CATALOG	000000	000000
5887103121	5-8871	0312	D201 PARTS CATALOG	000000	000000
5887103290			3KR1 PARTS CATALOG	000000	000000
5887105009			PARTS CAT;PIAZZA DOMESTIC	000000	000000
5887105010			85 JR CATALOG	000000	000000
5887105011			JR T CATALOG	000000	000000
5887105012			JR T CATALOG	000000	000000
5887105013			JR T CATALOG	000000	000000
5887105014			JR T CATALOG	000000	000000
5887105015			JR T CATALOG	000000	000000
5887105016			JR T CATALOG	000000	000000
5887105017			PTS. CATG., JR	000000	000000
5887105050			85 JT CATALOG	000000	000000
5887105051			JT CATALOG	000000	000000
5887105052			JT CATALOG	000000	000000
5887105053			JT CATALOG	000000	000000
5887105054			JT CATALOG	000000	000000
5887105055			JT CATALOG 88.5	000000	000000
5887105056			'85-89 JT CATALOG	000000	000000
5887105057			JT PARTS CATALOG; '85-89	000000	000000
5887105190			86 KT CATALOG	000000	000000
5887105191	5-8871	0519	KT CATALOG	000000	000000
5887105192	5-8871	0519	KT CATALOG	000000	000000
5887105193	5-8871	0519	89 KT PTS.CATG.	000000	000000
5887105194	5-8871	0519	90 KT PTS CATG	000000	000000
5887105195	5-8871	0519	'91 TROOPER II CATALOG	000000	000000
5887105196	5-8871	0519	'91 TROOPER II PTS. CATG.	000000	000000
5887105230			'95 NPR FINAL ED. PTS CAT	000000	000000
5887105231			NPR CATALOG	000000	000000
5887105232			NPR CATALOG '88	000000	000000
5887105233			89 NPR PTS.CATG	000000	000000
5887105234			90 NPR PTS CATG	000000	000000
5887105235			90 NPR PTS CAT	000000	000000
5887105236			'91 NPR CATALOG	000000	000000
5887105237			'92 NPR PARTS CATALOG	000000	000000
5887105238			'93 NPR PARTS CATG	000000	000000

5887105239	'95 NPR PTS. CATALOG	000000	000000
5887105240	KB CATALOG	000000	000000
5887105241	5-8871 0524 87 KB CATALOG	000000	000000
5887105242	5-8871 0524 87 KB CATALOG	000000	000000
5887105243	5-8871 0524 '87 KB PARTS CATG.	000000	000000
5887105283	UBS PARTS CATALOG	000000	000000
5887105284	4JB1-T AUTOMOTIVE	000000	000000
5887105444	NKS P/CATALOG	000000	000000
5887105510	C240 PTS CATALOG	000000	000000
5887105563	PTS.CATG;TF EXPORT MDL.	000000	000000
5887105564	PTS.CATG;TF EXPORT MDL.	000000	000000
5887105580	88 TF PTS CAT	000000	000000
5887105581	89 TF PTS.CATG.	000000	000000
5887105582	90 TF PTS CATG	000000	000000
5887105583	90.5TF PTS.CATG	000000	000000
5887105584	'91 PICKUP CATALOG	000000	000000
5887105585	'92 TF PTS. CATALOG	000000	000000
5887105586	`93 TF PARTS CATG	000000	000000
5887105587	'94 PICKUP (TF) PTS.CATG.	000000	000000
5887105588	'95 PICKUP (TF) PTS CATAL	000000	000000
5887105589	'95 (TF) PTS CAT (FINAL)	000000	000000
5887105640	PTS CATG;AMIGO	000000	000000
5887105641	90 TCR PTS CATG	000000	000000
5887105642	'91 AMIGO CATALOG	000000	000000
5887105643	'92 TC PTS. CATALOG	000000	000000
5887105644	'93 AMIGO(TC) PARTS CATG	000000	000000
5887105645	'94 AMIGO (TC) PTS. CATG.	000000	000000
5887105646	94 AMIGO(TC) FINAL PTS C	000000	000000
5887105880	JI(IMPULSE)CATG	000000	000000
5887105881	JI IMPULSE CATALOG '91	000000	000000
5887105882	'91 JI IMPULSE PTS.CATG.	000000	000000
5887105883	'92 JI PARTS CATALOG	000000	000000
5887105884	'92 JI IMPULSE PTS. CATG.	000000	000000
5887105930	JT(STYLUS)CATG.	000000	000000
5887106110	'91 RODEO CATALOG	000000	000000
5887106111	'91 RODEO PARTS CATALOG	000000	000000
5887106112	'92 UC PTS. CATALOG	000000	000000
5887106113	`93 RODEO(UC) PARTS CATG	000000	000000
5887106114	'94 RODEO (UC) PTS.CATG.	000000	000000
5887106115	'95 RODEO (UC) PTS CAT	000000	000000
5887106116	'95.5 RODEO PTS CATALOG	000000	000000
5887106117	'96 RODEO PTS CATALOG	000000	000000
5887106118	'97 RODEO PTS CATALOG	000000	000000
5887106119	'97 RODEO PTS CAT FINAL	000000	000000
5887106170	'91 STYLUS CATALOG	000000	000000
5887106171	'92 JS PARTS CATALOG	000000	000000
5887106172	93 STYLUS(JS) PARTS CATG	000000	000000

5887106173	93 STYLUS PTS CAT F/EDITI	000000	000000
5887106194	GEMINI PRT. CAT	000000	000000
5887106214	GEMINI COUPE CAT	000000	000000
5887106310	'92 TROOPER PTS. CATG.	000000	000000
5887106521	PTS.CATG;TF EXPORT MDL.	000000	000000
5887106522	TFR/TFS CATALOG	000000	000000
5887106523	TFR/TFS CATALOG	000000	000000
5887106570	'93 TROOPER(UX) PTS. CATG	000000	000000
5887106571	'94 TROOPER(UX)PTS. CATG.	000000	000000
5887106572	'95 TROOPER (UX) PTS CAT	000000	000000
5887106573	'96 TROOPER (UX) PTS CAT	000000	000000
5887106574	'97 TROOPER (UX) PTS CAT	000000	000000
5887106575	'97 TROOPER PTS CAT FINAL	000000	000000
5887106592	UBS PARTS CATALOG	000000	000000
5887106880	'93 UC TAIWAN CATALOG	000000	000000
5887106881	'93-94 TAIWAN PTS. CATG.	000000	000000
5887106882	'94-'95 TAIWAN PTS CATALO	000000	000000
5887106883	'95.5 TAIWAN PTS CATALO	000000	000000
5887106884	'96 TAIWAN PTS CATALO	000000	000000
5887106953	NKR PTS CATG	000000	000000
5887106980	95.5 NPR GAS PTS CATALOG	000000	000000
5887106981	96 NPR GAS PTS CATALOG	000000	000000
5887106982	97 NPR GAS PTS CATALOG	000000	000000
5887106983	98 NPR GAS PTS CATALOG	000000	000000
5887106984	99 NPR GAS PTS CATALOG	000000	000000
5887106985	2000 NPR GAS PTS CAT	000000	000000
5887106986	2001 NPR GAS PTS CAT	000000	000000
5887106987	2002 NPR GAS PTS CAT	000000	000000
5887106988	2003 NPR GAS PTS CAT	000000	000000
5887106989	2003 NPR(G)PTS CAT	000000	000000
5887107019	NPS-RHD P/CATAL	000000	000001
5887107050	'95.5 NPR (D) PTS CATALOG	000000	000000
5887107051	`96 NPR (D) PTS CATALOG	000000	000000
5887107052	'97 NPR (D) PTS CATALOG	000000	000000
5887107053	'98 NPR (D) PTS CATALOG	000000	000000
5887107054	'99 NPR (D) PTS CATALOG	000000	000000
5887107055	2000 NPR (D) PTS CAT	000000	000000
5887107056	2001 NPR PARTS CATALOG	000000	000000
5887107057	2002 NPR PARTS CATALOG	000000	000000
5887107058	2003 NPR PARTS CATALOG	000000	000000
5887107059	2003 NPR (D) PTS CAT	000000	000000
5887107110	95.5 NPR S/C PTS CATALOG	000000	000000
5887107261	TFR/TFS CATALOG	000000	000000
5887107320	96 OASIS PTS CAT	000000	000000
5887107321	97 OASIS PTS CAT	000000	000000
5887107322	98 OASIS PTS CAT	000000	000000
5887107323	99 OASIS PTS CAT	000000	000000

5887107360		96 HOMBRE PTS CATALOG	000000	000000
5887107361		97 HOMBRE PTS CATALOG	000000	000000
5887107362		98 HOMBRE PTS CATALOG	000000	000000
5887107363		99 HOMBRE PTS CATALOG	000000	000000
5887107364		2000 HOMBRE PTS CATALOG	000000	000000
5887107522		"MU" CATALOG	000000	000000
5887107530		'98 RODEO (UC) PTS CAT	000000	000000
5887107531		'99 RODEO (UE) PTS CAT	000000	000000
5887107532		2000 RODEO PTS CAT	000000	000000
5887107533		2001 RODEO PTS CAT	000000	000000
5887107534		2002 RODEO PTS CAT	000000	000000
5887107535		2003 RODEO PTS CAT	000000	000000
5887107536		2004 RODEO PTS CAT	000000	000000
5887107560		'98 TROOPER (UX) PTS CAT	000000	000000
5887107561		'99 TROOPER (UX) PTS CAT	000000	000000
5887107562		2000 TROOPER CATALOG	000000	000000
5887107563		2001 TROOPER CATALOG	000000	000000
5887107564		2002 TROOPER CATALOG	000000	000000
5887107810		'98 AMIGO (UE) PTS CAT	000000	000000
5887107811		'99 AMIGO (UA) PTS CAT	000000	000000
5887107812		2000 AMIGO (UA) PTS CAT	000000	000000
5887107813		2001 AMIGO CATALOG	000000	000000
5887107814		2002 RODEO SPORT	000000	000000
5887107815		2003 RODEO SPORT	000000	000000
5887107902		WIZARD CATALOG	000000	000000
5887107910		4BG1 PARTS CATALOG	000000	000000
5887107911	5-8871 0791	4BG1 PARTS CATALOG	000000	000000
5887107912	5-8871 0791	4BG1 PARTS CATALOG	000000	000000
5887107913	5-8871 0791	4BG1 PARTS CATALOG	000000	000000
5887107914	5-8871 0791	4BG1 PARTS CATALOG	000000	000000
5887107915	5-8871 0791	4BG1 PARTS CATALOG	000000	000000
5887107916	5-8871 0791	2000 4BG1 ENGINE CATALOG	000000	000000
5887107917	5-8871 0791	89□01 4BG1 CATALOG	000000	000000
5887107918	5-8871 0791	2001 4BG1 CATALOG	000000	000000
5887107919	5-8871 0791	2002 4BG1 CATALOG	000000	000000
5887107920	5-8871 0792	3LA/LB1 PARTS CATALOG	000000	000000
5887107921	5-8871 0792	3LA/LB1 PARTS CATALOG	000000	000000
5887107922	5-8871 0792	3LA/LB1 PARTS CATALOG	000000	000000
5887107924	5-8871 0792	3LA/LB1 PARTS CATALOG	000000	000000
5887107925	5-8871 0792	3LA/LB1 PARTS CATALOG	000000	000000
5887107926	5-8871 0792	3LA/LB1 PARTS CATALOG	000000	000000
5887107927	5-8871 0792	2005 3LA/LB1 PARTS CAT	000000	000000
5887107930	5-8871 0793	3LD1 PARTS CATALOG	000000	000000
5887107931	5-8871 0793	3LD1 PARTS CATALOG	000000	000000
5887107932	5-8871 0793	3LD1 PARTS CATALOG	000000	000000
5887107933	5-8871 0793	3LD1 PARTS CATALOG	000000	000000
5887107934	5-8871 0793	3LD1 PARTS CATALOG	000000	000000

5887107935	5-8871	0793	3LD1 PARTS CATALOG	000000	000000
5887107936	5-8871	0793	3LD1/LD2 '92-'00 PTS CTLG	000000	000000
5887107937	5-8871	0793	3LD1/LD2 '92-'00 PTS CTLG	000000	000000
5887107938	5-8871	0793	3LD1/LD2 '92-'02 PTS CTLG	000000	000000
5887107939	5-8871	0793	3LD1/LD2 '92-'03 PTS CTLG	000000	000000
5887107940	5-8871	0794	4BD1 CATALOG	000000	000000
5887107941	5-8871	0794	4BD1 CATALOG	000000	000000
5887107942	5-8871	0794	4BD1 PARTS CATALOG	000000	000000
5887107943	5-8871	0794	4BD1 PARTS CATALOG	000000	000000
5887107944	5-8871	0794	4BD1 PARTS CATALOG	000000	000000
5887107950	5-8871	0795	4JA/JC1 CATALOG	000000	000000
5887107951	5-8871	0795	4JA/JC1 CATALOG	000000	000000
5887107952	5-8871	0795	4JA/JC1 CATALOG	000000	000000
5887107953	5-8871	0795	4JA/JC1 PARTS CATALOG	000000	000000
5887107954	5-8871	0795	4JA/JC1 PARTS CATALOG	000000	000000
5887107955	5-8871	0795	4JA/JC1 PARTS CATALOG	000000	000000
5887107960	5-8871	0796	4JB1 PARTS CATALOG	000000	000000
5887107961	5-8871	0796	4JB1 PARTS CATALOG	000000	000000
5887107962	5-8871	0796	4JB1 PARTS CATALOG	000000	000000
5887107963	5-8871	0796	4JB1 PARTS CATALOG	000000	000000
5887107964	5-8871	0796	4JB1 PARTS CATALOG	000000	000000
5887107966	5-8871	0796	95-01 4JB1 CATALOG	000000	000000
5887107967	5-8871	0796	95-02 4JB1 CATALOG	000000	000000
5887107968	5-8871	0796	95-03 4JB1 CATALOG	000000	000000
5887107970	5-8871	0797	4JG2 CATALOG	000000	000000
5887107971	5-8871	0797	4JG2 CATALOG	000000	000000
5887107972	5-8871	0797	4JG1/4JG2 CATALOG	000000	000000
5887107973	5-8871	0797	4JG1/4JG2 CATALOG	000000	000000
5887107974	5-8871	0797	4JG1/4JG2 CATALOG	000000	000000
5887107977	5-8871	0797	4JG1/4JG2 CATALOG	000000	000000
5887107979	5-8871	0797	'02 4JG1/4JG2 CATALOG	000000	000000
5887107980	5-8871	0798	4LB/LC/LE1 CATALOG	000000	000000
5887107982	5-8871	0798	4LB/LC/LE1 CATALOG	000000	000000
5887107983	5-8871	0798	4LB/LC/LE1 CATALOG	000000	000000
5887107984	5-8871	0798	4LB/LC/LE1 CATALOG	000000	000000
5887107986	5-8871	0798	4LB/LC/LE1 CATALOG	000000	000000
5887107987	5-8871	0798	4LB/LC/LE1 CATALOG	000000	000000
5887107988	5-8871	0798	4LB/LC/LE1 CATALOG	000000	000000
5887107989	5-8871	0798	2003 4LB/LC/LE1 CATALOG	000000	000000
5887107990	5-8871	0799	C240 PARTS CATALOG	000000	000000
5887107991	5-8871	0799	C240 PARTS CATALOG	000000	000000
5887107992	5-8871	0799	C240 PARTS CATALOG	000000	000000
5887107993	5-8871	0799	92-01 C240 CATALOG	000000	000000
5887107995	5-8871	0799	92-03 C240 CATALOG	000000	000000
5887107997	5-8871	0799	92-05 C240 CATALOG	000000	000000
5887107998	5-8871	0799	92-06 C240 CATALOG	000000	000000
5887107999	5-8871	0799	92-07 C240 CATALOG	000000	000000

5887108071		IGM/UES CATALOG	000000	000000
5887108073		2002 IGM/UES CATALOG	000000	000000
5887108170		NPR PARTS CATALOG	000000	000000
5887108210		'99 VEHICROSS PTS CAT	000000	000000
5887108211		2000 VEHICROSS PTS CAT	000000	000000
5887108212		2001 VEHICROSS PTS CAT	000000	000000
5887108440		3YA/YC1 PARTS CATALOG	000000	000000
5887108442	5-8871 0844	3YA/YC1 PARTS CATALOG	000000	000000
5887108443	5-8871 0844	3YA/YC1 PARTS CATALOG	000000	000000
5887108444	5-8871 0844	3YA/YC1 PARTS CATALOG	000000	000000
5887108445	5-8871 0844	3YA/YC1 PARTS CATALOG	000000	000000
5887108446	5-8871 0844	2004 3YA1 PTS CAT	000000	000000
5887108447	5-8871 0844	1995-2005 3YA1 PTS CAT	000000	000000
5887108448	5-8871 0844	1995-2005 3YA1 PTS CAT	000000	000000
5887108451	5-8871 0845	2YA1 PARTS CATALOG	000000	000000
5887108452	5-8871 0845	2YA1 PARTS CATALOG	000000	000000
5887108453	5-8871 0845	2YA1 PARTS CATALOG	000000	000000
5887108454	5-8871 0845	2YA1 PARTS CATALOG	000000	000000
5887108455	5-8871 0845	2004 2YA1 PARTS CATALOG	000000	000000
5887108456	5-8871 0845	1991-2005 2YA1 PARTS CAT	000000	000000
5887108457	5-8871 0845	1991-2005 2YA1 PARTS CAT	000000	000000
5887108460	5-8871 0846	UM3YA/YC/YD1 PARTS CATALO	000000	000000
5887108511	5-8871 0851	UM4BD1 PARTS CATALOG	000000	000000
5887108514	5-8871 0851	UM4BD1 PARTS CATALOG	000000	000000
5887108516	5-8871 0851	UM4BD1 PARTS CATALOG	000000	000000
5887108520	5-8871 0852	UM4BG1 PARTS CATALOG	000000	000000
5887108521	5-8871 0852	UM4BG1 PARTS CATALOG	000000	000000
5887108541	5-8871 0854	UM C240 PARTS CATALOG	000000	000000
5887108720	5-8871 0872	4BD1 (EXPORT) PARTS CATALOG	000000	000000
5887108721	5-8871 0872	4BD1 (EXPORT) PARTS CATALOG	000000	000000
5887108722	5-8871 0872	93□01 4BD1 EXP CATALOG	000000	000000
5887108723	5-8871 0872	93□02 4BD1 EXP CATALOG	000000	000000
5887108730	5-8871 0873	C240 EXPORT PARTS CATALOG	000000	000000
5887108732	5-8871 0873	C240 EXPORT PARTS CATALOG	000000	000000
5887108733	5-8871 0873	C240 EXPORT PARTS CATALOG	000000	000000
5887108734	5-8871 0873	C240 EXPORT PARTS CATALOG	000000	000000
5887108735	5-8871 0873	C240 EXPORT PARTS CATALOG	000000	000000
5887108736	5-8871 0873	1993-2004 C240 EXPORT PRT	000000	000000
5887108737	5-8871 0873	1993-2004 C240 EXPORT PRT	000000	000000
5887108738	5-8871 0873	1993-2007 C240 EXPORT PRT	000000	000000
5887108739		1993-2008 C240 EXPORT PRT	000000	000000
5887108750		4BG1 EXPORT PARTS CATALOG	000000	000000
5887108930		2002 AXIOM PTS CATG	000000	000000
5887108931		2003 AXIOM PTS CATG	000000	000000
5887108932		2004 AXIOM PTS CATG	000000	000000
5887109410		'02-03-ASCENDER PTS CATG	000000	000000
5887109411		'02-04-ASCENDER PTS CATG	000000	000000

5887109412		'03-05-ASCENDER PTS CATG	000000	000000
5887109431		NKR-LHD P/CATALOG	000000	000002
5887109440		NKR PARTS CATG	000000	000000
5887109441		NKR PARTS CATG	000000	000000
5887109442		NKR PARTS CATG	000000	000000
5887109451		NKR-LHD P/CATALOG	000000	000001
5887109461		NKR-RHD P/CATALOG	000000	000001
5887109470		NPR/NQR-LHD PTS CATG	000000	000000
5887109472		NPR/NQR-LHD PTS CATG	000000	000001
5887109480		NPR/NQR-RHD PARTS CATG	000000	000000
5887109570		2004 NPR PARTS CATALOG	000000	000000
5887109571		2005 NPR/NQR PTS CATG	000000	000000
5887109572		2006 NPR/NQR PTS CATG	000000	000000
5887109600		2003 4BG1 CATALOG	000000	000000
5887109601	5-8871 0960	2003 4BG1 CATALOG	000000	000000
5887109602	5-8871 0960	2004 4BG1 CATALOG	000000	000000
5887109603	5-8871 0960	2004 4BG1 CATALOG	000000	000000
5887109604	5-8871 0960	2005 4BG1 CATALOG	000000	000000
5887109605	5-8871 0960	89-05 4BG1 CATALOG	000000	000000
5887109606	5-8871 0960	'89-'06 4BG1 PTS CATALOG	000000	000000
5887109607	5-8871 0960	'89-'06 4BG1 PTS CATALOG	000000	000000
5887109608	5-8871 0960	'89-'07 4BG1 PTS CATALOG	000000	000000
5887109609	5-8871 0960	'89-'07 4BG1 PTS CATALOG	000000	000000
5887109610		2004 NPR GAS PTS CAT	000000	000000
5887109611		2005 NPR GAS PTS CAT	000000	000000
5887109630		'03 4JG1/4JG2 CATALOG	000000	000000
5887109631	5-8871 0963	'04 4JG1/4JG2 CATALOG	000000	000000
5887109632	5-8871 0963	'05 4JG1/4JG2 CATALOG	000000	000000
5887109633	5-8871 0963	'93-'06 4JG1/4JG2 CATALOG	000000	000000
5887109634	5-8871 0963	'95-'06 4JG1/4JG2 CATALOG	000000	000000
5887109635	5-8871 0963	07 4JG1/4JG2 CATALOG	000000	000000
5887109636	5-8871 0963	08 4JG1/4JG2 CATALOG	000000	000000
5887109637	5-8871 0963	09 4JG1/4JG2 CATALOG	000000	000000
5887109638		4JG1/G2 PRTS CATALOG	000000	000000
5887109639		93-11 4JG1/G2 PTS CAT	000000	000000
5887109690		93-03 4LB/LC/LE1 PTS CAT	000000	000000
5887109691	5-8871 0969	93-04 4LB/LC/LE1 PTS CAT	000000	000000
5887109692	5-8871 0969	94-04 4LB/LC/LE1 PTS CAT	000000	000000
5887109693	5-8871 0969	94-05 4LB/LC/LE1 PTS CAT	000000	000000
5887109694	5-8871 0969	94-05 4LB/LC/LE1 PTS CAT	000000	000000
5887109695	5-8871 0969	94-07 4LB/LC/LE1 PTS CAT	000000	000000
5887109696	5-8871 0969	94-08 4LB/LC/LE1 PTS CAT	000000	000000
5887109697		4LB/LC/LE PRTS CATALOG	000000	000000
5887109698		94-10 4LB/LC/LE PTS CAT	000000	000000
5887109740		2003 3CD1 PARTS CATALOG	000000	000000
5887109741	5-8871 0974	2004 3CD1 PARTS CATALOG	000000	000000
5887109742	5-8871 0974	2004 3CB1/3CD1 PRTS CAT	000000	000000

5887109743	5-8871	0974	2006 3CA1/B1/D1 PRTS CAT	000000	000000
5887109744	5-8871	0974	2006 3CA1/B1/D1/E1	000000	000000
5887109745	5-8871	0974	2006 3CA1/B1/D1/E1	000000	000000
5887109746	5-8871	0974	2008 3CA1/B1/D1/E1	000000	000000
5887109747	5-8871	0974	2009 3CA1/B1/D1/E1	000000	000000
5887109780			2005 NRR PARTS CATALOG	000000	000000
5887109781			2005 NRR PARTS CATALOG	000000	000000
5887110390			2005 3LD1/LD2 PTS CTLG	000000	000000
5887110430			2005 4HK1 PARTS CATG	000000	000000
5887110431	5-8871	1043	'05-'06 4HK1 PARTS CATG	000000	000000
5887110432	5-8871	1043	'05-'06 4HK1 PARTS CATG	000000	000000
5887110433	5-8871	1043	'05-'07 4HK1 PARTS CATG	000000	000000
5887110434	5-8871	1043	'05-'07 4HK1 PARTS CATG	000000	000000
5887110435	5-8871	1043	'05-'08 4HK1 PARTS CATG	000000	000000
5887110436	5-8871	1043	'05-'08 4HK1 PARTS CATG	000000	000000
5887110437	5-8871	1043	'05-'09 4HK1 PARTS CATG	000000	000000
5887110439			'05-'10 4HK1 PARTS CATG	000000	000000
5887110460			2006 2CA1 PARTS CATALOG	000000	000000
5887111060	5-8871	1106	2006 4JJ1 PTS CATG	000000	000000
5887111061	5-8871	1106	2007 4JJ1 PTS CATG	000000	000000
5887111062	5-8871	1106	2007 4JJ1 PTS CATG	000000	000000
5887111063	5-8871	1106	2007 4JJ1 PTS CATG	000000	000000
5887111064	5-8871	1106	2008 4JJ1 PTS CATG	000000	000000
5887111065	5-8871	1106	06-09 4JJ1 PTS CAT	000000	000000
5887111066	5-8871	1106	06-09 4JJ1 PTS CAT	000000	000000
5887111067			06-10 4JJ1 PTS CAT	000000	000000
5887111068			06-10 4JJ1 PTS CAT	000000	000000
5887111069			05-11 4JJ1 TIER 3	000000	000000
5887111492			NLR/NMR(RHD) P/CATALOG	000000	000000
5887111541			NRR/NPR/NQR(LHD) EXC. CAT	000000	000000
5887111571			NNR/NPR/NQR (RHD) CATG	000000	000000
5887111651			4LE1/LE2 PTS CATALOG	000000	000000
5887111652	5-8871	1165	4LE1/LE2 PTS CATALOG	000000	000000
5887111653	5-8871	1165	4LE1/LE2 PTS CATALOG	000000	000000
5887111654	5-8871	1165	2007-2009 4LE1/LE2	000000	000000
5887111655	5-8871	1165	2007-2009 4LE1/LE2	000000	000000
5887111656			2007-2010 4LE1/LE2	000000	000000
5887111657			2007-2010 4LE1/LE2 TIER 4	000000	000000
5887111658			2007-2011 4LE1/LE2 TIER 4	000000	000000
5887111910			92-08 C240 CATALOG	000000	000000
5887111912			92-10 C240 CATALOG	000000	000000
5887111913			92-12 C240 CATALOG	000000	000000
5887111930			'89-'08 4BG1 PTS CATALOG	000000	000000
5887111931	5-8871	1193	'89-'09 4BG1 PTS CATALOG	000000	000000
5887111932			'89-'10 4BG1 PTS CATALOG	000000	000000
5887111933			'89-'10 4BG1 PTS CATALOG	000000	000000
5887111934			'89-'11 4BG1 PTS CATALOG	000000	000000

5887112650		C240 PARTS CATALOG	000000	000000
5887112651		93-10 C240 PTS CAT	000000	000000
5887112652		93-11 C240 PTS CAT	000000	000000
5887112730		'05-'10 4HK1 PARTS CATG	000000	000000
5887112731		'05-'11 4HK1 TIER 3	000000	000000
5887112732		'05-'11 4HK1 TIER 3	000000	000000
5887112741		2010-01 4HK1 TIER R	000000	000000
5887112743		2010-12 4HK1 TIER R	000000	000000
5887112930		PARTS CATG; EXPORT	000000	000000
5887114160		93-12 4JG1/G2 PTS CAT	000000	000000
5890901030	5-8909	0103 BOLT; BOSS - ADAPTER	000000	000000
5890901040	5-8909	0104 BOLT; EYE 2KC1	000000	000011
5890936060	5-8909	3606 VINYL PIPE	000000	000000
5891136150	5-8911	3615 TUBE; DIST	000000	000000
5891174030	5-8911	7403 FILLER ASM; OIL	000000	000000
5891174040	5-8911	7404 PIPE;OIL FILLER	000000	000000
5891174060	5-8911	7406 HOSE;RUBBER,PIPE-OIL PAN	000000	000000
5891176051	5-8911	7605 STAY;GUIDE TUBE	000000	000000
5891237030	5-8912	3703 PULLEY; CRANKSHAFT	000000	000000
5891366052	5-8913	6605 FAN ASM; COOLING	000000	000003
5891372050	5-8913	7205 COCK ASM.; W/DRAIN PIPE	000000	000000
5891372060	5-8913	7206 BRACKET;WATER DRAIN COCK	000000	000000
5891414080	5-8914	1408 PIPE;EXHAUST	000000	000000
5891541060	5-8915	4106 PIPE; FUEL SUCTION	000000	000000
5891541240	5-8915	4124 PIPE; FUEL, LEAKE OFF	000000	000000
5891541441	5-8915	4144 SEDIMENTER; FUEL	000000	000000
5891541490	5-8915	4149 PIPE; FUEL, RETURN	000000	000000
5891541500	5-8915	4150 PIPE; FUEL, DELIVERY	000000	000000
5891971010	5-8919	7101 SPACER	000000	000000
5892140920	5-8921	4092 RADIATOR,ASSY	000001	000001
5892140930	5-8921	4093 RADIATOR ASM.	000000	000000
5892140950	5-8921	4095 RADIATOR KIT	000000	000000
5892140960	5-8921	4096 RADIATOR KIT	000000	000000
5892143020	5-8921	4302 HOSE; RADIATOR INLET	000000	000000
5892143230	5-8921	4323 HOSE; RUBBER, UPPER	000000	000006
5892143240	5-8921	4324 HOSE; RUBBER, LOWER	000000	000011
5892143630	5-8921	4363 HOSE WATER LOW	000000	000001
5892143740	5-8921	4374 HOSE WATE UPPER	000000	000001
5892143770	5-8921	4377 HOSE; RUBBER, UPPER	000004	000000
5892143780	5-8921	4378 HOSE; RUBBER, LOWER	000002	000000
5892144111	5-8921	4411 RADIATOR KIT	000000	000000
5892144120	5-8921	4412 RADIATOR ASSY	000000	000000
5892144250	5-8921	4425 RADIATOR KIT	000000	000000
5892144600	5-8921	4460 RADIATOR KIT	000000	000000
5892144610	5-8921	4461 RADIATOR ASM.	000000	000001
5892144670	5-8921	4467 RADIATOR KIT	000000	000000
5892211101	5-8922	1110 PIPE ASM:EXH	000000	000000

5892211110	5-8922	1111	SILENCER EXHAUST	000000	000000
5892211180	5-8922	1118	SILENCER; EXHAUST	000000	000000
5892211240	5-8922	1124	SILENCER; EXHAUST	000000	000000
5892211340	5-8922	1134	SILENCER; EXH	000000	000000
5892240100	5-8922	4010	TANK ASM;FUEL	000000	000000
5892240110	5-8922	4011	TANK ASM.; FUEL, 35L	000000	000000
5892240130	5-8922	4013	TANK; FUEL	000000	000000
5892255040	5-8922	5504	BELT; SUPPORT,FUEL T	000000	000000
5892255050	5-8922	5505	LINING;A	000000	000000
5892255080	5-8922	5508	BELT; SUPPORT,FUEL T	000000	000000
5892333020	5-8923	3302	BRACKET; FUEL CUT	000000	000000
5892633030	5-8926	3303	SHAFT ASM.	000000	000000
5892633040	5-8926	3304	SHAFT ASM.	000000	000000
5892634330	5-8926	3433	FOOT; ENGINE, FRT. RH.	000000	000000
5892634340	5-8926	3434	FOOT; ENGINE, FRT. LH.	000000	000000
5892634371	5-8926	3437	BRACKET; OIL DRAIN	000000	000000
5892634650	5-8926	3465	BRACKET; JUNCTION	000000	000000
5892634660	5-8926	3466	SPACER; ID=10, T=15	000000	000000
5892635260	5-8926	3526	CUSHION	000000	000000
5892635470	5-8926	3547	STAY; RAD. TO UPR. MBR.	000000	000000
5892635510	5-8926	3551	CARRIER; FUEL TANK	000000	000000
5892636060	5-8926	3606	CUSHION	000000	000000
5892636630	5-8926	3663	PLATE; REAR	000000	000000
5892636680	5-8926	3668	BRACKET;FUEL TA	000000	000000
5892636690	5-8926	3669	COVER; RELAY PANEL	000000	000000
5892636720	5-8926	3672	COVER; UPPER	000000	000000
5892636730	5-8926	3673	GROMMET	000000	000000
5892637040	5-8926	3704	BOX; METER	000000	000000
5892637050	5-8926	3705	COVER; METER BOX	000000	000000
5892637060	5-8926	3706	PANEL; METER	000000	000000
5892637080	5-8926	3708	PANEL;METER	000000	000000
5892637090	5-8926	3709	COVER; A	000000	000000
5892637100	5-8926	3710	RUBBER	000000	000000
5892637110	5-8926	3711	COVER; B	000000	000000
5892637160	5-8926	3716	PANEL; METER	000000	000000
5892637170	5-8926	3717	BRACKET; RELAY	000000	000000
5893100230	5-8931	0023	CLUTCH ASM.	000000	000000
5893100231	5-8931	0023	CLUTCH ASM.	000000	000000
5893100450	5-8931	0045	CLUTCH ASM	000000	000000
5893102030	5-8931	0203	ADAPTER; FLYWHEEL	000000	000000
5893102050	5-8931	0205	BOSS ASM.; FLANGE	000000	000000
5893102070	5-8931	0207	SHOE ASM.; W/SET	000000	000000
5893102090	5-8931	0209	DRUM ASM.	000000	000000
5893111020	5-8931	1102	HOUSING; CLUTCH, W/BUSH	000000	000000
5893113070	5-8931	1307	CASE; BRG., POWER DRIVE	000000	000000
5893113080	5-8931	1308	COVER; BEARING CASE	000000	000000
5893113090	5-8931	1309	PACKING; COVER	000000	000000

5893113121	5-8931	1312	COVER ASM; CLUTCH	000000	000000
5893132030	5-8931	3203	BLOCK ASM.; SHIFT	000000	000000
5893132040	5-8931	3204	SHIFT BLOCK;CLU	000000	000000
5893132080	5-8931	3208	BLOCK; SHIFT, CLUTCH	000000	000000
5893134030	5-8931	3403	SUPPORT; CLUTCH FORK	000000	000000
5893143010	5-8931	4301	FIXING BOLT	000000	000000
5893312010	5-8933	1201	COVER,FRONT,	000000	000000
5893312040	5-8933	1204	COVER; FRONT, MISSION CAS	000000	000000
5893800011	5-8938	0001	POWER DRIVE	000000	000000
5893800420	5-8938	0042	POWER DRIVE ASM.;	000000	000000
5893851191	5-8938	5119	SHAFT,POWER	000000	000000
5893851250	5-8938	5125	SHAFT; POWER DRIVE	000000	000000
5897101203	5-8971	0120	REPAIR KIT; ENG. TOP O/H	000000	000000
5898292040	5-8982	9204	BLOCK; SHIFT FORK SHAFT	000000	000000
5898292090	5-8982	9209	HARNESS; CABLE,INSTRUMENT	000000	000000
5898292130	5-8982	9213	HARNESS	000000	000000
5899117410	5-8991	1741	CRANKSHAFT ASM	000000	000000
5899498140	5-8994	9814	LOCK NUT;MAIN	000000	000000
5942511101	5-9425	1110	CARTRIDGE, OIL	000000	000000
5971080750	5-9710	8075	FOOT; ENG	000000	000000
6BD1MTC321	6BD1MTC3-212T		UM6BD1MTC3 MANUAL	000000	000000
7777777777			TEST P/N	000000	000000
7843696470			BRACKET; OIL FILLER	000000	000000
7941357230	7-9413	5723	PIN; LEVER, PLATE	000000	000000
8003634400	8-0036	3440	WASHER, (TWO SPD R/AXL SH	000000	000000
8011040390			COIL ASM; IGN	000000	000007
8086283000	8-0862	8300	GASKET;SCREEN	000000	000000
8086329490			SCREEN ASM	000000	000000
8086333800	8-0863	3380	GASKET;PAN	000000	000000
8086389600	8-0863	8960	SCREEN ASM.	000000	000005
8086485290	8-0864	8529	GASKET; PAN	000000	000006
8093634291			CONTROLLER; MOD	000000	000001
8093732690			SENSOR; MAP	000000	000000
8093732691	8-0937	3269	SENSOR; MAP	000000	000000
8100359050			RETAINER; A/CABLE	000000	000000
8103900350	8-1039	0035	CORD,ENG COOL HTR	000000	000000
8113416211	8-1134	1621	HOUSING; FLYWHEEL	000000	000000
8115038670	8-1150	3867	BOLT, HEX, M6X1X20, W/LK	000000	000002
8115093760	8-1150	9376	NUT; CLU HSG/FUEL PIPE	000000	000000
8121468300	8-1214	6830	SENSOR ; MAT	000248	000283
8124901550			FILTER; TRANS	000004	000004
8126236710	8-1262	3671	SENSOR ASM; MAP	000000	000078
8150319471	8-1503	1974	HEATER; BLOCK	000000	000018
8150983950	8-1509	8395	BRACKET,GEN & A/C CMPR(W/	000000	000002
8152559660			CYLINDER,CLU MAS	000000	000000
8156191420	8-1561	9142	PACKING*INVALID*	000000	000000
8156619930			P/B SHOE KIT	000000	000023

8160406090			SENSOR;MAP	000000	000000
8161720000			SENSOR; MAP	000000	000009
8162184291			CONTROL UNIT	000000	000000
8162413490			CONTROLLER; MODULE, ENG	000000	000000
8162520190			CONTROL UNIT	000000	000002
8192102840			FILTER ASM, OIL	000002	000084
8250107920			FILTER; OIL (PKG OF 12)	000002	000005
8250111220	8-2501	1122	FILTER; TRANS	000000	000003
8250146930			FILTER; OIL,	000000	000000
8281397750	8-2813	9775	SENSOR;MAP	000000	000000
8811100280			*INVALID*	000000	000000
8841488320	8-8414	8832	BOLT; (L=125)	000000	000000
8888888888			TEST PLANNING	000000	000000
8905304540			CRANKSHAFT	000000	000001
8912151150	8-9121	5115	S T U D	000000	000000
8913253970	8-9132	5397	PLATE; GOVERNOR	000000	000000
8913550310	8-9135	5031	GASKET	000000	000000
8920635890			DAMPER; CRANK SHAFT	000000	000002
8920660270			CABLE; IGN PLUG	000000	000000
8920660280			CABLE; IGN PLUG	000000	000000
8920660290			CABLE; IGN PLUG	000000	000000
8920660300			CABLE; IGN PLUG	000000	000020
8920678210			THERMOSTAT	000000	000001
8921420090			ELEMNT; OIL FILTER	000000	000000
8922350750	8-9223	5075	SCREW KIT	000000	000000
8931502040	8-9315	0204	TACHO METER ASM	000000	000000
8931562430			ELEMENT; OIL FILTER	000000	000000
8931562980			CARTRIDGE; OIL FILTER	000000	000000
8931563000			ELEMENT; OIL FILTER	000000	000000
8931568600			ELEMENT; OIL	000000	000000
8940083420	8-9400	8342	PIN,A/TRANS MOD CBL CLV	000000	000000
8940088420	8-9400	8842	BOLT;STRTR GND CBL M10X20	000000	000000
8940293010	8-9402	9301	HOSE; RUBBER	000000	000000
8940315300	8-9403	1530	PLUG; SCREW,LK	000000	000000
8940354550	8-9403	5455	GEAR SET	000000	000000
8941001890	8-9410	0189	BELT; FAN	000000	000000
8941002350	8-9410	0235	SILENCER ASM	000000	000000
8941002352	8-9410	0235	SILENCER ASM	000000	000000
8941002910	8-9410	0291	SHAFT;ROCKER AR	000000	000000
8941003550	8-9410	0355	PISTON RING SET	000000	000000
8941003590	8-9410	0359	CLIP; "A",FUEL PIPE	000000	000002
8941003600	8-9410	0360	CLIP; "B",FUEL PIPE	000000	000003
8941004510	8-9410	0451	BRACKET; GENERA	000000	000000
8941004540	8-9410	0454	PULLEY;CRANK	000000	000000
8941004550	8-9410	0455	PULLEY;A/C CRAN	000000	000000
8941004551	8-9410	0455	PULLEY;A/C CRAN	000000	000000
8941004552	8-9410	0455	PULLEY; P.T.O. DRIVE	000000	000002

8941006610	8-9410	0661	OVERHAUL KIT;AT	000000	000000
8941008020	8-9410	0802	ROD ASM; CONN	000000	000000
8941008190	8-9410	0819	PUMP ASM.; OIL	000000	000000
8941008191	8-9410	0819	JPCP ASM.; OIL	000000	000000
8941008192	8-9410	0819	PUMP ASM;P/S	000000	000000
8941010210	8-9410	1021	CARTRIDGE, OIL	000000	000000
8941010351			ROD ASM; CONN.	000000	000000
8941010560	8-9410	1056	BRAKE ASM.; PAR	000000	000000
8941010561	8-9410	1056	BRAKE ASM;PAR	000000	000000
8941013190	8-9410	1319	COVER;SHIFT ROD	000000	000009
8941013200	8-9410	1320	SPRING;CLUSTER GEAR	000000	000002
8941013250	8-9410	1325	GSKT;QUAD.BOX	000000	000000
8941013251	8-9410	1325	GASKET;QUADRANT	000000	000028
8941014771			SHAFT; PROP., 2	000000	000000
8941014772			SHAFT; PROP., 2	000000	000000
8941014773			SHAFT; PROP., 2	000000	000003
8941016384	8-9410	1638	LEVER;CHANGE	000000	000000
8941016401	8-9410	1640	LEVER; SELECT,	000000	000001
8941016420	8-9410	1642	BRACKET; RETURN	000000	000001
8941016430	8-9410	1643	SPIDER; CHANGE	000000	000000
8941016431	8-9410	1643	SPIDER; CHANGE	000000	000002
8941016440	8-9410	1644	PIN; SELECT, FO	000000	000000
8941016441	8-9410	1644	PIN; SELECT, FO	000000	000000
8941016442	8-9410	1644	PIN;SELECT,FO	000000	000015
8941016850	8-9410	1685	LEVER; SELECT E	000000	000000
8941016851	8-9410	1685	LEVER; SELECT,EXTERNAL	000000	000000
8941016852	8-9410	1685	LEVER; SELECT,EXTERNAL	000001	000000
8941017060	8-9410	1706	CLIP; AIR DUCT	000000	000000
8941017661	8-9410	1766	COVER;HD. COVER, OUTER	000000	000000
8941017671	8-9410	1767	GASKET;CYL,HEAD	000000	000000
8941017690	8-9410	1769	ELEMENT; AIR CLEANER	000000	000000
8941019980	8-9410	1998	BACK ASM;RR.	000000	000000
8941019984	8-9410	1998	BACK ASM;RR.	000000	000000
8941020590	8-9410	2059	ROD ASM.; CONN.	000000	000000
8941026630	8-9410	2663	SUNSHADE ASM.	000010	000000
8941033050	8-9410	3305	FOOT; ENGINE, C	000000	000000
8941033060	8-9410	3306	FOOT; ENGINE, C	000000	000001
8941033150	8-9410	3315	BLOCK ASM;CYL.	000000	000000
8941033159	8-9410	3315	BLOCK ASM;CYL.	000000	000000
8941033230	8-9410	3323	HOT PLUGS	000000	000000
8941035130	8-9410	3513	NUT;WING COVER	000000	000000
8941036290			BOLT; CONVERTOR/EGR PIPE	000000	000000
8941036291			BOLT; CONVERTOR/EGR PIPE	000000	000000
8941036292			BOLT; CONVERTOR/EGR PIPE	000000	000000
8941037920	8-9410	3792	AUTOMATIC TRANSMISSION AS	000000	000000
8941039490	8-9410	3949	HOSE;WATER	000000	000000
8941041330	8-9410	4133	TRANS ASM.	000000	000000

8941041360	8-9410	4136	SHAFT;VALVE LEV	000000	000002
8941041370	8-9410	4137	HOUSING;TORQUE	000000	000000
8941041380	8-9410	4138	LEVER;SELECT CO	000000	000000
8941041381	8-9410	4138	LEVER;SELECT CO	000000	000000
8941042730	8-9410	4273	AIR FILTER	000000	000000
8941045890	8-9410	4589	PACKING;OIL PIP	000007	000147
8941046130	8-9410	4613	RUBBER;SUPPORT	000000	000000
8941046140	8-9410	4614	PLUG; VALVE	000000	000000
8941046150	8-9410	4615	PLUG;VALVE	000056	000000
8941046704			LAMP ASM	000000	000000
8941046960	8-9410	4696	GROMMET/SEAL;RUBBR PCV HO	000000	000013
8941047260	8-9410	4726	METAL KIT;CRK	000000	000000
8941047551	8-9410	4755	PUMP ASM; WATER	000000	000000
8941049490	8-9410	4949	RING SET; PISTON	000000	000005
8941049540	8-9410	4954	RING SET; PISTON, STD 3-R	000000	000001
8941049930	8-9410	4993	GASKET; INJ NOZZLE 3KC1/3	000000	000005
8941049970	8-9410	4997	HEAD ASM;CYL	000000	000000
8941049971	8-9410	4997	HEAD ASM;OIL	000000	000000
8941049980	8-9410	4998	HEAD ASM;CYL	000000	000001
8941051141	8-9410	5114	PLUG; OIL PUMP	000000	000000
8941051142	8-9410	5114	PLUG;OIL PUMP	000000	000002
8941051151	8-9410	5115	BUSHING; OIL PU	000001	000000
8941051412	8-9410	5141	LEVER; SHIFT,INTERNA	000000	000000
8941051621	8-9410	5162	STUD;EXH.PIPE	000425	000414
8941052920	8-9410	5292	SEAT; VALVE INSERT, INLET	000000	000000
8941052930	8-9410	5293	SEAT; VALVE INSERT, EXHAU	000000	000000
8941054560			WEATHERSTRIP,LH	000000	000000
8941054561	8-9410	5456	WEATHERSTRIP,LH	000000	000000
8941060403	8-9410	6040	WASHER; CORRUGATED 3KC1/3	000000	000465
8941060551	8-9410	6055	SHIELD; HEAT 3KC1/3KR1	000000	000126
8941062760	8-9410	6276	HOLDER ASM;NOZZLE	000002	000021
8941066603	8-9410	6660	CRANKSHAFT ASM.	000000	000000
8941074990	8-9410	7499	CLIP; (B) FUEL	000000	000008
8941075000	8-9410	7500	CLIP; (A) FUEL	000000	000013
8941075310	8-9410	7531	PIPE;NIPPLE,MIXTURE,VENT	000000	000000
8941075470	8-9410	7547	SPRING;RETURN	000000	000000
8941075500	8-9410	7550	BOLT; CONN. ROD	000000	000000
8941075501	8-9410	7550	BOLT;CONN ROD	000005	000000
8941075502	8-9410	7550	BOLT;CONN ROD	000000	000000
8941075570	8-9410	7557	PLUG; OIL DRAIN	001551	000000
8941075600	8-9410	7560	NIPPLE; OIL FEED	000000	000000
8941075640	8-9410	7564	PACKING; OIL DR	000111	000023
8941075661	8-9410	7566	BOLT;COVER	000000	000000
8941075662	8-9410	7566	BOLT;COVER	000000	000000
8941075680	8-9410	7568	SEAL; OIL, CRAN	000000	000000
8941075750	8-9410	7575	RING; SNAP,PISTON PIN	000000	000000
8941075751	8-9410	7575	RING; SNAP,PISTON PIN	000000	000388

8941075850	8-9410	7585	GASKET;TIMING	000000	000000
8941075860	8-9410	7586	GASKET; COVER	000000	000000
8941075970	8-9410	7597	KEY; CRANKSHAFT	000000	000231
8941076030	8-9410	7603	CUP;RUBBER VAC	000000	000000
8941076180	8-9410	7618	SPRING,ADJ SCREW,PRKG BRK	000035	000020
8941076201	8-9410	7620	HOSE; FUEL L=100	000000	000000
8941076400	8-9410	7640	3USHING; CHANGE	000000	000063
8941076410	8-9410	7641	WASHER; CHANGE	000000	000017
8941076590	8-9410	7659	CLIP;HARNES,WT	000000	000019
8941076780	8-9410	7678	CAP; OIL PIPE	000000	000032
8941077130	8-9410	7713	BOLT; EYE; OIL	000000	000000
8941077131	8-9410	7713	BOLT; EYE, OIL	000000	000000
8941077132	8-9410	7713	BOLT; EYE, OIL	000000	000000
8941077150	8-9410	7715	PACKING; OIL PI	000103	000195
8941077180	8-9410	7718	HOSE;TURBO TO I	000001	000001
8941077190	8-9410	7719	VALVE ASM.; CHE	000000	000002
8941077260	8-9410	7726	STUD*	000000	000115
8941077620	8-9410	7762	CLIP; FUEL TANK	000000	000000
8941077681	8-9410	7768	HOSE; RUBBER 4JC1	000003	000000
8941077760	8-9410	7776	STUD; CARTRIDGE FIX	000000	000000
8941077850	8-9410	7785	BOLT; JOINT	000000	000000
8941077930	8-9410	7793	PLUG;A/CL PIPE	000000	000000
8941079212			FUEL FILTER	000000	000000
8941080751	8-9410	8075	DOWEL; CAM BRKT SET	000004	000015
8941083070	8-9410	8307	VALVE;EXH	000042	000069
8941083372	8-9410	8337	GAUGE ASM; OIL	000000	000000
8941083442	8-9410	8344	FUEL FILTER & HEATER	000000	000000
8941083443	8-9410	8344	FUEL FILTER & HEATER	000000	000000
8941083580	8-9410	8358	SPRING;DIAPH VENTILATOR	000020	000000
8941083600	8-9410	8360	HOSE;FLEX,CLU	000000	000000
8941083601	8-9410	8360	HOSE; FLEX. CLU	000000	000000
8941083602	8-9410	8360	HOSE; FLEX. CLU	000000	000004
8941094695			ANTENNA	000000	000000
8941094697			ANTENNA	000000	000000
8941095074			SHAFT ASM.; FLE	000000	000000
8941095075			SHAFT ASM;FLEX	000010	000000
8941095441			CYLINDER	000000	000000
8941095531			GASKET; CYL HD	000000	000000
8941095532	8-9410	9553	GASKET;CYL HEAD	000000	000000
8941096290			BRACKET; B.P.T	000000	000000
8941096811	8-9410	9681	HOSE; RUBBER BY-PASS 4JB1	000031	000022
8941097060	8-9410	9706	BOLT; SHAFT 4JA/B1	000000	000000
8941097061	8-9410	9706	BOLT; SHAFT 4JA/B1	000000	000189
8941097070	8-9410	9707	GASKET;BRKT TO CASE	000000	000000
8941097300	8-9410	9730	PIPE ASM.; FUEL	000000	000003
8941097630	8-9410	9763	NUT/TERMNAL;LEAD WIRE,STA	000000	000005
8941097651	8-9410	9765	HOSE; RUBBER BY-PASS 4JA1	000000	000006

8941097910	8-9410	9791	CAP,OIL FILLER	000000	000045
8941098900	8-9410	9890	STUD;EXH.MANIFO	000000	000034
8941099014	8-9410	9901	MANIFOLD; INLET	000000	000000
8941099130	8-9410	9913	SHAFT; IDLE GEAR B 4JA/B1	000000	000000
8941099131	8-9410	9913	SHAFT; IDLE GEAR	000000	000099
8941100440	8-9411	0044	PAN ASM.; OIL (000000	000001
8941101110	8-9411	0111	DIAPHRAGM ASM; CV	000002	000020
8941101440	8-9411	0144	LINER; CYL 4JA1	000000	000000
8941101442	8-9411	0144	LINER; CYL 4JA1	000000	000000
8941102643			HOSE; WATER	000000	000000
8941102710	8-9411	0271	BEARING; IDLER	000000	000064
8941102792			RIGHT DOOR GLASS	000000	000000
8941102802			DOOR GLASS	000000	000000
8941104540	8-9411	0454	PULLEY; CRANKSHAFT	000000	000000
8941104791	8-9411	0479	GEAR; CAMSHAFT	000000	000000
8941104800	8-9411	0480	PLATE; THRUST 4JA/B1	000000	000000
8941104801	8-9411	0480	PLATE; TRUST	000000	000124
8941104871	8-9411	0487	GASKET; GEAR CASE	000000	000000
8941105300	8-9411	0530	PISTON RING SET	000000	000000
8941105310	8-9411	0531	PISTON RING SET	000000	000000
8941105590	8-9411	0559	CONTROLLER;OIL	000000	000000
8941105591	8-9411	0559	CONTROLLER;OIL	000154	000033
8941105600	8-9411	0560	UNIT;BEARING	000000	000000
8941105743			MOUNT	000000	000000
8941109270	8-9411	0927	METAL KIT;CRK	000000	000000
8941111461			BEZEL	000000	000000
8941114460			ELEMENT	000000	000000
8941114882			CYLINDER	000003	000000
8941114970			SHOE ASM; B.	000000	000000
8941116150	8-9411	1615	JOINT	000001	000000
8941116180			STUD;CHARGER	000000	000000
8941116190			STUD;MANIFOLD	000000	000000
8941116191	8-9411	1619	STUD;MANIFOLD	000010	000000
8941116220	8-9411	1622	CLAMP;DUCT IN	000000	000000
8941116380	8-9411	1638	NUT;EXH.PIPE FI	000105	000140
8941116580	8-9411	1658	SHIM; INJ.	000000	000000
8941116590	8-9411	1659	SHIM; INJ.	000000	000000
8941116600	8-9411	1660	SHIM; INJ.	000000	000000
8941116610	8-9411	1661	SHIM; INJ.	000000	000000
8941116620	8-9411	1662	SHIM; INJ.	000000	000000
8941116630	8-9411	1663	SHIM; INJ.	000000	000000
8941116640	8-9411	1664	SHIM; INJ.	000000	000000
8941116650	8-9411	1665	SHIM; INJ.	000000	000000
8941116710	8-9411	1671	VALVE;REGULATOR	000000	000000
8941117500	8-9411	1750	SEAL; CRANKSHAFT	000000	000000
8941117501	8-9411	1750	SEAL; CRANKSHAFT	000000	000027
8941118993	8-9411	1899	MOUNTING ASM;ENGINE	000000	000000

8941118994	8-9411	1899	MOUNTING ASM;ENGINE	000000	000000
8941120440	8-9411	2044	CONNECTOR ASM	000000	000000
8941120450	8-9411	2045	HOUSING	000000	000000
8941120460	8-9411	2046	SEAL	000000	000004
8941126251			CYL AM;	000000	000000
8941128920	8-9411	2892	BRACKET; ENG. M	000000	000000
8941128922	8-9411	2892	BRACKET; ENG. M	000000	000000
8941129110	8-9411	2911	RELAY; TAIL LAM	000016	000009
8941129120	8-9411	2912	RELAY;STARTER	000034	000014
8941129890	8-9411	2989	SCREW,SEMS,STEP	000000	000000
8941132321			STEERING UNIT; FRT. SUSP.	000000	000000
8941140240	8-9411	4024	BOLT;RADIATOR	000000	000000
8941140241	8-9411	4024	BOLT; FAN GUIDE	000000	000000
8941140480	8-9411	4048	PIN; PISTON	000000	000028
8941140491	8-9411	4049	RING; SNAP- PISTON	000000	000147
8941140540	8-9411	4054	BUSH; CONN ROD	000000	000015
8941144910	8-9411	4491	PUMP ASM;OIL	000000	000000
8941144911	8-9411	4491	PUMP ASM.; OIL	000000	000001
8941145120	8-9411	4512	SPRING VAL	000001	000000
8941145130	8-9411	4513	HOLDER; NOZZLE	000000	000000
8941145150	8-9411	4515	HOLDER; NOZZLE C240	000000	000009
8941145610	8-9411	4561	RETAINER; CRANK	000000	000000
8941145611	8-9411	4561	RETAINER; CRANK	000000	000000
8941145630	8-9411	4563	PACKING; RETAIN	000000	000000
8941145641	8-9411	4564	METAL KIT; CRANK	000000	000001
8941145642	8-9411	4564	METAL KIT; CRANK	000000	000000
8941145650	8-9411	4565	THRUST BRG.	000000	000000
8941145651	8-9411	4565	THRUST;BRG	000000	000004
8941145652	8-9411	4565	THRUST;BRG	000000	000004
8941145770	8-9411	4577	COVER; DUST	000000	000000
8941145790	8-9411	4579	SEAT; VALVE SPRING	000138	000459
8941145800	8-9411	4580	PIPE ASM.; OIL,	000000	000000
8941145801	8-9411	4580	PIPE ASM.; OIL,	000002	000002
8941145802	8-9411	4580	PIPE ASM.; OIL,	000000	000001
8941145831	8-9411	4583	COVER;OIL	000000	000000
8941145930	8-9411	4593	PACKING;THERMO	000000	000000
8941145960	8-9411	4596	PACKING; INLET	000000	000000
8941146550	8-9411	4655	PARTIAL ENGINE	000000	000000
8941146551	8-9411	4655	PARTIAL ENG.	000000	000000
8941146552	8-9411	4655	PARTIAL ENGINE	000000	000000
8941146553	8-9411	4655	PARTIAL ENG.	000000	000000
8941146554	8-9411	4655	PARTIAL ENG.	000000	000000
8941146555	8-9411	4655	PARTIAL ENGINE	000000	000000
8941147270	8-9411	4727	IMPELLER	000000	000000
8941147600	8-9411	4760	PAN ASM; OIL	000000	000000
8941148810			ELEMENT, A/CLNR	000000	000000
8941151130	8-9411	5113	SCREW; BLEEDER/BREATHER	000000	000040

8941151790	8-9411	5179	RETAINER;BALL	000000	000000
8941151800	8-9411	5180	BALL; STEEL	000000	000000
8941151820	8-9411	5182	SHIM;VLV T-0.5	000000	000000
8941151830	8-9411	5183	SHIM VLV;T-0.2	000000	000000
8941152280	8-9411	5228	PLATE;BTR HEAD	000000	000000
8941152430	8-9411	5243	GASKET SET;ENG	000000	000000
8941152431	8-9411	5243	GASKET SET;ENG.	000000	000000
8941152432	8-9411	5243	GASKET SET;ENG	000000	000000
8941152433	8-9411	5243	GASKET SET;ENG	000000	000000
8941155650			STARTER	000000	000000
8941155670	8-9411	5567	STARTER ; NEW	000000	000000
8941155680	8-9411	5568	CLUTCH;STARTER	000000	000000
8941155690	8-9411	5569	CLUTCH ASM.	000001	000000
8941158353			CYLINDER ASM; B	000000	000000
8941158560			CABLE ASM.THROT	000000	000018
8941160800	8-9411	6080	PIN;ANTI-LASH	000000	000000
8941161140			BEARING, BALL	000000	000000
8941161960			WHEEL; DISC	000000	000002
8941161981			WHEEL RIM	000000	000002
8941162763			DRAG LINK	000000	000000
8941163010	8-9411	6301	BUSHING; DRIVEN GEAR, SPDM	000000	000000
8941163011	8-9411	6301	BUSHING; DRIVEN GEAR, SPDM	000000	000000
8941163020	8-9411	6302	BUSHING;DRIVEN	000000	000000
8941163021	8-9411	6302	BUSHING;DRIVEN	000000	000000
8941163030	8-9411	6303	BUSHING;DRIVEN GEAR, SPDO	000000	000000
8941163031	8-9411	6303	BUSHING;DRIVEN GEAR, SPDO	000000	000000
8941163253	8-9411	6325	BLOCK ASM; CYL.	000000	000000
8941163254	8-9411	6325	BLOCK ASM; CYL.	000000	000000
8941163898			STEM ASM.	000000	000000
8941163900			RELAY ASM	000000	000000
8941164080	8-9411	6408	PIPE ASM.; INJ.	000000	000000
8941164081	8-9411	6408	PIPE;INJ.#1	000000	000000
8941164082	8-9411	6408	PIPE;INJ.#1	000000	000010
8941164090	8-9411	6409	PIPE ASM.; INJ.	000000	000000
8941164091	8-9411	6409	PIPE; INJ.#2	000000	000000
8941164100	8-9411	6410	PIPE ASM.; INJ.	000000	000000
8941164101	8-9411	6410	PIPE; INJ.#3	000000	000000
8941164102	8-9411	6410	PIPE; INJ.#3	000000	000008
8941164110	8-9411	6411	PIPE ASM.; INJ.	000000	000000
8941164111	8-9411	6411	PIPE; INJ.#4	000000	000000
8941164112	8-9411	6411	PIPE; INJ.#4	000000	000002
8941164330	8-9411	6433	CVR ASM;FRT,GEN	000000	000005
8941164350	8-9411	6435	BOLT;GENERATOR	000000	000000
8941165690	8-9411	6569	GOVERNOR ASM	000000	000000
8941165700	8-9411	6570	GOVERNOR ASM	000000	000000
8941165730	8-9411	6573	PAWL;PARKING LO	000000	000001
8941165740	8-9411	6574	PLATE;PARKING	000000	000000

8941165750	8-9411	6575	BODY ASM;VALVE	000000	000000
8941165780	8-9411	6578	BODY ASM;VALVE	000000	000000
8941165810	8-9411	6581	SPRING;ACCUMULA	000000	000000
8941165840			CLUTCH ASM;ONE	000000	000000
8941165850			GEAR SET;FRT PL	000000	000000
8941168871	8-9411	6887	BRACKET; CHANGE	000000	000004
8941169160	8-9411	6916	RADIATOR CAP 2/3KC1	000000	000000
8941169161	8-9411	6916	RADIATOR CAP 2/3KC1	000000	000000
8941169162	8-9411	6916	RADIATOR CAP 2/3KC1	000000	000000
8941169304	8-9411	6930	VALVE; INLET	000000	000006
8941169314	8-9411	6931	VALVE; EXHAUST 3KC1	000000	000018
8941169341	8-9411	6934	NOZZLE ASM; INJ 3KC/3KR1	000000	000000
8941169342	8-9411	6934	NOZZLE ASM; INJ 3KC/3KR1	000000	000000
8941169343	8-9411	6934	NOZZLE ASM; INJ 3KC/3KR1	000000	000015
8941169872	8-9411	6987	BRACKET; FUEL CUT	000000	000000
8941169880	8-9411	6988	PACKING; INLET	000000	000004
8941170231	8-9411	7023	NOZZLE & HOLDER	000000	000000
8941170320	8-9411	7032	METAL SET; MAIN	000000	000000
8941170321	8-9411	7032	METAL SET; MAIN	000000	000014
8941170322	8-9411	7032	METAL SET; MAIN	000000	000000
8941170330	8-9411	7033	BOLT; BANJO FUEL	000000	000000
8941170331	8-9411	7033	BOLT; BANJO FUEL	000000	000000
8941170810			TORSION BAR	000000	000005
8941178512	8-9411	7851	CLEANER ASM; AIR	000000	000000
8941185760	8-9411	8576	CONNECTOR; WIRING HARNESS	000005	000004
8941185881	8-9411	8588	BUSHING; FRT SPR,RR	000000	000000
8941186560			SPRING; PUMP	000000	000000
8941186570			SEAT ASM.; CHECK	000000	000000
8941187270			PLUNGER; ACCEL	000000	000000
8941188250	8-9411	8825	BUSHING; CONN.	000000	000000
8941188262			PISTONS	000000	000000
8941188300			METAL KIT;CRK	000000	000000
8941188560	8-9411	8856	RELAY	000000	000000
8941189120			RELAY;A/C	000000	000001
8941189941	8-9411	8994	HOSE; RUBBER, RSV TANK	000000	000000
8941192883	8-9411	9288	ADAPTER ASM.	000000	000000
8941192892	8-9411	9289	ADPTER; EXH. TU	000000	000001
8941192910	8-9411	9291	MANIFOLD ASM; EXHAUST	000000	000000
8941192925	8-9411	9292	MANIFOLD; EXH.	000000	000000
8941192926	8-9411	9292	MANIFOLD;EXH.	000000	000003
8941192956	8-9411	9295	MANIFOLD; EXHAUST	000000	000000
8941194700			MASTER VAC ASM	000000	000000
8941194702			MASTER VAC ASM	000000	000000
8941195092			MOUNTING	000000	000000
8941195100			PISTON:OVSI.	000000	000000
8941195300	8-9411	9530	COVER; WATER PUMP BODY	000000	000005
8941195310	8-9411	9531	PACKING; COVER TO BODY	000010	000000

8941195320	8-9411	9532	JOINT	000000	000003
8941195450			PISTON	000000	000000
8941196340			PISTON RING SET	000000	000004
8941197970	8-9411	9797	WASHER; SPRING	000000	000019
8941198161	8-9411	9816	PUMP ASM.OIL	000000	000000
8941198162	8-9411	9816	PUMP ASM;OIL	000000	000000
8941198164	8-9411	9816	PUMP ASM;OIL	000000	000000
8941198165	8-9411	9816	PUMP ASM;OIL	000000	000000
8941198166	8-9411	9816	PUMP ASM; OIL	000000	000000
8941198830	8-9411	9883	COVER;TOP CHAMB	000000	000000
8941198831	8-9411	9883	COVER;TAP CHMBR	000000	000000
8941198833	8-9411	9883	COVER;TAP CHMBR	000000	000000
8941199931	8-9411	9993	GEAR;3RD,MAIN S	000000	000000
8941199941	8-9411	9994	GEAR;2ND,MAIN S	000000	000000
8941199950	8-9411	9995	GEAR ASM;5TH,MA	000000	000000
8941200080	8-9412	0008	BOLT;	000000	000027
8941202420	8-9412	0242	METAL SET	000000	000000
8941207680	8-9412	0768	KIT; WATER PUMP	000000	000000
8941207681	8-9412	0768	KIT; WATER PUMP	000000	000000
8941208510	8-9412	0851	FILTER; FUEL (SPIN-ON)	000000	000000
8941209981	8-9412	0998	BRACKET; IDLER	000000	000000
8941209982	8-9412	0998	BRACKET; IDLER	000000	000000
8941210140	8-9412	1014	RING SET; PISTON	000005	000000
8941210150	8-9412	1015	RING SET; PISTON	000000	000000
8941210360	8-9412	1036	TANK,SURGE	000000	000000
8941210361	8-9412	1036	TANK,SURGE	000000	000000
8941210371	8-9412	1037	TANK; SURGE, (W	000000	000000
8941211130	8-9412	1113	CLIP; PCV HOSE	000000	000000
8941211131	8-9412	1113	CLIP; PCV HOSE	000000	000000
8941211140	8-9412	1114	CLIP; WIRE, OIL C	000000	000000
8941211521	8-9412	1152	SWITCH THERMO	000000	000000
8941211660	8-9412	1166	CORE ASM;HEATER	000000	000000
8941211732			MANIFOLD;EXH	000000	000000
8941211733	8-9412	1173	MANIFOLD; EXH.	000000	000000
8941211780	8-9412	1178	BRG; BALL,GENER	000000	000005
8941214339	8-9412	1433	BLOCK ASM; CYL 4JB1-PW	000000	000000
8941214359	8-9412	1435	BLOCK ASM; CYL 4JA1	000000	000000
8941214925	8-9412	1492	RELAY LEVER ASM;3RD,SELEC	000000	000000
8941214940	8-9412	1494	OIL FILTER;DSEL	000000	000030
8941215660	8-9412	1566	CLIP; FUEL/BREATHER HOSE	000000	000000
8941216015			HANDBRAKE CABLE	000000	000000
8941216200	8-9412	1620	SHIM; INJ. PUMP (T=2.40)	000000	000000
8941216270	8-9412	1627	BOLT;ACTUATOR	000000	000014
8941216310	8-9412	1631	OVERHAUL GASKET SET	000000	000000
8941216313	8-9412	1631	OVERHAUL GASKET SET	000000	000000
8941220521	8-9412	2052	FOOT; ENGINE LH 4JA1/B1	000006	000000
8941221340	8-9412	2134	DISC ASM;CLUCH	000000	000000

8941222550	8-9412	2255	STIFFNER; L.H. 4JC1	000000	000000
8941222553	8-9412	2255	STIFFNER; L.H. 4JC1	000000	000000
8941222562	8-9412	2256	STIFFNER; R.H. 4JC1	000000	000000
8941222563	8-9412	2256	STIFFNER; R.H. 4JC1	000000	000000
8941222603	8-9412	2260	NOZZLE ASM; INJ.	000000	000000
8941222605	8-9412	2260	NOZZLE ASM; INJ.	000000	000000
8941222624	8-9412	2262	NOZZLE ASM.	000000	000000
8941222625	8-9412	2262	NOZZLE ASM.	000000	000007
8941222632	8-9412	2263	HOLDER; NOZZLE 4JA/JB1	000000	000000
8941222633	8-9412	2263	HOLDER; NOZZLE 4JA/JB1	000002	000005
8941222640	8-9412	2264	NOZZLE; INJ.	000000	000000
8941222641	8-9412	2264	NOZZLE; INJ.	000000	000000
8941222642	8-9412	2264	NOZZLE; INJ.	000000	000000
8941222650	8-9412	2265	PULLEY;CRANKSHA	000000	000022
8941222660	8-9412	2266	PTO PULLEY	000001	000000
89412226790	8-9412	2679	CLIP;RUBBER HOSE	000206	000261
89412227130	8-9412	2713	ANGLE	000000	000016
89412228870	8-9412	2887	SCREW;PLATE	000000	000000
89412229740	8-9412	2974	TUBE;OIL FILLER	000000	000000
89412229750	8-9412	2975	PAN ASM;OIL	000000	000000
8941230220	8-9412	3022	CORE ASM;HEATER	000000	000000
8941230430	8-9412	3043	NUT; FLANGE/PULLEY,GEN	000000	000015
8941230470	8-9412	3047	SCREW; FRT COVER	000000	000001
8941230480	8-9412	3048	BOLT;STUD/RECTIFIER,GEN.	000000	000000
8941230500	8-9412	3050	BEARING; ROTOR GEN	000000	000000
8941230510	8-9412	3051	COVER; FELT WASHER,ROTOR	000000	000000
8941230560	8-9412	3056	BRUSH; SUB	000000	000000
8941230570	8-9412	3057	SPRING; BRUSH,GEN	000031	000000
8941230590	8-9412	3059	BUSH; INSULATION TERMINAL	000000	000000
8941230610	8-9412	3061	SCREW; SEMS	000000	000057
8941230630	8-9412	3063	TERMINAL; RECTIFIER,GEN	000000	000000
8941230640	8-9412	3064	NUT; RECTIFIER,GEN	000090	000008
8941230660	8-9412	3066	SCREW; SEMS	000000	000000
8941233493	8-9412	3349	CRANKSHAFT	000000	000000
8941233505	8-9412	3350	CRANKSHAFT	000000	000000
8941233900	8-9412	3390	SWITCH,WARNING	000000	000000
8941234470	8-9412	3447	COLLAR;SHIFT	000000	000000
8941235260	8-9412	3526	CLAMP;RUBBER HOSE	000000	000000
8941235261	8-9412	3526	CLAMP;RUBBER HOSE	000000	000000
8941235300	8-9412	3530	WASHER; PL.,HANG,CLIP	000001	000000
8941236230	8-9412	3623	PACKING; OIL FILLER	000000	000000
8941236231	8-9412	3623	GASKET;OIL FILLER CAP,ENG	000000	000213
8941237350	8-9412	3735	PULLEY;BALANCER	000000	000000
8941240660			SPRING; PAD	000000	000000
8941241840	8-9412	4184	COOLER ASM;OIL	000000	000000
8941244220			HOSE;RUB OIL RE	000000	000000
8941244230	8-9412	4423	HOSE;RUB OIL L=610	000000	000000

8941244750	8-9412	4475	COVER;CYL HEAD	000002	000000
8941245830	8-9412	4583	ROD; TRUCK, CTR.	000000	000000
8941246330			BOOT KIT; IN SI	000000	000000
8941246430			GEAR ASM;3RD	000000	000000
8941246510	8-9412	4651	GEAR ASM.; LOW,	000000	000022
8941246610	8-9412	4661	GEAR; INPUT TRANSFER	000000	000000
8941246611	8-9412	4661	GEAR; INPUT TRANSFER	000000	000000
8941246621	8-9412	4662	GEAR; TRFER, OUTP	000000	000000
8941246640	8-9412	4664	GEAR;CTR TRF	000000	000000
8941246641	8-9412	4664	GEAR;CTR TRF	000000	000000
8941247650	8-9412	4765	BEARING;BALL CT	000003	000002
8941247660	8-9412	4766	BEARING;BALL CL	000008	000000
8941248660			LEVER;AUTO ADJ (L)	000000	000000
8941248661			LEVER;AUTO ADJ (L)	000017	000009
8941251140	8-9412	5114	PACKING;O-RING	000000	000000
8941253526	8-9412	5352	HEAD ASM; CYL 4JA1	000000	000000
8941255071			PRESSURE PLATE	000000	000000
8941255110	8-9412	5511	SPRING; VALVE,	000072	000548
8941255120	8-9412	5512	SPRING; VALVE,	000084	000350
8941255821	8-9412	5582	PIPE ASM.; OIL,	000000	000000
8941255822	8-9412	5582	PIPE ASM;OIL	000000	000004
8941255970	8-9412	5597	CLIP;RUBBER HOS	000000	000000
8941255971	8-9412	5597	CLIP; RUBBER HO	000000	000000
8941255980	8-9412	5598	CLIP; WATER HOSE	000000	000000
8941255981	8-9412	5598	CLIP; HOSE,S/VTO	000000	000000
8941257411	8-9412	5741	BEARING; C	000000	000000
8941257433	8-9412	5743	BEARING; C	000000	000000
8941257470	8-9412	5747	METAL KIT; CONN	000000	000000
8941257520	8-9412	5752	METAL SET; THRUST	000000	000000
8941257614	8-9412	5761	FLYWHEEL ASM.	000000	000000
8941258470	8-9412	5847	PUMP ASM; OIL	000000	000000
8941258472	8-9412	5847	PUMP ASM; OIL	000000	000000
8941258513	8-9412	5851	HOUSING; THERMOSTAT	000000	000000
8941258531	8-9412	5853	HOUSING; THERMOSTAT	000000	000000
8941258541	8-9412	5854	HOUSING; THERMOSTAT	000000	000000
8941258591	8-9412	5859	GASKET; INJ. NOZZLE	000000	000000
8941258620	8-9412	5862	CLIP;HOSE, P/S	000000	000000
8941258621	8-9412	5862	CLIP;HOSE, P/S	000000	000046
8941258840	8-9412	5884	RECTIFIER;GEN	000000	000000
8941258860	8-9412	5886	COVER;END,RR COVER,GEN	000000	000000
8941259070	8-9412	5907	HOSE;RUBBER.OIL	000000	000000
8941259100	8-9412	5910	HOSE;RUBBER,CHK L=450	000000	000000
8941259101	8-9412	5910	HOSE;RUBBER,CHK L=450	000000	000000
8941262100	8-9412	6210	STUD; EXH PIPE TO MANIF	000008	000187
8941267700	8-9412	6770	CLIP;RUBBER HOS	000000	000000
8941267710	8-9412	6771	CLIP;HOSE,TURBO OUTLET	000000	000027
8941268220	8-9412	6822	SENSOR; TACHOMETER	000000	000008

8941269650	8-9412	6965	RADIATOR ASM.	000000	000000
8941269990	8-9412	6999	CONNECTOR	000000	000000
8941269991	8-9412	6999	CONNECTOR	000000	000001
8941271440	8-9412	7144	CLIP: PURSE LOCK	000000	000000
8941275461	8-9412	7546	OIL FILTER; DSEL	000000	000000
8941277030	8-9412	7703	STUD; HOUSING	000196	000000
8941277040	8-9412	7704	ARMATURE ASM 2KC1	000000	000000
8941277050	8-9412	7705	COIL ASM; FIELD 2KC1	000000	000000
8941277060	8-9412	7706	CASE ASM; GEAR STARTER 2K	000000	000000
8941277070	8-9412	7707	LEVER KIT; SHIFT 2KC1	000000	000000
8941277973	8-9412	7797	CAMSHAFT	000000	000000
8941277974	8-9412	7797	CAMSHAFT	000000	000000
8941278670	8-9412	7867	SHAFT STRG	000000	000000
8941278672	8-9412	7867	SHAFT STRG	000000	000000
8941280450	8-9412	8045	FLYWHEEL ASM	000000	000000
8941280470	8-9412	8047	BAND; AIR CLEANER	000000	000000
8941280480	8-9412	8048	FLYWHEEL ASM 7 1/2" 2/3KC	000000	000000
8941280481	8-9412	8048	FLYWHEEL ASM 7 1/2" 2/3KC	000000	000000
8941280491	8-9412	8049	FLYWHEEL	000000	000000
8941281220	8-9412	8122	COVER ASM; REAR	000000	000000
8941281230	8-9412	8123	COVER ASM; REAR, STARTER	000000	000000
8941283161	8-9412	8316	CLIP; PIPE TO F	000000	000015
8941283191	8-9412	8319	GROMMET; CABLE	000000	000000
8941283192	8-9412	8319	GROMMET	000000	000350
8941287310	8-9412	8731	PIPE; OIL. TURB	000000	000000
8941287650	8-9412	8765	LEVER, ASM P/B	000000	000003
8941287712	8-9412	8771	COVER; REAR, MISSION	000000	000000
8941287750	8-9412	8775	RING, BLOCK	000000	000000
8941287751	8-9412	8775	RING; BLOCK	000000	000000
8941287752	8-9412	8775	RING; BLOCK	000000	000023
8941287760	8-9412	8776	RING, BLOCK	000000	000000
8941287761	8-9412	8776	RING, BLOCK	000001	000004
8941287800	8-9412	8780	LEVER ASM; SHIFT	000000	000000
8941287810	8-9412	8781	LEVER ASM; SHIFT	000000	000000
8941287840	8-9412	8784	SEAL; OIL, QUADRANT BOX	000000	000000
8941287850	8-9412	8785	SCREW; SPEEDO BU	000000	000073
8941287860	8-9412	8786	BOLT; RR COVER TO CASE	000000	000000
8941287901	8-9412	8790	SPRING; CONICAL	000000	000000
8941287910	8-9412	8791	BOLT; SIDE COVER	000000	000035
8941287940	8-9412	8794	PIN; REVERSE SHA	000000	000000
8941288230			GEAR; SPEEDOMETER	000000	000000
8941288400			BOLT;	000000	000000
8941288541	8-9412	8854	FILTER ASM; OIL (SPIN-ON)	000000	000229
8941289060	8-9412	8906	WIRE*	000000	000000
8941289070	8-9412	8907	RACK; CONTROL	000000	000000
8941289080	8-9412	8908	COVER	000000	000000
8941289090	8-9412	8909	VALVE ASM; DELIVERY 3KC1	000000	000002

8941289100	8-9412	8910	PLUNGER ASM.;	000000	000000
8941289110	8-9412	8911	SPRING; DELIVERY 3KC1	000019	000000
8941289120	8-9412	8912	GASKET 3KC1	000000	000076
8941289140	8-9412	8914	STOPPER; INJ PUMP	000000	000000
8941289141	8-9412	8914	STOPPER; INJ PUMP	000000	000007
8941289150	8-9412	8915	GSKT;INL.CONN.NOZZLE HLDR	000000	000000
8941289160	8-9412	8916	TAPPET; INJ PUMP	000000	000000
8941289170	8-9412	8917	PIN	000000	000000
8941289180	8-9412	8918	WIRE*	000000	000000
8941289190	8-9412	8919	SPRING; PLUNGER	000009	000000
8941289200	8-9412	8920	SEAT; SPRING, UPPER 2KC1	000000	000000
8941289210	8-9412	8921	SEAT; SPRING, LOWER 2KC1	000000	000002
8941289220	8-9412	8922	RACK;CONTROL	000000	000000
8941289221	8-9412	8922	RACK;CONTROL	000000	000000
8941289230	8-9412	8923	SLEEVE; INJ. PUMP, 2KC1	000000	000000
8941289240	8-9412	8924	BOLT 3KC1	000000	000000
8941289250	8-9412	8925	BOLT*	000000	000005
8941289270	8-9412	8927	PIN; INJ 3CK1	000000	000001
8941289280	8-9412	8928	WASHER;SPRING	000000	000000
8941289290	8-9412	8929	COVER	000000	000000
8941289300	8-9412	8930	SCREW	000000	000000
8941289310	8-9412	8931	PLATE; T=2.60	000005	000000
8941289320	8-9412	8932	PLATE; T=2.65	000000	000000
8941289330	8-9412	8933	PLATE;T=2.70	000000	000000
8941289340	8-9412	8934	PLATE; T=2.75	000000	000000
8941289350	8-9412	8935	PLATE; T=2.80	000000	000000
8941289360	8-9412	8936	PLATE; T=2.85	000000	000000
8941289370	8-9412	8937	PLATE; T=2.90	000000	000000
8941289380	8-9412	8938	PLATE; T=2.95	000000	000000
8941289390	8-9412	8939	PLATE; T=3.00	000000	000000
8941289400	8-9412	8940	PLATE; T=3.05	000000	000000
8941289410	8-9412	8941	PLATE; T=3.10	000000	000000
8941289420	8-9412	8942	PLATE; T=3.15	000000	000000
8941289430	8-9412	8943	PLATE; T=3.20	000000	000000
8941289440	8-9412	8944	PLATE; T=3.25	000000	000000
8941289450	8-9412	8945	PLATE; T=3.30	000000	000000
8941289460	8-9412	8946	PLATE; T=3.35	000000	000000
8941289470	8-9412	8947	PLATE; T=3.40	000000	000000
8941289480	8-9412	8948	PLATE; T=3.45	000000	000000
8941289490	8-9412	8949	PLATE; T=3.50	000000	000000
8941289500	8-9412	8950	PLATE; T=3.55	000000	000000
8941289510	8-9412	8951	PLATE; T=3.60	000000	000000
8941289520	8-9412	8952	PLATE; T=3.65	000000	000000
8941289530	8-9412	8953	PLATE; T=3.70	000000	000000
8941289540	8-9412	8954	PLATE; T=3.75	000000	000000
8941289550	8-9412	8955	PLATE; T=3.80	000000	000000
8941289560	8-9412	8956	PLATE; T=3.85	000000	000000

8941289570	8-9412	8957	PLATE; T=3.90	000000	000000
8941289580	8-9412	8958	TWATE; T=3.95	000005	000000
8941289590	8-9412	8959	PLATE; T=4.00	000008	000000
8941289600	8-9412	8960	PLATE; T=4.05	000010	000000
8941289610	8-9412	8961	PLATE; T=4.10	000000	000000
8941289630	8-9412	8963	SEAT; SPRING 3KC1	000000	000000
8941289631	8-9412	8963	SEAT; SPRING 3KC1	000000	000022
8941289640	8-9412	8964	SPRING; NOZZLE	000000	000038
8941289650	8-9412	8965	SHIM T=0.50	000000	000000
8941289660	8-9412	8966	SHIM T=0.52	000000	000000
8941289670	8-9412	8967	SHIM T=0.54	000000	000000
8941289690	8-9412	8969	SHIM T=0.58	000000	000000
8941289700	8-9412	8970	SUPERSEDED**SHIM T=0.60	000000	000000
8941289710	8-9412	8971	SUPERSEDED**SHIM T=0.62	000000	000000
8941289720	8-9412	8972	SUPERSEDED**SHIM T=0.64	000000	000000
8941289730	8-9412	8973	SUPERSEDED**SHIM T=0.66	000000	000000
8941289740	8-9412	8974	SUPERSEDED**SHIM T=0.68	000000	000000
8941289750	8-9412	8975	SUPERSEDED**SHIM T=0.70	000000	000000
8941289760	8-9412	8976	SUPERSEDED**SHIM T=0.72	000000	000000
8941289770	8-9412	8977	SUPERSEDED**SHIM T=0.74	000000	000000
8941289780	8-9412	8978	SUPERSEDED**SHIM T=0.76	000000	000000
8941289790	8-9412	8979	SUPERSEDED**SHIM T=0.78	000000	000000
8941289810	8-9412	8981	SUPERSEDED**SHIM T=0.82	000000	000000
8941289820	8-9412	8982	SUPERSEDED**SHIM T=0.84	000000	000000
8941289830	8-9412	8983	SUPERSEDED**SHIM T=0.86	000000	000000
8941289840	8-9412	8984	SUPERSEDED**SHIM T=0.88	000000	000000
8941289850	8-9412	8985	SUPERSEDED**SHIM T=0.90	000000	000000
8941289860	8-9412	8986	SUPERSEDED**SHIM T=0.92	000000	000000
8941289870	8-9412	8987	SUPERSEDED**SHIM T=0.94	000000	000000
8941289880	8-9412	8988	SUPERSEDED**SHIM T=0.96	000000	000000
8941289890	8-9412	8989	SUPERSEDED**SHIM T=0.98	000000	000000
8941289900	8-9412	8990	SUPERSEDED**SHIM T=1.00	000000	000000
8941289910	8-9412	8991	SUPERSEDED**SHIM T=1.02	000000	000000
8941289920	8-9412	8992	SUPERSEDED**SHIM T=1.04	000000	000000
8941289930	8-9412	8993	SUPERSEDED**SHIM T=1.06	000000	000000
8941289940	8-9412	8994	SUPERSEDED**SHIM T=1.08	000000	000000
8941289950	8-9412	8995	SUPERSEDED**SHIM T=1.10	000000	000000
8941289960	8-9412	8996	SUPERSEDED**SHIM T=1.12	000000	000000
8941289970	8-9412	8997	SUPERSEDED**SHIM T=1.14	000000	000000
8941289980	8-9412	8998	SUPERSEDED**SHIM T=1.16	000000	000000
8941289990	8-9412	8999	SUPERSEDED**SHIM T=1.18	000000	000000
8941290000	8-9412	9000	SUPERSEDED**SHIM	000000	000000
8941290010	8-9412	9001	SUPERSEDED**SHIM T=1.22	000000	000000
8941290020	8-9412	9002	SUPERSEDED**SHIM T=1.24	000000	000000
8941290030	8-9412	9003	SHIM 3KC1	000000	000000
8941290040	8-9412	9004	NUT; RETAINER	000000	000000
8941290050	8-9412	9005	GASKET; INJ NOZZLE 3KC1/3	000000	000000

8941290060	8-9412	9006	NUT; FEED PUMP	000000	000000
8941291340	8-9412	9134	HANGER; FRONT	000000	000000
8941291390	8-9412	9139	PACKING; RETAINER 3KC1	000000	000000
8941291391	8-9412	9139	PACKING; RETAINER 3KC1	000000	000000
8941291410	8-9412	9141	SPRING; START 3KC1	000000	000000
8941291411	8-9412	9141	SPRING; START 3KC1	000000	000015
8941291510			RECAV	000000	000000
8941291541			PUMP ASM; OIL	000000	000000
8941291551	8-9412	9155	BODY ASM; OIL PUMP	000000	000000
8941291580	8-9412	9158	ROTOR; INNER	000000	000000
8941291590	8-9412	9159	ROTOR; OUTER 2KC1	000002	000000
8941291600	8-9412	9160	COVER;	000000	000000
8941291880			C O I L	000000	000000
8941292020			DIST. CAP	000000	000000
8941293001	8-9412	9300	SEAL; CYL HEAD CAMSHAFT	000000	000002
8941293011	8-9412	9301	COVER; CAM GEAR	000000	000000
8941293021	8-9412	9302	PACKING; COVER CAM GEAR	000006	000000
8941293032	8-9412	9303	CASE; TIMING GEARS	000000	000001
8941293051	8-9412	9305	PLATE; RR.	000000	000000
8941293100	8-9412	9310	PACKING; GEAR CASE	000000	000000
8941293110	8-9412	9311	SPACER; PTO, PUMP	000000	000000
8941293130	8-9412	9313	GEAR; IDLE, C	000000	000000
8941293150	8-9412	9315	GEAR; PTO PUMP DRIVE	000000	000000
8941293160	8-9412	9316	SHAFT; PTO GEAR	000000	000000
8941293230	8-9412	9323	SHAFT; IDLE GEAR, A	000000	000000
8941293240	8-9412	9324	GEAR; W/BUSH, B	000000	000000
8941293260	8-9412	9326	SHAFT; IDLE GEAR, B	000000	000000
8941293271	8-9412	9327	PAN ASM; OIL	000000	000000
8941293290	8-9412	9329	PIPE ASM; OIL, GEAR CASE	000000	000000
8941293310	8-9412	9331	PIPE ASM; OIL, INJ PUMP	000000	000000
8941293320	8-9412	9332	PUMP ASM; WATER	000000	000000
8941293321	8-9412	9332	PUMP ASM; WATER	000001	000000
8941293330	8-9412	9333	PACKING; PUMP/FRT PLATE	000000	000000
8941293340	8-9412	9334	HOUSING; THERMOSTAT	000000	000000
8941293430	8-9412	9343	PIPE ASM; INJECTION NO. 4	000000	000000
8941293481	8-9412	9348	PACKING	000000	000000
8941293530	8-9412	9353	WASHER; PLAIN	000000	000000
8941293720	8-9412	9372	BOLT; FLYWHEEL FIX.	000000	000000
8941293730	8-9412	9373	HOSE; RUBBER BY-PASS	000000	000000
8941293780	8-9412	9378	PULLEY; COOLING	000000	000000
8941293792	8-9412	9379	PULLEY; CRANKSHAFT	000000	000000
8941293800	8-9412	9380	WASHER; IDLE FIX.	000000	000000
8941293840	8-9412	9384	BOLT; SHAFT	000000	000000
8941293841	8-9712	9384	BOLT; SHAFT	000000	000000
8941293860	8-9412	9386	BEARING; ROLLER, IDLE	000000	000001
8941293870	8-9412	9387	BELT; COOLING	000000	000002
8941294750	8-9412	9475	POWER DRIVE; STRAIGHT SPL	000000	000000

8941294761	8-9412	9476	BRACKET;POWER DRIVE SHAFT	000000	000000
8941294771	8-9412	9477	LEVER; POWER DRIVE SHIFT	000000	000000
8941294780	8-9412	9478	GLIP; LEVER	000000	000000
8941294790	8-9412	9479	EYE; SPRING	000000	000000
8941294801	8-9412	9480	BASE; FUEL TANK	000000	000000
8941294802	8-9412	9480	BASE; FUEL TANK	000000	000000
8941294810	8-9412	9481	CUSHION; RUBBER, FUEL TAN	000000	000028
8941294820	8-9412	9482	HOLDER; FUEL TANK 3KC1	000000	000075
8941294831	8-9412	9483	PLATE; SHIFT	000000	000000
8941294840	8-9412	9484	LABEL; CLUTCH	000000	000000
8941294850	8-9412	9485	COVER; SIDE	000000	000000
8941294851	8-9412	9485	COVER; SIDE	000000	000000
8941294860	8-9412	9486	LOWER COVER	000000	000000
8941294861	8-9412	9486	LOWER COVER	000000	000000
8941294870	8-9412	9487	BASE; FUEL TANK	000000	000000
8941294871	8-9412	9487	BASE; FUEL TANK	000000	000000
8941294880	8-9412	9488	TANK ASM; FUEL 3KC1	000000	000001
8941294890	8-9412	9489	BAND ASM; FUEL TANK 3KC1	000000	000000
8941294900	8-9412	9490	CUSHION; TANK MOUNTING 3K	000013	000000
8941294930	8-9412	9493	SHIELD; HEAT	000000	000000
8941294950	8-9412	9495	GUARD; FAN	000000	000000
8941294960	8-9412	9496	GUARD; FAN	000000	000000
8941294980	8-9412	9498	NET ASM; RADIATOR	000000	000000
8941294992	8-9412	9499	PANEL; CONTROL 3KC1	000000	000000
8941295001	8-9412	9500	LEVER; CONTROL 3KC1	000002	000000
8941295012	8-9412	9501	KNOB; ENGINE CONTROL 3KC1	000000	000014
8941295030	8-9412	9503	LABEL; CONTROL 3KC1	000000	000000
8941295061	8-9412	9506	BRACKET; LOWER RADIATOR 3	000000	000003
8941295071	8-9412	9507	SUPPORT; RADIATOR	000000	000000
8941295090	8-9412	9509	BRACKET; RADIATOR UPPER	000000	000000
8941295091	8-9412	9509	BRACKET; RADIATOR UPPER	000000	000000
8941295100	8-9412	9510	BRACKET; UPPER RADIATOR	000000	000000
8941295101	8-9412	9510	BRACKET; UPPER RADIATOR	000002	000000
8941295121	8-9412	9512	PROTECTOR	000000	000000
8941295132	8-9412	9513	PROTECTOR; HEAT	000002	000000
8941295141	8-9412	9514	FOOT; ENGINE FRONT L/R 3K	000002	000000
8941295151	8-9412	9515	FOOT; ENGINE REAR L/R 3KC	000000	000000
8941295161	8-9412	9516	FOOT;ENGINE 2KC1	000000	000000
8941295181	8-9412	9518	FRAME; STEEL	000000	000000
8941295213	8-9412	9521	BOX ASM; SWITCH 3KC1	000000	000000
8941295214	8-9412	9521	BOX ASM; SWITCH 3KC1	000000	000001
8941295261	8-9412	9526	G E A R	000000	000000
8941295480	8-9412	9548	BOLT;THROUGH	000000	000000
8941295500	8-9412	9550	VALVE; INLET	000000	000000
8941295510	8-9412	9551	SHAFT; ROCKER ARM	000000	000006
8941295540	8-9412	9554	W/PUMP, NEW	000000	000000
8941295550	8-9412	9555	HOUSING; THERMO	000000	000000

8941295551	8-9412	9555	HOUSING; THERMO	000000	000000
8941295640	8-9412	9564	PIPE; FUEL,NOZZ	000000	000000
8941296020	8-9412	9602	PLATE; ADJ,FAN BELT	000000	000000
8941296321	8-9412	9632	PLATE; CLUSTER	000000	000000
8941296331	8-9412	9633	PLATE; CLUSTER	000000	000000
8941296340	8-9412	9634	CRANKSHAFT ASM	000000	000000
8941296541	8-9412	9654	BRKT;SPACER	000000	000000
8941296561	8-9412	9656	BOLT;COVER	000000	000000
8941296580	8-9412	9658	FAN ASM; COOLING	000000	000019
8941296590	8-9412	9659	PUMP ASM; OIL 2KC1	000000	000000
8941296600	8-9412	9660	COVER ASM; OIL PUMP	000000	000000
8941296601	8-9412	9660	COVER ASM; OIL PUMP	000000	000000
8941296850	8-9412	9685	VALVE ASM; THROTTLE	000000	000000
8941296990	8-9412	9699	SEAT; VALVE, INSERT EXHAU	000002	000005
8941297060	8-9412	9706	UNIT; SEAL,WATER PUMP	000000	000000
8941297082	8-9412	9708	BRACKET; INL MA	000000	000000
8941297110	8-9412	9711	VALVE ASM.; REL	000000	000001
8941297120	8-9412	9712	CONNECTOR; OIL	000001	000001
8941297130	8-9412	9713	SEAL KIT; OIL PUMP	000000	000000
8941297140	8-9412	9714	SEAL KIT; OIL P	000000	000020
8941297160	8-9412	9716	FLYWHEEL	000000	000000
8941297161	8-9412	9716	FLYWHEEL	000000	000000
8941297162	8-9412	9716	FLYWHEEL	000000	000000
8941297240	8-9412	9724	BODY ASM.; OIL	000000	000000
8941297250	8-9412	9725	SHAFT; OIL PUMP	000000	000002
8941297260	8-9412	9726	PLATE; SIDE, OIL PUMP	000000	000003
8941297270	8-9412	9727	CARTRIDGE ASM; OIL PUMP	000000	000001
8941297280	8-9412	9728	COVER; OIL PUMP	000000	000001
8941297290	8-9412	9729	BOLT ASM.; OIL	000000	000010
8941297480	8-9412	9748	HOLDER;NOZZLE	000000	000000
8941298750			GLASS	000000	000000
8941298800	8-9412	9880	BRACKET; INLET	000000	000005
8941300190	8-9413	0019	FILLER ASM; OIL	000000	000000
8941300211	8-9413	0021	NIPPLE; INJ. PUMP	000000	000000
8941300550	8-9413	0055	BOLT;HOUSING T	000000	000000
8941300551	8-9413	0055	BOLT; HOUSING	000172	000000
8941300742	8-9413	0074	NOZZLE ASM; INJECTION	000000	000000
8941300743	8-9413	0074	NOZZLE ASM; INJECTION	000000	000007
8941300750	8-9413	0075	PIN; CRANK CASE	000000	000000
8941301833	8-9413	0183	GENERATOR; HITACHI	000000	000000
8941301834	8-9413	0183	GENERATOR; HITACHI	000000	000000
8941301840	8-9413	0184	FLYWHEEL ASM	000000	000000
8941301850	8-9413	0185	PLATE ASM	000002	000000
8941302811	8-9413	0281	BOLT;OIL PAN	000120	000000
8941302820	8-9413	0282	BEARING; BALL, FLYWHEEL	000000	000000
8941303180	8-9413	0318	BRACKET; EXH MANIFOLE, A-	000000	000000
8941303190	8-9413	0319	COVER	000000	000000

8941303200	8-9413	0320	PACKING	000000	000000
8941303284	8-9413	0328	BLOCK ASM; CYLINDER	000000	000002
8941303460	8-9413	0346	PLUG 2KC1	000000	000000
8941303470	8-9413	0347	WATER PUMP	000000	000000
8941303490	8-9413	0349	COVER; WATER PUMP BODY	000005	000000
8941303500	8-9413	0350	PACKING; WATER PUMP	000000	000000
8941303510	8-9413	0351	UNIT; BEARING	000000	000003
8941303520	8-9413	0352	IMPELLER	000000	000000
8941303530	8-9413	0353	CENTER; WATER PUMP	000004	000000
8941303540	8-9413	0354	BUSHING; LEAF SPR,FRT	000000	000000
8941303641	8-9413	0364	PACKING; HEAD COVER 3KC1	000000	000004
8941303651	8-9413	0365	PACKING; HEAD COVER 2KC1	000000	000000
8941303660	8-9413	0366	PACKING; HEAD COVER 3KR1/	000000	000000
8941303830	8-9413	0383	HOSE;WATER	000000	000000
8941303930	8-9413	0393	HOUSING; CENTER	000000	000000
8941303940	8-9413	0394	COVER KIT;DUST	000000	000000
8941304120	8-9413	0412	BODY;*INVALID*	000000	000000
8941304151	8-9413	0415	COVER; OIL PUMP	000000	000000
8941304160	8-9413	0416	GEAR;DRIVE,OIL	000000	000000
8941304161	8-9413	0416	GEAR;DRIVE,OIL	000000	000002
8941304190	8-9413	0419	ROTOR; OUTER	000000	000000
8941304200	8-9413	0420	PINION; OIL PUM	000000	000002
8941304210	8-9413	0421	VALVE ASM.; OIL	000000	000001
8941304230	8-9413	0423	CASE; STRAINER	000000	000000
8941304300	8-9413	0430	SHIM T=0.90; INJ PUMP 2KC	000000	000000
8941304310	8-9413	0431	SHIM T=1.00; INJ PUMP 2KC	000000	000000
8941304320	8-9413	0432	SHIM T=1.10; INJ PUMP 2KC	000000	000000
8941304330	8-9413	0433	SHIM T=1.20; INJ PUMP 2KC	000000	000000
8941304340	8-9413	0434	SHIM; T=1.0	000000	000000
8941304350	8-9413	0435	SHIM; T=1.0	000000	000000
8941304360	8-9413	0436	SHIM; T=1.0	000000	000000
8941304370	8-9413	0437	SHIM; T=1.2	000000	000000
8941304380	8-9413	0438	NUT; HOLDER	000005	000002
8941304390	8-9413	0439	SUPERSEDED**HOLDER	000000	000000
8941305320	8-9413	0532	NOZZLE ASM;INJECTION 3KC1	000000	000040
8941305342	8-9413	0534	FLYWHEEL ASM	000000	000000
8941305355	8-9413	0535	BLOCK ASM; CYLINDER	000000	000002
8941305580	8-9413	0558	INSERT INL. SEAT	000000	000000
8941305590	8-9413	0559	INSERT EXH. SEAT	000000	000000
8941305600	8-9413	0560	STARTER ; NEW	000001	000000
8941305710	8-9413	0571	SUPERSEDED**PROTECTOR	000000	000000
8941305720	8-9413	0572	SUPERSEDED**COVER	000000	000000
8941306120	8-9413	0612	STRAINER ASM; OIL PUMP 3K	000000	000000
8941306121	8-9413	0612	STRAINER ASM; OIL PUMP 3K	000000	000000
8941306130	8-9413	0613	PACKING; COVER 3KR1	000000	000004
8941306140	8-9413	0614	GASKET; PLUG 2KC1	000000	000000
8941307280	8-9413	0728	CASE; OIL PUMP, STRAINER	000000	000000

8941309230	8-9413	0923	THRUST METAL SET	000000	000000
8941310130	8-9413	1013	PUMP ASM;FEED	000000	000000
8941310600	8-9413	1060	OIL PIPE	000000	000000
8941310601	8-9413	1060	OIL PIPE	000000	000000
8941310602	8-9413	1060	OIL PIPE	000000	000000
8941310603	8-9413	1060	OIL PIPE	000000	000001
8941310620	8-9413	1062	FLYWHEEL ASM;4BB1	000000	000000
8941310621	8-9413	1062	FLYWHEEL ASM;4BB1	000000	000000
8941310622	8-9413	1062	FLYWHEEL ASM;4BB1	000000	000001
8941311300	8-9413	1130	PUMP; PRIMING,FUEL FEED	000001	000003
8941311320	8-9413	1132	SPRING; TIMER	000000	000000
8941311350	8-9413	1135	PLATE;ADJ.,FAN BELT	000000	000000
8941311360	8-9413	1136	BRACKET; GENERATOR	000000	000000
8941311370	8-9413	1137	BRACKET; GENERATOR	000000	000000
8941311440	8-9413	1144	BODY; NOZZLE HOLDER	000000	000000
8941311600	8-9413	1160	LEVER (A)	000000	000000
8941312561	8-9413	1256	BAR; RADIATOR 2KC1	000000	000000
8941313930	8-9413	1393	PUMP ASM; INJ.	000000	000000
8941314551	8-9413	1455	PACKING; TIMING CASE 3KR1	000000	000000
8941314645	8-9413	1464	HEAD ASM.; CYL. 3KB1	000000	000000
8941314646	8-9413	1464	HEAD ASM.; CYL. 3KB1	000000	000000
8941314653	8-9413	1465	HEAD ASM.; CYL.	000000	000000
8941314672	8-9413	1467	HEAD ASM.; CYL.	000000	000000
8941314804	8-9413	1480	BLOCK ASM; CYLINDER	000000	000000
8941314880	8-9413	1488	PISTON	000000	000000
8941314881	8-9413	1488	PISTON	000000	000000
8941314930	8-9413	1493	RING SET; PISTON	000000	000006
8941314980	8-9413	1498	SHAFT; LEVER 3KC1	000000	000000
8941315030	8-9413	1503	BUSH; GOVERNOR SHAFT	000000	000000
8941315080	8-9413	1508	GUIDE;TIMING,CHAIN	000000	000001
8941315091	8-9413	1509	SUPPORT; FUEL LH	000000	000000
8941315092	8-9413	1509	SUPPORT; FUEL LH	000000	000000
8941315101	8-9413	1510	SUPPORT; FUEL RH	000000	000000
8941315102	8-9413	1510	SUPPORT; FUEL RH	000000	000000
8941315121	8-9413	1512	BRACKET; FUEL 2KC1	000000	000000
8941315140	8-9413	1514	PACKING	000000	000000
8941315230	8-9413	1523	LED PILOT; RED 3KC1	000000	000023
8941315320	8-9413	1532	HOSE;RUBBER L=425	000000	000000
8941316441			COVER; FRT, BRAKE	000000	000001
8941316451			COVER; FRT BRAKE	000000	000000
8941317230	8-9413	1723	LED PILOT; AMBER 3KC1	000000	000009
8941317720	8-9413	1772	PLATE; ISUZU 3KC1	000000	000000
8941317740	8-9413	1774	SPRING; RETURN	000000	000000
8941317750	8-9413	1775	BUSHING; CONTROL LEVER 3K	000008	000000
8941317760	8-9413	1776	SPACER	000000	000000
8941317770	8-9413	1777	LINK ROD	000000	000000
8941317780	8-9413	1778	LINK; ROD 3KC1	000000	000000

8941317790	8-9413	1779	LABEL; MARK 3KC1	000000	000000
8941317851	8-9413	1785	HARNESS; BOX SIDE 3KC1	000000	000010
8941317861	8-9413	1786	HARNESS; WIRING 3KC1	000000	000002
8941317871	8-9413	1787	HARNESS; ENGINE	000000	000000
8941317970	8-9413	1797	BEARING; BALL, FLYWHEEL	000000	000007
8941318800	8-9413	1880	PLATE; BACK, BR	000000	000000
8941318801	8-9413	1880	PLATE;BACK, BR	000000	000000
8941318810	8-9413	1881	SHOE ASM; BRAKE	000000	000000
8941318820	8-9413	1882	LEVER ASM.; CEN	000000	000000
8941318821	8-9413	1882	LEVER ASM; PARKING BRAKE	000000	000000
8941318830	8-9413	1883	STRUT; CENTER B	000000	000000
8941319230	8-9413	1923	PLATE;ANTI LASH	000000	000000
8941319231	8-9413	1923	PLATE;ANTI LASH	000000	000004
8941319611	8-9413	1961	PUMP ASM; INJ.	000000	000001
8941320091	8-9413	2009	COCK ASM; FUEL 3KC1	000000	000002
8941320100	8-9413	2010	PACKING; FRONT COVER	000005	000000
8941320111	8-9413	2011	BRACKET; FOOT, LH	000000	000000
8941320120	8-9413	2012	SHAFT; STRAIGHT SPLINE	000000	000000
8941320130	8-9413	2013	COVER; FRONT	000000	000000
8941320144	8-9413	2014	BOX ASM; SWITCH 2KC1	000000	000000
8941320171	8-9413	2017	ISUZU PLATE	000000	000000
8941320181	8-9413	2018	BOX; SW	000000	000000
8941320220	8-9413	2022	SOCKET; CONTROL	000000	000000
8941320222	8-9413	2022	SOCKET; CONTROL	000000	000000
8941320500	8-9413	2050	HOUSING; POWER DRIVE	000000	000000
8941320887			RELAY LEVER ASM;3RD,SHIFT	000000	000000
8941321330			BOLT;RADIATOR	000000	000000
8941321340	8-9413	2134	BOLT; FAN GUIDE	000000	000000
8941321341	8-9413	2134	BOLT;FAN GUIDE	000000	000000
8941321550	8-9413	2155	SPRING; SHOE HO	000000	000000
8941321551	8-9413	2155	SPRING; SHOE TO STRUT	000043	000000
8941321560	8-9413	2156	SPRING; SHOE, C	000036	000005
8941321570	8-9413	2157	SPRING; RETURN	000033	000037
8941321580	8-9413	2158	SPRING; STRUT,	000032	000010
8941321590	8-9413	2159	PIN;SHOE HOLD,PARKING BRK	000000	000034
8941321640	8-9413	2164	BOLT;QUAD BOX	000000	000000
8941321670	8-9413	2167	WASHER	000000	000000
8941321680	8-9413	2168	SPRING;ANTI-LAS	000000	000000
894132179U	8-9413	2179U	PUMP ASM.; FEED	000000	000000
8941321790	8-9413	2179	BRACKET	000000	000000
8941321791	8-9413	2179	BRACKET	000000	000000
8941322320	8-9413	2232	PLATE ASM.; PRESSURE	000000	000000
8941322410	8-9413	2241	ELEMENT; FUEL FI	000000	000000
8941322440	8-9413	2244	CUSHION; AIR CLEANER 3KC/	000000	000000
8941322490	8-9413	2249	BRACKET; GENERATOR	000000	000000
8941322600	8-9413	2260	ELEMENT; AIR CLEANER	000000	000019
8941322611	8-9413	2261	WASHER	000000	000000

8941322620	8-9413	2262	BEARING; BALL	000000	000000
8941322630	8-9413	2263	BOLT; T/GEAR CASE/BLK	000000	000000
8941322680	8-9413	2268	ROD; LINK	000000	000000
8941323280	8-9413	2328	TIMING WHEEL 3KR1	000000	000001
8941323301	8-9413	2330	RESISTOR; DROPPING	000000	000000
8941323310	8-9413	2331	OVERHEAT SWITCH	000000	000015
8941323640	8-9413	2364	SHIM; LEVER, LINK PLATE	000005	000000
8941323660	8-9413	2366	SHIM; PUMP, LINK PLATE	000000	000000
8941324900	8-9413	2490	HOSE; RUBBER, BYPASS, WATER	000051	000137
8941326450	8-9413	2645	HOLDER INJ.	000000	000000
8941326452	8-9413	2645	HOLDER INJ.	000000	000000
8941326650	8-9413	2665	PLUG; BODY, OIL	000168	000000
8941326740	8-9413	2674	PLUG	000000	000002
8941326750	8-9413	2675	GASKET; F/FILTER	000072	000000
8941326950	8-9413	2695	CAMSHAFT; INJ PUMP 3KR1	000000	000000
8941326960	8-9413	2696	HOSE; VINYL	000000	000000
8941326970	8-9413	2697	RADIATOR CAP 2/3KC1	000000	000000
8941326980	8-9413	2698	GUIDE; FAN	000000	000000
8941326992	8-9413	2699	FLYWHEEL ASM	000000	000000
8941327020	8-9413	2702	BRACKET; STOPPER CABLE	000000	000000
8941327031	8-9413	2703	HOSE; BREATHER 3KC1	000000	000000
8941327040	8-9413	2704	PUMP ASM; FEED 4BD1	000000	000000
8941327042	8-9413	2704	PUMP ASM; FEED 4BD1	000000	000000
8941327070	8-9413	2707	PUMP; FEED	000000	000000
8941327190	8-9413	2719	SOCKET	000000	000000
8941327280	8-9413	2728	CLEANER ASM; AIR	000000	000000
8941327370	8-9413	2737	PIPE ASM; OIL, CRANK CASE	000000	000000
8941327390	8-9413	2739	CAPSULE; SPR.	000000	000000
8941327400	8-9413	2740	LEVER	000000	000000
8941327410	8-9413	2741	DIAPHRAGM	000000	000000
8941327420	8-9413	2742	SPRING	000000	000000
8941327430	8-9413	2743	SPRING; GOVERNOR	000000	000000
8941327440	8-9413	2744	SPRING; GOVERNOR	000000	000000
8941327450	8-9413	2745	PLUNGER ASM 3KC1	000000	000000
8941327460	8-9413	2746	HOLDER; INJ PUMP	000000	000000
8941327461	8-9413	2746	HOLDER; INJ PUMP	000000	000003
8941327470	8-9413	2747	TIMING FLANGE	000000	000000
8941327490	8-9413	2749	PIN; PILOT	000000	000000
8941327500	8-9413	2750	SHIM T=0.1	000000	000000
8941327510	8-9413	2751	SHIM T=0.2	000000	000000
8941327520	8-9413	2752	SHIM T=0.3	000000	000000
8941327530	8-9413	2753	SHIM T=0.4	000000	000000
8941327540	8-9413	2754	SHIM T=0.5	000000	000000
8941327550	8-9413	2755	SHIM T=0.6	000000	000000
8941327560	8-9413	2756	SHIM T=0.7	000000	000000
8941327570	8-9413	2757	SHIM T=0.8	000000	000000
8941327580	8-9413	2758	SHIM T=0.9	000000	000000

8941327630	8-9413	2763	SEAT; SPLING	000000	000000
8941327640	8-9413	2764	FLANGE	000000	000000
8941327650	8-9413	2765	SHIM*	000000	000000
8941327660	8-9413	2766	SHIM T=0.10	000000	000000
8941327670	8-9413	2767	SHIM T=0.12	000000	000000
8941327680	8-9413	2768	SHIM T=0.14	000000	000000
8941327690	8-9413	2769	SHIM T=0.16	000000	000000
8941327700	8-9413	2770	SHIM T=0.18	000003	000000
8941327710	8-9413	2771	SHIM T=0.20	000000	000000
8941327720	8-9413	2772	SHIM T=0.30	000000	000000
8941327730	8-9413	2773	RING; SNAP	000000	000000
8941327740	8-9413	2774	SHIM T=1.9	000000	000000
8941327750	8-9413	2775	SHIM T=2.0	000000	000000
8941327760	8-9413	2776	SHIM T=2.1	000000	000000
8941327770	8-9413	2777	RING; SNAP	000000	000000
8941327850	8-9413	2785	SPRING	000008	000000
8941328130	8-9413	2813	BEARING KIT; CR	000000	000000
8941328131	8-9413	2813	METAL KIT; CRANK	000000	000013
8941328132	8-9413	2813	METAL KIT;CRNK	000000	000000
8941328140	8-9413	2814	METAL SET; CRANK STD	000000	000000
8941328160	8-9413	2816	METAL SET; CRANK NO. 3,	000000	000000
8941328181	8-9413	2818	PROTECTOR;HEAT	000000	000002
8941328353	8-9413	2835	HOUSING; FLYWHEEL 3KC1	000000	000000
8941328363	8-9413	2836	PULLEY; CRANKSHAFT 3KC1	000000	000000
8941328364	8-9413	2836	PULLEY; CRANKSHAFT 3KC1	000000	000000
8941328630	8-9413	2863	VLV ASM; SAFETY	000000	000000
8941328631	8-9413	2863	VLV.ASM;SAFETY	000000	000000
8941328750	8-9413	2875	PIPE ASM.; INJ.	000000	000000
8941328751	8-9413	2875	PIPE; INJ #1	000000	000000
8941328752	8-9413	2875	PIPE; INJ #1	000000	000005
8941328760	8-9413	2876	PIPE ASM.; INJ.	000000	000000
8941328761	8-9413	2876	PIPE; INJ. #2	000000	000000
8941328762	8-9413	2876	PIPE; INJ. #2	000000	000002
8941328770	8-9413	2877	PIPE ASM.; INJ.	000000	000000
8941328771	8-9413	2877	PIPE; INJ.#3	000000	000000
8941328772	8-9413	2877	PIPE; INJ.#3	000000	000001
8941328780	8-9413	2878	PIPE ASM.; INJ.	000000	000000
8941328781	8-9413	2878	PIPE; INJ.#4	000000	000000
8941328782	8-9413	2878	PIPE; INJ.#4	000000	000002
8941329000	8-9413	2900	SPACER RING; GEN SET 2KC/	000000	000000
8941329240	8-9413	2924	COVER; OIL DRAI	000002	000003
8941329270	8-9413	2927	PIPE ASM.; FUEL	000000	000000
8941329281	8-9413	2928	PIPE ASM.; FUEL	000000	000011
8941329430	8-9413	2943	STUD; HOUSING 2KC/3KC	000004	000000
8941329440	8-9413	2944	STUD 3KC1	000000	000000
8941329450	8-9413	2945	BRACKET; FUEL FILTER	000000	000000
8941329451	8-9413	2945	BRACKET; FUEL FILTER	000000	000000

8941329460	8-9413	2946	FILTER ASM; FUEL 3KC1	000000	000000
8941329470	8-9413	2947	FILTER;FUEL (SPIN-ON) 3KC	000000	000000
8941329471	8-9413	2947	FILTER;FUEL (SPIN-ON) 3KC	000000	000000
8941329480	8-9413	2948	BODY ASM; FUEL FILTER 3KC	000000	000031
8941329491	8-9413	2949	PIPE ASM; FUEL, PUMP 3KC1	000000	000000
8941329500	8-9413	2950	COVER ASM 2KC1	000000	000000
8941329510	8-9413	2951	CASE ASM 2KC1	000000	000000
8941329511	8-9413	2951	CASE ASM 2KC1	000000	000000
8941329520	8-9413	2952	GASKET 2KC1	000000	000000
8941329530	8-9413	2953	GASKET 2KC1	000000	000000
8941329540	8-9413	2954	GASKET; CASE 2KC1	000000	000000
8941329550	8-9413	2955	CLAMP 2KC1	000000	000000
8941329560	8-9413	2956	WASHER 2KC1	000000	000002
8941329991	8-9413	2999	PIPE ASM; FILTER-COOLER	000000	000000
8941330001	8-9413	3000	CAP; OIL FILLER	000000	000000
8941330002	8-9413	3000	CAP;OIL FILLER	000000	000000
8941330012	8-9413	3001	PIPE ASM; WATER	000000	000000
8941330230	8-9413	3023	PUMP**DISCONTINUED**	000000	000000
8941330240	8-9413	3024	COVER ASM;RR	000000	000000
8941330840	8-9413	3084	PLUG;CRANK CASE	000000	000000
8941330850	8-9413	3085	STUD; COVER, GOVERNOR	000000	000000
8941330870	8-9413	3087	COVER 2KC1	000000	000000
8941331381			LAMP ASM	000000	000000
8941331391			LAMP ASM	000000	000000
8941331860			BOLT;CVR TO CYL	000000	000000
8941331861	8-9413	3186	BOLT;CVR TO CYL	000004	000000
8941332071			CAP;OIL FILLER	000000	000000
8941332072	8-9413	3207	CAP; OIL FILLER	000000	000000
8941332073	8-9413	3207	CAP;OIL FILLER	000000	000000
8941332074	8-9413	3207	CAP;OIL FILLER	000000	000000
8941332075	8-9413	3207	CAP;OIL FILLER	000068	000533
8941332590	8-9413	3259	HOSE; RADIATOR, UPPER 3KC	000001	000001
8941332600	8-9413	3260	HOSE; RADIATOR-UPPER	000001	000008
8941332620	8-9413	3262	CLEANER ASM; AIR	000000	000000
8941332751	8-9413	3275	VALVE; INLET	000000	000000
8941332752	8-9413	3275	VALVE; INLET	000001	000000
8941332810	8-9413	3281	SHIM; LEVER A,B,C	000000	000005
8941332830	8-9413	3283	PLUG; OIL GALLERY	000000	000000
8941333280	8-9413	3328	BOLT; FLYWHEEL	000000	000000
8941333281	8-9413	3328	BOLT; FLYWHEEL	000000	000192
8941333380	8-9413	3338	STARTER; 12V/ 1.4KW	000000	000000
8941333381	8-9413	3338	STARTER; 12V/ 1.4KW	000000	000003
8941333970	8-9413	3397	PIN; KNOCK	000000	000000
8941333971	8-9413	3397	DOWEL; OIL PUMP	000000	000000
8941334852	8-9413	3485	COVER	000000	000000
8941335202			TAPPET; VALVE	000000	000000
8941335940	8-9413	3594	BRACKET; FUEL, FILTER 2K/	000000	000000

8941337311	8-9413	3731	SEAT; SPRING UPPER	000000	000000
8941337312	8-9413	3731	SEAT; SPRING UPPER	000000	000000
8941337322	8-9413	3732	COVER ASM; CYL HEAD 4JC1	000000	000000
8941337332	8-9413	3733	COVER ASM; CYL HEAD	000000	000000
8941337345	8-9413	3734	RUBBER; SPACER 4JC1	000000	000000
8941337346	8-9413	3734	RUBBER; SPACER 4JC1	000000	000000
8941337443	8-9413	3744	PIPE; INLET WATER	000000	000000
8941337444	8-9413	3744	PIPE; INLET WATER	000000	000001
8941337445	8-9413	3744	PIPE; INLET WATER	000000	000000
8941337453	8-9413	3745	PIPE ASM; INJECTION NO. 1	000000	000000
8941337513	8-9413	3751	PIPE ASM; INJECTION NO. 4	000000	000000
8941337514	8-9413	3751	PIPE ASM; INJECTION NO. 4	000000	000000
8941337515	8-9413	3751	PIPE ASM; INJECTION NO. 4	000000	000009
8941337582	8-9413	3758	STARTER ASM.	000000	000000
8941337584	8-9413	3758	STARTER; DENSO	000000	000000
8941337590	8-9413	3759	PLUG; GLOW	000000	000000
8941337591	8-9413	3759	PLUG; GLOW	000000	000000
8941337592	8-9413	3759	PLUG;GLOW	000000	000000
8941337593	8-9413	3759	PLUG; GLOW	000000	000000
8941337594	8-9413	3759	PLUG; GLOW	000000	000000
8941337595	8-9413	3759	PLUG; GLOW	000000	000000
8941337596	8-9413	3759	PLUG; GLOW	000000	000000
8941337597	8-9413	3759	PLUG; GLOW	000000	000000
8941337598	8-9413	3759	PLUG; GLOW	000000	000000
8941337599	8-9413	3759	PLUG; GLOW	000873	003361
8941337600	8-9413	3760	CONNECTOR;	000000	000000
8941337611	8-9413	3761	BRACKET; I	000000	000000
8941337622	8-9413	3762	BRACKET; INJ. PUMP REAR	000000	000000
8941339370	8-9413	3937	GEAR;IDLER	000000	000000
8941339371	8-9413	3937	GEAR;IDLER	000000	000000
8941339372	8-9413	3937	GEAR; W/BUSH, IDLE	000000	000000
8941339373	8-9413	3937	GEAR; W/BUSH, IDLE	000000	000024
8941339681	8-9413	3968	NIPPLE; WATER DRAIN	000000	000000
8941339690	8-9413	3969	RING; SNAP PISTON	000000	000000
8941339700	8-9413	3970	WASHER; FLYWHEEL TO CRANK	000000	000000
8941339701	8-9413	3970	WASHER; FLYWHEEL TO CRANK	000000	000051
8941339722	8-9413	3972	BOLT; ROCKER ARM 4JA/B1	000008	000000
8941339731	8-9413	3973	BOLT; SEMS, OIL PAN FIX.	000000	000000
8941339732	8-9413	3973	BOLT; SEMS, OIL PAN FIX.	000000	000006
8941339742	8-9413	3974	STUD; OIL PAN	000000	000008
8941340302	8-9413	4030	CASE; TIMING GEARS	000000	000000
8941340311	8-9413	4031	CASE; TIMING GEARS	000000	000000
8941340312	8-9413	4031	CASE; TIMING GEARS	000000	000000
8941340360	8-9413	4036	PAN ASM; OIL	000000	000000
8941340361	8-9413	4036	PAN ASM; OIL	000000	000001
8941340363	8-9413	4036	PAN ASM; OIL	000000	000000
8941340700	8-9413	4070	FILTER ASM;OIL	000000	000000

8941341080	8-9413	4108	HOSE; RUBBER BY-PASS	000000	000005
8941341280	8-9413	4128	BOLT;SEMS, FAN FIX. L=105	000000	000000
8941341281	8-9413	4128	BOLT;SEMS, FAN FIX. L=105	000000	000017
8941341360	8-9413	4136	MANIFOLD; INLET	000000	000000
8941341380	8-9413	4138	RELAY;CHARGE W	000000	000000
8941341400	8-9413	4140	FLYWHEEL ASM.	000000	000000
8941342060	8-9413	4206	ELBOW; TACH DRIVE 4FB1	000002	000000
8941343480	8-9413	4348	SILENCER ASM.	000000	000000
8941345530			BOLT,STRG	000000	000000
8941345590			BRACKET; SHUTTER CONTROL	000000	000000
8941345601	8-9413	4560	BRACKET; GENERATOR	000000	000000
8941345610	8-9413	4561	PLATE; ADJ FAN BELT	000000	000005
8941345750	8-9413	4575	CLIP; HOSE TO O	000000	000005
8941345870	8-9413	4587	BOLT;FLANGE, (MS	000000	000000
8941346040	8-9413	4604	COLLAR	000000	000000
8941346640	8-9413	4664	GEAR;CLUSTER	000000	000000
8941346660	8-9413	4666	GEAR;COUNTER,5T	000000	000000
8941347050	8-9413	4705	BODY ASM	000000	000000
8941347060	8-9413	4706	HOSE; RADIATOR, LOWER 3KC	000000	000000
8941347250	8-9413	4725	VALVE SEAT,EXH	000002	000000
8941347320	8-9413	4732	GOVERNOR ASM.	000000	000000
8941347610	8-9413	4761	TRANSMISSION ASM.; WO/SPD	000000	000000
8941347650	8-9413	4765	WASHER;REV STOP	000000	000000
8941347800	8-9413	4780	PIPE; INLET	000000	000002
8941347801	8-9413	4780	PIPE; INLET	000000	000000
8941347810	8-9413	4781	PUMP ASM; INJ.	000000	000000
8941347811	8-9413	4781	PUMP ASM; INJ.	000000	000000
8941347820	8-9413	4782	GOVERNOR ASM.	000000	000000
8941347910	8-9413	4791	DOWEL; TIMING/TRANS CASE	000000	000000
8941347920	8-9413	4792	WASHER; PULLEY	000000	000008
8941352120	8-9413	5212	PIPE ASM; FUEL, PUMP LEAK	000002	000000
8941352130	8-9413	5213	COVER; TIMING GEAR CASE	000000	000000
8941352140	8-9413	5214	FLYWHEEL ASM.;	000000	000000
8941352160	8-9413	5216	PIPE ASM; FUEL FILTER PUM	000000	000000
8941352170	8-9413	5217	SUPERSEDED**BLOCK	000000	000000
8941352190	8-9413	5219	PAN ASM; OIL(FC)	000000	000000
8941352202	8-9413	5220	PUMP ASM; INJ.	000000	000000
8941352210	8-9413	5221	PUMP ASM; INJ.	000000	000000
8941352211	8-9413	5221	PUMP ASM; INJ.	000000	000000
8941353774	8-9413	5377	GLOW PLUGS	000000	000000
8941356500	8-9413	5650	LEVER; (A) 3KC1	000000	000000
8941356510	8-9413	5651	LEVER; (B) 3KC1	000000	000000
8941356511	8-9413	5651	LEVER; (B) 3KC1	000000	000000
8941356520	8-9413	5652	LEVER; (C) 3KC1	000000	000000
8941356521	8-9413	5652	LEVER; (C) 3KC1	000000	000000
8941356530	8-9413	5653	ROD;GEAR SHIFT,	000000	000000
8941356540	8-9413	5654	ROD;GEAR SHIFT,	000000	000000

8941356550	8-9413	5655	ROD;GEAR SHIFT,	000000	000000
8941356580	8-9413	5658	ARM;SHIFT REV-5	000000	000000
8941356591	8-9413	5659	BLOCK;SHIFT,REV	000000	000000
8941356690	8-9413	5669	BRACKET; SEDIME	000000	000000
8941356791	8-9413	5679	PISTON	000000	000000
8941356920	8-9413	5692	ADAPTER PTO	000000	000000
8941357180	8-9413	5718	SHIFT BLOCK, TOP	000000	000000
8941357182	8-9413	5718	SHIFT BLOCK, TOP	000000	000001
8941357191	8-9413	5719	SHIFT BLOCK, LOW	000000	000000
8941357192	8-9413	5719	BLOCK,SHIFT, 1ST & REVERS	000000	000000
8941357194	8-9413	5719	BLOCK,SHIFT, 1ST & REVERS	000000	000001
8941357230	8-9413	5723	PIN; LEVER-LINK PLATE 3KC	000000	000000
8941357471	8-9413	5747	OIL FILTER ELEMENT	000000	000000
8941357530	8-9413	5753	BEARING; BALL/ROTOR GEN	000000	000008
8941357600	8-9413	5760	TERMINAL;RECTIF	000000	000000
8941357710	8-9413	5771	PIN;SPR,SHIFT ARM	000000	000019
8941357790	8-9413	5779	PLUG;OIL FILTER BODY	000012	000000
8941357872	8-9413	5787	VALVE; INLET 3KB1	000000	000000
8941357873	8-9413	5787	VALVE; INLET 3KB1	000000	000004
8941357890	8-9413	5789	PIN;SPR.,LVR SE	000000	000000
8941358503	8-9413	5850	GASKET; CYL. HEAD	000000	000000
8941358570	8-9413	5857	WASHER; PL	000202	000213
8941358790	8-9413	5879	SHAFT; STUB	000000	000000
8941359440	8-9413	5944	STRAINER ASM; OIL PUMP	000000	000000
8941359850	8-9413	5985	RUBBER;SUPPORT	000000	000000
8941359851	8-9413	5985	RUBBER;SUPPORT	000000	000000
8941360690			GEAR ASM,OIL PU	000000	000000
8941360720			GEAR ASM.OIL PU	000000	000000
8941360873	8-9413	6087	GASKET; CYL HEAD 3KC1	000000	000022
8941361450	8-9413	6145	LEVER ASM; FUEL	000000	000000
8941361823	8-9413	6182	GASKET; CYL. HEAD 3KB1	000000	000002
8941362360	8-9413	6236	HOSE; RADIATOR, UPPER 3KC	000004	000000
8941362500	8-9413	6250	METAL SET; CONN	000000	000000
8941362582	8-9413	6258	PLATE; RR.	000000	000000
8941362590	8-9413	6259	CASE;CRANK	000000	000000
8941362592	8-9413	6259	CASE;CRANK	000000	000000
8941362751	8-9413	6275	HOSE; RADIATER, LOWER 3KC	000000	000012
8941362880	8-9413	6288	SHAFT; IDLE GEAR, C	000000	000000
8941364120	8-9413	6412	GUARD; FRONT 3KC1	000000	000000
8941364121	8-9413	6412	GUARD; FRONT 3KC1	000000	000001
8941364131	8-9413	6413	NET ASM; RADIATOR	000000	000000
8941364151	8-9413	6415	WASHER; PL., MU	000000	000000
8941364440	8-9413	6444	BRACKET; RADIATOR, LOWER	000000	000000
8941364441	8-9413	6444	BRACKET; RADIATOR, LOWER	000000	000001
8941364450	8-9413	6445	GUARD; FAN B	000000	000000
8941364460	8-9413	6446	BRACKET; RADIATOR, UPPER	000000	000000
8941365030	8-9413	6503	GOVERNOR ASM.	000000	000000

8941365040	8-9413	6504	STRAINER ASM; OIL PUMP	000000	000000
8941365430	8-9413	6543	PIPE ASM; INJ. #1	000000	000000
8941365440	8-9413	6544	PIPE ASM; INJ. #2	000000	000001
8941365450	8-9413	6545	PIPE ASM; INJ. #3	000000	000000
8941365462	8-9413	6546	PISTON	000000	000000
8941365740	8-9413	6574	STUD;OIL COOLER-FILTER	000000	000000
8941365750	8-9413	6575	PACKING; OIL COOLER	000000	000000
8941365900	8-9413	6590	PIPE ASM; INJECTION NO. 1	000000	000000
8941365910	8-9413	6591	PIPE ASM; INJECTION NO. 2	000000	000000
8941365920	8-9413	6592	PIPE ASM; INJECTION NO. 3	000000	000000
8941365930	8-9413	6593	PIPE ASM; INJECTION NO. 4	000000	000000
8941365940	8-9413	6594	PUMP ASM; INJ.	000000	000000
8941365960	8-9413	6596	PULLEY BOSS	000000	000000
8941366122	8-9413	6612	CASE; TIMING GEARS	000000	000000
8941366170	8-9413	6617	PIPE ASM;OIL GEAR CASE	000000	000000
8941366311	8-9413	6631	VALVE; RELIEF	000000	000000
8941366390	8-9413	6639	DIODE;RECEIVER TANK	000000	000000
8941367020	8-9413	6702	CLIP; VACCUM PIPE	000000	000000
8941368780	8-9413	6878	HANGER; RR ENGINE	000000	000000
8941368810	8-9413	6881	RADIATOR ASM	000000	000000
8941368980	8-9413	6898	ARMATURE ASM;STARTER	000003	000000
8941368990	8-9413	6899	COIL; STARTER	000001	000000
8941369000	8-9413	6900	BRUSH; STARTER	000000	000000
8941369010	8-9413	6901	BRUSH; PLATE, STARTER	000000	000000
8941373390	8-9413	7339	AIR FILTER	000000	000000
8941373981	8-9413	7398	PISTON; .25	000000	000000
8941373982	8-9413	7398	PISTON; .25	000000	000011
8941373991	8-9413	7399	PISTON; .50	000000	000000
8941373992	8-9413	7399	PISTON; .50	000000	000005
8941374040	8-9413	7404	RING SET; .25 PISTON	000000	000000
8941374050	8-9413	7405	RING SET; .50 PISTON	000000	000000
8941374190	8-9413	7419	LEVER; CONTROL	000000	000002
8941374270	8-9413	7427	GUIDE;FAN,RADIA	000000	000000
8941374272	8-9413	7427	GUIDE;FAN,RADIA	000000	000000
8941374273	8-9413	7427	GUIDE;FAN,RADIA	000000	000000
8941374280	8-9413	7428	MOUNTING ASM.;	000000	000000
8941374281	8-9413	7428	MOUNTING ASM.;	000000	000003
8941375220	8-9413	7522	BUSHING; CONN ROD	000000	000000
8941375230	8-9413	7523	ROD ASM; CONN	000000	000000
8941375330	8-9413	7533	TIMER 2K/3KC1	000000	000002
8941375340	8-9413	7534	VALVE; SOLENOID	000000	000000
8941376400	8-9413	7640	BLOCK; SHIFT	000000	000000
8941376740	8-9413	7674	CAP; NOZZLE FUEL END	000000	000000
8941376810	8-9413	7681	BUSHING; GEAR	000000	000000
8941376820	8-9413	7682	HOSE;BREATHER	000000	000002
8941377140	8-9413	7714	BRUSH (+)	000000	000000
8941377150	8-9413	7715	HOLDER ASM	000000	000000

8941377160	8-9413	7716	BRUSH; (-)	000000	000000
8941377170	8-9413	7717	COVER; REAR	000000	000000
8941378970	8-9413	7897	COIL; FIELD	000000	000000
8941378980	8-9413	7898	CASE ASM; GEAR	000000	000000
8941378990	8-9413	7899	BRACKET ASM; CENTER	000000	000000
8941379000	8-9413	7900	HOLDER ASM.	000000	000000
8941379010	8-9413	7901	BRUSH; (-)	000000	000000
8941379020	8-9413	7902	BRUSH; (+)	000000	000000
8941379030	8-9413	7903	SPRING; BRUSH	000000	000000
8941388230			GEAR; SPEEDOMETER	000000	000000
8941388933	8-9413	8893	AIR CLEANER	000000	000029
8941388940	8-9413	8894	COVER; AIR CLEANER	000000	000000
8941388941	8-9413	8894	COVER; AIR CLEANER	000000	000000
8941389132			PIPE; EXH, FRT	000000	000000
8941389133			EXH FRT PIPE	000000	000000
8941389690	8-9413	8969	FRAME ASM	000000	000000
8941389691	8-9413	8969	FRAME ASM.	000000	000000
8941390120	8-9413	9012	REGULATOR ASM; VOLTAGE, GEN	000000	000000
8941390131	8-9413	9013	HOLDER SUB ASM.	000000	000000
8941390132	8-9413	9013	HOLDER SUB ASM.	000005	000000
8941390141	8-9413	9014	SHEET; BRUSH, GEN	000000	000000
8941390170	8-9413	9017	PUMP ASM; INJ.	000000	000000
8941390353	8-9413	9035	PLUG; GLOW	000000	000000
8941390354	8-9413	9035	PLUG; GLOW	000000	000000
8941390890	8-9413	9089	BOLT; BEARING	000000	000000
8941391133	8-9413	9113	PIPE ASM; INJECTION NO. 2	000000	000000
8941391134	8-9413	9113	PIPE ASM; INJECTION NO. 2	000000	000000
8941391135	8-9413	9113	PIPE ASM; INJECTION NO. 2	000000	000001
8941391143	8-9413	9114	PIPE ASM; INJECTION NO. 3	000000	000000
8941391144	8-9413	9114	PIPE ASM; INJECTION NO. 3	000000	000001
8941391145	8-9413	9114	PIPE ASM; INJECTION NO. 3	000000	000000
8941391480	8-9413	9148	BRACKET; CONT. STOP CABLE	000000	000000
8941392290	8-9413	9229	BOLT; BEARING	000000	000000
8941392610	8-9413	9261	DIAPHRAGM	000000	000000
8941392620	8-9413	9262	LEVER	000000	000000
8941392630	8-9413	9263	PLATE	000000	000000
8941392640	8-9413	9264	SPRING; GOVERNOR	000000	000000
8941392650	8-9413	9265	SPRING; GOVERNOR	000000	000000
8941392660	8-9413	9266	DIAPHRAGM	000000	000000
8941392670	8-9413	9267	SPRING; GOVERNOR	000000	000000
8941392690			PISTON SET; STD	000000	000000
8941392700	8-9413	9270	PISTON SET; .25	000000	000000
8941392710	8-9413	9271	PISTON SET	000000	000000
8941392720	8-9413	9272	PISTON SET; .75	000000	000000
8941392730	8-9413	9273	PISTON SET; 1.00	000000	000000
8941392751	8-9413	9275	GOVERNOR ASM.	000000	000000
8941392992			HORN ASM, LOW	000000	000000

8941392993		HORN ASM.; LOW	000000	000003
8941393222		LEVER ASM.; FUEL CUT	000000	000000
8941393401	8-9413	9340 PULLEY	000000	000000
8941393402	8-9413	9340 PULLEY	000000	000031
8941393403	8-9413	9340 PULLEY	000000	000000
8941393404	8-9713	9340 PULLEY	000000	000001
8941393420	8-9413	9342 ARM ASM;ROCKER	000000	000000
8941393430	8-9413	9343 SHAFT;ROCKER	000000	000000
8941393840	8-9413	9384 SPRING;ROCKER	000000	000000
8941394652	8-9413	9465 HOLDER ASM.	000000	000000
8941394960	8-9413	9496 GUARD; FAN A	000000	000000
8941394970	8-9413	9497 SPRING KIT; ANGLEICH 3000	000003	000000
8941395261	8-9413	9526 GASKET; EXH,MAN	000000	000000
8941395290	8-9413	9529 STUD;STARTER	000000	000000
8941396650	8-9413	9665 CRANKSHAFT ASM	000000	000001
8941396690	8-9413	9669 CRANKSHAFT ASM	000000	000001
8941396820	8-9413	9682 METAL KIT; CRANK	000000	000000
8941397380	8-9413	9738 GASKET; INLET MANIFOLD	000000	000000
8941397431	8-9413	9743 GEAR; INJ. PUMP	000000	000000
8941397441	8-9413	9744 GEAR; INJ. PUMP	000000	000000
8941397471	8-9413	9747 PIPE ASM; OIL GEAR 4JA/B1	000000	000000
8941397540	8-9413	9754 GEAR; C/SHAFT	000000	000000
8941397551	8-9413	9755 PULLEY; CRANKSHAFT	000000	000000
8941397581	8-9413	9758 SHAFT; IDLE GEAR A 4JA/B1	000000	000000
8941397590	8-9413	9759 GEAR; IDLER	000000	000000
8941397610	8-9413	9761 GEAR; IDLE	000000	000000
8941397620	8-9413	9762 GEAR; W/BRG. IDLE "B"	000013	000000
8941398450	8-9413	9845 MANIFOLD; EXHAUST, A	000000	000000
8941398451	8-9413	9845 MANIFOLD; EXHAUST, A	000000	000001
8941398461	8-9413	9846 MANIFOLD; EXHAUST, B	000000	000000
8941398471	8-9413	9847 PUMP ASM; INJ.	000000	000000
8941398881	8-9413	9888 INJ PUMP **INVALID FAX523	000000	000000
8941399474	8-9413	9947 PUMP ASM; OIL	000000	000000
8941399510	8-9413	9951 PAN ASM; OIL,W/DRAIN PLUG	000000	000000
8941399530	8-9413	9953 PUMP ASM; INJ.	000000	000000
8941399540	8-9413	9954 PUMP ASM; INJ.	000000	000000
8941399640		PIN;JOINT RELAY	000000	000000
8941401020	8-9414	0102 SWITCH	000004	000000
8941401072	8-9414	0107 MUFFLER	000000	000000
8941401152	8-9414	0115 GLOW PLUGS	000000	000000
8941401153	8-9414	0115 PLUG; GLOW	000000	000000
8941401154	8-9414	0115 PLUG; GLOW	000000	000000
8941401155	8-9414	0115 PLUG; GLOW	000000	000000
8941401156	8-9414	0115 PLUG; GLOW	000000	000000
8941401157	8-9414	0115 PLUG; GLOW	000133	000000
8941401171	8-9414	0117 GASKET; GEAR CASE	000000	000000
8941401600	8-9414	0160 HOSE;RUBBER.CHK L=335	000000	000000

8941401601	8-9414	0160	HOSE;RUBBER.CHK L=335	000000	000000
8941401840	8-9414	0184	SPACER 3KC1	000002	000000
8941403412	8-9414	0341	WATER PUMP KIT	000000	000000
8941403420	8-9414	0342	BODY;*INVALID*	000000	000000
8941404271	8-9414	0427	BUSHING;MTG RUBBER,CYL HD	000000	000012
8941404281	8-9414	0428	RUBBER;MTG,HD COVER,OUTER	000000	000000
8941404310	8-9414	0431	CLIP;WIRE,OIL C	000000	000000
8941404880	8-9414	0488	TWO GROOVE PULLEY	000000	000000
8941404881	8-9414	0488	TWO GROOVE PULLEY	000000	000000
8941404882	8-9414	0488	TWO GROOVE PULLEY	000000	000000
8941404883	8-9414	0488	TWO GROOVE PULLEY	000000	000000
8941405801	8-9414	0580	HOSE; FUEL, L=170	000000	000000
8941405811	8-9414	0581	FILLER ASM.; OIL	000009	000000
8941405812	8-9414	0581	FILLER ASM.; OIL	000001	000000
8941406270	8-9414	0627	BELT; FAN	000000	000001
8941406280	8-9414	0628	SEAL;O-RING	000000	000015
8941407380	8-9414	0738	MAGNET; OIL PAN	000000	000097
8941410730	8-9414	1073	HOSE; RADIATOR, LOWER 2K/	000002	000001
8941410740	8-9414	1074	RELIEF VALVE	000000	000000
8941411210	8-9414	1121	TUBE ASM; OIL GUIDE	000000	000000
8941413530	8-9414	1353	CONNECTOR; HARNESS	000188	000267
8941413540	8-9414	1354	TERMINAL;ELECTICAL (T-35)	000821	000000
8941413810	8-9414	1381	FILTER ASM; FUEL 3KC1	000000	000000
8941415261	8-9414	1526	PUMP ASM; INJ.	000000	000000
8941415330	8-9414	1533	PUMP;FEED	000000	000000
8941415340	8-9414	1534	PUMP ASM; FEED C240	000000	000065
8941415360	8-9414	1536	PUMP; FEED	000000	000000
8941415370	8-9414	1537	PUMP; FEED	000000	000000
8941415380	8-9414	1538	PUMP; FEED 3AB1	000000	000002
8941415390	8-9414	1539	PUMP FEED	000000	000000
8941415450	8-9414	1545	GEAR;SPEED,Z=20	000000	000000
8941417070	8-9414	1707	ARM;SHIFT, TOP-3	000000	000000
8941417080	8-9414	1708	ARM; SHIFT, LOW-2ND	000000	000000
8941417110	8-9414	1711	BLOCK;SHIFT, TOP	000000	000000
8941417111	8-9414	1711	BLOCK;SHIFT, TOP	000000	000000
8941417120	8-9414	1712	ROD;SHIFT TOP-3	000000	000000
8941417130	8-9414	1713	ROD;SHIFT, 2ND-L	000000	000000
8941417141	8-9414	1714	ROD; SHIFT, REV. - O.D.	000000	000000
8941417200	8-9414	1720	BELT; A/C CMPR.	000000	000000
8941417210	8-9414	1721	BELT; POWER STR	000000	000000
8941417731	8-9414	1773	STUD;MANIF TO T	000000	000000
8941418464			PUMP ASM; WATER	000000	000000
8941418465	8-9414	1846	PUMP ASM; WATER	000000	000000
8941418661	8-9414	1866	REPAIR KIT; MASTER V	000000	000000
8941418662	8-9414	1866	REPAIR KIT; MASTER V	000000	000000
8941418840	8-9414	1884	HOSE; RADIATOR, LOWER 3KC	000000	000002
8941419370	8-9414	1937	COLLAR; THRUST 4JA/B1	000000	000000

8941419371	8-9414	1937	COLLAR; THRUST	000000	000054
8941420432			FRT SPRING BUMP STPS.	000000	000000
8941421170	8-9414	2117	WASHER; PL.BK.DR	000000	000000
8941421530	8-9414	2153	PLATE; F, CYL. BLOCK	000000	000000
8941421541	8-9414	2154	CASE; TIMING GEARS	000000	000000
8941421560	8-9414	2156	WASHER; FLYWHEEL 4JA/B1	000000	000000
8941421561	8-9414	2156	WASHER; FLYWHEEL 4JA/B1	000000	000030
8941421570	8-9414	2157	PUMP ASM; OIL W/STRAINER	000000	000000
8941421572	8-9414	2157	PUMP ASM; OIL W/STRAINER	000000	000000
8941421573	8-9414	2157	PUMP ASM; OIL W/STRAINER	000001	000000
8941421590	8-9414	2159	PACKING; INLET MANIFOLD 4	000000	000017
8941421602	8-9414	2160	MANIFOLD; INLET	000000	000000
8941421612	8-9414	2161	MANIFOLD; EXH.	000000	000000
8941421620	8-9414	2162	UNDER PLATE;	000000	000000
8941421700	8-9414	2170	FILTER ASM	000000	000000
8941421880	8-9414	2188	CRANKSHAFT ASM	000000	000000
8941421920	8-9414	2192	CRANKSHAFT ASM	000000	000006
8941422080	8-9414	2208	BRG SET; CONN ROD-STD	000000	000914
8941422390	8-9414	2239	ADAPTER	000000	000000
8941422400	8-9414	2240	HOSE JOINT	000001	000000
8941422561	8-9414	2256	BOLT*	000000	000000
8941422620	8-9414	2262	STARTER; NIKKO	000001	000001
8941422790	8-9414	2279	FILTER ASM.; OIL	000000	000000
8941422792	8-9414	2279	FILTER ASM.; OIL	000000	000000
8941422980	8-9414	2298	HANGER; ENGINE LIFTING	000000	000000
8941422990	8-9414	2299	HANGER; FRONT 3KR1	000000	000000
8941423012	8-9414	2301	PIPE ASM; WATER	000000	000000
8941423030	8-9414	2303	CLIP; OIL FILLER	000000	000000
8941423040	8-9414	2304	CLIP; HOSE, ENG SIDE BOTTM	000000	000000
8941425892			PULL; DOOR, RR DOOR	000000	000003
8941428700			PIPE; EXHAUST 2KC1	000000	000006
8941429290	8-9414	2929	FAN ASSM: COOLING	000000	000000
8941429410	8-9414	2941	CLIP; HOSE FIX.	000000	000000
8941429430	8-9414	2943	GAUGE ASM; OIL LEVEL	000000	000000
8941430280	8-9414	3028	COVER ASM; FRONT	000000	000000
8941430300	8-9414	3030	PULLEY ASM; GEN.	000000	000008
8941430310	8-9414	3031	COVER; RR COVER STARTER	000000	000000
8941430320	8-9414	3032	COVER ASM; REAR	000000	000000
8941430460	8-9414	3046	LEVER; SWIVEL LEVER	000000	000000
8941430520			PIPE ASM; INJECTION #1	000000	000001
8941430530	8-9414	3053	PIPE ASM; INJECTION #2	000000	000000
8941431520	8-9414	3152	CLIP; RUBBER HOS	000000	000000
8941431521	8-9414	3152	CLIP; THROTTLE	000000	000000
8941431522	8-9414	3152	CLIP; THROTTLE	000000	000000
8941432020	8-9414	3202	PUSH ROD C	000000	000001
8941432030	8-9414	3203	ROD; PUSH	000000	000000
8941432050	8-9414	3205	OIL FILTER; DSEL	000000	000000

8941432440	8-9414	3244	BEARING SET; CRANK	000000	000000
8941432550	8-9414	3255	VALVE; RELEASE 4JB1	000000	000000
8941432551	8-9414	3255	VALVE; RELEASE 4JB1	000001	000000
8941433570	8-9414	3357	CUSHION; BRKT TO DUCT	000000	000000
8941433580	8-9414	3358	BRACKET; INLET D	000000	000000
8941433590	8-9414	3359	DUCT; INLET	000000	000000
8941433930	8-9414	3393	TAPPET 3KR1	000000	000002
8941433941	8-9414	3394	ADJUSTER T=2.35 3KR1	000000	000000
8941433951	8-9414	3395	ADJUSTER T=2.40 3KR1	000000	000000
8941433961	8-9414	3396	ADJUSTER T=2.450 3KR1	000000	000000
8941433971	8-9414	3397	ADJUSTER T=2.50 3KR1	000000	000000
8941433981	8-9414	3398	ADJUSTER T=2.55 3KR1	000000	000000
8941433991	8-9414	3399	ADJUSTER T=2.60 3KR1	000000	000000
8941434001	8-9414	3400	ADJUSTER T=2.65 3KR1	000000	000000
8941434011	8-9414	3401	ADJUSTER T=2.70 3KR1	000000	000000
8941434021	8-9414	3402	ADJUSTER T=2.75 3KR1	000000	000000
8941434031	8-9414	3403	ADJUSTER T=2.80 3KR1	000000	000000
8941434040	8-9414	3404	ADJUSTER T=2.85 3KR1	000000	000000
8941434050	8-9414	3405	ADJUSTER T=2.90 3KR1	000000	000000
8941434051	8-9414	3405	ADJUSTER T=2.90 3KR1	000000	000000
8941434060	8-9414	3406	ADJUSTER T=2.95 3KR1	000000	000000
8941434070	8-9414	3407	ADJUSTER T=3.00 3KR1	000000	000000
8941434071	8-9414	3407	ADJUSTER T=3.00 3KR1	000000	000000
8941434080	8-9414	3408	ADJUSTER T=3.05 3KR1	000000	000000
8941434090	8-9414	3409	ADJUSTER T=3.10	000000	000000
8941434091	8-9414	3409	ADJUSTER T=3.10	000008	000000
8941434100	8-9414	3410	ADJUSTER T=3.15 3KR1	000001	000000
8941434111	8-9414	3411	ADJUSTER T=3.20 3KR1	000000	000000
8941434120	8-9414	3412	ADJUSTER T=3.25 3KR1	000000	000000
8941434121	8-9414	3412	ADJUSTER T=3.25 3KR1	000000	000000
8941434130	8-9414	3413	ADJUSTER T=3.30 3KR1	000001	000000
8941434141	8-9414	3414	ADJUSTER T=3.35 3KR1	000000	000000
8941434150	8-9414	3415	ADJUSTER T=3.40 3KR1	000000	000000
8941434151	8-9414	3415	ADJUSTER T=3.40 3KR1	000001	000000
8941434161	8-9414	3416	ADJUSTER T=3.45 3KR1	000000	000000
8941434170	8-9414	3417	ADJUSTER T=3.50 3KR1	000000	000000
8941434171	8-9414	3417	ADJUSTER T=3.50 3KR1	000000	000000
8941434180	8-9414	3418	ADJUSTER T=3.55 3KR1	000000	000000
8941434181	8-9414	3418	ADJUSTER T=3.55 3KR1	000000	000000
8941434190	8-9414	3419	ADJUSTER T=3.60 3KR1	000000	000000
8941434191	8-9414	3419	ADJUSTER T=3.60 3KR1	000001	000000
8941434200	8-9414	3420	ADJUSTER T=3.65 3KR1	000000	000000
8941434201	8-9414	3420	ADJUSTER T=3.65 3KR1	000000	000000
8941434210	8-9414	3421	ADJUSTER T=3.70 3KR1	000001	000000
8941434220	8-9414	3422	ADJUSTER T=3.75 3KR1	000000	000000
8941434221	8-9414	3422	ADJUSTER T=3.75 3KR1	000000	000000
8941434770	8-9414	3477	FILTER; ASM; FUEL	000000	000000

8941434771	8-9414	3477	FILTER;ASM;FUEL	000000	000000
8941434790	8-9414	3479	FUEL FILTER	000000	000000
8941435130			GUIDE; VLV	000000	000486
8941435140			VALVE SEAT; INSERT 4JC1	000000	000234
8941435150	8-9414	3515	VALVE SEAT;INSERT 4JC1	000000	000396
8941435220	8-9414	3522	PIN; PISTON 4JC1	000007	000000
8941435550	8-9414	3555	PLUG; TENSIONER	000000	000000
8941435561	8-9414	3556	PIPE ASM; FUEL, PUMP-FILT	000000	000000
8941435801	8-9414	3580	BRACKET; HOLDER 4JA1/B1	000000	000000
8941435880	8-9414	3588	HOSE; PCV, RR.	000000	000000
8941436130	8-9414	3613	BELT; FAN	000002	000000
8941436152	8-9414	3615	MANIFOLD; INLET 3KR1	000000	000000
8941436161	8-9414	3616	MANIFOLD; EXHAUST	000000	000000
8941436180			BOLT; MT. RUBBER	000000	000004
8941436181			BOLT; MT. RUBBER	000000	000000
8941442250	8-9414	4225	STUD; EXH MAN.	000010	000000
8941442290	8-9414	4229	PIPE ASM.; EXH SILENCER C	000000	000000
8941442320	8-9414	4232	PUMP ASM; INJ.	000000	000000
8941442330	8-9414	4233	PUMP ASM; INJ.	000000	000000
8941442340	8-9414	4234	PUMP ASM; INJ.	000000	000000
8941442420			CLUTCH SLAVE CYL	000000	000000
8941442430	8-9414	4243	SLAVE CYL.;CLUT	000000	000000
8941442992			FILTER ASM.; FU	000000	000000
8941442993			FILTER ASM.; FU	000000	000000
8941443010			BELT; FAN	000002	000000
8941443020	8-9414	4302	PULLEY; FAN	000000	000000
8941443023	8-9414	4302	PULLEY; FAN	000000	000000
8941443024	8-9414	4302	PULLEY; FAN	000000	000001
8941444120	8-9414	4412	PLUG; GLOW	000000	000000
8941444121	8-9414	4412	PLUG; GLOW	000000	000000
8941444123	8-9414	4412	PLUG; GLOW	000000	000000
8941444210	8-9414	4421	COVER ASM; CYL HEAD	000000	000000
8941444690	8-9414	4469	SCREW; W/WASHER	000000	000000
8941445000	8-9414	4500	GASKET	000000	000000
8941445160	8-9414	4516	GASKET	000000	000000
8941445860	8-9414	4586	RETAINER; ADJ PL	000000	000000
8941445880	8-9414	4588	GASKET;BL (NON-ASBESTOS)	000000	000323
8941445980	8-9414	4598	COVER ASM; CLY HEAD	000000	000000
8941445990	8-9414	4599	COVER ASM; CYL HEAD 2KC/3	000000	000000
8941445991	8-9414	4599	COVER ASM; CYL HEAD 2KC/3	000000	000000
8941446121			FUEL FILTER	000000	000000
8941446130	8-9414	4613	FUEL FILTER	000000	000000
8941446171	8-9414	4617	PUMP ASM; INJ.	000000	000000
8941446172	8-9414	4617	PUMP ASM; INJ.	000000	000000
8941446180	8-9414	4618	GOVERNOR ASM.	000000	000000
8941447120			SWITCH ASM;THRO	000001	000001
8941447220			FLOAT ASM.	000000	000000

8941447430			DISC; CLUTCH, STRAIGHT SP	000000	000000
8941448510	8-9414	4851	SPACER; INLET T=22	000000	000000
8941449300	8-9414	4930	GUARD;PROP	000000	000000
8941449310	8-9414	4931	BRACKET;PROP	000000	000000
8941449311	8-9414	4931	BRACKET;PROP	000000	000000
8941449330	8-9414	4933	SEDIMENTER ASM 4BD1T	000000	000000
8941449332	8-9414	4933	SEDIMENTER ASM 4BD1T	000000	000000
8941449333	8-9414	4933	SEDIMENTER ASM 4BD1T	000000	000000
8941449334	8-9414	4933	SEDIMENTER ASM 4BD1T	000000	000000
8941449350	8-9414	4935	RUBBER ASM.;ENG	000000	000000
8941449360	8-9414	4936	RUBBER ASM,ENG.	000000	000000
8941449570	8-9414	4957	BOLT;BRACKET	000000	000000
8941449630	8-9414	4963	BOLT; TAPPET	000000	000000
8941449631			BOLT; TAPPET	000000	000000
8941450940	8-9414	5094	VALVE; DELIVERY	000000	000000
8941451010	8-9414	5101	FLYWEIGHT ASM; 3KC1/2KC1	000000	000000
8941452220	8-9414	5222	TUBE ASM; OIL GUIDE	000000	000000
8941452620	8-9414	5262	PULLEY; CRANKSHAFT	000000	000000
8941452680	8-9414	5268	PULLEY;FAN DRIV	000000	000000
8941452960	8-9414	5296	RETAINER	000000	000000
8941458040	8-9414	5804	HOSE; RUBBER BREATHER	000001	000003
8941458370	8-9414	5837	FLYWHEEL ASM	000000	000000
8941458380	8-9414	5838	PUMP ASM; INJ.	000000	000000
8941458390	8-9414	5839	GASKET; CYL. HE	000000	000000
8941458391	8-9414	5839	GASKET; CYL. HE	000000	000088
8941458911	8-9414	5891	GASKET,CYL HEAD 4JC1	000000	000000
8941458912	8-9414	5891	GASKET,CYL HEAD 4JC1	000000	000054
8941459112	8-9414	5911	PUMP ASM; INJ.	000000	000000
8941459470	8-9414	5947	GLOW PLUG	000015	000000
8941459971			HEAD ASM; CYL	000000	000002
8941460210	8-9414	6021	HOSE;RUBBER ROD(L=900)	000000	000000
8941460281	8-9414	6028	BRACKET; ENG. CONT. FUEL	000000	000000
8941460282	8-9414	6028	BRACKET; ENG. CONT. FUEL	000000	000000
8941461212	8-9414	6121	COVER ASM;CYL	000000	000000
8941461320	8-9414	6132	ROD; PUSH	000014	000000
8941461930	8-9414	6193	FERRULE; OIL PU	000000	000003
8941462121			HEAD LAMP ASM; RH	000000	000000
8941462130			HEADLAMP ASM; LH	000000	000000
8941462131			HEADLAMP ASM; LH	000000	000000
8941462490	8-9414	6249	PACKING; INL. M	000000	000005
8941462920	8-9414	6292	GASKET; EXHAUST PIPE 3KR	000000	000000
8941462960	8-9414	6296	HOSE; RUBBER BY-PASS	000000	000003
8941462970	8-9414	6297	HOSE BY-PASS	000000	000006
8941463152	8-9414	6315	SUPERSEDED**HOUSING	000000	000000
8941463153	8-9414	6315	HOUSING; FLYWHEEL	000000	000000
8941463680	8-9414	6368	PLATE; CAUTION, T/M MSB5M	000000	000000
8941464211			WATER HOSE	000000	000000

8941464230			A/C BELT	000000	000003
8941464830	8-9414	6483	RING;SNAP ANTI-	000000	000000
8941464861	8-9414	6486	BOLT;	000000	000000
8941465340	8-9414	6534	BLOCK ASM; CYLINDER	000000	000000
8941465690	8-9414	6569	STUD; EXH. MANIFOLD	000000	000000
8941465820	8-9414	6582	BOLT; EYE 4JA/B1	000017	000000
8941466380	8-9414	6638	PULLEY; FAN DRIVE	000000	000000
8941466381	8-9414	6638	PULLEY; FAN DRIVE	000000	000000
8941466382	8-9414	6638	PULLEY; FAN DRIVE	000000	000059
8941466790	8-9414	6679	FLYWEIGHT	000000	000000
8941466800	8-9414	6680	SPRING; TIMER	000000	000000
8941466822	8-9414	6682	HOSE; WATER L=2030	000000	000000
8941469530	8-9414	6953	BELT;COOLING	000000	000000
8941469910	8-9414	6991	BEARING;NEEDLE,INPUT GEAR	000000	000000
8941470080	8-9414	7008	HOSE; RUBBER	000000	000000
8941470090	8-9414	7009	BRACKET; SOLENOIDE FIX	000000	000000
8941471712	8-9414	7171	COVER ASM; CYL HEAD 3KR1	000000	000000
8941471743	8-9414	7174	CASE; TIMING GEARS	000000	000000
8941471744	8-9414	7174	CASE; TIMING GEARS	000000	000000
8941471761	8-9414	7176	COVER; TIMING GEAR CASE	000000	000000
8941471771	8-9414	7177	FLYWHEEL ASM	000000	000000
8941471772	8-9414	7177	FLYWHEEL ASM	000000	000000
8941471791	8-9414	7179	PAN ASM; OIL	000001	000000
8941472380	8-9414	7238	COCK; WATER DRAIN	000000	000000
8941473180	8-9414	7318	NIPPLE; WATER D	000000	000000
8941473971	8-9414	7397	MANIFOLD; INLET	000000	000000
8941474100	8-9414	7410	METAL BRG;NO.3,UPR	000000	000000
8941474220	8-9414	7422	PUMP ASM; INJ.	000000	000000
8941474230	8-9414	7423	GOVERNOR ASM.; FIG.53B	000000	000000
8941474241	8-9414	7424	HOUSING; FLYWHEEL	000000	000000
8941474560	8-9414	7456	PLATE; ADJ ACG 3KR1	000004	000000
8941474660	8-9414	7466	METAL KIT	000000	000000
8941474661	8-9414	7466	METAL KIT	000000	000002
8941474670	8-9414	7467	METAL KIT; UNS	000000	000000
8941474671	8-9414	7467	METAL KIT; UNS	000000	000004
8941474680	8-9414	7468	METAL KIT	000000	000017
8941474690	8-9414	7469	BRG KIT; CRANK	000000	000000
8941474691	8-9414	7469	METAL KIT; 1.00 CRANK	000001	000000
8941474701	8-9414	7470	SEAT; VALVE, INSERT INLET	000000	000000
8941474760	8-9414	7476	COVER; MANIFOLD	000000	000000
8941474950	8-9414	7495	FAN ASM; COOLING	000000	000001
8941474970	8-9414	7497	BELT; COOLING	000000	000000
8941475062			DUCT; WATER CYL	000000	000000
8941475063			DUCT; WATER CYL	000000	000000
8941475064			DUCT; WATER CYL	000000	000913
8941475070			ADAPTER; WATER DUCT	000000	000000
8941475100			GASKET; COVER PLATE	000000	000000

8941475191			SHAFT; IDLE GEAR	000000	000000
8941475280			GASKET	000000	000000
8941475290	8-9414	7529	PACKING; OIL PAN TO F, PL	000000	001519
8941475330	8-9414	7533	MANIFOLD ASM;	000000	000012
8941475341			PIPE ASM; INJ	000000	000026
8941475351			PIPE ASM; INJ	000042	000000
8941475362			PIPE; INJ	000000	000080
8941475371			PIPE; ASM; INJ	000000	000044
8941475470			BRACKET; INJ PUMP	000089	000000
8941475480			BRACKET; INJ	000000	000086
8941475920			GASKET; TIMING GEAR	000000	000000
8941475930			DOWEL; TIMING GEAR	000000	000000
8941475931			DOWEL; TIMING GEAR	000000	000863
8941475941			BOLT; PULLEY	000000	000000
8941475942			BOLT; CR/SHF PULLEY	000000	000208
8941475943			BOLT; CR/SHF PULLEY	000000	000000
8941476030			SHAFT; LEVER	000000	000000
8941478130	8-9414	7813	BELT; COOLING FA	000000	000000
8941478140	8-9414	7814	PIPE; VINYL, BREATHER	000000	000000
8941480601	8-9414	8060	SEAL; O-RING, COVER	000003	000000
8941480760			PLATE; MIDDLE	000000	000000
8941480780	8-9414	8078	WASHER; ENG. CONT	000000	000027
8941480790	8-9414	8079	DOWEL/PIN; CYL HD GSK STNG	000000	000102
8941481060			HOUSING; GEAR P.S.	000000	000000
8941481580	8-9414	8158	PISTON CUP; SLAV	000000	000056
8941481590	8-9414	8159	PIPE ASM; FUEL LEAK OFF 3	000000	000003
8941481960	8-9414	8196	SPR.; ANTI-LASH	000000	000004
8941482021	8-9414	8202	PULLEY; CRANKSHAFT	000000	000000
8941482200	8-9414	8220	COVER; TIMING GEAR CASE	000001	000000
8941483150	8-9414	8315	CLIP; HRNSS, BAND, AIR BREAT	000000	000141
8941483900	8-9414	8390	PIPE; FUEL, SED	000000	000021
8941483902	8-9414	8390	PIPE; FUEL, SED	000000	000000
8941483922	8-9414	8392	WASHER; NOZZLE HOLDER	000000	000000
8941484230	8-9414	8423	BOLT*	000000	000000
8941484963	8-9414	8496	PUMP ASM; OIL	000000	000000
8941484982	8-9414	8498	COVER ASM; OIL PUMP 3KR1	000000	000000
8941484984	8-9414	8498	COVER ASM; OIL PUMP 3KR1	000000	000000
8941485141	8-9414	8514	PACKING; OIL 3KR1	000000	000000
8941485780	8-9414	8578	PIPE ASM; FUEL LEAK OFF 3	000000	000003
8941486160	8-9414	8616	BOLT; OIL FILTER	000000	000000
8941486161	8-9414	8616	BOLT; OIL FILTER	000000	000004
8941486170	8-9414	8617	BOLT; FILTER, OIL	000000	000000
8941486171	8-9414	8617	BOLT; OIL FILTER	000006	000019
8941486191	8-9414	8619	BOLT; FILTER FIX.	000000	000000
8941486650	8-9414	8665	PROTECTOR; HEAT	000000	000000
8941486660	8-9414	8666	PIPE; TAIL 2KC1	000000	000000
8941486680	8-9414	8668	BOLT; EYE	000001	000000

8941486730	8-9414	8673	PIPE ASM; OIL HEAD FEED	000000	000000
8941486731	8-9414	8673	PIPE ASM; OIL HEAD FEED	000000	000000
8941486740	8-9414	8674	PROTECTOR	000000	000000
8941486891	8-9414	8689	PAN ASM; OIL	000000	000000
8941486970	8-9414	8697	TUBE;DISTANCE	000000	000000
8941486990	8-9414	8699	3ANGER; FRONT	000000	000000
8941487020	8-9414	8702	PACKING; FILLER	000000	000000
8941487060	8-9414	8706	PIPE ASM; WATER	000000	000000
8941487160	8-9414	8716	PISTON; .25	000000	000000
8941487161	8-9414	8716	PISTON; .25	000003	000000
8941487170	8-9414	8717	PISTON; .50	000000	000000
8941487171	8-9414	8717	PISTON; .50	000000	000000
8941487182	8-9414	8718	PISTON; .25	000003	000003
8941487190	8-9414	8719	PISTON; .50	000000	000000
8941487191	8-9414	8719	PISTON; .50	000000	000000
8941487240	8-9414	8724	RING SET; .25 PISTON	000000	000000
8941487250	8-9414	8725	RING SET; .50 PISTON	000000	000001
8941487370	8-9414	8737	GASKET;OVERSIZED CYL HEAD	000000	000003
8941487390	8-9414	8739	GASKET; CYL. HEAD 3KB1	000000	000000
8941487470	8-9414	8747	DIAPHRAGM C240	000001	000000
8941487480	8-9414	8748	LEVER	000000	000000
8941487490	8-9414	8749	PLATE	000000	000000
8941487500	8-9414	8750	SEAT*	000000	000000
8941487510	8-9414	8751	SEAT*	000000	000000
8941488142	8-9414	8814	PISTON; STD	000000	000000
8941488150	8-9414	8815	CAMSHAFT	000000	000002
8941488170	8-9414	8817	FLYWHEEL	000001	000000
8941488171	8-9414	8817	FLYWHEEL	000000	000000
8941488190	8-9414	8819	OVERSIZE HEAD GASKET	000000	000000
8941488210	8-9414	8821	OVERSIZE HEAD GASKET	000000	000000
8941488220	8-9414	8822	FLYWHEEL ASM.	000000	000000
8941488240	8-9414	8824	THERMOSTAT (65 C)	000000	000000
8941488252	8-9414	8825	PULLEY	000000	000000
8941488270	8-9414	8827	HOSE; RUBBER BY-PASS	000000	000000
8941488310	8-9414	8831	CLIP; WATER PIPE	000000	000000
8941488320	8-9414	8832	BOLT; MANIFOLD L=125	000000	000000
8941488330	8-9414	8833	BOLT; MANIFOLD L=135	000000	000000
8941488341	8-9414	8834	PULLEY; FAN, D=113 3KR1	000000	000000
8941488342	8-9414	8834	PULLEY; FAN, D=113 3KR1	000000	000001
8941488850	8-9414	8885	GASKET; TURBOCHARGER TO E	000000	000005
8941489350	8-9414	8935	BEARING;THRUST,NEEDLE,1ST	000000	000002
8941489700	8-9414	8970	BELT; FAN 3KR1	000000	000018
8941489760	8-9414	8976	HOSE; LOWER-RAD.	000000	000000
8941489790	8-9414	8979	BODY ASM;OIL PUMP	000000	000000
8941489793	8-9414	8979	BODY ASM;OIL PUMP	000000	000000
8941489870	8-9414	8987	PACKING	000000	000000
8941490882	8-9414	9088	VALVE; INLET 3KR1	000000	000008

8941490900	8-9414	9090	GASKET; MANIFOLD	000000	000000
8941490910	8-9414	9091	CLIP; HOSE	000000	000000
8941490920	8-9414	9092	STAY; HOSE FIXING	000000	000000
8941490931	8-9414	9093	HOSE; T'STAT HSG	000000	000025
8941490941	8-9414	9094	HOSE; OIL COOLER	000000	000013
8941491070	8-9414	9107	SPRING	000000	000000
8941491110	8-9414	9111	COVER; W/P	000000	000000
8941491130	8-9414	9113	IMPELLER	000000	000000
8941491430	8-9414	9143	FOOT; ENGINE FT RH	000000	000000
8941491710			DIODE;GEN	000000	000000
8941491820	8-9414	9182	COVER; GOV.	000000	000000
8941491830	8-9414	9183	BUSH; GOV. COVER	000000	000000
8941491840	8-9414	9184	LEVER	000000	000000
8941491850	8-9414	9185	CAP	000000	000000
8941491860	8-9414	9186	SHIM; LEVER T=0.20	000000	000000
8941491870	8-9414	9187	SHIM; LEVER T=0.25	000000	000000
8941491880	8-9414	9188	SHIM; LEVER T=0.30	000000	000000
8941491890	8-9414	9189	SHIM; LEVER T=0.35	000000	000000
8941491900	8-9414	9190	SHIM; LEVER T=0.40	000000	000000
8941491910	8-9414	9191	SHIM; LEVER T=0.50	000000	000000
8941492471	8-9414	9247	PAN ASM.; OIL (000000	000001
8941492490	8-9414	9249	STARTER	000000	000000
8941492500	8-9414	9250	CLUTCH ASM; PINION	000000	000000
8941492510	8-9414	9251	COVER; REAR	000000	000000
8941492520	8-9414	9252	CASE; GEAR	000000	000000
8941493210	8-9414	9321	O-RING	000000	000000
8941493470	8-9414	9347	PIPE ASM:NOZZLE LEAK	000000	000000
8941493491	8-9414	9349	CONNECTOR; CMPR TO FLEXHS	000000	000000
8941493501	8-9414	9350	CRANKSHAFT ARM	000000	000000
8941493541	8-9414	9354	PIPE ASM; S/WATER PUMP	000000	000000
8941493580	8-9414	9358	PLATE; ADJ.	000000	000001
8941493591	8-9414	9359	PULLEY; COOLING	000000	000065
8941493781	8-9414	9378	MANIFOLD; INLET	000000	000003
8941494020	8-9414	9402	GEAR ASM.; IDLE, (A)	000000	000000
8941494041	8-9414	9404	GEAR; IDLER, (B)	000000	000000
8941494050	8-9414	9405	PUMP ASM; WATER	000000	000000
8941494051	8-9414	9405	PUMP ASM; WATER	000000	000000
8941494110	8-9414	9411	PUMP ASM; INJ.	000000	000000
8941494120	8-9414	9412	FOOT; ENG. FRT. LH. CYL.	000000	000000
8941494130	8-9414	9413	FOOT; ENG. FRT. RH. CYL.	000000	000000
8941494180	8-9414	9418	OIL FILTER ELEMENT	000000	000008
8941494190	8-9414	9419	CLIP;HARNES	000000	000000
8941494231	8-9414	9423	PUMP ASM; INJ.	000000	000000
8941494461	8-9414	9446	HOSE; RUBBER, B	000000	000001
8941494471	8-9414	9447	HOSE; RUBBER, A	000000	000002
8941494500	8-9414	9450	IMPELLER; WATER PUMP	000002	000000
8941494730	8-9414	9473	CLIP; PCV HOSE	000000	000019

8941494770	8-9414	9477	HOSE; WATER	000000	000000
8941495290	8-9414	9529	PIPE ASM; FUEL	000000	000000
8941495480	8-9414	9548	SHIM;BRG,DIFF,S	000000	000000
8941496100	8-9414	9610	CLIP; WATER HOSE	000013	000000
8941496531	8-9414	9653	GASKET	000000	000000
8941496930	8-9414	9693	FLYWHEEL ASM	000000	000000
8941496932	8-9414	9693	FLYWHEEL ASM	000000	000000
8941496933	8-9414	9693	FLYWHEEL ASM	000000	000000
8941496934	8-9714	9693	FLYWHEEL ASM	000000	000000
8941497560	8-9414	9756	VALVE ASM; DELIVERY	000000	000000
8941500222	8-9415	0022	COOLER ASM; OIL	000000	000000
8941500230	8-9415	0023	BOLT; HEAD TO B	000000	000000
8941500240	8-9415	0024	BOLT; HEAD TO B	000000	000000
8941500250	8-9415	0025	BOLT; HEAD TO B	000000	000000
8941500450	8-9415	0045	B O L T	000000	000000
8941500451	8-9415	0045	B O L T	000000	000185
8941500950	8-9415	0095	GOVERNOR ASM;	000000	000000
8941500960	8-9415	0096	GOVERNOR ASM;	000000	000000
8941501373	8-9415	0137	PIPE; OIL, JET 3KR1	000000	000000
8941501374	8-9415	0137	PIPE; OIL, JET 3KR1	000000	000002
8941502130	8-9415	0213	STUD;	000000	000000
8941502310	8-9415	0231	CUP: SEALING	000356	001240
8941502341	8-9415	0234	PROTECTOR; HEAT	000000	000001
8941503470	8-9415	0347	PLUG;HOT	000000	000000
8941503510	8-9415	0351	BOLT; SEMS, OIL PAN FIX 3	000000	000000
8941503520	8-9415	0352	STUD; TURBO TO ADAPTER	000042	000000
8941504721	8-9415	0472	SHAFT ASM.; FLE	000000	000000
8941504850	8-9415	0485	CLIP; RUBBER HO	000000	000063
8941509971	8-9415	0997	GAUGE ASM; OIL LEVEL	000000	000000
8941509980	8-9415	0998	TUBE; GUIDE	000000	000000
8941509981	8-9415	0998	TUBE; GUIDE	000000	000004
8941510020	8-9415	1002	PAN ASM.;OIL,W/DRAIN PLUG	000000	000000
8941511320	8-9415	1132	COVER;HD. COVER, OUTER	000000	000000
8941511450	8-9415	1145	PIPE; EXHAUST	000000	000001
8941511460	8-9415	1146	GASKET; MANIFOLD 4BA1M	000000	000000
8941511461	8-9415	1146	GASKET; MANIFOLD 4BA1M	000002	000000
8941512641			LENS; FRT COMB	000000	000004
8941512651			LENS; FRT COMB	000000	000000
8941512880	8-9415	1288	CAP ASM; AIR CLEANER	000000	000000
8941512890	8-9415	1289	CAP ASM;AIR CLEANER	000001	000000
8941512990	8-9415	1299	JOINT ASM; BALL	000000	000000
8941513000	8-9415	1300	JOINT;BALL,ENG.	000000	000000
8941513130	8-9415	1313	BOLT; COVER	000000	000000
8941513240	8-9415	1324	THROTTLE JOINT	000000	000000
8941513260	8-9415	1326	THROTTLE JOINT	000000	000000
8941513790	8-9415	1379	FLYWHEEL ASM 4FB1	000000	000000
8941514090	8-9415	1409	STARTER: 12V/ 1.4KW	000000	000000

8941514091	8-9415	1409	STARTER: 12V/ 1.4KW	000000	000001
8941514100	8-9415	1410	GENERATOR: 12V/35A	000000	000000
8941514131	8-9415	1413	STARTER; NIKKO	000000	000000
8941514133	8-9415	1413	STARTER; NIKKO	000000	000000
8941514340	8-9415	1434	PIPE ASM; WATER	000000	000000
8941514341	8-9415	1434	PIPE ASM; WATER	000002	000000
8941515100	8-9415	1510	RING; BLOCKING, 4TH & 3RD	000000	000000
8941515101	8-9415	1510	RING; BLOCKING,	000000	000000
8941515102	8-9415	1510	RING; BLOCKING, 4TH & 3RD	000000	000000
8941515103	8-9415	1510	RING; BLOCKING, 4TH & 3RD	000000	000000
8941515200	8-9415	1520	SNAP RING	000000	000000
8941515210	8-9415	1521	SNAP RING; T1.80	000000	000006
8941515220	8-9415	1522	SNAP RING	000000	000006
8941515230	8-9415	1523	SNAP RING; T1.90	000000	000005
8941515240	8-9415	1524	SNAP RING; T1.95	000000	000007
8941515630	8-9415	1563	PAN ASM; OIL	000000	000000
8941515970			BRKT; ENG	000000	000000
8941515991	8-9415	1599	GAUGE ASM; OIL LEVEL	000000	000000
8941516740	8-9415	1674	SPRING KIT; ANGLEICH 2600	000000	000000
8941516811	8-9415	1681	FLYWHEEL ASM.	000000	000000
8941516840	8-9415	1684	CLEANER ASM; AIR	000000	000000
8941516850	8-9415	1685	STAY; AIR CLEANER FRT	000000	000000
8941516860	8-9415	1686	STAY; AIR CLEANER RR	000000	000000
8941517291	8-9415	1729	BRACKET; AIR CLEANER 3KB1	000000	000000
8941517440	8-9415	1744	FUEL FILTER	000000	000000
8941517450	8-9415	1745	FILTER; ASM; FUEL	000000	000000
8941517451	8-9415	1745	FILTER; ASM; FUEL	000000	000000
8941517890	8-9415	1789	HOSE; CONN. INLET 3KB1	000000	000000
8941517920	8-9415	1792	BOLT; JOINT, CYL BLOCK SI	000000	000000
8941517921	8-9415	1792	BOLT; JOINT, CYL BLOCK SI	000016	000009
8941517990	8-9415	1799	COCK; RADIATOR WATER DRAI	000000	000000
8941518630	8-9415	1863	NOZZLE ASM; INJ.	000028	000014
8941518640	8-9415	1864	NOZZLE; INJ	000000	000001
8941518660	8-9415	1866	NOZZLE & HOLDER	000000	000000
8941518661	8-9415	1866	NOZZLE & HOLDER	000000	000000
8941518911	8-9415	1891	JOINT; EYE BOLT	000000	000004
8941519480	8-9415	1948	CUSHION; AIR CLEANER 3KB1	000000	000000
8941519500	8-9415	1950	LEVER KIT 3KR1	000003	000000
8941519531	8-9415	1953	VALVE; INLET	000000	000000
8941520240	8-9415	2024	LINK ASM; ENG CONT	000000	000019
8941521120	8-9415	2112	CLEANER ASM; AIR	000000	000006
8941521130	8-9415	2113	CLEANER ASM; AIR 3KC/3KR	000000	000000
8941521141	8-9415	2114	HOUSING; FLYWHEEL 3KR1	000000	000000
8941521142	8-9415	2114	HOUSING; FLYWHEEL 3KR1	000000	000000
8941521610	8-9415	2161	SWITCH ASM	000000	000000
8941521950	8-9415	2195	BRACKET; OIL PIPE	000000	000000
8941522490	8-9415	2249	CLEANER ASM; AIR 3KB1	000000	000000

8941522830	8-9415	2283	SCREW;ADJ.ROCKE	000000	000000
8941522831	8-9415	2283	SCREW;ADJ.ROCKE	000355	000000
8941523171	8-9415	2317	PIPE; INLET	000001	000000
8941523180	8-9415	2318	PIPE; INLET RR. EXC. EXH	000002	000000
8941523440	8-9415	2344	ARM; ROCKER	000000	000671
8941523451	8-9415	2345	BRACKET; ROCKER ARM 4JA/B	000000	000001
8941523460	8-9415	2346	SHAFT; ROCKER ARM	000000	000000
8941523510	8-9415	2351	SHAFT; INVOLUTE SPLINES	000000	000000
8941523530	8-9415	2353	PIPE ASM; FUEL 4JA/B1	000000	000143
8941523620	8-9415	2362	HOSE; RUBBER 4JB1-PW	000000	000000
8941523680	8-9415	2368	PUMP ASM; FEED	000000	000001
8941523820	8-9415	2382	POWER DRIVE; INVOLUTE SPL	000000	000000
8941523830	8-9415	2383	ELEMENT ASM.; O	000000	000004
8941523840	8-9415	2384	BOLT; CAP, OIL	000000	000000
8941524241	8-9415	2424	METAL KIT; .50 CRANK	000002	000000
8941524261	8-9415	2426	METAL KIT; 1.00 CRANK	000000	000001
8941524270	8-9415	2427	METAL SET; .25 C-ROD	000000	000061
8941524280	8-9415	2428	METAL SET; .50 C-ROD	000000	000004
8941524290	8-9415	2429	METAL SET; .75 C-ROD	000012	000012
8941524300	8-9415	2430	METAL SET; 1.00 C-ROD	000011	000000
8941524521	8-9415	2452	GASKET;OIL PAN-FRT PLAT	000000	000000
8941525270	8-9415	2527	GOVERNOR ASM	000000	000000
8941525442			STUD; EGR VLV	000000	000000
8941525570	8-9415	2557	INSERT,1ST-2ND	000000	000000
8941525580	8-9415	2558	SPRING,INSERT 1	000000	000000
8941525581	8-9415	2558	SPRING INSET	000000	000000
8941525812	8-9415	2581	TUBE; GUIDE, OIL	000000	000000
8941525950	8-9415	2595	OUTLET PIPE; WATER	000000	000000
8941526130	8-9415	2613	PLUG; SCREW,OIL	000000	000000
8941526850	8-9415	2685	FAN ASM; COOLING	000000	000000
8941527110	8-9415	2711	PISTON	000000	000000
8941527902	8-9415	2790	PACKING; CRANKC	000000	000036
8941528050	8-9415	2805	SPRING;MAIN KM=0.068	000000	000000
8941528070	8-9415	2807	SPRING; GOV 3KC1 1800 RPM	000000	000000
8941528071	8-9415	2807	SPRING; GOV 3KC1 1800 RPM	000012	000001
8941528080	8-9415	2808	SPRING; MAIN KM=0.19	000005	000000
8941528101	8-9415	2810	OUTLET PIPE (DISCONTINUED	000000	000000
8941528120	8-9415	2812	BELT;FAN	000000	000000
8941528881	8-9415	2888	HOSE;RADIATOR,UPPER	000000	000000
8941528882	8-9415	2888	HOSE;RADIATOR,UPPER	000000	000002
8941529030	8-9415	2903	GAUGE ASM; OIL LEVEL 4JC1	000000	000001
8941529040	8-9415	2904	ROD; LINK	000000	000000
8941529050	8-9415	2905	BRACKET; REAR INJ PUMP 4J	000001	000000
8941529051	8-9415	2905	BRACKET; REAR INJ PUMP 4J	000001	000000
8941529061	8-9415	2906	TUBE ASM; OIL GUIDE	000000	000000
8941529090	8-9415	2909	BRACKET; SOLENOID	000000	000000
8941529111	8-9415	2911	METAL KIT; .25	000000	000000

8941529121	8-9415	2912	METAL KIT; .50 CRANK	000001	000002
8941529140	8-9415	2914	METAL KIT; 1.00 CRANK	000000	000000
8941529141	8-9415	2914	METAL KIT; 1.00 CRANK	000001	000000
8941529513	8-9415	2951	SILENCER; EXH	000000	000000
8941529670	8-9415	2967	ARMATURE ASM.	000000	000000
8941529680	8-9415	2968	BEARING; BALL	000000	000000
8941529690	8-9415	2969	COIL ASM; FIELD	000000	000003
8941529700	8-9415	2970	BRUSH (-), START	000000	000000
8941529710	8-9415	2971	HOLDER ASM; BRUSH	000000	000001
8941529720	8-9415	2972	SPRING; BRUSH	000000	000000
8941529730	8-9415	2973	BRUSH, (+) START	000000	000000
8941529740	8-9415	2974	COVER; REAR	000000	000000
8941529760	8-9415	2976	SHAFT; PINION	000003	000000
8941529770	8-9415	2977	CLUTCH ASM	000000	000000
8941529780	8-9415	2978	STOPPER; SET	000002	000000
8941529790	8-9415	2979	HOUSING; STARTER	000000	000000
8941529800	8-9415	2980	LEVER SET; SHIFT	000000	000000
8941529810	8-9415	2981	SWITCH ASM; MAGNETIC	000001	000005
8941529820	8-9415	2982	COVER KIT	000004	000000
8941529830	8-9415	2983	RETAINER; BEARING	000000	000000
8941529881			BEARING	000000	000000
8941529891			HOSE	000000	000000
8941529892	8-9415	2989	HOSE	000000	000021
8941530024			PLATE; FRONT	000000	000015
8941530061			CAM FEED PUMP	000000	000000
8941530340	8-9415	3034	PIPE ASM; INJECTION	000000	000000
8941530420	8-9415	3042	PIPE ASM; INJECTION	000000	000000
8941530440	8-9415	3044	PIPE ASM; INJECTION	000000	000000
8941530460	8-9415	3046	PIPE ASM; INJECTION	000000	000000
8941530510	8-9415	3051	GASKET; HD TO COVER	000000	000004
8941530570			PIPE; OIL, OIL JET	000458	000000
8941530760			PUMP ASM; FEED	000000	000001
8941531161	8-9415	3116	FOOT; ENGINE	000000	000000
8941531170	8-9415	3117	RECTIFIER 2KC1/4BD1	000001	000000
8941532510	8-9415	3251	CAP ASM.; FILLE	000000	000000
8941532511	8-9415	3251	CAP ASM; FILLER	000000	000000
8941532540	8-9415	3254	ELEMENT ASM.; O	000000	000000
8941533270	8-9415	3327	SPACER; FAN	000000	000000
8941533271	8-9415	3327	SPACER; FAN	000000	000000
8941533281	8-9415	3328	SPACER; FAN	000000	000000
8941533290	8-9415	3329	SHAFT; STUB	000000	000000
8941533302	8-9415	3330	FOOT; ENGINE	000000	000000
8941533310	8-9415	3331	WASHER; PL.	000000	000000
8941534300	8-9415	3430	SENSOR ASM.	000005	000000
8941534430	8-9415	3443	COOLER ASM, OIL	000000	000000
8941534440	8-9415	3444	BODY; OIL FILTER	000000	000000
8941535113	8-9415	3511	CASE; CRANK	000000	000000

8941535114	8-9415	3511	CASE; CRANK	000000	000000
8941535120	8-9415	3512	METAL KIT; CRANK	000000	000000
8941535121	8-9415	3512	METAL KIT; CRANK	000000	000002
8941535340			PUSH ROD	000000	000000
8941535542	8-9415	3554	HOSE; WATER, L=1900	000000	000000
8941535553	8-9415	3555	PUMP ASM; OIL	000000	000000
8941535701	8-9415	3570	SPRING; VALVE 3KR1	000000	000000
8941535750			BRACKET; ROCKER SHA	000000	000041
8941535760			VALVE; INL	000000	000000
8941535761			VALVE; INL	000000	000506
8941535770			VALVE; EXH	000000	000000
8941535771			VALVE; EXH	000000	000580
8941535980			HOSE; RUBBER DRAIN	000000	000000
8941536010	8-9415	3601	COCK ASM.; FUEL	000036	000000
8941536081	8-9415	3608	HOUSING; FLYWHEEL	000000	000000
8941536100	8-9415	3610	FLYWHEEL ASM.	000000	000000
8941536120	8-9415	3612	PAN ASM; OIL	000000	000000
8941536190	8-9415	3619	PUMP ASM; INJ.	000000	000000
8941537210	8-9415	3721	BELT; FAN	000000	000000
8941537220	8-9415	3722	BOLT; CRANK PULLEY	000000	000000
8941537221	8-9415	3722	BOLT; CRANK PULLEY	000000	000000
8941537231	8-9415	3723	CONNECTOR; GLOW PLUG 4JA/	000000	000000
8941537232	8-9415	3723	CONNECTOR; GLOW PLUG 4JA/	000000	000001
8941537720	8-9415	3772	RADIATOR ASM	000000	000000
8941538500			FILTER ASM; FUEL	000000	000000
8941538501	8-9415	3850	FILTER ASM; FUEL	000000	000000
8941538821	8-9415	3882	GENERATOR; 12V/35A	000000	000000
8941538900	8-9415	3890	CASE ASM.;CRANK	000000	000000
8941539290	8-9415	3929	PLUG 3KR1	000000	000000
8941539410	8-9415	3941	WASHER;FLYWHEEL	000000	000000
8941539420	8-9415	3942	BRACKET; FUEL FILTER 3KC1	000000	000000
8941539422	8-9415	3942	BRACKET; FUEL FILTER 3KC1	000000	000000
8941539430	8-9415	3943	PIPE ASM; INJECTION	000000	000004
8941539440	8-9415	3944	HOSE;RADIATOR LOWER	000000	000000
8941539450	8-9415	3945	HOSE;RADIATOR UPPER	000000	000000
8941539660	8-9415	3966	RING SET; PISTON	000000	000000
8941539661	8-9415	3966	SET; PISTON RING (STD)	000000	000000
8941539662	8-9415	3966	SET; PISTON RING (STD)	000000	000000
8941540020	8-9415	4002	PIPE; EXHAUST	000000	000000
8941540650	8-9415	4065	CAP*8	000000	000000
8941540690	8-9415	4069	GAUGE ASM; OIL LEVEL	000000	000000
8941541720	8-9415	4172	THERMOSTAT (76.5 C)	000000	000000
8941546590	8-9415	4659	PIPE ASM; INJ #2 3KR1	000002	000000
8941546600	8-9415	4660	PIPE ASM; INJ #1 3KR1	000000	000000
8941547981	8-9415	4798	PISTON	000000	000000
8941548030	8-9415	4803	RELAY; EARLY FU	000000	000000
8941548610	8-9415	4861	STOP;ENG.	000000	000000

8941548800	8-9415	4880	GOVERNOR ASM	000000	000000
8941550420			BRACKET;INJECTION PUMP	000000	000000
8941551801	8-9415	5180	BOLT; EYE, OIL PIPE	000000	000000
8941551830	8-9415	5183	O-RING; FUEL FILTER	000000	000050
8941552590	8-9415	5259	GEAR;INJ. PUMP	000000	000000
8941552591	8-9415	5259	GEAR;INJ. PUMP	000000	000000
8941553602	8-9415	5360	COVER; TIMING GEAR CASE 4	000000	000000
8941553613	8-9415	5361	CASE; TIMING GEARS	000000	000000
8941555450	8-9415	5545	VALVE ASM.; REL	000000	000000
8941555451	8-9415	5545	VALVE ASM;REL	000002	000000
8941555460	8-9415	5546	PACKING;REL,EF	000000	000000
8941557211	8-9415	5721	COVER ASM; GEAR CASE 4JA/	000000	000004
8941557221	8-9415	5722	SPACER; RUBBER 4JA/B1	000000	000000
8941557222	8-9415	5722	SPACER; RUBBER 4JA/B1	000000	000000
8941557223	8-9415	5722	SPACER; RUBBER 4JA/B1	000000	000008
8941558010	8-9415	5801	FLYWHEEL ASM.	000000	000000
8941558020	8-9415	5802	FLYWHEEL ASM. 2KC1	000000	000000
8941558080	8-9415	5808	SHAFT;MAIN	000000	000000
8941558081	8-9415	5808	SHAFT;MAIN	000000	000001
8941558091	8-9415	5809	CASE;ADAPTOR	000000	000000
8941558092	8-9415	5809	CASE;ADAPTOR	000000	000000
8941558150	8-9415	5815	DUCT; WATER, CY	000000	000000
8941558151	8-9415	5815	DUCT;WATER,CY	000000	000000
8941558152	8-9415	5815	DUCT;WATER,CY	000000	000000
8941558510	8-9415	5851	ROD; LINK	000000	000000
8941558521	8-9415	5852	SPACER; SOLENOIDE	000000	000000
8941558580	8-9415	5858	STARTER; NIKKO	000000	000000
8941558690	8-9415	5869	STUD; TURBOCHARGER TO EXH	000080	000081
8941558710	8-9415	5871	FLYWHEEL ASM.	000000	000000
8941558840	8-9415	5884	WASHER; INLET M	000000	000000
8941558841	8-9415	5884	WASHER; INLET M	000000	000000
8941559000	8-9415	5900	ANGLEICH KIT 1800-3000 3K	000000	000000
8941560170	8-9415	6017	HOSE; MANIFOLD AIR CLEANER	000000	000000
8941560181	8-9415	6018	BLOCK;SHIFT,FORK SHAFT	000000	000000
8941560200	8-9415	6020	SUPPORT;FUEL TANK LH.	000000	000000
8941560210	8-9415	6021	SUPPORT;FUEL TANK RH.	000000	000000
8941560220	8-9415	6022	LEVER POWER DRIVE CONT.	000000	000000
8941560221	8-9415	6022	LEVER POWER DRIVE CONT.	000000	000000
8941560230	8-9415	6023	HANGER; FRT.	000000	000000
8941560241	8-9415	6024	ARM; RADIATOR	000000	000000
8941560591			PANEL;AIR GUIDE	000000	000000
8941560592			PANEL;AIR GUIDE	000000	000003
8941560780			GASKET;CYL.HEAD	000000	000000
8941560791			CRANKSHAFT ASM	000000	000000
8941560820	8-9415	6082	ROD ASM;CONN	000000	000000
8941560840	8-9415	6084	METAL SET; CONN 3KR1	000000	000000
8941562170			GEAR; 2ND MSB	000000	000000

8941562430	8-9415	6243	E RING; HEAT PR	000000	000013
8941562560			RUBBER, SUPPORT, TAIL	000000	000004
8941564540	8-9415	6454	BASE; FILTER C240-BODY; OI	000000	000010
8941564550	8-9415	6455	FILTER; OIL (SPIN-ON)	000000	000000
8941564702	8-9415	6470	STUD; EXH. PIPE	000000	000000
8941565020			PENDING DESCRIPTION	000000	000000
8941565071	8-9415	6507	PROTECTOR; HEAT	000000	000000
8941565860	8-9415	6586	STATOR ASM,	000000	000000
8941565890	8-9415	6589	SEAL; OIL, RR, COVER	000000	000009
8941565900	8-9415	6590	REGULATOR ASM	000000	000000
8941565910	8-9415	6591	BLOCK; REGULATOR, GEN	000000	000000
8941565920	8-9415	6592	HOLDER; BRUSH, GEN	000000	000002
8941565930	8-9415	6593	BRUSH; GENERATOR	000000	000086
8941565940	8-9415	6594	CONDENSER; REGUL	000000	000000
8941565950	8-9415	6595	REGULATOR	000000	000000
8941565960	8-9415	6596	RECTIFIER; ALTERNATOR	000002	000000
8941565970	8-9415	6597	BOLT ASM; TERMINAL	000000	000000
8941565980	8-9415	6598	RIVET; TERMINAL	000000	000010
8941565990	8-9415	6599	COVER ASM; FRT	000001	000000
8941566010	8-9415	6601	NUT; PULLEY, GEN	000000	000000
8941566020	8-9415	6602	BOLT; THROUGH, G.	000000	000000
8941566030	8-9415	6603	SCREW KIT; GENER	000000	000005
8941566050	8-9415	6605	ROTOR; VAC PUMP	000001	000001
8941566060	8-9415	6606	PLATE; CNTR, VACU	000000	000002
8941566080	8-9415	6608	GSKT; CNTR PLATE	000257	001490
8941566400	8-9415	6640	CONN.; DEL., VAC	000000	000002
8941566430	8-9415	6643	SWITCH; OIL PRESSURE	000000	000011
8941567000	8-9415	6700	COVER; DUST, CL	000000	000001
8941567950	8-9415	6795	COVER; WATER	000000	000000
8941567960	8-9415	6796	BOLT; SEMS, OIL PAN L=160	000000	000000
8941567961	8-9415	6796	BOLT; SEMS, OIL PAN L=160	000018	000000
8941568010	8-9415	6801	PUMP ASM; INJ.	000000	000000
8941568080	8-9415	6808	O-RING	000000	000000
8941569001	8-9415	6900	PUMP ASM; INJ.	000000	000000
8941569150	8-9415	6915	BRKT; RADIATOR	000000	000000
8941569161	8-9415	6916	GUARD; FRONT	000000	000000
8941569211	8-9415	6921	NET ASM.;	000000	000002
8941569220	8-9415	6922	BRACKET; RADIATOR, LOWER	000000	000000
8941569380	8-9415	6938	CLIP; AIR FLOW	000000	000000
8941569390	8-9415	6939	STUD. EXH. MANIFO	000000	000119
8941569400	8-9415	6940	STUD; EXH. MANIFO	000000	000047
8941569410	8-9415	6941	BOLT; P/S BRKT.	000000	000000
8941569420	8-9415	6942	BOLT; EXH. MANI	000000	000000
8941569451	8-9415	6945	FILTER ASM; FUEL 4FB1	000000	000000
8941570120			BRACKET; COMP	000000	000000
8941570540	8-9415	7054	RUBBER; SUPPORT	000000	000000
8941570541	8-9415	7054	RUBBER; SUPPORT	000000	000000

8941573011	8-9415	7301	PIPE; OIL PUMP, CYL BLOCK	000000	000000
8941573490	8-9415	7349	PISTON 4BD1	000001	000000
8941573502	8-9415	7350	PUMP ASM; INJ.	000000	000000
8941573503	8-9415	7350	PUMP ASM; INJ.	000000	000000
8941573512	8-9415	7351	PUMP ASM; INJ.	000000	000000
8941573513	8-9415	7351	PUMP ASM; INJ.	000000	000000
8941573522	8-9415	7352	PUMP ASM; INJ.	000000	000000
8941573523	8-9415	7352	PUMP ASM; INJ.	000000	000000
8941573532	8-9415	7353	PUMP ASM; INJ.	000000	000000
8941573533	8-9415	7353	PUMP ASM; INJ.	000000	000000
8941573560	8-9415	7356	SPACER; STARTER	000000	000000
8941573562	8-9415	7356	SPACER; STARTER	000000	000003
8941573701	8-9415	7370	ROTOR SET; OIL PUMP	000000	000000
8941574270			AIR FILTER	000000	000000
8941574511			CYLINDER ASM; B	000000	000001
8941576630			CLIP; AIR CLEANER BRACKET	000000	000000
8941577470	8-9415	7747	SNAP RING; T2.00	000025	000000
8941577520	8-9415	7752	FAN ASM; COOLING	000000	000001
8941577530	8-9415	7753	PULLEY	000000	000000
8941578080			MOTOR ASM	000000	000000
8941578260	8-9415	7826	FOOT; ENGINE (RH)	000000	000000
8941578270	8-9415	7827	FOOT; ENGINE	000000	000004
8941578360	8-9415	7836	PLATE; ADJ. GEN	000000	000000
8941578361	8-9415	7836	PLATE; ADJ, GEN.	000000	000011
8941578370	8-9415	7837	HOSE; RUBBER, VACUUM PUMP	000000	000000
8941578390	8-9415	7839	STUD; ADAPTER F	000000	000017
8941578650			BRAKE MAS CYL REPAIR KIT	000000	000000
8941578840	8-9415	7884	RUBBER CAB.MT.F	000000	000005
8941578850	8-9415	7885	RUBBER; CUSHN, BODY MTG	000000	000000
8941578860			RUBBER; BODY	000000	000000
8941579190	8-9415	7919	HOOK; CABLE	000000	000044
8941579200	8-9415	7920	SPRING; CABLE	000000	000007
8941579840	8-9415	7984	HOSE; RADIATOR, UPPER	000000	000000
8941579850	8-9415	7985	HOSE; RADIATOR, LOWER	000000	000000
8941580330	8-9415	8033	GUARD; GENERATOR	000000	000000
8941580500			REPAIR KIT, SLAVE	000000	000000
8941580510	8-9415	8051	REP.KIT; CLU.M/C	000000	000000
8941581080	8-9415	8108	NUT; CAP, HEAD COVER	000000	000979
8941581850	8-9415	8185	CASE ASM; AIR CLEANER	000000	000000
8941581860			NUT; MTG, RUBBER	000000	000000
8941581861			NUT; MTG. RUBBE	000000	000000
8941582320	8-9415	8232	GASKET; AIR CLEANER	000000	000000
8941582330	8-9415	8233	CLAMP; AIR CLEANER	000000	000000
8941582490	8-9415	8249	SHIFT BLOCK ASM	000000	000000
8941582860	8-9415	8286	ANGLEICH KIT	000000	000000
8941583280	8-9415	8328	GASKET; DRAIN PLUG	001013	000539
8941583800	8-9415	8380	HUB; CLUTCH	000000	000000

8941583801	8-9415	8380	HUB;CLUTCH	000000	000000
8941583810	8-9415	8381	SLEEVE & HUB ASM.;LOW-2ND	000000	000000
8941583830	8-9415	8383	SLEEVE&HUB ASM.;REV.-O.D.	000000	000000
8941583850	8-9415	8385	SPRING;REVERSE,	000000	000000
8941583860	8-9415	8386	SPRING; COIL,CO	000000	000000
8941583930	8-9415	8393	BOLT;ROCKER SHA	000000	000000
8941583931	8-9415	8393	BOLT;ROCKER SHA., COMP	000000	000000
8941584080			THROW OUT BEARING	000000	000000
8941586670	8-9415	8667	STUD; H/PUMP GEAR	000000	000000
8941586681	8-9415	8668	CONNECTOR 3KR1	000002	000000
8941586690	8-9415	8669	PIPE ASM; FUEL LEAK-OFF	000000	000002
8941587390	8-9415	8739	ANGLEITCH KIT; 2000-3000	000000	000000
8941587600	8-9415	8760	PIPE ASM.; OIL,	000000	000000
8941589700	8-9415	8970	CLIP; RUBBER	000000	000000
8941589750	8-9415	8975	BRACKET;DUCT	000000	000015
8941589760	8-9415	8976	CLIP; AIR-DUCT	000000	000049
8941589770	8-9415	8977	CLIP; DUCT/HOSE,TURBO OUT	000000	000028
8941590470	8-9415	9047	HOSE; RUBBER,VACUUM	000000	000000
8941590480	8-9415	9048	PIPE ASM.; OIL,	000000	000000
8941590481	8-9415	9048	PIPE ASM.; OIL,	000022	000070
8941590840	8-9415	9084	CUSHION; BRACKET 3KC/3KR	000009	000000
8941590850	8-9415	9085	BRACKET; AIR CLEANER	000000	000000
8941590860	8-9415	9086	STUD EXHAUST MANIFOLD	000001	000004
8941591030	8-9415	9103	DISC ASM.; CLUT	000000	000000
8941591031	8-9415	9103	DISC ASM;CLUTCH	000000	000000
8941591032	8-9415	9103	DISC;CLUTCH	000000	000000
8941591500	8-9415	9150	BODY ASM	000001	000000
8941591510	8-9415	9151	PAN ASM; DUST 3AB1	000001	000001
8941591520	8-9415	9152	STAY; AIR CLEANER BRACKET	000000	000000
8941591921			HEAD ASM, CYL	000000	000000
8941592390	8-9415	9239	BRACKET; FUEL FILTER	000001	000000
8941592400	8-9415	9240	PIPE ASM;F/P	000000	000000
8941592410	8-9415	9241	PIPE ASM; FILTER	000000	000001
8941592420	8-9415	9242	PIPE ASM; FUEL LEAK	000000	000003
8941592430	8-9415	9243	PLATE; ADJ	000000	000000
8941592452	8-9415	9245	GASKET; MANIFOLD	000000	000000
8941592470			NUT;BEAM TO RET	000000	000000
8941592610	8-9415	9261	GASKET;EXH.MA	000000	000000
8941592671	8-9415	9267	LEVER; SELECT,I	000000	000000
8941592680	8-9415	9268	LEVER; SELECT I	000000	000000
8941592681	8-9415	9268	LEVER; SELECT,I	000000	000003
8941592692	8-9415	9269	LEVER; SELECT,E	000000	000000
8941593340	8-9415	9334	TRANSMISSION AS	000000	000000
8941594520			TRANSMISSION AS	000000	000000
8941594912			PAN ASM; OIL	000000	000000
8941595341	8-9415	9534	BOX; QUADRANT	000000	000000
8941597810	8-9415	9781	HOLDER ASM.; BR	000000	000000

8941599780	8-9415	9978	BELT ASM; FAN	000000	000000
8941606400			TERMINAL; INSUL	000000	000000
8941606500	8-9416	0650	CLIP; WATER HOSE	000000	000000
8941609360	8-9416	0936	PLATE; REAR CYL. BLOCK	000000	000000
8941609590	8-9416	0959	RETAINER*INVALID*	000000	000000
8941609620	8-9416	0962	GOVERNOR ASM.	000000	000000
8941609632	8-9416	0963	FILTER ASM; OIL	000000	000000
8941609640	8-9416	0964	FILTER; OIL (SPIN ON)	000000	000000
8941609641	8-9416	0964	FILTER; OIL (SPIN ON)	000000	000000
8941609653	8-9416	0965	FILTER ASM; OIL	000000	000000
8941609660	8-9416	0966	FILTER ASM; FUEL	000000	000000
8941609670	8-9416	0967	FILTER; FUEL (SPIN-ON) 4B/	000000	000000
8941610160	8-9416	1016	VALVE ASM; OVER FLOW	000000	000000
8941610170	8-9416	1017	WASHER; PLAIN	000000	000000
8941610900	8-9416	1090	GEAR ASM.; 5TH W	000000	000000
8941610901	8-9416	1090	GEAR ASM; 5TH W	000000	000000
8941610902	8-9416	1090	GEAR ASM; 5TH W	000000	000000
8941610980	8-9416	1098	GEAR; COUNTER, 5T	000000	000000
8941610981	8-9416	1098	GEAR; 5TH COUNT	000000	000000
8941610982	8-9416	1098	GEAR; 5TH COUNT	000000	000000
8941611130	8-9416	1113	COVER ASM.; QUAD	000000	000000
8941611131	8-9416	1113	COVER ASM.; QUAD	000000	000000
8941611132	8-9416	1113	COVER ASM.; QUAD	000000	000000
8941611133	8-9416	1113	COVER ASM.; QUAD	000000	000000
8941611134	8-9416	1113	COVER ASM.; QUAD	000000	000000
8941611180	8-9416	1118	GEAR ASM.; REVER	000000	000000
8941611181	8-9416	1118	GEAR ASM; REV	000000	000000
8941611200	8-9416	1120	GEAR; COUNTER R	000000	000000
8941611201	8-9416	1120	GEAR; COUNTER R	000000	000018
8941611210	8-9416	1121	SHAFT; ARM, GEAR	000000	000000
8941611220	8-9416	1122	PLUNGER; REVERSE	000001	000000
8941611231	8-9416	1123	COVER; TRANSFER	000000	000000
8941611240	8-9416	1124	GUIDE; OIL, TRANS	000000	000000
8941611241	8-9416	1124	GUIDE; OIL	000000	000000
8941611250	8-9416	1125	COLLAR; INPUT G	000000	000000
8941611261	8-9416	1126	SHANT; COUNTER,	000000	000000
8941611262	8-9416	1126	SHANT; COUNTER,	000000	000000
8941611271	8-9416	1127	PLATE; LOCK, COUN	000000	000000
8941611351			SECOND GEAR	000000	000000
8941611370			GEAR ASM.; 3RD, W	000000	000000
8941611371	8-9416	1137	GEAR ASM; 3RD, W	000000	000000
8941611390	8-9416	1139	GEAR ASM.; 3RD,	000000	000046
8941611391	8-9416	1139	GEAR ASM.; 3RD,	000000	000020
8941611460	8-9416	1146	COVER ASM.; QUAD	000000	000000
8941611461	8-9416	1146	COVER; QUADRANT	000000	000000
8941611462	8-9416	1146	COVER; QUADRANT	000000	000004
8941618140	8-9416	1814	CABLE ASM.; THRO	000000	000000

8941618141	8-9416	1814	CABLE ASM;THROT	000000	000003
8941618410	8-9416	1841	BELT;COOLING FAN	000000	000000
8941618600	8-9416	1860	SYNCHRONIZER AS	000007	000000
8941618610	8-9416	1861	SYNCHRONIZER	000000	000000
8941619100			OIL PAN ASM; W/DRAIN PLUG	000000	000000
8941619200			GEAR;COUNTER,5T	000000	000000
8941619201	8-9416	1920	GEAR; COUNTER; 5TH	000000	000000
8941619600	8-9416	1960	PLATE;BAFFLE,CYL.HEAD	000000	000000
8941619620	8-9416	1962	BRKT; INL.PIPE	000000	000000
8941619800	8-9416	1980	RING;SNAP,CENTE	000000	000000
8941619810	8-9416	1981	PIECE;DISTANCE	000000	000000
8941619820	8-9416	1982	PIECE;DISTANCE	000000	000000
8941619830	8-9416	1983	PIECE;DISTANCE	000000	000000
8941619840	8-9416	1984	PIECE;DISTANCE	000000	000000
8941619850	8-9416	1985	PIECE;DISTANCE	000000	000000
8941619860	8-9416	1986	BEARING;CTR ROL	000000	000041
8941619870	8-9416	1987	SIUP;ADAPTER CA	000000	000000
8941619890	8-9416	1989	BEARING;NDL 2ND	000000	000000
8941619891	8-9416	1989	BEARING;NDL 2ND	000000	000000
8941619902	8-9416	1990	BEARING;NEEDLE	000000	000022
8941619910	8-9416	1991	BEARING; NEEDLE LOW GEAR	000000	000000
8941619920	8-9416	1992	BEARING;NEEDLE,	000000	000015
8941621420	8-9416	2142	PIPE ASM; INJ #1	000000	000000
8941621430	8-9416	2143	PIPE ASM; INJ #2	000000	000000
8941621440	8-9416	2144	PIPE ASM; INJ #3	000000	000000
8941625680	8-9416	2568	CLIP;WATER HOSE	000000	000000
8941625800	8-9416	2580	BRACKET;SEDIME	000000	000001
8941625850	8-9416	2585	PIPE ASM; FUEL 3KB1	000000	000000
8941625860	8-9416	2586	PIPE ASM; FUEL 3KB1	000000	000000
8941625881	8-9416	2588	BRACKET; FUEL FILTER	000000	000000
8941625890	8-9416	2589	PIPE JOINT	000000	000000
8941625900	8-9416	2590	PIPE ASM; INJECTION FILTE	000000	000000
8941625920	8-9416	2592	BRACKET; FUEL FILTER	000000	000000
8941625921	8-9416	2592	BRACKET; FUEL FILTER	000000	000000
8941627580	8-9416	2758	SPRING; DELIVERY	000008	000000
8941627690			PISTON RINGS	000000	000000
8941629390	8-9416	2939	CLIP: OIL PIPE FIX	000000	000000
8941629400	8-9416	2940	SEAL RING	000000	000000
8941629860	8-9416	2986	PLUG;CRANK CASE BREATHER	000000	000000
8941629872	8-9416	2987	HOUSING; FLYWHEEL	000000	000000
8941629882	8-9416	2988	HOUSING; FLYWHEEL	000000	000000
8941631080			A/C AUTO CONDENSER	000000	000000
8941631621	8-9416	3162	PUMP ASM; INJ.	000000	000000
8941631630	8-9416	3163	PUMP ASM; INJ.	000000	000000
8941631631	8-9416	3163	PUMP ASM; INJ.	000000	000000
8941631740	8-9416	3174	METAL SET; C-ROD	000000	000000
8941631750	8-9416	3175	METAL SET; C-ROD	000000	000014

8941633652			COVER ASM;CYL	000000	000004
8941633680			COVER; HEAD	000000	000073
8941633690			PACKING	000000	000068
8941633703			CAMSHAFT	000000	000000
8941633704			CAMSHAFT	000000	000031
8941634810	8-9416	3481	PIPE ASM; FUEL, FILTER	000000	000000
8941635940	8-9416	3594	GEAR ASM; PUMP DRIVEN	000001	000000
8941635950	8-9416	3595	GEAR;DRIVEN OIL	000000	000004
8941635960	8-9416	3596	SHAFT,DRIVEN GE	000000	000003
8941635970	8-9416	3597	COVER;OIL PUMP	000000	000000
8941639810	8-9416	3981	GAUGE ASM; OIL LEVEL 3KC1	000000	000000
8941639830	8-9416	3983	LEVER ASM;FUEL CUTOFF	000000	000000
8941640210	8-9416	4021	VALVE; SOLENOID	000000	000000
8941640270	8-9416	4027	NIPPLE; CRANK C	000000	000009
8941644350	8-9416	4435	GASKET; TURBO	000000	000000
8941651650	8-9416	5165	COVER ASM; REAR	000000	000000
8941651770	8-9416	5177	PIPE	000000	000000
8941651771	8-9416	5177	PIPE*	000000	000000
8941651780	8-9416	5178	HOSE*	000000	000000
8941653791	8-9416	5379	FILTER ASM; FUEL 3KC1	000002	000000
8941653792	8-9416	5379	FILTER ASM; FUEL 3KC1	000000	000000
8941653793	8-9416	5379	FILTER ASM; FUEL 3KC1	000000	000000
8941654501			CAP; FILLER	000000	000000
8941655180	8-9416	5518	BOLT; BRKT (L=90)	000000	000000
8941655650			EVAPORATOR	000000	000000
8941656472	8-9416	5647	SHAFT ASM; FLEX	000001	000000
8941658860	8-9416	5886	SCREW; HEAD LAMP	000000	000000
8941658910	8-9416	5891	PUMP ASM; INJ.	000000	000000
8941658920	8-9416	5892	GOVERNOR ASM; INJ. PUMP	000000	000000
8941658930	8-9416	5893	COVER ASM; REAR	000000	000000
8941658940	8-9416	5894	COVER; REAR	000000	000000
8941659230	8-9416	5923	PIPE; OIL, TURB	000000	000000
8941659810	8-9416	5981	SEAL;OIL	000002	000000
8941660080	8-9416	6008	CLUTCH ASM.;ONE	000000	000000
8941660710	8-9416	6071	CLIP; FUEL TANK TO EVAP	000000	000003
8941665341	8-9416	6534	FILLER ASM; OIL	000000	000000
8941665820	8-9416	6582	ROD; LINK	000002	000000
8941665851	8-9416	6585	BREATHER ASM.; AIR	000000	000000
8941666310	8-9416	6631	COVER;CHECK	000000	000007
8941667932	8-9416	6793	GUARD; FRONT	000000	000002
8941667941	8-9416	6794	NET ASM.	000001	000000
8941667970	8-9416	6797	RUBBER; CUSHION 3KR1	000000	000141
8941670591	8-9416	7059	LEVER ASM	000000	000000
8941670600	8-9416	7060	SHAFT ASM 2KC1	000000	000000
8941670601	8-9416	7060	SHAFT	000000	000000
8941670651			ADJUSTER T=2.375	000000	000000
8941670652	8-9416	7065	ADJUSTER T=2.375	000001	000000

8941670662	8-9416	7066	ADJUSTER; VLV GAP	000000	000000
8941670672	8-9416	7067	ADJUSTER T=2.475	000000	000000
8941670682	8-9416	7068	ADJUSTER T=2.525	000000	000000
8941670692	8-9416	7069	ADJUSTER T=2.575	000000	000000
8941670702	8-9416	7070	ADJUSTER T=2.625	000000	000000
8941670712	8-9416	7071	ADJUSTER T=2.675	000000	000000
8941670722	8-9416	7072	ADJUSTER T=2.725 3KR1	000000	000000
8941670731	8-9416	7073	ADJUSTER T=2.775	000000	000000
8941670732	8-9416	7073	ADJUSTER T=2.775	000000	000000
8941670741	8-9416	7074	ADJUSTER T=2.825 3KR1	000000	000000
8941670751	8-9416	7075	ADJUSTER;T=2.88	000000	000000
8941670761	8-9416	7076	ADJUSTER;VLV CA	000000	000000
8941670771	8-9416	7077	ADJUSTER T=2.975	000000	000000
8941670781	8-9416	7078	ADJUSTER T=3.025	000000	000000
8941670821	8-9416	7082	ADJUSTER T=3.225 3KR1	000001	000000
8941670832	8-9416	7083	ADJUSTER T=3.275	000000	000000
8941670841	8-9416	7084	ADJUSTER T=3.325 3KR1	000000	000000
8941670851	8-9416	7085	ADJUSTER T=3.375	000000	000000
8941670861	8-9416	7086	ADJUSTER T=3.425 3KR1	000000	000000
8941670862	8-9416	7086	ADJUSTER T=3.425 3KR1	000000	000000
8941670871	8-9416	7087	ADJUSTER T=3.475 3KR1	000000	000000
8941670881	8-9416	7088	ADJUSTER T=3.525 3KR1	000000	000000
8941670882	8-9416	7088	ADJUSTER T=3.525 3KR1	000000	000000
8941670890	8-9416	7089	ADJUSTER T=3.575	000000	000000
8941670891	8-9416	7089	ADJUSTER T=3.575	000000	000000
8941670892	8-9416	7089	ADJUSTER T=3.575	000001	000001
8941670901	8-9416	7090	ADJUSTER T=3.625 3KR1	000000	000000
8941670902	8-9416	7090	ADJUSTER T=3.625 3KR1	000000	000000
8941670911	8-9416	7091	ADJUSTER T=3.675 3KR1	000000	000000
8941670921	8-9416	7092	ADJUSTER T=3.725	000000	000000
8941671000	8-9416	7100	PIPE ASM; INJECTION	000000	000000
8941671010	8-9416	7101	PIPE ASM; FUEL FILTER TO	000001	000000
8941671020	8-9416	7102	PIPE ASM; INJ NO. 1	000000	000000
8941671030	8-9416	7103	PIPE ASM; INJ NO. 2	000000	000000
8941671040	8-9416	7104	PIPE ASM; INJ NO. 3	000000	000000
8941671050	8-9416	7105	PIPE ASM; INJ NO. 4	000000	000000
8941671160	8-9416	7116	PIPE ASM; OIL	000000	000000
8941671171	8-9416	7117	PUMP ASM;OIL	000000	000001
8941671180	8-9416	7118	PIPE ASM; OIL	000000	000002
8941673860	8-9416	7386	CAP;BAT.CABLE	000000	000000
8941673870	8-9416	7387	HOUSING; FLYWHEEL	000000	000000
8941673871	8-9416	7387	HOUSING	000000	000000
8941673990	8-9416	7399	OIL FILTER;DSEL	000000	000000
8941674060			STATOR ASM.	000000	000000
8941674100	8-9416	7410	TERMINAL; REGULATOR ASM	000000	000000
8941674160	8-9416	7416	PUMP;VACUUM	000000	000001
8941674240	8-9416	7424	FLANGE ASM;VAC	000000	000001

8941674250	8-9416	7425	YOKE ASM; STARTER	000001	000000
8941674260	8-9416	7426	ARMATURE ASM; STARTER	000000	000000
8941674270	8-9416	7427	PINION; STARTER	000000	000000
8941674280	8-9416	7428	O-RING	000000	000000
8941674290	8-9416	7429	BRUSH; STARTER	000000	000000
8941674300	8-9416	7430	HOLDER ASM; BRUSH	000002	000000
8941674310	8-9416	7431	BEARING; STARTER	000000	000000
8941674330	8-9416	7433	BOLT; THROUGH	000001	000000
8941674340	8-9416	7434	BOLT; THROUGH, STARTER	000000	000000
8941674350	8-9416	7435	MOUNT; STARTER	000000	000000
8941674360	8-9416	7436	SWITCH ASM; MAGNETIC	000000	000000
8941674370	8-9416	7437	WASHER; LOCK	000000	000000
8941674380	8-9416	7438	NUT; HNGER, BREATHR, CASE FR	000000	000000
8941674401	8-9416	7440	BLOCK ASM; CYL 3KR1	000000	000000
8941674402			BLOCK ASM; CYL 3KR1	000000	000000
8941674411			BLOCK ASM; CYL. 3KR1	000000	000000
8941674412	8-9416	7441	BLOCK ASM; CYL. 3KR1	000000	000000
8941674441	8-9416	7444	BLOCK ASM; CYL 3KR1	000000	000000
8941674442	8-9416	7444	BLOCK ASM; CYL 3KR1	000000	000000
8941674468	8-9416	7468	HOSE; ACTUATOR	000000	000000
8941674690	8-9416	7469	CLIP; ACTUATOR	000000	000010
8941674700	8-9416	7470	BOLT; BRG CAP FIX 3KR1	000000	000000
8941674701	8-9416	7470	BOLT; BRG CAP FIX 3KR1	000056	000000
8941674710	8-9416	7471	BOLT; BRG CAP	000000	000000
8941674711	8-9416	7471	BOLT; BRG CAP	000011	000000
8941674811	8-9416	7481	SEAT; VALVE 3KR1	000047	000000
8941674820	8-9416	7482	STRAINER ASM; OIL PUMP	000000	000000
8941674821	8-9416	7482	STRAINER ASM; OIL PUMP	000000	000001
8941675890			BELT; FAN	000000	000000
8941676300	8-9416	7630	GAUGE; OIL LEVEL	000000	000000
8941676310	8-9416	7631	BEARING; BALL	000000	000008
8941676370	8-9416	7637	BEARING; BALL, TP	000000	000022
8941676600	8-9416	7660	PIPE ASM; FUEL INLET	000000	000000
8941677141	8-9416	7714	RING; THRUST, 5TH	000000	000000
8941677142	8-9416	7714	RING; THRUST	000002	000003
8941677270	8-9416	7727	GASKET; OIL PRESS	000000	000000
8941677390	8-9416	7739	CLIP; BATTERY CABLE	000000	000000
8941677391	8-9416	7739	CLIP; BATTERY CABLE	000000	000000
8941677470	8-9416	7747	SHAFT	000000	000000
8941677491	8-9416	7749	NIPPLE; O.P.W. SW.	000000	000000
8941677492	8-9416	7749	NIPPLE; O.P.W. SW.	000000	000000
8941677501	8-9416	7750	NIPPLE; OIL PRESSURE	000000	000000
8941677502	8-9416	7750	NIPPLE; OIL PRESSURE	000000	000000
8941677830	8-9416	7783	HOUSING; PUMP	000000	000000
8941677840	8-9416	7784	PLUNGER ASM.	000000	000000
8941677850	8-9416	7785	VALVE ASM; DELIVERY	000000	000000
8941677860	8-9416	7786	COVER	000000	000000

8941677870	8-9416	7787	BRACKET	000000	000000
8941677880	8-9416	7788	HOUSING	000000	000000
8941677890	8-9416	7789	HOUSING	000000	000000
8941677920	8-9416	7792	CAP**	000010	000000
8941677930	8-9416	7793	COVER	000001	000000
8941677940	8-9416	7794	CAPSULE; SPRING	000000	000000
8941677950	8-9416	7795	LEVER; FLOATING	000000	000000
8941677960	8-9416	7796	LEVER	000000	000000
8941677970	8-9416	7797	LEVER	000000	000000
8941677980	8-9416	7798	BRACKET	000000	000000
8941677990	8-9416	7799	BOLT; FEED PUMP	000000	000000
8941678000	8-9416	7800	BOLT; EYE, FEED PUMP	000000	000000
8941678010	8-9416	7801	GASKET; FEED PUMP	000000	000000
8941678020	8-9416	7802	ADAPTOR; FEED PUMP	000000	000000
8941678030	8-9416	7803	COUPLING	000000	000000
8941678700	8-9416	7870	EYE;SPRING INJECTION PUMP	000000	000000
8941678780			ABSORBER ASM	000000	000000
8941678810			BODY ASM.	000000	000000
8941678820	8-9416	7882	VALVE ASM 4JA/B1	000000	000005
8941678830	8-9416	7883	PLUG 4JA/B1	000000	000005
8941678840	8-9416	7884	O-RING 4JA/B1	000000	000014
8941678850	8-9416	7885	O-RING 4JA/B1	000000	000011
8941678860	8-9416	7886	O-RING 4JA/B1	000005	000171
8941678890	8-9416	7889	CASE ASM;OIL FILTER	000000	000000
8941679030	8-9416	7903	FLYWAIT	000000	000000
8941679350	8-9416	7935	COVER; PUMP	000000	000000
8941679360	8-9416	7936	PACKING; COVER	000000	000006
8941679400	8-9416	7940	SWITCH ASM; OVERHEAT	000000	000001
8941679410	8-9416	7941	SWITCH; OVERHEAT	000000	000000
8941679480	8-9416	7948	NUT; PULLEY,GEN	000000	000015
8941679990			GEAR; 5TH MAIN SHAFT	000000	000000
8941680000			GEAR; 5TH MAIN SHAFT	000000	000000
8941685180	8-9416	8518	HOUSING; FLYWHEEL	000000	000000
8941685181	8-9416	8518	HOUSING; FLYWHEEL	000000	000000
8941685241	8-9416	8524	CUT ASM; FUEL 3KC1	000001	000000
8941685250	8-9416	8525	STRAINER ASM; OIL PUMP	000000	000000
8941685271	8-9416	8527	HOSE; PIPE WATER	000000	000005
8941685290			BLOCK RING	000000	000010
8941685480			PIPE;WTR OUTLET	000000	000000
8941685520	8-9416	8552	METAL KIT; CR/SH	000000	000068
8941685530	8-9416	8553	METAL KIT; CRANK	000000	000045
8941685540	8-9416	8554	METAL SET; THRUST	000002	000000
8941685550	8-9416	8555	METAL SET; THRUST	000000	000000
8941685560	8-9416	8556	METAL SET; CAMSHAFT	000000	000000
8941685561	8-9416	8556	METAL SET; CAMSHAFT	000000	000000
8941690240	8-9416	9024	STRAINER ASM; OIL PUMP	000000	000000
8941690250	8-9416	9025	STRAINER ASM; OIL PUMP	000000	000000

8941690270	8-9416	9027	CLIP;TUBE,CRUIS	000000	000043
8941690710	8-9416	9071	PIN;LOCK,SHIFT	000000	000009
8941690711	8-9416	9071	PIN;LOCK,SHIFT	000000	000000
8941691221	8-9416	9122	PAN ASM;OIL	000000	000000
8941691931	8-9416	9193	BREATHER ASM; AIR	000000	000000
8941692731	8-9416	9273	LEAF; #4 4BD1T	000000	000000
8941694300	8-9416	9430	COVER; OIL PAN	000000	000000
8941695020	8-9416	9502	ROD; PUSH,NOZZL	000000	000054
8941695030	8-9416	9503	SCREW; ADJ,NOZZ	000000	000010
8941695040	8-9416	9504	NUT**	000000	000000
8941695270	8-9416	9527	GASKET	000000	000000
8941695280	8-9416	9528	DAMPER	000000	000000
8941695391			CORE ASM; HEATER	000000	000000
8941695450	8-9416	9545	HOSE; RUBBER DRAIN	000000	000000
8941695837			HOUSING	000000	000003
8941696461			LOCK ASM	000000	000000
8941696471			LOCK ASM	000000	000000
8941696490	8-9416	9649	GAUGE; OIL LEVEL	000000	000000
8941697451	8-9416	9745	BLOCK ASM;CYLINDER	000000	000000
8941697470	8-9416	9747	PISTON STD	000000	000000
8941697471	8-9416	9747	PISTON STD	000000	000000
8941697480	8-9416	9748	RING SET; PISTON	000000	000004
8941697530			RINGS;PISTON	000000	000007
8941697560			CASE;CRANK	000000	000000
8941697562	8-9416	9756	CASE;CRANK	000000	000000
8941697581	8-9416	9758	MANIFOLD; EXHAUST	000000	000000
8941697611	8-9416	9761	HOUSING; THERMOSTAT	000000	000000
8941697641	8-9416	9764	PROTECTOR; HEAT	000000	000000
8941697650	8-9416	9765	PISTON	000000	000000
8941697670	8-9416	9767	COVER ASM.;CYL.	000000	000000
8941697671	8-9416	9767	COVER ASM;CYL.	000000	000000
8941697672	8-9416	9767	COVER ASM;CYL	000000	000000
8941697681	8-9416	9768	COVER;HD. COVER, OUTER	000000	000000
8941697691	8-9416	9769	BLOCK ASM;W/O T	000000	000000
8941697702	8-9416	9770	BLOCK ASM;CYL	000000	000000
8941697704	8-9416	9770	BLOCK ASM;CYL	000000	000000
8941697732	8-9416	9773	FILTER ASM; OIL 4BD1T	000000	000000
8941697740	8-9416	9774	PULLEY; CRANKSHAFT 4BD1	000001	000000
8941697750	8-9416	9775	PIPE ASM.; OIL,	000000	000000
8941697751	8-9416	9775	PIPE ASM;OIL FILTER TO	000000	000002
8941697760	8-9416	9776	PIPE;INL.TURBO	000000	000000
8941697770	8-9416	9777	COVER 4BD1T	000000	000003
8941697780	8-9416	9778	OIL FILTER;MAIN	000000	000000
8941697781	8-9416	9778	OIL FILTER;MAIN	000000	000000
8941697782	8-9416	9778	OIL FILTER;MAIN	000009	000000
8941697790	8-9416	9779	OIL FILTER;SECO	000000	000000
8941697791	8-9416	9779	OIL FILTER;SECO	000000	000000

8941697792	8-9416	9779	OIL FILTER;SECO	000000	000000
8941697801	8-9416	9780	FLYWHEEL ASM 4BD1T	000000	000000
8941697820	8-9416	9782	COVER;TAPPET	000000	000000
8941697821	8-9416	9782	COVER; TAPPET	000000	000007
8941698792	8-9416	9879	BLOCK ASM; CYL. 4JC1	000000	000000
8941698794	8-9416	9879	BLOCK ASM; CYL. 4JC1	000000	000000
8941698810	8-9416	9881	HEAD ASM,CYL 4JC1	000000	000000
8941698811	8-9416	9881	HEAD ASM,CYL 4JC1	000000	000000
8941698830	8-9416	9883	LINER; CYL. 4JC1	000005	000000
8941698831	8-9416	9883	LINER; CYL. 4JC1	000004	000000
8941698850	8-9416	9885	PISTON	000000	000000
8941699140	8-9416	9914	COVER ASM; FRONT	000000	000000
8941699160	8-9416	9916	PIPE; INL.	000000	000000
8941699170	8-9416	9917	HOSE; RUBBER PCV	000000	000000
8941699182	8-9416	9918	PUMP ASM; INJ.	000000	000000
8941699183	8-9416	9918	PUMP ASM; INJ.	000000	000000
8941699192	8-9416	9919	PUMP ASM; INJ.	000000	000000
8941699193	8-9416	9919	PUMP ASM; INJ.	000000	000000
8941700205			CASE; TIMING GEAR	000000	000000
8941700206			CASE; TIMING GEAR	000000	000009
8941701073	8-9417	0107	PLATE; RR.	000000	000000
8941701084	8-9417	0108	PLATE; F, CYL. BLOCK	000000	000000
8941701085	8-9417	0108	PLATE; F, CYL. BLOCK	000000	000000
8941701110	8-9417	0111	SPACER; PTO, PUMP	000000	000000
8941701120	8-9417	0112	PACKING; SPACER	000000	000000
8941701130	8-9417	0113	SHAFT; IDLE GEAR, C	000000	000000
8941701140	8-9417	0114	SHAFT; PTO GEAR	000000	000000
8941701150	8-9417	0115	FLYWHEEL ASM.	000000	000000
8941701170	8-9417	0117	SHAFT; IDLE GEAR, A	000000	000000
8941701180	8-9417	0118	GEAR; W/BUSH, B	000000	000000
8941701204	8-9417	0120	PAN ASM; OIL	000000	000000
8941701206	8-9417	0120	PAN ASM; OIL	000000	000000
8941701220	8-9417	0122	PUMP ASM; OIL W/STRAINER	000000	000000
8941701224	8-9417	0122	PUMP ASM; OIL W/STRAINER	000000	000001
8941701231	8-9417	0123	PIPE ASM; OIL INJ PUMP 4J	000000	000000
8941701240	8-9417	0124	PIPE ASM; OIL, GEAR	000000	000000
8941701260	8-9417	0126	BODY;*INVALID*	000000	000000
8941701270	8-9417	0127	COVER	000000	000000
8941701280	8-9417	0128	PACKING	000000	000003
8941701292	8-9417	0129	HOUSING; THERMOSTAT	000000	000000
8941701321	8-9417	0132	PIPE ASM; PUMP FILTER 4JA	000002	000000
8941701330	8-9417	0133	PIPE ASM; FUEL FILTER 4JA	000000	000001
8941701344	8-9417	0134	PUMP ASM; INJ.	000000	000000
8941701345	8-9417	0134	PUMP ASM; INJ.	000000	000000
8941701356	8-9417	0135	PUMP ASM; INJ.	000000	000000
8941701360	8-9417	0136	BRACKET; GENERATOR	000000	000001
8941701400	8-9417	0140	HOSE; RUBBER BY-PASS	000000	000000

8941701401	8-9417	0140	HOSE; RUBBER BY-PASS	000000	000000
8941701420	8-9417	0142	PIPE ASM; FUEL PUMP	000000	000000
8941701430	8-9417	0143	PIPE ASM; FUEL	000000	000000
8941702050	8-9417	0205	STARTER; 12V 1.4KW	000000	000000
8941702051	8-9417	0205	STARTER; 12V 1.4KW	000000	000000
8941702052	8-9417	0205	STARTER; 12V 1.4KW	000000	000001
8941702060	8-9417	0206	YOKE ASM; STARTER	000001	000000
8941702070	8-9417	0207	ARMATURE ASM; STARTER	000000	000000
8941702090	8-9417	0209	HOUSING ASM; STARTER	000000	000000
8941702100	8-9417	0210	SWITCH ASM; MAGNETIC	000001	000001
8941702110	8-9417	0211	HOLDER ASM; BRUSH	000000	000000
8941702120	8-9417	0212	FRAME ASM; REAR STARTER	000000	000000
8941702130	8-9417	0213	PINION; STARTER	000000	000000
8941702140	8-9417	0214	GASKET;O-RING,YOKE STARTR	000010	000088
8941702150	8-9417	0215	BOLT; THROUGH STARTER	000000	000000
8941702160	8-9417	0216	SCREW;RR COVER	000000	000000
8941702170	8-9417	0217	SCREW; W/WASHER, STARTER	000000	000000
8941702190	8-9417	0219	BEARING; STARTER	000000	000000
8941702200	8-9417	0220	PIPE;DRAIN RR CVR STARTER	000000	000000
8941702210	8-9417	0221	STARTER KIT (+SIDE BRUSH)	000000	000000
8941704860	8-9417	0486	NUT;MANIFOLD	000000	000000
8941709710	8-9417	0971	TUBE ASM; OIL GUIDE	000000	000000
8941709752	8-9417	0975	VALVE ASM; CHECK 3KR1	000000	000000
8941710120			SCREW;HSG START	000000	000000
8941711080			HOUSING; PUMP	000000	000000
8941711090	8-9417	1109	COVER;HOUSING/4BD1	000001	000001
8941711100	8-9417	1110	NUT; FUEL FEED PUMP FIX	000000	000043
8941711110	8-9417	1111	TAPPER ASM.	000000	000000
8941711120	8-9417	1112	SEAT; SPRING	000000	000000
8941711130	8-9417	1113	CAM SHAFT	000000	000000
8941711150	8-9417	1115	CAM SHAFT	000000	000000
8941711230	8-9417	1123	WASHER	000000	000000
8941711240	8-9417	1124	LEVER; FOR GOVERNOR 4BD1T	000000	000000
8941711250	8-9417	1125	BRKT;RETURN SPR	000000	000003
8941711260	8-9417	1126	BOLT;SPR.,BRKT	000000	000000
8941711290	8-9417	1129	O-RING	000000	000000
8941711300	8-9417	1130	SHAFT; CONT GOV	000000	000000
8941711320	8-9417	1132	LEVER	000000	000000
8941711330	8-9417	1133	PLUG*	000000	000000
8941711340	8-9417	1134	LEVER	000000	000000
8941711350	8-9417	1135	COVER ASM.; GOV.	000000	000000
8941711380	8-9417	1138	SCREW	000000	000000
8941711390	8-9417	1139	LEVER; GUIDE	000000	000000
8941711400	8-9417	1140	SPRING	000000	000000
8941711401	8-9417	1140	SPRING; SPEED	000000	000000
8941711410	8-9417	1141	SHAFT ASM;ROT.	000000	000000
8941711420	8-9417	1142	SHIFTER	000000	000000

8941711430	8-9417	1143	SPRING ASM.	000000	000000
8941711440	8-9417	1144	SCREW	000001	000000
8941711450	8-9417	1145	PLUG*	000000	000000
8941711460	8-9417	1146	SHAFT;GOVERNOR	000000	000000
8941711461	8-9417	1146	SHAFT; GOVERNOR	000000	000000
8941711470	8-9417	1147	NUT**	000000	000000
8941711480	8-9417	1148	PLUG*	000000	000000
8941711490	8-9417	1149	LINK*	000000	000000
8941711500	8-9417	1150	BOLT*	000000	000000
8941711510	8-9417	1151	LEVER ASM.	000000	000000
8941711520	8-9417	1152	LEVER	000000	000000
8941711630	8-9417	1163	BOLT*	000000	000000
8941711640	8-9417	1164	HOUSING; GOVERNOR	000000	000000
8941711660	8-9417	1166	LEVER	000000	000000
8941711670	8-9417	1167	SPRING	000000	000000
8941711680	8-9417	1168	CAP**	000001	000000
8941711730	8-9417	1173	SEAT; SPRING	000000	000000
8941711760	8-9417	1176	SPRING	000000	000000
8941711780	8-9417	1178	HOSE JOINT	000000	000000
8941711790	8-9417	1179	SCREW	000000	000000
8941711830	8-9417	1183	LEVER;TENSION	000000	000000
8941711840	8-9417	1184	HOUSING; FUEL FEED PUMP	000000	000002
8941711850	8-9417	1185	PLUG;PISTON,FUEL FEED PMP	000000	000001
8941711860	8-9417	1186	ADAPT.;PIPE	000000	000000
8941711880	8-9417	1188	PIPE;FUEL SUCTI	000000	000001
8941711940	8-9417	1194	NUT; CAP, NOZZL	000000	000000
8941711950	8-9417	1195	NUT; NOZZLE RET	000000	000028
8941712360	8-9417	1236	RING; SNAP,CL. HUB T=1.75	000000	000000
8941712370	8-9417	1237	RING; SNAP,C/H T=1.80 (OR)	000000	000000
8941712380	8-9417	1238	RING; SNAP,C/H T=1.85 (OR)	000000	000000
8941712450	8-9417	1245	GEAR; INJ. PUMP	000000	000000
8941712460	8-9417	1246	GEAR; INJ. PUMP	000000	000001
8941712470	8-9417	1247	PIN; LEVER	000000	000000
8941712480	8-9417	1248	LEVER ASM; SHIFT	000000	000000
8941712490	8-9417	1249	SWITCH ASM; MAG	000000	000000
8941712500	8-9417	1250	WIRE ASM; LEAD	000000	000000
8941712510	8-9417	1251	BRACKET ASM; FRONT	000000	000000
8941712520	8-9417	1252	METAL	000000	000000
8941712530	8-9417	1253	RING; CLIP	000000	000000
8941712540	8-9417	1254	STOPPER PINION	000000	000000
8941712550	8-9417	1255	CLUTCH ASM; O-RING	000002	000001
8941712560	8-9417	1256	BRACKET ASM; CENTER	000000	000000
8941712570	8-9417	1257	METAL	000000	000000
8941712580	8-9417	1258	WASHER; INSULATE	000000	000000
8941712590	8-9417	1259	SHAFT	000000	000000
8941712600	8-9417	1260	BRACKET; CENTER	000000	000000
8941712610	8-9417	1261	SPRING; BRUSH	000000	000000

8941712620	8-9417	1262	HOLDER ASM; BRUSH	000002	000000
8941712630	8-9417	1263	BRACKET; REAR	000000	000000
8941712640	8-9417	1264	BRACKET ASM.	000001	000000
8941712650	8-9417	1265	BOLT	000000	000000
8941712660	8-9417	1266	BEARING; BALL	000000	000000
8941712670	8-9417	1267	ARMATURE ASM.	000000	000000
8941712680	8-9417	1268	COIL ASM; FIELD	000002	000000
8941712690	8-9417	1269	TERMINAL ASM.	000000	000000
8941712710	8-9417	1271	PACKING	000000	000000
8941712730	8-9417	1273	SEAL ASM.	000000	000000
8941712890	8-9417	1289	COLLAR; THRUST	000000	000000
8941712900	8-9417	1290	RING GEAR	000000	000000
8941712910	8-9417	1291	VALVE; INTAKE 4JC1	000000	000005
8941712920	8-9417	1292	VALVE; EXHAUST 4JC1	000000	000002
8941712940	8-9417	1294	PACKING; HOUSING	000000	000000
8941712950	8-9417	1295	GEAR; INJ PUMP	000000	000000
8941712963	8-9417	1296	STARTER; NIKKO	000000	000002
8941713000	8-9417	1300	LINK; CONTROL, ENGINE	000000	000000
8941713010	8-9417	1301	LINK; CONTROL, FUEL CUT	000000	000000
8941713020	8-9417	1302	BUSHING; LEVER TO LINK	000035	000000
8941713030	8-9417	1303	WASHER; PLAIN 3KB1	000000	000005
8941713040	8-9417	1304	LEVER; CONTROL, 3KB1	000000	000000
8941713050	8-9417	1305	LEVER; ENG CONT & FUEL CU	000000	000000
8941713061	8-9417	1306	LEVER ASM; FUEL CUT	000000	000000
8941713830	8-9417	1383	WEATHER STRIP;	000000	000000
8941713831	8-9417	1383	WEATHERSTRIPE	000000	000000
8941713832	8-9417	1383	WEATHERSTRIPE	000000	000000
8941714640	8-9417	1464	GASKET; OIL PAN	000000	000000
8941715260	8-9417	1526	PACKING	000000	000001
8941715372	8-9417	1537	PIPE ASM; WATER	000002	000000
8941715380	8-9417	1538	HANGER; FRONT 3KR1	000000	000000
8941715410	8-9417	1541	PIN ASM; SHIFT ARM TO ROD	000000	000000
8941715590	8-9417	1559	TURBO ASM, NEW	000000	000000
8941716141	8-9417	1614	FLYWHEEL ASM. KOMATSU	000000	000000
8941716210	8-9417	1621	STARTER; NIKKO	000000	000001
8941716240	8-9417	1624	CLIP; TRANS HARNESS	000000	000003
8941716800	8-9417	1680	HANGER; FRONT	000000	000000
8941717340	8-9417	1734	PULLEY; BOSS	000000	000000
8941717710	8-9417	1771	STARTER; NIKKO	000000	000001
8941717720	8-9417	1772	STARTER	000000	000000
8941717770	8-9417	1777	PRESSUREMETER; OIL	000001	000000
8941717780	8-9417	1778	GENERATOR; 12V/35A	000000	000001
8941717910	8-9417	1791	LINK PLATE; LEVER-PUMP	000000	000000
8941718160	8-9417	1816	THERMOSTAT; RAD	000000	000000
8941718250	8-9417	1825	BRACKET; CLIP, H	000000	000010
8941718430	8-9417	1843	BOLT; HOUSING FIX	000000	000000
8941718480	8-9417	1848	PLATE; REAR CYL. BLOCK	000000	000000

8941718530	8-9417	1853	BRUSH; STARTER	000000	000000
8941718710			BREATHER ASM;	000000	000000
8941718711			BREATHER ASM;	000001	000004
8941718870			STRAINER ASM; OIL PUMP 3K	000000	000000
8941718871	8-9417	1887	STRAINER ASM; OIL PUMP 3K	000000	000000
8941718971	8-9417	1897	PULLEY; CRANK	000000	000000
8941718980	8-9417	1898	PACKING; INLET PIPE	000236	000000
8941719070	8-9417	1907	FAN GUARD	000000	000000
8941719071	8-9417	1907	FAN GUARD	000000	000001
8941719080	8-9417	1908	FAN GUARD	000000	000000
8941719081	8-9417	1908	FAN GUARD	000000	000000
8941719090	8-9417	1909	RADIATOR 3KR1	000000	000002
8941719091	8-9417	1909	RADIATOR 3KR1	000000	000000
8941719101	8-9417	1910	RADIATOR ASM.;	000000	000000
8941719102	8-9417	1910	RADIATOR ASM.;	000000	000000
8941719181	8-9417	1918	TIMER ASM; INJ PUMP	000000	000000
8941719430	8-9417	1943	BOLT; REAMER	000000	000000
8941719431	8-9417	1943	BOLT; REAMER	000000	000000
8941719440	8-9417	1944	BOLT; JOINT	000000	000016
8941719571	8-9417	1957	LEVER ASSEMBLY	000000	000000
8941719810			PROTECTOR;HEAT	000000	000000
8941719831	8-9417	1983	SHEET; CLIP 3KC/3KR PU	000000	000000
8941719840	8-9417	1984	STAY; RADIATOR	000000	000000
8941719860	8-9417	1986	BRKT; RADIATOR	000000	000000
8941719870	8-9417	1987	BRACKET;RADIATOR,UPPER	000000	000000
8941719900	8-9417	1990	STUD; EXH MANIFOLD 4JC1	000005	000000
8941719960	8-9417	1996	SCREW;SEMS,ST	000000	000021
8941719970			HANGER; ENGINE	000000	000000
8941720042			HOUSING; CLU,W/BUSH	000000	000000
8941720090	8-9417	2009	BOLT; MF-HD 2KC/3KC1	000000	000000
8941720100	8-9417	2010	HOSE; RADIATOR LOWER 3KR1	000000	000000
8941720101	8-9417	2010	HOSE; RADIATOR LOWER 3KR1	000000	000000
8941720112	8-9417	2011	HOSE; RADIATOR UPPER 3KR1	000000	000009
8941720120	8-9417	2012	CLAMP 3KC/3KR PU	000000	000000
8941720181	8-9417	2018	RUBBER; SUPPORT 4BD1T	000007	000000
8941720191	8-9417	2019	RUBBER; SUPPORT 4BD1T	000000	000000
8941720292	8-9417	2029	FILTER ASM; FUEL	000000	000000
8941720294	8-9417	2029	FILTER ASM; FUEL	000000	000000
8941720295	8-9417	2029	FILTER ASM.	000000	000000
8941720296	8-9417	2029	FILTER ASM.	000002	000000
8941720870	8-9417	2087	BOLT;SEMS,CASE,L=120	000000	000000
8941721120	8-9417	2112	PIPE ASM; INJ #3 3KR1	000000	000005
8941721860	8-9417	2186	OIL PAN ASM.	000000	000000
8941722230	8-9417	2223	PLUG; GLOW	000000	000000
8941722240	8-9417	2224	FLYWHEEL ASM	000000	000000
8941722241	8-9417	2224	FLYWHEEL ASM	000000	000000
8941722270	8-9417	2227	POWER DRIVE ASM.;W.O/CLUT	000000	000000

8941722330	8-9417	2233	CLIP*	000000	000000
8941722600	8-9417	2260	FAN ASM; COOLING	000000	000002
8941722620	8-9417	2262	PAN ASM.; OIL	000000	000000
8941722680	8-9417	2268	CAM**	000000	000000
8941722690	8-9417	2269	CAM**	000000	000000
8941722790	8-9417	2279	SHAFT	000000	000000
8941722820	8-9417	2282	PUSH ROD	000000	000000
8941722830	8-9417	2283	PUSH ROD	000000	000000
8941722840	8-9417	2284	PUSH ROD	000000	000000
8941722850	8-9417	2285	PUSH ROD	000000	000000
8941722860	8-9417	2286	PUSH ROD	000000	000000
8941722870	8-9417	2287	PUSH ROD	000000	000000
8941722880	8-9417	2288	PUSH ROD	000000	000000
8941722890	8-9417	2289	PUSH ROD	000000	000000
8941722900	8-9417	2290	PUSH ROD	000000	000000
8941722910	8-9417	2291	PUSH ROD	000000	000000
8941722920	8-9417	2292	PUSH ROD	000000	000000
8941722930	8-9417	2293	PUSH ROD	000000	000000
8941722940	8-9417	2294	PUSH ROD	000000	000000
8941722950	8-9417	2295	PUSH ROD	000000	000000
8941722960	8-9417	2296	PUSH ROD	000000	000000
8941722970	8-9417	2297	PUSH ROD	000000	000000
8941722980	8-9417	2298	PUSH ROD	000000	000000
8941723010	8-9417	2301	CLIP;CONT. WIRE	000001	000010
8941723030	8-9417	2303	SPRING;CONT.LEV	000000	000007
8941723040	8-9417	2304	WIRE;ENG.STOP	000000	000008
8941723120	8-9417	2312	GOVERNOR ASM.	000000	000000
8941723150	8-9417	2315	PIPE;BREATH, OIL-DRAIN	000000	000000
8941723370	8-9417	2337	FOOT;ENGINE (RH)	000000	000000
8941723371	8-9417	2337	FOOT;ENGINE (RH)	000000	000000
8941723380	8-9417	2338	FOOT;ENGINE (LH)	000000	000000
8941723381	8-9417	2338	FOOT;ENGINE (LH)	000000	000002
8941723550	8-9417	2355	PUMP ASM; INJ.	000000	000000
8941723560	8-9417	2356	PUMP ASM; INJ.	000000	000001
8941723620	8-9417	2362	BREATH, OIL-DRAIN	000000	000000
8941723650	8-9417	2365	GEAR; CRANK SHAFT	000000	000000
8941723670	8-9417	2367	GEAR ASM.	000000	000000
8941723740	8-9417	2374	DISTANCE; PIECE 2KC1	000001	000000
8941723821	8-9417	2382	FILTER ASM; OIL	000000	000000
8941723840	8-9417	2384	VALVE ASM	000001	000000
8941723850	8-9417	2385	SPRING; COIL COMP	000000	000000
8941723872	8-9417	2387	COVER	000000	000000
8941723880	8-9417	2388	PACKING; O-RING, DRAIN PL	000031	000000
8941723890	8-9417	2389	PLUG; DRAIN	000000	000001
8941724150	8-9417	2415	BODY ASM	000000	000000
8941724151	8-9417	2415	BODY ASM	000000	000000
8941724870	8-9417	2487	PIPE ASM;LEAK-OFF	000000	000000

8941724871	8-9417	2487	PIPE ASM;LEAK-OFF	000000	000007
8941725030	8-9417	2503	HEAD ASM; CYL.	000000	000000
8941725031	8-9417	2503	HEAD ASM; CYL.	000000	000000
8941725041	8-9417	2504	HEAD ASM.;CYL.	000000	000000
8941725042	8-9417	2504	HEAD ASM.;CYL.	000000	000000
8941725311	8-9417	2531	FLYWHEEL ASM.	000002	000000
8941725620	8-9417	2562	RING; BLOCK, 2N	000000	000000
8941725621	8-9417	2562	RING;BLOCK LOW & 2ND	000000	000000
8941725630	8-9417	2563	2ND GEAR;TRANS	000000	000000
8941725900	8-9417	2590	WASHER; BRKT. T	000000	000050
8941730462	8-9417	3046	PUMP ASM; INJ.	000000	000000
8941730510	8-9417	3051	PULLEY ASM. GEN	000000	000001
8941730530	8-9417	3053	BEARING; BALL	000000	000000
8941730540	8-9417	3054	BEARING; BALL	000014	000000
8941730550	8-9417	3055	COLLAR	000000	000000
8941730560	8-9417	3056	COLLAR	000000	000000
8941730570	8-9417	3057	COLLAR GENERATO	000000	000000
8941730580	8-9417	3058	RETAINER	000000	000000
8941730590	8-9417	3059	RETAINER	000000	000000
8941730600	8-9417	3060	RETAINER	000007	000000
8941730610	8-9417	3061	BUSHING; INSULATE	000000	000000
8941730620	8-9417	3062	HOLDER	000000	000000
8941730640	8-9417	3064	RECTIFIRE ASM.	000000	000000
8941730690	8-9417	3069	RECTIFIER; GEN	000000	000000
8941730700	8-9417	3070	FAN	000000	000000
8941730710	8-9417	3071	SCREW	000000	000000
8941730720	8-9417	3072	BOLT*	000000	000000
8941730800	8-9417	3080	NUT**	000000	000000
8941731140	8-9417	3114	PIPE ASM; WATER	000000	000000
8941731160	8-9417	3116	HOSE; WATER, PIPE-COOLER	000000	000000
8941731200	8-9417	3120	TIMER 4JA1	000000	000000
8941732180	8-9417	3218	LEVER; ENG. CONT FUEL CUT	000000	000000
8941732181	8-9417	3218	LEVER; ENG. CONT FUEL CUT	000000	000000
8941734120	8-9417	3412	GASKET; SLEEVE	005285	005658
8941734300	8-9417	3430	NUT; CAP,HD COVER	000000	000040
8941734612			LOWER HOSE	000000	000000
8941734880			GASKET; ING. NOZZLE	000000	000000
8941735640	8-9417	3564	PISTON	000000	000000
8941735650	8-9417	3565	PAN ASM.;OIL	000000	000000
8941735991	8-9417	3599	PUMP ASM; INJ.	000000	000000
8941736120	8-9417	3612	STUD; NOZZLE FIX.	000025	000000
8941736880	8-9417	3688	COVER;FRONT	000000	000000
8941736930	8-9417	3693	GASKET;FRT COVER	000000	000000
8941736940	8-9417	3694	FORK;TOP-3RD SH	000000	000000
8941736950	8-9417	3695	FORK; LOW - 2ND SH	000000	000000
8941737310	8-9417	3731	CAP;RUBBER;EVAP	000000	000022
8941737800	8-9417	3780	SILENCER; EXHAUST 2KC1	000000	000000

8941737801	8-9417	3780	SILENCER; EXHAUST 2KC1	000001	000000
8941737810	8-9417	3781	MUFFLER	000000	000000
8941737811	8-9417	3781	MUFFLER	000000	000000
8941737812	8-9417	3781	MUFFLER	000000	000001
8941738610	8-9417	3861	BEARING;BALL	000000	000028
8941738630	8-9417	3863	BEARING; 123	000000	000001
8941738660	8-9417	3866	BEARING;RADIAL	000000	000010
8941739480	8-9417	3948	CONTROL RESISTANCE	000000	000845
8941739490	8-9417	3949	RESISTANCE; CONTROL	000000	000002
8941739510	8-9417	3951	SPACER; CRANKSHAFT	000000	000000
8941739530	8-9417	3953	PIPE ASM; OIL	000000	000000
8941739800	8-9417	3980	SPACER; FAN	000000	000000
8941739940	8-9417	3994	COVER	000000	000000
8941740210	8-9417	4021	BOX ASM; SWITCH	000000	000000
8941740230	8-9417	4023	HANGER; FRONT	000000	000000
8941740240	8-9417	4024	HARNES; BOX SIDE	000000	000000
8941740250	8-9417	4025	PLATE; REAR SWITCH BOARD	000000	000000
8941740260	8-9417	4026	COVER; SWITCH BOARD	000000	000000
8941740270	8-9417	4027	PLATE; FRONT SWITCH BOARD	000000	000000
8941740280	8-9417	4028	ISOLATOR 3KC/3KR PU	000039	000000
8941740290	8-9417	4029	BUSH; RUBBER	000000	000000
8941740880	8-9417	4088	GASKET; OIL FIL	000000	000000
8941741090	8-9417	4109	BOLT;EYE,OVER FLOW FUEL	000000	000000
8941741380	8-9417	4138	COVER;HOUSING SIDE	000000	000000
8941741390	8-9417	4139	PIN; NOZZLE SET,HOLDER	000000	000060
8941741400	8-9417	4140	SEAT; SPRING	000000	000000
8941741410	8-9417	4141	SPRING;NOZZLE LWR,HOLDER	000000	000022
8941741420	8-9417	4142	SHIM; NOZZLE .500	000004	000000
8941741430	8-9417	4143	SHIM; NOZZLE .525	000000	000000
8941741440	8-9417	4144	SHIM; NOZZLE .550	000000	000000
8941741450	8-9417	4145	SHIM; NOZZLE .575	000000	000000
8941741460	8-9417	4146	SHIM; NOZZLE .600	000000	000000
8941741470	8-9417	4147	SHIM; NOZZLE .625	000000	000000
8941741480	8-9417	4148	SHIM; NOZZLE .650	000000	000000
8941741490	8-9417	4149	SHIM; NOZZLE .675	000000	000000
8941741500	8-9417	4150	SHIM; NOZZLE, .700	000001	000000
8941741510	8-9417	4151	SHIM; NOZZLE .725	000000	000000
8941741520	8-9417	4152	SHIM; NOZZLE .750	000000	000000
8941741530	8-9417	4153	SHIM; NOZZLE .775	000000	000000
8941741540	8-9417	4154	SHIM; NOZZLE .8MM	000000	000000
8941741550	8-9417	4155	SHIM; NOZZLE .825	000000	000000
8941741560	8-9417	4156	SHIM; NOZZLE .850	000000	000000
8941741570	8-9417	4157	SHIM; NOZZLE .875	000000	000000
8941741580	8-9417	4158	SHIM; NOZZLE .900	000000	000000
8941741590	8-9417	4159	SHIM; NOZZLE .925	000000	000000
8941741600	8-9417	4160	SHIM; NOZZLE .950	000000	000000
8941741610	8-9417	4161	SHIM; NOZZLE .975	000000	000000

8941741620	8-9417	4162	SHIM; NOZZLE 1.000	000000	000000
8941741630	8-9417	4163	SHIM; NOZZLE 1.025	000000	000000
8941741640	8-9417	4164	SHIM; NOZZLE 1.050	000000	000000
8941741650	8-9417	4165	SHIM; NOZZLE 1.075	000000	000000
8941741660	8-9417	4166	SHIM; NOZZLE 1.100	000000	000000
8941741670	8-9417	4167	SHIM; NOZZLE 1.125	000000	000000
8941741680	8-9417	4168	SHIM; NOZZLE 1.150	000000	000000
8941741690	8-9417	4169	SHIM; NOZZLE 1.175	000000	000000
8941741700	8-9417	4170	SHIM; (T=1.200)	000000	000000
8941741710	8-9417	4171	SHIM; (T=1.225)	000000	000000
8941741720	8-9417	4172	SHIM; (T=1.250)	000000	000000
8941741730	8-9417	4173	SHIM; (T=1.275)	000000	000000
8941741740	8-9417	4174	SHIM; (T=1.300)	000000	000000
8941741750	8-9417	4175	SHIM; (T=1.325)	000000	000000
8941741760	8-9417	4176	SHIM; (T=1.350)	000000	000000
8941741770	8-9417	4177	SHIM; (T=1.375)	000000	000000
8941741780	8-9417	4178	SHIM; (T=1.400)	000000	000000
8941741790	8-9417	4179	SHIM; (T=1.425)	000000	000000
8941741800	8-9417	4180	SHIM; (T=1.450)	000000	000000
8941741810	8-9417	4181	SHIM; (T=1.475)	000000	000000
8941741820	8-9417	4182	SHIM; (T=1.500)	000000	000000
8941741830	8-9417	4183	SPACER; NOZZLE	000000	000000
8941741840	8-9417	4184	NUT; NOZZLE RETURN,HOLDER	000000	000028
8941742770	8-9417	4277	BOLT*	000000	000000
8941742771	8-9417	4277	BOLT	000000	000000
8941743440	8-9417	4344	RTRN CONN.NOZZLE HOLD	000000	000223
8941743460	8-9417	4346	BOLT; FRT COVER/QUAD BOX	000000	000000
8941743461	8-9417	4346	BOLT; FRT COVER/QUAD BOX	000000	000006
8941744171	8-9417	4417	PUMP ASM; FUEL	000000	000000
8941744180	8-9417	4418	PUMP ASM; MECHANICAL FEED	000000	000000
8941744181	8-9417	4418	PUMP ASM; MECHANICAL FEED	000000	000010
8941744640	8-9417	4464	HOSE; RUBBER 4JB1-PW	000000	000000
8941744641	8-9417	4464	HOSE; RUBBER 4JB1-PW	000000	000002
8941745030	8-9417	4503	GAUGE ASM; OIL LEVEL 3KC1	000000	000000
8941745230	8-9417	4523	FLYWHEEL ASM	000000	000000
8941745260	8-9417	4526	PIPE ASM; OIL FI	000000	000004
8941745290	8-9417	4529	COVER;CYL.BLOCK,OIL DRAIN	000000	000011
8941745370	8-9417	4537	WASHER;ADAPT	000006	000054
8941745591			BOLT;HINGE,DOOR	000000	000000
8941745592	8-9417	4559	BOLT;HINGE/BODY BK DR	000000	000000
8941745631	8-9417	4563	GEAR ASM.; OD. MAIN SHAFT	000000	000000
8941746020	8-9417	4602	GAUGE ASM; OIL LEVEL 2KC1	000001	000000
8941746030	8-9417	4603	GAUGE ASM; OIL LEVEL	000000	000000
8941746040	8-9417	4604	HARNNESS; ENGINE SIDE	000000	000000
8941746063	8-9417	4606	RADIATOR	000000	000000
8941746073	8-9417	4607	RADIATOR	000000	000000
8941746120	8-9417	4612	HANGER; ENGINE RH 4JA/B1	000000	000000

8941746441	8-9417	4644	PIPE; INLET WATER	000001	000000
8941746460	8-9417	4646	PIPE ASM; OIL CYL HEAD 4J	000000	000000
8941746470	8-9417	4647	FILTER ASM; OIL 4JA1-PW	000000	000000
8941746471	8-9417	4647	FILTER ASM; OIL 4JA1-PW	000000	000000
8941746480	8-9417	4648	HOSE; RUBBER 4JB1-PW	000000	000000
8941746640			PIPE; INLET, WATER	000000	000000
8941747390	8-9417	4739	PISTON; INJ. PUMP	000000	000000
8941747670	8-9417	4767	SHIM;T=2.2	000000	000000
8941747680	8-9417	4768	SHIM;T=2.2	000000	000000
8941747800	8-9417	4780	SHIM;T=2.4	000000	000000
8941747910	8-9417	4791	SHIM;T=2.70	000000	000000
8941747920	8-9417	4792	SHIM;T=2.7	000000	000000
8941747930	8-9417	4793	SHIM;T=2.7	000000	000000
8941748020	8-9417	4802	VALVE; DELIVERY, INJ. PUM	000000	000000
8941748030	8-9417	4803	SPRING; INJ. PUMP	000000	000000
8941748040	8-9417	4804	STOPPER	000000	000000
8941748050	8-9417	4805	HOLDER; INJ. PUMP	000000	000000
8941748070	8-9417	4807	CONTROL SHAFT	000000	000002
8941748081	8-9417	4808	LEVER; INJ. PUMP	000000	000010
8941748090	8-9417	4809	LEVER	000000	000000
8941748091	8-9417	4809	LEVER	000001	000000
8941748100	8-9417	4810	BRACKET; INJ. PUMP	000000	000000
8941748130	8-9417	4813	SLEEVE; GOVERNOR, INJ. PU	000000	000000
8941748170	8-9417	4817	PLUG; INJ. PUMP	000000	000000
8941748180	8-9417	4818	BOLT; INJ. PUMP	000001	000000
8941748190	8-9417	4819	VALVE; REGULATION, INJ. P	000000	000000
8941748200	8-9417	4820	MAGNET VALVE	000000	000000
8941748210	8-9417	4821	PIPE; FUEL RET.	000000	000000
8941748220	8-9417	4822	PLATE; INJ. PUMP	000000	000000
8941748230	8-9417	4823	WIRE*	000000	000000
8941748240	8-9417	4824	BOLT; EYE, INJ. PUMP	000029	000000
8941748280	8-9417	4828	SHAFT; CONTROL	000006	000000
8941748310	8-9417	4831	HOUSING; PUMP	000000	000000
8941748320	8-9417	4832	DISC; CAM, INJ. PUMP	000001	000000
8941748330	8-9417	4833	SPRING; TIMER (K=2.25KG/M	000000	000000
8941748340	8-9417	4834	SPRING; TIMER (K=2.25KG/M	000000	000000
8941748350	8-9417	4835	SPRING; TIMER (K=2.05KG/M	000000	000000
8941748360	8-9417	4836	SPRING; TIMER (K=2.05KG/M	000000	000000
8941748370	8-9417	4837	SPRING; TIMER (K=2.05KG/M	000000	000000
8941748380	8-9417	4838	SPRING; TIMER (K=2.50KG/M	000000	000000
8941748390	8-9417	4839	DISTRIBUTOR HEAD	000000	000000
8941748400	8-9417	4840	COVER; GOV.	000000	000000
8941748410	8-9417	4841	SHAFT; INJ. PUMP	000000	000000
8941748420	8-9417	4842	SPRING; GOV.	000000	000000
8941748430	8-9417	4843	BRACKET; INJ. PUMP	000000	000005
8941748450	8-9417	4845	GOVERNOR LEVER	000000	000000
8941748460	8-9417	4846	PIN; RETAINER, INJ. PUMP	000000	000000

8941748610	8-9417	4861	BRACKET; FUEL FILTER	000000	000000
8941748611	8-9417	4861	BRACKET; FUEL FILTER	000000	000000
8941748630	8-9417	4863	CLIP;FUEL PIPE	000000	000000
8941748631	8-9417	4863	CLIP;FUEL PIPE	000000	000000
8941748641	8-9417	4864	ROD 3KC1	000004	000000
8941749391	8-9417	4939	GASKET; CRANK CASE	000000	000000
8941749580	8-9417	4958	REGULATOR ASM.	000000	000000
8941749590	8-9417	4959	HOSE; RUBBER	000001	000000
8941749591	8-9417	4959	HOSE; RUBBER	000000	000000
8941749800	8-9417	4980	T U B E	000000	000000
8941749840	8-9417	4984	SCREW	000000	000000
8941749880	8-9417	4988	C L I P	000000	000000
8941750270			PISTON	000000	000000
8941750271			PISTON	000000	000000
8941750272	8-9417	5027	PISTON	000000	000000
8941750561	8-9417	5056	LEVER ASM; FUEL	000003	000000
8941750610	8-9417	5061	SHAFT ASM.	000000	000000
8941750611	8-9417	5061	SHAFT ASM.	000000	000000
8941751420	8-9417	5142	PIPE ASM: INJ PUMP	000000	000000
8941751970	8-9417	5197	HOSE; RUBBER, INL. PIPE	000000	000001
8941752260	8-9417	5226	HEAD ASM; CYL.	000000	000000
8941752261	8-9417	5226	HEAD ASM; CYL.	000000	000001
8941752760	8-9417	5276	BOLT; RR. PLATE	000000	000000
8941752960	8-9417	5296	BRACKET; A/C-RH	000000	000000
8941753011	8-9417	5301	PIPE; OIL PUMP, CYL BLOCK	000000	000000
8941753012	8-9417	5301	PIPE; OIL PUMP, CYL BLOCK	000000	000000
8941753013	8-9417	5301	PIPE; OIL PUMP, CYL BLOCK	000000	000001
8941753310	8-9417	5331	FAN;COOLING	000000	000000
8941754070	8-9417	5407	HOUSING; FLYWHEEL	000000	000000
8941754090	8-9417	5409	FLYWHEEL ASM.	000000	000000
8941754091	8-9417	5409	FLYWHEEL ASM.	000000	000000
8941754092	8-9417	5409	FLYWHEEL ASM.	000000	000006
8941754350	8-9417	5435	PIPE; TAIL	000000	000000
8941754390	8-9417	5439	PAN ASM; OIL	000000	000000
8941754480			ALT, NEW W/V PUMP	000000	000000
8941754481	8-9417	5448	ALT, NEW W/V PUMP	000000	000000
8941754690	8-9417	5469	FILTER ASM; COOLER OIL	000000	000000
8941754691	8-9417	5469	FILTER ASM; COOLER OIL	000000	000000
8941759381	8-9417	5938	BOLT; JUMP SEAT	000000	000000
8941759390	8-9417	5939	CLIP;WATER HOSE	000000	000023
8941759400	8-9417	5940	CLIP;HOSE,ENG SIDE BOTTM	000002	000009
8941759802	8-9417	5980	SPACER; FAN	000000	000000
8941760071	8-9417	6007	HEAD ASM; CYL.	000000	000000
8941760310	8-9417	6031	GASKET;OUTLET	000156	000728
8941761770	8-9417	6177	SHAFT ASM; OIL PUMP 4JA/B	000000	000000
8941761780	8-9417	6178	PIPE ASM.	000000	000000
8941761790	8-9417	6179	STRAINER ASM; OIL PUMP	000000	000000

8941761800	8-9417	6180	ROTOR INNER	000000	000000
8941761841	8-9417	6184	DISC ASM; CLUTCH	000000	000000
8941763190	8-9417	6319	STIFFNER CLIP	000000	000000
8941763890	8-9417	6389	MANIFOLD;EXH.	000000	000000
8941763892	8-9417	6389	MANIFOLD;EXH.	000000	000000
8941764641	8-9417	6464	PUMP ASM; WATER 2/3KC1	000000	000000
8941764642	8-9417	6464	PUMP ASM; WATER 2/3KC1	000000	000000
8941764660	8-9417	6466	GUARD; A, FAN	000000	000000
8941764670	8-9417	6467	GUIDE;FAN***DISCONTINUED*	000000	000000
8941764860	8-9417	6486	HOSE;RADIATOR,UPPER	000000	000000
8941764870	8-9417	6487	HOSE;RADIATOR,LOWER	000000	000000
8941764900			BOLT; CHARGE AIR CO	000000	000000
8941764901			BOLT; CHARGE AIR CO	000000	000053
8941764910			BOLT; INJ. PUMP	000000	000000
8941764911			BOLT; INJ. PUMP	000000	000303
8941764921			BOLT; SEMS, OIL	000250	000000
8941764931			BOLT; SEMS.OIL	000000	000106
8941766302	8-9417	6630	PUMP ASM; INJ.	000000	000000
8941766310	8-9417	6631	GEAR; INJ PUMP	000000	000000
8941766321	8-9417	6632	GAUGE ASM; OIL LEVEL 3KR1	000000	000001
8941766331	8-9417	6633	GUAGE; OIL LEVEL	000000	000000
8941766510	8-9417	6651	O-RING; OIL COOLER ADAPTR	000000	000000
8941767130	8-9417	6713	NIPPLE; PCV HOS	000000	000004
8941767230	8-9417	6723	SILENCER ASM 2K/3KC1	000000	000000
8941767500	8-9417	6750	COVER;SUPPORT	000000	000000
8941767540	8-9417	6754	HOLDER; NOZZLE	000000	000000
8941767560	8-9417	6756	RADIATOR ASM.;	000000	000000
8941767710	8-9417	6771	GEAR ASM.; 2ND,	000000	000000
8941767711	8-9417	6771	GEAR ASM.; 2ND,	000000	000000
8941768050	8-9417	6805	PACKING; O-RING	000000	000000
8941768060	8-9417	6806	CLAMP; SEA WATER PIPE	000000	000025
8941768070	8-9417	6807	CLAMP; SEA WATER PIPE	000000	000000
8941768071	8-9417	6807	CLAMP; SEA WATER PIPE	000000	000702
8941768590	8-9417	6859	STUD;MISSION	000000	000000
8941768591	8-9417	6859	STUD;TRANS.CASE	000000	000000
8941768630	8-9417	6863	GASKET;EXH.PIPE	000000	000000
8941768640	8-9417	6864	TANK; CATCH, PR	000000	000000
8941768801	8-9417	6880	RADIATOR ASM 3KR1	000000	000000
8941768810	8-9417	6881	FAN GUARD	000000	000002
8941768830	8-9417	6883	PLUNGER	000000	000000
8941768840	8-9417	6884	HOLDER;DELIVERY	000000	000000
8941768850	8-9417	6885	CONTROL	000000	000000
8941769610	8-9417	6961	SUPERSEDED**SHIM	000000	000000
8941769620	8-9417	6962	SHIM T=0.10	000000	000040
8941769630	8-9417	6963	SHIM T=0.20	000000	000019
8941769640	8-9417	6964	SHIM T=0.30	000056	000000
8941769650	8-9417	6965	SHIM T=0.40	000017	000000

8941769660	8-9417	6966	SHIM T=0.50	000000	000017
8941769670	8-9417	6967	SHIM T=0.52	000067	000000
8941769680	8-9417	6968	SHIM T=0.54	000026	000000
8941769690	8-9417	6969	SHIM T=0.56	000042	000000
8941769700	8-9417	6970	SHIM T=0.58	000000	000004
8941769710	8-9417	6971	SHIM T=0.80	000014	000001
8941769783			BODY ASM; OIL	000000	000000
8941769784			BODY ASM; OIL	000000	000014
8941769871	8-9417	6987	BOLT;FREE WHEEL HUB	000001	000013
8941769890	8-9417	6989	PUMP ASM; WATER W/PACKING	000000	000000
8941769892	8-9417	6989	PUMP ASM; WATER W/PACKING	000000	000000
8941770082	8-9417	7008	RADIATOR ASM	000000	000000
8941770112	8-9417	7011	RADIATOR ASM.	000000	000000
8941770114	8-9417	7011	RADIATOR ASM.	000000	000000
8941770120	8-9417	7012	FAN GUARD	000000	000000
8941770130	8-9417	7013	GUARD; B, FAN	000000	000000
8941770140	8-9417	7014	HOSE; UPPER	000000	000003
8941770150	8-9417	7015	HOSE, LOWER	000000	000005
8941770191	8-9417	7019	SPACER; FAN	000000	000000
8941770850	8-9417	7085	COLLAR;ADAPT.EX	000000	000004
8941770860	8-9417	7086	PIPE ASM.;OIL,	000000	000000
8941770880	8-9417	7088	JOINT;BLOK,OIL PIPE	000000	000000
8941770890	8-9417	7089	FOOT; ENGINE, FRT.	000000	000000
8941770900	8-9417	7090	FOOT; ENGINE, FRT.	000000	000000
8941770910	8-9417	7091	MANIFOLD; EXHAUST	000000	000000
8941770921	8-9417	7092	CASE;HEAT	000000	000000
8941770930	8-9417	7093	CORE ASM	000000	000000
8941770940	8-9417	7094	COVER; FRONT	000000	000000
8941770950	8-9417	7095	COVER; REAR	000000	000000
8941770960	8-9417	7096	PIPE ASM; WATER	000000	000000
8941770971	8-9417	7097	PIPE ASM; SEA WATER, IN	000000	000000
8941770980	8-9417	7098	PIPE ASM; SEA WATER, OUT	000000	000000
8941770990	8-9417	7099	HOSE; RUBBER PIPE TO HEAT	000000	000000
8941770991	8-9417	7099	HOSE; RUBBER PIPE TO HEAT	000000	000000
8941771000	8-9417	7100	HOSE; RUBBER, PIPE TO W/P	000000	000000
8941771001	8-9417	7100	HOSE; RUBBER, PIPE TO W/P	000000	000002
8941771011	8-9417	7101	PIPE ASM.; HEAT EXCHANGER	000000	000000
8941771020	8-9417	7102	OUTLET PIPE; WATER	000000	000000
8941771030	8-9417	7103	COVER ASM.; CYL.	000000	000000
8941771040	8-9417	7104	PIPE; BREATHER	000000	000000
8941771052	8-9417	7105	FILLER ASM	000000	000000
8941771061	8-9417	7106	BAFFLE; HEAT EXCHANGER	000000	000000
8941771070	8-9417	7107	HANGER; REAR	000000	000000
8941771890	8-9417	7189	VALVE ASM.; REL	000000	000000
8941771891	8-9417	7189	VALVE ASM.; REL	000000	000000
8941771892	8-9417	7189	VALVE ASM.; REL	000000	000000
8941771893	8-9417	7189	VALVE ASM.; REL	000000	000000

8941771921	8-9417	7192	CASE; HEAT EXCHANGER	000000	000000
8941771930	8-9417	7193	BODY*INVALID*	000000	000000
8941773161	8-9417	7316	STAY;RADIATOR	000000	000000
8941773171	8-9417	7317	BRACKET;RADIATOR,UPPER	000001	000000
8941773180	8-9417	7318	PULLEY; CRANKSHAFT	000000	000000
8941773230	8-9417	7323	CABLE	000000	000000
8941773581	8-9417	7358	PUMP ASM.; OIL	000000	000000
8941776030	8-9417	7603	GUAGE ASM; OIL LEVEL	000000	000000
8941776037	8-9417	7603	GUAGE ASM; OIL LEVEL	000000	000000
8941778495	8-9417	7849	PIPE; OIL PUMP, CYL BLOCK	000000	000000
8941778860	8-9417	7886	PIPE ASM; INJ NO. 1	000000	000000
8941778870	8-9417	7887	PIPE ASM; INJ NO. 2	000000	000000
8941778880	8-9417	7888	PIPE ASM; INJ NO. 3	000000	000000
8941778890	8-9417	7889	PIPE ASM; INJ NO. 4	000000	000000
8941778900	8-9417	7890	ADAPTOR;WATER DRAIN	000000	000000
8941780030	8-9417	8003	SWITCH; OIL	000000	000000
8941780031	8-9417	8003	SWITCH; OIL	000000	000000
8941780032	8-9717	8003	SWITCH; OIL	000000	000027
8941780170	8-9417	8017	LEVER ASM; SHIFT	000000	000000
8941780200	8-9417	8020	PLUNGER	000000	000000
8941780210	8-9417	8021	PACKING	000000	000000
8941780220	8-9417	8022	BUSH; INSULATE	000000	000000
8941780230	8-9417	8023	CONTACTOR; MOVING	000000	000000
8941780240	8-9417	8024	WASHER; INSULATE	000000	000000
8941780260	8-9417	8026	BOLT*	000010	000000
8941780270	8-9417	8027	WIRE ASM; LEAD	000000	000000
8941780280	8-9417	8028	TERMINAL ASM.	000000	000000
8941780290	8-9417	8029	BUSH; INSULATE	000000	000000
8941780300	8-9417	8030	SEAT; INSULATE	000000	000000
8941780310	8-9417	8031	BUSH; GUM	000000	000000
8941780320	8-9417	8032	SEAT; INSULATE	000000	000000
8941780330	8-9417	8033	RIVET	000000	000000
8941780340	8-9417	8034	BRACKET; REAR	000000	000000
8941780350	8-9417	8035	BOLT	000000	000000
8941780360	8-9417	8036	BRACKET ASM; F (INCL NO.2	000000	000000
8941780370	8-9417	8037	METAL	000006	000000
8941780380	8-9417	8038	RING; CLIP	000000	000000
8941780390	8-9417	8039	PINION STOPPER	000000	000000
8941780400	8-9417	8040	CLUTCH ASM; O-RING	000000	000000
8941780410	8-9417	8041	BRACKET ASM; CENTER (INCL	000000	000000
8941780420	8-9417	8042	METAL	000000	000000
8941780430	8-9417	8043	WASHER;INSULATE	000000	000000
8941780440	8-9417	8044	SHAFT	000000	000000
8941780450	8-9417	8045	BRACKET; CETER	000000	000000
8941780460	8-9417	8046	BOLT	000000	000000
8941780470	8-9417	8047	SPRING; BRUSH	000000	000000
8941780480	8-9417	8048	HOLDER ASM; BRUSH	000000	000000

8941780490	8-9417	8049	BOLT*	000000	000000
8941780510	8-9417	8051	BEARING; BALL	000000	000000
8941780520	8-9417	8052	FIELD COIL ASM.	000000	000000
8941780530	8-9417	8053	BRUSH; (-)	000000	000000
8941780540	8-9417	8054	BRUSH; (+)	000000	000000
8941780550	8-9417	8055	SEAL KIT	000000	000000
8941780650	8-9417	8065	BOLT; F/W	000000	000000
8941780660	8-9417	8066	CASE; BRG, FLYWHEEL	000000	000000
8941780810	8-9417	8081	GASKET; WATER PUMP	000000	000000
8941780811	8-9417	8081	GASKET; WATER PUMP	000000	000057
8941780850	8-9417	8085	LEVER; RELAY ENGINE CONTR	000000	000000
8941780872	8-9417	8087	PIPE ASM: BREATHER	000000	000000
8941781022	8-9417	8102	VALVE; INLET	000008	000000
8941781060	8-9417	8106	VALVE; INLET	000000	000000
8941781062	8-9417	8106	VALVE; INLET	000000	000000
8941781070	8-9417	8107	VALVE; EXHAUST	000000	000000
8941781072	8-9417	8107	VALVE; EXHAUST	000000	000000
8941781080	8-9417	8108	CLIP; HARNESS T	000000	000001
8941781530	8-9417	8153	PIPE; WATER DRAIN	000000	000000
8941781540	8-9417	8154	ADAPTER	000000	000000
8941781620	8-9417	8162	COOLER ASM.; OI	000000	000000
8941781621	8-9417	8162	COOLER ASM.; OI	000000	000000
8941781630	8-9417	8163	CASE; OIL COOLE	000003	000000
8941781640	8-9417	8164	COOLER ASM.; OI	000000	000000
8941782940	8-9417	8294	GUARD; FAN	000003	000000
8941782950	8-9417	8295	FOOT; RH AND LH	000000	000000
8941782960	8-9417	8296	BRACKET; RADIATOR, UPPER	000000	000000
8941782970	8-9417	8297	BAR; RADIATOR HOLDER, UPP	000000	000000
8941782980	8-9417	8298	HOSE; MANIFOLD 3KC/3KR PU	000002	000000
8941782990	8-9417	8299	BRACKET; AIR CLEANER	000000	000000
8941783000	8-9417	8300	BASE; AIR CLEANER 3KC/3KR	000000	000000
8941784830	8-9417	8483	CLIP; BRK. & FU	000000	000000
8941786190			LAMP; RR COMB LFT	000000	000000
8941786191			LAMP; RR COMB LFT	000000	000000
8941786800			TRANS ASM;AUTO	000000	000000
8941786801			TRANS ASM;AUTO	000000	000000
8941786802			TRANS ASM;AUTO	000000	000000
8941786803			TRANS ASM;AUTO	000000	000000
8941786805			TRANS ASM;AUTO	000000	000000
8941786910	8-9417	8691	THERMOSTAT	000000	000017
8941786960	8-9417	8696	BODY; OIL FILTE	000000	000041
8941786990	8-9417	8699	NUT; ELEC CONT UNIT	000253	000033
8941787250	8-9417	8725	O-RING; COUPLIN	000000	000003
8941787280	8-9417	8728	SEAL; OIL, RR.	000000	000000
8941787290	8-9417	8729	BEARING; NEEDLE	000000	000000
8941787291	8-9417	8729	BRG; NEEDLE	000000	000004
8941787310	8-9417	8731	BEARING; BALL,	000000	000005

8941787320	8-9417	8732	BALL BEARING	000000	000000
8941787321	8-9417	8732	BALL BEARING	000000	000002
8941787330	8-9417	8733	BEARING; BALL C	000000	000000
8941787340	8-9417	8734	BEARING; BALL C	000011	000000
8941787370	8-9417	8737	PIPE ASM; INJ. #3	000000	000001
8941787600	8-9417	8760	SWITCH; OIL PRE	000000	000000
8941788170	8-9417	8817	SWITCH; THERMO,	000000	000009
8941788350	8-9417	8835	FAN ASM; COOLING	000000	000002
8941788420	8-9417	8842	GOVERNOR ASM.	000000	000000
8941788430	8-9417	8843	PUMP;FEED ASM 4JA/JB1	000000	000000
8941788670	8-9417	8867	JOINT ASM.; BAL	000000	000000
8941788690	8-9417	8869	ROD ASM.; CONTR	000000	000001
8941788700	8-9417	8870	ROD ASM.; CONTR	000000	000004
8941789580	8-9417	8958	JOINT ASM.; BAL	000000	000000
8941789730			PLATE; FRT, CYL HD	000052	000000
8941794770	8-9417	9477	HOSE; WATER	000000	000000
8941803300	8-9418	0330	BOLT; SEMS, HIN	000000	000000
8941839790	8-9418	3979	CLIP; HOSE, SURGE TANK	000000	000008
8941841120			EMBLEM	000000	000000
8941845730	8-9418	4573	BOLT; CLIP FIX, 4BB1	000000	000000
8941845731	8-9418	4573	BOLT; BRKT. AIR DUCT	000000	000057
8941897180			HANDLE ASM.; RE	000000	000000
8941897181			HANDLE ASM	000000	000000
8941984790			BOLT; DOVETAIL/BACK BAR	000000	000000
8942002862			BOLT, STAB/BAR T	000000	000000
8942007400	8-9420	0740	CAP, OIL FILLER	000000	000000
8942007490	8-9420	0749	CAP, VALVE SPRIN	000000	000589
8942007680	8-9420	0768	CUP, SEALING, CYL	000000	000000
8942007860	8-9420	0786	SCREW, ADJUSTING	000000	000046
8942007890	8-9420	0789	SEAL, RUBBER, OIL	000000	000000
8942007891	8-9420	0789	SEAL; RUBBER, OIL	000000	000022
8942007970	8-9420	0797	WASHER, SPROCKET	000000	000000
8942007971	8-9420	0797	WASHER, SPROCKET	000000	000000
8942008190	8-9420	0819	DOWEL; CYL BODY	000071	004635
8942008311	8-9420	0831	BOLT, REAMER, TRA	000000	000000
8942008312	8-9420	0831	BOLT, REAMER, TRA	000000	000018
8942008330	8-9420	0833	BOLT, SEMS, OIL P	000012	000017
8942009483			TIMING CHAIN	000000	000000
8942013560	8-9420	1356	BALL; THRUST WASHER	000000	000262
8942016410	8-9420	1641	KEY, WOODRUFF CR	000029	000058
8942016411	8-9420	1641	KEY, WOODRUFF CR	000000	000000
8942019422	8-9420	1942	OIL FILTER ELEMENT	000000	000000
8942019423	8-9420	1942	OIL FILTER ELEMENT	000000	000000
8942024561	8-9420	2456	GASKET, CAP NUT	000000	000000
8942024562	8-9420	2456	GASKET, CAP NUT	000000	000000
8942024563	8-9420	2456	GASKET; CAP NUT	000928	000205
8942025810	8-9420	2581	REGULATOR ASSY	000000	000058

8942025901	8-9420	2590	HOSE;VACUUM	000000	000000
8942027010	8-9420	2701	NUT,CAP,HEAD DO	000000	000000
8942027012	8-9420	2701	NUT,CAP,HEAD CO	000000	000000
8942030150			BALL;DETENT,REV	000000	000000
8942030710			ADAPTER,OIL PRE	000000	000003
8942033401	8-9420	3340	LEVER ASSY;	000000	000000
8942033541	8-9420	3354	PLATE ASM,CLTCH	000000	000000
8942033542	8-9420	3354	PLATE ASM,CLTCH	000000	000000
8942034402	8-9420	3440	VENTILATOR; RR A	000000	000000
8942037860	8-9420	3786	CAP; OIL PIPE	000000	000000
8942038060	8-9420	3806	SPRING,VALVE OU	000000	000000
8942044100			FLOAT ASM	000000	000000
8942044271			FLOAT ASM	000000	000000
8942044280			WASH & SCREW KIT	000000	000000
8942045200			FENDER MTD. SIDE MKR LAMP	000000	000000
8942051020	8-9420	5102	BEARING,RADIAL	000000	000000
8942052650	8-9420	5265	PIECE; DISTANCE, CLIP	000000	000000
8942055611	8-9420	5561	CLIP,RUBBER HOSE	000000	000000
8942057500	8-9420	5750	GAUGE ASM,OIL L	000000	000000
8942057501	8-9420	5750	GAUGE ASM,OIL L	000001	000000
8942058660			SENSOR WATER THERMO	000000	000007
8942059102			TUBE,OIL FILTER	000000	000000
8942059103	8-9420	5910	TUBE,OIL FILLER	000000	000000
8942059104	8-9420	5910	TUBE;OIL FILLER	000004	000000
8942059371	8-9420	5937	BOLT; INJ. PUMP, BRKT. L=	000000	000000
8942059560	8-9420	5956	REGULATOR ASM; VOLTAGE	000000	000000
8942059562	8-9420	5956	REGULATOR ASM; VOLTAGE	000000	000000
8942059860	8-9420	5986	BOLT; SEMS,FRONT	000000	000000
8942059861	8-9420	5986	BOLT; BRG COVER, (M8X65)	000000	000009
8942059870	8-9420	5987	BOLT,SEMS,FRONT	000000	000000
8942059871	8-9420	5987	BOLT,SEMS,FRONT	000010	000000
8942059880	8-9420	5988	BOLT,SEMS,FRONT	000000	000000
8942059881	8-9420	5988	BOLT;IDLER PULLEY TO C/BL	000000	000008
8942060070	8-9420	6007	AIR FILTER;GAS	000000	000023
8942060810	8-9420	6081	GENERATOR; 12V/35A	000000	000000
8942061270	8-9420	6127	NUT,HEX,W/S WIP	000000	000000
8942061400			ROTOR ASSY	000000	000000
8942061710	8-9420	6171	FAN; PULLEY	000000	000000
8942061730	8-9420	6173	FRAME ASM	000000	000000
8942061740	8-9420	6174	BALL BEARING; FRONT ROTOR	000000	000000
8942061760	8-9420	6176	ROTOR ASM	000007	000000
8942061770	8-9420	6177	BEARING,BALL,EN	000000	000000
8942061780	8-9420	6178	STATOR ASM	000000	000000
8942061830	8-9420	6183	BUSHING	000000	000000
8942061850	8-9420	6185	TERMINAL*DISCONTINUED*	000000	000000
8942061860	8-9420	6186	NUT; RECTIFIER,GEN	000044	000000
8942061870	8-9420	6187	TERMINAL INSULATOR	000000	000000

8942061880	8-9420	6188	NUT; FRAME TO CO	000018	000000
8942062680	8-9420	6268	KEY, BLANK	000019	000283
8942063470	8-9420	6347	SUPERSEDED**HOSE	000000	000000
8942063471	8-9420	6347	R/HOSE SOL SLOW	000000	000000
8942064850	8-9420	6485	RING, SNAP, BRG.	000001	000000
8942065830	8-9420	6583	BRACKET, SHIFT	000000	000000
8942067190	8-9420	6719	CLIP; VACUUM HOS	000000	000000
8942067840	8-9420	6784	BOLT; SEMS, GUIDE, FENDER	000000	000613
8942071061	8-9420	7106	R/HOSE SOL MAIN	000000	000000
8942071871	8-9420	7187	HOSE; FILTER TO (L=280)	000000	000000
8942071920	8-9420	7192	SPACER/COLLAR; IDLE PULLEY	000000	000000
8942072171	8-9420	7217	THERMOSTAT, RADI	000000	000000
8942072172	8-9420	7217	THERMOSTAT; RADI	000000	000000
8942072360	8-9420	7236	STUD, STARTER SE	000001	000000
8942073030	8-9420	7303	CAP; CON HOSE FA	000000	000005
8942073270	8-9420	7327	BOLT, SEMS, RR. CV	000000	000000
8942075210	8-9420	7521	BOLT, CRANKSHAFT	000000	000000
8942076650			NUT, CONTROL ARM	000000	000000
8942082280	8-9420	8228	BOLT; SEMS, BRKT.	000000	000000
8942082570	8-9420	8257	RING, "E", STARTE	000000	000000
8942082870	8-9420	8287	WASHER, THRUST, "	000000	000000
8942082880	8-9420	8288	WASHER, THRUST, "	000000	000000
8942082890	8-9420	8289	STOPPER, PINION,	000000	000000
8942082900	8-9420	8290	CLIP, PINION STO	000000	000000
8942082910	8-9420	8291	SCREW, COIL TO Y	000000	000000
8942082940	8-9420	8294	BRUSH, (+), START	000000	000000
8942082950	8-9420	8295	BUSHING, RR. CVR.	000000	000000
8942082981	8-9420	8298	BUSHING, GEAR CA	000000	000000
8942083000	8-9420	8300	BRUSH, (+), START	000000	000000
8942084180			CONDENSOR, DISTR	000000	000000
8942085220			SEAL; VALVE GUID	000000	000000
8942087670	8-9420	8767	STATOR ASM.	000000	000000
8942091400	8-9420	9140	BEARING, BALL, MA	000000	000000
8942092910	8-9420	9291	HOSE, RUBBER L=3050	000000	000005
8942092980	8-9420	9298	HOSE, RUBBER, L=3	000000	000000
8942092981	8-9420	9298	HOSE, RUBBER, L=3050	000000	000000
8942093000	8-9420	9300	HOSE, RUBBER, (L=3050)	000000	000000
8942093001	8-9420	9300	HOSE; RUBBER L3050	000000	000000
8942093010	8-9420	9301	HOSE; RUBBER (L=3050)	000000	000000
8942093011	8-9420	9301	HOSE; RUBBER (L=3050)	000000	000000
8942095711	8-9420	9571	DISC ASSY., CLUT	000000	000000
8942096091	8-9420	9609	HOSE; RUBBER, FUEL LEAK-O	000005	000000
8942107501	8-9421	0750	BEARING; THRUST	000000	000000
8942107951			HOSE; FUEL, LEAK OFF	000000	000000
8942108550	8-9421	0855	HOSE; FILTER TO (L=3050)	000000	000000
8942108551	8-9421	0855	HOSE; FILTER TO (L-3050)	000000	000000
8942114390	8-9421	1439	REPAIR KIT; WATE	000000	000000

8942127140	8-9421	2714	BEARING, BALL, DR	000000	000000
8942135050			NEEDLE VALVE	000000	000000
8942136480	8-9421	3648	BOLT; P/S BRKT	000000	000000
8942136590	8-9421	3659	CONVERTER ASM T	000000	000000
8942140000	8-9421	4000	SWITCH, THERMO, Q	000000	000000
8942147970	8-9421	4797	SUPPORT; CYL. BLO	000000	000000
8942147990	8-9421	4799	SUPPORT, CYL. BLO	000000	000000
8942149120	8-9421	4912	SEAL; CRANKSHAFT	000000	000000
8942149130	8-9421	4913	SEAL; CRANKSHAFT	000000	000000
8942149620	8-9421	4962	THERMOSTAT	000000	000000
8942149630	8-9421	4963	GASKET, OUTLET P	000000	000000
8942149631	8-9421	4963	GASKET, OUTLET PIPE TO HSG	000000	000008
8942150440	8-9421	5044	BOLT; REAMER, MISSION CASE	000000	000000
8942150441	8-9421	5044	BOLT; REAR PLATE TO C/BL	000007	000000
8942150470	8-9421	5047	BOLT; FLYWHEEL	000000	000000
8942150880	8-9421	5088	PISTON	000000	000000
8942158670	8-9421	5867	KEY; ROTOR	000000	000000
8942161572			RR TAIL LIGHT ASSY	000000	000000
8942162063			BOLT; CONNECTING	000000	000000
8942162064	8-9421	6206	BOLT; CONNECTING	000000	000033
8942164310	8-9421	6431	KEY, WOODRUFF	000000	000000
8942165890	8-9421	6589	VALVE; INLET	000000	000000
8942165891	8-9421	6589	VALVE; INLET	000077	000055
8942165900	8-9421	6590	VALVE; EXH.	000000	000000
8942165901	8-9421	6590	VALVE; EXH	000000	000000
8942166390			PISTON RINGS	000000	000000
8942167290			ROTOR	000000	000000
8942167781			CAMSHAFT	000000	000000
8942169570	8-9421	6957	ROD ASM; CONNECT	000000	000000
8942169930	8-9421	6993	HANGER; ENGINE, FRONT	000000	000000
8942170010	8-9421	7001	DUCT; WATER	000000	000000
8942170011	8-9421	7001	DUCT; WATER	000000	000000
8942170020	8-9421	7002	DOWEL; CYL. BODY, C/BL TO HD	000000	000003
8942170401	8-9421	7040	PACKING; FILTER	000000	000000
8942170492	8-9421	7049	PIPE ASM., OIL J	000000	000000
8942170493	8-9421	7049	PIPE ASM; OIL J	000000	000007
8942170541	8-9421	7054	IMPELLER; WATER	000000	000000
8942170570	8-9421	7057	PACKING; PUMP TO	000004	000000
8942170581	8-9421	7058	PACKING; WATER P	000000	000000
8942170620	8-9421	7062	GASKET; INLET PIPE TO WTR	000000	000000
8942170691	8-9421	7069	PACKING; HOUSING	000000	000000
8942171000	8-9421	7100	AIR FILTER; DSEL	000000	000003
8942171440	8-9421	7144	BOLT; CYL. HEAD	000000	000000
8942172270	8-9421	7227	STUD; HEAD COVER	000000	000009
8942172711	8-9421	7271	NUT; SPIRE	000000	000000
8942172720	8-9421	7272	CARTRIDGE KIT/OIL FILTER	000000	000001
8942172721	8-9421	7272	CARTRIDGE KIT/OIL FILTER	000000	000000

8942172722	8-9421	7272	CARTRIDGE KIT/OIL FILTER	000000	000066
8942173630	8-9421	7363	WASHER;TENSIONE	000000	000115
8942173641	8-9421	7364	WASHER;FLYWHEEL	000000	000000
8942177852	8-9421	7785	LEVER ASM,INSID	000000	000000
8942177853	8-9421	7785	LEVER ASM;DOOR	000000	000000
8942177854	8-9421	7785	LEVER ASM;DOOR (LH)	000000	000006
8942178170			BULB HEAD LAMP	000000	000003
8942178860			PISTON RING SET	000000	000000
8942180390	8-9421	8039	SLEEVE,PILOT	000000	000000
8942185662	8-9421	8566	BRACKET;ENG.FRT	000000	000000
8942185741	8-9421	8574	BELT; POWER STRG	000010	000000
8942187450	8-9421	8745	CONNECTOR;GLOW	000000	000000
8942187690	8-9421	8769	SCREW;COIL STAR	000000	000000
8942196130	8-9421	9613	EDGE PROTECTOR	000000	000000
8942196390			O/H GASKET KIT	000000	000000
8942198780			CLIP	000000	000000
8942198931			NOZZLE ASM;INJ	000000	000001
8942198950	8-9421	9895	STUD;HEAD COVER	000031	000000
8942200540	8-9422	0054	SPRING;FRT.&RR.	000000	000000
8942200761	8-9422	0076	BOLT;CAP TO BOD	000001	000001
8942200842			NOZZLE & HOLDER	000000	000000
8942200843			NOZZLE & HOLDER	000000	000000
8942200851	8-9422	0085	NOZZLE HOLDER	000000	000000
8942200860	8-9422	0086	GSKT;RTRN.PIPE,NOZZLE HOL	000133	000095
8942201070	8-9422	0107	PLUG;CYL.HEAD R	000000	000000
8942201071	8-9422	0107	PLUG;CLY HEAD R	000016	000000
8942201492	8-9422	0149	SUPERSEDED**PISTON	000000	000000
8942207400			HARNESS; INSTRUMENT	000000	000000
8942208221	8-9422	0822	PICK UP;SENSOR	000000	000000
8942208370	8-9422	0837	GASKET,AIR VENT	000001	000000
8942208380	8-9422	0838	METAL KIT;CRA	000000	000000
8942208520	8-9422	0852	VENTILATOR ASM;	000000	000000
8942208972	8-9422	0897	PULLEY;TIMING,C	000000	000000
8942208973	8-9422	0897	PULLEY;TIMING	000000	000000
8942208974	8-9422	0897	PULLEY;TIMING	000000	000000
8942209220	8-9422	0922	BELT;TIMING	000000	000000
8942209870	8-9422	0987	PIPE; PCV INL MANIFOLD	000000	000000
8942210220	8-9422	1022	GASKET,INL.MANI	000000	000000
8942210250	8-9422	1025	GASKET;EXH.MANI	000000	000000
8942210510	8-9422	1051	NUT;WHEEL TO PU	000000	000049
8942210630	8-9422	1063	CAP;VALVE STEM	000000	000000
8942210631	8-9422	1063	CAP;VALVE STEM	000000	000008
8942210870	8-9422	1087	ARM ASM;ROCKER	000000	000000
8942211670	8-9422	1167	METAL SET; CONN ROD	000000	000000
8942211782	8-9422	1178	PIPE ASM; OIL	000000	000000
8942212060			ROTOR ASM.	000000	000000
8942212701	8-9422	1270	PIPE OIL VAC	000000	000001

8942214110	8-9422	1411	KEY; WOODRUFF	000018	000000
8942214350	8-9422	1435	BELT;TIMING	000000	000000
8942215190	8-9422	1519	CLIP;RUBBER,HOSE	000110	000041
8942215620	8-9422	1562	CONNECTOR/PIPE; FAST	000000	000012
8942217193			GLOW PLUG;CYL.H	000000	000000
8942220881	8-9422	2088	COVER;WATER PUM	000000	000000
8942223090	8-9422	2309	PLUG,RUBBER D=2	000000	000000
8942223091	8-9422	2309	PLUG;RUBBR D=2,EVAP DRAIN	000000	000048
8942223380	8-9422	2338	VALVE ASM;RELIE	000000	000000
8942223381	8-9422	2338	VALVE ASM;RELIE	000000	000000
8942224681			FAN ASM; COOLING	000000	000000
8942224882			PIPE;EXH	000000	000000
8942229680			YOKE ASM,SPLINE	000000	000000
8942229811			SHAFT ASM	000000	000000
8942230260			SEAL,OIL,RR.COV	000000	000028
8942230360			GEAR,SPEEDO DRI	000000	000000
8942230361			GEAR;SPEED DRIV	000000	000000
8942230400	8-9422	3040	BEARING,ANGULAR	000000	000000
8942230401	8-9422	3040	BEARING;BALL CL	000000	000000
8942230461			FORK, TOP-3RD SH	000000	000000
8942230462			FORK;TOP-3RD SH	000000	000000
8942230610			GEAR, REVERSE, MA	000000	000000
8942230611	8-9422	3061	GEAR, REVERSE, MA	000000	000000
8942230612	8-9422	3061	GEAR;REVERSE	000000	000000
8942230690	8-9422	3069	WASHER; THRUST,REV GEAR C	000000	000008
8942230691	8-9422	3069	WASHER; THRUST,REV GEAR C	000000	000000
8942235020			CONTROLLER;QOS	000000	000000
8942235021	8-9422	3502	CONTROLLER,QOS	000000	000000
8942235022	8-9422	3502	CONTROLLER,QOS	000000	000002
8942236530	8-9422	3653	SCREW KIT; ALT.	000000	000000
8942238251	8-9422	3825	COVER;HEAD CYL.	000000	000000
8942238931	8-9422	3893	PLATE;BREATHER	000000	000000
8942239050	8-9422	3905	THERMOSWITCH	000002	000028
8942239660	8-9422	3966	BRUSH	000000	000000
8942239740	8-9422	3974	RETAINER; ROTOR,GEN	000000	000006
8942239760	8-9422	3976	BOLT, THROUGH, AL	000000	000000
8942239780	8-9422	3978	NUT ASM., PULLEY	000000	000002
8942239790	8-9422	3979	BEARING; ROTOR,GEN	000000	000000
8942239800	8-9422	3980	BEARING,BALL AL	000001	000001
8942239810	8-9422	3981	SEAL,OIL,REAR C	000000	000000
8942239811	8-9422	3981	SEAL;OIL RR COV	000000	000000
8942239850	8-9422	3985	VANE,ROTOR,VAC.	000000	000011
8942239870	8-9422	3987	ROTOR ASM.,VAC.	000000	000000
8942239880	8-9422	3988	PLATE;CENTER	000000	000000
8942239881	8-9422	3988	PLATE,CENTER,VA	000000	000000
8942239890	8-9422	3989	BOLT,CONNECTOR	000001	000011
8942239910	8-9422	3991	VALVE ASM.,VAC.	000000	000015

8942239920	8-9422	3992	GASKET	000000	000018
8942239930	8-9422	3993	GASKET	000000	000030
8942239940	8-9422	3994	PACKING,O-RING	000000	000003
8942239950	8-9422	3995	PACKING,O-RING	000000	000025
8942240251	8-9422	4025	BRACKET;ENG.FRT	000000	000000
8942242000	8-9422	4200	STUD;INLET MANI	000000	000000
8942242210	8-9422	4221	PISTON RING SET	000000	000000
8942242340	8-9422	4234	VALVE; RELIEF	000000	000000
8942242362	8-9422	4236	NUT;CAP TO CONN	000000	000034
8942242630	8-9422	4263	SCREW;BREATHER	000000	000000
8942242830	8-9422	4283	BOLT;ROCKER SHA	000004	000000
8942242840	8-9422	4284	BOLT;REAMER, ROC	000006	000000
8942242890	8-9422	4289	VALVE;RELIEF VA	000000	000000
8942242900	8-9422	4290	PLUG;BODY OIL F	000000	000000
8942242910	8-9422	4291	SPRING;RELIEF V	000000	000000
8942244700	8-9422	4470	HOSE,RUBBER(L=3000)	000000	000000
8942244750	8-9422	4475	COVER ASM; CYL HEAD	000000	000000
8942245324			LAMP ASM; FRT	000000	000000
8942245850			STIFFENER; C/LB	000000	000000
8942246550	8-9422	4655	PLUG; OIL F	000000	000000
8942248290	8-9422	4829	NUT,INJ.PUMP TO	000000	000000
8942248911	8-9422	4891	CLIP;HARNESS	000000	000077
8942251850	8-9422	5185	CLIP;HARNESS,SOLENOID VLV	000003	000006
8942252830	8-9422	5283	BEARING;NDL.SHE	000000	000000
8942254503			PIN; FULCRUM UP	000000	000000
8942254794			PIN; FULCRUM LW	000000	000000
8942255482	8-9422	5548	RUBBER SUPPORT	000000	000006
8942255492	8-9422	5549	RUBBER SUPPORT	000000	000000
8942255620	8-9422	5562	TUBE;DISTANCE,E	000111	000363
8942258030	8-9422	5803	UNIT; BEARING	000000	000000
8942258031	8-9422	5803	UNIT; BEARING	000001	000000
8942260080	8-9422	6008	SEAL; UNIT,WATE	000000	000000
8942265540	8-9422	6554	WASHER;TIMING P	000000	000000
8942265650	8-9422	6565	NUT;TIMING PULL	000015	000000
8942265831			SHOCK ABS	000000	000000
8942269711			SHOCK ABS	000000	000000
8942270381	8-9422	7038	BUSHING	000000	000000
8942270391	8-9422	7039	BUSHING;RELAY	000000	000000
8942270732			FLEX SHAFT ASM	000000	000000
8942271420	8-9422	7142	PIN;BODY OIL PU	000009	000065
8942271561			BUSHING; UPR, L	000000	000000
8942272580	8-9422	7258	SUPERSEDED**PISTON	000000	000000
8942272590	8-9422	7259	SUPERSEDED**PISTON	000000	000000
8942272600	8-9422	7260	PISTON RING SET	000000	000016
8942272640	8-9422	7264	PISTON RING SET	000000	000003
8942273360	8-9422	7336	BRACKET; INJ PU	000000	000000
8942273371	8-9422	7337	COUPLING; INJ. PUMP	000002	000000

8942274750	8-9422	7475	OIL SEAL	000000	000000
8942274770	8-9422	7477	PUMP;FEED	000000	000002
8942274780	8-9422	7478	COVER; INJ.	000000	000000
8942274790	8-9422	7479	SCREW;COVER	000000	000000
8942274800	8-9422	7480	SHAFT;DRIVE	000000	000000
8942274810	8-9422	7481	KEY;WOODRU	000000	000000
8942274821	8-9422	7482	DAMPER; INJ.	000000	000000
8942274830	8-9422	7483	GEAR; INJ. P	000000	000001
8942274840	8-9422	7484	WASHER; INJ.	000000	000000
8942274850	8-9422	7485	ROLLER ASM;	000000	000000
8942274860	8-9422	7486	PIN;PISTON	000000	000000
8942274870	8-9422	7487	PIN;PISTON	000000	000000
8942274880	8-9422	7488	CLIP;PISTON	000000	000000
8942274890	8-9422	7489	DISK;ROLLE	000000	000000
8942274910	8-9422	7491	O-RING; ING PUMP	000000	000000
8942274930	8-9422	7493	SLIDER; INJ	000000	000000
8942274950	8-9422	7495	SHIM;T=0.6	000000	000000
8942274960	8-9422	7496	SHIM;T=0.7	000000	000000
8942274970	8-9422	7497	SHIM;T=0.9	000000	000000
8942274980	8-9422	7498	SHIM;T=1.0	000000	000000
8942274990	8-9422	7499	SHIM;T=1.2	000000	000000
8942275000	8-9422	7500	COVER; INJ.	000000	000000
8942275010	8-9422	7501	SCREW;COVER	000000	000000
8942275140	8-9422	7514	SHIM;DISTR	000000	000000
8942275150	8-9422	7515	WASHER; DIS	000000	000000
8942275160	8-9422	7516	SEAT; SPRING	000000	000000
8942275161	8-9422	7516	SEAT; SPRING	000000	000000
8942275170	8-9422	7517	SEAT; SPRING	000000	000000
8942275180	8-9422	7518	SHIM;T=0.5	000000	000000
8942275190	8-9422	7519	SHIM;T=0.8	000000	000000
8942275200	8-9422	7520	SHIM;T=1.0	000000	000000
8942275210	8-9422	7521	SHIM;T=1.2	000000	000000
8942275220	8-9422	7522	SHIM;T=1.5	000000	000000
8942275230	8-9422	7523	SHIM;T=1.8	000000	000000
8942275240	8-9422	7524	SHIM;T=2.0	000000	000000
8942275250	8-9422	7525	PIN;GUIDE	000000	000000
8942275270	8-9422	7527	O-RING; DIS	000000	000000
8942275280	8-9422	7528	SHIM;T=1.9	000000	000000
8942275290	8-9422	7529	SHIM;T=1.9	000000	000000
8942275300	8-9422	7530	SHIM;T=1.9	000000	000000
8942275310	8-9422	7531	SHIM;T=1.9	000000	000000
8942275320	8-9422	7532	SHIM;T=1.9	000000	000000
8942275330	8-9422	7533	SHIM;T=2.0	000000	000000
8942275340	8-9422	7534	SHIM;T=2.0	000000	000000
8942275350	8-9422	7535	SHIM;T=2.0	000000	000000
8942275360	8-9422	7536	SHIM;T=2.0	000000	000000
8942275370	8-9422	7537	SHIM;T=2.0	000000	000000

8942275380	8-9422	7538	SHIM;T=2.1	000000	000000
8942275390	8-9422	7539	SHIM;T=2.1	000000	000000
8942275400	8-9422	7540	SHIM;T=2.1	000000	000000
8942275410	8-9422	7541	SHIM;T=2.1	000000	000000
8942275420	8-9422	7542	SHIM;T=2.1	000000	000000
8942275430	8-9422	7543	SHIM;T=2.2	000000	000000
8942275440	8-9422	7544	SHIM;T=2.2	000000	000000
8942275450	8-9422	7545	SHIM;T=2.2	000000	000000
8942275460	8-9422	7546	SHIM;T=2.2	000000	000000
8942275470	8-9422	7547	SHIM;T=2.2	000000	000000
8942275480	8-9422	7548	SHIM;T=2.3	000000	000000
8942275490	8-9422	7549	SHIM;T=2.3	000000	000000
8942275500	8-9422	7550	SHIM;T=2.3	000000	000000
8942275510	8-9422	7551	SHIM;T=2.3	000000	000000
8942275520	8-9422	7552	SHIM;T=2.3	000000	000000
8942275530	8-9422	7553	SHIM;T=2.4	000000	000000
8942275540	8-9422	7554	SHIM;T=2.4	000000	000000
8942275550	8-9422	7555	SHIM;T=2.4	000000	000000
8942275560	8-9422	7556	SHIM;T=2.4	000000	000000
8942275570	8-9422	7557	SHIM;T=2.4	000000	000000
8942275580	8-9422	7558	SHIM;T=2.5	000000	000000
8942275590	8-9422	7559	SHIM;T=2.5	000000	000000
8942275600	8-9422	7560	SHIM;T=2.5	000000	000000
8942275610	8-9422	7561	SHIM;T=2.5	000000	000000
8942275620	8-9422	7562	SHIM;T=2.5	000000	000000
8942275630	8-9422	7563	SHIM;T=2.6	000000	000000
8942275640	8-9422	7564	SHIM;T=2.6	000000	000000
8942275650	8-9422	7565	SHIM;T=2.6	000000	000000
8942275660	8-9422	7566	SHIM;T=2.6	000000	000000
8942275670	8-9422	7567	SHIM;T=2.6	000000	000000
8942275680	8-9422	7568	SHIM;T=2.7	000000	000000
8942275690	8-9422	7569	SHIM;T=2.7	000000	000000
8942275700	8-9422	7570	SHIM;T=2.7	000000	000000
8942275710	8-9422	7571	SHIM;T=2.7	000000	000000
8942275720	8-9422	7572	SHIM;T=2.7	000000	000000
8942275730	8-9422	7573	SHIM;T=2.8	000000	000000
8942275740	8-9422	7574	SHIM;T=2.8	000000	000000
8942275750	8-9422	7575	SHIM;T=2.8	000000	000000
8942275760	8-9422	7576	SHIM;T=2.8	000000	000000
8942275770	8-9422	7577	SHIM;T=2.8	000000	000000
8942275780	8-9422	7578	SHIM;T=2.9	000000	000000
8942275810	8-9422	7581	SPRING; DEL. VALVE	000000	000000
8942275820	8-9422	7582	HOLDER; DEL	000000	000000
8942275850	8-9422	7585	O-RING; CON	000000	000003
8942275870	8-9422	7587	BOLT; GOV.	000000	000000
8942275900	8-9422	7590	WASHER; CON	000000	000067
8942275930	8-9422	7593	WASHER; SCR	000000	000000

8942275940	8-9422	7594	SCREW;LOAD	000000	000000
8942275950	8-9422	7595	SCREW;LOAD	000000	000000
8942275960	8-9422	7596	SCREW;LOAD	000000	000000
8942275970	8-9422	7597	NUT; INJ PUMP	000000	000000
8942275980	8-9422	7598	O-RING;SCREW	000000	000000
8942275990	8-9422	7599	RING;SEAL,	000000	000000
8942276010	8-9422	7601	BOLT;PIVOT	000000	000000
8942276020	8-9422	7602	GASKET; INJ. PUMP	000289	000000
8942276030	8-9422	7603	SPRING;DIS	000000	000000
8942276060	8-9422	7606	O-RING;GOV	000000	000000
8942276070	8-9422	7607	SHIM;T=1.0	000000	000000
8942276080	8-9422	7608	SHIM;=1.2	000000	000000
8942276090	8-9422	7609	SHIM;T=1.4	000000	000000
8942276100	8-9422	7610	SHIM;T=1.6	000000	000000
8942276110	8-9422	7611	SHIM;T=1.8	000000	000000
8942276120	8-9422	7612	WASHER;HOL	000000	000000
8942276130	8-9422	7613	HOLDER;GOV	000000	000000
8942276140	8-9422	7614	WASHER;GOV	000000	000000
8942276150	8-9422	7615	SLEEVE;GOV	000000	000000
8942276160	8-9422	7616	CAP;LOCK,G	000000	000000
8942276170	8-9422	7617	PLUG;CLOSI	000000	000000
8942276180	8-9422	7618	PLUG;CLOSI	000000	000000
8942276190	8-9422	7619	PLUG; INJ. PUMP (L=2.10)	000000	000000
8942276200	8-9422	7620	PLUG; INJ. PUMP (L=2.30)	000000	000000
8942276210	8-9422	7621	PLUG; INJ. PUMP (L=2.50)	000000	000000
8942276220	8-9422	7622	PLUG; INJ. PUMP (L=2.70)	000000	000000
8942276230	8-9422	7623	PLUG; INJ. PUMP (L=2.90)	000000	000000
8942276240	8-9422	7624	PLUG; INJ. PUMP (L=3.10)	000000	000000
8942276250	8-9422	7625	PLUG; INJ. PUMP (L=3.30)	000000	000000
8942276260	8-9422	7626	PLUG; INJ. PUMP (L=3.50)	000000	000000
8942276270	8-9422	7627	PLUG; INJ. PUMP (L=3.70)	000000	000000
8942276280	8-9422	7628	PLUG; INJ. PUMP (L=3.90)	000000	000000
8942276290	8-9422	7629	PLUG; INJ. PUMP (L=4.10)	000000	000000
8942276300	8-9422	7630	PLUG; INJ. PUMP (L=4.30)	000000	000000
8942276310	8-9422	7631	PLUG; INJ. PUMP (L=4.50)	000000	000000
8942276320	8-9422	7632	PLUG; INJ. PUMP (L=4.70)	000000	000000
8942276330	8-9422	7633	PLUG; INJ. PUMP (L=4.90)	000000	000000
8942276340	8-9422	7634	PLUG; INJ. PUMP (L=5.10)	000000	000000
8942276360	8-9422	7636	SCREW; INJ. PUMP	000000	000000
8942276370	8-9422	7637	PACKING;O-RING	000000	000000
8942276380	8-9422	7638	PLUG;DISTR HEAD	000000	000000
8942276390	8-9422	7639	BOLT;DISTRIBUTO	000000	000000
8942276400	8-9422	7640	O-RING;ING PUMP	000000	000016
8942276410	8-9422	7641	O-RING;ING PUMP	000000	000000
8942276420	8-9422	7642	VALVE;REGULATIN	000000	000000
8942276430	8-9422	7643	RING;SPRING	000000	000000
8942276440	8-9422	7644	VALVE;OVERFLOW,	000000	000000

8942276450	8-9422	7645	GASKET;BL (NON-ASBESTOS)	000000	000602
8942276470	8-9422	7647	SPRING;ROL	000000	000000
8942276480	8-9422	7648	WASHER;LK,PULLE	000000	000054
8942276600			BOLT;EYE,HOUSIN	000000	000000
8942276620	8-9422	7662	SPACER;HOUSING,	000003	000000
8942276710	8-9422	7671	O-RING;PICK UP,	000000	000000
8942276760	8-9422	7676	SPRING;NOZZLE	000000	000000
8942276770	8-9422	7677	SHIM; T=1.60	000000	000000
8942276780	8-9422	7678	SHIM T=1.62	000000	000000
8942276800	8-9422	7680	SHIM T=1.66	000000	000000
8942276810	8-9422	7681	SHIM; T=1.68	000000	000000
8942276820	8-9422	7682	SHIM; T=1.70	000000	000000
8942276830	8-9422	7683	SHIM; T=1.72	000000	000000
8942276840	8-9422	7684	SHIM; T=1.74	000000	000000
8942276850	8-9422	7685	SHIM; T=1.76	000000	000000
8942276860	8-9422	7686	SHIM; T=1.78	000000	000000
8942276870	8-9422	7687	SHIM; T=1.80	000000	000000
8942276880	8-9422	7688	SHIM; T=1.82	000000	000000
8942276890	8-9422	7689	SHIM; T=1.84	000000	000000
8942276900	8-9422	7690	SHIM; T=1.86	000000	000000
8942276910	8-9422	7691	SHIM; T=1.88	000000	000000
8942276920	8-9422	7692	SHIM; T=1.90	000000	000000
8942276930	8-9422	7693	SHIM; T=1.92	000000	000000
8942276940	8-9422	7694	SHIM; T=1.94	000000	000000
8942276950	8-9422	7695	SHIM; T=1.96	000000	000000
8942276960	8-9422	7696	SHIM; T=1.98	000000	000000
8942276970	8-9422	7697	SHIM; T=2.00	000000	000000
8942277010	8-9422	7701	SHIM T=1.06	000000	000000
8942277020	8-9422	7702	SHIM T=1.08	000000	000000
8942277030	8-9422	7703	SHIM T=1.10	000000	000000
8942277050	8-9422	7705	SHIM T=1.14	000000	000000
8942277060	8-9422	7706	SHIM T=1.16	000000	000000
8942277070	8-9422	7707	SHIM T=1.18	000000	000000
8942277090	8-9422	7709	SHIM T=1.22	000000	000000
8942277110	8-9422	7711	SHIM T=1.26	000000	000000
8942277130	8-9422	7713	SHIM T=1.30	000000	000000
8942277140	8-9422	7714	SHIM T=1.32	000000	000000
8942277150	8-9422	7715	SHIM T=1.34	000000	000000
8942277170	8-9422	7717	SHIM T=1.38	000000	000000
8942277190	8-9422	7719	SHIM T=1.42	000000	000000
8942277210	8-9422	7721	SHIM T=1.46	000000	000000
8942277230	8-9422	7723	SHIM T=1.50	000000	000000
8942277250	8-9422	7725	SHIM T=1.54	000000	000000
8942277260	8-9422	7726	SHIM; T=1.56	000000	000000
8942277270	8-9422	7727	SHIM; T=1.58	000000	000000
8942277280	8-9422	7728	NUT;RETAINING	000000	000000
8942277340	8-9422	7734	GEAR ASM; DRIVE, INJ.	000000	000000

8942277341	8-9422	7734	GEAR ASM; DRIVE, INJ.	000003	000000
8942278290	8-9422	7829	NUT; FIX 4JC1	000000	000000
8942280480	8-9422	8048	AEOP PART	000000	000000
8942284030	8-9422	8403	FLYWEIGHT;	000000	000000
8942284040	8-9422	8404	SPRING; PLUNGER KIT	000000	000000
8942284250	8-9422	8425	O-RING;OIL PUMP	000000	000000
8942284271	8-9422	8427	HOSE; RUBBER C/T-C/V L=14	000000	000000
8942284330	8-9422	8433	SEAL,RADIATOR,1	000000	000000
8942284350	8-9422	8435	ARMATURE ASM.	000000	000000
8942284360	8-9422	8436	BEARING; BALL, RE	000000	000000
8942284370	8-9422	8437	BEARING,BALL,FR	000000	000001
8942284380	8-9422	8438	COIL ASM	000000	000000
8942284390	8-9422	8439	SCREW,CORE SET	000000	000000
8942284400	8-9422	8440	BRUSH (+); STARTER	000011	000000
8942284410	8-9422	8441	COVER; REAR	000000	000000
8942284420	8-9422	8442	HOLDER ASM; BRUSH	000001	000000
8942284430	8-9422	8443	SPRING; BRUSH	000000	000000
8942284440	8-9422	8444	BRUSH (-); STARTER	000000	000000
8942284460	8-9422	8446	SHAFT,PINION,ST	000000	000000
8942284480	8-9422	8448	BEARING,BALL,RE	000001	000000
8942284490	8-9422	8449	BEARING,BALL,FR	000000	000000
8942284500	8-9422	8450	STOPPER SET,STA	000000	000000
8942284510	8-9422	8451	CASE; GEAR	000000	000000
8942284520	8-9422	8452	LEVER SET,SHIFT	000000	000000
8942284530	8-9422	8453	SWITCH ASM.,MAG	000000	000000
8942284531	8-9422	8453	SWITCH ASM.,MAG	000000	000002
8942284540	8-9422	8454	COVER KIT; DUST	000000	000000
8942284560	8-9422	8456	RETAINER;BEARIN	000000	000000
8942284680	8-9422	8468	BEARING; BALL	000000	000000
8942285450	8-9422	8545	GASKET KIT;	000000	000001
8942285550	8-9422	8555	HOSE,RAD.TO S/T	000000	000000
8942285551	8-9422	8555	HOSE;RAD,TO S/T	000000	000000
8942287010	8-9422	8701	INSERT,INLET VA	000000	000000
8942287020	8-9422	8702	INSERT,EXH. VAL	000000	000000
8942287480	8-9422	8748	CAP ASM,FILTER,	000000	000000
8942287481	8-9422	8748	CAP ASM,FILTER	000001	000015
8942287780	8-9422	8778	BARREL ASM; W/K	000000	000000
8942288862	8-9422	8886	PISTON;STD	000000	000000
8942288871	8-9422	8887	PISTON	000000	000000
8942290050	8-9422	9005	FAN BELT	000000	000000
8942291570	8-9422	9157	CAM DISK,I	000000	000000
8942291640	8-9422	9164	PLUNGER;SP	000000	000000
8942292691	8-9422	9269	BELT; COOLING FAN	000020	000000
8942298530	8-9422	9853	CUP; SEALING,FRT	000000	000063
8942301152			STEERING UNIT; FRT. SUSP.	000000	000000
8942307430	8-9423	0743	FIX PLATE;CAMSHAFT	000000	000000
8942311150	8-9423	1115	CAP; RUBBER	000000	000020

8942311230	8-9423	1123	SHIM; INJ. P	000000	000000
8942311240	8-9423	1124	SHIM; INJ. P	000000	000000
8942311250	8-9423	1125	SHIM; INJ. P	000000	000000
8942311260	8-9423	1126	SHIM; INJ. P	000000	000000
8942312720	8-9423	1272	PLUG; 3/8 INL MA	000000	000000
8942312721	8-9423	1272	PLUG; 3/8 INL MA	000000	000002
8942314080			SPRING; VLV OUT	000000	000000
8942319110	8-9423	1911	VALVE, VACUUM SW	000000	000000
8942319111	8-9423	1911	VALVE; VACUUM, SW	000000	000000
8942319422			HOSE; WATER, RAD	000000	000000
8942320590			FILTER; AIR CLE	000000	000051
8942321151	8-9423	2115	PRESSURE UNIT	000000	000000
8942321152	8-9423	2115	UNIT; OIL PRESSURE	000015	000000
8942322250	8-9423	2225	RELAY, CHARGE WA	000035	000067
8942322820	8-9423	2282	BELT; FAN	000000	000000
8942322872	8-9423	2287	BELT; AIR PUMP,	000000	000000
8942322873	8-9423	2287	BELT; AIR PUMP	000000	000000
8942324070			SPRING	000000	000000
8942324142			LEAF; NO. 4	000000	000000
8942324681			GASKET; CYL HEAD	000000	000001
8942327991			LAMP; SIDE FLASHER (R)	000000	000000
8942328001			LAMP; SIDE FLASHER (L)	000000	000000
8942331090	8-9423	3109	LEVER ASM, HEATE	000000	000000
8942331091	8-9423	3109	LEVER ASM; HEATE	000000	000000
8942331150	8-9423	3115	CLIP, WATER HOSE	000000	000000
8942331920	8-9423	3192	CORE ASM; HEATER	000000	000000
8942332300	8-9423	3230	BOLT, THROUGH, ST	000000	000000
8942333710	8-9423	3371	HOSE, RUBBER, (L=3050)	000000	000000
8942333711	8-9423	3371	HOSE; RUBBER L=3050	000000	000000
8942333720	8-9423	3372	HOSE, RUBBER, (L=3050)	000000	000000
8942333721	8-9423	3372	HOSE, RUBBER (L=3050)	000000	000000
8942334360	8-9423	3436	CLIP; WIRE	000000	000000
8942335810	8-9423	3581	COVER, REAR	000000	000000
8942335820	8-9423	3582	CLUTCH ASM., PIN	000000	000000
8942335830	8-9423	3583	SHAFT, PINION, ST	000000	000000
8942335840	8-9423	3584	CLUTCH ASM.,	000000	000000
8942335860	8-9423	3586	CLUTCH ASM.	000000	000000
8942335861	8-9423	3586	BUFFER; LOWER	000000	000000
8942336490	8-9423	3649	RETAINER, BRG. AL	000000	000000
8942336510	8-9423	3651	BOLT, THROUGH, AL	000000	000000
8942336520	8-9423	3652	NUT ASM, PULLEY,	000000	000000
8942336530	8-9423	3653	SCREW KIT, ALT.	000000	000208
8942336550	8-9423	3655	GROMMET; FUEL PU	000003	000047
8942336570	8-9423	3657	WASHER; PL PUMP	000002	000000
8942337110	8-9423	3711	HOSE; RUB, BOOST L=310	000000	000000
8942340650	8-9423	4065	STARTER ; NEW	000000	000000
8942341751			CABLE ASM; THROT	000000	000000

8942342220			CABLE ASM;PARKI	000000	000000
8942346510	8-9423	4651	SWITCH,THERMO,F	000000	000001
8942348340	8-9423	4834	STUD; CASE COVER	000000	000000
8942348650	8-9423	4865	RING;SNAP,PISTO	000006	000000
8942349220	8-9423	4922	BOLT;SEMS,SIDE	000000	000000
8942349221			BOLT;SEMS,SIDE	000000	000000
8942350600	8-9423	5060	GASKET,CYL.HEAD	000000	000000
8942350601	8-9423	5060	GASKET;CYL HEAD	000000	000000
8942351170	8-9423	5117	GASKET;EXH. MAN	000000	000000
8942351570	8-9423	5157	DISTANCE PIECE; CLIP	000000	000118
8942352570			HOSE; WATER, RA	000000	000001
8942353251	8-9423	5325	WASHER; FLYWHEEL	000000	000000
8942353630	8-9423	5363	BOLT;SEMS 31	000000	000002
8942353690	8-9423	5369	SEAL;OIL CRANKSHAFT,RR	000000	000016
8942355671	8-9423	5567	VALVE; OIL FILT	000000	000000
8942356270	8-9423	5627	RELAY,CHARGE WA	000000	000000
8942356910	8-9423	5691	THERMOMETER SW	000000	000000
8942357550	8-9423	5755	FORK ASM;CLUTCH	000000	000001
8942359620	8-9423	5962	PISTON; (OVSI=0.	000000	000000
8942359630	8-9423	5963	PISTON; (OVSI=1.	000000	000002
8942363450	8-9423	6345	GASKET;EXH.PIPE	000000	000000
8942363451	8-9423	6345	GASKET;EXH PIPE	000000	000000
8942363470	8-9423	6347	STARTER ; NEW	000000	000000
8942363471	8-9423	6347	STARTER ; NEW	000000	000000
8942366870	8-9423	6687	UNIT; SEAL,WATER	000000	000000
8942369220	8-9423	6922	RELAY,GLOW PLUG	000000	000000
8942375710	8-9423	7571	HOSE; FUEL-LEAK	000000	000000
8942375720	8-9423	7572	HOSE; RUBBER, FUEL LEAK-O	000000	000000
8942377270	8-9423	7727	DIODE; ALT.,GEN	000000	000000
8942378610	8-9423	7861	TEMPERATURE SW	000000	000006
8942382950	8-9423	8295	RELAY;GLOW PLUG	000000	000000
894238568F			CLIP;VACUUM/PCV HOSE (RH)	000000	000000
8942385680	8-9423	8568	CLIP;VACUUM/PCV HOSE (RH)	000000	000000
8942385690	8-9423	8569	CLIP,HOSE AIR	000000	000000
8942385700	8-9423	8570	CLIP; RUBBER CAP/HOSE	000000	000026
8942385710	8-9423	8571	CLIP; HOSE AIR	000000	000000
8942385720	8-9423	8572	CLIP;RUBBER HOSE	000000	000000
8942386091	8-9423	8609	HOSE;RUBBER,FUE	000000	000000
8942386100	8-9423	8610	CLIP;HOSE, RAD/SURGE TANK	000000	003453
8942386110			HOSE;FUEL TANK	000000	000000
8942386420	8-9423	8642	GASKET SET,ENGI	000000	000000
8942386421	8-9423	8642	GASKET SET;ENG	000000	000000
8942386422	8-9423	8642	GASKET SET,ENG	000000	000000
8942386423	8-9423	8642	GASKET SET,ENG	000000	000000
8942386425	8-9423	8642	GASKET SET,ENG	000000	000000
8942387570	8-9423	8757	ELEMENT; FUEL FI	000000	000000
8942387640	8-9423	8764	CONNECTOR; INLET	000000	000000

8942387662	8-9423	8766	SPRING; INSERT	000000	000000
8942387663	8-9423	8766	SPRING; INSERT	000002	000009
8942389060			PUMP ASM, FUEL	000000	000000
8942389061			PUMP ASM; FUEL	000000	000000
8942389070			COLLAR; FUEL PUM	000008	000000
8942389240	8-9423	8924	CLIP; HOSE, AIR	000000	000000
8942389250	8-9423	8925	CLAMP; WIRE	000000	000022
8942389780			NOZZLE ASM; INJ	000000	000000
8942391370			BEARING	000000	000000
8942391400			GASKET, CYL. HEAD	000000	000000
8942391401	8-9423	9140	GASKET; CYL. HEAD	000000	000000
8942391402	8-9423	9140	GASKET; CYL. HEAD	000000	000000
8942391403	8-9423	9140	GASKET; CYL. HEAD	000000	000014
8942391510	8-9423	9151	CAP, OIL FILLER	000000	000000
8942392010	8-9423	9201	CONDENSER, ALT.	000000	000000
8942393700	8-9423	9370	KEY; WOODRUFF, DR	000000	000000
8942393720	8-9423	9372	VALVE; MAGNET	000000	000000
8942393730	8-9423	9373	O-RING; MAGNET V	000006	000020
8942394230	8-9423	9423	GUIDE; VLV	000017	000012
8942394990	8-9423	9499	STUD 2KC/3KC1 (CAM)	000043	000000
8942395000	8-9423	9500	STUD 2KC/3KC1 (CAM)	000005	000026
8942395010	8-9423	9501	KEY; SPLIT	000000	019272
8942395430	8-9423	9543	PLUG, INTER LOCK	000000	000000
8942395431	8-9423	9543	PLUG; INTER LOCK HOLE	000000	000006
8942395550	8-9423	9555	HUB; DIRECT CLUT	000000	000000
8942395580	8-9423	9558	PLATE ASM; INNER	000000	000000
8942395590	8-9423	9559	TUBE; BRAKE APPL	000000	000000
8942395610	8-9423	9561	VALVE, GOVERNOR	000000	000000
8942396490	8-9423	9649	KIT; WATER PUMP	000000	000000
8942402870			SPRING; PUMP	000000	000000
8942403011			SPRING; SUB	000000	000000
8942403270			SEAT, COMPL, FLOA	000000	000008
8942403430			GASKET SET	000000	000000
8942403720	8-9424	0372	BELT; FAN	000000	000000
8942406190	8-9424	0619	VALVE; DEL	000000	000000
8942409020	8-9424	0902	NUT; CONN. ROD	000005	000000
8942409031	8-9424	0903	BOLT; CONN ROD	000000	000000
8942409110	8-9424	0911	BOLT; RR GATE LO	000000	000000
8942409120	8-9424	0912	WASHER; PALIN, RR GATE	000000	000000
8942409440	8-9424	0944	ROD ASM., CONNEC	000000	000000
8942409441	8-9424	0944	ROD ASM; CONNECT	000000	000000
8942411791	8-9424	1179	PUMP ASM; FUEL, ELECTRIC	000000	000000
8942411792	8-9424	1179	PUMP ASM; FUEL, ELECTRIC	000000	000006
8942414490	8-9424	1449	GLOW PLUG	000000	000000
8942414491	8-9424	1449	GLOW PLUG	000000	000000
8942415160	8-9424	1516	GASKET SET, ENGI	000000	000000
8942415161	8-9424	1516	GASKET SET, ENGI	000000	000000

8942415162	8-9424	1516	GASKET SET;ENGI	000000	000000
8942415163	8-9424	1516	GASKET SET,ENGI	000000	000000
8942415164	8-9424	1516	GASKET SET;ENGI	000000	000000
8942415165	8-9424	1516	GASKET SET;ENGI	000000	000000
8942415170	8-9424	1517	GASKET SET, TOP	000000	000000
8942415171	8-9424	1517	GASKET SET, TOP	000000	000000
8942415172	8-9424	1517	GASKET SET;ENG	000000	000000
8942415173	8-9424	1517	GASKET SET;ENG	000000	000000
8942415174	8-9424	1517	GASKET SET;ENG	000000	000000
8942415180	8-9424	1518	GASKET SET,ENG.	000000	000000
8942415181	8-9424	1518	GASKET SET;ENG	000000	000000
8942415182	8-9424	1518	GASKET SET; ENG	000000	000000
8942416370	8-9424	1637	CUP;SEALIN	000000	000000
8942416380	8-9424	1638	CUP; SEALING,WATER JACKET	000000	000016
8942417050			STARTER ; NEW	000000	000000
8942417660			RELAY LEVER	000000	000000
8942418520			PISTON	000000	000000
8942418530	8-9424	1853	PISTON	000000	000000
8942418790	8-9424	1879	GAUGE ASM,OIL L	000000	000000
8942418791	8-9424	1879	GAUGE ASM	000000	000000
8942419230	8-9424	1923	BOLT;FLANGE COU	000000	000000
8942419620	8-9424	1962	CONNECTOR; CYLINDER HEAD	000000	000000
8942419621	8-9424	1962	CONNECTOR; CYLINDER HEAD	000004	000000
8942419810	8-9424	1981	NUT;MAIN SHAFT	000000	000000
8942419811	8-9424	1981	NUT; MAIN SHAFT	000031	000002
8942420340	8-9424	2034	CLIP;HOSE, P/S	000000	000000
8942420590	8-9424	2059	ARMATURE ASM;STARTER	000000	000000
8942420600	8-9424	2060	COIL ASM, FIELD	000000	000000
8942420610	8-9424	2061	BRUSH, (+) START	000000	000000
8942420620	8-9424	2062	COVER, REAR, STAR	000000	000000
8942420630	8-9424	2063	HOLDER ASM;BRUS	000000	000000
8942420640	8-9424	2064	SPRING, BRUSH, ST	000000	000001
8942420650	8-9424	2065	BRUSH, (-) , START	000000	000000
8942420660	8-9424	2066	CLUTCH ASM, PINI	000000	000000
8942420670	8-9424	2067	SHAFT, PINION, ST	000000	000002
8942420680	8-9424	2068	CLUTCH ASM, STAR	000000	000000
8942420690	8-9424	2069	CASE, GEAR, START	000000	000000
8942420700	8-9424	2070	COVER KIT, DUST	000000	000000
8942420710	8-9424	2071	BOLT, THROUGH	000000	000000
8942421170	8-9424	2117	HOSE, VINYL, FUEL	000000	000002
8942422750	8-9424	2275	VALVE, MAGNET, IN	000000	000000
8942422770	8-9424	2277	SCREW, BRACKET, I	000000	000000
8942422840	8-9424	2284	PLUG, W/O-RING	000000	000000
8942422970	8-9424	2297	PIPE, FUEL, INJ. P	000000	000000
8942422990	8-9424	2299	SENSOR; PICK-UP	000000	000000
8942425280	8-9424	2528	PACKING; O-RING	000000	000018
8942427980	8-9424	2798	DRIVER; SCREW	000000	000000

8942427981	8-9424	2798	DRIVER;SCREW	000002	000005
8942428890	8-9424	2889	CRANKSHAFT	000000	000000
8942429580	8-9424	2958	PUMP ASM;FUEL	000000	000000
8942429600			PUMP ASM;FUEL	000000	000000
8942429670			COVER; INJ. PUMP	000000	000000
8942430141	8-9424	3014	RUBBER;SUPPORT	000000	000000
8942430142	8-9424	3014	RUBBER;CUSH.FRT	000000	000000
8942432520	8-9424	3252	PIPE; EYE	000000	000001
8942432920	8-9424	3292	PLUG ASM; HOT	000000	000000
8942433461	8-9424	3346	HEAD; ROTOR, DIST	000000	000000
8942434140	8-9424	3414	BOLT,SEMS,STAB.	000000	000000
8942435020	8-9424	3502	OIL FILTER ELEMENT	000000	000000
8942435021	8-9424	3502	OIL FILTER ELEMENT	000000	000000
8942437190	8-9424	3719	WIRE;MAGNET VAL	000000	000000
8942443980	8-9424	4398	KNOB;G/S CONT.	000000	000000
8942444030			PISTON RING SET	000000	000000
8942444090			CLUTCH ASM,COOL	000000	000000
8942444101	8-9424	4410	CONNECTOR;GLOW	000000	000000
8942444102	8-9424	4410	CONNECTOR;GLOW	000000	000000
8942444390			BUSHING; CLUTCH,PEDAL	000001	000025
8942445990	8-9424	4599	SNAP RING	000000	000000
8942446550	8-9424	4655	PLUG;OIL F	000000	000000
8942446560	8-9424	4656	GASKET;OIL	000007	000091
8942448290	8-9424	4829	NUT; FIX 4JC1	000000	000000
8942448860	8-9424	4886	CLIP,AIR DUCT	000000	000000
8942448861	8-9424	4886	CLIP,AIR DUCT	000000	000000
8942459010	8-9424	5901	HUB,CLUTCH,TRAN	000000	000000
8942461390			NUT;METER	000000	000000
8942465310	8-9424	6531	SPRING;NOZZLE HOLDER	000000	000054
8942467050	8-9424	6705	COVER ASM;RR.W/	000000	000000
8942467051	8-9424	6705	COVER ASM;REAR	000000	000000
8942469090	8-9424	6909	HOUSING ASM	000000	000000
8942469570			ALT ; NEW	000000	000000
8942469571			ALT ; NEW	000000	000000
8942470290	8-9424	7029	BOLT,SEMS COVER	000000	000000
8942473030	8-9424	7303	CORE ASM;HEATER	000000	000000
8942473140	8-9424	7314	LEVER ASM;HEAT	000000	000000
8942473141	8-9424	7314	LEVER ASM;HEAT	000000	000000
8942473360	8-9424	7336	WASHER,COWL COV	000003	000052
8942473550	8-9424	7355	BOLT; CYL HEAD	000000	000000
8942473551	8-9424	7355	BOLT; CYL HEAD	000000	000434
8942474032	8-9424	7403	VENTILATOR ASM.	000000	000000
8942474691			RR WINDOW	000000	000000
8942477160	8-9424	7716	GASKET;DIS	000000	000000
8942477190			NUT; INJ. PUMP	000000	000000
8942477220	8-9424	7722	O-RING; INJ. PUMP	000000	000042
8942478380	8-9424	7838	BUSH; CONN. ROD	000001	000000

8942478612	8-9424	7861	LINER; CYLINDER	000000	000000
8942478671	8-9424	7867	RING SET	000000	000000
8942478691	8-9424	7869	RING; COMPRESSION,2ND	000000	000000
8942478751	8-9424	7875	VALVE; EXH	000000	000000
8942478752	8-9424	7875	VALVE; EXH	000000	000000
8942478860	8-9424	7886	PACKING WATER INLETPipe	000000	000000
8942479031	8-9424	7903	GASKET; HEAD COVER	000000	000000
8942479260	8-9424	7926	SENSOR ASM;W/PL	000000	000000
8942479270	8-9424	7927	SENSOR ASM: FUEL	000000	000000
8942479370	8-9424	7937	NOZZLE, INJ 4JB1-PK01	000000	000000
8942479371	8-9424	7937	NOZZLE, INJ 4JB1-PK01	000000	000000
8942479372	8-9424	7937	NOZZLE, INJ 4JB1-PK01	000018	000000
8942479652	8-9424	7965	ROD ASM; CONN	000000	000000
8942479653	8-9424	7965	ROD ASM; CONN	000000	000000
8942479680	8-9424	7968	BUSH; CONN ROD	000000	000000
8942479700	8-9424	7970	PIN; PISTON	000000	000000
8942479730	8-9424	7973	PLUG ASM;FUEL F	000000	000000
8942480020	8-9424	8002	SHAFT; GOVERNOR, INJ. PUM	000000	000000
8942480700	8-9424	8070	ELEMENT; FUEL FI	000000	000000
8942480770			BEARING; HUB INNER	000000	000001
8942480881	8-9424	8088	BEARING; INNER,	000000	000000
8942480882	8-9424	8088	BEARING; INNER,	000000	000000
8942481211	8-9424	8121	WEATHERSTRIP	000000	000000
8942481610	8-9424	8161	RELAY;GLOW PLUG	000050	000032
8942481620	8-9424	8162	RELAY;GLOW PLUG	000000	000009
8942485250			CLUTCH SLAVE CYL	000000	000000
8942485710	8-9424	8571	YOKE ASM;SPLIN	000000	000000
8942485711	8-9424	8571	YOKE ASM;SPLIN	000000	000010
8942485896	8-9424	8589	HEAD ASM; CYL	000000	000000
8942486200	8-9424	8620	COLLAR;NDL.BRG	000000	000000
8942486201	8-9424	8620	COLLAR;REV.	000000	000000
8942487070	8-9424	8707	CRANKSHAFT;ENG	000000	000000
8942487071	8-9424	8707	CRANKSHAFT;ENG	000000	000000
8942487072	8-9424	8707	CRANKSHAFT;ENG	000000	000001
8942490131	8-9424	9013	ROD ASM; CONN	000000	000000
8942490133	8-9424	9013	ROD ASM; CONN	000000	000000
8942490200	8-9424	9020	WASHER; PL,RR GATE LOCK	000000	000000
8942490480	8-9424	9048	RING;SPR.,STOP	000000	000000
8942490481	8-9424	9048	RING;SPR.,STOP	000000	000000
8942490482	8-9424	9048	RING;SPR.,STOP	000000	000002
8942490620	8-9424	9062	GEAR; SPEEDOMETER	000011	000051
8942490630	8-9424	9063	GEAR;SPEEDOMETE	000001	000014
8942490640	8-9424	9064	GEAR;DRIVEN,SPD.	000000	000011
8942490650	8-9424	9065	GEAR; DRIVEN, SPEEDO Z=17	000000	000000
8942491160	8-9424	9116	PACKING;CONTROL	000000	000000
8942491170	8-9424	9117	LEVER;SHIFT INT	000000	000000
8942491830	8-9424	9183	NUT,CAP HEAD	000000	000000

8942492380	8-9424	9238	NUT, COUPLING	000000	000000
8942492400	8-9424	9240	WASHER; CONICAL	000000	000005
8942492420	8-9424	9242	NUT; QUAD BOX	000000	000042
8942492440	8-9424	9244	WASHER; REV. SPR.	000000	000006
8942492450	8-9424	9245	SEAL; BUSHING,	000000	000000
8942492460	8-9424	9246	BOLT; HSG	000021	000000
8942492500	8-9424	9250	ORING; SEL. LVR	000000	000000
8942492501	8-9424	9250	WASHER; LK, SELE	000000	000023
8942492890	8-9424	9289	CAP; CONN HOSE,	000000	000000
8942492930	8-9424	9293	SILENCER; EXH.	000000	000000
8942492932	8-9424	9293	SILENCER; EXH	000000	000000
8942493170	8-9424	9317	VALVE, CHECK. P. C	000000	000000
8942493171	8-9424	9317	VALVE, CHECK, P. C	000000	000167
8942495240	8-9424	9524	MAGNET, CASE	000000	000000
8942495241	8-9424	9524	MAGNET; TRANS, CASE	000000	000000
8942495242	8-9424	9524	MAGNET; TRANS, CASE	000000	000015
8942496921	8-9424	9692	GLOW PLUG	000000	000000
8942499550	8-9424	9955	PIPE; EYE, OVERFLOW	000000	000001
8942499850	8-9424	9985	DIODE; BODY HARN	000000	000000
8942500861	8-9425	0086	COVER; TIMING C	000000	000000
8942501630	8-9425	0163	IMPELLER	000000	000000
8942501720	8-9425	0172	VENTILATOR; AIR	000000	000000
8942501760	8-9425	0176	FUEL FILTER	000000	000000
8942501761	8-9425	0176	FUEL FILTER	000014	000000
8942502090	8-9425	0209	GAUGE ASM; OIL	000000	000000
8942502091	8-9425	0209	GAUGE ASM; OIL	000000	000000
8942502621	8-9425	0262	METAL KIT; CRK	000000	000000
8942502650	8-9425	0265	HHSHER; THRUST	000000	000000
8942502740	8-9425	0274	WASHER; FLYWHEEL	000000	000000
8942502741	8-9425	0274	WASHER; FLYWHEEL	000006	000000
8942503100	8-9425	0310	PIPE ASM. : FUEL	000000	000000
8942503530	8-9425	0353	STRAINER; GOVER	000000	000000
8942503700	8-9425	0370	GEAR SET; FRT PL	000000	000000
8942503710	8-9425	0371	CLUTCH ASM; ONE	000000	000008
8942503720	8-9425	0372	GEAR ASM; PLANET	000000	000000
8942503750	8-9425	0375	SHAFT ASM; FT PL	000000	000000
8942505140	8-9425	0514	PLUG; PLATE, CA	000000	000000
8942505141	8-9425	0514	PLUG; PLATE, CA	000021	000343
8942505611	8-9425	0561	WASHER 4JA/B1	000000	000669
8942506130	8-9425	0613	SPRING; RELIEF	000000	000000
8942506150	8-9425	0615	PIPE; BREATHER 4JB1-PW	000000	000000
8942506151	8-9425	0615	PIPE; BREATHER 4JB1-PW	000002	000016
8942507220	8-9425	0722	PLUG ASM; HOT GL	000007	000000
8942507271	8-9425	0727	PIPE; BREATHER	000000	000000
8942507272	8-9425	0727	PIPE; BREATHER	000000	000000
8942507273	8-9425	0727	PIPE; BREATHER	000000	000000
8942507290	8-9425	0729	PISTON; STD	000000	000000

8942507300	8-9425	0730	PISTON RING SET	000001	000000
8942507440	8-9425	0744	PULLEY;BALANCER	000000	000000
8942507941			TIE; ROD END (RH)	000000	000000
8942507951			TIE; ROD END (LH)	000000	000000
8942509640	8-9425	0964	REGULATOR ASM.	000000	000000
8942510311	8-9425	1031	CAP; VALVE SPRI	000002	000038
8942510520			IDLER BEARINGS	000000	000000
8942511101	8-9425	1110	OIL FILTER ELEMENT	000000	000000
8942512510	8-9425	1251	KIT; WATER PUMP	000000	000000
8942512660	8-9425	1266	METAL SET;CO	000000	000000
8942512661	8-9425	1266	METAL SET;CO	000002	000000
8942514930			REAR COMB. LAMP HSG. (R)	000000	000000
8942514940			REAR COMB. LAMP HSG (L)	000000	000000
8942520510	8-9425	2051	THERMOSWITCH	000000	000000
8942520511	8-9425	2051	SWITCH: THERMO,	000000	000000
8942521420	8-9425	2142	PLUG; NEUTRAL SW HOLE	000003	000000
8942521840	8-9425	2184	WIRE ASM;LEAD	000000	000029
8942523610	8-9425	2361	BRACKET;STAB	000000	000000
8942524140	8-9425	2414	ROD ASM;CONTROL	000000	000000
8942524172	8-9425	2417	ROD ASM;CONT	000000	000000
8942524570	8-9425	2457	CONTROL ROD	000000	000000
8942525280	8-9425	2528	NUT; LINK ROD,	000000	000023
8942525300	8-9425	2530	JOINT ASM;CHANG	000000	000000
8942525361	8-9425	2536	SPRING; VALVE, OUTER 4JA/	000000	000008
8942525371	8-9425	2537	SPRING; VALVE, INNER	000000	000000
8942525760	8-9425	2576	SEAL:BALL	000000	000022
8942525780	8-9425	2578	ROD; RETURN SPR	000000	000002
8942525810	8-9425	2581	PIN; SPRING, FO	000000	000004
8942526690	8-9425	2669	PIN; CHANGE LEV	000000	000000
8942526691	8-9425	2669	PIN; CHANGE LEV	000000	000011
8942526710	8-9425	2671	BUSHING; CHANGE	000076	000048
8942526740	8-9425	2674	SPRING;RETURN	000000	000000
8942526741	8-9425	2674	SPRING;RETURN	000000	000000
8942531600	8-9425	3160	WASHER;BAT,CLAM	000000	000000
8942532362	8-9425	3236	PRESSURE PLATES	000000	000000
8942533130	8-9425	3313	HOSE; RUBBER, WATER RETUR	000001	000000
8942535110	8-9425	3511	PLUG ASM.	000000	000000
8942537360			PISTON RING SET	000000	000000
8942537370			GEAR; FLYWHEEL	000000	000000
8942537600	8-9425	3760	BOLT;HEAD COVER	000000	000000
8942537601	8-9425	3760	BOLT;HEAD COVER	000114	000000
8942543522			BEARING; DOUBLE	000000	000000
8942544333			MOUNT	000000	000000
8942545960			BAFFLE (A) BREATH	000001	000000
8942546010	8-9425	4601	PIPE;WATER OUTL	000000	000000
8942546011	8-9425	4601	PIPE:WATER OUTL	000000	000000
8942546030	8-9425	4603	HOUSING ASM;THR	000000	000000

8942546031	8-9425	4603	HOUSING ASM;THR	000000	000000
8942546091			PLATE ASM; PRES	000000	000001
8942546520			COVER; TAPPET	000000	000000
8942547681	8-9425	4768	BOLT*	000000	000000
8942548021			BRKT; ENG CONTROL	000000	000000
8942549160	8-9425	4916	COOLER ASM;OIL	000000	000000
8942549200	8-9425	4920	COVER;OIL PUMP	000000	000005
8942549210	8-9425	4921	PACKING; OIL PU	000000	000000
8942549221	8-9425	4922	STARTER ASM	000000	000000
8942550140	8-9425	5014	SEALING CUP;BLK D=56	000000	000000
8942555680	8-9425	5568	TUBE;DISTANCE	000000	000000
8942555880	8-9425	5588	GLOW PLUG	000000	000000
8942556331			RUBBER;INT.MTG	000000	000000
8942556421	8-9425	5642	BUSHING; ENG. C	000000	000031
8942556431	8-9425	5643	RUBBER; MTG., I	000000	000015
8942556440	8-9425	5644	HANGER; ENGINE	000000	000000
8942556441	8-9425	5644	HANGER;ENGINE	000000	000010
8942567280	8-9425	6728	CONNECTOR;OIL C	000000	000000
8942568000	8-9425	6800	BELT; FAN	000000	000000
8942568450			PUMP ASM; FUEL,M	000000	000000
8942568530	8-9425	6853	HEAD ASM; CYL	000000	000000
8942568531	8-9425	6853	HEAD ASM; CYL	000000	000000
8942568580	8-9425	6858	HANGER; ENGINE	000000	000000
8942568610			GASKET;FUEL PUM	000000	000023
8942569590			GROMMET; HEAD COVER	000001	000000
8942569790	8-9425	6979	WASHER; BRKT. T	000000	000000
8942570720	8-9425	7072	CYLINDER ASM.	000000	000000
8942570750	8-9425	7075	RETAINER;CLUTCH	000000	000001
8942570760	8-9425	7076	SUPPORT;CENTER	000000	000000
8942570800	8-9425	7080	LEVER ASM;VALVE	000000	000002
8942570810	8-9425	7081	PIN;COVER SHAFT	000000	000000
8942570850	8-9425	7085	BOLT;R CVR TO C	000000	000000
8942571291	8-9425	7129	GEAR ASM.;REV.,MAIN SHAFT	000000	000000
8942571292	8-9425	7129	GEAR ASM.;REV.,MAIN SHAFT	000000	000000
8942571302	8-9425	7130	GEAR; LOW, MAIN SHAFT	000005	000000
8942571311	8-9425	7131	GEAR ASM.; 2ND,MAIN SHAFT	000000	000000
8942571321	8-9425	7132	GEAR; 3RD, MAIN SHAFT	000000	000000
8942571360	8-9425	7136	GEAR; O.D. COUNTER	000000	000000
8942571560	8-9425	7156	SLEEVE & HUB AS	000000	000000
8942571600	8-9425	7160	SLEEVE AND HUB	000000	000000
8942571610	8-9425	7161	SLEEVE AND HUB	000000	000000
8942571620	8-9425	7162	PACKING;TO TRAN	000000	000000
8942571851	8-9425	7185	SHAFT;TOP GEAR.	000000	000000
8942573190	8-9425	7319	STUD; EXH. MANI	000240	000532
8942573280	8-9425	7328	NUT; RR SEAT MTG BRKT	000000	000000
8942574073	8-9425	7407	LAMP ASM; FRT	000000	000000
8942574083	8-9425	7408	LAMP ASM; FRT	000000	000000

8942574430	8-9425	7443	ROD ASM;CONNECT	000000	000000
8942575021	8-9425	7502	L E N S	000000	000000
8942575031	8-9425	7503	LENS ASSY	000000	000000
8942575560	8-9425	7556	METAL SET; CONN ROD	000000	000000
8942575920	8-9425	7592	GASKET; NOZZLE HOLDER 3KC	000000	000110
8942575930	8-9425	7593	GASKET; HEAT SHIELD 3KC1/	000000	000132
8942576700	8-9425	7670	SCREW;INJ	000000	000000
8942579420	8-9425	7942	SHAFT;TOP GEAR	000000	000000
8942579421	8-9425	7942	SHAFT;TOP GEAR	000000	000000
8942579422	8-9425	7942	SHAFT;TOP GEAR	000000	000000
8942580140	8-9425	8014	RELAY; GLOW PLUG	000000	000000
8942581191	8-9425	8119	PLATE; OIL PAN,	000000	000000
8942581192	8-9425	8119	PLATE,OIL PAN	000000	000041
8942581211	8-9425	8121	PLATE; OIL PAN,	000000	000000
8942581212	8-9425	8121	PLATE;OIL PAN	000000	000021
8942582360	8-9425	8236	PACKING; HOUSING	000000	000000
8942583422			DUCT; B UNIT	000000	000000
8942583452			VENT DUCT; DRIVE	000000	000000
8942583473			VENT DUCT ASSY	000000	000000
8942583690			UNION; WATER HOSE, ENG	000000	000000
8942584730	8-9425	8473	CENTER;WAT	000000	000013
8942585251	8-9425	8525	CYL SLAVE	000000	000000
8942585970			HOSE;WATER, TOP	000000	000000
8942588263	8-9425	8826	HEAD ASM; CYL	000000	000000
8942591321	8-9425	9132	PLATE, ASM PRESS	000001	000000
8942594830	8-9425	9483	SPRING:VALVE	000000	001268
8942598802	8-9425	9880	MANIFOLD; EXH	000000	000000
8942603431			DOOR;	000000	000000
8942603432			DOOR;	000000	000000
8942617991			STAY;FRT	000000	000000
8942625423	8-9426	2542	MIRROR ASM	000003	000000
8942625433			MIRROR ASM; OUT	000000	000024
8942626252			MIRROR ASM; UNDER	000000	000001
8942705913			LID,OIL TANK	000000	000000
8942706066			METER CLUSTER	000000	000000
8942706073			GROMMET; SHTR LEVER SIDE	000000	000000
8942706115			GRILLE; ASSY CENTER VENT	000000	000000
8942706351			HEATER CONTROL PANEL	000000	000000
8942706369			UNDERCOVER,CERT	000000	000000
8942720766			PANEL	000000	000000
8942722961			EMBLEM	000000	000000
8942726520			WEATHER-STRIP WINDSHIELD	000000	000001
8942727260			DECAL	000000	000000
8942727261			DECAL	000000	000000
8942728590			STAY;	000000	000000
8942728591			STAY;	000000	000000
8942731044			VENT; ASSY	000000	000000

8942787791			L & H BUMPER EXTENSION	000000	000000
8942790200	8-9427	9020	WASHER; MIRROR	000000	000000
8942790500	8-9427	9050	NUT; BRK M/CYL	000216	000567
8942792000	8-9427	9200	BOLT; STAY, INST PANEL	000000	000006
8942792010	8-9427	9201	BOLT; BODY SIDE PANEL	000001	000861
8942792080	8-9427	9208	BOLT; BRKT.	000000	000000
8942794000	8-9427	9400	SCREW; STRG COWL	000000	000100
8942795080	8-9427	9508	NUT; DOOR MIRROR	000000	000000
8942795081	8-9427	9508	NUT; DOOR MIRROR	000000	000000
8942795170			NUT; MTG, RUBBER	000007	000006
8942796160	8-9427	9616	WASHER; SPR	000000	000000
8942796161	8-9427	9616	WASHER; SPR.	000000	000000
8942796270	8-9427	9627	WASHER; CAB	000000	000000
8942796420	8-9427	9642	WASHER; BRKT.	000000	000000
8942796480	8-9427	9648	WASHER; PL, DOVE	000000	000015
8942820113			CARPET	000000	000000
8942820114			CARPET	000000	000000
8942828290			SPRING; BACK DOOR (RH)	000000	000000
8942845040			DOOR HANDLE RHD	000000	000000
8942848650			OUTSIDE MIRROR	000000	000000
8942911350			BATTERY BAND	000000	000000
8942958133			SUN VISOR	000000	000000
8942975430	8-9429	7543	DISTANCE; EXH SILENCER	000000	000000
8943008221			HOSE; RUBBER	000000	000000
8943008821	8-9430	0882	HOSE; RUBBER	000000	000002
8943100530	8-9431	0053	PIPE ASM.; OIL,	000000	000000
8943100800	8-9431	0080	FLYWHEEL ASM.	000000	000000
8943100940	8-9431	0094	PIPE ASM.; INLET	000000	000000
8943101110	8-9431	0111	COVER; TAPPET CHAMBER	000000	000000
8943101121	8-9431	0112	RACK; CONTROL	000000	000000
8943101130	8-9431	0113	CONTROL; RACK	000000	000000
8943101131	8-9431	0113	CONTROL; RACK	000000	000000
8943101521	8-9431	0152	GEAR; 1ST, MAIN	000000	000000
8943101580	8-9431	0158	GEAR; REV, MAIN	000000	000000
8943101581	8-9431	0158	GEAR; REV MAIN	000000	000000
8943101600	8-9431	0160	PLATE; THRUST	000000	000000
8943101612	8-9431	0161	PULLEY; FAN	000000	000000
8943101780	8-9431	0178	WRENCH; MONKEY	000000	000000
8943102190	8-9431	0219	BRACKET; GENERATOR	000000	000000
8943102192	8-9431	0219	BRACKET; GENERATOR	000000	000000
8943102510	8-9431	0251	WATER PUMP KIT	000000	000000
8943103471	8-9431	0347	TUBE ASM; OIL GUIDE	000000	000000
8943103472	8-9431	0347	TUBE ASM; OIL GUIDE	000004	000000
8943104490	8-9431	0449	BOX; QUADRANT, T	000000	000000
8943104491	8-9431	0449	BOX; QUADRANT, TRANS	000000	000000
8943104560	8-9431	0456	HOUSING; CLUTCH	000000	000000
8943104601	8-9431	0460	HOUSING; CLUTCH	000000	000000

8943104770	8-9431	0477	REPAIR KIT;WTR	000000	000001
8943104910	8-9431	0491	HOUSING; THERMOSTAT	000000	000000
8943104911	8-9431	0491	HOUSING; THERMOSTAT	000000	000000
8943104912	8-9431	0491	HOUSING; THERMOSTAT	000000	000000
8943104913	8-9431	0491	HOUSING; THERMOSTAT	000000	000019
8943104920	8-9431	0492	HOUSING; THERMOSTAT	000000	000000
8943104921	8-9431	0492	HOUSING; THERMOSTAT	000000	000000
8943104922	8-9431	0492	HOUSING; THERMOSTAT	000000	000002
8943104930	8-9431	0493	COVER;DUST,RR	000000	000000
8943105350	8-9431	0535	BRACKET; ENG.	000000	000000
8943105540	8-9431	0554	PUMP ASM.; INJ.	000000	000000
8943105541	8-9431	0554	PUMP ASM.; INJ.	000000	000000
8943105550	8-9431	0555	BOLT; SEMS,EXH.MANI. L=75	000000	000000
8943106780	8-9431	0678	GAUGE ASM; OIL LEVEL	000000	000007
8943106790	8-9431	0679	GAUGE ASM; OIL LEVEL	000000	000000
8943107060	8-9431	0706	FAN ASM.	000000	000002
8943108110	8-9431	0811	ROD ASM;CONNECT	000000	000000
8943108111	8-9431	0811	ROD ASM;CONNECT	000000	000000
8943108170			PLUG; BRK VLV	000000	000000
8943109120	8-9431	0912	GASKET;CYL,HEAD	000000	000000
8943109170	8-9431	0917	PLUG;OIL FILLER	000003	000007
8943111182	8-9431	1118	FOOT; ENG	000000	000000
8943111650	8-9431	1165	SEAL; OIL, CRANK SHAFT	000001	000000
8943111681	8-9431	1168	HANGER; ENGINE, RR	000000	000000
8943111990	8-9431	1199	TACHO SENSOR;F/HSG	000001	000004
8943112340	8-9431	1234	HOSE; ACTUATOR	000000	000001
8943113160			GENERATOR	000000	000000
8943114810	8-9431	1481	HOSE;SURGE,TANK L=230	000000	000000
8943116000	8-9431	1600	COVER; W/PUMP	000000	000000
8943116010	8-9431	1601	FILTER; OIL (SPIN ON)	000000	000000
8943116171	8-9431	1617	BOLT; COMMON CHAMBER	000000	000000
8943116230	8-9431	1623	FILTER ASM	000000	000001
8943116780	8-9431	1678	PIN; RETAINING	000000	000000
8943117210	8-9431	1721	PAN ASM; OIL	000000	000000
8943117220	8-9431	1722	TUBE ASM; GUIDE	000000	000000
8943117280	8-9431	1728	WIRE ASM.; LEAD	000000	000000
8943117770	8-9431	1777	SHOE ASM;BRAKE	000000	000000
8943117780	8-9431	1778	LEVER ASM	000000	000000
8943117790	8-9431	1779	STRUT;CENTER B	000000	000009
8943117800	8-9431	1780	PLATE;BACK,BR	000000	000000
8943117801	8-9431	1780	PLATE; SUPPORT,PRKG BRAKE	000000	000006
8943117810	8-9431	1781	BRAKE ASM	000000	000000
8943117811	8-9431	1781	BRAKE ASM; CENTER,PARKING	000000	000000
8943117812	8-9431	1781	BRAKE ASM; CENTER,PARKING	000000	000000
8943118070	8-9431	1807	SPRING; SH	000000	000029
8943118140	8-9431	1814	PACKING; COVER W/P	000010	000001
8943118160	8-9431	1816	SPRING	000000	000000

8943118350	8-9431	1835	CASE; TIMING	000000	000000
8943118560	8-9431	1856	PIPE; INLET	000000	000000
8943118660	8-9431	1866	CLUTCH; STARTER	000000	000000
8943118690	8-9431	1869	BEARING; BALL	000000	000000
8943119630	8-9431	1963	SENSOR ASM.	000000	000000
8943119771	8-9431	1977	SHAFT; MAIN	000000	000000
8943123310	8-9431	2331	SWITCH; OVERHEAT	000000	000000
8943125760	8-9431	2576	HOSE; RUBBER, CO	000000	000000
8943126740			JOINT ASM.	000000	000000
8943126990	8-9431	2699	BOLT; HEAT PROT	000000	000001
8943126991	8-9431	2699	BOLT; HEAT PROT	000000	000000
8943127180	8-9431	2718	RING; BLOCK; LOW	000000	000011
8943127190	8-9431	2719	SOCKET	000000	000000
8943127200	8-9431	2720	SOCKET	000000	000000
8943127230	8-9431	2723	SEAT; NOZZLE	000003	000000
8943127330	8-9431	2733	WASHER; LK	000000	000040
8943128361	8-9431	2836	TRANSMISSION AS	000000	000000
8943128931	8-9431	2893	PUMP ASM; INJ.	000000	000000
8943128940	8-9431	2894	GOVERNOR ASSY	000000	000000
8943128941	8-9431	2894	GOVERNOR ASSY	000000	000000
8943128950	8-9431	2895	PUMP ASM; INJ.	000000	000000
8943128951	8-9431	2895	PUMP ASM; INJ.	000000	000000
8943128960	8-9431	2896	GOVERNOR ASSY	000000	000000
8943129050			CYLINDER ASM	000000	000000
8943129380			JOINT ASM;	000000	000000
8943131190	8-9431	3119	SET SCREW	000000	000000
8943131670	8-9431	3167	BLOCK; SHIFT, CLU	000000	000000
8943131680	8-9431	3168	BLOCK; SHIFT FORK SHAFT	000000	000000
8943131690	8-9431	3169	FORK; SHIFT, CLU	000000	000000
8943131790	8-9431	3179	PUMP ASM.; FEED,	000000	000000
8943131800	8-9431	3180	BLOCK ASM; CYL.	000000	000000
8943131801	8-9431	3180	BLOCK ASM; CYL.	000000	000000
8943131810	8-9431	3181	CYL. BLOCK ASM.	000000	000000
8943131811	8-9431	3181	CYL. BLOCK ASM.	000000	000000
8943132000	8-9431	3200	SPRING; TIMER	000000	000000
8943132250	8-9431	3225	ACTUATOR ASM	000000	000000
8943132270	8-9431	3227	SPRING; TIMER	000000	000000
8943132410	8-9431	3241	SPRING; TIMER	000000	000000
8943132600	8-9431	3260	VALVE; REGULATI	000000	000000
8943132640	8-9431	3264	BOLT*	000000	000000
8943132670	8-9431	3267	BOLT*	000001	000000
8943132760	8-9431	3276	BOLT*	000000	000000
8943133260	8-9431	3326	NUT; MAINSHAFT	000000	000000
8943133430	8-9431	3343	HOSE; FLEX. OIL PAN DRAIN	000000	000000
8943133440	8-9431	3344	HOSE; DRAIN, OIL	000000	000000
8943134420	8-9431	3442	FILTER ASM.; FUEL, CARTR.	000001	000000
8943134421	8-9431	3442	FILTER ASM.; FUEL, CARTR.	000001	000000

8943134430	8-9431	3443	COVER ASM.; FUEL FILTER	000000	000000
8943134431	8-9431	3443	COVER ASM.; FUEL FILTER	000000	000001
8943134600	8-9431	3460	NIPPLE;OIL DRAIN	000000	000000
8943134650	8-9431	3465	BOLT;ENG.FOOT	000000	000035
8943135190	8-9431	3519	GAUGE; OIL LEVEL	000000	000000
8943136202			HARNES; ENG	000000	000000
8943136690			SPRING; TIMER	000001	000000
8943136710	8-9431	3671	SPRING; TIMER	000000	000000
8943136800	8-9431	3680	SPRING TIMER	000000	000000
8943137140	8-9431	3714	SPRING; CAPSULE	000000	000000
8943138391	8-9431	3839	SHAFT; MAIN,TRANS	000000	000000
8943138401	8-9431	3840	CASE; TRANS	000000	000000
8943138402	8-9431	3840	CASE; TRANS	000000	000000
8943139800	8-9431	3980	BLOCK ASM.; CYL.	000000	000000
8943139950	8-9431	3995	ADAPTER; EXH. TURBO B	000000	000000
8943139951	8-9431	3995	ADAPTER; EXH. TURBO B	000000	000001
8943140002	8-9431	4000	HOUSING; CLU	000000	000000
8943140680	8-9431	4068	BOLT; CRANK PULLEY	000000	000000
8943141100	8-9431	4110	TUBE; GUIDE, OIL	000000	000000
8943141150	8-9431	4115	PLATE;PULLEY,CENTER	000000	000000
8943142632	8-9431	4263	CARTRIDGE; OIL	000000	000000
8943142633	8-9431	4263	CARTRIDGE; OIL	000000	000233
8943142721	8-9431	4272	HOUSING;FLYWHEEL	000000	000000
8943142970	8-9431	4297	SILENCER; EXHAUST	000000	000002
8943143850	8-9431	4385	BOLT; GENERATOR	000000	000000
8943143851	8-9431	4385	BOLT; GENERATOR	000000	000000
8943144080			SWITCH	000000	000000
8943144201			LAMP;SIDE COMB.	000000	000000
8943144233			HEADLAMP ASM.	000000	000000
8943144243			HEADLAMP ASM.	000000	000000
8943144292	8-9431	4429	RADIATOR	000000	000000
8943153170	8-9431	5317	GOVERNOR ASM.	000000	000000
8943153450	8-9431	5345	TRANSMISSION-DEMAND ONLY	000000	000000
8943154260	8-9431	5426	CLIP; ENGINE HARNES	000031	000002
8943154950	8-9431	5495	FOOT; ENG. RH	000001	000002
8943155071			RHD H/L ASSY	000000	000000
8943155092			LAMP ASM, HD	000000	000000
8943156430			TRANSMISSION AS	000000	000000
8943156450			TRANSMISSION AS	000000	000001
8943157720			UNIT; HEADLAMP (LH)	000000	000000
8943158070	8-9431	5807	FRAME ASM	000000	000000
8943158080	8-9431	5808	ROD; RADIATOR	000000	000000
8943158090	8-9431	5809	COVER; FRT	000000	000000
8943158100	8-9431	5810	COVER; UPPER	000000	000000
8943158110	8-9431	5811	DOOR ASM; SIDE RH&LH	000000	000000
8943158120	8-9431	5812	COVER; SIDE, LH	000000	000000
8943158130	8-9431	5813	COVER; SIDE, RH	000000	000000

8943158140	8-9431	5814	COVER; SIDE, LH	000000	000000
8943158150	8-9431	5815	COVER; SIDE, RH	000000	000000
8943158160	8-9431	5816	PLATE; RR	000000	000000
8943158880			PIN; JOINT, LEVER	000049	000000
8943159390			TRANSMISSION	000000	000000
8943161283	8-9431	6128	HOUSING;	000000	000000
8943162620	8-9431	6262	CAP; LOCK NUT	000000	000000
8943162630	8-9431	6263	CAP; LOCK NUT	000000	000000
8943162640	8-9431	6264	CAP*8	000000	000000
8943162650	8-9431	6265	CAP**	000000	000000
8943162660	8-9431	6266	CAP**	000000	000000
8943162740	8-9431	6274	LOAD SCREW	000000	000000
8943162750	8-9431	6275	LOAD SCREW	000000	000000
8943162760	8-9431	6276	LOAD SCREW	000000	000000
8943162770	8-9431	6277	NUT	000000	000000
8943163420	8-9431	6342	FILTER ASM; OIL	000001	000000
8943163430	8-9431	6343	BODY ASM.	000000	000000
8943163560	8-9431	6356	PIPE; INLET, WATER	000003	000000
8943164060	8-9431	6406	GOVERNOR ASM.	000000	000000
8943164080	8-9431	6408	GOVERNOR ASM.	000000	000000
8943166690	8-9431	6669	SPRING; TIMER	000000	000000
8943166902	8-9431	6690	GEAR; 3RD, MAIN SHAFT	000000	000000
8943167041	8-9431	6704	GEAR; 5TH, MAIN SHAFT	000000	000000
8943167390	8-9431	6739	COVER; REAR, T/M WO/SEAL	000000	000000
8943167391	8-9431	6739	COVER; REAR, T/M WO/SEAL	000000	000000
8943167500	8-9431	6750	RING; BLOCK, LOW	000000	000000
8943167501	8-9431	6750	RING; BLOCK LOW	000000	000000
8943167580	8-9431	6758	RING; BLOCK, SYN	000000	000000
8943167581	8-9431	6758	RING; BLOCK, SYN	000000	000000
8943167602	8-9431	6760	GEAR; 3RD, MAIN SHAFT	000000	000000
8943167612	8-9431	6761	GEAR; 3RD, MAIN SHAFT	000000	000000
8943167620	8-9431	6762	SHAFT; MAIN	000000	000000
8943167641	8-9431	6764	GEAR; 2ND, MAIN SHAFT	000000	000000
8943167643	8-9431	6764	GEAR; 2ND, MAIN SHAFT	000000	000000
8943167661	8-9431	6766	GEAR; 2ND, MAIN	000000	000000
8943167663	8-9431	6766	GEAR; 2ND, MAIN	000000	000000
8943167681	8-9431	6768	GEAR; 1ST, MAIN SHAFT	000000	000000
8943167682	8-9431	6768	GEAR; 1ST, MAIN SHAFT	000000	000000
8943167683	8-9431	6768	GEAR; 1ST, MAIN SHAFT	000000	000000
8943167684	8-9431	6768	GEAR; 1ST, MAIN SHAFT	000000	000001
8943167700	8-9431	6770	SYNCHRONIZER; LOW &	000000	000000
8943167762	8-9431	6776	GEAR; 5TH, MAIN SHAFT	000000	000000
8943167781	8-9431	6778	GEAR; 5TH, MAIN	000000	000000
8943167840	8-9431	6784	GEAR; COUNTER	000000	000000
8943167861	8-9431	6786	GEAR; 5TH, COUNTER	000000	000000
8943167870	8-9431	6787	GEAR; 5TH, COUNT	000000	000000
8943167900	8-9431	6790	ARM; SHIFT, REV & 5TH	000000	000000

8943168000	8-9431	6800	PLUG; DRAIN	000000	000000
8943168190			SHOCK ABS; REAR, RH	000000	000000
8943168200			SHOCK ABS; REAR, LH	000000	000000
8943169150	8-9431	6915	COVER; RR,TRANS	000000	000000
8943169200	8-9431	6920	SYNCHRONIZER; REV &	000000	000000
8943169220	8-9431	6922	ARM; SHIFT,LOW & 2ND	000000	000000
8943169221	8-9431	6922	ARM; SHIFT,LOW & 2ND	000000	000000
8943169230	8-9431	6923	ROD; SHIFT,REV	000000	000000
8943169460	8-9431	6946	PUMP ASM; INJ.	000000	000000
8943169470	8-9431	6947	GOVERNOR ASM.	000000	000000
8943169480	8-9431	6948	GENERATOR; NIKKO	000000	000000
8943169490	8-9431	6949	PLATE; ADJ,FAN	000000	000000
8943169820	8-9431	6982	GASKET,CYL HEAD 4JC1	000000	000000
8943169910	8-9431	6991	CLIP;RUBBER HOSE,TURBO	000001	000093
8943169941	8-9431	6994	ARM; SHIFT,OD TO TOP	000000	000000
8943169960	8-9431	6996	PIECE; SHIFT,OD	000000	000000
8943170140	8-9431	7014	GEAR ASM;LOW	000000	000000
8943170141	8-9431	7014	GEAR ASM;LOW	000000	000000
8943171462	8-9431	7146	GEAR; REV MAINSHAFT	000000	000001
8943171580	8-9431	7158	BEARING; NEEDLE,3RD	000000	000000
8943171610	8-9431	7161	BEARING; NEEDLE,LOW	000000	000000
8943171650	8-9431	7165	BOLT;RR COVER	000000	000000
8943172191	8-9431	7219	BRACKET; SOLENOID	000000	000000
8943172521	8-9431	7252	GEAR ASM.;REV.,	000000	000000
8943172580	8-9431	7258	CONNECTOR	000000	000000
8943172581	8-9431	7258	CONNECTOR	000000	000000
8943173220	8-9431	7322	BRACKET; PCV. VLV.	000000	000000
8943173221	8-9431	7322	BRACKET; PCV. VLV.	000000	000000
8943173380			PISTON ASM CALI	000000	000000
8943174880	8-9431	7488	WASHER	000000	000000
8943174890	8-9431	7489	ROLLER ASM.	000000	000000
8943174900	8-9431	7490	DISK*	000000	000000
8943174930	8-9431	7493	SLIDER; I/PUMP	000000	000000
8943174970	8-9431	7497	HOLDER; DEL. VALVE	000000	000000
8943175010	8-9431	7501	LEVER	000000	000001
8943175020	8-9431	7502	LEVER	000001	000005
8943175030	8-9431	7503	SHAFT; LEVER	000000	000000
8943175040	8-9431	7504	SPRING	000001	000000
8943175050	8-9431	7505	LEVER	000001	000000
8943175060	8-9431	7506	LEVER	000004	000000
8943175070	8-9431	7507	SPRING	000005	000000
8943175080	8-9431	7508	BRACKET	000001	000000
8943175090	8-9431	7509	BRACKET	000000	000000
8943175120	8-9431	7512	SPRING; GOV.	000000	000000
8943175130	8-9431	7513	PIPE	000000	000001
8943175140	8-9431	7514	PIPE*	000000	000000
8943175150	8-9431	7515	BRACKET	000000	000000

8943175211	8-9431	7521	LEVER	000000	000000
8943175220	8-9431	7522	NUT	000000	000000
8943175221	8-9431	7522	NUT	000000	000000
8943175240	8-9431	7524	SPRING	000000	000000
8943175312	8-9431	7531	TRANSMISSION AS	000000	000000
8943175411	8-9431	7541	TRANSMISSION ASM; MA	000000	000000
8943176381	8-9431	7638	SCREW;CONTROL SET,SPEED	000000	000003
8943176900	8-9431	7690	FILLER ASM.;OIL	000000	000000
8943177420	8-9431	7742	GOVERNOR ASM.	000000	000000
8943183850	8-9431	8385	SUPPORT; WITH D	000000	000000
8943184071	8-9431	8407	HOUSING; FLYWHEEL	000000	000000
8943184072	8-9431	8407	HOUSING; FLYWHEEL	000000	000000
8943184074	8-9431	8407	HOUSING; FLYWHEEL	000001	000000
8943184430	8-9431	8443	GOVERNOR ASM.	000000	000000
8943185210	8-9431	8521	BRACKET; IDLE PULLEY	000000	000000
8943185540	8-9431	8554	BOLT; EXH MANIF	000000	000038
8943185550	8-9431	8555	BOLT;EXH,MANIFO	000000	000022
8943187020			PISTON RING SET	000000	000007
8943187033			CASE; TRANS	000000	000000
8943187052	8-9431	8705	CASE; MISSION	000000	000000
8943187771			BUSHING; RUBBER	000000	000008
8943187820	8-9431	8782	BOLT; RR COVER/BRKT	000000	000014
8943187930	8-9431	8793	SHIM	000001	000000
8943187982	8-9431	8798	RING; SNAP, PISTON	000000	000000
8943188001	8-9431	8800	CLIP; OIL PIPE	000000	000000
8943189680	8-9431	8968	SWITCH ASM; MAGNETIC	000000	000002
8943189690	8-9431	8969	CLUTCH ASM; PINION	000000	000000
8943189700	8-9431	8970	CLUTCH ASM.	000000	000000
8943190031	8-9431	9003	DISC ASM.; CLUTCH	000000	000000
8943190170	8-9431	9017	PUMP ASM; INJ.	000000	000000
8943192980	8-9431	9298	CYLINDER;SLAVE	000000	000000
8943192981	8-9431	9298	CYLINDER;SLAVE	000000	000000
8943193040	8-9431	9304	SLAVE;CYL,CLUT	000000	000000
8943193041	8-9431	9304	SLAVE;CYL,CLUT	000000	000001
8943193050			C/MST/CYL	000000	000000
8943193200	8-9431	9320	FLANGE; HOLDER	000000	000020
8943193310	8-9431	9331	BUSH; CRANK SHAFT	000000	000000
8943193481	8-9431	9348	FLYWHEEL ASM.	000000	000000
8943193483	8-9431	9348	FLYWHEEL ASM.	000000	000000
8943193810	8-9431	9381	GOVERNOR ASM.	000000	000000
8943193830	8-9431	9383	GOVERNOR ASM.	000000	000000
8943194020	8-9431	9402	GAUGE;OIL LEVEL	000000	000000
8943195330	8-9431	9533	PIPE ASM; WATER	000000	000000
8943195460	8-9431	9546	PROTECTOR;HEAT	000000	000000
8943195580	8-9431	9558	HANGER;ENG.FRT.	000000	000003
8943195731	8-9431	9573	CONTROLLER ASM.	000000	000000
8943195930	8-9431	9593	JET ASM;OIL	000000	000000

8943196990	8-9431	9699	JET ASM; OIL	000000	000006
8943197000	8-9431	9700	PLUG; GLOW	000000	000000
8943197001	8-9431	9700	PLUG; GLOW	000000	000000
8943197002	8-9431	9700	PLUG; GLOW	000000	000193
8943197004	8-9431	9700	PLUG; GLOW	000000	000000
8943201930	8-9432	0193	SPRING; DETENT, SHIFT ROD	000007	000000
8943202460			SHAFT; IDLE GEAR	000000	000000
8943202520	8-9432	0252	WASHER; THRUST	000000	000000
8943202581			BUMPER; RR	000000	000000
8943202860	8-9432	0286	LEVER	000000	000000
8943203020	8-9432	0302	SPRING	000000	000012
8943203080	8-9432	0308	CONNECTOR; INLET	000000	000010
8943204370	8-9432	0437	STAY; GUIDE TUBE	000000	000003
8943204410	8-9432	0441	HOUSING; FLYWHEEL	000000	000000
8943204600	8-9432	0460	PROTECTOR; HEAT, RR.	000000	000000
8943204820	8-9432	0482	CLEANER ASM; AIR	000000	000000
8943204821	8-9432	0482	CLEANER ASM; AIR	000000	000000
8943204830	8-9432	0483	COVER ASM; A/C	000000	000000
8943204840	8-9432	0484	CUP; A/CLEANER	000000	000000
8943204850	8-9432	0485	GASKET; A/CLEANER	000000	000001
8943204860	8-9432	0486	BAFFLE; A/CLEANER	000001	000001
8943204870	8-9432	0487	KIT; ELEMENT, AIR	000004	000000
8943206000	8-9432	0600	SENSOR; OIL LEVER	000000	000000
8943207800			PIPE ASM; OIL	000000	000059
8943208150	8-9432	0815	SPACER; STAY	000030	000000
8943208220	8-9432	0822	PULLEY; CRANKSHAFT	000000	000000
8943208670	8-9432	0867	COVER; DUST, TRANSFR FLANGE	000000	000000
8943208671	8-9432	0867	COVER; DUST, TRANSFR FLANGE	000000	000000
8943208672	8-9432	0867	COVER; DUST, TRANSFR FLANGE	000000	000000
8943208673	8-9432	0867	COVER; DUST, TRANSFR FLANGE	000000	000003
8943209211	8-9432	0921	MANIFOLD, INLET (UPPER)	000000	000000
8943209281			DUCT; AIR	000000	000000
8943209792			CYLINDER ASM	000000	000000
8943209802			CYLINDER ASM	000000	000000
8943210090	8-9432	1009	PACKING; THERMO	000006	000000
8943210100	8-9432	1010	PACKING; THERMOSTAT	000000	000000
8943210110	8-9432	1011	PACKING; RETAINE	000000	000000
8943210111	8-9432	1011	PACKING; RETAINE	000000	000000
8943210120	8-9432	1012	GASKET; OIL FILTER	000000	000000
8943210130	8-9432	1013	GASKET; OIL COOL	000000	000000
8943210140	8-9432	1014	GASKET; OIL PAN	000000	000000
8943210150	8-9432	1015	GSKT; INJ. PUMP	000000	000000
8943210160	8-9432	1016	GASKET; TIMING	000000	000000
8943210170	8-9432	1017	GASKET; TIMING	000000	000000
8943210171	8-9432	1017	GASKET; TIMING	000000	000000
8943210180	8-9432	1018	PACKING; COVER	000000	000000
8943210200	8-9432	1020	GASKET; TAPPET	000000	000000

8943210210	8-9432	1021	GASKET;TAPPET	000000	000000
8943210270	8-9432	1027	RING: SNAP	000000	000000
8943210320	8-9432	1032	STUD: SPACER	000000	000000
8943210450	8-9432	1045	STUD; EXH. MANIF. FIX.	000009	000075
8943210500	8-9432	1050	FILTER ASM; OIL	000000	000000
8943210501	8-9432	1050	FILTER ASM; OIL	000000	000000
8943211011	8-9432	1101	BRACKET; SOLENOID-OIL PAN	000001	000000
8943211291	8-9432	1129	FLYWHEEL ASM.	000000	000000
8943211292	8-9432	1129	FLYWHEEL ASM.	000000	000005
8943211293	8-9432	1129	FLYWHEEL ASM.	000000	000000
8943211390	8-9432	1139	ROD; LINK	000000	000005
8943211650	8-9432	1165	SHAFT; DRIVE-PUMP	000000	000000
8943211680	8-9432	1168	SPRING; GOV.	000017	000000
8943211700	8-9432	1170	CAM DISK	000000	000000
8943211710	8-9432	1171	PISTON; INJ. PUMP	000000	000000
8943212110			BRACKET	000000	000000
8943212120	8-9432	1212	BOLT	000027	000000
8943212121	8-9432	1212	BOLT	000000	000000
8943212130	8-9432	1213	LEVER	000000	000000
8943212140	8-9432	1214	LEVER	000000	000000
8943212150	8-9432	1215	SPRING	000002	000000
8943212191	8-9432	1219	FILTER; OIL (SPIN ON)	000000	000943
8943212192	8-9432	1219	FILTER; OIL (SPIN ON)	000000	000000
8943212360	8-9432	1236	PLUG;RAD DRAIN	000117	000065
8943212411			PLATE; NAME	000000	000004
8943212510			FUEL PIPE ASM.;	000000	000000
8943213303	8-9432	1330	HOUSING; FLYWHEEL	000000	000000
8943213470	8-9432	1347	HOUSING; FLYWHEEL	000000	000000
8943213471	8-9432	1347	HOUSING; FLYWHEEL	000000	000005
8943213980	8-9432	1398	GOVERNOR ASM.	000000	000000
8943213981	8-9432	1398	GOVERNOR ASM.	000000	000000
8943214190	8-9432	1419	PUMP ASM; FEED	000000	000000
8943214200	8-9432	1420	GEAR; IDLER	000000	000001
8943214610	8-9432	1461	METAL KIT; CON ROD STD	000000	000000
8943214750	8-9432	1475	WASHER;THRUST	000000	000000
8943214770	8-9432	1477	SLEEVE; PILOT, LOCKUP A/T	000000	000000
8943214780	8-9432	1478	BELT ASM; FAN	000000	000000
8943215072			TURN SIGNAL ASM	000000	000000
8943215280	8-9432	1528	IGNITER	000000	000000
8943215370			CAP, DISTR.	000000	000003
8943215720			PAN ASM; OIL	000000	000000
8943216680	8-9432	1668	HOSE; PCV	000000	000000
8943216750	8-9432	1675	PIPE; INLET	000000	000000
8943216751	8-9432	1675	PIPE; INLET	000000	000000
8943216860	8-9432	1686	SWITCH ASM; MAG (INCL 6-1	000000	000000
8943216880	8-9432	1688	SEAL KIT	000000	000000
8943217340	8-9432	1734	PISTON	000000	000000

8943217350			OIL PUMP ASM	000000	000000
8943217370	8-9432	1737	HOSE;WTR,TURBO	000000	000005
8943217521			LAMP; REAR COMB	000000	000000
8943217531			LAMP; REAR COMB	000000	000000
8943218160	8-9432	1816	CAPSULE; SPR.	000000	000000
8943218380	8-9432	1838	PLUG; PICK UP HOLE	000000	000013
8943218400	8-9432	1840	BOLT;SEMS,SHAFT	000000	000000
8943218401	8-9432	1840	BOLT; SEMS,SHAFT	000000	000023
8943224110	8-9432	2411	RING;SNAP,CENTER BRG,M/SH	000010	000000
8943224151	8-9432	2415	BEARING; FLYWHEEL PT	000000	000000
8943224160	8-9432	2416	BEARING; FLYWHEEL PT	000000	000000
8943224170	8-9432	2417	RING; SNAP BALL BRG	000000	000000
8943224200	8-9432	2420	STUD: EXH. MNFLD. FIX	000002	000009
8943224320	8-9432	2432	PIPE; FUEL,FUEL FILT	000000	000000
8943224330	8-9432	2433	PIPE; FUEL,FUEL FILT	000000	000000
8943224340	8-9432	2434	PIPE; FUEL,FUEL FILT	000000	000000
8943224880	8-9432	2488	OIL ASM	000000	000001
8943225122	8-9432	2512	STUD; CAM BRKT	000004	000047
8943225132	8-9432	2513	STUD; CAM BRKT	000003	000063
8943226080	8-9432	2608	PAN ASM; OIL	000000	000000
8943226120	8-9432	2612	TUBE ASM; OIL GUIDE	000000	000000
8943226170	8-9432	2617	GASKET; BRG CASE	000001	000000
8943226260	8-9432	2626	ROD ASM: CONN.	000000	000000
8943226811	8-9432	2681	GEAR; IDLE	000000	000000
8943226840	8-9432	2684	SHAFT; PTO,FLYWHEEL	000000	000000
8943226850	8-9432	2685	SHAFT; IDLE GEAR	000000	000000
8943226860	8-9432	2686	SPINDLE; IDLE GEAR,P	000000	000000
8943226990	8-9432	2699	HOUSING; GOVERNOR	000000	000000
8943227001	8-9432	2700	PLUG*	000000	000000
8943227010	8-9432	2701	LEVER	000000	000000
8943227020	8-9432	2702	BRACKET	000000	000000
8943227022	8-9432	2702	BRACKET	000000	000000
8943227030	8-9432	2703	NUT	000000	000000
8943227040	8-9432	2704	BOLT*	000000	000000
8943227050	8-9432	2705	LEVER; SWIVEL LEVER	000001	000001
8943227060	8-9432	2706	LEVER	000000	000000
8943227072	8-9432	2707	CASE; HTR	000000	000000
8943227450	8-9432	2745	BOLT;RR COVER	000068	000041
8943227460	8-9432	2746	BOLT;QUAD BOX	000000	000039
8943227480	8-9432	2748	CLIP; HOSE,PCV	000000	000000
8943227481	8-9432	2748	CLIP; HOSE,PCV	000000	000000
8943227940	8-9432	2794	REP KIT---WATER PUMP	000000	000000
8943227941	8-9432	2794	REP KIT---WATER PUMP	000000	000000
8943229130	8-9432	2913	BOLT; OIL PUMP	000000	000000
8943229230	8-9432	2923	PIPE; OIL,TURBO	000000	000000
8943229930			BUSHING; CLUTCH,PEDAL	000000	000000
8943229970			BUSH; CLUT	000000	000000

8943236610	8-9432	3661	PLUG; FLYWHEEL HSG	000000	000000
8943236620	8-9432	3662	BOLT GENER	000000	000000
8943236680	8-9432	3668	BELT; TIMING	000001	000000
8943236900	8-9432	3690	CASE ASM; THROTTLE	000000	000000
8943236910	8-9432	3691	CASE ASM.; THROTTLE VALVE	000000	000000
8943237370	8-9432	3737	BOLT; THROUGH	000000	000000
8943237460	8-9432	3746	VALVE ASM; THRO	000000	000000
8943237470	8-9432	3747	PIPE; INLET	000000	000000
8943237471	8-9432	3747	PIPE; INLET	000004	000001
8943238630	8-9432	3863	PLATE; PULLEY, CENTER	000000	000000
8943239080	8-9432	3908	SILENCER ASM.;	000000	000000
8943239320	8-9432	3932	MANIFOLD; INL WO/STUD	000000	000000
8943239341	8-9432	3934	RADIATOR ASM	000000	000000
8943239351	8-9432	3935	RADIATOR	000000	000018
8943240490	8-9432	4049	VALVE; OIL CHECK	000000	000000
8943240520	8-9432	4052	GASKET; INL MANIF TO HD	000000	000000
8943241040			UNIT ASM; SIDE	000000	000000
8943241050			UNIT ASM; SIDE	000000	000000
8943241590	8-9432	4159	METAL KIT; CONN	000000	000000
8943242200	8-9432	4220	STIFFENER; LH	000000	000000
8943242210	8-9432	4221	BRACKET; SOLENOID	000000	000000
8943242880	8-9432	4288	SPACER; FAN-PULLEY	000000	000000
8943243350	8-9432	4335	GEAR CRANKSHAFT Z=30	000000	000004
8943243360	8-9432	4336	GEAR; CAM SHAFT	000000	000000
8943243361	8-9432	4336	GEAR; CAM SHAFT	000000	000001
8943243380	8-9432	4338	GEAR, IDLER	000001	000000
8943243390	8-9432	4339	GEAR; I/PUMP	000000	000000
8943243391	8-9432	4339	GEAR; I/PUMP	000000	000000
8943243460	8-9432	4346	ARMATURE ASM; STARTER	000000	000000
8943243550			AEOP PART	000000	000000
8943244180	8-9432	4418	FORK ASM; 127	000000	000000
8943244220	8-9432	4422	STIFFENER; LH	000000	000000
8943244630	8-9432	4463	FILTER; FUEL (SPIN-ON) 4B/	000000	000000
8943246220	8-9432	4622	SHAFT; PINION	000000	000000
8943246700	8-9432	4670	FILTER ASM; FUEL	000000	000000
8943246750	8-9432	4675	GAUGE ASM; OIL LEVEL	000000	000000
8943247350	8-9432	4735	RING SNAP	000000	000000
8943251110	8-9432	5111	PUMP ASM; INJ.	000000	000000
8943251111	8-9432	5111	PUMP ASM; INJ.	000000	000000
8943251120	8-9432	5112	GOVERNOR ASM.	000000	000000
8943251121	8-9432	5112	GOVERNOR ASM.	000000	000000
8943252550	8-9432	5255	RUBBER; HOSE	000003	000000
8943254630	8-9432	5463	FILTER; FUEL (SPIN-ON) 4B/	000000	000000
8943254640	8-9432	5464	PUMP INJ ASM	000000	000000
8943254700	8-9432	5470	TUBE ASM; GUIDE	000000	000000
8943255000	8-9432	5500	LEVER ASM.	000000	000000
8943255010	8-9432	5501	SHAFT; LOAD	000000	000000

8943255020	8-9432	5502	BOLT;GOV.COVER	000000	000006
8943255050	8-9432	5505	BRKT;GOVERNOR	000001	000001
8943255060	8-9432	5506	DOWEL; TIMING GEAR CASE	000000	000000
8943255061	8-9432	5506	DOWEL; TRANS CASE	000014	000107
8943255090	8-9432	5509	GAUGE ASM; OIL LEVEL	000000	000001
8943255131	8-9432	5513	THERMOSTAT	000000	000000
8943255210	8-9432	5521	GUARD; FAN	000000	000000
8943255211	8-9432	5521	GUARD; FAN	000000	000000
8943255680			PLATE; NAME	000001	000001
8943255950			STUD; O/FILTER	000000	000004
8943256072	8-9432	5607	PIPE; INL	000000	000000
8943256490	8-9432	5649	FLYWHEEL ASM	000000	000000
8943256510	8-9432	5651	PIPE ASM; INLET	000022	000000
8943259561	8-9432	5956	PACKING; OUTLET PIPE	000000	000142
8943259660	8-9432	5966	SPACER; OIL PUM	000000	000000
8943260790	8-9432	6079	TURBOCHARGER ASM	000000	000000
8943260811	8-9432	6081	ADAPTER;EXH PIP	000000	000000
8943260820	8-9432	6082	GASKET; EXH PIPE,TUR	000003	000000
8943260840	8-9432	6084	PIPE; INLET,TURBO OU	000000	000000
8943261100	8-9432	6110	GUARD; GENERATO	000000	000000
8943262030	8-9432	6203	GAUGE ASM; OIL	000000	000000
8943262031	8-9432	6203	GAUGE ASM; OIL	000000	000000
8943262250	8-9432	6225	PISTON	000000	000000
8943263400	8-9432	6340	PUMP ASM; INJ.	000000	000000
8943263420	8-9432	6342	PUMP ASM; INJ.	000000	000000
8943263500	8-9432	6350	GEAR; INJ. PUMP	000000	000002
8943263510	8-9432	6351	GEAR; CAMSHAFT	000000	000000
8943264390	8-9432	6439	GASKET; DUST COVER	000442	001348
8943264410	8-9432	6441	SEAL,OIL,FRT,CV	000000	000000
8943266611	8-9432	6661	STOPPER ASM.; ENG., 24V	000000	000000
8943266740	8-9432	6674	PAN ASM; OIL	000000	000000
8943267160	8-9432	6716	GAUGE ASM; OIL	000000	000000
8943267210	8-9432	6721	PIPE	000000	000011
8943267331	8-9432	6733	BRACKET;ENG.M	000000	000001
8943267530			HOSE; WATER OIL	000000	000000
8943267680	8-9432	6768	ROTOR ASM.	000001	000000
8943267690	8-9432	6769	COVER ASM; RR	000000	000000
8943267710	8-9432	6771	BEARING; BALL	000000	000000
8943267760	8-9432	6776	BRUSH; REG.	000000	000000
8943270260	8-9432	7026	PLATE ASM.	000000	000000
8943270270	8-9432	7027	COVER ASM.; FRONT	000000	000000
8943270280	8-9432	7028	BEARING; BALL	000000	000000
8943270291	8-9432	7029	FLYWHEEL ASM	000000	000000
8943270560	8-9432	7056	TURBOCHARGER ASM.	000000	000003
8943270570	8-9432	7057	PUMP ASM; INJ.	000000	000001
8943270580	8-9432	7058	GOVERNOR ASM.	000000	000000
8943270730	8-9432	7073	NUT; CENTER TO	000116	000557

8943272690	8-9432	7269	HEAD ASM; CYL.	000000	000000
8943272721	8-9432	7272	FILTER & COOLER ASM; OIL	000000	000002
8943273131	8-9432	7313	ADJUST PLATE 4JB1/PK	000000	000007
8943273360	8-9432	7336	COVER; GOV	000000	000003
8943274262			EVAPORATOR ASM	000000	000000
8943274500	8-9432	7450	SILENCER; EXH.	000000	000000
8943274801	8-9432	7480	HOUSING; FLYWHEE	000000	000000
8943274811	8-9432	7481	HOUSING; FLYWHEEL	000000	000000
8943274820	8-9432	7482	PIPE; WATER	000000	000000
8943274821	8-9432	7482	PIPE; WATER, OUTLET	000006	000009
8943274831	8-9432	7483	PIPE; WATER, OUT	000000	000003
8943274931	8-9432	7493	PUMP ASM; INJ.	000000	000000
8943274970	8-9432	7497	CLEANER ASM; AIR	000000	000000
8943275630	8-9432	7563	PIPE	000000	000000
8943275640	8-9432	7564	PIPE ASM; OIL	000000	000000
8943275740	8-9432	7574	CLIP; HARNESS, EGCI	000002	000020
8943280990	8-9432	8099	COLLER; OIL FILTER	000000	000000
8943280991	8-9432	8099	COLLER; OIL FILTER	000000	000000
8943282170	8-9432	8217	GEAR, W/BUSH	000000	000001
8943283260	8-9432	8326	FLYWHEEL ASM	000000	000000
8943283480	8-9432	8348	CASE ASM; A/CLEANER	000000	000000
8943283530	8-9432	8353	GASKET; FRT/RR PIPE, SLNCR	000048	000042
8943284400	8-9432	8440	PLATE	000000	000000
8943284420	8-9432	8442	GEAR; IDLE	000000	000000
8943284430	8-9432	8443	SHAFT; IDLE GEAR	000000	000000
8943284431	8-9432	8443	SHAFT; IDLE GEAR	000001	000000
8943284450	8-9432	8445	GEAR; PTO	000000	000000
8943284460	8-9432	8446	SHAFT; GEAR	000000	000000
8943284470	8-9432	8447	GEAR; CRANK	000000	000000
8943284480	8-9432	8448	GEAR; CAMSHAFT	000000	000001
8943284490	8-9432	8449	GEAR; W/BUSH	000000	000000
8943284510	8-9432	8451	GEAR; IDLE B	000000	000000
8943284990	8-9432	8499	BEARING; ROLLER, IDLE	000000	000000
8943285010	8-9432	8501	BEARING; IDLE	000000	000000
8943285020	8-9432	8502	BEARING; BALL	000000	000000
8943285030	8-9432	8503	PULLEY; CRANK	000000	000000
8943285370	8-9432	8537	SHOCK ABSRB.ASM	000000	000000
8943285371	8-9432	8537	SHOCK ABSRB ASM	000000	000000
8943286040	8-9432	8604	HEAD; DISTRIBUTOR	000000	000000
8943286070	8-9432	8607	BRACKET	000000	000000
8943286100	8-9432	8610	HOUSING; PUMP	000001	000000
8943286740	8-9432	8674	PACKING; INLET	000000	000000
8943287660	8-9432	8766	LEVER	000000	000000
8943287670	8-9432	8767	SPRING CAPSULE	000000	000000
8943287680	8-9432	8768	PLUNGER ASM.	000000	000000
8943287730	8-9432	8773	BOLT; HEAD COVER	000000	000000
8943287731	8-9432	8773	BOLT; HEAD COVER	000000	000000

8943287950	8-9432	8795	HOSE; WATER, TURBOCHARGER	000000	000012
8943288320	8-9432	8832	HOSE; RUBBER	000000	000018
8943288330	8-9432	8833	SPACER; PTO	000000	000000
8943288340	8-9432	8834	PACKING; SPACER	000000	000000
8943288350	8-9432	8835	PACKING; GEAR CASE	000001	000000
8943288790	8-9432	8879	GOVERNOR ASM.	000000	000000
8943294970			METAL SET; CONN	000000	000000
8943295130			WASHER; LOCK	000000	000000
8943295140	8-9432	9514	HOUSING; TURBINE	000000	000000
8943295290	8-9432	9529	GASKET; PIPE TO MANIFOLD	000000	000000
8943295490	8-9432	9549	VENTILATOR ASM.	000000	000015
8943295510	8-9432	9551	PLATE; REAR, CYL	000000	000000
8943295550	8-9432	9555	SEAT; NOZZLE SPRING, HOLDER	000000	000025
8943296220	8-9432	9622	BODY ASM.	000000	000000
8943296221	8-9432	9622	BODY ASM.	000000	000006
8943296410	8-9432	9641	SPACER; STARTER	000000	000000
8943296900	8-9432	9690	PUMP ASM; INJ.	000000	000000
8943296902	8-9432	9690	PUMP ASM; INJ.	000000	000000
8943296910	8-9432	9691	GEAR	000000	000003
8943296921	8-9432	9692	ROD ASM; CONN	000000	000000
8943296922	8-9432	9692	ROD ASM; CONN	000000	000000
8943296924	8-9432	9692	ROD ASM; CONN	000000	000000
8943296950			BOLT; CENTER, LE	000000	000005
8943297450	8-9432	9745	CLEANER ASM; AIR	000000	000000
8943297451	8-9432	9745	CLEANER ASM; AIR	000000	000000
8943297461	8-9432	9746	COVER ASM.	000000	000000
8943299080			CABLE; DISTR. TO	000000	000000
8943299120	8-9432	9912	PIPE; SUCTION	000000	000002
8943299530	8-9432	9953	BOLT; CLAMP TO ROD	000000	000000
8943299531	8-9432	9953	BOLT; CLAMP TO ROD	000000	000000
8943310911	8-9433	1091	PUMP ASM; INJ.	000000	000000
8943310930	8-9433	1093	GOVERNOR ASM.	000000	000000
8943310940	8-9433	1094	INLET PIPE; HOSE CONNECTI	000000	000000
8943310941	8-9433	1094	INLET PIPE; HOSE CONNECTI	000005	000000
8943310951	8-9433	1095	PAN ASM; OIL	000000	000001
8943311170	8-9433	1117	NIPPLE; OIL	000000	000000
8943311180	8-9433	1118	HOSE; PCV	000000	000000
8943311310	8-9433	1131	WIRE; FUSIBLE INK	000000	000000
8943313150	8-9433	1315	PAN ASM.; OIL, W/DR. PLUG	000000	000000
8943314520			HARNESS, FRAME	000000	000000
8943314521			HARNESS; FRAME	000000	000000
8943315340	8-9433	1534	LEVER	000000	000004
8943315510	8-9433	1551	BOLT; INJ. PUMP	000000	000000
8943316150	8-9433	1615	CASE; CRANK	000000	000000
8943316160	8-9433	1616	FLYWHEEL ASM.	000000	000000
8943317351	8-9433	1735	CAP ASM; LEVEL	000000	000001
8943317400	8-9433	1740	SCREW; UNDER COVER (LH&RH)	000071	000013

8943317420	8-9433	1742	NUT; TRAILING L	000000	000000
8943317470			BOLT; SEM, FRT.	000000	000000
8943317471			BOLT; COLUMN TO BRKT/BRK P	000000	000020
8943317480	8-9433	1748	ELEMENT; FUEL FI	000000	000000
8943317910	8-9433	1791	BRACKET; ADAPTER	000000	000000
8943319260	8-9433	1926	HOSE; RUBBER L=345	000000	000000
8943321271	8-9433	2127	BLOCK ASM; CYLINDER	000000	000000
8943321272	8-9433	2127	BLOCK ASM; CYLINDER	000000	000000
8943321291	8-9433	2129	BLOCK ASM.	000000	000000
8943321311	8-9433	2131	BLOCK AS,	000000	000000
8943322300	8-9433	2230	FOOT; ENG, RH	000000	000000
8943322301	8-9433	2230	FOOT; ENG, RH	000000	000000
8943322303	8-9433	2230	FOOT; ENG, RH	000000	000000
8943322310	8-9433	2231	FOOT; ENG, LH	000000	000000
8943322311	8-9433	2231	FOOT; ENG, LH	000000	000000
8943322510	8-9433	2251	GAUGE ASM; OIL LEVEL	000000	000000
8943322520	8-9433	2252	GAUGE ASM; OIL LEVEL	000000	000007
8943322900	8-9433	2290	PIPE; INLET	000000	000000
8943322940	8-9433	2294	BODY ASM; FILTER	000000	000000
8943323270	8-9433	2327	GASKET; CYL HEAD	000000	000000
8943323280			HEAD GASKET	000000	000000
8943324030	8-9433	2403	PUMP ASM; INJ.	000000	000000
8943324032	8-9433	2403	PUMP ASM; INJ.	000000	000000
8943324060	8-9433	2406	CLIP; RADIATOR	000000	000000
8943325380	8-9433	2538	PISTON; ENGINE	000000	000008
8943325390	8-9433	2539	PISTON; ENGINE	000000	000013
8943326140	8-9433	2614	PLATE; BLOCK	000000	000000
8943326150	8-9433	2615	COVER; GEAR CASE	000000	000000
8943326331	8-9433	2633	PIPE ASM.; OIL,	000000	000000
8943326340	8-9433	2634	FAN ASM; COOLING	000000	000014
8943327432	8-9433	2743	CASE; CRANK	000000	000000
8943327461	8-9433	2746	SPACER: OIL	000000	000000
8943327600	8-9433	2760	BRKT; ADAPTER TO EXH MANIF	000030	000004
8943327620	8-9433	2762	FILLER: OIL	000000	000000
8943327790	8-9433	2779	PCV HOSE	000000	000004
8943327850	8-9433	2785	HOSE: OIL	000000	000000
8943327860	8-9433	2786	CLIP; OIL HOSE	000000	000000
8943328311	8-9433	2831	BOLT; SEMS, OIL	000000	000000
8943328370	8-9433	2837	GASKET; TURBO-EXH. PIPE	000000	000000
8943328380	8-9433	2838	GASKET; EXH. MANIF.-TURBO	000000	000000
8943329520			MASTER CYLINDER	000000	000000
8943329550	8-9433	2955	ELEMENT; FUEL FI	000000	000000
8943329551	8-9433	2955	ELEMENT; FUEL FI	000000	000000
8943330950	8-9433	3095	MANIFOLD: INTAKE	000000	000000
8943331040	8-9433	3104	BAFFLE; AIR CLEANER	000000	000000
8943331140	8-9433	3114	EXHAUST VALVE	000000	000000
8943331150	8-9433	3115	EXHAUST VALVE	000000	000000

8943331190	8-9433	3119	ROD; CONNECTING	000000	000000
8943331191	8-9433	3119	ROD; CONNECTING	000000	000000
8943331193	8-9433	3119	ROD; CONNECTING	000000	000000
8943331900	8-9433	3190	ROD ASM; CONN *INVALID*	000000	000000
8943332220	8-9433	3222	SLEEVE; GOV.	000000	000000
8943334380	8-9433	3438	STARTER ASM	000002	000000
8943334810	8-9433	3481	AIR DUCT; TURBO-INLET MAN	000000	000000
8943335210	8-9433	3521	BEARING; BALL	000000	000005
8943340814	8-9433	4081	CABLE	000000	000000
8943342000	8-9433	4200	NOZZLE ASM; INJECTION	000000	000000
8943342001	8-9433	4200	NOZZLE ASM; INJECTION	000000	000000
8943342002	8-9433	4200	NOZZLE ASM; INJECTION	000000	000000
8943342130	8-9433	4213	OIL PAN ASM	000000	000000
8943342151	8-9433	4215	PUMP ASM; INJ.	000000	000000
8943342152	8-9433	4215	PUMP ASM; INJ.	000000	000000
8943342161	8-9433	4216	GOVERNOR ASM.	000000	000000
8943343050	8-9433	4305	GUARD; FAN	000000	000000
8943343280			PLUG; OIL FILTE	000000	000000
8943343310	8-9433	4331	GASKET FRT PLA	000000	000000
8943343320	8-9433	4332	GASKET; INLET PIPE TO WTR	000000	000008
8943343330	8-9433	4333	GASKET;OUTLET PIPE TO HSG	000000	000000
8943343350	8-9433	4335	PACKING;FILTER	000000	000000
8943343360	8-9433	4336	GASKET; INL MAN	000005	000004
8943343460	8-9433	4346	BRACKET; GEN	000000	000000
8943344671	8-9433	4467	FLYWHEEL ASM.	000000	000000
8943344680	8-9433	4468	PLATE; RR, CYL. BLOCK	000000	000000
8943344780	8-9433	4478	GOVERNOR ASM.	000000	000000
8943345010	8-9433	4501	STARTER	000000	000000
8943346120	8-9433	4612	BODY ASM; FILTER	000000	000000
8943346362	8-9433	4636	HARNES; CABLE,ENGIN	000000	000000
8943346490	8-9433	4649	RING; SNAP, IDLE GEAR	000000	000000
8943346500	8-9433	4650	SPACER; INNER, IDLE D	000000	000000
8943346811	8-9433	4681	COVER; IDLE GEAR	000000	000078
8943346820	8-9433	4682	SHAFT; IDLE GEAR	000013	000070
8943347390	8-9433	4739	PAN ASM; OIL	000000	000000
8943347391	8-9433	4739	PAN ASM; OIL	000000	000001
8943347700	8-9433	4770	PLATE: TACHOMETER	000000	000000
8943347740	8-9433	4774	BRACKET; FUEL CUT	000000	000000
8943347920	8-9433	4792	FLYWEIGHT	000001	000000
8943347931	8-9433	4793	FLYWEIGHT ASM	000042	000000
8943347950	8-9433	4795	GOVERNOR	000000	000000
8943348190	8-9433	4819	SPACER; FAN T=35.5	000000	000000
8943348200	8-9433	4820	BREATHER ASM.	000000	000000
8943348550	8-9433	4855	GEAR; PTO	000000	000001
8943348660	8-9433	4866	PIPE ASM	000000	000000
8943348673	8-9433	4867	HOSE: RUBBER	000000	000000
8943348682	8-9433	4868	HOSE: RUBBER	000000	000000

8943348860	8-9433	4886	BRACKET: A/C	000000	000000
8943348861	8-9433	4886	BRACKET: A/C	000000	000000
8943348870	8-9433	4887	FLYWHEEL ASM.	000000	000000
8943348890	8-9433	4889	GOVERNOR ASM.;	000000	000000
8943349000	8-9433	4900	PLUG; GLOW	000003	000000
8943349031	8-9433	4903	BRACKET; OIL F.	000000	000000
8943349040	8-9433	4904	PIPE ASM;CENTER	000005	000000
8943349060			ELEMENT;AIR FILTER	000029	000000
8943349710	8-9433	4971	SHAFT; MAIN	000000	000000
8943349760	8-9433	4976	CLUTCH ASM;	000005	000000
8943349770	8-9433	4977	CLUTCH; PINION,	000001	000000
8943349780	8-9433	4978	RETAINER; BEARING,ST	000001	000000
8943350670	8-9433	5067	GOVERNOR	000000	000000
8943355700	8-9433	5570	WATER SEDIMENTER	000000	000000
8943355702	8-9433	5570	WATER SEDIMENTER	000000	000000
8943355703	8-9433	5570	WATER SEDIMENTER	000000	000005
8943355930	8-9433	5593	COUPLING	000000	000000
8943355940	8-9433	5594	GOVERNOR	000000	000000
8943355943	8-9433	5594	GOVERNOR	000000	000000
8943356190	8-9433	5619	PISTON	000000	000000
8943356240			LAMP ASM.	000000	000006
8943356290	8-9433	5629	CLUTCH ASM; PINION	000000	000000
8943356800	8-9433	5680	CASE; CRANK	000000	000000
8943356802	8-9433	5680	CASE; CRANK	000000	000002
8943357071	8-9433	5707	PUMP ASM; INJ.	000000	000001
8943357072	8-9433	5707	PUMP ASM; INJ.	000000	000010
8943358292			ENGINE; PARTIAL	000000	000000
8943358293			ENGINE; PARTIAL	000000	000000
8943358332			GASKET SET; ENG	000000	000000
8943359010	8-9433	5901	GOVERNOR ASM.;	000000	000000
8943359020	8-9433	5902	GOVERNOR ASM.	000000	000000
8943359030	8-9433	5903	GOVERNOR ASM.	000000	000000
8943359040	8-9433	5904	GOVERNOR ASM.	000000	000000
8943359060			TRANSMISSION	000000	000000
8943359061			TRANSMISSION	000000	000001
8943359500	8-9433	5950	NUT;SELF LOCK	000083	000000
8943359540	8-9433	5954	VALVE ASM.	000000	000000
8943359560	8-9433	5956	CARTRIDGE KIT/OIL FILTER	000000	000000
8943359572	8-9433	5957	PUMP ASM: WATER	000000	000000
8943360690	8-9433	6069	THERMOSTAT;RADI	000015	000013
8943360750	8-9433	6075	PUMP ASM; FEED	000000	000000
8943361961	8-9433	6196	COVER ASM.; CYL. HEAD	000000	000000
8943362420	8-9433	6242	PAN ASM; OIL	000000	000000
8943362920	8-9433	6292	GASKET; OIL PRESS	000000	000010
8943363140			SEAL; OIL HUB	000000	000000
8943363141			SEAL; OIL HUB	000000	000002
8943363151			SEAL,OIL HUB	000000	000000

8943363152			SEAL,OIL HUB	000000	000001
8943364540			PUMP ASM; INJ.	000000	000001
8943364790	8-9433	6479	HARNES, CABLE, EARTH	000002	000000
8943365110	8-9433	6511	O-RING;DRAIN PLUG	000000	000004
8943365120	8-9433	6512	PLUG; OIL DRAIN	000000	000000
8943365121	8-9433	6512	PLUG; OIL DRAIN	000000	000000
8943365340	8-9433	6534	HOUSING; THERMOSTAT	000000	000000
8943365341	8-9433	6534	HOUSING; THERMOSTAT	000001	000000
8943365860	8-9433	6586	STOPPER ASM.	000000	000000
8943365862	8-9433	6586	STOPPER ASM.	000000	000000
8943366110	8-9433	6611	AIR CLEANER ASM	000002	000001
8943366680	8-9433	6668	SWITCH; THERMO,	000010	000012
8943367870	8-9433	6787	FLYWHEEL ASM.	000000	000000
8943368230	8-9433	6823	PULLEY; CRANKSHAFT	000000	000000
8943368231	8-9433	6823	PULLEY; CRANKSHAFT	000001	000000
8943368240	8-9433	6824	CRANK PULLEY	000000	000000
8943368241	8-9433	6824	PULLEY	000000	000000
8943368250	8-9433	6825	PULLEY; CR/SHF,PTO D	000000	000000
8943368251	8-9433	6825	PULLEY; CR/SHF,PTO D	000000	000000
8943368260	8-9433	6826	PLUNGER ASM	000000	000000
8943368790	8-9433	6879	PIPE; FUEL	000000	000000
8943369250	8-9433	6925	SPRING; STOP	000000	000000
8943369260	8-9433	6926	CAP; STOP LEVER	000000	000000
8943369281	8-9433	6928	LEVER;	000000	000000
8943369290	8-9433	6929	BRKT;GOVERNOR	000000	000006
8943369300	8-9433	6930	BRKT;GOVERNOR	000000	000001
8943369310	8-9433	6931	BOLT;BRKT	000000	000001
8943369330	8-9433	6933	FLYWEIGHT ASM;	000000	000000
8943369340	8-9433	6934	SPRING; TIMER,	000000	000000
8943369380	8-9433	6938	SPRING; GOV.	000000	000000
8943369440	8-9433	6944	COVER; GOV HSG,INJ P	000000	000000
8943370220	8-9433	7022	REPAIR KIT; FEED PUMP	000000	000000
8943370221	8-9433	7022	REPAIR KIT; FEED PUMP	000000	000000
8943371380	8-9433	7138	BRACKET; CLIP,E	000000	000000
8943371760	8-9433	7176	BOX; GEAR CONT	000000	000000
8943373010	8-9433	7301	ROTOR SET; OIL PUMP	000000	000000
8943373020	8-9433	7302	REPAIR KIT; O/H	000000	000000
8943373460	8-9433	7346	HOSE; RUBB.,PCV. - I/MANI	000001	000000
8943373560	8-9433	7356	GOVERNOR ASM.; FIG.53	000000	000000
8943373600			SENSOR; THERMO,EGR	000000	000000
8943374530	8-9433	7453	RING SET; PISTON	000001	000000
8943374540	8-9433	7454	SHAFT ASM.	000000	000000
8943374550	8-9433	7455	CLUTCH ASM; OVER RUNNING	000000	000000
8943374560	8-9433	7456	BRACKET ASM; FRONT	000000	000003
8943374570	8-9433	7457	SEAL ASM.	000001	000000
8943374580	8-9433	7458	BRACKET ASM.; FRONT	000000	000000
8943374590	8-9433	7459	SHAFT	000000	000000

8943374600	8-9433	7460	CLUTCH ASM.; O.R.	000002	000000
8943374610	8-9433	7461	BRACKET ASM.; CENTER	000000	000000
8943374620	8-9433	7462	SWITCH ASM.; MAGNETIC	000000	000000
8943374630	8-9433	7463	BRACKET; CENTER	000000	000000
8943374650	8-9433	7465	SEAL ASM.	000000	000000
8943374670	8-9433	7467	HOSE; RUBBER	000000	000000
8943374690	8-9433	7469	PULLEY; FAN DRI	000000	000000
8943375670	8-9433	7567	CONNECTOR; SUCTION	000000	000000
8943375850	8-9433	7585	REGULATOR; VOLTAGE, GEN.	000000	000001
8943376320			CARBURATOR	000000	000000
8943376370			GENERATOR	000000	000000
8943377771	8-9433	7777	GOVERNOR ASM.	000000	000000
8943377780	8-9433	7778	GOVERNOR ASM.	000000	000000
8943377800	8-9433	7780	GOVERNOR ASM.	000000	000000
8943377810	8-9433	7781	GOVERNOR ASM.	000000	000000
8943377820	8-9433	7782	GOVERNOR ASM.	000000	000000
8943377830	8-9433	7783	GOVERNOR ASM.	000000	000000
8943378560	8-9433	7856	BRACKET; FUEL CUT	000000	000000
8943378630	8-9433	7863	BRACKET	000000	000000
8943378650	8-9433	7865	COVER; RR COVER	000000	000000
8943378660	8-9433	7866	HOLDER; BRUSH S	000002	000001
8943378900	8-9433	7890	CAP; RADIATOR	000000	000006
8943379390	8-9433	7939	BOLT*	000000	000000
8943379460	8-9433	7946	PLUG; OIL FILLER	000000	000000
8943379461	8-9433	7946	PLUG; OIL FILLER, TRANS	000000	000000
8943380780	8-9433	8078	PIPE: OIL	000000	000000
8943380790	8-9433	8079	PIPE ASM; OIL	000000	000019
8943380960	8-9433	8096	GENERATOR	000000	000003
8943381280	8-9433	8128	GOVERNOR ASM.	000000	000000
8943381290	8-9433	8129	GOVERNOR ASM.	000000	000000
8943381300	8-9433	8130	GOVERNOR ASM	000000	000000
8943381310	8-9433	8131	GOVERNOR ASM.	000000	000000
8943381760	8-9433	8176	INDICATOR	000000	000000
8943381770	8-9433	8177	REPAIR KIT; WATER PUMP	000001	000001
8943381930	8-9433	8193	PLATE: ADJUSTING	000000	000000
8943382050	8-9433	8205	FILTER ASM.	000000	000001
8943382540	8-9433	8254	PUMP ASM; INJ.	000000	000000
8943382541	8-9433	8254	PUMP ASM; INJ.	000000	000000
8943382551	8-9433	8255	GOVERNOR ASM.	000000	000000
8943383070	8-9433	8307	PLATE; METER BOARD	000000	000000
8943383080	8-9433	8308	BASE; METER BOARD	000000	000000
8943383090	8-9433	8309	BASE; FUEL TANK	000000	000000
8943383100	8-9433	8310	COVER; METER BOARD	000000	000000
8943383110	8-9433	8311	TANK; FUEL	000000	000000
8943383130	8-9433	8313	PIPE; FUEL	000001	000000
8943383140	8-9433	8314	BAR; RAD.	000000	000000
8943383150	8-9433	8315	PIPE; EXH.	000000	000000

8943383160	8-9433	8316	BAND ASM.	000000	000000
8943383180	8-9433	8318	STAY; METER BOARD	000000	000000
8943383190	8-9433	8319	COVER; BASE	000000	000000
8943383200	8-9433	8320	COVER; JUNCTION BOX	000000	000000
8943383230	8-9433	8323	BRACKET; COVER	000000	000000
8943383250	8-9433	8325	BLOCK; JUNCTION	000000	000000
8943383251	8-9433	8325	BLOCK; JUNCTION	000000	000000
8943383260	8-9433	8326	SHAFT; IDLE PULLEY	000000	000000
8943383270	8-9433	8327	PLATE; IDLE PULLEY	000000	000000
8943383280	8-9433	8328	JOINT; FITTING	000000	000000
8943383290	8-9433	8329	JOINT; EYE	000000	000000
8943383300	8-9433	8330	HOSE; FUEL	000000	000000
8943384120	8-9433	8412	LEVER; "B", ENGIN	000000	000000
8943384121	8-9433	8412	LEVER; "B", ENG	000000	000013
8943384170	8-9433	8417	NIPPLE; O/PRESS.	000000	000000
8943384180	8-9433	8418	NIPPLE	000000	000000
8943384181	8-9433	8418	NIPPLE; OIL GALLERY	000000	000001
8943384190	8-9433	8419	CLIP; FLEX. TUBE	000000	000000
8943384200	8-9433	8420	ROD; ENG CONT	000000	000003
8943384220	8-9433	8422	GAUGE; OIL	000000	000000
8943384230	8-9433	8423	LEVEL GAUGE ASM	000000	000001
8943384670	8-9433	8467	COVER; HEAT EXCHANGER RR	000000	000000
8943385430	8-9433	8543	CUSHION; TANK	000000	000000
8943385440	8-9433	8544	SPACER; TANK	000000	000000
8943385450	8-9433	8545	HOLDER; TANK	000000	000000
8943386481	8-9433	8648	ROD ASM; CONN	000000	000000
8943387010	8-9433	8701	HOSE; DRAIN	000000	000000
8943387310	8-9433	8731	PAN ASM; OIL	000000	000000
8943387330	8-9433	8733	FLYWHEEL ASM.	000000	000000
8943387350	8-9433	8735	FOOT; ENG, RH	000000	000000
8943387360	8-9433	8736	FOOT; ENG, LH	000000	000000
8943387361	8-9433	8736	FOOT; ENG, LH	000000	000000
8943388470	8-9433	8847	GENERATOR: 24V/20A	000000	000000
8943388471	8-9433	8847	GENERATOR: 24V/20A	000000	000080
8943388480	8-9433	8848	PUMP ASM	000000	000000
8943388650	8-9433	8865	RETAINER; ROTOR	000000	000000
8943388670	8-9433	8867	CONDENSER; GEN	000000	000001
8943388740	8-9433	8874	NIPPLE, MASTER V	000000	000001
8943388762	8-9433	8876	HOSE; WATER, TURBO RETURN	000025	000006
8943388781	8-9433	8878	GASKET; OIL COOLER TO C/B	000105	000228
8943388890	8-9433	8889	LAMP ASM; WARNI	000000	000000
8943388891	8-9433	8889	LAMP ASM; WARNI	000000	000000
8943389100			ROTOR ASSY.	000015	000000
8943389140			PLUG; REAR BODY	000000	000000
8943389201	8-9433	8920	PUMP ASM; FEED	000000	000000
8943389210	8-9433	8921	SEAL; VLV GUIDE	000000	000000
8943390420	8-9433	9042	PACKING	000004	000000

8943390680	8-9433	9068	HARNESS; METER	000000	000000
8943390690	8-9433	9069	METER BOARD	000000	000000
8943390691	8-9433	9069	METER BOARD	000000	000000
8943390700	8-9433	9070	PUMP ASM; INJ.	000000	000000
8943390710	8-9433	9071	PUMP ASM; INJ.	000000	000000
8943396370	8-9433	9637	RESISTANCE CONTROL	000000	000000
8943397120	8-9433	9712	SLEEVE	000000	000000
8943397680	8-9433	9768	GENERATOR ASM.;	000000	000000
8943397912	8-9433	9791	SLEEVE; GOV.	000000	000000
8943397913	8-9433	9791	SLEEVE; GOV.	000000	000000
8943398010	8-9433	9801	DISC; CLUTCH	000000	000000
8943398540	8-9433	9854	BEARING; TOP GE	000000	000000
8943398620	8-9433	9862	PIPE ASM; OIL VACUUM PUMP	000000	000000
8943398890	8-9433	9889	GOVERNOR ASM	000000	000000
8943398891	8-9433	9889	GOVERNOR ASM	000000	000000
8943398910	8-9433	9891	GOVERNOR ASM.	000000	000000
8943398911	8-9433	9891	GOVERNOR ASM.	000001	000000
8943398920	8-9433	9892	TIMER ASM; AUTO	000000	000000
8943398921	8-9433	9892	TIMER ASM; AUTO	000000	000000
8943398950	8-9433	9895	CRANKSHAFT ASM.; (TUFFT.)	000000	000000
8943398951	8-9433	9895	CRANKSHAFT ASM.; (TUFFT.)	000000	000000
8943399080	8-9433	9908	FOOT; ENGINE RH	000000	000001
8943399090	8-9433	9909	BRKT;ENG. FRT	000000	000000
8943399481	8-9433	9948	HOSE; FUEL	000000	000000
8943399482	8-9433	9948	HOSE; FUEL	000000	000000
8943399620	8-9433	9962	LEVER	000000	000000
8943399630	8-9433	9963	COVER ASM; GOV.	000000	000000
8943399640	8-9433	9964	COVER; GOV.	000000	000000
8943399650	8-9433	9965	LEVER; TENSION	000000	000000
8943399660	8-9433	9966	BRACKET;RETURN SPRING GOV	000000	000003
8943399712	8-9433	9971	SLEEVE	000000	000000
8943399770	8-9433	9977	LEVER ASM; GUID	000001	000000
8943399830	8-9433	9983	SHIM; INNER	000000	000000
8943399840	8-9433	9984	SHIM; INNER	000001	000000
8943399850	8-9433	9985	SHIM; INNER	000000	000000
8943399860	8-9433	9986	SHIM; INNER	000000	000000
8943399870	8-9433	9987	SHIM; INNER	000000	000000
8943399880	8-9433	9988	SHIM; INNER	000000	000000
8943399890	8-9433	9989	SHIM; INNER	000000	000000
8943399900	8-9433	9990	SHIM; INNER	000000	000000
8943399910	8-9433	9991	SHIM; INNER	000000	000000
8943399920	8-9433	9992	SHIM; INNER	000000	000000
8943399940	8-9433	9994	NOZZLE ASM; INJECTION	000000	000000
8943399941	8-9433	9994	NOZZLE ASM; INJECTION	000001	000000
8943399950	8-9433	9995	NOZZLE (UM6BD1MTC3)	000020	000000
8943400230	8-9434	0023	BEARING KIT;IDLER	000000	000000
8943400291	8-9434	0029	GOVERNOR ASM; INJ PU	000000	000000

8943401030	8-9434	0103	COVER ASM.;REAR	000000	000000
8943401040	8-9434	0104	RESISTER ASM.;	000000	000000
8943401310	8-9434	0131	LEVER; SHIFT,IN	000000	000000
8943401311	8-9434	0131	LEVER; SHIFT,IN	000000	000000
8943401312	8-9434	0131	LEVER; SHIFT,IN	000000	000003
8943401450	8-9434	0145	BOX; QUADRANT,T	000000	000000
8943401460	8-9434	0146	BOX; QUADRANT,T	000000	000000
8943401490	8-9434	0149	GEAR; REV IDLER	000000	000000
8943401920	8-9434	0192	NUT; CYL HEAD	000000	000133
8943401941	8-9434	0194	WASHER; THRUST,MAINS	000001	000000
8943402341	8-9434	0234	LABEL; TRANS	000000	000000
8943402342	8-9434	0234	LABEL; TRANS	000000	000000
8943402411	8-9434	0241	LABEL; TRANSMIS	000000	000000
8943402580	8-9434	0258	FILTER ASM.;OIL	000001	000000
8943402590	8-9434	0259	FILTER; OIL PARTIAL	000000	000000
8943402591	8-9434	0259	FILTER; OIL PARTIAL	000001	000000
8943402610	8-9434	0261	HOSE; RUBBER	000000	000000
8943402611	8-9434	0261	HOSE; RUBBER	000000	000000
8943402630	8-9434	0263	PACKING; FILTER	000000	000000
8943402990	8-9434	0299	CLUTCH ASM; PINION	000000	000000
8943403010	8-9434	0301	SWITCH ASM.	000002	000000
8943403050	8-9434	0305	SWITCH; ENGAGE	000003	000000
8943403170	8-9434	0317	SEAL;OIL TRFER.	000000	000010
8943403290	8-9434	0329	GOVERNOR ASM.	000000	000000
8943403311	8-9434	0331	PISTON; STD.	000000	000000
8943403900	8-9434	0390	HOSE; WATER RAD	000001	000000
8943403910	8-9434	0391	HOSE;WATER, TOP	000000	000002
8943404031	8-9434	0403	PIPE; INLET	000000	000000
8943404191			CABLE	000000	000000
8943404192			3ABLE	000000	000000
8943404430	8-9434	0443	BRACKET; CENTER	000000	000000
8943404440	8-9434	0444	BRACKET ASM.; REAR	000000	000000
8943404460	8-9434	0446	SEAL KIT	000000	000000
8943404660	8-9434	0466	GOVERNOR ASM.	000000	000000
8943404670	8-9434	0467	TIMER ASM.	000000	000000
8943404690	8-9434	0469	COVER	000000	000000
8943404700	8-9434	0470	HOLDER	000000	000000
8943404710	8-9434	0471	PIN**	000004	000000
8943404720	8-9434	0472	LEVER; SHIFT	000000	000000
8943404750	8-9434	0475	BRACKET; CENTER	000000	000000
8943404760	8-9434	0476	BEARING; BALL	000000	000000
8943404770	8-9434	0477	BEARING; BALL	000000	000000
8943404780	8-9434	0478	ARMATURE ASM.	000000	000000
8943404790	8-9434	0479	COIL; FIELD	000000	000000
8943404800	8-9434	0480	TERMINAL ASM.	000000	000000
8943404880	8-9434	0488	SWITCH; MAGNETIC	000000	000000
8943404890	8-9434	0489	HOLDER; BRUSH	000000	000000

8943404900	8-9434	0490	WASHER	000000	000000
8943404910	8-9434	0491	WASHER; INSULATE	000000	000000
8943404920	8-9434	0492	TUBE; INSULATE	000000	000000
8943404940	8-9434	0494	WASHER	000000	000000
8943404950	8-9434	0495	TUBE; INSULATE	000000	000000
8943404970	8-9434	0497	BRACKET; RR	000000	000000
8943404980	8-9434	0498	BRACKET ASM.	000000	000000
8943404990	8-9434	0499	BOLT*	000000	000000
8943405010	8-9434	0501	SEAL KIT	000000	000000
8943405060	8-9434	0506	BALL; THRUST WA	000000	000000
8943405970	8-9434	0597	BOLT; CRANK-PULLEY	000001	000000
8943406202	8-9434	0620	PISTON	000000	000000
8943406280	8-9434	0628	STUD; CONN	000000	000039
8943406680	8-9434	0668	GASKET; INLET MANIFOLD	000000	000000
8943406691	8-9434	0669	HOSE; RUBBER	000000	000001
8943406710	8-9434	0671	BEARING; NEEDLE	000000	000000
8943406970			ELEMENT; OIL FILTER	000000	000000
8943407020	8-9434	0702	COLLAR; IDLE PULLEY	000000	000006
8943407161	8-9434	0716	PIPE; WATER	000000	000005
8943407170	8-9434	0717	PLUG; OIL FILLER	000000	000000
8943407171	8-9434	0717	PLUG; OIL FILLER	000000	000010
8943407180	8-9434	0718	PLUG;OIL DRAIN	000000	000000
8943407181	8-9434	0718	PLUG;OIL DRAIN	000000	000002
8943408031	8-9434	0803	*INVALID*SP9/333	000000	000000
8943413080	8-9434	1308	PUMP ASM; INJ.	000000	000002
8943413620	8-9434	1362	HOSE; WATER,RAD OUTL	000002	000000
8943413740	8-9434	1374	BOLT; HOUSING	000000	000000
8943413741	8-9434	1374	BOLT; HOUSING	000000	000048
8943413750	8-9434	1375	BOLT; HOUSING	000000	000000
8943413760	8-9434	1376	BOLT; HOUSING	000000	000000
8943413761	8-9434	1376	BOLT; HOUSING	000004	000001
8943413950	8-9434	1395	PUMP ASM; OIL	000000	000000
8943413951	8-9434	1395	PUMP ASM; OIL	000000	000000
8943415310	8-9434	1531	HOUSING; FLYWHEEL	000001	000000
8943415550	8-9434	1555	SEDIMENTER; FUEL	000000	000000
8943415551	8-9434	1555	SEDIMENTER; FUEL	000012	000013
8943417180			CAM FEED PUMP	000000	000000
8943417181			CAM FEED PUMP	000000	000033
8943417190			GEAR; IDLE	000000	000000
8943417191			GEAR; IDLE	000000	000000
8943417200	8-9434	1720	SILENCER; M/VAC	000000	000000
8943418370			CLIP; WATER HOSE	000076	000000
8943418730	8-9434	1873	PULLEY; CRANKSHAFT	000000	000000
8943418740	8-9434	1874	PACKING; O-RING	000000	000000
8943418741	8-9434	1874	PACKING; O-RING	000000	000085
8943418770	8-9434	1877	PUMP ASM; INJ.	000000	000000
8943418771	8-9434	1877	PUMP ASM; INJ.	000000	000000

8943418780	8-9434	1878	HOUSING; FLYWHEEL	000000	000002
8943419050	8-9434	1905	SPRING; ROCKER ARM	000001	000000
8943419060	8-9434	1906	WASHER; ROCKER	000020	000000
8943419450	8-9434	1945	PIPE; OIL PUMP	000000	000000
8943420590	8-9434	2059	PAN ASM; OIL	000000	000000
8943421740	8-9434	2174	FILTER ASM; COOLER/FILTER	000000	000000
8943421750	8-9434	2175	PIPE; WTR/OIL COOLER	000000	000000
8943421751	8-9434	2175	PIPE; WTR/OIL COOLER	000000	000000
8943421762	8-9434	2176	PUMP ASM; INJ.	000000	000000
8943421850	8-9434	2185	PCV HOSE (L=202)	000000	000000
8943422930	8-9434	2293	SPACER; FAN TO PULLEY	000000	000000
8943423060	8-9434	2306	PIN**	000000	000000
8943423111	8-9434	2311	FLYWHEEL ASM.	000000	000000
8943423220	8-9434	2322	PUMP ASM; INJ.	000000	000000
8943423222	8-9434	2322	PUMP ASM; INJ.	000000	000000
8943423230	8-9434	2323	GOVERNOR ASM; I/PUMP	000000	000000
8943423850	8-9434	2385	GAUGE ASM; OIL	000000	000000
8943423851	8-9434	2385	GAUGE ASM; OIL	000000	000029
8943423870	8-9434	2387	HOSE; O/COOLER	000001	000000
8943423950	8-9434	2395	HOUSING; THERMOSTAT	000000	000000
8943424140	8-9434	2414	COCK; DRAIN,WAT	000000	000002
8943424161	8-9434	2416	PUMP ASM; INJ.	000000	000000
8943424181	8-9434	2418	GOVERNOR ASM.	000000	000000
8943424190	8-9434	2419	BRACKET; A/CLEANER	000000	000000
8943424200	8-9434	2420	HOSE; RUBBER	000000	000000
8943424990			FLYWHEEL	000000	000000
8943424994			FLYWHEEL	000000	000000
8943424995			FLYWHEEL	000000	000041
8943425740	8-9434	2574	JOINT; WATER PIPE	000073	000113
8943426180	8-9434	2618	FAN ASM; COOLING	000000	000000
8943426182	8-9434	2618	FAN ASM; COOLING	000000	000001
8943427130	8-9434	2713	STUD; AXLE CASE	000000	000027
8943427550			VALVE; COMPLETE	000000	000000
8943427620			VALVE ASM; SOLE	000000	000000
8943427770			CARBURATOR KIT/SEALS	000000	000000
8943427910			CARBURATOR GASKET	000000	000000
8943427930			CAP; FILLER, FUEL	000000	000000
8943429280	8-9434	2928	PAN ASM; OIL	000000	000000
8943429300	8-9434	2930	PAN ASM; OIL	000000	000000
8943429310	8-9434	2931	PAN ASM; OIL	000000	000000
8943429343	8-9434	2934	PUMP ASM; INJ.	000000	000000
8943429344	8-9434	2934	PUMP ASM; INJ.	000000	000000
8943429580	8-9434	2958	CLIP	000001	000010
8943430232	8-9434	3023	POWER; TAKE OFF ASM	000000	000000
8943430233	8-9434	3023	POWER TAKE OFF ASM; TRANS	000000	000000
8943430252	8-9434	3025	POWER TAKE OFF ASM;	000000	000000
8943430310	8-9434	3031	BRG;BALL,OUTPUT	000000	000000

8943430311	8-9434	3031	BRG;BALL,OUTPUT	000000	000006
8943430480	8-9434	3048	STUD; TURBOCHARGER TO EXH	000054	000076
8943430490	8-9434	3049	FLYWHEEL ASM	000000	000000
8943430491	8-9434	3049	FLYWHEEL ASM	000000	000000
8943430492	8-9434	3049	FLYWHEEL ASM	000000	000000
8943430530	8-9434	3053	FLYWHEEL ASM;	000000	000000
8943430531	8-9434	3053	FLYWHEEL ASM;	000000	000000
8943430532			FLYWHEEL ASM;	000016	000003
8943431170	8-9434	3117	FRONT SPRING ASM. (NPR)	000000	000000
8943431180	8-9434	3118	SPRING ASM. (NPR)	000000	000000
8943431810			SPRING ASM.	000000	000000
8943432050	8-9434	3205	SHAFT; ROCKER ARM	000000	000000
8943432111	8-9434	3211	PIPE; HTR	000000	000005
8943432130	8-9434	3213	ADAPTER; FLYWHEEL	000000	000000
8943432131	8-9434	3213	ADAPTER; FLYWHEEL	000000	000000
8943432160	8-9434	3216	NUT; OIL COOLER	000000	000000
8943432170	8-9434	3217	NUT COOLER FIX	000000	000000
8943432440	8-9434	3244	PIPE; INL, TURBO	000000	000000
8943432860	8-9434	3286	TACHOMETER	000000	000000
8943432880	8-9434	3288	CASE; CRANK	000000	000000
8943432890	8-9434	3289	PIPE ASM; OIL	000000	000000
8943432891	8-9434	3289	PIPE ASM; OIL	000000	000000
8943432892	8-9434	3289	PIPE ASM; OIL	000000	000007
8943432900	8-9434	3290	HEAD ASM; CYL.	000000	000001
8943432904	8-9434	3290	HEAD ASM; CYL.	000000	000000
8943432920	8-9434	3292	TURBOCHARGER	000000	000003
8943433060	8-9434	3306	RETAINING PIN	000000	000000
8943433100	8-9434	3310	SCREW	000000	000000
8943433400			SPRING; TIMER	000001	000000
8943433580			RETAINING PIN	000000	000000
8943433621			HOSE; T/C TO INLET	000000	000000
8943433622	8-9434	3362	HOSE; T/C TO INLET	000000	000000
8943434090	8-9434	3409	FLY WHEEL ASM.	000000	000000
8943434980	8-9434	3498	BUSH;CYL HD COVER	000000	000000
8943435120	8-9434	3512	COVER: INLET	000000	000000
8943438960	8-9434	3896	STUD; RET	000000	000000
8943439130	8-9434	3913	FLYWHEEL	000000	000000
8943439190			BOLT; MTG RUBBE	000000	000000
8943439270			HOUSING; FLYWHEEL	000000	000000
8943439271	8-9434	3927	HOUSING; FLYWHEEL	000000	000000
8943440260	8-9434	4026	PUMP ASM; INJ.	000000	000002
8943440280	8-9434	4028	GOVERNOR ASM.	000000	000000
8943444210	8-9434	4421	SPRING	000000	000000
8943444230	8-9434	4423	SHIM; T=0.60	000000	000000
8943444250	8-9434	4425	COVER ASM; GOV.	000000	000000
8943444270	8-9434	4427	SHIM*	000000	000000
8943444330	8-9434	4433	CAM, PLATE	000000	000000

8943444350	8-9434	4435	CAM.PLATE	000000	000000
8943444370	8-9434	4437	LEVER	000003	000000
8943444380	8-9434	4438	LEVER	000000	000000
8943444390	8-9434	4439	SPACER;NOZZLE	000000	000015
8943444620	8-9434	4462	CUP;SEALING,BLOCK RR.D=67	000000	000003
8943444661	8-9434	4466	PUMP ASM; INJ.	000000	000000
8943445400	8-9434	4540	BOLT; COVER,TRANSFER	000000	000000
8943445401	8-9434	4540	BOLT; COVER,TRANSFER	000011	000018
8943445660			PLATE; NAME	000000	000002
8943445910	8-9434	4591	BOLT;CASE	000029	000000
8943446260	8-9434	4626	SCREW; HEAD LAMP	000000	000000
8943447090	8-9434	4709	ANGLEICH KIT	000000	000000
8943449930	8-9434	4993	GOVERNOR ASM.	000000	000000
8943449990	8-9434	4999	FOOT; ENG, LH	000000	000000
8943450000	8-9434	5000	FOOT; ENG, RH	000000	000000
8943458490			HANDLE; WINDOW	000000	000000
8943485330			PANEL; DOOR (RH)	000000	000000
8943557481			MOLDING; FRT DO	000002	000000
8943557521			MOLDING; RR DOO	000000	000000
8943557561			MOLDING; C-POST	000000	000000
8943557721			MOULDING; SIDE	000001	000000
8943572480			BOLT;SEMS HINGE	000000	000000
8943574670			CYLINDER	000000	000000
8943587803			GLASS; SIDE WINDOW	000000	000000
8943587804			GLASS; SIDE WINDOW	000000	000000
8943589042			LAMP; RR COMB.	000000	000000
8943602042	8-9436	0204	OIL PUMP	000000	000000
8943602530	8-9436	0253	GOVERNOR ASM.	000000	000000
8943602540	8-9436	0254	ELEMENT; OIL FILTER	000000	004935
8943602550	8-9436	0255	CASE ASM; SEDIMENTER	000000	000003
8943603062	8-9436	0306	PUMP ASM; INJ.	000000	000000
8943604180	8-9436	0418	OIL FILTER	000000	000000
8943604181	8-9436	0418	OIL FILTER	000000	000005
8943604190	8-9436	0419	OIL FILTER	000000	000000
8943604191	8-9436	0419	OIL FILTER	000000	000000
8943604200	8-9436	0420	CARTRIDGE; FILTER OI	000000	000000
8943604260	8-9436	0426	CARTRIDGE KIT/OIL FILTER	000000	000000
8943604271	8-9436	0427	ELEMENT	000000	000000
8943604280	8-9436	0428	COOLER ASM; OIL	000000	000001
8943605590	8-9436	0559	HOUSING; FLYWHEEL	000000	000000
8943605600	8-9436	0560	HOUSING;FLYWHEE	000000	000000
8943605601	8-9436	0560	HOUSING; FLYWHEEL	000000	000000
8943607050	8-9436	0705	GOVERNOR	000000	000000
8943607061	8-9436	0706	PUMP ASM; INJ.	000000	000000
8943608310	8-9436	0831	NUT;HANGER TO H	000000	000000
8943616240	8-9436	1624	COVER;TIMING GEAR CASE	000000	000000
8943616241	8-9436	1624	COVER;TIMING GEAR CASE	000000	000000

8943616260	8-9436	1626	CASE; TIMING 2KA/B/C	000000	000000
8943616270	8-9436	1627	CASE; TIMING GEARS	000000	000000
8943616340	8-9436	1634	FILLER ASM; OIL	000000	000003
8943617190	8-9436	1719	REGULATOR ASM.; BRUSH	000000	000000
8943617200	8-9436	1720	BRUSH ASM.	000000	000000
8943617210	8-9436	1721	BRUSH SET	000000	000000
8943617220	8-9436	1722	REGULATOR ASM.; IC	000000	000000
8943617930	8-9436	1793	HOLDER ASM; NOZ	000000	000000
8943618841	8-9436	1884	BLOCK ASM; CYLINDER	000000	000001
8943618860	8-9436	1886	BLOCK ASM; CYLINDER	000000	000000
8943619130	8-9436	1913	STATOR ASM.	000000	000000
8943619140	8-9436	1914	STOPPER ASM.	000000	000000
8943619370	8-9436	1937	BRG;CRANKSHAFT	000000	000008
8943619470	8-9436	1947	CABLE ASM; E/STOP, L=535	000000	000000
8943619490	8-9436	1949	SAFETY RELAY	000000	000007
8943620470	8-9436	2047	STUD*	000000	000013
8943620860	8-9436	2086	PIPE ASM.; OIL,CRANK CASE	000000	000000
8943621050	8-9436	2105	WASHER; ROCKER ARM SHAFT	000000	000088
8943621540			RR PAD KIT	000000	000000
8943621821	8-9436	2182	FILTER ASM: FUEL	000000	000000
8943621822	8-9436	2182	FILTER ASM: FUEL	000000	000000
8943622010	8-9436	2201	PAN ASM; OIL	000000	000000
8943622020	8-9436	2202	GASKET, OUTLET	000000	000000
8943622611	8-9436	2261	GOVERNOR ASM.	000000	000000
8943623050	8-9436	2305	GAUGE; OIL LEVER	000009	000000
8943623080	8-9436	2308	FLYWHEEL ASM.	000000	000000
8943624562			PUMP ASM; OIL	000000	000000
8943624563			PUMP ASM; OIL	000000	000020
8943625070			SENSOR; THERMO	000000	000000
8943625180	8-9436	2518	CLIP; RUBBER HOSE, AIR BR	000000	000000
8943625401	8-9436	2540	FLYWHEEL ASM.	000000	000000
8943625971	8-9436	2597	PLATE; RR., C/BLOCK	000000	000000
8943626380	8-9436	2638	H O S E	000000	000000
8943626390	8-9436	2639	HOSE*	000002	000000
8943626720	8-9436	2672	GASKET;OIL PIPE TURBCHRGR	000000	000000
8943626721	8-9436	2672	GASKET;OIL PIPE TURBCHRGR	000000	000002
8943626940	8-9436	2694	VALVE ASM; DELIVERY	000000	000000
8943626960	8-9436	2696	SHIM; T=0.90	000000	000000
8943626970	8-9436	2697	PLATE; CAM	000000	000000
8943626980	8-9436	2698	BOOST	000000	000000
8943626990	8-9436	2699	SPRING	000000	000000
8943627000	8-9436	2700	FLYWEIGHT ASM.	000000	000000
8943627010	8-9436	2701	FLYWEIGHT	000000	000000
8943627020	8-9436	2702	SPRING; TIMER	000000	000000
8943628230	8-9436	2823	SEAL; SLEEVE, RR	000001	000000
8943628790	8-9436	2879	HOSE; RUBBER	000001	000000
8943629232	8-9436	2923	PUMP ASM; OIL	000000	000000

8943629233	8-9436	2923	PUMP ASM; OIL	000000	000004
8943629740	8-9436	2974	CAP; RUBBER,ACL	000000	000000
8943629890			CONTROL LEVER	000000	000000
8943630051	8-9436	3005	PUMP ASM; SEA WATER	000000	000001
8943630060	8-9436	3006	SHAFT; WATER PUMP, SEA	000001	000002
8943630450	8-9436	3045	NUT;HANGER TO H	000035	000000
8943630540	8-9436	3054	RING; BLOCK,LOW & 2ND	000000	000000
8943630541	8-9436	3054	RING; BLOCK,LOW & 2ND	000011	000000
8943630550			RING; OUTSIDE,SYN	000000	000000
8943630551			RING; OUTSIDE,SYN	000001	000000
8943630560	8-9436	3056	RING; INSIDE,SYN	000000	000000
8943630570			GEAR; 1ST,MAINSHAFT	000000	000001
8943630591	8-9436	3059	SYNCHRONIZER; LOW & 2ND	000000	000001
8943630620	8-9436	3062	INSERT; SYN,LOW & 2ND	000000	000000
8943630621	8-9436	3062	INSERT; SYN,LOW & 2ND	000000	000008
8943630711	8-9436	3071	MANIFOLD; EXHAUST	000000	000000
8943630891	8-9436	3089	INLET DUCT	000000	000000
8943630970	8-9436	3097	PLUG;DRAIN, AXLE CASE	000000	000000
8943631001	8-9436	3100	METAL; CM/SHF	000000	000000
8943631670	8-9436	3167	PIPE ASM; OIL FLOW	000000	000000
8943632690	8-9436	3269	PACKING;COVER	000004	000000
8943632700	8-9436	3270	GSKT;INL,MANIFO	000000	000000
8943634280	8-9436	3428	STARTER	000000	000000
8943634460	8-9436	3446	O-RING;OIL PUMP	000000	000026
8943635400	8-9436	3540	PULLEY; IDLE	000000	000000
8943640980	8-9436	4098	MANIFOLD: INTAKE	000000	000000
8943641510	8-9436	4151	VALVE ASM.; CHE	000000	000014
8943641710	8-9436	4171	PAN ASM; OIL	000000	000000
8943644860	8-9436	4486	LEVER; SWIVEL	000002	000000
8943645290	8-9436	4529	CLEANER ASM; AIR	000000	000000
8943645300	8-9436	4530	COUPLING	000000	000000
8943648640	8-9436	4864	PIPE ASM; OIL	000000	000007
8943648650	8-9436	4865	PIPE ASM; OIL	000000	000000
8943648660	8-9436	4866	AIR-DUCT; TURBO-INLET MAN	000000	000000
8943648661	8-9436	4866	AIR-DUCT; TURBO-INLET MAN	000000	000004
8943648691	8-9436	4869	HOUSING; F/W	000000	000000
8943648692	8-9436	4869	HOUSING; F/W	000000	000000
8943649500	8-9436	4950	PUMP ASM; INJ.	000000	000000
8943649520	8-9436	4952	GOVERNOR ASM; INJ. PUMP	000000	000001
8943649650			VENTILATOR ASM	000000	000079
8943650310	8-9436	5031	COVER ASM;CYL	000000	000000
8943650311	8-9436	5031	COVER ASM;CYL	000000	000000
8943650320	8-9436	5032	COVER; CYL. HEAD	000000	000000
8943650330	8-9436	5033	COVER;HD. COVER, OUTER	000000	000000
8943651280	8-9436	5128	BAND; AIR CLEANER 4JB1	000000	000002
8943651290	8-9436	5129	BOLT;AIR DEFLECTOR	000000	000000
8943651630	8-9436	5163	PUMP ASM; INJ.	000000	000000

8943653810	8-9436	5381	CAP; WATER PIPE	000003	000000
8943654361			PAN ASM; OIL	000000	000002
8943654362			PAN ASM; OIL	000000	000000
8943654770	8-9436	5477	ARMATURE; START	000001	000000
8943654900	8-9436	5490	COOLER ASM; OIL	000000	000000
8943654910	8-9436	5491	FILTER SUB ASM; O/COOLER	000000	000000
8943655832			SILENCER ASM;E	000000	000001
8943656700	8-9436	5670	PACKING; F, PLATE	000006	000002
8943656740	8-9436	5674	GASKET;OUTLET	000000	000000
8943656741	8-9436	5674	GASKET;OUTLET	000000	000000
8943656742	8-9436	5674	GASKET;OUTLET	000249	000373
8943656750	8-9436	5675	GASKET; THERMOSTAT	000000	000000
8943656751	8-9436	5675	GASKET; THERMOSTAT	000000	000000
8943656760	8-9436	5676	GASKET; SUCTION PIPE	000000	000000
8943656762	8-9436	5676	PACKING WATER; INLET PIPE	000000	000000
8943656763	8-9436	5676	PACKING WATER; INLET PIPE	000000	000000
8943656790	8-9436	5679	GASKET; INL. PIPE	000000	000000
8943656810	8-9436	5681	GASKET;HOUSING	000000	000000
8943656900	8-9436	5690	PACKING; F/PL.-CYL. BLOCK	000000	000000
8943656901	8-9436	5690	PACKING; F/PL.-CYL. BLOCK	000000	000000
8943657450	8-9436	5745	CRANKSHAFT ASM.; (TUFFT.)	000000	000000
8943657720	8-9436	5772	SHAFT; CAM, INJ. PUMP	000000	000000
8943657730	8-9436	5773	CAMSHAFT; INJ.	000000	000002
8943657740	8-9436	5774	CAMSHAFT; INJ PUMP 3KR1	000000	000000
8943658100	8-9436	5810	RING; BLOCK, 2ND	000000	000000
8943658700	8-9436	5870	FILTER ASM;OIL	000000	000000
8943658840	8-9436	5884	PUMP ASM; INJ.	000000	000000
8943658841	8-9436	5884	PUMP ASM; INJ.	000000	000001
8943658850	8-9436	5885	PUMP ASM; INJ.	000000	000001
8943658860	8-9436	5886	PUMP ASM; INJ.	000000	000000
8943659250	8-9436	5925	TACHOMETER ASM.	000000	000000
8943659251	8-9436	5925	TACHOMETER ASM.	000000	000000
8943659260	8-9436	5926	TACHOMETER	000000	000000
8943659261	8-9436	5926	TACHOMETER	000000	000000
8943660210	8-9436	6021	MANIFOLD; EXHAUST	000000	000003
8943660330	8-9436	6033	WATER PIPE; TURBO FEED	000000	000000
8943660660	8-9436	6066	BOLT*	000000	000000
8943661440	8-9436	6144	PULLEY; CRANKSHAFT	000000	000002
8943661520	8-9436	6152	PIPE ASM.; OIL	000000	000000
8943661630	8-9436	6163	TRANSMISSION ASM	000000	000000
8943662410	8-9436	6241	OIL PUMP ASM	000000	000003
8943662420	8-9436	6242	PUMP ASM; OIL	000000	000000
8943662470	8-9436	6247	MANIFOLD;EXH	000025	000085
8943662510	8-9436	6251	HOSE;RUBBER, TUR	000000	000002
8943662530	8-9436	6253	PLATE;FAN CLU	000000	000000
8943662620	8-9436	6262	COVER; TAPPET CHAMBER	000000	000000
8943662770	8-9436	6277	TAPPET;VALVE	000000	000000

8943662771	8-9436	6277	TAPPET;VALVE	000000	000000
8943662772	8-9436	6277	TAPPET;VALVE	000000	000067
8943663060	8-9436	6306	PAN ASM; OIL	000000	000000
8943663070	8-9436	6307	PAN ASM; OIL	000000	000000
8943663071	8-9436	6307	PAN ASM; OIL	000000	000000
8943663250	8-9436	6325	GOVERNOR ASM.	000000	000000
8943663260	8-9436	6326	GOVERNOR ASM	000000	000000
8943663280	8-9436	6328	COUPLING	000000	000000
8943663320	8-9436	6332	HOLDER ASM; NOZZLE	000000	000000
8943665220	8-9436	6522	CONTROLLER; ENG 12V	000000	000003
8943665230	8-9436	6523	CONTROLLER; ENG.	000000	000000
8943665241	8-9436	6524	CONTROLLER; ENG 24V	000000	000002
8943665251	8-9436	6525	STARTER; NIKKO	000000	000000
8943666830	8-9436	6683	PINION ASM	000000	000001
8943667580	8-9436	6758	BRACKET; BRK.	000000	000000
8943668250	8-9436	6825	FAN ASM; COOLING	000000	000000
8943668260	8-9436	6826	PLUNGER ASM.	000000	000000
8943668410	8-9436	6841	WASHER; PL,A/TR CONT TABLE	000000	000000
8943668480	8-9436	6848	PIPE; WATER	000000	000000
8943671010	8-9436	7101	MAIN SPRING	000000	000000
8943671020	8-9436	7102	TOOL BAG	000000	000000
8943672922	8-9436	7292	FILTER ASM; FUEL	000000	000000
8943672923	8-9436	7292	FILTER ASM; FUEL	000000	000178
8943672932	8-9436	7293	BODY; F/FILTER ASM.	000000	000000
8943672933	8-9436	7293	BODY; F/FILTER ASM.	000000	000000
8943672934	8-9436	7293	BODY; F/FILTER ASM.	000000	000004
8943672940	8-9436	7294	SENSOR ASM.	000000	000069
8943673090	8-9436	7309	SPACER; ALT TO A/PLATE	000000	000000
8943673100	8-9436	7310	BOLT;RR COVER	000000	000000
8943673101	8-9436	7310	BOLT;RR COVER	000000	000004
8943673560	8-9436	7356	BRACKET;	000000	000000
8943673630	8-9436	7363	FAN ASM; COOLING	000000	000000
8943673631	8-9436	7363	FAN ASM; COOLING	000001	000000
8943673680	8-9436	7368	GASKET;TAPPET	000000	000000
8943673681	8-9436	7368	GASKET;TAPPET	000036	000032
8943674360	8-9436	7436	BOLT;HEAD TO BLOCK	000084	000056
8943674370	8-9436	7437	BOLT;HEAD TO B	000000	000000
8943674380	8-9436	7438	BOLT;HEAD TO BLOCK	000000	000000
8943674400	8-9436	7440	STAY: FUEL	000000	000000
8943674440	8-9436	7444	SCREEN; EYE BOLT	000000	000000
8943675140	8-9436	7514	FLYWHEEL ASM.	000000	000000
8943675161	8-9436	7516	TURBOCHARGER ASM.	000000	000006
8943675170	8-9436	7517	PUMP ASM; INJ.	000000	000000
8943675180	8-9436	7518	GOVERNOR ASM	000000	000000
8943675300	8-9436	7530	BOLT; COVER TO C/BL	000000	000000
8943675301	8-9436	7530	BOLT; COVER TO C/BL	000000	000050
8943675310	8-9436	7531	BOLT;COVER	000000	000000

8943675311	8-9436	7531	BOLT;COVER	000000	000000
8943675660	8-9436	7566	STARTER ASM	000000	000002
8943676390	8-9436	7639	BOLT;EXH,MANIF	000271	000845
8943676721			BOLT;INNER HEX	000000	000000
8943677260	8-9436	7726	CLIP; HTR HOSE	000000	000000
8943678310	8-9436	7831	PUMP ASM; WATER	000000	000000
8943678570			DRAG LINK	000000	000000
8943679430	8-9436	7943	CLIP; WATER HOSE	000000	000000
8943679440	8-9436	7944	CLIP;HOSE COMMO	000000	000000
8943679560	8-9436	7956	HOSE*	000004	000000
8943679570	8-9436	7957	PLUG ASM.	000000	000000
8943679590			SEAL; OIL, RR HUB	000000	000068
8943679611			SEAL; OIL, RR HUB	000000	000000
8943679780	8-9436	7978	PACKING; OIL PIPE, TURBO	000000	000000
8943679890	8-9436	7989	PUMP ASM; INJ.	000000	000000
8943679900	8-9436	7990	GOVERNOR ASM	000000	000000
8943679920	8-9436	7992	FILLER; OIL	000000	000000
8943682340	8-9436	8234	COUPLING; INJ. PUMP	000002	000000
8943682491	8-9436	8249	PIPE; FUEL NOZZLE	000000	000000
8943682492	8-9436	8249	PIPE; FUEL NOZZLE	000000	000001
8943682520	8-9436	8252	CONNECTOR;GLOW PLUG	000000	000000
8943682850	8-9436	8285	PLUNGER ASM.	000000	000000
8943682981	8-9436	8298	COLLAR	000000	000000
8943683060	8-9436	8306	CONNECTOR; FUEL	000000	000000
8943685010	8-9436	8501	NUT; COOLER	000000	000008
8943685630			BOLT; EGR PIPE	000000	000000
8943685631	8-9436	8563	BOLT; EGR PIPE	000000	000000
8943685870	8-9436	8587	PIPE; W/OUTLET	000000	000000
8943685890	8-9436	8589	PIPE; W/OUTLET	000000	000000
8943687120	8-9436	8712	BEARING;CONNECTING ROD	000000	000000
8943687131	8-9436	8713	BRACKET; A/CLEANER	000000	000000
8943687270	8-9436	8727	CARTRIDGE, OIL	000000	000000
8943687280	8-9436	8728	CARTRIDGE, OIL	000000	000000
8943687890	8-9436	8789	FAN ASM.	000000	000000
8943688770	8-9436	8877	PUMP ASM; OIL	000000	000000
8943688780	8-9436	8878	COVER; OIL PUMP	000000	000000
8943688790	8-9436	8879	COOLER ASM; OIL	000000	000000
8943688940	8-9436	8894	HOSE*	000000	000000
8943688950	8-9436	8895	HOSE*	000000	000000
8943689340	8-9436	8934	SPRING; DELIVERY	000000	000000
8943689350	8-9436	8935	VALVE; DELIVERY	000002	000000
8943689370			LAMP UNIT; SIDE	000000	000004
8943689380			LAMP UNIT; SIDE	000000	000004
8943689510			FILTER ASM; OIL	000000	000000
8943689630	8-9436	8963	BREATHER	000000	000000
8943689631	8-9436	8963	BREATHER; RR. COVER	000000	000000
8943689632	8-9436	8963	BREATHER; RR CO	000000	000000

8943690210	8-9436	9021	GASKET; EXHAUST PIPE	000000	000087
8943690220	8-9436	9022	PACKING; TURBO OIL DRAIN	000000	000088
8943690230	8-9436	9023	GASKET; TURBO EXHAUST MAN	000000	000066
8943690290	8-9436	9029	GASKET; THERMOS	000005	000000
8943690300	8-9436	9030	GASKET; MANIFOLD	000002	000000
8943690310	8-9436	9031	PACKING; G/CASE COVER	000000	000000
8943690311	8-9436	9031	PACKING; G/CASE COVER	000000	000000
8943690320	8-9436	9032	PACKING; OIL PAN	000000	000000
8943690321	8-9436	9032	PACKING; OIL PAN	000000	000001
8943690330	8-9436	9033	PACKING; COVER	000003	000000
8943690331	8-9436	9033	PACKING; COVER	000000	000000
8943690340	8-9436	9034	PACKING; COVER	000000	000000
8943691483	8-9436	9148	FILTER ASM; FUEL	000000	000000
8943691730	8-9436	9173	PIECE; DIST, REL	000000	000000
8943691990	8-9436	9199	ELEMENT; FUEL FI	000000	000000
8943691993	8-9436	9199	ELEMENT; FUEL FI	000000	000000
8943692810	8-9436	9281	PISTON	000000	000000
8943692990	8-9436	9299	ELEMENT; FUEL FI	000000	000000
8943692991	8-9436	9299	ELEMENT; FUEL FI	000000	000000
8943692992	8-9436	9299	ELEMENT; FUEL FI	000000	000000
8943692993	8-9436	9299	ELEMENT; FUEL FILTER	000000	000000
8943693400	8-9436	9340	BUSHING; IDLE GEAR	000000	000000
8943693730	8-9436	9373	GAUGE ASM; OIL LEVEL	000022	000000
8943694331	8-9436	9433	TRANSMISSION; AUTO, W/TORQ	000000	000000
8943694350	8-9436	9435	REGISTER; DROPP	000000	000000
8943694521	8-9436	9452	BRACKET; SOLENOID	000000	000000
8943695190	8-9436	9519	GASKET; RETAINER TO	000001	000000
8943695450	8-9436	9545	BUSHING; GEAR	000000	000006
8943696420	8-9436	9642	GEAR; IDLE	000000	000000
8943696470	8-9436	9647	BRACKET "A" OIL FILLER	000001	000000
8943696480	8-9436	9648	BRACKET; SOLENOID	000000	000000
8943697260	8-9436	9726	CLAMP/CLIP; HOSE WATER	000000	000000
8943698932	8-9436	9893	FLYWHEEL ASM.	000000	000000
8943699050	8-9436	9905	RING; SNAP PISTON PIN	000000	000009
8943699070	8-9436	9907	BOLT*	000000	000000
8943699237			ENGINE ASM; PARTIAL	000000	000000
8943701050	8-9437	0105	WATER PUMP ASM.	000000	000001
8943701070	8-9437	0107	PIPE: INJ. #1	000000	000000
8943701080	8-9437	0108	PIPE: INJ. #2	000000	000000
8943701081	8-9437	0108	PIPE: INJ. #2	000000	000000
8943701090	8-9437	0109	PIPE: INJ. #3	000000	000000
8943701091	8-9437	0109	PIPE: INJ. #3	000000	000000
8943701100	8-9437	0110	PIPE: INJ. #4	000000	000000
8943703390	8-9437	0339	NUT; CLIP FIX	000044	000043
8943703660	8-9437	0366	ROD; TRUCK, CTR.	000000	000000
8943703740			PLUNGER ASM.	000000	000000
8943704500	8-9437	0450	TANK ASM; SURGE	000000	000000

8943704520			TANK;RESERVOIR	000000	000000
8943704800	8-9437	0480	GASKET; OUTLET PIPE TO HS	000144	000359
8943704990	8-9437	0499	ROD; TRANSFER SELECT	000000	000000
8943704991	8-9437	0499	ROD; TRANSFER SELECT	000000	000000
8943704992	8-9437	0499	ROD; TRANSFER SELECT	000000	000000
8943705220	8-9437	0522	CAP; SURGE TANK	000000	000008
8943705230	8-9437	0523	CAP;SURGE TANK	000000	000001
8943705830	8-9437	0583	STARTER; NIKKO	000000	000000
8943705940	8-9437	0594	O-RING	000000	000000
8943706340	8-9437	0634	BOLT;CVR TO MAN	000000	000000
8943706360	8-9437	0636	DOWEL; BEARING, CAP	000000	000000
8943706370	8-9437	0637	SEAL; OIL, CR/SHF,RR	000000	000000
8943706560	8-9437	0656	SWITCH; SAFETY RELAY	000000	000000
8943706561	8-9437	0656	SWITCH; SAFETY RELAY	000000	000000
8943706610	8-9437	0661	GSKT;PUMP TO C	000079	000423
8943706630	8-9437	0663	GSKT;OIL PIPE	000253	000054
8943706640	8-9437	0664	PACKING;RETAINÉ	000000	000000
8943706641	8-9437	0664	PACKING;RETAINÉ	000011	000024
8943706660	8-9437	0666	GASKET;OIL PAN	000000	000000
8943706680	8-9437	0668	PACKING; COVER TO BODY	000000	000042
8943706690	8-9437	0669	GASKET;OIL COOL	000000	000000
8943706700	8-9437	0670	GSKT;OIL FILTER	000175	000000
8943706710	8-9437	0671	GASKET;TIMING	000000	000000
8943706711	8-9437	0671	GASKET;TIMING	000020	000001
8943706720	8-9437	0672	GASKET;TIMING	000000	000000
8943706730	8-9437	0673	PACKING;THERMO	000000	000000
8943706740	8-9437	0674	PACKING; THERMO-HSG	000000	000000
8943706741	8-9437	0674	PACKING; THERMO-HSG	000000	000008
8943706750	8-9437	0675	GSKT;INJ.PUMP	000000	000000
8943706751	8-9437	0675	GSKT;INJ.PUMP	000072	000226
8943706760	8-9437	0676	PACKING;INLET	000000	000023
8943706770	8-9437	0677	GASKET; INL PIP	000000	000000
8943706780	8-9437	0678	GASKET; INTAKE	000000	000000
8943706800	8-9437	0680	GASKET; COVER	000000	000000
8943706880	8-9437	0688	COLLAR; THRUST, IDLER GEAR	000000	000000
8943708280	8-9437	0828	GASKET;OIL COO-	000000	000007
8943708350	8-9437	0835	PACKING;RET-BODY	000000	000015
8943708360	8-9437	0836	GASKET;OIL PAN	000000	000000
8943708370	8-9437	0837	PACKING; COVER	000000	000000
8943708371	8-9437	0837	PACKING; COVER	000000	000000
8943708380	8-9437	0838	PACKING; SPACER	000000	000000
8943708381	8-9437	0838	PACKING; SPACER	000000	000019
8943708390	8-9437	0839	GASKET; COVER	000000	000000
8943708391	8-9437	0839	GASKET; COVER	000001	000000
8943708400	8-9437	0840	PACKING; COVER	000000	000000
8943708401	8-9437	0840	PACKING; COVER	000000	000000
8943709421	8-9437	0942	CLIP; ATF HOSE	000000	000000

8943710520	8-9437	1052	BRACKET	000002	000000
8943715560	8-9437	1556	CONNECTOR	000012	000000
8943716871	8-9437	1687	PARTIAL ENGINE	000000	000002
8943717120	8-9437	1712	COVER; GENERATOR	000000	000000
8943717151	8-9437	1715	SPACER;BRKT TO BODY	000013	000000
8943718530	8-9437	1853	COVER;GEAR	000000	000000
8943718531	8-9437	1853	COVER;GEAR	000000	000000
8943718532	8-9437	1853	COVER;GEAR	000000	000006
8943719930	8-9437	1993	BOLT; FLYWHEEL	000000	000000
8943720531	8-9437	2053	FLY WHEEL	000000	000000
8943720532	8-9437	2053	FLYWHEEL ASM	000000	000000
8943720533	8-9437	2053	FLYWHEEL ASM	000000	000000
8943720534	8-9437	2053	FLYWHEEL ASM	000001	000005
8943720551	8-9437	2055	FLEX PLATE	000000	000000
8943720552	8-9437	2055	FLEX PLATE	000000	000000
8943720661	8-9437	2066	PLATE; ADJ FAN	000000	000000
8943720680	8-9437	2068	WASHER;FLYWHEEL	000000	000002
8943721190	8-9437	2119	PUMP ASM; WATER	000000	000000
8943721191	8-9437	2119	PUMP ASM; WATER	000000	000000
8943721931	8-9437	2193	METAL KIT; CONN	000000	000000
8943721950	8-9437	2195	HOLDER ASM; NOZZLE	000000	000000
8943721960	8-9437	2196	PIN: PISTON	000000	000003
8943722211	8-9437	2221	BOLT; IDLE GEAR	000000	000100
8943723990			LAMP ASM; RR	000000	000001
8943724930			SCREW SET, CARB	000000	000000
8943724990			PLUG; L=5.2	000000	000000
8943725000	8-9437	2500	PLUG; L=5.3	000000	000000
8943725010	8-9437	2501	PLUG; L=5.4	000000	000000
8943725020	8-9437	2502	PLUG; L=5.5	000000	000000
8943725110	8-9437	2511	PLATE; CAM GOV	000000	000000
8943725180	8-9437	2518	SHIM; T=0.25	000000	000000
8943726250	8-9437	2625	BOLT;FLYWHEEL	000000	000000
8943727660	8-9437	2766	ROD;SHIFT,LOW	000000	000000
8943729360	8-9437	2936	SHIELD; HEAT	000000	000000
8943729400	8-9437	2940	CLIP	000000	000000
8943731532			JOURNAL ASM	000000	000000
8943732092	8-9437	3209	PUMP ASM; INJ.	000000	000000
8943732463	8-9437	3246	PIPE; PCV,FLYWHEEL HSG	000000	000441
8943732470	8-9437	3247	CAP; RUBBER	000000	000006
8943737650	8-9437	3765	SEAL;OIL	000094	000319
8943738640	8-9437	3864	PLTE;DETENT SPR	000000	000005
8943738641	8-9437	3864	PLATE; DETENT,SPR	000000	000000
8943745860	8-9437	4586	PIPE ASM; INJ. NO.1	000000	000001
8943745870	8-9437	4587	PIPE ASM; INJECTION NO. 2	000001	000000
8943745880	8-9437	4588	PIPE ASM: INJ #3	000001	000000
8943745890	8-9437	4589	PIPE ASM; INJ. #4	000000	000001
8943745910	8-9437	4591	PISTON	000000	000000

8943749020	8-9437	4902	PIPE ASM; INJECTION NO. 1	000000	000006
8943750740	8-9437	5074	FLYWHEEL ASM.	000000	000000
8943750750	8-9437	5075	FLYWHEEL ASM.	000000	000000
8943751100	8-9437	5110	NUT; HANGER/STAY	000000	000000
8943751610	8-9437	5161	CRANKSHAFT ASM.; (TUFTT.)	000000	000001
8943751661			HOSE; RADIATOR UPPER	000000	000000
8943751690			HOSE; RADIATOR LOWER	000000	000000
8943751951	8-9437	5195	NOZZLE ASM: INJ	000000	000003
8943751980	8-9437	5198	GASKET: CYL HEAD	000000	000002
8943755410	8-9437	5541	STUD; O/COOLER	000000	000000
8943755520	8-9437	5552	COVER; PLATE	000000	000000
8943755530	8-9437	5553	PACKING; COVER	000000	000000
8943761490	8-9437	6149	PLATE	000000	000000
8943761830	8-9437	6183	BEARING; HUB IN	000002	000000
8943761860	8-9437	6186	PULLEY; CRANKSHAFT	000000	000000
8943761861	8-9437	6186	PULLEY; CRANKSHAFT	000000	000000
8943761862	8-9437	6186	PULLEY; CRANKSHAFT	000000	000000
8943761863	8-9437	6186	PULLEY; CRANKSHAFT	000000	000000
8943763730			JOURNAL ASM	000000	000000
8943763740			PUMP ASM; WATER	000000	000107
8943763750	8-9437	6375	PUMP ASM; WATER	000003	000001
8943763780	8-9437	6378	PUMP ASM; WATER W/GASKET	000000	000000
8943763781	8-9437	6378	PUMP ASM; WATER W/GASKET	000000	000056
8943768300	8-9437	6830	WATER PUMP	000000	000000
8943768310	8-9437	6831	PUMP KIT; WATER, W/GSKT	000000	000000
8943768320	8-9437	6832	WATER PUMP	000002	000000
8943768330	8-9437	6833	PUMP ASM; WATER	000000	000001
8943768350	8-9437	6835	PUMP ASM; WATER	000000	000000
8943768360	8-9437	6836	PUMP ASM; WATER	000000	000007
8943768370	8-9437	6837	KIT; WATER PUMP	000000	000000
8943768380	8-9437	6838	WATER PUMP	000000	000007
8943768430	8-9437	6843	PUMP ASM; WATER W/PACKING	000000	000000
8943768431	8-9437	6843	PUMP ASM; WATER W/PACKING	000000	000000
8943768432	8-9437	6843	PUMP ASM; WATER W/PACKING	000000	000327
8943768490			WATER PUMP	000000	000000
8943768510			WATER PUMP KIT	000000	000000
8943768530	8-9437	6853	W/PUMP, NEW, KIT	000000	000000
8943768540	8-9437	6854	PUMP ASM, WATER	000000	000000
8943768550	8-9437	6855	PUMP ASM.	000000	000000
8943768551	8-9437	6855	PUMP ASM.	000000	000001
8943768580	8-9437	6858	PUMP ASM, WATER	000000	000001
8943768581	8-9437	6858	PUMP ASM, WATER	000000	000000
8943768591	8-9437	6859	KIT; WATER PUMP	000000	000004
8943768630	8-9437	6863	PUMP ASM; WATER W/PACKING	000000	000008
8943768650	8-9437	6865	PUMP ASM; WATER	000000	000000
8943768651	8-9437	6865	PUMP ASM; WATER	000000	000002
8943771540	8-9437	7154	PLUNGER ASM.	000015	000000

8943772380	8-9437	7238	NUT;LINK,ROD	000060	000000
8943772390	8-9437	7239	COVER,DUST,RR	000000	000000
8943772391	8-9437	7239	COVER;DUST,RR CVR,STARTER	000000	000000
8943772400	8-9437	7240	BEARING;ARMATURE,STARTER	000000	000000
8943772410	8-9437	7241	BEARING;ARMATURE,STARTER	000009	000011
8943772430	8-9437	7243	BOLT;SW STARTER	000261	000005
8943772440	8-9437	7244	SPRING;BRUSH HOLDER STRTR	000009	000000
8943772450	8-9437	7245	SPRING;CMPR PINION STARTR	000020	000000
8943772460	8-9437	7246	RETAINER;PINION,STARTER	000025	000000
8943772490	8-9437	7249	HOLDER;BRUSH STARTER	000000	000002
8943772530	8-9437	7253	ARMATURE;STARTER	000001	000002
8943772540	8-9437	7254	YOKE;STARTER	000000	000000
8943772580	8-9437	7258	HOLDER;BRUSH STARTER	000001	000000
8943772590	8-9437	7259	ARMATURE;STARTER	000000	000000
8943772600	8-9437	7260	YOKE ASM;STARTER	000000	000000
8943772632	8-9437	7263	MANIFOLD;EXH.	000000	000000
8943772633	8-9437	7263	MANIFOLD;EXH.	000000	000004
8943773510	8-9437	7351	STARTER;HITACHI	000001	000000
8943773550	8-9437	7355	REPAIR KIT;WATER PUMP	000000	000000
8943773670	8-9437	7367	PIPE ASM;OIL-GEAR CASE	000000	000000
8943773680	8-9437	7368	CAP ASM;OIL	000004	000000
8943773700	8-9437	7370	BRACKET;GENERATOR	000001	000000
8943774190	8-9437	7419	BOLT;T/GATE LINK,RR BODY	000000	000000
8943774270	8-9437	7427	BOLT;STRIKER	000000	000000
8943774330	8-9437	7433	GEAR;REV,COUNTER	000001	000002
8943774340	8-9437	7434	GEAR;5TH,COUNTER	000000	000000
8943774350	8-9437	7435	GEAR;REV IDLER	000000	000002
8943774351	8-9437	7435	GEAR;REV IDLER	000000	000000
8943774372	8-9437	7437	SHAFT,TRANSFER OUTPUT	000000	000000
8943774373	8-9437	7437	SHAFT,TRANSFER OUTPUT	000001	000001
8943774374	8-9437	7437	SHAFT,TRANSFER OUTPUT	000000	000000
8943774375	8-9437	7437	SHAFT,TRANSFER OUTPUT	000000	000000
8943775092			MOUNTING;STRUT	000000	000000
8943775391	8-9437	7539	OIL PUMP ASM	000000	000000
8943775721	8-9437	7572	STRAINER ASM.;	000000	000000
8943775761	8-9437	7576	BOARD ASM;METER	000000	000000
8943775762	8-9437	7576	BOARD ASM;METER	000000	000000
8943775763	8-9437	7576	BOARD ASM;METER	000000	000000
8943777840	8-9437	7784	BOLT;CONNROD	000000	000000
8943777841	8-9437	7784	BOLT;CONNROD	000000	000000
8943777850	8-9437	7785	NUT;CONN ROD	000000	000008
8943777860	8-9437	7786	SHAFT;WATER PUMP	000000	000000
8943784010	8-9437	8401	BRK ASM;PARKING	000000	000000
8943784011	8-9437	8401	BRK ASM;PARKING	000000	000000
8943784012	8-9437	8401	BRK ASM;PARKING	000000	000000
8943784040	8-9437	8404	CUP;SHOE HOLD D	000000	000006
8943784400	8-9437	8440	RING SET:PISTON	000000	000004

8943785101			RR BUMPER COVER	000000	000000
8943790640	8-9437	9064	GASKET; HD. COVER UPPER	000000	000000
8943790650	8-9437	9065	COVER; HD. COVER UPPER	000000	000000
8943790660	8-9437	9066	GAUGE ASM; OIL LEVEL	000000	000000
8943792480	8-9437	9248	BALANCER SHAFT	000000	000000
8943792490	8-9437	9249	BALANCER SHAFT	000000	000000
8943793190	8-9437	9319	CASE; TIMING GEARS	000000	000000
8943793191	8-9437	9319	CASE; TIMING GEARS	000000	000000
8943794410	8-9437	9441	BLOCK;SHIFT CLUTCH	000000	000036
8943794660	8-9437	9466	GEAR; INJ. PUMP	000000	000000
8943794720	8-9437	9472	PUMP ASM; WATER	000000	000000
8943794990	8-9437	9499	BEARING;CLU RELEASE	000000	000008
8943795410	8-9437	9541	TRANSMISSION;	000000	000000
8943795430	8-9437	9543	RELAY ASM; BATTERY	000000	000000
8943795431	8-9437	9543	RELAY ASM; BATTERY	000000	000067
8943795680			REGULATOR	000000	000000
8943795920	8-9437	9592	CLIP;FLEX SHAFT/BRTH.HOSE	000016	000124
8943796590	8-9437	9659	GASKET; PLUG TO VLV	000000	000006
8943796880	8-9437	9688	BOLT; EYE	000000	000006
8943796890	8-9437	9689	CONTROL RACK	000000	000000
8943796900	8-9437	9690	RING; SNAP	000000	000000
8943796910	8-9437	9691	BOLT*	000000	000005
8943796920	8-9437	9692	O-RING: INJ PUMP	000000	000000
8943797140	8-9437	9714	ENGINE HANGER;FRONT	000000	000000
8943797141	8-9437	9714	ENGINE HANGER;FRONT	000000	000000
8943797310			ENGINE ASM; PARTIAL	000000	000000
8943799360	8-9437	9936	COLLAR;REV	000000	000000
894380015D			BEARING; TOP GEAR SHAFT	000000	000000
8943800151	8-9438	0015	BEARING; TOP GEAR SHAFT	000000	000004
8943800170	8-9438	0017	BEARING; BALL,MAINSHAFT	000000	000000
8943800171	8-9438	0017	BEARING; BALL,MAINSHAFT	000005	000006
8943800230	8-9438	0023	BEARING;FRT.OUTPUT GEAR	000000	000000
8943801960	8-9438	0196	COVER, OIL PORT	000000	000000
8943802310	8-9438	0231	JOINT;A/CL	000000	000000
8943803791	8-9438	0379	CRANKSHAFT ASM	000000	000000
8943804530	8-9438	0453	RELAY; STARTER	000000	000000
8943805230	8-9438	0523	NOZZLE; INJ.	000000	000000
8943805270	8-9438	0527	METAL SET; CONN ROD	000006	000000
8943806320	8-9438	0632	ROTOR; V/PUMP	000000	000000
8943806560	8-9438	0656	SPRING; TIMER	000000	000000
8943806570	8-9438	0657	COVER; GOV.	000000	000000
8943806572	8-9438	0657	COVER; GOV.	000000	000000
8943806580	8-9438	0658	GOVERNOR LEVER	000000	000000
8943806590	8-9438	0659	SPRING;GOV.	000000	000000
8943806600	8-9438	0660	REGULATING VALVE	000000	000000
8943806610	8-9438	0661	GEAR	000000	000000
8943806790			TIMING BELTS	000000	000002

8943807570	8-9438	0757	PIPE; VACUUM/PCV INL	000000	000000
8943808210			MOULD ROCK	000000	000000
8943808410	8-9438	0841	PUMP ASM; OIL	000000	000002
8943808420	8-9438	0842	BODY ASM.; OIL	000000	000000
8943808440	8-9438	0844	COVER; OIL PUMP	000000	000001
8943808531	8-9438	0853	PUMP ASM; INJ.	000000	000000
8943808532	8-9438	0853	PUMP ASM; INJ.	000000	000000
8943808541	8-9438	0854	GOVERNOR ASM.	000000	000000
8943808680	8-9438	0868	VALVE ASM.; DELIV	000000	000000
8943808690	8-9438	0869	PLUNGER ASM;	000000	000000
8943809470	8-9438	0947	REPAIR KIT; WATER PUMP	000000	000000
8943809471	8-9438	0947	REPAIR KIT; WATER PUMP	000000	000004
8943810200	8-9438	1020	COVER;RR,GEN	000000	000001
8943810220	8-9438	1022	COVER; RR, GEN	000000	000001
8943811480	8-9438	1148	PUMP ASM; INJ.	000000	000000
8943811481	8-9438	1148	PUMP ASM; INJ.	000000	000002
8943811490	8-9438	1149	GOVERNOR	000000	000000
8943811491	8-9438	1149	GOVERNOR	000000	000000
8943811500	8-9438	1150	PUMP ASM; INJ.	000000	000000
8943811501	8-9438	1150	PUMP ASM; INJ.	000000	000000
8943811510	8-9438	1151	GOVERNOR ASM.	000000	000000
8943811521	8-9438	1152	PUMP ASM; INJ.	000000	000000
8943811530	8-9438	1153	GOVERNOR ASM.	000000	000000
8943811531	8-9438	1153	GOVERNOR ASM.	000000	000000
8943811610	8-9438	1161	GASKET; EXH. PIPE	000000	000039
8943811620	8-9438	1162	SHIM; T=0.2	000000	000002
8943811630	8-9438	1163	SHIM; INJ PUMP, T=0.3 3KC	000000	000001
8943811640	8-9438	1164	SHIM; INJ PUMP, T=0.4 3KC	000000	000000
8943811650	8-9438	1165	SHIM; INJ. PUMP T=0.5	000000	000000
8943811660	8-9438	1166	SHIM; INJ. PUMP	000000	000001
8943811670	8-9438	1167	SHIM; T=0.7	000000	000000
8943811680	8-9438	1168	SHIM; T=0.8	000000	000000
8943811690	8-9438	1169	SHIM; T=1.0	000000	000000
8943811700	8-9438	1170	SHIM; T=1.0	000000	000002
8943811710	8-9438	1171	SHIM; T=1.0	000000	000000
8943811720	8-9438	1172	SHIM; T=1.2	000002	000000
8943811730	8-9438	1173	SHIM; T=.20	000000	000000
8943811740	8-9438	1174	SHIM; T=.30	000000	000004
8943811750	8-9438	1175	SHIM; T=.40	000000	000000
8943811760	8-9438	1176	SHIM; T=.50	000000	000003
8943811770	8-9438	1177	SHIM; T=.60	000000	000000
8943811780	8-9438	1178	SHIM; T=.70	000000	000000
8943811790	8-9438	1179	SHIM; T=.80	000000	000000
8943811800	8-9438	1180	SHIM; T=.90	000000	000000
8943811810	8-9438	1181	SHIM; T=1.00	000000	000000
8943811820	8-9438	1182	SHIM; T=1.10	000000	000000
8943811830	8-9438	1183	SHIM; T=1.20	000000	000000

8943811840	8-9438	1184	GASKET; MANIFOLD	000000	000000
8943811850	8-9438	1185	GASKET; EXH. MAN.	000000	000003
8943811860	8-9438	1186	GASKET; EXHAUST MANIFOLD	000000	000001
8943811870	8-9438	1187	GASKET; EXHAUST PIPE	000000	000012
8943811880	8-9438	1188	GASKET; EXHAUST PIPE 3KR	000000	000002
8943811890	8-9438	1189	PACKING; COVER FRT. & REA	000000	000000
8943811900	8-9438	1190	PACKING; COVER	000008	000000
8943811920	8-9438	1192	PACKING; OIL PAN	000000	000003
8943811930	8-9438	1193	PACKING; OIL	000000	000003
8943811940	8-9438	1194	PACKING; TIMING CASE-BLOC	000000	000001
8943811950	8-9438	1195	GASKET; GEAR CASE	000000	000000
8943811960	8-9438	1196	PACKING; TIMING CASE-BLOC	000008	000000
8943811970	8-9438	1197	GASKET; GEAR CASE	000000	000002
8943811980	8-9438	1198	PACKING; TENSIONER	000000	000001
8943811990	8-9438	1199	PACKING; WATER PUMP	000000	000012
8943812000	8-9438	1200	PACKING; WATER PUMP	000009	000000
8943812010	8-9438	1201	PACKING; OIL PUMP	000002	000006
8943812020	8-9438	1202	PACKING; OIL PUMP	000004	000000
8943812030	8-9438	1203	PACKING; COVER	000003	000000
8943812040	8-9438	1204	PACKING; WATER PIPE HEAD	000006	000000
8943812050	8-9438	1205	PACKING	000033	000000
8943812060	8-9438	1206	PACKING; OIL PAN-CYL. BLO	000000	000002
8943812070	8-9438	1207	PACKING; OIL SEAL RETAINE	000002	000000
8943813040	8-9438	1304	PULLEY; CRANKSHAFT	000000	000000
8943813041	8-9438	1304	PULLEY; CRANKSHAFT	000000	000000
8943813480	8-9438	1348	PIPE;OIL,TURBO	000000	000000
8943813490	8-9438	1349	STAY;GUIDE TUBE	000000	000000
8943813491	8-9438	1349	STAY;GUIDE TUBE	000000	000000
8943813492	8-9438	1349	STAY;GUIDE TUBE	000000	000003
8943813520	8-9438	1352	BRKT;INLET PIPE	000000	000002
8943813530	8-9438	1353	PIPE;OIL TURBO	000000	000002
8943813540	8-9438	1354	PROTECTOR;HEAT	000000	000005
8943813550	8-9438	1355	TANK; CONTROL VL	000000	000000
8943813551	8-9438	1355	TANK;CONTROL	000000	000000
8943813560	8-9438	1356	BRACKET; CATCH TANK,OIL	000000	000003
8943813730	8-9438	1373	CLIP;PCV HOSE	000011	000000
8943814030	8-9438	1403	HOSE;HD COVER	000000	000001
8943814540			SWITCH;COMB	000000	000000
8943816431			FLYWHEEL ASM.	000000	000000
8943818180	8-9438	1818	FILLER ASM; OIL	000000	000000
8943819440	8-9438	1944	BOLT;THROUGH	000000	000002
8943819990	8-9438	1999	PUMP ASM; INJ.	000000	000001
8943822141			TENSIONER; TIMER	000000	000001
8943822730	8-9438	2273	PUMP ASM; INJ.	000000	000000
8943822732	8-9438	2273	PUMP ASM; INJ.	000000	000000
8943822770	8-9438	2277	BRACKET FRT.	000000	000000
8943822771	8-9438	2277	BRACKET FRT.	000001	000000

8943822790	8-9438	2279	BRACKET; REAR	000000	000000
8943822791	8-9438	2279	BRACKET; REAR	000000	000000
8943822820	8-9438	2282	BOLT*	000000	000000
8943823610	8-9438	2361	PIPE;WATER,TURB	000026	000018
8943823670	8-9438	2367	TUBE ASM; OIL GUIDE	000001	000000
8943823701	8-9438	2370	LEVER ASM;SELECT,EXTERNAL	000000	000000
8943823702	8-9438	2370	LEVER ASM;SELECT,EXTERNAL	000000	000001
8943824010	8-9438	2401	CLIP;HEATER HOSE	000000	000000
8943824020	8-9438	2402	CLIP; HEATER HOSE	000000	000000
8943824040	8-9438	2404	LEVER; SELECT,EXTERNAL	000000	000000
8943824650	8-9438	2465	PIPE;OIL TURBO	000000	000000
8943825450	8-9438	2545	THERMOSTAT (76.5 C)	000000	000019
8943825460	8-9438	2546	THERMOSTAT (76.5 C)	000000	000045
8943825521	8-9438	2552	BRAKE ASM	000000	000000
8943825524	8-9438	2552	BRAKE ASM; CENTER PARKING	000000	000000
8943825540	8-9438	2554	PULLEY; FAN	000000	000000
8943825541	8-9438	2554	PULLEY; FAN	000000	000000
8943827670	8-9438	2767	GEAR; HYDRAULIC	000000	000000
8943827720	8-9438	2772	BRACKET	000000	000000
8943827730	8-9438	2773	SPINDLE	000000	000000
8943827731	8-9438	2773	SPINDLE	000000	000000
8943827740	8-9438	2774	COVER; DUST	000002	000000
8943828270	8-9438	2827	PAN ASM; OIL	000000	000000
8943828290	8-9438	2829	VALVE;INLET	000000	000000
8943828291	8-9438	2829	VALVE; INLET	000000	000004
8943828300	8-9438	2830	VALVE: EXH	000000	000000
8943828301	8-9438	2830	VALVE: EXH	000000	000000
8943828843			DRUM; BRK,RR	000000	000000
8943828844			DRUM; BRK,RR	000000	000002
8943829000	8-9438	2900	TURBO ASM, NEW	000000	000000
8943829140	8-9438	2914	PLATE; ADJ, FAN	000000	000000
8943834830	8-9438	3483	COVER ASM.;	000000	000000
8943834831	8-9438	3483	COVER ASM.;	000000	000000
8943835710	8-9438	3571	SOLENOID ASM.	000000	000001
8943835960	8-9438	3596	STUD; EXH. PIPE	000070	000072
8943835991	8-9438	3599	PULLEY; A/COMP	000000	000000
8943835992	8-9438	3599	PULLEY; A/COMP	000000	000000
8943837200	8-9438	3720	GASKET: COOLER	000000	000061
8943843310	8-9438	4331	BOLT;T/V	000000	000000
8943843311	8-9438	4331	BOLT;T/V TO COMMON CHAMBR	000009	000000
8943843730	8-9438	4373	PIPE ASM.; OIL,	000000	000000
8943843750	8-9438	4375	YOKE ASM; STARTER	000000	000000
8943843760	8-9438	4376	SWITCH ASM; MAG.	000000	000000
8943843770	8-9438	4377	FRAME	000000	000000
8943843810	8-9438	4381	PULLEY; DAMPER	000001	000000
8943844630	8-9438	4463	FAN ASM.	000000	000000
8943846910	8-9438	4691	GAUGE ASM; OIL LEVEL	000000	000002

8943847470	8-9438	4747	TUBE; GUIDE, OIL	000000	000000
8943847780	8-9438	4778	GEAR ASM; DRAIN	000000	000000
8943847781	8-9438	4778	GEAR ASM; DRAIN	000000	000000
8943850292	8-9438	5029	SEAT; SPR	000044	000748
8943850900	8-9438	5090	CONTROL LEVER	000000	000000
8943850910	8-9438	5091	CONTROL LINK; ENG.	000000	000000
8943850920	8-9438	5092	CONTROL LINK; FUEL CUT	000000	000001
8943852250	8-9438	5225	SHAFT; TOP GEAR	000000	000000
8943852500	8-9438	5250	TIMING GEAR CASE	000000	000000
8943852510	8-9438	5251	CASE; TIMING GEARS	000000	000000
8943852520	8-9438	5252	CASE; TIMING GEARS	000000	000001
8943852530	8-9438	5253	CASE; TIMING GEARS	000000	000000
8943852540	8-9438	5254	SUPERSEDED**TIMING	000000	000000
8943852550	8-9438	5255	REGULATOR ASM	000001	000001
8943852560	8-9438	5256	REGULATOR ASM.	000000	000000
8943852710	8-9438	5271	GASKET; GEAR CASE	000000	000000
8943852990			YOKE; SPLINED	000000	000000
8943852991			YOKE; SPLINED	000000	000003
8943853520			ARM; FOOT, LH	000000	000000
8943853530	8-9438	5353	ARM; FOOT, RH	000000	000000
8943853540	8-9438	5354	ARM; FOOT, LH	000004	000000
8943853550	8-9438	5355	ARM; FOOT, RH	000000	000000
8943853560	8-9438	5356	GUIDE; FAN	000002	000000
8943853570	8-9438	5357	FOOT; ENGINE	000000	000000
8943853580	8-9438	5358	BRACKET; RADIATOR	000000	000000
8943854120	8-9438	5412	COVER SET; DUST	000000	000000
8943854172			SHROUD; PAD, STR	000000	000001
8943854221	8-9438	5422	GAUGE; OIL LEVEL	000000	000000
8943854470	8-9438	5447	HEAT PROTECTOR	000002	000000
8943854480	8-9438	5448	ROD ASM; CONN	000000	000000
8943854500	8-9438	5450	REGULATOR ASM 3KC/3KR	000000	000003
8943855550	8-9438	5555	GAUGE; OIL LEVEL	000000	000000
8943855620	8-9438	5562	SEAL; OIL, CRANK RR	000000	000000
8943856503			DRUM; BRK, FRT	000000	000000
8943859850	8-9438	5985	NUT; RR OUTPUT	000000	000000
8943859851	8-9438	5985	NUT; RR OUTPUT SHFT TRSFR	000000	000000
8943860471	8-9438	6047	VALVE; OIL RELIEF	000000	000000
8943860790	8-9438	6079	BOLT; BRKT TO BODY	000000	000008
8943861150	8-9438	6115	MANIFOLD ASM	000001	000000
8943861151	8-9438	6115	MANIFOLD ASM	000000	000000
8943861780	8-9438	6178	SPACER	000000	000000
8943861790	8-9438	6179	PULLEY	000000	000000
8943861791	8-9438	6179	PULLEY	000000	000000
8943862330	8-9438	6233	PIPE; BREATHER	000000	000000
8943862350	8-9438	6235	NUT; CONN ROD	000000	000000
8943864440	8-9438	6444	PUMP ASM; INJ	000000	000000
8943864441	8-9438	6444	PUMP ASM; INJ.	000000	000000

8943864460	8-9438	6446	GOVERNOR ASM.	000000	000000
8943865910	8-9438	6591	SPRING; PISTON, TIMER INJ	000000	000000
8943865930	8-9438	6593	COVER; GOV.	000000	000001
8943865960	8-9438	6596	GASKET; COVER	000000	000005
8943866010	8-9438	6601	HEAD; DISTRIBUTOR	000001	000001
8943868390	8-9438	6839	ACTUATOR	000000	000000
8943868400	8-9438	6840	PIPE; ACTUATOR	000000	000000
8943871020	8-9738	7102	SCREW;HD LAMP	000000	000000
8943876020	8-9438	7602	CLUTCH ASM; FOR 1500 RPM	000000	000000
8943876030	8-9438	7603	CLUTCH ASM; FOR 3000 RPM	000000	000000
8943876231	8-9438	7623	PULLEY;DAMPER,CRANK D=164	000000	000000
8943876241	8-9438	7624	PULLEY; FAN	000000	000000
8943876250	8-9438	7625	SPACER;	000000	000000
8943876260	8-9438	7626	SPACER;	000000	000000
8943877270	8-9438	7727	PLATE; ADJ., FAN BELT	000000	000000
8943879110	8-9438	7911	PUMP ASM.; INJ. FIG.52	000000	000000
8943879120	8-9438	7912	PUMP ASM; INJ.	000000	000000
8943879140	8-9438	7914	GOVERNOR ASM.; FIG.53	000000	000000
8943879150	8-9438	7915	GOVERNOR ASM.	000000	000000
8943879210			REAR GLASS (MIDDLE)	000000	000001
8943879720	8-9438	7972	CAPSULE; SPR.	000000	000000
8943879730	8-9438	7973	FLYWEIGHT	000000	000000
8943879740	8-9438	7974	SPRING; TIMER	000000	000000
8943879750	8-9438	7975	GASKET; COVER	000000	000000
8943879770	8-9438	7977	SPRING;PLUNGER INJ PUMP	000010	000000
8943881093	8-9438	8109	BRACKET; ROCKER SHAFT,INT	000044	000231
8943881641			HOSE; WATER	000000	000000
8943881750	8-9438	8175	TUBE; GUIDE	000000	000000
8943881760	8-9438	8176	TUBE; GUIDE	000000	000000
8943881780	8-9438	8178	BOLT*	000000	000000
8943881781	8-9438	8178	BOLT*	000000	000004
8943881970	8-9438	8197	PUMP ASM; INJ.	000000	000000
8943883260	8-9438	8326	TUBE; GUIDE	000000	000000
8943888600	8-9438	8860	COVER; GEAR CASE	000000	000000
8943888610	8-9438	8861	GENERATOR	000000	000000
8943888612	8-9438	8861	GENERATOR	000000	000001
8943889110	8-9438	8911	BEARING;NEEDLE	000000	000000
8943889600	8-9438	8960	PUMP ASM; INJ.	000000	000000
8943891951			SLAVE CYL ASM.	000000	000008
8943892091			ROD ASM; TRACK	000000	000000
8943892092			ROD ASM; TRACK	000001	000001
8943892290	8-9438	9229	PUMP ASM; INJ.	000000	000000
8943892310	8-9438	9231	GOVERNOR ASM.	000000	000000
8943892320	8-9438	9232	COVER ASM; RR	000000	000000
8943892330	8-9438	9233	COVER; RR	000000	000000
8943892340	8-9438	9234	REGULATOR ASM; BRUSH	000000	000002
8943892350	8-9438	9235	GUIDE; FAN	000000	000000

8943892360	8-9438	9236	DIODE ASM.	000000	000000
8943892370	8-9438	9237	CONDENSER ASM.	000000	000000
8943892380	8-9438	9238	COVER ASM; FRT	000000	000000
8943892390	8-9438	9239	RETAINER; BRG	000000	000000
8943892400	8-9438	9240	PULLEY	000000	000000
8943892410	8-9438	9241	BEARING; BALL	000000	000000
8943892420	8-9438	9242	BEARING; BALL	000000	000000
8943892430	8-9438	9243	BOLT*	000000	000000
8943892440	8-9438	9244	BOLT*	000000	000000
8943892450	8-9438	9245	ROTOR ASM.	000000	000000
8943892460	8-9438	9246	STATOR ASM.	000000	000000
8943893071	8-9438	9307	FLYWHEEL ASM	000000	000000
8943893320	8-9438	9332	BOLT; FLYWHEEL	000000	000000
8943893670	8-9438	9367	SHIFT;BLOCK ASM	000000	000013
8943893680	8-9438	9368	BLOCK; SHIFT FORK SHAFT	000000	000000
8943894160	8-9438	9416	BEARING;SHIFT BLOCK,CLU	000000	000012
8943894230	8-9438	9423	RACK; CONTROL	000000	000000
8943894450	8-9438	9445	BOLT*	000000	000000
8943897430	8-9438	9743	HOUSING; FLYWHEEL	000000	000000
8943897431	8-9438	9743	HOUSING; FLYWHEEL	000000	000000
8943897450	8-9438	9745	PUMP ASM; INJ.	000000	000000
8943897640	8-9438	9764	BOLT;FAN TO CLU	000000	000012
8943897660	8-9438	9766	FLYWHEEL ASM.	000000	000000
8943897721	8-9438	9772	GENERATOR ASM	000001	000000
8943898290	8-9438	9829	COVER; GEAR	000000	000000
8943900440	8-9439	0044	GASKET; TURBO TO EXH MAN.	000025	000082
8943900710	8-9439	0071	PIPE; INJ NOZZLE LEAK OFF	000000	000001
8943900781	8-9439	0078	PIPE; BYPASS	000000	000000
8943900782	8-9439	0078	PIPE; BYPASS	000000	000002
8943900855	8-9439	0085	CYL HEAD	000000	000000
8943900856	8-9439	0085	CYL HEAD	000000	000001
8943902790	8-9439	0279	SENSOR; REVOLUTION,ENG SP	000060	000057
8943902830	8-9439	0283	DUCT; WATER,HTR	000000	000002
8943903110	8-9439	0311	METAL; CM/SHF	000000	000000
8943903111	8-9439	0311	METAL; CM/SHF	000000	000000
8943903190	8-9439	0319	PIPE; INL	000000	000000
8943903191	8-9439	0319	PIPE; INL	000000	000003
8943903192	8-9439	0319	PIPE; INL	000000	000001
8943903561			BRACKET; IDLE PULLEY,A/C	000000	000009
8943903562			BRACKET; IDLE PULLEY,A/C	000000	000000
8943903840	8-9439	0384	NOZZLE HOLDER	000000	000006
8943904141	8-9439	0414	PUMP ASM; OIL	000000	000000
8943904142	8-9439	0414	PUMP ASM; OIL	000000	000000
8943904143	8-9439	0414	PUMP ASM; OIL	000008	000036
8943904172	8-9439	0417	HANGER; ENG,RR	000000	000003
8943904510	8-9439	0451	PIPE ASM; LEAK OFF	000000	000001
8943904691	8-9439	0469	CAMSHAFT	000000	000019

8943904830	8-9439	0483	BRACKET; INJ PUMP TO C/BL	000001	000000
8943905080	8-9439	0508	BRACKET; OIL PIPE	000000	000000
8943905200	8-9439	0520	PIPE; WATER OUTLET	000000	000000
8943905201	8-9439	0520	PIPE; WATER OUTLET	000001	000048
8943905270	8-9439	0527	PLUG	000041	000000
8943905290	8-9439	0529	RING SET; PISTON STANDARD	000000	000000
8943905291	8-9439	0529	RING SET; PISTON STANDARD	000000	000000
8943905292	8-9439	0529	RING SET; PISTON STANDARD	000000	000145
8943906410	8-9439	0641	GASKET; OIL PIPE TO TURBO	000000	000000
8943906411	8-9439	0641	GASKET; OIL PIPE TO TURBO	000173	000364
8943906601	8-9439	0660	BRACKET;GEN	000000	000013
8943907750	8-9439	0775	GASKET; INL MANIF TO HD	000011	000036
8943907772	8-9439	0777	PLUG GLOW	000000	000000
8943907774	8-9439	0777	PLUG GLOW	000000	000000
8943907775	8-9439	0777	PLUG GLOW	000000	000107
8943907776	8-9439	0777	PLUG GLOW	000000	000000
8943907800	8-9439	0780	GUIDE; VLV	000026	000903
8943907831	8-9439	0783	SEAT; SPR	000000	000000
8943907832	8-9439	0783	SEAT; SPR	000460	000000
8943907990			RING SET; PISTO	000000	000000
8943908580			CONNECTOR	000000	000000
8943908581	8-9439	0858	CONNECTOR	000039	000014
8943908620	8-9439	0862	COVER; CYL HEAD LOWER	000000	000000
8943908621	8-9439	0862	COVER; CYL HEAD LOWER	000000	000000
8943908622	8-9439	0862	COVER; CYL HEAD LOWER	000000	000000
8943908623	8-9439	0862	COVER; CYL HEAD LOWER	000000	000000
8943909880	8-9439	0988	BRACKET; INJ NOZZLE	000000	000051
8943909891	8-9439	0989	BOLT; CLAMP NOZZLE HOLDER	000000	000000
8943910157	8-9439	1015	FILTER ASM; OIL	000000	000000
8943910163	8-9439	1016	BODY; OIL FILTER	000004	000000
8943910164	8-9439	1016	BODY; OIL FILTER	000000	000000
8943910490	8-9439	1049	ELEMENT; OIL FILTER	000000	000000
8943910492	8-9439	1049	ELEMENT; OIL FILTER	000000	000000
8943910493	8-9439	1049	ELEMENT; OIL FI	000036	000000
8943910494	8-9439	1049	ELEMENT; OIL FI	000000	000000
8943911560	8-9439	1156	PIN; PULLEY	000015	000520
8943912980	8-9439	1298	BEARING; WATER PUMP, FRT	000000	000009
8943912990	8-9439	1299	BEARING; WATER PUMP, FRT	000000	000003
8943913052	8-9439	1305	COVER; CYL HD	000000	000000
8943913053	8-9439	1305	COVER; CYL HD	000000	000000
8943913100	8-9439	1310	GASKET	000043	000020
8943913110	8-9439	1311	PIPE; INJ NOZZLE LEAK OFF	000016	000012
8943913790	8-9439	1379	GASKET; HD TO COVER	000148	000610
8943913800	8-9439	1380	GASKET; HD TO COVER	000045	000027
8943914055	8-9439	1405	FILTER ASM;OIL	000000	000003
8943914680	8-9439	1468	SEAT; SPR	000445	000196
8943914720	8-9439	1472	GASKET; INJ NOZZLE	000005	000025

8943915021	8-9439	1502	RING SET; PISTON, STANDARD	000000	000000
8943915023	8-9439	1502	RING SET; PISTON, STANDARD	000000	000000
8943915024	8-9439	1502	RING SET; PISTON, STANDARD	000155	000040
8943915140	8-9439	1514	METAL SET; UP/LOW C/S PINK	000000	000017
8943915150	8-9439	1515	METAL SET; UP/LOW C/S GREE	000110	000069
8943915160	8-9439	1516	METAL SET; UP/LOW C/S YELO	000007	000057
8943915960	8-9439	1596	PISTON	000000	000000
8943915961	8-9439	1596	PISTON	000010	000000
8943915970	8-9439	1597	PISTON	000000	000000
8943916001	8-9439	1600	LINER; C/BL	000000	000009
8943916011	8-9439	1601	LINER; C/BL	000000	000050
8943916020	8-9439	1602	LINER; C/BL	000000	000000
8943916021	8-9439	1602	LINER; C/BL	000000	000096
8943916030	8-9439	1603	LINER; C/BL	000000	000000
8943916031	8-9439	1603	LINER; C/BL	000000	000307
8943916050	8-9439	1605	PISTON	000001	000011
8943916430	8-9439	1643	CASE ASM.; BRG, INJ PUMP	000000	000001
8943916650	8-9439	1665	STUD; EXH MANIF	000015	000117
8943917280	8-9439	1728	GASKET; THERMOSTAT	000000	000012
8943917310	8-9439	1731	PLUG; THERMOSTAT, OIL COO	000000	000003
8943917320	8-9439	1732	PLUG; COOLER BODY	000000	000006
8943917592	8-9439	1759	PROTECTOR; HEAT HD COVER	000000	000000
8943917910	8-9439	1791	ROD ASM; CONN	000000	000000
8943917911	8-9439	1791	ROD ASM; CONN	000000	000000
8943917940	8-9439	1794	BUSHING ; CONNROD	000000	000000
8943917941	8-9439	1794	BUSHING ; CONNROD	000000	000104
8943919250	8-9439	1925	CONNECTOR; GLOW PLUG	000000	000000
8943919252	8-9439	1925	CONNECTOR; GLOW PLUG	000000	000000
8943919253	8-9439	1925	CONNECTOR; GLOW PLUG	000000	000008
8943919530	8-9439	1953	GEAR; RING	000000	000001
8943920020	8-9439	2002	BRIDGE	000000	000000
8943920021	8-9439	2002	BRIDGE	000000	000000
8943920022	8-9439	2002	BRIDGE	000000	000000
8943920023	8-9439	2002	BRIDGE	000087	000049
8943920900	8-9439	2090	SEAL UNIT; WATER PUMP	000000	000005
8943920970	8-9439	2097	RUBBER; MTG, HD COVER	000000	000001
8943922031	8-9439	2203	HOLDER ASM; NOZZLE	000000	000006
8943922551	8-9439	2255	GEAR; CR/SHF	000000	000005
8943922880	8-9439	2288	BEARING; PILOT, TOP GEAR S	000000	000000
8943924510	8-9439	2451	HEAD ASM; CYL	000000	000000
8943924514	8-9439	2451	HEAD ASM; CYL	000000	000000
8943924516	8-9439	2451	HEAD ASM; CYL	000000	000000
8943924518	8-9439	2451	HEAD ASM; CYL	000000	000000
8943924519	8-9439	2451	HEAD ASM; CYL	000000	000000
8943924740	8-9439	2474	ELEMENT; FUEL FILTER	000000	000006
8943924750	8-9439	2475	ELEMENT; OIL FILTER	000000	000000
8943925530	8-9439	2553	GASKET; ADAPTER TO EXH PIP	000000	000000

8943925531	8-9439	2553	GASKET;ADAPTER TO EXH PIP	000000	000000
8943925532	8-9439	2553	GASKET;ADAPTER TO EXH PIP	000093	000259
8943925570	8-9439	2557	GEAR; DRIVE,OIL PUMP	000001	000008
8943925590	8-9439	2559	GEAR;DRIVEN,OIL PUMP	000001	000011
8943926550	8-9439	2655	PLATE; INNER HD COVER	000000	000008
8943926570	8-9439	2657	COVER; CYL HD	000000	000000
8943926571	8-9439	2657	COVER; CYL HD	000000	000000
8943926572	8-9439	2657	COVER; CYL HD	000000	000000
8943926574	8-9439	2657	COVER; CYL HD	000000	000000
8943926575	8-9439	2657	COVER; CYL HD	000000	000000
8943927211	8-9439	2721	GASKET;CYL HD	000000	000000
8943927212	8-9439	2721	GASKET;CYL HD	000000	000000
8943927213	8-9439	2721	GASKET;CYL HD	000000	000004
8943927220	8-9439	2722	BOLT; EYE OIL PIPE	000000	000005
8943928170	8-9439	2817	THERMOSTAT	000085	000203
8943928430	8-9439	2843	CONNECTOR;GLOW PLUG	000000	000000
8943928431	8-9439	2843	CONNECTOR;GLOW PLUG	000000	000008
8943929220	8-9439	2922	IMPELLER;WATER PUMP	000000	000010
8943929240	8-9439	2924	CLIP; RUBBER HOSE	000000	000056
8943929920	8-9439	2992	ARM;ROCKER	000000	000000
8943929930	8-9439	2993	ARM;ROCKER	000000	000000
8943929960	8-9439	2996	SHAFT;ROCKER ARM	000000	000000
8943929961	8-9439	2996	SHAFT;ROCKER ARM	000000	000000
8943929990	8-9439	2999	SPRING;ROCKER SHAFT	000015	000050
8943930391	8-9439	3039	CLIP; FUEL PIPE	000001	000000
8943930700	8-9439	3070	BOLT; FLYWHEEL	000000	000000
8943930701	8-9439	3070	BOLT; FLYWHEEL	000000	000000
8943930702	8-9439	3070	BOLT; FLYWHEEL	000164	000053
8943930770	8-9439	3077	VALVE; OIL RELIEF	000000	000000
8943930771	8-9439	3077	VALVE; OIL RELIEF	000000	000024
8943931170	8-9439	3117	FAN; COOLING	000000	000001
8943931310	8-9439	3131	BOLT; BRKT	000000	000239
8943931320	8-9439	3132	GEAR;RING	000000	000000
8943931401	8-9439	3140	WASHER; PL HSG	000009	000110
8943932801	8-9439	3280	CLIP; FUEL PIPE	000000	000000
8943932802	8-9439	3280	CLIP; FUEL PIPE	000000	000000
8943932803	8-9439	3280	CLIP; FUEL PIPE	000000	000024
8943933100	8-9439	3310	SPRING; VLV, OUTER	000000	000050
8943933270			METAL KIT; CRANKSHAFT STD	000000	000000
8943933472	8-9439	3347	THERMOSTAT; OIL COOLER	000000	000000
8943933800	8-9439	3380	METAL; CM/SHF	000000	000187
8943934030	8-9439	3403	BELT; COOLING FAN	000000	000000
8943934391	8-9439	3439	GEAR; IDLER	000000	000000
8943934392	8-9439	3439	GEAR; IDLER	000000	000000
8943934393	8-9439	3439	GEAR; IDLER	000000	000000
8943934394	8-9439	3439	GEAR; IDLER	000001	000031
8943934910			FOOT; ENG	000000	000000

8943934911	8-9439	3491	FOOT; ENG	000004	000007
8943935170	8-9439	3517	SPACER	000000	000001
8943935960	8-9439	3596	BUSHING;OIL PUMP DRIVE SH	000000	000000
8943935961	8-9439	3596	BUSHING;OIL PUMP DRIVE SH	000000	000000
8943936040	8-9439	3604	PLUG; OIL COOLER CASE	000000	000004
8943936091	8-9439	3609	PLATE; INNER HD COVER	000002	000004
8943936721	8-9439	3672	GASKET; EXH MANIF TO HD	000000	000000
8943936722	8-9439	3672	GASKET; EXH MANIF TO HD	000000	000000
8943936723	8-9439	3672	GASKET; EXH MANIF TO HD	000000	000000
8943936724	8-9439	3672	GASKET; EXH MANIF TO HD	000803	001233
8943936790			SCREW; ADJ. ROCK. ARM	000000	000000
8943938290	8-9439	3829	VALVE; RELIEF	000000	000005
8943938304	8-9439	3830	PUMP ASM; OIL	000000	000000
8943938313	8-9439	3831	GEAR; DRIVE, OIL PUMP	000000	000003
8943938340	8-9439	3834	GEAR; DRIVEN, OIL PUMP	000001	000009
8943939589			BLOCK ASM; CYL	000000	000002
8943939600	8-9439	3960	WASHER; PL LEVER	000000	000010
8943939844	8-9439	3984	SHAFT; ROCKER ARM	000000	000001
8943939950	8-9439	3995	BOLT; HSG	000006	000266
8943940393	8-9439	4039	COMPRESSOR ASM; AIR	000000	000000
8943940394	8-9439	4039	COMPRESSOR ASM; AIR	000000	000003
8943940711	8-9439	4071	HANGER; ENG, FRT	000000	000005
8943940712	8-9439	4071	HANGER; ENG, FRT	000000	000000
8943940791	8-9439	4079	CARTRIDGE; FUEL FILTER	000000	000000
8943940792	8-9439	4079	CARTRIDGE; FUEL FILTER	000104	000000
8943940921	8-9439	4092	GEAR; IDLER	000000	000000
8943940922	8-9439	4092	GEAR; IDLER	000000	000000
8943940923	8-9439	4092	GEAR; IDLER	000000	000010
8943940970	8-9439	4097	COLLAR; THRUST, IDLER GEAR	000000	000000
8943940971	8-9439	4097	COLLAR; THRUST, IDLER GEAR	000000	000017
8943941050	8-9439	4105	GEAR; RING	000000	000004
8943941410	8-9439	4141	GASKET; INL PIPE TO INL C	000000	000031
8943941860	8-9439	4186	GASKET; COVER	000015	000000
8943941930	8-9439	4193	PIPEL OIL INJ PUMP TO C/B	000000	000003
8943942480	8-9439	4248	GASKET;SILENCER TO EXH DL	000000	000006
8943942481	8-9439	4248	GASKET;SILENCER TO EXH DL	000000	000000
8943942482	8-9439	4248	GASKET;SILENCER TO EXH DL	000000	000002
8943943240	8-9439	4324	BOLT; BRACKET	000000	000024
8943943400	8-9439	4340	CORE; OIL COOLER	000000	000004
8943943420	8-9439	4342	GEAR; CR/SHF	000000	000000
8943943424	8-9439	4342	GEAR; CR/SHF	000009	000009
8943943542	8-9439	4354	CAMPER; CR/SHF	000000	000000
8943943543	8-9439	4354	CAMPER; CR/SHF	000000	000000
8943943544	8-9439	4354	CAMPER; CR/SHF	000000	000000
8943943545	8-9439	4354	DAMPER; CR/SHF	000000	000000
8943943546	8-9439	4354	DAMPER; CR/SHF	000000	000000
8943943547	8-9439	4354	DAMPER; CR/SHF	000000	000006

8943944141	8-9439	4414	IMPELLER; WATER PUMP	000001	000003
8943944190	8-9439	4419	VALVE; CHECK, OIL JET	000000	000000
8943944191	8-9439	4419	VALVE; CHECK, OIL JET	000000	000011
8943944240	8-9439	4424	ARM; ROCKER	000000	000000
8943944620	8-9439	4462	INSERT; VLV SEAT	000000	000026
8943944710	8-9439	4471	HOSE; RUBBER,AIR BREATHER	000007	000000
8943945090	8-9439	4509	GEAR; IDLER	000000	000000
8943945091	8-9439	4509	GEAR; IDLER	000000	000000
8943945092	8-9439	4509	GEAR; IDLER	000000	000000
8943945093	8-9439	4509	GEAR; IDLER	000000	000008
8943945114	8-9439	4511	GEAR; AIR COMP DRIVE	000000	000002
8943945131	8-9439	4513	COVER; HOLE, IDLE GEAR	000000	000000
8943945631	8-9439	4563	LINER; C/BL	000000	000000
8943946130	8-9439	4613	BUSHING; CONNROD	000000	000212
8943946361	8-9439	4636	MANIFOLD; EXH,RR	000000	000000
8943946710	8-9439	4671	GASKET; OIL PIPE TO C/BL	000246	000584
8943947790	8-9439	4779	BOLT; THRUST COLLAR	000000	000000
8943947792	8-9439	4779	BOLT; THRUST COLLAR	000000	000011
8943948030	8-9439	4803	SCREW; ADJ,BRIDGE	000198	000133
8943948152	8-9439	4815	THERMOSTAT; OIL COOLER	000000	000000
8943948260	8-9439	4826	PULLEY; W/P	000000	000001
8943949300	8-9439	4930	GASKET; ELEMENT TO BODY	000116	000400
8943949401	8-9439	4940	PIPE; OIL, C/BL TO AIR CM	000000	000005
8943949911	8-9439	4991	NUT; EXH MANIF	000000	000000
8943949960	8-9439	4996	SPRING; VLV,OUTER	000000	000000
8943950145	8-9439	5014	CASE ASM; BRG, INJ PUMP	000000	000000
8943950240	8-9439	5024	SCREW; ADJ ROCKER ARM	000575	000960
8943950360	8-9439	5036	SEAL UNIT; WATER PUMP	000000	000000
8943950613	8-9439	5061	RING SET; PISTON,STANDARD	000000	000000
8943950614	8-9439	5061	RING SET; PISTON,STANDARD	000000	000000
8943950615			RING SET; PISTON,STANDARD	000000	000011
8943950731	8-9439	5073	SHAFT; IDLE GEAR	000000	000000
8943950732	8-9439	5073	SHAFT; IDLE GEAR	000000	000000
8943950761	8-9439	5076	COVER; CYL HD	000001	000007
8943950960	8-9439	5096	SHAFT; IDLE GEAR	000000	000000
8943951131	8-9439	5113	VALVE; INL	000000	000005
8943951680	8-9439	5168	BRACKET; OIL PIPE	000002	000005
8943951700	8-9439	5170	CLIP; OIL PIPE	000046	000000
8943951711	8-9439	5171	BELT; COOLING FAN	000037	000180
8943951940	8-9439	5194	JET; OIL PISTON COOLING	000000	000000
8943952140	8-9439	5214	PACKING; PLUG,OVERFLOW T=1	000004	000000
8943952524	8-9439	5252	COOLER ASM; OIL	000000	000000
8943952660	8-9439	5266	SPRING; VLV,INNER	000000	000000
8943952834	8-9439	5283	BODY; CASE OIL COOLER	000001	000005
8943952863			PULLEY; CR/SHF	000000	000000
8943953142			DAMPER; CR/SHF	000000	000000
8943953511	8-9439	5351	GUIDE; GALLERY	000000	000013

8943954222	8-9439	5422	MANIFOLD; EXH, FRT	000000	000006
8943954472	8-9439	5447	GASKET; CYL HD	000000	000174
8943954522	8-9439	5452	PIPE; WTR. AIR COMPR. IN	000000	000008
8943954621	8-9439	5462	VALVE; EXHAUST	000001	000000
8943954622	8-9439	5462	VALVE; EXH	000000	000038
8943955640	8-9439	5564	PUMP ASM; OIL	000000	000000
8943955641	8-9439	5564	PUMP ASM; OIL	000000	000000
8943955642	8-9439	5564	PUMP ASM; OIL	000000	000000
8943955643	8-9439	5564	PUMP ASM; OIL	000012	000008
8943955711	8-9439	5571	VALVE SEAT	000000	000018
8943956250	8-9439	5625	SEAT; VLV INSERT	000000	000000
8943956790	8-9439	5679	COLLAR; DIST, EXH MANIF	000000	000000
8943956840	8-9439	5684	RUBBER; MTG, HD COVER, OUTE	001005	001459
8943957000	8-9439	5700	VALVE; OVERFLOW	000000	000000
8943957210	8-9439	5721	BOLT; ENG FOOT	000001	000066
8943957370	8-9439	5737	STUD; EXH PIPE	000000	000010
8943957570	8-9439	5757	METAL SET; CONN ROD, STNDRD	000000	000000
8943957571	8-9439	5757	METAL SET; CONN ROD, STNDRD	000000	000000
8943957582	8-9439	5758	CFRSHAFT	000000	000002
8943958050			PIPE; INJ	000000	000003
8943958360	8-9439	5836	BRACKET; ROCKER SHAFT, INT	000000	000000
8943958361	8-9439	5836	BRACKET; ROCKER SHAFT, INT	000000	000000
8943958362	8-9439	5836	BRACKET; ROCKER SHAFT, INT	000000	000016
8943958680	8-9439	5868	ADAPTER ASM; W/PLUG	000000	000007
8943958820	8-9439	5882	VALVE; INL	000000	000000
8943958821	8-9439	5882	VALVE; INL	000000	000000
8943958822	8-9439	5882	VALVE; INL	000644	000401
8943958830	8-9439	5883	VALVE; EXH	000000	000000
8943958832	8-9439	5883	VALVE; EXH	000013	000124
8943958840	8-9439	5884	SPRING; VLV	000012	000272
8943958850	8-9439	5885	SPRING; VLV	000000	000000
8943958851	8-9439	5885	SPRING; VLV	000012	000178
8943958880	8-9439	5888	SEAT; VLV INSERT	000000	000000
8943958881	8-9439	5888	SEAT; VLV INSERT	000000	000216
8943958890	8-9439	5889	GUIDE; BRIDGE	000000	000000
8943958891	8-9439	5889	GUIDE; BRIDGE	000000	000000
8943960140	8-9439	6014	SEAT; SPR	000004	001766
8943960151	8-9439	6015	CAP; ADJ SCREW	000000	000000
8943960152	8-9439	6015	CAP; ADJ SCREW	000982	001237
8943960853	8-9439	6085	COVER; GEAR CASE	000000	000006
8943961301	8-9439	6130	SHAFT; WATER PUMP	000000	000010
8943961450	8-9439	6145	STUD; BRG CASE	000000	000000
8943961720	8-9439	6172	INSERT; VLV SEAT	000000	000137
8943961991	8-9439	6199	SEAL; OIL, CRANKSHAFT FRT	000000	000000
8943962071	8-9439	6207	BOLT; CYL HD TO BLOCK	000000	000000
8943962072	8-9439	6207	BOLT; CYL HD TO BLOCK	000000	000000
8943962073	8-9439	6207	BOLT; CYL HD TO BLOCK	001598	002044

8943962290	8-9439	6229	CUP; SEALING, CYL HEAD	000000	000000
8943963511	8-9439	6351	GASKET; EXH MANIF TO HD	000003	000000
8943963512	8-9439	6351	GASKET; EXH MANIF TO HD	000000	000000
8943963513	8-9439	6351	GASKET; EXH MANIF TO HD	000000	000030
8943963700	8-9439	6370	COVER; TACHOMETER DRIVE	000000	000012
8943963710	8-9439	6371	CLIP; INJ PIPE	000000	000053
8943963780	8-9439	6378	CONNECTOR; WATER DRAIN	000000	000039
8943963830	8-9439	6383	GASKET; HD TO COVER	000030	000024
8943963942			ROD ASM CONN.	000000	000000
8943963961	8-9439	6396	ADAPTER; SW	000000	000002
8943964060	8-9439	6406	COLLAR; DIST. EXH. MANIF.	000000	000000
8943964390	8-9439	6439	BOLT; CM/SHF GEAR	000001	000098
8943964831	8-9439	6483	COUPLING ASM; INJ PUMP	000000	000001
8943965120	8-9439	6512	STUD; OIL PAN	000014	000034
8943965751			INJECTOR NOZZLE	000000	000000
8943965890			PIN; PISTON	000000	000000
8943965891			PIN; PISTON	000000	000008
8943965980	8-9439	6598	GUIDE; VLV	000104	000619
8943966092	8-9439	6609	SEAL; VLV GUIDE	000705	000320
8943966691	8-9739	6669	COVER; FUEL FILTER	000000	000000
8943966701	8-9439	6670	COVER	000000	000005
8943966780	8-9439	6678	GASKET; P/S PUMP	000000	000008
8943966790	8-9439	6679	GASKET; WATER DUCT	000081	000163
8943966802	8-9439	6680	GASKET; WATER DUCT, TO OIL	000098	000177
8943967110	8-9439	6711	BOLT; JOINT, OIL PIPE	000149	000166
8943967201	8-9439	6720	GASKET; WATER DUCT	000000	000070
8943967273	8-9439	6727	INLET PIPE; WATER	000000	000002
8943967310	8-9439	6731	PIN; PISTON	000000	000000
8943967311	8-9439	6731	PIN; PISTON	000000	000082
8943967371	8-9439	6737	CRANKSHAFT	000000	000000
8943967372	8-9439	6737	CRANKSHAFT	000000	000000
8943967373	8-9439	6737	CRANKSHAFT	000000	000000
8943967374	8-9439	6737	CRANKSHAFT	000000	000000
8943967530	8-9439	6753	PLUG; OIL COOLER CASE	000000	000041
8943967550	8-9439	6755	GASKET; PLUG, OIL COOLER	000070	000616
8943967840	8-9439	6784	GEAR; RING	000000	000000
8943967841	8-9439	6784	GEAR; RING	000000	000008
8943967930	8-9439	6793	CLIP; INJ PIPE	000000	000024
8943968040	8-9439	6804	PIPE; INJ NOZZLE LEAK OFF	000001	000003
8943968100	8-9439	6810	GASKET; ELEMENT TO BODY	000174	000098
8943968150	8-9439	6815	PLACER; VALVE SEAL	000000	000000
8943968180	8-9439	6818	PULLER ASM; CR/SHF GEAR	000000	000000
8943968190	8-9439	6819	TOOL; SETTING, CRANK GEAR	000000	000000
8943968340			GEAR; IDLE	000000	000000
8943968341			GEAR; IDLE	000000	000000
8943968400			RING SET; PISTON STD.	000002	000002
8943968560	8-9439	6856	TOOL; SETTING, OIL SEAL	000000	000000

8943968580	8-9439	6858	REPLACER; SLINGER	000003	000000
8943968610	8-9439	6861	REPLACER KIT;VALVE SPRING	000001	000002
8943969711	8-9439	6971	COLLAR; HD COVER	000004	000110
8943969721	8-9439	6972	COLLAR; HD COVER	000000	000010
8943969740	8-9439	6974	BOLT; PIPE	000000	000002
8943969810	8-9439	6981	METAL SET; CONN ROD, U/S=	000000	000000
8943969820	8-9439	6982	METAL SET; CONN ROD, U/S=	000000	000000
8943969870	8-9439	6987	METAL KIT; CRANK SHAFT, U	000000	000000
8943969880	8-9439	6988	METAL KIT; CRANK SHAFT, U	000000	000000
8943970271	8-9439	7027	BOLT; OIL FILTER	000000	000010
8943970970	8-9439	7097	WASHER; WATER PUMP	000000	000040
8943971391	8-9439	7139	BOLT; OIL FILTER	000029	000000
8943972630	8-9439	7263	SPRING; ROCKER SHAFT	000002	000379
8943972860	8-9439	7286	STUD; EXH MANIF	000008	002536
8943973100	8-9439	7310	THERMOSTAT	000099	000135
8943973220	8-9439	7322	STUD; CAM BRKT	000046	000000
8943973380	8-9439	7338	PLUG; WATER JACKET	000001	000012
8943973591	8-9439	7359	BOLT; WATER PUMP	000000	000017
8943973621	8-9439	7362	ARM; ROCKER	000000	000000
8943973640	8-9439	7364	GASKET; GEAR CASE TO C/BL	000000	000014
8943973772			JOINT; HTR HOSE	000000	000001
8943974440	8-9439	7444	CLIP; INJ PIPE	000000	000014
8943974450	8-9439	7445	CLIP; 'A', INJ PIPE	000000	000000
8943974960	8-9439	7496	WASHER; FLYWHEEL	000000	000000
8943974961	8-9439	7496	WASHER; FLYWHEEL	000000	000046
8943975000	8-9439	7500	SPRING; VLV, INNER	000052	000000
8943990020	8-9439	9002	GASKET; OIL COOLER TO C/B	000050	000412
8943990050	8-9439	9005	CUP; SEALING, WATER JACKE	000000	000018
8943991571	8-9439	9157	GENERATOR ASM.	000000	000001
8943992250	8-9439	9225	PLUG; C/BL SIDE	000000	000000
8943992454	8-9439	9245	SHAFT; IDLE GEA	000000	000000
8943992531	8-9439	9253	BOLT; AIR CMPR FIX	000000	000006
8943992560	8-9439	9256	BOLT; DRIVE GEAR	000030	000032
8943992770	8-9439	9277	WASHER; THRUST, CR/SHF	000000	000000
8943992790	8-9439	9279	GASKET; OIL COOLER TO C/B	000000	000344
8943992830	8-9439	9283	WASHER; THRUST, CR/SHF	000000	000000
8943993390	8-9439	9339	GASKET; OIL FILTER TO C/B	000079	000207
8943993980	8-9439	9398	GASKET;OIL PIPE,STRAINER	000139	000150
8943993990	8-9439	9399	GASKET; OIL FILTER TO C/B	000120	000359
8943994042	8-9439	9404	HANGER; ENG, RR	000000	000004
8943994043	8-9439	9404	HANGER; ENG, RR	000000	000000
8943994210	8-9439	9421	PLUG	000003	000000
8943994570	8-9439	9457	THROWER; DUST, WATER PUMP	000000	000011
8943994870	8-9439	9487	PIN; CAM BRG SET	000000	000044
8943994881	8-9439	9488	BOLT; OIL PUMP	000000	000028
8943994991	8-9439	9499	PIPE; WATER OUTLET	000000	000001
8943995532	8-9439	9553	BOLT; CRANKCASE	000000	000058

8943995540	8-9439	9554	BOLT; CYL HD TO HSG	000176	000407
8943995550	8-9439	9555	BOLT; CYL HD TO HSG	000171	000359
8943996050	8-9439	9605	PLUG; RUBBER, CYL HD	000310	000354
8943996082	8-9439	9608	CONNECTOR; GLOW PLUG	000000	000000
8943996311	8-9439	9631	CONNECTOR; GLOW PLUG	000041	000118
8943996312	8-9439	9631	CONNECTOR; GLOW PLUG	000000	000000
8943996313	8-9439	9631	CONNECTOR; GLOW PLUG	000000	000000
8943996390	8-9439	9639	CUP; SEALING, WATER JACKE	000086	002860
8943996611	8-9439	9661	ROD ASM; CONN	000000	000000
8943996612	8-9439	9661	ROD ASM; CONN	000000	000000
8943996691	8-9439	9669	BOLT; STARTER, BRKT TO BDY	000034	000024
8943996880	8-9439	9688	DOWEL; BEARING CAP	000000	000000
8943996881	8-9439	9688	DOWEL; BEARING CAP	000065	000029
8943996890	8-9439	9689	GASKET; OIL FILLER	000000	000051
8943997130			GASKET; OIL COOLER TO C/B	000000	000000
8943997230	8-9439	9723	CAP; OIL FILLER	000076	000078
8943998582	8-9439	9858	ADAPTER; OIL PRESSURE SWI	000001	000000
8943998631	8-9439	9863	BOLT; OIL PUMP, P/S	000004	000000
8944001060	8-9440	0106	RELAY; GLO	000000	000000
8944001061	8-9440	0106	RELAY; GLOW	000038	000015
8944003382	8-9440	0338	CABLE ASM.; PARKING BRAKE	000000	000000
8944003400			PARK BRK CBL	000000	000000
8944003472			CABLE ASM.	000000	000000
8944003700	8-9440	0370	UNIT; THERMOMET	000055	000213
8944008480			BRACKET; INJECTION PUMP	000000	000000
8944008611	8-9440	0861	MANIFOLD ASM; INLET 3KR1	000000	000000
8944008620	8-9440	0862	BRACKET; AIR CLEANER	000000	000000
8944008630	8-9440	0863	HOSE; MANIFOLD AIR CLEANER	000000	000035
8944008640	8-9440	0864	HANGER; ENGINE LIFTING	000000	000000
8944009970	8-9440	0997	GASKET; TURBO MT	000000	000000
8944009980	8-9440	0998	GASKET; EXH. PIPE	000000	000000
8944010780	8-9440	1078	PIPE; WATER INLET	000000	000000
8944010790	8-9440	1079	HOSE; RUBBER, BY PASS	000000	000006
8944010800	8-9440	1080	PAN ASM.; OIL, W/DRAIN PL	000000	000000
8944010801	8-9440	1080	PAN ASM.; OIL, W/DRAIN PL	000000	000000
8944010820	8-9440	1082	TUBE ASM.; OIL LEVEL GUID	000000	000000
8944010830	8-9440	1083	FILTER ASM; FUEL	000000	000000
8944010831	8-9440	1083	FILTER ASM; FUEL	000000	000000
8944010832	8-9440	1083	FILTER ASM; FUEL	000000	000000
8944010833	8-9440	1083	FILTER ASM; FUEL	000007	000000
8944013061	8-9440	1306	HEAD ASM; CYL	000000	000000
8944013062	8-9440	1306	HEAD ASM; CYL	000000	000000
8944013090	8-9440	1309	HEAT EXCHANGER ASM	000000	000000
8944013120	8-9440	1312	SEAT; RUBBER	000000	000000
8944013130	8-9440	1313	COVER; COVER REAR, HEAT E	000000	000000
8944013181	8-9440	1318	SUPPORT; ENGINE (T=9.0)	000000	000000
8944013190	8-9440	1319	BRACKET; CONTROL	000000	000000

8944013200	8-9440	1320	BRACKET; CONTROL	000000	000000
8944014211	8-9440	1421	PUMP ASM; INJ.	000000	000000
8944014213	8-9440	1421	PUMP ASM; INJ.	000000	000000
8944014240	8-9440	1424	CLIP;OIL PIPE LOWER	000000	000000
8944014250	8-9440	1425	CLIP;OIL PIPE UPPER	000000	000000
8944014251	8-9440	1425	CLIP;OIL PIPE UPPER	000000	000000
8944014280	8-9440	1428	GAUGE ASM; OIL LEVEL	000000	000000
8944014320	8-9440	1432	FILTER ASM; OIL	000000	000000
8944014330	8-9440	1433	COVER; OIL FILTER	000000	000000
8944014340	8-9440	1434	PIPE ASM; OIL	000000	000000
8944015310	8-9440	1531	FILTER; FUEL, PAPER ELEME	000000	000006
8944015540	8-9440	1554	SPRING; START	000000	000000
8944015580			GASKET; VALVE COVER	000000	000000
8944015710	8-9440	1571	COVER ASM; REAR	000000	000000
8944015720	8-9440	1572	COVER; REAR	000000	000000
8944015730	8-9440	1573	BOLT; THROUGH	000000	000000
8944015800	8-9440	1580	COOLER ASM; OIL	000000	000000
8944016190	8-9440	1619	PISTON STD	000000	000000
8944016191	8-9440	1619	PISTON STD	000000	000000
8944016200	8-9440	1620	VALVE SEAT	000000	000000
8944016201	8-9440	1620	VALVE SEAT	000000	000000
8944016470	8-9440	1647	FILTER ASM; OIL	000000	000000
8944016770	8-9440	1677	COVER; DUAL FUE	000000	000000
8944016771	8-9440	1677	COVER;DUAL FUEL	000001	000000
8944016772	8-9440	1677	COVER;DUAL FUEL	000000	000000
8944016780	8-9440	1678	BODY ASM 4JB1-PW	000000	000000
8944016781	8-9440	1678	BODY ASM 4JB1-PW	000000	000000
8944016790	8-9440	1679	SPRING 4JB1-PW	000000	000000
8944016800	8-9440	1680	COOLER ASM; OIL	000000	000018
8944016810	8-9440	1681	CARTRIDGE KIT/OIL FILTER	000000	000000
8944017470	8-9440	1747	PIPE; WATER	000000	000000
8944017472	8-9440	1747	PIPE; WATER	000000	000000
8944017500	8-9440	1750	SNAP; RING- PISTON	000000	000000
8944017501	8-9440	1750	SNAP; RING- PISTON	000000	000051
8944017510	8-9440	1751	PIN; PISTON	000000	000000
8944017511	8-9440	1751	PIN; PISTON	000000	000043
8944017531	8-9440	1753	PIPE; OUTLET, WATER	000000	000001
8944017820	8-9440	1782	COVER; GEAR CASE, P.T.O.	000000	000000
8944017840	8-9440	1784	TURBO; FEED LINE	000000	000001
8944017852	8-9440	1785	PIPE ASM; OIL	000000	000020
8944017860	8-9440	1786	PIPE ASM; OIL	000000	000002
8944017872	8-9440	1787	PUMP ASM; INJ.	000000	000000
8944017880	8-9440	1788	PUMP ASM; INJ.	000000	000000
8944017891	8-9440	1789	GOVERNOR ASM	000000	000000
8944017930			ALT ; NEW	000000	000000
8944017932			ALT ; NEW	000000	000000
8944017980	8-9440	1798	GEAR	000000	000000

8944018420	8-9440	1842	BASE; AIR CLEANER	000000	000000
8944019340	8-9440	1934	PUMP ASM; OIL	000000	000001
8944019350	8-9440	1935	BODY ASM; OIL PUMP	000000	000000
8944019360	8-9440	1936	SHAFT; OIL PUMP DRIVE	000000	000000
8944019371	8-9440	1937	CAMSHAFT; INJ.	000000	000000
8944019380	8-9440	1938	LEVER (A)	000000	000000
8944019382	8-9440	1938	LEVER; (A) 3KC1	000000	000000
8944019690	8-9440	1969	BOLT; FLYWHEEL	000000	000000
8944020040	8-9440	2004	GEAR; W/BUSH, A	000000	000000
8944020130	8-9440	2013	PIPE ASM; OIL	000000	000000
8944020140	8-9440	2014	PIPE ASM; OIL	000000	000000
8944020450			FLYWHEEL ASM	000000	000000
8944020460	8-9440	2046	FLYWHEEL ASM.	000000	000000
8944020461	8-9440	2046	FLYWHEEL ASM.	000000	000000
8944020470	8-9440	2047	FLYWHEEL ASM	000000	000000
8944020560	8-9440	2056	PUMP ASM; INJ.	000000	000000
8944021630	8-9440	2163	SILENCER; EXHAUST	000000	000001
8944021640	8-9440	2164	SILENCER;EXH	000000	000002
8944021650	8-9440	2165	PROTECTOR;HEAT,EXH.SILENC	000003	000001
8944021670	8-9440	2167	PROTECTOR; HEAT	000002	000000
8944021680	8-9440	2168	ELBOW; EXHAUST	000001	000001
8944021761	8-9440	2176	CLIP; HARNESS	000000	000000
8944021790	8-9440	2179	PUMP ASM; OIL	000000	000000
8944021800	8-9440	2180	COVER ASM; OIL PUMP	000000	000000
8944022660	8-9440	2266	FLYWHEEL ASM.	000000	000000
8944023100	8-9440	2310	STUD; EXHAUST	000004	000000
8944023221	8-9440	2322	BOLT; OIL FILTER	000000	000000
8944023240	8-9440	2324	SKID	000000	000000
8944023340	8-9440	2334	TAPPET	000000	000000
8944023770	8-9440	2377	SHIFT ASM.; 2ND	000000	000000
8944024050	8-9440	2405	RING; SNAP, CLU	000000	000002
8944024060	8-9440	2406	RING; SNAP, CLU	000000	000042
8944024070	8-9440	2407	RING; SNAP, CLU	000000	000046
8944024620	8-9440	2462	PIN; COUNTER GEAR	000000	000007
8944024980	8-9440	2498	KEY; STARTER	000000	000992
8944024990	8-9440	2499	SWITCH ASM; STARTER	000000	000033
8944025000	8-9440	2500	SWITCH; STARTER 6RB1	000000	000705
8944025010	8-9440	2501	GUARD; GENERATOR	000001	000000
8944026181	8-9440	2618	PIPE ASM; FUEL PUMP	000000	000000
8944026260	8-9440	2626	PIPE ASM.;FUEL,FEED PUMP	000000	000012
8944026270	8-9440	2627	PIPE ASM.;FUEL,FUEL FILTE	000000	000018
8944026310	8-9440	2631	SPRING;PUMP INJ	000000	000000
8944031031	8-9440	3103	PUMP ASM; SEA	000000	000000
8944031032	8-9440	3103	PUMP ASM; SEA	000000	000000
8944031460			PROTECTOR; HEAT	000000	000000
8944031620			JOINT BOLT;OIL FILTER-BLO	000000	000000
8944032010	8-9440	3201	PROTECTOR;HEAT	000000	000000

8944032041	8-9440	3204	BOLT;OIL PIPE,	000000	000000
8944032400	8-9440	3240	THERMOSTAT (76.5 C)	000000	000002
8944032410	8-9440	3241	SWITCH; OVERHEAT WARN	000000	000046
8944032470	8-9440	3247	RELAY; STARTER	000000	000000
8944032480	8-9440	3248	HARNESS; METER	000000	000000
8944032500	8-9440	3250	PANEL; METER	000000	000000
8944032510	8-9440	3251	PILOT LAMP; OIL	000000	000000
8944032520	8-9440	3252	PILOT LAMP; WATER	000000	000000
8944032530	8-9440	3253	BUZZER	000000	000000
8944032891	8-9440	3289	SENSOR;PICK-UP	000000	000000
8944033141	8-9440	3314	HOUSING;THERMO	000000	000000
8944033142	8-9440	3314	HOUSING;THERMO	000000	000004
8944033410	8-9440	3341	HARNESS; EXTENSION	000000	000000
8944033420	8-9440	3342	HARNESS; EXTENSION	000000	000000
8944033430	8-9440	3343	HARNESS; EXTENSION	000000	000000
8944033440	8-9440	3344	HARNESS; EXTENSION	000000	000000
8944033450	8-9440	3345	HARNESS; EXTENSION	000000	000000
8944033460	8-9440	3346	HARNESS ENGINE	000000	000000
8944033500	8-9440	3350	THERMOSTAT (76.5 C)	000000	000000
8944033640	8-9440	3364	GUIDE TUBE A	000000	000000
8944033650	8-9440	3365	GUIDE TUBE B	000000	000000
8944033660	8-9440	3366	SPACER; FAN	000000	000000
8944035381	8-9440	3538	COVER; ASM.; AIR INLET	000000	000000
8944036240	8-9440	3624	CASING	000002	000001
8944036250	8-9440	3625	HOLDER	000000	000000
8944036260	8-9440	3626	SHAFT	000000	000000
8944036270	8-9440	3627	PLATE	000004	000000
8944036280	8-9440	3628	COVER	000001	000002
8944036290	8-9440	3629	BUSHING	000002	000001
8944036300	8-9440	3630	SEAL; WATER	000000	000002
8944036310	8-9440	3631	PACKING	000004	000026
8944036320	8-9440	3632	PACKING	000006	000001
8944036660			CASE; ELEMENT	000000	000000
8944036820	8-9440	3682	PIPE ASM.; FUEL, FILTER L	000001	000000
8944036830	8-9440	3683	PIPE ASM; FUEL	000001	000000
8944036840	8-9440	3684	PIPE ASM; FUEL ASM	000001	000000
8944036850	8-9440	3685	PIPE ASM.; FUEL, NOZZLE L	000000	000000
8944036880			BUSHING;W/O RIN	000000	000000
8944036881	8-9440	3688	BUSHING;DRIVEN	000000	000000
8944036900	8-9440	3690	CLIP;DRAIN HOSE	000000	000004
8944036950	8-9440	3695	RADIATOR 3KR1	000000	000001
8944037790	8-9440	3779	GUIDE;FAN,RADIA	000000	000023
8944038241	8-9440	3824	GEAR ASM.;MARINE (G/RATIO=	000000	000000
8944038251	8-9440	3825	GEAR ASM.;MARINE (G/RATIO=	000000	000000
8944038261	8-9440	3826	GEAR ASM.;MARINE (G/RATIO=	000000	000000
8944038271	8-9440	3827	GEAR ASM.;MARINE (G/RATIO=	000000	000000
8944038281	8-9440	3828	GEAR ASM.;MARINE (G/RATIO=	000000	000000

8944038290	8-9440	3829	BRKT;CLUTCH	000000	000000
8944038300	8-9440	3830	VALVE ASM.; TROLLING	000000	000000
8944038730			RING; SNAP	000003	000000
8944038740	8-9440	3874	RING; SNAP	000006	000000
8944038750	8-9440	3875	O-RING	000012	000000
8944038760	8-9440	3876	O-RING	000020	000000
8944038770	8-9440	3877	PIN; SPRING	000016	000000
8944038780	8-9440	3878	BOLT	000011	000000
8944038790	8-9440	3879	BEARING	000003	000000
8944038930	8-9440	3893	PLATE; OIL PAN, RH RR 4BD	000000	000000
8944038940	8-9440	3894	PLATE; OIL PAN, LH RR 4BD	000000	000000
8944038950	8-9440	3895	FILTER ASM; FUEL	000000	000000
8944038951	8-9440	3895	FILTER ASM; FUEL	000001	000000
8944038953	8-9440	3895	FILTER ASM; FUEL	000000	000000
8944039550	8-9440	3955	ARM; SHIFT, REV. - O.D.	000000	000000
8944040260	8-9440	4026	CRANKSHAFT	000000	000001
8944040321	8-9440	4032	PUMP ASM; INJ.	000000	000000
8944040322	8-9440	4032	PUMP ASM; INJ.	000000	000000
8944041550	8-9440	4155	SOLENOID ASM;ENGINE STOPP	000000	000000
8944041570	8-9440	4157	VALVE; SOLENOID	000000	000000
8944041600	8-9440	4160	SOLENOID	000000	000000
8944041660	8-9440	4166	SOLENOID ASM; ENG.STOPPER	000000	000000
8944042406	8-9440	4240	PUMP ASM; INJ.	000000	000000
8944042410	8-9440	4241	DUCT; INLET	000000	000000
8944042453	8-9440	4245	PIPE ASM; OIL	000000	000000
8944042460	8-9440	4246	PIPE ASM; OIL TURBO	000001	000001
8944043340	8-9440	4334	PAN ASM; OIL	000000	000000
8944043350	8-9440	4335	PAN ASM; OIL 3KC1	000000	000000
8944043360	8-9440	4336	STRAINER ASM; OIL PUMP	000000	000000
8944043482	8-9440	4348	PAN ASM.; OIL, W/DR. PLUG	000000	000000
8944043500	8-9440	4350	PLATE; ADJUSTER FAN	000001	000000
8944045210	8-9440	4521	TAPPET	000000	000000
8944045211	8-9440	4521	TAPPET	000000	000000
8944046100	8-9440	4610	GASKET;EXH.MA	000147	000495
8944046571	8-9440	4657	HOLDER ASM; NOZ	000000	000000
8944047080	8-9440	4708	LEVER ENG. STOP	000000	000000
8944047820	8-9440	4782	CLEANER ASM	000000	000000
8944047902	8-9440	4790	GENERATOR	000000	000002
8944047910	8-9440	4791	GENERATOR; NIKKO	000000	000002
8944050460	8-9440	5046	PIPE ASM; INJ NO. 1	000000	000000
8944050470	8-9440	5047	PIPE ASM; INJ NO. 2	000000	000000
8944050480	8-9440	5048	PIPE ASM; INJ NO. 3	000000	000000
8944050490	8-9440	5049	PIPE ASM; INJ NO. 4	000000	000000
8944050650	8-9440	5065	GAUGE ASM; LEVEL	000000	000009
8944051190	8-9440	5119	GAUGE ASM; OIL LEVEL	000000	000000
8944051200	8-9440	5120	PIPE; EXHAUST SILENCER	000000	000000
8944051740	8-9440	5174	STAY; AIR CLEANER FRT	000000	000000

8944051750	8-9440	5175	STAY; AIR CLEANER RR	000000	000000
8944051760	8-9440	5176	HOSE;RADIATOR,UPPER	000000	000000
8944051761	8-9440	5176	HOSE;RADIATOR,UPPER	000000	000000
8944051770	8-9440	5177	HOSE;RADIATOR,LOWER	000000	000000
8944051771	8-9440	5177	HOSE;RADIATOR,LOWER	000000	000000
8944052700	8-9440	5270	CASE ASM; A/CLEANER	000000	000000
8944052711	8-9440	5271	FLANGE	000000	000000
8944052730	8-9440	5273	BOLT;SEMS, RR	000111	000000
8944052770	8-9440	5277	WASHER; PLAIN,STRIKER	000000	000256
8944053660			REPAIR KIT;A/T	000000	000000
8944054641	8-9440	5464	COVER ASM; CYL HEAD	000000	000000
8944054642	8-9440	5464	COVER ASM; CYL HEAD	000001	000001
8944054650	8-9440	5465	HOSE; CLIP	000000	000000
8944054661	8-9440	5466	OIL PAN	000000	000000
8944054680	8-9440	5468	PAN ASM; OIL	000000	000000
8944054700	8-9440	5470	HOSE; RUBBER	000000	000000
8944054710	8-9440	5471	HOSE; RUBBER	000000	000211
8944055990	8-9440	5599	COVER;HOUSING SIDE	000000	000000
8944056551			BOLT;W/WASHER,V	000000	000000
8944056590			PIPE ASM; (DISCONTINUED)	000000	000000
8944056600	8-9440	5660	PIPE ASM; FEED PUMP	000000	000000
8944062950	8-9440	6295	PIPE ASM; OIL, COVER FILT	000000	000000
8944063640	8-9440	6364	FLYWHEEL ASM.	000000	000000
8944063641	8-9440	6364	FLYWHEEL ASM.	000000	000000
8944063922			CABLE; DIST	000000	000000
8944064191			FAN ASM; COOLING	000000	000026
8944064220	8-9440	6422	SILENCER;EXH.	000000	000000
8944064230	8-9440	6423	PACKING; TROLLING VALVE	000000	000000
8944064670	8-9440	6467	BRACKET; AIR CLEANER	000000	000000
8944064680	8-9440	6468	CUSHION; BRACKET TO CLIP	000000	000000
8944065350	8-9440	6535	FLYWHEEL*INVALID*	000000	000000
8944065360	8-9440	6536	CLIP; FUEL PIPE	000001	000000
8944065370	8-9440	6537	CLIP;OIL LEVEL GAUGE	000000	000000
8944065381	8-9440	6538	BRACKET; FUEL PIPE	000000	000000
8944065390	8-9440	6539	GAUGE ASM; OIL LEVEL L1=1	000000	000000
8944066360	8-9440	6636	VALVE ASM;PCV	000000	000000
8944066680			VALVE; SOLONOID	000000	000000
8944067380			WIRE HARNESS	000000	000000
8944067390	8-9440	6739	HARNESS; WIRE, BOX SIDE	000000	000000
8944067540	8-9440	6754	FLYWHEEL ASM	000000	000000
8944067541	8-9440	6754	FLYWHEEL ASM	000000	000000
8944067543	8-9440	6754	FLYWHEEL ASM	000000	000000
8944067544	8-9440	6754	FLYWHEEL ASM	000000	000000
8944067545	8-9440	6754	FLYWHEEL ASM	000000	000003
8944067551	8-9440	6755	BLOCK ASM.; CYL. 3KB1	000000	000000
8944067553	8-9440	6755	BLOCK ASM.; CYL. 3KB1	000000	000000
8944068790	8-9440	6879	PIPE ASM; OIL COVER FILTE	000000	000000

8944068800	8-9440	6880	HOUSING; FLYWHEEL	000000	000000
8944068811	8-9440	6881	FLYWHEEL ASM	000000	000000
8944068831	8-9440	6883	PAN ASM; OIL	000000	000000
8944068850	8-9440	6885	FILTER ASM; OIL	000000	000000
8944068860	8-9440	6886	COVER; OIL FILTER	000000	000000
8944068870	8-9440	6887	PIPE ASM; OIL	000000	000000
8944068880	8-9440	6888	PIPE ASM; OIL	000000	000000
8944068902	8-9440	6890	PUMP ASM; INJ.	000000	000000
8944069680	8-9440	6968	PULLEY; CRANKSHAFT	000000	000000
8944069810	8-9440	6981	BEARING; ROTOR,GEN	000001	000010
8944069820	8-9440	6982	RETAINER; ROTOR,GEN	000000	000000
8944072451	8-9440	7245	FAN ASM.	000000	000000
8944076162	8-9440	7616	MANIFOLD; INLET	000000	000000
8944076221			PIPE; INJ NOZZLE LE	000000	000000
8944076240			BELT; FAN	000000	000000
8944076820	8-9440	7682	AIR CLEANER	000000	000000
8944077750	8-9440	7775	REPAIR KIT;AUTO	000000	000000
8944078791	8-9440	7879	NOZZLE ASM; INJECTION	000000	000000
8944078792	8-9440	7879	NOZZLE ASM; INJECTION	000000	000000
8944078793	8-9440	7879	NOZZLE ASM; INJECTION	000000	000011
8944079500	8-9440	7950	NOZZLE ASM; INJ.	000000	000000
8944079502	8-9440	7950	NOZZLE ASM; INJ.	000000	000000
8944079511	8-9440	7951	NOZZLE	000000	000000
8944079512	8-9440	7951	NOZZLE	000001	000004
8944079561	8-9440	7956	PUMP ASM; INJ.	000000	000000
8944079562	8-9440	7956	PUMP ASM; INJ.	000000	000003
8944079570	8-9440	7957	INJECTION PUMP ASM	000000	000000
8944079572	8-9440	7957	INJECTION PUMP ASM	000000	000000
8944079581	8-9440	7958	PUMP ASM; INJ	000000	000000
8944079582	8-9440	7958	PUMP ASM; INJ	000001	000000
8944079591	8-9440	7959	PUMP ASM; INJ.	000000	000000
8944079600	8-9440	7960	PUMP ASM; INJ.	000000	000000
8944079601	8-9440	7960	PUMP ASM; INJ.	000000	000002
8944080780	8-9440	8078	FUEL FILTER;CER	000000	000017
8944080790	8-9440	8079	FAN ASM; COOLING	000000	000000
8944080791	8-9440	8079	FAN ASM; COOLING	000000	000002
8944080850			SEAL; OIL	000000	000000
8944080851			SEAL; OIL	000000	000002
8944081390	8-9440	8139	RADIATOR CAP 2/3KC1	000000	000000
8944081391	8-9440	8139	RADIATOR CAP 2/3KC1	000007	000004
8944081397	8-9440	8139	RADIATOR CAP 2/3KC1	000000	000000
8944082060	8-9440	8206	HANGER; ENGINE, LH	000001	000000
8944082070	8-9440	8207	RING SET,PISTON	000000	000011
8944083610	8-9440	8361	PULLEY;A/C CRAN	000000	000014
8944083650	8-9440	8365	GENERATOR ASM	000000	000000
8944083760	8-9440	8376	DIODE ASM.	000000	000000
8944083960			DIODE;GENERATOR	000000	000000

8944083990	8-9440	8399	PUMP;VACUUM	000000	000000
8944084130	8-9440	8413	WASHER;HINGE	000005	000005
8944084460	8-9440	8446	FLYWHEEL ASM; 3KB1	000000	000000
8944084462	8-9440	8446	FLYWHEEL ASM; 3KB1	000000	000000
8944084760	8-9440	8476	SHUTDOWN SOLENOID	000000	000000
8944084870	8-9440	8487	BRACKET; STOPPER CABLE	000000	000000
8944085000	8-9440	8500	BOLT; HOUSING	000002	000000
8944085090	8-9440	8509	PISTON; I/PUMP	000000	000000
8944085120	8-9440	8512	VALVE; DELIVERY	000000	000000
8944085170			WASHER	000003	000000
8944085190	8-9440	8519	CAP; LOCK	000000	000000
8944085200	8-9440	8520	PLUG; L=2.1	000000	000000
8944085210	8-9440	8521	PLUG; L=2.3	000000	000000
8944085220	8-9440	8522	PLUG; L=2.5	000000	000000
8944085230	8-9440	8523	PLUG; L=2.7	000000	000000
8944085240	8-9440	8524	PLUG; L=2.9	000000	000000
8944085250	8-9440	8525	PLUG; L=3.1	000000	000000
8944085260	8-9440	8526	PLUG; L=3.3	000000	000000
8944085270	8-9440	8527	PLUG; L=3.5	000000	000000
8944085280	8-9440	8528	PLUG; L=3.7	000000	000000
8944085290	8-9440	8529	PLUG; L=3.9	000000	000000
8944085300	8-9440	8530	PLUG; L=4.1	000000	000000
8944085310	8-9440	8531	PLUG; L=4.3	000000	000000
8944085320	8-9440	8532	PLUG; L=4.5	000000	000000
8944085330	8-9440	8533	PLUG; L=4.7	000000	000000
8944085340	8-9440	8534	PLUG; L=4.9	000000	000000
8944085350	8-9440	8535	PLUG; L=5.1	000000	000000
8944085370	8-9440	8537	SPRING; GOV.	000000	000000
8944085420			FLYWEIGHT	000000	000000
8944085431	8-9440	8543	PUMP ASM; INJ.	000000	000000
8944088042			INJECTION NOZZ	000000	000000
8944088840	8-9440	8884	CRANKSHAFT ASM	000000	000000
8944088850	8-9440	8885	CRANKSHAFT ASM	000000	000000
8944088860	8-9440	8886	CRANKSHAFT ASM	000000	000000
8944088870	8-9440	8887	CRANKSHAFT ASM	000000	000000
8944088880	8-9440	8888	CRANKSHAFT ASM.	000000	000000
8944089200	8-9440	8920	CLIP;MTG.FUEL	000001	000000
8944093730	8-9440	9373	ROTOR SET;OIL PUMP	000000	000000
8944094120	8-9440	9412	CAMSHAFT	000000	000000
8944095731	8-9440	9573	SHAFT;CAM, INJ.PUMP	000000	000000
8944095740	8-9440	9574	PUMP ASM; OIL	000000	000000
8944095742	8-9440	9574	PUMP ASM; OIL	000000	000002
8944095750	8-9440	9575	PUMP ASM;OIL	000000	000000
8944095751	8-9440	9575	PUMP ASM;OIL	000000	000002
8944095760	8-9440	9576	BODY ASM; OIL PUMP	000000	000000
8944096210	8-9440	9621	NIPPLE; WATER DRAINCOCK	000000	000000
8944096220	8-9440	9622	PIPE;WATER DRAIN	000000	000000

8944096300			GEAR; 3RD MAIN SHAFT	000000	000000
8944096310			GEAR; 3RD, MAIN SHAFT	000000	000000
8944096510	8-9440	9651	FLYWHEEL ASM 4JB1	000000	000000
8944096590	8-9440	9659	RADIATOR ASM.	000000	000000
8944096700	8-9440	9670	SPRING ASM.; LE	000000	000001
8944097072	8-9440	9707	PLUG; WATER DRAIN	000000	000000
8944097120	8-9440	9712	BOLT;HD LAMP	000000	000000
8944097142	8-9440	9714	PAN ASM; OIL	000000	000000
8944097170	8-9440	9717	BRACKET; AIR CLEANER 3KC/	000000	000000
8944097341	8-9440	9734	LEVER; FUEL CUT	000000	000000
8944097351	8-9440	9735	LINK ROD	000000	000000
8944097360	8-9440	9736	BUSH*	000004	000000
8944097361	8-9440	9736	BUSH	000000	000000
8944098741	8-9440	9874	PUMP ASM;OIL	000000	000000
8944098760	8-9440	9876	CRANKSHAFT ASM	000000	000000
8944098780	8-9440	9878	PUMP ASM.;OIL	000000	000000
8944098781	8-9440	9878	PUMP ASM.;OIL	000000	000000
8944099660	8-9440	9966	FUEL PIPE ASM	000000	000001
8944100160	8-9441	0016	CORE ASM; HEAT EXCHANGER	000000	000000
8944100170	8-9441	0017	BAFFLE; HEAT EXCHANGER	000000	000000
8944100180	8-9441	0018	COVER; HEAT EXCHANGER	000000	000000
8944100190	8-9441	0019	FILLER ASM; OIL	000000	000000
8944100200	8-9441	0020	PACKING; OIL FILLER COVER	000000	000000
8944100210	8-9441	0021	COVER; OIL PAN	000000	000000
8944100220	8-9441	0022	MANIFOLD ASM.;	000000	000000
8944100240	8-9441	0024	FILLER ASM; HEAT EXCHANGE	000000	000000
8944100250	8-9441	0025	HOSE; RUBBER	000000	000000
8944100251	8-9441	0025	HOSE; RUBBER	000000	000002
8944100260	8-9441	0026	HOSE; RUBBER	000000	000000
8944100261	8-9441	0026	HOSE; RUBBER	000000	000000
8944100270	8-9441	0027	FLYWHEEL HOUSING	000000	000000
8944100280	8-9441	0028	PAN ASM; OIL	000000	000000
8944100310	8-9441	0031	PIPE ASM; FUEL	000000	000006
8944100321	8-9441	0032	SPACER; FLYWHEEL HOUSING	000000	000000
8944100330	8-9441	0033	PACKING; HEAT EXCHANGER	000000	000000
8944100340	8-9441	0034	ADAPTER; FLYWHEEL	000000	000000
8944100350	8-9441	0035	OUTLET PIPE; WATER	000000	000000
8944100360	8-9441	0036	BAFFLE; OIL PAN	000000	000000
8944100370	8-9441	0037	STRAINER ASM; OIL PUMP	000000	000000
8944100380	8-9441	0038	PIPE; SEA W/P TO HEAT EXC	000000	000000
8944100390	8-9441	0039	MANIFOLD ASM; INLET & EXH	000000	000000
8944100710	8-9441	0071	RING GEAR	000000	000058
8944101340	8-9441	0134	BRACKET; RELAY	000006	000003
8944101350	8-9441	0135	BRACKET; TIMER	000000	000000
8944101360	8-9441	0136	BRACKET; RESISTER	000000	000000
8944101381	8-9441	0138	BOX; SWITCH	000000	000000
8944101391	8-9441	0139	BOX ASM; SWITCH	000000	000000

8944101420	8-9441	0142	PLATE; LOCK	000000	000000
8944101430	8-9441	0143	THROWER; OIL TURBOCHARGR	000000	000000
8944101450	8-9441	0145	SEAL; RING, BLOWER	000000	000000
8944101460	8-9441	0146	RING: SEAL	000000	000000
8944101470	8-9441	0147	NUT; LOCK	000000	000000
8944101500	8-9441	0150	METAL; THRUST	000000	000000
8944101560	8-9441	0156	B O L T	000000	000000
8944101580	8-9441	0158	RETAINING; RING	000004	000000
8944101591	8-9441	0159	SCREW	000000	000000
8944101600	8-9441	0160	WASHER	000000	000000
8944101611	8-9441	0161	SCREW	000000	000000
8944101920	8-9441	0192	BRACKET; FUEL FILTER	000000	000000
8944101921	8-9441	0192	BRACKET; FUEL FILTER	000000	000000
8944101990	8-9441	0199	HOSE; WATER COOLER	000000	000000
8944102670	8-9441	0267	TURBO ASM, NEW	000000	000000
8944103230	8-9441	0323	GO-TO 8-9438 3571 (ITC "	000000	000000
8944103390	8-9441	0339	CONDENSER;GEN	000000	000000
8944103440	8-9441	0344	NUT ASM;PULLEY	000000	000000
8944103450	8-9441	0345	SCREW KIT	000000	000000
8944103610	8-9441	0361	PIN;CLUTCH	000012	000020
8944103930	8-9441	0393	ROTOR ASM; GEN.	000000	000006
8944103940	8-9441	0394	STATOR ASM;GENE	000000	000000
8944103950	8-9441	0395	CVR ASM;RR,GENE	000000	000000
8944103960	8-9441	0396	COVER; RR, GEN	000000	000000
8944103970	8-9441	0397	RECTIFIER; GEN	000000	000000
8944103980	8-9441	0398	PULLEY ASM;W/FA	000000	000001
8944103990	8-9441	0399	PUMP ASM;VAC,GE	000000	000009
8944104000	8-9441	0400	FLANGE ASM;VAC	000000	000000
8944104024	8-9441	0402	PUMP ASM; INJ.	000000	000000
8944104025	8-9441	0402	PUMP ASM; INJ.	000000	000000
8944104030	8-9441	0403	CASE; CRANK	000000	000000
8944104033	8-9441	0403	CASE; CRANK	000000	000000
8944104040	8-9441	0404	BRACKET; FUEL FILTER 4JA/	000000	000021
8944104072	8-9441	0407	FLYWHEEL ASM; 4JC1	000000	000000
8944104081	8-9441	0408	FLYWHEEL	000000	000000
8944104090	8-9441	0409	STARTER; HITACHI	000000	000000
8944104114	8-9441	0411	HOUSING; FLYWHEEL 4JC1	000000	000000
8944104550	8-9441	0455	COOLER ASM; OIL	000000	000000
8944104571	8-9441	0457	GUARD; GENERATOR UM3KC1-E	000001	000000
8944105020	8-9441	0502	BELT ASM; COOLING	000000	000000
8944105021	8-9441	0502	BELT ASM; COOLING	000000	000000
8944109602	8-9441	0960	VALVE; EXHAUST	000000	000004
8944109810	8-9441	0981	BEARING;ROTOR,GEN.	000000	000000
8944109820	8-9441	0982	RETAINER;ROTOR,GEN.	000000	000000
8944109840	8-9441	0984	ROTOR;GEN	000000	000000
8944110010	8-9441	1001	STUD; RR. PLATE	000000	000000
8944110021			PIPE; HSG TO HTR	000000	000000

8944110030		BOLT; HEX HD	000000	000000
8944110031		BOLT; HEX HD	000000	000219
8944110080	8-9441	1008	STUD; SPACER	000000 000017
8944110732	8-9441	1073	HOSE; INLET PIPE	000000 000000
8944110840	8-9441	1084	OIL FILTER ELEMENT	000000 000000
8944111640	8-9441	1164	PUMP ASM; INJ.	000000 000000
8944111990	8-9441	1199	SCREW; SEMS SUPP	000000 000000
8944112850	8-9441	1285	WIRE ASM; LEAD	000001 000000
8944112860	8-9441	1286	PLATE; BAFFLE	000000 000000
8944112861	8-9441	1286	PLATE; BAFFLE	000000 000000
8944112872	8-9441	1287	COVER ASM; CLY HEAD	000000 000000
8944112875	8-9441	1287	COVER ASM; CLY HEAD	000001 000000
8944112880	8-9441	1288	COVER ASM; CLY HEAD	000000 000000
8944112890	8-9441	1289	PLATE; BAFFLE	000000 000000
8944112891	8-9441	1289	PLATE; BAFFLE	000000 000000
8944112900	8-9441	1290	HOSE; RUBBER	000001 000000
8944112910	8-9441	1291	BEARING KIT	000000 000000
8944112911	8-9441	1291	BEARING KIT	000000 000003
8944112941	8-9441	1294	SUPERSEDED** RINGSET	000000 000000
8944112951	8-9441	1295	RING SET; PISTON	000000 000025
8944112990	8-9441	1299	FAN ASM; COOLING	000000 000001
8944113000	8-9441	1300	MANIFOLD ASM	000000 000000
8944113010	8-9441	1301	MANIFOLD ASM; INLET 3KC1	000000 000000
8944113050	8-9441	1305	RING SET; PISTON	000010 000000
8944113230	8-9441	1323	GASKET; TURBO MT	000010 000044
8944113240	8-9441	1324	GASKET; EXH. PIPE	000101 003820
8944113250	8-9441	1325	PIPE; OIL TURBO	000000 000009
8944113660	8-9441	1366	SWITCH ASM; RE	000000 000000
8944113661	8-9441	1366	SWITCH ASM; RE/1ST & 2ND	000000 000000
8944113881	8-9441	1388	PISTON, STD	000000 000000
8944115681	8-9441	1568	PISTON	000000 000000
8944115682	8-9441	1568	PISTON	000000 000000
8944115690	8-9441	1569	MANIFOLD ASM; INLET	000000 000000
8944115700	8-9441	1570	MANIFOLD ASM; INLET	000000 000000
8944115720	8-9441	1572	BLOCK ASM; CYLINDER	000000 000000
8944115723	8-9441	1572	BLOCK ASM; CYLINDER	000000 000002
8944115731	8-9441	1573	BLOCK ASM; CYLINDER	000000 000000
8944115732	8-9441	1573	BLOCK ASM; CYLINDER	000000 000000
8944115751	8-9441	1575	BLOCK ASM; CYLINDER	000000 000000
8944115890		PIPE; WATER THERMOSTAT HSG	000000	000000
8944116340	8-9441	1634	HOSE; RUBBER	000000 000000
8944117980	8-9441	1798	HOUSING; HEAT EXCHANGER	000000 000000
8944117990	8-9441	1799	FOOT; ENGINE FRT.	000000 000000
8944118000	8-9441	1800	FOOT; ENGINE FRT.	000000 000000
8944118010	8-9441	1801	FOOT; ENGINE RR.	000000 000000
8944118020	8-9441	1802	FOOT; ENGINE RR.	000000 000000
8944118030	8-9441	1803	PIPE ASM; HEAT EXCHANGER	000000 000000

8944118270	8-9441	1827	SHAFT; TOP GEAR	000000	000000
8944118472	8-9441	1847	CASE; TRANS	000000	000000
8944118543	8-9441	1854	RADIATOR ASM, ;	000000	000000
8944119040	8-9441	1904	IMPELLER	000001	000000
8944119151	8-9441	1915	BEARING KIT	000000	000003
8944119230	8-9441	1923	LEVER ASM;W/O	000000	000000
8944120131	8-9441	2013	MANIFOLD ASM; INLET 3KB1	000000	000000
8944120250	8-9441	2025	MANIFOLD ASM; INLET 3KC1	000000	000000
8944121220	8-9441	2122	HEAD ASM.;CYL	000000	000000
8944122020	8-9441	2202	CLIP/BAND; MASTER CYL	000000	000000
8944122491	8-9441	2249	ADAPTER; EXHAUST TURBO	000000	000000
8944122500	8-9441	2250	COOLER; ADAPTER	000000	000003
8944122510	8-9441	2251	BRACKET; ADAPTER	000000	000000
8944122760	8-9441	2276	BRACKET; FUEL PIPE FIX	000000	000000
8944123110	8-9441	2311	GEAR; RING	000000	000000
8944123420	8-9441	2342	BOLT;BRKT,HOSE	000000	000000
8944124220	8-9441	2422	BOLT; ACTUATOR/RELAY BOX	000000	000000
8944124750			FLYWHEEL ASM	000000	000000
8944124781	8-9441	2478	BRKT.;TACHO SENSOR	000000	000000
8944124790	8-9441	2479	PIPE ASM; WATER PUMP	000000	000000
8944125060	8-9441	2506	RUBBER;SUPPORT	000000	000000
8944126200	8-9441	2620	TUBE;DISTANCE	000000	000000
8944126201	8-9441	2620	TUBE;DISTANCE	000000	000000
8944127052	8-9441	2705	FILTER ASM; FUEL	000000	000000
8944127730	8-9441	2773	SPACER;RUBBER	000000	000000
8944128150	8-9441	2815	CARTRIDGE, OIL	000000	000000
8944132400	8-9441	3240	LEVER; LUMBER	000000	000000
8944133170			TRANSMISSION AS	000000	000000
8944133176			TRANSMISSION	000000	000000
8944135370	8-9441	3537	NUT;STARTER/TRMNL. EARTH	000000	000000
8944137211	8-9441	3721	RADIATOR ASM	000000	000000
8944137212	8-9441	3721	RADIATOR ASM	000000	000000
8944137230	8-9441	3723	PLUNGER ASM.	000004	000000
8944137240	8-9441	3724	LEVER	000000	000000
8944137250	8-9441	3725	COVER	000000	000000
8944137260	8-9441	3726	SPRING	000000	000000
8944137280	8-9441	3728	SPRING; CONT LEVER,GOV	000000	000000
8944137290	8-9441	3729	PLATE	000000	000000
8944137300	8-9441	3730	COVER	000000	000000
8944137310	8-9441	3731	SPRING	000000	000000
8944137320	8-9441	3732	SPRING	000000	000000
8944137330	8-9441	3733	SPRING ASM.	000000	000000
8944137340	8-9441	3734	PLATE	000000	000000
8944137350	8-9441	3735	ANEROID COMPENSATOR ASM.	000000	000000
8944137360	8-9441	3736	SPRING	000000	000000
8944137370	8-9441	3737	O-RING	000000	000000
8944137410	8-9441	3741	FLANGE; TIMING	000000	000000

8944137420	8-9441	3742	FLYWEIGHT	000000	000000
8944137430	8-9441	3743	SPLING	000000	000000
8944137440	8-9441	3744	FLYWEIGHT	000000	000000
8944137450	8-9441	3745	FLYWEIGHT ASM.	000000	000000
8944137460	8-9441	3746	SPLING	000000	000000
8944137470	8-9441	3747	FLYWEIGHT	000000	000000
8944137611	8-9441	3761	COVER; CAMSHAFT	000000	000000
8944137630	8-9441	3763	HOSE; LOWER	000000	000001
8944137640	8-9441	3764	HOSE; UPPER	000000	000000
8944137760	8-9441	3776	TIMER	000000	000000
8944138220	8-9441	3822	CLIP; HARNESS,WTR OUTLT	000000	000000
8944138900	8-9441	3890	COVER ASM; FRT, GEN	000000	000000
8944142040	8-9441	4204	FLYWHEEL ASM	000000	000035
8944142090	8-9441	4209	STARTER	000000	000000
8944143410	8-9441	4341	COVER ASM; OIL PORT	000000	000000
8944143421	8-9441	4342	COVER; TIMING GEAR CASE	000000	000000
8944143431	8-9441	4343	COVER; TIMING GEAR CASE	000000	000000
8944143470	8-9441	4347	CASE;CRANK	000000	000000
8944143570	8-9441	4357	CASE; TIMING GEARS	000000	000000
8944143970	8-9441	4397	BRACKET; AIR CLEANER	000000	000000
8944144820	8-9441	4482	DISC ASM;CLUTCH	000000	000000
8944145160	8-9441	4516	HOSE; AIR CLEANER	000000	000003
8944145570	8-9441	4557	SPACER; ADJ PLATE-CYL HD	000000	000000
8944145580	8-9441	4558	SPACER; ADJ PLATE-TIMING	000000	000000
8944145590	8-9441	4559	HANGER; REAR	000000	000000
8944145600	8-9441	4560	PLATE; ADJ-EL-UM3KC1	000000	000000
8944145610	8-9441	4561	GUARD; GENERATOR UM3KC1-E	000000	000000
8944146040	8-9441	4604	HOSE;RUBBER PCV	000001	000000
8944146050	8-9441	4605	HOSE; RUBBER, PVC	000002	000000
8944146400	8-9441	4640	SHAFT ASM;FLEX	000000	000000
8944146401	8-9441	4640	SHAFT ASM;FLEX	000000	000000
8944146402	8-9441	4640	SHAFT ASM; FLEX	000000	000003
8944146421	8-9441	4642	NOZZLE; INJ	000000	000000
8944146460	8-9441	4646	COVER;SUPPORT	000000	000001
8944146800	8-9441	4680	CAP; WATER PIPE	000000	000000
8944146880	8-9441	4688	CAP; HEATER PIPE	000000	000776
8944147282	8-9441	4728	BLOCK ASM; CYLINDER	000000	000000
8944147284	8-9441	4728	BLOCK ASM; CYLINDER	000000	000000
8944147287	8-9441	4728	BLOCK ASM; CYLINDER	000000	000000
8944147290	8-9441	4729	BLOCK ASM; CYLINDER	000000	000000
8944147292	8-9441	4729	BLOCK ASM; CYLINDER	000000	000000
8944147294	8-9441	4729	BLOCK ASM; CYLINDER	000000	000000
8944147298	8-9441	4729	BLOCK ASM; CYLINDER	000000	000000
8944147401			CAP; BEARING FRONT	000000	000000
8944147421			METAL KIT; CRANK	000000	000000
8944147451	8-9441	4745	PISTON; STD	000000	000000
8944147580	8-9441	4758	MANIFOLD ASM; INLET	000000	000000

8944147590	8-9441	4759	MANIFOLD ASM 3KR1	000000	000000
8944147600	8-9441	4760	PAN ASM; OIL 3KR1	000000	000001
8944147622	8-9441	4762	STRAINER ASM; OIL PUMP 3K	000000	000000
8944147623	8-9441	4762	STRAINER ASM; OIL PUMP 3K	000000	000000
8944147630	8-9441	4763	GUAGE ASM; OIL	000000	000000
8944147690	8-9441	4769	GENERATOR: 12V/55A	000000	000000
8944147691	8-9441	4769	GENERATOR: 12V/55A	000000	000004
8944147951	8-9441	4795	FILTER;ASM;FUEL	000000	000000
8944147952	8-9441	4795	FILTER;ASM;FUEL	000000	000000
8944147953	8-9441	4795	FILTER;ASM;FUEL	000000	000000
8944147961	8-9441	4796	FUEL FILTER	000000	000000
8944147962	8-9441	4796	FUEL FILTER	000000	000000
8944147963	8-9441	4796	FUEL FILTER	000000	000000
8944148310	8-9441	4831	BREATHER ASM; AIR	000000	000000
8944148311	8-9441	4831	BREATHER ASM; AIR	000000	000002
8944148330	8-9441	4833	VALVE; INLET	000000	000000
8944148700	8-9441	4870	SPIDER ASM.	000000	000000
8944148710	8-9441	4871	SEAL;OIL	000000	000000
8944148720	8-9441	4872	BEARING;BALL	000000	000000
8944148730	8-9441	4873	SPACER	000000	000000
8944148740	8-9441	4874	RING;SECTION	000000	000000
8944148750	8-9441	4875	WASHER;THRUST	000000	000000
8944148760	8-9441	4876	PINION ASM.; (G/RATIO=1.66	000000	000000
8944148770	8-9441	4877	PINION ASM.; (G/RATIO=2.00	000000	000000
8944148780	8-9441	4878	PINION ASM.; (G/RATIO=2.50	000000	000000
8944148790	8-9441	4879	PINION ASM.; (G/RATIO=3.00	000000	000000
8944148800	8-9441	4880	PINION ASM.; (G/RATIO=3.47	000000	000000
8944148810	8-9441	4881	RING;SNAP	000000	000000
8944148820	8-9441	4882	PLATE;BACK	000000	000000
8944148830	8-9441	4883	PLATE;FIBER	000000	000000
8944148840	8-9441	4884	PLATE;STEEL	000000	000000
8944148850	8-9441	4885	WASHER;THRUST	000000	000000
8944148860	8-9441	4886	COLLAR;THRUST	000000	000000
8944148870	8-9441	4887	RING;SNAP	000000	000000
8944148880	8-9441	4888	SPRING;	000000	000000
8944148890	8-9441	4889	PISTION;CLUTCH	000000	000000
8944148900	8-9441	4890	RING;SQUARE	000000	000000
8944148910	8-9441	4891	SCREW;CONDENSER, A/C	000000	000000
8944148920	8-9441	4892	SHAFT ASM.; INPUT	000000	000000
8944148930	8-9441	4893	BEARING;BALL	000000	000000
8944148940	8-9441	4894	RING;OIL SEAL	000000	000000
8944148950	8-9441	4895	BLOCK;PUMP DRIVE	000000	000000
8944148960	8-9441	4896	BEARING;BALL	000000	000000
8944148970	8-9441	4897	COLLAR;THRUST	000000	000000
8944148980	8-9441	4898	PLATE;BACK	000000	000000
8944148990	8-9441	4899	SHAFT ASM.;	000000	000000
8944149000	8-9441	4900	BEARING	000000	000000

8944149010	8-9441	4901	SHAFT ASM.;OUTPUT (G/RATIO	000000	000000
8944149020	8-9441	4902	SHAFT ASM.;OUTPUT (G/RATIO	000000	000000
8944149030	8-9441	4903	SHAFT ASM.;OUTPUT (G/RATIO	000000	000000
8944149040	8-9441	4904	SHAFT ASM.;OUTPUT (G/RATIO	000000	000000
8944149050	8-9441	4905	SHAFT ASM.;OUTPUT (G/RATIO	000000	000000
8944149060	8-9441	4906	BEARING;BALL	000000	000000
8944149070	8-9441	4907	SHROUD	000000	000000
8944149080	8-9441	4908	BOLT;SOCKET	000000	000000
8944149090	8-9441	4909	SEAL;OIL	000000	000000
8944149100	8-9441	4910	FLANGE;OUTPUT	000000	000000
8944149110	8-9441	4911	FLANGE;COMPANION	000000	000000
8944149120	8-9441	4912	PLATE;LOCK	000000	000000
8944149130	8-9441	4913	HOUSING ASM.;	000000	000000
8944149140	8-9441	4914	GASKET	000000	000000
8944149150	8-9441	4915	COVER ASM.;REAR	000000	000000
8944149160	8-9441	4916	PLUG;DRAIN	000000	000000
8944149170	8-9441	4917	STRAINER	000000	000000
8944149180	8-9441	4918	PLUG	000000	000000
8944149190	8-9441	4919	BOLT	000000	000000
8944149200	8-9441	4920	GAUGE ASM; OIL LEVEL	000000	000000
8944149210	8-9441	4921	COVER	000000	000000
8944149220	8-9441	4922	GASKET	000000	000000
8944149230	8-9441	4923	TUBE ASM.;FIN	000000	000000
8944149240	8-9441	4924	O-RING	000000	000000
8944149250	8-9441	4925	COVER	000000	000000
8944149260	8-9441	4926	PLUG	000000	000000
8944149270	8-9441	4927	SPRING;	000000	000000
8944149280	8-9441	4928	SPACER;T=2.0	000000	000000
8944149290	8-9441	4929	SPACER;T=2.5	000000	000000
8944149300	8-9441	4930	SPACER;T=3.0	000000	000000
8944149310	8-9441	4931	SPACER;T=3.5	000000	000000
8944149320	8-9441	4932	PISTON	000000	000000
8944149321	8-9441	4932	PISTON	000000	000000
8944149330	8-9441	4933	STEM;VALVE	000000	000000
8944149340	8-9441	4934	PLATE	000000	000000
8944149350	8-9441	4935	BOLT;SOCKET	000000	000000
8944149360	8-9441	4936	SPRING	000000	000000
8944149370	8-9441	4937	PUMP ASM.;GEAR	000000	000000
8944149400	8-9441	4940	COVER	000000	000000
8944149410	8-9441	4941	GASKET	000000	000000
8944149420	8-9441	4942	PISTON	000000	000000
8944149430	8-9441	4943	SPACER	000000	000000
8944149440	8-9441	4944	SPRING	000000	000000
8944149450	8-9441	4945	PISTON	000000	000000
8944149460	8-9441	4946	BODY;VALVE	000000	000000
8944149470	8-9441	4947	STEM;VALVE	000000	000000
8944149480	8-9441	4948	PLATE	000000	000000

8944149740	8-9441	4974	RADIATOR ASM.;	000000	000000
8944149750	8-9441	4975	HOSE; RADIATOR UPPER	000000	000000
8944149760	8-9441	4976	HOSE; RADIATOR LOWER	000000	000000
8944149930			MANIFOLD; INLET	000000	000000
8944149940	8-9441	4994	MANIFOLD; INLET	000000	000000
8944150110	8-9441	5011	ROTOR ASM; GEN.	000000	000000
8944150140	8-9441	5014	DIODE ASM;RECTI	000000	000000
8944150770	8-9441	5077	FILTER ASM; FUEL	000000	000000
8944150771	8-9441	5077	FILTER ASM; FUEL	000000	000000
8944150773	8-9441	5077	FILTER ASM; FUEL	000000	000000
8944150891	8-9441	5089	DUCT; AIR CLEAN	000000	000000
8944151500			GLASS; WINDSHIELD	000000	000001
8944151560	8-9441	5156	HOSE; RUBBER L=230	000000	000000
8944151620	8-9441	5162	SHAFT;REVERSE	000000	000000
8944151621	8-9441	5162	SHAFT;REVERSE	000000	000003
8944152120	8-9441	5212	BRACKET; AIR CLEANER	000000	000000
8944152122	8-9441	5212	BRACKET; AIR CLEANER	000001	000000
8944152290	8-9441	5229	HOSE; PCV L=900,4BD1	000000	000000
8944152310	8-9441	5231	ADAPTER;OIL P. SWITCH	000000	000000
8944152390	8-9441	5239	PACKING; OIL PI	000005	000000
8944152400	8-9441	5240	COVER; TAPPET C	000000	000000
8944152681			PLATE; NAME	000000	000000
8944152691			PLATE; NAME	000000	000000
8944153990			GOVERNOR ASM.	000000	000000
8944154010	8-9441	5401	GOVERNOR ASM.	000000	000000
8944154020	8-9441	5402	GOVERNOR ASM.	000000	000000
8944154040	8-9441	5404	TIMER;AUTO INJ	000000	000002
8944154050	8-9441	5405	TIMER ASM.	000000	000000
8944154060	8-9441	5406	TIMER;AUTO INJ	000000	000000
8944154061	8-9441	5406	TIMER;AUTO INJ	000000	000001
8944154070	8-9441	5407	TIMER AUTO;INJ	000000	000003
8944154970			PLATE;BAFFLE	000000	000000
8944155870			CUSHION; A/C TO BRACKET	000000	000000
8944160690	8-9441	6069	FILTER; OIL (SPIN ON)	000000	000000
8944161110	8-9441	6111	BRKT ASM; ENG	000000	000000
8944161120	8-9441	6112	SHAFT ASM;ENG.	000000	000000
8944161121	8-9441	6112	SHAFT ASM; ENG	000000	000002
8944161301	8-9441	6130	PULLEY; FAN	000000	000000
8944161302	8-9441	6130	PULLEY; FAN	000000	000000
8944161303	8-9441	6130	PULLEY; FAN	000005	000000
8944161310	8-9441	6131	HOUSING; THERMOSTAT	000000	000002
8944161700	8-9441	6170	PLUG;OIL COOLER	000000	000058
8944163041	8-9441	6304	COMPRESSOR ASM	000000	000037
8944163510	8-9441	6351	TURBOCHARGER ASM.	000000	000000
8944163701	8-9441	6370	SHIELD;HEAT, INJ NOZZLE	000000	000000
8944163732			CRANK SHAFT	000000	000000
8944163750	8-9441	6375	SENSOR ASM;SED.	000000	000000

8944163760	8-9441	6376	PLUG ASM;SED.	000000	000003
8944163770	8-9441	6377	GSKT;SEDIMENTOR	000000	000000
8944164430	8-9441	6443	ROTOR ASM.	000000	000000
8944164450	8-9441	6445	BRACKET ASM; REAR	000000	000000
8944164470	8-9441	6447	BRUSH, HOLDER	000000	000000
8944164480	8-9441	6448	BRACKET; REAR	000000	000000
8944164510	8-9441	6451	STATOR ASM.	000000	000000
8944164520	8-9441	6452	BRACKET ASM;	000000	000000
8944164530	8-9441	6453	PULLEY	000000	000000
8944164580	8-9441	6458	COOLER ASM	000000	000000
8944165130			COIL ASM; IGNITION	000000	000000
8944165200			NAME PLATE	000000	000000
8944165830	8-9441	6583	TIMER	000000	000002
8944165910	8-9441	6591	GOVERNOR ASM.	000000	000000
8944166930	8-9441	6693	WASHER;BODY MTG RUBBER	000004	000012
8944167131	8-9441	6713	TUBE; GUIDE	000000	000000
8944167132	8-9441	6713	TUBE; GUIDE	000001	000000
8944167133	8-9441	6713	TUBE; GUIDE	000000	000000
8944167990	8-9441	6799	HOUSING; SEA WATER PUMP	000000	000000
8944168000	8-9441	6800	SHAFT UM3KC1	000000	000000
8944168010	8-9441	6801	PLATE UM3KC1	000000	000000
8944168020	8-9441	6802	COVER UM3KC1	000000	000000
8944168030	8-9441	6803	IMPELLER UM3KC1	000001	000000
8944168040	8-9441	6804	SEAL; WATER UM3KC1	000001	000000
8944168050	8-9441	6805	SEAL; OIL UM3KC1	000001	000000
8944168060	8-9441	6806	BOLT UM3KC1	000000	000000
8944168070	8-9441	6807	RING; SNAP UM3KC1	000000	000000
8944168080	8-9441	6808	BEARING UM3KC1	000009	000006
8944168090	8-9441	6809	O-RING UM3KC1	000001	000000
8944168100	8-9441	6810	PLUG; SEA WATER PUMP	000000	000000
8944168110	8-9441	6811	PACKING	000001	000000
8944168120	8-9441	6812	PIPE; SEA WATER PUMP	000000	000000
8944168610	8-9441	6861	BRACKET; INJ PUMP 4JA/B1	000000	000000
8944168630	8-9441	6863	PIPE; INLET 4JA/B1	000000	000000
8944168640	8-9441	6864	FAN ASM; COOLING	000000	000000
8944168641	8-9441	6864	FAN ASM; COOLING	000000	000000
8944168642	8-9441	6864	FAN ASM; COOLING	000000	000062
8944168650	8-9441	6865	PIPE ASM; INJ #1 4JA1	000000	000000
8944168652	8-9441	6865	PIPE ASM; INJ #1 4JA1	000000	000000
8944168660	8-9441	6866	PIPE ASM; INJ #2 4JA1	000000	000000
8944168670	8-9441	6867	PIPE ASM; INJ #3 4JA1	000000	000000
8944168672	8-9441	6867	PIPE ASM; INJ #3 4JA1	000000	000000
8944168680	8-9441	6868	PIPE ASM; INJ #4 4JA1	000000	000000
8944169412	8-9441	6941	SHAFT ASM; FUEL CUT	000000	000000
8944169420	8-9441	6942	LEVER ASM 3KC1	000000	000000
8944169427	8-9441	6942	LEVER ASM 3KC1	000000	000000
8944171630	8-9441	7163	PLUG;HOT 3KR1	000002	000000

8944171646	8-9441	7164	HEAD ASM,CYL	000000	000000
8944171647	8-9441	7164	HEAD ASM,CYL	000000	000003
8944175490	8-9441	7549	PIPE; VINYL, 14.5X9.5X450	000000	000000
8944178270	8-9441	7827	PIPE ASM; OIL	000003	000000
8944178280	8-9441	7828	PUMP ASM; INJ.	000000	000000
8944178284	8-9441	7828	PUMP ASM; INJ.	000000	000000
8944178310	8-9441	7831	PRESSURE; OIL 4JB1-PW	000003	000000
8944178481	8-9441	7848	SILENCER EXHAUST	000000	000000
8944178501	8-9441	7850	RADIATOR ASM.	000000	000000
8944178521	8-9441	7852	RADIATOR ASM	000000	000000
8944178530			METAL KIT; CRANKSHA	000000	000252
8944178540			METAL KIT; .50 CRANK	000000	000395
8944178550			METAL KIT; CR/SHF	000000	000033
8944178560			METAL KIT; 1.00 CRANK	000000	000067
8944178610			METAL SET; CONN ROD	000000	000173
8944178620			METAL SET; CONN ROD	000000	000515
8944178630			METAL SET; CONNROD	000000	000234
8944178640			METAL SET; CONNROD	000000	000979
8944179130	8-9441	7913	HOSE; RUBBER	000001	000002
8944179240	8-9441	7924	GENERATOR: 12V/55A	000000	000002
8944179260	8-9441	7926	FAN ASM; COOLING D=550	000000	000000
8944179261	8-9441	7926	FAN ASM; COOLING D=550	000000	000000
8944179831	8-9441	7983	SILENCER;EXH.	000000	000000
8944180010	8-9441	8001	HARNESS; BODY 3KC/3KR PU	000000	000000
8944180300	8-9441	8030	SPRING; TIMER, INJ. PUMP	000000	000000
8944180310	8-9441	8031	HEAD; DISTRIBUTOR, PUMP	000000	000000
8944180322	8-9441	8032	COVER; INJ. PUMP	000000	000000
8944180330	8-9441	8033	LEVER; GOVERNOR, INJ. PUM	000000	000000
8944180340	8-9441	8034	SPRING; GOVERNOR, INJ. PU	000000	000000
8944180350	8-9441	8035	PIPE: EYE,LINE	000002	000001
8944180360	8-9441	8036	EYE VAULT	000000	000000
8944180370	8-9441	8037	HOUSING; INJ. PUMP	000000	000000
8944180390	8-9441	8039	PLUNGER ASM; INJ PUMP	000000	000000
8944180500	8-9441	8050	BOLT; FLYWHEEL	000016	000000
8944180710	8-9441	8071	RADIATOR CAP 2/3KC1	000000	000000
8944181551	8-9441	8155	PLATE; RR 4JA1,4JB1	000000	000000
8944181552	8-9441	8155	PLATE; RR 4JA1,4JB1	000000	000000
8944181553	8-9441	8155	PLATE; RR 4JA1,4JB1	000000	000000
8944182090	8-9441	8209	SPRING;RETURN	000010	000033
8944183200	8-9441	8320	TURBOCHARGER ASM.	000000	000005
8944183220	8-9441	8322	TURBOCHARGER ASM	000000	000001
8944186671	8-9441	8667	ARMATURE ASM.	000000	000000
8944186820	8-9441	8682	BLOCK ASM.; JUNCTION	000000	000000
8944186860	8-9441	8686	HOUSING; FEED PUMP	000000	000000
8944186870	8-9441	8687	COVER; FEED PUMP	000000	000000
8944186880	8-9441	8688	TAPPET; FEED PUMP	000000	000000
8944186890	8-9441	8689	DIAPHRAGM; FEED PUMP	000001	000000

8944186900	8-9441	8690	LEVER; FEED PUMP	000000	000000
8944187282	8-9441	8728	PIPE ASM; INJECTION	000000	000000
8944188400	8-9441	8840	TIRMINAL ASM.	000000	000000
8944188410	8-9441	8841	ARMATURE ASM.	000000	000000
8944188420	8-9441	8842	TIRMINAL ASM.	000000	000000
8944188430	8-9441	8843	BRUSH	000000	000000
8944188440	8-9441	8844	HOLDER ASM; BRUSH	000000	000000
8944188450	8-9441	8845	BRACKET; REAR	000000	000000
8944188460	8-9441	8846	BRACKET; REAR	000000	000000
8944188470	8-9441	8847	BEARING; BALL	000005	000000
8944188480	8-9441	8848	BEARING; BALL	000007	000000
8944188490	8-9441	8849	BEARING BALL	000001	000000
8944188520	8-9441	8852	SEAL ASM.	000000	000000
8944188530	8-9441	8853	SHAFT ASM.	000000	000000
8944188540	8-9441	8854	CLUTCH ASM.;	000002	000000
8944188550	8-9441	8855	BRACKET ASM; FRONT	000000	000000
8944188560	8-9441	8856	BRACKET; CENTER	000000	000000
8944188570	8-9441	8857	PLUNGER ASM.	000001	000000
8944188580	8-9441	8858	BRACKET; CENTER	000000	000000
8944188590	8-9441	8859	COIL ASM; FIELD	000000	000000
8944188610	8-9441	8861	BUSH; INSULATE	000000	000000
8944188620	8-9441	8862	WASHER; INSULATE	000000	000000
8944188630	8-9441	8863	BRACKET ASM; REAR	000000	000000
8944188660	8-9441	8866	BEARING; BALL	000000	000000
8944188670	8-9441	8867	ARMATURE ASM.	000000	000000
8944188870	8-9441	8887	MANIFOLD;EXH	000000	000000
8944189191	8-9441	8919	GASKET;CYL HD	000000	000001
8944189200	8-9441	8920	GASKET; CYL. HEAD	000000	000000
8944189201	8-9441	8920	GASKET; CYL. HEAD	000000	000015
8944189210	8-9441	8921	GASKET CYL;HD	000000	000000
8944189211	8-9441	8921	GASKET CYL;HD	000000	000001
8944189220	8-9441	8922	SHAFT; CAM, INJ. PUMP	000000	000000
8944189230	8-9441	8923	PUMP ASM; OIL 2KC1	000000	000000
8944189231	8-9441	8923	PUMP ASM; OIL 2KC1	000000	000000
8944190860	8-9441	9086	COVER; OIL PAN	000002	000000
8944190870	8-9441	9087	PACKING; OIL PAN	000000	000001
8944191171			HOUSING	000000	000000
8944191172			HOUSING	000000	000000
8944191173			HOUSING	000000	000000
8944191174			HOUSING	000000	000035
8944191191			PIPE; BYPASS	000000	000009
8944191192			PIPE; BYPASS	000000	000107
8944191201			HOSE; WATER PIPE	000000	000000
8944191340	8-9441	9134	BRKT;CONT. WIRE	000001	000003
8944191350	8-9441	9135	SPACER;CONT.WIR	000000	000000
8944191351	8-9441	9135	SPACER;CONT.WIR	000000	000000
8944192830			ADAPTER; WATER DUCT	000000	000175

8944193801			DRAG LINK	000000	000000
8944194360	8-9441	9436	WATER DUCT	000000	000000
8944194361	8-9441	9436	WATER DUCT	000000	000000
8944194362	8-9441	9436	WATER DUCT	000000	000001
8944194550	8-9441	9455	BUSH; CONN ROD	000000	000000
8944194570	8-9441	9457	PULLEY; CRANK- 3 GROOVE	000000	000000
8944194572	8-9441	9457	PULLEY; CRANK- 3 GROOVE	000001	000000
8944194612	8-9441	9461	WATER PUMP KIT	000000	000000
8944194951	8-9441	9495	GEAR; INJECTION PUMP	000000	000000
8944195152	8-9441	9515	HOLDER ASM; NOZZLE	000000	000000
8944195240			CABLE KIT	000000	000000
8944195310			COVER; FUEL FILTER	000000	000000
8944195311	8-9441	9531	COVER; FUEL FILTER	000000	000000
8944195320	8-9441	9532	FILTER ASM; OIL	000000	000000
8944195321	8-9441	9532	FILTER ASM; OIL	000000	000002
8944195330	8-9441	9533	SENSOR ASM; FUEL	000000	000000
8944195331	8-9441	9533	SENSOR ASM; FUEL	000000	000000
8944195340	8-9441	9534	O-RING; F/FILTER	000000	000000
8944196020	8-9441	9602	GEAR; FLYWHEEL	000000	000000
8944196021	8-9441	9602	GEAR; FLYWHEEL	000000	000002
8944197130	8-9441	9713	HOSE; RUBBER, TUR	000000	000000
8944197190	8-9441	9719	GASKET: INLET PIPE	000000	000000
8944197200	8-9441	9720	COVER; INL MANI	000000	000000
8944197290	8-9441	9729	BOLT, CONNECTING	000000	000000
8944197291	8-9441	9729	BOLT, CONNECTING	000000	000000
8944197310	8-9441	9731	OIL FILLER	000000	000000
8944198440	8-9441	9844	GUAGE; OIL LEVEL	000000	000000
8944198560			TIMING BELTS	000000	000000
8944198791	8-9441	9879	SEDIMENTER; FUEL	000000	000000
8944198792	8-9441	9879	SEDIMENTER; FUEL	000000	000000
8944198793	8-9441	9879	SEDIMENTER; FUEL	000000	000001
8944198882	8-9441	9888	PUMP ASM; INJ.	000000	000000
8944199200	8-9441	9920	GAUGE; OIL LEVEL	000000	000000
8944199450	8-9441	9945	BRKT; GENERATOR	000000	000000
8944199640	8-9441	9964	SCREW; BRACKET FIX	000005	000000
8944199690			PLATE ASM, PRESS	000000	000000
8944200251	8-9442	0025	PLATE; ADJ., FAN BELT	000000	000000
8944200270	8-9442	0027	BREATHER ASM; AIR	000000	000000
8944200291	8-9442	0029	HOSE; A/CLEANER	000001	000000
8944200301	8-9442	0030	BRACKET; A/CLEANER	000000	000000
8944200421	8-9442	0042	PUMP ASM; INJ.	000000	000000
8944200530	8-9442	0053	METER BOARD ASM.;	000000	000000
8944200540	8-9442	0054	HARNESS; METER	000000	000000
8944200550	8-9442	0055	HARNESS; ENGINE	000000	000000
8944200551	8-9442	0055	HARNESS; ENGINE	000000	000000
8944200560	8-9442	0056	HARNESS; EXTENSION	000000	000000
8944200570	8-9442	0057	HARNESS; EXTENSION	000000	000000

8944200580	8-9442	0058	HARNESS; EXTENSION	000000	000000
8944200590	8-9442	0059	HARNESS; EXTENSION	000000	000000
8944200600	8-9442	0060	HARNESS; EXTENSION	000000	000000
8944200610	8-9442	0061	PILOT LAMP; OIL	000000	000000
8944200620	8-9442	0062	PILOT LAMP; WATER	000000	000000
8944200731	8-9442	0073	PLATE; LABLE	000000	000000
8944200732	8-9442	0073	PLATE; LABLE	000003	000001
8944201640	8-9442	0164	BRACKET;RETURN	000000	000001
8944202010			FUEL FILTERS	000001	000000
8944202400	8-9442	0240	BOX SWITCH / 3KR1	000000	000000
8944202403	8-9442	0240	BOX SWITCH / 3KR1	000001	000015
8944202410	8-9442	0241	WIRE HARNESS	000000	000000
8944202411	8-9442	0241	WIRE HARNESS	000000	000001
8944202421	8-9442	0242	HARNESS;WIRE ENG	000000	000000
8944202470	8-9442	0247	WASHER; CORRUGA	000000	000000
8944202960	8-9442	0296	SHAFT; MAIN	000000	000000
8944202981	8-9442	0298	COUPLING	000000	000000
8944202991	8-9442	0299	COUPLING	000000	000000
8944205280	8-9442	0528	SPRING; IDLE 1800 RPM 2KC	000000	000000
8944205290	8-9442	0529	FILTER ASM; OIL	000000	000000
8944205300	8-9442	0530	FLYWHEEL ASM	000000	000000
8944206230	8-9442	0623	PIN	000000	000000
8944206250	8-9442	0625	PUSH; ROD,CAMSHA	000000	000057
8944206610	8-9442	0661	GAUGE ASM.; LEV	000000	000001
8944206622	8-9442	0662	PUMP ASM; INJ.	000000	000000
8944206720	8-9442	0672	RING SET; .25 PISTON	000000	000008
8944206730	8-9442	0673	RING SET; .25 PISTON	000003	000003
8944206740	8-9442	0674	RING SET; .50 PISTON	000000	000013
8944206750	8-9442	0675	RING SET; .50 PISTON	000001	000000
8944207510	8-9442	0751	SPACER;TRBO OIL	000000	000016
8944208060	8-9442	0806	BRACKET;INJECTION PUMP	000000	000000
8944208061	8-9442	0806	BRACKET;INJECTION PUMP	000000	000000
8944209250	8-9442	0925	BRACKET;FUEL FILTER	000000	000000
8944209260	8-9442	0926	PIPE ASM; FEED PUMP-FILTE	000000	000000
8944209270	8-9442	0927	PIPE ASM; FILTER INJECTIO	000000	000000
8944209280	8-9442	0928	PIPE ASM; INLET,W/FILTE.B	000000	000000
8944209311	8-9442	0931	ROD; LINK	000000	000000
8944209331	8-9442	0933	MANIFOLD ASM	000000	000000
8944209370	8-9442	0937	PACKING;SPACER GEAR CASE	000000	000000
8944210020	8-9442	1002	THERMOSTAT (65 C)	000002	000000
8944210030	8-9442	1003	CLEANER ASM; AIR	000000	000000
8944210041	8-9442	1004	FLYWHEEL	000000	000000
8944210190	8-9442	1019	HOSE; RUBBER BREATHER	000000	000000
8944210200	8-9442	1020	PIPE; VINYL, OVER FLOW	000000	000000
8944210270	8-9442	1027	GLOW PLUG	000000	000000
8944210350	8-9442	1035	SPACER; FAN TO	000000	000000
8944210360	8-9442	1036	SPACER; FAN	000000	000000

8944210761	8-9442	1076	RADIATOR ASM;	000000	000000
8944215760	8-9442	1576	GASKET; COUPLING DRI	000000	000000
8944215770	8-9442	1577	WASHER; PL,MAIN	000000	000000
8944216221	8-9442	1622	BOLT; EXHAUST PIPE FIX	000000	000000
8944216230	8-9442	1623	BOLT; EXHAUST PIPE FIX	000000	000000
8944216260			PLUG;FUEL TANK	000000	000769
8944216482			MANIFOLD; EXHAUST	000000	000000
8944216483	8-9442	1648	MANIFOLD; EXHAUST	000000	000000
8944216484	8-9442	1648	MANIFOLD; EXHAUST	000000	000001
8944216500	8-9442	1650	RING SET;PISTON	000000	000009
8944217750	8-9442	1775	CASE;TRANS	000000	000000
894421777U			CASE; W/PLATE	000000	000000
8944217770			CASE;W/PLATE	000000	000000
8944218170	8-9442	1817	LEVER ASM; FUEL CUT	000000	000000
8944218171	8-9442	1817	LEVER ASM; FUEL CUT	000000	000000
8944218190	8-9442	1819	BRACKET; FUEL CUT	000000	000000
8944218690	8-9442	1869	SYNCHRONIZER; T	000000	000000
8944218691	8-9442	1869	SYNCHRONIZER; T	000000	000000
8944218692	8-9442	1869	SYNCHRONIZER; 4TH & 3RD	000000	000000
8944218760	8-9442	1876	GEAR; 2ND,MAIN	000000	000000
8944218761	8-9442	1876	GEAR; 2ND,	000000	000000
8944218762	8-9442	1876	GEAR;2ND	000000	000000
8944218763	8-9442	1876	GEAR;2ND MAINSHAFT	000000	000005
8944218810	8-9442	1881	GEAR; 1ST,MAIN	000000	000000
8944218811	8-9442	1881	GEAR; 1ST,MAIN	000000	000000
8944218812	8-9442	1881	GEAR; 1ST,MAIN	000000	000000
8944218920	8-9442	1892	PLATE; THRUST,MAINSHAFT	000000	000000
8944219110	8-9442	1911	ARM; SHIFT, TOP	000000	000000
8944219111	8-9442	1911	ARM; SHIFT, TOP/4TH & 3RD	000000	000000
8944219112	8-9442	1911	ARM; SHIFT, TOP/4TH & 3RD	000000	000000
8944219120	8-9442	1912	ARM; SHIFT, LOW	000000	000000
8944219121	8-9442	1912	ARM; SHIFT, LOW & 2ND	000000	000000
8944219122	8-9442	1912	ARM; SHIFT, LOW & 2ND	000000	000002
8944219142	8-9442	1914	ROD; SHIFT, TOP	000000	000000
8944219143	8-9442	1914	ROD; SHIFT, TOP	000000	000000
8944219144	8-9442	1914	ROD; SHIFT, TOP	000000	000003
8944219152	8-9442	1915	ROD; SHIFT, LOW	000000	000000
8944219153	8-9442	1915	ROD; SHIFT, LOW	000001	000000
8944219154	8-9442	1915	ROD; SHIFT, LOW	000000	000000
8944219221	8-9442	1922	ARM; SHIFT, HIGH	000000	000000
8944219222	8-9442	1922	ARM; SHIFT, HIGH-LOW TRNSFR	000000	000000
8944219223	8-9442	1922	ARM; SHIFT, HIGH-LOW TRNSFR	000000	000000
8944219420	8-9442	1942	UNIT; BEARING	000000	000009
8944220500	8-9442	2050	BEARING; COUNTER GEAR, FRT	000000	000000
8944220501	8-9442	2050	BEARING; COUNTER GEAR, FRT	000000	000076
8944220520	8-9442	2052	BEARING; BALL, INPUT SHAFT	000022	000000
8944220540	8-9442	2054	BEARING; RR OUTPUT SHAFT	000000	000000

8944220541	8-9442	2054	BEARING; RR OUTPUT SHAFT	000000	000001
8944220550	8-9442	2055	BEARING; RR OUTPUT SHAFT,	000000	000000
8944220551	8-9442	2055	BEARING; RR OUTPUT SHAFT,	000000	000000
8944220600	8-9442	2060	BEARING; BALL, M	000000	000000
8944220640	8-9442	2064	BEARING; NEEDLE,REV GEAR	000000	000008
8944220650	8-9442	2065	BEARING;FRT GEAR TRANSFER	000000	000000
8944220651	8-9442	2065	BEARING;FRT GEAR TRANSFER	000000	000000
8944220680	8-9442	2068	BEARING; NEEDLE	000000	000000
8944220681	8-9442	2068	BEARING; NEEDLE MAINSHAFT	000000	000002
8944220710	8-9442	2071	NUT; MAIN SHAFT	000000	000000
8944220711	8-9442	2071	NUT; MAIN SHAFT	000000	000000
8944220720	8-9442	2072	NUT; MAINSHAFT END	000000	000000
8944220721	8-9442	2072	NUT; MAINSHAFT END	000001	000000
8944220730	8-9442	2073	NUT; COUPLING DRIVER,FRT	000000	000000
8944220750	8-9442	2075	SPRING; INSERT,4TH & 3RD	000000	000000
8944220760	8-9442	2076	COLLAR; FRT OUT	000000	000000
8944220761	8-9442	2076	COLLAR; FRT OUTPUT GEAR	000000	000000
8944220810	8-9442	2081	RING; SNAP	000016	000000
8944220830	8-9442	2083	RING;SNAP,BRG TO	000004	000000
8944220881	8-9442	2088	RING; SNAP,CLUTCH HUB	000000	000000
8944220882	8-9442	2088	RING; SNAP,CLUTCH HUB	000008	000005
8944220891	8-9442	2089	RING; SNAP,CLUTCH HUB	000000	000000
8944220901	8-9442	2090	RING; SNAP,CLUTCH HUB	000000	000000
8944220902	8-9442	2090	RING; SNAP,CLUTCH HUB	000000	000000
8944220910	8-9442	2091	RING; SNAP,BRG OUTER	000000	000000
8944220920	8-9442	2092	RING; SNAP,BRG OUTER,TRNS	000017	000000
8944220930	8-9442	2093	RING; SNAP,BRG INNER	000000	000000
8944221000	8-9442	2100	RING; SNAP,REV,GEAR	000000	000043
8944221010	8-9442	2101	RING; SNAP,REV,	000000	000000
8944221020	8-9442	2102	RING; SNAP,REV,GEAR	000003	000000
8944221030	8-9442	2103	RING; SNAP,COUNTER BRG	000000	000000
8944221031	8-9442	2103	RING;SNAP,BRG.	000000	000000
8944221040	8-9442	2104	RING; SNAP	000000	000000
8944221050	8-9442	2105	RING; SNAP	000036	000000
8944221060	8-9442	2106	RING; SNAP	000001	000036
8944221070	8-9442	2107	RING; SNAP	000000	000000
8944221080	8-9442	2108	RING; SNAP	000000	000000
8944221100	8-9442	2110	WASHER; THRUST,	000000	000000
8944221101	8-9442	2110	WASHER;THRUST	000000	000000
8944221102	8-9442	2110	WASHER; THRUST,5TH	000000	000000
8944221110	8-9442	2111	WASHER; THRUST,	000000	000000
8944221111	8-9442	2111	WASHER;THRUST	000000	000000
8944221112	8-9442	2111	WASHER; THRUST,5TH	000000	000001
8944221120	8-9442	2112	WASHER; THRUST,	000000	000000
8944221121	8-9442	2112	WASHER;THRUST	000000	000000
8944221122	8-9442	2112	WASHER; THRUST,5TH	000000	000000
8944221130	8-9442	2113	WASHER; THRUST,	000000	000000

8944221131	8-9442	2113	WASHER; THRUST	000000	000000
8944221132	8-9442	2113	WASHER; THRUST, 5TH	000000	000000
8944221220	8-9442	2122	SOLENOID ASM 3KC1	000000	000001
8944221720	8-9442	2172	BEARING; BALL, TRANSFER FL	000000	000000
8944221721	8-9442	2172	BEARING; BALL, TRANSFER FL	000000	000000
8944221760	8-9442	2176	BEARING; PILOT, OUTPUT SHF	000056	000008
8944221800	8-9442	2180	RING; SNAP, FRT OUTPUT SHF	000001	000001
8944221810	8-9442	2181	RING; SNAP, FRT OUTPUT SHF	000000	000000
8944221820	8-9442	2182	RING; SNAP, FRT OUTPUT SHF	000000	000000
8944221830	8-9442	2183	RING; SNAP, FRT OUTPUT SHF	000006	000022
8944221840	8-9442	2184	RING; SNAP, FRT OUTPUT SHF	000000	000003
8944221850	8-9442	2185	RING; SNAP, FRT OUTPUT SHF	000007	000010
8944221860	8-9442	2186	RING; SNAP, FRT OUTPUT SHF	000004	000014
8944221870	8-9442	2187	RING; SNAP, FRT OUTPUT SHF	000009	000008
8944221880	8-9442	2188	SPRING; GEAR LOCK REL. TRA	000008	000018
8944222020	8-9442	2202	ADAPTER; EXH PIPE	000000	000000
8944222021	8-9442	2202	ADAPTER; EXH PIPE	000000	000004
8944222570	8-9442	2257	STUD; TURBO EXHAUST PIPE	000027	000000
8944223260	8-9442	2326	SEAL; WATER PUMP	000000	000000
8944223286	8-9442	2328	LEVEL ASM; FUEL 3KC1	000000	000002
8944223420	8-9442	2342	PINION ASM; STARTER 2KC1	000000	000000
8944223530	8-9442	2353	PIPE ASM; INJ. #1 C240 B	000000	000000
8944223531	8-9442	2353	PIPE ASM; INJ. #1 C240 B	000000	000000
8944223540	8-9442	2354	PIPE ASM; INJ. #2 C240 B	000019	000000
8944223541	8-9442	2354	PIPE ASM; INJ. #2 C240 B	000000	000000
8944223550	8-9442	2355	PIPE ASM; INJ. #3 C240 B	000000	000000
8944223551	8-9442	2355	PIPE ASM; INJ. #3 C240 B	000000	000014
8944223560	8-9442	2356	PIPE ASM; INJ. #4 C240 B	000000	000000
8944223561	8-9442	2356	PIPE ASM; INJ. #4 C240 B	000000	000000
8944223600	8-9442	2360	CUSHION; AIR CLEANER	000004	000000
8944223900	8-9442	2390	SEAL; OIL, FRT COVER, T/M	000000	000013
8944223950	8-9442	2395	RING; RETAINING, THRUST RI	000009	000000
8944224010	8-9442	2401	PLUG; PLATE CYL HEAD	000000	000000
8944224290			PACKING; PUMP TO F. PLATE	000000	000000
8944224400	8-9442	2440	BRIDGE; CONT ROD, TRANSFER	000000	000000
8944224980	8-9442	2498	TURBO ASM, NEW	000000	000000
8944225040	8-9442	2504	CUP; SEALING	000000	000000
8944225210	8-9442	2521	HOSE; PCV	000000	000000
8944225211	8-9442	2521	HOSE; PCV	000000	000026
8944225331	8-9442	2533	MANIFOLD ASM; INLET	000000	000000
8944225332	8-9442	2533	MANIFOLD ASM; INLET	000000	000000
8944225553	8-9442	2555	MANIFOLD ASM; INLET	000000	000000
8944225950	8-9442	2595	GUAGE; OIL LEVEL	000000	000085
8944225970	8-9442	2597	LEVER ASM; SHAFT	000000	000000
8944226000	8-9442	2600	LOCK; WATER	000000	000000
8944226391	8-9442	2639	DIODE; CABLE HARNESS, BODY	000087	000025
8944227270			REPAIR KIT; ENG.	000000	000000

8944227280			HANGER;ENGINE	000000	000076
8944227370	8-9442	2737	PIPE ASM; INLET	000000	000000
8944227371	8-9442	2737	PIPE ASM; INLET	000000	000003
8944228050	8-9442	2805	PIPE; MIXING EXHAUST	000000	000000
8944228060	8-9442	2806	HOSE; SEA WATER	000000	000000
8944228061	8-9442	2806	HOSE; SEA WATER	000000	000000
8944228070	8-9442	2807	HOSE; RUBBER, BLOW BY	000000	000000
8944228090	8-9442	2809	PIPE; HEAT EXCHANGER	000000	000000
8944228620			CARBURATOR GASKETS	000000	000000
8944228750	8-9442	2875	PIPE; BULK	000000	000000
8944228782	8-9442	2878	HOUSING; FLYWHEEL 4JA1	000000	000000
8944228784	8-9442	2878	HOUSING; FLYWHEEL 4JA1	000000	000000
8944228792	8-9442	2879	FLYWHEEL ASM 4JA1	000000	000000
8944228812	8-9442	2881	FLYWHEEL ASM.	000000	000000
8944228851	8-9442	2885	PAN ASM; OIL	000000	000000
8944229110	8-9442	2911	TUBE;OIL LEVEL	000000	000002
8944229120	8-9442	2912	GAUGE;OIL LEVEL	000000	000000
8944229862	8-9442	2986	PUMP ASM; OIL	000000	000000
8944229873	8-9442	2987	PLATE: CYLINDER	000000	000000
8944229911	8-9442	2991	GUIDE; FAN	000000	000000
8944230050	8-9442	3005	METER	000000	000000
8944230150	8-9442	3015	RING;SEAL,ADAPT	000000	000000
8944230151	8-9442	3015	RING;SEAL,ADAPT	000116	000022
8944230381			FRT. DRIVE SHAFT ASM. (L)	000000	000000
8944230430	8-9442	3043	GASKET;TURBO TO	000104	000259
8944230471	8-9442	3047	HOSE; RADIATOR LOWER 3KR1	000000	000008
8944230480	8-9442	3048	HOSE;RADIATOR,LOWER	000000	000000
8944230481	8-9442	3048	HOSE;RADIATOR,LOWER	000000	000000
8944230540			CONTROL ARM; BSH	000000	000000
8944230551			CONTROL ASM; BSH	000000	000000
8944231330	8-9442	3133	SPACER; FAN	000000	000000
8944231340	8-9442	3134	SPACER; FAN	000000	000000
8944231350	8-9442	3135	HEAD ASM.; CYL.	000000	000000
8944231410	8-9442	3141	COVER;FRONT	000000	000000
8944231411	8-9442	3141	COVER;FRONT	000000	000000
8944231920			TUBE ASM; OIL GUIDE	000000	000000
8944231980	8-9442	3198	PIPE; AIR INLET	000000	000000
8944232130	8-9442	3213	PAN ASM; OIL 3KB1	000000	000000
8944232280	8-9442	3228	HOSE; AIR CLEANER	000000	000000
8944232300	8-9442	3230	COIL ASM; FIELD	000000	000014
8944232310	8-9442	3231	BRUSH (+)	000000	000000
8944232320	8-9442	3232	HOLDER ASM	000000	000000
8944232330	8-9442	3233	BRUSH	000000	000000
8944232340	8-9442	3234	CLUTCH ASM; PINION	000000	000000
8944232350	8-9442	3235	SHAFT; PINION	000000	000001
8944232360	8-9442	3236	MANIFOLD; EXH.	000000	000000
8944233140	8-9442	3314	RELAY; GLOW PLUG	000002	000050

8944233490	8-9442	3349	PUMP ASM; INJ.	000000	000000
8944233491	8-9442	3349	PUMP ASM; INJ.	000000	000001
8944234520	8-9442	3452	STARTER; HITACHI	000000	000008
8944234710	8-9442	3471	TANK ASM.; FUEL	000000	000000
8944235280	8-9442	3528	SPRING; IDLER	000000	000000
8944235290	8-9442	3529	PIPE ASM; FUEL FILTER LEA	000000	000004
8944236640			PLATE; NAME	000000	000000
8944237160	8-9442	3716	PLUG; TAPPER	000000	000000
8944237450	8-9442	3745	BRACKET; GEN. 4JC1	000000	000052
8944237460	8-9442	3746	PLATE; ADJUSTING	000004	000000
8944237490	8-9442	3749	PIPE ASM; INJ. #1	000003	000000
8944237491	8-9442	3749	PIPE ASM; INJ. #1	000000	000000
8944237500	8-9442	3750	PIPE ASM; INJ.#2	000000	000001
8944237501	8-9442	3750	PIPE ASM; INJ.#2	000000	000000
8944237510	8-9442	3751	PIPE ASM; INJ. #3	000000	000005
8944237511	8-9442	3751	PIPE ASM; INJ. #3	000000	000000
8944237520	8-9442	3752	PIPE ASM; INJ. #4	000001	000000
8944237521	8-9442	3752	PIPE ASM; INJ. #4	000000	000000
8944237531	8-9442	3753	PUMP ASM; WATER	000000	000000
8944237560	8-9442	3756	GENERATOR; 12V/35A	000000	000000
8944237980	8-9442	3798	CLIP; PIPE	000000	000000
8944238010	8-9442	3801	HOSE; PCV (L=1000)	000000	000000
8944238190	8-9442	3819	STRAINER ASM; OIL PUMP 3K	000000	000000
8944239250	8-9442	3925	ELEMENT; AIR CLEANER	000002	000000
8944239300	8-9442	3930	FIX BAND	000000	000039
8944239310	8-9442	3931	SUPPORT	000000	000000
8944239311	8-9442	3931	BRACKET; FUEL T.	000000	000000
8944239321	8-9442	3932	SUPPORT	000000	000000
8944240431			RH FLASHER ASSY	000000	000000
8944240441			INDICATOR LIGHT LH	000000	000000
8944240460			CASE; PINION,STARTER	000000	000000
8944240461	8-9442	4046	CASE; PINION,STARTER	000000	000000
8944240470	8-9442	4047	BRACKET; CENTER STAR	000000	000000
8944240480	8-9442	4048	CLUTCH; PINION,START	000000	000000
8944240490	8-9442	4049	PINION ASM F/STARTER 8-94	000000	000000
8944240510	8-9442	4051	COVER SET;TERMINAL (M,S,B)	000000	000000
8944240520	8-9442	4052	SWITCH; MAGNETIC	000000	000000
8944240530	8-9442	4053	HOUSING; CENTER	000000	000000
8944240540	8-9442	4054	COVER	000000	000000
8944240550	8-9442	4055	GASKET; EXHAUST, MANIF.	000000	000008
8944241271	8-9442	4127	PIPE ASM; OIL, TURBO FEED	000000	000003
8944241421	8-9442	4142	PIPE ASM; FUEL FILTER-PUM	000000	000015
8944241430	8-9442	4143	PIPE ASM; INJECTION FILTE	000000	000015
8944241780	8-9442	4178	NUT;HARNESS	000000	000142
8944242170	8-9442	4217	SCREW: SETTING	000001	000000
8944242200	8-9442	4220	RING*	000000	000000
8944242210	8-9442	4221	CAP**	000000	000000

8944242230	8-9442	4223	FLYWEIGHT	000000	000000
8944242740	8-9442	4274	PIPE;INJ.#2	000000	000000
8944242851	8-9442	4285	CLEANER ASM; AIR	000000	000000
8944243730	8-9442	4373	BOLT*	000000	000000
8944243800	8-9442	4380	PLATE; CENTER	000000	000000
8944243810	8-9442	4381	HOUSING ASM.; V/PUMP	000000	000005
8944244080	8-9442	4408	CASE ASM;TRANSF	000000	000000
8944245982	8-9442	4598	SOLENOID ASM.	000000	000001
8944251760	8-9442	5176	PLATE; ADJ, FAN BELT	000000	000000
8944251880	8-9442	5188	PAN ASM; DUST	000000	000000
8944251881	8-9442	5188	PAN ASM; DUST	000000	000000
8944252440	8-9442	5244	FILLER ASM; OIL	000000	000000
8944252810	8-9442	5281	BRKT;GENERATOR	000000	000001
8944252980	8-9442	5298	GASKET; OIL FIL	000000	000000
8944254100	8-9442	5410	PIPE ASM; INJ. #1 4JC1	000000	000000
8944254101	8-9442	5410	PIPE ASM; INJ. #1 4JC1	000000	000000
8944254110	8-9442	5411	PIPE ASM; INJ. #2 4JC1	000000	000000
8944254111	8-9442	5411	PIPE ASM; INJ. #2 4JC1	000000	000000
8944254120	8-9442	5412	PIPE ASM; INJ. #3 4JC1	000000	000000
8944254121	8-9442	5412	PIPE ASM; INJ. #3 4JC1	000000	000000
8944254130	8-9442	5413	PIPE ASM; INJ. #4,4JC1	000000	000000
8944254131	8-9442	5413	PIPE ASM; INJ. #4,4JC1	000000	000000
8944254140	8-9442	5414	PIPE ASM; INJ #1 4JB1-PW	000000	000000
8944254150	8-9442	5415	PIPE ASM; INJ #2 4JB1-PW	000000	000000
8944254160	8-9442	5416	PIPE ASM; INJ #3 4JB1-PW	000000	000000
8944254170	8-9442	5417	PIPE ASM; INJ #4 4JB1-PW	000000	000000
8944254500	8-9442	5450	ADAPTER; O/PRESSURE	000000	000006
8944255920	8-9442	5592	COVER ASM; CYL HEAD	000000	000000
8944255921	8-9442	5592	COVER ASM; CYL HEAD	000000	000000
8944255940	8-9442	5594	SUPERSEDED**COVER	000000	000000
8944255950	8-9442	5595	FLYWHEEL ASM.	000000	000000
8944255951	8-9442	5595	FLYWHEEL ASM.	000000	000000
8944256480	8-9442	5648	CLIP;MTG,FUEL	000000	000000
8944256540	8-9442	5654	CLIP; HOSE	000000	000000
8944256710	8-9442	5671	HOSE; PCV L=900,4BB1	000001	000001
8944256851	8-9442	5685	CAP; OIL FILLER	000000	000000
8944256852	8-9442	5685	CAP; OIL FILLER	000023	000014
8944256880	8-9442	5688	HEAD ASM; CYL	000000	000000
8944256890	8-9442	5689	PACKING 4FC1	000000	000000
8944256900	8-9442	5690	GUIDE;VALVE INLET & EXHAU	000000	000032
8944256910	8-9442	5691	THERMOSTAT (76.5 C)	000001	000000
8944257490	8-9442	5749	TACH METER 4J	000000	000000
8944257491	8-9442	5749	TACH METER 4J	000000	000000
8944257510	8-9442	5751	PUMP ASM; FUEL, ELECTRIC	000000	000000
8944257511	8-9442	5751	PUMP ASM; FUEL, ELECTRIC	000000	000093
8944260320			PIPE;WTR OUTLET	000000	000000
8944260430			COVER; REAR	000000	000002

8944260440	8-9442	6044	PULLEY ASM.;GEN	000000	000000
8944260470	8-9442	6047	NUT	000000	000000
8944260471	8-9442	6047	NUT, .	000000	000000
8944260490	8-9442	6049	SCREW; INJ	000000	000000
8944261920	8-9442	6192	RUBBER; ENGINE M	000000	000000
8944262660	8-9442	6266	FLYWHEEL ASM.	000000	000000
8944262680	8-9442	6268	HOSE; FUEL	000000	000000
8944262690	8-9442	6269	HOSE; FUEL L=320	000000	000000
8944262692	8-9442	6269	HOSE; FUEL L=320	000000	000000
8944262700	8-9442	6270	PIPE ASM; FUEL LEAK OFF	000000	000000
8944262710	8-9442	6271	PACKING; BRKT	000000	000000
8944262721	8-9442	6272	FOOT; ENGINE FRT.	000000	000000
8944262730	8-9442	6273	GUAGE; OIL LEVEL	000000	000000
8944262750	8-9442	6275	EXCHANGER ASM; HEAT	000000	000000
8944262760	8-9442	6276	CASE ASM; HEAT EXCH.	000000	000000
8944262770	8-9442	6277	*FAX 549 INVALID**	000000	000000
8944263950			BALL JOINT	000000	000000
8944264430	8-9442	6443	METER; O/PRESS.	000000	000000
8944264431	8-9442	6443	METER; O/PRESS.	000000	000000
8944264440	8-9442	6444	TACHO METER ASM	000000	000000
8944264470	8-9442	6447	GENERATOR; 24V/20A	000000	000003
8944264480	8-9442	6448	PIPE; OIL FILLER	000000	000000
8944264481	8-9442	6448	PIPE; OIL FILLER	000000	000000
8944264490	8-9442	6449	GAUGE ASM; OIL LEVEL	000000	000000
8944264940	8-9442	6494	FILTER ASM; FUEL	000000	000000
8944265020	8-9442	6502	INSULATOR; AIR CLEANER HOS	000000	000000
8944265030	8-9442	6503	COVER ASM; CYL. HEAD	000000	000000
8944265031	8-9442	6503	COVER ASM; CYL. HEAD	000000	000000
8944265150			HOSE; DRAIN, FRT	000000	000000
8944265160			HOSE; DRAIN, FRT	000000	000000
8944265161			HOSE; DRAIN, FRT.	000000	000000
8944265661			UNIT; THERMO METER	000000	000000
8944265810	8-9442	6581	PIPE; FUEL, DEL.	000000	000000
8944265811	8-9442	6581	PIPE; FUEL, DEL	000000	000005
8944265960	8-9442	6596	CLIP; RUBBER	000000	000000
8944265970	8-9442	6597	CLIP; VINYL PIPE FIX.	000000	000000
8944265980	8-9442	6598	CLIP; VINYL PIPE FIX.	000000	000012
8944265990	8-9442	6599	*FAX 549 INVALID**	000000	000000
8944269300			COVER ASM; REAR	000000	000000
8944269310	8-9442	6931	COVER ASM; REAR	000000	000000
8944269311	8-9442	6931	COVER ASM; REAR	000000	000000
8944270840	8-9442	7084	SPACER; FAN, L=19.5	000000	000000
8944270860	8-9442	7086	SHAFT; IDLE GEAR	000000	000000
8944271461	8-9442	7146	SEDIMENTER ASM.	000000	000000
8944271871	8-9442	7187	PULLEY; CRANKSH	000000	000000
8944271960	8-9442	7196	METAL SET; CAMSHAFT	000000	000000
8944271961	8-9442	7196	METAL SET; CAMSHAFT	000000	000000

8944271962	8-9442	7196	METAL SET; CAMSHAFT	000000	000000
8944271971	8-9442	7197	METAL KIT; CAMSHAFT	000000	000000
8944271980	8-9442	7198	METAL KIT; CAM	000000	000000
8944271981	8-9442	7198	METAL KIT; CAM	000000	000000
8944271991	8-9442	7199	METAL KIT; CAM	000000	000000
8944272000	8-9442	7200	METAL KIT; CAM	000000	000000
8944272001	8-9442	7200	METAL KIT; CAM	000000	000049
8944272011	8-9442	7201	METAL; CAMSHAFT	000000	000000
8944272012	8-9442	7201	METAL; CAMSHAFT	000000	000000
8944272061	8-9442	7206	METAL; CAMSHAFT	000000	000000
8944272062	8-9442	7206	METAL; CAMSHAFT	000000	000000
8944272370	8-9442	7237	GEAR; W/BUSH	000000	000000
8944273580	8-9442	7358	CRANKSHAFT ASM.	000000	000000
8944273590	8-9442	7359	PUMP ASM; INJ.	000000	000000
8944273601	8-9442	7360	PULLEY; COOLING	000000	000000
8944273602	8-9442	7360	PULLEY; COOLING	000000	000009
8944274540	8-9442	7454	TACHO METER ASM	000000	000000
8944274541	8-9442	7454	TACHO METER ASM	000000	000000
8944274542	8-9442	7454	TACHO METER ASM	000000	000000
8944274560	8-9442	7456	BOLT; FLYWHEEL FIXING 4JB	000000	000022
8944274902	8-9442	7490	CASE; W/BUSH,	000000	000000
8944275011	8-9442	7501	HOSE; FUEL NOZZLE LEAK 4J	000000	000000
8944275012	8-9442	7501	HOSE; FUEL NOZZLE LEAK 4J	000000	000000
8944276140	8-9442	7614	WASHER	000000	000000
8944278420	8-9442	7842	STUD*	000000	000000
8944278440	8-9442	7844	PLUNGER ASM.	000000	000000
8944278450	8-9442	7845	BRACKET	000000	000000
8944278470	8-9442	7847	FLYWEIGHT ASM.	000002	000000
8944278480	8-9442	7848	SPRING CAPSULE	000001	000001
8944278500	8-9442	7850	LEVER	000000	000000
8944278510	8-9442	7851	SPRING	000001	000000
8944278610	8-9442	7861	GUAGE; OIL LEVEL	000000	000000
8944278962	8-9442	7896	TURBO ASM, NEW	000000	000000
8944280070	8-9442	8007	BOLT; COIL HARNESS CLIP	000034	000055
8944280740			PISTON; STD	000000	000000
8944280750			PISTON; STD.	000000	000000
8944280760			PISTON; STD.	000000	000000
8944280770			PISTON; STD.	000000	000000
8944280780			PISTON; STD.	000000	000000
8944281590	8-9442	8159	BOLT; EYE	000000	000000
8944281591	8-9442	8159	BOLT; EYE	000000	000003
8944281600	8-9442	8160	PLATE; T=2.60	000000	000000
8944281610	8-9442	8161	PLUNGER ASM.	000002	000004
8944281630	8-9442	8163	HOSE; VINYL	000000	000000
8944281640	8-9442	8164	GUIDE; FAN	000000	000000
8944283860	8-9442	8386	PLUG;OIL COOLER	000000	000000
8944284370	8-9442	8437	CLIP;FLEX	000000	000031

8944284490	8-9442	8449	BELT ASM; FAN	000000	000000
8944284500	8-9442	8450	STOPPER SET	000000	000000
8944284630	8-9442	8463	PIPE ASM; OIL	000000	000006
8944284660	8-9442	8466	SEAL;VALVE GUIDE	000000	000000
8944285361	8-9442	8536	COVER; GEAR CASE	000000	000000
8944285370	8-9442	8537	GASKET; EXHAUST MANIFOLD	000000	000000
8944285381	8-9442	8538	FOOT; ENGINE RH 4JA/B1	000000	000000
8944285382	8-9442	8538	FOOT; ENGINE RH 4JA/B1	000000	000001
8944285720	8-9442	8572	GASKET; MANIFOLD 3KB1	000000	000000
8944286160	8-9442	8616	CAPSULE; SPRING	000000	000000
8944286421	8-9442	8642	FILLER; OIL	000000	000000
8944286430	8-9442	8643	PIPE; INLET	000001	000000
8944286431	8-9442	8643	PIPE; INLET	000013	000000
8944286453	8-9442	8645	PUMP ASM; INJ.	000000	000000
8944287952	8-9442	8795	CASE; CRANK 4JB1-PK01/PW	000000	000000
8944287953	8-9442	8795	CASE; CRANK 4JB1-PK01/PW	000000	000000
8944287954	8-9442	8795	CASE; CRANK 4JB1-PK01/PW	000000	000002
8944287960	8-9442	8796	PAN ASM; OIL 4JA/B/C1	000000	000000
8944287961	8-9442	8796	PAN ASM; OIL 4JA/B/C1	000000	000001
8944287970	8-9442	8797	PAN ASM; OIL	000000	000000
8944287982	8-9442	8798	PUMP ASM; OIL, W/STRAINER	000000	000000
8944287983	8-9442	8798	PUMP ASM; OIL, W/STRAINER	000000	000003
8944287990	8-9442	8799	CASE; TIMING GEARS	000000	000000
8944287992	8-9442	8799	CASE; TIMING GEARS	000000	000000
8944287993	8-9442	8799	CASE; TIMING GEARS	000000	000001
8944288010	8-9442	8801	GASKET; EXHAUST MANIFOLD	000000	000000
8944288030	8-9442	8803	MANIFOLD ASM; EXHAUST 4JA	000000	000000
8944288031	8-9442	8803	MANIFOLD ASM; EXHAUST 4JA	000000	000000
8944288032	8-9442	8803	MANIFOLD ASM; EXHAUST 4JA	000000	000000
8944288041	8-9442	8804	PUMP ASM; INJ.	000000	000000
8944288042	8-9442	8804	PUMP ASM; INJ.	000000	000000
8944288050	8-9442	8805	BRACKET; CONT 4JB1-PW	000000	000000
8944288060	8-9442	8806	GEAR; INJ PUMP 4JA/B1	000000	000000
8944288070	8-9442	8807	PIPE ASM FUEL NOZZLE LEAK	000000	000012
8944288090	8-9442	8809	PIPE ASM; FILTER OVERFLOW	000000	000000
8944288110	8-9442	8811	PIPE ASM; OVERFLOW 4JA/B1	000000	000000
8944288120	8-9442	8812	HOUSING ASM; THERMOSTAT	000000	000002
8944288140	8-9442	8814	JOINT ASM.; BALL	000000	000000
8944288150	8-9442	8815	PIN; SPLIT	000000	000000
8944288170	8-9442	8817	PLUG; OIL DRAIN, M30	000000	000000
8944288201	8-9442	8820	REINF ASM; RAIL	000000	000000
8944288620	8-9442	8862	BRACKET;E/CONT.WELD PLATE	000000	000000
8944288621	8-9442	8862	BRACKET;E/CONT.WELD PLATE	000000	000000
8944288680	8-9442	8868	PLUG; L=2.2	000000	000000
8944288690	8-9442	8869	PLUG; L=2.4	000000	000000
8944288700	8-9442	8870	PLUG; L=2.6	000000	000000
8944288710	8-9442	8871	PLUG; L=2.8	000000	000000

8944288720	8-9442	8872	PLUG; L=3.0	000000	000000
8944288730	8-9442	8873	PLUG; L=3.2	000000	000000
8944288740	8-9442	8874	PLUG; L=3.4	000000	000000
8944288750	8-9442	8875	PLUG; L=3.6	000000	000000
8944288760	8-9442	8876	PLUG; L=3.8	000000	000000
8944288770	8-9442	8877	PLUG; L=4.0	000000	000000
8944288780	8-9442	8878	PLUG; L=4.2	000000	000000
8944288790	8-9442	8879	PLUG; L=4.4	000000	000000
8944288800	8-9442	8880	PLUG; L=4.6	000000	000000
8944288810	8-9442	8881	PLUG; L=4.8	000000	000000
8944288820	8-9442	8882	PLUG; L=5.0	000000	000000
8944289310	8-9442	8931	OIL FILTER;DSEL	000000	000101
8944289320	8-9442	8932	CARTRIDGE KIT/OIL FILTER	000000	000000
8944294210	8-9442	9421	COCK ASM; WATER DRAIN	000002	000001
8944294230	8-9442	9423	PULLEY; CRANKSHAFT 4JA1-P	000000	000000
8944294240	8-9442	9424	PULLEY; CRANKSHAFT	000000	000000
8944294270	8-9442	9427	PIPE; INLET	000000	000000
8944294280	8-9442	9428	PULLEY; COOLING	000000	000000
8944294281	8-9442	9428	PULLEY; COOLING	000000	000293
8944294300	8-9442	9430	BRACKET; GENERATOR	000000	000000
8944294310	8-9442	9431	SPACER; INLET PIPE 4JA/B1	000004	000000
8944294890	8-9442	9489	DISCONTINUED	000000	000000
8944295250	8-9442	9525	BOLT; OIL FILTER FIX.	000008	000001
8944295790	8-9442	9579	SLEEVE;HIGH	000000	000000
8944295791	8-9442	9579	SLEEVE;HIGH	000000	000000
8944295792	8-9442	9579	SLEEVE;HIGH	000000	000000
8944295793	8-9442	9579	SLEEVE;HIGH	000000	000000
8944295800	8-9442	9580	SHAFT,OUTPUT	000000	000000
8944295912	8-9442	9591	FLYWHEEL ASM. 3KR1	000000	000000
8944296650	8-9442	9665	ROTOR; OIL PUMP	000000	000000
8944296700	8-9442	9670	BRACKET; FUEL FILTER	000000	000000
8944296720	8-9442	9672	GAUGE ASM; OIL LEVEL	000000	000000
8944296730	8-9442	9673	TUBE ASM; OIL GUIDE	000001	000000
8944296740	8-9442	9674	GENERATOR: 24V/15A	000000	000000
8944297460	8-9442	9746	PULLEY; CRANKSHAFT 4JB1-P	000000	000004
8944298430			PIPE: BRAKE,RR	000000	000000
8944298940	8-9442	9894	SPACER; HANGER, RR.	000000	000000
8944299250	8-9442	9925	FILLER ASM; OIL	000000	000000
8944299260	8-9442	9926	TUBE ASM; OIL GUIDE	000000	000000
8944299470	8-9442	9947	RELAY: BLOWER M	000000	000000
8944299610	8-9442	9961	GOVERNOR ASM.	000000	000000
8944299614	8-9442	9961	GOVERNOR ASM.	000000	000000
8944299630	8-9442	9963	PUMP ASM.;FEED	000000	000000
8944299780			STARTER	000000	000012
8944299950	8-9442	9995	BOLT;COVER	000000	000000
8944299951	8-9442	9995	BOLT;COVER	000000	000000
8944299960	8-9442	9996	BOLT; COVER TO C	000000	000000

8944299980	8-9442	9998	GAUGE ASM; OIL LEVEL	000000	000000
8944300000	8-9443	0000	CLIP; UPPER 4JA/B1	000000	000120
8944300010	8-9443	0001	CLIP; LOWER 4JA/B1	000000	000090
8944300250	8-9443	0025	PIPE ASM; INJECTION NO. 1	000000	000000
8944300260	8-9443	0026	PIPE ASM; INJECTION NO. 2	000000	000000
8944300270	8-9443	0027	PIPE ASM; INJECTION NO. 3	000000	000000
8944300280	8-9443	0028	PIPE ASM; INEJECTION NO. 4	000000	000000
8944300290	8-9443	0029	SENSOR; THERMO	000003	000000
8944300572	8-9443	0057	BRACKET ASM; EN	000000	000000
8944300580	8-9443	0058	SHAFT ASM; ENG. CONTROL	000000	000000
8944300581	8-9443	0058	SHAFT ASM; ENG. CONTROL	000000	000000
8944300591	8-9443	0059	BRACKET; ENG. CONTROL	000000	000000
8944300820	8-9443	0082	BRACKET; IDLE PULLEY	000000	000000
8944301460	8-9443	0146	PACKING; HEAD COVER 3KR1/	000000	000005
8944302060	8-9443	0206	BOX ASM; SWITCH	000000	000000
8944302061	8-9443	0206	BOX ASM; SWITCH	000000	000000
8944302070	8-9443	0207	FAN ASM;	000000	000000
8944302500	8-9443	0250	AIR CLEANER FILTER	000000	000000
8944302520	8-9443	0252	HOSE; RUBBER (DISCONTINUE	000000	000000
8944302530	8-9443	0253	PUMP ASM; INJ.	000000	000000
8944302570	8-9443	0257	PIPE; BREATHER	000000	000000
8944303250	8-9443	0325	CASE ASM.	000000	000000
8944303260	8-9443	0326	BOLT; WING	000000	000000
8944303270	8-9443	0327	WASHER; SEAL	000000	000000
8944303290	8-9443	0329	PACKING	000003	000000
8944303300	8-9443	0330	COVER ASM; DUST	000001	000000
8944303310	8-9443	0331	BAND	000000	000000
8944303320	8-9443	0332	BOLT*	000000	000000
8944304111	8-9443	0411	OIL FILTER ELEMENT	000000	000000
8944304112	8-9443	0411	OIL FILTER ELEMENT	000000	000000
8944304140	8-9443	0414	HOSE WATER PIPE TO PUMP	000000	000000
8944309290	8-9443	0929	SPACER	000000	000000
8944309291	8-9443	0929	ADAPTER; OIL FILTER	000007	000006
8944309301	8-9443	0930	PACKING	000000	000010
8944309370	8-9443	0937	SCREW	000000	000000
8944309401	8-9443	0940	CONROLLER; ENGINE	000000	000000
8944309830	8-9443	0983	CARTRIDGE KIT/OIL FILTER	000000	000000
8944309831	8-9443	0983	CARTRIDGE KIT/OIL FILTER	000000	000000
8944314702	8-9443	1470	FLYWHEEL ASM 4JB1-PW	000001	000000
8944314710	8-9443	1471	PUMP ASM; INJ.	000000	000000
8944314711	8-9443	1471	PUMP ASM; INJ.	000000	000000
8944315200	8-9443	1520	HEAD ASM; CYL.	000000	000000
8944315204	8-9443	1520	HEAD ASM; CYL.	000000	000000
8944315210	8-9443	1521	SEAT; VALVE INSERT	000000	000000
8944315220	8-9443	1522	SEAT; VALVE INSERT	000000	000000
8944315230	8-9443	1523	HEAD ASSY. CYL	000000	000000
8944315232	8-9443	1523	HEAD ASSY. CYL	000000	000000

8944315600	8-9443	1560	GENERATOR; 24V/15A	000000	000000
8944315610	8-9443	1561	PLATE; ADJ.	000001	000000
8944320891	8-9443	2089	PAN ASM; OIL	000000	000003
8944320912	8-9443	2091	SENSOR;OIL LEVEL	000002	000000
8944326420	8-9443	2642	BOLT; BRG CAP	000000	000072
8944326720	8-9443	2672	B O L T	000000	000000
8944326721	8-9443	2672	BOLT	000000	000002
8944330140			HANDLE;WINDOW R	000000	000000
8944331650			FAN ASM; COOLING	000000	000000
8944331651	8-9443	3165	FAN ASM; COOLING	000000	000023
8944331710	8-9443	3171	PISTON	000000	000000
8944331771	8-9443	3177	PISTON	000000	000000
8944332040	8-9443	3204	SHIM	000000	000000
8944332050	8-9443	3205	SHIM	000000	000000
8944332060	8-9443	3206	SHIM	000000	000000
8944332070	8-9443	3207	SHIM	000000	000000
8944332080	8-9443	3208	SHIM	000000	000000
8944332090	8-9443	3209	SHIM	000000	000000
8944332140	8-9443	3214	SHAFT; LEVER	000000	000000
8944332150	8-9443	3215	SPRING	000001	000000
8944332160	8-9443	3216	O-RING; INJ. PUMP	000000	000000
8944332170	8-9443	3217	WASHER	000000	000000
8944332180	8-9443	3218	LEVER; INJ. PUMP	000000	000000
8944332190	8-9443	3219	LEVER; INJ. PUMP	000000	000000
8944332220	8-9443	3222	SLEEVE; GOVERNOR	000000	000000
8944332450	8-9443	3245	VALVE;EXH	000000	000000
8944332451	8-9443	3245	VALVE;EXH	000000	000006
8944333020	8-9443	3302	BOLT;ROCKER BRKT	000010	000000
8944333030	8-9443	3303	SPRING; CMPR.	000000	000058
8944333040	8-9443	3304	BOLT;ROCKER BRKT	000000	000427
8944334060	8-9443	3406	BOLT; CRANK PULLEY	000000	000000
8944334070	8-9443	3407	BOLT	000002	000000
8944334270	8-9443	3427	BRACKET; HOLDER	000000	000034
8944334410	8-9443	3441	SILENCER; EXHAUST	000000	000000
8944334411	8-9443	3441	SILENCER; EXHAUST	000000	000000
8944334412	8-9443	3441	SILENCER; EXHAUST	000000	000003
8944334420	8-9443	3442	SILENCER ASM.	000000	000000
8944334421	8-9443	3442	SILENCER ASM.	000000	000000
8944334422	8-9443	3442	SILENCER ASM.	000001	000001
8944334430	8-9443	3443	PIPE; TAIL	000000	000000
8944334571	8-9443	3457	RADIATOR ASM;	000000	000000
8944334590	8-9443	3459	HOSE RADIATOR;	000001	000000
8944334600	8-9443	3460	SPRING; MAIN	000000	000000
8944334610	8-9443	3461	ANGLIECH KIT 3KR1	000001	000000
8944336040	8-9443	3604	GASKET:TUR	000000	000038
8944336050	8-9443	3605	GASKET;EXH MAN	000015	000038
8944336290	8-9443	3629	OIL STRAINER	000000	000000

8944336300	8-9443	3630	PIPE ASM: OIL	000000	000000
8944336450	8-9443	3645	GASKET	000000	000000
8944337160	8-9443	3716	BOLT; CYL HEAD	000000	000000
8944337171	8-9443	3717	BOLT; NOZZLE CLAMP	000000	000101
8944337422	8-9443	3742	COVER;CYLINDER	000000	000000
8944337570	8-9443	3757	TUBE	000000	000000
8944337600	8-9443	3760	ROLLER ASM.	000000	000000
8944338080	8-9443	3808	GASKET; BOLT,DI	000000	000000
8944338110			VALVE; MAG. ENG. STOP	000000	000000
8944338170	8-9443	3817	CONNECTOR;	000000	000000
8944338180	8-9443	3818	RING; SEAL,NOZZ	000000	000000
8944338190	8-9443	3819	FLANGE; HOLDER	000000	000000
8944338690	8-9443	3869	CASE; OIL COOLER	000000	000000
8944338700	8-9443	3870	HOSE RUBBER	000000	000021
8944338711	8-9443	3871	HOSE, RUBBER	000000	000000
8944339020	8-9443	3902	SHAFT; IDLE GEAR	000000	000000
8944339890	8-9443	3989	BODY;SEDIMENTER	000000	000000
8944339910	8-9443	3991	BOLT, FLYWHEEL	000000	000000
8944340710	8-9443	4071	PIPE; INLET WATER	000000	000000
8944340711	8-9443	4071	PIPE; INLET WATER	000000	000000
8944340712	8-9443	4071	PIPE; INLET WATER	000000	000001
8944340730	8-9443	4073	HOSE; RUBBER, PCV	000000	000000
8944340750	8-9443	4075	SPACER; FAN	000002	000000
8944341021	8-9443	4102	GENERATOR ASM	000000	000000
8944341550	8-9443	4155	SOLENOID; STOP	000000	000000
8944341760	8-9443	4176	HOLDER ASM; NOZZLE	000000	000000
8944345243			CABLE	000000	000000
8944345592			LAMP ASM; HEAD	000000	000000
8944345593			LAMP ASM; HEAD	000000	000000
8944345613			LAMP ASM	000000	000000
8944345623			LAMP ASM	000000	000000
8944345692	8-9443	4569	LAMP SIDE COMB	000000	000000
8944345693	8-9443	4569	LAMP; SIDE COMB	000000	000005
8944345702	8-9443	4570	LAMP SIDE COMB	000000	000000
8944345703	8-9443	4570	LAMP; SIDE COMB	000000	000000
8944345752			LAMP ASM FRT	000000	000000
8944345753			LAMP ASM, FRT CO	000000	000000
8944345762			LAMP ASM FRT	000000	000000
8944345763			LAMP ASM, FRT CO	000000	000000
8944345972			CABLE; ENGINE CONT	000000	000000
8944346542	8-9443	4654	NUT; LOCK	000000	000000
8944347290	8-9443	4729	PACKING; GEAR CASE	000001	000002
8944348271	8-9443	4827	PIPE ASM.;OIL PUMP	000000	000000
8944348281	8-9443	4828	PIPE ASM; OIL PUMP	000000	000000
8944348282	8-9443	4828	PIPE ASM; OIL PUMP	000000	000000
8944348570	8-9443	4857	GASKET; MANIFOLD	000000	000000
8944349051	8-9443	4905	CAMSHAFT	000000	000000

8944349052	8-9443	4905	CAMSHAFT	000000	000002
8944349290	8-9443	4929	CLIP**DISCONTINUED**	000000	000000
8944349300	8-9443	4930	CLIP; FUEL PIPE	000000	000000
8944350821	8-9443	5082	PAN ASM; OIL 4JB1-PK01	000000	000000
8944350822	8-9443	5082	PAN ASM; OIL 4JB1-PK01	000000	000004
8944350841	8-9443	5084	TUBE, GUIDE	000000	000000
8944350860	8-9443	5086	FOOT; ENGINE, F, RH	000000	000000
8944350861	8-9443	5086	FOOT; ENGINE, F, RH	000000	000005
8944350870	8-9443	5087	FOOT; ENGINE, F, RH	000000	000000
8944350871	8-9443	5087	FOOT; ENGINE, F, RH	000000	000006
8944350880	8-9443	5088	FAN ASM; COOLING	000000	000038
8944350881	8-9443	0881	FAN ASM; COOLING	000000	000000
8944350891	8-9443	5089	MANIFOLD ASM; INLET	000000	000000
8944350911	8-9443	5091	GUIDE; FAN	000000	000000
8944350920	8-9443	5092	LEVER; CONTROL	000000	000000
8944351272	8-9443	5127	CASE; TRANS	000000	000001
8944351400	8-9443	5140	SYNCHRONIZ L	000000	000000
8944351431			GEAR COUNTER	000001	000000
8944351441			COUNTER GEAR	000000	000000
8944351460	8-9443	5146	SHAFT; REV	000000	000000
8944351481	8-9443	5148	GEAR; INPUT TRANSFER	000000	000000
8944351530	8-9443	5153	ARM; SHIFT	000000	000000
8944351531	8-9443	5153	ARM; SHIFT	000000	000000
8944351560	8-9443	5156	ROD; SHIFT	000000	000000
8944351561	8-9443	5156	ROD; SHIFT, LOW & 2ND	000000	000000
8944351601	8-9443	5160	SHAFT; TOP GEAR	000000	000000
8944351602	8-9443	5160	SHAFT; TOP GEAR	000000	000000
8944351641	8-9443	5164	GEAR; 2ND	000000	000000
8944351650	8-9443	5165	GEAR; TRFER, OUTP	000000	000000
8944351651	8-9443	5165	GEAR; TRFER, OUTP	000000	000000
8944351660	8-9443	5166	GEAR; CTR TRF	000000	000000
8944351661	8-9443	5166	GEAR; CTR TRF	000000	000000
8944353320	8-9443	5332	CLIP; FUEL PIPE	000000	000000
8944353350	8-9443	5335	BALL; DETENT, GEAR SHIFT	000000	000000
8944353360	8-9443	5336	SPRING; DETENT	000000	000000
8944355610	8-9443	5561	ARMATURE ASM.	000000	000000
8944355620	8-9443	5562	COVER ASM; REAR	000000	000000
8944355630	8-9443	5563	CLUTCH ASM; STARTER	000000	000000
8944355660	8-9443	5566	BEARING; BALL	000000	000000
8944355670	8-9443	5567	HOLDER; BEARING	000000	000000
8944355680	8-9443	5568	SWITCH ASM; MAG	000000	000004
8944355690	8-9443	5569	CASE; GEAR	000000	000000
8944355700	8-9443	5570	RETAINER; PINION	000000	000000
8944355710	8-9443	5571	LEVER; STARTER	000000	000000
8944355940	8-9443	5594	RAIL; DRIP	000000	000000
8944355942	8-9443	5594	RAIL; DRIP	000000	000000
8944355943	8-9443	5594	RAIL; DRIP	000000	000000

8944358760	8-9443	5876	CLAMP; FILLER HOSE	000000	000000
8944358780	8-9443	5878	PIPE; WATER INLET	000000	000003
8944359010	8-9443	5901	GOVERNOR ASM.	000000	000000
8944360340	8-9443	6034	SHAFT ASM.; OIL PUMP	000000	000000
8944360671	8-9443	6067	COVER; CYL. HEAD	000000	000003
8944360760	8-9443	6076	CAP; NIPPLE	000000	000000
8944360790	8-9443	6079	PIPE; INL, TURBO	000000	000000
8944360791	8-9443	6079	PIPE; INL. TURBO	000000	000000
8944360800	8-9443	6080	PIPE; OIL, TURBO	000000	000000
8944360801	8-9443	6080	PIPE; OIL, TURBO	000000	000000
8944360802	8-9443	6080	PIPE; OIL TURBO	000000	000000
8944360891	8-9443	6089	CONNECTOR: GLOW PLUG	000000	000000
8944360920	8-9443	6092	PLATE; ADJ. FAN	000000	000000
8944360931	8-9443	6093	BRACKET; GENERATOR	000000	000000
8944361882	8-9443	6188	PIPE; INJ. N	000000	000000
8944361891	8-9443	6189	PIPE; INJ NO 2	000000	000000
8944361901	8-9443	6190	PIPE; INJ. N	000000	000000
8944361911	8-9443	6191	PIPE; INJ. N	000000	000000
8944362121	8-9443	6212	GENERATOR; DENSO	000000	000000
8944362131	8-9443	6213	GENERATOR; DENSO FIG.63P	000000	000001
8944362141	8-9443	6214	GENERATOR; 12V 40A	000000	000006
8944362280	8-9443	6228	PIPE; OUTLET, WATER	000000	000000
8944362500	8-9443	6250	STARTER	000000	000002
8944363333	8-9443	6333	PUMP ASM; INJECTION	000000	000000
8944368910	8-9443	6891	ADAPTER; TURBO OIL FEED PI	000000	000008
8944368942	8-9443	6894	PUMP ASM; INJ.	000000	000000
8944368943	8-9443	6894	PUMP ASM; INJ.	000000	000000
8944368953	8-9443	6895	PUMP ASM; INJ.	000000	000000
8944368971	8-9443	6897	COVER ASM.; CYL. HEAD	000001	000000
8944368980	8-9443	6898	COOLER ASM; OIL	000000	000000
8944369230	8-9443	6923	PISTON; .25	000000	000000
8944369231	8-9443	6923	PISTON; .25	000000	000000
8944369240	8-9443	6924	PISTON; .50	000000	000000
8944369241	8-9443	6924	PISTON; .50	000000	000000
8944369290	8-9443	6929	BEARING; BALL, CLUSTER, RR	000000	000012
8944369330	8-9443	6933	BOLT; EYE, OIL PI	000000	000009
8944370220	8-9443	7022	REPAIR KIT; FEED PUMP	000000	001048
8944370230	8-9443	7023	PAN ASM; OIL 3KC1	000000	000000
8944370240	8-9443	7024	PAN ASM; OIL	000000	000000
8944370620	8-9443	7062	PLATE; LOCK	000000	000000
8944371700	8-9443	7170	PIPE ASM; FUEL, FILTER-INJ	000000	000002
8944371710	8-9443	7171	PIPE ASM; FEED PUMP	000000	000001
8944371723	8-9443	7172	BRACKET; FUEL PIPE	000000	000000
8944371733	8-9443	7173	BRACKET; FUEL PIPE FIX	000001	000000
8944372421	8-9443	7242	PAN ASM; OIL	000000	000001
8944372660	8-9443	7266	WATER PUMP	000000	000000
8944373974	8-9443	7397	BLOCK ASM; CYLINDER	000000	000000

8944373976	8-9443	7397	BLOCK ASM; CYLINDER	000000	000000
8944373977	8-9443	7397	BLOCK ASM; CYLINDER	000000	000000
8944374910	8-9443	7491	CASE; TRANS.	000000	000000
8944375491	8-9443	7549	CONNECTOR: SOLENOID	000000	000000
8944376151	8-9443	7615	COCK ASM.;	000000	000000
8944376190			RESISTOR	000000	000000
8944377350	8-9443	7735	HOSE;RAD TO TAN L=3050	000000	000000
8944378740	8-9443	7874	SOLENOID	000000	000000
8944379080	8-9443	7908	GAUGE ASM; OIL LEVEL	000002	000000
8944379200	8-9443	7920	BRUSH ASM.	000000	000000
8944379210	8-9443	7921	BRUSH ASM.	000000	000000
8944379220	8-9443	7922	BRUSH	000009	000000
8944379232	8-9443	7923	PLATE; RR	000000	000000
8944380401			HOSE; WATER	000000	000000
8944380900	8-9443	8090	BRACKET;INJECTION PUMP RR	000000	000000
8944380910	8-9443	8091	BRACKET;INJECTION PUMP RR	000000	000000
8944380920	8-9443	8092	TURBOCHARGER ASM	000001	000000
8944381280	8-9443	8128	GOVERNOR ASM.	000000	000000
8944381590	8-9443	8159	BRACKET; FUEL FILTER	000000	000000
8944381592	8-9443	8159	BRACKET; FUEL FILTER	000000	000000
8944382820	8-9443	8282	BUSH; PIN	000000	000000
8944382851	8-9443	8285	CONNECTOR NO#1,2,&3	000000	000002
8944382861	8-9443	8286	CONNECTOR	000002	000000
8944383050	8-9443	8305	TAPPET; VALVE	000000	000000
8944383051	8-9443	8305	TAPPET; VALVE	000004	000077
8944383062	8-9443	8306	FLYWHEEL ASM.	000000	000000
8944383150	8-9443	8315	REPAIR KIT; O/H	000000	000000
8944383240	8-9443	8324	BOLT; SUPPORT,P/S BRKT	000000	000000
8944383241	8-9443	8324	BOLT; SUPPORT,P/S BRKT	000000	000000
8944383520	8-9443	8352	PIPE ASM; OIL	000000	000000
8944383540	8-9443	8354	ELEMENT ASM;O	000000	000001
8944383650	8-9443	8365	ARMATURE ASM; STARTER	000000	000000
8944383660	8-9443	8366	COVER;REAR	000000	000000
8944383680	8-9443	8368	JOINT; BLOCK, PIPE	000000	000000
8944383710	8-9443	8371	COOLER ASM;	000000	000000
8944383711	8-9443	8371	COOLER ASM;	000000	000001
8944383720	8-9443	8372	CASE; OIL	000000	000002
8944383740	8-9443	8374	BUSH; PIN	000000	000000
8944384041	8-9443	8404	BLOCK ASM; CYL	000000	000000
8944384044	8-9443	8404	BLOCK ASM; CYL	000000	000000
8944384720	8-9443	8472	BRACKET	000000	000000
8944386170	8-9443	8617	PIPE; INLET WATER	000000	000000
8944387290			GASKET; OIL FILTER	000000	000031
8944387500			PIPE; MIXING EXHAUST	000000	000000
8944388770	8-9443	8877	BRACKET ASM; FRONT	000000	000000
8944388780	8-9443	8878	CLUTCH ASM	000000	000000
8944389750			TAIL GATE STRUT	000000	000000

8944389950	8-9443	8995	TANK; CATCH	000000	000000
8944392180	8-9443	9218	GLOW PLUG	000000	000000
8944392181	8-9443	9218	GLOW PLUG	000000	000000
8944392182	8-9443	9218	GLOW PLUG	000051	000029
8944392870	8-9443	9287	SEAL; RUBBER	000000	000000
8944398450	8-9443	9845	PUMP ASM;FEED	000000	000000
8944398451	8-9443	9845	PUMP ASM;FEED	000000	000001
8944398500	8-9443	9850	W/PUMP, NEW	000000	000000
8944398501	8-9443	9850	W/PUMP, NEW	000000	000000
8944398502	8-9443	9850	W/PUMP, NEW	000000	000000
8944398512	8-9443	9851	PUMP ASM, WATER	000000	000000
8944398520	8-9443	9852	PUMP;WATER	000000	000000
8944398521	8-9443	9852	PUMP ASM	000000	000000
8944398522	8-9443	9852	PUMP ASM;	000000	000000
8944398700	8-9443	9870	SCREW; BRKT	000000	000101
8944398751	8-9443	9875	PUMP ASM, WATER	000000	000000
8944399190	8-9443	9919	ROD ASM;CONN	000000	000001
8944400100	8-9444	0010	BELT; COOLING FAN A/C	000000	000000
8944400610	8-9444	0061	ARM; SHIFT,REV	000000	000000
8944400611	8-9444	0061	ARM; SHIFT,REV	000000	000000
8944400613	8-9444	0061	ARM; SHIFT,REV	000000	000002
8944400790	8-9444	0079	ROD; SHIFT,5TH	000000	000000
8944400791	8-9444	0079	ROD; SHIFT,5TH	000000	000000
8944400942	8-9444	0094	METAL SET;CO	000000	000000
8944401290	8-9444	0129	SWITCH	000000	000000
8944402280			PIN;KING,FRT A	000000	000005
8944402810	8-9444	0281	TACH SENSOR 4J	000002	000000
8944402820	8-9444	0282	HOUSING; PUMP	000000	000000
8944402830	8-9444	0283	LEVER	000000	000000
8944402840	8-9444	0284	LEVER ASM; 4JC1	000000	000000
8944402850	8-9444	0285	SPRING; GOVERNOR 4JC1	000000	000000
8944402860	8-9444	0286	PLATE; LOCK	000000	000000
8944402870	8-9444	0287	PLUNGER ASM.	000000	000000
8944402880	8-9444	0288	HOUSING; I/PUMP	000000	000000
8944402890	8-9444	0289	BRACKET	000000	000000
8944403570	8-9444	0357	COVER ASM; CYL. HD.	000000	000000
8944403833	8-9444	0383	COVER: TIMING	000000	000000
8944403883	8-9444	0388	CASE; TIMING GEARS	000000	000000
8944404090	8-9444	0409	SHAFT ASM.; OIL PUMP	000000	000000
8944404290	8-9444	0429	HANGER; ENG LH 4JC1	000000	000000
8944404921	8-9444	0492	HANGER; ENG LH 4JC1	000002	000000
8944405540	8-9444	0554	ARM; SHIFT,LOW	000000	000000
8944405550	8-9444	0555	SHIFT ARM	000000	000000
8944405560	8-9444	0556	VENTILATOR; RR A	000000	000000
8944405801	8-9444	0580	RADIATOR ASM.	000000	000001
8944405810	8-9444	0581	HOSE; RAD-UPPER	000000	000000
8944405811	8-9444	0581	HOSE; RAD-UPPER	000000	000000

8944405820	8-9444	0582	HOSE; WATER,RAD	000000	000000
8944408110	8-9444	0811	GOVERNOR ASM.	000000	000000
8944408120	8-9444	0812	GOVERNOR ASM.	000000	000000
8944408130	8-9444	0813	GOVERNOR ASM.	000000	000000
8944408390			COLLAR;DIST BR	000000	000005
8944408490			HOSE; PCV L=650	000000	000000
8944409100	8-9444	0910	PIECE; DISTANCE	000000	000000
8944409690	8-9444	0969	TANK;SURGE	000001	000000
8944409700	8-9444	0970	TANK;SURGE	000000	000000
8944409980	8-9444	0998	FAN ASM;COOLING	000000	000000
8944409981	8-9444	0998	FAN ASM;COOLING	000000	000000
8944409982	8-9444	0998	FAN ASM;COOLING	000000	000004
8944411401			BREATHER ASM.;	000000	000013
8944412490	8-9444	1249	BELT; COOLING	000000	000000
8944412500			BOLT;AIR	000000	000055
8944412520			BEARING;HUB IN	000000	000005
8944413310			BRACKE MASTER CYL	000000	000000
8944414890			SHIM;AXLE SHAF	000000	000010
8944415920	8-9444	1592	PIPE ASM; FUEL FILTER 4JC	000000	000000
8944415921	8-9444	1592	PIPE ASM; FUEL FILTER 4JC	000000	000007
8944415930	8-9444	1593	PIPE ASM; INLET	000000	000027
8944418300			GASKET; THERMOSTAT	000000	000000
8944418390	8-9444	1839	PICK UP	000000	000000
8944418400	8-9444	1840	CAPSULE; SPRING	000000	000000
8944418410	8-9444	1841	LEVER	000000	000003
8944418470	8-9444	1847	CENTER; WATER PUMP	000000	000000
8944418840	8-9444	1884	COVER;RR,OUTPUT	000000	000000
8944419270	8-9444	1927	SEAL; VALVE	000000	000000
8944419332	8-9444	1933	HOUSING; FLYWHEEL	000000	000000
8944419430	8-9444	1943	PUMP ASM; INJ.	000000	000000
8944419431	8-9444	1943	PUMP ASM; INJ.	000000	000000
8944419441	8-9444	1944	GOVERNOR ASM.	000000	000000
8944419471	8-9444	1947	HOUSING; FLYWHEEL	000000	000000
8944419473	8-9444	1947	HOUSING; FLYWHEEL	000000	000000
8944419480	8-9444	1948	FILTER ASM; OIL	000001	000000
8944419490	8-9444	1949	COVER;OIL PORT	000000	000000
8944419500	8-9444	1950	PIPE ASM; OIL	000000	000000
8944419501	8-9444	1950	PIPE ASM; OIL	000000	000000
8944419510	8-9444	1951	PIPE ASM; OIL	000000	000000
8944419532	8-9444	1953	HOUSING; FLYWHEEL	000000	000000
8944419540	8-9444	1954	PULLEY; CRANK	000000	000000
8944419550	8-9444	1955	RUBBER BY-PASS HOSE	000000	000000
8944419560	8-9444	1956	SPACER; FAN	000000	000000
8944419640	8-9444	1964	PISTON	000000	000000
8944420500			CUP; SEALING, CYL	000000	000000
8944421571	8-9444	2157	PIPE; WTR, O/COOLER	000000	000000
8944421620	8-9444	2162	HOSE; O/C RETURN	000000	000000

8944421621	8-9444	2162	HOSE; OIL COOLER	000000	000000
8944421622	8-9444	2162	HOSE; OIL COOLER	000000	000000
8944422240	8-9444	2224	NOZZLE ASM; INJECTION	000000	000000
8944422241	8-9444	2224	NOZZLE ASM; INJECTION	000000	000000
8944422250	8-9444	2225	NOZZLE ASM; INJECTION	000000	000011
8944423070	8-9444	2307	POINTER;TIMING GEAR CASE	000000	000000
8944424020	8-9444	2402	NOZZLE; FUEL	000000	000002
8944429690	8-9444	2969	JOINT BLOCK;OIL PIPE	000000	000000
8944429700			A/C BELT	000000	000000
8944430211	8-9444	3021	CLIP; HOSE	000017	000000
8944430380	8-9444	3038	HANDLE; SIDE DOOR	000000	000000
8944430390	8-9444	3039	LOCK; HANDLE	000000	000000
8944430400	8-9444	3040	COVER ASM.	000000	000000
8944430410	8-9444	3041	COVER; METER COVER(A)	000000	000000
8944430500	8-9444	3050	COVER; RADIATOR	000000	000000
8944430510	8-9444	3051	SEAL	000000	000000
8944430520	8-9444	3052	SILENCER; EXHAUST	000000	000000
8944430530	8-9444	3053	PIPE; EXHAUST	000000	000000
8944430570	8-9444	3057	PIPE; FUEL RET.	000000	000000
8944431000	8-9444	3100	FILLER ASM;OIL	000000	000000
8944431022	8-9444	3102	FLYWHEEL ASM	000000	000000
8944432270	8-9444	3227	PUMP ASM; OIL W/STRAINER	000000	000000
8944432272	8-9444	3227	PUMP ASM; OIL W/STRAINER	000000	000000
8944432273	8-9444	3227	PUMP ASM; OIL W/STRAINER	000001	000000
8944432411	8-9444	3241	FLYWHEEL ASM.	000000	000000
8944432520	8-9444	3252	BODY ASM.	000000	000000
8944432530	8-9444	3253	BODY ASM; FILTER	000000	000001
8944432540	8-9444	3254	COCK ASM.	000000	000000
8944432550	8-9444	3255	PLUG ASM	000000	000000
8944432731	8-9444	3273	PUMP ASM; INJ.	000000	000000
8944432740	8-9444	3274	PAN ASM; OIL	000000	000001
8944433581			P/S GEAR BOX	000000	000000
8944434300	8-9444	3430	LEVER; GOVERNOR	000000	000000
8944434350	8-9444	3435	ROD; PUSH,BOOST	000000	000000
8944434360	8-9444	3436	ROD; PUSH,BOOST	000000	000000
8944434370	8-9444	3437	ROD; PUSH,BOOST	000000	000000
8944434380	8-9444	3438	ROD; PUSH,BOOST	000000	000000
8944434390	8-9444	3439	ROD; PUSH,BOOST	000000	000000
8944434400	8-9444	3440	ROD; PUSH,BOOST	000000	000000
8944434410	8-9444	3441	ROD; PUSH,BOOST	000000	000000
8944434420	8-9444	3442	ROD; PUSH,BOOST	000000	000000
8944434430	8-9444	3443	ROD; PUSH,BOOST	000000	000000
8944435122	8-9444	3512	PIPE ASM; OIL	000000	000012
8944435350	8-9444	3535	JOINT BOLT	000015	000000
8944435570	8-9444	3557	FILTER ASM; OIL	000000	000000
8944435940	8-9444	3594	COVER ASM; OIL PUMP	000000	000000
8944436151	8-9444	3615	PISTON; .25	000003	000004

8944436161	8-9444	3616	PISTON; .50	000000	000004
8944436170	8-9444	3617	PISTON; .25	000000	000000
8944436180	8-9444	3618	PISTON; .50	000000	000000
8944436620	8-9444	3662	CRANKSHAFT	000000	000000
8944437890	8-9444	3789	PLUG	000000	000030
8944452710	8-9444	5271	CARTRIDGE;OIL FILTER	000000	000000
8944452711	8-9444	5271	CARTRIDGE;OIL FILTER	000000	000000
8944452720	8-9444	5272	OIL FILTER;MAIN	000000	000000
8944452730	8-9444	5273	FILTER;OIL (SPIN-ON)	000000	000000
8944452731	8-9444	5273	FILTER;OIL (SPIN-ON)	000000	000000
8944452740	8-9444	5274	BELT; FAN	000000	000000
8944455570	8-9444	5557	PLATE; RR.	000000	000000
8944455580	8-9444	5558	SHAFT;SPLINE G/C PTO C240	000001	000000
8944455581	8-9444	5558	SHAFT;SPLINE G/C PTO C240	000000	000000
8944455750	8-9444	5575	VALVE; REGULATING	000000	000000
8944455790	8-9444	5579	HOUSING; I/PUMP	000001	000000
8944455800	8-9444	5580	LEVER	000000	000000
8944456820	8-9444	5682	RING SET; PISTON	000000	000011
8944456830	8-9444	5683	RING SET; .50 PISTON	000000	000006
8944457402	8-9444	5740	FILTER ASM.; OIL CARTRIDG	000003	000000
8944457411	8-9444	5741	FILTER ASM.; OIL CARTRIDG	000000	000000
8944457421	8-9444	5742	BODY ASM.; OIL, CARTRIDGE	000000	000000
8944457422	8-9444	5742	BODY ASM.; OIL, CARTRIDGE	000002	000000
8944457431	8-9444	5743	BODY ASM.; OIL, CARTRIDGE	000000	000000
8944457451	8-9444	5745	BODY ASM; OIL, CARTRIDGE	000001	000000
8944457490	8-9444	5749	PUMP ASM; INJ.	000000	000002
8944458310	8-9444	5831	HANGER; FRT. ENG. LIFTING	000000	000000
8944462950	8-9444	6295	PIPE ASM; OIL, COVER-FILT	000000	000000
8944463151	8-9444	6315	PUMP ASM; INJ.	000000	000000
8944464080	8-9444	6408	CASE; STRAINER	000000	000000
8944464110	8-9444	6411	GAUZE	000000	000000
8944465100	8-9444	6510	LINK; ENG. STOP	000000	000004
8944465710	8-9444	6571	FILTER;DRIVEN G	000000	000000
8944465711	8-9444	6571	FILTER;DRIVEN GEAR	000323	000000
8944466230	8-9444	6623	SOLENOID ASM. ENG. STOP	000000	000000
8944466231	8-9444	6623	SOLENOID ASM. ENG. STOP	000001	000001
8944466240	8-9444	6624	SOLENOID ASM. ENG. STOP	000000	000000
8944466270	8-9444	6627	SOLENOID ASM.	000000	000001
8944466352	8-9444	6635	FLYWHEEL ASM.	000000	000000
8944467501	8-9444	6750	FILTER;OIL (SPIN-ON)	000000	000000
8944467520	8-9444	6752	HOLDER ASM;BRUS	000000	000000
8944467700	8-9444	6770	STARTER	000000	000000
8944467750	8-9444	6775	PUMP ASM; INJ.	000000	000000
8944467751	8-9444	6775	PUMP ASM; INJ.	000000	000000
8944467761	8-9444	6776	BRACKET; SOLENOID	000000	000001
8944467780	8-9444	6778	GAUGE ASM; OIL LEVEL	000001	000000
8944469000	8-9444	6900	ROD; LINK	000000	000000

8944469294	8-9444	6929	FLYWHEEL ASM.	000000	000008
8944469303	8-9444	6930	FLYWHEEL	000000	000000
8944469311	8-9444	6931	FLYWHEEL ASM.	000000	000000
8944469331	8-9444	6933	FLYWHEEL ASM.	000000	000000
8944470470	8-9444	7047	PIPE; FUEL, SEDI F/PUMP	000001	000004
8944470492	8-9444	7049	PUMP ASM; INJ.	000000	000000
8944470493	8-9444	7049	PUMP ASM; INJ.	000000	000000
8944470501	8-9444	7050	GOVERNOR ASM.	000000	000000
8944470502	8-9444	7050	GOVERNOR ASM.	000000	000000
8944471560	8-9444	7156	GASKET; SENSOR	000000	000000
8944472150	8-9444	7215	RADIATOR ASM.	000000	000000
8944472720	8-9444	7272	SHAFT, TOPGEAR	000000	000000
8944472750	8-9444	7275	2ND GEAR;TRANS	000000	000000
8944472781			SHAFT; TRANSM.	000000	000000
8944474780	8-9444	7478	TERMINAL	000000	010000
8944474840	8-9444	7484	SEAL;RUBBER, SOLENOID WIRE	000151	000357
8944475090	8-9444	7509	CONNECTOR; HARNESS GEN.	000000	000004
8944475160	8-9444	7516	WIRE SEAL RETAINER	000100	000171
8944475590	8-9444	7559	PIPE; INLET	000001	000000
8944475700	8-9444	7570	GASKET;HEAD	000000	000000
8944475701	8-9444	7570	GASKET;HEAD	000215	000279
8944475862	8-9444	7586	PUMP ASM; INJ.	000000	000000
8944475930	8-9444	7593	RUBBER HOSE;BREATHER	000000	000000
8944476840	8-9444	7684	BRACKET; INL MA	000000	000000
8944476851	8-9444	7685	BRACKET; FUEL F	000000	000000
8944476861	8-9444	7686	NOZZLE ASM; INJ	000000	000000
8944476882	8-9444	7688	PIPE; FUEL,FUEL	000000	000000
8944476891	8-9444	7689	PIPE; FUEL,FEED	000000	000000
8944476902	8-9444	7690	PIPE; FUEL,NOZZ	000000	000000
8944478210	8-9444	7821	TACHO METER ASM	000000	000000
8944478550	8-9444	7855	SEAL; OIL,RR COVER	000000	000000
8944479671	8-9444	7967	PROTECTOR: HEAT	000000	000000
8944479820	8-9444	7982	CLIP*	000000	000000
8944480030	8-9444	8003	ROD; LINK	000000	000003
8944480080	8-9444	8008	CAP; NIPPLE	000000	000004
8944480390	8-9444	8039	FILTER; OIL (HYSTER)	000000	000000
8944480450	8-9444	8045	SPRING;INSERT,LOW & 2ND	000002	000000
8944480460	8-9444	8046	GASKET;OIL PAN	000005	000002
8944481910	8-9444	8191	BRACKET; SOLENOID	000000	000000
8944481913	8-9444	8191	BRACKET; SOLENOID	000000	000000
8944481990	8-9444	8199	BRACKET; REV INHIBITOR	000000	000000
8944482011	8-9444	8201	INHIBITOR;REV	000001	000002
8944482020	8-9444	8202	INSERT; SYN, TOP	000000	000000
8944482021	8-9444	8202	INSERT; SYN, 4TH & 3RD	000000	000000
8944482022	8-9444	8202	INSERT; SYN, 4TH & 3RD	000000	000019
8944486916	8-9444	8691	EXHAUST PIPE	000000	000000
8944487270	8-9444	8727	CLIP; WATER HOSE	000000	000009

8944488070	8-9444	8807	SPRING;REV,INHIBITOR,COMP	000005	000000
8944488080	8-9444	8808	RING; SNAP,BRG INNER	000000	000004
8944488090	8-9444	8809	RING; SNAP,BRG INNER	000011	000054
8944488100	8-9444	8810	RING; SNAP,BRG INNER	000004	000002
8944488120	8-9444	8812	SCREW; STOPPER,	000000	000001
8944488121	8-9444	8812	SCREW; STOPPER,TRANSFER	000000	000000
8944488122	8-9444	8812	SCREW; STOPPER,TRANSFER	000000	000000
8944488150	8-9444	8815	BOLT; FRT COVER/QUAD BOX	000000	000000
8944488151	8-9444	8815	BOLT; FRT COVER/QUAD BOX	000000	000000
8944488152	8-9444	8815	BOLT; FRT COVER/QUAD BOX	000000	000000
8944488153	8-9444	8815	BOLT; FRT COVER/QUAD BOX	000000	000000
8944488170	8-9444	8817	BOLT; TRANSFER	000000	000000
8944488171	8-9444	8817	BOLT; TRANSFER CASE	000000	000016
8944488180	8-9444	8818	BOLT; RR COVER	000000	000000
8944488181	8-9444	8818	BOLT; RR COVER	000020	000000
8944488590	8-9444	8859	HOSE; RUBBER BY-PASS	000000	000000
8944488651	8-9444	8865	PIPE; FUEL, NOZZLE LEAKE	000000	000001
8944488822	8-9444	8882	HOUSING; FLYWHE	000000	000000
8944488891	8-9444	8889	KEY; FEATHER	000000	000039
8944489841			ELEMENT KIT; FU	000000	000000
8944490401	8-9444	9040	STOPPER ASM; ENG	000000	000000
8944490402	8-9444	9040	STOPPER ASM; ENG	000000	000001
8944490460	8-9444	9046	CAMSHAFT	000000	000000
8944490490	8-9444	9049	ARM ASM;ROCKET	000000	000000
8944490730			CONNECTING ROD	000000	000000
8944490760			PIPE ASM; OIL	000000	000000
8944491100	8-9444	9110	BOLT;CONVERTOR	000000	000000
8944491690	8-9444	9169	BELT;TIMING	000000	000000
8944491880	8-9444	9188	SHAFT;OUTP	000000	000000
8944491881	8-9444	9188	SHAFT;OUTPUT	000000	000001
8944492190	8-9444	9219	PAN ASM; OIL	000000	000000
8944492210	8-9444	9221	PUMP ASM; INJ.	000000	000000
8944492211	8-9444	9221	PUMP ASM; INJ.	000000	000002
8944492430	8-9444	9243	BOLT;CYL,HEAD(L	000000	000000
8944492460	8-9444	9246	BOLT;ADAPTER TO	000000	000022
8944492550	8-9444	9255	RETAINER ASM; W/OIL SEAL	000000	000000
8944493361	8-9444	9336	PAN ASM; OIL 4JC1	000000	000000
8944493630	8-9444	9363	CAP;SURGE TANK	000034	000011
8944493660	8-9444	9366	PULLEY; CRANKSHAFT	000000	000000
8944493661	8-9444	9366	PULLEY; CRANKSHAFT	000000	000000
8944493662	8-9444	9366	PULLEY; CRANKSHAFT	000000	000015
8944493930	8-9444	9393	BOLT,CYL HEAD F	000000	000000
8944494090	8-9444	9409	REPAIR KIT;W/PU	000000	000000
8944494520	8-9444	9452	PULLEY;GENERATOR	000000	000000
8944494630	8-9444	9463	STUD; EXHAUST MANIFOLD	000000	000000
8944494652			PIPE; EXH REAR	000000	000000
8944494840	8-9444	9484	INJECTOR; FUEL	000008	000001

8944495791	8-9444	9579	COVER; CHECK HOLE	000000	000000
8944496440	8-9444	9644	COOLER ASM; OIL	000000	000000
8944496441	8-9444	9644	COOLER ASM; OIL	000000	000000
8944496450	8-9444	9645	CASE; OIL COOLER	000000	000000
8944496571			FRONT SHOCKS	000000	000000
8944497090	8-9444	9709	PIPE; INLET	000000	000000
8944497241	8-9444	9724	MANIFOLD; INLET	000000	000000
8944497280	8-9444	9728	HOSE; INL PIPE, TURBOCHARG	000001	000002
8944497760	8-9444	9776	SWITCH; OVERHEAT WARNING	000000	000000
8944498562			LOCK; DOOR, RR D	000000	000000
8944498563			LOCK; DOOR, RR D	000000	000000
8944498794			WEATHERSTRIP	000000	000000
8944498804			WEATHERSTRIP	000000	000000
8944498812			RUN; GLASS, RR DOOR	000000	000000
8944498822			RUN; GLASS, RR	000000	000000
8944499452	8-9444	9945	BRACKET; EXHAUST MANIFOLD	000000	000000
8944499453	8-9444	9945	BRACKET; EXHAUST MANIFOLD	000000	000243
8944499742	8-9444	9974	ADAPTER; EXH. PIPE	000000	000000
8944499891	8-9444	9989	HOUSING; FLYWHEEL	000000	000000
8944500460	8-9445	0046	SWITCH; MAGNETIC	000000	000000
8944500461	8-9445	0046	SWITCH; MAGNETIC	000000	000000
8944500501	8-9445	0050	NOZZLE ASM; INJECTION 4	000000	000000
8944500502	8-9445	0050	NOZZLE ASM; INJECTION 4	000000	000003
8944500511	8-9445	0051	NOZZLE ASM; INJECTION 4JB	000003	000007
8944500971	8-9445	0097	GEAR; W/BUSH, "A" 4JC1	000000	000000
8944501041	8-9445	0104	PUMP ASM; INJ.	000000	000000
8944501050	8-9445	0105	GOVERNOR ASM.	000000	000000
8944501060	8-9445	0106	GOVERNOR ASM.	000000	000000
8944501070	8-9445	0107	GOVERNOR ASM.	000000	000000
8944501080	8-9445	0108	GOVERNOR ASM.	000000	000000
8944501330	8-9445	0133	BODY ASM; F/FILTER	000000	000000
8944501333	8-9445	0133	BODY ASM; F/FILTER	000000	000000
8944501350	8-9445	0135	BODY ASM; F/FILTER	000000	000000
8944501352	8-9445	0135	BODY ASM; F/FILTER	000002	000000
8944501390	8-9445	0139	SENSOR ASM.	000000	000000
8944501420	8-9445	0142	SENSOR	000000	000020
8944501460	8-9445	0146	PLUG ASM.	000000	000000
8944501691			HOUSING; FLYWHEEL	000000	000000
8944501730	8-9445	0173	BOLT; BRACKET	000086	000000
8944501740	8-9445	0174	RELAY; SAFETY	000002	000000
8944501741	8-9445	0174	RELAY; SAFETY	000000	000000
8944502723	8-9445	0272	PUMP ASM; INJ.	000000	000001
8944503410	8-9445	0341	GOVERNOR ASM.	000000	000000
8944503430	8-9445	0343	GOVERNOR ASM.	000000	000000
8944503520	8-9445	0352	PUMP ASM; INJ.	000000	000000
8944503760	8-9445	0376	CLUTCH ASM	000000	000000
8944503830	8-9445	0383	RETAINER BRG	000001	000000

8944503850	8-9445	0385	COVER KIT	000000	000000
8944503880	8-9445	0388	SHUTTER ASM; INTAKE	000001	000001
8944504130			OIL PUMP	000000	000000
8944504133			PUMP ASM; P/S	000000	000000
8944504134			PUMP ASM; OIL	000000	000000
8944505660	8-9445	0566	DUCT; INLET	000000	000001
8944506270			PIPE ASM; WATER	000001	000000
8944507231	8-9445	0723	SOLENOID; ENG. STOP 4JC1	000000	000037
8944507240	8-9445	0724	ROD; LINK SOLENOID 4JC1	000000	000001
8944507250	8-9445	0725	BRACKET; SOLENOID 4JC1	000000	000000
8944507260	8-9445	0726	FAN ASM; COOLING	000000	000000
8944507261	8-9445	0726	FAN ASM; COOLING	000000	000033
8944507720	8-9445	0772	VALVE ASM.	000000	000000
8944508960	8-9445	0896	CLUTCH ASM; PINION	000000	000000
8944509000	8-9445	0900	COLUMN;STEERING	000000	000000
8944509180	8-9445	0918	CLUTCH ASM.	000005	000000
8944509190	8-9445	0919	SHAFT; PISTON	000001	000000
8944509700	8-9445	0970	RELAY: RR DEFFO	000000	000000
8944509720	8-9445	0972	RELAY; HEATER &	000000	000000
8944509750	8-9445	0975	CASE; TIMING GE	000000	000000
8944509751	8-9445	0975	CASE;TIMING	000000	000000
8944509752	8-9445	0975	CASE; GEAR	000000	000001
8944509770	8-9445	0977	RELAY; A/C	000000	000000
8944510410	8-9445	1041	DISC ASM, CLUTCH	000000	000002
8944510460	8-9445	1046	PUMP ASM; FEED	000000	000000
8944512271			COMPRESSOR; A/C	000000	000000
8944512550	8-9445	1255	SHAFT; INTAKE SHUTTER	000000	000000
8944512560	8-9445	1256	BUSHING; CASE TO SHAFT	000000	000000
8944512740	8-9445	1274	SENSOR;REVOLUTI	000009	000000
8944513100	8-9445	1310	CASE ASM; INTAKE SHUTTER	000000	000000
8944514780	8-9445	1478	PLUG;OIL FILLER	000000	000008
8944519520	8-9445	1952	HARNES; WIRE	000000	000000
8944519900	8-9445	1990	MANIFOLD; EXHAUST	000000	000000
8944519901	8-9445	1990	MANIFOLD; EXHAUST	000000	000000
8944519902	8-9445	1990	MANIFOLD; EXHAUST	000000	000003
8944519910	8-9445	1991	PUMP ASM; WATER W/GASKET	000000	000000
8944520910	8-9445	2091	CENTER	000000	000000
8944522591	8-9445	2259	RADIATOR ASM.	000000	000000
8944522601	8-9445	2260	PULLEY; FAN	000000	000000
8944525040	8-9445	2504	REGULATOR ASM 3KC/3KR	000000	000000
8944525070	8-9445	2507	HOSE; RAD-LOWER	000000	000000
8944525080	8-9445	2508	HOSE; RAD-UPPER	000000	000002
8944525220	8-9445	2522	CLEANER ASM; AIR	000000	000000
8944525520	8-9445	2552	GEAR SET; OIL P	000000	000000
8944526790	8-9445	2679	PIPE ASM; FILTER LEAK	000001	000000
8944528690			COVER: TIMING(L)	000000	000000
8944529040	8-9445	2904	BELT: P/S PUMP	000056	000804

8944529570	8-9445	2957	CYLINDER;SLAVE	000000	000000
8944529571	8-9445	2957	CYLINDER;SLAVE	000000	000000
8944529590	8-9445	2959	ROD; PUSH,SLAVE CYL	000000	000000
8944529600	8-9445	2960	SPRING ASM;PISTON,SLAVE C	000000	000001
8944529720	8-9445	2972	SPACER; RR COVE	000000	000000
8944531901	8-9445	3190	FLYWHEEL ASM.	000000	000000
8944532111	8-9445	3211	STARTER; HITACHI	000000	000000
8944532120	8-9445	3212	STARTER; HITACHI	000000	000000
8944532180	8-9445	3218	COVER; END REAR	000000	000000
8944532190	8-9445	3219	WASHER	000000	000000
8944532200	8-9445	3220	COVER; BRUSH	000000	000000
8944532210	8-9445	3221	STATOR & RECTIFIER ASM.	000000	000000
8944532220	8-9445	3222	HOLDER ASM.; BRUSH	000000	000000
8944532230	8-9445	3223	BUSH	000000	000000
8944532240	8-9445	3224	FRAME ASM.; REAR	000000	000000
8944532250	8-9445	3225	COLLAR	000000	000000
8944532260	8-9445	3226	ROTOR ASM.	000000	000001
8944532270	8-9445	3227	BOLT*	000000	000000
8944532280	8-9445	3228	COVER; FELT	000000	000000
8944532290	8-9445	3229	RETAINER; PLATE	000000	000000
8944532300	8-9445	3230	BEARING	000000	000000
8944532310	8-9445	3231	COVER; FELT	000000	000000
8944532320	8-9445	3232	WASHER; FELT	000000	000000
8944532330	8-9445	3233	COVER ASM; FRT GEN	000000	000000
8944532340	8-9445	3234	COLLAR	000000	000000
8944532350	8-9445	3235	FAN	000000	000000
8944532360	8-9445	3236	PULLEY	000000	000000
8944532370	8-9445	3237	STATOR ASM.	000000	000000
8944532380	8-9445	3238	ROTOR ASM.	000000	000000
8944532390	8-9445	3239	PULLEY	000000	000000
8944532400	8-9445	3240	HOLDER SUB ASM; BRUSH	000004	000000
8944532410	8-9445	3241	FRAME ASM; END REAR	000000	000000
8944532430	8-9445	3243	FRAME ASM; DRIVE END	000000	000000
8944532440	8-9445	3244	PULLEY	000000	000003
8944532490	8-9445	3249	ROTOR ASM.	000000	000000
8944532500	8-9445	3250	ROTOR ASM.	000000	000000
8944532510	8-9445	3251	REAR COVER ASM.	000000	000000
8944532520	8-9445	3252	COVER; REAR	000000	000000
8944532530	8-9445	3253	REGULATOR ASM; BRUSH	000000	000000
8944532540	8-9445	3254	BRUSH ASM.	000000	000000
8944532550	8-9445	3255	DIODE ASM.	000000	000000
8944532570	8-9445	3257	PULLEY; CRANKSHAFT	000000	000000
8944532580	8-9445	3258	BEARING; BALL	000000	000000
8944533000	8-9445	3300	DRIVE ASM.; TACHOMETER,4B	000000	000000
8944533001	8-9445	3300	DRIVE ASM.; TACHOMETER,4B	000000	000004
8944533410	8-9445	3341	VALVE; SOLENOID	000000	000000
8944533411	8-9445	3341	VALVE; SOLENOID	000000	000026

8944533420	8-9445	3342	SOLENOID ASM;ENGINE STOPP	000000	000000
8944533421	8-9445	3342	SOLENOID ASM;ENGINE STOPP	000000	000002
8944533430	8-9445	3343	SOLENOID	000000	000000
8944533440	8-9445	3344	PIN; INJ PUMP BRKT	000006	001524
8944533461	8-9445	3346	CLUTCH RELEASE BRG	000000	000000
8944533630	8-9445	3363	CLEANER ASM; AIR	000000	000000
8944534200	8-9445	3420	FUEL SHUT OFF SOLENOID	000000	000000
8944534691	8-9445	3469	PIPE; WATER OUTLET	000000	000000
8944535200	8-9445	3520	THRUST METAL SET	000000	000000
8944535252	8-9445	3525	CRANKSHAFT ASM.	000000	000000
8944535292	8-9445	3529	BRACKET; PIPE ASM	000000	000000
8944535431			FUEL INJECTORS	000000	000000
8944535432			NOZZLE ASM; INJ	000000	000000
8944535471			FOOT; ENGINE, LH	000000	000000
8944535472	8-9445	3547	FOOT; ENGINE, LH	000000	000000
8944535480	8-9445	3548	PIPE ASM;OIL GEAR CASE	000000	000000
8944535481	8-9445	3548	PIPE ASM;OIL GEAR CASE	000000	000000
8944535510	8-9445	3551	PULLEY; CRANKSHAFT	000000	000000
8944535521	8-9445	3552	PULLEY; CRANKSHAFT	000000	000000
8944535522	8-9445	3552	PULLEY; CRANKSHAFT	000000	000000
8944535523	8-9445	3552	PULLEY; CRANKSHAFT	000000	000000
8944537360	8-9445	3736	CASE ASM.	000000	000000
8944537371	8-9445	3737	FILTER ASM; FUEL	000000	000002
8944537380	8-9445	3738	FILTER;FUEL (SPIN-ON) 4B/	000000	000000
8944537381	8-9445	3738	FILTER;FUEL (SPIN-ON) 4B/	000000	000000
8944537382	8-9445	3738	FILTER;FUEL (SPIN-ON) 4B/	000000	000048
8944537460	8-9445	3746	PLUG ASM;SEDIMENTER	000000	000067
8944537610			METAL KIT;CRANKSHAFT, STD	000000	000000
8944537620	8-9445	3762	THRUST METAL SET	000000	000000
8944539481			BRAKE; ASM.	000000	000000
8944539661			PULLEY; FAN	000000	000000
8944539671	8-9445	3967	SILENCER; EXH.	000000	000000
8944539680	8-9445	3968	CLAMP	000000	000000
8944539681	8-9445	3968	CLAMP	000000	000000
8944540101			PLATE ASM	000000	000000
8944541990	8-9445	4199	BOLT; JOINT	000000	000000
8944542000			CLUTCH DISC	000000	000000
8944542530	8-9445	4253	VALVE	000000	000000
8944544400	8-9445	4440	GAUGE ASM; OIL	000000	000000
8944544790	8-9445	4479	PIN; PISTON	000010	000000
8944545590	8-9445	4559	STARTER	000000	000000
8944545591	8-9445	4559	STARTER	000000	000000
8944545680	8-9445	4568	PUMP ASM; INJ.	000000	000000
8944546040	8-9445	4604	WASHER; THRUST	000000	000104
8944546050	8-9445	4605	METAL SET; THRUST	000000	000000
8944546150	8-9445	4615	PLUG; ROCKER SHAFT END	000000	000042
8944547090	8-9445	4709	HOSE;VACUUM PUM	000030	000018

8944547120	8-9445	4712	SHAFT; DRIVE GEAR	000000	000000
8944548160	8-9445	4816	HOLDER ASM;NOZZLE	000000	000000
8944548320	8-9445	4832	DUCT;WATER	000000	000000
8944548321	8-9445	4832	DUCT;WATER	000000	000001
8944548420	8-9445	4842	FLYWHEEL ASM	000000	000000
8944548441	8-9445	4844	ROD ASM;CONN	000000	000000
8944548442	8-9445	4844	ROD ASM;CONN	000000	000000
8944548460			OIL PAN ASM; W/DRAIN PLUG	000000	000000
8944548520	8-9445	4852	PIPE ASSY; OILF	000000	000003
8944548660	8-9445	4866	PULLEY;BALANCER	000000	000000
8944549182			ABSORBER	000000	000002
8944549192			ABSORBER	000000	000018
8944549212			ABSORBER	000001	000017
8944549630	8-9445	4963	BRACKET;ACCEL C	000000	000000
8944549631	8-9445	4963	BRACKET;ACCEL C	000000	000000
8944549632	8-9445	4963	BRACKET;ACCEL C	000000	000001
8944550340	8-9445	5034	FRAME ASM	000000	000000
8944550410	8-9445	5041	VALVE; SOLENOID	000000	000000
8944550430	8-9445	5043	RELAY	000000	000000
8944550431	8-9445	5043	RELAY	000003	000000
8944551010	8-9445	5101	SLEEVE;CONVERTE	000000	000016
8944551020	8-9445	5102	PUMP ASM;INJ	000000	000000
8944551021	8-9445	5102	PUMP ASM;INJ	000000	000000
8944551022	8-9445	5102	PUMP ASM;INJ	000000	000000
8944551380	8-9445	5138	PUMP ASM.; INJ. FIG.52	000000	000000
8944551440	8-9445	5144	BOLT;WATER PIPE	000021	000037
8944551540	8-9445	5154	RETAINER; ROTOR,GEN	000000	000000
8944551560	8-9445	5156	BOLT SET; GEN	000000	000014
8944551600	8-9445	5160	REGULATOR ASM;VOLTAGE,GEN	000000	000000
8944551610	8-9445	5161	SCREW; RECTIFIER,GEN	000000	000000
8944551620	8-9445	5162	SCREW; RECTIFIER,GEN	000000	000014
8944551630	8-9445	5163	BOLT/SCREW; GEN	000000	000029
8944551640	8-9445	5164	BOLT; THROUGH,GEN	000000	000029
8944551650	8-9445	5165	COVER; END,RR COVER,GEN	000000	000000
8944551660	8-9445	5166	BUSHING; TERMINAL	000000	000000
8944551830			COVER;STARTER	000000	000000
8944552401	8-9445	5240	CRANKSHAFT	000000	000000
8944553010	8-9445	5301	PLUNGER ASM; INJ. PUMP	000000	000000
8944553671	8-9445	5367	SILENCER; EXH.	000000	000000
8944553690	8-9445	5369	COVER; RR END, GEN	000000	000000
8944554890	8-9445	5489	LEVEL GAGE ASM.	000000	000000
8944554930	8-9445	5493	REPAIR KIT; OIL PUMP C24	000000	000000
8944554950	8-9445	5495	REPAIR KIT; OIL PUMP C24	000000	000000
8944555021	8-9445	5502	HEAD ASM;CYLINDER	000000	000000
8944555070	8-9445	5507	PAN ASM.;OIL	000000	000000
8944555111	8-9445	5511	TUBE ASM.;GUIDE	000000	000000
8944555850			PLATE ASM;	000000	000000

8944555880	8-9445	5588	COVER; UNDER, TRA	000000	000000
8944555881	8-9445	5588	COVER; UNDER, TRA	000000	000000
8944555882	8-9445	5588	COVER; UNDER TRA	000000	000000
8944555920	8-9445	5592	LEVER; SELECT	000000	000000
8944555921	8-9445	5592	LEVER; SELECT	000000	000000
8944555922	8-9445	5592	LEVER; SELECT	000000	000015
8944555980	8-9445	5598	TORQUE CONVERTER ASM	000000	000000
8944556670	8-9445	5667	BOLT; CYL. HEAD	000000	000094
8944556730	8-9445	5673	PIPE ASM; F/FILTER O/FOW	000000	000000
8944556731	8-9445	5673	PIPE ASM; F/FILTER O/FOW	000001	000000
8944556740	8-9445	5674	PLUG; OIL FILLER	000000	000000
8944556860			BODY; OIL FILTER	000000	000000
8944557004			REGULATOR	000000	000000
8944557005			REGULATOR	000000	000000
8944557014			REGULATOR	000000	000000
8944557015			REGULATOR	000000	000000
8944557270	8-9445	5727	CAP: SURGE TANK	000000	000000
8944558220			SHOCK ABS	000000	000000
8944558272			TIMER ASM; AUTO	000000	000000
8944558280	8-9445	5828	PUMP ASM; FEED	000000	000000
8944558300	8-9445	5830	BEARING; RADIAL	000000	000000
8944558330	8-9445	5833	GAUGE ASM; OIL LEVEL	000001	000001
8944558380			ELEMENT; A/CLEAN	000000	000000
8944558711	8-9445	5871	TUBE; GUIDE	000000	000000
8944558720	8-9445	5872	PUMP; OIL	000000	000000
8944558730	8-9445	5873	COVER ASM; OIL PUMP	000000	000000
8944558940	8-9445	5894	NIPPLE; GUIDE TUBE	000000	000000
8944559110	8-9445	5911	GSKT; INL, MANIFO	000000	000000
8944559120	8-9445	5912	PISTON	000000	000000
8944559740	8-9445	5974	CONNECTOR; VAC PUMP	000000	000001
8944559801	8-9445	5980	TUBE ASM.; GUIDE	000000	000000
8944559811	8-9445	5981	VALVE ASM.; THROT, FIG.73A	000000	000000
8944565320			HOSE; OIL COOLER	000000	000000
8944565380	8-9445	6538	STARTER; HITACHI	000000	000047
8944565390	8-9445	6539	TIMER ASM.	000000	000000
8944565460	8-9445	6546	ANGLEICH KIT	000000	000000
8944565860	8-9445	6586	COLLAR; STEEL	000000	000000
8944565900	8-9445	6590	COVER; FELT	000000	000000
8944565910	8-9445	6591	GASKET; ROTOR, G.	000000	000000
8944565930	8-9445	6593	RETAINER; PLATE	000000	000000
8944566020	8-9445	6602	INSULATION BRUSH	000000	000000
8944566320			PIPE; INJ NO. 1	000000	000000
8944566330			PIPE; INJ NO.2	000000	000000
8944566340			PIPE; INJ NO. 3	000000	000000
8944566350			PIPE; INJ NO.4	000000	000000
8944566550			BUSH; INSULATE	000000	000000
8944566560	8-9445	6656	TERMINAL ASM.	000011	000000

8944566570	8-9445	6657	BOLT	000000	000000
8944566580	8-9445	6658	BRACKET; REAR	000000	000003
8944566590	8-9445	6659	BRACKET ASM; REAR	000001	000000
8944566610	8-9445	6661	BEARING; BALL	000000	000000
8944566620	8-9445	6662	REGULATOR ASM.	000002	000000
8944566630	8-9445	6663	RECTIFIER ASM.	000000	000001
8944566640	8-9445	6664	COVER	000000	000000
8944566650	8-9445	6665	ROTOR ASM.	000000	000000
8944566660	8-9445	6666	STATOR ASM.	000003	000000
8944566670	8-9445	6667	BRACKET; FRONT	000004	000000
8944566680	8-9445	6668	FAN	000000	000000
8944566690	8-9445	6669	PULLEY	000000	000002
8944566700	8-9445	6670	COLLAR	000000	000000
8944566710	8-9445	6671	COLLAR	000000	000000
8944566720	8-9445	6672	RETAINER	000000	000000
8944566730	8-9445	6673	RETAINER	000000	000000
8944566740	8-9445	6674	RETAINER	000000	000000
8944566750	8-9445	6675	RETAINER	000003	000000
8944566760	8-9445	6676	PACKING	000000	000000
8944567410	8-9445	6741	OIL FILTER ELEMENT	000000	000000
8944567411	8-9445	6741	OIL FILTER ELEMENT	000000	000000
8944567412	8-9445	6741	ELEMENT; OIL FILTER	001925	000606
8944567540	8-9445	6754	PAN ASM; OIL	000000	000002
8944567550	8-9445	6755	PAN ASM; OIL	000000	000000
8944567800	8-9445	6780	BELT; FAN	000001	000006
8944567810	8-9445	6781	PILOT LAMP; WATER	000000	000000
8944567942	8-9445	6794	DUCT: WATER	000000	000000
8944567943	8-9445	6794	DUCT: WATER	000000	000000
8944568960	8-9445	6896	CLUTCH ASM; PINION	000000	000000
8944568990	8-9445	6899	CLUTCH ASM; PINION	000001	000000
8944569000	8-9445	6900	SHAFT; PINION	000000	000002
8944569010	8-9445	6901	CASE; GEAR	000000	000000
8944570080	8-9445	7008	PIN; PISTON	000000	000000
8944570081	8-9445	7008	PIN; PISTON	000000	000023
8944570641	8-9445	7064	GOVERNOR ASM.	000000	000000
8944570652	8-9445	7065	GOVERNOR ASM.	000000	000000
8944570653	8-9445	7065	GOVERNOR ASM.	000000	000003
8944571580	8-9445	7158	BUSHING; CONN ROD	000000	000009
8944573440	8-9445	7344	CAP ASM; AIR CLEANER	000000	000000
8944573710	8-9445	7371	ROTOR SET; OIL PUMP	000000	000000
8944573720	8-9445	7372	ROTOR SET; OIL PUMP	000001	000000
8944574050	8-9445	7405	PACKING; WATER	000000	000000
8944574270	8-9445	7427	SPACER; FAN TO	000000	000000
8944574271	8-9445	7427	SPACER; FAN TO	000000	000000
8944574760	8-9445	7476	TURBO ASM, NEW	000000	000000
8944574761	8-9445	7476	TURBO ASM, NEW	000000	000000
8944574780	8-9445	7478	PLATE; LOCK	000000	000000

8944575110	8-9445	7511	SWITCH;THERMO	000000	000000
8944575170	8-9445	7517	BOLT;DRIVE GEAR FIX, INJ P	000000	000029
8944575290	8-9445	7529	AUTO STARTING BOARD	000000	000000
8944575310	8-9445	7531	AUTO STARTING BOARD	000000	000000
8944575320	8-9445	7532	AUTO STARTING BOARD	000000	000000
8944575340	8-9445	7534	AUTO STARTING BOARD	000000	000000
8944575350	8-9445	7535	AUTO STARTING BOARD	000000	000000
8944575390	8-9445	7539	SPACER; IDLE PULLEY	000000	000000
8944577420	8-9445	7742	PULLEY	000000	000000
8944577421	8-9445	7742	PULLEY	000000	000000
8944577850	8-9445	7785	SYNCHRONIZER; 4	000000	000000
8944577851	8-9445	7785	SYNCHRONIZER ASM; 2ND,4TH	000000	000000
8944578590	8-9445	7859	BOOT; SLAVE CYL.	000000	000000
8944578591	8-9445	7859	BOOT; SLAVE CYL.	000000	000000
8944578600	8-9445	7860	ROD; PUSH SLAVE CYL	000000	000000
8944579100	8-9445	7910	CASE;TIMING GEA	000000	000000
8944579101	8-9445	7910	CASE; TIMING GEAR	000000	000000
8944579102	8-9445	7910	CASE; TIMING GEAR	000001	000003
8944580280	8-9445	8028	GOVERNOR ASM.	000000	000000
8944580281	8-9445	8028	GOVERNOR ASM.	000000	000000
8944580530	8-9445	8053	PIPE;ACTUATOR T	000000	000000
8944581270	8-9445	8127	TUBE ASM; OIL GUIDE 3KC1	000000	000000
8944581320	8-9445	8132	GAUGE ASM; OIL LEVEL	000002	000000
8944582570	8-9445	8257	GEAR;INJECTION PUMP	000000	000001
8944583990	8-9445	8399	ROTOR ASM.	000000	000000
8944584100	8-9445	8410	ROTOR ASM;	000000	000000
8944584110	8-9445	8411	STATOR ASM.	000000	000000
8944584120	8-9445	8412	COVER ASM; RR	000000	000000
8944584130	8-9445	8413	COVER ASM.;REAR	000000	000000
8944584131	8-9445	8413	COVER ASM.;REAR	000000	000000
8944584140	8-9445	8414	COVER; REAR	000000	000000
8944584141	8-9445	8414	COVER; REAR	000000	000000
8944584150	8-9445	8415	REGULATOR ASM; BRUSH	000000	000005
8944584160	8-9445	8416	BRUSH ASM.	000000	000000
8944584170	8-9445	8417	DIODE ASM.	000004	000002
8944584180	8-9445	8418	CONDENSER	000000	000000
8944584190	8-9445	8419	COVER ASM; FRT	000000	000000
8944584200	8-9445	8420	COVER ASM.;	000000	000000
8944584210	8-9445	8421	PULLEY ASM; GENERATOR	000000	000000
8944584220	8-9445	8422	PULLEY ASM.;GEN	000000	000000
8944584230	8-9445	8423	BEARING; BALL	000002	000000
8944584240	8-9445	8424	BEARING; BALL	000000	000000
8944584720	8-9445	8472	PLUG; LEVEL GAUGE	000000	000000
8944584730			BOLT;INL MANIF	000000	000000
8944584731	8-9445	8473	BOLT;INL MANIF	000000	000115
8944584740	8-9445	8474	BOLT;INL MANIF	000000	000000
8944584741	8-9445	8474	BOLT; INL MANIF/CAM BRKT	000000	000045

8944584830	8-9445	8483	GLOW PLUG	000000	000000
8944584831	8-9445	8483	GLOW PLUG	000000	000014
8944585733	8-9445	8573	HOSE; WATER ENG L=2570	000000	000000
8944591160	8-9445	9116	PUMP ASM; INJ.	000000	000000
8944592440	8-9445	9244	FLYWHEEL ASM	000000	000000
8944592670	8-9445	9267	ROD ASM; CONN ***SUPERSED	000000	000000
8944592690	8-9445	9269	ROD ASM; CONN	000000	000000
8944594011	8-9445	9401	OIL LEVEL GAUGE	000000	000005
8944594581			BAR; STAB, FRT.	000000	000000
8944594740			STEERING LINK	000000	000000
8944594741			STEERING LINK	000000	000000
8944594742			STEERING LINK	000000	000000
8944594750			ROD, TRACK, VENT	000000	000000
8944594892			R O D	000000	000000
8944595150	8-9445	9515	PUMP ASM; OIL	000000	000010
8944595280	8-9445	9528	COVER; OIL PUMP	000000	000000
8944596460	8-9445	9646	GASKET; PIPE TO	000000	000000
8944596950	8-9445	9695	CYLINDER; SLAVE, CLU	000000	000000
8944596980	8-9445	9698	ROD; PUSH, SLAVE	000000	000000
8944597000	8-9445	9700	OIL FILTER	000000	000000
8944597001	8-9445	9700	OIL FILTER	000000	000000
8944597451			HEATER UNIT ASSY	000000	000000
8944597870	8-9445	9787	HOSE; RADIATOR,	000000	000000
8944598153	8-9445	9815	PULLEY: FAN V1 D=120	000000	000000
8944598154	8-9445	9815	PULLEY: FAN V1 D=120	000000	000000
8944598340	8-9445	9834	HOLDER; NOZZLE	000000	000000
8944598600	8-9445	9860	GAUGE; OIL LEVEL	000000	000000
8944598970	8-9445	9897	PIPE; FUEL	000000	000000
8944599180	8-9445	9918	INDICATOR; GLOW	000000	000000
8944599240	8-9445	9924	SPRING; RETURN, SHIFT	000000	000000
8944599250			TIMING BELT	000000	000000
8944599290			HOSE; WATER PIPE TO PUMP	000000	000005
8944599300	8-9445	9930	HOSE;	000000	000011
8944599310	8-9445	9931	HOSE; RADIATOR UPPER	000000	000000
8944599320	8-9445	9932	HOSE; RAD TOP	000000	000001
8944599450			ELEMENT; A/CL	000000	000000
8944599460			AIR FILTER	000000	000000
8944599701	8-9445	9970	BOLT; FULCRUM	000000	000000
8944600790			SHAFT; PROP 2ND	000000	000000
8944602170	8-9446	0217	CRANK CASE	000000	000000
8944602181	8-9446	0218	CASE; CRANK	000000	000000
8944602190	8-9446	0219	PIPE; FLEX HOSE	000000	000000
8944602200	8-9446	0220	BRACKET; GENERATOR	000000	000000
8944602850	8-9446	0285	PULLEY ASM.	000000	000000
8944602980	8-9446	0298	VALVE; DELIVERY	000000	000000
8944603010	8-9446	0301	LEVER; INJ. PUMP	000000	000000
8944603020	8-9446	0302	LEVER; INJ. PUMP	000000	000000

8944603091	8-9446	0309	HOUSING; PUMP	000000	000000
8944603100	8-9446	0310	PIPE ASM; INJECTION	000000	000000
8944603560	8-9446	0356	GENERATOR; 12V/50A	000000	000001
8944606370			VALVE; EXH.	000000	000000
8944606480			BOLT; EYE	000001	000000
8944606870	8-9446	0687	SNAP RING; PISTON	000128	000000
8944607060	8-9446	0706	RELAY; GLOW PLUG	000000	000000
8944607061	8-9446	0706	RELAY; GLOW PLUG	000000	000076
8944608930	8-9446	0893	SPRING;CLUTCH	000001	000002
8944609520	8-9446	0952	PACKING: SPACER	000000	000000
8944610190	8-9446	1019	ADAPTER; BREATHER	000000	000000
8944610191	8-9446	1019	ADAPTER; BREATHER	000000	000043
8944611730	8-9446	1173	WATER PUMP	000000	000000
8944611751	8-9446	1175	COVER	000000	000000
8944611810	8-9446	1181	FLYWHEEL ASM	000000	000000
8944611812	8-9446	1181	FLYWHEEL ASM	000000	000000
8944612440	8-9446	1244	GEAR; CAM SHAFT	000000	000000
8944613450	8-9446	1345	WASHER;PLAIN SHIFT LEVER	000000	000003
8944613730	8-9446	1373	CYLINDER;SLAVE	000000	000000
8944618970	8-9446	1897	SPRING; INTER LOCK,TRANSF	000000	000000
8944618980	8-9446	1898	PIN; INTER LOCK,SHIFT ROD	000000	000000
8944619341			PUMP ASM; OIL	000000	000000
8944619540	8-9446	1954	COVER ASM;CYL	000000	000000
8944619541	8-9446	1954	COVER ASM;CYL	000000	000000
8944619570	8-9446	1957	VALVE; INLET	000000	000000
8944619620	8-9446	1962	PROTECTOR; HEAT	000000	000000
8944619621	8-9446	1962	PROTECTOR;	000000	000003
8944619641	8-9446	1964	PIPE;WATER,TURB	000000	000000
8944619642	8-9446	1964	PIPE;WATER,TURB	000000	000000
8944619651	8-9446	1965	ADAPTER;WATER	000000	000010
8944619690	8-9446	1969	BRACKET;FUEL CU	000000	000000
8944619691	8-9446	1969	BRACKET;FUEL, CU	000000	000010
8944619700	8-9446	1970	PAN ASM;OIL	000000	000000
8944619701	8-9446	1970	PAN ASM; OIL	000000	000000
8944619702	8-9446	1970	PAN ASM; OIL	000000	000002
8944619720	8-9446	1972	BRACKET;GEN	000000	000004
8944619730	8-9446	1973	FAN;COOLING	000000	000008
8944619770	8-9446	1977	BRACKET;FAN GUI	000000	000000
8944619771	8-9446	1977	BRACKET; FAN GUIDE TOP	000000	000007
8944619790	8-9446	1979	PIPE;OIL, INJ PU	000000	000000
8944619791	8-9446	1979	PIPE;OIL, INJ, PU	000000	000000
8944620190	8-9446	2019	SEAL; OIL, QUADRANT BOX	000000	000000
8944620200	8-9446	2020	SPRING;CLUTCH	000000	000000
8944620210	8-9446	2021	SPRING; CLUTCH	000000	000002
8944620380	8-9446	2038	BOLT;CLU.COVER	000000	000000
8944620381	8-9446	2038	BOLT;CLU.COVER	000000	000020
8944620450	8-9446	2045	PIPE; INL	000000	000000

8944620463			BLOWER UNIT	000000	000000
8944620570	8-9446	2057	GENERATOR; NIKKO	000000	000001
8944620930	8-9446	2093	SHAFT ASM; ENGIN	000000	000000
8944621120	8-9446	2112	GASKET	000069	000000
8944621130	8-9446	2113	GASKET; QUADRANT	000000	000000
8944621140	8-9446	2114	GASKET; NEUTRAL SW	000033	000094
8944621300			LINER; CYL.	000000	000000
8944621371	8-9446	2137	FILTER ASM; OIL	000000	000000
8944621372	8-9446	2137	FILTER ASM; OIL	000000	000008
8944622160	8-9446	2216	BRACKET ASM; REAR	000000	000000
8944622190			CLIP; PIPE	000000	000033
8944623721			CAP; RR BUMPER	000000	000002
8944623731			CAP; RR BUMPER	000000	000000
8944623751			SOLENOID ASM.	000000	000000
8944624851	8-9446	2485	HARNESS; ENG. SIDE	000000	000000
8944624852	8-9446	2485	HARNESS; ENG. SIDE	000003	000000
8944624862	8-9446	2486	METER BOARD	000000	000000
8944624871	8-9446	2487	BOARD; METER	000000	000000
8944624880	8-9446	2488	HARNESS; METER	000000	000000
8944624940	8-9446	2494	FAN ASM; COOLING	000000	000001
8944625530	8-9446	2553	HOUSING; THERMOSTAT	000000	000000
8944625531	8-9446	2553	HOUSING; THERMOSTAT	000000	000001
8944625540	8-9446	2554	HOUSING; THERMOSTAT	000001	000000
8944625590	8-9446	2559	GASKET; CYL, HEAD	000048	000599
8944626110	8-9446	2611	CONT. RESIST.	000000	000000
8944626150	8-9446	2615	BALL BEARING	000000	000000
8944626160	8-9446	2616	BEARING; BALL, C/RR. (OR)	000000	000000
8944626170	8-9446	2617	BEARING; BALL, C/FRT. (OR)	000000	000000
8944626180	8-9446	2618	BEARING; COUNT	000000	000000
8944626390	8-9446	2639	HOSE; RUBBER-UPPER	000000	000000
8944626400	8-9446	2640	HOSE; RADIATOR, UPPER	000000	000001
8944626430	8-9446	2643	HOSE; RADIATOR, UPPER	000000	000000
8944627351	8-9446	2735	SOLENOID ASM.	000001	000001
8944627551	8-9446	2755	PUMP ASM; INJ.	000000	000000
8944627554	8-9446	2755	PUMP ASM; INJ.	000000	000000
8944627590	8-9446	2759	SWITCH; ENG. STOP	000000	000000
8944627891	8-9446	2789	PLATE; DRIVEN	000000	000000
8944627892	8-9446	2789	PLATE; DRIVEN	000000	000000
8944627893	8-9446	2789	PLATE; DRIVEN - 12" DIAM.	000000	000000
8944628430	8-9446	2843	PROTECTOR; HEAT	000000	000000
8944628431	8-9446	2843	PROTECTOR; HEAT	000000	000000
8944628500	8-9446	2850	BRUSH; GEN.	000000	000000
8944628590	8-9446	2859	BEARING; ROTOR	000000	000000
8944628640	8-9446	2864	REAR COVER ASM.	000001	000000
8944628650	8-9446	2865	PINION ASM	000000	000000
8944628670	8-9446	2867	SWITCH	000000	000000
8944628680	8-9446	2868	ROTOR ASM.	000000	000000

8944628700	8-9446	2870	COVER; RR, GEN	000000	000000
8944628710	8-9446	2871	COVER; REAR	000000	000000
8944628720	8-9446	2872	REGULATOR ASM; TERMINAL	000000	000000
8944628730	8-9446	2873	TERMINAL BLOCK	000000	000000
8944628740	8-9446	2874	REGULATOR	000000	000000
8944628750	8-9446	2875	RECTIFIRE	000000	000000
8944628760	8-9446	2876	COVER ASM; FRT	000000	000000
8944628770	8-9446	2877	GASKET; FRT COVER, VAC PUMP	000019	000007
8944628780	8-9446	2878	PULLEY ASM.	000001	000000
8944628790	8-9446	2879	BOLT*	000000	000000
8944628800	8-9446	2880	SCREW ASM.	000000	000000
8944628810	8-9446	2881	PUMP; VACUUM	000000	000000
8944628820	8-9446	2882	ROTOR	000000	000000
8944628830	8-9446	2883	VANE; VAC PUMP	000000	000014
8944628840	8-9446	2884	PLATE; CENTER	000000	000000
8944628850	8-9446	2885	FLANGE ASM.	000000	000000
8944628860	8-9446	2886	VALVE ASM.	000000	000000
8944628870	8-9446	2887	O-RING	000000	000000
8944629300	8-9446	2930	HOSE; RADIATOR, UPPER	000000	000000
8944629430	8-9446	2943	METAL SET	000005	000020
8944629660	8-9446	2966	LEVER	000000	000000
8944630190	8-9446	3019	BOLT; OIL STRAINER	000000	000000
8944630191	8-9446	3019	BOLT; OIL STRAINER	000000	000011
8944630200			BUSHING; LEAF	000000	000033
8944631050			L A M P	000000	000000
8944631460			PROTECTOR; HEAT	000000	000000
8944632190	8-9446	3219	PISTON; .50	000000	000000
8944632191	8-9446	3219	PISTON; .50	000008	000000
8944632201	8-9446	3220	PISTON; 1.00	000000	000000
8944632210	8-9446	3221	RING SET; .50 PISTON	000008	000000
8944632220	8-9446	3222	RING SET; 1.00 PISTON	000000	000000
8944633510	8-9446	3351	BOLT; MTG. BRKT.	000000	000015
8944634270	8-9446	3427	VALVE ASM.; OVERFLOW	000001	000004
8944634400	8-9446	3440	ROD; LINK	000000	000002
8944634410	8-9446	3441	THERMOMETER; OIL	000000	000000
8944634460	8-9446	3446	BRACKET; SOLENOID	000001	000001
8944634470	8-9446	3447	BRACKET; SOLENOID	000000	000000
8944634730	8-9446	3473	STARTER	000000	000000
8944634751	8-9446	3475	BRACKET; FUEL CUT	000000	000000
8944635444	8-9446	3544	MANIFOLD, INLET (LOWER)	000000	000000
8944636080	8-9446	3608	BUSHING; W/OIL SEAL	000000	000000
8944636081	8-9446	3608	BUSHING; W/OIL SEAL	000000	000000
8944636082	8-9446	3608	BUSHING; W/OIL SEAL	000000	000000
8944636084	8-9446	3608	BUSHING; W/OIL SEAL	000000	000007
8944636600			PIPE ASM; INJECTION	000000	000002
8944636610	8-9446	3661	PIPE ASM; INJECTION NO. 2	000001	000000
8944636620	8-9446	3662	PIPE ASM; INJECTION NO. 3	000001	000000

8944636630	8-9446	3663	PIPE ASM; INJECTION NO. 4	000000	000000
8944636660	8-9446	3666	PIPE ASM; INJECTION NO. 1	000000	000000
8944636670	8-9446	3667	PIPE ASM; INJECTION NO. 2	000000	000000
8944636680	8-9446	3668	PIPE ASM; INJECTION NO. 3	000000	000000
8944636690	8-9446	3669	PIPE ASM; INJECTION NO. 4	000000	000000
8944636700	8-9446	3670	PIPE ASM; INJECTION #1	000000	000002
8944636710	8-9446	3671	PIPE ASM; INJECTION #2	000000	000002
8944636720	8-9446	3672	PIPE ASM; INJECTION #3	000000	000002
8944636730	8-9446	3673	PIPE ASM; INJECTION #4	000000	000002
8944636740	8-9446	3674	PIPE*	000000	000000
8944636750	8-9446	3675	PIPE ASM	000001	000000
8944636760	8-9446	3676	PIPE	000001	000001
8944636770	8-9446	3677	PIPE	000000	000002
8944637130	8-9446	3713	FILTER; OIL (SPIN ON)	000000	000000
8944637131	8-9446	3713	FILTER; OIL (SPIN ON)	000003	000003
8944637150	8-9446	3715	OIL FILTER;MAIN	000000	000000
8944637151	8-9446	3715	OIL FILTER;MAIN	000000	000000
8944637750	8-9446	3775	RUBBER; MTG.	000000	000000
8944637840	8-9446	3784	BOLT;EXH.MANIF	000000	000471
8944638250	8-9446	3825	FAN ASM; COOLING	000002	000000
8944638300	8-9446	3830	RING;BLOCK,TRAN	000000	000000
8944638301	8-9446	3830	RING;BLOCK,TRAN	000000	000006
8944638790	8-9446	3879	PIPE; WATER OUTLET 3KC1	000000	000001
8944639240	8-9446	3924	CORE;HEATER	000000	000000
8944639241	8-9446	3924	CORE;HEATER	000031	000014
8944645250	8-9446	4525	GAUGE ASM; OIL LEVEL	000000	000000
8944645660	8-9446	4566	SWITCH; REV LAMP	000000	000000
8944647350	8-9446	4735	LEVER; "B",ENGI	000000	000000
8944647470	8-9446	4747	HOSE; PCV	000000	000000
8944647570	8-9446	4757	SOLENOID ASM.	000000	000000
8944648320	8-9446	4832	PULLEY; CRANKSH	000000	000000
8944648350	8-9446	4835	CLIP;CABLE	000000	000014
8944648520	8-9446	4852	BRACKET; ACCEL	000000	000000
8944648532	8-9446	4853	MANIFOLD; INL	000000	000000
8944648542	8-9446	4854	MANIFOLD; INL	000000	000000
8944648942	8-9446	4894	FLYWHEEL ASM.	000000	000000
8944649140	8-9446	4914	REP KIT---WATER PUMP	000000	000000
8944649210	8-9446	4921	VALVE; INLE	000000	000000
8944654030	8-9446	5403	BUSHING; TERMINAL	000000	000000
8944654190	8-9446	5419	PIPE; INLET, WATER	000000	000000
8944654220	8-9446	5422	BLOCK RING	000000	000000
8944654341	8-9446	5434	COVER; TIMING GEAR CASE	000000	000000
8944654342	8-9446	5434	COVER; TIMING GEAR CASE	000001	000000
8944656560	8-9446	5656	ELEMENT; A/CL F	000000	000000
8944656600	8-9446	5660	HOSE; RUBBER	000004	000000
8944659280	8-9446	5928	PUMP ASM; INJ.	000000	000000
8944659290	8-9446	5929	PUMP ASM; INJ.	000000	000000

8944660570	8-9446	6057	CLIP;RUBBER,HOS	000131	000000
8944660850	8-9446	6085	PUMP ASM; INJ.	000000	000000
8944663562	8-9446	6356	PROTECTOR; HEAT	000000	000000
8944663610	8-9446	6361	PAN ASM; OIL	000000	000000
8944663720	8-9446	6372	BRKT;SPACER FIX	000000	000000
8944663810	8-9446	6381	SPACER;OIL PAN-F/W HSG.	000000	000000
8944663820	8-9446	6382	CLIP; HOSE OIL FILLER	000000	000000
8944665070	8-9446	6507	HOSE; RUBBER UPPER	000000	000000
8944674720			VALVE; SOLENOID	000000	000000
8944677110	8-9446	7711	COVER; GEAR	000000	000000
8944677261	8-9446	7726	CLAMP; NOZZLE HOLDER	000000	000009
8944678990	8-9446	7899	COVER ASM; GEAR CASE 4JC1	000000	000000
8944679930	8-9446	7993	OVER SIZE HEAD GASKET	000000	000001
8944680071	8-9446	8007	NUT;MAINSHAFT	000000	000000
8944680202	8-9446	8020	BOLT; CLAMP NOZZLE HOLDER	000000	000002
8944680710	8-9446	8071	NUT; LOCK	000000	000000
8944680760	8-9446	8076	GEAR	000000	000000
8944680761	8-9446	8076	GEAR*	000000	000000
8944681300	8-9446	8130	PUMP ASM; INJ.	000000	000000
8944681302	8-9446	8130	PUMP ASM; INJ.	000000	000000
8944681500	8-9446	8150	STARTER: 12V/ 2KW	000000	000000
8944681501	8-9446	8150	STARTER: 12V/ 2KW	000000	000000
8944682310	8-9446	8231	MANIFOLD ASM; EXHAUST	000001	000000
8944682440	8-9446	8244	VALVE ASM;PVC	000000	000326
8944682460	8-9446	8246	BRCKT;PVC VALVE	000002	000000
8944682901			SHOCK ABS	000000	000000
8944683910			SPRING; LEAF	000000	000000
8944684120	8-9446	8412	RING GEAR	000000	000000
8944685170	8-9446	8517	GUIDE TUBE 4JC1	000000	000005
8944685610	8-9446	8561	COVER ASM; AIR	000000	000000
8944686220	8-9446	8622	ROTOR; OIL PUMP	000000	000000
8944686610	8-9446	8661	FUSE 30A;AMP FACIA HARNSS	000000	000008
8944686640	8-9446	8664	FUSE; SLOW BLOW	000091	000185
8944694120	8-9446	9412	COOLER ASM; OIL	000000	000000
8944694121	8-9446	9412	COOLER ASM; OIL	000000	000000
8944694381	8-9446	9438	SCREW; MICRO	000000	000011
8944694440	8-9446	9444	HOUSING; GOV.	000000	000000
8944694570	8-9446	9457	LEVER	000000	000000
8944694962			STARTER ASM.	000000	000000
8944694963			STARTER ASM.	000000	000000
8944696340			RING SET; PISTON	000000	000000
8944697090	8-9446	9709	PIPE: OIL	000000	000000
8944697091	8-9446	9709	PIPE: OIL	000000	000000
8944697092	8-9446	9709	PIPE: OIL	000000	000000
8944697093	8-9446	9709	PIPE: OIL	000001	000000
8944697820	8-9446	9782	GAUGE; OIL LEVER	000000	000000
8944697830	8-9446	9783	GAUGE ASM;OIL	000000	000000

8944698250	8-9446	9825	HOSE;BREATHER	000000	000000
8944698430	8-9446	9843	NUT; COMMON CHA	000000	000000
8944698660	8-9446	9866	CASE ASM; GEAR	000000	000000
8944698730	8-9446	9873	PAN ASM; OIL	000000	000000
8944698740	8-9446	9874	BRACKET; FUEL FILTER 3KB1	000000	000000
8944698742	8-9446	9874	BRACKET; FUEL FILTER 3KB1	000000	000000
8944698760	8-9446	9876	CAP; RADIATOR	000000	000000
8944698770	8-9446	9877	GUIDE; FAN	000000	000000
8944698790	8-9446	9879	GUIDE; FAN	000000	000000
8944698800	8-9446	9880	GUIDE; FAN	000000	000000
8944698820	8-9446	9882	HOSE; OVERFLOW	000000	000000
8944698830	8-9446	9883	HOSE; OVER FLOW, L=850	000000	000000
8944698840	8-9446	9884	CUSHION; RUBBER, RAD.	000010	000001
8944698860	8-9446	9886	GUIDE; FAN	000000	000000
8944698870	8-9446	9887	GUIDE;FAN,	000000	000002
8944698920	8-9446	9892	BOLT; FAN GUIDE	000000	000000
8944698930	8-9446	9893	BOLT;T/GATE LINK,RR BODY	000000	000000
8944698970	8-9446	9897	BOLT; ROD FIX.	000000	000000
8944699260	8-9446	9926	CAMSHAFT	000003	000001
8944699271			SPRING; FRT LEAF (L)	000000	000000
8944699281			SPRINGS; FRT LEAF (R)	000000	000000
8944705450	8-9447	0545	BOLT; RR PLATE M12 L=28	000000	000000
8944705481	8-9447	0548	CRANKCASE	000000	000000
8944705482	8-9447	0548	CRANKCASE	000001	000000
8944705501	8-9447	0550	PIPE; OIL	000001	000000
8944705502	8-9447	0550	PIPE; OIL	000000	000000
8944705511	8-9447	0551	PULLEY; CRANKSHAFT	000000	000004
8944705521	8-9447	0552	PULLEY; CRANKSHAFT	000000	000000
8944705530	8-9447	0553	6 BLADE BLOWER D=380	000000	000007
8944705531	8-9447	0553	6 BLADE BLOWER D=380	000000	000000
8944705560	8-9447	0556	PIPE ASM; INJ.#1	000000	000000
8944705561	8-9447	0556	PIPE ASM; INJ.#1	000001	000000
8944705570	8-9447	0557	PIPE ASM; INJ. #2	000000	000000
8944705571	8-9447	0557	PIPE ASM; INJ. #2	000000	000001
8944705581	8-9447	0558	PIPE ASM; INJ. #3	000000	000000
8944705582	8-9447	0558	PIPE ASM; INJ. #3	000002	000000
8944705591	8-9447	0559	PIPE ASM; INJ. #4	000000	000000
8944705592	8-9447	0559	PIPE ASM; INJ. #4	000000	000001
8944705820	8-9447	0582	WIR;LEAD,MAG	000005	000000
8944706502	8-9447	0650	pump asm; INJ.	000000	000000
8944706512	8-9447	0651	GOVERNOR ASM; MECHANICAL	000000	000000
8944706680	8-9447	0668	O-RING	000000	000000
8944706750	8-9447	0675	PACKING;COVER	000000	000000
8944706821	8-9447	0682	BELT ASM.;COOLI	000000	000000
8944707081	8-9447	0708	HOUSING ASM.; T	000000	000000
8944707110	8-9447	0711	COVER; CASE	000000	000000
8944707121	8-9447	0712	PUMP ASM; INJ.	000000	000000

8944707130	8-9447	0713	GOVERNOR ASM.	000000	000000
8944707131	8-9447	0713	GOVERNOR ASM.	000000	000000
8944707140	8-9447	0714	PIPE; INLET	000000	000000
8944707540	8-9447	0754	SPRING; TIMER	000000	000000
8944707550	8-9447	0755	FLYWEIGHT	000000	000000
8944707560	8-9447	0756	CAPSULE; SPR.	000001	000000
8944707570	8-9447	0757	PAN ASM; OIL	000000	000000
8944707640	8-9447	0764	GAUGE ASM; OIL LEVEL	000000	000000
8944707641	8-9447	0764	GAUGE ASM; OIL LEVEL	000000	000001
8944707650	8-9447	0765	GAUGE;OIL LEVEL	000000	000003
8944707660	8-9447	0766	FOOT;ENG,FRT.RH	000000	000000
8944707670	8-9447	0767	FOOT;ENG,FRT,RH	000000	000000
8944707700	8-9447	0770	CONNECTOR	000000	000000
8944707710	8-9447	0771	BOLT;EYE	000001	000005
8944708330	8-9447	0833	LEVER; ENG CONT & FUEL CU	000000	000000
8944708530	8-9447	0853	SPACER; FAN	000000	000000
8944710640	8-9447	1064	PIPE ASM; OIL COOLER	000000	000000
8944712380			HOLDER ASM; NOZZLE	000000	000000
8944712390	8-9447	1239	PIPE ASM; FUEL	000000	000000
8944712710	8-9447	1271	SUPERSEDED**HEATER	000000	000000
8944712780	8-9447	1278	GASKET; ADAPTER	000000	000000
8944712781	8-9447	1278	GASKET; ADAPTER	000019	000000
8944712790	8-9447	1279	COVER; GEAR CASE,PTO	000000	000000
8944713580	8-9447	1358	WATER DUCT;	000000	000000
8944713581	8-9447	1358	WATER DUCT;	000000	000000
8944713582	8-9447	1358	WATER DUCT;	000000	000000
8944714420	8-9447	1442	RING SET; PISTON	000000	000004
8944714430	8-9447	1443	SWITCH ASM.	000000	000000
8944714440	8-9447	1444	CASE; GEAR	000000	000000
8944714460	8-9447	1446	SHAFT; PISTON	000000	000000
8944715930	8-9447	1593	RR COVER ASM	000000	000000
8944716000	8-9447	1600	PIPE ASM; O	000000	000000
8944716241			NUT; COVER	000000	000000
8944716420			DOOR ASM;	000000	000000
8944716421			DOOR ASM;	000000	000000
8944716422			FRONT DOOR ASM	000000	000000
8944716881	8-9447	1688	BOLT; CHANGE LEVER	000000	000005
8944717223	8-9447	1722	GAUGE; OIL LEVE	000000	000000
8944717590	8-9447	1759	METER ASM.; VOLTAGE	000000	000000
8944717870	8-9447	1787	PAN ASM; OIL	000000	000000
8944718290	8-9447	1829	GAUGE ASM; OIL	000000	000000
8944718792	8-9447	1879	BLOCK ASM; CYLINDER	000000	000000
8944718802	8-9447	1880	BLOCK ASM; CYLINDER	000000	000000
8944719350	8-9447	1935	MANIFOLD,EXH.	000000	000000
8944719790	8-9447	1979	GEAR;CLUSTER	000000	000000
8944719791	8-9447	1979	GEAR;CLUSTER	000000	000004
8944720640	8-9447	2064	HOSE; PCV L=1000	000000	000001

8944720650	8-9447	2065	DRIVE ASM.; TACHOMETER	000000	000000
8944720670	8-9447	2067	LEVER; SWIVEL LEVER	000000	000000
8944720680	8-9447	2068	LEVER	000000	000000
8944720690	8-9447	2069	HOLDER; DELIVERY VALVE	000001	000000
8944720700	8-9447	2070	STOPPER	000000	000000
8944720710	8-9447	2071	SPRING; LINK	000000	000003
8944720720	8-9447	2072	LEVER	000000	000000
8944721190	8-9447	2119	LEVER; ENG. CONT. FUEL CU	000000	000000
8944721191	8-9447	2119	LEVER; ENG. CONT. FUEL CU	000000	000000
8944722180	8-9447	2218	HEATER; BLOCK	000001	000001
8944722650	8-9447	2265	PLATE	000000	000000
8944722670	8-9447	2267	COVER	000000	000000
8944722680	8-9447	2268	SHIM; T=0.10	000000	000000
8944722690	8-9447	2269	SHIM; T=0.20	000000	000000
8944722700	8-9447	2270	SHIM; T=0.25	000000	000000
8944722710	8-9447	2271	SHIM; T=1.00	000000	000000
8944722720	8-9447	2272	HOUSING; PUMP,F	000000	000000
8944722731	8-9447	2273	PLUNGER ASM	000000	000000
8944722740	8-9447	2274	CAMSHAFT	000000	000000
8944722750	8-9447	2275	HOUSING; GOV, IN	000000	000000
8944722760	8-9447	2276	LEVER	000000	000000
8944722790	8-9447	2279	SHAFT	000000	000000
8944722800	8-9447	2280	LEVER	000000	000000
8944722820	8-9447	2282	SPRING; GOV.	000000	000000
8944722860	8-9447	2286	FLANGE	000000	000000
8944722880	8-9447	2288	FLYWEIGHT	000000	000000
8944722890	8-9447	2289	SPRING; WASHER	000000	000000
8944722900	8-9447	2290	NUT**	000000	000000
8944722920	8-9447	2292	HOUSING; F.P.	000000	000000
8944723200	8-9447	2320	GAUGE ASM; OIL LEVEL	000000	000000
8944723240	8-9447	2324	GAUGE; OIL LEVEL	000000	000000
8944723260	8-9447	2326	CAP ASM.; OIL	000000	000000
8944723270	8-9447	2327	GAUGE; OIL LEVEL	000000	000003
8944723280	8-9447	2328	GAUGE; OIL LEVEL	000000	000003
8944723310	8-9447	2331	THERMOSTAT	000000	000000
8944723311	8-9447	2331	THERMOSTAT	000121	000593
8944724060	8-9447	2406	PUMP ASM; INJ.	000000	000000
8944724063	8-9447	2406	PUMP ASM; INJ.	000000	000000
8944725010	8-9447	2501	FUEL CUT ASM; W/SOLENOID	000000	000000
8944725014	8-9447	2501	FUEL CUT ASM; W/SOLENOID	000000	000000
8944725830	8-9447	2583	ADAPTER; PIPE	000000	000000
8944725840	8-9447	2584	PACKING; WATER	000000	000000
8944725841	8-9447	2584	PACKING; WATER	000004	000000
8944725852	8-9447	2585	WATER PIPE; TURBO RETURN	000000	000001
8944726740	8-9447	2674	HOSE; WATER, ENG L=2020	000000	000000
8944726850	8-9447	2685	GOVERNOR ASM.	000000	000000
8944726870	8-9447	2687	GOVERNOR ASM;	000000	000000

8944727820	8-9447	2782	SPRING ASM.	000000	000000
8944727900	8-9447	2790	FLYWHEEL ASM.	000000	000000
8944727910	8-9447	2791	FLYWHEEL	000000	000000
8944727940	8-9447	2794	GEAR; CRANKSHAFT	000000	000000
8944728490	8-9447	2849	BODY ASM; AIR CLEANER 3KB	000000	000000
8944728780	8-9447	2878	GASKET;W/PUMP	000000	000006
8944730270	8-9447	3027	TRANSMISSION ASM	000000	000000
8944731190	8-9447	3119	SPRING; TIMER	000000	000000
8944731200	8-9447	3120	COVER	000000	000000
8944731280	8-9447	3128	SPRING; GOV	000000	000000
8944731290	8-9447	3129	NUT	000000	000000
8944731350	8-9447	3135	NUT; INJ. PUMP	000000	000000
8944733040	8-9447	3304	GEAR; DRIVEN	000000	000000
8944733041	8-9447	3304	GEAR; DRIVEN, SPD.	000000	000000
8944733042	8-9447	3304	GEAR; DRIVEN, SPD.	000006	000000
8944733220	8-9447	3322	GAUGE; OIL LEVEL	000000	000000
8944733310	8-9447	3331	REPAIR KIT; WATER PUMP	000000	000000
8944733320	8-9447	3332	REPAIR KIT; WATER PUMP	000000	000000
8944733380	8-9447	3338	TIMER ASM; INJ.	000000	000000
8944733390	8-9447	3339	GOVERNOR ASM; INJ.	000000	000000
8944733392	8-9447	3339	GOVERNOR ASM; INJ.	000000	000000
8944734160	8-9447	3416	CLAMP; EXH PIPE	000000	000000
8944734180	8-9447	3418	CLAMP; EXH	000000	000000
8944734293			RT SIDE CORN. LAMP	000000	000000
8944734303			LF SIDE CORN. LAMP	000000	000000
8944734500			SHAFT; PROP	000000	000000
8944735200	8-9447	3520	PIPE; INLET	000000	000000
8944735251	8-9447	3525	COVER ASM; CYL	000000	000000
8944735630	8-9447	3563	CLAMP; EXH.	000004	000000
8944736330	8-9447	3633	SEAL; OIL, RR, CVR	000000	000011
8944736992	8-9447	3699	FLY WHEEL ASM	000000	000000
8944737780	8-9447	3778	KNOB; CHAN	000000	000000
8944738882			GRILLE; RAD	000000	000000
8944738883			GRILLE; RAD	000000	000000
8944739234			HOSE; FLEX, A/C	000000	000000
8944739243			HOSE; FLEX, A/C	000000	000000
8944739470	8-9447	3947	GASKET; DETENT SPR PLTE.	000000	000000
8944739590	8-9447	3959	BOLT; RR COVER	000000	000000
8944739591	8-9447	3959	BOLT; RR COVER/TRNSFR CASE	000000	000000
8944739601	8-9447	3960	BOLT; STARTER	000022	000000
8944739670	8-9447	3967	CAP; NOZZLE FUEL END	000000	000599
8944740010	8-9447	4001	PLATE; ADJ, FAN	000000	000000
8944740031	8-9447	4003	FLYWEIGHT BRACKET	000000	000000
8944740041	8-9447	4004	GEAR; I/PUMP	000001	000000
8944740491			RADIATOR A	000000	000000
8944740492			RADIATOR; TF	000000	000000
8944740493			RADIATOR; TF	000000	000000

8944740494			RADIATOR ASM	000000	000000
8944740511			RADIATOR A	000000	000000
8944740512			RADIATOR;A	000000	000000
8944740513			RADIATOR; A	000000	000000
8944740514			RADIATOR;A	000000	000000
8944740515			RADIATOR;A	000000	000000
8944740516			RADIATOR ASM	000000	000000
8944740517			RADIATOR ASM	000000	000000
8944741110	8-9447	4111	BOLT ADJUSTER	000001	000000
8944741470	8-9447	4147	CASE ASM; GEAR	000000	000000
8944741590	8-9447	4159	CUP: SEALING	000000	000000
8944741600	8-9447	4160	UNIT; OIL PRESSURE	000000	000000
8944741650	8-9447	4165	PIPE ASM; INJECTION NO. 4	000000	000000
8944741714			RADIATOR ASM;	000000	000000
8944741724			RADIATOR ASM	000000	000000
8944743290	8-9447	4329	ROD; SHIFT	000000	000000
8944743291	8-9447	4329	ROD; SHIFT, REV & 5TH	000000	000000
8944743292	8-9447	4329	ROD; SHIFT, REV & 5TH	000000	000000
8944743680	8-9447	4368	BRACKET; GENERATOR	000003	000000
8944749260	8-9447	4926	PIECE; DISTANCE	000000	000009
8944749430	8-9447	4943	STUD; MANIFOLD TO TU	000003	000000
8944750120	8-9447	5012	GASKET; GEAR CASE	000000	000000
8944750132	8-9447	5013	FILTER ASM: OIL	000000	000021
8944750710	8-9447	5071	COVER; GOVERNOR	000000	000000
8944750720	8-9447	5072	LEVER ASM; TENSION	000000	000000
8944750860	8-9447	5086	GOVER,GOV	000000	000000
8944750880	8-9447	5088	COVER ASM; GOV.	000000	000000
8944750890	8-9447	5089	COVER; GOVERNOR	000000	000000
8944751000	8-9447	5100	BOLT;BRKT	000038	000000
8944751520	8-9447	5152	SWITCH ASM; WARNING 3KB1	000000	000000
8944751626	8-9447	5162	PUMP ASM; INJ.	000000	000000
8944751750			HOSE; CONN,AIR	000000	000000
8944752290			EMBLEM	000000	000000
8944752590	8-9447	5259	PLUG; OIL PUMP	000000	000000
8944753020	8-9447	5302	GASKET; SENSOR	000000	000000
8944753150	8-9447	5315	FAN ASM; COOLING	000000	000000
8944753210	8-9447	5321	PIPE ASM; FUEL FILTER-PUM	000002	000000
8944753220	8-9447	5322	PIPE ASM; FUEL, FEED PUMP	000000	000001
8944753231	8-9447	5323	PIPE ASM; FUEL, FILTER LE	000000	000001
8944754390	8-9447	5439	WHEEL ASM.; TURBINE	000002	000001
8944754400	8-9447	5440	THROWER; OIL	000000	000000
8944754410	8-9447	5441	BUSH; THRUST	000000	000000
8944754420	8-9447	5442	SEAL; RING, BLOWER	000000	000000
8944754430	8-9447	5443	SEAL; RING, BLOWER	000006	000003
8944754440	8-9447	5444	RING: SEAL	000001	000000
8944754450	8-9447	5445	NUT; LOCK	000006	000000
8944754460	8-9447	5446	PLATE; SEAL	000000	000000

8944754470	8-9447	5447	JOURNAL; BEARING	000002	000000
8944754480	8-9447	5448	METAL; THRUST	000001	000000
8944754490	8-9447	5449	HOUSING; COMPRESSOR	000000	000000
8944754500	8-9447	5450	BOLT;	000000	000000
8944754510	8-9447	5451	PLATE; LOCK	000000	000000
8944754520	8-9447	5452	IMPELLER	000001	000000
8944754530	8-9447	5453	HOUSING; TURBINE	000000	000001
8944754540	8-9447	5454	BOLT;	000000	000000
8944754550	8-9447	5455	WASHER; LOCK	000002	000000
8944754560	8-9447	5456	HOUSING; BEARING	000000	000000
8944754570	8-9447	5457	RETAINING; RING	000000	000000
8944754580	8-9447	5458	SCREW	000005	000000
8944754590	8-9447	5459	WASHER	000000	000000
8944754600	8-9447	5460	SCREW	000000	000000
8944754610	8-9447	5461	WASHER	000000	000000
8944754620	8-9447	5462	PROTECTOR; HEAT	000000	000001
8944754630	8-9447	5463	RING; BEARING	000000	000000
8944754720	8-9447	5472	RECTIFIER; GEN	000000	000000
8944755530	8-9447	5553	PUMP ASM; INJ.	000000	000000
8944755531	8-9447	5553	PUMP ASM; INJ.	000000	000002
8944756830	8-9447	5683	ARMATURE SET.	000000	000000
8944756840	8-9447	5684	BEARING	000000	000000
8944756850	8-9447	5685	BEARING	000000	000000
8944756860	8-9447	5686	SHAFT ASM; PINI	000000	000000
8944756870	8-9447	5687	GEAR;	000000	000000
8944756880	8-9447	5688	STOPPER SET	000000	000000
8944756890	8-9447	5689	COVER SET	000000	000000
8944756900	8-9447	5690	YOKE ASM.	000000	000000
8944756910	8-9447	5691	HOLDER ASM; BRU	000000	000000
8944756920	8-9447	5692	BRUSH; SPRING	000000	000000
8944756930	8-9447	5693	BRACKET; RR.	000000	000000
8944756940	8-9447	5694	PLATE	000000	000000
8944756950	8-9447	5695	COVER	000000	000000
8944756960	8-9447	5696	LEVER ASM.	000000	000000
8944756970	8-9447	5697	SWITCH ASM.	000000	000000
8944756980	8-9447	5698	BOLT SET	000000	000000
8944756990	8-9447	5699	PACKING SET	000000	000000
8944757000	8-9447	5700	RUBBER; RING	000003	000000
8944757010	8-9447	5701	SCREW SET	000000	000000
8944757020	8-9447	5702	SWITCH ASM.	000000	000000
8944759260			SHIM	000000	000000
8944759270	8-9447	5927	PIN	000000	000000
8944759531	8-9447	5953	TIMING GEAR CASE ASM	000000	000000
8944759550	8-9447	5955	LEVER; A	000000	000000
8944759560	8-9447	5956	LEVER; B	000000	000000
8944759570	8-9447	5957	LEVER; C	000000	000000
8944761210	8-9447	6121	PUMP ASM; INJ.	000000	000000

8944761211	8-9447	6121	PUMP ASM; INJ.	000000	000000
8944761220	8-9447	6122	PUMP ASM; INJ.	000000	000000
8944761221	8-9447	6122	PUMP ASM; INJ.	000000	000000
8944761700	8-9447	6170	TIMER; Q.O.S.	000000	000001
8944761840	8-9447	6184	PUMP ASM; INJ.	000000	000000
8944761841	8-9447	6184	PUMP ASM; INJ.	000000	000000
8944761850	8-9447	6185	PLATE: LOCKING	000000	000000
8944762820	8-9447	6282	STUD; TURBO EXHAUST PIPE	000000	000000
8944763090			PULLEY; IDLE	000000	000000
8944763371			NOZZLE HOLDER	000000	000000
8944763860	8-9447	6386	COVER; RR	000000	000000
8944766710	8-9447	6671	DRUM; PARKING BR	000000	000000
8944766711	8-9447	6671	DRUM; PARKING BR	000000	000000
8944766960	8-9447	6696	COVER ASM; CYL. HEAD	000000	000000
8944766961	8-9447	6696	COVER ASM; CYL. HEAD	000000	000003
8944767290	8-9447	6729	BOLT; COUPLING DRIVER, A/T	002751	000249
8944767320	8-9447	6732	FLYWHEEL ASM.	000000	000000
8944770412			CYLINDER SET;	000000	000000
8944771454			H O O D	000000	000000
8944771572			GRILLE; RAD	000000	000002
8944771573			GRILLE; RAD	000000	000000
8944776650			GASKET; MANIFOLD	000000	000000
8944777340	8-9447	7734	TURBO ASM, NEW	000000	000000
8944777341	8-9447	7734	TURBO ASM, NEW	000000	000000
8944777810	8-9447	7781	CLIP; PCV HOSE	000000	000000
8944777820	8-9447	7782	GASKET; INTAKE	000000	000000
8944777830			SCREW; TUBE END	000000	000010
8944778140			SHAFT; LEVER	000003	000000
8944778281	8-9447	7828	ADAPTER; HYDRAULIC P	000000	000000
8944778360	8-9447	7836	BEARING GOVERNOR SHAFT IN	000000	000000
8944778370	8-9447	7837	BEARING; BALL	000000	000000
8944778380	8-9447	7838	BEARING GOVERNOR SHFT OUT	000000	000000
8944778400	8-9447	7840	CLAMP; EXH PIPE	000000	000005
8944778410	8-9447	7841	NUT; YOKE TO RR	000000	000000
8944778530			YOKE; FLAN	000000	000000
8944778980	8-9447	7898	SPRING	000000	000000
8944778990	8-9447	7899	SPRING; START	000004	000000
8944779361	8-9447	7936	PUMP ASM; INJ.	000000	000000
8944779371	8-9447	7937	PUMP ASM; INJ.	000000	000000
8944779570	8-9447	7957	SPRING; IDLE-WHITE	000000	000000
8944779580	8-9447	7958	SPRING	000000	000000
8944779850	8-9447	7985	BRACKET; AIR CLEANER	000000	000000
8944779860	8-9447	7986	CUSHION; RUBBER	000000	000000
8944779870	8-9447	7987	CUSHION; AIR CLEANING	000000	000000
8944780162			TIMING CASE	000000	000000
8944780180	8-9447	8018	GASKET; ADAPTER	000000	000000
8944781091	8-9447	8109	BODY ASM.; OIL, CARTRIDGE	000003	000000

8944781120	8-9447	8112	CLIP; PCV HOSE	000000	000000
8944781130	8-9447	8113	HOSE; RUBBER,PCV	000000	000000
8944781200	8-9447	8120	GASKET; ADAPTER	000000	000000
8944781730	8-9447	8173	BELT; A/C CMPR	000000	000000
8944781731	8-9447	8173	BELT;A/C,CMPR	000008	000008
8944786680	8-9447	8668	PACKING	000000	000000
8944786990	8-9447	8699	PUMP ASM; INJ.	000000	000000
8944787042	8-9447	8704	HOUSING; THERMOSTAT	000002	000000
8944787320	8-9447	8732	CLIP; FILL	000000	000000
8944788380	8-9447	8838	SUPERSEDED**CASE	000000	000000
8944788390	8-9447	8839	SUPERSEDED**	000000	000000
8944788480	8-9447	8848	FEED PUMP	000000	000000
8944788490	8-9447	8849	SPRING; GOV.	000000	000000
8944788500	8-9447	8850	LEVER; LOAD CONTROL,	000000	000000
8944788520	8-9447	8852	FLYWEIGHT ASM	000000	000000
8944788530	8-9447	8853	SPRING; TIMER,INJ PU	000000	000000
8944788652			RADIATOR SHROUD	000000	000000
8944788691	8-9447	8869	JOINT; HTR HOSE, WATER PU	000000	000000
8944788692	8-9447	8869	JOINT; HTR HOSE, WATER PU	000000	000001
8944788750	8-9447	8875	CLIP;WATER HOSE,OIL COOLR	000004	000000
8944788760	8-9447	8876	CLIP; HOSE,AIR	000000	000000
8944789840	8-9447	8984	CLUTCH;COOL FAN	000000	000000
8944789841	8-9447	8984	CLUTCH;COOL FAN	000000	000005
8944789850	8-9447	8985	FAN;COOLING	000000	000000
8944789860	8-9447	8986	BOLT;FAN TO CLU	000033	000000
8944790090			MIRROR ASM; DOOR	000000	000000
8944790100			MIRROR ASM; DOOR	000000	000000
8944790340	8-9447	9034	BOLT;FLYWHEEL	000000	000088
8944791010	8-9447	9101	BELT; FAN	000000	000063
8944793880	8-9447	9388	REGULATOR ASM	000000	000000
8944793890	8-9447	9389	REGULATOR ASM.	000000	000000
8944794340	8-9447	9434	STOPPER;REV,IN	000000	000000
8944794341	8-9447	9434	STOPPER;REV,INHIBITOR	000000	000000
8944794342	8-9447	9434	STOPPER;REV,INHIBITOR	000000	000000
8944794360	8-9447	9436	SENDER	000000	000001
8944794380	8-9447	9438	LEVER	000000	000000
8944794590	8-9447	9459	HOSE;BY-PASS,WT	000000	000015
8944795681	8-9447	9568	PIPE; INL,INTAKE SHU	000000	000000
8944795692	8-9447	9569	PIPE; INJ. #1	000000	000000
8944795701	8-9447	9570	PIPE; INJ #2	000000	000000
8944795702	8-9447	9570	PIPE; INJ #2	000001	000000
8944795710	8-9447	9571	PIPE; INJ #3	000000	000000
8944795721	8-9447	9572	PIPE; INJ #4	000000	000000
8944795731	8-9447	9573	BRACKET;FUEL CUT CAB	000000	000000
8944795740	8-9447	9574	HOSE; PCV	000000	000000
8944795750	8-9447	9575	PIPE ASM;FUEL	000000	000002
8944795782	8-9447	9578	NOZZLE ASM; INJ.	000000	000000

8944795783	8-9447	9578	NOZZLE ASM; INJ.	000000	000000
8944795800	8-9447	9580	NOZZLE ASM; INJECTION	000000	000000
8944802170	8-9448	0217	NUT; RETAINER	000004	000000
8944802910			CLIP;HTR HOSE	000000	000000
8944803440	8-9448	0344	BOLT;TRANS CASE TO ENG	000000	000000
8944803441	8-9448	0344	BOLT; TRANS CASE TO ENG	000011	000014
8944803450	8-9448	0345	BOLT;SLAVE CYL/TRANS CAS	000000	000000
8944803451	8-9448	0345	BOLT;SLAVE CYL/TRANS CAS	000006	000006
8944804932			LAMP ASM; COMB. RH	000000	000000
8944804942			LAMP ASM; COMB. LH	000000	000000
8944805210			STUD; MANIF,WASTE GA	000020	000000
8944805470	8-9448	0547	ADJUSTER;T=2.82	000013	000000
8944805480	8-9448	0548	ADJUSTER;T=2.84	000000	000000
8944805490	8-9448	0549	ADJUSTER;T=2.86	000000	000000
8944805500	8-9448	0550	ADJUSTER;T=2.88	000003	000000
8944805510	8-9448	0551	ADJUSTER T=2.925 3KR1	000003	000000
8944805520	8-9448	0552	ADJUSTER T=2.95 3KR1	000000	000000
8944805530	8-9448	0553	ADJUSTER;T=2.96	000000	000000
8944805540	8-9448	0554	ADJUSTER T=2.975	000004	000000
8944805550	8-9448	0555	ADJUSTER T=3.025	000004	000000
8944805560	8-9448	0556	ADJUSTER;T=3.04	000006	000000
8944805570	8-9448	0557	ADJUSTER;T=3.06	000000	000000
8944805580	8-9448	0558	ADJUSTER T=3.075	000003	000000
8944805590	8-9448	0559	ADJUSTER;T=3.12	000001	000000
8944805600	8-9448	0560	ADJUSTER;T=3.14	000001	000000
8944805610	8-9448	0561	ADJUSTER;T=3.16	000000	000000
8944805620	8-9448	0562	ADJUSTER;T=3.18	000000	000000
8944806330	8-9448	0633	BRACKET; INJ. PUMP	000000	000000
8944810371	8-9448	1037	HOUSING ASM;FLYWHEEL	000000	000000
8944812780	8-9448	1278	G E A R	000000	000000
8944812781	8-9448	1278	GEAR; INJ. PUMP	000000	000000
8944812791			JOINT; 3 WAY	000000	000004
8944814310	8-9448	1431	PIPE;SUCTION,IN	000000	000000
8944814311	8-9448	1431	PIPE;SUCTION	000001	000300
8944818401	8-9448	1840	SPRING; THROTTLE RET L=52	000000	000000
8944819180			PRESSURE PLATE	000000	000000
8944820120	8-9448	2012	PAN ASM; OIL	000000	000000
8944820122	8-9448	2012	PAN ASM; OIL	000000	000001
8944820123	8-9448	2012	PAN ASM; OIL	000000	000000
8944820130	8-9448	2013	PAN ASM.;OIL	000000	000000
8944820132	8-9448	2013	PAN ASM.;OIL	000000	000000
8944820330			LEVER;RELAY;HAN	000000	000000
8944821770	8-9448	2177	HOSE;RADIATOR	000000	000000
8944821831	8-9448	2183	RADIATOR ASM	000000	000000
8944822090	8-9448	2209	SPRING; OUTER	000000	000000
8944822100	8-9448	2210	SPRING; IDLING	000000	000000
8944822120	8-9448	2212	PLATE; CAM	000000	000000

8944822170	8-9448	2217	NUT; RETAINING	000000	000000
8944822761	8-9448	2276	BRACKET; INJ. PUMP	000002	000000
8944823210	8-9448	2321	BRKT; INLET PIPE	000000	000000
8944823221	8-9448	2322	R.H. SUPPORT; FUEL	000000	000000
8944823230	8-9448	2323	L.H. SUPPORT; FUEL	000000	000000
8944823380	8-9448	2338	BOLT; COVER	000037	000051
8944823790	8-9448	2379	PLATE; OIL	000000	000000
8944823791	8-9448	2379	PLATE; OIL SEAL, TRNSFR, FR	000000	000000
8944823792	8-9448	2379	PLATE; OIL SEAL, TRNSFR, FR	000000	000000
8944824621	8-9448	2462	GAURD; FAN-RH	000000	000000
8944824622	8-9448	2462	GUARD; A, FAN	000000	000000
8944824630	8-9448	2463	GAURD; FAN-LH	000000	000000
8944824631	8-9448	2463	GAURD; FAN-LH	000000	000000
8944824641	8-9448	2464	GUARD; FAN	000000	000000
8944824650	8-9448	2465	GUARD; FAN	000000	000000
8944824690	8-9448	2469	SPACER; ANTI-LASH PLATE, CT	000000	000000
8944824691	8-9448	2469	SPACER; ANTI-LASH PLATE, CT	000000	000000
8944824890	8-9448	2489	TIMET; Q.O.S.	000000	000000
8944824950	8-9448	2495	GASKET; FRT COVER	000000	000012
8944824960	8-9448	2496	GASKET; CASE RR	000001	000000
8944824980	8-9448	2498	SPRING; BELLEVILLE, ANTI LA	000021	000038
8944824990	8-9448	2499	SPRING; BELLEVILLE, ANTI LA	000000	000026
8944825010	8-9448	2501	RING; SNAP, ANTI LASH PLATE	000002	000022
8944825520	8-9448	2552	BRKT; DUCT FAN	000000	000001
8944825530	8-9448	2553	PROTECTOR; HEAT	000000	000000
8944825531	8-9448	2553	PROTECTOR; HEAT	000001	000002
8944825600			FAN GUARD	000000	000000
8944825601	8-9448	2560	FAN GUARD	000001	000001
8944825790	8-9448	2579	COLLAR; INPUT G	000000	000000
8944825791	8-9448	2579	COLLAR; INPUT GEAR BRG, TRA	000001	000000
8944826421	8-9448	2642	TRIM PAD ASM; FT. DOOR	000000	000000
8944830300	8-9448	3030	COLLAR; OIL SEAL, TRANSFER	000000	000000
8944830301	8-9448	3030	COLLAR; OIL SEAL, TRANSFER	000000	000000
8944830302	8-9448	3030	COLLAR; OIL SEAL, TRANSFER	000000	000000
8944830350	8-9448	3035	GASKET; COUPLING DRIVER	000000	000005
8944830821	8-9448	3082	FILTER ASM; FUEL	000000	000000
8944830850	8-9448	3085	STAY; INL MANIFO	000000	000000
8944830851	8-9448	3085	STAY; INL MANIFO	000000	000004
8944831670	8-9448	3167	PUMP ASM; WATER W/PACKING	000000	000000
8944831671	8-9448	3167	PUMP ASM; WATER W/PACKING	000000	000000
8944832230			BRAKE PADS	000000	000000
8944832250			REPAIR KIT	000000	000000
8944832341	8-9448	3234	FLYWHEEL ASM.	000000	000000
8944832342	8-9448	3234	FLYWHEEL ASM.	000000	000000
8944832410	8-9448	3241	CONVERTOR ASM;	000000	000000
8944832510	8-9448	3251	BOLT; HOLE COVER, PTO, A/T	000000	000157
8944832840	8-9448	3284	COVER; PTO HOLE	000000	000002

8944832850	8-9448	3285	GASKET; PTO HOL	000000	000000
8944832890	8-9448	3289	SEAL; OIL	000000	000000
8944833290	8-9448	3329	SEAL; OIL,RR COVER,A/T	000017	000007
8944833460	8-9448	3346	GASKET; OIL PAN	000000	000000
8944833470	8-9448	3347	PAN ASM; OIL,A/T	000000	000000
8944833471	8-9448	3347	PAN ASM; OIL,A/T	000000	000000
8944833480	8-9448	3348	BOLT; OIL PAN T	000000	000000
8944833550	8-9448	3355	NUT; COUPLING D	000000	000000
8944834970	8-9448	3497	BODY ASM; VLV LWR A/T	000000	000000
8944836690	8-9448	3669	PULLEY; CRANKSHAFT	000000	000000
8944836740	8-9448	3674	PIN; TIMING GEAR CASE	000000	000000
8944838940	8-9448	3894	FAN ASM; COOLING	000000	000000
8944838941	8-9448	3894	FAN ASM; COOLING	000000	000028
8944838970	8-9448	3897	FAN ASM; COOLING	000000	000000
8944838971	8-9448	3897	FAN ASM; COOLING	000000	000011
8944838972	8-9448	3897	FAN ASM; COOLING	000000	000000
8944839570	8-9448	3957	PULLEY; CRANKSHAFT	000000	000000
8944839620	8-9448	3962	BOLT; BRACKET FIX	000002	000000
8944839730	8-9448	3973	GASKET;OIL, PIPE	000000	000000
8944867751	8-9448	6775	HOSE;FUEL;RET	000000	000000
8944867752	8-9448	6775	HOSE; FUEL RETURN	000000	000000
8944885241			FENDER, FRT RH	000000	000000
8944885251			FENDER, FRT LH	000000	000000
8944905062			ISUZU (LETTERING)	000000	000000
8944905063			ISUZU (LETTERING)	000000	000000
8944952331			MIRROR ASM	000000	000000
8944955490			HOSE;RUBBER	000000	000000
8944982421			EMBLEM; RAD GRI	000000	000000
8944982422			EMBLEM;"ISUZU"	000000	000000
8944984740			HANDLE; DOOR F	000000	000000
8944987730			BOLT;2ND,CROSS	000000	000000
8944987731			BOLT;FRT.1ST C/MBR TO	000000	000000
8945520401	8-9455	2040	AEOP PART	000000	000000
8947474670	8-9474	7467	METAL KIT; UNSI .50*INV	000000	000000
8970004040			PANEL	000000	000000
8970004351			FLOOR MAT; FRT	000000	000000
8970018571			DECAL; TAIL GATE	000000	000002
8970059342			SWITCH; POWER W	000000	000001
8970094624			GRILLE, RAD	000000	000001
8970102440	8-9701	0244	BREATHER;RR AXLE CASE	000000	000000
8970102441	8-9701	0244	BREATHER; RR CO	000000	000000
8970102980	8-9701	0298	PIPE;FUEL DEL	000000	000000
8970102981	8-9701	0298	PIPE;FUEL DEL	000000	000000
8970102990	8-9701	0299	PIPE;FUEL RET	000000	000000
8970102991	8-9701	0299	PIPE;FUEL RET	000000	000000
8970103230	8-9701	0323	TUBE;GUIDE OIL	000000	000000
8970103231	8-9701	0323	TUBE;GUIDE,OIL	000000	000000

8970103840	8-9701	0384	PUMP ASM; INJ.	000000	000000
8970103841	8-9701	0384	PUMP ASM; INJ.	000000	000000
8970103871	8-9701	0387	PUMP ASM.; INJ.	000000	000002
8970103882	8-9701	0388	PUMP ASM; INJ.	000000	000000
8970103910			CAP; SET SCREW	000000	000000
8970104801	8-9701	0480	PAN ASM; OIL	000000	000000
8970104850	8-9701	0485	SCREW	000000	000048
8970105230	8-9701	0523	SHAFT; GEAR	000000	000000
8970105240	8-9701	0524	SHAFT; GEAR, IDLE	000000	000000
8970105470	8-9701	0547	BEARING; NEEDLE,	000000	000000
8970105480	8-9701	0548	VALVE; VENTILATION	000000	000000
8970106050			CLIP; HARNESS, WATER	000000	000174
8970107420	8-9701	0742	PIPE ASM; FUEL	000000	000000
8970108671	8-9701	0867	HOSE; WATER, RAD OUTL	000000	000000
8970108690	8-9701	0869	SPACER; PTO	000000	000000
8970109500	8-9701	0950	DRIVEN PLATE	000000	000000
8970109513	8-9701	0951	PLATE, DRIVEN	000000	000000
8970110310	8-9701	1031	METAL SET; CONN ROD	000456	001125
8970110400	8-9701	1040	SEAL; UNIT, WATER PUMP	000000	000000
8970110410	8-9701	1041	IMPELLER; WATER PUMP	000000	000000
8970110420	8-9701	1042	SHAFT; WATER PUMP	000000	000067
8970110620	8-9701	1062	PROTECTOR; HEAT	000000	000000
8970110650	8-9701	1065	WASHER; WATER PUMP	000000	000073
8970110740	8-9701	1074	PIPE; INLET	000000	000001
8970110950	8-9701	1095	CLIP; BYPASS HOSE	000000	000038
8970111333	8-9701	1133	TRANS ASM; MANUAL	000000	000000
8970112092			TRANSMISSION ASM.	000000	000000
8970112130			5 SPD. TRANS	000000	000000
8970112211			TRANSMISSION ASM; MA	000000	000000
8970112590	8-9701	1259	PUMP ASM; OIL, PUMP	000000	000000
8970112600	8-9701	1260	COOLER ASM; OIL	000000	000000
8970112610	8-9701	1261	MANIFOLD; INLET	000000	000000
8970113280	8-9701	1328	SYNCHRONIZER; LOW-REV	000000	000000
8970113290	8-9701	1329	SYNCHRONIZER ASM; 2N	000000	000000
8970113330			SYNCHRONIZER; LOW &	000000	000000
8970113350	8-9701	1335	SYNCHRONIZER; REV &	000000	000000
8970113440	8-9701	1344	DRIVER; COUPLING	000000	000000
8970113441	8-9701	1344	DRIVER; COUPLING	000000	000000
8970113442	8-9701	1344	DRIVER; COUPLING	000000	000000
8970113461	8-9701	1346	DRIVER; COUPLING	000000	000000
8970113480	8-9701	1348	GEAR; SPEEDO DRIVE	000000	000001
8970113500	8-9701	1350	GEAR; SPEEDO DRIVE	000000	000000
8970113630	8-9701	1363	ARM; SHIFT, 1ST & REV	000000	000000
8970113631	8-9701	1363	ARM; SHIFT, 1ST & REV	000000	000000
8970113640	8-9701	1364	ARM; SHIFT, 2ND & 3RD	000000	000000
8970113641	8-9701	1364	ARM; SHIFT, 2ND & 3RD	000001	000001
8970113651	8-9701	1365	ARM; SHIFT, LOW & 2ND	000000	000000

8970113661	8-9701	1366	ARM; SHIFT, TOP & 3RD	000000	000000
8970113701	8-9701	1370	ROD; SHIFT, LOW & 2ND	000000	000000
8970113711	8-9701	1371	ROD; SHIFT, TOP & 3RD	000000	000000
8970114741	8-9701	1474	TURBOCHARGER ASM 4BD1PTA0	000000	000000
8970114750	8-9701	1475	HOUSING; TURBINE	000000	000000
8970114761	8-9701	1476	COVER ASM; TURBO	000000	000000
8970114770	8-9701	1477	WHEEL ASM: TURBO	000001	000007
8970114780	8-9701	1478	HOUSING; TURBINE-TURBO	000000	000000
8970114790	8-9701	1479	PUMP ASM; INJ.	000000	000000
8970114800	8-9701	1480	PUMP ASM; OIL	000000	000000
8970114801	8-9701	1480	PUMP ASM; OIL	000000	000000
8970114810	8-9701	1481	BODY ASM.	000000	000000
8970114870	8-9701	1487	FILTER ASM; OIL	000000	000000
8970114881	8-9701	1488	MANIFOLD; INLET	000000	000000
8970114882	8-9701	1488	MANIFOLD; INLET	000000	000001
8970115480			SHAFT; STRG., LWR	000000	000000
8970115690	8-9701	1569	COUPLING: TURBO	000000	000000
8970115760	8-9701	1576	COVER ASM.; COMPRESSOR	000000	000000
8970115960	8-9701	1596	PIN; SPRING SHIFT ASM	000000	000000
8970115962	8-9701	1596	PIN; SPRING SHIFT ARM	000000	000015
8970116010	8-9701	1601	PULLEY; DAMP CRANK V1 L=63	000000	000000
8970116040	8-9701	1604	SCREW; FUEL PUMP	000000	000000
8970116240	8-9701	1624	PUMP ASM; INJ.	000000	000000
8970116850	8-9701	1685	FILTER ASM; FUEL	000000	000039
8970116860	8-9701	1686	VALVE ASM	000000	000029
8970116871	8-9701	1687	ORIFICE; INJ PUMP	000000	000000
8970117924	8-9701	1792	BOLT; GEN	000021	000014
8970119490	8-9701	1949	RELAY; GLOW PLUG	000000	000021
8970120681	8-9701	2068	BRACKET; A/COMP	000000	000000
8970124750	8-9701	2475	PLATE; CAM	000000	000000
8970124760	8-9701	2476	BOOST COMPENSAT	000000	000000
8970124770	8-9701	2477	SPRING	000000	000000
8970126620	8-9701	2662	PISTON STD	000000	000000
8970128360	8-9701	2836	BOLT; EYE	000038	000000
8970128430	8-9701	2843	GEAR SHAFT: INPUT	000000	000000
8970128570	8-9701	2857	SEAT: SPRING	000000	000000
8970131660	8-9701	3166	PIPE ASM.; FUEL, OVER FLOW	000001	000000
8970132102			CYLINDER; SLAVE, CLU	000000	000070
8970133190			NOZZLE ASM; INJ.	000000	000000
8970133191	8-9701	3319	NOZZLE ASM; INJ.	000000	000002
8970133200	8-9701	3320	HEAD ASM; CYL	000000	000000
8970133201	8-9701	3320	HEAD ASM; CYL	000000	000000
8970134780	8-9701	3478	BLANK KEY FOR ALL FLAT ST	000000	000032
8970134831	8-9701	3483	SOLENOID ASM; ENG/STOP	000000	000001
8970135480	8-9701	3548	PLATE; DRIVEN	000000	000000
8970135662	8-9701	3566	VALVE ASM; BYPASS	000000	000016
8970139642	8-9701	3964	PAN ASM; OIL	000000	000000

8970139643	8-9701	3964	PAN ASM; OIL	000000	000003
8970139740	8-9701	3974	GASKET; OIL PAN	000000	000000
8970139900	8-9701	3990	BELT; COOLING	000000	000006
8970140020	8-9701	4002	GEAR; W/BRG	000000	000000
8970140220	8-9701	4022	ARM; SHIFT, REV.-O.D.	000000	000000
8970140233	8-9701	4023	GEAR; REV MAINSHAFT	000000	000000
8970140252	8-9701	4025	GEAR; COUNTER	000000	000000
8970140331	8-9701	4033	MAINSHAFT	000000	000000
8970140333	8-9701	4033	MAINSHAFT	000005	000000
8970140342	8-9701	4034	GEAR; 2ND,MAIN SHAFT	000000	000000
8970142040	8-9701	4204	FILTER ASM; FUEL	000000	000000
8970142041	8-9701	4204	FILTER ASM; FUEL	000000	000295
8970142230	8-9701	4223	PAN ASM; OIL	000000	000000
8970142582	8-9701	4258	ARM; ROCKER	000031	000350
8970143130	8-9701	4313	PLUNGER ASM.	000000	000003
8970143140	8-9701	4314	CAM SHAFT	000002	000001
8970143150	8-9701	4315	PISTON; I/PUMP	000000	000000
8970143160	8-9701	4316	LEVER; GOV.	000000	000000
8970143180	8-9701	4318	HOUSING; GOV.	000000	000000
8970143190	8-9701	4319	LEVER	000000	000000
8970143200	8-9701	4320	SPRING	000000	000000
8970143210	8-9701	4321	PLATE; CAM	000000	000000
8970144160	8-9701	4416	GASKET	000000	000000
8970144190	8-9701	4419	BEARING; BALL	000002	000000
8970144201	8-9701	4420	PUMP ASM; INJ.	000000	000000
8970144211	8-9701	4421	PUMP ASM; INJ.	000000	000000
8970144220	8-9701	4422	PIPE; FEED PUMP-FILTER	000000	000000
8970145730	8-9701	4573	CAMSHAFT	000000	000000
8970145731	8-9701	4573	CAMSHAFT	000000	000008
8970145920	8-9701	4592	PIPE ASM; FUEL	000000	000000
8970147000	8-9701	4700	WASHER; PL,CRUISE	000008	000915
8970149741	8-9701	4974	FILTER ASM; OIL	000000	000000
8970149760	8-9701	4976	OIL FILTER ASM; PARTIAL	000000	000001
8970149950			WHEEL; STRG	000000	000001
8970151031			RUBBER; CUSHION, ENG MT,	000000	000000
8970151032			RUBBER; CUSHION, ENG MT,	000000	000003
8970153150	8-9701	5315	CABLE ASM; PARKING BRAKE	000000	000000
8970155150	8-9701	5515	BOLT; OIL PAN	000000	000000
8970155151	8-9701	5515	BOLT; OIL PAN	000000	000000
8970155220	8-9701	5522	BOLT; STAY	000000	000000
8970155561	8-9701	5556	HOSE; FLEX-PARTIAL FILTER	000000	000003
8970155571	8-9701	5557	HOSE; FLEX-PARTIAL FILTER	000000	000007
8970155580	8-9701	5558	BUSH; BALANCER	000000	000000
8970155790	8-9701	5579	PUMP ASM; INJ.	000000	000000
8970157450	8-9701	5745	CLIP; HOSE W-DRAIN	000000	000000
8970157540	8-9701	5754	CLIP; DRAIN HOSE	000000	000000
8970157541	8-9701	5754	CLIP; DRAIN HOSE	000007	000010

8970157840	8-9701	5784	CLIP; RUBBER HOSE	000000	000000
8970157890	8-9701	5789	PUMP ASM; FEED	000000	000000
8970158360			STUD; INL MANIF	000000	000000
8970160040	8-9701	6004	LEVER	000000	000000
8970160041	8-9701	6004	LEVER	000000	000000
8970160050	8-9701	6005	LEVER	000000	000000
8970160060	8-9701	6006	BRACKET	000000	000000
8970160070	8-9701	6007	NUT**	000000	000000
8970160330	8-9701	6033	GAUGE ASM; OIL	000000	000000
8970160340	8-9701	6034	CLAMP; EXH.	000000	000000
8970161000	8-9701	6100	GASKET; EXH	000000	000000
8970161010	8-9701	6101	GASKET; EXH. PIPE	000000	000083
8970161460	8-9701	6146	NOZZLE ASM; INJ.	000000	000000
8970161461	8-9701	6146	NOZZLE ASM; INJ.	000000	000007
8970161470	8-9701	6147	HOLDER; NOZZLE	000000	000000
8970161471	8-9701	6147	HOLDER; NOZZLE	000000	000002
8970161480	8-9701	6148	NOZZLE ASM; INJECTION	000018	000001
8970162170	8-9701	6217	JOINT: HOUSE	000000	000000
8970162480	8-9701	6248	BODY ASM: OIL	000000	000000
8970162680	8-9701	6268	PUMP ASM; FEED	000000	000000
8970162990	8-9701	6299	ROTOR; GEN	000000	000000
8970163000	8-9701	6300	PULLEY ASM; W/FAN	000000	000000
8970163010	8-9701	6301	NUT; PULLEY, GEN	000000	000000
8970163020	8-9701	6302	SCREW; RECTIFIER GEN	000000	000005
8970163040	8-9701	6304	ROTOR; VAC PUMP	000000	000000
8970163050	8-9701	6305	COVER; FRT. VAC PUMP	000000	000001
8970163070	8-9701	6307	VENTILATOR; RR A	000000	000002
8970163140	8-9701	6314	STUD; OIL COOLER	000000	000012
8970163300	8-9701	6330	COVER SET; DUST ENGA	000000	000000
8970164400			SLEEVE; ANGLEICH SPRING	000000	000000
8970164410	8-9701	6441	SCREW; SET	000000	000012
8970164460	8-9701	6446	SHAFT ASM; FUEL	000002	000000
8970164480			SHAFT	000000	000000
8970164492			LEVER; FUEL CUT	000000	000000
8970164720	8-9701	6472	PLATE; ADJUSTING, GEN.	000002	000001
8970164730	8-9701	6473	SEAL: CYL. BODY	000000	000001
8970165880			PLATE; NAME	000000	000003
8970167010	8-9701	6701	SHAFT; MAIN, TRANS	000000	000000
8970167030	8-9701	6703	SHAFT; MAIN, TRANS	000000	000000
8970167050	8-9701	6705	SHAFT; MAIN, TRANS	000000	000000
8970167950	8-9701	6795	ADAPTER; ILET	000000	000000
8970169060	8-9701	6906	HOSE; CHECK VALV	000000	000000
8970169070	8-9701	6907	BODY ASM: FUEL	000000	000000
8970169080	8-9701	6908	PLUG; FUEL	000000	000000
8970169320	8-9701	6932	CLIP; HOSE, SURGE TANK	000000	000000
8970169332			PIN; LEVER TO L/PLATE	000000	000000
8970169361			SPRING; IDLE	000000	000000

8970169362	8-9701	6936	SPRING; IDLE	000000	000006
8970169371	8-9701	6937	SPRING; SET	000000	000000
8970169400	8-9701	6940	SPRING; RETURN	000000	000003
8970170061	8-9701	7006	BODY ASM.	000000	000000
8970170071	8-9701	7007	BODY ASM.; OIL	000000	000000
8970170080	8-9701	7008	COVER ASM.	000000	000000
8970170090	8-9701	7009	PLUG	000000	000000
8970170100	8-9701	7010	PACKING; PLUG	000047	000000
8970170110	8-9701	7011	ELEMENT ASM; OIL	000003	000000
8970170120	8-9701	7012	BODY ASM.	000001	000000
8970170150	8-9701	7015	PACKING	000000	000000
8970170160	8-9701	7016	BAND ASM.	000004	000000
8970170170	8-9701	7017	BAND	000001	000000
8970170180	8-9701	7018	BOLT	000000	000002
8970170190	8-9701	7019	SPRING WASHER	000000	000000
8970170200	8-9701	7020	PLUG	000000	000000
8970170210	8-9701	7021	O-RING; PLUG	000002	000000
8970172390	8-9701	7239	COUPLING ASM	000000	000000
8970174330	8-9701	7433	PUMP ASM; INJ.	000000	000000
8970174620	8-9701	7462	TUBE; GUIDE	000000	000000
8970174630	8-9701	7463	TUBE; GUIDE	000000	000000
8970175000	8-9701	7500	SPRING;REV.INHBTR EXTENS	000001	000002
8970175030	8-9701	7503	PIPE; AIR IN	000000	000000
8970175040	8-9701	7504	PIPE; AIR OUT	000000	000000
8970175580	8-9701	7558	CABLE; FUEL CUT	000000	000000
8970175590	8-9701	7559	BUTTON ASM.	000000	000000
8970175620	8-9701	7562	FAN ASM.	000001	000000
8970175730	8-9701	7573	BLOCK; SHIFT, 2ND & 3RD	000000	000000
8970175731	8-9701	7573	BLOCK; SHIFT, 2ND & 3RD	000000	000000
8970176890	8-9701	7689	PIPE ASM; INJECTION #1	000000	000000
8970176891	8-9701	7689	PIPE ASM; INJECTION #1	000005	000000
8970176900	8-9701	7690	PIPE ASM; INJECTION #2	000000	000000
8970176901	8-9701	7690	PIPE ASM; INJECTION #2	000000	000003
8970176910	8-9701	7691	PIPE ASM; INJECTION #3	000000	000000
8970176911	8-9701	7691	PIPE ASM; INJECTION #3	000008	000000
8970176920	8-9701	7692	PIPE ASM; INJECTION #4	000000	000000
8970176921	8-9701	7692	PIPE ASM; INJECTION #4	000000	000003
8970177740	8-9701	7774	MANIFOLD; INL	000000	000000
8970177750	8-9701	7775	PIPE; INL	000000	000000
8970177760	8-9701	7776	PUMP ASM; INJ.	000000	000002
8970177770	8-9701	7777	TURBOCHARGER ASM.	000000	000002
8970177780	8-9701	7778	PIPE; INJ. #1	000000	000003
8970177790	8-9701	7779	PIPE; INJ. #2	000000	000002
8970177800	8-9701	7780	PIPE; INJ. #3	000000	000005
8970177810	8-9701	7781	PIPE; INJ. #4	000000	000005
8970177820	8-9701	7782	DUCT; TURBO-INL	000005	000001
8970177830	8-9701	7783	PIPE, INJECTION #1	000000	000000

8970177831	8-9701	7783	PIPE, INJECTION #1	000000	000006
8970177840	8-9701	7784	PIPE, INJECTION #2	000000	000000
8970177842	8-9701	7784	PIPE, INJECTION #2	000000	000009
8970177850	8-9701	7785	PIPE, INJECTION #3	000000	000000
8970177852	8-9701	7785	PIPE, INJECTION #3	000000	000007
8970177860	8-9701	7786	PIPE, INJECTION #4	000000	000000
8970177861	8-9701	7786	PIPE, INJECTION #4	000008	000000
8970177870	8-9701	7787	PIPE ASM; INJ	000008	000000
8970177871	8-9701	7787	PIPE ASM; INJ	000000	000000
8970177880	8-9701	7788	PIPE ASM; INJ	000000	000000
8970177881	8-9701	7788	PIPE ASM; INJ	000000	000003
8970177890	8-9701	7789	PIPE ASM; INJ	000000	000000
8970177891	8-9701	7789	PIPE ASM; INJ	000003	000000
8970177900	8-9701	7790	PIPE ASM; INJ	000000	000000
8970177901	8-9701	7790	PIPE ASM; INJ	000000	000001
8970177910	8-9701	7791	PIPE; INJ #1	000000	000000
8970177911	8-9701	7791	PIPE; INJ #1	000000	000001
8970177920	8-9701	7792	PIPE; INJ #2	000000	000000
8970177921	8-9701	7792	PIPE; INJ #2	000000	000029
8970177930	8-9701	7793	PIPE; INJ #3	000000	000000
8970177931	8-9701	7793	PIPE; INJ #3	000000	000001
8970177940	8-9701	7794	PIPE; INJ #4	000000	000000
8970177941	8-9701	7794	PIPE; INJ #4	000000	000001
8970177950	8-9701	7795	PIPE; INJ #1	000000	000000
8970177960	8-9701	7796	PIPE; INJ #2	000000	000000
8970177970	8-9701	7797	PIPE; INJ #3	000000	000000
8970177980	8-9701	7798	PIPE; INJ #4	000001	000000
8970177981	8-9701	7798	PIPE; INJ #4	000000	000000
8970177990	8-9701	7799	PIPE: #1	000000	000000
8970177991	8-9701	7799	PIPE: #1	000000	000000
8970178000	8-9701	7800	PIPE: #2	000000	000000
8970178001	8-9701	7800	PIPE: #2	000000	000000
8970178010	8-9701	7801	PIPE: #3	000000	000000
8970178011	8-9701	7801	PIPE: #3	000000	000000
8970178020	8-9701	7802	PIPE: #4	000000	000000
8970178100	8-9701	7810	COVER ASM.	000000	000000
8970178730	8-9701	7873	SHAFT ASM.;COUN	000000	000000
8970179000	8-9701	7900	UNIT; ELECT CON	000000	000000
8970179010	8-9701	7901	JOINT ASM.	000000	000000
8970179150	8-9701	7915	HOSE; RUBBER	000000	000001
8970179160	8-9701	7916	HOSE; RUBBER	000006	000000
8970179170	8-9701	7917	HANGER; ENG. FRT	000001	000000
8970180430	8-9701	8043	DISTRIBUTOR HEAD	000000	000000
8970180640	8-9701	8064	QS SENSOR	000000	000000
8970180720	8-9701	8072	PUMP ASM; INJ.	000000	000000
8970183100			PANEL	000000	000000
8970184331			AIR DUCT	000000	000000

8970184951			EMBLEM; RAD GRI	000000	000001
8970185310	8-9701	8531	PIPE, INLET	000000	000001
8970185340	8-9701	8534	HANGER: ENGINE LIFT	000000	000000
8970185351	8-9701	8535	BEARING; BALL,COUNTER END	000001	000010
8970185460			CLIP; VAC. PIPE	000020	000026
8970185510			HOSE; RUBBER	000000	000000
8970185560	8-9701	8556	W/PUMP, NEW, KIT	000000	000000
8970185580	8-9701	8558	PUMP ASM; WATER	000000	000002
8970185590	8-9701	8559	PUMP ASM; WATER W/GASKET	000000	000000
8970185600	8-9701	8560	WATER PUMP KIT	000000	000000
8970185860			SENSOR; 02	000000	000073
8970186060	8-9701	8606	PLUG; C/BL SIDE	000000	000006
8970186640	8-9701	8664	HOUSING; THERMOSTAT	000000	000003
8970186650	8-9701	8665	LEVER; SWIVEL LEVER	000000	000000
8970186840	8-9701	8684	PLATE; ADJ-GEN	000000	000000
8970187090	8-9701	8709	GOVERNOR ASM.	000000	000000
8970187463			STRIKER	000000	000000
8970187473			STRIKER	000000	000000
8970187483			TAIL DOOR	000000	000000
8970188750	8-9701	8875	VALVE;VAC PUMP	000000	000002
8970188811	8-9701	8881	PUMP ASM; VAC,GEN	000000	000000
8970189210	8-9701	8921	BEARING; BALL, MAIN SHAFT	000000	000000
8970189211	8-9701	8921	BEARING; BALL,MN/SHAFT,RR	000084	000001
8970189361	8-9701	8936	GASKET; CYL. HEAD	000000	000000
8970189362	8-9701	8936	GASKET; CYL. HEAD	000000	000000
8970190830	8-9701	9083	CLIP; HOSE	000000	000000
8970191550	8-9701	9155	SHAFT; REV	000000	000000
8970191551	8-9701	9155	SHAFT; REV	000000	000000
8970191840	8-9701	9184	PIPE; TURBO OIL FEED	000009	000001
8970192020	8-9701	9202	PLUG;OIL FILLER,DRAIN AXL	000067	000050
8970192520	8-9701	9252	COVER ASM;AIR INLET	000000	000000
8970192600	8-9701	9260	RUBBER HOSE;BREATHER	000000	000000
8970192620	8-9701	9262	CLIP;BLOW BY HOSE	000000	000000
8970192820			SPRING; RETURN	000000	000000
8970194730	8-9701	9473	CLIP; RUBBER HOSE	000000	000000
8970194780	8-9701	9478	STUD; ADAPTER TO TUR	000552	004776
8970195701	8-9701	9570	GASKET; INLET MANIFOLD	000000	000000
8970196530	8-9701	9653	GASKET;OIL COOLER	000000	000000
8970197230	8-9701	9723	GOVERNOR ASM.	000000	000000
8970197250	8-9701	9725	GOVERNOR ASM.	000000	000000
8970198711	8-9701	9871	PUMP KIT: WATER W/ GSKT	000000	000003
8970199180	8-9701	9918	BOLT;STRIKER,TAIL GATE	000000	000000
8970200370	8-9702	0037	COOLER ASM.; OIL	000000	000000
8970200371	8-9702	0037	COOLER ASM.; OIL	000000	000000
8970200372	8-9702	0037	COOLER ASM.; OIL	000000	000004
8970200510	8-9702	0051	PIPE; INJ NO 4	000000	000000
8970200590	8-9702	0059	PIPE; WATER	000000	000000

8970200611	8-9702	0061	CRANKSHAFT ASM	000000	000000
8970200621	8-9702	0062	SHAFT ASM; CRAN	000000	000000
8970200631	8-9702	0063	CRANKSHAFT ASM.	000000	000001
8970200640	8-9702	0064	CRANKSHAFT	000000	000000
8970200641	8-9702	0064	CRANKSHAFT	000000	000000
8970200650	8-9702	0065	ROD ASM; CONN	000000	000000
8970200660	8-9702	0066	PIPE ASM.; FUEL,	000000	000002
8970200670	8-9702	0067	ROD ASM; CONN.3LB1	000000	000000
8970200680	8-9702	0068	PIPE; FUEL	000000	000000
8970200790	8-9702	0079	PIPE; FUEL, TANK SIDE	000000	000000
8970200791	8-9702	0079	PIPE; FUEL, TANK SIDE	000000	000000
8970201000	8-9702	0100	TUBE; GUIDE, OIL	000000	000000
8970201540	8-9702	0154	GASKET; OIL PAN	000000	000101
8970202370	8-9702	0237	RING SET:PIST. OVS 1=0.25	000000	000000
8970202380	8-9702	0238	RING DET: PIST.OVS 1=0.50	000000	000004
8970202480	8-9702	0248	SENSOR; OIL LEVEL	000000	000000
8970202490	8-9702	0249	SPACER; O/SENSOR	000000	000000
8970202500	8-9702	0250	SHOE; PARKING, BRK	000000	000000
8970202501	8-9702	0250	SHOE; PARKING, BRK	000000	000000
8970202502	8-9702	0250	SHOE; PARKING, BRK	000040	000259
8970202590	8-9702	0259	MAG SWITCH ASM	000000	000000
8970202660	8-9702	0266	HOLDER	000023	000000
8970202690	8-9702	0269	BOLT*	000010	000000
8970202740	8-9702	0274	RIVET	000000	000000
8970202771	8-9702	0277	PAN ASM; OIL	000000	000000
8970202900	8-9702	0290	PULLEY, DAMPER	000000	000000
8970202901	8-9702	0290	PULLEY, DAMPER	000000	000006
8970203160	8-9702	0316	PROTECTOR; HEAT	000000	000000
8970203161	8-9702	0316	PROTECTOR; HEAT	000000	000001
8970203170	8-9702	0317	PROTECTOR; HEAT, FRT.	000000	000000
8970203280	8-9702	0328	SEAL; OIL CRANK	000000	000074
8970203290	8-9702	0329	JOINT; EYE, I/PUMP	000000	000004
8970203900	8-9702	0390	PUMP ASM; INJ.	000000	000000
8970203901	8-9702	0390	PUMP ASM; INJ.	000000	000000
8970203902	8-9702	0390	PUMP ASM; INJ.	000000	000000
8970204900	8-9702	0490	BOLT; MANIFOLD	000000	000021
8970205650	8-9702	0565	PLATE; BLOCK	000000	000000
8970205660	8-9702	0566	COVER; GEAR CASE	000000	000000
8970205670	8-9702	0567	GEAR; W/BUSH	000000	000000
8970205690	8-9702	0569	SHAFT; IDLE GEAR	000000	000000
8970205700	8-9702	0570	GEAR; IDLE	000000	000000
8970205701	8-9702	0570	GEAR; IDLE	000000	000001
8970205710	8-9702	0571	SHAFT; PTO GEAR	000001	000000
8970205910	8-9702	0591	GASKET; EXH MANIF TO	000000	000000
8970206000	8-9702	0600	GAUGE ASM; OIL	000000	000000
8970206620	8-9702	0662	PUMP ASM; INJ.	000000	000000
8970206750	8-9702	0675	WASHER; THRUST	000000	000000

8970206760	8-9702	0676	SPACER; PTO	000000	000000
8970206761	8-9702	0676	SPACER; PTO	000000	000000
8970207430	8-9702	0743	GEAR; CAMSHAFT	000000	000000
8970207530	8-9702	0753	PUMP ASM; WATER	000000	000000
8970207531	8-9702	0753	PUMP ASM; WATER	000000	000000
8970207560	8-9702	0756	REPAIR KIT; W/P	000000	000000
8970207570	8-9702	0757	PUMP ASM; INJ.	000000	000000
8970207690	8-9702	0769	PISTON:OVS 1=0.25	000000	000003
8970207700	8-9702	0770	PISTON: OVS 1=0.50	000000	000000
8970207750	8-9702	0775	REPAIR KIT;WATER PUMP	000000	000001
8970207790	8-9702	0779	MANIFOLD; EXH.	000000	000001
8970208220	8-9702	0822	BELT; FAN	000000	000079
8970208580	8-9702	0858	PLUG; DRAIN,OIL	000000	000000
8970208620	8-9702	0862	PARTIAL ENGINE	000000	000000
8970208800	8-9702	0880	PUMP ASM; INJ.	000000	000000
8970208810	8-9702	0881	GOVERNOR ASM.	000000	000000
8970208820	8-9702	0882	PUMP ASM; INJ.	000000	000000
8970208830	8-9702	0883	GOVERNOR ASM.	000000	000000
8970209271	8-9702	0927	FILTER ASM.;	000000	000001
8970209282	8-9702	0928	FILTER ASM; OIL	000000	000000
8970209283	8-9702	0928	FILTER ASM; OIL	000000	000000
8970209294	8-9702	0929	PUMP ASM; INJ.	000000	000000
8970209302	8-9702	0930	GOVERNOR ASM.;	000000	000000
8970209310	8-9702	0931	TUBE; GUIDE	000000	000000
8970209320	8-9702	0932	TUBE; GUIDE, OIL	000000	000024
8970209330	8-9702	0933	PIPE ASM; FUEL, F/PUMP-FI	000000	000004
8970209340	8-9702	0934	PIPE; FUEL FILTER	000000	000007
8970209350	8-9702	0935	PIPE ASM; FUEL, LEAK OFF	000000	000003
8970209360	8-9702	0936	PIPE; SEDIMENTE	000002	000001
8970209371	8-9702	0937	PIPE ASM; FUEL, NOZZLE LE	000000	000001
8970209382	8-9702	0938	BRACKET; STOPPER CABLE	000001	000000
8970209391	8-9702	0939	SPACER; BRKT, CABLE	000000	000000
8970209410	8-9702	0941	SEDIMENTER; FUEL	000000	000002
8970209420	8-9702	0942	ROTOR SET 2AA/AB1	000000	000000
8970209501			ROD; TRACK CENTER	000000	000000
8970209502			ROD; TRACK CENTER	000000	000000
8970209503			ROD; TRACK CENTER	000000	000001
8970209790	8-9702	0979	REPAIR KIT; OIL PUMP	000000	000000
8970209801	8-9702	0980	ACTUATOR; WASTE GATE	000000	000000
8970209840	8-9702	0984	GAUGE ASM.;	000001	000000
8970209850	8-9702	0985	GAGE ASM; LEVEL, OIL	000000	000005
8970209910	8-9702	0991	PUMP ASM; INJ.	000000	000000
8970210190	8-9702	1019	PLATE; LOCK,DRIVEN GEAR	000000	000000
8970210620	8-9702	1062	PACKING	000001	000000
8970210630	8-9702	1063	PLUG; OIL DRAIN	000000	000000
8970210640	8-9702	1064	PLUG; DRAIN, FUEL TANK	000000	000000
8970211170	8-9702	1117	VALVE; INLET	000000	000008

8970211330	8-9702	1133	BUSHING;DRIVEN GEAR,SPEED	000000	000000
8970211331	8-9702	1133	BUSHING;DRIVEN GEAR,SPEED	000000	000000
8970211332	8-9702	1133	BUSHING;DRIVEN GEAR,SPEED	000000	000000
8970211334	8-9702	1133	BUSHING;DRIVEN GEAR,SPEED	000014	000008
8970211510	8-9702	1151	GAUGE ASM; OIL LEVEL	000000	000000
897021170C			CORE; PUMP ASM, WATER	000002	000000
8970211710	8-9702	1171	W/PUMP, NEW	000000	000000
8970211711	8-9702	1171	W/PUMP, NEW	000000	000001
8970211721	8-9702	1172	BREATHER ASM; AIR	000000	000000
8970211722	8-9702	1172	BREATHER ASM; AIR	000000	000005
8970212100	8-9702	1210	BOLT;QUAD BOX	000265	000010
8970213001	8-9702	1300	MANIFOLD; INLET	000000	000000
8970213110	8-9702	1311	HOSE; RUBBER	000000	000000
8970213150	8-9702	1315	PUMP ASM; WATER	000000	000001
8970213160	8-9702	1316	PUMP ASM; WATER	000000	000000
8970213161	8-9702	1316	PUMP ASM; WATER	000000	000035
8970214012	8-9702	1401	FLYWHEEL	000000	000000
8970214310	8-9702	1431	STUD; OIL PAN TO BLOCK	000007	000238
8970214990	8-9702	1499	HOUSING; INJ. PUMP	000000	000000
8970215000	8-9702	1500	CAMSHAFT; I/PUMP	000002	000000
8970215010	8-9702	1501	BOLT; EYE	000000	000000
8970215530	8-9702	1553	FILTER ASM; OIL	000000	000000
8970216390	8-9702	1639	FLYWHEEL	000000	000000
8970216900	8-9702	1690	MANIFOLD; EXHAUST	000000	000001
8970216930	8-9702	1693	CRANKSHAFT ASM.	000000	000002
8970216940	8-9702	1694	HEAD ASM; CYL.	000000	000020
8970217700	8-9702	1770	PUMP ASM; WATER	000000	000000
8970217710	8-9702	1771	PUMP ASM; WATER	000000	000000
8970217711	8-9702	1771	PUMP ASM; WATER	000000	000000
8970217720	8-9702	1772	PUMP ASM, WATER	000001	000000
8970219170	8-9702	1917	PUMP ASM; FEED	000000	000000
8970219441			BRAKE BOOSTER	000000	000000
8970220280	8-9702	2028	CYLINDER;WHEEL,FRT BRK,RH	000000	000000
8970220281	8-9702	2028	CYLINDER;WHEEL,FRT BRK,RH	000000	000000
8970220960	8-9702	2096	NOZZLE ASM; INJ.	000000	000000
8970220961	8-9702	2096	NOZZLE ASM; INJ.	000001	000000
8970220970	8-9702	2097	NOZZLE ; INJ.	000016	000000
8970220980	8-9702	2098	HOLDER ASM;NOZZLE	000000	000000
8970222112	8-9702	2211	GENERATOR; 24V 30A	000000	000014
8970222160	8-9702	2216	GASKET; COVER-CASE	000001	000000
8970222170	8-9702	2217	PACKING; G/CASE COVER	000000	000000
8970223140	8-9702	2314	HOSE; O/COOLER INL	000000	000000
8970223141	8-9702	2314	HOSE; O/COOLER INL	000001	000000
8970223371			TAIL PIPE	000000	000002
8970224520			BRACKET; INJ PUMP RR	000000	000000
8970224591			SILENCER; EXH.	000000	000000
8970225640	8-9702	2564	BALL JOINT ASM.	000002	000000

8970225710	8-9702	2571	PACKING; INLET	000000	000000
8970225711	8-9702	2571	PACKING; INLET	000000	000017
8970227180	8-9702	2718	LEVEL GAUGE; OIL	000000	000006
8970227440	8-9702	2744	PIPE ASM; FUEL, LEAK OFF	000002	000001
8970227450	8-9702	2745	FLYWHEEL ASM.	000000	000000
8970227532	8-9702	2753	BOLT;LATERAL ROD TO BODY	000000	000000
8970227533	8-9702	2753	BOLT;LATERAL ROD TO BODY	000000	000003
8970228100	8-9702	2810	6 BLADE BLOWER D=380	000000	000039
8970228101	8-9702	2810	6 BLADE BLOWER D=380	000000	000000
8970228330	8-9702	2833	BOX; QUADRANT TRANS	000000	000000
8970228372	8-9702	2837	BLOCK; SHIFT,1ST & 2	000000	000000
8970230190			HOSE; WATER,RAD	000000	000002
8970230720	8-9702	3072	BEARNG;ANGULAR BALL CLSTR	000000	000000
8970230740			BEARING; CLU RE	000000	000000
8970230760			HOSE WATER PIPE	000000	000000
8970230870	8-9702	3087	PAN ASM.; OIL	000000	000000
8970231500	8-9702	3150	COVER; WATER	000000	000000
8970231510	8-9702	3151	PACKING; COVER	000000	000000
8970231520	8-9702	3152	COVER; PUMP	000000	000000
8970231530	8-9702	3153	PACKING; COVER-BODY	000000	000000
8970231821	8-9702	3182	CRANKSHAFT	000000	000000
8970232630	8-9702	3263	GENERATOR; 24V/40A	000000	000000
8970232631	8-9702	3263	GENERATOR; 24V/40A	000001	000008
8970232680	8-9702	3268	WASHER; FLYWHEEL	000000	000054
8970232690	8-9702	3269	PACKING; OIL PAN	000000	000000
8970232700	8-9702	3270	PACKING; W/P	000011	000000
8970232931	8-9702	3293	OIL PAN ASM	000000	000000
8970232951	8-9702	3295	FILTER & COOLER; OIL	000000	000000
8970233050	8-9702	3305	BOLT; JOINT	000001	000002
8970233390	8-9702	3339	VALVE; OIL RELIEF	000000	000000
8970233600	8-9702	3360	PUMP ASM; INJ.	000000	000000
8970233610	8-9702	3361	GOVERNOR ASM.; FIG.53	000000	000000
8970233620	8-9702	3362	HOSE; RUBBER	000000	000000
8970233621	8-9702	3362	HOSE; RUBBER	000000	000005
8970233640	8-9702	3364	PACKING; FRONT PLATE	000000	000003
8970233680	8-9702	3368	GASKET; GEAR CASE	000000	000000
8970233700	8-9702	3370	GASKET; INL PIPE	000000	000000
8970234950	8-9702	3495	DISC; CLUTCH	000000	000012
8970237080	8-9702	3708	SPRING;INSERT,LOW	000000	000013
8970237090	8-9702	3709	SPRING;INSERT,REV	000000	000008
8970237100	8-9702	3710	SPRING;INSERT TOP	000000	000014
8970237790	8-9702	3779	HOSE; AIR CLEANER	000000	000000
8970237920	8-9702	3792	PROTECTOR;HEAT TURBOCHARG	000000	000001
8970238150	8-9702	3815	TUBE, GUIDE	000000	000000
8970238640	8-9702	3864	COVER; EXH. MAN.	000000	000000
8970239550	8-9702	3955	GOVERNOR ASM.	000000	000000
8970239560	8-9702	3956	SLEEVE FLANGE	000000	000000

8970239561	8-9702	3956	SLEEVE FLANGE	000000	000000
8970239570	8-9702	3957	GOVERNOR ASM; INJ. PUMP	000000	000003
8970241030	8-9702	4103	SYNCHRONIZER ASM;2ND-3RD	000000	000000
8970241220	8-9702	4122	GASKET; INL. MAN.	000000	000027
8970241240	8-9702	4124	GASKET; COVER	000206	000505
8970242370	8-9702	4237	PIPE; WATER	000000	000000
8970242380	8-9702	4238	LEVER; SWIVAL	000000	000007
8970242390	8-9702	4239	BUSH; SWIVAL LEVER	000000	000000
8970242400	8-9702	4240	BUSH; SWIVAL LEVER	000000	000000
8970242410	8-9702	4241	LEVER	000000	000000
8970242931	8-9702	4293	CYLINDER; SLAVE,CLU	000000	000000
8970243040	8-9702	4304	COOLER ASM; OIL	000000	000000
8970243190	8-9702	4319	SCREW; RR WIPER MOTOR	000006	001714
8970243580	8-9702	4358	COVER: SOLENOID	000000	000000
8970245030	8-9702	4503	ARM; SHIFT, LOW & 2ND	000000	000000
8970245031	8-9702	4503	ARM; SHIFT, LOW & 2ND	000000	000000
8970245280	8-9702	4528	FORK ASM.; SHIFT, CLUTCH	000000	000000
8970245320	8-9702	4532	FORK ASM;SHIFT	000000	000005
8970245980	8-9702	4598	PIPE ASM; OIL,	000000	000000
8970245990	8-9702	4599	BRG. COVER ASM.	000000	000000
8970246070	8-9702	4607	FILTER;OIL (SPIN-ON)	000000	000000
8970246071	8-9702	4607	FILTER;OIL (SPIN-ON)	000000	001632
8970246160			METER COMPL; CL JT	000000	000000
8970246170			METER COMPL; CL JT	000000	000000
8970247110	8-9702	4711	HOSE; SUCTION	000000	000002
8970247120	8-9702	4712	RUBBER HOSE; LOWER	000001	000000
8970248420	8-9702	4842	BEARING; BALL	000000	000000
8970248580	8-9702	4858	LEVER	000000	000000
8970248600	8-9702	4860	DELIVERY VALVE	000000	000000
8970249420	8-9702	4942	HOSE;SUCTION,	000000	000000
8970249430	8-9702	4943	RUBBER HOSE; RADIATO	000002	000000
8970250500	8-9702	5050	FAN GUIDE	000000	000000
8970253630			PACKING; BREATH	000000	000018
8970253640			CAP; OIL FILLER	000000	000027
8970253840	8-9702	5384	FLYWHEEL ASM.	000000	000000
8970254400	8-9702	5440	PLUG;OIL GALLER	000000	000253
8970254420	8-9702	5442	CONNECTOR; GLOW PLUG	000000	000011
8970254460	8-9702	5446	METAL KIT;CR/SHFT.	000000	000025
8970254522			HEAD ASM; CYLINDER	000000	000000
8970254523	8-9702	5452	HEAD ASM; CYLINDER	000000	000000
8970254524	8-9702	5452	HEAD ASM; CYLINDER	000000	000000
8970254621	8-9702	5462	JET; OIL, PISTON COOLING	000000	000072
8970254730			LAMP; REAR COMB	000000	000000
8970256070	8-9702	5607	LEVER; SHIFT, EXTERNAL	000000	000001
8970256080	8-9702	5608	LEVER; SHIFT	000001	000000
8970256160	8-9702	5616	BODY ASM.	000000	000000
8970256560	8-9702	5656	BODY ASM.	000000	000000

8970256730	8-9702	5673	BEARING; GEAR S.	000000	000000
8970256740	8-9702	5674	BEARING; GEAR S	000002	000000
8970256760	8-9702	5676	BEARING; BALL, RE	000000	000084
8970257000	8-9702	5700	FLYWHEEL ASM.	000000	000000
8970257410	8-9702	5741	RADIATOR ASM.;	000000	000000
8970257420	8-9702	5742	BRACKET; ENG. CONTROL	000000	000000
8970258640	8-9702	5864	MANIFOLD ASM; INLET	000000	000001
8970258720			GEAR; 2ND, MAINSHAFT	000000	000000
8970258920	8-9702	5892	TACHOMETER ASM.	000000	000000
8970260070	8-9702	6007	TUBE; GUIDE, OIL	000000	000000
8970260500	8-9702	6050	FAN GUIDE	000000	000000
8970261020	8-9702	6102	TUBE; GUIDE, OIL	000000	000001
8970261331	8-9702	6133	BODY ASM; OIL	000000	000000
8970261332	8-9702	6133	BODY ASM; OIL	000000	000000
8970261341	8-9702	6134	FILTER; OIL PARTIAL	000000	000000
8970261342	8-9702	6134	FILTER; OIL PARTIAL	000000	000464
8970261351	8-9702	6135	BODY ASM.; OIL FILTER	000000	000003
8970261363	8-9702	6136	PUMP ASM; INJ.	000000	000000
8970261364	8-9702	6136	PUMP ASM; INJ.	000000	000000
8970261370	8-9702	6137	GOVERNOR ASM.	000000	000000
8970261371	8-9702	6137	GOVERNOR ASM.	000000	000000
8970261540	8-9702	6154	PULLEY; CRANK	000000	000000
8970261550	8-9702	6155	AUTO STARTING BOARD	000000	000000
8970261551	8-9702	6155	AUTO STARTING BOARD	000000	000000
8970261600	8-9702	6160	RELAY; BATTERY	000000	000000
8970261601	8-9702	6160	RELAY; BATTERY	000000	000002
8970262430	8-9702	6243	CLUTCH ASM.	000000	000002
8970262440	8-9702	6244	SHAFT; PINION	000000	000000
8970262450	8-9702	6245	CLUTCH ASM.	000000	000000
8970262460	8-9702	6246	BEARING; BALL	000000	000000
8970262470	8-9702	6247	SWITCH ASM; MAGNETIC	000002	000000
8970262480	8-9702	6248	RETAINER; BRG.	000000	000000
8970262490	8-9702	6249	SEAL; STARTER	000000	000000
8970262500	8-9702	6250	O-RING; STARTER	000000	000000
8970262510	8-9702	6251	PACKING	000000	000000
8970262851	8-9702	6285	PUMP ASM; INJ.	000000	000000
8970262852	8-9702	6285	PUMP ASM; INJ.	000000	000000
8970262871	8-9702	6287	GOVERNOR ASM; MECHANICAL	000000	000000
8970263010	8-9702	6301	O-RING	000000	000000
8970264102	8-9702	6410	GASKET; EXH MANIF	000000	000002
8970265350	8-9702	6535	GOVERNOR ASM.	000000	000000
8970265351	8-9702	6535	GOVERNOR ASM.	000000	000000
8970265800	8-9702	6580	ADAPTER	000000	000000
8970265810	8-9702	6581	BOLT; FLANGE BOSS L=70	000000	000000
8970265820	8-9702	6582	WASHER; SPR.	000000	000000
8970265830	8-9702	6583	WASHER; PL.	000000	000000
8970265840	8-9702	6584	BOLT; ADAPTER FIX L=35	000000	000000

8970265850	8-9702	6585	WASHER; SPR.	000000	000000
8970265860	8-9702	6586	DRUM ASM	000000	000000
8970265870	8-9702	6587	SHOE ASM; W/SET	000000	000000
8970265880	8-9702	6588	BOSS ASM; FLANGE	000000	000000
8970265890	8-9702	6589	ADAPTER ASM; FLYWHEEL	000000	000000
8970265900	8-9702	6590	GASKET;O-RING,OIL COOLER	000024	000148
8970266621			PAN ASM; OIL	000000	000000
8970266651			MANIFOLD; EXHAUST	000000	000000
8970266662			HOUSING	000000	000000
8970266663			HOUSING	000000	000000
8970266665			HOUSING	000000	000000
8970266666			HOUSING	000000	000003
8970266670			PLATE; RR, CYL	000000	000000
8970266671			PLATE; RR, CYL	000000	000000
8970266672			PLATE; RR, CYL	000000	000051
8970266681			FILTER ASM.;OIL	000000	000000
8970266691			PLATE FRONT	000000	000000
8970266714			CASE; TIMING GEAR	000000	000042
8970266760			MANIFOLD; INL	000000	000000
8970266761			MANIFOLD; INL	000000	000000
8970266762			MANIFOLD; INL	000000	000002
8970266770			COVER; INLET	000000	000062
8970266780			PACKING; COVER	000000	000000
8970266792			PIPE ASM.;	000000	000000
8970266793			PIPE ASM.;	000000	000000
8970266794			PIPE ASM.;	000000	000023
8970266803			PIPE ASM.;	000000	000000
8970266804			PIPE ASM.;	000000	000015
8970266811			PIPE ASM	000000	000000
8970266812			PIPE ASM	000000	000000
8970266813			PIPE ASM	000000	000034
8970266821			PIPE ASM.;	000000	000000
8970266822			PIPE ASM.;	000000	000000
8970266823			PIPE ASM.;	000000	000014
8970267480	8-9702	6748	COVER ASM.; RR,G	000000	000000
8970267490	8-9702	6749	COVER; RR, GEN.	000000	000000
8970267500	8-9702	6750	PLUNGER ASM	000000	000005
8970267510	8-9702	6751	CAPSULE; SPR.	000000	000000
8970267520	8-9702	6752	LEVER; TENSION	000000	000003
8970267530	8-9702	6753	BLOCK ASM; CYL	000000	000000
8970269130	8-9702	6913	DELIVERY VALVE	000000	000000
8970269180	8-9702	6918	GASKET;FRT COVER TO HS	000001	000000
8970270211			GASKET; GEAR CASE T	000000	000000
8970270212			GASKET; GEAR CASE T	000000	000000
8970270220			PACKING; CASE TO BLOCK	000000	000002
8970270230	8-9702	7023	PACKING; CASE TO BLOCK	000001	000000
8970270601	8-9702	7060	PUMP ASM; INJ.	000000	000000

8970270670			STRUT TOWER	000000	000000
8970271060	8-9702	7106	ADAPTER; FLYWHEEL	000000	000000
8970271070	8-9702	7107	BOLT; ADAPTER FIX L-110	000000	000000
8970271080	8-9702	7108	WASHER; PL	000000	000000
8970271090	8-9702	7109	BOLT; ADAPTER FIX.	000000	000000
8970271100	8-9702	7110	DRUM ASM.	000000	000000
8970271110	8-9702	7111	SHOE ASM	000000	000000
8970271120	8-9702	7112	FLANGE BOSS ASM	000000	000000
8970271130	8-9702	7113	ADAPTER ASM; FLYWHEEL	000000	000000
8970271250	8-9702	7125	LEVER; PRK BRAKE	000000	000009
8970271850	8-9702	7185	BAR; RAD.	000000	000000
8970272300	8-9702	7230	PLUG; TRANS CASE	000000	000000
8970272320	8-9702	7232	PAN ASM; OIL, A/T	000000	000000
8970272390	8-9702	7239	BODY ASM; VALVE LWR, A/T	000000	000001
8970272570	8-9702	7257	BOLT; OIL PIPE	000041	000000
8970272910	8-9702	7291	PUMP ASM; FEED	000000	000000
8970273801			COVER; CYL. HEAD	000000	000000
8970273822			HOUSING ASM;	000000	000024
8970274290	8-9702	7429	PARTIAL ENGINE ASM.	000000	000000
8970274292	8-9702	7429	ENGINE ASM.; PARTIAL	000000	000000
8970274310	8-9702	7431	PLUG; FEED PUMP	000000	000000
8970274320	8-9702	7432	SHIM; NOZZLE SPRING, HOLDER	000000	000000
8970274330	8-9702	7433	SHIM; NOZZLE SPRING, HOLDER	000000	000000
8970274340	8-9702	7434	SHIM; NOZZLE SPRING, HOLDER	000000	000000
8970274350	8-9702	7435	SHIM; NOZZLE SPRING, HOLDER	000000	000000
8970274360	8-9702	7436	SHIM; NOZZLE SPRING, HOLDER	000000	000000
8970274370	8-9702	7437	SHIM; NOZZLE SPRING, HOLDER	000000	000000
8970274380	8-9702	7438	SHIM; NOZZLE SPRING, HOLDER	000000	000000
8970274390	8-9702	7439	SHIM; NOZZLE SPRING, HOLDER	000000	000000
8970274400	8-9702	7440	SHIM; NOZZLE SPRING, HOLDER	000000	000002
8970274610			SPEEDOMETER CABLE	000000	000000
8970274741			FOOT; ENG., FT LH	000000	000000
8970274751	8-9702	7475	FOOT; ENG.	000000	000000
8970275770	8-9702	7577	MANIFOLD; INLET	000000	000000
8970276010	8-9702	7601	GASKET; COVER	000000	000000
8970276011	8-9702	7601	GASKET; COVER	000000	000000
8970276230	8-9702	7623	CAP ASM; RADIATOR	000000	000000
8970277050	8-9702	7705	PUMP ASM; INJ.	000000	000000
8970277051	8-9702	7705	PUMP ASM; INJ.	000000	000003
8970277330			GASKET; OIL FILLER	000000	000000
8970277450			FRONT COIL	000000	000000
8970277460			SPRING; COIL, FRT	000000	000000
8970277490			C O I L	000000	000000
8970277780	8-9702	7778	COVER; REAR	000000	000000
8970278401			NOZZLE	000000	000000
8970279341	8-9702	7934	PROTECTOR; HEAT, EXH	000000	000000
8970283690	8-9702	8369	PLUG; GLOW	000570	000050

8970283900			SELF LOCKING	000000	000000
8970283901			SELF LOCKING	000000	000019
8970284751			MANIFOLD; EXH., WO/STUD	000000	000000
8970285250	8-9702	8525	COVER; TAPPET CHAMBER	000000	000012
8970285410	8-9702	8541	STUD; WATER PUMP	000000	000006
8970285860			GASKET; ELEMENT TO BODY	000000	000000
8970285890	8-9702	8589	PUMP ASM; WATER	000000	000000
8970285900	8-9702	8590	PUMP ASM; WATER W/GASKET	000000	000000
8970285901	8-9702	8590	PUMP ASM; WATER W/GASKET	000000	000003
8970285920	8-9702	8592	PUMP ASM;WATER, W/GASKET	000000	000000
8970285921	8-9702	8592	PUMP ASM;WATER, W/GASKET	000000	000003
8970285930	8-9702	8593	PUMP ASM; WATER W/GASKET	000000	000008
8970285950	8-9702	8595	PUMP ASM; WATER W/PACKING	000000	000000
8970285960	8-9702	8596	REPAIR KIT; WATER PUMP	000001	000000
8970285970	8-9702	8597	REPAIR KIT; WATER PUMP	000002	000000
8970285980	8-9702	8598	REPAIR KIT; W/P 3AB1	000000	000005
8970286110			FRT MUD GUARD; TF 4X2	000000	000000
8970286460			SHAFT;MAIN	000000	000000
8970286910	8-9702	8691	RING SET; PISTON	000000	000000
8970286962	8-9702	8696	SEDIMENTER	000000	000003
8970286971	8-9702	8697	BODY ASM; SEDIMENT	000000	000000
8970286972	8-9702	8697	BODY ASM; SEDIMENT	000000	000000
8970286973	8-9702	8697	BODY ASM; SEDIMENT	000003	000001
8970286980	8-9702	8698	SENSOR; FUEL	000000	000000
8970286990	8-9702	8699	PLUG ASM; FUEL	000006	000000
8970287000	8-9702	8700	SENSOR ASM.	000000	000000
8970287020	8-9702	8702	VALVE; INLET	000000	000031
8970287040	8-9702	8704	VALVE; EXHAUST	000000	000060
8970287060	8-9702	8706	EXHAUST VALVE	000000	000021
8970287070	8-9702	8707	EXHAUST VALVE	000000	000000
8970287071	8-9702	8707	EXHAUST VALVE	000000	000000
8970287072	8-9702	8707	EXHAUST VALVE	000000	000000
8970287150			CAP; EYE JOINT	000000	000002
8970287300	8-9702	8730	BOLT; FLYWHEEL	000000	000075
8970287330	8-9702	8733	BOLT; DAMPER	000000	000013
8970287380	8-9702	8738	BELT COOLING FAN	000000	000000
8970287481	8-9702	8748	GASKET; FRT COVER	000022	000033
8970289020	8-9702	8902	PIPE: TURBO FEED-OIL	000000	000000
8970289030	8-9702	8903	PIPE: TURBO OUTLET OIL	000001	000000
8970289060	8-9702	8906	PLATE	000000	000000
8970289610	8-9702	8961	VALVE;INLET	000000	000000
8970289670			RELAY LEVER	000000	000000
8970289671			LEVER ASM; RELAY	000000	000000
8970289690			LEVER ASM; R.	000000	000000
8970290050	8-9702	9005	PUMP ASM.; VACUUM	000000	000000
8970290540	8-9702	9054	ROTOR ASM	000002	000000
8970290550	8-9702	9055	STATOR ASM.	000002	000000

8970290560	8-9702	9056	BRACKET ASM.;REAR	000000	000000
8970290561	8-9702	9056	BRACKET ASM.; REAR	000001	000000
8970290570	8-9702	9057	RECTIFIER ASM	000002	000000
8970290580	8-9702	9058	RECTIFIER ASM.	000000	000000
8970290590	8-9702	9059	HOLDER	000000	000007
8970291040	8-9702	9104	HOUSING; CLU	000000	000000
8970291070	8-9702	9107	PUMP ASM; WATER	000000	000000
8970291071	8-9702	9107	PUMP ASM; WATER	000000	000000
8970291990	8-9702	9199	LEVER	000000	000007
8970292050	8-9702	9205	HOUSING; I/PUMP	000000	000000
8970292080	8-9702	9208	LEVER ASM; GUIDE	000000	000000
8970293320	8-9702	9332	GEAR; COUNTER	000000	000000
8970293350	8-9702	9335	GEAR; COUNTER	000000	000000
8970293410	8-9702	9341	BEARING; NEEDLE, 5TH	000001	000000
8970293711	8-9702	9371	BEARING;NEEDLE, 5TH	000000	000000
8970294102	8-9702	9410	HOSE; WATER CONN.	000000	000000
8970295573	8-9702	9557	HOUSING, THERMOSTAT	000000	000001
8970296000	8-9702	9600	BEARING;ROLLER,COUNTER SH	000000	000000
8970296001	8-9702	9600	BEARING;ROLLER,COUNTER SH	000000	000000
8970296002	8-9702	9600	BEARING;ROLLER,COUNTER SH	000000	000000
8970296003	8-9702	9600	BEARING;ROLLER,COUNTER SH	000001	000000
8970296004			BEARING;ROLLER,COUNTER SH	000000	000005
8970296220	8-9702	9622	SYNCHRONIZER ASM	000000	000000
8970297060	8-9702	9706	PUMP ASM.; INJ.	000000	000000
8970297270	8-9702	9727	PUMP ASM; OIL, W/STRAINER	000000	000000
8970297480	8-9702	9748	SPRING; GOV.	000000	000000
8970297490	8-9702	9749	PIPE	000000	000000
8970298000	8-9702	9800	STRAINER ASM.	000000	000000
8970298010	8-9702	9801	PIPE ASM.	000000	000000
8970298630	8-9702	9863	STARTER; NIKKO	000000	000000
8970298631	8-9702	9863	STARTER; NIKKO	000000	000000
8970298632	8-9702	9863	STARTER; NIKKO	000000	000000
8970298633	8-9702	9863	STARTER; NIKKO	000000	000000
8970298634	8-9702	9863	STARTER; NIKKO	000000	000000
8970298635	8-9702	9863	STARTER; NIKKO	000000	000000
8970298636	8-9702	9863	STARTER; NIKKO	000000	000000
8970298637	8-9702	9863	STARTER; NIKKO	000000	000017
8970298640	8-9702	9864	RING SET	000000	000007
8970298771			BOLT POWER ST.	000007	000000
8970299490	8-9702	9949	PUMP ASM; INJ.	000000	000000
8970299880	8-9702	9988	SW.; OV. HEAT	000000	000010
8970299890	8-9702	9989	PAN ASM; OIL	000000	000000
8970299920	8-9702	9992	SPACER; STARTER	000000	000000
8970301060	8-9703	0106	SYNCHRONIZER; REV & 5TH	000000	000000
8970301061	8-9703	0106	SYNCHRONIZER; REV & 5TH	000000	000000
8970301870	8-9703	0187	PUMP ASM; INJ.	000000	000000
8970302851	8-9703	0285	NOZZLE ASM.;	000000	000000

8970303870	8-9703	0387	BEARING; ARM.	000005	000003
8970303890	8-9703	0389	BRUSH (+)	000002	000000
8970304040	8-9703	0404	BOLT; THROUGH, STARTER	000000	000049
8970304190	8-9703	0419	GSKT; OIL PIPE, TURBO DRAIN	000107	000183
8970307590	8-9703	0759	PLUG	000000	000000
8970307600	8-9703	0760	NUT COOLER FIX	000000	000000
8970308420	8-9703	0842	CASE; W/BUSH,	000000	000000
8970308502	8-9703	0850	TRANSMISSION AS	000000	000000
8970308504	8-9703	0850	TRANSMISSION AS	000000	000000
8970308505	8-9703	0850	TRANSMISSION AS	000000	000000
8970308623	8-9703	0862	TRANSMISSION ASM; WO/SPD	000000	000000
8970308643	8-9703	0864	TRANSMISSION AS	000000	000000
8970308710	8-9703	0871	GEAR; COUNTER	000000	000000
8970308940	8-9703	0894	PLATE; ADJ. ACG	000000	000000
8970310450	8-9703	1045	FAN ASM.	000000	000000
8970310470	8-9703	1047	LEVER ASM.;	000000	000000
8970310490	8-9703	1049	LEVER ASM.; CUT FUEL	000000	000000
8970310510	8-9703	1051	PIPE ASM.; LEAK	000000	000001
8970310520	8-9703	1052	PIPE; FUEL-LEAK	000000	000002
8970310620	8-9703	1062	LEVER; TENSION	000003	000000
8970310630	8-9703	1063	LEVER	000001	000000
8970310720	8-9703	1072	SPACER; FAN	000000	000001
8970310750	8-9703	1075	PIPE; FUEL, I/PUMP	000002	000001
8970310760	8-9703	1076	BOLT; EYE	000000	000002
8970310790	8-9703	1079	COLLAR; REV MAIN	000003	000000
8970310800	8-9703	1080	LINK ROD	000000	000000
8970310810	8-9703	1081	ROD; LINK	000000	000000
8970311590	8-9703	1159	HOSE; VACUUM PUMP	000000	000000
8970311600	8-9703	1160	HOSE; VAC PUMP	000000	000000
8970312260	8-9703	1226	HOUSING ASM.; THERMOSTAT	000000	000000
8970312470			BUSHING	000000	000000
8970312490			P I N	000000	000000
8970313020	8-9703	1302	PULLEY	000000	000000
8970313220	8-9703	1322	ANGLEICH KIT	000000	000000
8970313501	8-9703	1350	PUMP ASM.;	000000	000000
8970313520	8-9703	1352	REPAIR KIT; WAT	000000	000000
8970314190	8-9703	1419	DUCT:WTR. TH/HSG-EXP TANK	000000	000000
8970314270	8-9703	1427	BOLT; SHAFT FIX	000000	000000
8970314350	8-9703	1435	BELT; COOLING	000004	000000
8970314670	8-9703	1467	PIPE ASM.; FUEL INJ.,NO.1	000000	000000
8970314671	8-9703	1467	PIPE ASM.; FUEL INJ.,NO.1	000000	000000
8970314672	8-9703	1467	PIPE ASM.; FUEL INJ.,NO.1	000000	000002
8970314680	8-9703	1468	PIPE ASM.; FUEL INJ.,NO.2	000000	000000
8970314681	8-9703	1468	PIPE ASM.; FUEL INJ.,NO.2	000000	000000
8970314682	8-9703	1468	PIPE ASM.; FUEL INJ.,NO.2	000000	000002
8970314690	8-9703	1469	PIPE ASM.; FUEL INJ.,NO.3	000000	000000
8970314691	8-9703	1469	PIPE ASM.; FUEL INJ.,NO.3	000000	000000

8970314692	8-9703	1469	PIPE ASM.; FUEL INJ.,NO.3	000000	000002
8970314701	8-9703	1470	PIPE ASM.; FUEL INJ.,NO.4	000000	000000
8970314702	8-9703	1470	PIPE ASM.; FUEL INJ.,NO.4	000000	000003
8970314860	8-9703	1486	PUMP ASM; INJ.	000000	000000
8970314861	8-9703	1486	PUMP ASM; INJ.	000000	000000
8970314863	8-9703	1486	PUMP ASM; INJ.	000000	000001
8970315010	8-9703	1501	BELT; COOLING	000000	000000
8970315030	8-9703	1503	BELT; A/COMP	000000	000011
8970315160	8-9703	1516	STAY;INL.MANIF.	000000	000003
8970316680	8-9703	1668	PLUG; LOCK BALL	000019	000014
8970316740	8-9703	1674	CLIP;RUBBER HOSE	000000	000008
8970316990	8-9703	1699	MANIFOLD:INLET	000000	000000
8970317101	8-9703	1710	SEAT; VALVE-INL	000000	000000
8970317102	8-9703	1710	SEAT; VALVE-INL	000000	000038
8970317110	8-9703	1711	SEAT; VALVE INSERT, EXH	000000	000027
8970317290	8-9703	1729	HOSE: PCV	000000	000000
8970317490	8-9703	1749	GUIDE; VALVE	000000	000000
8970317580	8-9703	1758	PLATE ASM; PRESSURE,CLU	000000	000000
8970317581	8-9703	1758	PLATE ASM; PRESSURE,CLU	000028	000125
8970317591	8-9703	1759	PLATE ASM,PRESS	000000	000000
8970317592	8-9703	1759	PLATE ASM,PRESS	000000	000013
8970317660	8-9703	1766	GASKET; TURBOCHARGER	000000	000000
8970317731	8-9703	1773	TURBOCHARGER	000000	000001
8970317741	8-9703	1774	ELEMENT; OIL FILTER	000000	000006
8970318860	8-9703	1886	GOVERNOR ASM.	000000	000000
8970320081			WHEEL; DISC	000000	000001
8970320250	8-9703	2025	ELEMENT ASM.; OIL COOLER	000001	000000
8970320900	8-9703	2090	ROTOR; GEN	000000	000000
8970320910	8-9703	2091	REGULATOR;VOLTAGE,GEN.	000000	000001
8970321101	8-9703	2110	COOLER ASM; OIL	000000	000000
8970321110	8-9703	2111	ELEMENT ASM.; OIL COOLER	000000	000000
8970321120	8-9703	2112	PLATE: ADAPTOR	000000	000000
8970321131	8-9703	2113	RELAY; STARTER	000000	000000
8970321530	8-9703	2153	FAN PLATE KIT	000000	000032
8970321610	8-9703	2161	PLUNGER ASM.	000000	000000
8970321620	8-9703	2162	VALVE ASM; DELIVERY	000000	000000
8970321630	8-9703	2163	LEVER	000001	000000
8970321640	8-9703	2164	LEVER	000000	000000
8970322310	8-9703	2231	PUMP ASM; INJ.	000000	000000
8970322311	8-9703	2231	PUMP ASM; INJ.	000000	000000
8970323040	8-9703	2304	RETAINER; ROTOR,GEN	000000	000000
8970323050	8-9703	2305	SCREW; FR COVER	000000	000000
8970323080	8-9703	2308	HOLDER; BUSHING,GEN	000000	000000
8970323090	8-9703	2309	SHEET; BRUSH,GEN	000000	000000
8970323100	8-9703	2310	BRUSH; GEN	000000	000024
8970323120	8-9703	2312	BUSHING; INSULATION,TERMI	000000	000000
8970323130	8-9703	2313	SCREW; RECTIFIER,GEN	000000	000000

8970323140	8-9703	2314	SCREW; RECTIFIER, GEN	000000	000000
8970323470			MOTOR ASM, ENG	000000	000000
8970323920	8-9703	2392	MAGNET VALVE	000002	000000
8970324990	8-9703	2499	BRACKET; AC-GENERATOR FIX	000000	000000
8970324991	8-9703	2499	BRACKET; AC-GENERATOR FIX	000000	000000
8970325040	8-9703	2504	HOSE: FILTER TO PUMP	000000	000000
8970328461	8-9703	2846	CYLINDER; SLAVE	000000	000000
8970328471			CYLINDER; SLAVE	000000	000000
8970328490	8-9703	2849	CYLINDER; SLAVE CLUTCH	000000	000000
8970328491	8-9703	2849	CYLINDER; SLAVE CLUTCH	000051	000203
8970328511			CLUTCH SLAVE	000000	000000
8970329280	8-9703	2928	GASKET; ENGINE HSG	000000	000006
8970329450	8-9703	2945	BOLT; FRT.END BAR	000000	000000
8970329680	8-9703	2968	LEVER; GOV.	000000	000000
8970329710	8-9703	2971	LEVER	000000	000000
8970329720	8-9703	2972	FLYWEIGHT ASM.	000000	000000
8970329770	8-9703	2977	STUD; ADAPTER	000000	000000
8970329771	8-9703	2977	STUD; EXH PIPE	000000	000000
8970330920	8-9703	3092	BLOCK; SHIFT, TRNSFR SELCT	000000	000000
8970330921	8-9703	3092	BLOCK; SHIFT, TRNSFR SELCT	000000	000000
8970331140	8-9703	3114	HOUSING ASM; INJ. PUMP	000000	000000
8970331150	8-9703	3115	LEVER	000000	000000
8970331170	8-9703	3117	RADIATOR ASM.;	000000	000000
8970331732	8-9703	3173	OIL PUMP	000000	000000
8970331742			OIL PUMP	000000	000000
8970331780	8-9703	3178	PUMP ASM; OIL	000000	000000
8970331782	8-9703	3178	PUMP ASM; OIL	000000	000000
8970331783	8-9703	3178	PUMP ASM; OIL	000000	000000
8970331784	8-9703	3178	PUMP ASM; OIL	000000	000000
8970331790	8-9703	3179	PUMP ASM; OIL	000000	000000
8970331791	8-9703	3179	PUMP ASM; OIL	000000	000000
8970331792	8-9703	3179	PUMP ASM; OIL	000000	000000
8970331793	8-9703	3179	PUMP ASM; OIL	000000	000000
8970331822	8-9703	3182	PUMP ASM; OIL	000002	000000
8970333485			BRACKET; CAB MT	000000	000007
8970333920	8-9703	3392	PIPE; WATER-OIL COOLER	000000	000000
8970336390			CYLINDER ASM; BRAKE	000000	000001
8970336730	8-9703	3673	VALVE STEM SEAL/GUIDE	000008	000026
8970336850	8-9703	3685	PIPE ASM; FUEL-LEAK	000000	000000
8970337040			BOOT SLV; FRT DISC	000000	000000
8970337050			BOOT GUIDE, PIN	000000	000000
8970338020	8-9703	3802	CORE; OIL COOLER	000000	000000
8970338480	8-9703	3848	PULLEY; CRANK 3LB1	000000	000000
8970339891	8-9703	3989	DRUM; PARKING BRK	000020	000004
8970341270	8-9703	4127	PAN ASM.; OIL, W/DR. PLUG	000000	000000
8970341271	8-9703	4127	PAN ASM.; OIL, W/DR. PLUG	000000	000000
8970343790	8-9703	4379	VALVE; INLET	000000	000000

8970343791	8-9703	4379	VALVE; INLET	000001	000045
8970344202	8-9703	4420	PIPE ASM; OIL	000000	000004
8970344210	8-9703	4421	PUMP ASM; INJ.	000000	000000
8970344211	8-9703	4421	PUMP ASM; INJ.	000000	000000
8970344340	8-9703	4434	METAL KIT; CON ROD STD	000000	000000
8970345532	8-9703	4553	BRK ASM; PARKING	000000	000001
8970345740	8-9703	4574	PISTON; STD 3LB1	000000	000000
8970345831	8-9703	4583	GEAR; PTO	000000	000000
8970345832	8-9703	4583	GEAR; PTO	000000	000001
8970345871	8-9703	4587	CENTER	000000	000000
8970345880	8-9703	4588	MANIFOLD; EXH.	000000	000000
8970345881	8-9703	4588	MANIFOLD; EXH.	000000	000000
8970345882	8-9703	4588	MANIFOLD; EXH.	000000	000000
8970345900	8-9703	4590	GEAR; I/PUMP	000000	000000
8970345914	8-9703	4591	PUMP ASM; INJ.	000000	000000
8970345915	8-9703	4591	PUMP ASM; INJ.	000000	000000
8970345916	8-9703	4591	PUMP ASM; INJ.	000000	000026
8970345920	8-9703	4592	GEAR; CRANK	000000	000000
8970345921	8-9703	4592	GEAR; CRANK	000000	000000
8970345944	8-9703	4594	LEVER ASM; GUIDE	000000	000000
8970345945	8-9703	4594	LEVER ASM; GUIDE	000000	000001
8970346090	8-9703	4609	RING SET; 3LB1	000000	000044
8970346140	8-9703	4614	PIPE; INLET-AIR	000021	000000
8970346152	8-9703	4615	SHIM; I/PUMP T=0.2	000000	000000
8970346162	8-9703	4616	SHIM; I/PUMP T=0.3	000000	000000
8970346172	8-9703	4617	SHIM; I/PUMP T=0.4	000000	000000
8970346182	8-9703	4618	SHIM; I/PUMP T=0.5	000000	000000
8970346192	8-9703	4619	SHIM; I/PUMP T=0.6	000000	000000
8970346202	8-9703	4620	SHIM; I/PUMP T=0.7	000000	000000
8970346212	8-9703	4621	SHIM; I/PUMP T=0.8	000000	000000
8970346222	8-9703	4622	SHIM; I/PUMP T=1.0	000000	000000
8970346232	8-9703	4623	SHIM; I/PUMP T=1.2	000000	000000
8970346241	8-9703	4624	PIPE ASM; INJECTION	000000	000002
8970346251	8-9703	4625	PIPE; FUEL, FEED	000000	000000
8970346261	8-9703	4626	PIPE; FUEL, LEAK OFF	000000	000030
8970346270	8-9703	4627	VALVE; INLET 3LB1	000000	000000
8970346282	8-9703	4628	VALVE; EXHAUST 3LB1	000000	000000
8970346283	8-9703	4628	VALVE; EXHAUST 3LB1	000000	000000
8970346284	8-9703	4628	VALVE; EXHAUST 3LB1	000000	000080
8970346291	8-9703	4629	SPRING; VALVE	000000	000131
8970346300	8-9703	4630	TAPPET: 3L	000000	000000
8970346301	8-9703	4630	TAPPET: 3L	000000	000031
8970346331	8-9703	4633	CONNECTOR; GLOW PLUG	000000	000000
8970346333	8-9703	4633	CONNECTOR; GLOW PLUG	000000	000007
8970346361	8-9703	4636	COVER; GOV. LEVER	000000	000000
8970346362	8-9703	4636	COVER; GOV. LEVER	000000	000000
8970346372	8-9703	4637	LEVER; TENSION	000000	000000

8970346374	8-9703	4637	LEVER; TENSION	000000	000000
8970346375	8-9703	4637	LEVER; TENSION	000000	000000
8970346376	8-9703	4637	LEVER; TENSION	000000	000000
8970346381	8-9703	4638	SHIFTER; GOVERNOR	000000	000000
8970346382	8-9703	4638	SHIFTER; GOVERNOR	000000	000000
8970346383	8-9703	4638	SHIFTER; GOVERNOR	000000	000005
8970346393	8-9703	4639	PLATE; LINK	000000	000000
8970346420	8-9703	4642	LEVER; MAIN SPRING	000000	000000
8970346422	8-9703	4642	LEVER; MAIN SPRING	000001	000000
8970346423	8-9703	4642	LEVER; MAIN SPRING	000000	000000
8970346424	8-9703	4642	LEVER; MAIN SPRING	000000	000001
8970346431	8-9703	4643	SPRING; START	000000	000000
8970346432	8-9703	4643	SPRING; START	000000	000000
8970346433	8-9703	4643	SPRING; START	000000	000000
8970348800	8-9703	4880	COVER; DUST,SHIFT FO	000000	000000
8970350831			SHOE ASM; BRAKE	000000	000000
8970350840			SHOE, BRK, FRT	000000	000000
8970350851			SHOE; BRK, FRT	000000	000006
8970353880			SIDE GEAR; DIFF.	000002	000000
8970354550	8-9703	5455	GEAR SET; FINAL DRIVE	000000	000002
8970355290	8-9703	5529	TRANSMISSION; AUTO,W/TORQ	000000	000000
8970355542	8-9703	5554	SHAFT; TOP GEAR,TRAN	000000	000000
8970356190			YOKE; FLANGE, PROP SHAFT	000000	000000
8970356191			YOKE; FLANGE, PROP SHAFT	000000	000000
8970356940	8-9703	5694	BREATHER;AIR,TRANSFR CASE	000000	000000
8970356942	8-9703	5694	BREATHER;AIR,TRANSFER CAS	000000	000000
8970357516			BAR, FRT BUMPER	000000	000000
8970357526			BAR, FRT BUMPER	000000	000000
8970358180	8-9703	5818	FILTER:OIL COOLER ASM.	000000	000000
8970358181	8-9703	5818	FILTER:OIL COOLER ASM.	000000	000000
8970358590	8-9703	5859	SPRING;HINGE,FUEL FILLER	000000	000000
8970358800	8-9703	5880	PACKING; INL. PIPE	000000	000000
8970358830	8-9703	5883	GASKET; INL PIPE	000000	000000
8970358831	8-9703	5883	GASKET; INL PIPE	000000	000039
8970360630			PLATE DRIVE	000000	000000
8970361500	8-9703	6150	COVER; RR,TRANS	000000	000000
8970361670	8-9703	6167	SEAL;OIL,RR COVER	000000	000000
8970361970	8-9703	6197	SHAFT; ROCKER ARM	000000	000009
8970363351	8-9703	6335	CUP;SEALING,CYL HEAD	000134	004064
8970363992	8-9703	6399	BLOCK ASM; CYL.	000000	000000
8970365501	8-9703	6550	CUP SEALING,C/BL FRT & RR	000000	000052
8970366630	8-9703	6663	GOVERNOR ASM; INJ.	000000	000000
8970366650	8-9703	6665	PUMP ASM; INJ.	000000	000000
8970366680	8-9703	6668	BRKT ASM.; AIR CLEAN	000000	000000
8970367141	8-9703	6714	STUD; TRANSFER CASE	000000	000000
8970367150	8-9703	6715	BOLT; TRANSFER CASE	000000	000000
8970367310	8-9703	6731	HOSE; AIR CLEANER	000000	000000

8970367712	8-9703	6771	PAN ASM; OIL	000000	000000
8970367713	8-9703	6771	PAN ASM; OIL	000000	000000
8970367714	8-9703	6771	PAN ASM; OIL	000000	000009
8970368240	8-9703	6824	PUMP; FUEL, ELECTRIC	000000	000000
8970368241	8-9703	6824	PUMP; FUEL, ELECTRIC	000000	000000
8970368250	8-9703	6825	PUMP ASM; FUEL	000000	000000
8970368251	8-9703	6825	PUMP ASM; FUEL	000000	000000
8970368340	8-9703	6834	SPRING; OIL PUMP	000000	000000
8970369250	8-9703	6925	HOSE; RUBBER,	000001	000000
8970369260	8-9703	6926	NIPPLE; A/COMP.	000000	000000
8970369560	8-9703	6956	PULLEY: FAN	000000	000000
8970369570	8-9703	6957	PLATE; ADJ/GEN	000000	000005
8970369591	8-9703	6959	BOLT; CYL. HEAD	000000	000141
8970371580	8-9703	7158	HOSE; RUBBER	000000	000000
8970371581	8-9703	7158	HOSE; RUBBER	000000	000000
8970371620	8-9703	7162	PAN ASM; OIL	000000	000000
8970371670	8-9703	7167	ROTOR ASM.	000002	000000
8970371680	8-9703	7168	STATOR ASM.	000000	000000
8970371690	8-9703	7169	COVER ASM; FRT	000000	000000
8970371700	8-9703	7170	COVER ASM; RR	000000	000000
8970371710	8-9703	7171	COVER; RR	000000	000000
8970371720	8-9703	7172	REGULATOR ASM; BRUSH	000001	000000
8970371730	8-9703	7173	BRUSH	000000	000000
8970371740	8-9703	7174	DIODE ASM.	000001	000000
8970371750	8-9703	7175	NUT; PULLEY	000000	000000
8970372370	8-9703	7237	GOVERNOR ASM.	000000	000000
8970372390	8-9703	7239	COUPLING	000000	000000
8970372400	8-9703	7240	GOVERNOR ASM.	000000	000000
8970372470	8-9703	7247	BOLT; STRIKER, TAILGATE	000000	000000
8970372480	8-9703	7248	PIPE; OIL/VAC-PUMP	000000	000000
8970372482	8-9703	7248	PIPE; OIL/VAC-PUMP	000000	000000
8970372640			VAVLE; OVER FLOW	000000	000020
8970372760	8-9703	7276	GASKET; FRT COVER TO HS	000000	000002
8970373120	8-9703	7312	HOUSING; INJ. PUMP	000000	000000
8970373680	8-9703	7368	PAN ASM.; OIL	000000	000000
8970373700	8-9703	7370	PAN; OIL	000000	000000
8970373890	8-9703	7389	NIPPLE; OIL, C/BLOCK	000000	000000
8970373900	8-9703	7390	HOSE; RUBBER	000001	000000
8970374200			LOCK ASM;	000000	000000
8970374640			HOSE; WATER, BY-PASS	000000	000040
8970374670			SUCTION HOSE; P/S TANK	000000	000000
8970374672			SUCTION HOSE; P/S TANK	000000	000000
8970375200	8-9703	7520	AUTO STARTING BOARD	000000	000000
8970375210	8-9703	7521	AUTO STARTING BOARD	000000	000000
8970375220	8-9703	7522	AUTO STARTING BOARD	000000	000000
8970375230	8-9703	7523	AUTO STARTING BOARD	000000	000000
8970375930	8-9703	7593	COVER; FRT.	000000	000000

8970375932	8-9703	7593	COVER; FRT.	000000	000000
8970375933	8-9703	7593	COVER; FRT.	000000	000000
8970375940	8-9703	7594	GEAR; IDLE W/BUSHING	000003	000000
8970376050			RIGHT DOOR MIRROR	000000	000001
8970376110			MIRROR ASM; DOOR	000000	000000
8970376150	8-9703	7615	GENERATOR: 12V/50A	000000	000000
8970376860	8-9703	7686	SEAT; VALVE INSERT	000000	000000
8970376861	8-9703	7686	SEAT; VALVE INSERT	000000	000084
8970376880	8-9703	7688	JOINT: HOUSE	000000	000000
8970376890	8-9703	7689	CASE;GEAR	000001	000000
8970377410	8-9703	7741	SEDIMENTER ASM.	000000	000000
8970377411	8-9703	7741	SEDIMENTER ASM.	000000	000000
8970377412	8-9703	7741	SEDIMENTER ASM.	000001	000000
8970377413	8-9703	7741	SEDIMENTER ASM.	000000	000000
8970378620	8-9703	7862	GASKET; EXH. MAN.	000000	000000
8970378622	8-9703	7862	GASKET; EXH. MAN.	000000	000018
8970378870	8-9703	7887	BOLT*	000000	000000
8970379080			HOSE RETURN; P/S	000000	000000
8970381915	8-9703	8191	HOUSING; THERMOSTAT	000000	000007
8970382050			FLEX HOSE	000000	000000
8970382160	8-9703	8216	GEAR: CRANK, BALANCE DRIV	000000	000000
8970382800	8-9703	8280	PUMP ASM; INJ.	000000	000000
8970384030	8-9703	8403	PULLEY; FAN	000000	000000
8970384130	8-9703	8413	PULLEY; CRANK (3 GROOVE)	000000	000000
8970384131	8-9703	8413	PULLEY; CRANK (3 GROOVE)	000000	000000
8970385181			TURBO	000000	000000
8970386480			RHD H/L ASSY	000000	000000
8970386490			HEADLIGHT LH	000000	000000
8970386500			LAMP ASM; HD	000000	000000
8970386510			LAMP ASM; HD	000000	000000
8970386580			PIPE ASM; FUEL, LEAK OFF	000000	000000
8970386780	8-9703	8678	LEVER; "B" ENGINE	000000	000000
8970387350	8-9703	8735	PINION	000000	000000
8970387360	8-9703	8736	BRKT ASM.; FRT	000000	000000
8970387370	8-9703	8737	BRKT ASM.; CTR	000000	000000
8970387380	8-9703	8738	PACKING	000000	000000
8970387840	8-9703	8784	PLUG*	000013	000000
8970387850	8-9703	8785	PLUG*	000008	000000
8970388021	8-9703	8802	BUSH; LEVER	000000	000001
8970388941			GUIDE ASM; AIR	000000	000000
8970389390			WASHER; FLYWHEEL	000000	000002
8970391956			RUBBER; CUSHION	000000	000001
8970391980			GAUGE ASM.;	000000	000003
8970392001	8-9703	9200	GASKET; INJ PUMP	000335	000574
8970392642	8-9703	9264	COVER; ANGLEICH	000000	000000
8970392643	8-9703	9264	COVER; ANGLEICH	000000	000000
8970392644	8-9703	9264	COVER; ANGLEICH	000000	000004

8970392660	8-9703	9266	FORK ASM; 127	000000	000000
8970393201			SHOCK ASM; FRT	000000	000000
8970393203			SHOCK ASM; FRT	000000	000002
8970393221			SHOCKS; REAR ASM	000000	000000
8970393251			LEVER ASM;RELA	000000	000008
8970394180	8-9703	9418	GAUGE ASM; OIL LEVEL	000000	000000
8970394732	8-9703	9473	MANIFOLD; EXHAUST	000000	000000
8970394733	8-9703	9473	MANIFOLD; EXHAUST	000000	000211
8970394952	8-9703	9495	PIN; CONTROL	000000	000000
8970394953	8-9703	9495	PIN; CONTROL	000001	000004
8970395200			BUSHING; RR STA	000000	000019
8970395260	8-9703	9526	CUP; SEALING,CAMSHAFT	000003	000013
8970395370	8-9703	9537	SPRING; GOV	000000	000000
8970395380	8-9703	9538	SPRINGCAPSULE;IDLE CONT	000000	000000
8970395461	8-9703	9546	SPRING; RETURN	000000	000005
8970395746			LEVER;GUIDE GOVERNOR	000000	000000
8970395820	8-9703	9582	METAL KIT; CRANK	000000	000014
8970395840	8-9703	9584	SCREW; SET	000000	000000
8970395841	8-9703	9584	SCREW; SET	000000	000000
8970395842	8-9703	9584	SCREW; SET	000001	000000
8970396461			PIN; GUIDE LEVER	000000	000000
8970396510			FAN ASM; COOLING	000001	000124
8970396511	8-9703	9651	FAN ASM; COOLING	000000	000000
8970396570	8-9703	9657	PUMP ASM; INJ.	000000	000000
8970396571	8-9703	9657	PUMP ASM; INJ.	000000	000003
8970397040			CLUTCH; SLAVE CYLINDER	000000	000001
8970397770			GASKET; TURBOCHARGER TO E	000000	000000
8970397771	8-9703	9777	GASKET; TURBOCHARGER TO E	000284	000565
8970397964			BAR; BACK, FRT	000000	000000
8970397974			BAR; BACK, FRT	000000	000000
8970398340	8-9703	9834	PUMP; FUEL, ELEC	000000	000123
8970402890	8-9704	0289	HOSE; OIL COOLER INLET	000000	000000
8970403771	8-9704	0377	GAUGE ASM.; OIL	000000	000000
8970404150	8-9704	0415	SOLENOID ASM; ENG-STOPPER	000000	000000
8970404151	8-9704	0415	SOLENOID ASM; ENG-STOPPER	000000	000001
8970404160	8-9704	0416	RELAY ASM; SAFETY	000000	000000
8970404170	8-9704	0417	HARNESS; WIRE	000000	000000
8970404940	8-9704	0494	HOLDER; BUSHING,GEN	000003	000000
8970405010	8-9704	0501	TIMER; GLOW PLUG	000000	000046
8970405020	8-9704	0502	TIMER ASM; GL/PLG	000000	000005
8970405202	8-9704	0520	CRANKSHAFT ASM.	000000	000000
8970405203	8-9704	0520	CRANKSHAFT ASM.	000000	000000
8970405204	8-9704	0520	CRANKSHAFT ASM.	000000	000003
8970405810	8-9704	0581	GAUGE ASM; OIL LEVEL	000000	000001
8970405840	8-9704	0584	PLATE: ADJ. ALT	000068	000000
8970406420	8-9704	0642	FLYWHEEL	000000	000000
8970407560	8-9704	0756	FLYWHEEL ASM.	000000	000000

8970407600	8-9704	0760	STUD; HOUSING, L1-115	000000	000000
8970407640	8-9704	0764	BELT; FAN	000000	000110
8970408090	8-9704	0809	HOSE; FUEL	000000	000000
8970408091	8-9704	0809	HOSE; FUEL	000003	000000
8970410220	8-9704	1022	BRACKET; SURGE TANK	000000	000012
8970410800	8-9704	1080	PUMP ASM; OIL	000000	000001
8970410810	8-9704	1081	COVER; OIL PUMP	000000	000000
8970410820	8-9704	1082	CONNECTOR	000000	000000
8970410830	8-9704	1083	BRACKET; SOLENOID	000000	000000
8970414210	8-9704	1421	PIPE; DRAIN, RR CVR STARTER	000000	000007
8970414220	8-9704	1422	BOLT; THROUGH STARTER	000000	000000
8970414460	8-9704	1446	FILTER ASM; FUEL, W/SEDMT	000000	000000
8970414470	8-9704	1447	BODY; SEDIMENTER	000000	000000
8970414980	8-9704	1498	BOLT; IDLER SHAFT, REV.	000000	000000
8970415211	8-9704	1521	PUMP ASM; FEED	000000	000000
8970415212	8-9704	1521	PUMP ASM; FEED	000000	000001
8970415400			PAD KIT; RR DISC	000000	000000
8970416600	8-9704	1660	LEVER; SWIVAL	000000	000002
8970416610	8-9704	1661	HOUSING; PUMP FUEL INJ	000000	000000
8970416620	8-9704	1662	ADAPTER; HOUSING	000000	000000
8970416640	8-9704	1664	PLUNGER ASM.	000000	000005
8970416680	8-9704	1668	DIAPHRAGM	000003	000000
8970416771	8-9704	1677	TUBE; GUIDE, OIL	000000	000000
8970416781	8-9704	1678	TUBE; GUIDE	000000	000000
8970416790	8-9704	1679	COMPRESSOR ASM; AIR	000001	000000
8970416800	8-9704	1680	CASE; CRANK	000000	000000
8970417170	8-9704	1717	BAND; A/C	000000	000001
8970417190	8-9704	1719	CUSHION	000000	000001
8970417211	8-9704	1721	PIPE; INLET-AIR	000000	000060
8970417670			HEAD GASKET	000000	000000
8970417870			HOSE; INLET	000000	000001
8970417930	8-9704	1793	FLYWHEEL ASM.	000000	000000
8970417940	8-9704	1794	PUMP ASM.; INJ.	000000	000000
8970417941	8-9704	1794	PUMP ASM.; INJ.	000000	000000
8970417950	8-9704	1795	PUMP ASM: INJ. PFR	000000	000000
8970417951	8-9704	1795	PUMP ASM: INJ. PFR	000000	000001
8970417971	8-9704	1797	GAUGE; OIL LEVEL	000000	000000
8970418110	8-9704	1811	CRANKSHAFT	000000	000000
8970418290	8-9704	1829	PIPE; OIL, TURBO DRAIN	000000	000014
8970418330	8-9704	1833	PUMP ASM.; INJ. FIG.52	000000	000000
8970418331	8-9704	1833	PUMP ASM.; INJ. FIG.52	000000	000002
8970419570	8-9704	1957	RADIATOR ASM	000000	000000
8970419710			PINION; DIFF.	000000	000000
8970420260	8-9704	2026	CLEANER ASM; AIR	000000	000009
8970420271	8-9704	2027	SILENCER ASM; EXH.	000000	000000
8970420272	8-9704	2027	SILENCER ASM; EXH.	000000	000000
8970420273	8-9704	2027	SILENCER ASM; EXH.	000000	000000

8970420280	8-9704	2028	GASKET	000000	000144
8970420281	8-9704	2028	GASKET	000000	000000
8970420360	8-9704	2036	GOVERNOR ASM.	000000	000000
8970420820	8-9704	2082	PUMP ASM; INJ.	000000	000000
8970420840	8-9704	2084	GOVERNOR ASM.	000000	000000
8970420890	8-9704	2089	PUMP ASM; WATER	000000	000000
8970420961	8-9704	2096	HOSE; WATER L=870	000000	000000
8970421940	8-9704	2194	CASE; SEDIMENTER	000001	000000
8970422431			RR MUD GUARD; TF 4X4	000000	000000
8970422440			RR MUD GUARD; TF 4X2	000000	000000
8970422621	8-9704	2262	METAL; THR., WET CLUTCH	000000	000001
8970422661			P/S PULLEY	000000	000002
8970422690			BELT; TIMING	000000	000000
8970423130	8-9704	2313	CLEANER ASM; AIR	000000	000000
8970423140	8-9704	2314	CASE; A/CLNR	000000	000000
8970423150	8-9704	2315	PAN ASM; DUST	000000	000000
8970423160	8-9704	2316	BAFFLE ASM.	000000	000002
8970423170	8-9704	2317	ELEMENT KIT	000000	000015
8970423180	8-9704	2318	WING NUT	000000	000001
8970423190	8-9704	2319	WASHER	000006	000000
8970423340	8-9704	2334	CAP ASM; RADIATOR,W/CHAIN	000000	000000
8970423430	8-9704	2343	PLUG*	000000	000000
8970423670	8-9704	2367	PULLEY; BALANCER	000000	000000
8970423910	8-9704	2391	GEAR; CR/SHF,PTO	000000	000000
8970426290	8-9704	2629	ROTOR; GEN.	000000	000000
8970426690	8-9704	2669	DISC AMS; CLUTCH	000000	000000
8970426720	8-9704	2672	DISK ASSY; CLUTCH	000000	000000
8970426800			TIMING BELT	000000	000000
8970426820			PLATE; DRIVEN	000002	000008
8970426830	8-9704	2683	PLATE; DRIVEN	000002	000000
8970426840	8-9704	2684	DISC ASM; CLUTCH	000000	000000
8970426850	8-9704	2685	DISC; CLUTCH	000000	000000
8970426880	8-9704	2688	CLUTCH DISC ASM.	000001	000000
8970426920	8-9704	2692	PLATE; DRIVEN	000000	000000
8970427050	8-9704	2705	PIPE ASM.;	000000	000000
8970427062	8-9704	2706	BRACKET ASM; ENG. CONTROL	000000	000000
8970427063	8-9704	2706	BRACKET ASM; ENG. CONTROL	000000	000000
8970427092	8-9704	2709	PIPE ASM.; OIL, P.T.	000000	000000
8970427801	8-9704	2780	WATER OUTLET	000000	000000
8970428000	8-9704	2800	HOUSING; FLYWHEEL	000000	000000
8970428001	8-9704	2800	HOUSING; FLYWHEEL	000000	000003
8970428010	8-9704	2801	COVER;DUST,FLYWL.HSG.RET.	000000	000002
8970428031			CARBURETOR ASM	000000	000000
8970428200	8-9704	2820	TIMER ASM.	000000	000000
8970428801	8-9704	2880	COVER	000000	000000
8970429331			SHOE ASM;BRK(NON-ASBESTOS	000000	000016
8970429970	8-9704	2997	STARTER; DENSO	000000	000000

8970429971	8-9704	2997	STARTER; DENSO	000000	000000
8970429972	8-9704	2997	STARTER; DENSO	000000	000000
8970431270	8-9704	3127	PUMP ASM; INJ.	000000	000000
8970431271	8-9704	3127	PUMP ASM; INJ.	000000	000000
8970431281	8-9704	3128	GOVERNOR ASM; MECHANICAL	000000	000000
8970431870	8-9704	3187	PACKING	000000	000000
8970431871	8-9704	3187	PACKING	000000	000000
8970431880	8-9704	3188	FAN ASM.	000000	000000
8970431881	8-9704	3188	FAN ASM.	000000	000000
8970431882	8-9704	3188	FAN ASM.	000000	000002
8970431940	8-9704	3194	PAN ASM; OIL	000000	000000
8970431971	8-9704	3197	PIPE;WATER BY-PASS	000000	000000
8970431980	8-9704	3198	PUMP ASM; INJ.	000000	000000
8970432011	8-9704	3201	PUMP ASM; INJ.	000000	000000
8970432480	8-9704	3248	HOUSING; FLYWHEEL	000000	000000
8970432870	8-9704	3287	LINER CYL.	000000	000000
8970434080	8-9704	3408	PAN ASM; OIL	000000	000000
8970434170	8-9704	3417	ROD; LINK	000000	000000
8970435251	8-9704	3525	PUMP ASM; INJ.	000000	000000
8970435510	8-9704	3551	FAN BELT	000000	000000
8970436980	8-9704	3698	COVER	000054	000000
8970437410	8-9704	3741	PIPE ASM:OIL,PIST.COOLER	000000	000000
8970437411	8-9704	3741	PIPE ASM:OIL,PIST.COOLER	000000	000000
8970437412	8-9704	3741	PIPE ASM:OIL,PIST.COOLER	000000	000000
8970437440	8-9704	3744	PLUG: GLOW O.O.S.	000000	000008
8970437441	8-9704	3744	PLUG: GLOW O.O.S.	000000	000000
8970437442	8-9704	3744	PLUG: GLOW O.O.S.	000000	000000
8970437443	8-9704	3744	PLUG: GLOW O.O.S.	000000	000000
8970438050	8-9704	3805	ANGLEICH KIT	000000	000000
8970438880	8-9704	3888	BOLT;LK PLATE BLOWER HSG	000000	000000
8970438890	8-9704	3889	CLAMP	000000	000000
8970438980	8-9704	3898	SCREW	000000	000000
8970439220	8-9704	3922	BOLT; FLYWHL FIX L=124.5	000000	000000
8970439250	8-9704	3925	GAUGE ASM; OIL LEVEL	000000	000039
8970439313	8-9704	3931	HEAD ASM; CYL.	000000	000000
8970439314	8-9704	3931	HEAD ASM; CYL.	000000	000000
8970439315	8-9704	3931	HEAD ASM; CYL.	000000	000000
8970439332	8-9704	3933	GASKET; CYL. HEAD	000000	000022
8970439340	8-9704	3934	FLYWHEEL ASM.	000000	000002
8970439360	8-9704	3936	PAN ASM; OIL	000000	000000
8970439361	8-9704	3936	PAN ASM; OIL	000000	000000
8970439362	8-9704	3936	PAN ASM; OIL	000000	000000
8970439380	8-9704	3938	OIL PAN	000000	000000
8970439410	8-9704	3941	STRAINER ASM; OIL	000004	000000
8970439420	8-9704	3942	GAUGE; OIL LEVEL	000000	000000
8970439421	8-9704	3942	GAUGE; OIL LEVEL	000000	000000
8970439531	8-9704	3953	SHAFT ASM; ENG. CONTROL	000000	000000

8970439540	8-9704	3954	CLEANER ASM; AIR	000000	000000
8970439550	8-9704	3955	CLEANER ASM; AIR	000000	000000
8970439560	8-9704	3956	NUT; WING, A/CLEANER	000000	000000
8970439574	8-9704	3957	BLOCK ASM; CYL.	000000	000000
8970439577	8-9704	3957	BLOCK ASM; CYL.	000000	000000
8970440220	8-9704	4022	PIPE; AIR IN	000000	000000
8970440370			GLOW PLUGS	000000	000000
8970440371			GLOW PLUGS	000000	000000
8970440372			GLOW PLUGS	000000	000000
8970441100	8-9704	4110	REPAIR KIT; OIL PUMP	000001	000005
8970441110	8-9704	4111	GEAR SET; OIL PUMP	000001	000000
8970441120	8-9704	4112	REPAIR KIT; OIL PUMP C24	000000	000000
8970441500			BOLT; THROUGH, STARTER	000000	000000
8970441792	8-9704	4179	HEAD ASM; CYL.	000000	000000
8970442071	8-9704	4207	OIL FILTER	000000	000000
8970442080	8-9704	4208	BODY ASM.; OIL FILTER	000000	000000
8970442140	8-9704	4214	BLOCK ASM; CYL.	000000	000000
8970442141	8-9704	4214	BLOCK ASM; CYL.	000000	000000
8970442160	8-9704	4216	HEAD ASM; CYL.	000000	000000
8970442162	8-9704	4216	HEAD ASM; CYL.	000000	000000
8970442261			AIR FILTER	000000	000000
8970442270			AIR FILTER	000000	000000
8970442400	8-9704	4240	PULLEY ASM; IDLE	000002	000000
8970443370	8-9704	4337	PIPE; WATER, TURBO OU	000000	000000
8970443380	8-9704	4338	ANGLEICH KIT	000000	000000
8970443390	8-9704	4339	ANGLEICH KIT	000000	000000
8970443490	8-9704	4349	STRAINER	000000	000000
8970443630	8-9704	4363	ARMATURE	000019	000000
8970443660	8-9704	4366	WIRE ASM; LEAD	000000	000000
8970443670	8-9704	4367	BRACKET ASM; FRT	000000	000000
8970443680	8-9704	4368	METAL	000002	000000
8970443690	8-9704	4369	PLATE	000000	000000
8970443700	8-9704	4370	SWITCH ASM; MAG.	000000	000006
8970443710	8-9704	4371	SWITCH	000000	000000
8970443711	8-9704	4371	SWITCH	000000	000000
8970443720	8-9704	4372	SHAFT ASM.	000000	000001
8970443730	8-9704	4373	STOPPER; PINION	000003	000000
8970443740	8-9704	4374	CLIP; RING	000010	000000
8970443750	8-9704	4375	BRACKET; CENTER	000001	000000
8970443760	8-9704	4376	COVER ASM; RR	000001	000000
8970443770	8-9704	4377	SEAL ASM.	000000	000000
8970444000			NUT; CTR BOLT, LEAF SPR, RR	000059	000008
8970444180	8-9704	4418	SWITCH ASM; STARTER	000000	000036
8970446060	8-9704	4606	HEATER; C/BL	000000	000000
8970446100	8-9704	4610	COVER; CYLINDER HEAD	000001	000005
8970446110	8-9704	4611	COVER; HD. COVER, OUTER	000001	000001
8970446350	8-9704	4635	PLUG; HOT	000000	000000

8970446351	8-9704	4635	PLUG; HOT	000000	000001
8970447570	8-9704	4757	CASE ASM; BEARING	000000	000000
8970447670	8-9704	4767	CASE; BEARING	000000	000000
8970447772	8-9704	4777	CRANKSHAFT ASM.	000000	000000
8970447773	8-9704	4777	CRANKSHAFT ASM.	000000	000000
8970447774	8-9704	4777	CRANKSHAFT ASM.	000000	000002
8970447861	8-9704	4786	RETAINER; CRANK	000000	000000
8970447862	8-9704	4786	RETAINER; CRANK	000000	000000
8970447863	8-9704	4786	RETAINER; CRANK	000000	000000
8970448132	8-9704	4813	PUMP; OIL SUB ASM.	000000	000000
8970448133	8-9704	4813	PUMP; OIL SUB ASM.	000000	000002
8970448190	8-9704	4819	RADIATOR ASM; W.O./COOK	000000	000000
8970448430	8-9704	4843	PIPE; OIL PUMP-BLOCK	000001	000002
8970448582	8-9704	4858	HEAD ASM; CYL.	000000	000000
8970448583	8-9704	4858	HEAD ASM; CYL.	000000	000000
8970448585	8-9704	4858	HEAD ASM; CYL.	000000	000000
8970448860	8-9704	4886	TUBE; GUIDE,OIL LEVE	000001	000000
8970449480	8-9704	4948	REPAIR KIT; OIL PUMP	000000	000000
8970450630			GRILLE; RAD	000000	000000
8970450631			GRILLE; RAD	000000	000000
8970450632			GRILLE; RAD	000000	000001
8970451520	8-9704	5152	PIPE; OUTLET, WATER	000000	000000
8970451800	8-9704	5180	PUMP ASM; WATER	000000	000000
8970451801	8-9704	5180	PUMP ASM; WATER	000000	000000
8970451810	8-9704	5181	REPAIR KIT; W/PUMP	000000	000000
8970452040	8-9704	5204	PIPE ASM.;OIL,	000000	000000
8970452050	8-9704	5205	SEAL; RUBBER	000000	000000
8970452060	8-9704	5206	DUCT; AIR, TURBO-INL.MANI	000000	000000
8970452070	8-9704	5207	HOUSING; FLYWHEEL	000000	000000
8970452072	8-9704	5207	HOUSING; FLYWHEEL	000000	000000
8970452120	8-9704	5212	THERMOMETER	000000	000000
8970452121	8-9704	5212	THERMOMETER	000000	000001
8970452140	8-9704	5214	TURBO CHARGER	000000	000000
8970452150	8-9704	5215	PIPE ASM; OIL,TURBO	000000	000000
8970452880	8-9704	5288	PIPE; INLET	000000	000000
8970452890	8-9704	5289	GOVERNOR ASM	000000	000000
8970453120	8-9704	5312	CAP ASM; GAUGE	000001	000000
8970453220	8-9704	5322	PACKING; OIL PAN TO CRANK	000000	000007
8970453240			GASKET; OIL PAN	000000	000000
8970453280			GASKET;TAPPET C	000000	000000
8970453281	8-9704	5328	GASKET;TAPPET C	000000	000034
8970453290	8-9704	5329	GASKET; PUMP TO	000000	000089
8970453600	8-9704	5360	PACKING; B/PIPE	000000	000012
8970453610	8-9704	5361	PACKING; REL, EF	000000	000000
8970453620	8-9704	5362	GASKET; COVER	000000	000000
8970453621	8-9704	5362	GASKET; COVER	000000	000000
8970453650	8-9704	5365	GSKET; AIR VENT	000010	000000

8970453660	8-9704	5366	GASKET MANIFOLD	000000	000000
8970453911	8-9704	5391	SEAT; VALVE-INL	000000	000000
8970453912	8-9704	5391	SEAT; VALVE-INL	000000	000087
8970453920	8-9704	5392	SEAT; VALVE-EXH	000000	000023
8970453931	8-9704	5393	GASKET; CYL. HEAD	000000	000000
8970453932	8-9704	5393	GASKET; CYL. HEAD	000000	000019
8970453940	8-9704	5394	PISTON; STD	000000	000000
8970453980	8-9704	5398	PAN ASM; OIL	000000	000000
8970453981	8-9704	5398	PAN ASM; OIL	000000	000000
8970453982	8-9704	5398	PAN ASM; OIL	000000	000000
8970453983	8-9704	5398	PAN ASM; OIL	000000	000000
8970453991	8-9704	5399	STRAINER ASM; OIL	000000	000000
8970454000	8-9704	5400	PIPE; OIL PUMP-BLOCK	000026	000000
8970454021	8-9704	5402	PUMP ASM; WATER	000000	000000
8970454030	8-9704	5403	MANIFOLD; EXH.	000000	000000
8970454031	8-9704	5403	MANIFOLD; EXH.	000000	000000
8970454032	8-9704	5403	MANIFOLD; EXH.	000000	000002
8970454061	8-9704	5406	PIPE; INJ.#1,2,3	000000	000000
8970454062	8-9704	5406	PIPE; INJ.#1,2,3	000000	000004
8970454071	8-9704	5407	PIPE; FUEL,FEED	000000	000000
8970454081	8-9704	5408	PIPE; FUEL, LEAK OFF	000000	000011
8970454090	8-9704	5409	VALVE; INLET	000000	000000
8970454100	8-9704	5410	VALVE; EXHAUST	000000	000000
8970454101	8-9704	5410	VALVE; EXHAUST	000000	000000
8970454102	8-9704	5410	VALVE; EXHAUST	000000	000000
8970454103	8-9704	5410	VALVE; EXHAUST	000000	000141
8970454170	8-9704	5417	CONNECTOR; GLOW PLUG	000000	000000
8970454171	8-9704	5417	CONNECTOR; GLOW PLUG	000000	000001
8970454180	8-9704	5418	CLEANER ASM; AIR	000000	000000
8970454181	8-9704	5418	CLEANER ASM; AIR	000000	000000
8970454190	8-9704	5419	BRACKET; A/CLEANER	000000	000000
8970454191	8-9704	5419	BRACKET AIR CL.	000009	000000
8970454201	8-9704	5420	SILENCER ASM; EXH.	000000	000000
8970454202	8-9704	5420	SILENCER ASM; EXH.	000000	000000
8970454410	8-9704	5441	BOLT;EXH;MANIF	000000	000000
8970454430	8-9704	5443	HOSE; RUB BOOST L=310	000000	000000
8970454920	8-9704	5492	PIPE ASM;INJ.1,2,3, ID1.4	000000	000000
8970454921	8-9704	5492	PIPE ASM;INJ.1,2,3, ID1.4	000000	000002
8970454930	8-9704	5493	PIPE; INJ.#1,2,3-3LB1	000000	000000
8970454931	8-9704	5493	PIPE; INJ.#1,2,3-3LB1	000014	000000
8970454940	8-9704	5494	ADAPTER;TURBO	000000	000000
8970456174	8-9704	5617	FLYWEIGHT ASM.	000000	000000
8970456175	8-9704	5617	FLYWEIGHT ASM.	000000	000000
8970456540	8-9704	5654	PIPE; INJ NO 4	000000	000000
8970458000	8-9704	5800	METAL SET; CONN.	000000	000000
8970458010	8-9704	5801	BEARING; CONN. ROD	000009	000000
8970459150			MAIN BEARINGS	000000	000000

8970459220	8-9704	5922	BRACKET; GEN.	000000	000000
8970459230	8-9704	5923	GEAR CASE; TIMING	000005	000000
8970459281	8-9704	5928	SHAFT; MAIN, TRA-	000000	000000
8970459301	8-9704	5930	SHAFT; MAIN, TRANS	000000	000000
8970459311	8-9704	5931	SHAFT; MAIN, TRANS	000000	000000
8970459321	8-9704	5932	SHAFT; MAIN, TRANS	000000	000000
8970459501			DOOR ASM; FRT, LH	000000	000000
8970459503			DOOR ASM; FRT, LH	000000	000000
8970459504			DOOR ASM; FRT, LH	000000	000000
8970460150	8-9704	6015	GASKET; INL PIPE	000000	000000
8970460411			PIPE; RETURN	000000	000000
8970460680			GEAR; IDLER	000000	000000
8970460681	8-9704	6068	GEAR; IDLER	000000	000002
8970460700	8-9704	6070	PIPE; FUEL	000002	000000
8970460710	8-9704	6071	CLEANER ASM.; AIR, FIG.74	000000	000000
8970461460	8-9704	6146	BELT; COOLING	000000	000000
8970461620	8-9704	6162	PIPE; OIL, INJ. PUMP TO C/BL	000016	000006
8970461630	8-9704	6163	PIPE; OIL, TURBO FEED	000016	000021
8970461810	8-9704	6181	FLYWHEEL ASM.	000000	000000
8970461811	8-9704	6181	FLYWHEEL ASM.	000000	000000
8970461812	8-9704	6181	FLYWHEEL ASM.	000000	000002
8970461831	8-9704	6183	PUMP ASM; INJ.	000000	000000
8970461841	8-9704	6184	GOVERNOR ASM.	000000	000000
8970462560			CAMSHAFT PROFILE, INJ PUMP	000000	000000
8970462820			TIMER; GLOW	000000	000001
8970463380	8-9704	6338	RECTIFIER; GEN	000000	000001
8970463390			REGULATOR ASM; VOLTAGE, GEN	000000	000000
8970463670	8-9704	6367	ROTOR ASM.	000000	000000
8970463680	8-9704	6368	COVER ASM; RR	000000	000000
8970463690	8-9704	6369	COVER; RR	000000	000000
8970463700	8-9704	6370	PUMP ASM; VAC.	000000	000000
8970463710	8-9704	6371	PLATE; CENTER	000000	000000
8970463720	8-9704	6372	GENERATOR; WO/VAC	000000	000000
8970463730	8-9704	6373	CRANKSHAFT ASM (TOCCO)	000000	000000
8970463731	8-9704	6373	CRANKSHAFT ASM (TOCCO)	000000	000002
8970463740	8-9704	6374	CRANKSHAFT ASM (TOCCO)	000000	000000
8970463741	8-9704	6374	CRANKSHAFT ASM (TOCCO)	000000	000002
8970463811	8-9704	6381	PUMP ASM; OIL	000000	000000
8970464240	8-9704	6424	PLUNGER ASM.	000000	000003
8970464250	8-9704	6425	LEVER; SWIVAL	000002	000000
8970464260	8-9704	6426	HOUSING; PUMP, F	000001	000000
8970464270	8-9704	6427	CAMSHAFT	000000	000000
8970464640			FILTER; OIL (SPIN-ON)	000000	000000
8970464690	8-9704	6469	GASKET; GEAR CASE	000000	000000
8970464691	8-9704	6469	GASKET; GEAR CASE	000000	000000
8970464760	8-9704	6476	CONVERTOR ASM;	000000	000000
8970465830	8-9704	6583	ADAPTER; SENSOR	000003	000000

8970466940	8-9704	6694	BRACKET; A/CLEANER	000000	000000
8970466941	8-9704	6694	BRACKET; A/CLEANER	000003	000000
8970466950	8-9704	6695	GENERATOR; NIKKO	000000	000000
8970466980	8-9704	6698	SEAL;OIL FRT CVR,T/M TTK	000001	000000
8970466990	8-9704	6699	SEAL; OIL,FRT COVER	000000	000000
8970466991	8-9704	6699	SEAL; OIL,FRT COVER	000000	000000
8970466992	8-9704	6699	SEAL; OIL,FRT CVR T/M NOK	000000	000000
8970466993	8-9704	6699	SEAL; OIL,FRT CVR T/M NOK	000010	000005
8970467000	8-9704	6700	SEAL;OIL TRNSFR CASE TTK	000001	000028
8970467010	8-9704	6701	SEAL; OIL,TRANSFER CASE	000000	000000
8970467011	8-9704	6701	SEAL; OIL,TRANSFER CASE	000000	000000
8970467012	8-9704	6701	SEAL;OIL,TRNSFR CASE NOK	000010	000006
8970467020	8-9704	6702	SEAL;OIL TRNSFR FLANGE TK	000002	000003
8970467030	8-9704	6703	SEAL; OIL,TRANSFER FLANGE	000000	000000
8970467031	8-9704	6703	SEAL; OIL,TRANSFER FLANGE	000000	000000
8970467032	8-9704	6703	SEAL;OIL,TRNSFR FLNGE NOK	000017	000012
8970467060	8-9704	6706	SEAL;OIL RR COVER 4WD TTK	000000	000000
8970467070	8-9704	6707	SEAL; OIL,RR COVER	000000	000000
8970467071	8-9704	6707	SEAL; OIL,RR COVER	000000	000000
8970467072	8-9704	6707	SEAL;OIL,RR COVER 4WD NOK	000013	000021
8970467371	8-9704	6737	BRACKET; SILENCER	000000	000000
8970467372	8-9704	6737	BRACKET; SILENCER	000001	000000
8970467680	8-9704	6768	CALBE ASM; E/STOP, L=535	000000	000000
8970467940	8-9704	6794	HOSE; FUEL	000000	000000
8970467941	8-9704	6794	HOSE; FUEL	000000	000007
8970467950	8-9704	6795	PIPE; F/PUMP-I/PUMP	000000	000000
8970467960	8-9704	6796	PIPE; FUEL	000000	000000
8970468340	8-9704	6834	PUMP ASM; INJ.	000000	000000
8970468350	8-9704	6835	SHOE ASM; W/SET	000000	000000
8970468430	8-9704	6843	FLYWHEEL	000000	000000
8970469240	8-9704	6924	PIPE ASM; INJ. NO.1	000000	000000
8970469250	8-9704	6925	PIPE ASM; INJ. NO.2	000000	000000
8970469260	8-9704	6926	PIPE ASM; INJ. NO.3	000000	000000
8970469270	8-9704	6927	PIPE ASM; INJ. NO.4	000000	000000
8970469580	8-9704	6958	HARNESS; ENGINE	000000	000000
8970469581	8-9704	6958	HARNESS; ENGINE	000000	000000
8970470210	8-9704	7021	METAL KIT; CRANK	000000	000000
8970470220	8-9704	7022	RING SET; PISTON	000000	000000
8970470230	8-9704	7023	HOUSING; FLYWHEEL	000000	000000
8970470232	8-9704	7023	HOUSING; FLYWHEEL	000000	000000
8970470233	8-9704	7023	HOUSING; FLYWHEEL	000000	000000
8970470234	8-9704	7023	HOUSING; FLYWHEEL	000000	000001
8970470235	8-9704	7023	HOUSING; FLYWHEEL	000000	000039
8970470240	8-9704	7024	ROD ASM; CONN.	000000	000000
8970470241	8-9704	7024	ROD ASM; CONN.	000000	000000
8970470251			CONNECTING ROD	000000	000000
8970470520	8-9704	7052	BRACKET; START	000000	000000

8970470521	8-9704	7052	BRACKET; START	000003	000000
8970470540	8-9704	7054	GASKET; EXH. MAN.	000000	000000
8970470541	8-9704	7054	GASKET; EXH. MAN.	000000	000006
8970470560	8-9704	7056	BEARING; NEEDLE-CAM	000000	000003
8970471421	8-9704	7142	PLUG; THRUST CAM	000000	000008
8970472020	8-9704	7202	SHAFT; LEVER	000000	000000
8970472030	8-9704	7203	LEVER; GOV.	000000	000000
8970472040	8-9704	7204	PIN; RETAINING	000000	000000
8970472050	8-9704	7205	LEVER; GOV.	000000	000000
8970472060	8-9704	7206	PIN; RETAINING	000000	000000
8970472650	8-9704	7265	COLLAR;GROMMET,ELEC FUEL	000000	000020
8970472660	8-9704	7266	GROMMET;MTG,ELEC FUEL PUM	000000	000018
8970472940	8-9704	7294	WASHER; PL,DIFF CAGE SETT	000000	000028
8970473920	8-9704	7392	PLUG; FUEL	000000	000000
8970473930	8-9704	7393	SENSOR	000000	000000
8970476040	8-9704	7604	PLUG; GLOW	000008	000299
8970476041	8-9704	7604	PLUG; GLOW	000000	000000
8970477320	8-9704	7732	TERMINAL ASM.	000000	000001
8970478720	8-9704	7872	FLYWHEEL	000000	000000
8970478740	8-9704	7874	FLYWHEEL	000000	000000
8970479310	8-9704	7931	GAUGE ASM; OIL LEVEL	000000	000007
8970479320	8-9704	7932	BEARING; BALL	000001	000004
8970479470	8-9704	7947	PUMP ASM; INJ.	000000	000000
8970479471	8-9704	7947	PUMP ASM; INJ.	000000	000000
8970479490	8-9704	7949	PROPER; I/PUMP	000000	000000
8970479492	8-9704	7949	PROPER; I/PUMP	000000	000000
8970480040	8-9704	8004	PUMP ASM; INJ.	000000	000000
8970480551	8-9704	8055	STUD; EXH MANIFOLD	000001	000000
8970485590	8-9704	8559	BRACKET; FUEL FILTER	000000	000000
8970485601	8-9704	8560	PIPE ASM; OIL, A/C FEED	000000	000000
8970485610	8-9704	8561	BRACKET; TENSIONER	000000	000000
8970485631	8-9704	8563	PIPE; F/PUMP-FLTR	000000	000000
8970485641	8-9704	8564	PIPE; FLTR-PUMP	000000	000000
8970485670	8-9704	8567	CYL ASM; CLUTCH MA	000024	000152
8970485970	8-9704	8597	PIPE;FUEL,FILTER LEAK OFF	000000	000000
8970485971	8-9704	8597	PIPE; FUEL,FUEL	000000	000002
8970486150	8-9704	8615	HOUSING ASM; TURBINE	000000	000000
8970486160	8-9704	8616	COVER ASM; COMPRESSOR	000000	000000
8970486760			GASKET; CYL	000000	000000
8970486830	8-9704	8683	PUMP ASM; INJ.	000000	000000
8970486831	8-9704	8683	PUMP ASM; INJ.	000000	000000
8970486840	8-9704	8684	GOVERNOR ASM.	000000	000000
8970486850	8-9704	8685	PUMP ASM; INJ.	000000	000000
8970486852	8-9704	8685	PUMP ASM; INJ.	000000	000002
8970486860	8-9704	8686	GOVERNOR ASM; MECHANICAL	000000	000000
8970487440	8-9704	8744	COVER; REAR, MISSION	000000	000000
8970487450	8-9704	8745	SYNCHRONIZER ASM; 4TH/5TH	000000	000000

8970487451	8-9704	8745	SYNCHRONIZER ASM;4TH/5TH	000000	000000
8970487452	8-9704	8745	SYNCHRONIZER ASM;4TH/5TH	000000	000000
8970487480	8-9704	8748	SYNCHRONIZER; LOW &	000000	000000
8970487500	8-9704	8750	SYNCHRONIZER; REV &	000000	000000
8970487570	8-9704	8757	PUMP ASM; INJ.	000000	000000
8970487931	8-9704	8793	HOUSING; FLYWHEEL	000000	000000
8970487940	8-9704	8794	PUMP ASM; INJ.	000000	000000
8970487950	8-9704	8795	GOVERNOR ASM.	000000	000000
8970487970	8-9704	8797	BLOCK ASM; CYL.	000000	000000
8970487971	8-9704	8797	BLOCK ASM; CYL.	000000	000000
8970487974	8-9704	8797	BLOCK ASM; CYL.	000000	000000
8970487991	8-9704	8799	HEAD ASM; CYL.	000000	000000
8970487992	8-9704	8799	HEAD ASM; CYL.	000000	000000
8970488020	8-9704	8802	SEAT; VALVE-INL	000000	000004
8970488030	8-9704	8803	SEAT; VALVE-EXH	000000	000000
8970488041	8-9704	8804	GASKET; CYL. HEAD	000000	000002
8970488050	8-9704	8805	PISTON; STD	000000	000000
8970488060	8-9704	8806	VALVE; INLET	000000	000000
8970488061	8-9704	8806	VALVE; INLET	000000	000000
8970488062	8-9704	8806	VALVE; INLET	000000	000003
8970488071	8-9704	8807	VALVE; EXHAUST	000000	000000
8970488072	8-9704	8807	VALVE; EXHAUST	000000	000000
8970488073	8-9704	8807	VALVE; EXHAUST	000000	000004
8970488091	8-9704	8809	PUMP ASM; OIL	000000	000000
8970488092	8-9704	8809	PUMP ASM; OIL	000000	000000
8970488093	8-9704	8809	PUMP ASM; OIL	000000	000000
8970488094	8-9704	8809	PUMP ASM; OIL	000000	000000
8970488095	8-9704	8809	PUMP ASM; OIL	000000	000000
8970488097	8-9704	8809	PUMP ASM; OIL	000000	000016
8970488102	8-9704	8810	BODY; OIL PUMP	000000	000000
8970488103	8-9704	8810	BODY; OIL PUMP	000000	000000
8970488104	8-9704	8810	BODY; OIL PUMP	000001	000000
8970488105	8-9704	8810	BODY; OIL PUMP	000000	000000
8970488340	8-9704	8834	PUMP ASM; INJ.	000000	000000
8970488341	8-9704	8834	PUMP ASM; INJ.	000000	000008
8970488460	8-9704	8846	FILTER ASM;	000000	000000
8970488470	8-9704	8847	FILTER;FUEL PAPER ELEMENT	000000	000000
8970488490	8-9704	8849	CUP; INNER	000001	000000
8970489201	8-9704	8920	FOOT; ENGINE. F, RH	000000	000000
8970489210	8-9704	8921	RING SET; PISTON	000000	000006
8970489251	8-9704	8925	PUMP ASM.; INJ. FIG.52	000000	000000
8970489570	8-9704	8957	HOSE; RUB.F/FILTER-I/PUMP	000000	000000
8970489650	8-9704	8965	STARTER; DENSO	000000	000000
8970489651	8-9704	8965	STARTER; DENSO	000000	000000
8970489652	8-9704	8965	STARTER; DENSO	000000	000000
8970489660	8-9704	8966	STARTER; DENSO	000000	000000
8970489661	8-9704	8966	STARTER; DENSO	000000	000000

8970489662	8-9704	8966	STARTER; DENSO	000000	000000
8970489663	8-9704	8966	STARTER; DENSO	000000	000039
8970489670	8-9704	8967	STARTER ASM	000000	000000
8970489671	8-9704	8967	STARTER ASM	000000	000000
8970489672	8-9704	8967	STARTER ASM	000000	000000
8970489673	8-9704	8967	STARTER ASM	000000	000008
8970489681	8-9704	8968	GENERATOR; DENSO	000000	000034
8970489682	8-9704	8968	GENERATOR; DENSO	000000	000000
8970489700	8-9704	8970	GENERATOR	000000	000000
8970489701	8-9704	8970	GENERATOR	000000	000000
8970489702	8-9704	8970	GENERATOR	000000	000000
8970489703	8-9704	8970	GENERATOR	000000	000000
8970489704	8-9704	8970	GENERATOR	000000	000000
8970489705	8-9704	8970	GENERATOR	000000	000000
8970489706	8-9704	8970	GENERATOR	000000	000070
8970489710	8-9704	8971	BAND; A/C	000000	000000
8970489711	8-9704	8971	BAND; A/C	000000	000013
8970489720	8-9704	8972	CUSHION; AIR CLEANER	000012	000000
8970490260	8-9704	9026	PUMP ASM; INJ.	000000	000001
8970490270	8-9704	9027	GOVERNOR ASM.	000000	000000
8970490590	8-9704	9059	HOSE; INLET	000039	000000
8970490980	8-9704	9098	TRANSMISSION; AUTO,W/TORQ	000000	000000
8970490990	8-9704	9099	TRANSMISSION; AUTO,W/TORQ	000000	000000
8970491450	8-9704	9145	SEAL; OIL, CRANK FRONT 3K	000202	000325
8970491460			S E A L	000002	000004
8970491920	8-9704	9192	PUMP ASM; INJ.	000000	000000
8970492820	8-9704	9282	OIL FILTER; MAIN	000000	000000
8970493270	8-9704	9327	GOVERNOR ASM.	000000	000000
8970493280	8-9704	9328	LEVER; GOV. CONTROL	000000	000000
8970493281	8-9704	9328	LEVER; GOV. CONTROL	000000	000009
8970494200	8-9704	9420	FLYWHEEL ASM.	000000	000000
8970494480	8-9704	9448	ROTOR SET; OIL PUMP	000000	000000
8970494761	8-9704	9476	BOLT;QUAD BOX	000000	000250
8970494870	8-9704	9487	SILENCER; EXH.	000000	000000
8970494871	8-9704	9487	SILENCER; EXH.	000000	000000
8970494872	8-9704	9487	SILENCER; EXH.	000000	000001
8970494890	8-9704	9489	BAND; SILENCER FIX	000000	000000
8970494900	8-9704	9490	PAN ASM; OIL	000000	000000
8970495771	8-9704	9577	STUD;FAN CLU	000004	000044
8970496800	8-9704	9680	PULLEY; AIR COMPR.	000000	000000
8970496811	8-9704	9681	PIPE; OIL RETURN	000000	000000
8970497080	8-9704	9708	CARTRIDGE KIT/OIL FILTER	000000	000000
8970497081	8-9704	9708	CARTRIDGE KIT/OIL FILTER	000820	000265
8970497130	8-9704	9713	BRACKET; AIR COMPR.	000000	000000
8970497220	8-9704	9722	BAND; AIR CLEANER	000000	000000
8970497230	8-9704	9723	HOSE; RUBBER, OIL RETURN	000000	000000
8970497810	8-9704	9781	PUMP ASM; INJ.	000000	000000

8970497812	8-9704	9781	PUMP ASM; INJ.	000000	000000
8970497850	8-9704	9785	BOLT; IDLE SHAFT	000000	000000
8970498170	8-9704	9817	COVER; ENGINE STOPPER	000000	000000
8970499040			BOLT	000000	000007
8970600980	8-9706	0098	BELT ASM.; AIR CMPR.	000000	000000
8970601780	8-9706	0178	TIMER ASM.	000001	000000
8970610220	8-9706	1022	PLUG; HOT	000000	000000
8970610221	8-9706	1022	PLUG; HOT	000008	000000
8970610240	8-9706	1024	SPACER; H/PUMP T=5.5	000000	000000
8970613040	8-9706	1304	GEAR ASM; OD. MAIN SHAFT	000000	000000
8970613770			STUD; EXH PIPE TO MANIF	000000	000000
8970613771			STUD; EXH PIPE TO MANIF	000000	000030
8970614010	8-9706	1401	NUT; EGR PIPE	000000	000000
8970614011	8-9706	1401	NUT; EGR PIPE	000164	000957
8970614461	8-9706	1446	GOVERNOR ASM.	000000	000000
8970614640	8-9706	1464	BRACKET; A/CLEANER	000000	000000
8970614650	8-9706	1465	BRACKET; A/CLEANER	000000	000000
8970615050	8-9706	1505	UNIT; THERMOMETER	000000	000000
8970615060	8-9706	1506	SENSOR; THERMO, QQS-3	000000	000001
8970615070	8-9706	1507	TURBOCHARGER ASM.	000000	000000
8970615430	8-9706	1543	BOLT; EXH MANIF	000968	006523
8970615750	8-9706	1575	PUMP ASM; INJ.	000000	000000
8970615751	8-9706	1575	PUMP ASM; INJ.	000000	000000
8970617180			BACK BUZZER	000000	000000
8970617520	8-9706	1752	RING; BLOCK, SYN.	000000	000011
8970617860	8-9706	1786	TIMER ASM.	000000	000000
8970618231			WHEEL RIM STEEL	000000	000000
8970620480	8-9706	2048	RING; WEAR-CAMSHAFT	000063	000000
8970620860	8-9706	2086	BOLT; CONNROD	000000	000000
8970621401	8-9706	2140	CAMSHAFT; INJ.PUMP	000000	000002
8970621412	8-9706	2141	CAMSHAFT; INJ. PUMP	000000	000003
8970622370	8-9706	2237	COVER ASM; GOV.	000000	000000
8970622380	8-9706	2238	LEVER; GOVERNOR	000000	000000
8970622390	8-9706	2239	COVER GOV.	000000	000000
8970622400	8-9706	2240	GOV LEVER	000000	000000
8970622410	8-9706	2241	RETAINING PIN	000001	000000
8970622771	8-9706	2277	SLEEVE ASM.	000000	000000
8970622772	8-9706	2277	SLEEVE ASM.	000000	000000
8970623000	8-9706	2300	ROD ASM; CONN	000000	000000
8970623001	8-9706	2300	ROD ASM; CONN	000000	000000
8970624222	8-9706	2422	LEVER ASM; FLOATING	000000	000000
8970626540	8-9706	2654	BEARING; BALL	000000	000000
8970626580	8-9706	2658	ROTOR; VAC PUMP	000000	000002
8970627431	8-9706	2743	BAND; SILENCER	000000	000000
8970627432	8-9706	2743	BAND; SILENCER	000000	000004
8970627540	8-9706	2754	SCREW; RETAINER	000000	000000
8970627780	8-9706	2778	COVER; CYL. HEAD	000000	000000

8970627960	8-9706	2796	WATER PUMP KIT	000000	000000
8970628151			RELAY; FAST IDL	000000	000000
8970629131	8-9706	2913	BELT; COOLING FAN	000000	000000
8970629480	8-9706	2948	HOUSING; I/PUMP	000000	000000
8970629490	8-9706	2949	BOLT; EYE	000000	000000
8970629690	8-9706	2969	PUMP ASM; INJ.	000000	000000
8970630630			EMBLEM; RAD GRI	000000	000001
8970631550	8-9706	3155	BOLT; EYE	000000	000003
8970631560	8-9706	3156	PUMP ASM; FEED	000000	000000
8970631570	8-9706	3157	GOVERNOR ASM.	000000	000000
8970631620			REGULATOR KIT	000000	000000
8970631650			LEVER	000000	000000
8970631660	8-9706	3166	LEVER (OR)	000000	000000
8970632340	8-9706	3234	PIPE; WATER, TURBO	000003	000000
8970632460			METAL SET; CRNK.	000000	000000
8970632480			METAL SET; CRANK	000000	000000
8970632580	8-9706	3258	METAL SET; CRANK (BLUE)	000000	000018
8970632590	8-9706	3259	METAL KIT; CRANK	000000	000000
8970632600	8-9706	3260	METAL SET; CRANKSHAFT, STAN	000000	000007
8970633010	8-9706	3301	SENSOR; THERMOSTAT	000000	000019
8970633030	8-9706	3303	COVER ASM; CYL. HEAD	000000	000000
8970633180	8-9706	3318	BRUSH; REGULATOR ASM	000000	000000
8970633270	8-9706	3327	HOSE; OIL COOLER-OUT	000000	000000
8970633650	8-9706	3365	BEARING; COUNTER	000019	000000
8970633660	8-9706	3366	BEARING; COUNTER	000001	000019
8970634000	8-9706	3400	SPACER; FAN	000000	000000
8970634001	8-9706	3400	SPACER; FAN	000000	000000
8970634002	8-9706	3400	SPACER; FAN	000000	000000
8970634003	8-9706	3400	SPACER; FAN	000000	000025
8970634321	8-9706	3432	PIPE; OIL, TURBO IN	000002	000000
8970634370	8-9706	3437	GOVERNOR ASM.	000000	000000
8970635621	8-9706	3562	BRACKET; EN/CONT., WELD NUT	000000	000000
8970636020			GASKET; TURBOCHARGER TO E	000000	000000
8970636120	8-9706	3612	PLUG; OIL PUMP	000000	000000
8970636140	8-9706	3614	PLUG; GLOW	000000	000000
8970637160	8-9706	3716	FOOT; ENGINE FRT. LH.	000000	000000
8970637170	8-9706	3717	FOOT; ENGINE FRT. LH.	000000	000000
8970637562	8-9706	3756	PIPE ASM; CLUTCH	000000	000000
8970638230	8-9706	3823	LEVER; TENSION	000003	000001
8970638240	8-9706	3824	HOUSING; FUEL PUMP	000000	000000
8970638250	8-9706	3825	COVER	000000	000000
8970638260	8-9706	3826	DIAPHRAGM	000000	000000
8970638270	8-9706	3827	LEVER; PRIMING	000000	000000
8970638280	8-9706	3828	SPRING; LEVER	000000	000000
8970638670			PISTON; STANDARD	000000	000000
8970639570	8-9706	3957	STOPPER ASM; ENG., V	000000	000000
8970642680	8-9706	4268	PISTON ASM.; W/CONN. ROD	000000	000000

8970642801	8-9706	4280	MANIFOLD; INL	000000	000000
8970643100	8-9706	4310	VALVE; RELIEF	000000	000000
8970643101	8-9706	4310	VALVE; RELIEF	000000	000000
8970643353	8-9706	4335	RADIATOR ASM	000000	000000
8970643354	8-9706	4335	RADIATOR ASM	000000	000000
8970644210	8-9706	4421	PLUG; HOT	000000	000000
8970644211	8-9706	4421	PLUG; HOT	000001	000000
8970644650	8-9706	4465	FLYWHEEL ASM.	000000	000000
8970644670	8-9706	4467	FLYWHEEL ASM.	000000	000000
8970646881	8-9706	4688	PACKING: GOVERNOR COVER	000000	000036
8970647420			STARTER ASM.; FIG.62D	000000	000000
8970648800	8-9706	4880	SPACER	000000	000000
8970648850	8-9706	4885	COVER ASM; RR	000000	000000
8970648860	8-9706	4886	CASE; GEAR	000000	000000
8970649882	8-9706	4988	ADAPTER; TURBO	000000	000000
8970649892	8-9706	4989	PROTECTOR ASM.; HEAT	000000	000000
8970651591	8-9706	5159	BOLT; GEN	000918	000000
8970651770			SILINCER; EXHAUST	000000	000000
8970651771			SILINCER; EXHAUST	000000	000001
8970651890	8-9706	5189	FLEX PLATE;	000000	000016
8970652321	8-9706	5232	PUMP ASM; OIL	000000	000000
8970652322	8-9706	5232	PUMP ASM; OIL	000000	000000
8970652323	8-9706	5232	PUMP ASM; OIL	000000	000011
8970653840	8-9706	5384	PUMP ASM.; OIL, W/PINION	000000	000001
8970654150	8-9706	5415	SWITCH; REV LAMP	000000	000000
8970654151	8-9706	5415	SWITCH; REV LAMP	000000	000000
8970654170	8-9706	5417	SWITCH; NEUTRAL	000000	000000
8970654171	8-9706	5417	SWITCH; NEUTRAL	000000	000000
8970654191	8-9706	5419	SWITCH;REV LAMP	000000	000000
8970654920	8-9706	5492	GAUGE ASM; OIL LEVEL	000000	000000
8970655440	8-9706	5544	TANK;CATCH,PRESS.CONT VLV	000000	000010
8970655472	8-9706	5547	PACKING: CYL. HEAD COVER	000000	000047
8970655483	8-9706	5548	COVER ASM; CYL.	000000	000000
8970655484	8-9706	5548	COVER ASM; CYL.	000000	000001
8970655550	8-9706	5555	SHAFT; IDLE GEAR	000000	000000
8970655551	8-9706	5555	SHAFT; IDLE GEAR	000000	000000
8970656670	8-9706	5667	AIR FILTER	000001	000063
8970656740			STUD; CHARGER	000000	000000
8970656760	8-9706	5676	AIR FILTER	000000	000137
8970656950	8-9706	5695	SEAL; OIL,LIP	000000	000000
8970657130	8-9706	5713	FLANGE; INJ NOZZLE HOLDER	000360	000005
8970658000	8-9706	5800	T/MISSION; WO TORQUE	000000	000000
8970658752	8-9706	5875	HOUSING; CLUTCH	000000	000000
8970659601	8-9706	5960	MANIFOLD; EXHAUST	000000	000000
8970659700	8-9706	5970	VALVE; EXH. OD=35.70	000000	000000
8970659830	8-9706	5983	GASKET; OIL F.	000000	000000
8970659831	8-9706	5983	GASKET; OIL F.	000000	000000

8970659841	8-9706	5984	BOLT; FLYWHEEL	000000	001953
8970659860			TIMING BELTS	000000	000000
8970659930			FILTER ASM.; OIL,CARTRIDG	000000	000000
8970659940	8-9706	5994	FLYWHEEL	000000	000000
8970659941	8-9706	5994	FLYWHEEL	000000	000000
8970660761	8-9706	6076	NOZZLE ASM: INJ	000000	000016
8970660771	8-9706	6077	GAUGE; OIL LEVEL	000000	000000
8970661430	8-9706	6143	TUBE; OIL FILLER	000000	000000
8970661960	8-9706	6196	GASKET; CYL. HEAD	000000	000007
8970661970	8-9706	6197	GASKET; CYL HEAD (T=1.65)	000000	000010
8970661980	8-9706	6198	CYL HEAD GASKET	000000	000015
8970662640	8-9706	6264	SPACER; OIL PAN-F/HSG.	000000	000000
8970663330	8-9706	6333	BOX; QUAD,TRANS	000000	000002
8970663550	8-9706	6355	TUBE ASM; GUIDE	000000	000000
8970663861			STUD; INJ PUMP	000000	000000
8970664780	8-9706	6478	GAUGE ASM; OIL L1=425	000000	000000
8970665020	8-9706	6502	PUMP ASM.; INJ. FIG.PEND.	000000	000000
8970666020			CALIPER ASM, (RH)	000001	000000
8970666030			CALIPER ASM, (LH)	000000	000000
8970666100			RR PAD KIT	000000	000000
8970666110			REAR BRAKE PADS	000000	000000
8970666140			SEAL KIT	000000	000000
8970667280	8-9706	6728	HANGER; FLYWHEEL HSG.	000000	000000
8970667390	8-9706	6739	GASKET; GEAR CASE	000000	000000
8970667410	8-9706	6741	GASKET; INLET MANIFOLD	000000	000000
8970667411	8-9706	6741	GASKET; INLET MANIFOLD	000000	000000
8970667980	8-9706	6798	BOLT; IDLE GEAR SHAFT	000000	000019
8970668300	8-9706	6830	BRACKET ASM; ENG.	000000	000000
8970668301	8-9706	6830	BRACKET ASM; ENG.	000000	000001
8970668310	8-9706	6831	BRACKET ASM; ENG.	000000	000000
8970668311	8-9706	6831	BRACKET ASM; ENG.	000000	000002
8970668490	8-9706	6849	YOKE ASM.	000001	000000
8970668500	8-9706	6850	BUSH; GUM	000000	000000
8970668510	8-9706	6851	PACKING	000000	000000
8970668640	8-9706	6864	RUBBER; CUSH,25X1020X4000	000000	000000
8970668690	8-9706	6869	ROD; PUSH	000000	000000
8970668691	8-9706	6869	ROD; PUSH	000000	000000
8970668692	8-9706	6869	ROD; PUSH	000000	000000
8970668693	8-9706	6869	ROD; PUSH	000000	000023
8970668720	8-9706	6872	SHAFT; ROCKER ARM	000000	000000
8970668721	8-9706	6872	SHAFT; ROCKER ARM	000000	000002
8970668746	8-9706	6874	BRACKET; ROCKER ARM	000000	000000
8970668748	8-9706	6874	BRACKET; ROCKER ARM	000000	000000
8970668761	8-9706	6876	ARM; ROCKER-INLET	000000	000000
8970668781	8-9706	6878	ARM; ROCKER-EXHAUST	000000	000000
8970669582	8-9706	6958	FLYWHEEL ASM.	000000	000000
8970669600	8-9706	6960	FLYWHEEL ASM.	000000	000000

8970670280	8-9706	7028	DOOR ASM.; SIDE	000000	000000
8970670290	8-9706	7029	DOOR ASM.; SIDE	000000	000000
8970670300	8-9706	7030	FOOT; ENG., FRT. RH. & LH.	000000	000000
8970670310	8-9706	7031	FOOT; ENGINE, REAR LH.	000000	000000
8970670320	8-9706	7032	FOOT; ENGINE, REAR RH.	000000	000000
8970670330	8-9706	7033	FOOT; ENGINE, REAR	000000	000000
8970670340	8-9706	7034	PEDAL ASM.; CLUTCH	000000	000000
8970670350	8-9706	7035	ROD; RADIATOR SUPPORT	000000	000000
8970670360	8-9706	7036	LEVER; W/LEVER PLATE	000000	000000
8970670380	8-9706	7038	HARNESS; CABLE, INSTRUMENT	000000	000000
8970670390	8-9706	7039	BOX ASM.; BATTERY	000000	000000
8970670400	8-9706	7040	COVER ASM.; FRONT	000000	000000
8970670410	8-9706	7041	BRACKET; RADIATOR	000000	000000
8970670420	8-9706	7042	STOPPER; CLUTCH	000000	000000
8970670430	8-9706	7043	BRACKET; FUEL TANK	000000	000000
8970670450	8-9706	7045	COVER; UPPER	000000	000000
8970670460	8-9706	7046	PLATE; REAR	000000	000000
8970670470	8-9706	7047	FRAME ASM.	000000	000000
8970670480	8-9706	7048	FRAME ASM.	000000	000000
8970670490	8-9706	7049	COVER; UPPER	000000	000000
8970670500	8-9706	7050	COVER; SIDE, RH.	000000	000000
8970670510	8-9706	7051	PLATE; REAR	000000	000000
8970670520	8-9706	7052	FRAME ASM.	000000	000000
8970670530	8-9706	7053	COVER; SIDE, LH.	000000	000000
8970670540	8-9706	7054	COVER; SIDE, LH.	000000	000000
8970670550	8-9706	7055	COVER; SIDE, RH.	000000	000000
8970670560	8-9706	7056	COVER; SIDE, RH.	000000	000000
8970670570	8-9706	7057	COVER; SIDE, LH.	000000	000000
8970670580	8-9706	7058	COVER ASM.; FRONT	000000	000000
8970670590	8-9706	7059	BRACKET; ENGINE CONTROL	000000	000000
8970670700			CABLE; SHIFT, TR	000000	000000
8970685510	8-9706	8551	PUMP ASM; INJ.	000000	000000
8970686490	8-9706	8649	PUMP ASM.; WATER	000002	000000
8970686500	8-9706	8650	PUMP ASM.; WATER	000000	000000
8970686510	8-9706	8651	PUMP ASM; WATER 2/3KC1	000000	000000
8970686530	8-9706	8653	UNIT; SEAL, WATER PUMP	000000	000003
8970686550	8-9706	8655	PUMP ASM; WATER	000000	000000
8970686570	8-9706	8657	PUMP ASM; WATER	000000	000001
8970687320			LAMP; RR COMB	000000	000000
8970687330			LAMP; RR COMB	000000	000000
8970687401			R.R. TAIL LAMP ASM	000000	000000
8970687730			SWITCH; COMB	000000	000000
8970687732			SWITCH; COMB	000000	000002
8970687780	8-9706	8778	RELAY; SAFETY	000000	000000
8970687781	8-9706	8778	RELAY; SAFETY	000000	000012
8970687810	8-9706	8781	BLOCK; SHIFT, 4X2-4X4, TRAN	000000	000000
8970687880			TIMER; GLOW PLUG	000000	000000

8970687980	8-9706	8798	BELT; FAN	000000	000003
8970688040	8-9706	8804	SWITCH; THERMO	000000	000002
8970691060			ANTENNA	000000	000000
8970691061			ANTENNA	000000	000000
8970692050	8-9706	9205	COCK ASM.; KINGSTON	000000	000000
8970692870	8-9706	9287	GASKET; EXH PIPE TO MANIF	000000	000000
8970693331			PIPE; SUCTION, P	000000	000001
8970693830	8-9706	9383	PUMP ASM; WATER	000000	000000
8970693840	8-9706	9384	REPAIR KIT; WATER PU	000000	000001
8970693850	8-9706	9385	WATER PUMP KIT	000000	000000
8970693860	8-9706	9386	REPAIR KIT; WATER PU	000000	000000
8970693870	8-9706	9387	PUMP ASM; WATER 2/3KC1	000000	000019
8970693890	8-9706	9389	REPAIR KIT; WATER PUMP	000000	000002
8970693900	8-9706	9390	PUMP ASM; WATER	000000	000016
8970693910	8-9706	9391	PUMP ASM; WATER	000000	000001
8970693920	8-9706	9392	REPAIR KIT; W/P	000000	000001
8970694000	8-9706	9400	PUMP ASM.; INJ.	000000	000000
8970695600	8-9706	9560	HARNES; CABLE, INSTRUMENT	000000	000000
8970695750	8-9706	9575	ROD; PUSH	000000	000000
8970695751	8-9706	9575	ROD; PUSH	000000	000000
8970695752	8-9706	9575	ROD; PUSH	000000	000000
8970695753	8-9706	9575	ROD; PUSH	000000	000064
8970697860			SWITCH; THERMO	000000	000000
8970697861	8-9706	9786	SWITCH; THERMO	000000	000000
8970698060	8-9706	9806	PUMP ASM; INJ.	000000	000000
8970698070	8-9706	9807	HOUSING; FLYWHEEL	000000	000000
8970698071	8-9706	9807	HOUSING; FLYWHEEL	000000	000003
8970698821	8-9706	9882	PUMP ASM; WATER 3LB1	000000	000000
8970698871	8-9706	9887	SPRING; ROCKER ARM	000000	000009
8970698900	8-9706	9890	SPRING; MAIN	000000	000000
8970698901	8-9706	9890	SPRING MAIN 3.0K	000000	000000
8970698911	8-9706	9891	SPRING; MAIN	000015	000000
8970698960	8-9706	9896	ANGLEICH KIT	000000	000000
8970699020	8-9706	9902	FAN; ASM	000000	000000
8970699021	8-9706	9902	FAN; ASM	000000	000024
8970700024	8-9707	0002	CASE; GEAR	000000	000000
8970700690	8-9707	0069	PULLEY; CRANK	000000	000002
8970700700	8-9707	0070	CONNECTOR; ELBOW	000001	000000
8970700750	8-9707	0075	FAN ASM; COOLING	000000	000003
8970701121	8-9707	0112	HANGER; RR.	000000	000000
8970701130	8-9707	0113	HANGER; FRT.	000000	000000
8970701301	8-9707	0130	SOLENOID ASM.	000000	000000
8970701302	8-9707	0130	SOLENOID ASM.	000000	000000
8970701303	8-9707	0130	SOLENOID ASM.	000000	000000
8970703442	8-9707	0344	PUMP ASM; INJ.	000000	000000
8970703920	8-9707	0392	TIMER ASM.; GLOW PLUG	000000	000000
8970704615	8-9707	0461	BRACKET; ROCKER ARM	000000	000000

8970704617	8-9707	0461	BRACKET; ROCKER ARM	000000	000000
8970704622	8-9707	0462	COVER ASM; CYL.	000000	000000
8970704623	8-9707	0462	COVER ASM; CYL.	000000	000000
8970704624	8-9707	0462	COVER ASM; CYL.	000001	000000
8970704650	8-9707	0465	SHAFT; ROCKER ARM	000000	000000
8970704651	8-9707	0465	SHAFT; ROCKER ARM	000000	000001
8970706570	8-9707	0657	CLUTCH DISC	000000	000000
8970706981			SPRING; ROCKER ARM	000000	000000
8970706982	8-9707	0698	SPRING; ROCKER ARM	000000	000027
8970708100	8-9707	0810	SCREW;RECTIFIER,GEN	000000	000000
8970708110	8-9707	0811	SCREW;RR END COVER	000000	000000
8970708120	8-9707	0812	PLATE; RR COVER	000000	000000
8970708640	8-9707	0864	FILTER ASM	000001	000000
8970712130	8-9707	1213	WIRE ASM.; LEAD	000000	000000
8970712740	8-9707	1274	CONNECTOR; INL.	000000	000000
8970712873	8-9707	1287	LINK ASM; CONTROL	000000	000000
8970713460	8-9707	1346	SEDIMENTER ASM; WATER	000000	000000
8970713470	8-9707	1347	CUP; INNER-SEDMTR	000000	000000
8970713480	8-9707	1348	ELEMENT KIT; SEDIMENTER	000000	000766
8970713580	8-9707	1358	WASHER;THRUST CR/SHF	000000	000000
8970714090	8-9707	1409	FLYWHEEL	000000	000000
8970715611	8-9707	1561	SEAL; OIL,CR/SHF,RR	000631	000173
8970716610	8-9707	1661	BEARING KIT; CRANK	000000	000027
8970716620	8-9707	1662	METAL KIT; CRANKSHAFT,ST	000004	000022
8970716631	8-9707	1663	BRACKET; TANK	000000	000000
8970716730	8-9707	1673	ROD PUSH	000000	000050
8970716880	8-9707	1688	RING;BLOCK, SYN/5TH	000007	000000
8970716991	8-9707	1699	PACKING: CYL HEAD COVER	000000	000013
8970717321	8-9707	1732	PIPE ASM.;OIL,TURBO.DRAIN	000000	000000
8970718062	8-9707	1806	PIECE; GUIDE	000000	000000
8970718080	8-9707	1808	HOSE; RUBBER	000000	000000
8970718081	8-9707	1808	HOSE; RUBBER	000001	000000
8970718090	8-9707	1809	HOSE; RUBBER	000000	000000
8970718091	8-9707	1809	HOSE; RUBBER	000000	000000
8970718100	8-9707	1810	HOSE; RUBBER	000000	000000
8970718120			JOURNAL ASM;PROP SHAFT	000000	000000
8970718121			JOURNAL ASM;PROP SHAFT	000000	000000
8970718130			HOUSING; THERMOSTAT	000000	000000
8970718151	8-9707	1815	GOVERNOR ASM; MECHANICAL	000000	000000
8970718660	8-9707	1866	PULLEY; CRANKSHAFT	000000	000000
8970720040	8-9707	2004	CASE; MISSION	000000	000000
8970725040	8-9707	2504	ROTOR; GEN	000000	000000
8970725411	8-9707	2541	GOVERNOR ASM; MECHANICAL	000000	000000
8970728231	8-9707	2823	SEAL; OIL CR/SHF,RR	000031	000327
8970728270	8-9707	2827	SUPPORT, SHIFT, F	000000	000000
8970728290	8-9707	2829	SHAFT ASM; IDLE GEAR	000000	000001
8970728300	8-9707	2830	BOLT	000005	000000

8970728340	8-9707	2834	PULLEY; GEN.	000000	000000
8970728350	8-9707	2835	NUT; ALTERNATOR	000007	000000
8970728360	8-9707	2836	COLLAR; SPACE-ALTERNATOR	000000	000000
8970728380	8-9707	2838	BEARING; BALL-ALTERNATOR	000000	000005
8970728390	8-9707	2839	SCREW	000012	000000
8970728400	8-9707	2840	ROTOR ASM.-ALTERNATOR	000001	000000
8970728410	8-9707	2841	FRAME; RR	000000	000000
8970728420	8-9707	2842	HOLDER ASM; RECT.	000000	000003
8970728430	8-9707	2843	COVER; RR	000000	000000
8970729470	8-9707	2947	SWITCH; OIL PRESSURE	000005	000012
8970732411	8-9707	3241	ANGLEICH KIT	000001	000000
8970732423	8-9707	3242	LINK ASM; CONTROL	000000	000000
8970732980	8-9707	3298	PLATE; A/CLEANER	000000	000000
8970732992			GRILLE; FRT END	000000	000001
8970733000			PANEL ASM; FRT	000000	000000
8970733220	8-9707	3322	SPRING; IDLE	000000	000000
8970733221	8-9707	3322	SPRING; IDLE	000000	000000
8970734161			PAN ASM; OIL	000000	000000
8970734770	8-9707	3477	PUMP ASM; INJECTION	000000	000000
8970736410	8-9707	3641	PLUG; GLOW, QOS-2	000000	000079
8970736411	8-9707	3641	PLUG; GLOW, QOS-2	000000	000000
8970736430	8-9707	3643	TIMER; GLOW PLUG	000002	000000
8970736471	8-9707	3647	PISTON STD	000000	000000
8970736840	8-9707	3684	CAMSHAFT	000000	000000
8970736841	8-9707	3684	CAMSHAFT	000000	000006
8970737400	8-9707	3740	VALVE ASM.; OVERFLOW	000000	000004
8970737820	8-9707	3782	BOLT; THRUST COLLAR	000000	000155
8970738510			PISTON	000000	000000
8970739140	8-9707	3914	GOVERNOR ASM; MECHANICAL	000000	000000
8970739381	8-9707	3938	SHAFT; IDLE GEAR	000000	000000
8970744430	8-9707	4443	PUMP ASM; FEEL	000000	000000
8970744441	8-9707	4444	GOVERNOR ASM; MECHANICAL	000000	000000
8970746120			ALTERNATOR	000000	000000
8970746141	8-9707	4614	ARM; ROCKER	000024	000361
8970746190	8-9707	4619	RING; BLOCK, LOW & 2ND	000000	000000
8970746191	8-9707	4619	RING; BLOCK, LOW & 2ND	000000	000000
8970746192	8-9707	4619	RING; BLOCK, LOW & 2ND	000000	000000
8970746193	8-9707	4619	RING; BLOCK, LOW & 2ND	000000	000026
8970746510	8-9707	4651	SEAL; OIL, RR COVER	000000	000000
8970747120	8-9707	4712	PULLEY; FAN	000007	000000
8970747130	8-9707	4713	PULLEY; FAN D=113	000000	000000
8970747270	8-9707	4727	PACKING; PAN GEAR CASE	000000	000000
8970747280	8-9707	4728	GASKET	000000	000000
8970747281	8-9707	4728	GASKET	000000	000017
8970747291	8-9707	4729	CASE; GEAR	000000	000000
8970747301	8-9707	4730	PLATE; FRONT	000000	000000
8970748280	8-9707	4828	SPRING; MAIN	000000	000001

8970749270	8-9707	4927	NUT SET; PULLEY	000000	000003
8970752680	8-9707	5268	BOLT;FR END BAR	000000	000000
8970752911	8-9707	5291	PUMP ASM.; INJ. FIG.52	000000	000000
8970752912	8-9707	5291	PUMP ASM.; INJ. FIG.52	000000	000000
8970752921	8-9707	5292	PUMP ASM.; INJ. FIG.52	000000	000000
8970752930	8-9707	5293	PUMP ASM.; INJ. FIG.52	000000	000000
8970754530	8-9707	5453	CAP; VLV STEM E.	000000	000000
8970755410	8-9707	5541	SPRING; LEAF #4	000000	000000
8970758020	8-9707	5802	COVER; HOUSING I/PUMP	000000	000000
8970758030	8-9707	5803	COVER; HOUSING I/PUMP	000000	000000
8970759650	8-9707	5965	FRAME; DRIVE	000000	000000
8970759950	8-9707	5995	CASE ASM.	000000	000000
8970759960	8-9707	5996	PAN ASM; DUST	000000	000013
8970759970	8-9707	5997	CASE ASM.	000000	000001
8970759980	8-9707	5998	PAN ASM; DUST	000000	000003
8970760550			STEM ASM; PARKING	000000	000000
8970762680	8-9707	6268	SPRING MAIN 2.0K	000000	000000
8970763940	8-9707	6394	BOLT*	000007	000000
8970763950	8-9707	6395	WASHER	000002	000000
8970763960	8-9707	6396	ELEMENT KIT; AIR	000000	000081
8970764530			PIPE; OIL, FLEX	000000	000001
8970764680	8-9707	6468	PULLEY; CRANK V1 V3	000000	000000
8970765803			GRILLE; RAD.	000000	000000
8970766400	8-9707	6640	SPRING; MAIN	000000	000000
8970766401	8-9707	6640	SPRING; MAIN	000000	000000
8970767031	8-9707	6703	CASE; GEAR,TRANS SID	000000	000000
8970767102			EMBLEM; RAD GRI	000000	000001
8970767110			GOVERNOR ASM; MECHANICAL	000000	000000
8970768892			EMBLEM; RAD GRI	000001	000001
8970768990			BRKT. ASM.; SILENCER	000000	000000
8970769000	8-9707	6900	BRKT. ASM.; SILENCER	000000	000000
8970769010	8-9707	6901	BRKT.; SPACER	000000	000000
8970769020	8-9707	6902	BAND ASM.; SILENCER	000000	000000
8970769030	8-9707	6903	SPRING; MAIN	000049	000000
8970769040	8-9707	6904	SPRING MAIN 3.5K	000002	000000
8970769050	8-9707	6905	SPRING; MAIN	000000	000000
8970769090	8-9707	6909	LABEL; TRANS	000000	000000
8970770980			TRANSMISSION	000000	000000
8970771500			TRANSMISSION	000000	000000
8970771670			TRANSMISSION	000000	000000
8970773370	8-9707	7337	GEAR; COUNTER	000000	000001
8970773382	8-9707	7338	GEAR; COUNTER	000000	000000
8970773391	8-9707	7339	GEAR; 5TH,MAINSHAFT	000000	000000
8970773411	8-9707	7341	GEAR; 5TH,COUNTER	000000	000000
8970773420	8-9707	7342	ARM; SHIFT, REV.-O.D.	000000	000000
8970773540	8-9707	7354	BRKT. ASM.; SILENCER	000000	000000
8970774130	8-9707	7413	BRKT.; SILENCER	000000	000000

8970774761	8-9707	7476	GOVERNOR ASM.; FIG.53	000000	000000
8970774770	8-9707	7477	GOVERNOR ASM.; FIG.53	000000	000000
8970774780	8-9707	7478	GOVERNOR ASM.; FIG.53	000000	000000
8970775490	8-9707	7549	STUD;EXHAUST MANIFOLD	000098	000411
8970776290	8-9707	7629	RUBBER; SUPPORT, FUEL	000000	000005
8970776380	8-9707	7638	BOLT; CYL HD TO BLOCK	002661	006324
8970776580	8-9707	7658	GAUGE; OIL LEVEL	000000	000000
8970776581	8-9707	7658	GAUGE; OIL LEVEL	000000	000000
8970776790	8-9707	7679	ANGLEICH KIT	000000	000000
8970777210	8-9707	7721	FLYWHEEL ASM	000000	000000
8970777740	8-9707	7774	PUMP ASM.; INJ.PFR FIG 52	000000	000000
8970777840	8-9707	7784	METAL KIT; STD (NO UNSI)	000000	000024
8970777870	8-9707	7787	COVER; INJ PUMP HOUSING	000000	000000
8970777880	8-9707	7788	HEAD GASKET	000000	000015
8970777890	8-9707	7789	PISTON; STD	000000	000000
8970777900	8-9707	7790	ROD ASM; CONN ROD	000000	000000
8970777901	8-9707	7790	ROD ASM; CONN ROD	000000	000000
8970777902	8-9707	7790	ROD ASM; CONN ROD	000000	000000
8970777903	8-9707	7790	ROD ASM; CONN ROD	000000	000000
8970777904	8-9707	7790	ROD ASM; CONN ROD	000000	000000
8970777905	8-9707	7790	ROD ASM; CONN ROD	000000	000007
8970777930	8-9707	7793	METAL SET; CONN ROD	000000	000068
8970777951	8-9707	7795	OIL PAN	000000	000000
8970777952	8-9707	7795	OIL PAN	000000	000000
8970777953	8-9707	7795	OIL PAN	000000	000002
8970777962	8-9707	7796	OIL PAN	000000	000000
8970777990	8-9707	7799	MANIFOLD; EXH.	000001	000000
8970778000	8-9707	7800	EXHAUST MANIFOLD GASKET	000000	000001
8970778011	8-9707	7801	SHAFT; CAM, INJ. PUMP & VALVE	000001	000000
8970778020	8-9707	7802	LINK ASM; CONTROL	000000	000000
8970778040	8-9707	7804	PIPE ASM; FUEL, FEED	000000	000000
8970778050	8-9707	7805	PIPE ASM; FUEL, LEAK OFF	000001	000000
8970778090	8-9707	7809	GASKET; CYL. HEAD COVER	000002	000000
8970778110	8-9707	7811	BRACKET; ROCKER	000000	000000
8970778111	8-9707	7811	BRACKET; ROCKER	000000	000000
8970778130	8-9707	7813	SHAFT; ROCKER	000000	000001
8970778140	8-9707	7814	PLUG; HOT	000000	000000
8970779321	8-9707	7932	FILTER ASM; FUEL	000000	000000
8970779322	8-9707	7932	FILTER ASM; FUEL	000000	000000
8970779323	8-9707	7932	FILTER ASM; FUEL	000000	000000
8970779324	8-9707	7932	ILTER ASM; FUEL	000000	000000
8970779830	8-9707	7983	PIPE ASM; OIL, TURBO	000000	000000
8970780860	8-9707	8086	SWITCH; OIL PRE	000000	000000
8970781570	8-9707	8157	PUMP ASM; INJ.	000000	000000
8970782040	8-9707	8204	ROD; SHIFT, 1ST & REV	000001	000005
8970782050	8-9707	8205	ROD; SHIFT, 2ND & 3RD	000000	000000
8970782060	8-9707	8206	ROD; SHIFT, OD TO TOP	000000	000003

8970783690	8-9707	8369	FLYWHEEL ASM.	000000	000000
8970783691	8-9707	8369	FLYWHEEL ASM;	000000	000000
8970783920			CLEAR FRT. CORNER LAMPS	000000	000004
8970783930			CLEAR FRT CORNER LAMPS	000000	000004
8970784670			BODY ASM.; OIL FILT	000000	000000
8970784671			BODY ASM.; OIL FILT	000000	000002
8970784710			GENERATOR ASM	000000	000000
8970784740	8-9707	8474	PULLEY; CRANK	000008	000024
8970785920	8-9707	8592	UNIT; THERMOMETER	000000	000079
8970786470	8-9707	8647	SWITCH ASM; MAG.	000005	000000
8970786480	8-9707	8648	HOUSING ASM.	000000	000000
8970786490	8-9707	8649	PINION; STARTER	000003	000000
8970786500	8-9707	8650	FRAME; STARTER	000000	000000
8970786510	8-9707	8651	SWITCH ASM; MAG.	000000	000000
8970786520	8-9707	8652	HOUSING ASM.	000003	000000
8970786530	8-9707	8653	CLUTCH ASM.	000002	000000
8970786830	8-9707	8683	CYLINDER; WHEEL	000000	000000
8970788521			GEAR; CRANK SHAFT	000000	000040
8970788522			GEAR; CRANK SHAFT	000000	000000
8970788532			GEAR; IDLER	000000	000046
8970788553			GEAR ASM; IDLE	000000	000000
8970788562			GEAR; DRIVE, INJ PUM	000000	000024
8970788790	8-9707	8879	PUMP ASM; P/S	000008	000015
8970789240	8-9707	8924	HOUSING; FLYWHEEL	000000	000000
8970789241	8-9707	8924	HOUSING; FLYWHEEL	000000	000001
8970789260	8-9707	8926	STARTER; NIKKO	000000	000000
8970789261	8-9707	8926	STARTER; NIKKO	000000	000000
8970789262	8-9707	8926	STARTER; NIKKO	000000	000000
8970789264	8-9707	8926	STARTER; NIKKO	000001	000000
8970792120	8-9707	9212	GEAR; CAMSHAFT	000000	000000
8970792121	8-9707	9212	GEAR; CM/SHF	000000	000000
8970795200	8-9707	9520	RETAINER; CRANK	000000	000026
8970795210			PLATE, DRIVEN	000000	000006
8970796270			PLATE; GUIDE	000000	000000
8970796530	8-9707	9653	NOZZLE ASM; INJ.	000000	000003
8970798210	8-9707	9821	SENSOR ASM	000001	000000
8970799760			NOZZLE ASM; INJ. 3L	000000	000000
8970799761	8-9707	9976	NOZZLE ASM; INJ. 3L	000000	000144
8970801090			HOSE; RUBBER	000000	000000
8970801840	8-9708	0184	BEARING; COUNTER GEAR, RR	000000	000178
8970801850	8-9708	0185	BEARING; COUNTER GEAR, RR	000000	000001
8970801902	8-9708	0190	OIL PAN	000000	000000
8970801903	8-9708	0190	OIL PAN	000000	000001
8970801940	8-9708	0194	GASKET; OIL PAN	000000	000119
8970802141	8-9708	0214	VAVLE; INJ., OD=42.14	000000	000000
8970802150	8-9708	0215	RING SET PISTON STD	000000	000000
8970803010	8-9708	0301	PIPE; OIL PUMP	000000	000000

8970803401	8-9708	0340	GEAR ASM.; DRVN, SP. Z=16	000000	000000
8970803411	8-9708	0341	GEAR ASM.; DRVN, SP. Z=17	000000	000000
8970803600	8-9708	0360	BUSHNG;DRIVN GEAR,SPDMTR	000000	000000
8970803601	8-9708	0360	BUSHNG;DRIVN GEAR,SPDMTR	000010	000059
8970803610	8-9708	0361	BUSHNG;DRIVN GEAR,SPDMTR	000000	000000
8970803611	8-9708	0361	BUSHNG;DRIVN GEAR,SPDMTR	000000	000012
8970803620	8-9708	0362	BUSHING; DRIVEN GEAR	000000	000000
8970803621	8-9708	0362	BUSHING; DRIVEN GEAR	000000	000009
8970803631	8-9708	0363	BUSH ASM.; DRVN GEAR, SPE	000000	000000
8970804670	8-9708	0467	CABLE ASM; ENG STOP	000006	000012
8970804700	8-9708	0470	COVER ASM.; REAR	000000	000000
8970804720	8-9708	0472	BODY; VAC PUMP	000000	000000
8970805050			JOURNAL ASM; PROP. SHAFT	000000	000000
8970805051			JOURNAL ASM; PROP. SHAFT	000157	000304
8970805070	8-9708	0507	SEAL; OIL, DRIVEN GEAR	000000	000018
8970805600	8-9708	0560	RING; CAM-RR	000000	000000
8970805880	8-9708	0588	HOSE; SURGE TANK	000000	000009
8970805900	8-9708	0590	GOVERNOR ASM; MECHANICAL	000000	000000
8970806910			SEAL UNIT; WATER PU	000000	000014
8970807730	8-9708	0773	PLATE; ADJ.	000000	000000
8970808930	8-9708	0893	GASKET; RET.	000000	000000
8970809590			PISTON; STD	000000	000000
8970811470			LH BRAKE WHEEL CYL	000000	000000
8970811480			RH BRAKE WHEEL CYL	000000	000000
8970811540			FILLER ASM; OIL	000000	000000
8970811670	8-9708	1167	TRANSMISSION ASM	000000	000000
8970812300	8-9708	1230	GUAGE ASM; OIL L=183	000000	000000
8970814360	8-9708	1436	PUMP ASM; INJ.	000000	000057
8970814370	8-9708	1437	GOVERNOR ASM; MECHANICAL	000000	000000
8970815310			BUSHING; SHACKLE	000000	000000
8970815393	8-9708	1539	GEAR; REV IDLER	000000	000004
8970815480	8-9708	1548	GOVERNOR ASM; MECHANICAL	000000	000000
8970815730	8-9708	1573	PUMP ASM; INJ.	000000	000000
8970815731	8-9708	1573	PUMP ASM; INJ.	000000	000000
8970816450	8-9708	1645	INJ PUMP ASM	000000	000004
8970816463	8-9708	1646	FILTER ASM; FUEL	000000	000000
8970816880			GASKET; THERMOSTAT	000000	000000
8970816890			GASKET; COVER	000000	000093
8970817130	8-9708	1713	CRANKSHAFT ASM; (TOCCO)	000000	000000
8970817421	8-9708	1742	COVER ASM; CYL.	000000	000000
8970817422	8-9708	1742	COVER ASM; CYL.	000000	000000
8970817450	8-9708	1745	PIPE; OIL RETURN	000001	000000
8970817560	8-9708	1756	BODY ASM	000000	000014
8970817590	8-9708	1759	BRACKET; OIL FILTER	000000	000000
8970817781			STAY; OIL TANK	000000	000000
8970817782			STAY; OIL TANK	000000	000001
8970818040			PUMP ASM; FEED	000000	000000

8970818041	8-9708	1804	PUMP ASM; FEED	000000	000000
8970819271	8-9708	1927	HOUSING; FLYWHEEL L=83.5	000000	000000
8970819272	8-9708	1927	HOUSING; FLYWHEEL L=83.5	000000	000000
8970819280	8-9708	1928	GEAR; IDLE Z=66	000000	000001
8970819301	8-9708	1930	GEAR; PTO Z=30	000001	000000
8970820540	8-9708	2054	GOVERNOR ASM; MECHANICAL	000000	000000
8970820730	8-9708	2073	COVER ASM; CYL.HEAD	000000	000000
8970821140	8-9708	2114	SPRING; IDLE	000001	000000
8970821141	8-9708	2114	SPRING; IDLE	000000	000000
8970829720	8-9708	2972	RING	000000	000000
8970831211	8-9708	3121	PISTON STANDARD	000000	000000
8970831620	8-9708	3162	VALVE SEAT: INSERT, INL	000000	000000
8970831930	8-9708	3193	ARMATURE ASM.	000001	000000
8970831940	8-9708	3194	BRUSH SET (+/-)	000000	000000
8970831950	8-9708	3195	BEARING; ARMATURE	000000	000000
8970831960	8-9708	3196	SWITCH; MAGNETIC	000000	000000
8970832590	8-9708	3259	FAN ASM.; D=360 7 SUCTION	000000	000000
8970832591	8-9708	3259	FAN ASM.; D=360 7 SUCTION	000000	000000
8970833140	8-9708	3314	BELT; COOLING FAN	000000	000000
8970833300	8-9708	3330	CONNECTR; P.V.C.	000000	000000
8970833370	8-9708	3337	SHIM; FRT COVER	000000	000000
8970833450	8-9708	3345	PLUNGER ASM.	000000	000000
8970833460	8-9708	3346	VALVE; DELIVERY	000000	000018
8970833470	8-9708	3347	SEAT; SPRING	000000	000004
8970833480	8-9708	3348	SLEEVE	000000	000015
8970833490	8-9708	3349	PIN	000001	000011
8970833500	8-9708	3350	RING; SNAP	000000	000007
8970833550	8-9708	3355	RACK; CONTROL	000000	000000
8970833551	8-9708	3355	RACK; CONTROL	000000	000000
8970833553	8-9708	3355	RACK; CONTROL	000000	000000
8970833580	8-9708	3358	SPACER	000000	000006
8970835760	8-9708	3576	PUMP SUB ASM; OIL	000000	000000
8970835761	8-9708	3576	PUMP SUB ASM; OIL	000000	000001
8970835890	8-9708	3589	GASKET;FRT COVER TO TRANS	000018	000011
8970835900	8-9708	3590	HOSE; P.V.C.	000000	000000
8970835901	8-9708	3590	HOSE; P.V.C.	000003	000050
8970835910	8-9708	3591	HOSE; P.V.C.	000000	000000
8970835911	8-9708	3591	HOSE; P.V.C.	000003	000001
8970835990	8-9708	3599	GASKET; QUAD BOX	000000	000000
8970836001	8-9708	3600	GASKET; DETENT SPR PLATE	000000	000000
8970837140	8-9708	3714	SPRING; SET	000000	000000
8970837141	8-9708	3714	SPRING; SET	000000	000006
8970837210			CLUTCH; DISC (TURBO)	000000	000000
8970837220			PLATE;DRIVEN	000000	000000
8970837230	8-9708	3723	DISC; CLUTCH	000000	000000
8970837330			PIPE;EXH	000000	000001
8970837380			PIPE;EXH,BRK V	000000	000001

8970837430			PIPE;EXH,RR	000000	000001
8970840280	8-9708	4028	PUMP ASM; INJ.	000000	000000
8970840291	8-9708	4029	PUMP ASM.; INJ.	000000	000000
8970840300	8-9708	4030	PAN ASM; OIL	000000	000000
8970840510	8-9708	4051	LABEL; TRANS	000000	000000
8970840660	8-9708	4066	PIPE ASM; OIL, TURBO FEED	000000	000000
8970840670	8-9708	4067	PIPE ASM; OIL,TURBO RETUR	000000	000000
8970840700	8-9708	4070	CASE; BEARING	000000	000000
8970840710	8-9708	4071	BEARING; UNIT	000000	000000
8970840720	8-9708	4072	TURBOCHARGER ASM; FIG.65	000000	000000
8970840740	8-9708	4074	ADAPTER;THROTTLE,BODY,EXH	000000	000000
8970840741	8-9708	4074	ADAPTER;THROTTLE,BODY,EXH	000000	000000
8970840751	8-9708	4075	HOSE; RUBBER,T/C-INL.PIPE	000002	000000
8970841310	8-9708	4131	PULLEY; ACG.	000002	000000
8970842150	8-9708	4215	BRACKET; GENERATOR	000000	000000
8970842151	8-9708	4215	BRACKET; GENERATOR	000002	000000
8970842730	8-9708	4273	SPACER; STAY TO EXH.MANI	000002	000000
8970843250	8-9708	4325	SPRING	000000	000000
8970843251	8-9708	4325	SPRING	000000	000001
8970843470	8-9708	4347	GASKET	000000	000000
8970843480	8-9708	4348	PUMP ASM; FEED	000000	000000
8970843781	8-9708	4378	GEAR; 1ST,MAINSHAFT	000001	000000
8970843901	8-9708	4390	STIFFNER; OIL PAN	000000	000000
8970845050			PUMP ASM	000000	000000
8970845051			PUMP ASM	000000	000002
8970845080	8-9708	4508	PIPE; INLET, WATER	000000	000000
8970845380			HOSE; RUBBER,AIR BREATHER	000000	000000
8970845540	8-9708	4554	PIPE; OIL, OIL JET	000000	000000
8970845550	8-9708	4555	PUMP ASM; INJ.	000000	000002
8970846170	8-9708	4617	NUT: NOZZLE	000001	000003
8970847070	8-9708	4707	SWITCH ASM MAG.	000000	000000
8970848770	8-9708	4877	STARTER; HITACHI	000000	000013
8970848860	8-9708	4886	SILENCER; EXHAUST	000000	000001
8970848930	8-9708	4893	VALVE; INLET 3LB1	000000	000000
8970848940	8-9708	4894	VALVE; INLET	000000	000000
8970849240	8-9708	4924	RADIATOR ASM	000000	000005
8970849531			POWER STEERING PUMP	000000	000000
8970849560			NIPPLE; OIL PIPE	000000	000000
8970849770	8-9708	4977	SLEEVE ASM	000000	000000
8970849771	8-9708	4977	SLEEVE ASM	000000	000000
8970849890	8-9708	4989	BEARING;CM/SHF RR INJ PUM	000004	000000
8970850000	8-9708	5000	SCREW;FRT COVER TO HSG	000000	000000
8970850030	8-9708	5003	GASKET; FRT COVER TO HSG	000000	000000
8970850210	8-9708	5021	C A P	000000	000000
8970850220	8-9708	5022	CAP	000010	000000
8970851130	8-9708	5113	GASKET;FRT COVER TO HSG	000000	000002
8970851310			BELT; P/S PUMP	000000	000000

8970851330	8-9708	5133	CASE; GEAR-TIMING	000000	000000
8970851331	8-9708	5133	CASE; GEAR-TIMING	000000	000000
8970851340	8-9708	5134	CASE; GEAR	000000	000000
8970851342	8-9708	5134	CASE; GEAR	000000	000000
8970851351	8-9708	5135	PLATE; FRONT	000000	000000
8970851670	8-9708	5167	GAUGE ASM; LEVEL,OIL	000000	000000
8970851740	8-9708	5174	PAN ASM; OIL	000000	000001
8970851750	8-9708	5175	PAN ASM; OIL	000000	000000
8970851760	8-9708	5176	PAN ASM; OIL	000000	000001
8970853470	8-9708	5347	HOUSING ASM; PCV	000000	000002
8970853670	8-9708	5367	EXHAUST MANIFOLD	000000	000000
8970853671	8-9708	5367	EXHAUST MANIFOLD	000006	000000
8970853890	8-9708	5389	HANGER; FRT.	000001	000001
8970853900	8-9708	5390	HANGER; RR	000000	000001
8970856600	8-9708	5660	PLATE ASM; SUB, FRONT	000000	000000
8970856611	8-9708	5661	CASE; GEAR, TIMING	000000	000001
8970856612	8-9708	5661	CASE; GEAR, TIMING	000000	000000
8970858101	8-9708	5810	CONNECTOR; GLOW PLUG	000000	000000
8970858260	8-9708	5826	GASKET; CYL. HEAD	000000	000000
8970858511			EVAPORATOR; A/C	000000	000000
8970858860	8-9708	5886	GASKET; CYL. HEAD COVER	000000	000000
8970861410	8-9708	6141	SPACER	000000	000000
8970861420	8-9708	6142	NUT; RETAINING	000000	000000
8970861530	8-9708	6153	BELT;TIMING	000003	000000
8970862170			HOSE; FLEX A/C	000000	000000
8970862230			HOSE; FLEX,A/C	000000	000000
8970862231	8-9708	6223	HOSE; FLEX,A/C	000000	000000
8970862281	8-9708	6228	PIECE; SLIDING	000000	000000
8970862450	8-9708	6245	SEDIMENTER ASM.	000000	000000
8970862451	8-9708	6245	SEDIMENTER ASM.	000000	000000
8970862452	8-9708	6245	SEDIMENTER ASM.	000000	000000
8970862453	8-9708	6245	SEDIMENTER ASM.	000000	000023
8970862770	8-9708	6277	GOVERNOR ASM.	000000	000000
8970862771	8-9708	6277	GOVERNOR ASM.	000000	000000
8970862920	8-9708	6292	GASKET; THROTTLE	000000	000000
8970862921	8-9708	6292	GASKET; THROTTLE	000000	000004
8970864870	8-9708	6487	VENTILATOR ASM.	000003	000000
8970866941	8-9708	6694	HOSE; RUBBER,WATER PIPE	000000	000000
8970867590	8-9708	6759	GASKET, VLV	000000	000000
8970867650	8-9708	6765	PUMP ASM.; INJ. FIG.52	000000	000000
8970868250			BOLT; EARTH/HYD UNIT	000000	000000
8970869610	8-9708	6961	GASKET; INLET P.	000000	000000
8970870550			BOLT; EARTH,HARNESS	000105	000000
8970870571	8-9708	7057	HANGER; FRT., ENG. LIFTIN	000000	000020
8970870930	8-9708	7093	PUMP ASM; INJ.	000000	000000
8970871050	8-9708	7105	PISTON; OVSI 0.25	000000	000005
8970871060	8-9708	7106	PISTON; O/S 0.25	000000	000011

8970871130	8-9708	7113	PISTON; OVSI 0.25	000000	000000
8970871140	8-9708	7114	PISTON; OVSI 0.25	000000	000000
8970871210	8-9708	7121	PISTON; O/S 0.25	000000	000010
8970872030			BOLT; EARTH CABLE FIX	000000	000000
8970872040			BOLT; BRKT TO BODY	000000	000036
8970874400	8-9708	7440	LEVER	000000	000000
8970874410	8-9708	7441	LEVER	000000	000000
8970876890	8-9708	7689	PAN ASM.; OIL, L=119.5	000000	000000
8970876892	8-9708	7689	PAN ASM.; OIL, L=119.5	000000	000000
8970876911	8-9708	7691	PAN ASM.; OIL, L=147.5	000000	000000
8970876912	8-9708	7691	PAN ASM.; OIL, L=147.5	000000	000000
8970876913	8-9708	7691	PAN ASM.; OIL, L=147.5	000001	000000
8970876930	8-9708	7693	STRAINER ASM.; OIL	000001	000000
8970876940	8-9708	7694	STRAINER ASM.; OIL	000000	000000
8970877270	8-9708	7727	LEVEL GUAGE; OIL, L=130	000000	000001
8970877281	8-9708	7728	LEVEL GUAGE; OIL, L=165	000000	000000
8970877283	8-9708	7728	LEVEL GUAGE; OIL, L=165	000000	000016
8970877500	8-9708	7750	NUT; MAINSHAFT	000000	000009
8970878040			PUMP ASM; WATER	000000	000006
8970878041			PUMP ASM; WATER	000000	000000
8970880720	8-9708	8072	FRAME; END	000000	000000
8970880730	8-9708	8073	CAP; TERMINAL, RUBBER	000000	000000
8970881950	8-9708	8195	CABLE; SHIFT	000000	000005
8970884460			DIAPHRAGM; PCV	000000	000069
8970884782	8-9708	8478	PULLEY; CR/SHF	000000	000000
8970884783	8-9708	8478	PULLEY; CR/SHF	000000	000000
8970884784	8-9708	8478	PULLEY; CR/SHF	000000	000000
8970885990	8-9708	8599	PUMP ASM; INJ.	000000	000000
8970886010	8-9708	8601	GOVERNOR ASM; MECHANICAL	000000	000000
8970886110	8-9708	8611	PAN ASM; OIL	000000	000000
8970886130	8-9708	8613	TUBE; GUIDE, OIL L/GAUGE	000000	000000
8970886970	8-9708	8697	PIN; RETAINING	000000	000000
8970887070	8-9708	8707	ALTERNATOR	000000	000000
8970887080	8-9708	8708	BRACKET; AC GENERATO	000000	000000
8970887170	8-9708	8717	COIL ASM.; FIELD	000000	000000
8970887791			LINK; DRAG	000000	000000
8970887792			LINK; DRAG	000000	000000
8970888001			HOSE RUBBER OUT	000000	000000
8970888002	8-9708	8800	HOSE RUBBER OUT	000000	000000
8970888140	8-9708	8814	GAUGE ASM; OIL	000000	000020
8970891640	8-9708	9164	BRACKET; GEN.	000001	000000
8970892800	8-9708	9280	CYL HEAD ASM	000000	000000
8970892801	8-9708	9280	CYL HEAD ASM	000000	000000
8970892802	8-9708	9280	CYL HEAD ASM	000000	000000
8970892804	8-9708	9280	CYL HEAD ASM	000000	000000
8970892805	8-9708	9280	CYL HEAD ASM	000000	000000
8970894271	8-9708	9427	PUMP ASM; INJ.	000000	000000

8970894280	8-9708	9428	BOLT; CAM PULLEY	000000	000157
8970895431	8-9708	9543	FLYWHEEL ASM	000000	000000
8970896160			BRACKET; CMPR	000000	000000
8970896520	8-9708	9652	BLOCK; SHIFT,CLU	000023	000109
8970896820	8-9708	9682	HOSE; FLEXIBLE, PART	000000	000000
8970896830	8-9708	9683	HOSE; FLEXIBLE, PART	000000	000000
8970897980	8-9708	9798	CRANKCASE	000000	000000
8970898450	8-9708	9845	WASHER; THRUST	000005	000000
8970898810	8-9708	9881	GASKET; GEAR CASE	000000	000000
8970898910	8-9708	9891	THERMOSTAT	000000	000000
8970899320	8-9708	9932	SHAFT; IDLE GEAR, B	000001	000000
8970899380	8-9708	9938	REAR COVER ASM.;	000000	000000
8970899390	8-9708	9939	REAR COVER; GENERATO	000000	000000
8970899410	8-9708	9941	PULLEY; GENERATOR	000000	000000
8970899863			CABLE; SHIFT TR	000000	000001
8970900190			RADIATOR ASM	000000	000000
8970900191			RADIATOR ASM	000000	000000
8970900192			RADIATOR ASM	000000	000000
8970906200	8-9709	0620	BOLT IDLE PULLEY L=100	000000	000025
8970906540	8-9709	0654	SPACER; F/W	000000	000000
8970906541	8-9709	0654	SPACER; F/W	000000	000000
8970908300	8-9709	0830	PUMP ASM: INJ	000000	000000
8970908302	8-9709	0830	PUMP ASM: INJ	000000	000002
8970908420	8-9709	0842	HOLDER ASM; NOZZLE	000000	000000
8970908421	8-9709	0842	HOLDER ASM; NOZZLE	000001	000000
8970908610			SWITCH; IGNITION	000000	000001
8970908790			GASKET; THERMOSTAT H	000000	000010
8970908810	8-9709	0881	PACKING; G.CASE-C/BLOCK	000000	000001
8970912901	8-9709	1290	CONTROLLER; ENGINE	000000	000000
8970914090	8-9709	1409	FLYWHEEL ASM.	000000	000000
8970914101	8-9709	1410	FLYWHEEL ASM.	000000	000000
8970914102	8-9709	1410	FLYWHEEL ASM.	000000	000056
8970914110	8-9709	1411	FLYWHEEL ASM.	000000	000000
8970914111	8-9709	1411	FLYWHEEL ASM.	000000	000000
8970914122	8-9709	1412	FLYWHEEL ASM.	000001	000006
8970914140	8-9709	1414	FLYWHEEL	000000	000000
8970914320	8-9709	1432	SYNCHRONIZER ASM; 2ND-3RD	000000	000000
8970914340	8-9709	1434	SYNCHRONIZER; LOW-REV	000000	000001
8970915400	8-9709	1540	CONNECTOR; ACG.	000000	000003
8970915570	8-9709	1557	SHAFT; TOP GEAR	000000	000000
8970915581	8-9709	1558	SHAFT; TOP GEAR,	000000	000000
8970917300	8-9709	1730	GOVERNOR ASM.	000000	000000
8970918890	8-9709	1889	ANGLEICH KIT	000000	000000
8970919290	8-9709	1929	BRACKET; FLEX, HOSE	000000	000000
8970920680			RUBBER; ENG FOO	000000	000003
8970931060	8-9709	3106	REAR COVER	000000	000000
8970931180	8-9709	3118	SYNCHRONIZER ASM; 2ND/3RD	000000	000000

8970933260	8-9709	3326	BOLT; FLYWHEEL	000000	000000
8970933640	8-9709	3364	COVER; REAR	000000	000002
8970934350	8-9709	3435	HOUSING ASM.; GOVERNOR	000000	000000
8970934490	8-9709	3449	SHAFT	000000	000000
8970934870	8-9709	3487	HOUSING	000000	000000
8970934880	8-9709	3488	PLATE	000000	000000
8970935030	8-9709	3503	PULLEY; CRANKSHAFT	000000	000000
8970935031	8-9709	3503	PULLEY; CRANKSHAFT	000000	000003
8970935431			MOTOR ASM.; ENG.	000000	000000
8970935491			LEVER KIT;GOVERNOR	000000	000000
8970935492	8-9709	3549	LEVER KIT;GOVERNOR	000000	000000
8970935493	8-9709	3549	LEVER KIT;GOVERNOR	000000	000000
8970935494	8-9709	3549	LEVER KIT;GOVERNOR	000000	000001
8970935740	8-9709	3574	GASKET; EXH PIPE	000000	000000
8970935741	8-9709	3574	GASKET; EXH PIPE	000000	000000
8970936393			BRACKET; FRT BU	000000	000000
8970936610	8-9709	3661	HEAD ASM; CYL.	000000	000003
8970936910			RADIATOR ASM	000000	000000
8970936911			RADIATOR ASM	000000	000000
8970936912			RADIATOR ASM	000000	000000
8970936921			RADIATOR ASM	000000	000000
8970937660	8-9709	3766	GOVERNOR ASM.; FIG.53A	000000	000000
8970942011	8-9709	4201	BRACKET; ENG. CONT.	000000	000000
8970942920	8-9709	4292	LEVER; "B" ENGINE	000000	000020
8970943710	8-9709	4371	SWITCH; IGNITION	000000	000000
8970944342			DRUM, BRK, FRT	000000	000002
8970944400	8-9709	4440	GEAR; CM/SHF	000000	000000
8970944401	8-9709	4440	GEAR; CM/SHF	000000	000000
8970944402	8-9709	4440	GEAR; CM/SHF	000000	000026
8970944641	8-9709	4464	ISOLATOR;	000000	000001
8970944701	8-9709	4470	SILENCER ASM.; EXH.	000000	000000
8970944702	8-9709	4470	SILENCER ASM.; EXH.	000000	000001
8970944710	8-9709	4471	ANGELICH KIT	000000	000000
8970946120	8-9709	4612	PISTON; STD (NO OVSI)	000000	000000
8970946410	8-9709	4641	STUD	000000	000000
8970946411	8-9709	4641	STUD	000000	000007
8970946760	8-9709	4676	BRACKET; ADJ PLATE-E/HANG	000000	000000
8970946900	8-9709	4690	AEOP PART	000000	000000
8970946902	8-9709	4690	PIPE ASM: INJ #4	000000	000000
8970946920	8-9709	4692	AEOP PART	000000	000000
8970946922	8-9709	4692	PIPE ASM: INJ #2	000000	000000
8970946930	8-9709	4693	AEOP PART	000000	000000
8970946932	8-9709	4693	PIPE ASM: INJ #3	000000	000000
8970947290	8-9709	4729	ENGINE ASM.; PARTIAL	000000	000000
8970949433			RETAINER; FRT	000000	000001
8970950980			EYE	000000	000000
8970950990			EYE	000000	000000

8970951420	8-9709	5142	HOUSING	000099	000174
8970951671	8-9709	5167	BLOCK ASM; CYLINDER	000000	000000
8970951672	8-9709	5167	BLOCK ASM; CYLINDER	000000	000000
8970953601	8-9709	5360	PROTECTOR; HEAT EXH	000000	000000
8970955120	8-9709	5512	PACKING;PUMP TO F.PLATE	000000	000012
8970955480	8-9709	5548	PACKING; INJ. PUMP BRKT.	000000	000000
8970955481	8-9709	5548	PACKING; INJ. PUMP BRKT.	000000	000001
8970956130	8-9709	5613	PACKING; CYL. BODY-ADP.	000000	000000
8970956131	8-9709	5613	PACKING; CYL. BODY-ADP.	000000	000000
8970958411	8-9709	5841	PIPE; WATER OUTLET	000000	000002
8970958530	8-9709	5853	FILLER; OIL (D=7)	000003	000000
8970959130	8-9709	5913	BEARING; BALL (KOYO)	000000	000000
8970959131	8-9709	5913	BEARING; COUNT	000000	000000
8970959402	8-9709	5940	AEOP PART	000000	000000
8970959403	8-9709	5940	HOSE; RUBBER, PCV. L1=885	000000	000000
8970959460	8-9709	5946	KEY SET; STARTER SWITCH	000000	000006
8970959640	8-9709	5964	GENERATOR;HITACHI FIG.63J	000000	000000
8970959650	8-9709	5965	GENERATOR;HITACHI FIG.63I	000000	000000
8970959840	8-9709	5984	PLATE; CLUSTER GEAR	000000	000000
8970961920	8-9709	6192	NUT; EXH PIPE	000000	000000
8970961921	8-9709	6192	NUT; EXH PIPE	000414	004335
8970962060	8-9709	6206	CASE; CRANK	000000	000000
8970963940	8-9709	6394	HOSE; VINYL	000000	000000
8970963970	8-9709	6397	OIL PAN ASM	000000	000000
8970964020	8-9709	6402	PIPE ASM; FUEL	000000	000001
8970964030	8-9709	6403	PIPE; FUEL FEED	000000	000005
8970966970	8-9709	6697	CLEANER ASM.; AIR, FIG.74	000000	000000
8970967000	8-9709	6700	TUBE ASM.; GUIDE	000000	000000
8970967090	8-9709	6709	FAN ASM;	000000	000000
8970967091	8-9709	6709	FAN ASM;	000000	000010
8970967110	8-9709	6711	FAN ASM.; D=350 6 BLOW	000000	000000
8970967111	8-9709	6711	FAN ASM.; D=350 6 BLOW	000001	000000
8970967131	8-9709	6713	GAUGE; OIL LEVEL	000000	000001
8970967140	8-9709	6714	LEVEL GAUGE; OIL	000001	000000
8970967780			ELEMENT; OIL	000000	000000
8970968210	8-9709	6821	CUP SEALING,CYL HEAD	000000	000032
8970968240	8-9709	6824	CUP;SEALING,FRT & RR	000001	000007
8970968260	8-9709	6826	CUP; SEALING	000000	001363
8970969490			HOSE; RETURN P.	000000	000000
8970969491			HOSE; RETURN P.	000005	000005
8970971220	8-9709	7122	PISTON; OVSI 0.25	000000	000000
8971000850	8-9710	0085	PISTON	000000	000000
8971000853	8-9710	0085	PISTON	000000	000000
8971001600	8-9710	0160	LEVEL GAUGE; OIL L=111	000000	000005
8971002121	8-9710	0212	BRAKE ASM; CENTER	000000	000000
8971002122	8-9710	0212	BRAKE ASM; CENTER	000000	000000
8971002123	8-9710	0212	BRAKE ASM; CENTER	000015	000000

8971002650	8-9710	0265	PUMP ASM; INJ.	000000	000000
8971002670	8-9710	0267	GOVERNOR ASM	000000	000000
8971004890	8-9710	0489	HOUSING; CLU	000000	000000
8971006350	8-9710	0635	FLYWHEEL ASM;	000000	000000
8971006960	8-9710	0696	GASKET; COUPLING DRIVE	000000	000049
8971007140	8-9710	0714	PUMP ASM.; INJ. FIG.52	000000	000000
8971007910			GASKET;HEAD	000000	000007
8971009152	8-9710	0915	ARM; SHIFT 4X2-4X4,TRANSF	000000	000000
8971010401			BRACKET	000000	000003
8971012810	8-9710	1281	SHAFT; IDLE GEAR	000000	000000
8971013270	8-9710	1327	PIPE; AIR INLET	000000	000000
8971013340	8-9710	1334	COVER ASM; AIR INLET	000000	000000
8971013561	8-9710	1356	POWER STEERING UNIT	000000	000000
8971013577			STEERING UNIT	000000	000000
897101464C			CORE: HEAD ASM; CYL.	000000	000000
8971014640	8-9710	1464	HEAD ASM; CYL.	000000	000000
8971014641	8-9710	1464	HEAD ASM; CYL.	000000	000000
8971014642	8-9710	1464	HEAD ASM; CYL.	000000	000024
8971015021	8-9710	1502	WASHER; IDLE GEAR SHAFT	000000	000000
8971015240	8-9710	1524	PAN ASM.; OIL, L=127.2	000000	000000
8971015241	8-9710	1524	PAN ASM.; OIL, L=127.2	000000	000000
8971015261	8-9710	1526	STRAINER ASM.; OIL	000000	000000
8971018730	8-9710	1873	AEOP PART	000000	000000
8971018732	8-9710	1873	PIPE ASM: INJ #1	000000	000004
8971019430			BRACKET; POWER	000000	000000
8971019740	8-9710	1974	PLUG;SENSOR HOLE	000000	000004
8971021230	8-9710	2123	VALVE; INLET	000000	000000
8971021231	8-9710	2123	VALVE; INLET	000000	000061
8971021240	8-9710	2124	VALVE; INLET 3LB1	000000	000000
8971021241	8-9710	2124	VALVE; INLET 3LB1	000000	000229
8971021250	8-9710	2125	ANGLEICH KIT	000000	000000
8971021370	8-9710	2137	PIPE ASM;INJ.1,2,3, ID2.0	000000	000000
8971021371	8-9710	2137	PIPE ASM;INJ.1,2,3, ID2.0	000000	000006
8971021481	8-9710	2148	HOSE; RUBBER, HEAD TO O/C	000000	000002
8971021491	8-9710	2149	HOSE; RUBBER, O/C TO CONN	000000	000000
8971022570	8-9710	2257	CONTROL UNIT; A/T	000000	000000
8971022870	8-9710	2287	PISTON; STD	000000	000000
8971022880	8-9710	2288	GEAR; INJ. PUMP	000000	000000
8971022881	8-9710	2288	GEAR; INJ. PUMP	000000	000000
8971022882	8-9710	2288	GEAR; INJ. PUMP	000000	000008
8971023020	8-9710	2302	SPRING; IDLE	000000	000000
8971023071	8-9710	2307	PIPE; OIL JET	000000	000003
8971023080	8-9710	2308	JOINT; 3 WAY	000000	000013
8971023200	8-9710	2320	COOLER ASM.; OIL	000000	000026
8971024510	8-9710	2451	PLUG; SOLENOID HOLE	000000	000000
8971025120	8-9710	2512	HEAD ASM.; CYL.	000000	000000
8971025141	8-9710	2514	COVER ASM; GOVERNOR LEVER	000000	000000

8971025170	8-9710	2517	HOSE; PCV., G/CVR-R/BRKT.	000000	000000
8971025171	8-9710	2517	HOSE; PCV., G/CVR-R/BRKT.	000000	000003
8971025180	8-9710	2518	HOSE; PCV,C/VLV TO C/BLOC	000000	000000
8971025181	8-9710	2518	HOSE; PCV,C/VLV TO C/BLOC	000000	000013
8971025190	8-9710	2519	HOSE; PCV,R/BRKT TO C/VAL	000000	000000
8971025191	8-9710	2519	HOSE; PCV,R/BRKT TO C/VAL	000000	000004
8971025491	8-9710	2549	BRACKET; ROCKER	000000	000000
8971025501	8-9710	2550	STUD; OIL COOLER, L1=13.5	000000	000046
8971025530	8-9710	2553	SILENCER ASM.; EXH.	000000	000000
8971026220	8-9710	2622	PIPE; WATER TURBOCHARGER	000020	000035
8971026660	8-9710	2666	GUARD; GENERATOR	000003	000000
8971026770	8-9710	2677	PIPE; WATER, OUTLET	000002	000000
8971028680	8-9710	2868	SHIM; T-0.40	000000	000000
8971028790	8-9710	2879	HOSE;RUBBER, CONN TO W/P.	000000	000025
897103027T			HEAD ASM; CYL	000000	000000
8971030272	8-9710	3027	HEAD ASM; CYL	000000	000000
8971030273	8-9710	3027	HEAD ASM; CYL	000003	000006
8971031150	8-9710	3115	BUSHING	000000	000000
8971032840	8-9710	3284	COVER; TURBO RETURN	000000	000000
8971033940			COVER; OIL TANK	000000	000015
8971036250	8-9710	3625	GOVERNOR ASM.; FIG.53	000000	000000
8971036320	8-9710	3632	SHAFT; TOP GEAR	000000	000000
8971037321			LAMP ASM; RR COMB	000000	000001
8971037331			LAMP ASM; RR CO	000000	000001
8971038070	8-9710	3807	BEARING; ROTOR,GEN	000000	000000
8971040230	8-9710	4023	GEAR; 5TH, MAINSHAFT	000000	000000
8971040231	8-9710	4023	GEAR; 5TH, MAINSHAFT	000000	000000
8971040232	8-9710	4023	GEAR; 5TH, MAINSHAFT	000000	000000
8971040260	8-9710	4026	SYNCHRONIZER ASM, 2ND & 4	000001	000000
8971040270	8-9710	4027	SYNCHRONIZER; 4TH & 3RD	000000	000000
8971041020	8-9710	4102	GOVERNOR ASM.; FIG.53	000001	000000
8971041021	8-9710	4102	GOVERNOR ASM.; FIG.53	000000	000000
8971041610	8-9710	4161	GEAR;COUNTER	000000	000000
8971041611	8-9710	4161	GEAR;COUNTER	000000	000000
8971041890	8-9710	4189	SEDIMENTER ASM;FUEL	000000	000000
8971041891	8-9710	4189	SEDIMENTER ASM;FUEL	000000	000000
8971041892	8-9710	4189	SEDIMENTER ASM;FUEL	000000	000005
8971041940	8-9710	4194	CAP; RAD	000018	000001
8971043580	8-9710	4358	ROTOR ASM.	000000	000000
8971043590	8-9710	4359	STATOR ASM.	000000	000000
8971043600	8-9710	4360	COVER ASM.; REAR	000000	000000
8971043610	8-9710	4361	RECTIFIER; GEN	000000	000000
8971043620	8-9710	4362	COVER ASM.; FRONT	000000	000000
8971043630	8-9710	4363	PULLEY ASM.; GENE.	000000	000000
8971043650	8-9710	4365	ROTOR ASM.	000000	000000
8971043660	8-9710	4366	COVER ASM.; REAR	000000	000000
8971043670	8-9710	4367	COVER; REAR	000000	000000

8971043680	8-9710	4368	COVER ASM.; FRONT	000000	000000
8971043690	8-9710	4369	PULLEY ASM.	000000	000000
8971043800	8-9710	4380	SHAFT; IDLER GEAR 'A' 6SA	000000	000000
8971044163	8-9710	4416	WATER PUMP	000000	000000
8971044540	8-9710	4454	HOSE; RUBBER, PCV.	000000	000000
8971044550	8-9710	4455	BREATHER ASM.; AIR	000000	000000
8971044570	8-9710	4457	BRACKET; PCV. HOSE	000000	000000
8971044580	8-9710	4458	PIPE ASM.; INLET	000000	000000
8971045071	8-9710	4507	STUD; EXH. MANIF. FIX	000000	000000
8971045080	8-9710	4508	STUD; EXH. PIPE TO MANIF.	000000	000000
8971045081	8-9710	4508	STUD; EXH. PIPE TO MANIF.	000000	000003
8971045090	8-9710	4509	PUMP ASM; INJ.	000000	000000
8971045092	8-9710	4509	PUMP ASM; INJ.	000000	000000
8971045100	8-9710	4510	GOVERNOR ASM; MECHANICAL	000000	000000
8971045101	8-9710	4510	GOVERNOR ASM; MECHANICAL	000000	000000
8971046280	8-9710	4628	PAN ASM.; OIL	000000	000013
8971046290	8-9710	4629	PUMP ASM; INJ. FIG.52	000000	000000
8971046500	8-9710	4650	PISTON; STD.	000000	000000
8971046651	8-9710	4665	TIMER ASM; AUTO	000000	000000
8971046760	8-9710	4676	COVER;FRT, TRANS CASE	000000	000000
8971047060	8-9710	4706	RING SET; PISTON	000000	000000
8971047451	8-9710	4745	PUMP ASM.; INJ. FIG.52	000000	000000
8971047500	8-9710	4750	WATER OUTLET	000000	000003
8971048890	8-9710	4889	BOLT;T/GATE LINK,RR BODY	000000	000104
8971050120	8-9710	5012	PUMP ASM; WATER W/GASKET	000000	000000
8971050121	8-9710	5012	PUMP ASM; WATER W/GASKET	000000	000000
8971050123	8-9710	5012	PUMP ASM; WATER W/GASKET	000000	000000
8971050124	8-9710	5012	PUMP ASM; WATER W/GASKET	000000	000000
8971050125	8-9710	5012	PUMP ASM; WATER W/GASKET	000047	000046
8971053030	8-9710	5303	STUD; TURBO	000003	000000
8971053090	8-9710	5309	PUMP ASM; INJ.	000000	000000
8971053390	8-9710	5339	STRAINER ASM; OIL	000000	000000
8971053760	8-9710	5376	BOLT; HINGE	000000	000000
8971053810	8-9710	5381	BEARING	000000	000000
8971054300	8-9710	5430	CONNECTOR 3L	000000	000106
8971054310	8-9710	5431	CONNECTOR 3L	000000	000000
8971056160	8-9710	5616	GASKET; INL MANIF TO HD	000000	000085
8971056750	8-9710	5675	HEAD ASM.; CYL.	000000	000000
8971056791	8-9710	5679	BRACKET; ROCKER	000000	000000
8971056800	8-9710	5680	HOSE; PCV., G/CVR-R/BRKT.	000000	000000
8971056801	8-9710	5680	HOSE; PCV., G/CVR-R/BRKT.	000001	000000
8971056810	8-9710	5681	HOSE;PCV.C/VLV TO C/BLOCK	000000	000000
8971056811	8-9710	5681	HOSE;PCV.C/VLV TO C/BLOCK	000000	000001
8971056860	8-9710	5686	ANGLEICH KIT	000000	000000
8971056902	8-9710	5690	GASKET; HD TO COVER	000277	000000
8971057351	8-9710	5735	ADAPTER; OIL FILTER	000000	000000
8971057900	8-9710	5790	TIMER; QOS-3	000000	000001

8971058540	8-9710	5854	COVER; DUST,SHIFT FO	000000	000001
8971058670			RING SET; PISTON	000000	000000
8971058720			GASKET; CYL HD	000000	000000
8971059061	8-9710	5906	LEVER ASM; MAIN SPRING	000000	000000
8971059090	8-9710	5909	ADJUSTER; GOVERNOR	000002	000000
8971059100	8-9710	5910	LEVER; TENSION, GOVERNOR	000000	000000
8971059140	8-9710	5914	PLATE ASM	000000	000000
8971059160	8-9710	5916	FW ASM	000000	000003
8971059210	8-9710	5921	RUBBER;SUPPORT, ENG MTG	000005	000004
8971059600	8-9710	5960	REGULATOR ASM.	000000	000000
8971059610	8-9710	5961	CAP; TERMINAL	000000	000000
8971061101	8-9710	6110	ROD ASM; CONN ROD	000000	000000
8971061270			CAP;LOCK NUT,ADJ. SCREW	000000	000000
8971061943	8-9710	6194	BLOCK ASM.; CYL.	000000	000000
8971061963	8-9710	6196	BLOCK ASM.; CYL.	000000	000000
8971061983	8-9710	6198	BLOCK ASM.; CYL.	000000	000000
8971062003	8-9710	6200	BLOCK ASM.; CYL.	000000	000000
8971062030	8-9710	6203	COVER; INJ. PUMP HOUSING	000000	000000
8971062031	8-9710	6203	COVER; INJ. PUMP HOUSING	000002	000000
8971062032	8-9710	6203	COVER; INJ. PUMP HOUSING	000000	000002
8971062040	8-9710	6204	COVER; INJ. PUMP HOUSING	000000	000000
8971062041	8-9710	6204	COVER; INJ. PUMP HOUSING	000000	000000
8971062042	8-9710	6204	COVER; INJ. PUMP HOUSING	000000	000002
8971062050	8-9710	6205	LINK ASM.; CONTROL L=198	000000	000000
8971062051	8-9710	6205	LINK ASM.; CONTROL L=198	000001	000000
8971062070	8-9710	6207	LINK ASM.; CONTROL L=217	000000	000000
8971062071	8-9710	6207	LINK ASM.; CONTROL L=217	000011	000000
8971062130	8-9710	6213	PIPE; INLET, T/C-I/MFLD	000000	000000
8971062140	8-9710	6214	UNIT; THRMOMETER	000000	000000
8971062680	8-9710	6268	SPRING; MAIL, 2.0K	000000	000000
8971062740	8-9710	6274	COVER ASM; GOVERNOR LEVER	000000	000000
8971063590	8-9710	6359	GOVERNOR ASM	000000	000000
8971064150	8-9710	6415	VALVE ASM; CHECK	000001	000000
8971064240			HOSE; P/S OIL P	000000	000000
8971065490	8-9710	6549	PLUG; GLOW	000000	000000
8971065491	8-9710	6549	PLUG; GLOW	000000	000000
8971065492	8-9710	6549	PLUG; GLOW	000000	000000
8971065493	8-9710	6549	PLUG; GLOW	000000	000000
8971065494	8-9710	6549	PLUG; GLOW	000000	000629
8971066630			LEVER ASM; RELA	000000	000003
8971067590			RUBBER; ENG FOO	000000	000003
8971069500			HARNES; EXT	000000	000000
8971069680	8-9710	6968	HOSE; WATER, TURB.	000000	000005
8971069740	8-9710	6974	COCK ASM; KINGSTON	000000	000000
8971069890	8-9710	6989	FLYWHEEL ASM.	000000	000000
8971069891	8-9710	6989	FLYWHEEL ASM.	000000	000000
8971069892	8-9710	6989	FLYWHEEL ASM.	000000	000000

8971069894	8-9710	6989	FLYWHEEL ASM.	000000	000000
8971073700	8-9710	7370	PUMP ASM; INJECTION	000000	000000
8971074440	8-9710	7444	NOZZLE: INJ	000003	000000
8971075450	8-9710	7545	ARM; SHIFT,REV & 5TH	000000	000000
8971075470	8-9710	7547	HOLDER ASM: NOZZLE	000000	000004
8971075940	8-9710	7594	STARTER ASM FIG.62	000000	000000
8971075941	8-9710	7594	STARTER ASM FIG.62	000000	000000
8971075942	8-9710	7594	STARTER ASM FIG.62	000000	000095
8971076640	8-9710	7664	BRACKET; FUEL TANK	000000	000000
8971076641	8-9710	7664	BRACKET; FUEL TANK	000003	000000
8971076650	8-9710	7665	ROD; LINK	000011	000000
8971076660	8-9710	7666	HOSE; RUBBER, UPPER	000001	000000
8971076720	8-9710	7672	BRACKET; RADIATOR, LOWER	000000	000000
8971076730	8-9710	7673	BRACKET; RADIATOR, UPPER	000000	000000
8971076731	8-9710	7673	BRACKET; RADIATOR, UPPER	000000	000000
8971076820	8-9710	7682	HOSE; RUBBER, LOWER	000000	000000
8971076821	8-9710	7682	HOSE; RUBBER, LOWER	000000	000005
8971076830	8-9710	7683	GUARD; FRONT, RADIATOR	000000	000000
8971076840	8-9710	7684	MOUNTING;RUBBER,FUEL TANK	000011	000000
8971076851	8-9710	7685	HOLDER; FUEL TANK	000002	000002
8971076940	8-9710	7694	STAY; FUEL TANK	000000	000000
8971076952	8-9710	7695	HARNES; WIRE,BOX SIDE	000000	000003
8971076961	8-9710	7696	WIRE HARNES	000000	000000
8971076962	8-9710	7696	WIRE HARNES	000000	000000
8971076963	8-9710	7696	WIRE HARNES	000000	000947
8971076971	8-9710	7697	SWITCH BOX	000000	000000
8971076973	8-9710	7697	SWITCH BOX	000000	000000
8971076974	8-9710	7697	SWITCH BOX	000000	000000
8971076975	8-9710	7697	SWITCH BOX	000000	000751
8971077020	8-9710	7702	NET ASM.; RADIATOR	000000	000000
8971077070	8-9710	7707	GUARD ASM.; FAN	000000	000016
8971077080	8-9710	7708	RADIATOR ASM	000000	000000
8971077081	8-9710	7708	RADIATOR ASM	000000	000001
8971077130	8-9710	7713	INSULATOR, INLET HOSE	000000	000000
8971077140	8-9710	7714	MUFFLER	000000	000039
8971077151	8-9710	7715	SWITCH BOX	000000	000000
8971077152	8-9710	7715	SWITCH BOX	000000	000000
8971077153	8-9710	7715	SWITCH BOX	000000	000000
8971077154	8-9710	7715	SWITCH BOX	000000	000000
8971077155	8-9710	7715	SWITCH BOX	000000	000011
8971077340	8-9710	7734	BRACKET; RADIATOR, UPPER	000002	000000
8971077390	8-9710	7739	HANGER; ENGINE REAR	000059	000000
8971078700	8-9710	7870	LEVEL GAUGE;OIL,L=114	000000	000000
8971078701	8-9710	7870	LEVEL GAUGE;OIL,L=114	000000	000017
8971078710	8-9710	7871	LEVEL GUAGE; OIL, L=147	000000	000015
8971078930	8-9710	7893	FLYWHEEL ASM.	000000	000002
8971078940	8-9710	7894	FLYWHEEL ASM.	000000	000000

8971078961	8-9710	7896	STARTER ASM; FIG 62	000000	000000
8971079561	8-9710	7956	ADAPTER; G/CASE, P.T.O	000001	000000
8971080430	8-9710	8043	DISTRIBUTOR HEAD	000000	000000
8971080461	8-9710	8046	GEAR DRIVE INJ	000000	000001
8971080750	8-9710	8075	FOOT: ENGINE, RH	000000	000000
8971081020	8-9710	8102	CLAMP; VAC HOSE, PUMP	000001	000020
8971086430	8-9710	8643	PLATE; FAN COUPLING	000000	000000
8971086890	8-9710	8689	GAUGE; OIL LEVEL	000000	000000
8971087000	8-9710	8700	TURBOCHARGER ASM	000000	000000
8971089220	8-9710	8922	PUMP ASM; INJ.	000000	000000
8971089240	8-9710	8924	GOVERNOR ASM; MECHANICAL	000000	000000
8971090340	8-9710	9034	ANGLEICH KIT	000000	000000
8971090780	8-9710	9078	SPRING; IDLE	000000	000000
8971091710	8-9710	9171	BEARING; ROLLER, IDLE	000000	000001
8971091780	8-9710	9178	BEARING; BALL, P.T.O GEAR	000000	000000
8971091900	8-9710	9190	REPAIR KIT; OVER HAUL	000000	000000
8971091930	8-9710	9193	PLATE UNIT; SEAL	000000	000000
8971091940	8-9710	9194	CONTROL UNIT; WASTE GATE	000000	000000
8971091950	8-9710	9195	HOUSING UNIT; BEARING	000000	000000
8971091960	8-9710	9196	HOUSING UNIT; TURBINE	000000	000000
8971091980	8-9710	9198	HOUSING UNIT; CMPR	000000	000000
8971092010	8-9710	9201	ROTOR UNIT; TURBINE	000000	000000
8971092161	8-9710	9216	GASKET; EXH	000000	000000
8971092162	8-9710	9216	GASKET; EXH	000000	000000
8971092210	8-9710	9221	GASKET; OIL PAN, A/T	000074	000210
8971092220	8-9710	9222	GASKET; PTO HOLE COVER, A	000000	000002
8971092350	8-9710	9235	SPRING; MAIN, 0.9K	000000	000000
8971092460	8-9710	9246	PLATE ASM; PRESSURE CL	000000	000000
8971092490	8-9710	9249	HOSE; BOOST SENSING	000000	000000
8971093400	8-9710	9340	VALVE; SAFETY	000000	000002
8971093630			HORN; HIGH NOTE	000000	000000
8971093641			HORN; LOW NOTE	000000	000002
8971093651			FOOT; ENGINE, FRONT, RH	000000	000000
8971093652	8-9710	9365	FOOT; ENGINE, FRONT, RH	000000	000000
8971093661	8-9710	9366	FOOT; ENGINE, FRONT, LH	000000	000000
8971093662	8-9710	9366	FOOT; ENGINE, FRONT, LH	000000	000000
8971093720	8-9710	9372	CRANK PULLEY	000000	000000
8971093721	8-9710	9372	CRANK PULLEY	000000	000000
8971093722	8-9710	9372	CRANK PULLEY	000000	000011
8971093800	8-9710	9380	GASKET: STARTER	000000	000000
8971094620			PISTON RING SET	000000	000010
8971094680	8-9710	9468	PIPE ASM; INJECTION	000000	000000
8971094681	8-9710	9468	PIPE ASM; INJECTION	000000	000001
8971095041	8-9710	9504	ARM; SHIFT, REV & 5TH	000000	000000
8971095150	8-9710	9515	PAN ASM.; OIL, W/DR. PLUG	000000	000000
8971095151	8-9710	9515	PAN ASM.; OIL, W/DR. PLUG	000000	000000
8971095152	8-9710	9515	PAN ASM.; OIL, W/DR. PLUG	000000	000000

8971095701			EVAPORATOR; A/C	000000	000000
8971095702			EVAPORATOR; A/C	000000	000000
8971096420	8-9710	9642	HEAD ASM; CYLINDER	000000	000000
8971096423	8-9710	9642	HEAD ASM; CYLINDER	000000	000001
8971096730	8-9710	9673	BOLT; CAM PULLEY	000010	000046
8971096740	8-9710	9674	EXHAUST ADAPTOR	000000	000000
8971096741	8-9710	9674	EXHAUST ADAPTOR	000000	000000
8971096742	8-9710	9674	EXHAUST ADAPTOR	000000	000000
8971096743	8-9710	9674	EXHAUST ADAPTOR	000000	000011
8971096761			PUMP; WATER	000000	000000
8971096790	8-9710	9679	O-RING; OIL PUMP	000065	000000
8971096820	8-9710	9682	ANGLEICH KIT	000000	000000
8971096960	8-9710	9696	BOLT; COUPLING DRIVE	000000	000000
8971096961	8-9710	9696	BOLT; COUPLING DRIVE	000000	000000
8971096970	8-9710	9697	BOLT; COUPLING DRIVER	000000	000000
8971096971	8-9710	9697	BOLT; COUPLING DRIVER	000000	000000
8971097590	8-9710	9759	SPRING MAIN 3.5K	000000	000001
8971097630	8-9710	9763	JOINT ASM; INSIDE, FRT DRV	000001	000000
8971097650	8-9710	9765	BOOT KIT OUTSIDE FRT SHAF	000000	000003
8971097750	8-9710	9775	ANGLEICH KIT	000000	000000
8971097751	8-9710	9775	ANGLEICH KIT	000000	000000
8971097760	8-9710	9776	ANGLEICH KIT	000000	000000
8971098690	8-9710	9869	PLUG; DRAIN, AXLE	000008	000067
8971099270	8-9710	9927	FRAME; ENG. MOUNTING	000000	000004
8971099790	8-9710	9979	FOOT; ENGINE, REAR	000000	000070
8971099820	8-9710	9982	FOOT; ENGINE, FRONT	000000	000000
8971099821	8-9710	9982	FOOT; ENGINE, FRONT	000000	000049
8971102361	8-9711	0236	STAY; CONTROL PANEL	000000	000001
8971102450	8-9711	0245	SOLENOID ASM; 24V	000000	000000
8971103140			AIR DAM; FRT BU	000000	000001
8971103370			ANGLEICH KIT	000000	000002
8971105140	8-9711	0514	MANIFOLD; INLET	000000	000000
8971105141	8-9711	0514	MANIFOLD; INLET	000000	000053
8971107190	8-9711	0719	HOSE; RUBBER, UPPER	000000	000042
8971108521	8-9711	0852	HOSE; RUBBER, LOWER	000000	000074
8971108540	8-9711	0854	RADIATOR ASM	000000	000000
8971108541	8-9711	0854	RADIATOR ASM	000000	000061
8971108550	8-9711	0855	BOX; SWITCH	000000	000000
8971108561	8-9711	0856	PANEL; SWITCH	000000	000000
8971108562	8-9711	0856	PANEL; SWITCH	000000	000000
8971108563	8-9711	0856	PANEL; SWITCH	000000	000017
8971108571	8-9711	0857	PANEL; SWITCH	000000	000000
8971108581	8-9711	0858	BRACKET; TIMER	000000	000004
8971108601	8-9711	0860	HARNESS ASM; WIRE.ENG.SID	000000	000000
8971108602	8-9711	0860	HARNESS ASM; WIRE.ENG.SID	000000	000026
8971108880	8-9711	0888	LEVER; CONTROL	000000	000000
8971113140	8-9711	1314	CONTROL PANEL	000000	000000

8971113141	8-9711	1314	CONTROL PANEL	000000	000000
8971114490	8-9711	1449	GASKET; EXH.SIL	000000	000000
8971114770	8-9711	1477	STUD; INL. MAINF.	000000	000257
8971115520	8-9711	1552	BRACKET;FUEL FILTER	000000	000062
8971115530	8-9711	1553	BRACKET;FUEL PUMP	000053	000014
8971115531	8-9711	1553	BRACKET;FUEL PUMP	000000	000000
8971115701	8-9711	1570	HOSE;RUBBER, F/PUMP-F/PIPE	000000	000000
8971115702	8-9711	1570	HOSE;RUBBER, F/PUMP-F/PIPE	000000	000033
8971115711	8-9711	1571	HOSE;RUBBER, PUMP-F/FILTER	000000	000000
8971115712	8-9711	1571	HOSE;RUBBER, PUMP-F/FILTER	000000	000021
8971118160	8-9711	1816	PACKING; COVER	000000	000000
8971118161	8-9711	1816	PACKING; COVER	000000	000017
8971118411			ANTENNA	000000	000001
8971118540			LAMP; CLEARENCE	000000	000001
8971118550			LAMP; CLEARANCE	000000	000002
8971118721			GRILLE; RAD	000000	000001
8971118990			GOVERNOR ASM	000000	000000
8971119620	8-9711	1962	TIMER	000000	000000
8971119621	8-9711	1962	TIMER	000000	000110
8971121020	8-9711	2102	NET ASM.; RADIATOR	000000	000000
8971121030	8-9711	2103	SPRING;MAIN, 1.5K	000000	000000
8971121040	8-9711	2104	GUARD; FRONT, RADIATOR	000000	000000
8971121050	8-9711	2105	BRACKET; RADIATOR, UPPER	000000	000006
8971121051	8-9711	2105	BRACKET; RADIATOR, UPPER	000000	000000
8971121330	8-9711	2133	BRACKET; RADIATOR, UPPER	000000	000000
8971121331	8-9711	2133	BRACKET; RADIATOR, UPPER	000000	000006
8971121340	8-9711	2134	RADIATOR BRKT	000003	000000
8971122460	8-9711	2246	GOVERNOR	000000	000000
8971122630	8-9711	2263	OIL FILTER	000011	000000
8971122650	8-9711	2265	PIECE; GUIDE	000002	000000
8971122700			MIRROR ASM; DOOR	000000	000002
8971124850	8-9711	2485	RADIATOR ASM.	000000	000000
8971125550	8-9711	2555	ARMATURE; START	000000	000000
8971125570			BRUSH; STARTER	000000	000000
8971125591			HOLDER; BRUSH STARTER	000000	000000
8971126070	8-9711	2607	GEAR; IDLE	000000	000000
8971126071	8-9711	2607	GEAR; IDLE	000000	000032
8971126080	8-9711	2608	BUSHING; IDLE GEAR	000000	000000
8971126760	8-9711	2676	GENERATOR ASM	000000	000087
8971127340	8-9711	2734	YOKE ASM	000000	000000
8971127350	8-9711	2735	ARMATURE ASM	000000	000000
8971127360	8-9711	2736	SWITCH ASM; MAGNETIC	000000	000000
8971127370	8-9711	2737	HOLDER ASM; BRUSH	000000	000000
8971127380	8-9711	2738	FRAME; END	000000	000000
8971127390	8-9711	2739	BEARING; BALL	000000	000000
8971128650	8-9711	2865	STARTER; DENSO FIG.62P	000000	000000
8971128651	8-9711	2865	STARTER; DENSO FIG.62P	000000	000000

8971128652	8-9711	2865	STARTER; DENSO FIG.62P	000000	000025
8971128680	8-9711	2868	YOKE ASM.; STARTER	000000	000000
8971128690	8-9711	2869	ARMATURE ASM.; STARTER	000000	000000
8971128700	8-9711	2870	CLUTCH KIT	000001	000000
8971128710	8-9711	2871	HOUSING ASM	000001	000000
8971128720	8-9711	2872	SWITCH ASM; MAGNETIC	000000	000001
8971128730	8-9711	2873	HOLDER ASM; BRUSH	000000	000000
8971128750	8-9711	2875	FRAME; END	000000	000000
8971128790	8-9711	2879	PINION	000002	000000
8971128800	8-9711	2880	SPRING; BRUSH	000000	000000
8971128810	8-9711	2881	SCREW; W/O-RING	000012	000000
8971128830	8-9711	2883	BOLT; W/WASHER	000000	000000
8971129540	8-9711	2954	BEARING; BALL	000000	000020
8971129570	8-9711	2957	BOLT; THROUGH	000000	000000
8971129650	8-9711	2965	AIR CLEANER ASM FIG.74	000000	000000
8971129660	8-9711	2966	BRACKET; AIR CLEANER	000000	000000
897112981T			CRANKSHAFT	000000	000000
8971129810			CRANKSHAFT	000000	000000
8971129813			CRANKSHAFT	000000	000000
8971129850			PUMP ASM.; INJ. FIG.52	000000	000000
8971129860	8-9711	2986	COVER; REAR, T/M W/SEAL	000000	000000
8971129862	8-9711	2986	COVER; REAR, T/M W/SEAL	000000	000000
8971129950	8-9711	2995	SPACER; REAR COVER	000000	000000
8971129990			BOLT; FLYWHEEL	000000	000000
8971130210	8-9711	3021	HANGER; ENG, RR	000000	000000
8971131100	8-9711	3110	LEVER	000000	000000
8971131670	8-9711	3167	BOLT; FLANGE	000018	000085
8971132910	8-9711	3291	BOLT	000000	000000
8971132930	8-9711	3293	ARMATURE ASM	000000	000000
8971132940	8-9711	3294	HOUSING ASM; TURBINE	000000	000000
8971132970			BOLT; THROUGH	000000	000004
8971133290	8-9711	3329	GEAR; IDLER PTO	000000	000000
8971133320	8-9711	3332	SPRING; VALVE	000000	000006
8971133361	8-9711	3336	PIPE ASM; OIL GEAR, CASE	000000	000002
8971133830	8-9711	3383	CASE ASM	000000	000000
8971134300	8-9711	3430	BEARING; COUNTER GEAR, RR	000000	000000
8971134370	8-9711	3437	SWITCH; REV LAMP	000000	000000
8971134380	8-9711	3438	SWITCH; NEUTRAL	000000	000000
8971134381	8-9711	3438	SWITCH; NEUTRAL	000000	000000
8971134390	8-9711	3439	SWITCH; REV. LAMP	000000	000000
8971134391	8-9711	3439	SWITCH; REV. LAMP	000000	000000
8971134460			HUB ASM	000000	000000
8971134891	8-9711	3489	PUMP ASM.; INJ.	000000	000001
8971135030	8-9711	3503	RING SET PISTON STD	000000	000071
8971136200	8-9711	3620	LEVER; SELECT CONTROL	000000	000000
8971137410	8-9711	3741	GASKET; THERMOS	000000	000031
8971137420	8-9711	3742	PACKING; COVER	000000	000000

8971137421	8-9711	3742	PACKING; COVER	000000	000077
8971137430	8-9711	3743	PACKING; T/GEAR CASE	000000	000005
8971137440	8-9711	3744	GASKET; EXH MAN	000000	000000
8971137441	8-9711	3744	GASKET; EXH MAN	000000	000010
8971137450	8-9711	3745	PACKING; BRKT.-FRT. PLATE	000000	000056
8971137451	8-9711	3745	PACKING; BRKT.-FRT. PLATE	000000	000170
8971137620	8-9711	3762	RING SET; PISTON, STD	000000	000033
8971137740	8-9711	3774	SILENCER ASM; EXH.	000000	000003
8971137770			COVER; CM/SHF,RR	000000	000000
8971137780			GASKET; COVER	000000	000192
8971138000			FOOT: ENGINE, LH	000000	000000
8971139490	8-9711	3949	ANGLEICH KIT	000000	000000
8971140000	8-9711	4000	RELAY ASM.	000003	000000
8971140010	8-9711	4001	RELAY ASM	000005	000000
8971140060	8-9711	4006	PUMP ASM; INJ.	000000	000000
8971142240	8-9711	4224	HOSE: PCV	000000	000000
8971142241	8-9711	4224	HOSE: PCV	000000	000002
8971142890	8-9711	4289	HUB; CLUTCH, TRANSFER	000000	000000
8971143350	8-9711	4335	GOVERNOR ASM.; FIG.53	000000	000000
8971147080	8-9711	4708	OIL PAN ASM	000000	000000
8971147090	8-9711	4709	OIL PAN ASM	000000	000000
8971147130	8-9711	4713	HEAD ASM; CYL.	000000	000000
8971147131	8-9711	4713	HEAD ASM; CYL.	000000	000000
8971147132	8-9711	4713	HEAD ASM; CYL.	000000	000000
8971147133	8-9711	4713	HEAD ASM; CYL.	000000	000000
8971147135	8-9711	4713	HEAD ASM; CYL.	000000	000003
8971147370	8-9711	4737	STARTER ASM; 24V-3.2KW	000000	000000
8971147410	8-9711	4741	FRAME ASM.; DRIVE END	000000	000000
8971147420	8-9711	4742	ROTOR ASM;	000000	000000
8971147430	8-9711	4743	REGULATOR ASM	000002	000000
8971147540	8-9711	4754	LEVER; SWIVEL LEVER	000000	000000
8971147790	8-9711	4779	BOLT; HSG	000000	001021
8971151150			BRACKET; FRT CO	000000	000001
8971151290			SHAFT; IDLE GEAR, A	000000	000000
8971151291	8-9711	5129	SHAFT; IDLE GEAR, A	000000	000000
8971151310	8-9711	5131	GEAR; W/BUSH, IDLE A	000000	000000
8971151311	8-9711	5131	GEAR; W/BUSH, IDLE A	000000	000001
8971151770	8-9711	5177	CRANKSHAFT ASM; (TOCCO)	000000	000000
8971151771	8-9711	5177	CRANKSHAFT ASM; (TOCCO)	000000	000000
8971151772	8-9711	5177	CRANKSHAFT ASM; (TOCCO)	000000	000004
8971152340	8-9711	5234	RELAY; SAFETY 12V	000000	000000
8971152341	8-9711	5234	RELAY; SAFETY 12V	000000	000002
8971152890	8-9711	5289	SHUT DOWN SOELNOID	000000	000000
8971152970	8-9711	5297	INJECTION PUMP	000000	000000
8971153150	8-9711	5315	PLUG; HOT	000000	000000
8971153151	8-9711	5315	PLUG; HOT	000003	000000
8971154560			HOSE; WATER,BY-PASS	000000	000000

8971156860	8-9711	5686	HOSE; RUB.F/FILTER-I/PUMP	000000	000000
8971156870	8-9711	5687	PUMP ASM; INJ.	000000	000000
8971156871	8-9711	5687	PUMP ASM; INJ.	000000	000000
8971156872	8-9711	5687	PUMP ASM; INJ.	000000	000042
8971157120	8-9711	5712	GASKET;FILLER PLUG,TRNSFR	000011	000000
8971157230	8-9711	5723	BOLT; SUPPORT PLATE	000000	000000
8971157770	8-9711	5777	GEAR ASM.;REV.,MAIN SHAFT	000000	000000
8971158510			CYLINDER ASM;	000001	000000
8971158520			CYLINDER ASM;	000000	000000
8971158540			CYLINDER ASM	000000	000000
8971158541			CYLINDER ASM	000000	000001
8971158720	8-9711	5872	SW; OV. HEAT M16 101C A1F	000000	000019
8971159180			ELECTRIC FUEL FEED PUMP	000000	000000
8971159190			OIL PAN ASM.	000000	000000
8971159720	8-9711	5972	TURBOCHARGER ASM.; FIG.65	000000	000000
8971159721	8-9711	5972	TURBOCHARGER ASM.; FIG.65	000000	000000
8971159731	8-9711	5973	CAUTION PLATE	000000	000000
8971159800	8-9711	5980	LEVER	000000	000000
8971159890	8-9711	5989	HOUSING; FUEL FEED PUMP	000000	000004
8971159900	8-9711	5990	PUSH ROD	000006	000000
8971159910	8-9711	5991	ROD; PUSH	000000	000000
8971160290	8-9711	6029	SHIM; NOZZLE SP	000000	000020
8971160320	8-9711	6032	SHIM;NOZZLE SPRING HOLDER	000000	000095
8971160330	8-9711	6033	SHIM;T=0.30	000005	000052
8971160340	8-9711	6034	SHIM: T=0.40	000046	000059
8971160350	8-9711	6035	SHIM NOZZLE .500	000000	000139
8971160360	8-9711	6036	SHIM T=0.51	000038	000000
8971160370	8-9711	6037	SHIM; NOZZLE SP	000033	000038
8971160380	8-9711	6038	SHIM: T=0.53	000000	000012
8971160390	8-9711	6039	SHIM; T=0.54	000094	000025
8971160400	8-9711	6040	SHIM; T=0.55	000000	000000
8971160410	8-9711	6041	SHIM: T=0.56	000000	000040
8971160420	8-9711	6042	SHIM;T=0.57	000000	000000
8971160430	8-9711	6043	SHIM; T=0.58	000007	000030
8971160440	8-9711	6044	SHIM: T=0.59	000052	000000
8971160990	8-9711	6099	INJ NOZZLE ASM	000000	000000
8971161000	8-9711	6100	HOLDER ASM;NOZZLE	000004	000000
8971161030	8-9711	6103	FLYWEIGHT ASM	000000	000000
8971161031	8-9711	6103	FLYWEIGHT ASM	000000	000000
8971161360	8-9711	6136	INJ NOZZLE	000000	000008
8971162010	8-9711	6201	COVER; GEN. PULLEY	000000	000000
8971163140	8-9711	6314	CONTROLLER	000000	000000
8971163340	8-9711	6334	SHAFT ASM; FRT DRIVE,RH	000000	000000
8971164480	8-9711	6448	ARM; ROCKER, INLET	000000	000000
8971164500	8-9711	6450	ARM; ROCKER EXHAUST	000000	000000
8971164731	8-9711	6473	RADIATOR ASM	000000	000000
8971164732	8-9711	6473	RADIATOR ASM	000000	000000

8971164733	8-9711	6473	RADIATOR ASM	000000	000013
8971164810	8-9711	6481	BEARING; GEAR SHAFT START	000000	000001
8971164820	8-9711	6482	SHAFT; GEAR STARTER	000000	000000
8971164830	8-9711	6483	SHAFT ASM; GEAR	000000	000000
8971164840	8-9711	6484	WASHER SET	000000	000002
8971164850	8-9711	6485	GEAR; CLU STARTER	000000	000000
8971164880	8-9711	6488	CLUTCH; PINION, STARTER	000000	000001
8971164890	8-9711	6489	GASKET; YOKE, STARTER	000001	000004
8971164900	8-9711	6490	GEAR ASM	000000	000000
8971164910	8-9711	6491	BEARING; ARMATURE, STARTE	000001	000000
8971164920	8-9711	6492	LEVEL; SHIFT, STARTER	000000	000000
8971164930	8-9711	6493	PINION SET	000000	000000
8971164940	8-9711	6494	SWITCH; ENGAGE STARTER	000000	000003
8971164950	8-9711	6495	SCREW SET	000035	000000
8971165080	8-9711	6508	ARMATURE; STARTER	000000	000000
8971165090	8-9711	6509	YOKE; STARTER	000000	000000
8971165100	8-9711	6510	BRUSH; STARTER	000000	000000
8971165110	8-9711	6511	HOLDER; BRUSH STARTER	000000	000000
8971165120	8-9711	6512	CASE; PINION, STARTER	000000	000000
8971165130	8-9711	6513	COVER; RR COVER STARTER	000000	000000
8971165140	8-9711	6514	BOLT; THROUGH, STARTER	000000	000000
8971165150	8-9711	6515	BALL; PINION, STARTER	000000	000048
8971165160	8-9711	6516	SPRING; BRUSH HOLDER STAR	000000	000000
8971165330	8-9711	6533	GASKET; OIL COOLER	000000	000002
8971165580	8-9711	6558	PLUG; OIL COOLER	000002	000000
8971167340	8-9711	6734	HOSE; RUBBER, UPPER	000000	000000
8971167350	8-9711	6735	HOSE; RUBBER, LOWER	000000	000000
8971170840	8-9711	7084	ANGLEICH KIT	000001	000000
8971170920	8-9711	7092	PIPE ASM; FUEL, FEED	000000	000001
8971171070	8-9711	7107	SCREW	000000	000000
8971171860	8-9711	7186	SENSOR; THERMO. QQS-3	000000	000000
8971172420	8-9711	7242	GASKET	000000	000000
8971172421	8-9711	7242	GASKET	000010	000000
8971172570	8-9711	7257	PUMP ASM.; INJ. FIG.52	000000	000000
8971172571	8-9711	7257	PUMP ASM.; INJ. FIG.52	000000	000003
8971172670	8-9711	7267	PIPE; OIL, OIL JET	000000	000000
8971172860	8-9711	7286	SHIM; INJ PUMP	000000	000000
8971172981	8-9711	7298	BOLT; OIL PIPE, OI	000039	000000
8971172990	8-9711	7299	STRAINER ASM; OIL	000000	000009
8971175820	8-9711	7582	PUMP; INJ	000000	000000
8971175840	8-9711	7584	GOVERNOR ASM.	000000	000000
8971175900	8-9711	7590	EXHAUST MANIFOLD	000000	000000
8971175901	8-9711	7590	EXHAUST MANIFOLD	000000	000008
8971175910	8-9711	7591	TIMER ASM.; GLOW PLUG	000000	000000
8971175920	8-9711	7592	TIMER; AFTER GI	000001	000000
8971175930	8-9711	7593	TIMER ASM	000000	000000
8971175940	8-9711	7594	TIMER; Q.O.S. 12V	000000	000000

8971176120	8-9711	7612	NOZZLE ASM; INJ.	000000	000000
8971176290	8-9711	7629	COVER ASM; CYL HEAD	000000	000000
8971176291	8-9711	7629	COVER ASM; CYL HEAD	000000	000000
8971176300	8-9711	7630	COVER ASM; CYL. HEAD	000000	000000
8971176330	8-9711	7633	COVER ASM; CYL HD	000000	000000
8971176340	8-9711	7634	COVER ASM; CYL.HEAD	000000	000000
8971176361	8-9711	7636	HOSE; RUBBER.PCV	000004	000000
8971176720	8-9711	7672	COVER; GOVERNOR LEVER	000000	000000
8971177760	8-9711	7776	COUPLING;INJ PUMP DRIVE	000000	000000
8971181963	8-9711	8196	BRACKET; ROCKER	000000	000000
8971181964	8-9711	8196	BRACKET; ROCKER	000000	000000
8971181965	8-9711	8196	BRACKET; ROCKER	000000	000000
8971181966	8-9711	8196	BRACKET; ROCKER	000000	000000
8971181967	8-9711	8196	BRACKET; ROCKER	000000	000001
8971182041	8-9711	8204	PLATE;BAFFLE	000000	000000
8971182050	8-9711	8205	CYL COVER	000000	000000
8971182051	8-9711	8205	CYL COVER	000000	000000
8971182052	8-9711	8205	CYL COVER	000000	000002
8971183080			PLATE; FLEX	000000	000002
8971183770	8-9711	8377	HOUSING; FLYWHEEL L=83.5	000000	000000
8971183771	8-9711	8377	HOUSING; FLYWHEEL L=83.5	000000	000000
8971184560	8-9711	8456	BRACKET; ENG. CONT.	000000	000000
8971185372			CABLE;ENG CONT	000000	000000
8971185420			STARTER ASM	000000	000000
8971185430			COIL; FIELD STARTER	000000	000000
8971186280	8-9711	8628	ADAPTER; EXH. PIPE	000003	000000
8971186560	8-9711	8656	SHAFT; ROCKER	000000	000000
8971186561	8-9711	8656	SHAFT; ROCKER	000000	000001
8971186980	8-9711	8698	GASKET; COVER, T	000000	000000
8971186981	8-9711	8698	GASKET; COVER, T	000062	000000
8971187663	8-9711	8766	PUMP ASM.; INJ. FIG.52	000000	000000
8971187670	8-9711	8767	VALVE; EXH. OD=35.70	000000	000000
8971187671	8-9711	8767	VALVE; EXH. OD=35.70	000000	000023
8971187680	8-9711	8768	GASKET; HEAD COVER	000000	000000
8971189891	8-9711	8989	COVER; INJ PUMP HOUSING	000000	000000
8971189892	8-9711	8989	COVER; INJ PUMP HOUSING	000001	000000
8971191630	8-9711	9163	SLIDER	000000	000000
8971191870	8-9711	9187	GASKET	000000	000000
8971192260	8-9711	9226	BELT; COOLING	000002	000000
8971192990	8-9711	9299	GASKET; CYL.HEAD COVER	000000	000000
8971192991	8-9711	9299	GASKET; CYL.HEAD COVER	000000	000000
8971192992	8-9711	9299	GASKET; CYL.HEAD COVER	000000	000046
8971193060	8-9711	9306	TUBE ASM; GUIDE	000000	000002
8971193270	8-9711	9327	FLYWHEEL ASM	000000	000000
8971193440	8-9711	9344	NUT; FIX 4JC1	000039	000000
8971193460	8-9711	9346	GOVERNOR LEVER	000000	000000
8971193580	8-9711	9358	SENSOR;OIL LEV	000000	000000

8971193581	8-9711	9358	SWITCH; OIL LEVEL	000000	000053
8971197490	8-9711	9749	STARTER, NEW	000000	000000
8971198160	8-9711	9816	LINK ASM; CONTROL	000000	000000
8971198580			INJECTION ASM.	000000	000000
8971198870	8-9711	9887	VENTILATOR; AIR	000000	000034
8971200020	8-9712	0002	HOUSING ASM.; TURBINE	000000	000000
8971200280	8-9712	0028	PACKING; HSG. - C/BLOCK	000001	000000
8971200361			ABSORBER ASM	000000	000007
8971200390	8-9712	0039	SHAFT; MAIN,TRANS.	000001	000000
8971200730	8-9712	0073	CAP; RAD	000000	000000
8971201670	8-9712	0167	SEAL; VLV GUIDE	000240	000107
8971201783	8-9712	0178	HEAD ASM;CYL	000000	000001
8971201960	8-9712	0196	HOSE; WATER, BOTTOM	000000	000000
8971202570	8-9712	0257	SCREW; RECTIFIER,GEN	000000	000127
8971202780	8-9712	0278	HEAD ASM; CYL	000000	000000
8971202783	8-9712	0278	HEAD ASM; CYL	000000	000000
8971202784	8-9712	0278	HEAD ASM; CYL	000000	000000
8971202786	8-9712	0278	HEAD ASM; CYL	000000	000000
8971203070	8-9712	0307	SEAL; VALVE, INLET	000154	001382
8971203560	8-9712	0356	STARTER ASM	000000	000000
8971203562	8-9712	0356	STARTER ASM	000004	000000
8971204300	8-9712	0430	ANGLEICH KIT	000000	000000
8971204310	8-9712	0431	PUMP ASM;WATER W/GSKT	000000	000000
8971204860	8-9712	0486	SPRING; START	000000	000000
8971205130	8-9712	0513	ANGLEICH KIT	000000	000000
8971206470			RADIO	000000	000002
8971209110	8-9712	0911	SPRING; VLV,INNER	000033	000361
8971209120	8-9712	0912	SPRING; VLV,OUTER	000023	000335
8971209310	8-9712	0931	GASKET; CRANKSHAFT	000000	000000
8971209330	8-9712	0933	PACKING; CRANK CASE	000052	000000
8971210760			LAMP ASM; RR CO	000000	000001
8971210770			LAMP; REAR COMB	000000	000000
8971210800			REAR COMB. LAMP (LH)	000000	000000
8971216310	8-9712	1631	LEVER	000002	000000
8971217581			GLASS; SIDE WINDOW	000000	000002
8971217622			GLASS; RR QUART	000000	000001
8971219090	8-9712	1909	COUPLING ASM.; FIG.57	000000	000000
8971219100	8-9712	1910	PUMP ASM.; FEED, FIG.54	000000	000000
8971219130	8-9712	1913	GOVERNOR ASM.; FIG.53	000000	000000
8971220630	8-9712	2063	VALVE; OVER FLOW	000000	000000
8971221250	8-9712	2125	PIPE ASM; FUEL, LEAK OFF	000000	000006
8971221581	8-9712	2158	BRACKET; FUEL FILTER	000000	000000
8971222850	8-9712	2285	PLATE; REAR, CYL. BLOCK	000003	000000
8971222851	8-9712	2285	PLATE; REAR, CYL. BLOCK	000000	000000
8971222852	8-9712	2285	PLATE; REAR, CYL. BLOCK	000000	000000
8971222860	8-9712	2286	CRANKSHAFT (TUFFT)	000000	000000
8971222870	8-9712	2287	CRANKSHAFT	000000	000000

8971223600	8-9712	2360	CLIP; HARNESS	000000	000009
8971226050	8-9712	2605	GEAR; PUMP DRIVE	000000	000000
8971226380	8-9712	2638	PISTON; STD	000000	000000
8971227680	8-9712	2768	PUMP ASM; INJ	000000	000000
8971227970	8-9712	2797	REGULATOR ASM; VOLTAGE, G	000000	000000
8971228930			RUBBER; ENG FOOT	000000	000000
8971228931			RUBBER; ENG FOOT	000000	000002
8971228950			RUBBER; ENG FOOT	000000	000000
8971228951			RUBBER; ENG FOOT	000000	000002
8971229370			SEAL; OIL, RR HU	000000	000000
8971230070	8-9712	3007	SILENCER ASM.; EXHAUST	000001	000000
8971230500	8-9712	3050	PIPE:ASM, FUEL	000000	000004
8971230631	8-9712	3063	COUPLING ASM.; FIG.57	000000	000000
8971230640	8-9712	3064	GOVERNOR ASM.; FIG.53	000000	000000
8971230800	8-9712	3080	TURBOCHARGER	000000	000001
8971231200	8-9712	3120	GEAR CASE; TIMING	000000	000000
8971231951			GLASS;BACKLIGHT	000000	000001
8971232031			GLASS; FRT DOOR	000000	000002
8971232041			GLASS; FRT DOOR	000000	000001
8971232051			GLASS; FRT DOOR	000000	000001
8971232061			GLASS; FRT DOOR	000000	000001
8971232950	8-9712	3295	CONNECTOR; PIPE, G/CASE	000000	000001
8971232960	8-9712	3296	COVER ASM; CYL.HEAD	000000	000000
8971232961	8-9712	3296	COVER ASM; CYL.HEAD	000000	000000
8971233200			COVER; ADJ HOLE	000000	000000
8971233290	8-9712	3329	PUMP ASM; WATER	000000	000009
8971233300	8-9712	3330	WATER PUMP KIT	000000	000000
8971233301	8-9712	3330	WATER PUMP KIT	000000	000000
8971233302	8-9712	3330	WATER PUMP KIT	000000	000000
8971233420			GASKET; CRANKCASE	000000	000014
8971235490	8-9712	3549	PLUG; SENSOR	000000	000000
8971236050	8-9712	3605	VALVE ASM.; DELIVERY	000000	000005
8971237060	8-9712	3706	PUMP ASM.; FEED, FIG.54	000000	000000
8971237390	8-9712	3739	SEAL UNIT;WATER PUMP	000000	000000
8971237400	8-9712	3740	IMPELLER; WATER PUMP	000000	000000
8971237810	8-9712	3781	BRACKET; AIR CLEANER	000001	000000
8971237850	8-9712	3785	PLATE; UNDER GEAR CASE	000000	000000
8971238330	8-9712	3833	RING SET; PISTON	000000	000020
8971238790	8-9712	3879	PICKUP;INJ PUMP	000000	000000
8971238850	8-9712	3885	HOSE:RUBBER, FUEL, I/PUMP	000000	000000
8971239540	8-9712	3954	BLOCK ASM.; CYL.	000000	000000
8971239542	8-9712	3954	BLOCK ASM.; CYL.	000000	000000
8971239543	8-9712	3954	BLOCK ASM.; CYL.	000000	000002
8971239544	8-9712	3954	BLOCK ASM.; CYL.	000000	000001
8971240110	8-9712	4011	BLOCK ASM.; CYL.	000000	000000
8971240120	8-9712	4012	PUMP ASM: INJ.	000000	000000
8971241170	8-9712	4117	SOLENOID ASM; ENGINE STOP	000000	000000

8971241171	8-9712	4117	SOLENOID ASM; ENGINE STOP	000000	000000
8971241610	8-9712	4161	REGULATOR ASM; VOLTAGE, G	000001	000000
8971242340	8-9712	4234	PIPE ASM.; OIL, INJ. PUMP	000000	000005
8971243690	8-9712	4369	TAPPET	000000	000003
8971244040	8-9712	4404	PUMP ASM; INJ. FIG51	000000	000000
8971244050	8-9712	4405	PUMP ASM.; INJ. FIG.51	000000	000000
8971244060	8-9712	4406	PUMP ASM.; INJ. FIG.51	000000	000002
8971247000	8-9712	4700	NOZZLE ASM; INJ	000000	000000
8971248730	8-9712	4873	MANIFOLD; EXHAUST	000000	000000
8971250510	8-9712	5051	PUMP ASM.; WATER	000000	000000
8971250511	8-9712	5051	PUMP ASM.; WATER	000000	000000
8971250640			HOOK; SEAT	000000	000003
8971254260	8-9712	5426	GENERATOR ASM	000000	000003
8971256000	8-9712	5600	OVERHEAT SWITCH	000000	000000
8971256001	8-9712	5600	OVERHEAT SWITCH	000000	000115
8971256010	8-9712	5601	SW; OV. HEAT M16 105C A1P	000000	000000
8971256011	8-9712	5601	SW; OV. HEAT M16 105C A1P	000000	000062
8971256020	8-9712	5602	NOSSLE ASM;INJ.	000000	000000
8971258530	8-9712	5853	SCREW; W/O-RING	000000	000000
8971258550	8-9712	5855	YOKE; STARTER	000000	000000
8971259740	8-9712	5974	COVER; GOV. ADJUSTMENT	000000	000000
8971260361	8-9712	6036	BRACKET; ROCKER	000000	000000
8971261010	8-9712	6101	GEAR; OUTPUT, FRT WHEEL,	000000	000000
8971261011	8-9712	6101	GEAR;OUTPUT, FRT WHEEL, L	000000	000000
8971261280	8-9712	6128	PISTON; STD	000000	000000
8971261390	8-9712	6139	SEAT; VALVE INSERT, INLET	000000	000000
8971261490	8-9712	6149	GASKET; OIL PAN	000000	000022
8971261790	8-9712	6179	SHAFT; CAM, INJ.PUMP&VALVE	000000	000000
8971261810	8-9712	6181	RING;COMPRESSION,2ND	000000	000000
8971261820	8-9712	6182	RING;COMPRESSION, 1ST	000000	000000
8971261830	8-9712	6183	RING; OIL	000000	000000
8971261860	8-9712	6186	GASKET; EXH.MANIFOLD	000000	000097
8971261870	8-9712	6187	PIPE ASM; FUEL, SUCTION	000000	000001
8971261880	8-9712	6188	PIPE ASM; FUEL, LEAK OFF	000000	000054
8971261890	8-9712	6189	PUMP ASM; WATER	000000	000000
8971262570	8-9712	6257	PLUG; GLOW	000000	000000
8971262630	8-9712	6263	OIL LEVEL GAUGE	000000	000003
8971262900	8-9712	6290	PULLEY; IDLE, A/C	000000	000000
8971263550	8-9712	6355	CONNECTOR; GLOW PLUG	000000	000000
8971263560	8-9712	6356	SHIM; INJ.PUMP, T=0.2	000000	000000
8971263570	8-9712	6357	SHIM; INJ.PUMP, T=0.3 (OR)	000000	000000
8971263580	8-9712	6358	SHIM; INJ.PUMP, T=0.4 (OR)	000000	000000
8971263590	8-9712	6359	SHIM; INJ.PUMP, T=0.5 (OR)	000000	000000
8971263600	8-9712	6360	SHIM; INJ.PUMP, T=0.6 (OR)	000000	000000
8971263610	8-9712	6361	SHIM; INJ.PUMP, T=0.7 (OR)	000000	000000
8971263620	8-9712	6362	SHIM; INJ.PUMP, T=0.8 (OR)	000000	000000
8971263630	8-9712	6363	SHIM; INJ.PUMP, T=1.0 (OR)	000000	000000

8971263640	8-9712	6364	SHIM; INJ.PUMP,T=1.2 (OR)	000000	000000
8971264611	8-9712	6461	RADIATOR ASM	000000	000000
8971264612	8-9712	6461	RADIATOR ASM	000000	000000
8971264613	8-9712	6461	RADIATOR ASM	000000	000000
8971264614	8-9712	6461	RADIATOR ASM	000000	000008
8971264631	8-9712	6463	RADIATOR ASM	000000	000000
8971264633	8-9712	6463	RADIATOR ASM	000000	000000
8971264634	8-9712	6463	RADIATOR ASM	000000	000002
8971264654	8-9712	6465	RADIATOR ASM	000000	000006
8971264920	8-9712	6492	GASKET; OIL COOLER	000000	000000
8971270081	8-9712	7008	HARNESS; ENG	000000	000000
8971270290	8-9712	7029	GOVERNOR ASM.; FIG.53	000000	000000
8971270310	8-9712	7031	PUMP ASM.; INJ. FIG.52	000000	000000
8971270311	8-9712	7031	PUMP ASM.; INJ. FIG.52	000000	000000
8971270490	8-9712	7049	COVER; TAPPET CHAMBER	000000	000000
8971271940	8-9712	7194	FRAME ASM; DRIVE END	000000	000000
8971271950	8-9712	7195	ROTOR ASM;	000000	000000
8971271960	8-9712	7196	FRAME; REAR END	000001	000000
8971272881	8-9712	7288	HARNESS; EXH	000000	000003
8971274260	8-9712	7426	PACKING;G.CASE-C/BLOCK	000001	000000
8971274400	8-9712	7440	PLATE; ADJUST, GEN.	000007	000001
8971275911	8-9712	7591	TANK ASM; SURGE	000000	000000
8971275921	8-9712	7592	BRACKET; SURGE TANK	000000	000086
8971275941	8-9712	7594	GUARD FAN	000000	000000
8971275942	8-9712	7594	GUARD FAN	000000	000008
8971279181	8-9712	7918	FLYWHEEL ASM.	000000	000001
8971279182	8-9712	7918	FLYWHEEL ASM.	000000	000000
8971279990	8-9712	7999	PUMP ASM.; INJ. FIG.52	000000	000000
8971280230	8-9712	8023	PAN ASM.; OIL	000000	000000
8971280240	8-9712	8024	PUMP ASM.; INJ. FIG.52	000000	000000
8971281100	8-9712	8110	PUMP ASM.; OIL, W/PINION	000000	000000
8971281500	8-9712	8150	PLUG; OIL COOLER	000023	000000
8971282810			ADJUSTER; SEAT	000000	000002
8971283970	8-9712	8397	PULLEY; CRANK, KEY D=145	000000	000000
8971283971	8-9712	8397	PULLEY; CRANK, KEY D=145	000000	000000
8971283980	8-9712	8398	NIPPLE; OIL COOLER	000000	000000
8971284430	8-9712	8443	BREATHHER ASM.; AIR	000001	000000
8971284690	8-9712	8469	PIPE; INLET	000000	000000
8971285220	8-9712	8522	BRIDGE; CONT ROD, TRANSFE	000000	000000
8971286500	8-9712	8650	SLEEVE; GOVERNOR	000000	000000
8971287470	8-9712	8747	STARTER ASM; 12V-2	000000	000002
8971288180	8-9712	8818	RING; RET, CLU A/T	000000	000002
8971289630	8-9712	8963	PUMP ASM.; INJ. FIG.52	000000	000000
8971289631	8-9712	8963	PUMP ASM.; INJ. FIG.52	000000	000000
8971290560			MANIFOLD; EXHAUST	000000	000000
8971290710			BLOCK ASM.; CYL.	000000	000000
8971290720	8-9712	9072	BLOCK ASM.; CYL.	000000	000003

8971290721	8-9712	9072	BLOCK ASM.; CYL.	000000	000000
8971290730	8-9712	9073	BLOCK ASM; CYL.	000000	000000
8971290740	8-9712	9074	BLOCK ASM; CYL.	000000	000000
8971291750	8-9712	9175	GENERATOR ASM FIG.63	000000	000003
8971291760	8-9712	9176	BRACKET ASM; GEN.	000008	000000
8971294120	8-9712	9412	HOSE;RUBBER,FUEL,I/PUMP	000000	000000
8971294130	8-9712	9413	HOSE LEAK OFF RUBBER	000000	000006
8971294270	8-9712	9427	GASKET; GEAR CASE	000000	000000
8971294271	8-9712	9427	GASKET; GEAR CASE	000000	000045
8971294460	8-9712	9446	GEAR;COUNTER	000000	000003
8971294470	8-9712	9447	GEAR; COUNTER	000000	000000
8971294480	8-9712	9448	GEAR; 3RD,MAINSHAFT	000000	000002
8971294940	8-9712	9494	ROD;SHIFT 2ND & 3RD	000000	000001
8971294960	8-9712	9496	PIPE; INJ NO 1	000000	000000
8971295720	8-9712	9572	CAP; RAD	000000	000000
8971295990	8-9712	9599	PIPE ASM; INJECTION	000000	000002
8971296010	8-9712	9601	ANGLEICH KIT	000000	000000
8971296140	8-9712	9614	NOZZLE ASM; INJECTION	000000	000022
8971296150	8-9712	9615	RING; SNAP, MAINSHAFT	000001	000011
8971296160	8-9712	9616	RING; SNAP MAINSHAFT	000001	000002
8971296170	8-9712	9617	RING; SNAP, MAINSHAFT	000020	000000
8971296440	8-9712	9644	NOZZLE INJECTION	000000	000014
8971296490	8-9712	9649	NUT; COUPLING DRIVER,A/T	001465	000000
8971296910	8-9712	9691	CYLINDER	000000	000000
8971297040	8-9712	9704	SENSOR; VEHICLE	000000	000000
8971297050			SENSOR; VEHICLE	000000	000004
8971297210	8-9712	9721	CONVERTER ASM	000000	000000
8971297800	8-9712	9780	SHAFT ASM; IDLE GEAR	000000	000000
8971297801	8-9712	9780	SHAFT ASM; IDLE GEAR	000000	000004
8971297802	8-9712	9780	SHAFT ASM; IDLE GEAR	000000	000000
8971297820			GEAR; W/BUSH, IDLE Z=44	000000	000004
8971298300	8-9712	9830	COVER; GEAR CASE	000000	000001
8971298340	8-9712	9834	GOVERNOR ASM.; FIG.53	000000	000000
8971299360	8-9712	9936	SWITCH	000000	000000
8971299370	8-9712	9937	BODY ASM.	000000	000000
8971299820	8-9712	9982	GEAR CASE; TIMING	000000	000000
8971299821	8-9712	9982	GEAR CASE; TIMING	000000	000000
8971299822	8-9712	9982	GEAR CASE; TIMING	000000	000000
8971299823	8-9712	9982	GEAR CASE; TIMING	000000	000002
8971300090	8-9713	0009	FOOT ENGINE FRONT	000000	000000
8971300200	8-9713	0020	PUMP ASM; SEA WATER	000000	000000
8971300230	8-9713	0023	SOLENOID ASM; ENG. ST	000000	000000
8971300740	8-9713	0074	ADAPTER; EXHAUST	000000	000000
8971301060	8-9713	0106	FLYWHEEL ASM	000000	000000
8971301610	8-9713	0161	THERMOSTAT	000000	000000
8971301850	8-9713	0185	DUST COVER KIT	000000	000000
8971301860	8-9713	0186	LEVER ASM; SHIFT	000000	000000

8971301870	8-9713	0187	GEAR CASE	000000	000000
8971301880	8-9713	0188	SWITCH ASM; MAGUNETIC	000000	000001
8971301890	8-9713	0189	SHAFT; PINION	000000	000000
8971301900	8-9713	0190	CLUTCH ASM	000000	000000
8971301910	8-9713	0191	PINION CLUTCH ASM	000000	000000
8971301920	8-9713	0192	HOLDER ASM; BRUSH	000000	000000
8971301930	8-9713	0193	REAR COVER	000000	000000
8971301940	8-9713	0194	BRUSH	000000	000000
8971301950	8-9713	0195	FIELD COIL ASM	000000	000000
8971302570	8-9713	0257	SWITCH ASM; MAGNETIC	000000	000000
8971302580	8-9713	0258	YOKE ASM	000000	000000
8971302760	8-9713	0276	PAN ASM.; OIL	000000	000001
8971302770	8-9713	0277	PUMP ASM.; INJ. FIG.52	000000	000000
8971302790	8-9713	0279	PUMP ASM;INJ	000000	000003
8971304700			REPAIR KIT; BRACKET	000000	000007
8971305390	8-9713	0539	GOVERNOR ASM	000000	000000
8971305800	8-9713	0580	PLUNGER ASM	000000	000001
8971305810	8-9713	0581	NUT; RETAINING	000000	000000
8971307130	8-9713	0713	INSULATOR	000000	000000
8971307280	8-9713	0728	PULLEY ASM	000000	000000
8971308790	8-9713	0879	BRACKET; ENG. CONT.	000000	000000
8971308791	8-9713	0879	BRACKET; ENG. CONT.	000002	000000
8971308930			HOSE; FLEX, P/S	000000	000000
8971311160	8-9713	1116	PAN ASM.; OIL	000000	000001
8971311530	8-9713	1153	GOVERNOR ASM.; FIG.53	000000	000000
8971311860	8-9713	1186	METAL SET; CONN ROD, STAND	000000	000000
8971311861	8-9713	1186	METAL SET; CONN ROD, STAND	000000	000000
8971312230	8-9713	1223	SENSOR; OIL LEVEL	000000	000017
8971312450	8-9713	1245	BRACKET; ROCKER	000000	000000
8971312510	8-9713	1251	BRACKET ASM; AIR CLEANER	000000	000000
8971312950	8-9713	1295	HOSE; RUBBER, UPPER	000000	000060
8971313140	8-9713	1314	HOSE; RUBBER, LOWER	000000	000046
8971313150	8-9713	1315	HOSE; RUBBER, UPPER	000000	000014
8971313160	8-9713	1316	HOSE; RUBBER, LOWER	000000	000013
8971313280	8-9713	1328	SEAL;OIL,DRIVE GEAR	000000	000000
8971313281	8-9713	1328	SEAL;OIL,DRIVE GEAR	000000	000006
8971313570	8-9713	1357	INJECTION PUMP	000000	000000
8971313600	8-9713	1360	BRACKET; ROCKER	000000	000000
8971313620	8-9713	1362	BRACKET ASM; AIR CLEANER	000000	000174
8971314730	8-9713	1473	SPRING; MAIN	000003	000000
8971314740	8-9713	1474	MAIN SPRING GOV.	000002	000000
8971315880	8-9713	1588	HANGER; FRT., ENG.LIFTING	000000	000000
8971315970	8-9713	1597	BOLT; SEMS, EXH. MAN.	000000	000000
8971315971	8-9713	1597	BOLT; SEMS, EXH. MAN.	000000	000000
8971317131			PAN ASM; OIL	000000	000000
8971317132			PAN ASM; OIL	000000	000000
897131715T			PULLEY; CR/SHF	000000	000000

8971317150			PULLEY; CR/SHF	000000	000000
8971317151			PULLEY; CR/SHF	000000	000000
8971317152			PULLEY; CR/SHF	000000	000000
8971317153			PULLEY; CR/SHF	000000	000000
8971317154			PULLEY; CR/SHF	000000	000000
8971317290	8-9713	1729	VALVE; INL., OD=42.14	000000	000000
8971317291	8-9713	1729	VALVE; INL., OD=42.14	000000	000000
8971317292	8-9713	1729	VALVE; INL., OD=42.14	000000	000007
8971319220			STEM ASM; PARKING	000000	000003
8971319480	8-9713	1948	GOVERNOR ASM.; FIG.53	000000	000001
8971320110	8-9713	2011	FLYWHEEL ASM	000000	000000
8971320130			CASE; TIMING GEAR	000000	000000
8971320131			CASE; TIMING GEAR	000000	000013
8971320400			BODY ASM; VALVE	000000	000000
8971320410			GASKET; VALVE BODY	000000	000000
8971320420	8-9713	2042	GASKET; VALVE BODY	000000	000000
8971320430	8-9713	2043	PLATE; VALVE BODY	000000	000000
8971321410	8-9713	2141	PULLEY ASM; IDLE, FAN ACG	000000	000000
8971321411	8-9713	2141	PULLEY ASM; IDLE, FAN ACG	000000	000000
8971321412	8-9713	2141	PULLEY ASM; IDLE, FAN ACG	000000	000000
8971321413	8-9713	2141	PULLEY ASM; IDLE, FAN ACG	000000	000001
8971321650	8-9713	2165	GAUGE; OIL LEVEL	000032	000116
8971322100	8-9713	2210	PAN ASM; OIL, L=92	000000	000000
8971322101	8-9713	2210	PAN ASM; OIL, L=92	000000	000000
8971322102	8-9713	2210	PAN ASM; OIL, L=92	000000	000002
8971322910	8-9713	2291	BOLT; TAMPER, COVER, ANGLE	000000	000000
8971322911	8-9713	2291	BOLT; TAMPER, COVER, ANGLE	000000	000000
8971322912	8-9713	2291	BOLT; TAMPER, COVER, ANGLE	000000	000013
8971322920	8-9713	2292	BOLT; TAMPER, COVER FIX	000000	000000
8971322921	8-9713	2292	BOLT; TAMPER, COVER FIX	000000	000000
8971322922	8-9713	2292	BOLT; TAMPER, COVER FIX	000000	000155
8971329080	8-9713	2908	SLEEVE; GOVERNOR	000000	000000
8971330220	8-9713	3022	CONVERTER ASM; TORQUE, A/T	000000	000000
8971330530	8-9713	3053	CAPSULE; SPR.	000000	000000
8971332270	8-9713	3227	PUMP ASM.; INJ. FIG.52	000000	000000
8971332281	8-9713	3228	PUMP ASM.; INJ. FIG.52	000000	000000
8971332290	8-9713	3229	PAN ASM.; OIL	000000	000000
8971332300	8-9713	3230	TUBE; GUIDE, OIL L/GAUGE	000000	000000
8971332310	8-9713	3231	PUMP ASM.; INJ. FIG.52	000000	000000
8971333280	8-9713	3328	MANIFOLD; INLET, WO/STUD	000000	000000
8971333290	8-9713	3329	HOUSING; FLYWHEEL	000000	000000
8971334160	8-9713	3416	BOLT	000000	000000
8971334161	8-9713	3416	BOLT	000000	000198
8971334460	8-9713	3446	COVER; CYL. HEAD	000000	000019
8971335690	8-9713	3569	FLYWHEEL ASM	000000	000005
8971335790	8-9713	3579	PAN ASM.; OIL	000000	000000
8971335850	8-9713	3585	FLYWHEEL ASM	000000	000000

8971342640	8-9713	4264	BOLT; OIL PAN TO CASE	000364	000000
8971342910	8-9713	4291	FAN ASM; D=380 10 SUCT	000000	000000
8971343830	8-9713	4383	ANGLEICH KIT	000000	000000
8971345060	8-9713	4506	COVER; H/PUMP, FT	000000	000000
8971345070	8-9713	4507	PIPE ASM;OIL,H/PUMP(3LB1)	000000	000000
8971345180	8-9713	4518	CONNECTOR; PIPE, PTO	000001	000000
8971345240	8-9713	4524	NOZZLE; INJ. ASM.	000000	000012
8971345250	8-9713	4525	NOZZLE; FUEL INJ.	000000	000004
8971345280	8-9713	4528	PISTON	000000	000000
8971347350	8-9713	4735	GASKET FILLER	000000	000004
8971347410	8-9713	4741	SILENCER ASM; EXHAUST	000000	000000
8971347411	8-9713	4741	SILENCER ASM; EXHAUST	000000	000002
8971348270	8-9713	4827	IOVER ASM.;CYL. HEAD	000000	000000
8971348410	8-9713	4841	HOLDER ASM.; NOZZLE	000001	000012
8971348420	8-9713	4842	NOZZLE ASM.; INJ.	000000	000002
8971348660			ALTERNATOR	000000	000000
8971348730	8-9713	4873	PUMP ASM; INJ.	000000	000000
8971348731	8-9713	4873	PUMP ASM; INJ.	000000	000001
8971348732	8-9713	4873	PUMP ASM; INJ.	000000	000000
8971348740	8-9713	4874	PUMP ASM; INJ.	000000	000000
8971348741	8-9713	4874	PUMP ASM; INJ.	000000	000000
8971349121	8-9713	4912	HOSE; RUBBER, BREATHER	000000	000000
8971350320	8-9713	5032	ROD ASM; CONN.	000000	000000
8971350321	8-9713	5032	ROD ASM; CONN.	000000	000000
8971350323	8-9713	5032	ROD ASM; CONN.	000000	000002
8971350324	8-9713	5032	ROD ASM; CONN.	000000	000006
8971350325	8-9713	5032	ROD ASM; CONN.	000000	000000
8971350370	8-9713	5037	FLYWHEEL ASM.	000000	000000
8971351030	8-9713	5103	BEARING; FAN DR	000000	000003
8971351130	8-9713	5113	SEAL; OIL CRANK, RR	000000	000002
8971351410	8-9713	5141	BOLT; OIL PAN	000000	002170
8971351830	8-9713	5183	PAN ASM.; OIL	000000	000002
8971352410	8-9713	5241	BRACK; RADIATOR COVER UP	000000	000000
8971352411	8-9713	5241	BRACK; RADIATOR COVER UP	000034	000000
8971352420	8-9713	5242	BRACK; RADIATOR COVER	000000	000002
8971352440	8-9713	5244	SUPPORT; LOWER RADIATOR	000001	000000
8971352460	8-9713	5246	PLATE; LOWER RADIATOR	000000	000000
8971352470	8-9713	5247	BRACK; RADIATOR COVER LOW	000000	000001
8971352480	8-9713	5248	BRACK; RADIATOR COVER LOW	000000	000002
8971352490	8-9713	5249	NET ASM; RADIATOR	000000	000001
8971352500	8-9713	5250	GUARD; FRONT,RADIATOR	000000	000001
8971352510	8-9713	5251	GUARD; BELT, FAN	000000	000000
8971352511	8-9713	5251	GUARD; BELT, FAN	000000	000001
8971353170			HOLDER; BRUSH STARTER	000000	000000
8971353430	8-9713	5343	STARTER ASM FIG.62	000000	000000
8971353431	8-9713	5343	STARTER ASM FIG.62	000000	000000
8971353432	8-9713	5343	STARTER ASM FIG.62	000000	000035

8971354190	8-9713	5419	BOLT; HSG	000000	000097
8971354230	8-9713	5423	PIN;KNOCK,TRANSFER CASE	000000	000087
8971354460	8-9713	5446	FLYWHEEL	000000	000004
8971354470	8-9713	5447	FLYWHEEL HOUSING	000000	000000
8971354471	8-9713	5447	FLYWHEEL HOUSING	000000	000001
8971354560	8-9713	5456	PIPE ASM;H PUMP 3LD1	000000	000000
8971354561	8-9713	5456	PIPE ASM;H PUMP 3LD1	000000	000000
8971354570	8-9713	5457	FLYWHEEL ASM	000000	000000
8971354770	8-9713	5477	SPACER	000000	000001
8971354970	8-9713	5497	YOKE ASM	000000	000000
8971355091	8-9713	5509	CLUTCH ASM; O.R.	000000	000000
8971355680	8-9713	5568	YOKE ASM.	000003	000003
8971355690	8-9713	5569	CLUTCH ASM.; O.R.	000000	000000
8971356060	8-9713	5606	SEAL, OIL,LIP,A/T	000010	000023
8971358040	8-9713	5804	PIPE ASM; FUEL FEED	000000	000002
8971358990	8-9713	5899	PAN ASM.; OIL (L=119.5)	000000	000000
8971359450	8-9713	5945	BELT; COOLING FAN	000000	000000
8971360000	8-9713	6000	COVER ASM.;CYL. HEAD	000000	000000
8971360020	8-9713	6002	HOSE; RUBBER, PCV	000000	000000
8971360130	8-9713	6013	GEAR; DRIVE, INJ PUMP	000001	000012
8971361190	8-9713	6119	CAP; RAD	000000	000000
8971361480	8-9713	6148	PAN ASM; OIL	000000	000001
8971361840	8-9713	6184	ANGLEICH KIT	000002	000000
8971363190	8-9713	6319	FILTER ASM; FUEL	000000	000000
8971363191	8-9713	6319	FILTER ASM; FUEL	000000	000000
8971363192	8-9713	6319	FILTER ASM; FUEL	000000	000009
8971363240	8-9713	6324	GASKET; CYL.HEAD	000000	000000
8971363420	8-9713	6342	HOSE; RUBBER. PCV	000000	000000
8971364120	8-9713	6412	LEVER	000001	000008
8971364130	8-9713	6413	RING; SEAL	000000	001511
8971364140	8-9713	6414	BRACKET	000000	000000
8971364170			GOVERNOR ASM.; FIG.53	000000	000000
8971364510	8-9713	6451	INSULATOR; A/C TO H/C	000000	000000
8971364520	8-9713	6452	AIR CLEANER ASM FIG.74	000000	000000
8971364530	8-9713	6453	BRACKET; AIR CLEANER	000000	000000
8971364540	8-9713	6454	SILENCER ASM; EXHAUST	000000	000001
8971364542	8-9713	6454	SILENCER ASM; EXHAUST	000000	000000
8971364543	8-9713	6454	SILENCER ASM; EXHAUST	000000	000000
8971364620	8-9713	6462	HOSE; INLET CONNECTING	000000	000000
8971364621	8-9713	6462	HOSE; INLET CONNECTING	000000	000000
8971365731			PUMP ASM; OIL, P	000000	000000
8971366790	8-9713	6679	PUMP ASM; INJ. FIG 51	000000	000000
8971366800	8-9713	6680	PUMP ASM; INJ. FIG 51	000000	000000
8971366810	8-9713	6681	PUMP ASM; INJ. FIG. 51	000000	000000
8971366820	8-9713	6682	PUMP ASM; INJ. FIG51	000000	000000
8971366830	8-9713	6683	PUMP ASM; INJ. FIG51	000000	000000
8971366831	8-9713	6683	PUMP ASM; INJ. FIG51	000000	000001

8971366840	8-9713	6684	PUMP ASM; INJ. FIG. 51	000000	000000
8971366841	8-9713	6684	PUMP ASM; INJ. FIG. 51	000000	000001
8971366850	8-9713	6685	PUMP ASM; INJ. FIG 51	000000	000000
8971368090	8-9713	6809	GENERATOR ASM.	000000	000001
8971368100	8-9713	6810	PAN ASM; OIL L-146	000000	000000
8971368200			ANTENNA	000000	000000
8971369080	8-9713	6908	ARMATURE ASM	000000	000000
8971369090	8-9713	6909	YOKE ASM	000000	000000
8971369100	8-9713	6910	BOLT; THROUGH	000000	000000
8971370040			ALTERNATOR	000000	000000
8971370421			SENSOR; OIL PRESSURE	000000	000009
8971370755			GASKET; GEAR CA	000000	000002
8971371480			TENSIONER; TIMI	000000	000001
8971372611			CYLINDER ASM; CLUTCH MAST	000000	000000
8971372980	8-9713	7298	BRACKET;AC-GENERATOR FIX	000000	000000
8971373540	8-9713	7354	CLEANER ASM; AIR	000000	000000
8971374560			ARM; KNUCKLE	000001	000000
8971374780	8-9713	7478	STARTER ASM; 24V-3.2 KW	000000	000000
8971374781	8-9713	7478	STARTER ASM; 24V-3.2 KW	000000	000000
8971374782	8-9713	7478	STARTER ASM; 24V-3.2 KW	000000	000003
8971374900	8-9713	7490	TUBE;GUIDE,OIL L/GAUGE	000000	000001
8971374910	8-9713	7491	TUBE;GUIDE,OIL L/GAUGE	000000	000018
8971375000			GASKET; OIL COOLER TO C/B	000000	000000
8971375640	8-9713	7564	SPRING; IDLE	000000	000000
8971375642	8-9713	7564	SPRING; IDLE	000000	000000
8971375980	8-9713	7598	BOLT; WATER PIPE CLIP	000000	000008
8971375990	8-9713	7599	UNIT; OIL PRESSURE	000000	000000
8971376000	8-9713	7600	CASE; PINION, STARTER	000000	000000
8971376010	8-9713	7601	COVER; RR COVER STARTER	000000	000000
8971376060	8-9713	7606	PINION SET	000000	000000
8971376390	8-9713	7639	THERMOMETER UNIT	000000	000004
8971376400	8-9713	7640	PIPE ASM;OIL TURBO DRAIN	000000	000000
8971376530	8-9713	7653	SWITCH; REV LAMP	000000	000000
8971376540	8-9713	7654	SWITCH; NEUTRAL	000000	000000
8971376550	8-9713	7655	SWITCH	000000	000000
8971377310			LAMP ASM; REAR	000000	000000
8971377320			LAMP ASM;RR COMB	000001	000000
8971377680	8-9713	7768	PAN ASM.; OIL	000000	000000
8971377980			GASKET; OIL STR	000000	000000
8971378320	8-9713	7832	PUMP ASM; INJ.	000000	000000
8971378350	8-9713	7835	PUMP ASM; INJ.PFR.	000000	000000
8971378351	8-9713	7835	PUMP ASM; INJ.PFR.	000000	000005
8971378360	8-9713	7836	NUT;OIL PAN	000000	000064
8971379100	8-9713	7910	GEAR: CRANKSHAFT	000000	000000
8971379101	8-9713	7910	GEAR: CRANKSHAFT	000000	000000
8971379102	8-9713	7910	GEAR: CRANKSHAFT	000000	000003
8971379250	8-9713	7925	PUMP ASM.; INJ.	000000	000000

8971380030	8-9713	8003	PIPE;OUTLET,WATER	000000	000000
8971380031	8-9713	8003	PIPE;OUTLET,WATER	000000	000000
8971380032	8-9713	8003	PIPE;OUTLET,WATER	000000	000010
8971380180	8-9713	8018	PULLEY; CR/SHF	000000	000002
8971380370	8-9713	8037	STAY; UPPER RADIATOR LH	000003	000000
8971380380	8-9713	8038	STAY; UPPER RADIATOR	000000	000001
8971380390	8-9713	8039	STAY; UPPER RADIATOR,RH	000000	000000
8971380391	8-9713	8039	STAY; UPPER RADIATOR,RH	000000	000001
8971380410	8-9713	8041	STAY; UPPER RADIATOR,RH	000000	000000
8971380411	8-9713	8041	STAY; UPPER RADIATOR,RH	000000	000001
8971380450	8-9713	8045	BRACK; RADIATOR COVER	000000	000000
8971380451	8-9713	8045	BRACK; RADIATOR COVER	000079	000000
8971380661	8-9713	8066	GASKET; CYL HD	000000	000000
8971380860	8-9713	8086	HOSE;RUBBER,BY-PASS	000057	000000
8971382540	8-9713	8254	RECTIFIER; GEN	000000	000000
8971382570	8-9713	8257	FAN; GEN	000000	000000
8971382670			COVER; CYL HD	000000	000006
8971382690			PAN ASM; OIL	000000	000000
8971382951	8-9713	8295	CONNECTOR; W/PUMP	000000	000000
8971383311	8-9713	8331	PIPE ASM; WATER, O/C	000000	000000
8971383460	8-9713	8346	HOSE; RUBBER, CONN	000002	000000
8971383471	8-9713	8347	HOSE; RUBBER, W/PIPE TO	000000	000000
8971384260	8-9713	8426	PUMP ASM; INJ.	000000	000000
8971384580	8-9713	8458	PUMP ASM; INJ.	000000	000001
8971384630	8-9713	8463	PUMP ASM; INJ.	000000	000000
8971384640	8-9713	8464	PUMP ASM; INJ.	000000	000000
8971384660	8-9713	8466	PUMP ASM; INJ.	000000	000000
8971384670	8-9713	8467	PUMP ASM; INJ.	000000	000000
8971384680	8-9713	8468	PUMP ASM; INJ.	000000	000001
8971384681	8-9713	8468	PUMP ASM; INJ.	000000	000000
8971384690	8-9713	8469	PUMP ASM; INJ.	000000	000000
8971384730	8-9713	8473	PUMP ASM; INJ.	000000	000000
8971384740	8-9713	8474	PUMP ASM; INJ.	000000	000001
8971384760	8-9713	8476	PUMP ASM; INJ.	000000	000000
8971384770	8-9713	8477	PUMP ASM; INJ.	000000	000000
8971384950			GEAR; CM/SHF	000000	000000
8971384980			GEAR; CR/SHF	000000	000000
8971385080			GEAR; INJ PUMP	000000	000000
8971385330	8-9713	8533	VALVE ASM.; DELIVERY	000000	000003
8971385340	8-9713	8534	B O L T	000001	000000
8971385350	8-9713	8535	LEVER	000000	000000
8971385360	8-9713	8536	GOVERNOR ASM.; FIG.53	000000	000000
8971385370	8-9713	8537	GOVERNOR ASM.; FIG.53	000000	000000
8971385380	8-9713	8538	GOVERNOR ASM.; FIG.53	000000	000000
8971385390	8-9713	8539	GOVERNOR ASM.; FIG.53	000000	000000
8971385470	8-9713	8547	PUMP ASM; INJ.	000000	000000
8971385480	8-9713	8548	PUMP ASM; INJ.	000000	000000

8971385490	8-9713	8549	PUMP ASM; INJ.	000000	000002
8971385510	8-9713	8551	PUMP ASM; INJ.	000000	000000
8971385520	8-9713	8552	PUMP ASM; INJ.	000000	000000
8971385530	8-9713	8553	PUMP ASM; INJ.	000000	000004
8971385540	8-9713	8554	PUMP ASM; INJ.	000000	000003
8971385550	8-9713	8555	PUMP ASM; INJ.	000000	000003
8971385560	8-9713	8556	PUMP ASM; INJ.	000000	000000
8971385570	8-9713	8557	PUMP ASM; INJ.	000000	000001
8971385580	8-9713	8558	PUMP ASM; INJ.	000001	000000
8971385590	8-9713	8559	PUMP ASM; INJ.	000000	000000
8971385600	8-9713	8560	PUMP ASM; INJ.	000000	000001
8971385610	8-9713	8561	PUMP ASM; INJ.	000000	000000
8971385620	8-9713	8562	PUMP ASM; INJ.	000000	000001
8971385630	8-9713	8563	PUMP ASM; INJ.	000000	000000
8971385640	8-9713	8564	PUMP ASM; INJ.	000000	000000
8971385650	8-9713	8565	PUMP ASM; INJ.	000000	000000
8971385660	8-9713	8566	PUMP ASM; INJ.	000000	000000
8971385670	8-9713	8567	PUMP ASM; INJ.	000000	000000
8971385690	8-9713	8569	PUMP ASM; INJ.	000000	000025
8971385700	8-9713	8570	PUMP ASM; INJ.	000000	000000
8971385720	8-9713	8572	PUMP ASM; INJ.	000000	000000
8971385730	8-9713	8573	PUMP ASM; INJ.	000000	000000
8971385740	8-9713	8574	PUMP ASM; INJ.	000000	000000
8971385750	8-9713	8575	PUMP ASM; INJ.	000000	000000
8971385760	8-9713	8576	PUMP ASM; INJ.	000000	000000
8971385780	8-9713	8578	PUMP ASM; INJ.	000000	000000
8971385790	8-9713	8579	PUMP ASM; INJ.	000000	000000
8971385840	8-9713	8584	PUMP ASM; INJ.	000000	000000
8971385860	8-9713	8586	PUMP ASM; INJ.	000000	000000
8971385870	8-9713	8587	PUMP ASM; INJ.	000000	000000
8971385960	8-9713	8596	PUMP ASM; INJ	000000	000000
8971386070	8-9713	8607	CONNECTOR; GLOW PLUG	000000	000002
8971386310	8-9713	8631	SWITCH ASM.; NEUTRAL	000000	000000
8971386320	8-9713	8632	SWITCH; TRANSFER INDICATO	000000	000000
8971386321	8-9713	8632	SWITCH; TRANSFER INDICATO	000012	000023
8971386350	8-9713	8635	SWITCH; REV LAMP	000000	000000
8971386440	8-9713	8644	PUMP ASM; FEED	000010	000002
8971386490	8-9713	8649	PLUNGER ASM	000001	000000
8971386730	8-9713	8673	RETAINER; BRG UPR, MAINSH	000000	000000
8971387850	8-9713	8785	HOSE; RUBBER, PCV	000002	000000
8971388382			CABLE PARKING	000000	000000
8971388390			CABLE; PARKING	000000	000000
8971388391			CABLE; PARKING	000000	000000
8971388810	8-9713	8881	HOSE; RUBBER, EGR COOLER	000000	000050
8971392240	8-9713	9224	PUMP ASM; INJ.	000000	000000
8971392241	8-9713	9224	PUMP ASM; INJ.	000000	000000
8971392260	8-9713	9226	HOSE; RUBBER, BREATHER	000000	000000

8971392360			DECAL; 2.8D TUR	000000	000002
8971393913			PIPE; EXH	000000	000000
8971395300	8-9713	9530	CUP; ACL	000001	000000
8971395350	8-9713	9535	PUMP ASM; INJ.	000000	000000
8971395360	8-9713	9536	PUMP ASM; INJ.	000000	000000
8971395510	8-9713	9551	PLUNGER ASM	000000	000000
8971395520	8-9713	9552	PLUNGER ASM	000000	000000
8971396030	8-9713	9603	HOUSING; THERMOSTAT	000000	000000
8971396031	8-9713	9603	HOUSING; THERMOSTAT	000000	000001
8971397100	8-9713	9710	WASHER; NOZZLE HOLDER	000003	000000
8971397110	8-9713	9711	SHIELD; HEAT INJ NOZZLE	000000	000007
8971397120	8-9713	9712	PIPE; WATER OUTLET	000024	000000
8971397130	8-9713	9713	PIPE ASM; OIL, GEAR CASE	000000	000001
8971398150			CYLINDER; WHEEL	000000	000001
8971398200	8-9713	9820	CYLINDER;WHEEL FRT,BRK,RH	000000	000026
8971398220			CYLINDER; WHEEL	000000	000001
8971398250			CYLINDER; WHEEL	000000	000001
8971398410	8-9713	9841	CYLINDER; WHEEL	000000	000003
8971401010			GEAR; DRIVE,INJ PUM	000000	000000
8971406240	8-9714	0624	NOZZLE ASM; INJ.	000000	000001
8971406250	8-9714	0625	NOZZLE ASM; INJ.	000000	000000
8971408540			FAN; COOLING	000000	000000
8971411952			FAN;COOLING	000000	000003
8971412020			RING SET; PISTON O/S 0.25	000000	000006
8971412040	8-9714	1204	RING SET; PISTON O/S 0.25	000000	000014
8971412050	8-9714	1205	RING SET; O/S 0.25	000000	000025
8971412070	8-9714	1207	RING SET; PISTON OVSI0.25	000000	000024
8971412080	8-9714	1208	RING SET; PISTON STD	000000	000164
8971412090	8-9714	1209	RING SET; PISTON OVSI0.25	000000	000031
8971412100	8-9714	1210	MAIN BEARING KIT	000000	000000
8971412850	8-9714	1285	ADAPTER; G/CASE, PTO	000000	000000
8971414690	8-9714	1469	NUT; DRIVE SHAFT	000009	000009
8971417690	8-9714	1769	HOLDER ASM; NOZZLE	000000	000000
8971417740	8-9714	1774	PUMP ASM; INJ.	000000	000000
8971418210	8-9714	1821	HEAD ASM; CYL.	000000	000000
8971418211	8-9714	1821	HEAD ASM; CYL.	000000	000000
8971418212	8-9714	1821	HEAD ASM; CYL.	000000	000002
8971418230	8-9714	1823	HEAD ASM; CYL.	000000	000000
8971418780	8-9714	1878	GEAR; INPUT, TRANSFER	000000	000001
8971418790	8-9714	1879	SHAFT,OUTPUT,RR WHEEL DR	000000	000000
8971418830	8-9714	1883	BLOCK; SHIFT,LOW-HIGH.TR	000000	000000
8971418831	8-9714	1883	BLOCK; SHIFT,LOW-HIGH.TR	000000	000008
8971418850	8-9714	1885	SYNCHRONIZER ASM; LOW-HIG	000000	000000
8971418851	8-9714	1885	SYNCHRONIZER ASM; LOW-HIG	000000	000000
8971419690			DECAL; RR END	000000	000002
8971422070	8-9714	2207	GAUGE ASM.; 0/LEVEL	000017	000000
8971423410	8-9714	2341	ANGLEICH KIT	000000	000000

8971424110	8-9714	2411	THERMOMETER UNIT	000000	000054
8971425151			COVER; MUD, TIR	000000	000002
8971425161			COVER; MUD, TIRE	000000	000002
8971425620	8-9714	2562	SCREW; FRT COVER	000000	000000
8971425680	8-9714	2568	SCREW; RECTIFIER, GEN	000000	000007
8971425690	8-9714	2569	SCREW; RECTIFIER, GEN	000000	000000
8971425700	8-9714	2570	WASHER; INSULATE, RR COVE	000000	000000
8971429030	8-9714	2903	SCREW; W/O-RING	000000	000000
8971429710	8-9714	2971	PLUNGER ASM	000000	000000
8971429720	8-9714	2972	RING; DELIVERY VALVE	000000	000000
8971430540	8-9714	3054	PLATE; ADJUSTING	000000	000000
8971431740	8-9714	3174	HOSE; AIR BREATHER L=750	000000	000000
8971432190	8-9714	3219	ADAPTER; PTO PUMP	000000	000000
8971432200	8-9714	3220	PIPE ASM; OIL, H/PUMP	000000	000000
8971432201	8-9714	3220	PIPE ASM; OIL, H/PUMP	000000	000000
8971432210	8-9714	3221	GEAR ASM; PTO	000000	000000
8971432230	8-9714	3223	SHAFT ASM; IDLE GEAR	000000	000000
8971433290	8-9714	3329	GENERATOR ASM.	000000	000005
8971433320	8-9714	3332	INJECTION PUMP	000000	000000
8971433321	8-9714	3332	INJECTION PUMP	000000	000071
8971436040	8-9714	3604	SWITCH; TRANSFER INDICATO	000000	000000
8971437240			BELT; TIMING	000000	000004
8971443310	8-9714	4331	AIR CLEANER ASM	000000	000000
8971443570	8-9714	4357	CLOS. PLUG; L=1.50	000000	000000
8971443580	8-9714	4358	CLOS. PLUG; L=1.60	000000	000000
8971443590	8-9714	4359	CLOS. PLUG; L=1.70	000000	000000
8971443600	8-9714	4360	CLOS. PLUG; L=1.80	000000	000000
8971443610	8-9714	4361	CLOS. PLUG; L=1.90	000000	000000
8971443620	8-9714	4362	CLOS. PLUG; L=2.00	000000	000000
8971443630	8-9714	4363	CLOS. PLUG; L=2.10	000000	000000
8971443640	8-9714	4364	CLOS. PLUG; L=2.20	000000	000000
8971443650	8-9714	4365	CLOS. PLUG; L=2.30	000000	000000
8971443660	8-9714	4366	CLOSING PLUG; L=2.4	000000	000000
8971443670	8-9714	4367	CLOS. PLUG; L=2.50	000000	000000
8971443680	8-9714	4368	CLOS. PLUG; L=2.60	000000	000000
8971443690	8-9714	4369	CLOS. PLUG; L=2.70	000000	000000
8971443700	8-9714	4370	CLOS. PLUG; L=2.80	000000	000000
8971443710	8-9714	4371	CLOS. PLUG; L=2.90	000000	000000
8971443720	8-9714	4372	CLOS. PLUG; L=3.00	000000	000000
8971443730	8-9714	4373	CLOS. PLUG; L=3.10	000000	000000
8971443740	8-9714	4374	CLOS. PLUG; L=3.20	000000	000000
8971443750	8-9714	4375	CLOS. PLUG; L=3.30	000000	000000
8971443760	8-9714	4376	CLOS. PLUG; L=3.40	000000	000000
8971443770	8-9714	4377	CLOSING PLUG; L=3.5	000000	000000
8971443780	8-9714	4378	CLOS. PLUG; L=3.60	000000	000000
8971443790	8-9714	4379	CLOS. PLUG; L=3.70	000000	000000
8971443800	8-9714	4380	CLOS. PLUG; L=3.80	000000	000000

8971443810	8-9714	4381	CLOS. PLUG; L=3.90	000000	000000
8971443820	8-9714	4382	CLOS. PLUG; L=4.00	000000	000000
8971443830	8-9714	4383	CLOS. PLUG; L=4.10	000000	000000
8971443840	8-9714	4384	CLOS. PLUG; L=4.20	000000	000001
8971443850	8-9714	4385	CLOS. PLUG; L=4.30	000000	000000
8971443860	8-9714	4386	CLOS. PLUG; L=4.40	000000	000000
8971443870	8-9714	4387	CLOS. PLUG; L=4.50	000000	000000
8971443880	8-9714	4388	CLOS. PLUG; L=4.60	000000	000000
8971443890	8-9714	4389	CLOS. PLUG; L=4.70	000000	000000
8971443900	8-9714	4390	CLOS. PLUG; L=4.80	000000	000000
8971443910	8-9714	4391	CLOS. PLUG; L=4.90	000000	000000
8971445831	8-9714	4583	BOLT; CYL HD TO B	000000	000000
8971445832	8-9714	4583	BOLT; CYL HD TO B	000132	000018
8971445840	8-9714	4584	SEAT; SPR	000184	000001
8971447030	8-9714	4703	PIPE ASM.; OIL, TURBO IN	000000	000000
8971447040	8-9714	4704	PIPE ASM;OIL TURBO DRAIN	000000	000000
8971447041	8-9714	4704	PIPE ASM;OIL TURBO DRAIN	000000	000000
8971447042	8-9714	4704	PIPE ASM;OIL TURBO DRAIN	000000	000002
8971447050	8-9714	4705	PUMP ASM.; INJ.	000000	000000
8971447060	8-9714	4706	TURBO CHARGER ASM.	000000	000006
8971447061	8-9714	4706	TURBO CHARGER ASM.	000000	000002
8971447070	8-9714	4707	DUCT;AIRTURBO-INLET MAN 1	000000	000002
8971447240	8-9714	4724	PIPE ASM; FUEL, FEED	000000	000002
8971447260	8-9714	4726	BRACKET ASM; FR	000000	000000
8971447270	8-9714	4727	SCREW SET	000000	000000
8971447280	8-9714	4728	ROTOR ASM	000000	000000
8971447320	8-9714	4732	STATOR ASM	000000	000000
8971447360	8-9714	4736	BRACKET ASM; RR	000000	000000
8971447370	8-9714	4737	RECTIFIER ASM	000000	000000
8971447380	8-9714	4738	BRUSH SET	000000	000000
8971447390	8-9714	4739	PULLEY ASM	000000	000000
8971447400	8-9714	4740	BEARING; BALL FRONT	000000	000000
8971447410	8-9714	4741	BEARING; BALL RR	000000	000000
8971447420	8-9714	4742	IC REGULATOR SET	000000	000000
8971448450	8-9714	4845	STATOR ASM	000000	000000
8971450130	8-9714	5013	FOOT; ENG	000000	000000
8971450150	8-9714	5015	PUMP ASM; INJ.	000000	000000
8971451980	8-9714	5198	SHAFT;CAM, INJ. PUMP&VALVE	000000	000002
8971452440	8-9714	5244	HOSE; INLET CONNECTING	000000	000000
8971453210			PIPE; ACTUATOR T	000000	000002
8971453230			BEARING; GEARSHAFT	000000	000000
8971453250	8-9714	5325	CLUTCH; PINION, STARTER	000000	000000
8971453270	8-9714	5327	N U T	000000	000000
8971453280	8-9714	5328	BOLT	000000	000000
8971453311	8-9714	5331	PISTON; STD	000000	000000
8971453740	8-9714	5374	SPRING; DETENT SHIFT ROD	000000	000000
8971454070			LINK; DRAG	000000	000000

8971454500			LINK; DRAG	000000	000012
8971455160	8-9714	5516	NUT SET	000000	000000
8971455590	8-9714	5559	PIPE ASM; INJECTION	000000	000027
8971455800	8-9714	5580	INSTR DWG.; ENG/CONT.	000000	000000
8971456100	8-9714	5610	VALVE ASM.; RELIEF	000000	000000
8971456120	8-9714	5612	VALVE; RELIEF PSTN	000000	000000
8971456990			PACKING; COVER	000000	000070
8971459140	8-9714	5914	PUMP ASM; INJ.	000000	000000
8971459950	8-9714	5995	PINION ASM	000001	000000
8971460020	8-9714	6002	BEARING BALL	000000	000000
8971460060	8-9714	6006	PINION ASM	000000	000002
8971461050	8-9714	6105	CONTROLLER	000000	000001
8971461390	8-9714	6139	SHIM; T=0.4	000000	000000
8971461400	8-9714	6140	SHIM; T=0.6	000000	000000
8971461410	8-9714	6141	SHIM; T=0.7	000000	000000
8971461420	8-9714	6142	SHIM; T=1.9	000000	000000
8971462111			RADIATOR ASM	000000	000000
8971462330	8-9714	6233	PIPE ASM; OIL, H/PUMP	000000	000000
8971462331	8-9714	6233	PIPE ASM; OIL, H/PUMP	000000	000000
8971464280	8-9714	6428	HOUSING; FLYWHEEL	000001	000000
8971464290	8-9714	6429	HOUSING; FLYWHEEL	000000	000009
8971464990	8-9714	6499	GASKET; EXH MANIF TO HD	000000	000000
8971464991	8-9714	6499	GASKET; EXH MANIF TO HD	000000	000000
8971464992	8-9714	6499	GASKET; EXH MANIF TO HD	000515	001112
8971465170	8-9714	6517	CONNECTOR;	000000	000103
8971465180	8-9714	6518	CONNCECTOR;GLOW PLUG	000001	000000
8971466840	8-9714	6684	GASKET; HTR PIPE	000095	000208
8971468070	8-9714	6807	GOVERNOR ASM.;	000000	000000
8971468080	8-9714	6808	GOVERNOR ASM.	000000	000000
8971468081	8-9714	6808	GOVERNOR ASM.	000000	000000
8971468090	8-9714	6809	PUMP ASM.; FEED	000000	000000
8971468100	8-9714	6810	COUPLING	000000	000000
8971468130	8-9714	6813	PLUNGER ASM.	000000	000001
8971468240	8-9714	6824	VALVE ASM; DELIVERY	000000	000005
8971469960	8-9714	6996	PISTON; STD	000000	000000
8971469980	8-9714	6998	BOLT; GEN	000027	000197
8971470340	8-9714	7034	SEAL; OIL	000000	000068
8971473340	8-9714	7334	GEAR; IDLE, B	000000	000000
8971473382			PUMP ASM; OIL	000000	000000
8971473383			PUMP ASM; OIL	000000	000000
8971473384			PUMP ASM; OIL	000000	000000
8971474890	8-9714	7489	SLEEVE; ASM	000000	000000
8971474891	8-9714	7489	SLEEVE; ASM	000000	000000
8971474892	8-9714	7489	SLEEVE; ASM	000000	000000
8971474893	8-9714	7489	SLEEVE; ASM	000000	000036
8971474990	8-9714	7499	SHAFT ASM; IDLE GEAR	000000	000000
8971475010	8-9714	7501	GEAR; W/BUSH, IDLE (A) Z=44	000000	000000

8971475800	8-9714	7580	INJECTION PUMP	000000	000000
8971475801	8-9714	7580	INJECTION PUMP	000000	000000
8971477980	8-9714	7798	HARNES; ENGINE SIDE	000000	000000
8971478210	8-9714	7821	BOLT; SUPPORT PLATE	000000	000000
8971479210	8-9714	7921	RUBBER; SPACER, C/HEAD	000000	000000
8971479840	8-9714	7984	RING SET; PISTO	000000	000065
8971479990	8-9714	7999	PAN ASM; OIL	000000	000000
8971480070	8-9714	8007	RADIATOR CAP; 2/3KC1	000000	000000
8971480220	8-9714	8022	PISTON; OVSI 0.25	000000	000027
8971482800	8-9714	8280	OIL FILTER; MAIN	000000	000003
8971483230	8-9714	8323	SEAT; INSERT	000000	000000
8971483240	8-9714	8324	INSERT EXH SEAT	000000	000000
8971483430	8-9714	8343	HOSE; HEAD TO O/COOL	000000	000001
8971483450	8-9714	8345	HOSE; O/C TO CONNECT	000000	000011
8971483481	8-9714	8348	PUMP ASM.; INJ.	000000	000000
8971484320			BRAKE MASTER CYL	000000	000000
8971484560	8-9714	8456	CAP; RAD	000000	000000
8971485460	8-9714	8546	FLYWEIGHT ASM	000000	000000
8971485480	8-9714	8548	LEVER ASM; FLOATING	000000	000001
8971485490	8-9714	8549	LEVER; FLOATING	000000	000000
8971485500	8-9714	8550	PLATE; LINK, LEVER-PUMP	000000	000000
8971485570	8-9714	8557	SPRING; MAIN	000000	000039
8971488650	8-9714	8865	LINK ASM; CONTROL	000000	000001
8971488920	8-9714	8892	CLIP; FUEL HOSE	000000	000000
8971488921	8-9714	8892	CLIP; FUEL HOSE	000148	000126
8971491250	8-9714	9125	CASE ASM; TRANSFER	000000	000000
8971491251	8-9714	9125	CASE ASM; TRANSFER	000000	000001
8971491820	8-9714	9182	PUMP ASM; FUEL, ELECT	000008	000000
8971493460	8-9714	9346	PUMP ASM; WATER	000000	000000
8971493480	8-9714	9348	SHAFT; WATER PUMP	000000	000000
8971493721			ARM;WIPER	000000	000002
8971493731			ARM; WIPER	000000	000002
8971495730	8-9714	9573	MANIFOLD; EXHAUST	000000	000000
8971495750	8-9714	9575	TURBOCHARGER ASM;GARRETT	000000	000002
8971495751	8-9714	9575	TURBOCHARGER ASM;GARRETT	000000	000000
8971496000	8-9714	9600	STUD; TURBO FIX(M=10)	000000	000000
8971496030	8-9714	9603	SPRING; START	000000	000000
8971496031	8-9714	9603	SPRING; START	000000	000005
8971496050	8-9714	9605	COLLAR; ADAPTER	000000	000000
8971496190	8-9714	9619	PROTECTOR; HEAT	000000	000000
8971499730	8-9714	9973	COUPLING	000000	000000
8971499950	8-9714	9995	BOLT; FUEL PIPE	000000	000000
8971500921			GLASS; WINDSHIELD	000000	000000
8971529020			PLATE; SILL, RR	000000	000000
8971546023			CONSOLE; RR	000000	000001
8971567450			CONSOLE; CENTER	000000	000001
8971601330	8-9716	0133	LEVER	000000	000000

8971601340	8-9716	0134	BRACKET	000000	000000
8971601390	8-9716	0139	SHAFT	000000	000000
8971602730	8-9716	0273	CASE ASM;GEAR	000001	000000
8971603780	8-9716	0378	SHIM; NOZZLE SP	000000	000000
8971603800	8-9716	0380	SHIM; NOZZLE .725	000000	000000
8971603820	8-9716	0382	SHIM; NOZZLE .8MM	000000	000000
8971603830	8-9716	0383	SHIM NOZZLE	000000	000000
8971603850	8-9716	0385	SHIM; NOZZLE	000005	000000
8971603860	8-9716	0386	SHIM; NOZZLE 1.025	000000	000000
8971603880	8-9716	0388	SHIM; NOZZLE 1.125	000000	000000
8971604370	8-9716	0437	BELT; COOLING FAN L=826	000000	000000
8971604380	8-9716	0438	BELT; COOLING FAN L=851	000000	000000
8971604600	8-9716	0460	HANGER;FRT,ENG.LIFTING LH	000000	000000
8971605720	8-9716	0572	LEVER; ASM; MAIN SPRG	000000	000000
8971605721	8-9716	0572	LEVER; ASM; MAIN SPRG	000000	000000
8971605740	8-9716	0574	LEVER; TENSION, GOV.	000000	000000
8971605741	8-9716	0574	LEVER; TENSION, GOV.	000000	000000
8971605742	8-9716	0574	LEVER; TENSION, GOV.	000000	000000
8971605743	8-9716	0574	LEVER; TENSION, GOV.	000000	000032
8971605800			GEAR "B" ASM	000000	000016
8971605820			PUMP ASM.; INJ.	000000	000000
8971605831	8-9716	0583	PUMP ASM.; INJ.	000000	000000
8971605890	8-9716	0589	COVER;GOV HSG	000000	000001
8971606220	8-9716	0622	CONTROLLER	000000	000004
8971606290	8-9716	0629	PLATE; RR CYL. BLOCK	000000	000000
8971606291	8-9716	0629	PLATE; RR CYL. BLOCK	000000	000000
8971606540	8-9716	0654	THERMOSTAT	000000	000093
8971606890	8-9716	0689	FLYWHEEL ASM; OVER BAL	000000	000000
8971607060	8-9716	0706	PIPE ASM; OIL, GEAR CASE	000000	000000
8971608540	8-9716	0854	GOVERNOR ASM.; FIG. 53	000000	000000
8971608541	8-9716	0854	GOVERNOR ASM.; FIG. 53	000000	000000
8971608631			ABSORBER ASM	000000	000002
8971609010			PLUNGER ASM	000000	000000
8971609040	8-9716	0904	R I N G	000000	000002
8971611310	8-9716	1131	GASKET; HEAD COVER	000000	000000
8971611340	8-9716	1134	HOSE; RUBBER PCV	000005	000000
8971612070	8-9716	1207	SWITCH;OIL PRESSURE	000002	000003
8971612080	8-9716	1208	HARNES; ENGINE	000000	000000
8971612090	8-9716	1209	PUMP ASM.; INJ.	000000	000000
8971612100	8-9716	1210	PUMP ASM.; INJ.	000000	000000
8971612101	8-9716	1210	PUMP ASM.; INJ.	000000	000001
8971612500	8-9716	1250	PIPE ASM; F/PUMP TO I/P	000000	000000
8971612510	8-9716	1251	PIPE ASM; FLTR TO F/PUMP	000003	000000
8971612520	8-9716	1252	PIPE ASM; FUEL, LEAK OFF	000000	000000
8971612560	8-9716	1256	CLUTCH ASM	000000	000000
8971612570	8-9716	1257	COVER ASM; CLUTCH	000000	000000
8971612610	8-9716	1261	BRACKET ASM; FUEL TANK	000000	000000

8971614260	8-9716	1426	SWITCH; OIL PRESSURE	000000	000000
8971614650	8-9716	1465	GLOW PLUG; SHEATED TYPE	000000	000000
8971615990	8-9716	1599	FAN;COOLING	000000	000000
8971615991	8-9716	1599	FAN;COOLING	000000	000097
8971616000	8-9716	1600	FAN ASM.; D=550,8	000000	000000
8971616001	8-9716	1600	FAN ASM.; D=550,8	000000	000004
8971616070	8-9716	1607	NUT; TURBOCHARGER	000647	005979
8971617450	8-9716	1745	COVER ASM.; GOV LEVER	000002	000000
8971617451	8-9716	1745	COVER ASM.; GOV LEVER	000000	000000
8971617470	8-9716	1747	COVER; GOV LEVER	000000	000000
8971617640	8-9716	1764	COVER; GOVERNOR LEVER	000000	000000
8971617641	8-9716	1764	COVER; GOVERNOR LEVER	000001	000000
8971619690	8-9716	1969	PLATE; ADJUSTING, ALTN	000087	000052
8971619771	8-9716	1977	PUMP ASM.; INJ.	000000	000001
8971619780	8-9716	1978	PUMP ASM.; INJ.	000000	000000
8971620190	8-9716	2019	PUMP ASM.; INJ.	000000	000000
8971620280	8-9716	2028	ANGLEICH KIT	000000	000000
8971620540	8-9716	2054	BLOCK ASM; CYL.	000000	000000
8971620541	8-9716	2054	BLOCK ASM; CYL.	000000	000000
8971620810	8-9716	2081	BELT; COOLING FAN L=901	000000	000000
8971620820	8-9716	2082	HEAD ASM.; CYL.	000000	000000
8971621760	8-9716	2176	GOVERNOR ASM.; FIG. 53	000000	000002
8971625190	8-9716	2519	BRACKET; GEN.	000000	000002
8971625300	8-9716	2530	PAN ASM; OIL	000000	000000
8971626992			CLEANER ASM; AI	000000	000001
8971627040			CLUTCH SUB ASM; STARTER	000000	000000
8971627050	8-9716	2705	O-RING; HOUSING	000000	000000
8971627130			COVER; CM/SHF, RR	000000	002982
8971629660	8-9716	2966	DISC; CLUTCH	000000	000000
8971629661	8-9716	2966	DISC; CLUTCH	000000	000000
8971631360	8-9716	3136	FLYWEIGHT ASM.	000000	000000
8971631720	8-9716	3172	ROLLER KIT	000000	000000
8971632260	8-9716	3226	PIPE; OUTLET, WATER	000000	000000
8971632261	8-9716	3226	PIPE; OUTLET, WATER	000000	000000
8971632262	8-9716	3226	PIPE; OUTLET, WATER	000000	000010
8971632590	8-9716	3259	PUMP ASM; WATER	000000	000000
8971633970	8-9716	3397	HEAD ASM.; CYL.	000000	000000
8971633971	8-9716	3397	HEAD ASM.; CYL.	000000	000000
8971633973	8-9716	3397	HEAD ASM.; CYL.	000000	000001
8971633990	8-9716	3399	HEAD ASM.; CYL.	000000	000000
8971633991	8-9716	3399	HEAD ASM.; CYL.	000000	000000
8971633992	8-9716	3399	HEAD ASM.; CYL.	000000	000000
8971633993	8-9716	3399	HEAD ASM.; CYL.	000000	000002
8971634010	8-9716	3401	HEAD ASM; CYL.	000000	000000
8971634011	8-9716	3401	HEAD ASM; CYL.	000000	000000
8971634012	8-9716	3401	HEAD ASM; CYL.	000000	000000
8971634013	8-9716	3401	HEAD ASM; CYL.	000000	000000

8971634014	8-9716	3401	HEAD ASM; CYL.	000000	000004
8971634033	8-9716	3403	HEAD ASM; CYL.	000000	000003
8971634050	8-9716	3405	HEAD ASM; CYL.	000000	000000
8971634051	8-9716	3405	HEAD ASM; CYL.	000000	000000
8971634052	8-9716	3405	HEAD ASM; CYL.	000000	000000
8971634053	8-9716	3405	HEAD ASM; CYL.	000000	000000
8971634110	8-9716	3411	BRACKET; ROCKER	000000	000000
8971634112	8-9716	3411	BRACKET; ROCKER	000000	000000
8971634113	8-9716	3411	BRACKET; ROCKER	000000	000010
8971634114	8-9716	3411	BRACKET; ROCKER	000000	000000
8971634115	8-9716	3411	BRACKET; ROCKER	000000	000000
8971634116	8-9716	3411	BRACKET; ROCKER	000000	000000
8971634160	8-9716	3416	BRACKET; ROCKER	000000	000000
8971634162	8-9716	3416	BRACKET; ROCKER	000000	000000
8971634163	8-9716	3416	BRACKET; ROCKER	000000	000003
8971634164	8-9716	3416	BRACKET; ROCKER	000000	000000
8971634165	8-9716	3416	BRACKET; ROCKER	000000	000000
8971634190	8-9716	3419	BRACKET; ROCKER	000000	000000
8971634191	8-9716	3419	BRACKET; ROCKER	000000	000000
8971634193	8-9716	3419	BRACKET; ROCKER	000000	000000
8971634195	8-9716	3419	BRACKET; ROCKER	000000	000001
8971637560	8-9716	3756	CLUTCH ASM.; O.R.	000000	000000
8971637630	8-9716	3763	HOLDER ASM.; BRUSH	000000	000000
8971638500	8-9716	3850	PUMP ASM.; INJ.	000000	000002
8971641830			BRAKE LINING	000000	000010
8971642020	8-9716	4202	BLOCK ASM; CYL.	000000	000000
8971643340	8-9716	4334	ANGLEICH KIT	000000	000000
8971643460	8-9716	4346	PLATE ASM; ANTI LASH,TRAN	000000	000108
8971643480	8-9716	4348	PLATE;ANTI LASH, COUNTER	000000	000012
8971645300	8-9716	4530	FLYWHEEL ASM.	000010	000000
8971645310	8-9716	4531	FLYWHEEL ASM; OVER BAL	000000	000000
8971645320	8-9716	4532	FLYWHEEL	000000	000000
8971645510	8-9716	4551	COVER; UNDER TRA	000001	000008
8971645570	8-9716	4557	AIR CLEANER ASM	000000	000000
8971647120	8-9716	4712	SILENCER ASM; EXH.	000000	000000
8971647130	8-9716	4713	AIR CLEANER ASM	000000	000000
8971647131	8-9716	4713	AIR CLEANER ASM	000000	000000
8971647730	8-9716	4773	GEAR; IDLER	000000	000000
8971648000	8-9716	4800	BELT; COOLING FAN L=861	000000	000000
8971648020	8-9716	4802	BELT;FAN	000000	000000
8971648030	8-9716	4803	BELT; COOLING FAN L-876	000000	000000
8971648050	8-9716	4805	BELT; FAN	000000	000000
8971648060	8-9716	4806	BELT; COOLING FAN L=1076	000000	000000
8971648080	8-9716	4808	CASE ASM; THROTTLE VALVE	000000	000000
8971648360	8-9716	4836	PIPE ASM; OIL, TURBO	000000	000000
8971648420	8-9716	4842	FLYWHEEL ASM	000000	000000
8971649160	8-9716	4916	TIMER ASM; AUTO	000000	000000

8971652820	8-9716	5282	PIPE ASM; OIL	000000	000000
8971652830	8-9716	5283	PIPE ASM; OIL	000000	000000
8971652840	8-9716	5284	BRACKET; FILTER,OIL	000000	000001
8971653170	8-9716	5317	GEAR; COUNTER,TRANSFER	000000	000000
8971654560	8-9716	5456	SHIM; NOZZLE SP	000000	000000
8971654570	8-9716	5457	SHIM; NOZZLE SP	000000	000000
8971654830			CRANKSHAFT	000000	000000
8971658920			REGULATOR; WIND	000000	000001
8971658932			REGULATOR; WIND	000000	000000
8971658933			REGULATOR; WIND	000000	000000
8971659390	8-9716	5939	BREATHER; RR CO	000000	000002
8971659460	8-9716	5946	SWITCH; NEUTRAL	000000	000000
8971659461	8-9716	5946	SWITCH; NEUTRAL	000000	000000
8971659490	8-9716	5949	SWITCH; REV LAMP	000000	000005
8971659500	8-9716	5950	SWITCH; NEUTRAL	000000	000000
8971659510	8-9716	5951	SWITCH	000000	000000
8971660290			SILENCER ASM.; EXH.	000000	000000
8971660291	8-9716	6029	SILENCER ASM.; EXH.	000000	000000
8971660294	8-9716	6029	SILENCER ASM.; EXH.	000000	000001
8971660300	8-9716	6030	GEAR; W/BUSH, IDLE (Z=31)	000000	000004
8971660720	8-9716	6072	PUMP ASM; INJ. FIG. 52	000000	000000
8971660730	8-9716	6073	PUMP ASM; INJ. FIG. 52	000000	000000
8971660740	8-9716	6074	PUMP ASM; INJ. FIG. 52	000000	000000
8971660761	8-9716	6076	PUMP ASM; INJ. FIG. 52	000000	000000
8971660762	8-9716	6076	PUMP ASM; INJ. FIG. 52	000000	000001
8971660771	8-9716	6077	PUMP ASM; INJ. FIG. 52	000000	000000
8971660782	8-9716	6078	PUMP ASM; INJ. FIG. 52	000000	000003
8971661560	8-9716	6156	SHAFT; OUTPUT,RR WHEEL DR	000000	000000
8971661843	8-9716	6184	FILTER ASM; FUEL	000000	000000
8971662531			RUBBER;FRT MUD	000000	000002
8971664100	8-9716	6410	INDICATOR ASM	000001	000000
8971664750	8-9716	6475	BRACKET; FUEL PUMP	000017	000000
8971664820	8-9716	6482	HOSE; F/PUMP TO F/PIPE	000000	000000
8971664870	8-9716	6487	PUMP ASM.; FEED, FIG. 54	000000	000000
8971664910			GASKET	000000	000000
8971665670	8-9716	6567	FLYWHEEL ASM	000000	000000
8971665840			GASKET; TIMING GEAR	000000	000985
8971666631			LAMP ASM;HEAD	000001	000001
8971669600	8-9716	6960	LEVEL GAUGE; OIL L=121	000000	000001
8971671650	8-9716	7165	HOSE; FLEX, A/C	000000	000001
8971672620	8-9716	7262	GASKET; EXH	000250	000000
8971672640			PACKING OIL PAN RR PLATE	000000	000059
8971672650			SEAT ASM; VALVE SPRING	000000	000000
8971672651	8-9716	7265	SEAT ASM; VALVE SPRING	000000	000000
8971672652	8-9716	7265	SEAT ASM; VALVE SPRING	000000	000698
8971674770			GASKET; THERMOSTAT HSG	000000	000000
8971674920			PIPE; INJ NOZZLE LE	000000	000006

8971674921			PIPE; INJ NOZZLE LE	000000	000000
8971674950			THERMOSTAT	000000	000000
8971674980			THERMOSTAT	000000	000000
8971675600	8-9716	7560	PUMP ASM; FEED	000000	000000
8971675620	8-9716	7562	TIMER ASM; AUTO	000000	000000
8971676190	8-9716	7619	SENSOR ASM: TACHO	000000	000000
8971676490	8-9716	7649	HOSE; RUBBER,O/C TO CONN	000000	000000
8971676690	8-9716	7669	BRACKET; AC-GEN FIX	000000	000000
8971676700	8-9716	7670	VALVE ASM.; DELIVERY	000000	000000
8971678110	8-9716	7811	FILTER ASM; FUEL	000000	000000
8971678111	8-9716	7811	FILTER ASM; FUEL	000000	000011
8971678540	8-9716	7854	CAP;RAD 2/3KC1	000000	000000
8971678610	8-9716	7861	CAP; RAD	000000	000000
8971679090	8-9716	7909	PLATE ADJUSTIING	000000	000000
8971679091	8-9716	7909	PLATE ADJUSTIING	000000	000025
8971679720			OIL FILTER DIESEL ENGINE	000000	000019
8971679731			FILTER; OIL, SUB	000000	000000
8971679740			SPRING; MAIN	000000	000003
8971680730	8-9716	8073	PULLEY; CR/SHF, W/DAMP	000000	000000
8971680731	8-9716	8073	PULLEY; CR/SHF, W/DAMP	000000	000000
8971680732	8-9716	8073	PULLEY; CR/SHF, W/DAMP	000000	000000
8971680740	8-9716	8074	PUMP ASM; INJ.	000000	000000
8971682080	8-9716	8208	RUBBER; MOUNTING	000000	000000
8971682090	8-9716	8209	RUBBER; MOUNTING	000000	000000
8971682100	8-9716	8210	LEVER	000000	000000
8971682110	8-9716	8211	LEVER	000000	000000
8971682460	8-9716	8246	GENERATOR	000000	000000
8971682461	8-9716	8246	GENERATOR	000000	000013
8971682500	8-9716	8250	ADAPTER; EXH, TURBO	000000	000009
8971682510	8-9716	8251	BRACKET ; ADAPTER	000000	000000
8971682511	8-9716	8251	BRACKET ; ADAPTER	000000	000002
8971683060	8-9716	8306	ELEMENT ASM; AIR CLEANER	000000	000036
8971684581			BOLT; YOKE,TRANS	000000	000000
8971685600	8-9716	8560	PUMP ASM; INJ. FIG. 52	000000	000001
8971688790	8-9716	8879	CONNECTOR; GLOW PLUG	000000	000000
8971690150	8-9716	9015	PIPE; WATER OUTLET	000000	000000
8971690151	8-9716	9015	PIPE; WATER OUTLET	000040	000000
8971691330	8-9716	9133	BLOCK ASM; CYL.	000000	000000
8971691440	8-9716	9144	BLOCK ASM; CYL.	000000	000000
8971691441	8-9716	9144	BLOCK ASM; CYL.	000000	000000
8971691530	8-9716	9153	BLOCK ASM;CYL	000000	000000
8971691610	8-9716	9161	BLOCK ASM;CYL	000000	000000
8971691611	8-9716	9161	BLOCK ASM;CYL	000000	000000
8971691960	8-9716	9196	PLATE ASM; SUB, FRONT	000000	000001
8971691961	8-9716	9196	PLATE ASM; SUB, FRONT	000000	000000
8971691963	8-9716	9196	PLATE ASM; SUB, FRONT	000000	000000
8971691970	8-9716	9197	PLATE; FRT, C/BL	000000	000000

8971695080	8-9716	9508	GEAR;REV IDLER	000000	000000
8971697550	8-9716	9755	PUMP ASM; INJ. FIG. 52	000000	000000
8971698470	8-9716	9847	CLUTCH ASM.; O.R.	000000	000000
8971698890	8-9716	9889	GEAR; PTO	000001	000002
8971699090	8-9716	9909	SHIM; NOZZLE .600	000041	000000
8971702380	8-9717	0238	COLLAR; COVER	000012	000000
8971703110	8-9717	0311	COVER	000002	000003
8971703270	8-9717	0327	SENSOR; THERMO,WATER	000000	000000
8971704000	8-9717	0400	STARTER ASM	000000	000000
8971704010	8-9717	0401	PISTON; OVSI 0.25	000000	000000
8971705211	8-9717	0521	GOVERNOR ASM; FIG. 53	000000	000000
8971705212	8-9717	0521	GOVERNOR ASM; FIG. 53	000000	000000
8971705400	8-9717	0540	PUMP ASM.; FEED	000000	000000
8971705852			METER COMPL; CL	000000	000000
8971706610	8-9717	0661	PUMP; PRIMING	000000	000000
8971706700	8-9717	0670	PLUG; PISTON SPRG; FEED P	000000	000000
8971706701	8-9717	0670	PLUG; PISTON SPRG, FEED P	000000	000000
8971706720	8-9717	0672	FILTER; FEED PUMP	000000	000000
8971707121	8-9717	0712	PAN ASM; OIL	000000	000001
8971707470	8-9717	0747	PIPE ASM; INJ. NO 1	000000	000000
8971707490	8-9717	0749	PIPE ASM; INJ. NO 3	000000	000000
8971708470			LAMP ASM; FRT	000000	000000
8971708480			LAMP ASM. FRT CO	000000	000001
8971708680	8-9717	0868	PLUNGER ASM	000000	000020
8971708690	8-9717	0869	RING;DELIVERY VALVE	000000	000000
8971710371	8-9717	1037	PUMP ASM; INJ. FIG 51	000000	000000
8971711260	8-9717	1126	PAN ASM;OIL	000000	000006
8971712070	8-9717	1207	FLYWHEEL ASM	000000	000000
8971712071	8-9717	1207	FLYWHEEL ASM	000000	000000
8971712073	8-9717	1207	FLYWHEEL ASM	000000	000002
8971712420	8-9717	1242	SPRING; MAIN	000000	000000
8971712430	8-9717	1243	SPRING; IDLE	000000	000000
8971712431	8-9717	1243	SPRING; IDLE	000000	000010
8971712439	8-9717	1243	SPRING; IDLE	000000	000000
8971712450	8-9717	1245	ANGLEICH KIT	000000	000000
8971712610	8-9717	1261	HOSE;PCV	000000	000079
8971712860	8-9717	1286	GOVERNOR ASM; FIG. 53	000000	000000
8971713310	8-9717	1331	GASKET; INJ. NOZZLE	000393	000280
8971713320	8-9717	1332	GASKET;INJ NOZ	000185	000000
8971713330	8-9717	1333	GASKET; INJ NOZZLE	000000	000000
8971713660	8-9717	1366	COVER; END,RR COVER,GEN	000000	000001
8971713680	8-9717	1368	RECTIFIER; GEN	000000	000000
8971713690	8-9717	1369	BEARING; ROTOR GEN	000000	000000
8971713700	8-9717	1370	BEARING; ROTOR,GEN	000000	000002
8971714010	8-9717	1401	MANIFOLD;EXHAUST UPWARD	000001	000000
8971714551	8-9717	1455	DRIVE ASM; POWER	000000	000000
8971715030	8-9717	1503	BOLT; FULCRUM	000000	000004

8971718380	8-9717	1838	HOUSING; FLYWHEEL	000000	000000
8971718381	8-9717	1838	HOUSING; FLYWHEEL	000000	000001
8971720400	8-9717	2040	PULLEY; CRANKSHAFT	000000	000011
8971720460	8-9717	2046	CASE; PINION, STARTER	000000	000000
8971720480	8-9717	2048	LEVER; SHIFT, STARTER	000000	000000
8971720500	8-9717	2050	SWITCH; ENG. STARTER	000001	000000
8971720550	8-9717	2055	HOLDER; BRUSH, STARTER	000000	000000
8971722112			STARTER ASM	000000	000000
8971722520	8-9717	2252	PUMP ASM; INJ. FIG. 52	000000	000000
8971722530	8-9717	2253	PUMP ASM; INJ. FIG. 52	000000	000002
8971722550	8-9717	2255	GOVERNOR ASM; FIG. 53	000000	000000
8971725490	8-9717	2549	ELEMENT KIT; FUEL FILTER	000000	000000
8971725491	8-9717	2549	ELEMENT KIT; FUEL FILTER	000000	000000
8971726770	8-9717	2677	BREATHER;AIR,TRANSFER CA	000000	000000
8971726771	8-9717	2677	BREATHER;AIR,TRANSFER CA	000000	000000
8971726800	8-9717	2680	PUMP ASM; INJ. FIG. 52	000000	000000
8971727201	8-9717	2720	BOLT; ADJ PLATE	000016	000385
8971727210	8-9717	2721	SWITCH;OVER HEAT WARNING	000000	000004
8971728270	8-9717	2827	PIPE;OIL,PARTIAL FILTER	000005	000001
8971730260			FILTER; AIR CLE	000000	000008
8971730270			FILTER; AIR CLE	000000	000042
8971730351	8-9717	3035	RELAY; ENG CONT	000000	000002
8971730590			CRANK SHAFT PULLEY	000000	000001
8971731470	8-9717	3147	RING; SNAP BLOWER	000000	000000
8971732100	8-9717	3210	AIR FILTER	000001	000000
8971732190	8-9717	3219	CLIP; EVAP HOSE	000013	000000
8971732200	8-9717	3220	CLIP;HOSE,FUEL RET PIPE	000014	000032
8971732210	8-9717	3221	CLIP; PIPE	000000	000000
8971732220	8-9717	3222	CLIP;VAC HOSE, M/VAC	000000	000000
8971732230	8-9717	3223	CLIP; RUBBER HOSE	000003	000000
8971733780			PAN ASM; OIL	000000	000000
8971735640			FLYWHEEL ASM	000000	000000
8971735690			GASKET;OIL PAN TO C/BL	000000	000016
8971738520	8-9717	3852	PUMP ASM; INJ. FIG. 52	000000	000001
8971738530	8-9717	3853	GOVERNOR ASM; FIG. 53	000000	000000
8971738660	8-9717	3866	OIL PAN ASM	000000	000000
8971738661	8-9717	3866	OIL PAN ASM	000000	000000
8971738820	8-9717	3882	PUMP ASM; INJ. FIG. 52	000000	000000
8971739470	8-9717	3947	RELAY; GLOW PLUG	000000	000003
8971739510	8-9717	3951	RELAY; STARTER	000140	000852
8971740430	8-9717	4043	STARTER, NEW	000000	000000
8971743960	8-9717	4396	PUMP ASM; INJ.	000000	000000
8971744330	8-9717	4433	FLYWHEEL ASM	000000	000000
8971744870	8-9717	4487	PIPE; AIR	000000	000000
8971745580	8-9717	4558	EARING;IDLER SHAFT	000000	000000
8971747941			LAMP ASM; FRT C	000000	000003
8971747951			LAMP ASM; FRT C	000000	000004

8971751280			METAL SET; CONN	000000	000000
8971752640	8-9717	5264	BEARING; BALL, FLYWHEEL	000000	000000
897175285T			DECAL; 'ISUZU'	000000	000000
8971752850	8-9717	5285	DECAL; 'ISUZU'	000000	000136
8971757030	8-9717	5703	VALVE ASM; CHECK	000000	000007
8971757501			LOCK;ENG HOOD	000000	000001
8971758620	8-9717	5862	ELEMENT ASM; AIR CLEANER	000000	000010
8971758650	8-9717	5865	SHIM; NOZZLE .875	000000	000000
8971758660	8-9717	5866	SHIM; NOZZLE	000000	000000
8971759020	8-9717	5902	RING GEAR	000000	000010
8971759863	8-9717	5986	RETAINER; CR/SHF	000002	000000
8971760670	8-9717	6067	BELT; COOLING FAN L=836	000000	000000
8971760991	8-9717	6099	SILENCER ASM; EXH.	000000	000000
8971761920	8-9717	6192	BANK; SILENCER FIX.	000000	000000
8971762010	8-9717	6201	PUMP ASM; INJ.	000000	000000
8971762660	8-9717	6266	PIPE ASM.; OIL, TURBO IN	000000	000000
8971762661	8-9717	6266	PIPE ASM.; OIL, TURBO IN	000000	000000
8971764140	8-9717	6414	PAN ASM.; OIL	000000	000000
8971764900	8-9717	6490	PLUG; SPR. PISTON	000000	000000
8971765680	8-9717	6568	PISTON	000000	000000
8971765690	8-9717	6569	PISTON	000000	000000
8971765720	8-9717	6572	PISTON	000000	000000
8971765740	8-9717	6574	PISTON	000000	000000
8971765750	8-9717	6575	PISTON	000000	000000
8971765780	8-9717	6578	PISTON	000000	000000
8971765790	8-9717	6579	PISTON	000000	000000
8971765800	8-9717	6580	PISTON	000000	000000
8971765810	8-9717	6581	PISTON	000000	000000
8971765820	8-9717	6582	PISTON	000000	000001
8971765830	8-9717	6583	PISTON	000000	000000
8971765840	8-9717	6584	PISTON	000000	000000
8971765850	8-9717	6585	PISTON	000000	000000
8971765860	8-9717	6586	PISTON	000000	000003
8971765870	8-9717	6587	PISTON	000000	000000
8971765880	8-9717	6588	PISTON	000000	000000
8971765890	8-9717	6589	PISTON	000000	000000
8971765900	8-9717	6590	PISTON	000000	000000
8971765910	8-9717	6591	PISTON	000000	000000
8971765920	8-9717	6592	PISTON	000000	000000
8971765930	8-9717	6593	PISTON	000000	000000
8971765950	8-9717	6595	PISTON	000000	000001
8971765960	8-9717	6596	PISTON	000000	000000
8971765970	8-9717	6597	PISTON	000000	000145
8971765980	8-9717	6598	PISTON	000000	000004
8971765990	8-9717	6599	PISTON	000004	000000
8971766000	8-9717	6600	PISTON	000000	000000
8971766010	8-9717	6601	PISTON	000000	000000

8971766020	8-9717	6602	PISTON	000000	000006
8971766030	8-9717	6603	PISTON	000000	000003
8971766040	8-9717	6604	PISTON	000000	000001
8971766050	8-9717	6605	PISTON	000000	000050
8971766060	8-9717	6606	PISTON	000000	000000
8971766070	8-9717	6607	PISTON	000000	000000
8971766100	8-9717	6610	PISTON	000000	000000
8971766110	8-9717	6611	PISTON	000000	000000
8971766160	8-9717	6616	PISTON	000001	000000
8971766170	8-9717	6617	PISTON	000000	000004
8971766180	8-9717	6618	PISTON; GRADE AX	000000	000000
8971766190	8-9717	6619	PISTON; GRADE CX	000000	000000
8971766280	8-9717	6628	PISTON	000004	000001
8971766290	8-9717	6629	PISTON	000004	000000
8971766300	8-9717	6630	PISTON	000000	000000
8971766310	8-9717	6631	PISTON	000000	000000
8971766320	8-9717	6632	PISTON	000001	000000
8971766330	8-9717	6633	PISTON	000000	000002
8971766340	8-9717	6634	PISTON	000000	000006
8971766350	8-9717	6635	PISTON	000002	000000
8971766360	8-9717	6636	PISTON	000000	000000
8971766370	8-9717	6637	PISTON	000000	000000
8971766380	8-9717	6638	PISTON (GRADE=AX)	000000	000007
8971766390	8-9717	6639	PISTON (GRADE CX)	000000	000000
8971766400	8-9717	6640	PISTON	000000	000003
8971766410	8-9717	6641	PISTON	000000	000001
8971766420	8-9717	6642	PISTON	000001	000012
8971766430	8-9717	6643	PISTON	000000	000029
8971766480	8-9717	6648	PISTON	000000	000000
8971766500	8-9717	6650	PISTON	000000	000002
8971766510	8-9717	6651	PISTON	000001	000000
8971766530	8-9717	6653	PISTON	000000	000000
8971766550	8-9717	6655	PISTON	000000	000000
8971766820	8-9717	6682	LINER KIT	000000	000000
8971766830	8-9717	6683	LINER; CYL BLK	000000	000000
8971766840	8-9717	6684	LINER; CYL BLK	000000	000000
8971766850	8-9717	6685	LINER; CYL BLK	000000	000000
8971766860	8-9717	6686	LINER; CYL BLK	000000	000000
8971766870	8-9717	6687	LINER; CYL BLK	000000	000000
8971766880	8-9717	6688	LINER; CYL BLK	000000	000000
8971766890	8-9717	6689	LINER; CYL BLK	000000	000000
8971766900	8-9717	6690	LINER; CYL BLK	000000	000000
8971766910	8-9717	6691	LINER KIT	000000	000000
8971766930	8-9717	6693	LINER KIT	000000	000000
8971766990	8-9717	6699	LINER KIT	000000	000000
8971767000	8-9717	6700	LINER KIT	000000	000000
8971767010	8-9717	6701	LINER KIT	000000	000002

8971767020	8-9717	6702	LINER KIT	000000	000000
8971767030	8-9717	6703	LINER KIT	000000	000000
8971767040	8-9717	6704	LINER KIT	000000	000000
8971767050	8-9717	6705	LINER KIT	000000	000000
8971767060	8-9717	6706	LINER KIT	000000	000000
8971767080	8-9717	6708	LINER KIT	000000	000000
8971767120	8-9717	6712	LINER KIT	000000	000000
8971767130	8-9717	6713	LINER KIT	000000	000000
8971767160	8-9717	6716	LINER KIT	000000	000000
8971767170	8-9717	6717	LINER KIT	000000	000000
8971767230	8-9717	6723	LINER KIT	000000	000000
8971767231	8-9717	6723	LINER; C/BL	000000	000030
8971767240	8-9717	6724	LINER KIT	000000	000000
8971767241	8-9717	6724	LINER; C/BL	000000	000000
8971767250	8-9717	6725	LINER KIT	000000	000000
8971767251	8-9717	6725	LINER KIT	000000	000001
8971767260	8-9717	6726	LINER KIT	000104	000000
8971767270	8-9717	6727	LINER KIT	000000	000000
8971767300	8-9717	6730	LINER KIT	000000	000000
8971767390	8-9717	6739	PISTON	000000	000000
8971767400	8-9717	6740	PISTON	000000	000001
8971767410	8-9717	6741	PISTON	000000	000000
8971767420	8-9717	6742	PISTON	000000	000001
8971767490	8-9717	6749	PISTON	000000	000000
8971767510	8-9717	6751	PISTON	000000	000000
8971767520	8-9717	6752	PISTON	000000	000000
8971767590	8-9717	6759	PISTON	000000	000000
8971767630	8-9717	6763	PISTON	000000	000002
8971767640	8-9717	6764	PISTON	000000	000000
8971767650	8-9717	6765	PISTON	000000	000000
8971767660	8-9717	6766	PISTON	000000	000000
8971767720	8-9717	6772	PISTON	000000	000000
8971767730	8-9717	6773	PISTON; STD (GRADE A)	000000	000010
8971767740	8-9717	6774	PISTON; STD (GRADE B)	000000	000000
8971767750	8-9717	6775	PISTON; STD (GRADE C)	000000	000003
8971767830	8-9717	6783	PISTON	000000	000000
8971767880	8-9717	6788	PISTON	000000	000004
8971767890	8-9717	6789	PISTON	000004	000000
8971767900	8-9717	6790	PISTON	000001	000006
8971767910	8-9717	6791	PISTON	000002	000000
8971767940	8-9717	6794	PISTON	000000	000000
8971767950	8-9717	6795	PISTON	000000	000000
8971767980	8-9717	6798	PISTON	000001	000000
8971767990	8-9717	6799	PISTON	000000	000012
8971768000	8-9717	6800	PISTON	000000	000000
8971768010	8-9717	6801	PISTON	000000	000000
8971768020	8-9717	6802	PISTON	000000	000000

8971768030	8-9717	6803	PISTON	000002	000000
8971768040	8-9717	6804	PISTON	000000	000000
8971768050	8-9717	6805	PISTON	000002	000000
8971768060	8-9717	6806	PISTON	000000	000000
8971768070	8-9717	6807	PISTON	000003	000000
8971768080	8-9717	6808	PISTON	000000	000001
8971768090	8-9717	6809	PISTON	000000	000000
8971768100	8-9717	6810	PISTON	000000	000000
8971768110	8-9717	6811	PISTON	000000	000000
8971768120	8-9717	6812	PISTON	000000	000000
8971768130	8-9717	6813	PISTON	000000	000000
8971768140	8-9717	6814	PISTON	000000	000000
8971768150	8-9717	6815	PISTON	000000	000000
8971768170	8-9717	6817	PISTON	000000	000000
8971768180	8-9717	6818	PISTON	000000	000000
8971768190	8-9717	6819	PISTON	000000	000000
8971768200	8-9717	6820	PISTON	000000	000000
8971768210	8-9717	6821	PISTON	000000	000000
8971768230	8-9717	6823	PISTON	000000	000000
8971768300	8-9717	6830	LINER KIT	000000	000000
8971768320	8-9717	6832	PISTON	000000	000000
8971768330	8-9717	6833	PISTON	000000	000000
8971768340	8-9717	6834	PISTON	000000	000000
8971768350	8-9717	6835	PISTON	000000	000000
8971768360	8-9717	6836	PISTON	000000	000000
8971768370	8-9717	6837	PISTON	000000	000001
8971768380	8-9717	6838	PISTON	000000	000000
8971768390	8-9717	6839	PISTON	000000	000000
8971768400	8-9717	6840	PISTON	000000	000000
8971768420	8-9717	6842	PISTON	000000	000000
8971768440	8-9717	6844	PISTON	000000	000010
8971768450	8-9717	6845	PISTON	000000	000001
8971768500	8-9717	6850	PISTON	000000	000001
8971768510	8-9717	6851	PISTON	000000	000005
8971768520	8-9717	6852	PISTON	000004	000000
8971768530	8-9717	6853	PISTON	000001	000000
8971768540	8-9717	6854	PISTON	000000	000000
8971768570	8-9717	6857	PISTON	000000	000003
8971768580	8-9717	6858	PISTON	000000	000000
8971768630	8-9717	6863	PISTON	000000	000000
8971768640	8-9717	6864	PISTON	000002	000000
8971768650	8-9717	6865	PISTON	000006	000000
8971768660	8-9717	6866	PISTON	000000	000001
8971768670	8-9717	6867	PISTON	000003	000000
8971768680	8-9717	6868	PISTON	000001	000004
8971768690	8-9717	6869	PISTON	000000	000000
8971768700	8-9717	6870	PISTON	000000	000000

8971768710	8-9717	6871	PISTON	000000	000000
8971768720	8-9717	6872	PISTON	000003	000000
8971768730	8-9717	6873	PISTON	000000	000000
8971768740	8-9717	6874	PISTON	000000	000000
8971768750	8-9717	6875	PISTON	000000	000001
8971768760	8-9717	6876	PISTON	000000	000003
8971768770	8-9717	6877	PISTON	000000	000000
8971768800	8-9717	6880	PISTON	000000	000004
8971768810	8-9717	6881	PISTON	000000	000000
8971768830	8-9717	6883	PISTON	000000	000000
8971768840	8-9717	6884	PISTON	000001	000014
8971768860	8-9717	6886	PISTON	000000	000000
8971768870	8-9717	6887	PISTON	000000	000037
8971768880	8-9717	6888	PISTON	000000	000027
8971768890	8-9717	6889	PISTON	000000	000005
8971768900	8-9717	6890	PISTON	000002	000000
8971768910	8-9717	6891	PISTON	000000	000000
8971768920	8-9717	6892	PISTON	000000	000008
8971768930	8-9717	6893	PISTON	000000	000000
8971768940	8-9717	6894	PISTON	000000	000000
8971768950	8-9717	6895	PISTON	000000	000003
8971768960	8-9717	6896	LINER KIT	000000	000000
8971768970	8-9717	6897	LINER KIT	000000	000000
8971768980	8-9717	6898	LINER KIT	000000	000000
8971768990	8-9717	6899	LINER KIT	000000	000000
8971769000	8-9717	6900	LINER KIT	000000	000000
8971769010	8-9717	6901	LINER KIT	000000	000000
8971769020	8-9717	6902	LINER KIT	000000	000000
8971769030	8-9717	6903	LINER KIT	000000	000000
8971769080	8-9717	6908	LINER KIT	000000	000000
8971769100	8-9717	6910	LINER KIT	000000	000000
8971769960	8-9717	6996	PUMP ASM; INJ.	000000	000000
8971771330	8-9717	7133	SLEEVE; HUB,LOW	000000	000000
8971771340	8-9717	7134	SLEEVE; HUB, 4TH-3RD	000000	000001
8971771350			SLEEVE; HUB,REV	000000	000000
8971771660			PIPE; PIPE TO E	000000	000001
8971775160	8-9717	7516	BRACKET; SOLENOID	000000	000000
8971775161	8-9717	7516	BRACKET; SOLENOID	000001	000000
8971775800	8-9717	7580	CLIP; RUBBER HOSE	000043	000008
8971775810	8-9717	7581	CLIP; WATER HOSE	000000	000000
8971776890	8-9717	7689	HUB; CLU,LOW &	000000	000000
8971776900	8-9717	7690	HUB;CLU,4TH & 3RD	000000	000001
8971778220	8-9717	7822	PULLEY;GEN	000000	000000
8971778230	8-9717	7823	COVER ASM;FRT,GEN	000000	000000
8971778240	8-9717	7824	ROTOR;GEN	000000	000000
8971778260	8-9717	7826	COVER ASM;RR,GEN	000000	000000
8971778720	8-9717	7872	CAP; RAD 2/3 KCI	000000	000000

8971778800	8-9717	7880	CAP; RAD	000000	000000
8971779610	8-9717	7961	BELT; COOLING FAN	000000	000073
8971779830	8-9717	7983	GAUGE ASM; LEVEL, OIL	000003	000000
8971780130	8-9717	8013	BOLT; FLYWHEEL	000000	000103
8971781340	8-9717	8134	NUT SET;PULLEY GEN	000000	000005
8971782890	8-9717	8289	STARTER ASM; FIG 62	000000	000000
8971782891	8-9717	8289	STARTER ASM; FIG 62	000000	000001
8971783113	8-9717	8311	GLOW PLUG; QOS-3	000000	000003
8971783240	8-9717	8324	PUMP ASM; INJ. FIG 52	000000	000000
8971783320	8-9717	8332	PUMP ASM; INJ.	000000	000002
8971783580	8-9717	8358	SENSOR; DPD	000000	000000
8971785483			BUMPER ASM; FRT	000000	000003
8971785503			BUMPER ASM; FRT	000000	000003
8971785550			BRACKET; GEN.	000000	000001
8971787810	8-9717	8781	OIL PAN ASM	000000	000020
8971788180	8-9717	8818	FILTER;ASM FUEL	000000	000000
8971788181	8-9717	8818	FILTER;ASM FUEL	000000	000000
8971788182	8-9717	8818	FILTER;ASM FUEL	000000	000052
8971788540			HOSE; FUEL FILLER	000000	000071
8971791310	8-9717	9131	SCREW; STOP LAM	000000	000010
8971793320			CYLINDER; WHEEL	000000	000001
8971793330			CYLINDER; BRAKE	000000	000001
8971793340			CYLINDER; WHEEL	000000	000000
8971793350			CYLINDER; WHEEL	000000	000000
8971793360			CYLINDER; WHEEL	000000	000000
8971793370			CYLINDER; WHEEL	000000	000000
8971793580			CYLINDER; WHEEL	000000	000000
8971793600			CYLINDER; WHEEL	000000	000000
8971795360	8-9717	9536	CONNECTOR;GLOW PLU	000000	000000
8971795361	8-9717	9536	CONNECTOR;GLOW PLU	000000	000000
8971795370	8-9717	9537	CONNECTOR;GLOW PLUG	000000	000000
8971796670	8-9717	9667	BOLT	000000	000000
8971796671	8-9717	9667	BOLT	000000	000005
8971796680	8-9717	9668	BOLT	000000	000000
8971796681	8-9717	9668	BOLT	000000	000005
8971796690	8-9717	9669	BOLT	000000	000000
8971796700	8-9717	9670	CAP	000000	000001
8971796710	8-9717	9671	SCREW	000017	000000
8971797330	8-9717	9733	STRAINER ASM; OIL	000000	000015
8971797760	8-9717	9776	LEVER;SHIFT STARTER	000000	000000
8971798120	8-9717	9812	PUMP ASM; FEED, FIG. 54	000000	000000
8971798540	8-9717	9854	FILTER ASM; FUEL	000000	000000
8971798541	8-9717	9854	FILTER ASM; FUEL	000000	000036
8971798550	8-9717	9855	COVER;FILTER,FU	000000	000029
8971798630	8-9717	9863	SHIM; NOZZLE .850	000000	000000
8971801700	8-9718	0170	PIPE; OIL	000000	000000
8971802020	8-9718	0202	PUMP ASM; INJ.	000000	000003

8971802190	8-9718	0219	HOSE; RUBBER, BYPASS	000000	000000
8971802191	8-9718	0219	HOSE; RUBBER, BYPASS	000000	000006
8971802510	8-9718	0251	BEARING; UNIT	000000	000000
8971804630			MIRROR; UNDER	000000	000001
8971804651	8-9718	0465	BRACKET;ACL	000003	000000
8971804673	8-9718	0467	SEAL;AIR INLET	000005	000001
8971804682	8-9718	0468	PIPE;AIR INLET	000001	000000
8971804970	8-9718	0497	PIPE ASM; INJ. NO. 1	000001	000000
8971804980	8-9718	0498	PIPE ASM; INJ. NO. 2	000000	000003
8971804990	8-9718	0499	PIPE ASM; INJ. NO. 3	000000	000003
8971805000	8-9718	0500	PIPE ASM; INJ. NO. 4	000001	000000
8971805560	8-9718	0556	CABLE;STARTER EARTH	000000	000000
8971806941	8-9718	0694	PULLEY;CR SHF	000000	000000
8971806970			JOURNAL ASM.; PROP SHAFT	000000	000003
8971807070			PUMP ASM; INJ.	000000	000000
8971807500	8-9718	0750	GASKET; EXH PIPE TO MANIF	000000	000000
8971807501	8-9718	0750	GASKET; EXH PIPE TO MANIF	000000	000000
8971807502	8-9718	0750	GASKET; EXH PIPE TO MANIF	000000	000000
8971808771	8-9718	0877	FAN ASM; D=380 10 SUCT	000000	000000
8971808772	8-9718	0877	FAN ASM; D=380 10 SUCT	000001	000005
8971809130	8-9718	0913	BAND; EXHAUST SILENCER	000000	000007
8971809280	8-9718	0928	PUMP ASM; INJ.	000000	000000
8971809370	8-9718	0937	CLIP; RUBBER HOSE	000000	000000
8971809400	8-9718	0940	PIPE ASM;INJECTION	000004	000001
8971810670			HARNES; INDICATOR	000000	000000
8971813280	8-9718	1328	HOSE;WATER,RAD OUTLET	000000	000000
8971813580			PIPE; RECEIVER	000000	000001
8971815050	8-9718	1505	HOUSING; PUMP	000000	000003
8971815100	8-9718	1510	BRACKET	000000	000000
8971816160	8-9718	1616	PLATE; FAN T-3.2	000000	000000
8971816161	8-9718	1616	PLATE; FAN T-3.2	000000	000023
8971819820	8-9718	1982	SHIM; NOZZLE 1.100	000000	000000
8971819860	8-9718	1986	PAN ASM; OIL	000000	000000
8971819861	8-9718	1986	PAN ASM; OIL	000000	000000
8971819880	8-9718	1988	CLEANER ASM; NOZZLE	000000	000000
8971820610	8-9718	2061	PAN ASM; OIL	000000	000000
8971820611	8-9718	2061	PAN ASM; OIL	000000	000000
8971820612	8-9718	2061	PAN ASM; OIL	000000	000000
8971822120	8-9718	2212	SHAFT; TOP GEAR, TRANS	000000	000003
8971822220	8-9718	2222	PIPE; WATER OUTLET	000000	000000
8971822291			ARM & BLADE ASM	000000	000003
8971822301			ARM & BLADE ASM	000000	000003
8971822890	8-9718	2289	GENERATOR ASM	000000	000000
8971822892	8-9718	2289	GENERATOR ASM	000000	000008
8971823910			PLATE ASM; PRES	000000	000001
8971824060	8-9718	2406	ROD; SHIFT, HIGH-LOW, TRN	000000	000000
8971824061	8-9718	2406	ROD; SHIFT, HIGH-LOW, TRN	000000	000000

8971825680	8-9718	2568	HOSE;RUBBER OIL COOL	000000	000001
8971825972			CYLINDER BLACK ASM.	000000	000000
8971826460	8-9718	2646	LEVER	000000	000000
8971826730	8-9718	2673	CAP; RAD	000000	000000
8971826971	8-9718	2697	CYLINDER BLOCK ASM.	000000	000001
8971826972	8-9718	2697	CYLINDER BLOCK ASM.	000000	000000
8971826991	8-9718	2699	BLOCK ASM;CYL	000000	000002
8971826992	8-9718	2699	BLOCK ASM;CYL	000000	000000
8971827110	8-9718	2711	ROTOR; GEN	000000	000000
8971827400	8-9718	2740	BEARING;ROTOR,GEN	000000	000000
8971827682			PISTON	000000	000003
8971827692			PISTON	000000	000003
8971828530	8-9718	2853	PUMP ASM;WATER	000000	000000
8971828531	8-9718	2853	PUMP ASM;WATER	000000	000000
8971829350	8-9718	2935	CAP; RAD 2/3KCI	000000	000000
8971829600	8-9718	2960	BOLT; THROUGH, GEN	000000	000003
8971829641			PLATE ASM; PRESS	000000	000001
8971830130	8-9718	3013	PUMP; FUEL, ELECTRIC	000000	000165
8971830140	8-9718	3014	SHUTDOWN SOLENOID	000003	000000
8971830141	8-9718	3014	SHUTDOWN SOLENOID	000000	000000
8971831390	8-9718	3139	CONVERTER ASM; TORQUE,A/T	000000	000000
8971831810	8-9718	3181	PIPE; W/OUTLET	000000	000000
8971834540	8-9718	3454	CAPSULE; SPR	000000	000000
8971836280			SPACER; CA	000000	000001
8971837330	8-9718	3733	ELEMENT;OIL FILTER	000000	000083
8971839480	8-9718	3948	SHAFT ASM.; FRT DRIVE	000000	000000
8971839481	8-9718	3948	SHAFT ASM.; FRT DRIVE	000000	000000
8971840800	8-9718	4080	ANGLEICH KIT	000001	000000
8971840980	8-9718	4098	SPRING;START	000000	000004
8971841380			SENSOR; OIL THERMO	000000	000001
8971842220			BOLT; THROUGH	000000	000000
8971842640	8-9718	4264	PLATE; ADJUSTING	000000	000001
8971845130	8-9718	4513	PUMP ASM; INJ.	000000	000000
8971845330			RING SET;PISTON	000000	000000
8971845820	8-9718	4582	PLATE;ADJ	000002	000000
8971846240	8-9718	4624	COVER ASM;FRT,GEN	000000	000000
8971846250	8-9718	4625	ROTOR;GEN	000000	000000
8971846270	8-9718	4627	STATOR;GEN	000000	000000
8971846280	8-9718	4628	REGULATOR ASM;VOLTAGE GEN	000002	000000
8971846290	8-9718	4629	RECTIFIER;GEN	000000	000000
8971846330	8-9718	4633	PULLEY;GEN	000001	000008
8971846390	8-9718	4639	COVER ASM;RR, GEN	000002	000000
8971846400	8-9718	4640	GASKET; YOKE,STARTER	000000	000000
8971846410	8-9718	4641	PIPE; DRAIN RR COVER STAR	000000	000000
8971846990	8-9718	4699	BUSHING; FRT SPR,RR	000000	000000
8971846991	8-9718	4699	BUSHING; FRT SPR,RR	000260	000492
8971847790			CYLINDER ASM; CLUTCH MAST	000000	000000

8971847791			CYLINDER ASM; CLUTCH MAST	000000	000000
8971847792			CYLINDER ASM; CLUTCH MAST	000000	000000
8971847793			CYLINDER ASM; CLUTCH MAST	000000	000011
8971849220	8-9718	4922	GASKET;QUADRANT	000000	000000
8971850910	8-9718	5091	SOCKET & BULB	000000	000002
8971853690	8-9718	5369	ROD; PUSH,SLAVE CYL	000000	000021
8971854180	8-9718	5418	BRACKET;GEN	000000	000000
8971863980	8-9718	6398	SHAFT; IDLE GEAR	000000	000000
8971863981	8-9718	6398	SHAFT; IDLE GEAR	000027	000047
8971865350	8-9718	6535	GASKET;SPACER	000000	000000
8971865720	8-9718	6572	RING/GASKET; SENSOR	000000	000005
8971866180	8-9718	6618	PUMP ASM;INJ	000000	000001
8971870260			ELEMENT; OIL FILTER	000000	000000
8971871660	8-9718	7166	BAND;EXHAUST SILENCE	000000	000020
8971872240	8-9718	7224	CENTER; COOLING FAN	000000	000000
8971873252			LAMP ASM; HEAD	000000	000001
8971875820	8-9718	7582	PISTON, STD	000000	000000
8971875830	8-9718	7583	PISTON	000000	000000
8971876520			ALTERNATOR	000000	000000
8971876521			ALTERNATOR	000000	000001
8971876630	8-9718	7663	COVER;CYL HD	000001	000000
8971877180	8-9718	7718	BRACKET;EXH SILENCER	000000	000000
8971877181	8-9718	7718	BRACKET;EXH SILENCER	000000	000004
8971879420	8-9718	7942	HOSE;WATER,RAD INL	000000	000000
8971881400	8-9718	8140	BRACKET;ACG	000001	000000
8971882370			GEAR; W/BUSH IDLE A	000000	000019
8971882391			IDLER GEAR	000000	000000
8971882810	8-9718	8281	BELT; COOLING FAN	000000	000000
8971883000	8-9718	8300	CAP; VLV STEM E.	000006	000008
8971883290	8-9718	8329	SCREW; BLEEDER, SLAVE	000000	000000
8971883300	8-9718	8330	CAP; BLEEDER, SLAVE CYL	000000	000000
8971887980	8-9718	8798	SYNCHONIZER;4TH & 3RD	000000	000000
8971887990	8-9718	8799	SYNCHORNIZER; LOW & 2ND	000000	000000
8971888000	8-9718	8800	SYNCHRONIZER; REV & 5TH	000000	000000
8971891700	8-9718	9170	COVER; RR GEN	000000	000000
8971891820	8-9718	9182	PAN ASM; OIL,A/T	000000	000003
8971892440	8-9718	9244	SHAFT; IDLE GEAR	000000	000000
8971892441	8-9718	9244	SHAFT; IDLE GEAR	000000	000000
8971892780	8-9718	9278	BOLT; EYE, OIL PIPE, PART	000000	000002
8971893200	8-9718	9320	HEAD ASM; CYL	000000	000000
8971893201	8-9718	9320	HEAD ASM; CYL	000000	000000
8971894791			CYL HEAD ASM	000000	000001
8971894800			HEAD ASM;CYL	000000	000001
8971895220			BOLT;CONVERTOR/EGR PIPE	000000	000000
8971895820	8-9718	9582	PUMP ASM;INJ	000000	000000
8971895830	8-9718	9583	PUMP ASM;INJ	000000	000000
8971897370	8-9718	9737	HOSE; WATER RAD OUTL	000000	000002

8971897480	8-9718	9748	HOSE; WATER RAD INL	000000	000000
8971898342	8-9718	9834	HEAD ASM;CYL	000000	000000
8971898343	8-9718	9834	HEAD ASM;CYL	000000	000000
8971898344	8-9718	9834	HEAD ASM;CYL	000000	000000
8971898531			GASKET; PIPE	000000	000000
8971898540			GASKET; EGR VLV	000000	000000
8971901171	8-9719	0117	SPRING; GEAR	000001	000001
8971901181	8-9719	0118	SPRING; GEAR	000001	000002
8971903670	8-9719	0367	PUMP ASM;INJ	000000	000000
8971903671	8-9719	0367	PUMP ASM;INJ	000000	000006
8971903740	8-9719	0374	PUMP ASM;INJ	000000	000000
8971903750	8-9719	0375	PUMP ASM;INJ	000000	000000
8971903751	8-9719	0375	PUMP ASM;INJ	000000	000000
8971903752	8-9719	0375	PUMP ASM;INJ	000000	000002
8971903760	8-9719	0376	PUMP ASM; INJ.	000000	000000
8971903762	8-9719	0376	PUMP ASM; INJ.	000000	000002
8971903780	8-9719	0378	PUMP ASM; INJ.	000000	000000
8971906390	8-9719	0639	ORIFICE	000002	000000
8971909270	8-9719	0927	CRANKSHAFT;ASM	000000	000000
8971909280	8-9719	0928	CRANKSHAFT	000000	000000
8971909281	8-9719	0928	CRANKSHAFT	000000	000000
8971909282	8-9719	0928	CRANKSHAFT	000000	000000
8971909283	8-9719	0928	CRANKSHAFT	000000	000003
8971909290	8-9719	0929	CRANKSHAFT	000000	000000
8971909300	8-9719	0930	CRANKSHAFT	000000	000000
8971909301	8-9719	0930	CRANKSHAFT	000000	000000
8971909302	8-9719	0930	CRANKSHAFT	000000	000000
8971909303	8-9719	0930	CRANKSHAFT	000000	000008
8971909920	8-9719	0992	SYNCHRONIZER ASM; 2ND-3RD	000000	000001
8971910380			GASKET;HYDRO BRK BOOSTER	000000	000000
8971910931	8-9719	1093	PUMP ASM;INJ	000000	000002
8971911081			SHOE; BRK, RR	000000	000010
8971911101			SHOE; BRK, RR	000000	000023
8971912780	8-9719	1278	PUMP ASM; INJ.	000000	000000
8971912791	8-9719	1279	PUMP ASM;INJ	000000	000003
8971912800	8-9719	1280	PUMP ASM;INJ	000000	000000
8971912801	8-9719	1280	PUMP ASM;INJ	000000	000002
8971912820	8-9719	1282	GOVERNOR ASM	000000	000000
8971914920	8-9719	1492	GAUGE;OIL LEVEL	000001	000000
8971917630	8-9719	1763	TUBE;GUIDE,OIL LEVER	000000	000029
8971920980	8-9719	2098	PIPE;FUEL FEED PUMP SU	000000	000005
8971920990	8-9719	2099	PIPE;FUEL,NOZZLE LEAK	000000	000001
8971922990	8-9719	2299	ARMATURE; STARTER	000000	000000
8971923332	8-9719	2333	NOZZLE ASM;INJ	000000	000000
8971923380	8-9719	2338	PIPE; FUEL, NOZZLE LEAK O	000000	000000
8971924450	8-9719	2445	PIPE;INJ NO 1	000000	000008
8971924460	8-9719	2446	PIPE;INJ NO 2	000000	000004

8971924470	8-9719	2447	PIPE; INJ NO 3	000000	000005
8971924480	8-9719	2448	PIPE; INJ NO 4	000000	000001
8971926530	8-9719	2653	BRACKET; CATCH TANK	000000	000000
8971926691			CYLINDER ASM; CLUTCH MASTE	000000	000000
8971932020	8-9719	3202	SEAL REMOVER	000001	000000
8971951012	8-9719	5101	BRACKET; ROCKER ARM	000000	000000
8971951013	8-9719	5101	BRACKET; ROCKER ARM	000000	000000
8971951014	8-9719	5101	BRACKET; ROCKER ARM	000000	000000
8971952512	8-9719	5251	HEAD ASM; CYL	000000	000000
8971952514	8-9719	5251	HEAD ASM; CYL	000000	000000
8971952515	8-9719	5251	HEAD ASM; CYL	000000	000001
8971952516	8-9719	5251	HEAD ASM; CYL	000000	000001
8971952590	8-9719	5259	BRACKET; INJ NOZZLE	000000	000000
8971952591	8-9719	5259	BRACKET; INJ NOZZLE	000000	000000
8971952593	8-9719	5259	BRACKET; INJ NOZZLE	000001	000000
8971952670	8-9719	5267	BRACKET; ROCKER ARM	000000	000000
8971952673	8-9719	5267	BRACKET; ROCKER ARM	000000	000000
8971952674	8-9719	5267	BRACKET; ROCKER ARM	000000	000000
8971952684	8-9719	5268	COVER CYL HD	000000	000000
8971952685	8-9719	5268	COVER CYL HD	000000	000000
8971952720	8-9719	5272	GASKET; HD TO COVER	000000	000000
8971952721	8-9719	5272	GASKET; HD TO COVER	000000	000000
8971952722	8-9719	5272	GASKET; HD TO COVER	000000	000002
8971953220	8-9719	5322	PISTON	000000	000000
8971953240	8-9719	5324	LINER KIT	000000	000000
8971953250	8-9719	5325	LINER KIT	000000	000000
8971953260	8-9719	5326	LINER KIT	000000	000000
8971953270	8-9719	5327	LINER KIT	000000	000000
8971953280	8-9719	5328	LINER KIT	000000	000000
8971953290	8-9719	5329	LINER KIT	000000	000000
8971953300	8-9719	5330	LINER KIT	000000	000000
8971956783			MIRROR ASM; DOOR	000000	000000
8971956803			MIRROR ASM; DOOR	000000	000000
8971961640			BUMPER; FRT	000000	000000
8972001670	8-9720	0167	PIPE; OIL TURBO DRAIN	000000	000082
8972001902	8-9720	0190	COVER; CYL HD	000000	000000
8972002140	8-9720	0214	CONNECTOR; GLOW PLUG	000002	000000
8972002870	8-9720	0287	PLATE; C/BL	000000	000000
8972004340	8-9720	0434	TURBOCHARGER ASM	000000	000001
8972005810	8-9720	0581	PUMP ASM; INJ	000000	000000
8972009550			GASKET; INL COV	000000	000000
8972010050	8-9720	1005	BEARING; NEEDLE, 3RD GEAR	000000	000043
8972010161			COVER ASM; ACL	000000	000000
8972011330	8-9720	1133	NUT; ADJ SCREW LK, INJ PUM	000000	000001
8972012810	8-9720	1281	GENERATOR; A/C 12V-50A	000000	000000
8972012820	8-9720	1282	GENERATOR ASM	000000	000000
8972012840	8-9720	1284	GENERATOR; ASM A/C	000000	000003

8972013310	8-9720	1331	TIMER; GLOW PLUG	000000	000002
8972014660	8-9720	1466	GASKET;HD COVER	000000	000000
8972014661	8-9720	1466	GASKET;HD COVER	000000	000018
8972015910	8-9720	1591	RELAY STARTER	000015	000000
8972016370	8-9720	1637	FLYWHEEL	000000	000000
8972016390	8-9720	1639	FLYWHEEL	000000	000000
8972017461			PIPE; EXH BRK V	000000	000000
8972023281	8-9720	2328	GASKET; AIR PIPE	000010	000022
8972023300	8-9720	2330	BOLT;EYE,FUEL INL, INJ PUM	000000	000010
8972025480	8-9720	2548	BELT;COOLING FAN	000000	000010
8972026970	8-9720	2697	SHIM; (T=1.500)	000000	000000
8972027762			ARM; KNUCKLE	000000	000000
8972027763			ARM; KNUCKLE	000000	000000
8972027764			ARM; KNUCKLE	000000	000002
8972028780	8-9720	2878	METAL SET;CRANKSHAFT, STAN	000000	000000
8972028790	8-9720	2879	METAL SET;CRANKSHFT (GRD=2	000000	000000
8972028800	8-9720	2880	METAL SET;CRANKSHAFT, STAN	000000	000000
8972028810	8-9720	2881	METAL SET;CRANKSHFT (GRD=4	000000	000000
8972028820	8-9720	2882	METAL SET;CRANKSHAFT, STAN	000000	000000
8972029810	8-9720	2981	PAN ASM; OIL	000000	000000
8972029811	8-9720	2981	PAN ASM; OIL	000000	000000
8972029812	8-9720	2981	PAN ASM; OIL	000000	000000
8972032780	8-9720	3278	STUD; CLIP	000000	000108
8972035581	8-9720	3558	PAN ASM; OIL	000000	000000
8972035582	8-9720	3558	PAN ASM; OIL	000000	000000
8972038170	8-9720	3817	GASKET; CYL.HEAD	000000	000000
8972039570	8-9720	3957	BOLT;EYE,FUEL INL, FD PMP	000000	000000
8972041090	8-9720	4109	GEAR; 1ST,MAINS	000000	000000
8972045010	8-9720	4501	FOOT;ENG	000001	000000
8972045020	8-9720	4502	FOOT;ENG	000001	000000
8972045090	8-9720	4509	PIPE;HTR	000000	000000
8972045130	8-9720	4513	PIPE;HTR	000000	000000
8972045151	8-9720	4515	PIPE;INJ NOZZLE LEAK OF	000000	000001
8972045160	8-9720	4516	PIPE;FUEL,FEED	000000	000003
8972045170	8-9720	4517	PIPE;FUEL FILT	000000	000000
8972045180	8-9720	4518	PAN ASM;OIL	000000	000000
8972045270	8-9720	4527	COVER;GEN FAN	000000	000005
8972045501	8-9720	4550	SWITCH;OVER HEAT WA	000000	000001
8972047130	8-9720	4713	STARTER ASM	000000	000000
8972047131	8-9720	4713	STARTER ASM	000000	000016
8972047190	8-9720	4719	STARTER ASM	000000	000000
8972047191	8-9720	4719	STARTER ASM	000000	000002
8972049710	8-9720	4971	GUIDE; FAN	000000	000000
8972049730	8-9720	4973	CAP;RAD	000000	000000
8972050641	8-9720	5064	PUMP ASM;INJ	000000	000000
8972051230	8-9720	5123	FAN COOLING	000000	000012
8972051231	8-9720	5123	FAN COOLING	000000	000000

8972051260	8-9720	5126	FAN; COOLING	000000	000000
8972051261	8-9720	5126	FAN; COOLING	000000	000005
8972055661			PLUNGER;ASM INJ PUMP	000000	000000
8972056610	8-9720	5661	PLUNGER;ASM INJ PUMP	000000	000000
8972058040	8-9720	5804	SILENCER ASM;EXH	000000	000001
8972060050	8-9720	6005	CASE;TRANS	000000	000000
8972060060	8-9720	6006	GEAR; REV MAINSHAFT	000000	000000
8972060070	8-9720	6007	GEAR;5TH MAINSHAFT	000000	000000
8972060100	8-9720	6010	SYNCHRONIZER; REV & 5TH	000000	000000
8972060120	8-9720	6012	GEAR;FTH, MAINSHAFT	000000	000000
8972065253			SILENCER ASM; E	000000	000000
8972069510	8-9720	6951	BOLT; COVER FIX, GOV COV	000000	000000
8972070640	8-9720	7064	GAUGE;OIL LEVEL	000000	000000
8972070650	8-9720	7065	PAN ASM;OIL	000000	000000
8972071460	8-9720	7146	GEAR; SPD DRIVE	000000	000000
8972071740	8-9720	7174	BEARING; NEEDLE,LOW GEAR	000000	000000
8972071750	8-9720	7175	SPACER; BRG TO DRIVE GEAR	000000	000000
8972071760	8-9720	7176	WASHER; THRUST, REV GEAR	000001	000000
8972072150	8-9720	7215	DRIVER; COUPLING	000000	000000
8972072230	8-9720	7223	CLAMP; TAIL PIPE	000000	000004
8972072321	8-9720	7232	PIPE; WATER OUTLET	000000	000001
8972075120	8-9720	7512	BEAR; MAINSHAFT END	000000	000000
8972075121	8-9720	7512	BEARING; MAINSH	000000	000000
8972077341			SEDIMENTER; FUEL	000000	000000
8972080100	8-9720	8010	CRANKCASE	000000	000000
8972081020	8-9720	8102	SHIM; (T=1.275)	000010	000000
8972090440	8-9720	9044	ADJUSTER; VALVE	000000	000002
8972090450	8-9720	9045	ADJUSTER; VALVE	000000	000004
8972090460	8-9720	9046	ADJUSTER; VALVE	000001	000000
8972090480	8-9720	9048	ADJUSTER T=3.20 3KR1	000001	000000
8972090500	8-9720	9050	ADJUSTER; T=2.84	000000	000001
8972090510	8-9720	9051	ADJUSTER;T=2.86	000000	000000
8972090640			ADJUSTER; VALVE	000000	000006
8972091140	8-9720	9114	SOLENOID ASM;ENG STOP	000000	000000
8972091141	8-9720	9114	SOLENOID ASM;ENG STOP	000000	000000
8972091150	8-9720	9115	SOLENOID ASM; ENG STOP	000000	000000
8972091151	8-9720	9115	SOLENOID ASM; ENG STOP	000000	000000
8972091152	8-9720	9115	SOLENOID ASM; ENG STOP	000000	000003
8972091970			BEARING; CLUTCH RELEASE	000000	000001
8972092030	8-9720	9203	CLIP; HOSE RAD	000000	000000
8972093062			FILTER; OIL SUB	000000	000001
8972093422	8-9720	9342	SEAL; OIL,CR/SHF,RR	000000	000000
8972093423	8-9720	9342	SEAL; OIL,CR/SHF,RR	000045	000010
8972096090	8-9720	9609	CUP;SEALING CYL HEAD	000000	004139
8972097280	8-9720	9728	COLLAR;THRUST, IDLER GEAR	000000	000000
8972097281	8-9720	9728	COLLAR;THRUST, IDLER GEAR	000000	000000
8972097282	8-9720	9728	COLLAR;THRUST, IDLER GEAR	000022	000077

8972098760	8-9720	9876	VALVE; EXH	000000	000000
8972098762	8-9720	9876	VALVE; EXH	000000	000000
8972098763	8-9720	9876	VALVE; EXH	000562	000325
8972099490	8-9720	9949	HOSE; WATER BY-PASS	000000	000000
8972099491	8-9720	9949	HOSE; WATER BY-PASS	000041	000166
8972101450	8-9721	0145	FAN;COOLING	000000	000000
8972101451	8-9721	0145	FAN;COOLING	000000	000001
8972105550	8-9721	0555	BLOCK;SHIFT,4X2-4X4,TRAN	000001	000000
8972105892			LOCK ASM;TAIL	000000	000007
8972106750	8-9721	0675	SPACER; FAN	000002	000000
8972107471			CYLINDER ASM;CLUTCH MASTE	000000	000001
8972107870	8-9721	0787	FLYWEIGHT	000000	000000
8972107871	8-9721	0787	FLYWEIGHT	000000	000000
8972108020	8-9721	0802	BOLT; EYE, FEED	000000	000011
8972108790	8-9721	0879	BRACKET; GEN	000000	000001
8972109160	8-9721	0916	CASE; PINION, STARTER	000000	000000
8972109170	8-9721	0917	COVER; RR, COVER STARTER	000000	000001
8972109180	8-9721	0918	COIL; FIELD, STARTER	000000	000000
8972109300	8-9721	0930	BRACKET; ROCKER ARM	000000	000000
8972109301	8-9721	0930	BRACKET; ROCKER ARM	000002	000000
8972109330	8-9721	0933	BRACKET;ROCKER	000001	000000
8972110140	8-9721	1014	NUT; TERMINAL	000000	000000
8972111300			YOKE; FRT, FLANGE, PROP	000000	000000
8972111350			JOURNAL ASM; PR	000000	000000
8972111820	8-9721	1182	PUMP ASM;INJ	000000	000001
8972111830	8-9721	1183	GOVERNOR ASM;INJ PUMP	000001	000000
8972112090	8-9721	1209	THERMOSTAT	000000	000315
8972112120	8-9721	1212	FLYWHEEL	000000	000000
8972112121	8-9721	1212	FLYWHEEL	000000	000000
8972112140	8-9721	1214	BRACKET; PUMP	000000	000000
8972112150	8-9721	1215	STIFFNER; OIL PAN	000000	000000
8972112730	8-9721	1273	FILTER ASM;FUEL	000000	000000
8972112731	8-9721	1273	FILTER ASM;FUEL	000000	000000
8972112752	8-9721	1275	PAN ASM;OIL	000000	000000
8972112800	8-9721	1280	NOZZLE ASM; INJ	000000	000071
8972113170	8-9721	1317	BELT;COOLING FAN	000000	000152
8972114510			IDLER GEAR SHAFT	000000	000003
8972114830	8-9721	1483	CASE; TRANS	000000	000000
8972114980	8-9721	1498	FRAME;STARTER END	000000	000000
8972115640			ANTENNA ASM	000000	000000
8972116290			SHAFT ASM; PROP	000000	000002
8972117411			HORN;HIGH NOTE	000000	000003
8972117531	8-9721	1753	PAN ASM; OIL	000000	000000
8972117940	8-9721	1794	GOVERNOR ASM; INJ PUMP	000000	000000
8972119540			MOTOR ASM; FAN	000000	000000
8972120100			CYLINDER; SLAVE	000000	000000
8972121080	8-9721	2108	DRIVER;COUPLING	000000	000000

8972124740	8-9721	2474	PUMP ASM; INJ	000000	000001
8972124770	8-9721	2477	COVER; GEN	000000	000000
8972125000	8-9721	2500	ROTOR;GEN	000000	000000
8972125020	8-9721	2502	BEARING; ROTOR GENERATOR	000000	000000
8972125040	8-9721	2504	REGULATOR INTERNAL	000005	000000
8972125050	8-9721	2505	COVER ASM; RR GENERATOR	000001	000001
8972125070	8-9721	2507	COVER ASM; FRT GENERATOR	000000	000000
8972125080	8-9721	2508	PULLEY; GENERATOR	000000	000002
8972125090	8-9721	2509	PULLEY; GEN	000000	000002
8972125100	8-9721	2510	SCREW;RECTIFIER,GEN	000001	000000
8972125170	8-9721	2517	ROCKER ARM ASM;INLET	000000	000000
8972125180	8-9721	2518	ARM;ROCKER	000000	000034
8972125200	8-9721	2520	ARM;ROCKER	000000	000068
8972125370	8-9721	2537	PACKING	000000	000003
8972125371	8-9721	2537	PACKING	000000	000015
8972125380			PACKING CYL BLOCK FRT PL	000000	000156
8972125400	8-9721	2540	PACKING;INL. MANIFOLD	000016	000000
8972125401	8-9721	2540	PACKING;INL. MANIFOLD	000000	000026
8972125650			GASKET; THERMOSTAT	000000	000160
8972132090			DOOR ASM; FRT, WINDOW	000000	000000
8972132091			DOOR ASM; FRT, WINDOW	000000	000001
8972132650	8-9721	3265	PIPE; WATER, INL	000000	000000
8972133100	8-9721	3310	PIPE; FUEL INL	000000	000002
8972133330	8-9721	3333	BOLT; ROTOR	000039	000000
8972133450			LAMP; RR COMB LFT	000000	000001
8972133510			LAMP ASM; RR	000000	000003
8972133520			LAMP ASM; RR	000000	000006
8972133530			LAMP ASM; RR COMPLETE	000000	000004
8972133700			LAMP ASM; COMP	000000	000008
8972133810	8-9721	3381	ELEMENT KIT;FUEL SEDIMENT	000000	000203
8972134010	8-9721	3401	BOLT;SUPPORT PLATE	000000	000038
8972134270	8-9721	3427	ELEMENT KIT,FUEL FILTER	000000	000000
8972134540	8-9721	3454	PIN; CM/SHF GEAR	000000	000002
8972134720	8-9721	3472	ELEMENT KIT; FUEL FILTER	000000	000033
8972134730	8-9721	3473	PLUG; OVER FLOW VALVE	000000	000000
8972134740	8-9721	3474	GASKET;DRAIN PLUG&CONNCTR	000001	000000
8972134750	8-9721	3475	SENSOR ASM; FUEL FILTER	000002	000016
8972134760	8-9721	3476	SENSOR ASM;FUEL FILTER	000000	000000
8972134780	8-9721	3478	HOSE; FUEL FILTER	000000	000000
8972134800			CASE TIMING GEAR	000000	000004
8972134810	8-9721	3481	CLIP; INJ PIPE	000013	000000
8972136680	8-9721	3668	ORIFICE; INJ PUMP	000000	000000
8972136681	8-9721	3668	ORIFICE; INJ PUMP	000000	000003
8972137680			INSULATION; ENG	000000	000001
8972137950	8-9721	3795	HOSE; FUEL	000002	000000
8972137960	8-9721	3796	HOSE; FUEL	000002	000000
8972139390	8-9721	3939	HOSE; PCV (L=260)	000000	000000

8972140810	8-9721	4081	CYLINDER ASM	000000	000002
8972142340	8-9721	4234	STUD; CLIP	000000	000015
8972142341	8-9721	4234	STUD; CLIP	000000	000001
8972142952	8-9721	4295	PUMP ASM; INJ	000000	000000
8972142953	8-9721	4295	PUMP ASM; INJ	000000	000000
8972144271			FRONT PLATE	000000	000000
8972144660	8-9721	4466	SPRING'; PISTON FUEL FEED	000001	000000
8972144690	8-9721	4469	LEVER;LOAD CONT. GOVERNOR	000000	000000
8972144700	8-9721	4470	LEVER; LOAD CONT.GOVERNOR	000000	000000
8972144800	8-9721	4480	SCREW; FULL LOAD ADJ	000000	000000
8972144910	8-9721	4491	COUPLING; INJ PUMP	000002	000000
8972148510	8-9721	4851	BRACKET; CONT UNIT	000000	000000
8972153580	8-9721	5358	FLYWEIGHT	000000	000000
8972153581	8-9721	5358	FLYWEIGHT	000000	000000
8972153851	8-9721	5385	GOVERNOR ASM;INJ PUMP	000000	000000
8972153860	8-9721	5386	PIPE ASM;OIL,COVER TO FIL	000000	000006
8972153870	8-9721	5387	PIPE ASM;OIL,COVER TO FIL	000000	000006
8972153880	8-9721	5388	BRACKET; OIL FILTER	000000	000007
8972153890	8-9721	5389	COVER; OIL PORT	000000	000001
8972159590			PUMP ASM; INJ	000000	000000
8972159600			INJECTION NOZZLE	000000	000000
8972159601			INJECTION NOZZLE	000000	000019
8972159610			OIL PAN ASM.	000000	000000
8972160200	8-9721	6020	STARTER; GEN	000000	000000
8972160330			CYLINDER BLOCK	000000	000002
8972160820	8-9721	6082	GASKET; INJECTOR	023081	011504
8972161270	8-9721	6127	BELT;FAN	000000	000031
8972161280	8-9721	6128	BELT;COOLING FAN	000000	000734
8972161290	8-9721	6129	BELT;COOLING FAN	000007	000000
8972161310	8-9721	6131	BELT;COOLING FAN	000024	000000
8972161320	8-9721	6132	BELT;COOLING FAN	000000	000003
8972161330	8-9721	6133	BELT;COOLING FAN	000000	000050
8972161340	8-9721	6134	BELT;FAN	000000	000015
8972161350	8-9721	6135	BELT;COOLING FAN	000066	000000
8972161560	8-9721	6156	GASKET;THERMOSTAT	000000	000120
8972161882			CLIP; FUEL PIPE	000000	000000
8972161884			CLIP; FUEL PIPE	000000	000000
8972161885	8-9721	6188	CLIP; FUEL PIPE	000000	000000
8972161886	8-9721	6188	CLIP; FUEL PIPE	000000	000000
8972162160	8-9721	6216	BRACKET; MAP SENSOR	000280	000136
8972163150			PAN ASM; OIL	000000	000000
8972163260			IDLER GEAR W/BEARING	000000	000015
8972163620			FRONT PLATE DOWEL	000000	000000
8972163630			IDLER GEAR BOLT	000000	000000
8972165110	8-9721	6511	SEAT; VLV INSERT	000000	000000
8972172440	8-9721	7244	PUMP ASM; INJ	000000	000001
8972172470	8-9721	7247	PIPE;FUEL,NOZZLE LEAK OFF	000000	000007

8972172491	8-9721	7249	PIPE; FUEL, NOZZLE LEAK O	000000	000000
8972172492	8-9721	7249	PIPE; FUEL, NOZZLE LEAK O	000000	000003
8972173000	8-9721	7300	CAP ASM;RAD	000000	000000
8972174440	8-9721	7444	SENSOR;THERMO WATER	000000	000000
8972174441	8-9721	7444	SENSOR;THERMO WATER	000000	000013
8972176780	8-9721	7678	PUMP ASM; INJ	000000	000000
8972177780	8-9721	7778	SENSOR; PRESSURE	000000	000020
8972178031	8-9721	7803	BLOCK ASM CYL	000000	000000
8972178270	8-9721	7827	PIPE; WATER OUTLET	000000	000022
8972178581	8-9721	7858	CLEANER ASM; AIR	000000	000003
8972178620	8-9721	7862	PIPE; AIR	000001	000001
8972178631	8-9721	7863	GEAR; CR/SHF	000000	000000
8972178640	8-9721	7864	GEAR; IDLE	000005	000000
8972178641	8-9721	7864	GEAR; IDLE	000000	000000
8972178650	8-9721	7865	GEAR IDLE	000000	000000
8972178780	8-9721	7878	HOSE; CONN	000002	000000
8972179112	8-9721	7911	HOSE;TURBOCHARGER TO INL	000001	000001
8972179113	8-9721	7911	HOSE;TURBOCHARGER TO INL	000000	000000
8972179130	8-9721	7913	COVER ASM; RR	000000	000000
8972179280	8-9721	7928	REGULATOR ASM;VOLTAGE, GEN	000000	000001
8972179560	8-9721	7956	BRACKET; ACL	000001	000000
8972179570	8-9721	7957	GEAR; INJ PUMP & VLV	000000	000000
8972179571	8-9721	7957	GEAR; INJ PUMP & VLV	000000	000000
8972179572	8-9721	7957	GEAR; INJ PUMP & VLV	000001	000000
8972179850	8-9721	7985	DISC; CLUTCH	000000	000000
8972180780			FLAP; MUD GUARD	000000	000000
8972180870	8-9721	8087	HARNESS; TACHOMETER	000001	000000
8972181120	8-9721	8112	HOUSING; FLYWHEEL	000000	000000
8972183290	8-9721	8329	COVER ASM; FRT GENETATOR	000000	000000
8972184480	8-9721	8448	PUMP ASM; INJ	000000	000001
8972185941			STEERING UNIT	000000	000000
8972186470	8-9721	8647	SEDIMENTER;FUEL	000000	000021
8972186800	8-9721	8680	PIPE; EXH, SILENCER CONNE	000000	000000
8972187470	8-9721	8747	CLEANER ASM;AIR	000000	000002
8972187510	8-9721	8751	PAN ASM;OIL	000000	000000
8972187511	8-9721	8751	PAN ASM;OIL	000001	000000
8972187531	8-9721	8753	SILENCER ASM;EXH	000000	000000
8972187532	8-9721	8753	SILENCER ASM;EXH	000000	000002
8972187540	8-9721	8754	RUBBER;MTG ENG	000000	000002
8972187550	8-9721	8755	RUBBER;MTG.ENG	000000	000004
8972189560	8-9721	8956	GOVERNOR; ASM	000000	000000
8972189930	8-9721	8993	SHAFT; IDLE GEAR	000000	000000
8972190010	8-9721	9001	CASE; TIMING GEAR	000000	000000
8972190012	8-9721	9001	CASE; TIMING GEAR	000000	000000
8972190013	8-9721	9001	CASE; TIMING GEAR	000000	000000
8972190014	8-9721	9001	CASE; TIMING GEAR	000000	000001
8972190540			RING SET; PISTON	000000	000011

8972191890	8-9721	9189	ROD ASM; CONN	000000	000000
8972191910	8-9721	9191	BUSHING; CONNROD	000000	000000
8972192190	8-9721	9219	FLYWHEEL	000000	000000
8972192481	8-9721	9248	SILENCER ASM;EXH	000000	000000
8972192482	8-9721	9248	SILENCER ASM;EXH	000000	000000
8972192491	8-9721	9249	BRACKET; EXH SILENCER	000000	000000
8972192492	8-9721	9249	BRACKET; EXH SILENCER	000000	000000
8972192500	8-9721	9250	PIPE;FULL,FEED PUMP,SUCT	000000	000000
8972192510	8-9721	9251	PIPE;FUEL,NOZZLE LEAK OFF	000000	000000
8972192780	8-9721	9278	COVER;TIMING GEAR ASE 4	000000	000000
8972193150	8-9721	9315	FILTER ASM; OIL	000000	000007
8972193420	8-9721	9342	NOZZLE; INJ	000000	000005
8972193630	8-9721	9363	CASE ASM; SEDIMENTER	000000	000000
8972193631	8-9721	9363	CASE ASM; SEDIMENTER	000000	000000
8972194560			METAL SET;CRANKSHAFT,STAN	000000	000035
8972195240	8-9721	9524	PUMP ASM; INJ	000000	000000
8972196500	8-9721	9650	RUBBER	000000	000088
8972197320	8-9721	9732	GOVERNOR ASM	000000	000000
8972200090	8-9722	0009	COVER; CYL HD	000000	000000
8972200092	8-9722	0009	COVER; CYL HD	000000	000000
8972202270	8-9722	0227	TURBOCHARGER ASM	000000	000001
8972202971	8-9722	0297	STARTER ASM	000000	000000
8972202972	8-9722	0297	STARTER ASM	000000	000000
8972202974	8-9722	0297	STARTER ASM	000000	000000
8972202980	8-9722	0298	GENERATOR ASM	000000	000000
8972205861			HOSE; FLEX, PIS	000000	000001
8972206040	8-9722	0604	PISTON; STANDARD	000000	000003
8972206050	8-9722	0605	PISTON; STANDARD	000002	000004
8972206740	8-9722	0674	FLYWEIGHT	000000	000000
8972206840	8-9722	0684	BOLT; GEN	000000	000000
8972207400	8-9722	0740	COVER; HOLE	000079	000000
8972213640	8-9722	1364	MANIFOLD; INLET	000000	000000
8972214160	8-9722	1416	SHAFT ASM;FRT DRIVE	000000	000000
8972216390	8-9722	1639	GOVERNOR ASM;INJ PUMP	000000	000000
8972216500	8-9722	1650	CUP;ACL	000001	000001
8972216530	8-9722	1653	VALVE VACUATOR	000000	000357
8972219200	8-9722	1920	PIPE;OIL,TURBOCHARGR FEED	000001	000001
8972219210	8-9722	1921	PIPE; OIL RTRN TURBOCHARG	000000	000027
8972219220	8-9722	1922	DUCT;INL TURBOCHARGER OUT	000005	000000
8972219340			HEADLAMP UNIT	000000	000001
8972219350			HEADLAMP UNIT	000000	000000
8972220150	8-9722	2015	PUMP ASM;INJ	000000	000001
8972220310	8-9722	2031	PULLEY; CR/SHF	000000	000000
8972220311	8-9722	2031	PULLEY; CR/SHF	000000	000000
8972220312	8-9722	2031	PULLEY; CR/SHF	000000	000000
8972220313	8-9722	2031	PULLEY; CR/SHF	000022	000015
8972221040	8-9722	2104	COVER;TAPPET CHAMBER	000000	000000

8972221041	8-9722	2104	COVER;TAPPET CHAMBER	000000	000007
8972221090	8-9722	2109	HEAD ASM;CYL	000000	000000
8972221170	8-9722	2117	GASKET;CYL HD	000000	000000
8972221171	8-9722	2117	GASKET;CYL HD	000000	000006
8972221200	8-9722	2120	PIPE;OIL,TURBOCHARGER FEE	000000	000000
8972221201	8-9722	2120	PIPE;OIL,TURBOCHARGER FEE	000000	000000
8972221210	8-9722	2121	PIPE; OIL DRAIN TURBOCHAR	000000	000002
8972221250	8-9722	2125	ADAPTER; OIL FILTER	000000	000006
8972221700	8-9722	2170	NOZZLE ASM;INJ	000000	000027
8972221720	8-9722	2172	TURBOCHARGER ASM	000000	000002
8972221740	8-9722	2174	BRACKET;STOPPER CABLE	000000	000000
8972222341	8-9722	2234	BRACKET;FAN GUIDE	000000	000000
8972222450	8-9722	2245	SHAFT; ROCKER ARM	000000	000002
8972222470	8-9722	2247	PLATE; PIPE, OUTLET	000000	000000
8972224200	8-9722	2420	LEVER; SPD CONT, GOV	000000	000000
8972224860	8-9722	2486	PLATE; ADJ	000000	000172
8972225500			CAP WHEEL	000000	000002
8972225710	8-9722	2571	BOLT; EYE OIL PIPE	000000	000000
8972226610	8-9722	2661	COVER;CYL HD	000000	000000
8972226840	8-9722	2684	BOLT; GEN	000016	000000
8972227450			CYLINDER ASM;CLUTCH MASTE	000000	000000
8972227451			CYLINDER ASM;CLUTCH MASTE	000000	000004
8972227640	8-9722	2764	SPACER;ANTI LASH PLATE	000002	000000
8972227702	8-9722	2770	WATER PUMP	000000	000000
8972229630	8-9722	2963	PUMP ASM;INJ	000000	000000
8972233400	8-9722	3340	SPACER;NOZZLE SPRING,NOZZ	000000	000006
8972233430	8-9722	3343	SEAT;NOZZLE SPRING NOZZLE	000000	000012
8972233440	8-9722	3344	SEAT;NOZZLE SPRING NOZZLE	000000	000012
8972233450	8-9722	3345	SEAT;NOZZLE SPRING NOZZLE	000000	000000
8972233460	8-9722	3346	SEAT;NOZZLE SPRING NOZZLE	000000	000012
8972233470	8-9722	3347	SEAT;NOZZLE SPRING NOZZLE	000000	000012
8972233480	8-9722	3348	SEAT;NOZZLE SPRING NOZZLE	000000	000000
8972233490	8-9722	3349	SEAT;NOZZLE SPRING NOZZLE	000000	000012
8972233500	8-9722	3350	SEAT;NOZZLE SPRING NOZZLE	000000	000000
8972233510	8-9722	3351	SEAT;NOZZLE SPRING NOZZLE	000000	000012
8972233520	8-9722	3352	SEAT;NOZZLE SPRING NOZZLE	000000	000012
8972233530	8-9722	3353	SEAT;NOZZLE SPRING NOZZLE	000000	000012
8972233540	8-9722	3354	SEAT;NOZZLE SPRING NOZZLE	000000	000012
8972233550	8-9722	3355	SEAT; NOZZLE T=2.24	000000	000012
8972233560	8-9722	3356	SEAT; NOZZLE T=2.26	000000	000012
8972233570	8-9722	3357	SEAT; NOZZLE T=2.28	000000	000012
8972233580	8-9722	3358	SEAT; NOZZLE T=2.30	000000	000012
8972233590	8-9722	3359	SEAT; NOZZLE T=2.32	000000	000012
8972233600	8-9722	3360	SEAT; NOZZLE T=2.34	000000	000008
8972233610	8-9722	3361	SEAT; NOZZLE T=2.36	000000	000012
8972233620	8-9722	3362	SEAT; NOZZLE T=2.38	000000	000012
8972233630	8-9722	3363	SEAT; NOZZLE T=2.40	000000	000012

8972233640	8-9722	3364	SEAT; NOZZLE T=2.42	000000	000012
8972233650	8-9722	3365	SEAT; NOZZLE T=2.44	000000	000012
8972233660	8-9722	3366	SEAT; NOZZLE T=2.46	000000	000012
8972233670	8-9722	3367	SEAT; NOZZLE T=2.48	000000	000012
8972233680	8-9722	3368	SEAT; NOZZLE T=2.50	000000	000010
8972233690	8-9722	3369	SEAT; NOZZLE T=2.52	000000	000012
8972233700	8-9722	3370	SEAT; NOZZLE T=2.54	000000	000010
8972233710	8-9722	3371	SEAT; NOZZLE T=2.56	000000	000012
8972233720	8-9722	3372	SEAT; NOZZLE T=2.58	000000	000012
8972233730	8-9722	3373	SEAT; NOZZLE T=2.60	000000	000012
8972233740	8-9722	3374	SEAT; NOZZLE T=2.62	000000	000012
8972233750	8-9722	3375	SEAT; NOZZLE T=2.64	000000	000012
8972233760	8-9722	3376	SEAT; NOZZLE T=2.66	000000	000012
8972233770	8-9722	3377	SEAT; NOZZLE T=2.68	000000	000012
8972233780	8-9722	3378	SEAT; NOZZLE T=2.70	000000	000010
8972233790	8-9722	3379	SEAT; NOZZLE T=2.72	000000	000012
8972233800	8-9722	3380	SEAT; NOZZLE T=2.74	000000	000011
8972233810	8-9722	3381	SEAT; NOZZLE T=2.76	000000	000012
8972233820	8-9722	3382	SEAT; NOZZLE T=2.78	000000	000012
8972233830	8-9722	3383	SEAT; NOZZLE T=2.80	000000	000012
8972233840	8-9722	3384	SEAT; NOZZLE T=2.82	000000	000012
8972233850	8-9722	3385	SEAT; NOZZLE T=2.84	000000	000010
8972233860	8-9722	3386	SEAT; NOZZLE T=2.86	000000	000012
8972233870	8-9722	3387	SEAT; NOZZLE T=2.88	000000	000012
8972233880	8-9722	3388	SEAT; NOZZLE T=2.90	000000	000010
8972233890	8-9722	3389	SEAT; NOZZLE T=2.92	000000	000012
8972233900	8-9722	3390	SEAT; NOZZLE T=2.94	000000	000010
8972233910	8-9722	3391	SEAT; NOZZLE T=2.96	000000	000012
8972233920	8-9722	3392	SEAT; NOZZLE T=2.98	000000	000012
8972233930	8-9722	3393	SEAT; NOZZLE T=3.00	000000	000012
8972234190			SENSOR; CRANK A	000000	000000
8972234280	8-9722	3428	TURBOCHARGER ASM	000000	000014
8972234300	8-9722	3430	COVER; OIL PORT	000000	000000
8972234301	8-9722	3430	COVER; OIL PORT	000000	000001
8972234342	8-9722	3434	PIPE;INL TURBOCHARGER OUT	000000	000000
8972234490	8-9722	3449	TAPPET; CM/SHF, INJ PUMP	000001	000000
8972234550	8-9722	3455	HOLDER;DELIVERY VLV,I/P	000000	000001
8972235800	8-9722	3580	HOUSING; FLYWHEEL	000000	000000
8972235801	8-9722	3580	HOUSING; FLYWHEEL	000000	000002
8972237450	8-9722	3745	COVER;CYL HD	000000	000000
8972237600	8-9722	3760	COVER; CYL HD	000000	000002
8972242040	8-9722	4204	HOSE; WATER BY-PASS	000083	000056
8972242050	8-9722	4205	HOSE;BREATHER TO PIPE	000000	000018
8972243730			CYLINDER ASM;BRK MASTER	000000	000000
8972243740			CYLINDER ASM;	000000	000000
8972243750			CYLINDER ASM	000000	000000
8972244300	8-9722	4430	BELT; COOLING FAN	000000	000023

8972247202	8-9722	4720	HEAD ASM; CYL	000000	000000
8972247203	8-9722	4720	HEAD ASM; CYL	000000	000000
8972248130	8-9722	4813	STARTER ASM; 24V-3.2 KW	000000	000000
8972248131	8-9722	4813	STARTER ASM; 24V-3.2 KW	000000	000071
8972248641	8-9722	4864	HOUSING THERMOSTAT	000001	000000
8972249930	8-9722	4993	SENSOR; FUEL TEMP	000000	000005
8972249990	8-9722	4999	BELT; COOLING FAN	000000	001490
8972251170	8-9722	5117	GENERATOR ASM	000000	000022
8972251200	8-9722	5120	PULLEY; WATER PUMP	000000	000001
8972251290	8-9722	5129	COUPLING ASM; INJ PUMP	000000	000000
8972251360	8-9722	5136	GOVERNOR ASM; INJ PUMP	000000	000000
8972251960	8-9722	5196	GENERATOR ASM	000000	000000
8972251980	8-9722	5198	STARTER ASM	000000	000000
8972251990	8-9722	5199	STARTER ASM	000000	000000
8972251991	8-9722	5199	STARTER ASM	000000	000000
8972252090	8-9722	5209	SWITCH ENGAGE STARTER	000000	000001
8972252540			YOKE; FLANGE, PROP SHAFT	000012	000009
8972253180	8-9722	5318	HOUSING; FLYWHEEL	000000	000000
8972253181	8-9722	5318	HOUSING; FLYWHEEL	000000	000000
8972253340	8-9722	5334	PULLEY; GEN	000000	000310
8972254470	8-9722	5447	VALVE; OVERFLOW	000000	000002
8972254690	8-9722	5469	SUPPORT; W/DRAW LEVER	000000	000000
8972254691	8-9722	5469	SUPPORT; W/DRAW LEVER	000000	000000
8972254692	8-9722	5469	SUPPORT; W/DRAW LEVER	000000	000014
8972254723	8-9722	5472	CASE; TIMING GEAR	000000	000000
8972254724	8-9722	5472	CASE; TIMING GEAR	000000	000001
8972254730	8-9722	5473	COVER; GEAR CASE	000000	000000
8972254732	8-9722	5473	COVER; GEAR CASE	000000	000000
8972254733	8-9722	5473	COVER; GEAR CASE	000000	000001
8972254790	8-9722	5479	BEARING; IDLE GEAR	000000	000000
8972257181	8-9722	5718	HARNES; EXT, GEN	000001	000000
8972259470	8-9722	5947	CAP ASM; RAD	000000	000002
8972259630	8-9722	5963	PLUG; DRAIN, RAD	000000	000016
8972259700	8-9722	5970	SHIM; TAPPET, INJ PUMP	000000	000000
8972259720	8-9722	5972	SHIM; TAPPET, INJ PUMP	000000	000000
8972259750	8-9722	5975	CLAMP; WIRE HOSE	000009	000000
8972260400	8-9722	6040	GUIDE FAN	000000	000002
8972260420	8-9722	6042	GUIDE; FAN	000000	000001
8972261560	8-9722	6156	JOINT; EYE, FUEL FILTER	000000	000000
8972262030	8-9722	6203	GENERATOR ASM	000000	000000
8972262720			PIPE; EXH	000000	000000
8972263210	8-9722	6321	PUMP ASM; OIL	000000	000016
8972264700	8-9722	6470	BOLT; GEN	000015	000000
8972264701	8-9722	6470	BOLT; GEN	000000	000000
8972266490	8-9722	6649	COIL; FIELD, STARTER	000000	000000
8972266500	8-9722	6650	COVER; RR COVER STARTER	000000	000000
8972266510	8-9722	6651	BEARING CENTER STARTER	000000	000000

8972266530	8-9722	6653	SWITCH;ENGAGE STARTER	000000	000003
8972266540	8-9722	6654	CASE;PINION, STARTER	000000	000000
8972266550	8-9722	6655	RELAY;STARTER	000000	000000
8972266730	8-9722	6673	SWITCH;ENGAGE STARTER	000000	000000
8972268200			SPRING;DIAPHRAGM VENTLTR	000000	000291
8972268300	8-9722	6830	PULLEY;CR/SHF	000000	000000
8972268301	8-9722	6830	PULLEY;CR/SHF	000000	000031
8972268310	8-9722	6831	PULLEY;CR/SHF DAMPER	000001	000139
8972268400	8-9722	6840	GENERATOR ASM	000000	000000
8972268401	8-9722	6840	GENERATOR ASM	000000	000000
8972268402	8-9722	6840	GENERATOR ASM	000000	000000
8972268403	8-9722	6840	GENERATOR ASM	000000	000000
8972268404	8-9722	6840	GENERATOR ASM	000000	000000
8972268405	8-9722	6840	GENERATOR ASM	000000	000000
8972268410	8-9722	6841	COVER; ANGLEICH	000000	000000
8972268411	8-9722	6841	COVER; ANGLEICH	000004	000000
8972268420	8-9722	6842	GASKET; COVER, ANGLEICH	000000	000000
8972268421	8-9722	6842	GASKET; COVER, ANGLEICH	000000	000008
8972268450	8-9722	6845	CASE; TIMING GEAR	000000	000000
8972268451	8-9722	6845	CASE; TIMING GEAR	000000	000000
8972268452	8-9722	6845	CASE; TIMING GEAR	000000	000000
8972268454	8-9722	6845	CASE; TIMING GEAR	000000	000000
8972268550	8-9722	6855	PULLEY; FAN CENTER	000000	000001
8972268560	8-9722	6856	PULLEY;FAN CENTER	000000	000001
8972268580	8-9722	6858	COUPLING ASM; INJ PUMP	000000	000000
8972268590	8-9722	6859	PUMP ASM;FUEL FEED, PUMP	000003	000000
8972269070	8-9722	6907	COVER ASM; FRT, GEN	000000	000000
8972269300	8-9722	6930	PULLEY; CR/SHF	000000	000000
8972271420	8-9722	7142	PUMP ASM; INJ	000000	000002
8972271430	8-9722	7143	GOVERNOR ASM; INJ PUMP	000000	000000
8972271931	8-9722	7193	GOVERNOR ASM; INJ PUMP	000000	000000
8972271940			PUMP ASM; INJ	000000	000000
8972271942	8-9722	7194	PUMP ASM; INJ	000000	000004
8972272120	8-9722	7212	PULLEY;CR/SHF DAMPER	000003	000000
8972272130			GEAR; IDLE	000000	000000
8972272150			PLATE; ADJ	000000	000007
8972272820	8-9722	7282	SHIM;INJ PUMP	000000	000007
8972272821	8-9722	7282	SHIM;INJ PUMP	000000	000000
8972272830	8-9722	7283	SHIM;INJ PUMP	000000	000007
8972272831	8-9722	7283	SHIM;INJ PUMP	000000	000000
8972272840	8-9722	7284	SHIM;INJ PUMP	000000	000000
8972272841	8-9722	7284	SHIM;INJ PUMP	000000	000111
8972272850	8-9722	7285	SHIM;INJ PUMP	000000	000090
8972272851	8-9722	7285	SHIM;INJ PUMP	000000	000000
8972272860	8-9722	7286	SHIM;INJ PUMP	000000	000000
8972272861	8-9722	7286	SHIM;INJ PUMP	000000	000007
8972272870	8-9722	7287	SHIM;INJ PUMP	000000	000000

8972272871	8-9722	7287	SHIM; INJ PUMP	000000	000003
8972272880	8-9722	7288	SHIM; INJ PUMP	000000	000000
8972272881	8-9722	7288	SHIM; INJ PUMP	000117	000308
8972272890	8-9722	7289	SHIM; INJ PUMP	000000	000000
8972272891	8-9722	7289	SHIM; INJ PUMP	000000	000116
8972272900	8-9722	7290	SHIM; INJ PUMP	000000	000000
8972272901	8-9722	7290	SHIM; INJ PUMP	000000	000000
8972274660	8-9722	7466	PIPE; OIL, FILTER TO COOLER	000000	000002
8972275811	8-9722	7581	HOLDER; DLVRY VALVE; INJ PU	000000	000000
8972276030	8-9722	7603	PIPE; AIR	000000	000009
8972277250	8-9722	7725	CAMSHAFT	000000	000000
8972277251	8-9722	7725	CAMSHAFT	000000	000001
8972278240	8-9722	7824	PAN ASM; OIL	000000	000001
8972278280	8-9722	7828	PUMP ASM; INJ	000000	000000
8972278281	8-9722	7828	PUMP ASM; INJ	000000	000000
8972278801	8-9722	7880	CONTROL UNIT; ENG	000000	000000
8972279000	8-9722	7900	FILLER; OIL	000000	000000
8972279960	8-9722	7996	BUSHING; LEAF SPR, FRT	000106	000038
8972280440	8-9722	8044	GASKET; INLET MANIFOLD	000000	000000
8972281300			CLIP; RUBBER HOSE	000000	000000
8972281430			HOSE; RUBBER BY PASS	000000	000000
8972281540			PAN ASM; OIL	000000	000000
8972281762	8-9722	8176	CASE; TIMING GEAR	000002	000000
8972281763	8-9722	8176	CASE; TIMING GEAR	000000	000010
8972283180	8-9722	8318	GENERATOR ASM	000000	000018
8972283300	8-9722	8330	FOOT; ENG	000000	000000
8972283390			COVER ASM; CYLINDER HEAD	000000	000004
8972283850	8-9722	8385	PIPE ASM; INJ	000000	000007
8972283851	8-9722	8385	PIPE ASM; INJ	000000	000000
8972283860	8-9722	8386	PIPE; ASM; INJECTION	000000	000000
8972283861	8-9722	8386	PIPE; ASM; INJECTION	000000	000000
8972286040	8-9722	8604	PUMP ASM; INJ	000000	000001
8972286591	8-9722	8659	COVER	000000	000000
8972286610	8-9722	8661	PUMP ASM; FUEL FEED, INJ	000000	000000
8972286630	8-9722	8663	GOVERNOR ASM; INJ PUMP	000000	000001
8972286700	8-9722	8670	PIPE; OIL	000000	000000
8972286710	8-9722	8671	PIPE; OIL, C/BL TO VAC	000204	000205
8972288450			LAMP ASM; RR CO	000000	000011
8972288460			LAMP ASM; RR CO	000000	000024
8972289040	8-9722	8904	PIPE; FULL FEED PUMP SUCT	000000	000000
8972291680	8-9722	9168	COVER; OIL FILTER	000001	000000
8972292440	8-9722	9244	STAY; CONNECTOR, GEN	000000	000003
8972292512	8-9722	9251	HOSE; RUBBER, FUEL LEAK	000000	000000
8972292513	8-9722	9251	HOSE; RUBBER, FUEL LEAK	000000	000007
8972293280			PIN; STRAIGHT	000000	000013
8972293380			CAMSHAFT	000000	000001
8972293671	8-9722	9367	NOZZLE ASM; INJ	000000	000000

8972293672	8-9722	9367	NOZZLE ASM; INJ	000000	000049
8972293681	8-9722	9368	PUMP ASM; INJ.	000000	000000
8972293682	8-9722	9368	PUMP ASM; INJ.	000000	000021
8972293690	8-9722	9369	GEAR; IDLER	000000	000000
8972293810	8-9722	9381	CONNECTOR; GLOW PLUG	000000	000008
8972294590	8-9722	9459	PULLEY;CR/SHF	000000	000000
8972294591	8-9722	9459	PULLEY;CR/SHF	000000	000000
8972294710	8-9722	9471	GASKET;THERMOSTAT HOUSING	000000	000000
8972294711	8-9722	9471	GASKET;THERMOSTAT HOUSING	000000	000002
8972296240	8-9722	9624	WIRE;LEAD GEN	000000	000000
8972296250	8-9722	9625	PULLEY;GEN	000000	000000
8972296890	8-9722	9689	FLYWHEEL	000000	000000
8972296900	8-9722	9690	FLYWHEEL	000000	000000
8972296901	8-9722	9690	FLYWHEEL	000000	000000
8972296902	8-9722	9690	FLYWHEEL	000000	000000
8972296904	8-9722	9690	FLYWHEEL	000000	000018
8972297830	8-9722	9783	COLLAR;SPACE,GEN	000002	000000
8972297840	8-9722	9784	COLLAR;SPACE,GEN	000002	000000
8972297850	8-9722	9785	FLYWHEEL ASM;GEN	000000	000000
8972297890	8-9722	9789	PULLEY;GEN	000006	000000
8972297910	8-9722	9791	SHAFT;GENERATOR	000005	000000
8972297970	8-9722	9797	ANGLEICH KIT	000000	000000
8972299000			PULLEY; CR/SHF	000000	000000
8972299002			PULLEY; CR/SHF	000000	000001
8972299010			PULLEY;CR/SHF	000000	000000
8972299012	8-9722	9901	PULLEY;CR/SHF	000000	000002
8972299070	8-9722	9907	NOZZLE; INJ	000000	000016
8972299100			CLUTCH ASM; PINION	000000	000000
8972299120			SWITCH; ENGAGE STARTER	000000	000000
8972300690	8-9723	0069	STIFFNER; OIL PAN	000000	000023
8972300700	8-9723	0070	STIFFNER; OIL PAN	000000	000018
8972302260	8-9723	0226	RELAY;EMERGENCY	000000	000000
8972302270	8-9723	0227	RELAY; EMERGENCY	000000	000000
8972304900	8-9723	0490	ADJUSTER RR BRAKE	000007	000007
8972306201	8-9723	0620	PUMP ASM;INJ	000000	000000
8972308590			HOUSING ASM	000000	000000
8972308591			HOUSING ASM	000000	000005
8972308850			COVER CYL HD	000000	000014
8972309380	8-9723	0938	BELT; COOLING FAN	000000	000648
8972309390	8-9723	0939	BELT;COOLING FAN	000000	000034
8972309400	8-9723	0940	BELT;COOLING FAN	000003	000000
8972309650	8-9723	0965	CUP; ACL	000001	000001
8972310210			PIPE; EXH	000000	000000
8972310211			PIPE; EXH	000000	000000
8972310220			PLATE; ADJ	000001	000002
8972310250			FOOT; ENG	000000	000000
8972310252			FOOT; ENG	000000	000007

8972310260			FOOT; ENG	000000	000000
8972310262			FOOT; ENG	000000	000012
8972310270			ROD; LINK	000000	000001
8972310280	8-9723	1028	BRACKET;SOLENOID VALVE	000000	000000
8972310290			PROTECTOR;HEAT,EXH MANIF	000000	000013
8972310300			RETAINER,CR/SHF	000000	000000
8972310302	8-9723	1030	RETAINER,CR/SHF	000000	000013
8972310330			HOUSING; THERMOSTAT	000000	000000
8972310331			HOUSING; THERMOSTAT	000010	000000
8972310332			HOUSING; THERMOSTAT	000000	000000
8972310340			PIPE; WATER INL	000000	000000
8972310341			PIPE; WATER INL	000001	000000
8972310350			PAN ASM; OIL	000000	000000
8972310410			BE; DIST EXH MANIF	000000	000008
8972310420	8-9723	1042	PULLEY; CR/DHF DAMPER	000000	000000
8972310421	8-9723	1042	PULLEY; CR/DHF DAMPER	000000	000000
8972310830	8-9723	1083	CAMSHAFT	000000	000004
8972311640	8-9723	1164	BRACKET;CATCH TANK	000000	000000
8972311710	8-9723	1171	HOSE;RUBBER BREATHER	000000	000000
8972312130	8-9723	1213	GEAR;IDLE	000000	000000
8972312140	8-9723	1214	COVER; GEAR CASE	000000	000000
8972312141	8-9723	1214	COVER; GEAR CASE	000000	000000
8972312280	8-9723	1228	SEAT; VLV INSER	000000	000000
8972312290	8-9723	1229	SEAT; VLV INSER	000000	000000
8972314900	8-9723	1490	SAFETY UNIT	000000	000210
8972315010	8-9723	1501	GENERATOR ASM	000000	000001
8972315170	8-9723	1517	PLUNGER ASM;INJ PUMP	000000	000005
8972315180	8-9723	1518	CAMSHAFT; INJ PUMP	000000	000000
8972315190	8-9723	1519	LEVER;SPD CONT,GOV	000000	000000
8972315200	8-9723	1520	LEVER; LOAD CONT, GOV	000000	000000
8972315210	8-9723	1521	COUPLING;INJ PUMP DRIVE	000000	000000
8972315320	8-9723	1532	FILTER;ACL, OUTER	000000	000012
8972315330	8-9723	1533	FILTER; ACL, INNER	000000	000006
8972315350	8-9723	1535	FILTER ASM;FUEL	000000	000012
8972315370	8-9723	1537	BLOCK ASM: CYL.	000000	000000
8972315371	8-9723	1537	BLOCK ASM: CYL.	000000	000002
8972315373	8-9723	1537	BLOCK ASM: CYL.	000000	000000
8972315395	8-9723	1539	BLOCK ASM;CYL	000000	000001
8972315680	8-9723	1568	RELAY;STARTER	000000	000000
8972315780	8-9723	1578	PIPE;FUEL,NOZZLE LEAK O	000000	000000
8972315790	8-9723	1579	PLATE; ADJUSTER	000000	000002
8972316480	8-9723	1648	HOSE; PCV	000000	000000
8972316490	8-9723	1649	HOSE;PCV	000002	000000
8972316640	8-9723	1664	SOLENOIDE ASM; ENG STOP	000000	000000
8972318480			GASKET; THERMOSTAT HSG	000000	000000
8972318870			THERMOSTAT	000000	000000
8972318900			THERMOSTAT	000000	000000

8972319010	8-9723	1901	VALVE;VACUATOR	000000	000000
8972319270	8-9723	1927	VALVE;OVERFLOW, INJ PUMP	000000	000003
8972319690	8-9723	1969	GUIDE; VALVE	000000	000121
8972320171	8-9723	2017	PIPE; INL	000000	000000
8972321350	8-9723	2135	GAUGE; OIL LEVEL	000000	000002
8972321850	8-9723	2185	BULB; TACHOMETER	000004	000000
8972322113	8-9723	2211	TANK; CATCH, PCV	000007	000002
8972322380	8-9723	2238	BELT;FAN	000000	000064
8972322411	8-9723	2241	HOUSING;THERMOSTAT	000000	000004
8972322470	8-9723	2247	COVER; WATER PUMP	000000	000000
8972322480	8-9723	2248	GASKET; COVER TO BODY	000000	000018
8972322490	8-9723	2249	SEAL UNIT;WATER PUMP	000000	000000
8972322500	8-9723	2250	IMPELLER; WATER PUMP	000001	000000
8972322520	8-9723	2252	BELT;COOLING	000060	000144
8972322851			BLOCK; ASM CYL	000000	000000
8972322860	8-9723	2286	BLOCK; ASM CYL	000000	000000
8972322861	8-9723	2286	BLOCK; ASM CYL	000000	000000
8972322865	8-9723	2286	BLOCK; ASM CYL	000000	000001
8972322866	8-9723	2286	BLOCK; ASM CYL	000000	000001
8972323240	8-9723	2324	HOUSING; BLWR TURBO	000000	000000
8972323341	8-9723	2334	GASKET;LEAK OFF PIPE	000000	000037
8972324250	8-9723	2425	SEAT; VLV INSERT	000000	000000
8972324260	8-9723	2426	INSERT EXH. SEAT	000000	000000
8972326030	8-9723	2603	PISTON; O/S=0.25	000000	000013
8972326040	8-9723	2604	PISTON	000000	000007
8972326601	8-9723	2660	COVER;CYL HD	000000	000009
8972326750	8-9723	2675	COVER; CYL HEAD	000000	000003
8972329350	8-9723	2935	PLUG;GLOW	000000	000000
8972329351	8-9723	2935	PLUG;GLOW	000000	000000
8972329352	8-9723	2935	PLUG;GLOW	000000	000528
8972329570	8-9723	2957	PIPE;OIL INJ PUMP TO C/BL	000000	000007
8972330850	8-9723	3085	BUSHING;SWIVEL LEVER,G	000000	000004
8972330860	8-9723	3086	BUSHING;SWIVEL LEVER,G	000000	000001
8972330900	8-9723	3090	TAPPET; CM/SHF, INJ PUMP	000000	000000
8972331150			PUMP ASM; INJ	000000	000006
8972331160			PACKING ; O RING	000001	000000
8972331170			PACKING ; O RING	000000	000070
8972331190			PAN ASM;OIL W/DRAIN PLUG	000000	000000
8972331260	8-9723	3126	GASKET; SLEEVE NOZZLE HOL	000048	000000
8972331270	8-9723	3127	GASKET; SLEEVE NOZZLE HOL	000000	000000
8972333010	8-9723	3301	GASKET; GEAR CASE TO COVE	000033	000001
8972333020	8-9723	3302	GASKET;OIL COOLER TO C/BL	000000	000000
8972333021	8-9723	3302	GASKET;OIL COOLER TO C/BL	000000	000000
8972333022	8-9723	3302	GASKET;OIL COOLER TO C/BL	000000	000000
8972333023	8-9723	3302	GASKET;OIL COOLER TO C/BL	000046	000002
8972333070	8-9723	3307	HOUSING;BLOWER TURBOCHARG	000000	000000
8972333090	8-9723	3309	CARTRIDGE;TURBO	000000	000002

8972333820	8-9723	3382	BELT; COOLING FAN	000000	000101
8972334110	8-9723	3411	GENERATOR ASM	000000	000000
8972334121	8-9723	3412	GENERATOR ASM	000000	000096
8972334130	8-9723	3413	GENERATOR ASM	000000	000000
8972334180			THERMOSTAT	000000	000000
8972334260	8-9723	3426	HOSE;RUBBER CATCH TANK	000000	000000
8972334271	8-9723	3427	HOSE;RUBR CATCH TANK OUT	000000	000000
8972334290	8-9723	3429	CUP;SEALING CYL HEAD	000000	000008
8972335940	8-9723	3594	PLATE;ADJ	000000	000004
8972335950	8-9723	3595	PLATE;ADJ	000000	000002
8972335981	8-9723	3598	FLYWHEEL	000001	000000
8972336150			GAUGE ASM;LEVEL OIL	000000	000000
8972336151			GAUGE ASM;LEVEL OIL	000000	000000
8972337450	8-9723	3745	INSULATOR	000006	000014
8972345020	8-9723	4502	BOARD METER	000000	000000
8972345040	8-9723	4504	METER ASM;TACHO	000002	000000
8972345060	8-9723	4506	COVER PUMP	000000	000000
8972346580	8-9723	4658	PLUNGER ASM;INJ PUMP	000010	000000
8972347370	8-9723	4737	BEARING; BALL,RR OUTPUT	000000	000000
8972348771			MOLDING; WINDSHIELD	000000	000000
8972348781			MOLDING;WINDSHIELD	000000	000000
8972352610	8-9723	5261	GASKET; CYL HD	000000	000015
8972352650	8-9723	5265	GASKET;CYL HD	000000	000005
8972355530	8-9723	5553	ISTON	000001	000000
8972355560	8-9723	5556	PISTON	000005	000000
8972357880	8-9723	5788	GASKET; INL MANIF TO HD	000000	000000
8972357881	8-9723	5788	GASKET; INL MANIF TO HD	000000	000000
8972357890	8-9723	5789	GASKET; THERMOSTAT HSG	000000	000000
8972357891	8-9723	5789	GASKET; THERMOSTAT HSG	000000	000000
8972357892	8-9723	5789	GASKET; THERMOSTAT HSG	000055	000040
8972360282			GLASS; FRT DOOR	000000	000000
8972371460	8-9723	7146	CLIP; FILLER HOSE	000006	000000
8972371920	8-9723	7192	COOLER ASM;OIL	000000	000000
8972375320	8-9723	7532	SEAL UNIT	000000	000000
8972386270	8-9723	8627	METER ASM; TACHO	000000	000001
8972386310	8-9723	8631	GASKET; GEAR CASE	000000	000000
8972389290	8-9723	8929	HEAD ASM;CYL	000000	000000
8972389293	8-9723	8929	HEAD ASM;CYL	000000	000000
8972389400	8-9723	8940	PIPE; OIL, TURBOCHARGER F	000000	000203
8972389420	8-9723	8942	PIPE; OIL, TURBOCHARGER O	000000	000182
8972389450	8-9723	8945	COOLER ASM; OIL	000000	000000
8972389640	8-9723	8964	CASE;TIMING GEAR	000000	000002
8972389760	8-9723	8976	HOUSING; THERMOSTAT	000000	000000
8972389761	8-9723	8976	HOUSING; THERMOSTAT	000000	000001
8972389773	8-9723	8977	PUMP ASM; INJ	000000	000001
8972389780	8-9723	8978	NOZZLE ASM;INJ	000000	000158
8972389791	8-9723	8979	TURBOCHARGER ASM	000000	000000

8972389792	8-9723	8979	TURBOCHARGER ASM	000000	000000
8972389793	8-9723	8979	TURBOCHARGER ASM	000000	000021
8972389800	8-9723	8980	PIPE;INJ NO 1	000021	000000
8972389810	8-9723	8981	PIPE;INJ NO 2	000028	000000
8972389820	8-9723	8982	PIPE;INJ NO 3	000028	000000
8972389830	8-9723	8983	PIPE;INJ NO 4	000019	000000
8972389910	8-9723	8991	ADAOTER; OIL PRESSURE SW	000003	000000
8972389920	8-9723	8992	HOSE;FEED OIL COOLER	000000	000000
8972389921	8-9723	8992	HOSE;FEED OIL COOLER	000000	000000
8972389930	8-9723	8993	HOSE; FEED, OIL COOLER	000000	000003
8972389940	8-9723	8994	HOSE;RETURN OIL COOLER	000000	000000
8972389941	8-9723	8994	HOSE;RETURN OIL COOLER	000000	000000
8972389950	8-9723	8995	HOSE; RETURN, OIL COOLER	000000	000003
8972389960	8-9723	8996	PIPE;WTR OIL CLR WTR PMP	000000	000000
8972390481	8-9723	9048	VALVE; RELIEF,OIL	000002	000004
8972391590	8-9723	9159	ADAPTER;THERMOMETER	000029	000008
8972391860			GASKET; NOZZLE NIPPLE	000000	000000
8972391870			CAP;RAD	000090	000352
8972393730	8-9723	9373	PUMP ASM;INJ	000000	000000
8972395260	8-9723	9526	HOSE;WATER BY PASS	000000	000007
8972395940	8-9723	9594	PIPE; AIR	000000	000001
8972398071	8-9723	9807	GAUGE; OIL LEVEL	000000	000000
8972398072	8-9723	9807	GAUGE; OIL LEVEL	000000	000012
8972398073	8-9723	9807	GAUGE; OIL LEVEL	000000	000014
8972398100			FILTER, ACL	000000	000000
8972398312	8-9723	9831	FLYWHEEL	000000	000000
8972399090			COVER; CYL HEAD	000000	000010
8972400200	8-9724	0020	CUP; ACL	000000	000002
8972400250	8-9724	0025	ELEMENT KIT;FUEL FILTER	000000	000002
8972401920	8-9724	0192	ACTUATOR; ENG STOP	000000	000001
8972401960	8-9724	0196	CLIP; RUBBER HOSE	000137	000000
8972403680	8-9724	0368	METER; ASM, TACHO	000000	000000
8972403690	8-9724	0369	METER ASM;TACHO	000000	000000
8972403700	8-9724	0370	METER ASM;TACHO	000000	000001
8972403710	8-9724	0371	METER ASM; TACHO	000000	000007
8972403740	8-9724	0374	METER ASM;TACHO	000000	000000
8972404100	8-9724	0410	PIPE;OIL TURBOCHARGER FED	000020	000000
8972404110	8-9724	0411	PIPE;OIL TURBOCHRGR OUT	000000	000003
8972404340	8-9724	0434	DUCT;INL TURBOCHARGER	000000	000002
8972404360			ADAPTER;EXH TURBOCHRGR	000000	000003
8972404380			PROTECTOR;HEAT	000000	000004
8972404390			TURBOCHARGER ASM	000000	000000
8972404391			TURBOCHARGER ASM	000000	000000
8972404401	8-9724	0440	PUMP ASM;INJ	000000	000000
8972404403	8-9724	0440	PUMP ASM;INJ	000000	000006
8972404430	8-9724	0443	MANIFOLD;EXHAUST	000000	000015
8972404440			PIPE;WATER INL	000000	000006

8972405920	8-9724	0592	HOSE;FEED OIL COOLER	000000	000044
8972405930	8-9724	0593	HOSE;RETURN OIL COOLER	000000	000042
8972406041			JPEXTCENTER,BUM	000000	000001
8972406160			HOUSING;THERMOSTAT	000000	000006
8972406750	8-9724	0675	PUMP ASM; FUEL	000000	000020
8972407630	8-9724	0763	CAP;HEATER PIPE	000000	000000
8972407660			PLATE;FRT CYL BLOCK	000000	000002
8972407900	8-9724	0790	SENSOR; REVOLUTION ENG SP	000000	000001
8972409750	8-9724	0975	GASKET; FUEL PIPE	000559	000413
8972410320	8-9724	1032	PUMP ASM;INJ	000000	000000
8972410321	8-9724	1032	PUMP ASM;INJ	000000	000000
8972410322	8-9724	1032	PUMP ASM;INJ	000000	000000
8972410323	8-9724	1032	PUMP ASM;INJ	000000	000000
8972411080			DISC; CLUTCH	000000	000001
8972411110			LEVER;SPD CONT GOV	000000	000000
8972411111	8-9724	1111	LEVER;SPD CONT GOV	000010	000000
8972411631	8-9724	1163	PUMP ASM;INJ	000000	000000
8972411633	8-9724	1163	PUMP ASM;INJ	000000	000002
8972413091			RING; OUTSIDE,3	000000	000000
8972413121			RING; INSIDE,3R	000000	000000
8972413262			BUSHING; CLU HSG	000000	000002
8972413400			PIN; SPRING	000000	000003
8972413410			DETENT; BALL	000000	000022
8972413510	8-9724	1351	SPRING;DEETENT SHIFT ROD	000000	000000
8972413620	8-9724	1362	NOZZLE;INJ	000000	000023
8972413670	8-9724	1367	PULLEY; WATER PUMP	000000	000001
8972414700	8-9724	1470	BELT; COOLING FAN	000000	000002
8972416220	8-9724	1622	BOLT;JOINT	000016	000000
8972447680	8-9724	4768	HOSE; RUBBER, PCV	000003	000000
8972447700	8-9724	4770	SPRING;IDLE	000013	000000
8972447710	8-9724	4771	COVER; CYL HD	000002	000000
8972451820	8-9724	5182	PIN;TURBINE BRG, TURBOCHA	000000	000000
8972451830	8-9724	5183	CLAMP; TURBINE HSG TRBCHR	000000	000000
8972452360	8-9724	5236	COOLER; CHARGE AIR	000000	000000
8972454140	8-9724	5414	PISTON	000000	000017
8972454150	8-9724	5415	PISTON	000000	000006
8972456370	8-9724	5637	NUT;COOLING FAN	000000	000000
8972457210	8-9724	5721	BELT; COOLING FAN	000003	000000
8972457220	8-9724	5722	BELT; COOLING FAN	000000	000005
8972457230	8-9724	5723	BELT;COOLING FAN	000000	000012
8972457680	8-9724	5768	GAUGE;OIL LEVEL	000000	000000
8972457681	8-9724	5768	GAUGE;OIL LEVEL	000000	000041
8972457700	8-9724	5770	PAN ASM; OIL	000000	000001
8972457710			PAN ASM;OIL	000000	000002
8972459160	8-9724	5916	HOSE; WATER,OVERFLOW,RAD	000001	000000
8972459180	8-9724	5918	GUIDE; FAN	000000	000000
8972465100	8-9724	6510	TIMER;GLOW PLUG	000000	000012

8972466290			RING SET;PISTON STD	000000	000009
8972470890			GUIDE;FAN	000000	000000
8972470920	8-9724	7092	STAY;BRKT FAN GUIDE	000000	000000
8972470970	8-9724	7097	GUARD; FAN	000000	000000
8972472902	8-9724	7290	SHAFT;IDLE GEAR	000000	000002
8972473140	8-9724	7314	BRACKET;PUMP	000002	000000
8972476180	8-9724	7618	SEPARATOR; OIL PCV	000000	000000
8972479010	8-9724	7901	FLYWEIGHT	000000	000000
8972479011	8-9724	7901	FLYWEIGHT	000000	000000
8972479890	8-9724	7989	HOSE;RUBBER FUEL LEAK	000000	000003
8972481280			BEARING; ROTOR	000000	000003
8972481611	8-9724	8161	PULLEY; CR/SHF DAMPER	000000	000004
8972481970	8-9724	8197	HOSE; RUBBER BREATHER	000003	000000
8972482980	8-9724	8298	GENERATOR ASM	000000	000000
8972482981	8-9724	8298	GENERATOR ASM	000000	000000
8972482983	8-9724	8298	GENERATOR ASM	000000	000000
8972482985	8-9724	8298	GENERATOR ASM	000000	000003
8972487500			ADAPTER;OIL PRESSRE SWTCH	000331	000000
8972488530	8-9724	8853	MANIFOLD; INLET	000000	000002
8972488770	8-9724	8877	ADAPTER;OIL PRESSRE SWTCH	000024	000000
8972489010			COVER;CYL HEAD	000000	000010
8972489030			COVER CYL HEAD	000000	000000
8972489031			COVER CYL HEAD	000001	000000
8972490410			CRANKSHAFT	000000	000000
8972490411	8-9724	9041	CRANKSHAFT	000000	000001
8972490840	8-9724	9084	PUMP ASM;INJ	000000	000003
8972490950	8-9724	9095	PUMP ASM;INJ	000000	000003
8972495450	8-9724	9545	GASKET,OVERFLO	000011	000000
8972496390	8-9724	9639	CAP;RADIATOR	000090	000114
8972498951	8-9724	9895	PIPE; SUCTION INL	000010	000000
8972499760	8-9724	9976	COUPLING ASM; INJ PUMP	000000	000000
8972499780	8-9724	9978	PUMP ASM;FUEL FEED INJ	000000	000000
8972499790			HOUSING;PUMP FUEL INJ	000000	000004
8972500731	8-9725	0073	COLLAR;DIST EXH MANIF	000664	004195
8972503642			TURBOCHARGER ASM	000000	000001
8972503880	8-9725	0388	BRACKET;COVER	000000	000001
8972503940	8-9725	0394	ACTUATOR; GOV ELEC	000000	000000
8972503941	8-9725	0394	ACTUATOR; GOV ELEC	000000	000000
8972505740	8-9725	0574	COIL; FEILD STARTER	000000	000002
8972510470	8-9725	1047	GASKET; EYE BOLT	004175	003370
8972511840	8-9725	1184	PUM ASM;WATER	000000	000000
8972511841	8-9725	1184	PUM ASM;WATER	000000	000100
8972513340	8-9725	1334	GASKET; INJ NOZZL	000000	000007
8972514190	8-9725	1419	HOUSING; PUMP FUEL INJ	000004	000000
8972514200	8-9725	1420	CAMSHAFT;INJ PUMP	000004	000000
8972514210	8-9725	1421	COVER ASM GOV INJ PUMP	000002	000000
8972514220	8-9725	1422	LEVER ASM;GUIDE GOV	000004	000000

8972514230	8-9725	1423	LEVER ASM;TENSION GOV	000002	000000
8972514240	8-9725	1424	BRACKET;COVER	000000	000000
8972514510			COVERASM;GOV INJ PUMP	000000	000000
8972515350	8-9725	1535	BOLT; THROUGH, STARTER	000000	000000
8972515360	8-9725	1536	SWITCH	000000	000000
8972515361	8-9725	1536	SWITCH	000000	000020
8972516290			NOZZLE;DEFROST	000000	000001
8972517340	8-9725	1734	PLATE; C/BL	000000	000040
8972518470	8-9725	1847	BRACKET; SOLENOID VALVE	000000	000005
8972519100	8-9725	1910	PLUNGER ASM;INJ PUMP	000000	000000
8972519130	8-9725	1913	HOUSING; GOV INJ PUMP	000000	000007
8972519160	8-9725	1916	SHAFT; CONT GOV HSG INJ P	000000	000000
8972519170	8-9725	1917	LEVER;SPD CONT GOV	000000	000000
8972520600	8-9725	2060	PIPE; INJ NO 1	000000	000000
8972520610	8-9725	2061	PIPE; INJ NO 2	000000	000000
8972520620	8-9725	2062	PIPE; INJ NO.3	000000	000000
8972520630	8-9725	2063	PIPE; INJ NO. 4	000000	000000
8972520910	8-9725	2091	CONTROL UNIT;ENG	000000	000000
8972522510			FILTER ASM; FUEL	000000	000010
8972522520			ELEMENT; FUEL FILTER	000000	000000
8972522890			BEARING; IDLE GEAR	000000	000002
8972522900	8-9725	2290	FOOT; ENG	000000	000000
8972523210	8-9725	2321	PIPE;OIL INJ PUMP TO C/BL	000000	000000
8972523211	8-9725	2321	PIPE;OIL INJ PUMP TO C/BL	000000	000001
8972523620	8-9725	2362	PIPE; INL TURBOCHARGER	000002	000000
8972524000			PUMP ASM;WATER	000000	000000
8972524380	8-9725	2438	FLYWHEEL	000000	000000
8972524382	8-9725	2438	FLYWHEEL	000000	000002
8972524690			RING SET;PISTON O.S 0.50	000000	000085
8972524710			RING SET;PISTON O.S 1.00	000000	000100
8972524730			PISTON SET; O.S. 0.25	000000	000131
8972524740			PISTON SET; O.S. 0.50	000000	000980
8972524750			PISTON SET; O.S. 0.75	000000	000077
8972524760			PISTON SET; O.S. 1.00	000000	000068
8972527050			BELT; A/C COMPRESSOR	000000	000050
8972527060			ELEMENT; OIL FILTER	000000	000011
8972527070			ADPTER;OIL PRESSURE SWTCH	000098	000001
8972527080	8-9725	2708	GUARD FAN	000000	000009
8972530230	8-9725	3023	CUP;ACL	000000	000000
8972530280	8-9725	3028	PUMP ASM; WATER W/GASKET	000000	000000
8972530281	8-9725	3028	PUMP ASM; WATER W/GASKET	000000	000063
8972530300	8-9725	3030	REPAIR KIT; WATER PUMP	000000	000008
8972530700	8-9725	3070	BRACKET; OIL SEPARATOR	000000	000000
8972530930	8-9725	3093	BRACKET; FAN GUIDE	000000	000000
8972530940	8-9725	3094	SHAFT; IDLE GEAR	000000	000002
8972531290			COVER; CYL HD	000000	000000
8972531300			CAP;TURBO	000000	000000

8972531310			CAP; PIPE	000000	000000
8972531530	8-9725	3153	GASKT;HOLDER DELIVERY VLV	000264	000000
8972531540	8-9725	3154	GASKET;PLUNGER BARREL SDE	000000	000130
8972533510	8-9725	3351	BREATHER; AIR	000000	000001
8972533620	8-9725	3362	PIPE; WATER BYPASS	000000	000000
8972533621	8-9725	3362	PIPE; WATER BYPASS	000000	000004
8972534060	8-9725	3406	CLIP; FUEL PIPE	000000	000014
8972535500			SEAL; OIL, FRT COVER, T/M	000000	000001
8972535521			SEAL; OIL, RR CO	000000	000000
8972535601			GEAR; DRIVEN, SP	000000	000000
8972535770			RECTIFIER; GEN	000000	000002
8972536180			ABSOBER ASM;	000000	000000
8972539330	8-9725	3933	FAN; COOLING	000000	000001
8972539850	8-9725	3985	PAN ASM; OIL	000000	000000
8972539851	8-9725	3985	PAN ASM; OIL	000000	000001
8972539870	8-9725	3987	PAN ASM; OIL	000000	000002
8972539880	8-9725	3988	PAN ASM; OIL	000000	000002
8972539891	8-9725	3989	PAN ASM; OIL	000000	000002
8972539900	8-9725	3990	PAN ASM; OIL	000000	000041
8972539912	8-9725	3991	PAN ASM; OIL	000000	000008
8972539920	8-9725	3992	PAN ASM; OIL	000000	000000
8972539921	8-9725	3992	PAN ASM; OIL	000000	000000
8972539922	8-9725	3992	PAN ASM; OIL	000000	000005
8972539980			ADAPTER; OIL PRESURE	000091	000000
8972539990			STUD; OIL PAN TO BLOCK	000000	000001
8972541180			PUMP ASM; INJ	000000	000000
8972541181			PUMP ASM; INJ	000000	000000
8972541184			PUMP ASM; INJ	000000	000000
8972541185			PUMP ASM; INJ	000000	000000
8972541450	8-9725	4145	IMPEELER; WATER	000000	000012
8972541480	8-9725	4148	PUMP ASM; WATER	000000	000000
8972541481	8-9725	4148	PUMP ASM; WATER	000000	000000
8972541482	8-9725	4148	PUMP ASM; WATER	000000	000000
8972541483	8-9725	4148	PUMP ASM; WATER	000000	000000
8972541491	8-9725	4149	PUMP ASM; WATER	000000	000004
8972541493	8-9725	4149	PUMP ASM; WATER	000000	000000
8972541890			FAN BELT	000000	000195
8972541900			OIL FILTER CARTRIDGE	000000	000000
8972542960	8-9725	4296	PLUG	000000	000000
8972542961	8-9725	4296	PLUG	000000	000000
8972543050			GASKET; INJECTOR	000000	000000
8972543080			HOSE ; RUBBER CONN	000000	000000
8972543081	8-9725	4308	HOSE ; RUBBER CONN	000000	000001
8972543160	8-9725	4316	RING; SNAP BRG TO TOP GEAR	000006	000003
8972543510	8-9725	4351	PISTON; STANDARD	000000	000000
8972543520	8-9725	4352	PISTON; STANDARD	000000	000000
8972543641	8-9725	4364	HOSE; RUBBER HEAD COVER	000000	000001

8972543692	8-9725	4369	PIPE; VAC BOOST	000001	000000
8972544920			PISTON SET;STD GRADE AX	000000	000013
8972545910			PAN ASM; OIL	000000	000000
8972545920			OIL PAN ASM	000000	000008
8972546850			PIPE; EXH, FRT	000000	000000
8972548130	8-9725	4813	SEAT VLV INSERT	000000	000000
8972548140	8-9725	4814	SEAT; VALVE INSERT	000000	000000
8972548150	8-9725	4815	SEAT; VALVE INSERT	000000	000000
8972549990			FAN BELT	000000	000113
8972550670	8-9725	5067	STOPPER;ENG	000000	000001
8972551190	8-9725	5119	PAN ASM; OIL	000000	000000
8972551290	8-9725	5129	COUPLING ASM; INJ PUMP	000000	000000
8972551540	8-9725	5154	FAN ASM; COOLING	000000	000000
8972551541	8-9725	5154	FAN ASM; COOLING	000000	000011
8972553030			FORK;SHIFT,CLU	000000	000001
8972553130			BLOCK; SHIFT, CL	000000	000008
8972553374			CRANKSHAFT	000000	000000
8972553375	8-9725	5337	CRANKSHAFT	000000	000000
8972556290	8-9725	5629	CLIP; OIL PIPE	000023	000000
8972565320	8-9725	6532	RADIATOR ASM	000000	000000
8972565672	8-9725	6567	HOSE;WATER RAD OUTLET	000000	000001
8972567160	8-9725	6716	RELAY;STARTER	000000	000009
8972567330	8-9725	6733	GASKET; TURBO, OIL FEED	000107	000300
8972567860	8-9725	6786	STUD;TRBCHARG TO ADAPTER	000001	000000
8972567861	8-9725	6786	STUD;TRBCHARG TO ADAPTER	000000	000000
8972567870	8-9725	6787	STUD;EXH MANIFOLD	000000	000003
8972567871	8-9725	6787	STUD;EXH MANIFOLD	000000	000000
8972571240	8-9725	7124	DISC; CLUTCH	000000	000000
8972571920	8-9725	7192	CAP;PIPE	000004	000000
8972572230	8-9725	7223	PIECE; SLIDING	000020	000333
8972572570	8-9725	7257	PIPE;INJ NOZZLE LEAK OFF	000000	000000
8972572960	8-9725	7296	SEAL; OIL, RR COVER	000009	000008
8972573330	8-9725	7333	HOUSING FLYWHEEL	000000	000000
8972573331	8-9725	7333	HOUSING FLYWHEEL	000000	000000
8972573332	8-9725	7333	HOUSING FLYWHEEL	000000	000002
8972574000	8-9725	7400	DISC; CLUTCH	000000	000000
8972574010			FAN;COOLING	000000	000004
8972575770	8-9725	7577	PIPE; OIL TURBOCHARGER	000000	000005
8972578260	8-9725	7826	BOLT; EYE LEAK OFF PIPE	000338	000591
8972578750			PISTON; O/S= 0.25	000000	000012
8972578760	8-9725	7876	PISTON	000000	000027
8972579990	8-9725	7999	CLEANER ASM; AIR	000001	000000
8972580050			BODY ASM; OIL FILTER	000000	000227
8972580521			BRACKET; ACL	000001	000000
8972580530	8-9725	8053	STAY; BRKT, ACL	000001	000000
8972581910	8-9725	8191	BLOCK; SHIFT, CLU	000000	000000
8972581950	8-9725	8195	BEARING; CLU RELEASE	000000	000000

8972584791	8-9725	8479	PIPE;WATER OUTLET	000000	000000
8972584792	8-9725	8479	PIPE;WATER OUTLET	000000	000031
8972587160			ARM; SHIFT,4TH	000000	000000
8972587261			CONTROLLER; MODULE	000000	000001
8972587620	8-9725	8762	BRACKET; INJ PUMP HSG	000000	000001
8972587660	8-9725	8766	WASHER;IDLE GEAR SHAFT	000000	000000
8972587690	8-9725	8769	GENERATOR ASM	000000	000000
8972589830	8-9725	8983	PULLEY; WATER PUMP	000000	000000
8972590180	8-9725	9018	PUMP ASM; WATER,W/GASKET	000000	000000
8972590181	8-9725	9018	PUMP ASM; WATER,W/GASKET	000000	000023
8972592760			SHAFT; IDLE GEAR	000000	000056
8972592990	8-9725	9299	PUMP ASM;INJ	000000	000002
8972599370	8-9725	9937	CUP; ACL	000000	000002
8972599390	8-9725	9939	FILTER; ACL, INNER	000000	000004
8972599730	8-9725	9973	GASKET; CAM END	000000	000038
8972605370	8-9726	0537	SHAFT; ROCKER ARM	000000	000000
8972606490	8-9726	0649	BELT; FAN	000000	000060
8972608560			PIPE; OIL STRAI	000000	000002
8972612170			ELEMENT; OIL FILTER	000000	000000
8972612172			ELEMENT; OIL FILTER	000000	000036
8972615512			HARNESSE;ENG	000000	000000
8972615640			PUMP ASM; INJ	000000	000000
8972615642	8-9726	1564	PUMP ASM; INJ	000000	000000
8972615850			BRACKET; COVER	000000	000005
8972618920	8-9726	1892	PLUG; HOT	000006	000014
8972619820			VALVE; EGR	000000	000000
8972620410	8-9726	2041	ROTOR; GEN	000000	000000
8972620713			HARNESSE ENG. ECGI	000000	000002
8972620721			HARNESSE; ENG, EC	000000	000000
8972620722			HARNESSE; ENG, EC	000000	000000
8972621170	8-9726	2117	GASKET; WATER PIP	000000	000005
8972621450	8-9726	2145	STUD; WATER PUMP	000000	000004
8972621451	8-9726	2145	STUD; WATER PUMP	000000	000000
8972621460	8-9726	2146	STUD; TIMING GEAR CASE	000000	000000
8972621461	8-9726	2146	STUD; TIMING GEAR CASE	000000	000028
8972621470	8-9726	2147	STUD; COVER	000000	000000
8972621471	8-9726	2147	STUD; COVER	000000	000000
8972621480	8-9726	2148	STUD; COVER	000000	000000
8972621481	8-9726	2148	STUD; COVER	000000	000000
8972621660	8-9726	2166	CAMSHAFT	000007	000011
8972628170	8-9726	2817	BUSHING LEVER; MAIN SPR	000000	000001
8972628830	8-9726	2883	BUSHING; GEAR CASE	000000	000000
8972629330			RELAY, HTR & A/	000000	000000
8972629690	8-9726	2969	SWITCH; OVER HEAT WARNING	000000	000006
8972629700	8-9726	2970	SWITCH; OVER HEAT WARNING	000000	000000
8972629750	8-9726	2975	CONTROL UNIT; ENG	000000	000000
8972631910			THERMOSTAT	000000	000000

8972631940			THERMOSTAT	000000	000000
8972633951	8-9726	3395	PUMP ASM; INJ PUMP	000000	000004
8972634250	8-9726	3425	PULLEY ASM; IDLER	000000	000004
8972638010	8-9726	3801	GASKET; HD COVER	000000	000061
8972638011	8-9726	3801	GASKET; HD COVER	000000	000000
8972640110	8-9726	4011	CAP; RAD	000000	000000
8972641760	8-9726	4176	TIMER; QOS	000000	000003
8972646901	8-9726	4690	PACKING; WATER OUTLET PIP	000000	000201
8972647950	8-9726	4795	SEAL;OIL	000000	000002
8972649300	8-9726	4930	FLYWHEEL	000000	000000
8972649302	8-9726	4930	FLYWHEEL	000000	000000
8972649610	8-9726	4961	HOUSING;FLYWHEEL	000000	000000
8972649611	8-9726	4961	HOUSING;FLYWHEEL	000000	000000
8972868930	8-9728	6893	BRACKET; SOLENOID VLV	000000	000000
8972869083			POWER TAKE OFF	000000	000000
8972869400	8-9728	6940	ELEMENT KIT; FUEL FILTER	000000	000021
8972869620	8-9728	6962	BELT COOLING; FAN	000000	000089
8972870011	8-9728	7001	COVER;CYL HD	000000	000000
8972871360	8-9728	7136	HOSE; SEDIMENTER	000000	000000
8972871480			BRACKET; SOLENOID VLV.	000000	000001
8972871976			STEERING UNIT	000000	000000
8972872720	8-9728	7272	PAN ASM; OIL	000000	000002
8972872771	8-9728	7277	HOSE; WATER, BY-PASS	000000	000000
8972873810			BRACKET	000000	000000
8972873820	8-9728	7382	PIPE; WATER OUTLET	000000	000006
8972873990	8-9728	7399	PISTON; STANDARD	000000	000000
8972874000	8-9728	7400	PISTON; STANDARD	000000	000000
8972875970	8-9728	7597	GENERATOR ASM	000000	000009
8972876570	8-9728	7657	CAMSHAFT	000000	000000
8972876571	8-9728	7657	CAMSHAFT	000000	000000
8972876940			GASKET; GEAR CA	000000	000000
8972876960			FAN; COOLING	000000	000000
8972876961	8-9728	7696	FAN; COOLING	000000	000008
8972882500	8-9728	8250	PISTON	000000	000001
8972882510	8-9728	8251	PISTON	000000	000000
8972885510	8-9728	8551	BUSH; CONN ROD	000000	000000
8972887540	8-9728	8754	SWITCH; OIL PRESSURE	000000	000000
8972888850	8-9728	8885	HOSE; FEED, OIL COOLER	000000	000003
8972888860	8-9728	8886	HOSE; RETURN, OIL COOLER	000000	000000
8972888870	8-9728	8887	PUMP ASM; INJ	000000	000000
8972888871	8-9728	8887	PUMP ASM; INJ	000000	000000
8972888880	8-9728	8888	PLATE; ADJUSTMENT	000000	000015
8972891170	8-9728	9117	COVER;UPR SEDIMENTER ASM	000000	000000
8972891180	8-9728	9118	CASE;FUEL SEDIMENTER	000000	000000
8972891250	8-9728	9125	FLOAT; SEDIMENTER	000000	000000
8972891310	8-9728	9131	RING;BODY TO CASE	000000	000000
8972891320	8-9728	9132	PLUG; DRAIN FUEL FILTER	000000	000007

8972891330	8-9728	9133	GASKET; DRAIN PLUG	000004	000004
8972891340	8-9728	9134	PLATE;BAFFLE	000000	000000
8972891360	8-9728	9136	HOSE;SEDIMENTER	000000	000000
8972892600	8-9728	9260	DUSCT;WTR TH/HSG-EXP TANK	000005	000000
8972892610	8-9728	9261	DUCT; WATER,SUCTION	000000	000001
8972892630	8-9728	9263	ROD ASM; CONN	000000	000000
8972892631	8-9728	9263	ROD ASM; CONN	000000	000000
8972892640	8-9728	9264	BUSHING; CONN ROD	000000	000000
8972892641	8-9728	9264	BUSHING; CONN ROD	000000	000029
8972892642	8-9728	9264	BUSHING; CONN ROD	000000	000000
8972892890	8-9728	9289	CONTROL UNIT; ENG	000000	000000
8972892930	8-9728	9293	NOZZLE ASM; INJECTION	000004	000028
8972894430	8-9728	9443	TURBOCHARGER ASM	000000	000001
8972895430	8-9728	9543	PACKING;WATER PUMP BLOCK	000000	000203
8972896230			PLATE	000000	000000
8973000022	8-9730	0002	PUMP ASM; INJ	000000	000004
8973001640			KEY;BLANK	000000	000007
8973002540	8-9730	0254	FILTER & COOLER ASM;OIL	000001	000000
8973002690			GEAR; SIDE (Z=20)	000000	000000
8973003320	8-9730	0332	STAY; HOSE FIXING	000001	000001
8973004200			STEERING UNIT	000000	000000
8973004480	8-9730	0448	GEAR; IDLE	000000	000000
8973006770	8-9730	0677	O-RING;COVER-BLOCK 3KC1	000000	000003
8973007870			THERMOSTAT	000000	000000
8973007871			THERMOSTAT	000000	000000
8973007872	8-9730	0787	THERMOSTAT	000248	000118
8973007892			THERMOSTAT	000000	000000
8973007900			THERMOSTAT	000000	000000
8973007901	8-9730	0790	THERMOSTAT	000000	000000
8973007902	8-9730	0790	THERMOSTAT	000233	000165
8973007930	8-9730	0793	GASKET; THERMOSTAT HSG	000252	001935
8973008950	8-9730	0895	PAN ASM; OIL	000000	000013
8973009722	8-9730	0972	GEAR; CM/SHF	000000	000002
8973009860	8-9730	0986	SHAFT; MAIN; TRANS	000000	000004
8973012080			HOSE; PCV	000000	000000
8973018380	8-9730	1838	GASKET; INLET MAINFOLD	000000	000117
8973021730			LINER; FENDER	000000	000001
8973022030	8-9730	2203	SWITCH;OVER HEAT WARNING	000000	000020
8973022910			CLUTCH; COOLING	000000	000000
8973023880	8-9730	2388	CLEANER ASM; AIR	000000	000000
8973026351			SHOE; BRK RR	000000	000000
8973026361			SHOE; BRK, RR	000000	000000
8973026371			SHOE; BRK, RR	000000	000000
8973026870			GEAR; IDLER, PTO	000000	000002
8973026880	8-9730	2688	GEAR; PTO	000000	000002
8973028100			BUSHING; RUBBER	000000	000050
8973030040	8-9730	3004	TUBE;GUIDE,OIL LEVEL GAUG	000000	000017

8973030491			RUBBER; FRT, MUD	000000	000001
8973032250	8-9730	3225	NUT;CAM GEAR FIX	000000	000019
8973034110	8-9730	3411	CASE; TIMING GEAR	000000	000000
8973034111	8-9730	3411	CASE; TIMING GEAR	000000	000000
8973034112	8-9730	3411	CASE; TIMING GEAR	000000	000000
8973034200	8-9730	3420	CASE; TIMING GEAR	000000	000000
8973034201	8-9730	3420	CASE; TIMING GEAR	000000	000000
8973034202	8-9730	3420	CASE; TIMING GEAR	000000	000001
8973034540	8-9730	3454	LEVER; FUEL CUT	000000	000002
8973034660	8-9730	3466	ANGLEICH KIT	000001	000000
8973035640	8-9730	3564	BEARING; IDLE GEAR	000000	000004
8973035650	8-9730	3565	BEARING; GEAR	000000	000003
8973035772	8-9730	3577	LEVER; GUIDE	000000	000001
8973035802	8-9730	3580	LEVER; FLOATING	000000	000005
8973035830	8-9730	3583	PIECE; GUIDE	000000	000000
8973036670	8-9730	3667	SHAFT; SHIFTER	000000	000003
8973036820	8-9730	3682	PUMP ASM; INJ	000000	000000
8973040440	8-9730	4044	CAMSHAFT	000000	000000
8973040660	8-9730	4066	SEAL; OIL, QUAD BOX	000000	000001
8973040680	8-9730	4068	SEAL; OLI, QUAD BOX	000000	000007
8973041230	8-9730	4123	PUMP ASM; INJ	000000	000000
8973041231	8-9730	4123	PUMP ASM; INJ	000000	000003
8973046981			CAMSHAFT	000000	000000
8973046982			CAMSHAFT	000000	000000
8973049680	8-9730	4968	GAUGE; OIL LEVEL	000000	000000
8973049681	8-9730	4968	GAUGE; OIL LEVEL	000000	000030
8973050810	8-9730	5081	SPACER	000000	000003
8973051770	8-9730	5177	LAMP	000000	000022
8973052040	8-9730	5204	GENERATOR ASM	000001	000000
8973052250	8-9730	5225	HOSE; RUBBER BREATHER	000000	000000
8973054511	8-9730	5451	HOUSING; FLYWHEEL	000000	000002
8973059430	8-9730	5943	PIPE; ASM; FUEL OVERFLOW	000000	000000
8973060250	8-9730	6025	GASKET; INL PIPE TO INL C	000000	000000
8973060251	8-9730	6025	GASKET; INL PIPE TO INL C	000076	000152
8973060446	8-9730	6044	PUMP ASM; INJ	000000	000000
8973060447	8-9730	6044	PUMP ASM; INJ	000000	000000
8973060448	8-9730	6044	PUMP ASM; INJ	000000	000000
8973060449	8-9730	6044	PUMP ASM; INJ	000000	000029
8973060580	8-9730	6058	LEVER; ENG STOP, GOV	000000	000000
8973060610	8-9730	6061	BRACKET; COVER	000000	000004
8973060632	8-9730	6063	RAIL ASM; COMMON	000000	000000
8973060633	8-9730	6063	RAIL ASM; COMMON	000040	000127
8973060740	8-9730	6074	BRACKET; INJ NOZZLE	000000	000000
8973060741	8-9730	6074	BRACKET; INJ NOZZLE	000000	000000
8973060754			PIPE; INJ NO.1	000000	000000
8973060763	8-9730	6076	PIPE; INJ NO.2	000000	000000
8973060773	8-9730	6077	PIPE; INJ NO.3	000000	000000

8973060783			PIPE; INJ NO.4	000000	000000
8973060810	8-9730	6081	PIPE; FUEL,NOZZLE LEAK OF	000011	000012
8973060842	8-9730	6084	BRACKET; INJ PIPE	000000	000004
8973060970	8-9730	6097	PIPE;WATER	000000	000000
8973061131	8-9730	6113	SENSOR; TACHOMETER	000014	000066
8973064211	8-9730	6421	ARM; ROCKER (INLET)	000000	000000
8973064212	8-9730	6421	ARM; ROCKER (INLET)	000000	000000
8973064213	8-9730	6421	ARM; ROCKER (INLET)	000066	000046
8973064241	8-9730	6424	ARM; ROCKER (EXHAUST)	000000	000000
8973064242	8-9730	6424	ARM; ROCKER (EXHAUST)	000000	000000
8973064243	8-9730	6424	ARM; ROCKER (EXHAUST)	000080	000067
8973064262	8-9730	6426	SHAFT; ROCKER ARM	000000	000000
8973068770	8-9730	6877	PIPE;OIL DRAIN,TURBOCHATG	000000	000002
8973070610	8-9730	7061	SPRING; RETURN CONT	000000	000000
8973070752	8-9730	7075	STUD; EXH MANIF	000023	000000
8973072700	8-9730	7270	CAP; SURGE TANK	000000	000015
8973073510	8-9730	7351	PULLEY;CR/SHF DIAMPER	000000	000001
8973074042			GEAR INJ;PUMP & VALVE	000000	000000
8973074044			GEAR INJ;PUMP & VALVE	000000	000001
8973074150	8-9730	7415	FLYWEIGHT	000000	000000
8973074671	8-9730	7467	COVER; ANGLEICH	000000	000000
8973076740	8-9730	7674	SHAFT; ROCKER ARM	000000	000004
8973089880	8-9730	8988	GASKET;DRAIN PLUG&CONNECT	000000	000000
8973094050	8-9730	9405	COOLER ASM; OIL	000000	000001
8973095320			RING; BLOCK, TOP	000000	000000
8973095500			FLYWEIGHT	000000	000000
8973096200			BRACKET; DISTR HEAD	000000	000011
8973096710	8-9730	9671	FLYWEIGHT	000000	000039
8973098570	8-9730	9857	FOOT; ENG	000000	000000
8973099270			ELEMENT; OIL FILTER	000000	000011
8973099420	8-9730	9942	NUT; EGR PIPE	000000	000038
8973101221	8-9731	0122	SHAFT ASM; IDLE GEAR	000000	000003
8973101222	8-9731	0122	SHAFT ASM; IDLE GEAR	000000	000000
8973101251	8-9731	0125	PIPE ASM; OIL JET	000000	000006
8973101771	8-9731	0177	COLLAR; THRUST	000000	000009
8973102542	8-9731	0254	HANGER; ENG, FRT	000000	000005
8973102750	8-9731	0275	DRIVEN PLATE	000001	000001
8973103510	8-9731	0351	ROD ASM; CONN	000000	000017
8973103520	8-9731	0352	BUSH; CONN ROD	000000	000070
8973103530	8-9731	0353	ROD ASM; CONN	000000	000000
8973103531	8-9731	0353	ROD ASM; CONN	000000	000001
8973103540	8-9731	0354	BUSHING; CONN ROD	000000	000073
8973104521	8-9731	0452	FLYWEIGHT	000000	000002
8973104950	8-9731	0495	COVER; INL	000001	000003
8973104981			BRACKET; EGR	000000	000000
8973104982	8-9731	0498	BRACKET; EGR	000000	000004
8973104991			BRACKET; EGR	000000	000000

8973105600	8-9731	0560	PAN ASM; OIL	000000	000001
8973105620	8-9731	0562	SENSOR; OIL LEVEL	000000	000004
8973105630	8-9731	0563	GUIDE; FAN	000000	000000
8973105641	8-9731	0564	GUARD; FAN	000000	000000
8973105690	8-9731	0569	BELT;COOLING FAN	000000	000102
8973105700			GASKET; CYL HD	000000	000000
8973105710			GASKET; CYL HD	000000	000000
8973105720			GASKET; CYL HD	000000	000001
8973107120	8-9731	0712	BRACKET; FAN GUIDE	000000	000000
8973107810	8-9731	0781	PIPE;INJ NOZZLE LEAK OFF	000000	000001
8973109140	8-9731	0914	PIPE;INJ NOZZLE LEAK OFF	000000	000001
8973109890			CYLINDER;SLAVE,CLU	000000	000001
8973112500	8-9731	1250	PUMP ASM; INJ	000000	000000
8973112541	8-9731	1254	SEDIMENTER; FUEL	000000	000000
8973112542	8-9731	1254	SEDIMENTER; FUEL	000000	000013
8973113736	8-9731	1373	PUMP;ASM FUEL,SUPPLY	000000	000000
8973113737	8-9731	1373	PUMP;ASM FUEL,SUPPLY	000000	000000
8973113738	8-9731	1373	PUMP;ASM FUEL,SUPPLY	000000	000000
8973113739	8-9731	1373	PUMP;ASM FUEL,SUPPLY	000000	000000
8973113780	8-9731	1378	SEAT; VLV INSERT	000007	000007
8973113790	8-9731	1379	SEAT; VLV INSERT	000010	000004
8973116290	8-9731	1629	PIPE; WATER INL	000000	000000
8973116830	8-9731	1683	BOLT EYE;NOZZLE HOLDER	000000	000000
8973119760	8-9731	1976	VALVE;PISTON COOLING	000000	000000
8973119761	8-9731	1976	VALVE;PISTON COOLING	000000	000000
8973120670	8-9731	2067	GASKET; INL MANIF	000000	000000
8973120671	8-9731	2067	GASKET; INL MANIF	000000	000000
8973120690	8-9731	2069	HANGER; ENG,RR	000000	000000
8973121081	8-9731	2108	SENSOR; CRANKSHAF	000031	000000
8973121322	8-9731	2132	PIPE; OIL,OIL JET	000000	000000
8973121323	8-9731	2132	PIPE; OIL,OIL J	000003	000000
8973121560	8-9731	2156	GASKET; PUMP TO C	000021	000055
8973122212	8-9731	2221	GASKET; GEAR CASE	000001	000000
8973123152	8-9731	2315	SHAFT; IDLE GEAR	000004	000000
8973123221	8-9731	2322	SHAFT; IDLE GEAR	000002	000001
8973123280	8-9731	2328	PIVOT; CHAIN LEVE	000002	000000
8973123301	8-9731	2330	SPROCKET; I/PUMP	000000	000001
8973123310	8-9731	2331	SPROCKET; IDLE	000000	000000
8973123311	8-9731	2331	SPROCKET; IDLE	000004	000003
8973123360	8-9731	2336	GASKET; CHAIN TEN	000002	000000
8973123370	8-9731	2337	ROTOR; CRANK SENS	000000	000004
8973124232	8-9731	2423	NUT; SPROCKET	000046	000000
8973125093	8-9731	2509	PIPE; INJ,C/R	000125	000068
8973125930	8-9731	2593	PINION,OIL PUMP GEAR	000000	000004
8973127350			NOZZLE; INJ	000000	000005
8973127400			ELEMENT;OIL FI	000000	000147
8973127570	8-9731	2757	BAR;ZINC,HEAT EXCHANGER	000000	000000

8973127580	8-9731	2758	ZINC BAR	000000	000015
8973131560	8-9731	3156	GASKET; COOLER TO BRKT	000000	000002
8973132020	8-9731	3202	PLUG; OIL COOLER	000002	000000
8973132340			BELT; COOLING FAN	000000	000000
8973133590	8-9731	3359	LEVER ASM; GUIDE, GOV	000000	000000
8973137970			ADJUSTER T=2.35 3KR1	000000	000002
8973137980			ADJUSTER T=2.375	000000	000001
8973137990	8-9731	3799	8-97313-799-040 3KR1	000000	000002
8973138010	8-9731	3801	ADJUSTER T=2.450 3RK1	000000	000000
8973138020	8-9731	3802	ADJUSTER T=2.475	000000	000001
8973138030	8-9731	3803	ADJUSTER T=2.50 3KR1	000000	000001
8973138040	8-9731	3804	ADJUSTER; VLV G	000000	000001
8973138050			ADJUSTER, T=2.55	000000	000010
8973138060			ADJUSTER T=2.575	000000	000001
8973138070	8-9731	3807	ADJUSTER T=2.60 3RK1	000000	000005
8973138080	8-9731	3808	ADJUSTER T=2.625	000000	000002
8973138090	8-9731	3809	ADJUSTER T=2.65	000000	000002
8973138100			ADJUSTER; T=2.675	000000	000002
8973138110			ADJUSTER T=2.70 3RK1	000000	000003
8973138120	8-9731	3812	ADJUSTER T=2.725 3KR1	000000	000002
8973138130	8-9731	3813	ADJUSTER T=2.75 3KR1	000000	000000
8973138140	8-9731	3814	ADJUSTER T=2775	000000	000001
8973138160	8-9731	3816	ADJUSTER T = 3.25 3KR1	000000	000000
8973138180	8-9731	3818	ADJUSTER T=3.30 3KR1	000000	000000
8973138210	8-9731	3821	ADJUSTER T = 3.375	000000	000000
8973138740	8-9731	3874	HOUSING; THERMOSTAT	000000	000001
8973142270	8-9731	4227	BELT; COOLING FAN	000000	000248
8973142770	8-9731	4277	CONTROL UNIT; SRS	000000	000000
8973148250	8-9731	4825	NOZZLE ASM; INJ	000000	000000
8973148260	8-9731	4826	NOZZLE; INJECTION	000000	000078
8973148610	8-9731	4861	PIPE ; FUEL SUCTION	000000	000000
8973148951	8-9731	4895	PUMP ASM; INJ	000000	000000
8973148952	8-9731	4895	PUMP ASM; INJ	000000	000003
8973148962	8-9731	4896	PUMP ASM; INJ	000000	000040
8973148971	8-9731	4897	NOZZLE ASM; INJ	000000	000072
8973149030	8-9731	4903	PULLEY; CR/SHF	000000	000004
8973149060	8-9731	4906	PULLEY; CR/SHF	000000	000016
8973149130	8-9731	4913	GASKET; OIL PAN TO C/BL	000000	000005
8973149140	8-9731	4914	GASKET; OIL PAN TO C/BL	000000	000169
8973149170	8-9731	4917	PIPE; AIR	000000	000000
8973149182	8-9731	4918	BRACKET; ACL	000000	000003
8973149230	8-9731	4923	COVER; CYL HD	000000	000000
8973149280	8-9731	4928	BRACKET; EXH SILENCER	000000	000000
8973149410	8-9731	4941	BAND; EXHAUST SILENCER	000000	000010
8973151530	8-9731	5153	BELT; COOLING FAN	000000	000001
8973152301	8-9731	5230	PIPE ASM; LEAK OF	000000	000000
8973152302	8-9731	5230	PIPE ASM; LEAK OF	000000	000014

8973152311	8-9731	5231	PIPE ASM; LEAK OF	000000	000000
8973152312	8-9731	5231	PIPE ASM; LEAK OF	000000	000036
8973152860	8-9731	5286	CLIP; LEAK OFF PI	000000	000185
8973160180			VALVE; EGR	000000	000000
8973160290			FLYWHEEL	000000	000000
8973160950			LAMP ASM; HEAD	000000	000000
8973166150	8-9731	6615	BOLT; SENSOR	000023	000092
8973166301	8-9731	6630	CASE ASM; SEDIMENTER	000000	000003
8973168950	8-9731	6895	STARTER ASM	000000	000002
8973169661			ROD; TRACK, CENT	000000	000004
8973169681			R O D	000000	000000
8973169730			BRACKET;SOLENOID, VALVE	000000	000000
8973169834	8-9731	6983	PLUG; OIL PUMP	000001	000002
8973170150	8-9731	7015	GASKET; COVER	000000	000017
8973170170	8-9731	7017	COVER; ADAPTOR	000000	000000
8973170180	8-9731	7018	GASKET; COVER GEAR CASE P	000000	000001
8973175560			GASKET; CYL HD	000000	000002
8973175570			GASKET; CYL HD	000000	000002
8973178020	8-9731	7802	ACTUATOR; GOV,ELECTRIC	000000	000000
8973183720	8-9731	8372	FLYWEIGHT	000000	000000
8973186150	8-9731	8615	COVER; ANGLEICH	000000	000001
8973186430	8-9731	8643	PAN ASM; OIL	000000	000016
8973186470	8-9731	8647	PIPE ASM; FUEL OVERFLOW	000001	000001
8973186480	8-9731	8648	BRACKET; ENG STOPPER	000000	000000
8973186500	8-9731	8650	ADAPTER; EXH, TURBOCHARGE	000000	000001
8973186510	8-9731	8651	TURBOCHARGER ASM	000000	000000
8973186511	8-9731	8651	TURBOCHARGER ASM	000000	000000
8973186512	8-9731	8651	TURBOCHARGER ASM	000000	000016
8973186530	8-9731	8653	HOUSING; THERMOSTAT	000000	000000
8973186531	8-9731	8653	HOUSING; THERMOSTAT	000000	000000
8973186840	8-9731	8684	SENSOR; PRESS	000000	000000
8973186841	8-9731	8684	SENSOR; PRESS	000000	000000
8973186910	8-9731	8691	LIMITER; FUEL	000025	000452
8973187100	8-9731	8710	GAUGE; OIL LEVEL	000000	000016
8973187321	8-9731	8732	PIPE; BYPASS	000001	000000
8973187322	8-9731	8732	PIPE; BYPASS	000000	000001
8973187612	8-9731	8761	PUMP ASM; INJ	000000	000000
8973189260			FILTER ASM; OIL	000000	000009
8973189261			FILTER ASM; OIL	000000	000000
8973189270			COVER; OIL FILTER	000000	000000
8973189271	8-9731	8927	COVER; OIL FILTER	000000	000000
8973189300	8-9731	8930	BRACKET; OIL FILLER	000000	000047
8973190210	8-9731	9021	ADAPTER; FUEL PIPE	000010	000000
8973193000			CYLINDER; WHEEL	000000	000000
8973201070	8-9732	0107	TUBE; GUIDE OIL LEVEL GAU	000007	000000
8973202040	8-9732	0204	PLUG; INL PIPE	000000	000002
8973203550			DISC; CLUTCH	000000	000000

8973203630			GAUGE;OIL LEVEL	000001	000010
8973203640	8-9732	0364	GAUGE; OIL LEVEL	000008	000000
8973205470	8-9732	0547	FLYWHEEL	000000	000000
8973210240			DISC; CLUTCH	000000	000002
8973213352	8-9732	1335	SHIFTER, GOV	000000	000002
8973213481	8-9732	1348	SPRING; MAIN LEVER	000000	000005
8973214990	8-9732	1499	GASKET; OIL PAN TO C/BL	000000	000006
8973215000	8-9732	1500	GASKET; OIL PAN TO C/BL	000001	000002
8973215080	8-9732	1508	PUMP ASM; WATER	000000	000000
8973215081	8-9732	1508	PUMP ASM; WATER	000000	000000
8973215082	8-9732	1508	PUMP ASM; WATER	000000	000000
8973215083	8-9732	1508	PUMP ASM; WATER	000000	000043
8973215110	8-9732	1511	GASKET; PUMP	000000	000008
8973215722	8-9732	1572	FLYWEIGHT	000000	000006
8973215751	8-9732	1575	SLEEVE; FLYWEIGHT	000000	000000
8973215752	8-9732	1575	SLEEVE; FLYWEIGHT	000000	000007
8973215782	8-9732	1578	GEAR; INJ PUMP & VLV	000000	000002
8973223380			VALVE;DELIVERY,INJ. PUMP	000000	000000
8973225500	8-9732	2550	GASKET; CYL. HEAD	000000	000000
8973226800	8-9732	2680	BELT; COOLING FAN	000000	000030
8973227300	8-9732	2730	BRACKET; PUMP	000000	000000
8973228750	8-9732	2875	SILENCER ASM;EXH	000000	000007
8973228760	8-9732	2876	SILENCER; ASM EXH	000000	000006
8973228790	8-9732	2879	BRACKET;EXH SILENCER	000000	000004
8973228812	8-9732	2881	BRACKET; EXH SILENCER	000000	000010
8973230190	8-9732	3019	RAIL ASM; COMMON	000000	000000
8973233140	8-9732	3314	PUMP ASM; INJ	000000	000000
8973235730	8-9732	3573	FOOT; ENG	000000	000000
8973238371	8-9732	3837	PUMP ASM; INJ	000000	000000
8973238372	8-9732	3837	PUMP ASM; INJ	000000	000004
8973241940	8-9732	4194	BRACKET; COMMON RAIL	000000	000008
8973241950	8-9732	4195	BRACKET; FUEL PIPE	000000	000008
8973243720	8-9732	4372	OIL PRESSURE SWITCH,WARNI	000000	000004
8973243730	8-9732	4373	SWITCH;OIL PRESSURE WARNI	000000	000041
8973243860	8-9732	4386	FILTER ASM; OIL	000000	000000
8973243861	8-9732	4386	FILTER ASM; OIL	000000	000369
8973243870	8-9732	4387	PIPE; WATER OUTLET	000000	000005
8973244620	8-9732	4462	CONTROL UNIT; ENG	000005	000000
8973244630	8-9732	4463	CONTROL UNIT; ENGINE	000000	000000
8973244720	8-9732	4472	GEAR; CM/SHF	000000	000006
8973247580	8-9732	4758	BRACKET;FAN GUIDE	000003	000000
8973250510	8-9732	5051	RUBBER;MTG,HD COVER,OUTER	000049	000014
8973251530	8-9732	5153	BEARING;PILOT, TOP GEAR SH	000000	000000
8973251570	8-9732	5157	PUMP ASM; OIL	000000	000015
8973251740	8-9732	5174	GAUGE; OIL LEVEL	000000	000016
8973255380	8-9732	5538	PIPE; OIL	000000	000002
8973257221	8-9732	5722	PULLEY;CR/SHF DAMPER	000000	000000

8973259120	8-9732	5912	CONTROL UNIT: ENG	000000	000013
8973261600			BOLT;JOINT,FUEL FILTER	000038	000002
8973262510	8-9732	6251	GASKET; HD TO COVER	000000	000034
8973263750	8-9732	6375	BRACKET;FAN GUIDE	000000	000004
8973263890	8-9732	6389	STARTER ASM	000000	000000
8973263891	8-9732	6389	STARTER ASM	000000	000003
8973264660			GASKET;TURBOCHARGER TO E	000000	000000
8973266820			FENDER; FRT	000000	000001
8973273131	8-9732	7313	PLATE; ADJ., GENERATOR	000000	000000
8973276000	8-9732	7600	PANEL;SW	000000	000000
8973276001	8-9732	7600	PANEL;SW	000000	000000
8973276010	8-9732	7601	BOX;SW	000000	000000
8973276020	8-9732	7602	BOX; SWITCH	000000	000008
8973279090	8-9732	7909	BRACKET; FUEL FILTER	000000	000000
8973279100	8-9732	7910	PIPE; FUEL, FEED PUMP TO	000000	000000
8973279160	8-9732	7916	GASKET; INJ NOZZLE	000000	000000
8973279400	8-9732	7940	HOSE;PCV	000000	000000
8973280580	8-9732	8058	SENSOR ASM	000000	000004
8973280581	8-9732	8058	SENSOR; VEHICLE	000000	000000
8973281610			SPACER; FAN	000000	000005
8973282550	8-9732	8255	CLIP; FUEL PIPE	000000	000000
8973282560	8-9732	8256	FAN; COOLING	000000	000000
8973282561	8-9732	8256	FAN; COOLING	000000	000004
8973283750	8-9732	8375	PLUNGER ASM; INJ PUMP	000000	000000
8973286120	8-9732	8612	GEAR; CR/SHF	000000	000014
8973286470	8-9732	8647	SEAL; VLV GUIDE	000000	001646
8973288282	8-9732	8828	GASKET; GEAR CASE	000003	000000
8973288590	8-9732	8859	VALVE ASM;RELIEF	000000	000000
8973288661	8-9732	8866	GASKET; CYL HD	000000	000000
8973288662	8-9732	8866	GASKET; CYL HD	000030	000000
8973288671	8-9732	8867	GASKET; CYL HD	000000	000000
8973288672	8-9732	8867	GASKET; CYL HD	000012	000000
8973288681	8-9732	8868	GASKET; CYL HD	000000	000000
8973288682	8-9732	8868	GASKET; CYL HD	000005	000001
8973288864	8-9732	8886	PUMP ASM; INJ	000000	000000
8973288865	8-9732	8886	PUMP ASM; INJ	000086	000513
8973288980	8-9732	8898	SENSOR; PRESSURE,FUEL	000013	000017
8973291291	8-9732	9129	DOWEL; CAP,CM/SHF	000000	000045
8973292080	8-9732	9208	NOZZLE KIT;INJ	000000	000000
8973293320			PAD KIT; CALIPER	000000	000000
8973295680	8-9732	9568	SOLENOID ASM; ENG STOP	000000	000293
8973296080			STUD;EXH FIX	000000	000000
8973296170	8-9732	9617	PLUG;OIL GALLERY SIDE	000000	000006
8973296180	8-9732	9618	VALVE ASM;CHECK,OIL JET	000000	000074
8973296210			PLUG; DRAIN, OIL	000199	000343
8973296220	8-9732	9622	NUT;OIL PAN FIX	000000	000000
8973296230	8-9732	9623	IDUG;OIL RETURN	000030	000000

8973296260	8-9732	9626	BOLT;BRKT,F/PUMP FIX	000000	000099
8973296270	8-9732	9627	CLIP;R/HOSE	000000	000060
8973296310	8-9732	9631	CLIP;HARNESS, FIX	000067	000000
8973296470	8-9732	9647	BRACKET;CONT UNIT	000003	000000
897329703C			CORE;INJ 04I-07 4HK1	007064	000222
8973297030	8-9732	9703	NOZZLE ASM; INJ	000000	000000
8973297031	8-9732	9703	NOZZLE ASM; INJ	000000	000000
8973297032	8-9732	9703	NOZZLE ASM; INJ	000000	000000
8973297033	8-9732	9703	NOZZLE ASM; INJ	000000	000000
8973297035	8-9732	9703	NOZZLE ASM; INJ	000000	000000
8973299110	8-9732	9911	ELEMENT	000000	000019
8973299400	8-9732	9940	COUPLING ASM; INJ PUMP	000000	000000
8973301180	8-9733	0118	CLIP; INJ PIPE	000000	000000
8973301181	8-9733	0118	CLIP; INJ PIPE	000029	000000
8973301190	8-9733	0119	CLIP; INJ PIPE	000000	000000
8973301191	8-9733	0119	CLIP; INJ PIPE	000057	000091
8973311371	8-9733	1137	GASKET;EYE BOLT,OIL PIPE	001149	000164
8973313590			GASKET; HD TO COVER	000000	000000
8973313591	8-9733	1359	GASKET; HD TO COVER	000204	001002
8973313600			GASKET; COVER	000000	000000
8973313601	8-9733	1360	GASKET; COVER	000046	000173
8973313620			CASE; CYL HEAD-C/H COVER	000000	000004
8973313621	8-9733	1362	CASE; CYL HEAD-C/H COVER	000000	000000
8973315931			GLASS; WINDSHIELD	000000	000000
8973315980	8-9733	1598	PUMP ASM; INJ	000000	000000
8973316130			GRILLE; RAD	000000	000000
8973316311	8-9733	1631	GASKET; GEAR CASE	000000	000000
8973316312	8-9733	1631	GASKET; GEAR CASE	000015	000000
8973316321	8-9733	1632	GASKET; GEAR CASE	000000	000000
8973316322	8-9733	1632	GASKET; GEAR CASE	000001	000005
8973318511			EXTENSION; FRT	000000	000000
8973318521			EXTENSION; FRT	000000	000000
8973318530	8-9733	1853	CRANKSHAFT	000000	000001
8973319360			ANTENNA	000000	000003
8973319470	8-9733	1974	GASKET; DPD	000011	000031
8973321330			HARNESS; ENG	000000	000000
8973321331			HARNESS; ENG	000000	000000
8973321332	8-9733	2133	HARNESS; ENG	000000	000000
8973321333	8-9733	2133	HARNESS; ENG	000004	000007
8973323582	8-9733	2358	CONNECTOR; GLOW PLUG	000000	000013
8973327260			CAP; WHEEL	000000	000000
8973333610			PUMP; WATER	000000	000011
8973333611			PUMP; WATER	000000	000000
8973333870	8-9733	3387	FAN;COOLING	000000	000000
8973333880	8-9733	3388	CLUTCH;COOLING FAN	000000	000000
8973333950	8-9733	3395	PUMP ASM; WATER, W/GASKET	000000	000000
8973333960	8-9733	3396	REPAIR KIT; WATER PUMP	000000	000002

8973334120	8-9733	3412	PLUG ASM; HOT	000000	000107
8973334880	8-9733	3488	BLOCK; SHIFT, CLU	000007	000000
8973338770			COOLER ASM; OIL	000000	000000
8973341000	8-9733	4100	CORE; OIL COOLER	000000	000000
8973341001	8-9733	4100	CORE; OIL COOLER	000000	000000
8973341002	8-9733	4100	CORE; OIL COOLER	000039	000041
8973344140	8-9733	4414	BRACKET; ROCKER ARM SHAFT	000000	000001
8973494020	8-9734	9402	STARTER - 4JG1-TPD02	000000	000000
8973494021	8-9734	9402	STARTER - 4JG1-TPD02	000000	000026
8973494160	8-9734	9416	GASKET HEAD COVER	000000	000000
8973494161	8-9734	9416	GASKET HEAD COVER	000000	000700
8973494230			CYLINDER; SLAVE	000000	000003
8973494240			CYLINDER; SLAVE	000000	000000
8973494890			GASKET; CYL HD	000000	000000
8973499550			BOOT KIT; OUTSIDE	000000	000000
8973499560			BOOT KIT; INSIDE	000000	000000
8973500210	8-9735	0021	SHAFT; IDLE GEAR	000010	000004
8973503170	8-9735	0317	GASKET; EXH	000000	000000
8973503172	8-9735	0317	GASKET; EXH	000099	000001
8973503190	8-9735	0319	GASKET CYL HEAD	000000	000035
8973504151			CABLE; SHIFT, TR	000000	000000
8973504160			CABLE; SELECT, T	000000	000000
8973505381			CABLE; PARKING	000000	000000
8973513880	8-9735	1388	BOLT; EYE	000080	000091
8973513900			KEY; DRIVE SHAFT	000000	000000
8973514510	8-9735	1451	CUP; SEALING, CYL	000000	000000
8973514660	8-9735	1466	VALVE; SOLENOID	000000	000000
8973515730			GENERATOR ASM	000000	000002
8973517040	8-9735	1704	SEAL; OIL, CR/SHF,	000000	000039
8973518330			PLATE ASM; PRESS	000000	000000
8973519850	8-9735	1985	PUMP ASM : INJ	000000	000000
8973519860	8-9735	1986	NOZZLE ASM; INJ	000000	000000
8973523110	8-9735	2311	PLATE; LOCK, DRIVEN GEAR	000000	000000
8973523910			CABLE; PTO CONT	000000	000001
8973523911			CABLE; PTO CONT	000000	000000
8973524030	8-9735	2403	GASKET; OIL PAN	000042	000066
8973525340	8-9735	2534	CRANKSHAFT	000000	000000
8973525341	8-9735	2534	CRANKSHAFT	000000	000000
8973525342	8-9735	2534	CRANKSHAFT	000000	000000
8973525343	8-9735	2534	CRANKSHAFT	000000	000000
8973525370	8-9735	2537	PLUG; WATER DRAIN	000000	000000
8973525820			BUMPER; RR	000000	000000
8973527072	8-9735	2707	BLOCK ASM CYL	000000	000000
8973527441	8-9735	2744	BLOCK ASM; CYL	000000	000000
8973527442	8-9735	2744	BLOCK ASM; CYL	000000	000001
8973527450	8-9735	2745	SEAL; CRANK SH	000011	000017
8973528650	8-9735	2865	PUMP ASM; INJ	000000	000000

8973528651	8-9735	2865	PUMP ASM; INJ	000000	000001
8973528850	8-9735	2885	PIPE ASM; FUEL OVERFLOW	000000	000001
8973528860	8-9735	2886	TUBE; GUIDE, OIL LEVEL GAUG	000000	000001
8973528880	8-9735	2888	SPRING; VLV	000122	000065
8973528890	8-9735	2889	BUSH; CONN ROD	000000	001762
8973534680	8-9735	3468	CAMSHAFT	000000	000002
8973536480			PIPE; OIL, FLEX	000000	000000
8973536490			PIPE; OIL, P/S U	000000	000000
8973536820	8-9735	3682	PIPE; FUEL	000000	000002
8973536821	8-9735	3682	PIPE; FUEL	000000	000000
8973539110	8-9735	3911	SEAL UNIT; WATER PUMP	000000	000005
8973541800	8-9735	4180	PUMP ASM; INJ	000000	000000
8973541810	8-9735	4181	PUMP ASM; INJ	000000	000000
8973541960	8-9735	4196	GASKET; CYL HD	000000	000000
8973541961			GASKET; CYL HD	000010	000010
8973545840	8-9735	4584	BOLT; COMMON RAIL	000049	000000
8973546520	8-9735	4652	HOSE; RUBBER, FUEL	000000	000007
8973546971	8-9735	4697	BOLT; GEAR CASE C	000000	000068
8973548082	8-9735	4808	STUD	000001	000040
8973551120	8-9735	5112	ROD; PUSH L=38.25	000000	000000
8973551130	8-9735	5113	ROD; PUSH L=38.26	000000	000000
8973551140	8-9735	5114	ROD; PUSH L=38.27	000000	000000
8973551150	8-9735	5115	ROD; PUSH L=38.28	000000	000000
8973551160	8-9735	5116	ROD; PUSH L=38.29	000000	000000
8973551170	8-9735	5117	ROD; PUSH L=38.30	000000	000000
8973551180	8-9735	5118	ROD; PUSH L=38.31	000000	000000
8973551190	8-9735	5119	ROD; PUSH L=38.32	000000	000000
8973551200	8-9735	5120	ROD; PUSH L=38.33	000000	000000
8973551210	8-9735	5121	ROD; PUSH L=38.34	000000	000000
8973551220	8-9735	5122	ROD; PUSH L=38.35	000000	000000
8973551230	8-9735	5123	ROD; PUSH L=38.36	000000	000000
8973551240	8-9735	5124	ROD; PUSH L=38.37	000000	000000
8973551250	8-9735	5125	ROD; PUSH L=38.38	000000	000000
8973551260	8-9735	5126	ROD; PUSH L=38.39	000000	000000
8973551270	8-9735	5127	ROD; PUSH L=38.40	000000	000000
8973551280	8-9735	5128	ROD; PUSH L=38.41	000000	000000
8973551290	8-9735	5129	ROD; PUSH L=38.42	000000	000000
8973551300	8-9735	5130	ROD; PUSH L=38.43	000000	000000
8973551310	8-9735	5131	ROD; PUSH L=38.44	000000	000000
8973551320	8-9735	5132	ROD; PUSH L=38.45	000000	000000
8973551330	8-9735	5133	ROD; PUSH L=38.46	000000	000007
8973551340	8-9735	5134	ROD; PUSH L=38.47	000000	000000
8973551350	8-9735	5135	ROD; PUSH L=38.48	000000	000000
8973551360	8-9735	5136	ROD; PUSH L=38.49	000000	000012
8973551370	8-9735	5137	ROD; PUSH L=38.50	000000	000012
8973551380	8-9735	5138	ROD; PUSH L=38.51	000000	000012
8973551390	8-9735	5139	ROD; PUSH L=38.52	000000	000012

8973551400	8-9735	5140	ROD; PUSH L=38.53	000000	000012
8973551410	8-9735	5141	ROD; PUSH L=38.54	000000	000012
8973551420	8-9735	5142	ROD; PUSH L=38.55	000000	000012
8973551430	8-9735	5143	ROD; PUSH L=38.56	000000	000012
8973551440	8-9735	5144	ROD; PUSH L=38.57	000000	000012
8973551450	8-9735	5145	ROD; PUSH L=38.58	000000	000010
8973551460	8-9735	5146	ROD; PUSH L=38.59	000000	000012
8973551470	8-9735	5147	ROD; PUSH L=38.60	000000	000012
8973551480	8-9735	5148	ROD; PUSH L=38.61	000000	000009
8973551490	8-9735	5149	ROD; PUSH L=38.62	000000	000012
8973551500	8-9735	5150	ROD; PUSH L=38.63	000000	000010
8973551510	8-9735	5151	ROD; PUSH L=38.64	000000	000012
8973551520	8-9735	5152	ROD; PUSH L=38.65	000000	000012
8973551530	8-9735	5153	ROD; PUSH L=38.66	000000	000012
8973551540	8-9735	5154	ROD; PUSH L=38.67	000000	000012
8973551550	8-9735	5155	ROD; PUSH L=38.68	000000	000008
8973551560	8-9735	5156	ROD; PUSH L=38.69	000000	000012
8973551570	8-9735	5157	ROD; PUSH L=38.70	000000	000008
8973551580	8-9735	5158	ROD; PUSH L=38.71	000000	000008
8973551590	8-9735	5159	ROD; PUSH L=38.72	000000	000012
8973551600	8-9735	5160	ROD; PUSH L=38.73	000000	000010
8973551610	8-9735	5161	ROD; PUSH L=38.74	000000	000012
8973551620	8-9735	5162	ROD; PUSH L=38.75	000000	000012
8973551630	8-9735	5163	ROD; PUSH L=38.76	000000	000012
8973551640	8-9735	5164	ROD; PUSH L=38.77	000000	000012
8973551650	8-9735	5165	ROD; PUSH L=38.78	000000	000009
8973551660	8-9735	5166	ROD; PUSH L=38.79	000000	000012
8973551670	8-9735	5167	ROD; PUSH L=38.80	000000	000012
8973551680	8-9735	5168	ROD; PUSH L=38.81	000000	000009
8973551690	8-9735	5169	ROD; PUSH L=38.82	000000	000012
8973551700	8-9735	5170	ROD; PUSH L=38.83	000000	000008
8973551710	8-9735	5171	ROD; PUSH L=38.84	000000	000012
8973551720	8-9735	5172	ROD; PUSH L=38.85	000000	000012
8973551730	8-9735	5173	ROD; PUSH L=38.86	000000	000012
8973551740	8-9735	5174	ROD; PUSH L=38.87	000000	000012
8973551750	8-9735	5175	ROD; PUSH L=38.88	000000	000009
8973551760	8-9735	5176	ROD; PUSH L=38.89	000000	000012
8973551770	8-9735	5177	ROD; PUSH L=38.90	000000	000012
8973551780	8-9735	5178	ROD; PUSH L=38.91	000000	000012
8973551790	8-9735	5179	ROD; PUSH L=38.92	000000	000012
8973551800	8-9735	5180	ROD; PUSH L=38.93	000000	000009
8973551820	8-9735	5182	ROD; PUSH L=38.94	000000	000012
8973555164	8-9735	5516	COVER; CYL HEAD	000002	000000
8973558532	8-9735	5853	FLYWHEEL	000000	000000
8973558700			CYL ASM;BRAKE MASTER	000000	000000
8973559708	8-9735	5970	HEAD ASM; CYL	000000	000000
8973559709	8-9735	5970	HEAD ASM; CYL	000000	000000

8973560282	8-9735	6028	GASKET; EXH MANIF	000006	000000
8973560611	8-9735	6061	JET; OIL,TIMING C	000006	000000
8973561500	8-9735	6150	GASKET; OIL STRAI	000005	000000
8973561630	8-9735	6163	THERMOMETER	000000	000004
8973565450	8-9735	6545	OIL FILTER;DSEL	000000	000012
8973569390	8-9735	6939	METAL; CM/SHF	000000	000000
8973571140	8-9735	7114	PUMP ASM; FUEL	000000	000023
8973571920	8-9735	7192	CABLE; A/T	000000	000000
8973571922	8-9735	7192	CABLE; A/T	000005	000012
8973572340	8-9735	7234	GOVERNOR ASM; INJ PUMP	000000	000007
8973572640	8-9735	7264	PUMP ASM;FUEL FEED,INJ PU	000000	000020
8973572650	8-9735	7265	PUMP;FEED	000020	000010
8973572660	8-9735	7266	PUMP ASM;FUEL FEED,INJ PU	000000	000000
8973575640	8-9735	7564	PLATE;ADJ	000003	000000
8973575651	8-9735	7565	BRACKET;GEN	000001	000000
8973576130	8-9735	7613	RESISTOR; DROPPING	000000	000005
8973576842	8-9735	7684	GASKET; EGR PIPE	000000	000000
8973576843	8-9735	7684	GASKET; EGR PIPE	000000	000008
8973576850	8-9735	7685	GASKET	000000	000000
8973579420	8-9735	7942	INJECTION PUMP	000000	000002
8973580000	8-9735	8000	COVER; ADJ	000001	000000
8973580620	8-9735	8062	STARTER	000000	000000
8973580621	8-9735	8062	STARTER	000000	000008
8973580650	8-9735	8065	COVER;TAPPET CHAMBER	000000	000002
8973581440	8-9735	8144	CRANKSHAFT	000000	000000
8973581441	8-9735	8144	CRANKSHAFT	000000	000001
8973582340	8-9735	8234	METAL KIT; CONN	000113	000056
8973583230	8-9735	8323	PIPE;OIL DRAIN,TURBOCHARG	000000	000000
8973583231	8-9735	8323	PIPE;OIL DRAIN,TURBOCHARG	000000	000002
8973583310			HOSE; FLEX, P/S	000000	000001
8973584630	8-9735	8463	SWITCH;ENGAGE STARTER	000000	000001
8973585740	8-9735	8574	PISTON	000000	000012
8973585750	8-9735	8575	PISTON	000000	000011
8973586010	8-9735	8601	PLUG;SHIFTER ROD	000007	000000
8973586940	8-9735	8694	PUMP ASM;INJ	000000	000000
8973586950	8-9735	8695	INJECTION PUMP	000001	000001
8973586960	8-9735	8696	PUMP ASM; INJ	000000	000000
8973586970	8-9735	8697	NOZZLE ASM;INJ	000000	000048
8973586990	8-9735	8699	PIPE ASM;H2O,TURBOCHG RTN	000022	000018
8973587200			ELEMENT; OIL FILTER	000000	000000
8973591410	8-9735	9141	CLIP; WATER HOSE	000014	000013
8973595710	8-9735	9571	BEARING; COUNTER	000000	000000
8973595770			GLASS;WINDSHIELD	000000	000004
8973595871			CAMSHAFT	000000	000000
8973596160	8-9735	9616	NUT; PITMAN ARM	000020	000018
8973599875	8-9835	9987	SENSOR; DPD	000011	000128
8973599895	8-9735	9989	SENSOR; DPD	000001	000030

8973601250	8-9736	0125	NUT; PIN LK	000290	000740
8973603682	8-9736	0368	SENSOR; DPD	000015	000015
8973607860	8-9736	0786	HOLDER ASM; NOZZLE	000000	000036
8973613490			SHAFT ASM; FRT DRIVE	000006	000000
8973613761			MOTOR ASM; FRT	000000	000003
8973614652	8-9736	1465	STUD	000000	000013
8973614980			GLASS; SIDE WINDOW	000000	000001
8973615100			GLASS; RR QUART	000002	000001
8973616960	8-9736	1696	HOLDER ASM;NOZZLE	000000	000022
8973616970	8-9736	1697	SEAT;NOZZLE SPRING NOZZLE	000000	000012
8973616980	8-9736	1698	NOZZLE KIT, INJ	000000	000003
8973617700	8-9736	1770	THERMOSTAT	000000	000236
8973618930			CONTROL UNIT; E	000000	000005
8973622350			DISC; CLUTCH	000000	000000
8973622351			DISC; CLUTCH	000000	000000
8973623062	8-9736	2306	HOSE; RUBBER, FUEL	000000	000001
8973625990			GEAR; SIDE (Z=20)	000000	000002
8973627472	8-9736	2747	PULLEY; CR/SHF DAMPER	000000	000001
8973627560	8-9736	2756	FLYWHEEL	000000	000000
8973627582	8-9736	2758	PAN ASM; OIL	000000	000000
8973627584	8-9736	2758	PAN ASM; OIL	000000	000000
8973627585	8-9736	2758	PAN ASM; OIL	000000	000000
8973627586	8-9736	2758	PAN ASM; OIL	000000	000000
8973627590	8-9736	2759	PIPE; OIL, TURBOCHARGER FE	000000	000000
8973627591	8-9736	2759	PIPE; OIL, TURBOCHARGER FE	000000	000000
8973627600	8-9736	2760	PIPE; OIL DRAIN, TURBOCHAR	000000	000001
8973627610	8-9736	2761	STRAINER; OIL, OIL PUMP	000000	000004
8973627632	8-9736	2763	SEPARATOR; OIL, PCV	000000	000000
8973627633	8-9736	2763	SEPARATOR; OIL, PCV	000000	000000
8973627670	8-9736	2767	COVER; FRT	000000	000000
8973627671	8-9736	2767	COVER; FRT	000000	000014
8973628150	8-9736	2815	BELT; COOLING FAN	000000	000133
8973628211	8-9736	2821	BRACKET; STAY	000000	000001
8973628270	8-9736	2827	PIPE; WATER, TURBOCHARGER	000000	000015
8973628290	8-9736	2829	MANIFOLD; EXHAUST	000000	000000
8973628291	8-9736	2829	MANIFOLD; EXHAUST	000000	000002
8973628340	8-9736	2834	CASE; INLET, EGR	000000	000000
8973628341	8-9736	2834	CASE; INLET, EGR	000000	000000
8973628360	8-9736	2836	VALVE; REED	000000	000000
8973628361	8-9736	2836	VALVE; REED	000000	000000
8973628370	8-9736	2837	PIPE; INL	000000	000000
8973628371	8-9736	2837	PIPE; INL	000000	000001
8973628380	8-9736	2838	ADAPTER; EXH PIPE	000000	000003
8973628390	8-9736	2839	TURBOCHARGER ASM	000000	000013
8973628401	8-9736	2840	PIPE ASM; FUEL, LEAK OFF	000000	000000
8973628402	8-9736	2840	PIPE ASM; FUEL, LEAK OFF	000000	000004
8973628421	8-9736	2842	COVER; CYL HD	000000	000000

8973628422	8-9736	2842	COVER; CYL HD	000000	000000
8973628435	8-9736	2843	HARNESS; ENG	000000	000000
8973628436	8-9736	2843	HARNESS; ENG	000000	000000
8973628437	8-9736	2843	HARNESS; ENG	000000	000008
8973628441	8-9736	2844	BRACKET; GEN	000000	000009
8973628450	8-9736	2845	PLATE; ADJ	000008	000000
8973628466	8-9736	2846	HOUSING; FLYWHEEL	000000	000000
8973629260	8-9736	2926	BELT; COOLING FAN	000016	000026
8973630670			CAMSHAFT	000000	000005
8973632370	8-9736	3237	STUD; INJ PUMP	000079	000029
8973632530	8-9736	3253	NIPPLE; GUIDE TUBE	000033	000000
8973632690	8-9736	3269	FLYWEIGHT	000000	000001
8973634900	8-9736	3490	COUPLING; CENTER	000001	000001
8973636400	8-9736	3640	PUMP ASM; INJ	000000	000000
8973636440	8-9736	3644	GASKET; PIPE	000000	000148
8973636660	8-9736	3666	RUBBER; MTG RAD	000000	000010
8973637222	8-9736	3722	GASKET; PUMP TO C/BL	000000	000032
8973638080	8-9736	3808	NOZZLE; INJ	000000	000006
8973638400	8-9736	3840	COVER; OIL PORT	000000	000000
8973638401	8-9736	3840	COVER; OIL PORT	000000	000000
8973638402	8-9736	3840	COVER; OIL PORT	000000	000000
8973638403	8-9736	3840	COVER; OIL PORT	000000	000000
8973638451	8-9736	3845	GASKET; OIL PAN TO C/BL	000000	000011
8973638660	8-9736	3866	PIPE; SUCTION	000000	000000
8973639360	8-9736	3936	SENSOR; WATER TEMP	000000	000052
8973639880	8-9736	3988	PUMP ASM; INJ	000000	000000
8973640380	8-9736	4038	PULLEY; CR/SHF DAMPER	000000	000001
8973640461	8-9736	4046	BRACKET; BOOST SENSOR	000000	000002
8973640520	8-9736	4052	COUPLING ASM; INJ PUMP	000000	000000
8973640700			SWITCH; COMB	000000	000000
8973641090	8-9736	4109	TUBE; GUIDE, OIL LEVEL GAUG	000000	000001
8973641110	8-9736	4111	TURBOCHARGER ASM	000000	000004
8973641280	8-9736	4128	GLOW PLUG	000000	000094
8973641281	8-9736	4128	GLOW PLUG	000000	000000
8973641860	8-9736	4186	COVER; CYL HD	000000	000001
8973643530			PIPE; OIL, FLEX	000000	000000
8973643600			PIPE; OIL, P/S U	000000	000000
8973647750	8-9736	4775	HOSE; RUBBER, FUEL LEAK	000000	000018
8973648092	8-9736	4809	SHAFT; ROCKER ARM	000003	000003
8973648112	8-9736	4811	SHAFT; ROCKER ARM	000003	000003
8973648470			DOOR ASM; FRT, (LH)	000000	000001
8973652810			SUPPORT; FRT DISC BRK	000001	000001
8973652980	8-9736	5298	HOSE; RUBBER, OIL DRAIN	000001	000001
8973653740	8-9736	5374	PLUG; OIL DRAIN	000001	000003
8973653750	8-9736	5375	BOLT	000002	000003
8973653760	8-9736	5376	BOLT; QUAD BOX	000000	000081
8973654450	8-9736	5445	STUD; SUPPORT PLATE	000000	000007

8973654490	8-9439	9863	BOLT; TRANS CASE TO ENG	000001	000095
8973654500	8-9735	5450	NUT; YOKE TO RR AXLE	000136	000622
8973654850	8-9736	5485	PUMP ASM;FEED	000000	000003
8973656540	8-9736	5654	FORK ASM;127	000000	000006
8973658191	8-9736	5819	PIPE; WATER,TURBOCHARGER	000000	000000
8973658250	8-9736	5825	HOSE;RUBBER,OIL DRAIN	000001	000001
8973659920	8-9736	5992	COVER; VENTILATOR	000002	000000
8973659980	8-9736	5998	SPRING; DIAPH,VEN	000013	000000
8973665260			SLEEVE & HUB AS	000000	000000
8973665350			BRACKET; HARNESS	000000	000004
8973665920	8-9736	6592	SCREW; ADAPTER	000034	000000
8973666320	8-9736	6632	BOLT; COVER	000047	000000
8973666330	8-9736	6633	STUD;GUIDE TUBE	000000	000027
8973667720	8-9736	6772	ADAPTER; CLIP	000000	000010
8973667841	8-9736	6784	GASKET; INL PIPE	000000	000106
8973669000			HOOD; ENG	000000	000003
8973670131	8-9736	7013	GASKET;INLET PIPE IN	000000	001358
8973670140	8-9736	7014	GASKET;INLET PIPE IN	000000	000689
8973671711			BRACKET;S/ABS	000000	000001
8973672655	8-9736	7265	SENSOR; TEMPERA	000000	000002
8973673362	8-9736	7336	COVER; P/S	000000	000003
8973673510			ABSORBER ASM; S	000000	000000
8973673780	8-9736	7378	PUMP ASM; FEED	000000	000003
8973674590	8-9736	7459	PUMP ASM; FEED	000000	000039
8973675730			PLUG;WIHD,STGHT	000000	000000
8973677950			DISC; CLUTCH	000000	000000
8973679180	8-9736	7918	GASKET; EGR PIPE	000680	000766
8973679841	8-9736	7984	CLIP;BAND	000000	000098
8973679850	8-9736	7985	CLIP;HARNESS,SOLENOID VLV	000000	000000
8973679851	8-9736	7985	CLIP;HARNESS,SOLENOID VLV	000000	000060
8973680480			CLUTCH; DISC	000000	000003
8973680620			PLATE DRIVE	000000	000003
8973681310			BOLT; GEAR TO C	000000	000000
8973682540			SHOE KIT; BRK,R	000000	000000
8973682750			PUMP ASM;FEED 4BD1	000000	000011
8973683200	8-9736	8320	HEAD ASM; CYL	000000	000000
8973683201	8-9736	8320	HEAD ASM; CYL	000000	000000
8973688530	8-9736	8853	NUT;HARN,GLOW PLUG FIX	000000	000002
8973689190			CALIPER;FRT DI	000000	000001
8973689200			CALIPER;FRT DI	000000	000001
8973689990	8-9736	8999	PUMP ASM;FUEL FEED,INJ PU	000000	000000
8973690000	8-9736	9000	PUMP ASM;FUEL FEED,INJ PU	000000	000003
8973691400	8-9736	9140	LEVER;STOPPER,GOV	000000	000002
8973693350	8-9736	9335	BOLT; GEN	000010	000000
8973694040	8-9736	9404	GASKET;SENSOR	000000	000011
8973694490	8-9736	9449	STUD; INJ PUMP	000000	000018
8973694500	8-9736	9450	STUD; INJ PUMP	000000	000018

8973695500	8-9736	9550	HEAD ASM; CYL	000000	000000
8973695521	8-9736	9552	PLUG; THERMOMETER	000035	000093
8973695540	8-9736	9554	CYLINDER BLOCK	000000	000000
8973695545	8-9736	9554	CYLINDER BLOCK	000000	000003
8973695546	8-9736	9554	CYLINDER BLOCK	000000	000000
8973695555	8-9736	9555	BLOCK ASM; CYL	000000	000000
8973695556	8-9736	9555	BLOCK ASM; CYL	000000	000003
8973697140	8-9736	9714	ALTERNATOR	000000	000000
8973698440	8-9736	9844	CONTROL UNIT;S	000000	000000
8973698720	8-9736	9872	SWITCH; ENGAGE STARTER	000003	000000
8973702000	8-9737	0200	PUMP ASM;FUEL FEED, INJ PU	000000	000000
8973703902	8-9737	0390	BRACKET; GEAR CAS	000002	000002
8973711060	8-9737	1106	SHROUD; FAN	000000	000006
8973712560	8-9737	1256	VALVE ASM;BOOST,MARINE GE	000000	000000
8973713340			ELEMENT; OIL FILTER	000000	000000
8973713370			ELEMENT; OIL FILTER	000000	000000
8973714070	8-9737	1407	HOSE; PCV	000000	000000
8973715800			CLUTCH;MAGNET	000000	000000
8973716540	8-9737	1654	BRACKET; STAY	000000	000003
8973717201	8-9737	1720	COVER; TIMING,LWR	000002	000001
8973717340			KNOB; G/S CONT.	000000	000001
8973718310	8-9737	1831	PIPE; INJ NO.1	000000	000000
8973718311	8-9737	1831	PIPE; INJ NO.1	000110	000170
8973718330	8-9737	1833	PIPE; INJ NO.3	000000	000000
8973718331	8-9737	1833	PIPE; INJ NO.3	000158	000168
8973718340	8-9737	1834	PIPE; INJ NO.4	000000	000000
8973718341	8-9737	1834	PIPE; INJ NO.4	000139	000195
8973720760	8-9737	2076	METAL SET; CRANK (BLUE)	000000	000000
8973720761	8-9737	2076	METAL SET; CRANK (BLUE)	000006	000028
8973720770	8-9737	2077	METAL SET; CRANK (BLACK)	000000	000000
8973720771	8-9737	2077	METAL SET; CRANK (BLACK)	000086	000055
8973720780	8-9737	2078	METAL SET; CRANK (BROWN)	000000	000000
8973720781	8-9737	2078	METAL SET; CRANK (BROWN)	000053	000054
8973721070	8-9737	2107	GASKET; INJ PUMP	000032	000022
8973721440	8-9737	2144	BOLT; BRKT, INJ NO	000013	000000
8973722320			PIPE; WATER EGR	000000	000000
8973722380	8-9737	2238	BOLT; EYE, OIL PIPE	000000	000142
8973722390	8-9737	2239	BOLT; EYE, AIR PIPE TO BRG	000019	000017
8973722920	8-9737	2292	BOLT; WATER PIPE CLIP	000000	000053
8973724500	8-9737	2450	GAUGE; OIL LEVEL	000000	000001
8973725285			LAMP ASM; HEAD	000000	000003
8973725295			LAMP ASM; HEAD	000000	000003
8973727950	8-9737	2795	STUD; COVER, HD	000000	000020
8973729520	8-9737	2952	SWITCH; OIL PRESSURE WARNI	000000	000008
8973731440			HUB; CLU, REV &	000000	000000
8973734170	8-9737	3417	PIPE; INJ NO.2	000000	000000
8973734171	8-9737	3417	PIPE; INJ NO.2	000150	000204

8973736150	8-9737	3615	SPACER; HYDRAULIC PUMP	000000	000007
8973737620	8-9737	3762	SOLENOID ASM; ENG STOP	000000	000000
8973737622	8-9737	3762	SOLENOID ASM; ENG STOP	000000	000055
8973740380			CONTROLLER; TRA	000000	000005
8973741861			CABLE; PARKING	000000	000003
8973742830			BRACKET; HARNESS	000000	000000
8973742831	8-9737	4283	BRACKET; HARNESS	000000	000002
8973743740	8-9737	4374	ROTOR; GEN	000000	000001
8973743760	8-9737	4376	COVER ASM; FRT, GEN	000000	000001
8973744120	8-9737	4412	GASKET;TURBO TO EXH DUCT	000522	001350
8973745020	8-9737	4502	SPRING; IDLE 089037	000000	000002
8973745110	8-9737	4511	SUPPORT; LEVER	000000	000002
8973745170	8-9737	4517	GASKET; ADAPTER	000000	000154
8973747040	8-9737	4704	WATER PUMP	000000	000000
8973747050	8-9737	4705	PIPE; WATER	000000	000000
8973747060	8-9737	4706	WATER HOSE	000000	000016
8973750170	8-9737	5017	GENERATOR ASM	000000	000000
8973750171	8-9737	5017	GENERATOR ASM	000000	000059
8973750220	8-9737	5022	PULLEY; WATER PUMP	000000	000006
8973752360	8-9737	5236	GKST;JOINT BOLT;LEAK OFF	000000	000003
8973753690	8-9737	5369	PIPE; AIR,EGR	000000	000000
8973753840	8-9737	5384	KEY; DRIVE SHAFT	000000	000024
8973754330	8-9737	5433	GASKET, CYL HD	000015	000012
8973754340	8-9737	5434	GASKET, CYL HD	000031	000142
8973754350	8-9737	5435	GASKET, CYL HD	000015	000012
8973754600	8-9737	5460	STUD; CAM,CARRIER	000000	000007
8973755320	8-9737	5532	PIPE; INJ NO 1	000000	000002
8973755330	8-9737	5533	PIPE;INJ NO 2	000000	000005
8973755340	8-9737	5534	PIPE; INJ NO 3	000000	000002
8973755350	8-9737	5535	PIPE; INJ NO 4	000000	000002
8973756360	8-9737	5636	CLIP; FUEL HOSE	000000	000013
8973756380	8-9737	5638	CLIP; FUEL HOSE	000000	000004
8973756390	8-9737	5639	CLIP; WATER HOSE	000014	000036
8973756480	8-9737	5648	WATER PUMP	000000	000025
8973756690	8-9737	5669	PIPE; WATER EGR	000000	000003
8973758160	8-9737	5816	HOSE; RUBBER,HEAD CVR TO	000000	000001
8973759081	8-9737	5908	FILTER ASM; FUEL	000000	000000
8973759082	8-9737	5908	FILTER ASM; FUEL	000000	000205
8973759110	8-9737	5911	STAY; BRKT,FAN GUIDE	000000	000004
8973759520	8-9737	5952	BRACKET; EGR	000000	000028
8973763890	8-9737	6389	GROMMET; RR COVER	000003	000000
8973763900	8-9737	6390	GROMMET; RR COVER	000003	000000
8973766160	8-9737	6616	PIPE; WATER,EGR	000000	000000
8973767180	8-9737	6718	SCREW; ADJ,ROCKER	000000	000021
8973767191	8-9737	6719	GUIDE; VLV	000000	000020
8973767192	8-9737	6719	GUIDE; VLV	000000	000000
8973767200	8-9737	6720	SEAL; VLV GUIDE	000423	000444

8973767230	8-9737	6723	BRACKET; EGR	000000	000019
8973767370	8-9737	6737	BRACKET; CLIP	000000	000002
8973767460	8-9737	6746	BRACKET; FUEL PUMP	000000	000011
8973767580	8-9737	6758	GASKET; TURBOCHARGER TO E	000417	001613
8973769380	8-9737	6938	SOLENOID ASM; ENG STOP	000000	000000
8973769381	8-9737	6938	SOLENOID ASM; ENG STOP	000000	000000
8973769382	8-9737	6938	SOLENOID ASM; ENG STOP	000000	000145
8973772130	8-9737	7213	SWITCH; ENGAGE STARTER	000000	000004
8973772490			HOLDER; BRUSH STARTER	000000	000000
8973777870	8-9737	7787	PUMP ASM; INJ	000000	000001
8973777890	8-9737	7789	TURBOCHARGER ASM	000000	000008
8973779200	8-9737	7920	SENSOR; VEHICLE	000001	000089
8973779240	8-9737	7924	RELAY; STARTER	000000	000002
8973779250	8-9737	7925	RELAY; STARTER	000001	000000
8973780210	8-9737	8021	GUIDE; BRIDGE	000000	000000
8973780211	8-9737	8021	GUIDE; BRIDGE	000000	000010
8973780240	8-9737	8024	COVER; CYL HD	000000	000000
8973780300	8-9737	8030	SEAT; VLV INSERT	000006	000000
8973780590			STUD; EXH PIPE TO MANIF (R)	000000	000168
8973780600	8-9737	8060	STUD; MANIF TO TU	000000	000120
8973780610	8-9737	8061	STUD; EXH PIPE	000084	000041
8973780620	8-9737	8062	STUD; EXH MANIFOLD	000312	000220
8973780630	8-9737	8063	STUD; TURBOCHARGER	000000	000000
8973780640	8-9737	8064	STUD; EXH PIPE	000000	000000
8973780650	8-9737	8065	STUD; EXH MANIF	000000	000000
8973780670	8-9737	8067	STUD; EXH MANIF	000000	000011
8973780710	8-9737	8071	STUD; TURBOCHARGER	000089	000550
8973780730	8-9737	8073	STUD; EXH MANIF	000030	000045
8973780740	8-9737	8074	STUD; EXH PIPE	000000	000003
8973780750	8-9737	8075	BOLT; HEAT PROTECT, EXH MAN	000001	000003
8973780760	8-9737	8076	BOLT; PIPE	000061	000065
8973780770	8-9737	8077	BOLT; EGR COOLER	000105	000003
8973781470	8-9737	8147	METAL; CAM SHAFT	000000	000051
8973781480	8-9737	8148	METAL; CAMSHAFT	000000	000024
8973784960	8-9737	8496	ROD; PUSH	000000	000000
8973788140	8-9737	8814	GASKET; ADAPTER, GAS SENSO	000000	000024
8973788570	8-9737	8857	BRACKET; GEN	000000	000000
8973789390	8-9737	8939	COOLER ASM; EGR	000000	000000
8973789391	8-9737	8939	COOLER ASM; EGR	000000	000000
8973789392	8-9737	8939	COOLER ASM; EGR	000000	000021
8973792810			DUCT; AIR INT	000000	000000
8973795550	8-9737	9555	PULLEY; GEN	000000	000000
8973798050	8-9737	9805	PUMP ASM; WATER, W/GASKET	000172	000182
8973798060	8-9737	9806	PUMP ASM; WATER, W/GASKET	000000	000004
8973798070	8-9737	9807	PUMP ASM; WATER W/PACKING	000017	000021
8973798260	8-9737	9826	RETAINER; CR/SHF	000002	000003
8973801460	8-9738	0146	CARTIDGE; TURBO	000000	000000

8973804990	8-9738	0499	REPAIR KIT; WATER PUMP	000000	000270
8973805000	8-9738	0500	WATER PUMP REPAIR KIT	000003	000000
8973805010	8-9738	0501	REPAIR KIT; WATER PUMP	000000	000000
8973808300	8-9738	0830	GAUGE; OIL LEVEL	000000	000002
8973808770	8-9738	0877	CONTROL UNIT;ENG	000001	000001
8973808780	8-9738	0878	CONTORL UNIT, ENGINE	000000	000000
8973811820	8-9738	1182	SENSOR;TEMPERATURE,INTAKE	000056	000827
8973813460	8-9738	1346	LIMITER; FUEL PRESS	000024	000016
8973814560	8-9738	1456	GASKET; EXH PIPE TO MANIF	000008	000021
8973814670	8-9738	1467	GASKET	000000	000002
8973815161	8-9738	1516	GEAR; IDLE	000000	000003
8973815170	8-9738	1517	BUSHING; IDLE GEA	000005	000003
8973815201	8-9738	1520	GEAR; IDLE	000001	000000
8973815202	8-9738	1520	GEAR; IDLE	000000	000000
8973815203	8-9738	1520	GEAR; IDLE	000002	000004
8973815210	8-9738	1521	BUSHING; IDLE GEA	000005	000003
8973815240	8-9738	1524	RUBBER; MTG,HD CO	000302	000000
8973815533	8-9738	1553	PUMP ASM; OIL	000000	000002
8973815551	8-9738	1555	PUMP; ASM FUEL,SU	000000	000000
8973815552	8-9738	1555	PUMP; ASM FUEL,SU	000000	000000
8973815553	8-9738	1555	PUMP; ASM FUEL,SU	000000	000000
8973815554	8-9738	1555	PUMP; ASM FUEL,SU	000000	000000
8973815555	8-9738	1555	PUMP; ASM FUEL,SU	000000	000002
8973815602	8-9738	1560	VALVE; EGR	000000	000000
8973815603	8-9738	1560	VALVE; EGR	000000	000000
8973815605	8-9738	1560	VALVE; EGR	000000	000000
8973815606	8-9738	1560	VALVE; EGR	000000	000000
8973815607	8-9738	1560	VALVE; EGR	000000	000018
8973815711	8-9738	1571	BRACKET; VALVE	000000	000000
8973816030	8-9738	1603	GUIDE; BRIDGE	000047	000000
8973816031	8-9738	1603	GUIDE; BRIDGE	000575	000831
8973816170	8-9738	1617	NUT; EXH MANIF	000000	000127
8973816350	8-9738	1635	CLIP; PIPE	000007	000016
8973816360	8-9738	1636	CLIP; PIPE	000007	000014
8973828690	8-9738	2869	ROTOR; GEN	000003	000000
8973828700	8-9738	2870	COLLAR; STEEL	000003	000000
8973828720	8-9738	2872	COVER ASM; FRT,GEN	000003	000000
8973828730	8-9738	2873	PULLEY; GEN	000000	000002
8973828740	8-9738	2874	FAN; GEN	000003	000000
8973828770	8-9738	2877	COVER ASM; RR,GEN	000003	000000
8973828790	8-9738	2879	RECTIFIER; GEN	000002	000000
8973828800	8-9738	2880	BUSHING; RECTIFIER,GEN	000005	000000
8973828810	8-9738	2881	BOLT; RECTIFIER,GEN	000010	000000
8973828820	8-9738	2882	COVER; END,RR COVER,GEN	000003	000000
8973828830	8-9738	2883	REGULATOR ASM; VOLTAGE,GE	000000	000000
8973828840	8-9738	2884	TERMINAL; BRUSH,GEN	000000	000003
8973829450	8-9738	2945	INJECTION NOZZLE ASM	000000	000007

8973829542	8-9738	2954	CASE ASM; BRG, INJ	000000	000003
8973829550	8-9738	2955	SEAL; OIL, CR/SHF, FRT	000000	000010
8973829561	8-9738	2956	GAUGE; OIL LEVEL	000000	000002
8973829730	8-9738	2973	PULLEY; GEN	000000	000000
8973830410	8-9738	3041	HEAD ASM; CYL	000000	000000
8973830411	8-9738	3041	HEAD ASM; CYL	000000	000000
8973830490	8-9838	3049	CONTROLLER	000000	000005
8973830500	8-9738	3050	ECU 4BG1TRA02	000000	000000
8973830660	8-9738	3066	BUSHING; CONNROD	000008	000000
8973831140	8-9738	3114	GASKET; COOLER	000000	000099
8973832270	8-9738	3227	FILLER; OIL	000000	000001
8973832280	8-9738	3228	PULLEY; GEN	000000	000008
8973832290	8-9738	3229	COVER ASM; FRT, GEN	000000	000011
8973832300	8-9738	3230	ROTOR GEN	000000	000004
8973832310	8-9717	7826	COVER ASM; RR, GEN	000000	000004
8973832320	8-9738	3232	RECTIFIER; GEN	000000	000000
8973832860	8-9738	3286	PIN	000011	000000
8973834270	8-9738	3427	PIPE; FUEL	000000	000104
8973837110	8-9738	3711	SHROUD; FAN	000000	000001
8973837400	8-9738	3740	WASHER; THRUST, CR/SHF	000035	000016
8973837510			METAL SET; THRUST	000000	000000
8973840890	8-9738	4089	PUMP ASM; FUEL	000000	000001
8973841191	8-9738	4119	GASKET; EGR VLV	000002	000000
8973841300	8-9738	4130	GASKET; ELEMENT TO BODY	000203	000354
8973841310			DISC; CLUTCH	000000	000001
8973841820			PTO ASM; ENG RR	000000	000025
8973845860	8-9738	4586	PIPE; OIL, C/BL TO PTO	000000	000021
8973845881	8-9738	4588	GEAR; IDLE	000000	000000
8973852010	8-9738	5201	COOLER ASM; OIL	000000	000000
8973852011	8-9738	5201	COOLER ASM; OIL	000000	000000
8973859180	8-9738	5918	CAP; PCV	000002	000003
8973859190	8-9738	5919	ELEMENT KIT; PCV	000002	000003
8973859210	8-9738	5921	GASKET; BODY TO CAP	000000	000005
8973859820	8-9738	5982	PUMP ASM; OIL	000000	000000
8973859830			PUMP ASM; OIL	000000	000000
8973861890	8-9738	6189	METAL; CM/SHF	001322	003084
8973862321	8-9738	6232	GEAR; CR/SHF	000002	000000
8973863220	8-9738	6322	REGULATOR ASM	000000	000003
8973865480	8-9738	6548	WASHER; THRUST, CR/SHF	000078	000078
8973865490	8-9738	6549	WASHER; THRUST, CR/SHF	000083	000063
8973867150			FILTER; ACL	000000	000001
8973867210			RUBBER; FRT, MUD	000000	000000
8973867230			RUBBER; FRT, MUD	000000	000000
8973868720			CABLE; ENG CONT	000000	000000
8973870090	8-9738	7009	GASKET; INTAKE, THROTTLE	000000	000011
8973871940	8-9738	7194	GASKET; SENSOR, CAM ANGLE	000000	000029
8973879640	8-9738	7964	METAL SET; CRANK SHAFT STA	000042	000000

8973879650	8-9738	7965	METAL SET;CRANKSHFT (GRD=2	000000	000072
8973879660	8-9738	7966	METAL SET; CRANSHAFT, STA	000068	000000
8973879670	8-9738	7967	METAL SET;CRANKSHFT (GRD=4	000029	000009
8973879680	8-9738	7968	METAL SET;CRANKSHAFT, STAN	000002	000024
8973879750	8-9738	7975	THRUST METAL SET	000044	000238
8973879950	8-9738	7995	RUBBER	000000	000000
8973879951	8-9738	7995	RUBBER	000000	000030
8973880230	8-9738	8023	DRAINER; OIL	000000	000000
8973880231	8-9738	8023	DRAINER; OIL	000000	000254
8973881590	8-9738	8159	BOLT; HSG	000000	000033
8973882950	8-9738	8295	BOLT; EYE,OIL PIPE	000000	000042
8973886431	8-9738	8643	VALVE; INL	000000	000000
8973886432	8-9738	8643	VALVE; INL	000000	000002
8973886433	8-9738	8643	VALVE; INL	000000	000008
8973886440	8-9738	8644	VALVE; EXH	000000	000011
8973888281	8-9738	8828	CRANKSHAFT	000000	000000
8973888282	8-9738	8828	CRANKSHAFT	000000	000000
8973888283	8-9738	8828	CRANKSHAFT	000000	000000
8973888284	8-9738	8828	CRANKSHAFT	000002	000000
8973889020	8-9738	8902	PIPE; INJ,C/R	000000	000004
8973889190	8-9738	8919	GASKET; EGR COOLER	000000	000001
8973889211	8-9738	8921	ROD ASM; CONN	000000	000000
8973889212	8-9738	8921	ROD ASM; CONN	000009	000000
8973889970	8-9738	8997	HOUSING; THERMOSTAT	000000	000004
8973889990	8-9738	8999	WATER PUMP	000000	000000
8973890000	8-9738	9000	COVER; WATER PUMP	000003	000000
8973890550	8-9738	9055	PIPE;OIL,TURBOCHARGER FEE	000002	000001
8973893600	8-9738	9360	CAP; PCV	000001	000001
8973899100	8-9738	9910	DISC; CLUTCH	000063	000308
8973899180	8-9738	9918	SHAFT; ROCKER ARM	000000	000005
8973899210	8-9730	6426	SHAFT; ROCKER ARM	000000	000028
8973938920			FINISHER; FRT	000000	000000
8974063183			ESCUTCHEON; LOC	000000	000002
8974101804			LAMP ASM; SIDE	000000	000001
8974101813			LAMP ASM; SIDE	000000	000000
8974306630	8-9743	0663	GASKET; OIL PIPE TO C/BL	000000	000000
8975003570	8-9750	0357	GENERATOR ASM	000000	000000
8975003571	8-9750	0357	GENERATOR ASM	000000	000000
8975003572	8-9750	0357	GENERATOR ASM	000000	000000
8975003582	8-9750	0358	STARTER ASM	000000	000000
8975003583	8-9750	0358	STARTER ASM	000000	000000
8975812340	8-9758	1234	NUT; BRKT,AIR DUCT	000065	000250
8975812360			NUT; BRK PEDAL	000000	000000
8975814432			DOOR ASM; FRT,W	000000	000000
8975814471			DOOR ASM;FRT,W	000000	000001
8975814481			DOOR ASM; FRT,W	000000	000000
8975814482			DOOR ASM; FRT,W	000000	000000

8975816233			MOLDING; WINDSH	000000	000000
8975816252			ATTACHMENT; OUT	000000	000004
8975817475			STAY; OUTSIDE M	000000	000001
8975817552			ATTACHMENT; OUT	000000	000004
8975824230			BUMPER: FRT, CEN	000000	000000
8975824714			PANEL;FRONT,SI	000000	000000
8975827630			GRILLE; ORNAMEN	000000	000001
8975830360	8-9758	3036	SCREW; BRKT	000000	000000
8975833763			STAY; OUTSIDE M	000000	000003
8975851722			LAMP ASM; SIGN	000000	000000
8975851732			LAMP ASM; SIGN	000000	000000
8976000962	8-9760	0096	PLUG ; GLOW	000302	000644
8976000963	8-9760	0096	PLUG ; GLOW	000000	000000
8976001130			CONNECTOR; P/S	000000	000000
8976001190	8-9760	0119	BLOCK ASM; CYL	000000	000000
8976001191	8-9760	0119	BLOCK ASM; CYL	000000	000000
8976001710	8-9760	0171	BREATHER AIR	000000	000000
8976001711	8-9760	0171	BREATHER AIR	000000	000000
8976001712	8-9760	0171	BREATHER AIR	000000	000000
8976001713	8-9760	0171	BREATHER AIR	000000	000003
8976002200			RUBBER	000000	000007
8976004340	8-9760	0434	SENSOR; OIL PRESS	000000	000000
8976005680	8-9760	0568	PIPEL OIL OIL FILTER TO I	000014	000002
8976005861	8-9760	0586	GEAR; IDLE	000058	000080
8976005900	8-9760	0590	GEAR; IDLE	000000	000000
8976009250	8-9760	0925	GSKT;JOINT BOLT,OFF PIPE	010530	015828
8976009350	8-9760	0935	THERMOSTAT; OIL COOLER	000017	000008
8976009360	8-9760	0936	THERMOSTAT;OIL COOLER	000000	000002
8976009700	8-9760	0970	MANIFOLD;EXH, RR	000000	000004
8976009720	8-9760	0972	SLEEVE; NOZZLE HOLDER	000000	000000
8976009960	8-9760	0996	PIPE; INJ NO.4	000000	000000
8976009961	8-9760	0996	PIPE; INJ NO.4	000000	000000
8976009962	8-9760	0996	PIPE; INJ NO.4	000000	000000
8976009963	8-9760	0996	PIPE; INJ NO.4	000000	000000
8976009964	8-9760	0996	PIPE; INJ NO.4	000004	000020
8976009970	8-9760	0997	PIPE; INJ NO.5	000000	000000
8976009971	8-9760	0997	PIPE; INJ NO.5	000000	000000
8976009972	8-9760	0997	PIPE; INJ NO.5	000000	000000
8976009973	8-9760	0997	PIPE; INJ NO.5	000000	000019
8976009980	8-9760	0998	PIPE; INJ NO.6	000000	000000
8976009981	8-9760	0998	PIPE; INJ NO.6	000000	000000
8976009982	8-9760	0998	PIPE; INJ NO.6	000000	000000
8976009983	8-9760	0998	PIPE; INJ NO.6	000000	000015
8976010080	8-9760	1008	BRACKET; FUEL END	000000	000000
8976011530			GEAR; INJ PUMP DRIVE	000000	000000
8976011531	8-9760	1153	GEAR; INJ PUMP DRIVE	000015	000012
8976011540	8-9760	1154	BRACKET; INJ PUMP TO C/BL	000000	000000

8976011541	8-9760	1154	BRACKET; INJ PUMP TO C/BL	000008	000002
8976014201	8-9760	1420	COVER;HOLE	000001	000001
8976014380	8-9760	1438	CAMSHAFT	000017	000009
8976014470	8-9760	1447	GASKET; INJ NOZZLE	000000	000000
8976014471	8-9760	1447	GASKET; INJ NOZZLE	000000	000000
8976014472	8-9760	1447	GASKET; INJ NOZZLE	000000	000000
8976015040			HEAD ASM; CYL	000000	000000
8976015041			HEAD ASM; CYL	000000	000000
8976015042			HEAD ASM; CYL	000000	000000
8976016981	8-9760	1698	GEAR; PUMP	000044	000188
8976016990	8-9760	1699	BRACKET; PUMP	000047	000180
8976017710	8-9760	1771	PIPE; INJ NO.3	000000	000000
8976017711	8-9760	1771	PIPE; INJ NO.3	000000	000000
8976017712	8-9760	1771	PIPE; INJ NO.3	000000	000000
8976017713	8-9760	1771	PIPE; INJ NO.3	000000	000049
8976017770	8-9760	1777	GASKET; INL PIPE TO INL C	000015	000028
8976018192	8-9760	1819	GASKET;CYL HD	000000	000000
8976018193	8-9760	1819	GASKET;CYL HD	000000	000000
8976018194	8-9760	1819	GASKET;CYL HD	000000	000000
8976018195	8-9760	1819	GASKET;CYL HD	000034	000019
8976018260	8-9760	1826	BRACKET; TUBE,OIL LEVEL G	000000	000017
8976018360	8-9760	1836	GASKET; EGR PIPE	000000	000015
8976018490	8-9760	1849	RUBBER;NT,HD COVER	000000	000000
8976018491	8-9760	1849	RUBBER;NT,HD COVER	000063	000190
8976019462	8-9760	1946	GEAR; CM/SHF	000001	000000
8976019670	8-9760	1967	SENSOR; MANIF	000000	000000
8976020090	8-9760	2009	BOLT; BRACE,TURBOCHARGER	000000	000000
8976020352	8-9760	2035	THERMOSTAT	000000	000300
8976020370			THERMOSTAT	000185	000000
8976020480	8-9760	2048	THERMOSTAT	000000	000000
8976020481	8-9760	2048	THERMOSTAT	000000	000000
8976020482	8-9760	2048	THERMOSTAT	000112	000269
8976020494	8-9760	2049	PUMP ASM; INJ	000000	000000
8976020495	8-9760	2049	PUMP ASM; INJ	000000	000000
8976020496	8-9760	2049	PUMP ASM; INJ	000000	000000
8976020497	8-9760	2049	PUMP ASM; INJ	000038	000155
8976020560	8-9760	2056	MANIFOLD; EXH, FRT	000000	000004
8976021150	8-9760	2115	GEAR; DRIVEN OIL PUMP	000000	000057
8976021320	8-9760	2132	GEAR; DRIVEN OIL PUMP	000000	000050
8976021321	8-9760	2132	GEAR; DRIVEN OIL PUMP	000000	000000
8976021671	8-9760	2167	STARTER ASM	000000	000001
8976021730	8-9760	2173	BOLT; EYE	000022	000009
8976022180	8-9760	2218	GASKET; EYE BOLT	000000	000000
8976023010	8-9760	2301	SLEEVE;NOZZLE HOLDER	000000	000000
8976023011	8-9760	2301	SLEEVE;NOZZLE HOLDER	000100	001111
8976023780	8-9760	2378	SEAL;OIL,CRANKSHAFT, FRT	000000	000000
8976023781	8-9760	2378	SEAL;OIL,CRANKSHAFT, FRT	000000	000000

8976023783	8-9760	2378	SEAL;OIL,CRANKSHAFT, FRT	000050	000790
8976023790	8-9760	2379	SEAL;OIL CR/SHF, RR	000063	000553
8976023930	8-9760	2393	THERMOSTAT	000000	000000
8976023931	8-9760	2393	THERMOSTAT	000036	000195
8976024984			TURBOCHARGER ASM	000016	000025
8976025880	8-9760	2588	SHAFT; IDLE GEAR	000001	000021
8976026740	8-9760	2674	PIPE; INJ NO.1	000000	000000
8976026741	8-9760	2674	PIPE; INJ NO.1	000000	000000
8976026742	8-9760	2674	PIPE; INJ NO.1	000000	000000
8976026743	8-9760	2674	PIPE; INJ NO.1	000000	000076
8976026750	8-9760	2675	PIPE; INJ NO.2	000000	000000
8976026751	8-9760	2675	PIPE; INJ NO.2	000000	000000
8976026752	8-9760	2675	PIPE; INJ NO.2	000000	000000
8976026753	8-9760	2675	PIPE; INJ NO.2	000000	000066
8976026871	8-9760	2687	HEAD ASM;CYL	000000	000000
8976026980	8-9760	2698	METAL; CM/SHF	000000	000032
8976026990	8-9760	2699	METAL; CM/SHF	000549	000586
8976027310			BLOCK ASM.CYL	000000	000001
8976027480			HARNESS; INJECTOR	000000	000000
8976027481			HARNESS; INJECTOR	000000	000000
8976027482	8-9760	2748	HARNESS; INJECTOR	000000	000000
8976027490			HARNESS; INJECTOR	000000	000000
8976027491			HARNESS; INJECTOR	000000	000000
8976027492	8-9760	2749	HARNESS; INJECTOR	000000	000000
8976027510			PTO ADAPTER	000000	000005
8976028050			PIPE ASM;INJECTION,C/R	000000	000000
8976028060	8-9760	2806	ADAPTOR; WATER FEED	000000	000013
8976028700			BRACKET; HARNESS, HANGER	000000	000000
8976028701	8-9760	2870	BRACKET; HARNESS, HANGER	000000	000016
8976029020	8-9760	2902	ADPT EXH TRBOCHRGR TO EXH	000000	000000
8976029021	8-9760	2902	ADPT EXH TRBOCHRGR TO EXH	000000	000002
897603004T			CRANKSHAFT	000000	000000
8976030040	8-9760	3004	CRANKSHAFT	000000	000010
8976030360	8-9760	3036	GUIDE; BRIDGE	000000	000012
8976030464	8-9760	3046	CRANKSHAFT	000000	000006
8976030465	8-9760	3046	CRANKSHAFT	000000	000000
8976030490	8-9760	3049	DAMPER; CR/SHF	000000	000002
8976030500	8-9760	3050	CAMSHAFT	000000	000001
8976030523	8-9760	3052	GEAR; IDLE	000000	000000
8976030540	8-9760	3054	SHAFT; IDLE GEAR	000000	000004
8976030661	8-9760	3066	PIPE; OIL,PUMP TO	000000	000003
8976031010	8-9760	3101	PIPE; INJ,C/R	000000	000003
8976031020	8-9760	3102	PIPE; INJ,C/R	000000	000003
8976031120	8-9760	3112	PIPE; INJ NOZZLE	000000	000002
8976031130	8-9760	3113	BRACKET; INJ PIPE	000000	000003
8976031211	8-9760	3121	RAIL ASM; COMMON	000000	000000
8976031212	8-9760	3121	RAIL ASM; COMMON	000000	000043

8976031222	8-9760	3122	BRACKET; COMMON RAIL	000000	000002
8976031471	8-9760	3147	BUSHING; ROCKER A	000000	000000
8976031810	8-9760	3181	GEAR; INJ PUMP DR	000000	000006
8976031841	8-9760	3184	ARM; ROCKER	000000	000012
8976031851	8-9760	3185	ARM; ROCKER	000000	000003
8976031890	8-9760	3189	SHAFT; ROCKER ARM	000000	000003
8976032240	8-9760	3224	GASKET; HSG TO HD	000000	000023
8976032390	8-9760	3239	SEAT; SPR	000000	000012
8976032562	8-9760	3256	GEAR; IDLE	000000	000004
8976032600	8-9760	3260	SPRING; VLV	000000	000013
8976032610	8-9760	3261	SPRING; VLV	000000	000013
8976032630	8-9760	3263	PIN; PISTON	000000	000007
8976032670	8-9760	3267	TUBE; DISTANCE	000000	000003
8976032820	8-9760	3282	GASKET; EGR VLV	000039	000145
8976033010	8-9760	3301	BOLT; CLAMP NOZZL	000000	000033
8976033030	8-9760	3303	COVER; INL	000000	000000
8976033032	8-9760	3303	COVER; INL	000000	000000
8976033033	8-9760	3303	COVER; INL	000000	000002
8976033050	8-9760	3305	SPRING; VLV	000000	000242
8976033070	8-9760	3307	PIPE; INJ, C/R	000013	000015
8976033410	8-9760	3341	COVER; IDLE GEAR	000000	000001
8976033621	8-9760	3362	CLIP; PIPE	000027	000061
8976034140	8-9760	3414	PUMP ASM; INJ	000000	000000
8976034141	8-9760	3414	PUMP ASM; INJ	000000	000000
8976034142	8-9760	3414	PUMP ASM; INJ	000000	000000
8976034143	8-9760	3414	PUMP ASM; INJ	000000	000003
8976034144	8-9760	3414	PUMP ASM; INJ	000000	000095
8976034152	8-9760	3415	NOZZLE ASM; INJ	000000	000000
8976034153	8-9760	3415	NOZZLE ASM; INJ	000000	000000
8976034154	8-9760	3415	NOZZLE ASM; INJ	000000	000000
8976034690	8-9760	3469	FLANGE; INJ,NOZZLE HOLDER	000000	000003
8976034820	8-9760	3482	BOLT; GEAR CASE COVER	000000	000006
8976036052	8-9760	3605	COVER; CYL HEAD LWR	000000	000005
8976036362	8-9760	3636	HOSE; RUBBER,OIL	000000	000000
8976036363	8-9760	3636	HOSE; RUBBER,OIL	000000	000000
8976036732	8-9760	3673	CHAMBER; MIXING,EGR	000000	000002
8976036760	8-9760	3676	GASKET; INL MANIF	000000	000003
8976036842	8-9760	3684	MANIFOLD; EXH,CENTER	000000	000000
8976036843	8-9760	3684	MANIFOLD; EXH,CENTER	000000	000002
8976036900	8-9760	3690	DUCT; EGR VLV	000000	000002
8976037121	8-9760	3712	PIPE; OIL RETURN,TURBOCHA	000000	000003
8976037261	8-9760	3726	PIPE; AIR,LEAK,THERMOSTAT	000000	000003
8976037380	8-9760	3738	BRACKET; INJ PUMP	000000	000002
8976037420	8-9760	3742	PIPE; INJ NO.4	000000	000000
8976037421	8-9760	3742	PIPE; INJ NO.4	000000	000003
8976037440	8-9760	3744	PIPE; INJ NO.6	000000	000000
8976037441	8-9760	3744	PIPE; INJ NO.6	000000	000003

8976037621	8-9760	3762	HARNES; INJECTOR	000000	000002
8976037910	8-9760	3791	DUCT; INT	000000	000002
8976037972	8-9760	3797	HANGER; ENG	000000	000003
8976038030	8-9760	3803	COVER; IDLE GEAR,	000000	000003
8976038380	8-9760	3838	BRACKET; COMMON R	000000	000003
8976038750	8-9760	3875	BRACKET	000000	000003
8976038760	8-9760	3876	PIPE; OIL, INJ PUM	000000	000002
8976038890	8-9760	3889	GASKET; COOLER	000241	000343
8976039451	8-9760	3945	BREATHER; AIR	000000	000004
8976039635	8-9760	3963	BLOCK ASM; CYL	000000	000001
8976040630	8-9760	4063	HOSE; RUBBER, PIPE	000000	000004
8976041631	8-9760	4163	MANIFOLD; EXHAUST	000000	000002
8976041632	8-9760	4163	MANIFOLD; EXHAUST	000000	000001
8976041651	8-9760	4165	DUCT; EGR	000000	000002
8976041770	8-9760	4177	BRACKET; GEN	000000	000022
8976045181	8-9760	4518	MANIFOLD; EXHAUST	000000	000000
8976045182	8-9760	4518	MANIFOLD; EXHAUST	000000	000000
8976045183	8-9760	4518	MANIFOLD; EXHAUST	000000	000003
8976045192	8-9760	4519	DUCT; EGR	000000	000003
8976045203	8-9760	4520	DUCT; INL, TURBOCHARGER	000000	000002
8976046312	8-9760	4631	BRACKET; EGR COOL	000000	000003
8976047150	8-9760	4715	COOLER ASM; OIL	000000	000002
8976047191	8-9760	4719	VALVE GUIDE	000000	000000
8976047391	8-9760	4739	BRACKET; DUCT	000000	000003
8976048781	8-9760	4878	MANIFOLD; EXH, CENTER	000000	000003
8976048841	8-9760	4884	COVER; RR EXH MAN	000000	000002
8976049014	8-9760	4901	HEAD ASM; CYL	000000	000000
8976049015	8-9760	4901	HEAD ASM; CYL	000000	000010
8976049160	8-9760	4916	GASKET; SLEEVE, NOZZLE HOLD	000302	001439
8976049440	8-9760	4944	MANIFOLD; EXH, RR	000000	000008
8976050050	8-9760	5005	HEAD ASM; CYL	000000	000000
8976050052	8-9760	5005	HEAD ASM; CYL	000000	000000
8976050090			HEAD ASM; CYL	000000	000000
8976050091			HEAD ASM; CYL	000000	000000
8976050092			HEAD ASM; CYL	000000	000000
8976051280	8-9760	5128	CONNECTOR; GLOW P	000000	000003
8976051960	8-9760	5196	BRACKET; OIL SEPA	000000	000001
8976052190	8-9760	5219	BRACKET; INJ PIPE CLIP	000005	000000
8976052302	8-9760	5230	COVER; FRT	000000	000002
8976052460	8-9760	5246	PIPE; INJ NO.1	000000	000000
8976052461	8-9760	5246	PIPE; INJ NO.1	000000	000003
8976052470	8-9760	5247	PIPE; INJ NO.2	000000	000000
8976052471	8-9760	5247	PIPE; INJ NO.2	000000	000001
8976052480	8-9760	5248	PIPE; INJ NO.3	000000	000008
8976052481	8-9760	5248	PIPE; INJ NO.3	000000	000000
8976052650	8-9760	5265	IMPELLER; WATER P	000000	000003
8976054840	8-9760	5484	METAL; CONNROD	000000	000013

8976054960	8-9760	5496	COVER; INL	000000	000002
8976059352	8-9760	5935	VALVE; EGR	000000	000000
8976059357	8-9760	5935	VALVE; EGR	000000	000003
8976059450	8-9760	5945	PIPE; INJ NO.5	000000	000001
8976059451	8-9760	5945	PIPE; INJ NO.5	000000	000000
8976059480	8-9760	5948	BRACKET; AIR PIPE	000000	000003
8976059790	8-9760	5979	GASKET; REED VLV	000000	000001
8976062190	8-9760	6219	GEAR; WATER PUMP,DRIVE	000002	000000
8976062470	8-9760	6247	SEAT; VLV INSERT	000000	000000
8976062540	8-9760	6254	COVER; OIL FILTER	000000	000003
8976062551	8-9760	6255	PIPE; WATER PUMP,INL	000000	000008
8976062651	8-9760	6265	PIPE ASM; OIL,INJ	000000	000002
8976065900	8-9760	6590	VALVE; REED	000003	000000
8976066270	8-9760	6627	BRACKET; DUCT	000000	000003
8976066300	8-9760	6630	BRACKET; PIPE	000000	000004
8976066340	8-9760	6634	BRACKET;TUBE,OIL LEVEL GA	000000	000003
8976066350	8-9760	6635	BRACKET; WATER PI	000000	000003
8976066400	8-9760	6640	GASKET; ELEMENT TO BODY	000000	000008
8976066410	8-9760	6641	GASKET; ELEMENT TO BODY	000000	000049
8976066430	8-9760	6643	CORE; OIL COOLER	000000	000000
8976066431	8-9760	6643	CORE; OIL COOLER	000000	000001
8976066610	8-9760	6661	SLEEVE; NOZZLE HOLDER	000000	000000
8976066621	8-9760	6662	BRACKET; EXH PIPE	000000	000003
8976067100	8-9760	6710	WASHER; THRUST,CR/SHF	000003	000005
8976067173	8-9760	6717	COOLER; EGR	000000	000003
8976067182	8-9760	6718	COOLER; EGR	000000	000002
8976067193	8-9760	6719	COOLER; EGR	000000	000004
8976067202	8-9760	6720	COOLER; EGR	000000	000004
8976067290	8-9760	6729	GASKET; COVER TO BODY	000000	000004
8976067370	8-9760	6737	HANGER; ENG	000000	000003
8976067460	8-9760	6746	BRACKET; EGR COOL	000000	000003
8976067470	8-9760	6747	BRACKET; EGR COOLER	000000	000003
8976067670	8-9760	6767	GEAR; IDLE	000012	000013
8976067680	8-9760	6768	BUSHING; IDLE GEAR	000000	000056
8976067700	8-9760	6770	BUSHING; IDLE GEAR	000000	000066
8976069290	8-9860	6929	GEAR; IDLE	000031	000000
8976069430	8-9760	6943	SENSOR; CRANK ANGLE	000015	000011
8976069924	8-9760	6992	HEAD ASM;CYL	000000	000000
8976069925	8-9760	6992	HEAD ASM;CYL	000000	000000
8976069926	8-9760	6992	HEAD ASM;CYL	000000	000000
8976069961	8-9760	6996	HEAD ASM; CYL	000000	000000
8976069962	8-9760	6996	HEAD ASM; CYL	000000	000000
8976069963	8-9760	6996	HEAD ASM; CYL	000000	000000
8976069964	8-9760	6996	HEAD ASM; CYL	000000	000000
8976069965	8-9760	6996	HEAD ASM; CYL	000000	000000
8976069966	8-9760	6996	HEAD ASM; CYL	000000	000000
8976069967	8-9760	6996	HEAD ASM; CYL	000000	000000

8976069968	8-9760	6996	HEAD ASM; CYL	000000	000000
8976073450	8-9760	7345	PIPE; WATER,EGR COOLER	000000	000003
8976074350	8-9760	7435	PIPE; WATER,TURBO IN	000000	000003
8976074360	8-9760	7436	BRACKET; WATER PIPE	000000	000003
8976075830	8-9760	7583	GEAR; CR/SHF	000000	000000
8976075831	8-9760	7583	GEAR; CR/SHF	000000	000003
8976075860	8-9760	7586	PUMP ASM; OIL	000000	000002
8976075980	8-9760	7598	GASKET; INL MANIF TO HD	000000	000000
8976075981	8-9760	7598	GASKET; INL MANIF TO HD	000000	000029
8976075982	8-9760	7598	GASKET; INL MANIF TO HD	000000	000000
8976084230	8-9760	8423	GASKET; EGR VLV	000036	000131
8976084550	8-9760	8455	BRACKET; INJ PUMP TO C/BL	000000	000002
8976084720	8-9760	8472	HOSE; WATER,WATER	000000	000003
8976084730	8-9760	8473	HOSE; RUBBER,PIPE	000000	000003
8976085062			BRACKET; HEAD LA	000000	000000
8976085122			MANIFOLD; EXH,FRT	000000	000000
8976085123	8-9760	8512	MANIFOLD; EXH,FRT	000000	000003
8976085141	8-9760	8514	MANIFOLD; EXH,RR	000000	000000
8976085142	8-9760	8514	MANIFOLD; EXH,RR	000000	000003
8976085191	8-9760	8519	DUCT; EGR VLV	000000	000003
8976085670	8-9760	8567	PLUG; COOLER BODY	000000	000005
8976085680	8-9760	8568	GASKET; PLUG	000000	000020
8976085690	8-9760	8569	PLUG; COOLER BODY	000000	000003
8976085700	8-9760	8570	GASKET; PLUG	000000	000004
8976085710	8-9760	8571	PLUG; COOLER BODY	000000	000003
8976085720	8-9760	8572	GASKET; PLUG	000000	000003
8976085730	8-9760	8573	CORE ASM; OIL COO	000000	000003
8976085740	8-9760	8574	GASKET; CORE TO B	000000	000003
8976085750	8-9760	8575	GASKET; CORE TO B	000000	000002
8976085760	8-9760	8576	GUIDE; WATER	000000	000003
8976085770	8-9760	8577	SCREW; WATER GUID	000000	000033
8976085780	8-9760	8578	PIPE ASM; OIL COO	000000	000003
8976085790	8-9760	8579	GASKET; OIL PIPE	000000	000013
8976085800	8-9760	8580	GASKET; OIL PIPE	000000	000003
8976085810	8-9760	8581	GASKET; PLUG	000000	000003
8976087850	8-9760	8785	BRACKET SET; CAM,CYL HD	000000	000000
8976087851	8-9760	8785	BRACKET SET; CAM,CYL HD	000000	000000
8976087852	8-9760	8785	BRACKET SET; CAM,CYL HD	000000	000000
8976087853	8-9760	8785	BRACKET SET; CAM,CYL HD	000000	000007
8976087910	8-9760	8791	BRACKET SET; CAM,CYL HD	000000	000000
8976087911	8-9760	8791	BRACKET SET; CAM,CYL HD	000000	000000
8976087912	8-9760	8791	BRACKET SET; CAM,CYL HD	000000	000000
8976087913	8-9760	8791	BRACKET SET; CAM,CYL HD	000000	000041
8976088580	8-9760	8858	GASKET; INJ NOZZL	000000	000111
8976088830	8-9760	8883	PIPE; INL	000000	000003
8976088841	8-9760	8884	BRACKET; INL MANIF	000000	000003
8976089700	8-9760	8970	IMPELLER; WATER PUMP	000000	000004

8976095800	8-9760	9580	GASKET; CAM CARRI	000000	000003
8976097680	8-9760	9768	METAL SET; CRANKS	000000	000008
8976097690	8-9760	9769	METAL SET; CRANKS	000000	000004
8976097700	8-9760	9770	METAL SET; CRANKS	000000	000008
8976098084	8-9760	9808	ADAPTER; SENSOR	000000	000003
8976098270	8-9760	9827	GASKET; OIL COOLE	000000	000003
8976102780	8-9761	0278	BRACKET; OIL PIPE	000000	000003
8976102800	8-9761	0280	BRACKET; FUEL PIP	000000	000003
8976103061	8-9761	0306	BRACKET; WATER PIPE	000000	000004
8976107173	8-9761	0717	PROTECTOR; HEAT,TURBOCHAR	000000	000000
8976108000	8-9761	0800	COUPLING ASM;INJ PUMP	000001	000003
8976109041	8-9761	0904	PIPE; INJ,C/R	000000	000000
8976109051	8-9761	0905	PIPE; INJ,C/R	000000	000000
8976109101	8-9761	0910	PIPE ASM; OIL,INJ PUMP FE	000000	000001
8976109110	8-9761	0911	PIPE; OIL,INJ PUMP TO C/B	000000	000003
8976110332	8-9761	1033	HOSE; RUBBER, VENTILATOR	000000	000001
8976110770	8-9761	1077	RING SET; PISTON,	000000	000004
8976110800	8-9761	1080	GASKET; DPD	000229	000376
8976110920	8-9761	1092	GASKET; DPD	000022	000059
8976111390	8-9761	1139	FILTER & COOLER A	000000	000000
8976111391	8-9761	1139	FILTER & COOLER A	000000	000000
8976111393	8-9761	1139	FILTER & COOLER A	000000	000002
8976111572	8-9761	1157	GASKET; SENSOR	000000	000004
8976118540	8-9761	1854	ADAPTER;BLOCK HTR	000000	000003
8976119210	8-9761	1921	BRACKET; AIR PIPE	000000	000003
8976119861	8-9761	1986	PROTECTOR; HEAT,EXH MANIF	000000	000001
8976130051	8-9761	3005	BRACKET; WATER PIPE	000000	000004
8976132570	8-9761	3257	CARRIER;CAM SHAFT	000000	000000
8976132571	8-9761	3257	CARRIER;CAM SHAFT	000000	000000
8976132572	8-9761	3257	CARRIER;CAM SHAFT	000000	000003
8976135310	8-9761	3531	BRACKET; WATER PIPE	000000	000004
8976139740	8-9761	3974	BRACKET;INJ PIPE CLIP	000000	000012
8976139880	8-9761	3988	BRACKET; INJ PIPE CLIP	000000	000003
8976155680	8-9761	5568	CLIP; AIR BREATHER	000000	000027
8976156230	8-9761	5623	GASKET; INL MANIF TO HD	000000	000003
8976159060	8-9761	5906	PUMP ASM;WATER,W/GASKET	000000	000000
8976159170	8-9761	5917	BRACKET; HOSE	000000	000003
8976163580	8-9761	6358	METAL SET; CONN ROD,STAND	000013	000127
8976163590	8-9761	6359	METAL SET; CONN ROD,STAND	000065	000040
8976171610	8-9761	7161	PIPE ASM; LEAK OFF	000000	000000
8976173080	8-9761	7308	SEAL; OIL, TIMIN	000000	000078
8976173090	8-9761	7309	SEAL; OIL,CR/SHF,RR	000000	000026
8976185570	8-9761	8557	BRACKET; INL MANIF	000000	000004
8976186632	8-9761	8663	BLOCK ASM; CYL	000000	000003
8976187460	8-9761	8746	BRACKET; WATER PIPE	000000	000004
8976187611	8-9761	8761	GASKET; TURBO TO EXH DUCT	000000	000004
8976188540	8-9761	8854	COVER;CYL HEAD LWR	000000	000003

8976192500	8-9761	9250	CLIP; AIR BREATHER	000000	000008
8976192510	8-9761	9251	CLIP; HARNESS	000000	000008
8976199302	8-9761	9930	PUMP ASM; INJ	000000	000000
8976219360	8-9762	1936	GASKET; REED VLV	000000	000003
8976220351	8-9762	2035	NOZZLE ASM; INJ	000000	000000
8976220352	8-9762	2035	NOZZLE ASM; INJ	000000	000000
8976227192	8-9762	2719	NOZZLE ASM; INJ	000000	000000
8976227193			NOZZLE ASM; INJ	000000	000019
8976234420	8-9762	3442	RAIL ASM; COMMON	000000	000000
8976234421	8-9762	3442	RAIL ASM; COMMON	000000	000003
8976241280	8-9762	4128	PIPE; OIL, INJ PUMP TO C/B	000000	000003
8976241410	8-9762	4141	BRACKET; FUEL PIPE CLIP	000000	000003
8976242410	8-9762	4241	BRACKET; OIL PIPE	000000	000003
8976242421	8-9762	4242	BRACKET; INJ PIPE CLIP	000000	000003
8976254963	8-9762	5496	PUMP ASM; INJ	000000	000003
8976266920	8-9762	6692	BREATHER; AIR	000000	000004
8976267491	8-9762	6749	PIPE; INJ NO.1	000000	000002
8976267501	8-9762	6750	PIPE; INJ NO.2	000000	000002
8976267511	8-9762	6751	PIPE; INJ NO.3	000000	000002
8976267521	8-9762	6752	PIPE; INJ NO.4	000000	000004
8976267531	8-9762	6753	PIPE; INJ NO.5	000000	000001
8976267581	8-9762	6758	PIPE; INJ NO.6	000000	000001
8976267590	8-9762	6759	PIPE; INJ,C/R	000000	000003
8976267600	8-9762	6760	PIPE; INJ,C/R	000000	000003
8976273570			PUMP ASM; WATER	000000	000001
8976281820			PIPE; INJ NO.1	000000	000000
8976281821	8-9762	8182	PIPE; INJ NO.1	000000	000000
8976281830	8-9762	8183	PIPE; INJ NO.2	000000	000000
8976281831	8-9762	8183	PIPE; INJ NO.2	000000	000000
8976281840	8-9762	8184	PIPE; INJ NO.3	000000	000000
8976281841	8-9762	8184	PIPE; INJ NO.3	000000	000000
8976281850	8-9762	8185	PIPE; INJ NO.4	000000	000000
8976281851	8-9762	8185	PIPE; INJ NO.4	000000	000000
8976281860	8-9762	8186	PIPE; INJ NO.5	000000	000000
8976281861	8-9762	8186	PIPE; INJ NO.5	000000	000000
8976281870	8-9762	8187	PIPE; INJ NO.6	000000	000000
8976281871	8-9762	8187	PIPE; INJ NO.6	000000	000000
8976281880	8-9762	8188	PIPE; INJ,C/R	000000	000003
8976281890	8-9762	8189	PIPE; INJ,C/R	000000	000003
8976283000	8-9762	8300	BRACKET; WATER PIPE	000000	000004
8976322702	8-9763	2270	BRACKET; INJ PUMP TO C/BL	000000	000003
8978014051			PANEL; COWL UPR	000000	000001
8978039575			MIRROR ASM; DOOR	000000	000000
8978039755			MIRROR ASM; DOOR	000000	000000
8978058410			BOLT;1ST C/MBR TO S/MBR	000000	000000
8978058411	8-9780	5841	BOLT;1ST C/MBR TO S/MBR	000000	000000
8978060042			FENDER EMBLEM	000000	000000

8978071170		HEADLAMP UNIT	000000	000000
8978078580		BUMPER; FRT.	000000	000000
8978109420		GLASS; SIDE WINDOW	000000	000000
8978109421		GLASS; SIDE WINDOW	000000	000000
8978109610		GLASS; RR QUART	000000	000000
8978109611	8-9781 0961	GLASS; RR QUART	000000	000000
8978109931		GLASS; RR DOOR	000000	000001
8978315680		GEAR SET	000000	000000
8978521292	8-9785 2129	GARNISH; DOOR, LH	000017	000006
8978524104	8-9785 2410	P A D	000000	000000
8978524114	8-9785 2411	P A D	000000	000000
8978550024		LAMP ASM; HEAD	000000	000001
8978550072		LAMP ASM; FRT COMP	000000	000004
8978550082	8-9785 5008	LAMP ASM	000001	000000
8978550094	8-9785 5009	ORNAMENT	000001	000000
8978550103	8-9785 5010	ORNAMENT	000000	000000
8978550105	8-9785 5010	ORNAMENT	000000	000000
8978550221	8-9785 5022	COVER; NOZZLE, W	000000	000000
8978550252	8-9785 5025	NOZZLE; WINDSHIELD	000000	000000
8978550253	8-9785 5025	NOZZLE; WINDSHIELD	000000	000000
8978550884		LAMP ASM; HEAD	000000	000000
8978550894		LAMP ASM; HEAD	000000	000000
8978551280		LENS ASM; FRT C	000000	000000
8978551310		LENS ASM; FRT C	000000	000000
8978551451		PIVOT ASM; FRT	000000	000002
8978551671	8-9785 5167	LAMP ASM	000000	000000
8978551681	8-9785 5168	LAMP ASM	000000	000000
8978562697		STAY; OUTSIDE MIRROR	000000	000001
8978563210		DECAL; CAB FRT	000000	000001
8978567397		STAY; OUTSIDE MIRROR	000000	000000
8978567399		STAY; OUTSIDE MIRROR	000000	000000
8978592433		PANEL; FRONT	000000	000001
8978598564		FINISHER; WINDS	000000	000000
8978598567		FINISHER; WINDS	000000	000000
8978636230		ORNAMENT; HEAD	000000	000000
8978638470	8-9786 3847	DOOR ASM	000000	000000
8978638480	8-9786 3848	DOOR ASM	000000	000000
8978638530	8-9786 3853	DOOR ASM	000000	000000
8978669400		STAY; OUTSIDE MIRROR	000000	000000
8978669401		STAY; OUTSIDE MIRROR	000000	000001
8978678630		ORNAMENT; HEAD	000000	000000
8978682370		STAY; OUTSIDE MIRROR	000000	000003
8978682372		STAY; OUTSIDE MIRROR	000000	000000
8978691200		GLASS; WINDSHIELD	000000	000000
8978691201		GLASS; WINDSHIELD	000000	000001
8978691210		GLASS; WINDSHIELD	000000	000000
8978691211		GLASS; WINDSHIELD	000000	000000

8978691230		GLASS; WINSHIELD	000000	000000
8978691271		GLASS; WINDSHIELD	000000	000000
8978902133		MOLDING; WINDSHIELD	000000	000001
8978902141		MOLDING; WINDSHEILD	000000	000000
8978902143		MOLDING; WINDSHIELD	000000	000000
8978903961		PANEL ASM;BODY	000000	000001
8978984790		MOTOR;POWER WI	000000	000001
8979169931		ELEMENT KIT; FUEL	000000	000000
8979169932		ELEMENT KIT; FUEL	000000	000000
8979200070	8-9792 0007	SHAFT; IDLE GEAR	000000	000001
8979239280	8-9792 3928	PIPE; OIL,PUMP	000000	000000
8979403970		GATE ASM; TAIL	000000	000000
8979403971		GATE ASM; TAIL	000000	000002
8979416551		FILTER; ACL	000000	000000
8979423060		RING;RETAINER	000000	000000
8979424103		CLEANER ASM	000000	000000
8979430750		PUMP; FUEL	000000	000000
8979430870		PUMP;FUEL	000000	000000
8979431410		SEAL;FUEL SENS	000000	000000
8979431730		BELT; COOLOING FAN	000000	000000
8979436241		KNUCKLE; FRT AXLE	000000	000000
8979439020		TANK;FUEL	000000	000000
8979445700		FILTER;ACL	000000	000000
8979450670	8-9794 5067	CHAIN; TIMING,CM/	000005	000000
8979450681	8-9794 5068	TENSIONER; CHAIN	000001	000003
8979450690	8-9794 5069	GUIDE; TIMING CHA	000003	000000
8979450700	8-9794 5070	LEVER; TENSION, TI	000000	000000
8979452610	8-9794 5261	CASE; TIMING GEAR	000000	000000
8979452611	8-9794 5261	CASE; TIMING GEAR	000000	000000
8979452612	8-9794 5261	CASE; TIMING GEAR	000000	000003
8979452980	8-9794 5298	GASKET; GEAR CASE	000003	000000
8979453380	8-9794 5338	GASKET; HD TO COV	000063	000088
8979942640		WEATHERSTRIP	000000	000002
8979978220		BAR;FRT BUMPER	000000	000001
8979979452		GLASS;WINDSHIELD	000000	000000
8979990140		BUMPER; FRT	000001	000003
8980001130	8-9800 0113	PIPE ASM; OIL,BODY	000000	000001
8980003460		METAL; BALANCE	000000	000004
8980003750		TUBE;GUIDE,OIL LEVEL GAUG	000000	000002
8980007050	8-9800 0705	POWER TAKE OFF ASM; ENG R	000000	000000
8980007052	8-9800 0705	POWER TAKE OFF ASM; ENG R	000000	000000
8980007053	8-9800 0705	POWER TAKE OFF ASM; ENG R	000000	000000
8980007080	8-9800 0708	GEAR; INPUT	000001	000000
8980007090	8-9800 0709	GEAR; IDLE	000000	000002
8980007120	8-9800 0712	GEAR; OUTPUT	000001	000000
8980007130	8-9800 0713	CASE; BRG,PTO	000000	000000
8980007131	8-9800 0713	CASE; BRG,PTO	000000	000002

8980007880	8-9800	0788	HOSE; RUBBER,AIR	000000	000000
8980007881	8-9800	0788	HOSE; RUBBER,AIR	000000	000000
8980007882	8-9800	0788	HOSE; RUBBER,AIR	000000	000018
8980007883	8-9800	0788	HOSE; RUBBER,AIR	000000	000000
8980007890	8-9800	0789	HOSE; RUBBER	000000	000045
8980007900	8-9800	0790	BEARING; FLYWHEEL PTO	000000	000001
8980007910	8-9800	0791	BEARING; FLYWHEEL PTO	000000	000005
8980008060	8-9800	0806	HOSE; RUBBER	000000	000022
8980008900	8-9800	0890	SEAL; OIL,BRG CASE,PTO	000002	000001
8980010211	8-9800	1021	PIPE; AIR,EGR	000001	000001
8980010220	8-9800	1022	ADAPTER; EGR GAS TEMP SEN	000000	000000
8980010230	8-9800	1023	GASKET; EGR PIPE	000000	000160
8980010240	8-9800	1024	GASKET; EGR VLV	000000	000103
8980010410	8-9800	1041	BRACKET; INJ PIPE	000014	000028
8980011910	8-9800	1191	VALVE; EGR	000000	000000
8980011911	8-9800	1191	VALVE; EGR	000000	000000
8980011912	8-9800	1191	VALVE; EGR	000000	000000
8980019150	8-9800	1915	STARTER ASM	000000	000000
8980019162	8-9800	1916	PAN ASM; OIL	000000	000001
8980023250	8-9800	2325	BRIDGE	000000	000005
8980023321	8-9800	2332	GEAR; CR/SHF	000000	000004
8980023440	8-9800	2344	ELEMENT; FUEL FILTER	000000	000000
8980025040	8-9800	2504	PULLEY; CR/SHF	000000	000004
8980025051	8-9800	2505	HOUSING; FLYWHEEL	000000	000001
8980025091	8-9800	2509	FLYWHEEL	000000	000000
8980025092	8-9800	2509	FLYWHEEL	000000	000002
8980025100	8-9800	2510	STRAINER & PIPE A	000000	000003
8980025111	8-9800	2511	PIPE; OIL,TURBOCH	000000	000000
8980025112	8-9800	2511	PIPE; OIL,TURBOCH	000000	000002
8980025121	8-9800	2512	PIPE; OIL RETURN,	000000	000002
8980025140	8-9800	2514	TUBE; GUIDE,OIL L	000000	000001
8980025220	8-9800	2522	PULLEY; WATER PUM	000000	000002
8980025400	8-9800	2540	PIPE; WATER,EGR C	000000	000003
8980025451	8-9800	2545	PIPE; WATER,EGR C	000000	000000
8980025452	8-9800	2545	PIPE; WATER,EGR C	000000	000002
8980025490	8-9800	2549	PIPE; WATER,EGR C	000000	000002
8980025521	8-9800	2552	PIPE; WATER,EGR C	000000	000002
8980025540	8-9800	2554	PIPE; AIR,LEAK,TH	000000	000002
8980025550	8-9800	2555	BRACKET; WATER PI	000000	000000
8980025551	8-9800	2555	BRACKET; WATER PI	000000	000003
8980025561	8-9800	2556	BRACKET; WATER PI	000000	000000
8980025562	8-9800	2556	BRACKET; WATER PI	000000	000003
8980025580	8-9800	2558	ADAPTER; EXH,TURB	000000	000000
8980025581	8-9800	2558	ADAPTER; EXH,TURB	000000	000002
8980025600	8-9800	2560	TURBOCHARGER ASM	000000	000000
8980025611	8-9800	2561	PIPE; FUEL,FEED P	000000	000002
8980025621	8-9800	2562	PIPE; FUEL,FUEL F	000000	000001

8980025630	8-9800	2563	PIPE; FUEL,FUEL F	000000	000001
8980025641	8-9800	2564	PIPE; FUEL,FUEL F	000000	000002
8980025650	8-9800	2565	PIPE; FUEL,FEED P	000000	000002
8980025661	8-9800	2566	BRACKET; FUEL PIP	000000	000002
8980025670	8-9800	2567	BRACKET; WATER PI	000000	000003
8980025681	8-9800	2568	BRACKET; FUEL FIL	000000	000000
8980025682	8-9800	2568	BRACKET; FUEL FIL	000000	000002
8980025690	8-9800	2569	BRACKET; GEN	000000	000003
8980025702	8-9800	2570	HARNESS; ENG	000000	000000
8980025703	8-9800	2570	HARNESS; ENG	000000	000001
8980026180	8-9800	2618	CONTROL UNIT; ENG	000000	000000
8980026182	8-9800	2618	CONTROL UNIT; ENG	000008	000000
8980026183	8-9800	2618	CONTROL UNIT; ENG	000010	000000
8980027990	8-9800	2799	BRACKET; IDLE PULLEY	000000	000012
8980028973	8-9800	2897	HARNESS; ENG	000000	000000
8980028974	8-9800	2897	HARNESS; ENG	000000	000000
8980028975	8-9800	2897	HARNESS; ENG	000000	000000
8980028976	8-9800	2897	HARNESS; ENG	000000	000003
8980028977	8-9800	2897	HARNESS; ENG	000000	000026
8980030360	8-9800	3036	CONTROL UNIT; ENG	000000	000000
8980030370	8-9800	3037	ECM (80T)	000000	000000
8980030371	8-9800	3037	ECM (80T)	000003	000000
8980030390	8-9800	3039	CONTROL UNIT; ENG	000000	000000
8980030400	8-9800	3040	CONTROL UNIT; ENG	000000	000000
8980031292	8-9800	3129	CAMSHAFT; INL	000000	000000
8980031293	8-9800	3129	CAMSHAFT; INL	000002	000003
8980031302	8-9800	3130	CAMSHAFT; EXH	000000	000000
8980031303	8-9800	3130	CAMSHAFT; EXH	000000	000005
8980031640	8-9800	3164	DIAPHRAGM; VENTIL	000007	000000
8980034160	8-9800	3416	PLUG; HD	000000	000112
8980036550	8-9800	3655	BLOCK ASM; CYL	000000	000001
8980037900	8-9800	3790	COOLER ASM; OIL	000000	000000
8980037901	8-9800	3790	COOLER ASM; OIL	000000	000000
8980037903	8-9800	3790	COOLER ASM; OIL	000000	000000
8980037904	8-9800	3790	COOLER ASM; OIL	000000	000013
8980038450	8-9800	3845	PIPE; OIL RETURN,TURBOCHA	000000	000007
8980038730	8-9800	3873	INJECTION PUMP	000000	000000
8980039297	8-9800	3929	FILTER & COOLER ASM; OIL	000000	000000
8980039298	8-9800	3929	FILTER & COOLER ASM; OIL	000000	000000
8980039299	8-9800	3929	FILTER & COOLER ASM; OIL	000000	000002
8980040050	8-9800	4005	BRACKET; WATER PIPE	000002	000000
8980040060	8-9800	4006	BRACKET; WATER PIPE	000000	000000
8980040061	8-9800	4006	BRACKET; WATER PIPE	000004	000000
8980040070	8-9800	4007	DUCT; EGR VLV	000001	000001
8980040080	8-9800	4008	DUCT; EGR VLV	000000	000002
8980040090	8-9800	4009	DUCT; EGR VLV	000001	000000
8980040100	8-9800	4010	DUCT; EGR VLV	000000	000001

8980040160	8-9800	4016	PIPE; WATER,EGR COOLER	000000	000000
8980040161	8-9800	4016	PIPE; WATER,EGR COOLER	000000	000024
8980041870	8-9800	4187	GASKET;SLEEVE,NOZZLE HLDR	000059	000311
8980042591	8-9800	4259	GEAR; CM/SHF	000000	000002
8980043230	8-9800	4323	GASKET; BRKT	000066	000222
8980043290	8-9800	4329	SENSOR; TEMPERATURE,DPD	000037	000010
8980043300	8-9800	4330	SENSOR; TEMPERATURE,DPD	000012	000016
8980044530	8-9800	4453	FAN PULLEY	000000	000000
8980052791	8-9800	5279	BLOCK ASM; CYL	000000	000000
8980052794	8-9800	5279	BLOCK ASM; CYL	000000	000000
8980054080	8-9800	5408	BLOCK ASM; CYL	000000	000000
8980054082	8-9800	5408	BLOCK ASM; CYL	000000	000000
8980054431	8-9800	5443	BLOCK ASM; CYL	000000	000000
8980054433	8-9800	5443	BLOCK ASM; CYL	000000	000000
8980054434	8-9800	5443	BLOCK ASM; CYL	000000	000000
8980054436	8-9800	5443	BLOCK ASM; CYL	000000	000000
8980054437	8-9800	5443	BLOCK ASM; CYL	000000	000001
8980054830	8-9800	5483	GEAR; IDLE	000000	000003
8980056040	8-9800	5604	COVER; P/S	000000	000000
8980056041	8-9800	5604	COVER; P/S	000000	000003
8980056310	8-9800	5631	RELAY; STARTER	000000	000012
8980057981	8-9800	5798	HOSE;RUBBER,CON TO OILPAN	000000	000001
8980057991	8-9800	5799	HOSE;RUBBER,CON TO OILPAN	000000	000001
8980058420	8-9800	5842	BOLT; BRKT, POWE	000000	000000
8980060070	8-9800	6007	BAND; "V",TURBO TO EXH PI	000000	000395
8980064540			FILTER ASM; FUEL	000000	000000
8980069950	8-9800	6995	COOLER; EGR	000000	000000
8980069951	8-9800	6995	COOLER; EGR	000000	000000
8980069952	8-9800	6995	COOLER; EGR	000000	000000
8980069953	8-9800	6995	COOLER; EGR	000000	000133
8980069960	8-9800	6996	PIPE; EGR	000000	000001
8980070001	8-9800	7000	PIPE; OIL,TURBOCHARGER FE	000000	000004
8980077750	8-9800	7775	PIPE; WATER,EGR COOLER	000000	000000
8980077751	8-9800	7775	PIPE; WATER,EGR COOLER	000001	000000
8980077760	8-9800	7776	PIPE; WATER,EGR COOLER	000000	000000
8980077761	8-9800	7776	PIPE; WATER,EGR COOLER	000000	000003
8980077770	8-9800	7777	PIPE; WATER,EGR COOLER	000000	000000
8980077771	8-9800	7777	PIPE; WATER,EGR COOLER	000000	000008
8980077800	8-9800	7780	STUD; COVER	000000	000018
8980080980	8-9800	8098	CLIP; FUEL HOSE	000044	000008
8980081650	8-9800	8165	CLIP; DRAIN HOSE	000000	000003
8980083630	8-9800	8363	HEAD ASM; CYL	000000	000000
8980083631	8-9800	8363	HEAD ASM; CYL	000000	000000
8980083633	8-9800	8363	HEAD ASM; CYL	000000	000000
8980083636	8-9800	8363	HEAD ASM; CYL	000000	000000
8980083637	8-9800	8363	HEAD ASM; CYL	000000	000000
8980083638	8-9800	8363	HEAD ASM; CYL	000000	000000

8980087890	8-9800	8789	PIPE; FUEL FEED	000000	000000
8980087891	8-9800	8789	PIPE; FUEL FEED	000000	000015
8980087910	8-9800	8791	PIPE; FUEL FEED	000000	000006
8980088400	8-9800	8840	ELEMENT KIT; FUEL FILTER	000000	000000
8980088401	8-9800	8840	ELEMENT KIT; FUEL FILTER	000000	000000
8980088410	8-9800	8841	ELEMENT; FUEL FIL	000000	000000
8980088420	8-9800	8842	GASKET; CASE TO BODY,FUEL	000000	000067
8980088430	8-9800	8843	PLUG; FUEL FILTER	000000	000090
8980088440	8-9800	8844	CASE; FUEL FILTER	000000	000025
8980088460	8-9800	8846	PLUG; FUEL FILTER	000000	000006
8980088470	8-9800	8847	PLUG; FUEL FILTER	000000	000000
8980088471	8-9800	8847	PLUG; FUEL FILTER	000000	000010
8980088480	8-9800	8848	PLUG; DRAIN	000291	000000
8980088490	8-9800	8849	FLOAT; FUEL FILTER	000000	000089
8980088950	8-9800	8895	BOLT; CLAMP NOZZLE HOLDER	000062	000202
8980089501	8-9800	8950	CONTROL UNIT; ELEC	000000	000000
8980089510	8-9800	8951	CONTROL UNIT; ENG	000000	000000
8980089511	8-9800	8951	CONTROL UNIT; ENG	000000	000000
8980089512	8-9800	8951	CONTROL UNIT; ENG	000011	000000
8980089541	8-9800	8954	CONTROL UNIT; ENG	000000	000000
8980089543	8-9800	8954	CONTROL UNIT; ENG	000000	000000
8980089544	8-9800	8954	CONTROL UNIT; ENG	000000	000000
8980089546	8-9800	8954	CONTROL UNIT; ENG	000000	000000
8980089551	8-9800	8955	CONTROL UNIT; ENG	000000	000000
8980089553	8-9800	8955	CONTROL UNIT; ENG	000000	000000
8980089554	8-9800	8955	CONTROL UNIT; ENG	000008	000000
8980089561	8-9800	8956	CONTROL UNIT; ENG	000000	000000
8980089563	8-9800	8956	CONTROL UNIT; ENG	000001	000000
8980089564	8-9800	8956	CONTROL UNIT; ENG	000006	000000
8980090933	8-9800	9093	BRACKET; COMMON R	000000	000000
8980093220	8-9800	9322	GASKET; BYPASS PI	000000	000004
8980093970	8-9800	9397	PUMP ASM; FUEL,ELEC	000000	000000
8980093971	8-9800	9397	PUMP ASM; FUEL,ELEC	000000	000024
8980094180	8-9800	9418	SENSOR; MAP	000059	000103
8980098180			HEADLAMP UNIT	000000	000003
8980098190			HEADLAMP UNIT	000000	000000
8980098850	8-9800	9885	TUBE; GUIDE,OIL LEVEL GAU	000000	000008
8980100420	8-9801	0042	VALVE; FEED PUMP	000000	000000
8980106380	8-9801	0638	TUBE; GUIDE,OIL LEVEL GAU	000003	000000
8980108910			LAMP ASM; FRT C	000000	000000
8980108920			LAMP ASM; FRT C	000000	000023
8980112690	8-9801	1269	BOLT; EYE, FEED PUMP	000000	000031
8980115242	8-9801	1524	COOLER; EGR	000000	000003
8980115282	8-9801	1528	CLAMP; NOZZLE HOL	000007	000015
8980115320	8-9801	1532	GASKET; TURBOCHARGER TO E	000026	000070
8980116040	8-9801	1604	NOZZLE ASM; INJ	000000	000000
8980116041	8-9801	1604	NOZZLE ASM; INJ	000000	000000

8980116042	8-9801	1604	NOZZLE ASM; INJ	000000	000000
8980116043	8-9801	1604	NOZZLE ASM; INJ	000000	000000
8980116044	8-9801	1604	NOZZLE ASM; INJ	000000	000103
8980116060	8-9801	1606	PIPE; INJ NO.1	000000	000032
8980116070	8-9801	1607	PIPE; INJ NO.2	000000	000067
8980116080	8-9801	1608	PIPE; INJ NO.3	000000	000072
8980116090	8-9801	1609	PIPE; INJ NO.4	000000	000028
8980116920	8-9801	1692	PAN ASM; OIL	000000	000002
8980116961	8-9801	1696	BOLT; PIPE	000000	000021
8980118880	8-9801	1888	RAIL ASM; COMMON	000000	000000
8980118881	8-9801	1888	RAIL ASM; COMMON	000000	000000
8980118882	8-9801	1888	RAIL ASM; COMMO	000010	000019
8980118901	8-9801	1890	BRACKET; COMMON RAIL	000000	000002
8980120091	8-9801	2009	GUARD; FAN	000000	000000
8980120092	8-9801	2009	GUARD; FAN	000000	000000
8980120093	8-9801	2009	GUARD; FAN	000000	000001
8980120520	8-9801	2052	POWER TAKE OFF AS	000000	000001
8980121631	8-9801	2163	CONTROL UNIT; ENG	000000	000000
8980121633	8-9801	2163	CONTROL UNIT; ENG	000000	000000
8980121634	8-9801	2163	CONTROL UNIT; ENG	000004	000000
8980122591	8-9801	2259	PIPE; OIL,C/BL TO	000000	000002
8980125320			PIPE; OIL STRAI	000000	000003
8980126071	8-9801	2607	ROD ASM; CONN	000000	000000
8980126072	8-9801	2607	ROD ASM; CONN	000000	000025
8980126110	8-9801	2611	ROD; CONNECTING	000000	000000
8980126111	8-9801	2611	ROD; CONNECTING	000000	000000
8980126112	8-9801	2611	ROD; CONNECTING	000000	000017
8980129601	8-9801	2960	COVER; GEAR CASE	000000	000001
8980129602	8-9801	2960	COVER; GEAR CASE	000003	000003
8980131700	8-9801	3170	WRENCH; MAIN FILTER	000000	000019
8980132740	8-9801	3274	BRACKET; IDLE PULLEY	000000	000008
8980132900	8-9801	3290	ROD ASM; COM	000000	000000
8980132901	8-9801	3290	ROD ASM; COM	000000	000000
8980132902	8-9801	3290	ROD ASM; COM	000000	000000
8980137900	8-9801	3790	RELAY; ENG CONT	000000	000020
8980138240	8-9801	3824	BLOCK ASM; CYL	000000	000000
8980138241	8-9801	3824	BLOCK ASM; CYL	000000	000000
8980138242	8-9801	3824	BLOCK ASM; CYL	000000	000003
8980139100	8-9801	3910	PUMP ASM; INJ	000000	000000
8980139101	8-9801	3910	PUMP ASM; INJ	000000	000000
8980139103	8-9801	3910	PUMP ASM; INJ	000000	000000
8980139104	8-9801	3910	PUMP ASM; INJ	000000	000001
8980139620	8-9801	3962	ROD ASM; CONN	000000	000000
8980139621	8-9801	3962	ROD ASM; CONN	000000	000000
8980139623	8-9801	3962	ROD ASM; COM	000000	000000
8980139624	8-9801	3962	ROD ASM; COM	000000	000040
8980139860	8-9801	3986	FILTER ASM; FUEL	000000	000000

8980139861	8-9801	3986	FILTER ASM; FUEL	000000	000000
8980139862	8-9801	3986	FILTER ASM; FUEL	000000	000000
8980139863	8-9801	3986	FILTER ASM; FUEL	000000	000000
8980140460	8-9801	4046	LINER; C/BL	000002	000028
8980140461	8-9801	4046	LINER; C/BL	000000	000000
8980140470	8-9801	4047	LINER; C/BL	000000	000015
8980140471	8-9801	4047	LINER; C/BL	000000	000000
8980141410			BOLT; RET,DRIVE	000000	000000
8980142540	8-9801	4254	FILTER ASM; SUB FUEL	000000	000002
8980143350	8-9801	4335	CONNECTOR; GLOW P	000001	000007
8980147630	8-9801	4763	BOLT; COVER	000025	000000
8980148241	8-9801	4824	CRANKCASE	000000	000000
8980148242	8-9801	4824	CRANKCASE	000000	000000
8980148246	8-9801	4824	CRANKCASE	000000	000003
8980148310	8-9801	4831	SENSOR; CAM ANGLE	000000	000018
8980149030	8-9801	4903	PIPE; FUEL	000000	000001
8980149190	8-9801	4919	PIPE; FUEL,FEED PUMP,SUCT	000000	000030
8980151420			DRIVE ASM; FINAL	000000	000000
8980151430			DRIVE ASM;FINA	000000	000001
8980151931	8-9801	5193	PIN; PISTON	000017	000000
8980152720	8-9801	5272	CONTROL UNIT; ENG	000000	000000
8980152721	8-9801	5272	CONTROL UNIT; ENG	000001	000000
8980152730	8-9801	5273	CONTROL UNIT; ENG	000000	000000
8980152731	8-9801	5273	CONTROL UNIT; ENG	000001	000000
8980168650	8-9801	6865	PLATE; BAFFLE,CYL	000000	000000
8980168920	8-9801	6892	FLANGE; IDLE SHAF	000005	000000
8980168930	8-9801	6893	FLANGE; IDLE SHAF	000004	000000
8980169730	8-9801	6973	VALVE; INL	000068	000000
8980169740	8-9801	6974	VALVE; EXH	000000	000000
8980169741	8-9801	6974	VALVE; EXH	000046	000000
8980170270	8-9801	7027	THERMOSTAT	000000	000000
8980170271	8-9801	7027	THERMOSTAT	000033	000000
8980170620	8-9801	7062	STUD; COVER	000000	000013
8980170630	8-9801	7063	STUD; INL MANIF	000000	000013
8980170670	8-9801	7067	SEAT; SPR	000131	000050
8980171230	8-9801	7123	YOKE; STARTER	000002	000000
8980171250	8-9801	7125	LEVER; SHIFT,STARTER	000002	000000
8980171260	8-9801	7126	HOLDER; SHIFT LEVER	000002	000000
8980171280	8-9801	7128	PLATE; ENGAGE SW STARTER	000002	000000
8980171290	8-9801	7129	PINION; CLU,STARTER	000003	000000
8980171310	8-9801	7131	STOPPER; PINION STARTER	000002	000000
8980171320	8-9801	7132	GEAR; STARTER	000004	000000
8980171340	8-9801	7134	CLIP; PINION STOPPER STAR	000005	000000
8980171350	8-9801	7135	CLUTCH ASM; PINION,STARTE	000003	000000
8980171360	8-9801	7136	CLUTCH; PINION,STARTER	000001	000000
8980171370	8-9801	7137	WASHER; GEAR SHAFT STARTE	000010	000000
8980171380	8-9801	7138	WASHER; PINION STOPPER,ST	000010	000000

8980171400	8-9801	7140	SHAFT; GEAR STARTER	000003	000000
8980171420	8-9801	7142	BRACKET; CENTER STARTER	000003	000000
8980171430	8-9801	7143	COVER ASM; RR, STARTER	000003	000000
8980171440	8-9801	7144	HOLDER; BRUSH STARTER	000000	000001
8980171450	8-9801	7145	SWITCH; ENGAGE STARTER	000000	000003
8980171460	8-9801	7146	COVER; PINION, STARTER	000003	000000
8980171470	8-9801	7147	SPRING; STARTER	000002	000000
8980171480	8-9801	7148	SEAL KIT; STARTER	000000	000000
8980171490	8-9801	7149	ARMATURE; STARTER	000002	000000
8980171660	8-9801	7166	RING SET; PISTON, STANDARD	000000	000064
8980175391	8-9801	7539	GEAR; INJ PUMP	000002	000000
8980175510	8-9801	7551	GASKET; EGR PIPE	000015	000000
8980182040	8-9801	8204	GENERATOR ASM	000000	000044
8980182350	8-9801	8235	PULLY; FAN DRIVE	000000	000007
8980182351	8-9801	8235	PULLY; FAN DRIVE	000000	000000
8980182360	8-9801	8236	PULLY; FAN DRIVE	000003	000001
8980182361	8-9801	8236	PULLY; FAN DRIVE	000000	000002
8980184250	8-9801	8425	ROD ASM; CONN	000000	000000
8980184251	8-9801	8425	ROD ASM; CONN	000000	000000
8980184252	8-9801	8425	ROD ASM; CONN	000041	000029
8980184543	8-9801	8454	HEAD ASM; CYL	000000	000000
8980184545	8-9801	8454	HEAD ASM; CYL	000000	000000
8980184546	8-9801	8454	HEAD ASM; CYL	000000	000000
8980184620	8-9801	8462	SLEEVE; NOZZLE HOLDER	000354	000127
8980185070	8-9801	8507	FAN; COOLING	000000	000000
8980185071	8-9801	8507	FAN; COOLING	000000	000028
8980185180	8-9801	8518	GASKET; VLV	000023	000055
8980185190	8-9801	8519	GASKET; VLV	000005	000029
8980185290	8-9801	8529	COVER; FUEL FILTER	000000	000000
8980185291	8-9801	8529	COVER; FUEL FILTER	000000	000000
8980185292	8-9801	8529	COVER; FUEL FILTER	000000	000006
8980187830	8-9801	8783	HOSE; RUBBER, AIR	000000	000047
8980188460	8-9801	8846	PLUG; CENTER BOLT	000016	000000
8980188470	8-9801	8847	BOLT; CENTER	000001	000000
8980188500	8-9801	8850	SPRING; ELEMENT	000000	000000
8980188530	8-9801	8853	PLATE; OIL FILTER	000000	000000
8980188550	8-9801	8855	GASKET; TURBOCHARGER TO E	000000	000061
8980188580	8-9801	8858	OIL FILTER ELEMENT	003810	005989
8980188620	8-9801	8862	CASE; OIL FILTER	000015	000000
8980188631	8-9801	8863	PIN; PISTON	000000	000764
8980189343	8-9801	8934	GEAR; CM/SHF	000004	000007
8980189353	8-9801	8935	GEAR; CM/SHF	000003	000003
8980190240	8-9801	9024	SENSOR; CAM ANGLE	000000	000013
8980191790	8-9801	9179	BOLT; PROTECTOR	000000	000058
8980194750	8-9801	9475	NIPPLE; OIL PRESS	000000	000012
8980194751	8-9801	9475	NIPPLE; OIL PRESS	000000	000002
8980195031	8-9801	9503	PAN ASM; OIL	000001	000001

8980195051	8-9801	9505	GASKET; OIL PAN	000000	000000
8980195052	8-9801	9505	GASKET; OIL PAN	000000	000007
8980195101	8-9801	9510	PIPE; OIL STRAINE	000002	000001
8980195110	8-9801	9511	PIPE; OIL, TURBOCH	000000	000001
8980195121	8-9801	9512	PIPE; OIL RETURN,	000001	000002
8980195131	8-9801	9513	TUBE; GUIDE, OIL L	000000	000000
8980195132	8-9801	9513	TUBE; GUIDE, OIL L	000000	000000
8980195133	8-9801	9513	TUBE; GUIDE, OIL L	000000	000000
8980195140	8-9801	9514	COOLER ASM; OIL, W	000000	000000
8980195141	8-9801	9514	COOLER ASM; OIL, W	000000	000000
8980195142	8-9801	9514	COOLER ASM; OIL, W	000000	000002
8980196451	8-9801	9645	BRACKET; STAY	000004	000000
8980196461	8-9801	9646	BRACKET; FAN SHRO	000004	000000
8980196471	8-9801	9647	BRACKET; STAY	000004	000000
8980196640	8-9801	9664	BEARING; COUNTER	000000	000003
8980196801	8-9801	9680	PIPE; WATER	000000	000008
8980196950	8-9801	9695	PIPE; WATER OUTLE	000001	000000
8980196981	8-9801	9698	PIPE; WATER, TURBO	000001	000000
8980196990	8-9801	9699	PIPE; WATER, TURBO	000001	000000
8980197000	8-9801	9700	PIPE; WATER, TURBO	000000	000001
8980197011	8-9801	9701	PIPE; WATER EGR	000002	000001
8980197021	8-9801	9702	PIPE; WATER EGR	000001	000000
8980197410	8-9801	9741	PUMP ASM; WATER, W/GASKET	000000	000000
8980197700	8-9801	9770	HOSE; WATER, TURBO	000048	000000
8980197710	8-9801	9771	HOSE; RUBBER, TURB	000001	000003
8980197720	8-9801	9772	HOSE; RUBBER	000000	000002
8980197970	8-9801	9797	MANIFOLD; EXHAUST	000000	000004
8980198310	8-9801	9831	PIPE; INL	000003	000000
8980198930	8-9801	9893	TURBOCHARGER ASM	000000	000000
8980198940	8-9801	9894	COVER; VACUUM PUM	000045	000040
8980199010	8-9801	9901	ADAPTER; EXH PIPE	000000	000000
8980199011	8-9801	9901	ADAPTER; EXH PIPE	000000	000000
8980199030	8-9801	9903	COVER; OIL PORT	000000	000028
8980201440	8-9802	0144	PLATE; FAN CLU	000002	000001
8980201660	8-9802	0166	HANGER; ENG, FRT	000004	000000
8980203440	8-9802	0344	GASKET; COVER	000000	000003
8980204770			SCREW; BLEEDER, SLAVE CYL	000001	000005
8980204800			HOSE; PCV	000000	000003
8980205360	8-9802	0536	PAN ASM; OIL	000000	000002
8980206490	8-9802	0649	JET; OIL, PISTON COOLING	000000	000000
8980206540	8-9802	0654	PIPE; FUEL, INL	000000	000004
8980207850	8-9802	0785	CONTROL UNIT; ENG	000000	000000
8980207880	8-9802	0788	CONTROL UNIT; ENG	000000	000000
8980209292	8-9802	0929	CONTROL UNIT; ELEC	000007	000000
8980209412	8-9802	0941	CONTROL UNIT; ENG	000000	000000
8980209422	8-9802	0942	CONTROL UNIT; ELEC	000010	000000
8980209431	8-9802	0943	CONTROL UNIT; ENG	000000	000000

8980209432	8-9802	0943	CONTROL UNIT; ENG	000000	000000
8980209441	8-9802	0944	CONTROL UNIT; ENG	000004	000000
8980209442	8-9802	0944	CONTROL UNIT; ELEC	000003	000000
8980210400	8-9802	1040	COOLER ASM; OIL	000000	000000
8980210403	8-9802	1040	COOLER ASM; OIL	000000	000003
8980210540	8-9802	1054	VALVE FEED PUMP	000000	000000
8980211681	8-9802	1168	PLATE ASM; ADJUST	000000	000003
8980213930	8-9802	1393	CASE; REED VLV	000000	000000
8980213931	8-9802	1393	CASE; REED VLV	000000	000003
8980213940	8-9802	1394	DUCT; EGR	000000	000003
8980215390	8-9802	1539	BRACKET; EGR COOLER	000004	000000
8980219360	8-9802	1936	ELEMENT; FUEL FILTER	000000	000166
8980219410	8-9802	1941	WRENCH; PRE-FILTER	000000	000001
8980222370	8-9802	2237	THROWER; DUST	000002	000003
8980228220	8-9802	2822	PUMP ASM; WATER,W/GASKET	000000	000000
8980228221	8-9802	2822	PUMP ASM; WATER,W/GASKET	000000	000189
8980228270	8-9802	2827	OIL PAN ASM	000000	000001
8980229750	8-9802	2975	CORE; OIL COOLER	000000	000000
8980229751	8-9802	2975	CORE; OIL COOLER	000000	000002
8980229840	8-9802	2984	WASHER; WATER GUIDE	000000	000063
8980233600			LAMP ASM; RR CO	000000	000000
8980234501			SHAFT; IDLE GEAR	000000	000003
8980234521	8-9802	3452	GEAR; IDLE	000000	000003
8980234570	8-9802	3457	BUSHING; FLYWHEEL TO CONV	000000	000007
8980235260	8-9802	3526	PISTON	000000	000000
8980235261	8-9802	3526	PISTON	000000	000000
8980235810	8-9802	3581	SENSOR; FUEL TEMP	000012	000012
8980236160	8-9802	3616	COLLAR; THRUST, IDLE GEAR	000023	000065
8980237170	8-9802	3717	SENSOR; GLOW PLUG, THERMO	000110	000215
8980238240	8-9802	3824	COVER; HOLE	000000	000000
8980238241	8-9802	3824	COVER; HOLE	000000	000005
8980238810	8-9802	3881	COVER; IDLE GEAR	000000	000000
8980244110	8-9802	4411	MANIFOLD; INL	000000	000003
8980246010	8-9802	4601	GAUGE; OIL LEVEL	000000	000006
8980247080	8-9802	4708	GASKET	000000	000000
8980247081	8-9802	4708	GASKET	000000	000000
8980250590	8-9802	5059	ARM; ROCKER	000000	000000
8980250592	8-9802	5059	ARM; ROCKER	000000	000000
8980250593	8-9802	5059	ARM; ROCKER	000062	000003
8980250710	8-9802	5071	SHAFT; ROCKER ARM	000000	000000
8980250711	8-9802	5071	SHAFT; ROCKER ARM	000016	000001
8980250740	8-9802	5074	SHAFT; ROCKER ARM	000000	000000
8980250741	8-9802	5074	SHAFT; ROCKER ARM	000007	000000
8980252520	8-9802	5252	GASKET; COOLER	000326	002057
8980252541	8-9802	5254	BRACKET; EGR COOLER	000002	000002
8980253300	8-9802	5330	HOSE; RUBBER, WATER PIPE	000000	000009
8980253480	8-9802	5348	PUMP ASM; FEED	000000	000001

8980254960	8-9802	5496	RING; SNAP,ROCKER	000029	000060
8980254970	8-9802	5497	SCREW;ADJ. ROCKER ARM	000000	000034
8980255331			UNIT; FLASHER	000000	000002
8980256830	8-9802	5683	BRACKET;CLIP,ENG HARNESS	000006	000000
8980256840	8-9802	5684	BRACKET; CLIP,ENG HARNESS	000000	000010
8980257570	8-9802	5757	PIPE; WATER, COOLER	000000	000003
8980257870	8-9802	5787	CLIP; WATER PIPE	000000	000053
8980258860	8-9802	5886	PIPE;OIL TURBOCHARGER FE	000001	000002
8980258870	8-9802	5887	PIPE;OIL,TURBOCHRG FEED	000010	000000
8980259980	8-9802	5998	PIPE;FUEL,FUEL FILTER LE	000000	000003
8980259990	8-9802	5999	BRACKET; INJ PIPE CLIP	000000	000009
8980260850	8-9802	6085	CAP; OIL FILLER	000000	000010
8980274410	8-9802	7441	PIPE ASM; OIL,INJ PUMP FE	000000	000003
8980274560	8-9802	7456	SENSOR,ENG OIL PRESS 8980	001033	001612
8980274750	8-9802	7475	BRACKET; OIL PIPE	000000	000009
8980278020			COVER;DUST,RR	000000	000000
8980279750	8-9802	7975	ECU 4BG1TRA02	000002	000002
8980281121	8-9802	8112	COOLER ASM; EGR, 2ND	000000	000001
8980281390	8-9802	8139	BRACKET; SEPARATOR	000000	000010
8980281760	8-9802	8176	BRACKET;GUIDE TUBE	000000	000010
8980281810	8-9802	8181	HOSE;RUBBER,OIL SEPARATOR	000001	000002
8980286560	8-9802	8656	HANGER; ENG,FRT	000000	000003
8980287370	8-9802	8737	PISTON	000000	000001
8980287372	8-9802	8737	PISTON	000000	000003
8980287380	8-9802	8738	PISTON	000000	000001
8980287382	8-9802	8738	PISTON	000000	000003
8980288080	8-9802	8808	PISTON	000000	000003
8980288081	8-9802	8808	PISTON	000000	000000
8980288740	8-9802	8874	SEAT; VLV INSERT	000000	000008
8980288750	8-9802	8875	SEAT; VLV INSERT	000049	000012
8980289990	8-9802	8999	BRACKET; INJ NOZZLE	000000	000000
8980289991	8-9802	8999	BRACKET; INJ NOZZLE	000000	000003
8980292700	8-9802	9270	CRANKSHAFT	000014	000003
8980294750	8-9802	9475	GASKET; OIL PIPE	000015	000010
8980294760	8-9802	9476	GASKET; OIL PIPE	000017	000000
8980295372	8-9802	9537	ARM; ROCKER	000000	000009
8980295373	8-9802	9537	ARM; ROCKER	000000	000000
8980295374	8-9802	9537	ARM; ROCKER	000000	000000
8980295375	8-9802	9537	ARM; ROCKER	000015	000003
8980296050			RADIO	000000	000000
8980298701	8-9802	9870	CAP; VLV STEM END	000000	000000
8980298930	8-9802	9893	SCREW; ADJ,ROCKER ARM	000004	000042
8980300950	8-9803	0095	CASE; TIMING GEAR	000000	000000
8980302020	8-9803	0202	CONTROL UNIT; ENG	000001	000000
8980302042	8-9803	0204	CONTROL UNIT; ENG	000000	000000
8980302170	8-9803	0217	TURBOCHARGER ASM	000000	000020
8980302190	8-9803	0219	PULLY; FAN DRIVE	000000	000000

8980302200	8-9803	0220	VALVE; REED	000000	000000
8980302230	8-9803	0223	ADAPTER;FAN TO PULLEY	000000	000000
8980302231	8-9803	0223	ADAPTER;FAN TO PULLEY	000000	000013
8980303450	8-9803	0345	CENTER ASM; FAN	000000	000006
8980303460	8-9803	0346	SHAFT; BRG CASE	000000	000000
8980303470	8-9803	0347	PLATE; FAN CLU	000116	000000
8980303480	8-9803	0348	PIPE; INL	000000	000004
8980305250	8-9803	0525	COOLER; EGR	000000	000001
8980305251	8-9803	0525	COOLER; EGR	000000	000000
8980305252	8-9803	0525	COOLER; EGR	000000	000000
8980305260	8-9803	0526	BRACKET; EGR COOLER	000000	000011
8980305280	8-9803	0528	PIPE; EGR	000000	000010
8980305310	8-9803	0531	PIPE; EGR	000000	000014
8980305320	8-9803	0532	ELEMENT KIT; PCV	000000	000893
8980305330	8-9803	0533	GASKET; EGR PIPE	000000	000001
8980305360	8-9803	0536	GASKET; EGR VLV	000000	000010
8980305370	8-9803	0537	COVER; CYL HD	000000	000003
8980305381	8-9803	0538	GASKET; HD TO COVER	000000	000016
8980305520	8-9803	0552	HEAD ASM; CYL	000000	000002
8980305620	8-9803	0562	STRAINER & PIPE ASM; OIL	000000	000000
8980305640	8-9803	0564	PIPE ASM; OIL,TURBOCHARGE	000000	000011
8980305651	8-9803	0565	PIPE; WATER RETURN	000000	000010
8980305660	8-9803	0566	MANIFOLD; EXHAUST	000000	000007
8980305670	8-9803	0567	CAMSHAFT	000000	000003
8980305690	8-9803	0569	PUMP ASM; INJ	000000	000004
8980305700	8-9803	0570	NOZZLE ASM; INJ	000000	000000
8980305701	8-9803	0570	NOZZLE ASM; INJ	000000	000085
8980305710	8-9803	0571	TURBOCHARGER ASM	000000	000004
8980305720	8-9803	0572	PIPE ASM; INJ	000000	000011
8980305730	8-9803	0573	TIMER; GLOW PLUG	000000	000008
8980305740	8-9803	0574	CONTROLLER; EGR	000000	000004
8980305823	8-9803	0582	COOLER; EGR	000000	000000
8980305971	8-9803	0597	VALVE; EGR	000000	000005
8980305980	8-9803	0598	GASKET; CHAMBER	000000	000001
8980306220	8-9803	0622	HOSE; RUBBER,OIL COOLER	000000	000017
8980306230	8-9803	0623	HOSE; WATER,OIL COOLER	000000	000009
8980306240	8-9803	0624	HOSE; RUBBER,PIPE TO WATE	000000	000012
8980306250	8-9803	0625	HOSE; RUBBER,EGR COOLER	000000	000008
8980306260	8-9803	0626	HOSE; RUBBER,EGR COOLER	000000	000008
8980306272	8-9803	0627	FLYWHEEL	000000	000002
8980306360	8-9803	0636	HOSE; RUBBER,FUEL LEAK	000000	000016
8980310431	8-9803	1043	GAUGE; OIL LEVEL	000001	000000
8980311970	8-9803	1197	BRACKET; FUEL FILTER	000000	000007
8980312001	8-9803	1200	BRACKET; FUEL FILTER	000000	000010
8980312010	8-9803	1201	BRACKET; DUCT	000000	000010
8980312730	8-9803	1273	JET; OIL,PISTON C	000000	000005
8980313310	8-9803	1331	VALVE; CHECK,OIL	000000	000002

8980316051	8-9803	1605	SENSOR; DPD	000000	000002
8980318400	8-9803	1840	ELEMENT;FUEL FILTER	000000	000000
8980318440	8-9803	1844	GASKET; INJ PUMP	000365	000573
8980318470	8-9803	1847	ELEMENT FUEL FILTER; HE	000000	000000
8980318610			COVER;CHK HOLE,PRK BRK	000000	000000
8980322862	8-9803	2286	CASE; TIMING GEAR	000000	000000
8980322863	8-9803	2286	CASE; TIMING GEAR	000000	000000
8980322865	8-9803	2286	CASE; TIMING GEAR	000000	000003
8980325490	8-9803	2549	LIMITER; FUEL PRE	000029	000056
8980326430			RADIO	000000	000002
8980339411	8-9803	3741	MANIFOLD; EXHAUST	000001	000002
8980343250			LAMP ASM; RR CO	000000	000000
8980343280			LAMP ASM; RR CO	000000	000001
8980344651	8-9803	4465	SPACER; FAN	000000	000000
8980345372	8-9803	4537	HARNESS; ENG	000002	000000
8980346060	8-9803	4606	PIPE;OIL,TURBOCHARGER FEE	000000	000000
8980346070	8-9803	4607	PIPE;WATER,TURBOCHARGER O	000000	000001
8980346080	8-9803	4608	PIPE;WATER,TURBOCHARGER	000000	000003
8980346090	8-9803	4609	PIPE;OIL DRAIN,TURBOCHARG	000000	000000
8980349790	8-9803	4979	COVER;GEAR CASE,PTO	000000	000001
8980350541	8-9803	5054	HARNESS; ENG	000000	000000
8980350542	8-9803	5054	HARNESS; ENG	000000	000000
8980350543	8-9803	5054	HARNESS; ENG	000000	000004
8980351250	8-9803	5125	FLYWHEEL	000000	000004
8980352340	8-9803	5234	SPACER; FAN	000000	000024
8980352350	8-9803	5235	SPACER;FAN	000000	000010
8980356540			SCREW; RETAINER	000000	000000
8980356730			STOPPER;REV,INHIBITOR	000005	000000
8980356740			PLUG;NEUTRAL SW HOLE	000002	000000
8980356750	8-9803	5675	STUD; TRANSFER	000000	000000
8980356780	8-9803	5678	NUT;REV GEAR	000000	000000
8980356800	8-9803	5680	SWITCH ASM; NEUTRAL	000000	000010
8980356810			SWITCH; REV LAMP	000010	000010
8980358280	8-9803	5828	BOLT; EYE	000154	000000
8980359230	8-9803	5923	PIPE; FUEL,FUEL F	000000	000001
8980359240	8-9803	5924	SHAFT; IDLE GEAR	000000	000003
8980359252	8-9803	5925	COLLAR; THRUST,ID	000000	000004
8980359440	8-9803	5944	BRACKET; FUEL FIL	000000	000002
8980359441	8-9803	5944	BRACKET; FUEL FIL	000000	000000
8980359670	8-9803	5967	GAUGE; OIL LEVEL	000000	000003
8980359690	8-9803	5969	COMPRESSOR;ENG	000000	000000
8980359700	8-9803	5970	COUPLING ASM	000000	000042
8980361170			CAP;COVER	000000	000000
8980361440	8-9803	6144	CONTROL UNIT; ENG	000000	000000
8980364930	8-9803	6493	CONTROL UNIT; ENG	000000	000000
8980365100	8-9803	6510	PIPE ASM; LEAK OF	000005	000000
8980366540	8-9803	6654	ELEMENT; FUEL FILTER	000000	000006

8980371590	8-9803	7159	SWITCH;NEUTRAL	000007	000010
8980372810	8-9803	7281	GASKET;CYL HD	000000	000001
8980373080			GASKET;FRT PLATE (NON ASBE	000000	000004
8980373720	8-9803	7372	PULLY; FAN DRIVE	000000	000003
8980373790	8-9803	7379	CONTROL UNIT; ENG	000000	000000
8980373922	8-9803	7392	CONTROL UNIT; ENG	000000	000000
8980374800	8-9803	7480	ELEMENT;; FUEL FILTER	000000	000000
8980374810	8-9803	7481	ELEMENT F/FILT;HIGH EFF	006724	007383
8980375430	8-9803	7543	COVER; SEAL,NOZZL	000018	000000
8980376220	8-9803	7622	MANIFOLD; EXH,CEN	000000	000002
8980377760			GASKET; EXH MAN	000000	000000
8980377790			GASKET; EXH PIPE	000000	000001
8980377830			GASKET; HEAD (3AE1)	000000	000003
8980377840			GASKET;INL MANIF TO HD	000000	000005
8980377900	8-9803	7790	GASKET;TUROBCHRG TO EXH M	000000	000000
8980377920	8-9803	7792	GASKET;EXH MANIF TO HD	000000	000002
8980377930			GSKT;EXH MANIF TO HD-NON	000000	000001
8980377940			GASKET;GEAR CASE TO COVER	000000	000001
8980377980	8-9803	7798	GSKT;OIL FILLER-NON ASBES	000000	000143
8980378230	8-9803	7823	BOLT;EYE,OIL PIPE FIX	000013	000055
8980378260	8-9803	7826	BOLT;EYE LEAK OFF PIPE	000000	000067
8980378290	8-9803	7829	BOLT;EYE,FUEL PIPE	000000	000039
8980379230	8-9803	7923	GASKET;EXH MANIF TO HD	000000	000000
8980379240	8-9803	7924	GASKET;INT DUCT	000002	000000
8980379260	8-9803	7926	GASKET; EXH MAN	000000	000002
8980380900	8-9803	8090	GASKET;TURBO-NON ASBESTOS	000000	000004
8980380910	8-9803	8091	GSKT;TURBOCHRG TO EXH MA	000000	000004
8980382660	8-9803	8266	HARNES; ENG	000000	000024
8980383430	8-9803	8343	BOLT; ROTOR	000033	000000
8980384030	8-9803	8403	BOLT; CLIP FIXING	000000	000082
8980386070	8-9803	8607	PUMP ASM;WATER,W/GASKET	000000	000001
8980386150	8-9803	8615	HOUSING; FLYWHEEL	000000	000001
8980387080	8-9803	8708	BOLT;EYE,WATER PIPE	000000	000080
8980387650	8-9803	8765	PAN ASM; OIL	000000	000000
8980387651	8-9803	8765	PAN ASM; OIL	000000	000003
8980387691	8-9803	8769	PAN ASM; OIL	000000	000002
8980387700	8-9803	8770	GUARD; FAN	000000	000003
8980387721	8-9803	8772	BRACKET; FAN SHRO	000000	000002
8980387741	8-9803	8774	PIPE; HTR	000002	000000
8980387750	8-9803	8775	PIPE ASM; LEAK OF	000003	000000
8980387760	8-9803	8776	BRACKET; VALVE	000004	000000
8980387770	8-9803	8777	PIPE; FUEL,SUCTIO	000011	000000
8980387780	8-9803	8778	PIPE; FUEL,SUCTIO	000006	000000
8980387790	8-9803	8779	PIPE; INL	000000	000000
8980387800	8-9803	8780	FOOT; ENG	000000	000004
8980387820	8-9803	8782	FOOT; ENG	000000	000004
8980387840	8-9803	8784	COVER; NOZZLE,INJ	000000	000000

8980387851	8-9803	8785	PLATE; ADJ	000000	000022
8980388050	8-9803	8805	PULLEY; CR/SHF	000000	000004
8980388130	8-9803	8813	PULLEY; FAN CENTE	000004	000000
8980388150	8-9803	8815	PULLEY;FAN CENTER	000000	000002
8980388450	8-9803	8845	PUMP ASM;WATER,W/GASKET	000000	000018
8980388500	8-9803	8850	SHROUD; FAN	000000	000000
8980388531	8-9803	8853	PLUG	000000	000004
8980388550	8-9803	8855	BELT; COOLING FAN	000000	000391
8980388560	8-9803	8856	BELT; COOLING FAN	000000	000018
8980388660	8-9803	8866	GAUGE; OIL LEVEL	000000	000000
8980388661	8-9803	8866	GAUGE; OIL LEVEL	000000	000068
8980388670	8-9803	8867	SPACER; FAN	000000	000000
8980388720	8-9803	8872	PULLEY; FAN CENTE	000000	000001
8980388810	8-9803	8881	SPRING; VLV	000000	000066
8980388820	8-9803	8882	SPACER;FAN	000000	000004
8980388830	8-9803	8883	SPACER; FAN	000000	000002
8980388890	8-9803	8889	HOSE; FUEL	000003	000001
8980389290	8-9803	8929	PIPE; OIL,C/BL TO VAC PUM	000001	000002
8980389610	8-9803	8961	PLATE; INNER HD COVER	000001	000002
8980390310	8-9803	9031	COVER; CYL HD	000000	000003
8980390321	8-9803	9032	CONTROL UNIT; ENG	000000	000000
8980392930	8-9803	9293	CLIP; INJ PIPE	000000	000038
8980394490	8-9803	9449	SEPARATOR; OIL PCV	000000	000000
8980395761			STAY;OUTSIDE	000000	000001
8980397860	8-9803	9786	TURBOCHARGER ASM	000000	000000
8980397861	8-9803	9786	TURBOCHARGER ASM	000000	000000
8980398000	8-9803	9800	PAN ASM; OIL	000000	000003
8980398171	8-9803	9817	MANIFOLD; EXHAUST	000000	000001
8980399340	8-9803	9934	PIPE;INJ NO.1	000000	000066
8980399350	8-9803	9935	PIPE; INJ NO.2	000000	000062
8980399360	8-9803	9936	PIPE; INJ NO.3	000000	000062
8980399370	8-9803	9937	PIPE; INJ NO.4	000000	000062
8980399860	8-9803	9986	NUT; WATER PUMP	000000	000053
8980399980	8-9803	9998	COVER; CYL HD	000000	000002
8980400020	8-9804	0002	VALVE; OIL RELIEF,OIL COO	000000	000003
8980401560	8-9804	0156	CONTROL UNIT; ENG	000002	000000
8980401570	8-9804	0157	CONTROL UNIT; ENG	000003	000003
8980401580	8-9804	0158	CONTROL UNIT; ENG	000002	000000
8980401590	8-9804	0159	CONTROL UNIT; ENG	000008	000003
8980401600	8-9804	0160	CONTROL UNIT; ENG	000000	000000
8980401610	8-9804	0161	CONTROL UNIT; ENG.	000000	000000
8980401620	8-9804	0162	CONTROL UNIT;ENG	000010	000000
8980401640	8-9804	0164	CONTROL UNIT;ENG	000000	000000
8980401680	8-9804	0168	CONTROL UNIT; ENG	000000	000000
8980401690	8-9804	0169	CONTROL UNIT; ELEC	000005	000000
8980401700	8-9804	0170	CONTROL UNIT; ENG	000005	000000
8980401711	8-9804	0171	CONTROL UNIT; ENG	000002	000002

8980401721	8-9804	0172	CONTROL UNIT; ENG	000000	000003
8980406480	8-9804	0648	CONNECTOR; GLOW PLUG	000000	000020
8980406490	8-9804	0649	CONNECTOR; GLOW PLUG	000000	000020
8980407040	8-9804	0704	WASHER; THRUST,CR/SHF	000011	000056
8980407430	8-9804	0743	BRACKET; IDLE PULLEY	000000	000007
8980410640	8-9804	1064	GEAR; IDLE	000000	000002
8980410660	8-9804	1066	HOUSING; FLYWHEEL	000000	000007
8980410890	8-9804	1089	WASHER; THRUST	000000	000003
8980410990	8-9804	1099	SHAFT; IDLE GEAR	000000	000003
8980415000	8-9804	1500	GEAR; IDLE,FRT	000002	000002
8980415650	8-9804	1565	IDLE GEAR	000000	000002
8980415811	8-9804	1581	PAN ASM; OIL	000000	000004
8980415850	8-9804	1585	GASKET; SLEEVE,NO	000000	000133
8980416301	8-9804	1630	PISTON	000000	000000
8980416342	8-9804	1634	HOUSING; FLYWHEEL	000000	000000
8980416343	8-9804	1634	HOUSING; FLYWHEEL	000000	000000
8980416561	8-9804	1656	PISTON	000000	000000
8980416591	8-9804	1659	PISTON	000000	000000
8980416731	8-9804	1673	PISTON; O/S=0.50	000000	000011
8980417221	8-9804	1722	PAN ASM; OIL	000000	000005
8980419120	8-9804	1912	OLT;OIL FILTER	000000	000010
8980423160	8-9804	2316	OVERHAUL KIT;SUPPLY PUMP	000000	000000
8980423161	8-9804	2316	OVERHAUL KIT;SUPPLY PUMP	000000	000000
8980425240	8-9804	2524	HOSE; RUBBER	000000	000002
8980427100	8-9804	2710	NOZZLE ASM; INJ	000000	000010
8980428520	8-9804	2852	SWITCH; REV LAMP	000008	000010
8980428620	8-9804	2862	BELT; COOLING FAN	000000	000205
8980429080	8-9804	2908	FAN; COOLING	000000	000004
8980429440	8-9804	2944	PLUG; ROCKER SHAFT END	000000	000014
8980430330	8-9804	3033	BOLT; EYE	000000	000000
8980435280	8-9804	3528	BOLT	000171	000385
8980436500	8-9804	3650	HOUSING; FLYWHEEL	000000	000001
8980436690	8-9804	3669	FLYWHEEL	000000	000001
8980436840	8-9804	3684	PIPE; INJ NO.2	000000	000000
8980436860	8-9804	3686	SCV KIT	000140	000870
8980436870	8-9804	3687	OVERHAUL KIT; SUP	000000	000010
8980437010	8-9804	3701	FLYWHEEL	000000	000002
8980437350	8-9804	3735	SVC KIT; SUPPLY PUMP	000042	000152
8980439490			LEVER; PARKING BRK	000000	000004
8980439570	8-9804	3957	HOUSING; THERMOST	000000	000001
8980439572	8-9804	3957	HOUSING; THERMOST	000000	000000
8980440600			HOSE;RUBBER	000000	000010
8980442250	8-9804	4225	CONTROL UNIT; ENG	000000	000000
8980445200	8-9804	4520	SENSOR; VAC	000000	000002
8980446990	8-9804	4699	HOUSING; FLYWHEEL	000000	000003
8980448451	8-9804	4845	FLYWHEEL	000000	000002
8980448461	8-9804	4846	FLYWHEEL	000000	000000

8980449500	8-9804	4950	ROD ASM; CONN	000000	000003
8980450270	8-9804	5027	STARTER ASM	000000	000000
8980450271	8-9804	5027	STARTER ASM	000000	000000
8980450272	8-9804	5027	STARTER ASM	000000	000027
8980452580	8-9804	5258	CONTROL UNIT; ENG	000000	000000
8980453850	8-9804	5385	JOINT; 3 WAY	000001	000002
8980454090	8-9804	5409	PIPE; WATER, TURBOCHARGER O	000000	000001
8980454470	8-9804	5447	GASKET; OIL COOLER TO C/BL	000027	000030
8980454490	8-9804	5449	GASKET; OIL COOLER TO C/BL	000022	000013
8980454720			VALVE; EGR	000000	000000
8980456210	8-9804	5621	DUCT; WATER	000000	000001
8980456220	8-9804	5622	DUCT; WATER	000000	000001
8980456230	8-9804	5623	BRACKET; WATER HOSE	000000	000001
8980456240	8-9804	5624	CASE; KEEL COOLER	000000	000001
8980456260	8-9804	5626	PIPE; SEA WATER, CHARGE AI	000000	000001
8980456750	8-9804	5675	COVER; CYL HD	000000	000000
8980457380	8-9804	5738	PIPE; PCV HOSE	000002	000000
8980457570	8-9804	5757	COOLER; CHARGE AIR	000000	000001
8980457580	8-9804	5758	COVER; CHARGE AIR COOLER	000000	000001
8980457590	8-9804	5759	COVER; CHARGE AIR COOLER	000000	000001
8980457800	8-9804	5780	CONTROL UNIT; ENG	000000	000000
8980457801	8-9804	5780	CONTROL UNIT; ENG	000000	000004
8980457810	8-9804	5781	CONTROL UNIT; ENG	000000	000000
8980457811	9-9804	5781	CONTROL UNIT; ENG	000000	000000
8980457830	8-9804	5783	CONTROL UNIT; ENG	000000	000000
8980457831	8-9804	5783	CONTROL UNIT; ENG	000000	000001
8980457851	8-9804	5785	ECM	000000	000000
8980457860	8-9804	5786	CONTROL UNIT; ENG	000000	000008
8980459110	8-9804	5911	CONTROL UNIT; ENG	000000	000001
8980461660	8-9804	6166	BELT; WATER PUMP DRIVE	000000	000086
8980461920	8-9804	6192	GASKET; EGR PIPE	000000	000000
8980461921	8-9804	6192	GASKET; EGR PIPE	000224	000885
8980462410	8-9804	6241	GASKET; TURBOCHARGER TO E	000463	001645
8980463320	8-9804	6332	COVER; WATER PUMP	000000	000007
8980463340	8-9804	6334	COVER; WATER PUMP	000000	000001
8980463500	8-9804	6350	PULLEY; WATER PUMP	000000	000005
8980463660	8-9804	6366	PUMP ASM; WATER, W/GASKET	000000	000000
8980463661	8-9804	6366	PUMP ASM; WATER, W/GASKET	000000	000040
8980467000	8-9804	6700	PLATE; CAUTION, ENG HANGER	000000	000001
8980467010	8-9804	6701	PLATE; CAUTION, IDLING	000000	000001
8980467090	8-9804	6709	NOZZLE; INJ	000000	000005
8980467212	8-9804	6721	BLOCK ASM; CYL	000000	000002
8980467213	8-9804	6721	BLOCK ASM; CYL	000000	000001
8980467840	8-9804	6784	BRACKET; WATER PIPE	000000	000002
8980470540	8-9804	7054	PLUG; C/BL, SIDE	000000	000008
8980471360	8-9804	7136	BOLT; ADAPTER	000039	000030
8980472160	8-9804	7216	COVER; CYL HD	000000	000000

8980472162	8-9804	7216	COVER; CYL HD	000000	000002
8980476881	8-9804	7688	PUMP ASM; WATER,W	000000	000000
8980476882	8-9804	7688	PUMP ASM; WATER,W	000000	000000
8980476883	8-9804	7688	PUMP ASM; WATER,W	000000	000001
8980476891	8-9804	7689	PUMP ASM; WATER,W	000000	000000
8980476892	8-9804	7689	PUMP ASM; WATER,W	000000	000000
8980476893	8-9804	7689	PUMP ASM; WATER,W	000000	000015
8980476900	8-9804	7690	PUMP ASM; WATER,W	000000	000008
8980481400	8-9804	8140	CORE; OIL COOLER	000000	000000
8980481401	8-9804	8140	CORE; OIL COOLER	000000	000002
8980481560	8-9804	8156	BRACKET; EXH PIPE,CONN	000000	000003
8980481620	8-9804	8162	PULLY;FAN DRIVE	000000	000001
8980481890	8-9804	8189	OIL PIPE	000000	000027
8980484370			BOLT;CONVERTOR/EGR PIPE	000051	000019
8980484460	8-9804	8446	STUD; EXH MANIF	000014	000000
8980485360	8-9804	8536	BOLT; CONNROD	000000	000011
8980485380	8-9804	8538	BOLT;CONNROD	000063	000000
8980488850	8-9804	8885	PIPE; AIR	000000	000012
8980488890	8-9804	8889	BRACKET;ROCKER ARM	000000	000017
8980488900	8-9804	8890	BRACKET; GEN	000000	000012
8980488910	8-9804	8891	PLATE; ADJ	000000	000027
8980489040	8-9804	8904	BRACKET; EGR	000000	000003
8980489371	8-9804	8937	PULLEY; CR/SHF	000000	000003
8980489381	8-9804	8938	PUMP ASM; WATER	000000	000000
8980489450	8-9804	8945	GASKET; CYL HD	000000	000004
8980489610	8-9804	8961	PLATE; PIPE,EGR	000000	000000
8980489611	8-9804	8961	PLATE; PIPE,EGR	000000	000016
8980489620	8-9804	8962	ADAPTER; EXH PIPE	000000	000005
8980489670	8-9804	8967	BOLT; CENTER	000000	000015
8980489680	8-9804	8968	PLUG; OIL COOLER	000000	000013
8980489700	8-9804	8970	SPRING; MAIN,LEVER	000000	000015
8980489710	8-9804	8971	SPRING; START	000002	000006
8980490260	8-9804	9026	GASKET; TURBOCHARGER TO E	000000	000002
8980490330	8-9804	9033	BELT; COOLING FAN	000000	000045
8980490340	8-9804	9034	BELT; COOLING FAN	000000	000019
8980490350	8-9804	9035	GAUGE; OIL LEVEL	000000	000005
8980490360	8-9804	9036	PLUNGER ASM; IN	000000	000004
8980494230	8-9804	9423	BRACKET; FUEL FIL	000000	000001
8980495200	8-9804	9520	ROTOR & VANE ASM; VAC PUM	000000	000003
8980495210	8-9804	9521	VALVE ASM; CHECK	000002	000003
8980495220	8-9804	9522	GASKET; VAC PUMP	000014	000033
8980495230	8-9804	9523	BOLT; PLATE	000020	000080
8980495500			WASHER; THRUST,CR/SHF	000076	000000
8980498250	8-9804	9825	BOLT;BRACE,TURBOCHARGER	000082	000076
8980501300	8-9805	0130	BOLT; ADJ PLATE,GEN	000002	000045
8980504420	8-9805	0442	HEAD ASM; CYL	000000	000000
8980505200	8-9805	0520	HOSE; FUEL	000003	000002

8980511170			PAD KIT, CALIPER	000000	000000
8980512750	8-9805	1275	VANE; VAC PUMP	000001	000003
8980514470	8-9805	1447	FLYWHEEL	000000	000002
8980514471	8-9805	1447	FLYWHEEL	000000	000000
8980519280	8-9805	1928	METAL SET; CONN ROD, STAND	000000	000102
8980519390	8-9427	9208	BOLT; STRG COLUMN	000153	000155
8980520410	8-9805	2041	HANGER; ENG, RR	000003	000000
8980523081	8-9805	2308	BRACKET; PIPE	000000	000004
8980528300	8-9805	2830	COVER; CYL HD	000000	000003
8980528301	8-9805	2830	COVER; CYL HD	000000	000000
8980531880	8-9805	3188	NUT, ROCKER SHAF	000007	000040
8980532240	8-9805	3224	BOLT; TURBOCHARGER	000000	000056
8980535970	8-9805	3597	COVER; CYL HD	000000	000009
8980536321	8-9805	3632	PAN ASM; OIL	000000	000001
8980536420	8-9805	3642	GASKET; BREATHER PIPE, TAPP	000000	000127
8980537770	8-9805	3777	PUMP ASM; OIL	000000	000000
8980539120	8-9800	9093	BRACKET; COMMON RAIL	000004	000005
8980539770			LAMP ASM; FRT C	000000	000001
8980539780			LAMP ASM; FRT C	000000	000001
8980540630	8-9805	4063	STARTER ASM	000000	000073
8980542560	8-9805	4256	PLUG; GLOW	000006	000070
8980547970	8-9805	4797	NUT; GEN	000000	000064
8980549950			RING SET; PISTO	000000	000000
8980550850			BOLT; RET	000000	000014
8980551120			CABLE; BATTERY	000057	000203
8980551130			CABLE; BATTERY	000073	000217
8980552791			STARTER ASM	000000	000000
8980552890			VALVE; FEED PUMP	000000	000000
8980553230	8-9805	5323	GAUGE; OIL LEVEL	000000	000003
8980555700	8-9805	5570	HOSE; RUBBER, HTR	000002	000000
8980557170	8-9805	5717	HOSE; RUBBER BREA	000002	000000
8980557171	8-9805	5717	HOSE; RUBBER BREA	000000	000000
8980557172	8-9805	5717	HOSE; RUBBER BREA	000000	000000
8980561210	8-9805	6121	CAP; OIL FILTER	000000	000006
8980563960	8-9805	6396	OIL PAN	000000	000000
8980563961	8-9805	6396	OIL PAN	000000	000003
8980564640	8-9805	6464	RING SET; PISTON, STANDARD	000000	000021
8980566670	8-9805	6667	SWITCH; ENGAGE STARTER	000000	000004
8980569370	8-9805	6937	BOLT; EYE	000000	000000
8980572220	8-9805	7222	RING SET; PISTON, STANDARD	000000	000029
8980576663	8-9805	7666	AIR CLEANER ASM	000000	000002
8980577220	8-9805	7722	COOLER; EGR	000000	000000
8980577221	8-9805	7722	COOLER; EGR	000000	000004
8980577230	8-9805	7723	COOLER; EGR	000000	000000
8980577231	8-9805	7723	COOLER; EGR	000000	000000
8980577232	8-9805	7723	COOLER; EGR	000000	000003
8980577310	8-9805	7731	GASKET; INJ NOZZLE	000000	000000

8980595080	8-9805	9508	GASKET; C/BL TO CRANKCASE	000000	000007
8980597200			BOLT; CLIP,SHIFT & SELECT	000000	000000
8980598400	8-9805	9840	CONTROL UNIT; ENG	000001	000003
8980598900	8-9805	9890	BAND; "V", TURBO	000000	000028
8980600180	8-9806	0018	PROTECTOR; HEAT	000000	000001
8980602390	8-9806	0239	CONTROL UNIT; ENG	000000	000000
8980602391	8-9806	0239	CONTROL UNIT; ENG	000000	000000
8980602410	8-9806	0241	CONTROL UNIT; ENG	000000	000003
8980602420	8-9806	0242	CONTROL UNIT; ENG	000000	000007
8980602460	8-9806	0246	CONTROL UNIT; ENG	000000	000002
8980602470	8-9806	0247	CONTROL UNIT; ENG	000000	000007
8980607800	8-9806	0780	SHAFT; IDLE GEAR	000039	000019
8980608320	8-9806	0832	SWITCH; ENGAGE STARTER	000000	000000
8980608540	8-9806	0854	STARTER ASM	000000	000000
8980613980	8-9806	1398	CONTROL UNIT; ENG	000000	000004
8980613990	8-9806	1399	CONTROL UNIT; ENG	000000	000007
8980614230	8-9806	1423	GASKET;GEAR CASE TO COVER	000000	000015
8980615180	8-9806	1518	CONTROL UNIT; ENG	000000	000000
8980615181	8-9804	1518	CONTROL UNIT; ENG	000000	000002
8980620410	8-9806	2041	STARTER ASM	000000	000009
8980622760			CYLINDER ASM; C	000000	000001
8980622920	8-9806	2292	FAN;COOLING	000000	000005
8980622930	8-9806	2293	FAN;COOLING	000000	000002
8980626350	8-9806	2635	CASE;TIMEING GEAR	000000	000000
8980627070	8-9806	2707	PULLEY	000000	000002
8980627080	8-9806	2708	PULLEY	000000	000002
8980627090	8-9806	2709	ENGINE HARNESS	000000	000000
8980627091	8-9806	2709	ENGINE HARNESS	000000	000000
8980627092	8-9806	2709	ENGINE HARNESS	000000	000000
8980627100	8-9806	2710	ENGINE CONT UNIT	000000	000000
8980627130	8-9806	2713	FAN BELT	000000	000143
8980627140	8-9806	2714	CAP;LEVEL GAUGE	000000	000001
8980627150	8-9806	2715	PIPE; PCV	000000	000002
8980627410	8-9806	2741	ENGINE CONT UNIT	000000	000000
8980627421	8-9806	2742	WIRING HARNESS	000000	000001
8980629520	8-9806	2952	WATER HOSE	000001	000001
8980630320	8-9806	3032	GASKET;OIL PAN	000000	000057
8980632835	8-9806	3283	COOLER; EGR	000000	000002
8980632841	8-9806	3284	GASKET; EGR PIPE	000014	000011
8980633170	8-9806	3317	ENGINE CONT UNIT	000001	000002
8980633180	8-9806	3318	CONTROL UNIT;ENG	000000	000000
8980633181	8-9806	3318	CONTROL UNIT;ENG	000000	000003
8980633190	8-9806	3319	ENGINE CONT UNIT	000000	000000
8980633960	8-9806	3396	GASKET; INL MANIF TO HD	000004	000000
8980635580	8-9806	3558	WATER PIPE	000001	000001
8980636050	8-9806	3605	CONTROL UNIT; ENG	000000	000000
8980636630	8-9806	3663	PUMP ASM; OIL	000000	000000

8980636680	8-9806	3668	CONNECTOR; WATER	000000	000013
8980636760	8-9806	3676	FAN; COOLING	000000	000013
8980636990	8-9806	3699	STARTER	000000	000000
8980636991	8-9806	3699	STARTER	000000	000010
8980637060	8-9806	3706	PAN ASM; OIL	000000	000001
8980637570	8-9806	3757	STUD; PUMP HOLE	000000	000002
8980637590	8-9806	3759	EGR VALVE	000000	000000
8980637591	8-9806	3759	EGR VALVE	000000	000000
8980637592	8-9806	3759	EGR VALVE	000000	000000
8980637830	8-9806	3783	WASHER; THRUST,CR/SHF	000000	000079
8980637910			WASHER;THRUST,CR/SHF F-UP	000112	000000
8980637920			WASHER;THRUST,CR/SHF FR-L	000168	000000
8980637940	8-9806	3794	BEARING; NEEDLE	000000	000003
8980638210	8-9806	3821	SPRING; RELIEF VLV	000000	000011
8980638260	8-9806	3826	BUSHING; CONNROD	000000	000016
8980638280	8-9806	3828	CRANKSHAFT	000000	000001
8980642810	8-9806	4281	METAL SET;CONN ROD,STAND	000069	000130
8980642820	8-9806	4282	METAL SET;CONN ROD,STNDRD	000211	001173
8980643610	8-9806	4361	ENGINE CONT UNIT	000000	000000
8980643640	8-9806	4364	CONTROL UNIT;ENG	000000	000001
8980643650	8-9806	4365	CONTROL UNIT; ENG	000000	000008
8980643670	8-9806	4367	CONTROL UNIT; ENG	000000	000000
8980643671	8-9806	4367	CONTROL UNIT; ENG	000000	000001
8980643690	8-9806	4369	CONTROL UNIT;ENG	000000	000000
8980643691	8-9806	4369	CONTROL UNIT;ENG	000000	000001
8980643700	8-9806	4370	CONTROL UNIT; ENG	000000	000004
8980653520	8-9806	5352	PIPE;OIL,TURBOCHARGER FEE	000001	000001
8980653530	8-9806	5353	PIPE;OIL RETRN,TURBOCHARG	000001	000001
8980653540	8-9806	5354	TUBE;GUIDE,OIL LVL GAUGE	000001	000001
8980653550	8-9806	5355	COVER;HOLE	000000	000001
8980653570	8-9806	5357	TURBOCHARGER ASM	000000	000000
8980653580	8-9806	5358	PAN ASM;OIL	000000	000002
8980653870	8-9806	5387	WATER PIPE	000000	000001
8980654160	8-9806	5416	WATER HOSE	000000	000003
8980654350	8-9806	5435	HOUSING;THERMOSTAT	000000	000000
8980654810	8-9806	5481	BOLT; EGR COOLER	000000	000020
8980657090	8-9806	5709	CONTROL UNIT;ENG	000001	000000
8980657850	8-9806	5785	TUBE;GUIDE,OIL LEVEL GAUG	000000	000002
8980659900	8-9806	5990	GASKET;EYE BOLT LEAK OFF	000000	000029
8980659920	8-9806	5992	GASKET;JOINT BOLT,LEAK OF	000000	000472
8980659930	8-9806	5993	GASKET;JOINT BOLT,LEAK OF	000000	000010
8980667390	8-9806	6739	COVER ASM; ACL	000000	000000
8980671210	8-9806	7121	TURBOCHARGER	000000	000000
8980671211	8-9806	7121	TURBOCHARGER	000000	000002
8980671230	8-9806	7123	NOZZLE ASM	000000	000011
8980671250	8-9806	7125	HEAD ASM; CYL	000000	000000
8980671254	8-9806	7125	HEAD ASM; CYL	000000	000002

8980675030	8-9806	7503	HOSE;RUBBER BREATHER	000000	000000
8980675031	8-9806	7503	HOSE;RUBBER BREATHER	000000	000001
8980681330	8-9806	8133	FAN; COOLING	000000	000002
8980681371	8-9806	8137	INJ NOZZLE	000000	000000
8980681570	8-9806	8157	PISTON; O/S=0.25	000000	000000
8980681571	8-9806	8157	PISTON; O/S=0.25	000000	000010
8980681580	8-9806	8158	PISTON	000000	000000
8980681581	8-9806	8158	PISTON	000000	000008
8980681640	8-9806	8164	COOLER;EGR	000000	000000
8980681641	8-9806	8164	COOLER;EGR	000000	000000
8980681642	8-9806	8164	COOLER;EGR	000000	000002
8980681760	8-9806	8176	INJECTION NOZZLE	000000	000005
8980681970	8-9806	8197	TURBOCHARGER ASM	000000	000000
8980682750	8-9806	8275	FUEL FEED PUMP	000000	000024
8980690201	8-9806	9020	COOLER ASM; OIL	000003	000004
8980699950			SWITCH;COMB	000000	000000
8980699951			SWITCH;COMB	000000	000001
8980703210	8-9807	0321	STARTER ASM	000000	000000
8980703211	8-9807	0321	STARTER ASM	000000	000106
8980703930	8-9807	0393	HOSE;RUBER,OIL SEPERATOR	000000	000000
8980703931	8-9807	0393	HOSE;RUBER,OIL SEPERATOR	000000	000001
8980703960	8-9807	0396	HOSE;RUBBER,OIL SEPERATOR	000000	000000
8980703961	8-9807	0396	HOSE;RUBBER,OIL SEPERATOR	000000	000001
8980703970	8-9807	0397	HOSE;RUBBER,OIL SEPERATOR	000000	000000
8980703971	8-9807	0397	HOSE;RUBBER,OIL SEPERATOR	000000	000001
8980704410	8-9807	0441	CLUTCH; COOLING FAN	000000	000000
8980710280	8-9807	1028	CONTROL UNIT;ENG	000000	000000
8980710281	8-9807	1028	CONTROL UNIT;ENG	000000	000001
8980711011	8-9807	1101	HOUSING; FLYWHEEL	000000	000002
8980714010	8-9807	1401	FILTER; FUEL FEED PUMP	000000	002452
8980714040	8-9807	1404	GASKET; PUMP	000011	000000
8980714210			FILTER; ACL	000000	000000
8980723151	8-9807	2315	STARTER ASM	000000	000011
8980727120	8-9807	2712	PLUG;EGR COOLER	000000	000013
8980732890	8-9807	3289	CONTROL UNIT;ENG	000001	000001
8980733802	8-9807	3380	VALVE; EGR	000001	000001
8980735480	8-9807	3548	ADAPTER; AIR BREATHER	000000	000003
8980736350	8-9807	3635	SWITCH;ENGAGE STARTER	000000	000000
8980736870			SPRING; LEAF NO	000000	000001
8980741270	8-9807	4127	YOKE; STARTER	000002	000000
8980742270	8-9807	4227	PIPE ASM;OIL,INJ PUMP FEE	000000	000002
8980742880	8-9807	4288	ELEMENT KIT; FUEL FILTER	000000	002806
8980742900	8-9807	4290	CASE;FUEL FILTER	000000	000000
8980742901	8-9807	4290	CASE;FUEL FILTER	000000	000005
8980742910	8-9807	4291	FILTER ASM; FUEL	000000	000000
8980742911	8-9807	4291	FILTER ASM; FUEL	000000	000000
8980742920	8-9807	4292	PLUG;DRAIN,FUEL FILTER	000000	000013

8980742970	8-9807	4297	GASKET; PLUG, FUEL FILTER	000000	000005
8980745964	8-9807	4596	HEAD ASM; CYL	000000	000003
8980747460	8-9807	4746	GASKET; COVER TO OIL COOL	000014	000036
8980747660	8-9807	4766	TURBOCHARGER ASM	000000	000000
8980747690	8-9807	4769	PIPE; AIR	000001	000001
8980747740	8-9807	4774	PUMP ASM; INJ	000000	000002
8980747760	8-9807	4776	GASKET; CYL. HEAD	000000	000024
8980747791	8-9807	4779	HEAD ASM; CYL	000000	000001
8980749550	8-9807	4955	VALVE; FEED PUMP	000000	000029
8980750710	8-9807	5071	CONTROL UNIT; ENG	000000	000000
8980750711	8-9807	5071	CONTROL UNIT; ENG	000000	000002
8980750712	8-9807	5071	CONTROL UNIT; ENG	000000	000006
8980750721	8-9807	5072	CONTROL UNIT; ENG	000000	000002
8980750730	8-9807	5073	CONTROL UNIT; ENG	000001	000001
8980750740	8-9807	5074	CONTROL UNIT; ENG	000000	000000
8980750741	8-9807	5074	CONTROL UNIT; ENG	000000	000003
8980750750	8-9807	5075	CONTROL UNIT; ENG	000000	000000
8980750760	8-9807	5076	CONTROL UNIT; ENG	000000	000002
8980750780	8-9807	5078	CONTROL UNIT; ENG	000001	000001
8980750790	8-9807	5079	CONTROL UNIT; ENG	000001	000001
8980751270	8-9807	5127	GASKET; SUCTION PIPE TO B	000014	000032
8980751530	8-9807	5153	CHAMBER; INT	000000	000003
8980751840	8-9807	5184	HOSE; RUBBER	000002	000003
8980754450			SWITCH; POWER W	000000	000000
8980755980	8-9807	5598	GASKET; OIL FILLER	000000	000004
8980756710	8-9807	5671	FILTER ASM; OIL	000000	000001
8980756760	8-9807	5676	ELEMENT; OIL FILTER	000000	000251
8980756761	8-9807	5676	ELEMENT; OIL FILTER	000000	000000
8980757200	8-9807	5720	ADAPTER; OIL FILTER	000000	000000
8980757230	8-9807	5723	IMPELLER; WATER PUMP	000000	000003
8980757760	8-9807	5776	ROD ASM; CONN	000000	000008
8980758190	8-9807	5819	FAN; COOLING	000000	000000
8980758540	8-9807	5854	ELEMENT KIT; FUEL FILTER	000000	000000
8980758550	8-9807	5855	FILTER ASM; SUB FUEL	000000	000000
8980758551	8-9807	5855	FILTER ASM; SUB FUEL	000000	000000
8980758552	8-9807	5855	FILTER ASM; SUB FUEL	000001	000327
8980761842	8-9807	6184	BLOCK ASM; CYL	000000	000001
898076260T			ALTERNATOR	000000	000000
8980762600			ALTERNATOR	000000	000000
8980762601	8-9807	6260	ALTERNATOR	000000	000021
8980762610	8-9807	6261	COVER; FUEL FILTER	000002	000001
8980771650	8-9807	7165	GASKET; INJ NOZZLE	000037	000000
8980772480	8-9807	7248	ENGINE CONT UNIT	000000	000002
8980772481	8-9807	7248	ENGINE CONT UNIT	000000	000000
8980772490	8-9807	7249	ENGINE CONT UNIT	000000	000001
8980772491	8-9807	7249	ENGINE CONT UNIT	000000	000001
8980773200	8-9807	7320	PIPE; DRAIN	000000	000001

8980774910	8-9807	7491	PIPE; VENTILATOR	000000	000001
8980775080	8-9807	7508	HOSE; RUBBER, AIR	000001	000003
8980775090	8-9807	7509	HOSE; RUBBER, AIR	000001	000003
8980776380	8-9807	7638	IMPELLER; SEA WATER PUMP	000000	000000
8980776390	8-9807	7639	IMPELLER, SEA WATER PUMP	000000	000005
8980776400	8-9807	7640	PUMP ASM; SEA	000000	000001
8980776410	8-9807	7641	PUMP ASM; SEA WATER	000000	000001
8980777800	8-9807	7780	ENGINE CONT UNIT	000000	000000
8980777801	8-9807	7781	ENGINE CONT UNIT	000000	000001
8980777820	8-9807	7782	ENGINE CONT UNIT	000000	000000
8980777821	8-9807	7782	ENGINE CONT UNIT	000000	000002
8980778080	8-9807	7808	BELT; COOLING FAN	000000	000004
8980778830	8-9807	7883	CAP; W/LEVEL GAUGE	000000	000002
8980779360	8-9807	7936	THERMOSTAT	000000	000000
8980780810	8-9807	8081	FLYWEIGHT	000000	000000
8980787921	8-9807	8792	NUT; CM/SHF GEAR	000000	000147
8980788910	8-9807	8891	PAN ASM; OIL	000000	000003
8980792480	8-9807	9248	GSKET; INJ NOZZLE	001789	011781
8980797550	8-9807	9755	GASKET; JOINT BOLT, LEAK OF	000000	000079
8980797910	8-9807	9791	BOLT; OIL PAN	000000	000032
8980798630	8-9807	9863	PAN ASM; OIL	000000	000001
8980801260	8-9808	0126	GEAR; REV IDLER	000000	000000
8980801690	8-9808	0169	FLYWHEEL	000000	000004
8980805460	8-9808	0546	COVER; OIL COOLER	000000	000003
8980806650	8-9808	0665	CONTROL UNIT; ENG	000000	000007
8980806660	8-9808	0666	CONTROL UNIT; ENG	000000	000001
8980806670	8-9808	0667	CONTROL UNIT; ENG	000000	000010
8980806680	8-9808	0668	CONTROL UNIT; ENG	000000	000001
8980807710	8-9808	0771	TUE; GUIDE, OIL LEVEL GAUGE	000000	000002
8980807711	8-9808	0771	TUE; GUIDE, OIL LEVEL GAUGE	000000	000000
8980810650	8-9808	1065	CONTROL UNIT; ENG	000000	000020
8980811670	8-9808	1167	BUSHING; IDLE GEAR	000000	000004
8980811680	8-9808	1168	BUSHING; IDLE GEAR	000000	000003
8980811770	8-9808	1177	SPACER; FAN	000000	000003
8980811790	8-9808	1179	GAUGE; OIL LEVEL	000000	000000
8980812380	8-9808	1238	PLUNGER ASM; IN	000000	000003
8980818050	8-9808	1805	CONTROL UNIT; ENG	000000	000002
8980820340	8-9808	2034	CLIP	000006	000002
8980820350	8-9808	2035	CLIP	000006	000002
8980821640	8-9808	2164	AIR CLEANER ASM	000000	000002
8980821641	8-9808	2164	AIR CLEANER ASM	000000	000000
8980821760	8-9808	2176	BUSHING; FRT SP	000160	000249
8980822210	8-9808	2221	HOSE; RUBBER	000000	000002
8980824180	8-9808	2418	CONTROL UNIT; ENG	000000	000002
8980824182	8-9808	2418	CONTROL UNIT; ENG	000000	000000
8980824241	8-9808	2424	PIPE; WATER EGR	000000	000002
8980841281			STEP ASM; RR	000000	000001

8980841291			STEP ASM; RR	000000	000001
8980842280	8-9808	4228	NIPPLE;OIL PRESS WARING S	000001	000003
8980842610	8-9808	4261	PIPE;OIL,C/BL TP PTO	000000	000001
8980842631	8-9808	4263	TUBE;GUIDE,OIL LEVEL GAUG	000000	000000
8980842632	8-9808	4263	TUBE;GUIDE,OIL LEVEL GAUG	000000	000001
8980842640	8-9808	4264	TUBE;GAUGE,OIL LEVEL GAUG	000000	000000
8980842641	8-9808	4264	TUBE;GAUGE,OIL LEVEL GAUG	000000	000000
8980842642	8-9808	4264	TUBE;GAUGE,OIL LEVEL GAUG	000001	000009
8980842650	8-9808	4265	GASKET;GEAR CASE TO COVER	000000	000004
8980842670	8-9808	4267	PLATE; ADJ	000000	000001
8980842690	8-9808	4269	ADAPTER;FLYWHEEL HSG	000000	000000
8980842691	8-9808	4269	ADAPTER;FLYWHEEL HSG	000000	000013
8980842700	8-9808	4270	GEAR; IDLE, PTO	000001	000001
8980842720	8-9808	4272	GEAR; PTO	000000	000001
8980842730	8-9808	4273	GEAR; PTO	000000	000001
8980842740	8-9808	4274	TURBOCHARGER ASM	000000	000004
8980843910	8-9808	4391	GASKET;OIL PAN	000002	000003
8980843930	8-9808	4393	BRACKET; VALVE	000000	000002
8980843940	8-9808	4394	HOUSING;FLYWHEEL	000001	000001
8980844050	8-9808	4405	SPACER;STARTER	000000	000001
8980844060	8-9808	4406	HARNES;ENG	000000	000000
8980844061	8-9808	4406	HARNES;ENG	000000	000000
8980844070	8-9808	4407	STARTER ASM	000000	000004
8980844300	8-9808	4430	OIL TUBE	000000	000001
8980844320	8-9808	4432	BEARING; IDLE GEAR	000001	000001
8980844330	8-9808	4433	BEARING; GEAR	000001	000001
8980844770	8-9808	4477	VALVE;EGR	000000	000000
8980844771	8-9808	4477	VALVE;EGR	000000	000000
8980844772	8-9808	4477	VALVE;EGR	000000	000000
8980844773	8-9808	4477	VALVE;EGR	000000	000000
8980844774	8-9808	4477	VALVE;EGR	000000	000000
8980844780	8-9808	4478	GAUGE;OIL LEVEL	000000	000010
8980844790	8-9808	4479	GAUGE;OIL LEVEL	000000	000005
8980844850	8-9808	4485	HOSE;OIL	000000	000002
8980844860	8-9808	4486	HOSE; OIL	000000	000002
8980844870	8-9808	4487	CONNECTOR; OIL FILTER	000001	000001
8980844880	8-9808	4488	CONNECTOR; OIL FILTER	000001	000001
8980844910	8-9808	4491	AIR BREATHER	000000	000001
8980844920	8-9808	4492	HOSE	000000	000002
8980845010	8-9808	4501	WATER DUCT	000000	000001
8980845640	8-9808	4564	PIPE; SUCTION	000000	000000
8980845760	8-9808	4576	AIR COOLER	000000	000000
8980845780	8-9808	4578	INSULATOR; HEAT,LEAD PIPE	000000	000001
8980845850	8-9808	4585	FUEL PIPE	000000	000002
8980845860	8-9808	4586	LEAK OFF PIPE	000000	000001
8980846700	8-9808	4670	ENG HARNES	000000	000000
8980846750	8-9808	4675	SEA PIPE	000000	000001

8980846760	8-9808	4676	SEA PIPE	000000	000001
8980846900	8-9808	4690	WATER HOSE	000000	000001
8980847970	8-9808	4797	AIR BOOSTER PIPE	000000	000001
8980851090	8-9808	5109	TURBOCHARGER	000000	000001
8980853120	8-9808	5312	COOLER ASM; OIL	000000	000000
8980853121	8-9808	5312	COOLER ASM; OIL	000000	000000
8980853122	8-9808	5312	COOLER ASM; OIL	000027	000084
8980853123	8-9808	5312	COOLER ASM; OIL	000000	000000
8980853124	8-9808	5312	COOLER ASM; OIL	000000	000000
8980853670	8-9808	5367	CONTROL UNIT;ENG	000000	000000
8980853680	8-9808	5368	CONTROL UNIT;ENG	000000	000002
8980853700	8-9808	5370	CONTROL UNIT; ELEC	000000	000074
8980854670	8-9808	5467	CONTROL UNIT; ENG	000000	000000
8980854680	8-9808	5468	CONTROL UNIT; ENG	000000	000000
8980854690	8-9808	5469	CONTROL UNIT;ENG	000000	000000
8980854700	8-9808	5470	CONTROL UNIT; ENG	000000	000000
8980854710	8-9808	5471	CONTROL UNIT; ENG	000000	000000
8980857240	8-9808	5724	GASKET; PLUG	000000	000007
8980862340	8-9808	6234	CONTROL UNIT;ENG	000000	000000
8980862371	8-9808	6237	CONTROL UNIT; ELEC	000000	000000
8980862380	8-9808	6238	CONTROL UNIT; ELEC	000000	000001
8980864220	8-9808	6422	PAN ASM;OIL	000000	000001
8980864280	8-9808	6428	HOSE; FUEL	000001	000001
8980864330	8-9808	6433	SENSOR	000000	000027
8980864340	8-9808	6434	COVER;FUEL FILTER	000000	000003
8980866870	8-9808	6687	PIPE; OIL DRAIN	000000	000001
8980866900	8-9808	6690	ECM	000000	000000
8980866901	8-9808	6690	ECM	000000	000001
8980866903	8-9808	6690	ECM	000000	000000
8980866920	8-9808	6692	ECM	000000	000001
8980866921	8-9808	6692	ECM	000000	000000
8980866923	8-9808	6692	ECM	000000	000000
8980866980	8-9808	6698	ADAPTER; OIL DRAIN COCK	000001	000001
8980867110	8-9808	6711	HEAT EXCH	000000	000001
8980867180	8-9808	6718	GASKET; COVER	000000	000001
8980867230	8-9808	6723	FILTER ASM; FUEL	000000	000000
8980867240	8-9808	6724	FILTER ASM; FUEL	000000	000000
8980867241	8-9808	6724	FILTER ASM; FUEL	000000	000000
8980876040	8-9808	7604	COOLER ASM; OIL	000000	000001
8980876041	8-9808	7604	COOLER ASM; OIL	000000	000000
8980876050	8-9808	7605	CORE; OIL COOLER	000000	000003
8980876850	8-9808	7685	PULLEY;FAN CENTER	000000	000008
8980879560	8-9808	7956	HOSE; RUBBER,OIL COOLER	000000	000003
8980879570	8-9808	7957	HOSE; WATER,OIL COOLER	000000	000003
8980879650	8-9808	7965	GASKET; OIL F.	000087	000101
8980880930	8-9808	8093	FOOT; ENG	000000	000007
8980880940	8-9808	8094	FOOT; ENG	000000	000004

8980880941	8-9808	8094	FOOT; ENG	000000	000003
8980881010	8-9808	8101	GASKET; SPACER	000000	000022
8980883280	8-9808	8328	BOLT; CENTER	000000	000007
8980890590	8-9808	9059	TUBE; GUIDE,OIL LEVEL GAU	000000	000003
8980890630	8-9808	9063	GENERATOR ASM	000000	000004
8980890631	8-9808	9063	GENERATOR ASM	000000	000000
8980890640	8-9808	9064	BRACKET; GEN	000000	000002
8980890840	8-9808	9084	METAL KIT; CRANKSHAFT, STA	000000	000046
8980890850	8-9808	9085	METAL KIT;CRANK	000000	000014
8980890910	8-9808	9091	GASKET; HSG TO HD	000000	000009
8980891100	8-9808	9110	PULLEY; CR/SHF	000000	000000
8980891101	8-9808	9110	PULLEY; CR/SHF	000000	000002
8980891220	8-9808	9122	FILLER; OIL	000000	000002
8980892220	8-9808	9222	GAUGE; OIL LEVEL	000000	000003
8980892230	8-9808	9223	BELT; COOLING FAN	000000	000029
8980893280	8-9808	9328	BRACKET;FUEL FILTER	000000	000001
8980893380	8-9808	9338	HARNESS; ENG	000000	000000
8980893381	8-9808	9338	HARNESS; ENG	000000	000003
8980894850	8-9808	9485	BLOCK ASM; CYL	000000	000000
8980894851	8-9808	9485	BLOCK ASM; CYL	000000	000002
8980895400	8-9808	9540	CONTROL UNIT; ENG	000000	000001
8980895410	8-9808	9541	ECM	000000	000002
8980895411	8-9808	9541	ECM	000000	000002
8980895420	8-9808	9542	CONTROL UNIT;ENG	000000	000003
8980895430	8-9808	9543	CONTROL UNIT;ENG	000000	000001
8980895970	8-9808	9597	BRACKET; CLIP,ENG HARNESS	000000	000002
8980898080	8-9808	9808	COOLER ASM;OIL	000000	000000
8980898081	8-9808	9808	COOLER ASM;OIL	000000	000006
8980900130	8-9809	0013	SPACER;DIST,OIL PAN	000000	000004
8980900300	8-9809	0030	FLYWEIGHT	000022	000000
8980900550	8-9809	0055	PIPE; OIL,TURBOCHARGER FE	000000	000000
8980903140	8-9809	0314	PIPE; OIL,OIL JET	000000	000002
8980903220	8-9809	0322	HOUSING; FLYWHEEL	000000	000000
8980903221	8-9809	0322	HOUSING; FLYWHEEL	000000	000001
8980903222	8-9809	0322	HOUSING; FLYWHEEL	000000	000000
8980904300	8-9809	0430	PULLEY; FAN CENTER	000000	000003
8980904640	8-9809	4064	THERMOSTAT	000000	000187
8980907000	8-9809	0700	TURBOCHARGER	000000	000001
8980907010	8-9809	0701	TURBOCHARGER ASM	000000	000001
8980907140	8-9809	0714	ENGINE CONT MODULE	000000	000003
8980907141	8-9809	0714	ENGINE CONT MODULE	000000	000000
8980908910	8-9809	0891	SWITCH;ENGAGE STARTER	000000	000002
8980911410	8-9809	1141	BOLT; CONNROD	000952	000000
8980915650	8-9809	1565	PUMP ASM; INJ	000000	000000
8980915651	8-9809	1565	PUMP ASM; INJ	000000	000111
8980915652	8-9809	1565	PUMP ASM; INJ	000000	000000
8980915660	8-9809	1566	BUSHING;DRV SHFT,OIL PUMP	000000	000173

8980918360	8-9809	1836	DUCT;INL,TURBOCHARGER	000000	000000
8980921120	8-9809	2112	GENERATOR	000000	000000
8980921121	8-9809	2112	GENERATOR	000000	000000
8980921122	8-9809	2112	GENERATOR	000000	000000
8980921160	8-9809	2116	GENERATOR ASM	000000	000000
8980921161	8-9809	2116	GENERATOR ASM	000000	000053
8980922550	8-9809	2255	CAP; INT	000001	000003
8980922760	8-9809	2276	PIPE;OIL,TURBOCHARGER FEE	000001	000002
8980923150	8-9809	2315	PIPE; WATER EGR	000001	000002
8980923160	8-9809	2316	PIPE;WATER,TURBOCHARGER I	000000	000002
8980923170	8-9809	2317	PIPE;WATER,TURBOCHARGER O	000000	000002
8980923990	8-9809	2399	REGULATOR ASM;VOLTAGE,GEN	000000	000005
8980924811			ELEMENT; FUEL F	000000	000000
8980924940	8-9809	2494	PULLY;FAN CENTER	000001	000001
8980925390	8-9809	2539	CLAMP;NOZZLE HOLDER	000000	000004
8980925420	8-9809	2542	CONTROL UNIT;ENG	000000	000002
8980925421	8-9809	2542	CONTROL UNIT;ENG	000000	000000
8980925430	8-9809	2543	CONTROL UNIT; ENG	000000	000001
8980925431	8-9809	2543	CONTROL UNIT; ENG	000000	000002
8980925440	8-9809	2544	CONTROL UNIT; ENG	000000	000004
8980926510	8-9809	2651	CAMSHAFT	000000	000001
8980928210	8-9809	2821	NOZZLE ASM; INJ	000000	000000
8980928211	8-9809	2821	NOZZLE ASM; INJ	000000	000004
8980928220	8-9809	2822	TURBOCHARGER ASM	000000	000001
8980930180	8-9809	3018	GEAR; RING	000000	000014
8980930310	8-9809	3031	HOSE; RUBBER PCV	000000	000003
8980930730	8-9809	3073	PAN ASM; OIL	000000	000001
8980930740	8-9809	3074	PAN ASM; OIL	000000	000003
8980931550	8-9809	3155	CAMSHAFT	000000	000001
8980931880	8-9809	3188	ECM	000000	000011
8980932490	8-9809	3249	PIPE;OIL RETURN,TURBOCHAR	000001	000000
8980932500	8-9809	3250	PIPE;WATER EGR	000001	000002
8980932570	8-9809	3257	HOSE; RUBBER	000001	000002
8980932610	8-9809	3261	PAN ASM;OIL	000001	000002
8980935320	8-9809	3532	PIPE; INL	000000	000000
8980936400	8-9809	3640	PIPE ASM; INJ	000001	000000
8980940991	8-9809	4099	PULLEY; CR/SHF	000001	000001
8980941020	8-9809	4102	PIPE; WATER RETURN	000001	000001
8980941030	8-9809	4103	GASKET; INL PIPE	000000	000020
8980941980	8-9809	4198	ADAPTER	000000	000006
8980945280	8-9809	4528	GASKET; EGR VLV	000000	000101
8980945282	8-9809	4528	GASKET; EGR VLV	000000	000000
8980945460	8-9809	4546	FILTER ASM; FUEL	000000	000005
8980945900	8-9809	4590	FILLER;OIL	000000	000005
8980949180	8-9809	4918	YOKE;STARTER	000001	000002
8980951710	8-9809	5171	CLUTCH;COOLING FAN	000000	000000
8980951910	8-9809	5191	DUCT;AIR	000000	000002

8980952000	8-9809	5200	ADAPTER; COUPLING	000000	000000
8980952030	8-9809	5203	BELT; FAN	000000	000021
8980952150	8-9809	5215	RING SET; PISTON, STD	000000	000007
8980952160	8-9809	5216	RING SET;PISTON,O/S=0.25	000000	000009
8980952450	8-9809	5245	CAP;W/LEVEL GAUGE	000000	000000
8980953520	8-9809	5352	NOZZLE KIT; INJ	000000	000015
8980955010	8-9809	5501	PIPE; FILTER	000000	000005
8980955490	8-9809	5549	HOSE; OIL DRAIN	000000	000000
8980955500	8-9809	5550	PUMP ASM; INJ	000000	000000
8980956110	8-9809	5611	CONTROL UNIT; ENG	000000	000002
8980956111	8-9809	5611	CONTROL UNIT; ENG	000000	000000
8980956850	8-9809	5685	COUPLING ASM	000000	000001
8980957120	8-9809	5712	BOLT; CENTER	000000	000008
8980957130	8-9809	5713	METAL SET;CONN ROD, STD	000000	000015
8980957681	8-9809	5768	PUMP ASM; OIL	000000	000014
8980958070	8-9809	5807	COOLER; EGR	000000	000000
8980958071	8-9809	5807	COOLER; EGR	000000	000001
8980958080	8-9809	5808	PIPE;EGR	000001	000001
8980958360	8-9808	5836	PLATE:TAPPET	000000	000008
8980958370	8-9809	5837	PLATE; TAPPET	000000	000027
8980958390	8-9809	5839	PLATE; TAPPET	000000	000007
8980958400	8-9809	5840	PLATE; TAPPET	000000	000033
8980958410	8-9809	5841	PLATE; TAPPET	000000	000007
8980958430	8-9809	5843	PLATE; TAPPET	000000	000007
8980958450	8-9809	5845	PLATE; TAPPET	000000	000027
8980958460	8-9809	5846	PLATE; TAPPET	000000	000028
8980958470	8-989	5847	PLATE; TAPPET	000000	000027
8980958480	8-9809	5848	PLATE; TAPPET	000000	000007
8980958490	8-9809	5849	PLATE; TAPPET	000000	000007
8980958500	8-9809	5850	PLATE; TAPPET	000000	000020
8980958510	8-9809	5851	PLATE; TAPPET	000000	000007
8980958570	8-9809	5857	NOZZLE KIT; INJ	000000	000004
8980959780	8-9809	5978	PIPE;OIL,TURBOCHARGER FEE	000000	000053
8980961320	8-9809	6132	BOLT;EYE,OIL PIPE,TURBOCH	000003	000007
8980961660	8-9809	6166	GASKET	000028	000063
8980964060	8-9809	6406	HARNESS; ECM	000000	000002
8980964080	8-9809	6408	HARNESS; METER	000000	000001
8980964170	8-9809	6417	TURBOCHARGER ASM	000000	000000
8980964171	8-9809	6417	TURBOCHARGER ASM	000000	000003
8980964180	8-9809	6418	CLIP;HOSE,TURBOCHARGER	000021	000012
8980965080	8-9809	6508	ADAPTER; PTO	000000	000001
8980965800	8-9809	6580	PUMP ASM; INJ	000000	000030
8980965920	8-9809	6592	CLIP; HOSE TURBOCHARGER O	000014	000030
8980966600	8-9809	6660	HOSE; RUBBER,EGR COOLER	000002	000002
8980967700	8-9809	6770	PIPE; FUEL	000000	000000
8980967730	8-9809	6773	PIPE; FUEL	000000	000001
8980969680	8-9809	6968	GASKET; INL PIPE TO MANIF	000002	000000

8980969830	8-9809	6983	PULLEY; GEN	000000	000002
8980971560	8-9809	7156	CAMSHAFT	000000	000000
8980971600	8-9809	7160	PIPE ASM; INJ	000000	000006
8980971940			LAMP ASM; HEAD	000000	000000
8980972040			SPRING; START	000000	000001
8980974610	8-9809	7461	PISTON	000000	000008
8980974620	8-9809	7462	PISTON; O/S=0.25	000001	000003
8980976940			CYLINDER ASM; C	000000	000000
8980978410	8-9809	7841	FLYWEIGHT	000002	000003
8980979560	8-9809	7956	STRAINER & PIPE ASM; OIL	000019	000000
8980980640	8-9809	8064	CONTROL UNIT;ENG	000000	000000
8980980642	8-9809	8064	CONTROL UNIT;ENG	000000	000002
8980980650	8-9809	8065	CONTROL UNIT; ENG	000000	000000
8980980651	8-9809	8065	CONTROL UNIT; ENG	000001	000002
8980980660	8-9809	8066	CONTROL UNIT; ELEC	000000	000000
8980980670	8-9809	8067	CONTROL UNIT; ELEC	000000	000001
8980980680	8-9809	8068	CONTROL UNIT; ENG	000001	000001
8980980740	8-9809	8074	CONTROL UNIT; ENG	000000	000000
8980980742	8-9809	8074	CONTROL UNIT; ENG	000001	000002
8980980750	8-9809	8075	CONTROL UNIT; ENG	000000	000000
8980980751	8-9809	8075	CONTROL UNIT; ENG	000000	000002
8980980760	8-9809	8076	CONTROL UNIT; ELEC	000000	000002
8980980770	8-9809	8077	CONTROL UNIT; ELEC	000000	000001
8980980780	8-9809	8078	CONTROL UNIT; ENG	000001	000001
8980980840	8-9809	8084	ENG HARNESS	000000	000007
8980983531	8-9809	8353	CONTROL UNIT; ENG	000000	000000
8980983550	8-9809	8355	CONTROL UNIT;ENG	000000	000000
8980983551	8-9809	8355	CONTROL UNIT;ENG	000000	000000
8980984791			LAMP ASM; HEAD	000000	000001
8980984801			LAMP ASM; HEAD	000000	000001
8980986030	8-9809	8603	CONTROLLER; EGR	000001	000001
8980986210	8-9809	8621	GASKET;C/BL TO CRANKCASE	000000	000006
8980987860	8-9809	8786	CLUTCH; COOLING FAN	000000	000000
8980987861	8-9809	8786	CLUTCH; COOLING FAN	000000	000003
8980988410	8-9809	8841	FLYWHEEL	000000	000011
8980988750	8-9809	8875	PUMP ASM; INJ	000000	000000
8981007860	8-9810	0786	CONNECTOR; GLOW PLUG	000000	000006
8981008911	8-9810	0891	THROTTLE ASM; INT	000001	000002
8981008990	8-9810	0899	VALVE ASM; THROTTLE	000006	000005
8981008991	8-9810	0899	VALVE ASM; THROTTLE	000000	000003
8981009011	8-9810	0901	THROTTLE ASM; INT	000000	000003
8981012880	8-9810	1288	OVERHAUL KIT;SUPPLY PUMP	000000	000006
8981014660	8-9810	1466	PIPE ASM; INJ	000000	000003
8981014720	8-9810	1472	GASKET; CAM END	000005	000000
8981014850	8-9810	1485	DUCT;WATER, HEAT EXCHANGE	000000	000003
8981018440	8-9810	1844	HOSE;FUEL	000001	000001
8981018680	8-9810	1868	SPRING;IDLE	000002	000001

8981018710	8-9810	1871	SPRING;MAIN,LEVER	000000	000002
8981033411	8-9810	3341	CONTROL UNIT; ELEC	000000	000000
8981033420	8-9810	3342	CONTROL UNIT' ELEC	000000	000008
8981036590	8-9810	3659	VALVE; REED	000000	000000
8981054410	8-9810	5441	PUMP ASM;FUEL FEED,INJ	000000	000000
8981054890	8-9810	5489	BRACKET; WATER PIPE	000000	000003
8981054900	8-9810	5490	BRACKET; WATER PIPE	000000	000003
8981054910	8-9810	5491	PIPE; INL	000000	000004
8981054920	8-9810	5492	BRACKET; FUEL FILTER	000000	000004
8981056040	8-9810	5604	PIPE; FUEL,FEED PUMP TO F	000000	000003
8981056050	8-9810	5605	PIPE; FUEL,FUEL FILTER TO	000000	000003
8981056060	8-9810	5606	PIPE ASM; INJ	000000	000003
8981056070	8-9810	5607	PIPE; FUEL,FUEL FILTER LE	000000	000003
8981056080	8-9810	5608	BRACKET; FUEL PIPE CLIP	000000	000004
8981056100	8-9810	5610	COUPLING ASM	000000	000005
8981056130	8-9810	5613	HOUSING; FLYWHEEL	000000	000005
8981056140	8-9810	5614	TUBE; GUIDE,OIL LEVEL GAU	000000	000003
8981056150	8-9810	5615	BRACKET; WATER PIPE	000000	000003
8981056221	8-9810	5622	DUCT; EGR	000000	000003
8981056230	8-9810	5623	DUCT; EGR	000000	000003
8981056480	8-9810	5648	FLYWHEEL	000000	000004
8981060070	8-9810	6007	WASHER; THRUST,CR/SHF	000000	000008
8981063621	8-9810	6362	MANIFOLD; EXH, FRT	000000	000004
8981064710	8-9810	6471	PIPE; FILTER	000000	000001
8981064901	8-9801	6490	PIPE;OIL RTN;TURBOCHARGER	000000	000003
8981064910	8-9810	6491	LABEL;F/TANK FILL LOCATIO	000000	000010
8981067481	8-9810	6748	BRACKET; EGR COOLER	000000	000004
8981069080	8-9810	6908	PIPE;OIL,TURBOCHARG FEED	000000	000003
8981069090	8-9810	6909	PIPE; WATER,TURBOCHRG OUT	000000	000000
8981069091	8-9810	6909	PIPE; WATER,TURBOCHRG OUT	000000	000004
8981069100	8-9810	6910	PIPE;WATER,TURBOCHRG IN	000000	000003
8981073460	8-9810	7346	PIPE; WATER EGR	000000	000002
8981073470	8-9810	7347	HOSE; WATER	000000	000002
8981078573	8-9810	7857	COOLER ASM; EGR	000000	000005
8981079890	8-9810	7989	PULLEY; CR/SHF	000000	000001
8981079930	8-9810	7993	PULLEY; CR/SHF	000000	000004
8981079960	8-9810	7996	PULLEY; CR/SHF	000000	000003
8981080300	8-9810	8030	PLUG; LEVEL GAUGE	000000	000007
8981083210	8-9810	8321	HOSE; WATER	000000	000002
8981094700	8-9810	9470	RING; SNAP, ROCKER, ARM	000015	000016
8981094710	8-9810	9471	HOUSING; FLYWHEEL	000000	000003
8981095650	8-9810	9565	FLYWHEEL	000000	000000
8981097110	8-9810	9711	COVER; OIL PORT	000000	000000
8981097111	8-9810	9711	COVER; OIL PORT	000000	000009
8981099190	8-9810	9919	HOSE; RUBBER	000000	000001
8981101010			PULLEY; WATER PUMP	000001	000002
8981101061	8-9811	0106	CONTROL UNIT; ENG	000000	000001

8981105410	8-9811	0541	DUCT; EGR VLV	000000	000003
8981113960	8-9811	1396	HARNESS; ENG	000000	000001
8981113970	8-9811	1397	HARNESS; ECM	000000	000001
8981116621	8-9811	1662	HARNESS; ENG	000000	000000
8981116622	8-9811	1662	HARNESS; ENG	000000	000002
8981116640	8-9811	1664	PIPE; INL,TURBO TO INL CO	000000	000003
8981116670	8-9811	1667	BRACKET; HARNESS INL MANI	000000	000003
8981117350	8-9811	1735	STUD;CTR MANIF TO TURBOCH	000000	000003
8981122300	8-9811	2230	LINER; C/BL	000000	000005
8981122310	8-9811	2231	LINER; C/BL	000000	000005
8981122320	8-9811	2232	LINER; C/BL	000000	000005
8981122330	8-9811	2233	LINER; C/BL	000000	000005
8981123250	8-9811	2325	HOSE; RUBBER, WATER PIPE	000001	000003
8981125582	8-9811	2558	BRACKET; ENG HANGER	000000	000001
8981125590	8-9811	2559	BRACKET; EGR COOLER	000000	000001
8981125591	8-9811	2559	BRACKET; EGR COOLER	000000	000001
8981129470	8-9811	2947	GASKET; AIR CMP	000000	000010
8981130360	8-9811	3036	GASKET;AIR CMPR	000000	000008
8981130370	8-9811	3037	GASKET; AIR CMP	000000	000001
8981133710	8-9811	3371	PIP; INL	000000	000003
8981139771	8-9811	3977	MANIFOLD; EXHAUST	000000	000004
8981140260	8-9811	4026	PIPE;SEA WATER,CHRG AIR	000000	000001
8981140510	8-9811	4051	DUCT;EGR,EGR CLR #1 TO #2	000000	000000
8981140520	8-9811	4052	DUCT; EGR INL	000000	000000
8981141940	8-9811	4194	PROTECTOR; HEAT,EGR	000000	000003
8981142560	8-9811	4256	GASKET; CYL HEAD	000000	000206
8981142990	8-9811	4299	RING SET; PISTON,STANDARD	000000	000008
8981143000	8-9811	4300	RING SET; PISTON,O/S=0.25	000003	000007
8981144230	8-9811	4423	GUIDE; FAN	000000	000003
8981144240	8-9811	4424	GUIDE; FAN	000000	000003
8981144380	8-9811	4438	BRACKET; WATER PIPE	000000	000002
8981144450	8-9811	4445	SHIM; INJ PUMP	000000	000321
8981144460	8-9811	4446	SHIM; INJ PUMP	000000	000002
8981145280	8-9811	4528	BRACKET; OIL PIPE	000000	000002
8981145510	8-9811	4551	TUBE;GUIDE,OIL LVL GAUGE	000000	000000
8981145511	8-9811	4551	TUBE;GUIDE,OIL LVL GAUGE	000000	000004
8981145870	8-9811	4587	GASKET; THERMOS	000000	000058
8981148000	8-9811	4800	GASKET; PUMP TO C/BL	000000	000000
8981148001	8-9811	4800	GASKET; PUMP TO C/BL	000000	000006
8981148010	8-9811	4801	PIPE;OIL,TURBOCHARGER FEE	000000	000003
8981148030	8-9811	4803	PIPE;OIL DRAIN,TURBOCHRG	000000	000003
8981148041	8-9811	4804	PIPE;WATER,TURBOCHARGER	000000	000003
8981148050	8-9811	4805	PIPE ASM;WATER,TURBO RTN	000000	000000
8981152240	8-9811	5224	TUBE;GUIDE,OIL LEVELGAUGE	000001	000000
8981154981	8-9811	5498	PIPE;OIL,TURBOCHARGER FEE	000000	000000
8981159480	8-9811	5948	ROD ASM; CONN	000000	000013
8981159590	8-9811	5959	BUSHING; CONNROD	000000	000020

8981161401	8-9811	6140	BRACKET; ENG HANGER	000000	000000
8981161402	8-9811	6140	BRACKET; ENG HANGER	000000	000002
8981161810	8-9811	6181	FLYWHEEL	000000	000003
8981164210	8-9811	6421	HOUSING; FLYWHEEL	000000	000000
8981164211	8-9811	6421	HOUSING; FLYWHEEL	000000	000003
8981164660	8-9811	6466	GASKET;TURBO CHGR-EXH MAN	000000	000008
8981167680	8-9811	6768	PISTON	000002	000004
8981168670	8-9811	6867	CONTROL UNIT; ENG	000000	000000
8981168671	8-9811	6867	CONTROL UNIT; ENG	000001	000000
8981168680	8-9811	6868	CONTROL UNIT; ENG	000000	000000
8981168681	8-9811	6868	CONTROL UNIT; ENG	000000	000001
8981168690	8-9811	6869	CONTROL UNIT; ENG	000000	000000
8981168691	8-9811	6869	CONTROL UNIT; ENG	000000	000001
8981171690	8-9811	7169	PULLEY; FAN DRIVE	000001	000001
8981171710	8-9811	7171	REED VALVE ASM	000000	000000
8981171711	8-9811	7171	REED VALVE ASM	000000	000000
8981171720	8-9811	7172	REED VALVE ASM	000000	000000
8981171730	8-9811	7173	REED VALVE ASM	000000	000000
8981172100	8-9811	7210	PIPE; SUCTION	000000	000005
8981173600	8-9811	7360	COVER; FRT	000000	000001
8981175940	8-9811	7594	RING SET; PISTON, STANDARD	000000	000015
8981179000	8-9811	7900	BRACKET;GEN	000000	000003
8981180430	8-9118	0430	CONTROL UNIT; ENG	000000	000000
8981185290	8-9811	8529	PIPE;WATER,EGR COOLER FEE	000000	000000
8981185310	8-9811	8531	PIPE;WATER,EGR COOLER RTN	000000	000000
8981195220	8-9811	9522	PUMP ASM; WATER	000000	000000
8981197900	8-9811	9790	SENSOR; PRESS	000091	000452
8981203941	8-9812	0394	HOSE;RUBBER,TURBOCHARGER	000000	000002
8981205421	8-9812	0542	CONTROL UNIT; ENGINE	000000	000000
8981205500	8-9812	0550	CONTROL UNIT;ENG	000000	000000
8981205670	8-9812	0567	PIPE; EGR	000000	000003
8981205680	8-9812	0568	PIPE; EGR	000000	000003
8981209170	8-9812	0917	CLIP	000029	000071
8981209810	8-9812	0981	HOSE; RUBBER, WATER DUCT	000000	000001
8981210360	8-9812	1036	IUCT;WATER	000000	000014
8981210850	8-9812	1085	PIPE; FUEL,FEED PUMP TO F	000000	000001
8981210860	8-9812	1086	PIPE;FUEL,FUEL FILTER TO	000000	000001
8981210970	8-9812	1097	PIPE;FUEL,FUEL FILTER LEA	000000	000001
8981210980	8-9812	1098	PIPE;FUEL,FUEL FILTER LEA	000000	000001
8981210990	8-9812	1099	PIPE;FUEL,FUEL FILTER LEA	000000	000001
8981211010	8-9812	1101	COUPLING ASM	000000	000001
8981211120	8-9812	1112	HARNESS;ENG	000000	000001
8981211360	8-9812	1136	HARNESS; ECM	000000	000000
8981213290	8-9812	1329	MANIFOLD; EXHAUST	000000	000002
8981213310	1-1414	5191	GASKET; EXH MANIF TO LEAD	000000	000002
8981217110	8-9812	1711	BRACKET; EGR COOLER	000000	000002
8981217120	8-9812	1712	BRACKET;EGR COOLER	000000	000002

8981217690	8-9812	1769	DUCT;EGR	000000	000003
8981218760	8-9812	1876	STRAINER;OIL, OIL PUMP	000000	000002
8981222261	8-9812	2226	COOLER ASM; EGR	000000	000008
8981227070	8-9812	2707	GASKET;OIL PAN TO C/BL	000000	000007
8981227830	8-9812	2783	GASKET; ELEMENT TO BODY	000025	000063
8981227840	8-9812	2784	GASKET; ELEMENT TO BODY	000025	000063
8981227860	8-9812	2786	CORE; OIL COOLER	000001	000001
8981229450	8-9812	2945	PIPE;WATER,COOLER	000000	000003
8981229460	8-9812	2946	PIPE; WATER,EGR COOLER	000000	000003
8981229470	8-9812	2947	PIPE;WATER, COOLER	000000	000003
8981229483	8-9812	2948	PIPE;WATER, COOLER	000000	000003
8981229530	8-9812	2953	PIPE;FILTER	000003	000007
8981230850	8-9812	3085	PAN ASM; OIL	000000	000004
8981231450	8-9812	3145	DUCT;WATER, BYPASS	000000	000003
8981231610	8-9812	3161	HOSE;RUBBER,WATER PIPE	000000	000002
8981231620	8-9812	3162	HOSE;RUBBER,WATER PIPE	000000	000005
8981232461	8-9812	3246	PIPE; WATER EGR	000000	000000
8981232472	8-9812	3247	PIPE; WATER EGR	000000	000003
8981232500	8-9812	3250	DUCT; EGR	000000	000003
8981232511	8-9812	3251	DUCT; EGR	000000	000003
8981232520	8-9812	3252	DUCT; EGR	000000	000003
8981234740	8-9812	3474	BRACKET; HARNESS	000000	000004
8981234750	8-9812	3475	BRACKET; HARNESS	000000	000003
8981244941	8-9812	4494	STAY; FAN GUIDE	000000	000002
8981245480	8-9812	4548	ENG CONT UNIT	000000	000000
8981245481	8-9812	4548	ENG CONT UNIT	000000	000013
8981249520	8-9812	4952	COVER; FUEL FILTER	000000	000008
8981249720	8-9812	4972	METAL KIT; CRANK	000000	000000
8981258610	8-9812	5861	CONTROL UNIT; ENGINE	000000	000000
8981258680	8-9812	5868	CONTROL UNIT; ENG	000000	000001
8981259471	8-9812	5947	CONTROL UNIT; TURBOCHARGE	000000	000002
8981259482	8-9812	5948	BLOCK ASM; CYL	000000	000000
8981259483	8-9812	5948	BLOCK ASM; CYL	000000	000003
8981260510	8-9812	6051	CONTROL UNIT; ENG	000000	000000
8981260530	8-9812	6053	CONTROL UNIT;ENG	000000	000012
8981260540	8-9812	6054	CONTROL UNIT;ENG	000000	000000
8981260550	8-9812	6055	CONTROL UNIT;ENG	000000	000000
8981260570	8-9812	6057	CONTROL UNIT;ENG	000000	000006
8981260580	8-9812	6058	CONTROL UNIT;ENG	000000	000000
8981260650	8-9812	6065	CONTROL UNIT; ENG	000000	000000
8981260660	8-9812	6066	CONTROL UNIT; ENG	000000	000002
8981260680	8-9812	6068	CONTROL UNIT;ENG	000000	000015
8981260720	8-9812	6072	CONTROL UNIT; ENG	000000	000002
8981260730	8-9812	6073	CONTROL UNIT; ENG	000000	000003
8981260760	8-9812	6076	CONTROL UNIT;ENG	000000	000000
8981260780	8-9812	6078	CONTROL UNIT; ENG	000000	000000
8981260790	8-9812	6079	CONTROL UNIT;ENG	000000	000001

8981260800	8-9812	6080	CONTROL UNIT;ENG	000000	000002
8981261860	8-9812	6186	HOSE; RUBBER	000000	000004
8981261870	8-9812	6187	HOSE; RUBBER	000000	000004
8981262301	8-9812	6230	WATER PUMP	000000	000000
8981262302	8-9812	6230	WATER PUMP	000000	000002
8981262310	8-9812	6231	WATER PUMP	000000	000000
8981262311	8-9812	6231	WATER PUMP	000000	000210
8981263320	8-9812	6332	PIPE; FUEL	000000	000003
8981263510	8-9812	6351	PROTECTOR; HEAT,EGR	000000	000003
8981264350	8-9812	6435	CONTROL UNIT; ENG	000001	000001
8981265720	8-9812	6572	PIPE; WATER OUT	000002	000000
8981270441	8-9812	7044	ADAPTER; EXH PIPE	000000	000006
8981275045	8-9812	7504	CASE ASM; BRG,INJ PUMP	000000	000003
8981275084	8-9812	7508	SHAFT ASM; DRIVE,INJ PUMP	000000	000003
8981275112	8-9812	7511	COVER; BEARING	000000	000004
8981275180	8-9812	7518	SLEEVE	000000	000003
8981275221	8-9812	7522	SPACER; BRG	000000	000003
8981275231	8-9812	7523	SPACER; BRG	000000	000003
8981275241	8-9812	7524	SPACER; BRG	000000	000003
8981275251	8-9812	7525	SPACER; BRG	000000	000003
8981275261	8-9812	7526	SPACER; BRG	000000	000003
8981275350	8-9812	7535	NUT; COVER	000000	000023
8981276480	8-9812	7648	CLIP;RUBBER HOSE	000022	000100
8981280110	8-9812	8011	CONTROL UNIT;ENG	000000	000040
8981281340	8-9812	8134	PUMP ASM; OIL	000002	000002
8981281760	8-9812	8176	ADAPTER; EXH PIPE	000000	000006
8981282520	8-9812	8252	SHIM	000000	000013
8981282530	8-9812	8253	SHIM	000000	000010
8981304210	8-9813	0421	CONTROL UNIT;ENG	000000	000002
8981305080	8-9813	0508	OVERHAUL KIT;SUPPLY PUMP	000000	000000
8981329420	8-9813	2942	TIMER; GLOW PLUG	000001	000002
8981330590	8-9813	3059	GASKET; VLV	000014	000036
8981330600	8-9813	3060	GASKET; PLUG	000014	000036
8981331241	8-9813	3124	CONTROL UNIT;TURBOCHARGER	000000	000007
8981333470	8-9813	3347	CLIP; HOSE	000000	000002
8981333570			CLIP; AIR DUCT	000015	000035
8981338540	8-9813	3854	ADAPTER, EXH PIPE	000000	000002
8981339580	8-9813	3958	CLIP; WATER HOS	000000	000001
8981339780	8-9813	3978	PLUG; COOLER BODY	000001	000002
8981339790	8-9813	3979	GASKET; PLUG	000014	000036
8981340600	8-9813	4060	MANIFOLD; EXHAUST	000000	000000
8981340601	8-9813	4060	MANIFOLD; EXHAUST	000000	000002
8981342270	8-9813	4227	TUROCHARGER ASM	000000	000002
8981342271	8-9813	4227	TUROCHARGER ASM	000000	000000
8981342650	8-9813	4265	PIPE; WATER	000000	000000
8981342651	8-9813	4265	PIPE; WATER	000000	000001
8981342652	8-9813	4265	PIPE; WATER	000000	000000

8981342920	8-9813	4292	HOUSING; FLYWHEEL	000000	000001
8981343000	8-9813	4300	PIPE; OIL,TURBO FEED	000000	000003
8981343101	8-9813	4310	FLYWHEEL	000000	000001
8981343990	8-9813	4399	BRACKET; TUBE,OIL LEVEL G	000000	000003
8981344010	8-9813	4401	TUBE; GUIDE,OIL LEVEL GAU	000000	000003
8981344020	8-9813	4402	PULLEY; WATER PUMP	000000	000003
8981344030	8-9813	4403	PIPE; WATER OUTLET	000000	000003
8981344040	8-9813	4404	DUCT; WATER,OUTLET	000000	000003
8981344050	8-9813	4405	PIPE; WATER,EGR COOLER	000000	000003
8981344060	8-9813	4406	PIPE; WATER,EGR COOLER	000000	000003
8981344070	8-9813	4407	PIPE; WATER,EGR COOLER	000000	000002
8981344081	8-9813	4408	PIPE; WATER,EGR COOLER	000000	000003
8981344090	8-9813	4409	PIPE; WATER,EGR COOLER	000000	000002
8981344101	8-9813	4410	PIPE; WATER,EGR COOLER	000000	000003
8981344180	8-9813	4418	BRACKET; WATER PIPE	000000	000003
8981344190	8-9813	4419	BRACKET; WATER PIPE	000000	000003
8981344200	8-9813	4420	BRACKET; WATER PIPE	000000	000003
8981344210	8-9813	4421	BRACKET; WATER PIPE	000000	000003
8981344220	8-9813	4422	PIPE; WATER,TURBO OUT	000000	000003
8981344230	8-9813	4423	DUCT; INT COVER	000000	000000
8981344231	8-9813	4423	DUCT; INT COVER	000000	000002
8981344232	8-9813	4423	DUCT; INT COVER	000000	000000
8981344241	8-9813	4424	DUCT; INL,ACL TO TURBOCHA	000000	000003
8981344250	8-9813	4425	BRACKET; INL DUCT	000000	000003
8981344260	8-9813	4426	BRACKET; DUCT	000000	000003
8981344271	8-9813	4427	VALVE; EXH BRAKE	000000	000002
8981344280	8-9813	4428	BRACKET; FUEL FILTER	000000	000003
8981344290	8-9813	4429	BRACKET; FUEL FILTER	000000	000003
8981344300	8-9813	4430	PIPE; FUEL,FEED PUMP,SUCT	000000	000003
8981344310	8-9813	4431	PIPE; FUEL,FEED PUMP TO F	000000	000003
8981344320	8-9813	4432	PIPE; FUEL,FUEL FILTER TO	000000	000003
8981344330	8-9813	4433	PIPE; FUEL,FUEL FILTER LE	000000	000002
8981344340	8-9813	4434	PIPE; FUEL,FUEL FILTER LE	000000	000002
8981344350	8-9813	4435	PIPE; FUEL,FUEL FILTER LE	000000	000002
8981344372	8-9813	4437	HARNES; ENG	000000	000003
8981344590	8-9813	4459	PIPE; VACUUM	000000	000002
8981344610	8-9813	4461	AIR CLEANER	000000	000005
8981344720	8-9813	4472	PULLEY; CR/SHF	000000	000002
8981344931	8-9813	4493	HOSE;RUBBER,WATER PIPE	000000	000004
8981346450			BRACKET;FUEL PIPE CLIP	000000	000030
8981347070	8-9813	4707	PIPE ASM; OIL,INJ PUMP FE	000000	000003
8981349561	8-9813	4956	PORT ASM; FUEL REMOTE	000000	000003
8981353181	8-9813	5318	HARNES; ENG	000000	000001
8981353250	8-9813	5325	PIPE;OIL,TURBOCHARGER FEE	000000	000002
8981353260	8-9813	5326	PIPE;OIL RTN,TURBOCHARGER	000000	000002
8981353310	8-9813	5331	PIPE;WATER,TURBOCHARGER O	000000	000002
8981353330	8-9813	5333	PIPE;WATER,TURBOCHARGER I	000000	000002

8981353340	8-9813	5334	PIPE;WATER	000000	000002
8981354620	8-9813	5462	ELEMENT KIT FUEL FILTER	000000	000000
8981354640	8-9813	5464	GASKET; BOLT,OIL COOLER	000029	000055
8981354770	8-9813	5477	FILTER ASM, FUEL	000001	000004
8981354790	8-9813	5479	FILTER ASM, FUEL	000000	000011
8981359530	8-9813	5953	GASKET; CYL HD	000029	000068
8981359540	8-9813	5954	GASKET;CYL HD	000025	000072
8981359550	8-9813	5955	GASKET;CYL HD	000000	000009
8981359690	8-9813	5969	CONTROL UNIT;ENG	000000	000023
8981361040	8-9813	6104	HOLDER; FUSE	000000	000001
8981361760	8-9813	6176	PIPE; FUEL	000000	000001
8981372471	8-9813	7247	TUBE;GUIDE,OIL LVL GAUGE	000000	000002
8981395180			LAMP;TURN SIGN	000000	000000
8981395190			LAMP;TURN SIGN	000000	000000
8981403140	8-9814	0314	CASE ASM; BRG,INJ PUMP	000000	000004
8981405590	8-9814	0559	HOSE; TURBOCHARGER, INL	000001	000003
8981406510	8-9814	0651	PIPE;AIR,EGR	000000	000005
8981412061	8-9814	1206	STARTER ASM	000000	000118
8981414630	8-9814	1463	SHAFT; WATER PUMP	000000	000004
8981415380	8-9814	1538	BOLT;CRANKCASE	000000	000029
8981415760	8-9814	1576	BRACKET;SENSOR, VAC	000000	000002
8981416090	8-9814	1609	COVER; FRT	000000	000003
8981417010	8-9814	1701	HOSE;WATER, WATER DRAIN	000000	000004
8981425020	8-9814	2502	MANIFOLD;EXH,CENTER	000000	000072
8981425460	8-9814	2546	BRACKET; WATER CHARGE	000000	000003
8981425480	8-9814	2548	BRACKET; DUCT	000000	000003
8981425500	8-9814	2550	HOUSING; THERMOSTAT	000000	000003
8981425980	8-9814	2598	COVER; INJ PUMP COUPLING	000000	000003
8981426000	8-9814	2600	BRACKET; COVER	000000	000003
8981426070	8-9814	2607	BRACKET; HARNESS	000000	000003
8981426370	8-9814	2637	GAUGE; OIL LEVEL	000000	000006
8981430370	8-9814	3037	DOWEL; CAM BRKT SET	000003	000007
8981430410	8-9814	3041	ELEMENT;FUEL FILTER	000000	019405
8981438240	8-9814	3824	FILTER ASM;FUEL	000000	000007
8981438250	8-9814	3825	FILTER ASM;FUEL	000002	000001
8981438260	8-9814	3826	FILTER ASM;FUEL	000000	000161
8981441164	8-9814	4116	DPD ASM	000000	000000
8981441165	8-9814	4116	DPD ASM	000000	000001
8981441166	8-9814	4116	DPD ASM	000000	000001
8981442470	8-9814	4247	PLUG;OIL DRAIN	000000	000005
8981451530	8-9814	5153	PUMP ASM; OIL	000000	000002
8981454530	8-9814	5453	OVERHAUL KIT; SUPPLY KIT	000000	000012
8981454550	8-9814	5455	OVERHAUL KIT;SUPPLY PUMP	000000	000000
8981454840	8-9814	5484	OVERHAUL KIT; S	000002	000000
8981455010	8-9814	5501	OVERHAUL KIT; SUPPLY PUMP	000000	000012
8981460740	8-9814	6074	PUMP ASM;WATER,W/GASKET	000000	000004
8981467220	8-9814	6722	GEAR; REV IDLER	000000	000000

8981467260			GEAR; REV IDLER	000000	000000
8981469420	8-9814	6942	CLUTCH; PINION	000001	000000
8981470100	8-9814	7010	SENSOR; POSITION, PUMP	000000	000000
8981471540	8-9814	7154	DAMPER; CR/SHF	000000	000033
8981472230			SWITCH; POWER	000000	000002
8981472290			SWITCH; POWER W	000000	000001
8981472370			SWITCH; POWER W	000000	000000
8981473470			COOLER; EGR	000000	000003
8981473471	8-9814	7347	COOLER; EGR	000000	000001
8981473490	8-9814	7349	BRACKET; WATER PIPE	000000	000004
8981473500	8-9814	7350	BRACKET; WATER PIPE	000000	000003
8981473510	8-9814	7351	BRACKET; WATER PIPE	000000	000004
8981473540	8-9814	7354	HANGER; ENG, RR	000000	000004
8981473550	8-9814	7355	HANGER; ENG, RR	000000	000003
8981473660	8-9814	7366	HOUSING; THERMOSTAT	000000	000004
8981473670	8-9814	7367	FILLER; OIL, HD COVER	000000	000020
8981473750	8-9814	7375	PROTECTOR; HEAT, EGR	000000	000004
8981473760	8-9814	7376	PROTECTOR; HEAT, EGR	000000	000004
8981473770	8-9814	7377	BRACKET; ENG HANGER	000000	000000
8981473771	8-9814	7377	BRACKET; ENG HANGER	000000	000004
8981473780	8-9814	7378	BRACKET	000000	000003
8981474070	8-9814	7407	PIPE; WATER, EGR COOLER	000000	000003
8981474080	8-9814	7408	PIPE; WATER, EGR COOLER	000000	000003
8981474091	8-9814	7409	PIPE; WATER, EGR COOLER	000000	000003
8981474110	8-9814	7411	PIPE; WATER, EGR COOLER	000000	000004
8981474130	8-9814	7413	PIPE; WATER, EGR COOLER	000000	000004
8981474150	8-9814	7415	PIPE; WATER, EGR COOLER	000000	000003
8981474190	8-9814	7419	BRACKET; INJ PUMP TO C/BL	000000	000003
8981474331	8-9814	7433	CLIP; RUBBER HOSE	000000	000003
8981474540	8-9814	7454	HOSE; RUBBER	000000	000003
8981474560	8-9814	7456	HOSE; RUBBER	000000	000003
8981476410	8-9814	7641	BUZZER	000000	000000
8981476420	8-9814	7642	HARNESS; METER	000000	000001
8981476450	8-9814	7645	RESISTOR; COMB MTR, CLUSTER	000000	000001
8981476470	8-9814	7647	MARINE; DISPLAY	000000	000001
8981476490	8-9814	7649	HARNESS; METER	000000	000001
8981476870	8-9814	7687	METER ASM; TACHO	000000	000001
8981479450	8-9814	7945	CAP; VLV STEM END	000024	000022
8981491000	8-9814	9100	PIPE; OIL, TURBOCHARGER FE	000000	000004
8981491010	8-9814	9101	PIPE ASM; OIL, INJ PUMP FE	000000	000003
8981491020	8-9814	9102	TUBE; GUIDE, OIL LEVEL GAU	000000	000004
8981491040	8-9814	9104	BRACKET; FUEL PIPE CLIP	000000	000003
8981491050	8-9814	9105	BRACKET; WATER PIPE	000000	000003
8981491060	8-9814	9106	PIPE; FUEL, FUEL FILTER LE	000000	000003
8981491071	8-9814	9107	CONNECTOR; FUEL FILTER	000000	000003
8981491230	8-9814	9123	HOSE; RUBBER, SENSOR	000000	000012
8981491660	8-9814	9166	HOSE; RUBBER	000000	000003

8981491670	8-9814	9167	HOSE; RUBBER	000000	000003
8981493530	8-9814	9353	GASKET; COOLER	000000	000082
8981494250	8-9814	9425	POINTER; TIMING	000000	000001
8981502540	8-9815	0254	PIPE; FUEL	000000	000000
8981502541	8-9815	0254	PIPE; FUEL	000000	000003
8981503550			CLIP; RUBBER HOSE	000007	000019
8981503560	8-9815	0356	CLIP; FUEL HOSE	000000	000082
8981503570	8-9815	0357	CLIP; FUEL HOSE	000000	000069
8981503580	8-9815	0358	CLIP;HOSE,SURGE TANK	000000	000000
8981503600	8-9815	0360	BRACKET; WATER PIPE	000000	000004
8981503611	8-9815	0361	BRACKET; INL DUCT	000000	000004
8981503620	8-9815	0362	BRACKET; HARNESS	000000	000003
8981510190	8-9815	1019	COVER; WATER PUMP	000000	000000
898151837C			CORE; INJ 04I-07 4HK1	000011	000000
8981518370	8-9815	1837	NOZZLE ASM; INJ	000000	000000
8981518500	8-9815	1850	WASHER; THRUST,CR/SHF	000000	000002
8981518530	8-9815	1853	TUBE;GUIDE,OIL LVL GAUGE	000000	000006
8981518541	8-9815	1854	PULLEY; FAN DRIVE	000000	000003
8981518550	8-9815	1855	BRACKET;COMMON RAIL	000000	000003
8981518560	8-9815	1856	NOZZLE ASM; INJ	000000	000053
8981518561	8-9815	1856	NOZZLE ASM; INJ	000000	000009
8981518591	8-9815	1859	TURBOCHARGER ASM	000000	000003
8981519150	8-9815	1915	PIPE;WATER,TURBOCHARGER O	000000	000007
8981519310	8-9815	1931	HOSE;RUBBER,WATER PIPE	000000	000003
8981519330	8-9815	1933	FLYWHEEL	000000	000003
8981521810			CONTROL UNIT;ENG	000000	000001
8981522740	8-9815	2274	SWITCH; ENGAGE ENGINE	000000	000004
8981523880	8-9815	2388	BRACKET;BOOST SENSOR	000000	000002
8981524222	8-9815	2422	DPD ASM	000000	000000
8981524223	8-9815	2422	DPD ASM	000000	000001
8981524224	8-9815	2422	DPD ASM	000000	000000
8981524225			DPD ASM	000000	000003
8981524640	8-9815	2464	CATALYST ASM	000000	000000
8981524641	8-9815	2464	CATALYST ASM	000000	000000
8981524642	8-9815	2464	CATALYST ASM	000000	000000
8981524643	8-9815	2464	CATALYST ASM	000000	000058
8981524853	8-9815	2485	DPD ASM	000000	000000
8981524854	8-9815	2485	DPD ASM	000000	000003
8981524856	8-9815	2485	DPD ASM	000000	000000
8981524870	8-9815	2487	CATALYST ASM	000000	000000
8981524871	8-9815	2487	CATALYST ASM	000000	000000
8981524872	8-9815	2487	CATALYST ASM	000000	000000
8981524873	8-9815	2487	CATALYST ASM	000000	000019
8981525062	8-9815	2506	SILENCER ASM; EXH	000000	000043
8981525130	8-9815	2513	PROTECTOR; HEAT	000000	000003
8981525140	8-9815	2514	PROTECTOR; HEAT	000000	000000
8981525150	8-9815	2515	PROTECTOR; HEAT	000000	000003

8981525160	8-9815	2516	PROTECTOR; HEAT	000000	000000
8981525170	8-9815	2517	PROTECTOR; HEAT	000000	000003
8981525180	8-9815	2518	PROTECTOR; HEAT	000000	000003
8981525190	8-9815	2519	PROTECTOR; HEAT	000000	000003
8981525201	8-9815	2520	BRACKET	000000	000002
8981525210	8-9815	2521	BRACKET	000000	000003
8981525252	8-9815	2525	SILENCER ASM; EXH	000000	000003
8981525253	8-9815	2525	SILENCER ASM; EXH	000000	000000
8981525290	8-9815	2529	PROTECTOR, HEAT	000000	000003
8981525310	8-9815	2531	PROTECTOR; HEAT	000000	000000
8981525320	8-9815	2532	PROTECTOR; HEAT	000000	000003
8981525330	8-9815	2533	PROTECTOR; HEAT	000000	000000
8981525340	8-9815	2534	PROTECTOR; HEAT	000000	000003
8981525350	8-9815	2535	PROTECTOR; HEAT	000000	000003
8981525360	8-9815	2536	PROTECTOR; HEAT	000000	000003
8981525371	8-9815	2537	BRACKET	000000	000002
8981525380	8-9815	2538	BRACKET	000000	000002
8981525430	8-9815	2543	CATALYST ASM	000000	000000
8981525431	8-9815	2543	CATALYST ASM	000000	000000
8981525432	8-9815	2543	CATALYST ASM	000000	000000
8981525433	8-9815	2543	CATALYST ASM	000000	000037
8981525470	8-9815	2547	SILENCER ASM; EXH	000000	000003
8981525480	8-9815	2548	PIPE; DPD	000000	000003
8981525490	8-9815	2549	PIPE; DPD	000000	000003
8981525500	8-9815	2550	BRACKET; EXH PIPE,CONN	000000	000003
8981525510	8-9815	2551	PROTECTOR; HEAT	000000	000000
8981525520	8-9815	2552	PROTECTOR; HEAT	000000	000003
8981525530	8-9815	2553	PROTECTOR; HEAT	000000	000000
8981525540	8-9815	2554	PROTECTOR; HEAT	000000	000003
8981525550	8-9815	2555	PROTECTOR; HEAT	000000	000003
8981525560	8-9815	2556	PROTECTOR; HEAT	000000	000002
8981525570	8-9815	2557	FILTER ASM	000000	000000
8981525571	8-9815	2557	FILTER ASM	000000	000000
8981525572	8-9815	2557	FILTER ASM	000000	000000
8981525573	8-9815	2557	FILTER ASM	000000	000079
8981525590	8-9815	2559	BRACKET	000000	000003
8981525620	8-9815	2562	FILTER ASM	000000	000000
8981525621	8-9815	2562	FILTER ASM	000000	000000
8981525622	8-9815	2562	FILTER ASM	000000	000093
8981525630	8-9815	2563	FILTER ASM	000000	000000
8981525631	8-9815	2563	FILTER ASM	000000	000000
8981525632	8-9815	2563	FILTER ASM	000000	000103
8981526602	8-9815	2660	HARNESS; ENG	000000	000000
8981526603	8-9815	2660	HARNESS; ENG	000000	000003
8981526621	8-9815	2662	HARNESS; ENG	000000	000000
8981526622	8-9815	2662	HARNESS; ENG	000000	000004
8981526630	8-9815	2663	CONTROL UNIT; ENG	000000	000000

8981526640	8-9815	2664	CONTROL INIT; ENG	000000	000000
8981527200	8-9815	2720	COVER; INL	000000	000004
8981527280	8-9815	2728	BRACKET; STAY	000000	000001
8981527290	8-9815	2729	BRACKET; FAN SHROUD	000000	000001
8981527330	8-9815	2733	STAY; SHROUD	000000	000003
8981527340	8-9815	2734	STAY; BRKT, FAN GUIDE	000000	000003
8981527370	8-9815	2737	ELEMENT KIT; FUEL FILTER	000000	001470
8981527371	8-9815	2737	ELEMENT KIT; FUEL FILTER	000000	000000
8981527380	8-9815	2738	ELEMENT KIT; FUEL FILTER	000000	000000
8981527381	8-9815	2738	ELEMENT KIT; FUEL FILTER	000000	000250
8981527390	8-9815	2739	PAN ASM; OIL	000000	000003
8981527670	8-9815	2767	FAN; COOLING	000000	000003
8981528510	8-9815	2851	COVER; INL	000000	000003
8981528670	8-9815	2867	GAUGE; OIL LEVEL	000000	000005
8981529010	8-9815	2901	PISTON	000000	000000
8981529011	8-9815	2901	PISTON	000000	000026
8981529060	8-9815	2906	BELT; WATER PUMP DRIVE	000000	000112
8981529500	8-9815	2950	RAIL ASM; COMMON	000000	000000
8981529501	8-9815	2950	RAIL ASM; COMMON	000066	000070
8981530671	8-9815	3067	CONTROL UNIT; ENG	000000	000002
8981530731	8-9815	3073	CONTROL UNIT; ENG	000000	000011
8981536760	8-9815	3676	PAN ASM; OIL	000000	000002
8981536780	8-9815	3678	COVER; OIL PORT	000000	000000
8981536781	8-9815	3678	COVER; OIL PORT	000000	000002
8981536800	8-9815	3680	PIPE; HTR	000000	000002
8981536811	8-9815	3681	BRACKET; INLET PIPE	000000	000002
8981536820	8-9815	3682	PIPE; VACUUM	000000	000002
8981536840	8-9815	3684	PIPE; FUEL, SUCTION	000000	000002
8981536850	8-9815	3685	ADAPTER	000000	000000
8981536851	8-9815	3685	ADAPTER	000000	000002
8981536901	8-9815	3690	BRACKET; EGR COOLER	000000	000003
8981538140	8-9815	3814	HOSE; RUBBER, TURBOCHRG OU	000000	000002
8981538150	8-9815	3815	HOSE; VAC	000000	000002
8981538160	8-9815	3816	HOSE ASM; VAC	000000	000002
8981542390	8-9815	4239	BRACKET; SENSOR	000000	000003
8981549451	8-9815	4945	GEAR; CR/SHF	000002	000001
8981549502	8-9815	4950	CRANKSHAFT	000002	000003
8981550160	8-9815	5016	BRUSH; (+), STARTER	000000	000000
8981550180	8-9815	5018	BRUSH ASM; STARTER	000000	000000
8981550190	8-9815	5019	CASE; PINION, STARTER	000000	000001
8981557770	8-9815	5777	WASHER; PL, EGR PIPE	000000	000033
8981565270	8-9815	6527	GENERATOR ASM	000000	000113
8981566480	8-9815	6648	SENSOR; WATER TEMP	000000	000007
8981568931	8-9815	6893	GEAR; IDLE	000000	000002
8981569210	8-9815	6921	STAY; ENG FOOT	000000	000004
8981569700	8-9815	6970	SEAL; OIL, BRG CASE	000000	000004
8981578650	8-9815	7865	MANIFOLD; INL	000000	000009

8981578660	8-9815	7866	MANIFOLD; INL	000000	000000
8981578670	8-9815	7867	COOLER; EGR	000000	000003
8981578671	8-9815	7867	COOLER; EGR	000000	000001
8981578760	8-9815	7876	BRACKET; HOSE	000000	000003
8981581100	8-9815	8110	SEAL;OIL,CR/SHF, FRT	000002	000008
8981582090	8-9815	8209	PIPE;OIL DRAIN,TURBOCHARG	000000	000000
8981582091	8-9815	8209	PIPE;OIL DRAIN,TURBOCHARG	000000	000002
8981582900	8-9815	8290	NOZZLE ASM; INJ	000000	000000
8981583970	8-9815	8397	PROTECTOR; HEAT,EGR	000000	000003
8981584320	8-9815	8432	HOSE; RUBBER	000000	000003
8981584321	8-9815	8432	HOSE; RUBBER	000000	000001
8981584690	8-9815	8469	FAN; COOLING	000000	000002
8981586040	8-9815	8604	BOLT	000000	000072
8981586340	8-9815	8634	GEAR; IDLE	000000	000004
8981586600	8-9815	8660	REGULATOR ASM;VOLTAGE,GEN	000001	000002
8981587010	8-9815	8701	SPACER	000000	000015
8981587780	8-9815	8778	THERMOSTAT	000000	000155
8981594570	8-9815	9457	BEARING; ROTOR,	000000	000000
8981600611	8-9816	0061	NOZZLE ASM; INJECTION	000000	000000
8981600612	8-9816	0061	NOZZLE ASM; INJECTION	000000	000000
8981600613	8-9816	0061	NOZZLE ASM; INJECTION	000000	000014
8981610610	8-9816	1061	PIPE ASM; LEAK OFF	000001	000003
8981610620	8-9816	1062	PIPE ASM; LEAK OFF	000002	000003
8981619950	8-9816	1995	KEY; DRIVE SHAFT	000003	000118
8981621090	8-9816	2109	BRACKET; FAN GUIDE	000000	000002
8981621610	8-9816	2161	GSKT;TURBOCHRG TO EXH MAN	000000	000001
8981627470	8-9816	2747	FILTER ASM; FUEL	000000	000023
8981627480	8-9816	2748	PUMP ASM; VACUUM	000001	000003
8981628830	8-9816	2883	VALVE; EVRV	000000	000002
8981629920	8-9816	2992	PIPE; WATER,EGR COOLER	000000	000003
8981629950	8-9816	2995	PIPE; WATER,EGR COOLER	000000	000003
8981630081	8-9816	3008	BRACKET; WATER CHARGE	000000	000003
8981633650	8-9816	3365	BRACKET; FAN SHROUD	000000	000001
8981633681	8-9816	3368	COVER;RR EXH MANIF	000000	000002
8981633980	8-9816	3398	BRACKET; WATER PIPE	000000	000002
8981634610	8-9816	3461	PIPE ASM;OIL TUBOCHRG RTN	000000	000002
8981635280	8-9816	3528	PULLEY; CR/SHF DAMPER	000000	000003
8981636930	8-9816	3693	ROTOR; CRANK SENSOR	000002	000003
8981637690	8-9816	3769	COVER; CYL HD	000000	000004
8981637740	8-9816	3774	HOSE; RUBBER,AIR	000000	000004
8981637750	8-9816	3775	HOSE; RUBBER,AIR	000000	000004
8981637760	8-9816	3776	IMPELLER; SEA W	000000	000000
8981638130	8-9816	3813	PLUG; CYL HD COVER	000000	000524
8981644670	8-9816	4467	DUCT; INL,ACL TO TURBOCHA	000000	000004
8981646440	8-9816	4644	BRACKET; EXH PIPE,CONN	000000	000002
8981646450	8-9816	4645	BRACKET; DPD	000000	000003
8981646610	8-9816	4661	BRACKET	000000	000001

8981648400	8-9816	4840	PIPE; DPD	000000	000003
8981648410	8-9816	4841	PIPE; DPD	000000	000003
8981648420	8-9816	4842	PIPE; DPD	000000	000003
8981648430	8-9816	4843	PIPE; DPD	000000	000003
8981648630	8-9816	4863	PLATE; BAFFLE,CYL HD CVR	000000	000004
8981648700	8-9816	4870	HOSE; RUBBER; SENSOR	000000	000004
8981648710	8-9816	4871	HOSE; RUBBER, SENSOR	000000	000005
8981649031	8-9816	4903	SHROUD; FAN	000000	000000
8981649150	8-9816	4915	CONTROL UNIT; ENG	000000	000000
8981649480	8-9816	4948	BRACKET; EXH MANIF	000000	000001
8981649490	8-9816	4949	BRACKET; EXH MANIF	000000	000000
8981649660	8-9816	4966	PIPE ASM;FUEL, LEAK OFF	000000	000003
8981650050	8-9816	5005	BRACKET; DPD	000000	000003
8981650350	8-9816	5035	PIN	000020	000003
8981651191	8-9816	5119	COVER;GEAR CASE	000002	000003
8981651250	8-9816	5125	WASHER; CR/SHF PU	000012	000050
8981651751	8-9816	5175	STAY; EXH MANIF	000000	000003
8981651761	8-9816	5176	STAY; EXH MANIF	000000	000003
8981652341	8-9816	5234	BOLT; CR/SHF PU	000003	000067
8981655210	8-9816	5521	VALVE; EGR	000000	000000
8981657880	8-9816	5788	COVER; CYL HD	000000	000004
8981658820	8-9816	5882	HOSE; RUBBER, AIR	000001	000001
8981658830	8-9816	5883	HOSE; RUBBER, AIR	000000	000000
8981659350	8-9816	5935	GEAR;SIDE,DIFF	000000	000038
8981660110	8-9816	6011	HOUSING; THERMOSTAT	000000	000003
8981660120	8-9816	6012	HOUSING; THERMOSTAT	000001	000001
8981660900	8-9816	6090	FILTER ASM; FUEL	000000	000003
8981660901	8-9816	6090	FILTER ASM; FUEL	000000	000000
8981660910	8-9816	6091	FILTER ASM; FUEL	000000	000002
8981660911	8-9816	6091	FILTER ASM; FUEL	000000	000000
8981660920	8-9816	6092	FILTER ASM; FUEL	000000	000579
8981665211	8-9816	6521	FAN; COOLING	000000	000003
8981666570	8-9716	6657	HOSE; FUEL	000001	000002
8981669782	8-9816	6978	PLATE; C/BL	000000	000003
8981669970	8-9816	6997	PIPE; SUCTION	000000	000001
8981675560	8-9816	7556	NOZZLE ASM; INJECTOR	000000	000040
8981675561			NOZZLE ASM; INJECTOR	000000	000389
8981695610	8-9816	9561	CONTROL UNIT; ENG	000000	000001
8981696770	8-9816	9677	HOSE;RUBBER TURBOCHRG TO	000000	000004
8981696780	8-9816	9678	HOSE;RUBBER TURBOCHRG TO	000000	000003
8981697280	8-9816	9728	SEAL; OIL,SEA WATER PUMP	000000	000000
8981705860	8-9817	0586	COOLER ASM; FUEL	000000	000003
8981705910	8-9817	0591	VALVE; EGR	000000	000000
8981705911	8-9817	0591	VALVE; EGR	000000	000005
8981705920	8-9817	0592	VALVE; EGR	000000	000000
8981705921	8-9817	0592	VALVE; EGR	000000	000003
8981705930	8-9817	0593	VALVE; EGR	000000	000000

8981705931	8-9817	0593	VALVE; EGR	000000	000019
8981705940	8-9817	0594	VALVE; EGR	000000	000000
8981705941	8-9817	0594	VALVE; EGR	000000	000021
8981706170	8-9817	0617	HEAD ASM; CYL	000061	000109
8981706190	8-9817	0619	HEAD ASM; CYL	000000	000031
8981706230	8-9817	0623	HEAD ASM; CYL	000000	000000
8981706270	8-9817	0627	HEAD ASM; CYL	000000	000000
8981710280	8-9817	1028	COOLER ASM;OIL,W/O FILTER	000000	000002
8981710300	8-9817	1030	BRACKET; STAY	000000	000002
8981710310	8-9817	1031	ADAPTER	000000	000002
8981710382	8-9817	1038	DPD ASM	000000	000000
8981710383	8-9817	1038	DPD ASM	000000	000002
8981710390	8-9817	1039	FILLER; OIL	000000	000002
8981711330	8-9817	1133	HOSE; WATER	000000	000002
8981712540			BEARING; HUB INNER,FRT AX	000418	000910
8981717450	8-9817	1745	GASKET; CAP NUT	000000	000000
8981717460	8-9817	1746	GASKET; CAP NUT	000000	000004
8981721601	8-9817	2160	CONTROL UNIT; ENG	000000	000002
8981723550	8-9817	2355	BEARING; NEEDLE	000000	000000
8981725030	8-9817	2503	PIPE; AIR,EGR	000000	000000
8981725031	8-9817	2503	PIPE; AIR,EGR	000000	000004
8981725060	8-9817	2506	PIPE; AIR,EGR	000000	000000
8981725061	8-9817	2506	PIPE; AIR,EGR	000000	000004
8981727350	8-9817	2735	BRACKET; EGR COOLER	000000	000001
8981728461	8-9817	2846	DUCT;INL,ACL TO TURBOCHRG	000000	000001
8981728480	8-9817	2848	PTO ASM; ENG RR	000000	000002
8981728580	8-9817	2858	FLYWHEEL	000000	000001
8981730400	8-9817	3040	HOUSING; FLYWHEEL	000000	000000
8981730430	8-9817	3043	PAN ASM; OIL	000000	000000
8981731650	8-9817	3165	REPAIR KIT; FUEL PUMP	000057	000143
8981732310	8-9817	3231	CONTROL UNIT; ENG	000000	000000
8981732320	8-9817	3232	CONTROLLER; ENGINE	000000	000000
8981732321	8-9817	3232	CONTROLLER; ENGINE	000000	000009
8981732340	8-9817	3234	CONTROL UNIT; ENG	000000	000000
8981732351	8-9817	3235	CONTROL UNIT; ENG	000000	000009
8981732370	8-9817	3237	CONTROL UNIT; ENG	000000	000000
8981732372	8-9817	3237	CONTROL UNIT; ENG	000000	000008
8981732480	8-9817	3248	BELT; GEN DRIVE	000000	000334
8981732650	8-9817	3265	BOLT; PLATE	000000	000023
8981733420	8-9817	3342	JET;OIL,PISTON COOLING	000047	000063
8981733820	8-9817	3382	BOLT	000000	000053
8981734070	8-9817	3407	CONTROL UNIT; ELEC	000000	000000
8981734080	8-9817	3408	CONTROL UNIT; ENG	000000	000001
8981734081	8-9817	3408	CONTROL UNIT; ENG	000000	000001
8981734090	8-9817	3409	CONTROL UNIT; ELEC	000000	000022
8981734100	8-9817	3410	CONTROL UNIT; ENG	000000	000000
8981734420	8-9817	3442	FLYWHEEL	000000	000000

8981735420	8-9817	3542	SHROUD; FAN	000000	000003
8981737190	8-9817	3719	CONTROL UNIT; ENG	000000	000000
8981737200	8-9817	3720	CONTROL UNIT; ENG	000000	000000
8981737260	8-9817	3726	CONTROL UNIT; ENG	000000	000000
8981737620	8-9817	3762	CLIP; HOSE, VAC	000014	000023
8981737780	8-9817	3778	CONTROLLER; ENGINE	000000	000000
8981737781	8-9817	3778	CONTROLLER; ENGINE	000000	000000
8981737782	8-9817	3778	CONTROLLER; ENGINE	000000	000005
8981737801	8-9817	3780	CONTROL UNIT; ELEC	000000	000000
8981737802	8-9817	3780	CONTROL UNIT; ELEC	000000	000013
8981737850	8-9817	3785	CLAMP; DEF DCM M	000000	000003
8981744610	8-9817	4461	SCREW; FEED PUMP	000006	000014
8981744720	8-9817	4472	STAY; BRKT, FAN GUIDE	000000	000002
8981744730	8-9817	4473	BRACKET; STAY	000000	000002
8981744830	8-9817	4483	HOSE; RUBBER,AIR	000000	000004
8981745020	8-9817	4502	PULLEY; FAN DRIVE	000000	000001
8981746120	8-9817	4612	PROTECTOR;HEAT,EGR DUCT	000000	000002
8981747240	8-9817	4724	CONTROL UNIT; ENG	000000	000000
8981747250	8-9817	4725	CONTROL UNIT; ENG	000000	000000
8981747260	8-9817	4726	CONTROL UNIT; ENG	000000	000001
8981747300	8-9817	4730	CONTROL UNIT; ELEC	000000	000000
8981747310	8-9817	4731	CONTROL UNIT; ELEC	000000	000000
8981747320	8-9817	4732	CONTROL UNIT; ENG	000000	000001
8981747430	8-9817	4743	PIPE;OIL,TURBOCHARGER FEE	000000	000000
8981754170	8-9817	5417	HOUSING; PTO	000000	000001
8981756060	8-9817	5606	HEAD ASM; CYL	000000	000000
8981756061	8-9817	5606	HEAD ASM; CYL	000000	000007
8981774470	8-9817	7447	HARNES; INJECTOR	000000	000005
8981774480	8-9817	7448	HARNES; INJECTOR	000000	000010
8981779000	8-9817	7900	PAN ASM;OIL	000000	000002
8981783120	8-9817	8312	PULLEY; FAN CENTER	000000	000002
8981783130	8-9817	8313	PULLEY;FAN CENTER	000000	000002
8981783290	8-9817	8329	MANIFOLD; INL	000000	000002
8981783580	8-9817	8358	SENSOR; DPD	000000	000000
8981783581	8-9817	8358	SENSOR; DPD	000000	000000
8981784040	8-9817	8404	CONTROL UNIT; ENG	000000	000002
8981785280	8-9817	8528	HOSE;RUBBER,EGR CLR TO EG	000000	000000
8981788780	8-9817	8878	SPACER; FAN	000000	000002
8981793100	8-9817	9310	PIPE; WATER	000000	000001
8981793140	8-9817	9314	HOSE; RUBBER	000000	000001
8981794340			RETAINER; CR/SHF	000003	000000
8981794510	8-9817	9451	HOSE; RUBBER, AIR	000000	000002
8981795460	8-9817	9546	VALVE; EGR (4H)	000000	000024
8981795461	8-9817	9546	VALVE; EGR (4H)	000000	000015
8981795470	8-9817	9547	EGR VALVE (4H)	000000	000019
8981795471	8-9817	9547	EGR VALVE (4H)	000000	000003
8981795480	8-9817	9548	VALVE; EGR (6H)	000000	000011

8981795481	8-9817	9548	VALVE; EGR (6H)	000000	000024
8981795500	8-9817	9550	EGR VALVE (6H)	000000	000007
8981795581	8-9817	9558	CONTROL UNIT; ELEC	000000	000000
8981795582	8-9817	9558	CONTROL UNIT; ELEC	000000	000015
8981795670	8-9817	9567	CONTROL UNIT; ELEC	000000	000019
8981795680	8-9817	9568	CONTROL UNIT; ENG	000000	000001
8981795710	8-9817	9571	CONTROL UNIT; ELEC	000000	000013
8981795720	8-9817	9572	CONTROL UNIT; ENG	000000	000001
8981795840	8-9817	9584	PIPE; DPD	000000	000000
8981795850	8-9817	9585	PIPE; DPD	000000	000000
8981795860	8-9817	9586	PIPE; DPD	000000	000002
8981795870	8-9817	9587	PIPE; DPD	000000	000002
8981795880	8-9817	9588	BRACKET; DPD	000000	000002
8981796160	8-9817	9616	VALVE; EGR	000000	000000
8981796161	8-9817	9616	VALVE; EGR	000000	000009
8981799600	8-9817	9960	VALVE; FUEL FILTER	000000	000002
8981800120	8-9818	0012	BRACKET; SENSOR	000000	000001
8981801341	8-9818	0134	GAUGE; OIL LEVEL	000000	000002
8981804980	8-9818	0498	GASKET;COVER TO BODY	000000	000003
8981805450	8-9818	0545	CONTROL UNIT; ENG	000000	000000
8981805620	8-9818	0562	HEAD ASM; CYL	000000	000003
8981805660	8-9818	0566	HEAD ASM; CYL	000000	000003
8981806830	8-9818	0683	HOSE;RUBBER,OIL PIPE TURB	000000	000002
8981806900	8-9818	0690	PIPE;OIL DRAIN,TURBOCHRG	000000	000001
8981807060	8-9818	0706	BLOCK ASM; CYL	000000	000003
8981815400	8-9818	1540	GASKET;INJ NOZZLE	000326	000000
8981818310	8-9818	1831	OVERHAUL KIT; SUPPLY PUMP	000000	000033
8981820500	8-9818	2050	DUCT; EGR	000000	000007
8981821910	8-9818	2191	FLYWHEEL	000000	000002
8981824910	8-9818	2491	TURBOCHARGER ASM	000000	000013
8981827880	8-9818	2788	BOLT; OIL PAN	000000	000023
8981831051	8-9818	3105	CATALYST ASM	000000	000002
8981831052	8-9818	3105	CATALYST ASM	000000	000000
8981831071	8-9818	3107	SILENCER ASM; EXH	000000	000002
8981831080	8-9818	3108	PROTECTOR; HEAT	000000	000002
8981831110	8-9818	3111	PROTECTOR; HEAT	000000	000002
8981831140	8-9818	3114	BRACKET	000000	000002
8981832320	8-9818	3232	PROTECTOR; HEAT	000000	000002
8981834520	8-9818	3452	PULLEY; CR/SHF	000000	000002
8981842640	8-9818	4264	VALVE; REED	000005	000012
8981843010	8-9818	4301	VALVE; EGR	000000	000015
8981844280	8-9818	4428	PIPE; WATER,TURBOCHRG OUT	000000	000002
8981851941	8-9818	5194	TURBOCHARGER ASM	000000	000014
8981851951	8-9818	5195	TURBOCHARGER ASM	000000	000000
8981853440	8-9818	5344	PIPE; INJ NO.1	000000	000001
8981853450	8-9818	5345	PIPE; INJ NO.2	000000	000000
8981853460	8-9818	5346	PIPE; INJ NO.3	000000	000001

8981853470	8-9818	5347	PIPE; INJ NO.4	000000	000000
8981853861	8-9818	5386	FILTER ASM	000000	000002
8981853862	8-9818	5386	FILTER ASM	000000	000000
8981860000	8-9818	6000	BOLT	000008	000028
8981864980	8-9818	6498	VALVE; REED	000000	000000
8981864990	8-9818	6499	VALVE; FEED	000000	000002
8981866300	8-9818	6630	COVER; WATER PUMP	000000	000000
8981867620	8-9818	6762	SENSOR; DPD	000000	000002
8981870610	8-9818	7061	HOSE; VAC	000000	000002
8981870620	8-9818	7062	HOSE; VAC	000000	000002
8981876280	8-9818	7628	PIPE; INLET, TURBOCHARGER	000000	000000
8981876281	8-9818	7628	PIPE; INLET, TURBOCHARGER	000000	000002
8981876290	8-9818	7629	PIPE; INLET, TURBOCHARGER	000000	000002
8981887310	8-9818	8731	PIPE; WATER OUTLET	000000	000002
8981887410	8-9818	8741	BRACKET; EXH MANIF	000000	000002
8981892070	8-9818	9207	BRACKET; DPD	000000	000002
8981892080	8-9818	9208	BRACKET; DPD	000000	000002
8981893360	8-9818	9336	BRACKET; HOSE	000000	000002
8981915560	8-9819	1556	HARNESS; ENG	000000	000000
8981915640	8-9819	1564	BRACKET	000000	000002
8981915650	8-9819	1565	BRACKET	000000	000002
8981915660	8-9819	1566	BRACKET	000000	000002
8981915670	8-9819	1567	BRACKET	000000	000002
8981917130	8-9819	1713	GASKET; COVER TO BODY	000000	000002
8981918730	8-9819	1873	COVER; WATER PUMP	000000	000004
8981921860	8-9819	2186	TURBOCHARGER ASM	000000	000028
8981922130	8-9819	2213	TURBOCHARGER ASM	000000	000005
8981923220	8-9819	2322	TURBOCHARGER ASM	000000	000010
8981923230	8-9819	2323	TURBOCHARGER ASM	000000	000001
8981929260	8-9819	2926	PISTON	000000	000005
8981929270	8-9819	2927	PISTON	000000	000008
8981929280	8-9819	2928	PISTON	000000	000005
8981933790	8-9819	3379	CONTROL UNIT; ELEC	000000	000002
8981933801	8-9819	3380	CONTROL UNIT; ELEC	000000	000003
8981939690	8-9819	3969	CONTROL UNIT; ENG	000000	000002
8981939700	8-9819	3970	CONTROL UNIT; ENG	000000	000002
8981939760	8-9819	3976	CONTROL UNIT; ENG	000000	000000
8981968710	8-9819	6871	CLIP; PIPE	000000	000002
8981971750	8-9819	7175	BRUSH; (+), STAR	000000	000003
8981971760	8-9819	7176	BRUSH; (-), STAR	000000	000001
8982010190	8-9820	1019	BOLT; CYL HD TO BLOCK	000016	000239
8982015640	8-9820	1564	NOZZLE ASM; INJ	000000	000005
8982025990	8-9820	2599	PIPE; FUEL, FUEL FILTER LEA	000000	000000
8982035170	8-9820	3517	HOUSING; FLYWHEEL	000000	000000
8982053940	8-9820	5394	NUT; EXH MANIF, FI	000000	000000
8982088760			COVER; CYL HD	000000	000000
8982093840	8-9820	9384	SPRING; VENTILA	000000	000000

8993689370		LAMP UNIT SIDE	000000	000000
8993689380		LAMP UNIT; SIDE	000000	000000
8997158720		SW; OV. HEAT M16 101C A1F	000000	000000
9000032140		BEARING	000000	000000
9000060010		BEARING	000000	000000
9000060030		BEARING	000000	000000
9000060060		BEARING; BALL, GEAR, REAR	000000	000000
9000060070	9-0000 6007	BRG;CRANKSHAFT	000000	000000
9000060080	9-0000 6008	BEARING; DRIVE	000000	000000
9000062050		PILOT BRG	000000	000000
9000062060	9-0000 6206	BEARING; COVER,AIR CMPR	000000	000003
9000062070	9-0000 6207	BEARING;BALL,PULLEY	000000	000000
9000062080	9-0000 6208	BEARING	000000	000000
9000062090		BEARING	000000	000000
9000063050		BEARING	000001	000000
9000302030		BEARING	000000	000000
9000302060		BEARING	000000	000000
9000302140		BEARING	000000	000000
9000303080		BEARING; ROLLER	000000	000000
9000303090		BEARING; ROLLER	000000	000000
9000313050		BEARING	000000	000000
9000313090		BEARING	000000	000000
9000313100		BEARING	000000	000000
9000322100		BEARING	000000	000000
9000322140		BRG TAPER ROLLER	000000	000000
9000322150		BEARING	000000	000000
9000323070		BEARING	000000	000000
9000323100		BEARING	000000	000000
9000323110		BEARING	000000	000000
9000323120		BEARING	000000	000000
9000900040		BEARING	000000	000000
9000900150		BEARING	000000	000000
9000900220	9-0009 0022	BEARING	000000	000000
9000900270	9-0009 0027	BEARING	000000	000000
9000900280		BEARING	000000	000000
9000900320		BEARING	000000	000000
9000900330		BEARING	000000	000000
9000900360		BEARING	000000	000000
9000900400		BEARING	000000	000000
9000900430		BEARING	000000	000000
9000900470		BEARING	000000	000000
9000900480		BEARING	000000	000000
9000900500		BRG**	000000	000000
9000900510	9-0009 0051	BEARING; BALL	000000	000003
9000900590	9-0009 0059	BEARING;BALL	000000	000007
9000900630	9-0009 0063	BEARING; RADIAL BALL	000000	000000
9000900660	9-0009 0066	BEARING; BALL, CAM GOV SI	000005	000024

9000900800			BEARING	000000	000000
9000900810			BEARING	000000	000000
9000900820			BEARING	000000	000000
9000900840			BEARING	000000	000000
9000900960			BEARING	000000	000000
9000900970			BEARING	000000	000000
9000901110			BEARING	000000	000000
9000901130	9-0009	0113	BEARING;BALL	000000	000003
9000901150	9-0009	0115	BEARING	000001	000002
9000901180	9-0009	0118	BEARING	000000	000000
9000901210			BEARING	000000	000000
9000901300			BEARING	000000	000000
9000901330			BEARING	000000	000000
9000901460			BEARING	000000	000000
9000901520	9-0009	0152	BEARING; AIR CMPR	000003	000005
9000901560	9-0009	0156	BEARING;RADIAL BALL	000000	000000
9000901570	9-0009	0157	BEARING;CRANKS	000000	000000
9000901620	9-0009	0162	BALL BRG.	000000	000000
9000901640			BEARING	000000	000000
9000901800			BEARING	000000	000000
9000901810	9-0009	0181	BEARING,BALL,AL	000000	000000
9000901820	9-0009	0182	BEARING; BALL, HT FRONT R	000000	000000
9000902040	9-0009	0204	BEARING; BALL	000003	000006
9000902050			BEARING	000000	000000
9000902110	9-0009	0211	BRG; WTR PUMP	000000	000015
9000902130			BEARING	000000	000000
9000902250			BEARING	000000	000000
9000902290			BEARING; FLYWEIGHT	000000	000000
9000902300	9-0009	0230	BEARING; GEAR SUPPORT	000000	000000
9000902310	9-0009	0231	BEARING	000000	000000
9000902320	9-0009	0232	BEARING	000000	000000
9000902330	9-0009	0233	BEARING; CAMSHAFT	000000	000000
9000902400			BEARING	000000	000000
9000902410			BEARING	000000	000000
9000902440			BEARING	000000	000000
9000902450	9-0009	0245	BEARING	000000	000000
9000902640	9-0009	0264	BEARING	000000	000000
9000902650	9-0009	0265	BEARING; BALL	000000	000000
9000902660	9-0009	0266	BEARING;BALL	000000	000000
9000902690	9-0009	0269	BRG;PULLEY	000000	000000
9000902840	9-0009	0284	BEARING	000000	000000
9000902910	9-0009	0291	BEARING; BALL	000000	000000
9000906010	9-0009	0601	BEARING;BALL	000000	000000
9000906050			BEARING	000000	000000
9000906080			BEARING	000000	000000
9000906100	9-0009	0610	BRG;BALL,OUTPUT	000000	000001
9000906140			BEARING	000000	000000

9000906170		BEARING; BALL, T	000000	000000
9000906180	9-0009 0618	BRG**	000000	000000
9000906270	9-0009 0627	BRG**	000000	000000
9000906280	9-0009 0628	BEARING, BALL, FR	000000	000002
9000906300	9-0009 0630	BEARING; BALL, FT	000001	000001
9000906550	9-0009 0655	BRG**	000000	000000
9000906560		BEARING	000000	000002
9000906570	9-0009 0657	BEARING; BALL PTO	000013	000000
9000906600	9-0009 0660	BEARING; RADIAL BALL	000001	000000
9000906670	9-0009 0667	BEARING	000003	000000
9000906770	9-0009 0677	BALL BRG CAM; GOV SIDE	000000	000015
900090679T		BEARING, BALL, CR	000000	000000
9000906790	9-0009 0679	BEARING, BALL, CR	000007	000039
9000906970	9-0009 0697	BRG; PILOT, TOP GEAR SHFT	000000	000000
9000930050		BEARING	000000	000000
9000930080		BEARING	000000	000000
9000930090		BEARING	000000	000000
9000930130		BEARING	000000	000000
9000930180		BEARING	000000	000000
9000930230		BEARING	000000	000000
9000930250		BEARING	000000	000000
9000930260		BEARING	000000	000000
9000930300		BEARING	000000	000000
9000930310		BEARING	000000	000000
9000930311		BRG; WHEEL, FRT	000000	000000
9000930340		BEARING	000000	000000
9000930420		BEARING	000000	000000
9000930670		BEARING	000000	000000
9000930680		BEARING	000000	000000
9000930700		BEARING	000000	000000
9000930710		BEARING	000000	000000
9000930760	9-0009 3076	BEARING; IDLE	000000	000000
9000930810		BEARING	000000	000012
9000930820		BEARING	000000	000016
9000930850		BEARING	000000	000000
9000930860		BEARING	000000	000000
9000931190	9-0009 3119	BEARING; INNER	000000	000000
9000931200	9-0009 3120	BEARING	000001	000000
9000931210	9-0009 3121	BEARING	000000	000000
9000931220	9-0009 3122	BEARING	000000	000000
9000931300		BEARING; DIFF CAGE	000013	000014
9000931490	9-0009 3149	BEARING; INNER, FRT AXLE	000000	000000
9000931740		BEARING; TAPPER ROLLER	000000	000000
9000936272	9-0009 3627	BEARING, TAPER R	000000	000000
9000940160		BEARING	000000	000000
9000940260		BEARING	000000	000000
9000940300		BEARING	000000	000000

9000940380		BEARING	000000	000000	
9000940470		BEARING	000000	000000	
9000940490		BEARING	000000	000000	
9000940540		BEARING	000000	000000	
9000940700		BEARING	000000	000000	
9000940810		BEARING	000000	000000	
9000944022		BEARING	000000	000000	
9000946010		BEARING	000000	000000	
9000950150	9-0009	5015	BEARING	000000	000000
9000950381	9-0009	5038	BEARING	000000	000002
9000950390	9-0009	5039	BEARING	000000	000000
9000950401	9-0009	5040	BEARING, CLUTCH	000018	000000
9000950441	9-0009	5044	BRG CLUTCH RELEASE	000000	000000
9000960080		BEARING	000000	000000	
9000960360		BEARING	000000	000000	
9000960430		BEARING	000000	000000	
9000960530		BEARING	000000	000000	
9000960630		BEARING	000000	000000	
9000960680		BEARING	000000	000000	
9000960690		BEARING	000000	000000	
9000960760		BEARING	000000	000000	
9000960790		BEARING	000000	000000	
9000961000		BEARING	000000	000000	
9000961001	9-0009	6100	BEARING, NDL., MA	000000	000012
9000961010		BEARING	000000	000000	
9000961380		BEARING	000000	000000	
9000961780		BEARING	000000	000000	
9000961840		BEARING	000000	000000	
9000962070	9-0009	6207	BRG; NEEDLE, PUMP	000000	000004
9000962190		BEARING	000000	000000	
9000962200		BEARING	000000	000000	
9000962240		BEARING	000000	000000	
9000962260		BEARING	000000	000000	
9000962270		BEARING	000000	000000	
9000962401		BEARING; ROLLER	000000	000000	
9000962450		BEARING	000000	000000	
9000966021		BEARING; NEEDLE	000000	000000	
9000966060	9-0009	6606	BEARING; NEEDLE	000000	000007
9000966190		BEARING	000000	000000	
9000966191		BEARING	000000	000000	
9000966200		BEARING	000000	000000	
9000966220		BRG**	000000	000000	
9000966230	9-0009	6623	BRG :	000000	000000
9000966250	9-0009	6625	BEARING; NEEDLE, 2ND GEAR	000000	000000
9000966330	9-0009	6633	BEARING; NEEDLE, 2ND, 3RD	000000	000000
9000966350	9-0009	6635	BRG, NEEDLE	000000	000000
9000966360	9-0009	6636	BEARING NEEDLE	000000	000000

9000966370	9-0009	6637	BEARING NEEDLE	000000	000000
9000966380	9-0009	6638	BEARING	000000	000000
9000966450	9-0009	6645	BEARING; NEEDLE	000001	000007
9000970080			BEARING	000000	000000
9000970090	9-0009	7009	BALL, DETENT, GEAR	000000	000050
9000970100	9-0009	7010	BALL; DETENT, GEAR/INTER LK	000000	000030
9000970110	9-0009	7011	PLUG; OIL GALLERY	000040	001336
9000970130	9-0009	7013	BALL; VALVE/DETENT	000022	000020
9000972250	9-0009	7225	B A L L	000000	000000
9000972550	9-0009	7255	BALL*	000000	000000
9000975020	9-0009	7502	BALL; OVERFLOW	000000	000030
9000975090	9-0009	7509	BALL; LK, SHIFT SLEEVE	000000	000287
9000975150			BEARING	000000	000000
9000975170	9-0009	7517	BALL; REVERSE SW	000000	000000
9000975200			BEARING	000000	000000
9000975250			BEARING	000000	000000
9000975270	9-0009	7527	BALL; OVRFLOW	000000	000000
9000975310	9-0009	7531	BALL; VALVE	000000	000000
9000975350	9-0009	7535	BALL; STEEL ADAPTER	000198	000000
9000975390	9-0009	7539	BALL; STEEL	000000	000000
9000975400	9-0009	7540	BALL; OVER FLOW VALVE	000000	000000
9000980110			BEARING	000000	000000
9000980230			BEARING	000000	000000
9000980310			BEARING	000000	000000
9008121300	9-0081	2130	SPRING; GOVERNOR	000000	000000
9008121860	9-0081	2186	CAPSULE; SPRING	000000	000000
9008130230	9-0081	3023	NUT; SPRING CAPSULE	000000	000090
9010008560	9-0100	0856	BOLT	000000	000000
9010008950	9-0100	0895	BOLT	000000	000000
9010108500	9-0101	0850	BOLT;	000000	000000
9010212750			BOLTS	000000	000000
9010406160	9-0104	0616	BOLT; FENDER	000000	000000
9010406200	9-0104	0620	BOLT; COVER	000000	000000
9010406320	9-0104	0632	BOLT, DYNAMIC DA	000000	000000
9010408200	9-0104	0820	BOLT; COVER	000000	000000
9010408220	9-0104	0822	BOLT;	000000	000000
9010408450	9-0104	0845	BOLT; HAND BRAKE LEVER	000000	000000
9010408500	9-0104	0850	BOLT, COVER TO C	000000	000000
9010408630	9-0104	0863	BOLT;	000000	000000
9010410400	9-0104	1040	BOLT; COVER	000000	000000
9010410500	9-0104	1050	BOLT;	000000	000000
9010410550	9-0104	1055	BOLT; BRACKET	000000	000000
9010456200			BOLT; HOOK	000000	000000
9010456250	9-0104	5625	BOLT	000000	000000
9010456280	9-0104	5628	BOLT, BRKT. - PIPE	000000	000000
9010456320	9-0104	5632	BOLT, GEAR CASE	000000	000000
9010456350			BOLT; BUFFER RUBBER	000000	000000

9010458000	9-0104	5800	BOLT;HSG. TO HOOD	000000	000000
9010458280	9-0104	5828	BOLT	000000	000000
9010458300	9-0104	5830	BOLT;CABLE END	000000	000000
9010458350	9-0104	5835	BOLT;BATTERY	000000	000000
9010458400	9-0104	5840	B O L T	000000	000000
9010458450	9-0104	5845	BOLT;CLU	000000	000000
9010458500	9-0104	5850	BOLT;CLU	000000	000000
9010458550	9-0104	5855	BOLT;CASE TO BO	000000	000000
9010458600	9-0104	5860	BOLT	000000	000000
9010458630	9-0104	5863	BOLT;CASE FIX.	000000	000000
9010458650	9-0104	5865	BOLT	000000	000000
9010458700			BOLT; BRACKET	000000	000000
9010458750	9-0104	5875	BOLT; INJ PUMP	000000	000000
9010458900	9-0104	5890	BOLT;	000000	000000
9010458950	9-0104	5895	BOLT	000000	000000
9010460350	9-0104	6035	BOLT; BRACKET TO	000000	000000
9010460380	9-0104	6038	BOLT; BRACKET TO	000000	000000
9010460500	9-0104	6050	BOLT;COOLER	000000	000000
9010460550	9-0104	6055	BOLT; BRACKET	000000	000000
9010460600	9-0104	6060	BOLT;CONT.CYL.	000000	000000
9010460650	9-0104	6065	BOLT	000000	000000
9010460700	9-0104	6070	BOLT; CLAMP	000000	000000
9010460900			BOLT;CAB.MTG.RR	000000	000000
9010506100	9-0105	0610	BOLT;BRG.COVER	000000	000000
9010506420	9-0105	0642	BOLT;PROPORT,VLV TO BRKT	000000	000000
9010508250	9-0105	0825	B O L T; BRKT TO BO	000000	000000
9010508400	9-0105	0840	B O L T	000000	000000
9010508450	9-0105	0845	BOLT,CARRIER TO	000000	000000
9010508500	9-0105	0850	BOLT;BRKT TO	000000	000000
9010508550			BOLT; HOUSING	000000	000000
9010508750	9-0105	0875	BOLT; INJ PUMP	000000	000000
9010508850	9-0105	0885	BOLT	000000	000000
9010508900			BOLT;IDLE PULLE	000000	000000
9010508930			BOLT; FAN	000000	000000
9010508950	9-0105	0895	BOLT	000000	000000
9010510250	9-0105	1025	BOLT;CLIP,SIDE	000000	000000
9010510350	9-0105	1035	BOLT; BRACKET TO	000000	000000
9010510400	9-0105	1040	BOLT,TRANS.CASE	000000	000000
9010510500	9-0105	1050	BOLT; TRANS CASE	000000	000000
9010510550	9-0105	1055	BOLT;IDLE GEAR	000000	000000
9010510600	9-0105	1060	BOLT, KNUCKLE AR	000000	000000
9010510800	9-0105	1080	BOLT; PUMP BRKT	000000	000000
9010510850	9-0105	1085	BOLT,CLIP,REAR	000000	000000
9010510950	9-0105	1095	BOLT; STRG. UNI	000000	000000
9010514500			BOLT;RR BRAKE	000000	000000
9010556250	9-0105	5625	BOLT;O/F BAND	000000	000000
9010556380	9-0105	5638	BOLT	000000	000000

9010556500	9-0105	5650	BOLT; VALVE	000000	000000
9010556550	9-0105	5655	BOLT;TIMI	000000	000000
9010556650	9-0105	5665	BOLT; FAN	000000	000000
9010558000	9-0105	5800	BOLT;HSG. TO HOOD	000000	000000
9010558300	9-0105	5830	BOLT; ENGERATOR TO BRKT	000000	000000
9010558320	9-0105	5832	BOLT; COVER FIX	000000	000000
9010558350	9-0105	5835	BOLT,FLANGE TO	000000	000000
9010558380	9-0105	5838	B O L T	000000	000000
9010558400	9-0105	5840	B O L T	000000	000000
9010558450	9-0105	5845	BOLT ;	000000	000000
9010558500	9-0105	5850	BOLT;	000000	000000
9010558550	9-0105	5855	BOLT	000000	000003
9010558600	9-0105	5860	BOLT	000000	000000
9010558650	9-0105	5865	BOLT,EXH.PIPE	000000	000000
9010558700	9-0105	5870	BOLT;ADJ PULLEY	000000	000000
9010558750	9-0105	5875	BOLT; INJ PUMP	000000	000000
9010558800	9-0105	5880	BOLT	000000	000000
9010558850	9-0105	5885	BOLT; BRACKET	000000	000000
9010558900	9-0105	5890	BOLT;EXH VLV	000000	000000
9010558950	9-0105	5895	BOLT	000000	000034
9010560000	9-0105	6000	BOLT:BRKT.FRT	000000	000000
9010560320	9-0105	6032	BOLT	000000	000000
9010560350	9-0105	6035	BOLT; BRACKET TO	000000	000000
9010560400	9-0105	6040	BOLT	000000	000000
9010560450	9-0105	6045	BOLT,ALTERNATOR	000000	000000
9010560500	9-0105	6050	BOLT,LINK END T	000000	000000
9010560550	9-0105	6055	BOLT; BRACKET	000000	000000
9010560600	9-0105	6060	BOLT;SPRING	000000	000000
9010560650	9-0105	6065	BOLT; 2ND C/MBR	000000	000000
9010560700	9-0105	6070	B O L T	000000	000000
9010560750	9-0105	6075	BOLT;A.T.F.BRKT	000000	000000
9010560800	9-0105	6080	BOLT; PUMP BRKT	000000	000000
9010560850	9-0105	6085	BOLT;BRKT FRT	000000	000000
9010560900	9-0105	6090	BOLT; CAB MTG REAR	000000	000000
9010560950	9-0105	6095	BOLT,STRG.UNIT	000000	000036
9010608320	9-0106	0832	BOLT;CASE,FR AXLE	000000	000000
9010608350			BOLT;CASE,FR AXLE	000000	000000
9010608700			BOLT; PUMP TO COVER	000000	000000
9010610000	9-0106	1000	BOLT E120	000000	000000
9010610320	9-0106	1032	BOLT;SUPPORT	000000	000000
9010610450			BOLT; A/C COMPRESSOR BRKT	000000	000000
9010610600	9-0106	1060	BOLT;SHK.ABS UP	000000	000000
9010656600	9-0106	5660	BOLT; FAN	000000	000000
9010656750	9-0106	5675	BOLT	000000	000000
9010658300	9-0106	5830	BOLT;CASE FIX.	000000	000000
9010658350	9-0106	5835	BOLT;CASE,FR AXLE	000000	000009
9010658400	9-0106	5840	BOLT;SHAFT, JNT	000000	000004

9010658450	9-0106	5845	BOLT;BEARING CA	000000	000010
9010658500	9-0106	5850	BOLT.	000000	000000
9010658550	9-0106	5855	BOLT;BRKT	000000	000063
9010658600	9-0106	5860	BOLT; IDLE SHAFT	000000	000000
9010658650	9-0106	5865	BOLT; SHAFT FIX	000005	000000
9010658700	9-0106	5870	BOLT; PUMP TO COVER	000000	000000
9010658750	9-0106	5875	BOLT; MANIFOLD FIXING	000000	000000
9010658800	9-0106	5880	BOLT; FAN FIXING	000000	000000
9010658850	9-0106	5885	BOLT; OIL PAN FIX	000000	000000
9010658900	9-0106	5890	BOLT;CASE,FR AXLT	000025	000000
9010658950	9-0106	5895	BOLT; FAN FIX	000000	000000
9010660000	9-0106	6000	BOLT;	000000	000000
9010660320	9-0106	6032	BOLT;RR COVER	000000	000000
9010660350	9-0106	6035	BOLT;BRKT.TO CY	000000	000000
9010660400	9-0106	6040	BOLT;BRKT.TO CY	000251	000000
9010660450	9-0106	6045	BOLT,BRKT.TO CY	000007	000043
9010660500	9-0106	6050	BOLT;LINK END	000000	000033
9010660600	9-0106	6060	BOLT;CYL HD,A/C	000034	000004
9010660650	9-0106	6065	BOLT,	000000	000000
9010660700	9-0106	6070	BOLT; FAN FIX	000000	000000
9010660800	9-0106	6080	BOLT;CVR TO LVR	000000	000026
9010660900	9-0106	6090	BOLT;BODY MT	000000	000006
9010685350	9-0106	8535	BOLT; BRG CAP 12PB1	000000	000000
9011114060	9-0111	1406	NUT; SET, BOLT	000000	000000
9011458400	9-0114	5840	BOLT	000002	000000
9011501060			NUT; EARTH CABLE FIX	000000	000000
9011508750	9-0115	0875	BOLT; INJ PUMP	000000	000000
9016510600	9-0165	1060	BOLT;AIR PIPE/RR COVER	000000	000012
9016512380	9-0165	1238	BOLT POWER DRIVE FIX	000000	000000
9016560000	9-0165	6000	BOLT	000000	000000
9016560300	9-0165	6030	BOLT; COOLING FAN FIX	000000	000000
9016560350	9-0165	6035	BOLT; STIFFENER	000000	000000
9016560400	9-0165	6040	BOLT; BRG CASE	000000	000000
9016560500	9-0165	6050	BOLT;CLU CONT	000000	000000
9016560550	9-0165	6055	BOLT	000000	000000
9016560600	9-0165	6060	BOLT;AIR PIPE/RR COVER	000000	000000
9016560650	9-0165	6065	BOLT;INJ	000000	000000
9016560700	9-0165	6070	BOLT;WATE	000001	000000
9016560750	9-0165	6075	BOLT,SIDE CASE	000000	000000
9016560800	9-0165	6080	BOLT	000000	000000
9016562400	9-0165	6240	BOLT;	000000	000000
9016562450	9-0165	6245	BOLT; STARTER FIX	000000	000000
9016562500	9-0165	6250	BOLT	000000	000000
9016562550	9-0165	6255	BOLT; ADJ PLATE FIX	000000	000000
9016562600	9-0165	6260	BOLT;	000000	000000
9016562650	9-0165	6265	BOLT; GEAR CASE	000000	000021
9016610700	9-0166	1070	BOLT 6RB1	000010	000000

9016610900	9-0166	1090	BOLT; SLAVE CYL TO TRANS	000000	000000
9016612700	9-0166	1270	BOLT;	000000	000000
9016612800	9-0166	1280	BOLT; ROCKER ARM FIX	000036	000000
9016660350	9-0166	6035	BOLT; OIL PUMP FIX	000000	000000
9016660400	9-0166	6040	BOLT; ENG. FOOT 4JC1	000000	000000
9016660550	9-0166	6055	BOLT; ENGINE, FOOT, FRT.	000000	000000
9016660700	9-0166	6070	BOLT 6RB1	000000	000000
9016660900	9-0166	6090	BOLT; SLAVE CYL	000000	000042
9016660950	9-0166	6095	BOLT*	000000	000000
9016662400	9-0166	6240	BOLT; PINION CAG	000000	000000
9016662450	9-0166	6245	BOLT; FINAL PINION CAGE	000000	000032
9016662500	9-0166	6250	BOLT; ADAPTER-FLYWHEEL	000000	000000
9016662550	9-0166	6255	BOLT; OIL PUMP TO C/	000000	000000
9016662700	9-0166	6270	BOLT; HSG	000000	000151
9016662750	9-0166	6275	BOLT; HSG	000000	000100
9016662800	9-0166	6280	BOLT; ROCKER ARM FIX	000000	000000
9016662900	9-0166	6290	BOLT; HOUSING FIX	000000	000000
9019001810	9-0190	0181	BOLT	000000	000000
9019006120	9-0190	0612	BOLT; SEMS/BRKT, HARNESS	000000	000000
9019006140	9-0190	0614	BOLT; SEMS, STIFF, FENDER	000000	000000
9019006160	9-0190	0616	BOLT; SEMS/BRKT, BATT CABLE	000000	000000
9019006180	9-0190	0618	BOLT, SEMS, WIPER	000000	000000
9019006200	9-0190	0620	BOLT; SEMS	000000	000000
9019006220	9-0190	0622	BOLT; ADAPT.	000000	000000
9019006250	9-0190	0625	BOLT; STGR LOCK TO COLUMN	000000	000000
9019006280	9-0190	0628	BOLT; AIR PIPE	000000	000000
9019006300	9-0190	0630	BOLT, SEMS	000000	000000
9019006350			BOLT, SEMS	000000	000000
9019006400			BOLT; BRKT, P/S PIPE DASH	000000	000000
9019008120	9-0190	0812	BOLT; SEMS, CLIP	000000	000000
9019008140	9-0190	0814	BOLT; SEM, BRKT	000000	000000
9019008160	9-0190	0816	BOLT; SEMS, STIFF	000000	000000
9019008180	9-0190	0818	BOLT; SEMS, TAPPET CHAMBER	000000	000000
9019008181	9-0190	0818	BOLT; SEMS, TAPPET CHAMBER	000000	000000
9019008200	9-0190	0820	BOLT; FRT COVER/QUAD BOX	000000	000000
9019008220	9-0190	0822	BOLT; FRT COVER/QUAD BOX	000000	000000
9019008250	9-0190	0825	BOLT; SEMS, FRT B. SCREW, CLP	000000	000000
9019008280	9-0190	0828	BOLT; BRKT	000000	000000
9019008300	9-0190	0830	BOLT; MANIF TO HD	000000	000000
9019008320	9-0190	0832	BOLT, SEMS, OIL F	000000	000000
9019008350	9-0190	0835	BOLT; BRKT	000000	000000
9019008400			BOLT; COMB. VALVE	000000	000000
9019008450	9-0190	0845	B O L T	000000	000000
9019008600			BOLT; BRKT	000000	000000
9019010200	9-0190	1020	BOLT, SEMS	000000	000000
9019010220			BOLT, SEMS, ENG.	000000	000000
9019010250	9-0190	1025	BOLT; STRUT BAR LWR LINK	000000	000000

9019010300	9-0190	1030	BOLT, SEMS, CONV.	000000	000000
9019010320	9-0190	1032	B O L T	000000	000000
9019010400	9-0190	1040	BOLT	000000	000000
9019012400	9-0190	1240	BOLT; MAG BRKT	000000	000000
9019100350	9-0191	0035	BOLT; SEMS	000000	000000
9019106120	9-0191	0612	BOLT; SEMS, BACK	000000	000000
9019106140	9-0191	0614	BOLT;	000000	000000
9019106160	9-0191	0616	BOLT; SEMS, OIL PAN TO CRNK	000000	000000
9019106180	9-0191	0618	BOLT, COLUMN-DSN	000000	000000
9019106200	9-0191	0620	BOLT, SEMS	000000	000000
9019106220	9-0191	0622	BOLT, SEMS, CLIP	000000	000000
9019106250	9-0191	0625	BOLT, SEMS, COOLI	000000	000000
9019106280	9-0191	0628	BOLT; CABLE CLIP	000000	000000
9019106300	9-0191	0630	BOLT; RESONATOR	000000	000000
9019106320	9-0191	0632	BOLT; RESONATOR	000000	000000
9019106350	9-0191	0635	BOLT; SEMS	000000	000000
9019106400	9-0191	0640	BOLT, SEMS, FAN	000000	000000
9019106450	9-0191	0645	BOLT; PROPORTIONING VLV TO	000000	000000
9019108120	9-0191	0812	BOLT; SEMS	000000	000000
9019108140	9-0191	0814	BOLT, SEMS	000000	000000
9019108160	9-0191	0816	BOLT; ADJ PLATE	000000	000000
9019108180	9-0191	0818	BOLT; BRKT, FLX HSE, FR BRK	000000	000000
9019108200	9-0191	0820	BOLT, SEMS, EGR V	000000	000000
9019108220	9-0191	0822	BOLT, SEMS, CYL H	000000	000000
9019108250	9-0191	0825	BOLT, SEMS, OUTLET	000000	000000
9019108280	9-0191	0828	BOLT; FILTER	000000	000000
9019108300	9-0191	0830	BOLT; MANIF TO HD	000000	000000
9019108320	9-0191	0832	BOLT, SEMS, RET. T	000000	000000
9019108350	9-0191	0835	BOLT, SEMS	000000	000000
9019108400	9-0191	0840	B O L T	000000	000000
9019108450	9-0191	0845	BOLT; SEMS	000000	000000
9019108500	9-0191	0850	BOLT; *SUPERSEDED*	000000	000000
9019108550	9-0191	0855	BOLT; IDLER PLY TO T/M GR	000000	000000
9019110160	9-0191	1016	BOLT; DRUM COVER	000000	000000
9019110200	9-0191	1020	BOLT, BRACKET TO	000000	000000
9019110220	9-0191	1022	BOLT; COVER STRG UNIT	000000	000000
9019110250	9-0191	1025	BOLT; STRUT BAR LWR LINK	000000	000000
9019110280	9-0191	1028	BOLT; AIR DRYER	000000	000000
9019110300	9-0191	1030	BOLT; SEMS, IDLER	000000	000000
9019110320	9-0191	1032	BOLT; BRACKET F	000001	000000
9019110350	9-0191	1035	BOLT, SEMS, BRKT.	000000	000000
9019110400	9-0191	1040	BOLT, SEMS, CMDR.	000000	000000
9019110450	9-0191	1045	BOLT, SEMS, TRANS	000000	000000
9019110550	9-0191	1055	BOLT; P/S, IDLER	000000	000000
9019112250	9-0191	1225	BOLT; SEMS, ENGINE	000000	000000
9019112280	9-0191	1228	BOLT; CAP TO BODY	000000	000000
9019112300	9-0191	1230	BOLT, SEMS, BACK	000000	000000

9019112320	9-0191	1232	BOLT;BRKT	000000	000000
9019112350	9-0191	1235	BOLT,SEMS,STRUT	000000	000000
9019112400	9-0191	1240	BOLT;BRKT	000000	000000
9019118160	9-0191	1816	BOLT; HANGER, FRT	000000	000000
9019210200	9-0192	1020	BOLT,SEMS	000005	000000
9019210220	9-0192	1022	BOLT;SEMS	000000	000000
9019210300	9-0192	1030	BOLT; FRONT COVER	000000	000000
9019210320	9-0192	1032	BOLT,SEMS,CONV.	000000	000000
9019210450			BOLT;A/C HOSE	000000	000000
9019308350			BOLT; SEMS, GEN FIX-UNLIS	000000	000000
9019310160	9-0193	1016	BOLT;BRKT.	000000	000000
9019310200	9-0193	1020	BOLT;SEMS,RR BR	000000	000000
9019310220	9-0193	1022	BOLT; FRT W/CYL SETTING	000000	000000
9019310250	9-0193	1025	BOLT; SEMS INLET	000000	000000
9019310280	9-0193	1028	BOLT;PTO	000000	000000
9019310300	9-0193	1030	BOLT;SEMS/RR COVER	000000	000000
9019310320	9-0193	1032	BOLT;QUAD	000000	000000
9019310350	9-0193	1035	BOLT; STIFFENER	000000	000000
9019310400	9-0193	1040	BOLT,SEMS	000000	000000
9019310450	9-0193	1045	BOLT;A/C HOSE	000000	000000
9019310500	9-0193	1050	BOLT; SEMS, FOOT LH.	000000	000000
9019312200	9-0193	1220	BOLT; BRACKET FIX	000000	000000
9019312250	9-0193	1225	BOLT; BRACKET	000000	000000
9019312280	9-0193	1228	BOLT; SUPPORT	000000	000000
9019312300	9-0193	1230	BOLT	000000	000000
9019312320	9-0193	1232	BOLT;SET,W	000000	000000
9019312350	9-0193	1235	BOLT; FRT WHL CYL SETTING	000000	000000
9019312400	9-0193	1240	BOLT; RR COVER	000000	000000
9019312450	9-0193	1245	BOLT; SEMS 6RB1	000000	000000
9019458750	9-0194	5875	BOLT; OIL FILTER	000000	000000
9019605080	9-0196	0508	WASHER;PLAIN	000000	000000
9019606080	9-0196	0608	WASHER;PL.	000000	000000
9019606120	9-0196	0612	BOLT; SEMS	000261	000000
9019606160	9-0196	0616	BOLT; FUEL PIPE/BRKT,BATT	000000	000000
9019606200	9-0196	0620	BOLT;SEMS/BRKT,ACCEL CBLE	000000	000000
9019606250	9-0196	0625	BOLT; PIPE TO BODY	000006	000008
9019606280	9-0196	0628	BOLT; 1ST STEP	000000	000000
9019606300	9-0196	0630	BOLT,SEMS CLU.S	000000	000000
9019607060	9-0196	0706	WASHER;PL	000000	000000
9019607080	9-0196	0708	WASHER; PL., OIL FILLER	000000	000000
9019608140	9-0196	0814	BOLT; FRT SEAT/BODY	000000	000000
9019608160	9-0196	0816	BOLT;T/GATE LINK,RR BODY	000000	000000
9019608180	9-0196	0818	BOLT; BRACKET F	000000	000000
9019608200	9-0196	0820	BOLT; FRT SEAT/BODY	000000	000000
9019608220	9-0196	0822	BOLT,SEMS,BUSH	000000	000000
9019608250	9-0196	0825	BOLT,SEMS, TOP C	000000	000000
9019608300	9-0196	0830	BOLT; SEMS/FLEX HOSE TO	000000	000000

9019608350	9-0196	0835	BOLT; GOVERNOR	000000	000000
9019608400	9-0196	0840	BOLT;CLAMP	000000	000000
9019610200	9-0196	1020	BOLT,SEMS	000000	000087
9019610220	9-0196	1022	BOLT;SEMS,BUMPE	000000	000000
9019610250	9-0196	1025	BOLT; VALVE FIX	000000	000000
9019610300	9-0196	1030	BOLT;SEMS	000000	000000
9019610400	9-0196	1040	BOLT,SEMS	000000	000000
9019610450	9-0196	1045	BOLT;SEM COMP	000000	000000
9019645100	9-0196	4510	WASHER;PL.	000000	000000
9019646080	9-0196	4608	WASHER	000000	000000
9019647080	9-0196	4708	WASHER; PL.,HANG,CLIP	000000	000000
9019706120	9-0197	0612	BOLT, LINK-ROD	000000	000000
9019706140	9-0197	0614	BOLT;SEMS	000000	000000
9019706160	9-0197	0616	BOLT,SEMS.E.G.R	000000	000000
9019706180	9-0197	0618	BOLT;IGN COIL	000000	000000
9019706200	9-0197	0620	BOLT;CLIP FIX	000000	000000
9019706250	9-0197	0625	BOLT;CLIP	000000	000000
9019706300	9-0197	0630	BOLT;STAB BAR	000000	000000
9019706350	9-0197	0635	BOLT;BRACKET	000000	000000
9019706450	9-0197	0645	BOLT,SEMS,CHAIN	000000	000000
9019708140	9-0197	0814	BOLT;SEMS,STOPP	000000	000000
9019708160	9-0197	0816	BOLT;T/GATE LINK,RR BODY	000000	000000
9019708180	9-0197	0818	BOLT;COVER	000000	000000
9019708200	9-0197	0820	BOLT; FRT SEAT/BODY	000000	000000
9019708220	9-0197	0822	BOLT;STAY TO PL	000000	000000
9019708250	9-0197	0825	BOLT; SEMS,HINGE	000000	000000
9019708280	9-0197	0828	BOLT; SUPPORT,P/S BRKT	000000	000000
9019708300	9-0197	0830	BOLT; BRKT TO HD	000000	000000
9019708320	9-0197	0832	BOLT; COVER	000000	000000
9019708350	9-0197	0835	BOLT; BRKT TO JOINT	000000	000000
9019708400	9-0197	0840	BOLT;SEMS,FILTE	000000	000000
9019708450	9-0197	0845	B O L T	000000	000000
9019710200	9-0197	1020	BOLT;RR BRKT,OIL PUMP,P/S	000000	000000
9019710220	9-0197	1022	BOLT; HANGER	000000	000000
9019710250	9-0197	1025	BOLT;BRACKET,ENG,STAY, FIX	000000	000000
9019710280	9-0197	1028	BOLT; QUADRANT	000000	000000
9019710300	9-0197	1030	BOLT;SEMS,FILTER	000000	000000
9019710320	9-0197	1032	BOLT; FILTER FI	000000	000000
9019710330	9-0197	1033	BOLT; FILTER FIX	000000	000000
9019710350	9-0197	1035	BOLT; HSG TO HD	000000	000000
9019710400	9-0197	1040	BOLT;SEMS GEN	000000	000000
9019710450	9-0197	1045	BOLT,SEMS,TRANS	000000	000000
9019712350	9-0197	1235	BOLT; BRKT. TO	000000	000011
9019712400	9-0197	1240	BOLT;BRKT.HITCH	000000	000000
9019712450	9-0197	1245	BOLT; GENERATOR ADJ PLATE	000000	000000
9019810200	9-0198	1020	BOLT;CABLE,BAT	000000	000000
9019854040	9-0198	5404	RING; SNAP	000000	000000

9019910200	9-0199	1020	BOLT;WATER HOSE	000000	000000
9019910220	9-0199	1022	BOLT;STAY,CHMBR	000000	000000
9019910250	9-0199	1025	BOLT; HINGE	000000	000000
9019910280	9-0199	1028	BOLT; CONN FIX	000000	000000
9019910300	9-0199	1030	BOLT;F/FILTER/CRNK.PULLEY	000000	000000
9019910320	9-0199	1032	BOLT; QUAD BOX	000000	000000
9019910350	9-0199	1035	BOLT; STIFFENER	000000	000000
9019910400	9-0199	1040	BOLT;STARTER	000000	000000
9019910450	9-0199	1045	BOLT;GEN	000000	000000
9019912250	9-0199	1225	BOLT;AIR TANK	000000	000007
9019912320	9-0199	1232	BOLT; SEMS, STARTER FIX.	000000	000000
9019912350	9-0199	1235	BOLT; SEMS, STARTER FIX.	000000	000000
9019912400	9-0199	1240	BOLT; RR COVER	000000	000000
9020008160	9-0200	0816	BOLT; BRACKET TO TRANS	000000	000000
9020406100	9-0204	0610	BOLT,UNDER COVE	000000	000000
9020406120	9-0204	0612	BOLT; METAL PLUG	000000	000000
9020406140	9-0204	0614	BOLT; BUZZER BDY	000000	000000
9020406160	9-0204	0616	BOLT; FENDER	000000	000000
9020406180	9-0204	0618	BOLT; BUMPER	000000	000000
9020406200	9-0204	0620	BOLT,WSW.LINK T	000000	000000
9020406220			BOLT;SCROLL	000000	000000
9020406250	9-0204	0625	BOLT;CLIP FIX/EVAP TO BLW	000000	000000
9020406300	9-0204	0630	BOLT;	000000	000000
9020406400	9-0204	0640	STOPPER; ACCEL PEDAL	000000	000000
9020406450			BOLT;ACCEL.PEDA	000000	000000
9020406500			BOLT	000000	000000
9020408100	9-0204	0810	BOLT;DUST CVR TO KNUCKLE	000000	000000
9020408120	9-0204	0812	BOLT; CLIP TO OI	000000	000000
9020408140	9-0204	0814	BOLT,HORN SET T	000000	000000
9020408160	9-0204	0816	BOLT; BRACKET TO TRANS	000000	000000
9020408180	9-0204	0818	BOLT,CLU.CVR.TO	000000	000000
9020408200	9-0204	0820	BOLT; FRT COVER/QUAD BOX	000000	000000
9020408220	9-0204	0822	BOLT;HANGER	000000	000000
9020408250	9-0204	0825	B O L T; BRKT TO BO	000000	000000
9020408280			BOLT; FUEL TANK	000000	000000
9020408300	9-0204	0830	BOLT; INTERCOOLER	000000	000000
9020408400	9-0204	0840	B O L T	000000	000000
9020408450	9-0204	0845	BOLT;	000000	000000
9020410140	9-0204	1014	BOLT; COVER	000000	000000
9020410160	9-0204	1016	BOLT; ENGINE HAR	000000	000000
9020410200	9-0204	1020	BOLT,SHOCK ABS	000000	000000
9020410250	9-0204	1025	BOLT;CLIP,SIDE	000000	000000
9020410280			BOLT	000000	000000
9020410300	9-0204	1030	STOPPER;ACCEL PEDAL	000000	000000
9020410320	9-0204	1032	B O L T	000000	000000
9020410350	9-0204	1035	BOLT; BRACKET TO	000000	000000
9020410380	9-0204	1038	BOLT; BRACKET TO	000000	000000

9020412500	9-0204	1250	BOLT; CLUTCH PEDAL ADJ.	000000	000000
9020414200	9-0204	1420	BOLT	000000	000000
9020414400	9-0204	1440	BOLT; BRACKET FIX.	000000	000000
9020506100	9-0205	0610	BOLT,PLATE TO C	000000	000000
9020506120	9-0205	0612	BOLT; BRKT TO IN	000100	000000
9020506140	9-0205	0614	BOLT; THRUST PLATE	000000	000000
9020506160	9-0205	0616	BOLT; FENDER	000000	000529
9020506180	9-0205	0618	BOLT;BUMPER	000000	000000
9020506200	9-0205	0620	BOLT;WIPER	000000	000000
9020506220			BOLT;SCROLL	000000	000000
9020506250	9-0205	0625	BOLT;	000000	000003
9020506300	9-0205	0630	BOLT,CLU.SAFETY	000000	000000
9020506320	9-0205	0632	BOLT;CLAMP	000000	000000
9020506350	9-0205	0635	BOLT; BUFFER RUBBER	000000	000000
9020506400	9-0205	0640	BOLT; PEDAL STO	000000	000000
9020506450	9-0205	0645	BOLT;ACCEL.PEDA	000000	000000
9020508100	9-0205	0810	B O L T	000000	000000
9020508120	9-0205	0812	BOLT; AIR DUCT	000000	000000
9020508140	9-0205	0814	BOLT,A/CL TO FN	000000	000000
9020508160	9-0205	0816	BOLT; BRACKET TO TRANS	000000	000000
9020508180	9-0205	0818	BOLT,	000000	000000
9020508200	9-0205	0820	BOLT; FRT COVER/QUAD BOX	000000	000000
9020508220	9-0205	0822	BOLT,RLY.LVR.TO	000000	000000
9020508250	9-0205	0825	B O L T; BRKT TO BO	000000	000000
9020508280	9-0205	0828	BOLT; FUEL TANK	000000	000000
9020508300	9-0205	0830	BOLT;CABLE END	000000	000003
9020508320	9-0205	0832	BOLT,EXH.PIPE T	000000	000000
9020508350	9-0205	0835	BOLT	000000	000000
9020508650	9-0205	0865	BOLT;P/BRK VLV	000000	000000
9020508950	9-0205	0895	BOLT	000000	000000
9020510160	9-0205	1016	BOLT;BRKT	000000	000000
9020510180	9-0205	1018	BOLT; OIL FILLER FIX 4JC1	000000	000000
9020510200	9-0205	1020	BOLT,ENGINE FOO	000000	000000
9020510220	9-0205	1022	BOLT,BRKT.,ENG.	000000	000000
9020510250	9-0205	1025	BOLT;CLIP,SIDE	000000	000000
9020510280	9-0205	1028	BOLT,ENGINE MT.	000000	000000
9020510300	9-0205	1030	STOPPER;ACCEL PEDAL	000000	000000
9020510320	9-0205	1032	BOLT;STEERING	000000	000006
9020510350	9-0205	1035	BOLT; BRACKET TO	000000	000000
9020510500	9-0205	1050	BOLT; LINK END	000000	000000
9020510550	9-0205	1055	BOLT; BRACKET	000000	000000
9020512320	9-0205	1232	BOLT;BRKT	000000	000000
9020512400	9-0205	1240	BOLT*	000000	000000
9020608180	9-0206	0818	BOLT; DAMPER FIX	000000	000000
9020608200	9-0206	0820	BOLT;CLU	000008	000008
9020608220	9-0206	0822	BOLT,CARRIER TO	000000	000000
9020608250	9-0206	0825	BOLT,STRG.SHF.,CASE FR AX	000000	000000

9020608300			BOLT;CASE,FR AXLE	000000	000000
9020608320	9-0206	0832	BOLT;CASE,FR AXLE	000000	000000
9020610140	9-0206	1014	BOLT	000000	000000
9020610160	9-0206	1016	BOLT;SPRING,SEA	000000	000000
9020610200	9-0206	1020	BOLT	000003	000000
9020610220	9-0206	1022	BOLT,STRG.BRKT.	000000	000170
9020610250	9-0206	1025	B O L T	000000	000000
9020610280	9-0206	1028	BOLT; ENGINE FOOT	000000	000000
9020610300	9-0206	1030	BOLT,SUP.BRKT	000000	000014
9020610320	9-0206	1032	BOLT;MEMBER TO FRAME,CVR	000000	000000
9020610350	9-0206	1035	BOLT;ENG. FOOT	000000	000118
9020610400	9-0206	1040	BOLT; HANGER REAR	000000	000000
9023410140	9-0234	1014	BOLT;PROTECTOR	000000	000000
9023410160	9-0234	1016	BOLT; BRKT,BATTERY CABLE	000000	000000
9023410220	9-0234	1022	BOLT; CLU COVER	000000	000000
9023410300	9-0234	1030	BOLT POWER DRIVE FIX	000000	000000
9023510160	9-0235	1016	BOLT; LOCK PIEC	000000	000000
9023510180	9-0235	1018	BOLT;BRK COVER	000000	000000
9023510200	9-0235	1020	BOLT,RR,BRACKET	000000	000000
9023510220	9-0235	1022	BOLT;CLU COVER	000000	000000
9023510250	9-0235	1025	BOLT; SIDE	000000	000000
9023510280	9-0235	1028	BOLT;RR COVER	000000	000000
9023510300	9-0235	1030	BOLT;SEMS	000000	000002
9023510350	9-0235	1035	BOLT; BRG CASE	000000	000000
9023510500	9-0235	1050	BOLT;	000000	000000
9023512250	9-0235	1225	BOLT;ADJ.PLATE	000000	000000
9023512300	9-0235	1230	BOLT;RR.PLATE FIX.	000000	000000
9023512320	9-0235	1232	BOLT; GEAR CASE FIX	000000	000000
9023512350	9-0235	1235	BOLT	000000	000000
9023610220	9-0236	1022	BOLT; DAMP	000000	000064
9023610250	9-0236	1025	BOLT; OIL PUMP	000019	000000
9023610280	9-0236	1028	BOLT;GEAR CASE FIX	000000	000000
9023610300	9-0236	1030	BOLT;A/T TO ENG	000002	000038
9023610350	9-0236	1035	BOLT*	000001	000000
9023612200	9-0236	1220	BOLT;DAMPER FIX	000051	000000
9023612300	9-0236	1230	BOLT: DAMPER FIX	000000	000000
9023612360	9-0236	1236	BOLT*	000000	000000
9023612400	9-0236	1240	BOLT; FINAL PINION CAGE	000000	000036
9026910800	9-0269	1080	B O L T	000000	000000
9028510500	9-0285	1050	BOLT;IDLE SHAFT	000000	000000
9029410250	9-0294	1025	BOLT;REAR PLATE FIX.	000000	000000
9029508160	9-0295	0816	BOLT; DAMPER FIX	000000	000000
9029508650	9-0295	0865	BOLT;ROCK BRKT	000002	000000
9029510250	9-0295	1025	BOLT; FOOT	000000	000000
9029558350	9-0295	5835	BOLT	000000	000000
9029558400	9-0295	5840	BOLT; FAN FIXING	000000	000000
9029558450	9-0295	5845	BOLT; FAN	000000	000000

9029558500	9-0295	5850	BOLT; FAN FIXING	000000	000000
9029558550	9-0295	5855	BOLT; FAN	000000	000000
9029558600	9-0295	5860	BOLT; FAN	000000	000000
9029558650	9-0295	5865	BOLT; COMP	000000	000000
9029558700	9-0295	5870	BOLT; FAN FIXING	000000	000000
9029558750	9-0295	5875	BOLT; FAN ATTACHING 6BB/B	000000	000000
9029558850	9-0295	5885	BOLT; FAN FIX	000000	000000
9029558900	9-0295	5890	BOLT;CASE,FR AXLT	000000	000000
9029558950	9-0295	5895	BOLT; FAN FIX.	000000	000000
9029560400	9-0295	6040	BOLT; IDLE PULLEY	000000	000000
9029560450	9-0295	6045	BOLT; HEX HD ENGINE FOOT	000000	000000
9029560500	9-0295	6050	BOLT;LINK END	000000	000000
9029610800	9-0296	1080	BOLT*	000000	000000
9029610850	9-0296	1085	BOLT*	000000	000000
9029710280	9-0297	1028	BOLT; BRG CASE	000000	000000
9029760650	9-0297	6065	BOLT; BEARING CASE	000000	000000
9029810220	9-0298	1022	BOLT;OIL PUMP	000000	000000
9029810250	9-0298	1025	BOLT:OIL FRONT	000000	000000
9029810300	9-0298	1030	BOLT	000000	000000
9029860350	9-0298	6035	BOLT:OIL PUMP	000000	000000
9030008160	9-0300	0816	SCREW; SLOTTED CK HD	000000	000000
9030408160	9-0304	0816	SCREW; SLOTTED CK HD	000000	000000
9030408200	9-0304	0820	SCREW;W/P PLATE	000000	000000
9030658180	9-0306	5818	SCREW	000000	000000
9030658200	9-0306	5820	SCREW;WAT	000000	000000
9030658250	9-0306	5825	SCREW	000000	000000
9030906160	9-0309	0616	SCREW,DRUM TO H	000000	000000
9030906200	9-0309	0620	SCREW;W/P PLATE	000001	000013
9030908160	9-0309	0816	SCREW; SLOTTED CK HD	000000	000180
9030908200	9-0309	0820	SCREW;W/P PLATE	000009	000789
9030980200	9-0309	8020	SCREW; SLOTTED (INVALID)	000000	000000
9034406100	9-0344	0610	SCREW;PULLEY	000000	000000
9034655120	9-0346	5512	SCREW;PLATE, IN	000000	000000
9034866080	9-0348	6608	SCREW E120	000023	000000
9034866100	9-0348	6610	SCREW; GUIDE	000000	000031
9034866120	9-0348	6612	SCREW;BRKT	000000	000099
9034866782	9-0348	6678	SCREW; BAFFLE PLATE FIX.	000000	000000
9034906100	9-0349	0610	SCREW;SW BRACKE	000000	000000
9034906140			SCREW,COIL-BODY	000000	000000
9034906250	9-0349	0625	BOLT; INSULATOR	000000	000000
9034906300	9-0349	0630	BOLT*	000000	000000
9038004080	9-0380	0408	SCREW;GUIDE RAIL	000000	000068
9038006100	9-0380	0610	SCREW;STIFFENER, COVER	000000	000000
9039104080	9-0391	0408	BOLT,SEMS	000097	000000
9039104100	9-0391	0410	SCREW;BRKT, STRG	001107	000000
9039104140	9-0391	0414	SCREW SET;CAM BRG.#2-6	000000	000000
9039104160	9-0391	0416	SCREW; SEMS TIMER FIX	000000	000000

9039105100	9-0391	0510	BOLT, SEMS/SCREW	000000	000000
9039105120	9-0391	0512	SCREW, SEMS, FUEL	000000	000010
9039106120	9-0391	0612	SCREW, SEMS, REAR	000000	000068
9039106140	9-0391	0614	SCREW; PWR WINDW MOTOR	000000	000000
9039106160	9-0391	0616	SCREW; SEMS P/S	000000	000000
9039106200	9-0391	0620	SCREW; HUB CAP	000000	000000
9039204100	9-0392	0410	SCREW; THRO	000000	000000
9039204120	9-0392	0412	SCREW, SEMS	000000	000259
9039204140	9-0392	0414	BOLT*	000000	000000
9039204200	9-0392	0420	SCREW; ELEC. MOD.	000000	000000
9039205100	9-0392	0510	SCREW, SEMS, SW. T	000000	000000
9039205120	9-0392	0512	SCREW; CONT FIX	000000	000000
9039205140	9-0392	0514	SCREW; SEMS	000000	000107
9039206100	9-0392	0610	SCREW; SEMS, ACTUATOR	000000	000000
9039206120	9-0392	0612	SCREW; SEMS, ACTUATOR	000000	001244
9039206140	9-0392	0614	SCREW; FUSE BOX	000000	000000
9040108160	9-0401	0816	STUD; TIMING	000000	000000
9040108200	9-0401	0820	STUD; FRONT HANGER	000013	000000
9040108280	9-0401	0828	STUD; INLET	000062	000000
9040108300	9-0401	0830	STUD, MANIFOLD T	000002	000003
9040110200	9-0401	1020	STUD; INLET PIPE	000000	000000
9040208160	9-0402	0816	STUD; PROTECTOR, INL MANI	000002	000000
9040208280	9-0402	0828	STUD, INJ. PUMP T	000000	000000
9041006180			STUD; ACL	000000	000000
9041008140	9-0410	0814	STUD;	000000	000000
9041008160	9-0410	0816	STUD NUT	000000	000000
9041008200	9-0410	0820	STUD; INLET MANIFOLD	000000	000000
9041008220	9-0410	0822	STUD	000000	000000
9041008250	9-0410	0825	STUD; OIL PIPE	000000	000000
9041008300	9-0410	0830	STUD*DISCONTINUED*	000000	000000
9041008450	9-0410	0845	STUD*	000000	000000
9041008480	9-0410	0848	STUD; INTAKE	000000	000000
9041008500	9-0410	0850	STUD	000000	000000
9041010300	9-0410	1030	STUD; INJECTOR	000000	000000
9041106120	9-0411	0612	STUD; CLIP FIX	000000	000000
9041106160	9-0411	0616	STUD, FAN CLUTCH	000000	000000
9041106180			STUD; CENTER FAN	000000	000000
9041106200	9-0411	0620	STUD; INL MANIFOLD	000000	000000
9041106250	9-0411	0625	STUD; CONN	000000	000000
9041106300	0-4101	0630	STUD BOLT; INJ.	001223	000001
9041106400			STUD; OIL PAN	000000	000000
9041106450			STUD	000001	000001
9041108120	9-0411	0812	STUD; INLET COVER	000001	000000
9041108140	9-0411	0814	STUD; AIR DUCT	000000	000000
9041108160	9-0411	0816	STUD; INL COVER	000028	000041
9041108180	9-0411	0818	STUD; INLET COVER TO DUCT	000000	000762
9041108200	9-0411	0820	STUD, OIL PAN TO	000000	000000

9041108220	9-0411	0822	STUD,HANGER,CYL	000000	000000
9041108230	9-0411	0823	STUD	000042	000000
9041108250	9-0411	0825	STUD;CASE, FRT AXLE	000000	000000
9041108280	9-0411	0828	STUD,INL.MANIF.	000000	000000
9041108300	9-0411	0830	STUD,AXLE CASE,	000000	000000
9041108350	9-0411	0835	STUD,ENG.TO INL	000000	000000
9041108360			STUD; CM/SHF BRKT	000175	000765
9041108400	9-0411	0840	STUD,MANIFOLD T	000000	000049
9041108450	9-0411	0845	STUD; TENSIONER	000000	000000
9041108500	9-0411	0850	STUD;EXH,MANIFO	000000	000000
9041108550	9-0411	0855	STUD; WATER PUMP	000000	000010
9041108600	9-0411	0860	STUD; CRANKCASE	000013	000000
9041108750	9-0411	0875	STUD,EXH.MANIFO	000000	000000
9041110220	9-0411	1022	STUD; INL. MANIF.	000000	000000
9041110250	9-0411	1025	STUD;	000000	000000
9041110300	9-0411	1030	STUD 6SA1T	000000	000000
9041308200	9-0413	0820	STUD;EXH PIPE TO MANIF	000000	000003
9041308220	9-0413	0822	STUD; MF-MF TURB	000000	000000
9041308250	9-0413	0825	STUD; TURBO	000000	000622
9041308400	9-0413	0840	STUD;EXH.	000226	000208
9041308500	9-0413	0850	STUD; TURBOCHARGER FLANGE	000000	000004
9041382500	9-0413	8250	STUD;TURBOCHARGER	000000	000000
9043110160	9-0431	1016	STUD E120	000028	000000
9043110200	9-0431	1020	STUD;INTAKE	000002	000030
9043110250	9-0431	1025	STUD EXH	000000	000000
9043110280	9-0431	1028	STUD;FUEL FILTE	000000	000023
9043110300	9-0431	1030	STUD; ADAPTER	000096	000000
9043110550	9-0431	1055	STUD; NOZZLE HOLDER	000023	000006
9043110560	9-0431	1056	STUD; NOZZLE HOLDER	000000	000000
9043110800	9-0431	1080	STUD;FUEL FILTER	000000	000000
9043214350	9-0432	1435	STUD*	000000	000000
9044010180	9-0440	1018	STUD:	000000	000000
9044010300	9-0440	1030	STUD;INJ.PUMP	000000	000000
9044110160	9-0441	1016	STUD; FILTER BRACKET FIX	000066	000047
9044110180	9-0441	1018	STUD;	000000	000000
9044110200	9-0441	1020	STUD;INTAKE	000000	000000
9044110220	9-0441	1022	STUD	000000	000054
9044110250	9-0441	1025	STUD;EXH PIPE TO MANIF.	000000	000000
9044110280	9-0441	1028	STUD;INL PIPE	000025	000164
9044110300	9-0441	1030	STUD,TRFER CASE	000000	000000
9044110320	9-0441	1032	STUD; GEAR CASE COVER FIX	000000	000000
9044110330	9-0441	1033	STUD; EXHAUST PIPE	000020	000000
9044110350	9-0441	1035	BOLT;INL MAINE	000000	000000
9044110400	9-0441	1040	STUD; TIMING CASE, H/P RR	000039	000000
9044110450	9-0441	1045	STUD	000156	000000
9044110500	9-0441	1050	STUD; INLET MANIFOLD	000000	000000
9044110550	9-0441	1055	STUD; INLET MANIFOLD	000000	000000

9044110600	9-0441	1060	STUD*	000013	000000
9044110700	9-0441	1070	STUD; EXHAUST MANIFOLD	000140	000000
9044110800	9-0441	1080	STUD;FUEL FILTE	000000	000000
9044110820	9-0441	1082	STUD;INTAKE	000000	000000
9044110950	9-0441	1095	STUD; EXH. MAN.	000000	000000
9044114350	9-0441	1435	STUD E120	000004	000000
9044114400	9-0441	1440	STUD;STAR	000000	000080
9044114420	9-0441	1442	STUD; FLYWHEEL HOUSING	000000	000000
9044114450	9-0441	1445	STUD; FLYWHEEL HSG. FIX	000010	000000
9045010250	9-0450	1025	STUD;HYDRAULIC PUMP	000000	000000
9047310250	9-0473	1025	STUD;TURBO,EXH	000420	003314
9047310280	9-0473	1028	STUD	000418	001921
9047310300	9-0473	1030	STUD 6SA1T	000000	000000
9047310800	9-0473	1080	STUD*	000000	000106
9049110200	9-0491	1020	BOLT; SEMS, BRKT. FIX.	000000	000000
9050806100	9-0508	0610	BOLT;BRKT.	000000	000000
9058005100	9-0580	0510	BOLT;SOCKET	000000	000000
9058006100	9-0580	0610	BOLT; FLYWEIGHT FIX 3KC1	000000	000000
9058006350	9-0580	0635	BOLT; SOCKET	000000	000000
9058006560	9-0580	0656	BOLT; BREATHER	000000	000000
9058206140	9-0582	0614	BOLT; HEX/CONNECTOR	000000	000000
9058206200	9-0582	0620	BOLT; HD COVER	000011	000000
9058208180	9-0582	0818	BOLT; PULLEY FIX	000000	000000
9058208220	9-0582	0822	BOLT; INNER	000000	000056
9058208320	9-0582	0832	BOLT; SHAFT	000008	001402
9058208450	9-0582	0845	BOLT; OIL PUMP TO C/BL	000000	000000
9058208600	9-0582	0860	BOLT; OIL PIPE-OIL FILTER	000000	000011
9058210450	9-0582	1045	BOLT; SOCKET	000000	000000
9058210650	9-0582	1065	BOLT; TENSIONER FIX	000003	000001
9058214450	9-0582	1445	BOLT; HSG	000000	000000
9059210250	9-0592	1025	BOLT; ADAPTER FIX	000000	000000
9059210800	9-0592	1080	BOLT;CASE	000000	000016
9060006110	9-0600	0611	SCREW SET	000000	000000
9060008120	9-0600	0812	SCREW;SET,SHIFT FORK	000000	000000
9060236250	9-0602	3625	SCREW; STOPPER	000000	000000
9061208140	9-0612	0814	SCREW;SET	000000	000000
9061208160	9-0612	0816	SCREW; SET	000000	000000
9061308120			SCREW;SET	000000	000000
9061308200	9-0613	0820	SCREW; SET, BOSS SET	000000	000000
9061310180	9-0613	1018	SCREW	000000	000000
9062016400	9-0620	1640	SCREW; WOOD	000000	000000
9065005160	9-0650	0516	RIVER; FAN ND ISD	000000	000000
9065204120	9-0652	0412	RIVET; PLATE	000000	000000
9065204200	9-0652	0420	RIVET; RD-HD	000000	000000
9066604080			RIVETS	000000	000000
9066605180			RIVETS	000000	000000
9066605200			RIVETS	000000	000000

9066706160			RIVET;POINT.HSG	000000	000000
9070371581	9-0703	7158	HOSE BREATHER	000000	000000
9070664100	9-0706	6410	SCREW,WSWA.NOZZ	000000	000114
9070665080	9-0706	6508	SCREW	000000	000000
9070665100	9-0706	6510	SCREW,STOPPER T	000000	000000
9070674100	9-0706	7410	SCREW;TAP COVER	000000	000000
9070675080	9-0706	7508	SCREW;CLIP	000000	000000
9070675100	9-0706	7510	SCREW	000000	000000
9070764100	9-0707	6410	SCREW	000000	000164
9070774120	9-0707	7412	SCREW,TAP,HEAD	000000	000000
9079708220			BOLT;**INVALID**	000000	000000
9080007180	9-0800	0718	KEY,FEATHER	000000	000089
9080007200	9-0800	0720	KEY;PULLEY	000000	000000
9080010450	9-0800	1045	KEY,FEATHER	000000	000000
9080107200	9-0801	0720	KEY, CMSHFT	000000	000551
9080107250	9-0801	0725	KEY; FEATHER, CLUTCH SHAF	000000	000000
9080110220	9-0801	1022	KEY; FEATHER CRANK CASE	000000	000000
9080110350	9-0801	1035	KEY; FEATHER	000000	000000
9080110400	9-0801	1040	KEY	000000	000000
9080110500	9-0801	1050	KEY**	000000	000000
9080110630	9-0801	1063	KEY; STUB SHAFT	000000	000000
9080112600	9-0801	1260	KEY; FEATHER	000000	000000
9080115800	9-0801	1580	LOCK PULLEY SETTING BOLT	000000	000000
9080115801	9-0801	1580	LOCK PULLEY SETTING BOLT	000000	000000
9080205100	9-0802	0510	KEY,FEATHER,SPE	000000	000000
9080305220	9-0803	0522	KEY; FEATHER CRANK CASE	000000	000000
9080307130	9-0803	0713	KEY;CAMSHAFT	000000	000094
9080307160	9-0803	0716	KEY;DRIVE GEAR	000000	000047
9080307180	9-0803	0718	KEY; FEATHER CAMSHAFT E12	000048	000000
9080307280	9-0803	0728	KEY; FEATHER	000000	000000
9080307430	9-0803	0743	KEY,FEATHER CRANKSHAFT	000175	000166
9080312180	9-0803	1218	KEY; INJ PUMP GEAR SET	000000	000000
9080507220	9-0805	0722	KEY E120	000009	000000
9080507250	9-0805	0725	KEY;DRIVE,GEAR	000002	000062
9080553130	9-0805	5313	KEY;OIL PUMP SH	000000	000000
9080554130	9-0805	5413	KEY,WOODRUFF,DR	000000	000007
9080554160	9-0805	5416	KEY;AIR CMPR	000015	000008
9080555160	9-0805	5516	KEY;AIR CMPR,IN	000008	000067
9080555190	9-0805	5519	KEY;WHEEL	000006	000031
9080555220	9-0805	5522	KEY;	000000	000039
9080556220	9-0805	5622	KEY; WOODRUFF	000000	000065
9081020150			PIN;SPLIT,DUMPE	000000	000000
9081030220	9-0810	3022	COTTER PIN	000000	000000
9081030280	9-0810	3028	COTTER PIN	000000	000000
9081040300	9-0810	4030	COTTER PIN,FRON	000000	000000
9081040400	9-0810	4040	PIN;COTTER	000000	000000
9081106120	9-0811	0612	PIN; SPLIT	000000	000000

9081108060	9-0811	0806	PIN; ROLLER	000000	000000
9081112100	9-0811	1210	PIN ROLLER	000000	000000
9081116100	9-0811	1610	PIN; SPLIT, CLAW	000000	000000
9081116120	9-0811	1612	PIN;COTTER	000000	000474
9081120150	9-0811	2015	COTTER PIN,PED.	000037	000000
9081120180	9-0811	2018	COTTER PIN,ACCE	000000	000000
9081120200	9-0811	2020	PIN,SPLIT,NUT T	000000	000619
9081120250	9-0811	2025	PIN;SPILT,ROCKER ARM SHAF	000000	000000
9081120280	9-0811	2028	COTTER PIN	000000	000033
9081125200	9-0811	2520	PIN;COTTER	000000	000180
9081130180	9-0811	3018	PIN;SPLIT	000000	000349
9081130220	9-0811	3022	PIN,SPLIT	000000	000051
9081130250	9-0811	3025	COTTER PIN;SPLIT,DRAG LK	000000	000000
9081130280	9-0811	3028	PIN;SPLIT,LINK END/KNUCKL	000000	000564
9081140220	9-0811	4022	PIN; SPLIT, PIN	000000	000099
9081140300	9-0811	4030	PIN;SPLIT, LWR LINK/KNUCK	000000	000000
9081140400	9-0811	4040	COTTER PIN	000000	000000
9081140600	9-0811	4060	PIN;SPLIT	000000	000003
9081502080	9-0815	0208	PIN	000000	000000
9081503060	9-0815	0306	LINER PIN	000047	000000
9081504080	9-0815	0408	PIN,STRAIGHT	000000	000000
9081504360	9-0815	0436	PIN; SPR,CONT	000000	000010
9081505100	9-0815	0510	PIN;STRAIGHT	000000	000081
9081505160	9-0815	0516	PIN; SHAFT SET	000000	000000
9081505450	9-0815	0545	SHAFT; LEVER	000000	000014
9081506120	9-0815	0612	PIN;QUADRANT	000000	000000
9081506160	9-0815	0616	PIN; STRAIGHT, FLYWHEEL	000000	000022
9081506250	9-0815	0625	PIN,STRAIGHT	000000	000000
9081506400	9-0815	0640	PIN; REVER SHAFT	000000	000000
9081508160	9-0815	0816	PIN;RET. O/SEAL	000002	000014
9081508180	9-0815	0818	PIN;KNOCK	000000	000000
9081508200	9-0815	0820	PIN;STRAIGHT	000000	000061
9081508250	9-0815	0825	PIN;FLYWHEEL	000003	000041
9081508500	9-0815	0850	SHAFT; LEVER	000000	000014
9081510180	9-0815	1018	PIN; FLYWHEEL HSG	000008	000131
9081510200	9-0815	1020	PIN;STRAIGHT KNOCK	000000	000000
9081510220	9-0815	1022	PIN; STRAIGHT KNOCK	000000	000000
9081510222	9-0815	1022	PIN; STRAIGHT KNOCK	000000	000000
9081510240	9-0815	1024	PIN,STRAIGHT	000061	000000
9081510250	9-0815	1025	PIN;PRESSURE	000000	000000
9081510300	9-0815	1030	PIN; STRAIGHT	000000	000000
9081510400	9-0815	1040	PIN,STRAIGHT	000030	000000
9081510500	9-0815	1050	PIN; TIMING GEA	000000	000000
9081512200	9-0815	1220	PIN;FLYWHEEL	000000	000000
9081512220	9-0815	1222	PIN; STRAIGHT E120	000000	000127
9081512250	9-0815	1225	PIN; STRAIGHT, REAR PLATE	000000	000000
9081512280	9-0815	1228	PIN;FLYWHEEL HOUSING	000000	000000

9081514280	9-0815	1428	PIN; STRAIGHT	000024	000000
9081603220	9-0816	0322	PIN;STRAIGHT	000000	000000
9081604080	9-0816	0408	PIN;STRAIGHT,	000000	000000
9081604100	9-0816	0410	PIN**	000000	000000
9081604120	9-0816	0412	PIN;STRAIGHT CR	000051	000000
9081604160	9-0816	0416	PIN; IDLE A	000000	000000
9081604200	9-0816	0420	PIN; STRAIGHT	000000	000000
9081604300	9-0816	0430	PIN**	000000	000000
9081604360	9-0816	0436	PIN; CONTROL SPRING	000011	000000
9081605080	9-0816	0508	PIN	000002	000104
9081605100	9-0816	0510	PIN; CAM SHAFT	000188	000022
9081605120	9-0816	0512	PIN,STRAIGHT,CR	000043	000075
9081605160	9-0816	0516	PIN ;	000000	000000
9081605200	9-0816	0520	PIN; SPRING	000000	000000
9081605450	9-0816	0545	PIN**	000032	000000
9081606120	9-0816	0612	PIN;QUADRANT	000000	000160
9081606140	9-0816	0614	PIN; PULLEY	000053	000000
9081606160	9-0816	0616	PIN,STRAIGHT,QU	000000	000000
9081608140	9-0816	0814	PIN; STRAIGHT 2KC1	000000	000000
9081608160	9-0816	0816	PIN;STRAIG	000000	000000
9081608200	9-0816	0820	PIN,KNOCK	000001	000004
9081608280	9-0816	0828	PIN; STRAIGHT 2KC1	000001	000000
9081608500	9-0816	0850	SHAFT; LEVER	000001	000000
9081610160	9-0816	1016	PIN;KNOCK,QUAD.	000000	000065
9081610200	9-0816	1020	PIN; STRAIGHT,KNOCK	000000	000000
9081610220	9-0816	1022	PIN; R.R. PLATE 4JC1	000003	000000
9081610250	9-0816	1025	PIN;PRESSURE	000000	000034
9081610280	9-0816	1028	PIN; KNOCK, FLYWHEEL	000000	000000
9081610320	9-0816	1032	PIN,RR.PLATE TO	000000	000058
9081610360	9-0816	1036	PIN;STRAIGHT,RR.PLATE	000000	000000
9081610630			PIN; STRAIGHT,RR PL	000000	000114
9081612200	9-0816	1220	PIN,STRAIGHT	000000	000167
9081612220	9-0816	1222	PIN; STRAIGHT	000000	000000
9081612320	9-0816	1232	PIN;STRAIG	000000	000095
9082136250	9-0821	3625	SHAFT; SHIFTER	000005	000000
9082205110	9-0822	0511	PIN;JAW JOINT	000000	000000
9082235100	9-0822	3510	PIN,JOINT	000000	000000
9082236130	9-0822	3613	PIN;ENGINE STOP	000000	000000
9082236170	9-0822	3617	PIN	000000	000000
9082236200	9-0822	3620	PIN; JAW JOINT,CONT CABLE	000000	000000
9082238280	9-0822	3828	PIN;VENT.PEDAL	000000	000008
9082310280	9-0823	1028	PIN; JOINT JAW	000000	000000
9082336170	9-0823	3617	PIN**	000004	000000
9082338200			PIN; JOINT,WIRE	000000	000000
9082340280			PIN, CONT. ROD	000000	000000
9084005040	9-0840	0504	ROD:LINK	000000	000000
9084005050	9-0840	0505	LINK; ENGINE STOP	000000	000000

9084005070	9-0840	0507	ROD; LINK	000000	000000
9084005090	9-0840	0509	ROD; LINK	000004	000000
9084005130	9-0840	0513	LINKKROD	000000	000000
9084005180	9-0840	0518	LINK; ENGINE STOP	000000	000000
9084005190	9-0840	0519	LINK; ENGINE CONTROL	000000	000000
9084005260	9-0840	0526	LINK; ENG CONT	000000	000000
9084005270	9-0840	0527	LINK; ENG CONT	000000	000000
9084006050	9-0840	0605	LINK; ENGINE CONT.	000000	000000
9084006080	9-0840	0608	ROD; LINK, SOLENOID VALVE	000000	000002
9084006180	9-0840	0618	LINK; ENGINE CONT.	000000	000000
9084006190	9-0840	0619	LINK; ENGINE CONT.	000000	000005
9084006230	9-0840	0623	LINK; ENG CONT	000000	000000
9084006270	9-0840	0627	ROD;ENGINE CONT	000000	000000
9084105070	9-0841	0507	ROD ;	000000	000000
9084205040	9-0842	0504	LINK; ENG. STOP	000008	000000
9084205110	9-0842	0511	ROD; LINK	000000	000000
9085716100	9-0857	1610	GASKET; PLUG, OIL DRAIN	000000	000000
9090110350	9-0901	1035	KEY; LOCATING	000000	000000
9090310100	9-0903	1010	NIPPLE; GREASE	000004	000002
9090311100	9-0903	1110	NIPPLE; GREASE	000000	000000
9090311110	9-0903	1111	NIPPLE; GREASE	000000	000000
9090312100	9-0903	1210	NIPPLE; GREASE	000000	000000
9091004080	9-0910	0408	NUT; HNGER, BREATHR, CASE FR	000000	000000
9091006140	9-0910	0614	BOLT; SEMS, COVER FIX.	000000	000000
9091008180	9-0910	0818	BOLT; ADAPTER FIX.	000000	000000
9091014060	9-0910	1406	NUT; PIVOT, UPR	000000	000000
9091100060	9-0911	0006	NUT ;	000000	000000
9091100080	9-0911	0008	NUT; CLIP BOLT	000000	000000
9091100100	9-0911	0010	NUT; RBND, HSG TO CASE	000000	000000
9091100270	9-0911	0027	NUT 6RB1/E120	000000	000000
9091101080	9-0911	0108	NUT; CLIP TO	000000	000000
9091103060			NUT; FUEL CUT VLV; INJ PUMP	000000	000000
9091103080	9-0911	0308	NUT; RODEO	000000	000009
9091103100	9-0911	0310	NUT**	000042	000000
9091104010	9-0911	0401	NUT; RBND, HSG TO CASE	000000	000000
9091104050	9-0911	0405	NUT; RR WIPER MT	000000	000000
9091104060	9-0911	0406	NUT; COMB LAMP/EVAP TO BLW	000000	000000
9091104080	9-0911	0408	NUT; HNGER, BREATHR, CASE FR	000000	000000
909110410F			NUT; RBND, HSG TO CASE	000000	000000
9091104100	9-0911	0410	NUT; RBND, HSG TO CASE	000000	000009
9091104102	9-0911	0410	NUT; RBND, HSG TO CASE	000000	000000
9091104120	9-0911	0412	NUT; RAD. MTG, BRK	000000	000000
9091104140	9-0911	0414	NUT; FRT AXLE MTG, TRUCK RO	000000	000000
9091104160	9-0911	0416	NUT; CONNECTOR	000000	000000
9091104600	9-0911	0460	NUT; STOPPER R.	000000	000000
9091104606	9-0911	0460	NUT; STOPPER R.	000000	000000
9091104800	9-0911	0480	NUT; *DISCONTINUED*	000000	000000

9091105050	9-0911	0505	NUT..	000000	000000
9091105060	9-0911	0506	NUT;RR WIPER ARM TO WPR M	000860	000000
9091105080	9-0911	0508	NUT;HNGER,BREATHR,CASE FR	000242	000007
9091105100	9-0911	0510	NUT;RBND,HSG TO CASE	000004	000006
9091105120	9-0911	0512	NUT; BRKT TO FR	000141	000000
9091105140	9-0911	0514	NUT; SHOCK ABSORBER	000000	000000
9091105270	9-0911	0527	NUT 6RB1/E120	000000	000000
9091108300	9-0911	0830	STUD; EXHAUST MANIFOLD	000000	000000
9091111080	9-0911	1108	NUT;ADJ. SCREW	000000	000000
9091114050			NUT;CABLE TO GE	000000	000000
9091114060	9-0911	1406	NUT; CABLE TO GENERATOR	000008	000004
9091114080	9-0911	1408	NUT,PUSH ROD	000000	000000
9091114100	9-0911	1410	NUT,ADJ.SCREW,B	000000	000000
9091114160	9-0911	1416	NUT;PIPE UNION	000000	000000
9091115060	9-0911	1506	NUT; CABLE TO GENERATOR	000000	000000
9091115080	9-0911	1508	NUT;ADJ SCREW	000000	000746
9091115100	9-0911	1510	NUT;RELAY LEVER STOPPER	000000	000000
9091115220	9-0911	1522	NUT;PITMAN ARM	000000	000000
9091123080	9-0911	2308	NUT; ROCK BRKT	000000	000000
9091123100	9-0911	2310	NUT**	000000	000000
9091140900	9-0911	4090	NUT; BRKT. FIX.	000000	000000
9091164100	9-0911	6410	NUT;	000000	000000
9091165100	9-0911	6510	NUT,DAMPER TO 2	000109	000000
9091184060	9-0911	8406	NUT 2KC1	000000	000000
9091184360	9-0911	8436	NUT 2KC1	000000	000000
9091203120	9-0912	0312	NUT	000034	000000
9091204100	9-0912	0410	NUT,CASE TO ENG/CONT SHAF	000000	000023
9091204120	9-0912	0412	NUT,LATERAL ROD	000000	000020
9091205100	9-0912	0510	NUT 2K/3KC1	000015	000000
9091213100	9-0912	1310	NUT;STARTER	000000	000000
9091213120	9-0912	1312	NUT; EXHAUST PIPE E120	000030	000000
9091314080	9-0913	1408	NUT;LOCK	000000	000000
9091315080	9-0913	1508	NUT,LOCK,STAB.S	000000	000000
9091315100	9-0913	1510	NUT;TIE ROD	000006	000000
9091315120	9-0913	1512	NUT,LOWER BALL	000000	000000
9091500080	9-0915	0008	WASHER; LOCK	000000	000000
9091500100	9-0915	0010	WASHER; LOCK	000000	000000
9091500160	9-0915	0016	WASHER; SHAFT	000000	000000
9091501100	9-0915	0110	WASHER LK CAB	000000	000000
9091504100	9-0915	0410	WASHER; LOCK	000000	000000
9091505030	9-0915	0503	WASHER;LK	000000	000000
9091505040	9-0915	0504	WASHER,LK.,LAMP	000055	000170
9091505050	9-0915	0505	WASHER,LK.,BOX	000000	000000
9091505060	9-0915	0506	WASHER,LK.,PED.	000000	000000
9091505080	9-0915	0508	WASHER;LK DUST CVR/KNUCLE	000000	000000
9091505100	9-0915	0510	WASHER; LK,FINAL DRIVE	000000	000001
9091505120	9-0915	0512	WASHER;LK,BRG HOLDR TO CA	000000	000997

9091505140	9-0915	0514	WASHER, LK., SUPP	000000	000000
9091505160	9-0915	0516	WASHER; LK, RELAY/PL. SHAFT	000000	000000
9091505180	9-0915	0518	WASHER; LK; F/W H	000010	000000
9091505200	9-0915	0520	WASHER, LK, COUPL	000000	000000
9091505240	9-0915	0524	WASHER; LK, PULLE	000000	000061
9091506050	9-0915	0605	WASHER; SPRING	000000	000000
9091506060	9-0915	0606	WASHER, LK., BRKT	000000	000000
9091506080	9-0915	0608	WASHER; LK, CASE, FR AXLE, EN	000000	000000
9091506100	9-0915	0610	WASHER; LK, YOKE TO RR AXLE	001555	005212
9091506120	9-0915	0612	WASHER; LK. BRKT TO AXLE CA	000000	000000
9091506140	9-0915	0614	WASHER, LK, SHACK	000000	000007
9091506160	9-0915	0616	WASHER; LK, LWR LK/FR C/MBR	000019	000022
9091506180	9-0915	0618	WASHER, LK.	000000	000000
9091508080	9-0915	0808	WASHER; HUB OUTR, FR AXLE	000000	000200
9091508100	9-0915	0810	WASHER; LK, UPR LK END/UP L	000000	000175
9091508120	9-0915	0812	WASHER; LK, DISC BRK	000000	000000
9091508140	9-0915	0814	WASHER; LK, AXLE, LWR LINK	000013	000009
9091508160	9-0915	0816	WASHERLINK, RELAY LEVER	000000	000000
9091510220	9-0915	1022	PIN; STRAIGHT, FLYWHEEL	000000	000000
9091512200	9-0915	1220	WASHER; LK, UNION	000000	000000
9091512220	9-0915	1222	WASHER; LK.	000000	000000
9091515060	9-0915	1506	WASHER; LOCK	000000	000000
9091517060	9-0915	1706	WASHER, LK., BRKT	000000	000084
9091517080	9-0915	1708	WASHER, LOCK HOR	000000	000000
9091522080	9-0915	2208	WASHER; LK	000000	000000
9091522140	9-0915	2214	WASHER; LOCK, CABLE FIX	000000	000000
9091545100	9-0915	4510	WASHER; PL. TRANS TO PIN	000000	000000
9091600160	9-0916	0016	WASHER SPRING	000000	000000
9091601100	9-0916	0110	WASHER; PLAIN, ENGINE CON	000003	000000
9091602080	9-0916	0208	WASHER; PL	000000	000000
9091602120	9-0916	0212	WASHER; PLAIN	000000	000000
9091605040	9-0916	0504	WASHER, PL., COWL	000000	000006
9091605050	9-0916	0505	WASHER; PL., LAMP	000000	000000
9091605060	9-0916	0506	WASHER; PLATE	000142	000042
9091605080	9-0916	0508	WASHER, PL. GEAR CONT BRKT	000008	000000
9091605100	9-0916	0510	WASHER, PL., ANTENNA POLE	000008	000549
9091605120	9-0916	0512	WASHER, PL., ACCE	000030	000000
9091605140	9-0916	0514	WASHER, PL. PEDAL	000007	000000
9091605160	9-0916	0516	WASHER; PL, PIN	000000	000128
9091605200	9-0916	0520	WASHER; PL, PIN	000001	000006
9091605220	9-0916	0522	WASHER; LK PIN	000000	000040
9091605240	9-0916	0524	WASHER; PL	000012	000025
9091605270	9-0916	0527	WASHER; STAY	000000	000000
9091606040	9-0916	0604	WASHER, PL., VAC.	000000	000091
9091606050	9-0916	0605	WASHER, PL., GRIL	000000	000000
9091606060	9-0916	0606	WASHER; PL, COIL/CLIP/BRKT.	000109	000000
9091606080	9-0916	0608	WASHER; PL, AIR/STAY/BRKT.	000000	000000

9091606100	9-0916	0610	WASHER, PL., ENGI	000006	000008
9091606120	9-0916	0612	WASHER, PL., CLUT	000115	000000
9091606160	9-0916	0616	WASHER, PL.	000000	000008
9091607040	9-0916	0704	WASHER; PL, TRIM PAD	000102	000000
9091607060	9-0916	0706	WASHER, PL., COMB	000000	000000
9091607080	9-0916	0708	WASHER; PL, A/T CONT	000000	000000
9091607100	9-0916	0710	WASHER, PL.	000060	000000
9091607120	9-0916	0712	WASHER, PL., ROD	000005	000116
9091607140	9-0916	0714	WASHER; PL UNION	000000	000000
9091607160	9-0916	0716	WASHER; PL, BRKT	000000	000006
9091608160	9-0916	0816	BOLT; T/GATE LINK, RR BODY	000000	000000
9091640080	9-0916	4008	WASHER, PL.	000000	000000
9091640100	9-0916	4010	WASHER; PL. TRANS TO PIN	000000	000000
9091642080	9-0916	4208	WASHER; PL, OIL	000000	000000
9091642120	9-0916	4212	WASHER PLATE	000000	000000
9091645040	9-0916	4504	WASHER; PL	000000	000000
9091645050	9-0916	4505	WASHER; PLAIN	000000	000000
9091645060	9-0916	4506	WASHER, PL., A/CL	000000	000481
9091645080	9-0916	4508	WASHER, PL., AXLE CASE	000000	000002
9091645100	9-0916	4510	WASHER; PL. TRANS TO PIN	000007	000141
9091645120	9-0916	4512	WASHER, PL., BAR	000000	000057
9091645140	9-0916	4514	WASHER	000001	000000
9091645200	9-0916	4520	WASHER; PULLEY	000000	000001
9091646050	9-0916	4605	WASHER; PL	000000	000061
9091646060	9-0916	4606	WASHER, PL., CLAMP	000056	000000
9091646080	9-0916	4608	WASHER, PL., RADI	000000	000000
9091646100	9-0916	4610	WASHER, PL., TRAN	000000	000000
9091646120	9-0916	4612	WASHER, PL., RR. B	000007	000000
9091646160	9-0916	4616	WASHER	000000	000315
9091646180	9-0916	4618	WASHER; PL.	000000	000000
9091646200	9-0916	4620	WASHER; S/ABSORB	000000	000000
9091646240	9-0916	4624	WASHER; PL, GEAR	000000	000000
9091647060	9-0916	4706	WASHER, PL, CLAMP	000481	000000
9091647080	9-0916	4708	WASHER; PL., HANG, CLIP	000005	000000
9091647100	9-0916	4710	WASHER; PL, FLEX HOSE, P/S	001613	000000
9091647120	9-0916	4712	WASHER; PL., SPAR	000000	000004
9091647140	9-0916	4714	WASHER; FR AXLE MTG	000000	000104
9091647240	9-0916	4724	WASHER	000000	000000
9091648060	9-0916	4806	WASHER, PL., BAT.	000000	000000
9091648080	9-0916	4808	WASHER; PL., HANG, CLIP	000000	000000
9091648100	9-0916	4810	WASHER, PL., SIL.	000000	000000
9091708180	9-0917	0818	BOLT; SEMS, CLIP FIX	000000	000000
9091708450	9-0917	0845	BOLT; COVER	000000	000000
9091800180	9-0918	0018	RING, SNAP	000000	000000
9091800190	9-0918	0019	RING, SNAP	000000	000044
9091800200	9-0918	0020	RING; SNAP, STRG SHAFT	000000	000000
9091800240	9-0918	0024	RING, SNAP	000000	000000

9091800250	9-0918	0025	RING;SNAP,COUNTER,FRT BRG	000001	000024
9091800280	9-0918	0028	RING;SNAP,HUBL	000011	000017
9091800300	9-0918	0030	RING;SNAP,DR SHAFT/TRNS A	000056	000094
9091800320	9-0918	0032	RING;SNAP	000000	000030
9091800350	9-0918	0035	SNAP,RING	000000	000000
9091800400	9-0918	0040	RING,SNAP,BRG.,	000000	000000
9091800450	9-0918	0045	RING,SNAP	000000	000000
9091800550	9-0918	0055	RING;SNAP	000001	000000
9091801250	9-0918	0125	SNAP RING;STOP	000000	000005
9091801300	9-0918	0130	RING,SNAP,LOWER	000000	000060
9091801340	9-0918	0134	SNAP RING	000019	000006
9091801360	9-0918	0136	SNAP RINGS	000000	000000
9091801380	9-0918	0138	SNAPRING	000000	000000
9091801400	9-0918	0140	RING;SNAP	000000	000000
9091801470	9-0918	0147	RING;SNAP BRG	000000	000564
9091801500	9-0918	0150	SNAP;RING,PISTON E120	000000	000000
9091801520	9-0918	0152	SNAP RING;SHAFT	000000	000018
9091801550	9-0918	0155	RING;SNAP,BRG	000000	000010
9091801580	9-0918	0158	RING;SNAP	000002	000000
9091801620	9-0918	0162	RING;SNAP	000028	000009
9091801650	9-0918	0165	RING;SNAP	000000	000086
9091801680	9-0918	0168	RING;SNAP,HUB BRG,FRT	000010	000000
9091801720	9-0918	0172	RING;SNAP	000007	000000
9091801900	9-0918	0190	RING;SNAP BALL BRG	000000	000003
9091804160	9-0918	0416	RING;SNAP,LEVER STOP	000000	000000
9091804180	9-0918	0418	RING;SNAP	000003	000000
9091804220	9-0918	0422	SNAP RING;CLUTC	000016	000000
9091804300	9-0918	0430	RING;SNAP	000000	000000
9091804380	9-0918	0438	SNAP;RING	000000	000000
9091804400	9-0918	0440	RING;SNAP BALL BRG	000000	000000
9091805180			SNAP RING	000000	000000
9091805360	9-0918	0536	SNAP RINGS	000023	000000
9091805400	9-0918	0540	RING,SNAP	000000	000000
9091805470	9-0918	0547	RING;SNAP BRG	000000	000000
9091805520	9-0918	0552	RING RETAINER	000000	000000
9091805620	9-0918	0562	RING SNAP	000000	000000
9091805720	9-0918	0572	RING;SNAP E120	000000	000000
9091805900	9-0918	0590	SNAP RING;BRG	000000	000025
9091850030	9-0918	5003	SNAP RING	000000	000000
9091850060	9-0918	5006	RING;SNAP	000000	000000
9091850080	9-0918	5008	RING;SNAP,E-TYPE,PINION	000000	000000
9091850150	9-0918	5015	RING;SNAP	000000	000000
9091854030	9-0918	5403	SNAP RING	000006	000000
9091854040	9-0918	5404	SWNG/RETAINER;SNAP	000005	000000
9091854060	9-0918	5406	RING/RETAINER;SNAP,LOCK	000000	000000
9091854070	9-0918	5407	SNAP RING;SHAFT	000000	000000
9091854080	9-0918	5408	RING;SNAP	000000	000000

9091854120	9-0918	5412	RING; SNAP, CAB	000000	000000
9091854150	9-0918	5415	RING, SNAP, FLEX	000000	000000
9092003100	9-0920	0310	PLUG; SCREW, BLOCK ENG. F	000000	000000
9092010480	9-0920	1048	PLUG; KNUCKLE	000000	000000
9092010560	9-0920	1056	PLUG, PLATE	000000	000000
9092013120	9-0920	1312	PLUG; PLATE, OIL GALLERY	000000	000000
9092013140	9-0920	1314	PLUG, PLATE	000000	000000
9092013160	9-0920	1316	PLUG; PLATE	000000	000001
9092013180	9-0920	1318	PLUG, PLATE, OIL	000218	000126
9092013200	9-0920	1320	PLUG	000000	000000
9092013220	9-0920	1322	PLUG; DUST COVER	000000	000000
9092013240	9-0920	1324	SEALING CUP	000070	000090
9092013280	9-0920	1328	PLUG; PLATE	000030	000000
9092013300	9-0920	1330	PLUG	000016	000000
9092013360	9-0920	1336	SEALING CUP	000024	000000
9092013400			SEALING CUP	000000	000000
9092013450			PLUG; PLATE	000027	000000
9092013480	9-0920	1348	PLUG; KNUCKLE	000000	000165
9092013520			PLUG	000000	000000
9092013560			PLUG	000000	000017
9092013600	9-0920	1360	SEALING CUP	000001	000026
9092013710	9-0920	1371	PLUG; PLATE	000007	000000
9092013750	9-0920	1375	PLUG; PLATE, CRANK CASE	000005	000000
9092020080	9-0920	2008	PLUG; SCREW, FUEL TRAIN C	000000	000000
9092020100	9-0920	2010	PLUG; CYL HEAD TOP	000000	000000
9092023080	9-0920	2308	PLUG; SCREW, FUEL TRAIN C	000001	000065
9092023100	9-0920	2310	PLUG; CYL HD TOP	000000	000022
9092023140	9-0920	2314	PLUG; SCREW	000000	000000
9092023160	9-0920	2316	PLUG; OIL HEATER 3KC/6BG/	000000	000000
9092023220	9-0920	2322	PLUG; SCREW	000000	000000
9092044210	9-0920	4421	PLUG: COVER	000000	000000
9092045100	9-0920	4510	OIL COOLER PLUG;	000000	000004
9092045130	9-0920	4513	PLUG; AIR TANK	000000	000000
9092045170	9-0920	4517	PLUG; SWITCH	000000	000237
9092045210	9-0920	4521	PLUG; AIR TANK	000000	000000
9092045260	9-0920	4526	PLUG; AIR TANK	000000	000000
9092053210	9-0920	5321	PLUG, SCREW	000000	000000
9092054100	9-0920	5410	PLUG; CRANK CASE	000000	000000
9092054210	9-0920	5421	PLUG; SCREW	000001	000006
9092054330	9-0920	5433	PLUG; SCREW	000000	000000
9092055130	9-0920	5513	PLUG; SCREW	000000	000002
9092055170	9-0920	5517	PLUG; INL. MANIF	000000	000000
9092055210	9-0920	5521	PLUG; SCREW	000000	000000
9092055260	9-0920	5526	PLUG	000000	000000
9092205050	9-0922	0505	NIPPLE; OIL PRESSURE C240	000000	000000
9092206050	9-0922	0605	NIPPLE; OIL PRESSURE C240	000001	000000
9092206080	9-0922	0608	NIPPLE; OIL GALLERY E120	000000	000000

9092218060	9-0922	1806	CONNECTOR;	000001	000000
9092218061	9-0922	1806	CONNECTOR;	000000	000000
9092318100	9-0923	1810	CONNECTOR; TURB	000000	000000
9092318101	9-0923	1810	CONNECTOR; TURB	000000	000000
9092331121	9-0923	3112	UNION; CHARGE PIPE	000000	000000
9092333121	9-0923	3312	UNION; CHARGE PIPE	000000	000000
9093100100	9-0931	0010	NIPPLE; GREASE	000000	000000
9093106200	9-0931	0620	BOLT; THROUGH, GEN	000015	000000
9093946140	9-0939	4614	SCREW; RELAY	000000	000000
9094108480	9-0941	0848	STUD; INLET MANIFOLD	000000	000000
9095124060	9-0951	2406	JOINT	000000	000000
9095208340	9-0952	0834	CLIP*	000000	000000
9095208350	9-0952	0835	CLIP; OIL PIPE	000004	000000
9095210350	9-0952	1035	CLIP*	000000	000000
9095215350	9-0952	1535	CLIP; HARNESS	000000	000000
9095225120	9-0952	2512	CLIP; OIL PIPE, P.T.O.	000000	000000
9095245120	9-0952	4512	CLIP; OIL PIPE, P.T.O.	000000	000000
9095245350	9-0952	4535	CLIP; BOOST PIPE FIX.	000000	000000
9095245420	9-0952	4542	CLIP*	000000	000000
9095245550	9-0952	4555	CLIP; LEAK OFF P	000000	000028
9095246220	9-0952	4622	CLIP; VAC PIPE	000000	000118
9095246250	9-0952	4625	CLIP; PIPE FIX BLOCK-COM	000000	000042
9095246320	9-0952	4632	CLIP; OIL PIPE	000000	000000
9095246420	9-0952	4642	CLIP; ACCEL. CA	000001	000010
9095246520	9-0952	4652	CLIP; ENG. STOP	000002	000000
9095246750	9-0952	4675	CLIP; AIR PIPE	000005	000000
9095246850	9-0952	4685	AEOP PART (16)	000013	000000
9095246860	9-0952	4686	AEOP PART (16)	000000	000000
9095248350	9-0952	4835	CLIP; 1ST C/MBR	000000	000093
9095248550	9-0952	4855	CLIP;	000000	000000
9095250250	9-0952	5025	CLIP; FLEX SHAFT	000000	000000
9095250320	9-0952	5032	CLIP, FUEL PIPE	000000	000049
9095250350	9-0952	5035	CLIP; THROTTLE CABLE	000000	000000
9095250450	9-0952	5045	CLIP; OIL PIPE	000000	000003
9095250520	9-0952	5052	CLIP	000015	000000
9095250550	9-0952	5055	CLP; A/TRNS SIDE	000000	000069
9095250650	9-0952	5065	CLIP; FLEX SHAFT	000000	000004
9095250750	9-0952	5075	CLIP; FLEX SHAFT	000000	000000
9095252350	9-0952	5235	CLIP; CABLE FIX	000000	000000
9095252360	9-0952	5236	CLIP; CONT. CABLE	000000	000024
9095252560			CLIP; FRT CABLE	000000	000000
9095252760	9-0952	5276	HOSE CLIP	000000	000027
9095255350	9-0952	5535	CLIP; PIPE FIX.	000000	000029
9095255360	9-0952	5536	CLIP; FLEX HOSE	000000	000024
9095255560	9-0952	5556	CLIP; FLEX	000000	000013
9095255860	9-0952	5586	CLIP; CABLE TO FRAME	000000	000005
9095258320	9-0952	5832	CLIP	000000	000000

9095258350	9-0952	5835	CLIP;FRT.CABLE	000000	000000
9095258360	9-0952	5836	CLIP; HARNESS	000000	000004
9095258550	9-0952	5855	CLIP;FRAME HARN	000000	000121
9095258560	9-0952	5856	CLIP;	000051	000000
9095258660	9-0952	5866	CLIP; HARNESS	000000	000000
9095258760	9-0952	5876	CLIP;HARNESS,PWR TILT	000000	000049
9095258860	9-0952	5886	CLIP;PARKING BRK CABLE	000000	000001
9095270060	9-0952	7006	CLIP;FUEL CUT	000000	000000
9095270140	9-0952	7014	GASKET;EYE JOINT	000000	000000
9095451060	9-0954	5106	CLIP; VAC PIPE	000000	000000
9095522170	9-0955	2217	RING; SNAP, CENTER BOLT	000000	000000
9095611100	9-0956	1110	O-RING,OIL FILL	000025	000048
9095611110	9-0956	1111	O-RING; OIL PUM	000445	002639
9095611120	9-0956	1112	PACKING;O-RING	000000	000000
9095611130	9-0956	1113	O-RING; OIL PUM	000000	000000
9095611140	9-0956	1114	PACKING;	000009	000000
9095612120	9-0956	1212	PACKING; O-RING	000000	000000
9095612140	9-0956	1214	PACKING,O-RING,	000000	000000
9095612160	9-0956	1216	GASKET;OIL FILLER TUBE	000000	000027
9095612180	9-0956	1218	O-RING; SHIFT L	000015	000006
9095612190	9-0956	1219	PACKING; O-RING	000017	000000
9095612200	9-0956	1220	GASKET;OUTLET PIPE	000000	000000
9095612210	9-0956	1221	O-RING / GASKET; VLV	000000	000000
9095612220	9-0956	1222	GASKET	000000	000082
9095612230	9-0956	1223	GSKT;O-RING,OIL	000000	000012
9095612250	9-0956	1225	GASKET; WATER PIPE	000487	000459
9095612260	9-0956	1226	O-RING	000003	000000
9095612300	9-0956	1230	O-RING; KNUCKLE	000023	000013
9095612310			GASKET; FUEL PUMP	000000	000000
9095612350	9-0956	1235	PACKING,O-RING,	000000	000000
9095612370	9-0956	1237	O-RING	000000	000011
9095612420			GASKET; AIR BREATHE	000000	000142
9095612500	9-0956	1250	O-RING,RETAINER	000000	000000
9095612530	9-0956	1253	O-RING	000051	000000
9095612600	9-0956	1260	PACKING,O-RING,	000000	000000
9095613180	9-0956	1318	O-RING; OIL PIPE	000003	000129
9095613220	9-0956	1322	GSKT;OIL TANK,P/S	000000	000000
9095613260	9-0956	1326	GASKET;O-RING,SHAFT	000000	000005
9095613280	9-0956	1328	O-RING 6BD1	000052	000000
9095613350	9-0956	1335	O-RING	000087	000202
9095613390	9-0956	1339	GASKET;O-RING,AIR BREATHR	000000	000000
9095613400	9-0956	1340	GASKET; BUSHING	000001	000000
9095613500	9-0956	1350	GASKET; OIL FILTER	000000	000000
9095613530	9-0956	1353	PACKING,O-RING,	000009	000049
9095613630	9-0956	1363	PACKING; O-RING	000000	000077
9095613670	9-0956	1367	PACKING;O-RING	000000	000000
9095613710	9-0956	1371	GASKET; IDLE SHAFT	000001	000000

9095613850	9-0956	1385	GASKET; AIR DUC	000000	000016
9095613900	9-0956	1390	PACKING; O-RING COVER CAS	001230	000000
9095613950	9-0956	1395	PACKING;O-RING COVER-CASE	000000	000000
9095614000	9-0956	1400	GASKET; FLANGE	000000	000001
9095614060	9-0956	1406	PACKING; BREATHER	000000	000000
9095614180	9-0956	1418	PACKING; O-RING BRACKET C	000000	000000
9095621020	9-0956	2102	O-RING 6BG1	000000	000000
9095621060	9-0956	2106	O-RING; DRAIN PLUG, FUEL	000082	000045
9095621200	9-0956	2120	O-RING; COVER	000000	000023
9095622150	9-0956	2215	GSKT;BYPASS VLV	000000	000000
9095632150	9-0956	3215	GASKET; DUST COVER	000009	000103
9095633340	9-0956	3334	PACKING,O-RING	000000	000016
9095651070	9-0956	5107	O-RING;SHAFT	000000	000000
9095651140	9-0956	5114	GASKET; BUSH	000000	000001
9095651160	9-0956	5116	GASKET; BUSH	000000	000003
9095652120	9-0956	5212	GASKET; O-RING,OIL	000138	000080
9095652130	9-0956	5213	PACKING; O-RING; OIL	000014	000000
9095652200	9-0956	5220	GASKET	000000	000000
9095652210	9-0956	5221	PACKING,O-RING,	000000	000000
9095652230	9-0956	5223	PACKING; O-RING	000058	000055
9095652250	9-0956	5225	O-RING	000005	000000
9095652280	9-0956	5228	GASKET; RELIEF	000074	000425
9095652530	9-0956	5253	ORING;PIPE	000000	000000
9095652710	9-0956	5271	GASKET; WATER DUC	000000	000003
9095653310	9-0956	5331	GASKET; OIL PIP	000000	000000
9095653350	9-0956	5335	GASKET	000000	000000
9095653440	9-0956	5344	PACKING,O-RING	000000	000000
9095653480	9-0956	5348	O-RING	000000	000045
9095653600	9-0956	5360	GASKET	000000	000000
9095661100	9-0956	6110	GASKET; O-RING	000000	000000
9095661110	9-0956	6111	GASKET; NOZZLE NIPPLE	032574	030937
9095661160	9-0956	6116	GASKET; C/BL TO C	000005	000003
9095662210	9-0956	6221	GASKET; VLV	000032	000003
9095662260	9-0956	6226	GASKET OIL COOLER TO C/B	000165	000000
9095662280	9-0956	6228	GASKET; OIL PIPE,C/BL	000579	002006
9095662710	9-0956	6271	GASKET; COVER, IDLE GEAR	000000	000034
9095672180	9-0956	7218	GASKET; PLUG	000000	000064
9095672300	9-0956	7230	GASKET; SENSOR	000023	000047
9095711060	9-0957	1106	PACKING,NIPPLE	000001	000000
9095711080	9-0957	1108	O-RING; DRAIN PLUG, FUEL	000000	000000
9095711160	9-0957	1116	GASKET;NIPPLE	000000	000000
9095711180	9-0957	1118	GSKT;DRAIN COCK	000000	000000
9095713080	9-0957	1308	GASKET; PLUG, CON 3KC1	000000	000031
9095713160	9-0957	1316	PACKING; PLUG	000038	000000
9095714060	9-0957	1406	GASKET,PLUG	000177	000000
9095714080	9-0957	1408	GASKET; AXLE CASE	001074	001102
9095714100	9-0957	1410	GASKET; CONNECTOR	001828	003618

9095714120	9-0957	1412	PACKING, JOINT B	001623	004423
909571414D			GASKET; DRAIN PLUG	000000	000000
9095714140	9-0957	1414	GASKET; DRAIN PLUG	000530	000495
9095714160	9-0957	1416	GASKET; EYE BOLT, FLEX HOSE	000073	000000
9095714180	9-0957	1418	GASKET; FLEX HOSE	000000	000000
9095714200	9-0957	1420	GASKET, OIL FILL	000000	000163
9095714220	9-0957	1422	PACKING; THERMOSTAT	000117	000000
9095714240	9-0957	1424	GSKT; AIR PIPE	000005	000095
9095714300	9-0957	1430	GASKET; DROP RES	000000	000000
9095714360	9-0957	1436	PACKING; OIL PAN DRAIN	000007	000013
9095715120	9-0957	1512	GASKET	000000	000000
9095715160	9-0957	1516	PACKING	000014	000014
9095715180	9-0957	1518	GSKT; DRAIN COCK	000000	000013
9095716100	9-0957	1610	PACKING; DAMPER	000000	000000
9095716120	9-0957	1612	GSKT; LOCK BALL	000000	000037
9095716140	9-0957	1614	GASK; VAC/PUMP	000000	000063
9095716160	9-0957	1616	GASKET; NIPPLE	000102	000000
9095716200	9-0957	1620	GSKT; VLV, O/COOL	000000	000032
9095716300	9-0957	1630	GASKET; DROP RES	000139	000209
9095720080	9-0957	2008	GASKET, OIL PIPE	000357	000073
9095720100	9-0957	2010	GASKET, JOINT BO	000043	001940
9095720120	9-0957	2012	PACKING	000051	000061
909572014F			PACKING/GASKET; EYE JOINT	000000	000000
9095720140	9-0957	2014	PACKING/GASKET; EYE JOINT	010632	008986
9095720160	9-0957	2016	PACKING; OUTLET PIPE	000024	000000
9095720180	9-0957	2018	GASKET; OIL COOL	000022	000000
9095720200	9-0957	2020	PACKING	000000	000026
9095720240	9-0957	2024	WASHERS	000010	000000
9095725100	9-0957	2510	GASKET; AIR PIPE/GOV	000003	000060
9095730450	9-0957	3045	RING; *DISCONTINUED*	000000	000000
9095730500			PACKING	000000	000000
9095730600			FELT RING	000000	000000
9095730700			PACKING	000000	000000
9095752080	9-0957	5208	GROMMET; HEADLAMP CLEANER	000000	000091
9095754200	9-0957	5420	GROMMET; ADJ. PUL	000000	000000
9095757970	9-0957	5797	CVR; CONVERTER	000000	000015
9095757990	9-0957	5799	GROMMET HOUSING	000001	000000
9095763950			RETAINER; I/P	000000	000000
9095920140	9-0959	2014	GASKET; EYE BOLT, INJ. PMP	000000	000000
9095921080	9-0959	2108	WRENCH; OPEN END (10X8)	000000	000000
9095921120	9-0959	2112	WRENCH; 14X12	000000	000002
9095921240	9-0959	2124	WRENCH; (24X27)	000000	000000
9095955220	9-0959	5522	DRIVER; SCREW	000000	000000
9095955230	9-0959	5523	DRIVER; SCREW (+) L=275	000000	000000
9095957250	9-0959	5725	DRIVER; SCREW (-) L=173	000000	000000
9095957270	9-0959	5727	DRIVER; SCREW (-) L=245	000000	000000
9095957990	9-0959	5799	GROMMET; HSG	000000	000000

9096000230	9-0960	0023	BOLT	000000	000000
9096000231	9-0960	0023	BOLT*	000000	000000
9096000820	9-0960	0082	BOLT; OIL PAN FIX	000037	000000
9096000940	9-0960	0094	BOLT*	000000	000000
9096001030	9-0960	0103	BOLT; OIL COOLER	000000	000000
9096001060	9-0960	0106	BOLT 2KC1	000000	000019
9096001130	9-0960	0113	BOLT; ADAPTER TO	000000	000000
9096020020	9-0960	2002	BOLT; HSG.-CR/CASE,M12X45	000000	000000
9096020700	9-0960	2070	BOLT; HEX HD CRANK CASE	000001	000000
9096020710	9-0960	2071	BOLT; CLIP FIX DRAIN	000000	000000
9096020800	9-0960	2080	BOLT;CVR TO CYL	000000	000000
9096020820	9-0960	2082	BOLT; INJ. PIPE	000000	000084
9096021000	9-0960	2100	BOLT	000000	000000
9096021180	9-0960	2118	BOLT;HSG	000000	000000
9096021480	9-0960	2148	BOLT; FRONT BRACKET	000000	000044
9096021521			BOLT; FRT. BODY	000000	000000
9096040030	9-0960	4003	BOLT; FRT COVER/QUAD BOX	000000	000000
9096040070	9-0960	4007	PLUG;SCREW	000023	000000
9096050050	9-0960	5005	PLUG; INLET PIPE	000000	000000
9096065350	9-0960	6535	BOLT; HEX HD MF REAMER	000000	000020
9096080010	9-0960	8001	BOLT; HANGER	000000	000000
9096120210	9-0961	2021	PLUG; DRAIN,SEDIMENTER	000000	000007
9096200341	9-0962	0034	STUD; INLET MANIFOLD	000000	000000
9096220120	9-0962	2012	PLUG; OIL,DRAIN	000000	000000
9096300140	9-0963	0014	STUD; INL MANIF	000000	000000
9096300200	9-0963	0020	STUD; INL PIPE	000000	000000
9096300220	9-0963	0022	STUD: EXH MANIFOLD	000000	000000
9096300260	9-0963	0026	STUD; EXH MANIFOLD	000188	000160
9096300340	9-0963	0034	STUD; INLET MANIFOLD	000000	000000
9096300341	9-0963	0034	STUD;CRANKCASE/OIL PAN	000014	000000
9096310040	9-0963	1004	STUD*	000000	000000
9096400140	9-0964	0014	NUT;EXH. PIPE	000094	000266
9096400190	9-0964	0019	NUT	000000	000000
9096440010	9-0964	4001	PLUG; PT 1/4 WATER DRAIN	000000	000000
9096440050	9-0964	4005	END;PUSH ROD	000000	000000
9096510680	9-0965	1068	WASHER;PRE FILT	000000	000012
9096510690	9-0965	1069	WASHER; HOUSING,BOLT	000000	000000
9096510720	9-0965	1072	TUBE; DIST,FAN GUIDE	000000	000005
9096510980	9-0965	1098	WASHER PL	000000	000000
9096511110	9-0965	1111	WASHER	000000	000000
9096511120	9-0965	1112	WASHER;PL. BRAC	000000	000000
9096511160	9-0965	1116	WASHER;PL.CAGE/BALL JOINT	000000	000018
9096511330	9-0965	1133	SHIM T=0.30	000000	000069
9096511340	9-0965	1134	SHIM;CASE-HSG. T=0.35	000000	000010
9096511350	9-0965	1135	SHIM;CASE-HSG. T=0.40	000000	000020
9096511360	9-0965	1136	SHIM;CASE-HSG. T=0.45	000033	000000
9096511370	9-0965	1137	SHIM;CASE-HSG. T=0.50	000000	000020

9096511380	9-0965	1138	SHIM;CASE-HSG. T=0.55	000000	000142
9096511390	9-0965	1139	SHIM;CASE-HSG. T=0.60	000000	000000
9096511400	9-0965	1140	SHIM;CASE-HSG. T=0.65	000000	000000
9096511410	9-0965	1141	SHIM;CASE-HSG. T=0.70	000000	000000
9096511420	9-0965	1142	SHIM;CASE-HSG. T=0.75	000000	000000
9096511430	9-0965	1143	SHIM;CASE-HSG. T=0.80	000000	000000
9096511440	9-0965	1144	SHIM;CASE-HSG. T=0.85	000091	000000
9096511450	9-0965	1145	WASHER; PL. CLU	000000	000000
9096511451	9-0965	1145	WASHER; PL., CL	000000	000000
9096550440	9-0965	5044	SPRING, BEVEL	000000	000000
9096600340	9-0966	0034	PLATE; PLUG, CYL HEAD	000009	000368
9096605070	9-0966	0507	PLUG; SEAL	000000	000000
9096605700	9-0966	0570	PLUG; SEAL	000000	000000
9096610050	9-0966	1005	PLUG, SCREW,	000002	000009
9096620040	9-0966	2004	PLUG; TRANS CASE/OIL DRAIN	000000	000000
9096620050	9-0966	2005	PLUG; OIL FILLER, AXLE CASE	000003	000007
9096620070	9-0966	2007	BOLT, 4BB1	000009	000000
9096620120	9-0966	2012	PLUG; OIL, DRAIN	000082	000185
9096620340	9-0966	2034	PLUG; HEATER	000002	000009
9096630010	9-0966	3001	PLUG; AIR TANK	000000	000013
9096630030	9-0966	3003	PLUG; OIL GALLER	000000	000000
9096640010	9-0966	4001	PLUG; PT 1/4, WATER DRAIN	000000	000627
9096640020	9-0966	4002	PLUG; FLYWHEEL	000000	000000
9096640050	9-0966	4005	PLUG; 3/4 HTR	000000	000000
9096640060	9-0966	4006	PLUG; TAPER	000000	000000
9096640340	9-0966	4034	PLUG, TAPER CYL	000096	000000
9096640350	9-0966	4035	PLUG; OIL GALLERY	000000	000000
9096680051	9-0966	8005	KEY**	000000	000000
9096785100	9-0967	8510	PIN; SPRING LVR. (D=5.4)	000001	000000
9096785150	9-0967	8515	PIN; SPR, SHIFT A	000000	000000
9096785490	9-0967	8549	PIN; SPR., LEVER	000000	000002
9097020150	9-0970	2015	NIPPLE; PRESSURE METER	000000	000000
9097020260	9-0970	2026	ADAPT; GREASE NI	000000	000004
9097021070	9-0970	2107	NIPPLE; WATER DRAIN	000000	000000
9097030090	9-0970	3009	UNION	000000	000000
9097030380	9-0970	3038	JOINT; PIPE	000000	000000
9097040313	9-0970	4031	CLIP; AIR BREATHER HOSE	000000	000000
9097040380	9-0970	4038	NIPPLE	000000	000000
9097060301	9-0970	6030	BOLT, JOINT, AIR	000000	000000
9097060370	9-0970	6037	EYE BOLT; OIL FEED, INJ PMP	000000	000019
9097121140			HOSE	000000	000000
9097121190	9-0971	2119	HOSE; RUBBER FUEL L515	000000	000000
9097121320	9-0971	2132	HOSE L=550	000000	000000
9097123180	9-0971	2318	SUPERSEDED**HOSE	000000	000000
9097124220	9-0971	2422	HOSE; RUBBER	000000	000000
9097124250	9-0971	2425	HOSE; RUBBER, FUEL PIPE	000000	000000
9097124740	9-0971	2474	HOSE; LOWER RADIATOR	000002	000000

9097125350	9-0971	2535	HOSE;RUBBER PUMP OUT	000000	000001
9097127040	9-0971	2704	HOSE; RUBBER	000000	000000
9097130310	9-0971	3031	H O S E	000000	000000
9097130570	9-0971	3057	SUPERSEDED**PIPE	000000	000000
9097130740	9-0971	3074	HOSE;BREATHER	000000	000000
9097130870	9-0971	3087	PIPE; VINYL C240 (L=240)	000000	000000
9097130880	9-0971	3088	PIPE; VINYL	000000	000000
9097150130	9-0971	5013	CLIP	000000	000000
9097150531	9-0971	5053	CLIP; RUBBER HOSE	000000	000018
9097150670	9-0971	5067	CLIP; BAND, DRAIN PIPE 6B	000014	000000
9097150800	9-0971	5080	CLIP,VACUUM PIP	000000	000000
9097150980	9-0971	5098	CLIP,BREATHER H	000000	000024
9097151021	9-0971	5102	CLIP;HOSE	000000	000025
9097151060	9-0971	5106	CLIP,RUBBER HOSE	000000	000000
9097160470			CLIP; SELECT	000000	000000
9097160590	9-0971	6059	CLIP,SPEEDOMETE	000000	000008
9097160700	9-0971	6070	CLIP,WIRE,RUBBE	000000	000015
9097161140	9-0971	6114	CLIP;FUEL PIPE	000000	000044
9097161240	9-0971	6124	CLIP;FUEL PIPE	000000	000009
9097161810	9-0971	6181	CLIP; FUEL PIPE	000000	000000
9097162010	9-0971	6201	CLIP; HOSE	000010	000000
9097162180	9-0971	6218	CLIP*	000000	000000
9097162260			CLIP; CABLE	000000	000000
9097162270			CLIP; CABLE	000000	000000
9097162450			CLIP; WATER HOS	000000	000002
9097162620	9-0971	6262	STAY; CLIP, P.T.O. OIL PI	000000	000000
9097205110	9-0972	0511	GSKT;O RING	000000	000000
9097205190	9-0972	0519	GASKET;BRG CAU	000000	000000
9097205290	9-0972	0529	WASHER;SEAL	000000	000000
9097205340	9-0972	0534	GASKET; OIL COOLER	000000	000000
9097205410	9-0972	0541	GSKT;PRE FILTER	000000	000079
9097205420	9-0972	0542	GSKT;PRE FILTER	000000	000000
9097205480	9-0972	0548	GASKET; OIL PIPE	000000	000000
9097205550	9-0972	0555	PACKING,PLUG OI	000000	000017
9097205570	9-0972	0557	PACKING,DRAIN PLUG RAD	000065	000000
9097205590	9-0972	0559	GASKET OIL TAN	000000	000000
9097205600	9-0972	0560	GASKET;PLUG	000000	000000
9097205660	9-0972	0566	O-RING	000000	000000
9097205690	9-0972	0569	PACKING;O-RING	000000	000000
9097206670	9-0972	0667	O-RING	000000	000000
9097207970	9-0972	0797	PACKING	000000	000000
9097240030	9-0972	4003	SEAL,OIL,PINION	000057	000000
9097240040	9-0972	4004	SEAL,OIL,REAR C	000000	000000
9097240070	9-0972	4007	SEAL; OIL	000000	000000
9097240230			OIL RETAINER;	000000	000000
9097240240			SEAL	000000	000000
9097240320	9-0972	4032	OIL SEAL	000000	000000

9097240330			SEAL	000000	000000
9097245450			O-RING	000000	000000
9097400370	9-0974	0037	SPRING	000000	000000
9097400440			SPRINGS	000000	000000
9097401070			SPRING	000000	000000
9097401140	9-0974	0114	SPRING; INTER, LOCK BALL	000000	000003
9097401670	9-0974	0167	SPRING	000000	000000
9097420520	9-0974	2052	SPRING	000000	000000
9097420630	9-0974	2063	SPRING	000000	000000
9097421090	9-0974	2109	SPR; PRE FILTER	000000	000066
9097471090	9-0974	7109	SPRING; ELEMENT SET 6BG1	000000	000000
9097505100	9-0975	0510	WASHER; SPR.	000000	000000
9097560070	9-0975	6007	GROMMET, D=25	000000	000000
9097563020	9-0975	6302	CAP**	000000	000000
9098000380	9-0980	0038	BEARING; INJ PUMP	000000	000000
9098000600	9-0980	0060	BEARING; BALL, REAR	000000	000000
9098006840	9-0980	0684	BOLT, CYL. BODY	000000	000000
9098007281	9-0980	0728	BOLT; O/FILTER FIX., L=14	000000	000000
9098008790	9-0980	0879	BOLT; CLIP, PLUG	000000	000000
9098009270	9-0980	0927	BOLT; OIL FILTER	000000	000000
9098009280	9-0980	0928	BOLT; OIL FILTER	000000	000000
9098009281	9-0980	0928	BOLT; OIL FILTER	000000	000016
9098009290	9-0980	0929	BOLT; COVER FIX	000000	000000
9098009880	9-0980	0988	BOLT; OIL	000000	000000
9098009970	9-0980	0997	BOLT; SEM, CRANK CASE, L=60	000000	000000
9098010341	9-0980	1034	BOLT 2KCI	000000	000000
9098010350	9-0980	1035	BOLT; OIL FILTER	000000	000000
9098010400	9-0980	1040	BOLT; OIL FILTER FIXING	000000	000000
9098010740	9-0980	1074	BOLT; HEX HD MF	000000	000000
9098010741	9-0980	1074	BOLT; HEX HD MF	000000	000000
9098010790	9-0980	1079	BOLT, SEMS, FRONT	000000	000000
9098010791	9-0980	1079	BOLT, SEMS, FRONT	000009	000000
9098011000	9-0980	1100	BOLT*	000000	000000
9098011030	9-0980	1103	BOLT; DAMPER FIX	000000	000000
9098012010	9-0980	1201	BOLT; INLET MAIFOLD	000000	000000
9098012011	9-0980	1201	BOLT; INLET MANIFOLD	000000	000000
9098012020	9-0980	1202	BOLT, CARRIER TO	000000	000000
9098012021	9-0980	1202	BOLT, CARRIER TO	000005	000000
9098012030	9-0980	1203	BOLT; GENERATOR	000000	000010
9098012041	9-0980	1204	BOLT; GENERATOR	000004	000025
9098012110	9-0980	1211	BOLT; GENERATOR	000000	000000
9098012111	9-0980	1211	BOLT; GENERATOR	000004	000003
9098012520	9-0980	1252	BOLT E120	000000	000000
9098012521	9-0980	1252	BOLT* E120	000000	000000
9098012710	9-0980	1271	BOLT; OIL PAN	000032	000005
9098012730	9-0980	1273	BOLT; INLET COVER E120	000004	000064
9098012740	9-0980	1274	BOLT; INLET COVER FIX	000021	000015

9098012750	9-0980	1275	BOLT,STABILIZER	000038	000000
9098012760	9-0980	1276	BOLT; INLET COVER FIX	000000	000000
9098012850	9-0980	1285	BOLT;	000000	000000
9098012851	9-0980	1285	BOLT;	000000	000000
9098013250	9-0980	1325	BOLT; OIL FILTER	000000	000000
9098013340	9-0980	1334	BOLT;FLYWHEEL	000000	000000
9098013460	9-0980	1346	BOLT; THERMOSTAT HSG-CYL	000000	000000
9098013470	9-0980	1347	BOLT; OIL FILTER	000000	000000
9098013471	9-0980	1347	BOLT; OIL FILTER	000000	000000
9098025140	9-0980	2514	BOLT,CYL HEAD F	000000	000000
9098025141	9-0980	2514	BOLT,CYL HEAD F	000000	000000
9098025390	9-0980	2539	BOLT; PIPE,CLIP	000000	000000
9098025540	9-0980	2554	BOLT; BRG. CAP INTER FIX.	000000	000000
9098025780	9-0980	2578	BOLT;FRT AXLE	000000	000000
9098025910	9-0980	2591	BOLT; BRG CAP FIX	000000	000022
9098025950	9-0980	2595	BOLT; PULLEY C240	000000	000000
9098026060	9-0980	2606	BOLT; CRANKSHAFT PULLEY	000004	000003
9098026180			BOLT;ENG.CONT.L	000000	000019
9098026300	9-0980	2630	BOLT,BRG.CAP,CY	000000	000000
9098026301	9-0980	2630	BOLT,BRG.CAP,CY	000000	000000
9098026570	9-0980	2657	BOLT 6RB1	000008	000000
9098026680	9-0980	2668	BOLT;CRANK CASE FIX.L=102	000000	000000
9098027080	9-0980	2708	BOLT;STRAP	000006	000000
9098041000	9-0980	4100	BOLT; FRT COVER/QUAD BOX	000000	000000
9098041430	9-0980	4143	BOLT	000000	000000
9098041431	9-0980	4143	B O L T	000000	000000
9098041460	9-0980	4146	BOLTS	000000	000000
9098041461	9-0980	4146	B O L T	000014	000007
9098041620	9-0980	4162	BOLT; COMPRESSOR FIX.	000000	000000
9098041721	9-0980	4172	BOLT; FLANGE	000000	000050
9098041730	9-0980	4173	BOLTS	000000	000000
9098041800	9-0980	4180	BOLT; OIL PAN L=140	000000	000000
9098041931	9-0980	4193	BOLT; INJ PUMP BRKT	000000	000000
9098041940	9-0980	4194	BOLT; HOUSING FIX.	000000	000000
9098041950	9-0980	4195	BOLT;AIR COMPRE	000000	000000
9098041951	9-0980	4195	BOLT;AIR COMPRE	000000	000000
9098042000	9-0980	4200	BOLT; WATER PUMP	000000	000000
9098042001	9-0980	4200	BOLT; WATER PUMP	000000	000000
9098042030	9-0980	4203	BOLT;A/C	000000	000000
9098042031	9-0980	4203	BOLT;A/C	000000	000004
9098042060	9-0980	4206	BOLT; ADAPTER, (M10 X 32)	000000	000006
9098042070	9-0980	4207	BOLT; HD COVER	000000	000000
9098042170	9-0980	4217	BOLT; CRANK BRG CAP	000005	000000
9098042180	9-0980	4218	BOLT; CRANK BRG CAP	000000	000002
9098042340	9-0980	4234	BOLT; HSG	000000	000000
9098042350	9-0980	4235	BOLT;HEAD COVER FIX	000001	000000
9098042391	9-0980	4239	BOLT;HUB TO AXLE SHAFT	000000	000198

9098050120	9-0980	5012	BOLT; PRESSURE PLATE	000000	000000
9098050600	9-0980	5060	BOLT*	000000	000185
9098050810	9-0980	5081	BOLT; SPINDLE	000000	000000
9098050811	9-0980	5081	BOLT; SPINDLE	000000	000000
9098060200	9-0980	6020	BOLT, REAMER, TRA	000000	000000
9098085250			BOLTS	000000	000000
9098085730			BOLT; BREATHER	000024	000000
9098090620	9-0980	9062	BOLT; HEX SOCKET L=80	000000	000000
9098090780	9-0980	9078	PLUG; DRAIN	000000	000000
9098090940	9-0980	9094	BOLT; COUPLING-INJ. PUMP	000000	000001
9098090950	9-0980	9095	BOLT; BALANCER FIX.	000000	000005
9098090970	9-0980	9097	PLUG; WATER DRAIN	000000	000000
9098090980	9-0980	9098	PLUG; WATER DRA	000020	000000
9098091190	9-0980	9119	BOLT; SOCKET	000000	000000
9098100380	9-0981	0038	SCREW	000000	000000
9098120210	9-0981	2021	BOLT; ENG. STOP	000000	000579
9098140141	9-0981	4014	SCREW; WATER	000000	000000
9098160071	9-0981	6007	SCREW SET; CAM BRG	000070	000000
9098160100	9-0981	6010	SCREW	000000	000000
9098160710	9-0981	6071	SCREW SET; CAP BRG #7	000005	000000
9098251450			BOLT*	000000	000000
9098251451	9-0982	5145	BOLT*	000000	000000
9098251460	9-0982	5146	BOLT*	000000	000000
9098251461	9-0982	5146	BOLT*	000000	000119
9098300430	9-0983	0043	STUD; EXHAUST PIPE	000000	000000
9098300770	9-0983	0077	STUD, BRACKET	000000	000000
9098300780	9-0983	0078	STUD; EXH. MANI. L1=72	000039	000000
9098300890	9-0983	0089	STUD; EXHAUST PIPE	000021	000000
9098300970	9-0983	0097	STUD; OIL PIPE	000029	000000
9098301500	9-0983	0150	STUD; INL MANIF	000000	000054
9098301630	9-0983	0163	STUD; INL MANIFOLD	000000	000064
9098301760	9-0983	0176	STUD; INTAKE DUCT FIX.	000000	000000
9098301770	9-0983	0177	STUD; EXH MANIFOLD	000000	000000
9098301780	9-0983	0178	STUD; EXH MANIFOLD	000000	000000
9098301790	9-0983	0179	STUD; EXH MANIFOLD	000000	000000
9098302120	9-0983	0212	STUD; MF HEAD COVER	000007	000000
9098302200	9-0983	0220	STUD; MANIF. (L=125)	000000	000000
9098310860	9-0983	1086	STUD	000000	000000
9098311010	9-0983	1101	STUD	000023	000000
9098311020	9-0983	1102	STUD*	000005	000000
9098311150	9-0983	1115	STUD; INTAKE DUCT FIX.	000000	000000
9098311210	9-0983	1121	STUD	000000	000000
9098311240	9-0983	1124	STUD; INLET MNF/EXH PIPE	000000	000000
9098311610	9-0983	1161	STUD; MF TIMING GEAR CASE	000001	000039
9098311640	9-0983	1164	STUD; EXHAUST MANIFOLD DA	000020	000000
9098311770	9-0983	1177	STUD	000000	000000
9098320040	9-0983	2004	STUD 6SA1T	000795	003076

9098320160	9-0983	2016	STUD; EXHAUST PIPE	000092	000000
9098330430	9-0983	3043	STUD; EXHAUST PIPE	000006	000237
9098330810	9-0983	3081	STUD,	000043	000000
9098330970	9-0983	3097	STUD; EXH. PIPE	000000	000076
9098350130	9-0983	5013	STUD; STARTER	000000	000000
9098400050	9-0984	0005	NUT**	000003	000000
9098400700	9-0984	0070	N U T	000000	000000
9098400850	9-0984	0085	NUT; EXHAUST FRT PIPE	000000	000016
9098401070	9-0984	0107	NUT; START,PULLEY	000000	000000
9098401071	9-0984	0107	NUT; START PULLEY	000000	000019
9098401080	9-0984	0108	NUT**	000000	000000
9098401580	9-0984	0158	NUT 6RB1/E120	000001	000005
9098401590	9-0984	0159	NUT;UNION	000000	000000
9098401900	9-0984	0190	NUT ,	000118	000000
9098402380	9-0984	0238	NUT,CONN.ROD	000000	000000
9098402521	9-0984	0252	NUT;NIPPLE-CHASSIS FIX.	000001	000000
9098402540	9-0984	0254	NUT; LK SUCTION	000005	000000
9098402570	9-0984	0257	NUT; PULLEY FIX	000000	000000
9098402580	9-0984	0258	NUT; PULLEY FIX. SPINDLE	000000	000000
9098402650			SEAL	000000	000000
9098402770	9-0984	0277	NUT;B/JOINT LH.	000000	000160
9098402830	9-0984	0283	NUT; PUMP GEAR	000000	000000
9098403070	9-0984	0307	NUT 6RB1/E120	000000	000000
9098403090	9-0984	0309	NUT; ADJ SCREW LOCK E120	000021	000000
9098403100	9-0984	0310	NUT; ADJ SCREW LOCK E120	000003	000027
9098403160	9-0984	0316	NUT; CONN ROD CAP FIX	000000	000049
9098403170			N U T	000000	000000
9098403200			NUT;EXH PIPE	000014	000000
9098403290	9-0984	0329	NUT	000015	000000
9098410660			NUT	000000	000000
9098410670			NUT	000000	000000
9098420070	9-0984	2007	NUT;TURBO STUD	000473	003107
9098420160	9-0984	2016	NUT;EXH.PIPE	000000	000074
9098430630	9-0984	3063	NUT;IDLE GEAR	000000	000000
9098430670	9-0984	3067	NUT; BALL BRG FIX	000000	000000
9098430690	9-0984	3069	NUT SHAFT POWER DRIVE	000000	000000
9098435300	9-0984	3530	NUT 6BD/BG1	000001	000000
9098435360	9-0984	3536	NUT DA640	000000	000000
9098437200	9-0984	3720	NUT;SHAFT,FLYWH	000000	000000
9098437212	9-0984	3721	NUT;BRG,RR HUB	000000	000006
9098437230	9-0984	3723	NUT;P.T.O.	000000	000000
9098440220	9-0984	4022	NUT;CAP,OIL PIPE,VAC PUMP	000000	000031
9098440730	9-0984	4073	NUT CAP CONNECTOR	000000	000000
9098441900	9-0984	4190	NUT,ROCKER SHAF	000000	000000
9098441950	9-0984	4195	NUT,SELF,LOCK,C	000000	000000
9098442040	9-0984	4204	NUT; WASHER FIX	000081	000005
9098442130	9-0984	4213	NUT DA640	000000	000000

9098442180	9-0984	4218	NUT; CAP	000000	000000
9098442210	9-0984	4221	NUT; ROTOR COVER FIX	000000	000000
9098442220	9-0984	4222	NUT; CAP, COVER FIX	000022	000000
9098442271	9-0984	4227	NUT; LK MAINSHAFT	000000	000000
9098445650	9-0984	4565	3UT; EXHAUST MANIFOLD FIX	000093	000128
9098445740	9-0984	4574	NUT,ADJUST SCRE	000130	000145
9098445750	9-0984	4575	NUT**	000002	000354
9098445760	9-0984	4576	NUT;CAP	000000	000000
9098446180	9-0984	4618	NUT; EXHAUST MANIFOLD	000000	000082
9098446190	9-0984	4619	NUT; CAP	000000	000000
9098446240	9-0984	4624	NUT	000002	000000
9098446310	9-0984	4631	NUT; SQUARE	000000	000000
9098446321	9-0984	4632	CAP; NUT 6RB1	000040	000000
9098446490	9-0984	4649	NUT; SPECIAL	000000	000000
9098446680	9-0984	4668	NUT,OIL FILTER	000000	000000
9098446880	9-0984	4688	NUT**	000000	000000
9098470120	9-0984	7012	SPIRE,PAD TO BO	000000	000000
9098471410			SPIRE,PLATE-PAD	000000	000000
9098500350			WASHER,LK.,PED.	000000	000000
9098500440	9-0985	0044	WSHR;LK,TMR.FLNGE.INJ PUM	000000	000000
9098510610	9-0985	1061	WASHER	000000	000000
9098512270	9-0985	1227	WASHER; PL.	000000	000000
9098513640	9-0985	1364	WASHER;PL,BLWR	000000	000000
9098513660	9-0985	1366	WASHER	000244	000000
9098514110	9-0985	1411	WASHER; ENG CONT	000000	000042
9098514230	9-0985	1423	WASHER;BRKT	000000	000000
9098514300	9-0985	1430	WASHER; ROCKER ARM SHAFT	000000	000000
9098514310	9-0985	1431	WASHER; PULLEY NUT	000000	000043
9098514570	9-0985	1457	WASHER	000000	000000
9098514730	9-0985	1473	WASHER	000076	000000
9098514790	9-0985	1479	SPACER;EXH	000000	000000
9098514870	9-0985	1487	WASHER E120	000000	000018
9098516490	9-0985	1649	WASHER;PL,SUPER SHIFT LEV	000000	000000
9098516690	9-0985	1669	WASHERS	000036	000000
9098516720	9-0985	1672	WASHER; PL.	000000	000000
9098516722	9-0985	1672	WASHER;PL	000000	000000
9098516820	9-0985	1682	WASHER; PL,SUPPORT BELT	000063	000036
9098518100	9-0985	1810	SEAT;SPR,FILTER	000063	000000
9098518420	9-0985	1842	WASHER,VALVE SP	000000	000973
9098518502	9-0985	1850	WASHER; CM/SHF GEAR	000000	000000
9098518503	9-0985	1850	WASHER; CM/SHF GEAR	000013	000058
9098518620	9-0985	1862	PLATE; PULLEY	000001	000000
9098518660	9-0985	1866	WASHER;INJ PUMP BRKT	000040	000178
9098519110	9-0985	1911	WASHER 6RB1	000000	000031
9098519150	9-0985	1915	WASHER; CRANK BRG CAP	000005	000000
9098519310	9-0985	1931	WASHER; ROCKER ARM	000000	000013
9098519320	9-0985	1932	WASHER	000000	000000

9098519330	9-0985	1933	WASHER;OUTRIGGE	000000	000000
9098519340	9-0985	1934	WASHER; SPECIAL	000000	000147
9098519350	9-0985	1935	WASHER; PULLEY	000006	000034
9098519500	9-0985	1950	WASHER; DAMPER	000000	000016
9098519690	9-0985	1969	WASHER;OUTRIGGE	000000	000049
9098519800	9-0985	1980	WASHER	000000	000000
9098519830	9-0985	1983	WASHER; INJ PUM	000000	000000
9098519840	9-0985	1984	WASHER; PL, SPARE TIRE BR	000000	000000
9098519860	9-0985	1986	PLATE; SHOE GUI	000000	000000
9098520920	9-0985	2092	WASHER	000000	000000
9098530220	9-0985	3022	WASHER	000009	000000
9098538370	9-0985	3837	PLATE; LOCK 6BD/BG1	000013	000000
9098538450	9-0985	3845	WASHER; PLATE, LK., GEAR	000000	000000
9098538490	9-0985	3849	WASHER; LOCK, VALVE	000000	000000
9098538650	9-0985	3865	WASHER;LK, SHAFT	000000	000000
9098540020	9-0985	4002	WASHER LOCK	000000	000000
9098540340	9-0985	4034	WASHER;IDLE	000000	000000
9098540470	9-0985	4047	WASHER	000000	000000
9098541090	9-0985	4109	WASHER; LOCK, SHAFT	000000	000000
9098541100	9-0985	4110	WASHER; LOCK, PULLEY FIX	000000	000000
9098541220	9-0985	4122	WASHER; LK, BRG NUT	000004	000005
9098541240	9-0985	4124	WASHER;LOCK, P.T.O.	000000	000000
9098541280	9-0985	4128	WSHR;SPCL STRAP	000000	000000
9098552630	9-0985	5263	WASHER; TAB, CLAW	000000	000036
9098553080	9-0985	5308	WASHER	000000	000000
9098553620	9-0985	5362	WASHER;CURVED, LEVER	000000	000000
9098553670	9-0985	5367	WASHER;CURVED, LEVER	000000	000015
9098553851	9-0985	5385	WASHER	000000	000000
9098553920	9-0985	5392	WASHER; R/A SHAFT E120	000000	000015
9098570230	9-0985	7023	WASHER; CUSHION	000000	000000
9098570340	9-0985	7034	WASHER; IDLE GEAR	000000	000000
9098570400	9-0985	7040	WASHER; PLAIN, ELEMENT	000004	000008
9098570530	9-0985	7053	SEAT; SPRING 2KC/3KC1	000000	000000
9098590400	9-0985	9040	WASHER	000003	000367
9098600190	9-0986	0019	PLUG; CAMSHAFT, PLATE	000003	000049
9098600220	9-0986	0022	PLUG; PLATE, WATER D=20 D	000018	000000
9098600250	9-0986	0025	PLUG	000053	000000
9098600260	9-0986	0026	PLUG	000017	000000
9098600270	9-0986	0027	PLUG; INL MANIF	000000	000000
9098600290	9-0986	0029	PLUG	000042	000000
9098600300	9-0986	0030	PLUG; PLATE DA220	000012	000050
9098605210	9-0986	0521	PLUG; HEAD COVER	000000	000000
9098605220	9-0986	0522	PLUG;PLATE,CYL.	000001	000000
9098610100	9-0986	1010	PLUG; OIL FILTER FIX SCRE	000000	000062
9098610160	9-0986	1016	PLUG; BODY M12 SCREW DA22	000000	000000
9098610180	9-0986	1018	PLUG,OIL COOLER	000000	000039
9098620420	9-0986	2042	PLUG*	000000	000000

9098620680	9-0986	2068	PLUG; DRAIN	000000	000067
9098620900	9-0986	2090	PLUG; DRIVE	000000	000000
9098621060	9-0986	2106	PLUG;TRANS CASE/OIL DRAIN	000000	000000
9098621170	9-0986	2117	PLUG; DRAIN	000011	000000
9098621200	9-0986	2120	PLUG; CUT-OFF VALVE	000000	000000
9098621370	9-0986	2137	PLUG;CRANK CASE	000000	000000
9098621540	9-0986	2154	PLUG; CRANK CASE	000010	000000
9098621560	9-0986	2156	PLUG;DRAIN,FUEL/OIL	000010	000017
9098621610	9-0986	2161	PLUG	000018	000000
9098621620	9-0986	2162	PLUG;CRANK CASE	000000	000000
9098621750			PLUG; DETENT BA	000000	000000
9098633121	9-0986	3312	PLUG	000000	000000
9098633130	9-0986	3313	PLUG;	000000	000000
9098640071			PLUG; OIL FILTER	000000	000000
9098640150			PLUG,PT 1/8,OIL	000000	000000
9098640501	9-0986	4050	PLUG,	000060	000000
9098670080	9-0986	7008	KEY;FEATHER,CLU SHAFT	000024	000035
9098670120	9-0986	7012	KEY; CRANK GEAR	000000	000066
9098670130	9-0986	7013	KEY; CRANKSHAFT	000000	000000
9098710210	9-0987	1021	REJET STUD PRESS PLATE	000000	000000
9098710260			RIVET	000000	000000
9098720020	9-0987	2002	RIVET	000000	000000
9098720850			RIVET; TAIL GATE	000000	000002
9098760380	9-0987	6038	PIN	000000	000000
9098765190	9-0987	6519	PIN RELEASE LEVER	000000	000000
9098780120			P I N	000000	000000
9098780820			PIN**	000000	000000
9098780840	9-0987	8084	PIN,PINION,OIL	000000	000109
9098780940	9-0987	8094	PIN,STRAIGHT,QU	000000	000010
9098780980	9-0987	8098	PIN	000000	000000
9098781100	9-0987	8110	PIN; KNOCK, CHANGE LEVER	000000	000000
9098785320	9-0987	8532	PIN; STRAIGHT	000000	000082
9098785920	9-0987	8592	PIN,CYL BODY TO	000000	000000
9098785940	9-0987	8594	PIN; KNOCK,LEVER	000000	000010
9098785970	9-0987	8597	PIN,CYL BODY TO	000000	000229
9098786100	9-0987	8610	PIN; CONN ROD, BIG END	000000	000000
9098786101	9-0987	8610	PIN; CONN ROD, BIG END	000027	000090
9098786260	9-0987	8626	PIN;GEAR SETTING/INJ PUMP	000000	000060
9098800790	9-0988	0079	JOINT ASM.; BALL	000000	000000
9098801000	9-0988	0100	JOINT ASM; BALL,CONT	000000	000000
9098810770	9-0988	1077	BALL JOINT	000000	000000
9098810790	9-0988	1079	BALL	000000	000018
9098813810	9-0988	1381	SOCKET	000005	000000
9098813820	9-0988	1382	SOCKET	000000	000000
9098823651	9-0988	2365	ROD;LINK,ENGINE	000000	000000
9098823820	9-0988	2382	ROD;ENG. CONT	000000	000008
9099000590	9-0990	0059	SLEEVE; FUEL PIPE	000001	000000

9099019560	9-0990	1956	NUT	000000	000000
9099021980	9-0990	2198	NIPPLE; OIL GALLERY E120	000000	000000
9099022380	9-0990	2238	ADAPTER,OIL PRE	000000	000311
9099022420	9-0990	2242	ADAPTER;O/PRESS	000000	000006
9099022600	9-0990	2260	JOINT; HOSE	000000	000000
9099022861	9-0990	2286	NIPPLE; OIL FEED-I/PUMP	000000	000000
9099022892	9-0990	2289	NIPPLE INJ PUNP	000000	000000
9099022950	9-0990	2295	NIPPLE;INJ PUMP	000000	000000
9099022990	9-0990	2299	NIPPLE,ROCKER O	000000	000064
9099023040	9-0990	2304	NIPPLE	000004	000036
9099023160	9-0990	2316	JOINT; BREATHER	000000	000000
9099024050	9-0990	2405	ADAPTER	000000	000008
9099024390	9-0990	2439	NIPPLE; OIL PRESSURE	000000	000000
9099024520	9-0990	2452	CAP; UNLOADER	000002	000000
9099024590	9-0990	2459	CONNECTOR E120	000000	000000
9099025170	9-0990	2517	UNION; NIPPLE	000000	000000
9099034971	9-0990	3497	UNION; WATER HOSE,ENG OUT	000000	000003
9099036310	9-0990	3631	JOINT; HEATER H	000000	000074
9099041530	9-0990	4153	COCK;DRAIN	000000	000002
9099041691	9-0990	4169	COCK ASM; WATER DRAIN 6BD	000000	000009
9099061050	9-0990	6105	BOLT,JOINT,TENS	000000	000000
9099061051	9-0990	6105	BOLT,JOINT,TENS	000000	000000
9099061471	9-0990	6147	BOLT; JOINT WATER PIPE	000003	000003
9099061731	9-0990	6173	BOLT; JOINT	000019	000000
9099062051	9-0990	6205	BOLT;JOINT,OIL	000056	000018
9099062130			BOLTS	000000	000000
9099062371			SUPERSEDED**BOLT	000000	000000
9099062471	9-0990	6247	JOINT; BOLT, FUEL PIPE FI	000000	000000
9099062500	9-0990	6250	JOINT; BOLT PIPE	000000	000000
9099062501	9-0990	6250	JOINT; BOLT PIPE	000002	000000
9099062510	9-0990	6251	WASHER	000000	000000
9099062530			BOLTS	000000	000000
9099062610			BOLTS	000000	000000
9099062761			BOLT; EYE	000000	000000
9099062781	9-0990	6278	BOLTS	000000	000000
9099063090	9-0990	6309	JOINT; BOLT	000000	000000
9099063140	9-0990	6314	BOLT; JOINT,FUEL FILTER	000000	000000
9099063141	9-0990	6314	BOLT; JOINT,FUEL FILTER	000000	000335
9099063250	9-0990	6325	BOLT;JOINT,FUEL	000000	000000
9099063251	9-0990	6325	BOLT;JOINT,FUEL	000000	000019
9099063260	9-0990	6326	BOLT; EYE	000000	000000
9099063441	9-0990	6344	JOINT; BOLT, FUEL PIPE FI	000000	000000
9099063631	9-0990	6363	JOINT; BOLT, PIPE BRG SET	000000	000000
9099063641	9-0990	6364	BOLT;EYE,CAM BRG.PIPE SET	000000	000000
9099063651	9-0990	6365	JOINT; BOLT	000000	000000
9099070740	9-0990	7074	JOINT; EYE	000000	000000
9099070800	9-0990	7080	JOINT; EYE	000000	000000

9099070881	9-0990	7088	JOINT; EYE FILTER SIDE	000000	000000
9099070920			EYE BOLT	000000	000000
9099072330	9-0990	7233	JOINT; EYE, COOLER HOSE	000002	000000
9099072570	9-0990	7257	JOINT; EYE	000006	000000
9099072580	9-0990	7258	JOINT; EYE	000005	000000
9099073070	9-0990	7307	JOINT; EYE	000000	000000
9099073900	9-0990	7390	BOLT; EYE, OIL PIPE	000000	000000
9099074330	9-0990	7433	JOINT; EYE	000000	000000
9099111490			HOSE	000000	000000
9099111520			FLEX HOSE	000000	000000
9099113240			HOSE	000000	000000
9099115090			HOSE	000000	000000
9099115120			HOSE	000000	000000
9099115630			FLEX HOSE	000000	000000
9099115660			FLEX HOSE	000000	000000
9099117270			FLEX HOSE	000000	000000
9099121000			SUPERSEDED**HOSE	000000	000000
9099121121	9-0991	2112	HOSE; RUBBER, THERMOSTAT	000000	000000
9099121131	9-0991	2113	RUBBER HOSE	000000	000000
9099121132	9-0991	2113	RUBBER HOSE	000000	000000
9099127340	9-0991	2734	COVER;RUBBER L=600	000000	000000
9099127341	9-0991	2734	COVER; VINYL PIPE L=600	000000	000000
9099127350	9-0991	2735	HOSE;RUBBER,BRE L=250	000000	000000
9099127351	9-0991	2735	HOSE;RUBBER,BRE L=250	000000	000000
9099127410	9-0991	2741	RUBBER HOSE;	000000	000000
9099127580	9-0991	2758	HOSE; RUBBER	000000	000002
9099127680	9-0991	2768	HOSE; RUBBER	000000	000000
9099127900	9-0991	2790	HOSE; RUBBER	000000	000000
9099127950	9-0991	2795	RUBBER HOSE	000000	000000
9099128130	9-0991	2813	HOSE;INT,A/CMPR, (L=100,S)	000000	000012
9099128400	9-0991	2840	HOSE; RUBBER	000000	000000
9099129040	9-0991	2904	HOSE; RUBBER	000000	000000
9099129270	9-0991	2927	HOSE; RUBBER, AIR CLEANER	000000	000000
9099129711	9-0991	2971	SUPERSEDED**HOSE	000000	000000
9099129760	9-0991	2976	HOSE; RUBBER 6BD1	000000	000000
9099129761	9-0991	2976	HOSE; RUBBER 6BD1	000006	000000
9099130270	9-0991	3027	HOSE;INT,A/CMPR, (L=100,S)	000000	000000
9099134580	9-0991	3458	SUPERSEDED**HOSE	000000	000000
9099134600	9-0991	3460	HOSE; RUBBER L=460	000000	000000
9099135150	9-0991	3515	HOSE; VINYL L=10,000	000000	000006
9099137280	9-0991	3728	PIPE; VINYL (L=200)	000000	000000
9099137300	9-0991	3730	VINYL PIPE; WATER DRAIN	000000	000000
9099137310	9-0991	3731	PIPE; VINYL, WATER DRAIN	000000	000000
9099137350	9-0991	3735	HOSE; DRAIN, VINYL L=550	000000	000000
9099137360	9-0991	3736	HOSE;VINYL F/FILT. L=600	000000	000000
9099137410	9-0991	3741	PIPE-CUT 909914909-850MM	000000	000000
9099137480	9-0991	3748	PIPE* CUT 909914909-690MM	000000	000000

9099137490	9-0991	3749	PIPE*CUT 909914909-720MM	000000	000000
9099138040	9-0991	3804	PIPE; VINYL L=350	000000	000000
9099138070	9-0991	3807	PIPE-CUT 909913515-500MM	000000	000000
9099138090	9-0991	3809	PIPE-CUT 909913515-600MM	000000	000000
9099138340	9-0991	3834	PIPE-CUT 909914909-520MM	000000	000000
9099138360	9-0991	3836	PIPE*CUT909914909-630MM	000000	000000
9099138380	9-0991	3838	PIPE*CUT 909914909-700MM	000000	000000
9099138400	9-0991	3840	PIPE; VINYL	000000	000000
9099138410	9-0991	3841	PIPE-CUT 909914909-800MM	000000	000000
9099138420	9-0991	3842	PIPE; VINYL, WATER DRAIN	000000	000000
9099138450	9-0991	3845	PIPE-CUT909914909-1400MM	000000	000000
9099138460	9-0991	3846	PIPE-CUT 909914909-380MM	000000	000000
9099139510	9-0991	3951	HOSE; (L=400)	000000	000000
9099140720			HOSE	000000	000000
9099141950			HOSE	000000	000020
9099142090	9-0991	4209	PIPE; VINYL-CUT L=850	000000	000000
9099144090	9-0991	4409	HOSE;SURGE TANK	000000	000000
9099144500	9-0991	4450	HOSE	000000	000000
9099144720	9-0991	4472	HOSE; RUBBER, BRACKET DA6	000003	000000
9099145380	9-0991	4538	PIPE-CUT 909914913-550MM	000000	000000
9099145470	9-0991	4547	PIPE*CUT (L=800MM)	000000	000000
9099145890	9-0991	4589	HOSE-CUT 909914701-400MM	000000	000000
9099146440	9-0991	4644	PIPE*CUT 909914913-300MM	000000	000000
9099146620	9-0991	4662	HOSE;DRAIN,FRT,SUN ROOF	000000	000000
9099146751	9-0991	4675	PIPE-CUT 909914909-1150MM	000000	000000
9099146810	9-0991	4681	SUPERSEDED**PIPE	000000	000000
9099146830	9-0991	4683	HOSE;DRAIN,SEDIMENTER	000000	000000
9099146840	9-0991	4684	PIPE; FUEL (L=1660)	000000	000000
9099146860	9-0991	4686	PIPE;FUEL,DELIV (L=1800)	000000	000000
9099146880	9-0991	4688	PIPE; FUEL TANK,L=2000	000000	000000
9099147010	9-0991	4701	PIPE/HOSE; (L=10,000MM)	000000	000007
9099147100	9-0991	4710	PIPE;FUEL,RTRN(L=1440)	000000	000000
9099147380	9-0991	4738	PIPE; VINYL,OIL(L=UNKNWN)	000000	000000
9099148560	9-0991	4856	OVERFLOW PIPE	000000	000000
9099148590	9-0991	4859	PIPE; VINYL (L=410MM)	000000	000000
9099148600	9-0991	4860	HOSE-CUT (L=510MM)	000000	000000
9099149030	9-0991	4903	HOSE*CUT L=210MM	000000	000000
9099149050	9-0991	4905	PIPE;VINYL, WATER DRAIN	000000	000000
9099149090	9-0991	4909	HOSE,VINYL(L=10,000)	000000	000002
9099149110	9-0991	4911	PIPE;VINYL	000000	000000
9099149120	9-0991	4912	PIPE/HOSE; (L=10,000)	000000	000000
9099149130	9-0991	4913	PIPE; WATER DRAIN-10,000M	000000	000000
9099149140	9-0991	4914	PIPE;VINYL	000000	000000
9099149531	9-0991	4953	HOSE	000000	000000
9099150051	9-0991	5005	CLIP; HOSE,VAC	000045	000000
9099150361	9-0991	5036	CLIP; RUBBER HO	000000	000000
9099150411	9-0991	5041	CLIP;RUBBER HOSE,AIR BREA	000000	000000

9099150420	9-0991	5042	CLIP;RUBBER HOS	000000	000000
9099150421	9-0991	5042	CLIP;WATER HOSE, RUBBER	000000	000003
9099150510	9-0991	5051	WASHER; LK, FINAL DRIVE	000000	000000
9099150671	9-0991	5067	CLIP;HOSE,OIL FILLER	000082	000000
9099150681	9-0991	5068	CLIP; HOSE,ENG SIDE BOTTO	000000	000000
9099150691	9-0991	5069	CLIP; CONN. HOSE	000000	000000
9099150701	9-0991	5070	CLAMP;CONN.HOSE	000000	000000
9099150721	9-0991	5072	CLIP;HOSE	000000	000000
9099151870	9-0991	5187	CLIP; PIPE FIX., DELIVERY	000000	000000
9099152380	9-0991	5238	CLIP;DUST SEAL	000000	000099
9099152641	9-0991	5264	CLIP,OIL COOLER	000000	000000
9099152651	9-0991	5265	CLIP,FILLER HOS	000000	000000
9099152660	9-0991	5266	CLIP,OIL COOLER	000000	000000
9099152661	9-0991	5266	CLIP,OIL COOLER	000000	000000
9099152670	9-0991	5267	CLIP,RUBBER HOS	000000	000000
9099152671	9-0991	5267	CLIP,RUBBER HOS	000000	000033
9099152681	9-0991	5268	CLIP,CONNECTING	000000	000000
9099152691	9-0991	5269	CLAMP;BY-PASS	000000	000000
9099152741	9-0991	5274	CLIP	000000	000000
9099152770	9-0991	5277	CLIP; FILLER HOSE	000000	000000
9099152781	9-0991	5278	CLAMP;CONN.HOSE	000002	000000
9099152810	9-0991	5281	CLIP;WATER HOSE	000000	000000
9099152811	9-0991	5281	CLIP;WATER HOSE	000000	000000
9099153151	9-0991	5315	CLIP;WIRE,HOSE	000000	000000
9099153240	9-0991	5324	CLIP,OIL COOLER	000000	000000
9099153290	9-0991	5329	CLIP; BREATHER HOSE	000000	000000
9099154040	9-0991	5404	CLIP;BAND/WATER HOSE,HTR	000000	000000
9099154060	9-0991	5406	CLIP; HARNESS FIX., L=95	000000	000000
9099154080	9-0991	5408	CLIP;BAND	000000	000000
9099154121	9-0991	5412	CLIP; FILLER HOSE	000000	000000
9099154210	9-0991	5421	CLIP,RUBBER PLU	000000	000000
9099154211	9-0991	5421	CLIP;WIRE RUB	000000	000000
9099154390	9-0991	5439	CLIP; INSTRUMENT HARNESS	000000	000000
9099154460	9-0991	5446	CLIP; BANK	000000	000010
9099154931	9-0991	5493	CLIP,HOSE,HEATE	000000	000000
9099154950			CLAMP,BY PASS H	000000	000000
9099155021	9-0991	5502	CLIP; HOSE	000001	000003
9099155031	9-0991	5503	CLIP; RUBBER HOSE E120	000000	000000
9099155041	9-0991	5504	CLIP 6RB1	000000	000000
9099155121	9-0991	5512	CLIP,WATER HOSE	000065	000031
9099155131	9-0991	5513	CLIP; WIRE, SEC	000000	000000
9099155511	9-0991	5551	CLAMP;DUCT IN	000000	000000
9099155521	9-0991	5552	CLIP,THROTTLE V	000000	000006
9099155531	9-0991	5553	CLIP; RUBBER 6BG1	000000	000000
9099155730	9-0991	5573	CLIP; BAND, FLEXIBLE TUBE	000000	000000
9099155750	9-0991	5575	CLIP;	000000	000000
9099155760	9-0991	5576	CLIP; RUBBER HOSE	000000	000000

9099155770	9-0991	5577	CLIP; HOSE CONN	000000	000000
9099155780	9-0991	5578	CLIP; HOSE CONN	000000	000000
9099155790	9-0991	5579	CLIP; CONNECTING	000000	000000
9099155800	9-0991	5580	CLAMP;DUCT IN	000000	000000
9099155820	9-0991	5582	CLIP	000000	000000
9099155830	9-0991	5583	CLIP,HOSE CONN	000000	000000
9099155840	9-0991	5584	CLIP; WATER HOS	000000	000000
9099155860	9-0991	5586	CLIP; AIR CLEANER	000000	000000
9099155870	9-0991	5587	CLIP;RUBBER HOSE FIX	000000	000000
9099155890	9-0991	5589	CLIP; BAND,HOSE	000000	000000
9099155900	9-0991	5590	CLIP;HOSE,A/CL	000000	000000
9099155910	9-0991	5591	CLIP; BAND, HOSE FIX.D=84	000000	000000
9099155920	9-0991	5592	CLIP;BAND,HOSE	000000	000000
9099155940	9-0991	5594	CLIP HOSE A/CL	000000	000000
9099155990	9-0991	5599	CLIP; HOSE TURBO	000000	000000
9099156000	9-0991	5600	CLIP; HOSE TURBO	000000	000000
9099156050	9-0991	5605	CLIP E120	000000	000000
9099156080	9-0991	5608	CLIP;HOSE,A/CL	000000	000000
9099156090	9-0991	5609	CLIP;HOSE,A/CL	000000	000000
9099156120	9-0991	5612	CLIP;BAND	000000	000000
9099156130	9-0991	5613	CLIP;	000000	000000
9099156420	9-0991	5642	CLAMP	000000	000000
9099156421	9-0991	5642	CLIP,WATER HOSE	000000	000000
9099156422	9-0991	5642	CLAMP/WTR HOSE	000000	000000
9099156440	9-0991	5644	CLIP,HOSE,HEATE	000000	000000
9099156441	9-0991	5644	CLIP,HOSE,HEATE	000000	000375
9099156442	9-0991	5644	CLIP,HOSE,HEATE	000000	000000
9099156481	9-0991	5648	CLIP; RUBBER HOSE FIX	000000	000000
9099156560	9-0991	5656	CLIP PIPE HYDRO	000000	000028
9099156661	9-0991	5666	CLIP RUBBER HOS	000000	000000
9099156721	9-0991	5672	CLIP;BAND	000000	000000
9099156740	9-0991	5674	CLIP; HOSE, RADIATOR D=42	000000	000000
9099156750	9-0991	5675	CLIP; HOSE, RADIATOR D=45	000000	000000
9099156850	9-0991	5685	CLIP,BREATHER H	000000	000000
9099156920	9-0991	5692	CLIP; HOSE	000000	000000
9099156921	9-0991	5692	CLIP; HOSE	000000	000018
9099157021	9-0991	5702	CLAMP;DUCT IN	000000	000000
9099157100	9-0991	5710	CLIP; HOSE,A/CL	000000	000000
9099157120	9-0991	5712	CLIP;PIPE TO EN	000000	000005
9099157141	9-0991	5714	CLIP; RUBBER 6BG1	000000	000000
9099157331	9-0991	5733	CLIP; HOSE AIR DUCT	000000	000005
9099160241	9-0991	6024	CLIP ASM;HOSE	000000	000000
9099160311	9-0991	6031	CLIP; ENGINE SIDE TOP	000000	000000
9099163740	9-0991	6374	CLIP*	000000	000000
9099163970	9-0991	6397	CLIP; PIPE 6RB1	000000	000000
9099167020	9-0991	6702	CLIP; FLEX., HOSE	000000	000000
9099167240	9-0991	6724	CLIP;CABLE	000000	000016

9099167241	9-0991	6724	CLIP;CABLE	000000	000000
9099167360	9-0991	6736	CLIP; GUIDE TUBE - BRKT.	000000	000000
9099167520	9-0991	6752	CLIP; SPEED METER CA	000000	000000
9099167550	9-0991	6755	CLIP;GLOW PLUG	000000	000000
9099168180	9-0991	6818	CLIP; VACCUM PIPE	000000	000000
9099168190	9-0991	6819	CLIP; CABLE HARNESS	000004	000100
9099168850	9-0991	6885	CLIP; GUIDE TUBE - BRKT.	000000	000000
9099168931	9-0991	6893	CLIP; RUBBER HOSE	000000	000000
9099169090	9-0991	6909	CLIP	000000	000000
9099169101	9-0991	6910	CLIP; OIL PIPE	000000	000000
9099170350	9-0991	7035	CLIP;FRAME,HARN	000000	000052
9099170530	9-0991	7053	CLIP; BREATHER HOSE C240	000000	000000
9099170570	9-0991	7057	CLIP*	000000	000000
9099170580	9-0991	7058	C L I P	000000	000000
9099170630	9-0991	7063	CLIP*	000000	000000
9099170640	9-0991	7064	CLIP; HOSE	000000	000000
9099170650	9-0991	7065	CLIP	000000	000000
9099170920	9-0991	7092	CLIP; OIL PIPE	000000	000000
9099170980	9-0991	7098	CLIP; FUEL PIPE 6BG1	000000	000000
9099171050	9-0991	7105	CLIP; OIL PIPE	000000	000000
9099171051	9-0991	7105	CLIP; OIL PIPE	000017	000000
9099171660	9-0991	7166	CLIP; FUEL PIPE	000000	000000
9099171710	9-0991	7171	CLIP;FUEL PIPE	000000	000009
9099172040	9-0991	7204	CLIP; GUIDE TUBE	000001	000000
9099172050	9-0991	7205	CLIP; FUEL PIPE, GEAR CAS	000000	000000
9099172080	9-0991	7208	CLIP; OIL PIPE,	000000	000000
9099172081	9-0991	7208	CLIP; OIL PIPE,	000000	000023
9099172380	9-0991	7238	CLIP	000000	000000
9099173560	9-0991	7356	CLIP; FUEL	000000	000032
9099173910	9-0991	7391	CLIP; HARNESS	000000	000000
9099173961	9-0991	7396	CLIP; FUEL PIPE FIX	000000	000000
9099173970	9-0991	7397	CLIP; FUEL PIPE	000000	000000
9099174050	9-0991	7405	CLIP; TURBO, OIL PIPE	000000	000000
9099174110	9-0991	7411	CLIP; OIL PIPE	000008	000000
9099174480	9-0991	7448	CLIP; AIR PIPE E120	000000	000000
9099174490	9-0991	7449	CLIP; AIR PIPE E120	000000	000000
9099174510	9-0991	7451	CLIP; FUEL PIPE	000019	000007
9099174710	9-0991	7471	CLIP; AIR PIPE	000000	000005
9099174720	9-0991	7472	CLIP; AIR PIPE	000000	000000
9099174750	9-0991	7475	CLIP; AIR BREATHER HOSE	000000	000000
9099175110	9-0991	7511	CLIP; OIL PIPE	000000	000000
9099175111	9-0991	7511	CLIP; OIL PIPE	000009	000000
9099175150	9-0991	7515	CLIP; HOSE TO H	000000	000000
9099175380	9-0991	7538	CLIP; WATER HOSE	000000	000000
9099175440	9-0991	7544	CLIP	000000	000034
9099175460	9-0991	7546	CLIP;PIPE FIX.	000000	000000
9099176020	9-0991	7602	CLIP*	000000	000000

9099176060	9-0991	7606	CLIP	000000	000000
9099176490	9-0991	7649	CLIP OIL PIPE D=6	000000	000000
9099190410	9-0991	9041	HOSE; FLEX, SHIFT	000000	000000
9099190420	9-0991	9042	HOSE; FLEX, SHIFT	000000	000002
9099191301			PIPE	000000	000000
9099193100	9-0991	9310	HOSE; RUBBER	000000	000000
9099200120	9-0992	0012	PACKING, UNION B	000000	000000
9099201770	9-0992	0177	PACKING, REV. LAM	000000	000000
9099202040			SEAL	000000	000000
9099202220			NUT; CAP	000000	000000
9099202430	9-0992	0243	GSKT; PRE FILTER	000000	000015
9099202550	9-0992	0255	O RING; DRAIN PL	000000	000000
9099202760			PACKING	000000	000000
9099203110	9-0992	0311	PACKING; O-RING E120	000000	000090
9099203120	9-0992	0312	O-RING 6BG1/C240	000000	000000
9099203150	9-0992	0315	PACKING	000000	000000
9099203260	9-0992	0326	GSKT; FUEL FILT	000000	000041
9099203270	9-0992	0327	GSKT; ORING, ELEM	000000	000179
9099203470	9-0992	0347	GASKET; ELEMENT	000001	000000
9099203490			WASHER	000000	000000
9099203630			PACKING; THERMO	000000	000000
9099203920	9-0992	0392	GASKET; OIL FILLER PLUG	000000	000106
9099204150			SEAL	000000	000000
9099204600	9-0992	0460	PACKING	000000	000000
9099204830	9-0992	0483	O-RING; DRAIN PLUG, FUEL	000000	000000
9099205080	9-0992	0508	PACKING; O-RING, INJECTIO	000000	000000
9099205110	9-0992	0511	O-RING; OIL FILTER	000002	000000
9099205250	9-0992	0525	PACKING; RELIEF VALVE	000057	000000
9099205260	9-0992	0526	O-RING; PLUG	000000	000000
9099205280	9-0992	0528	GASKET; COVER	000000	000000
9099205330	9-0992	0533	O-RING; MAIN SHA	000000	000000
9099205490	9-0992	0549	PACKING; O-RING	000000	000000
9099205510	9-0992	0551	RINGS	000000	000000
9099205620	9-0992	0562	GASKET; SEA WATER PUMP	000000	000000
9099205760	9-0992	0576	GASKET; BEARING COVER	000000	000000
9099205780	9-0992	0578	GSKT; O-RING,	000000	000000
9099205860	9-0992	0586	GSKT; CNTR BOLT	000000	000277
9099206010	9-0992	0601	PACKING; GEAR CASE COVER	000000	000778
9099206050	9-0992	0605	GASKET; DRAIN PLUG	000011	000000
9099206090	9-0992	0609	PACKING; LEVEL GAUGE	000005	000128
9099206200	9-0992	0620	PACKING	000000	000000
9099206240	9-0992	0624	PACKING, FLOW VA	000000	000000
9099206270			FUEL TANK DRAIN PLUG GSKT	000000	000000
9099206360	9-0992	0636	PACKING; O-RING E120	000000	000001
9099206430			RING	000000	000000
9099206440			PACKING; O-RING	000000	000000
9099206470	9-0992	0647	GSKT.; OIL PUMP	000141	000006

9099206480	9-0992	0648	PACKING E120	000000	000008
9099206510	9-0992	0651	PACKING,O-RING	000000	000000
9099206850	9-0992	0685	GASKET; COVER	000000	000005
9099206940	9-0992	0694	GSKT;O RING	000000	000000
9099206990	9-0992	0699	DRAIN PLUG GASKET	000002	000000
9099207070	9-0992	0707	PACKING	000000	000000
9099207080	9-0992	0708	PACKING	000000	000000
9099207350	9-0992	0735	PACKING; O-RING, FRONT CO	000000	000000
9099207420	9-0992	0742	PACKING; O-RING COVER E12	000082	000000
9099207430	9-0992	0743	PACKING; O-RING E120	000000	000000
9099207570	9-0992	0757	GASKET; REV SHAFT	000000	000000
9099207780	9-0992	0778	PACKING O-RING	000000	000000
9099207960	9-0992	0796	GASKET; REV SHAFT	000000	000000
9099208320	9-0992	0832	O/RING	000000	000000
9099208410	9-0992	0841	GSKT;ORING,CNTR	000279	000000
9099208430	9-0992	0843	PACKING; PLUG	000000	000000
9099208520	9-0992	0852	SEAL;BUSH.,GEAR	000000	000013
9099208530	9-0992	0853	PACKING;O-RING	000000	000000
9099208700	9-0992	0870	O-RING; FILTER	000000	000000
9099208730	9-0992	0873	GSKT;FLEX HOSE	000000	000000
9099208731	9-0992	0873	GSKT;FLEX HOSE	000000	000051
9099208740	9-0992	0874	PACKING; O-RING CAP	000000	000000
9099208750	9-0992	0875	GSKT;VENT VLV	000000	000021
9099208760	9-0992	0876	GSKT;VLV,O/FILT	000000	000000
9099208800	9-0992	0880	GASKET; BODY TO COVER	000000	000000
9099208930	9-0992	0893	PACKING; S	000000	000000
9099209000	9-0992	0900	PACKING,JOINT B	000000	000280
9099209030	9-0992	0903	PACKING,FLOW VA	000000	000000
9099209480	9-0992	0948	GASKET; FR	000000	000000
9099209750	9-0992	0975	PACKING,RELIEF	000000	000329
9099209780	9-0992	0978	PACKING;O-RING	000000	000000
9099210020			GASKET	000000	000000
9099210320			GASKET; GEAR CASE TO C/BL	000000	000000
9099210380			GASKET	000000	000000
9099210400			GASKET; THERMOSTAT	000005	000000
9099210440	9-0992	1044	GSKT;DRAIN COCK	000000	000000
9099210600	9-0992	1060	GASKET; INLET	000000	000000
9099210880	9-0992	1088	O-RING,SPEEDOME	000000	000000
9099210890	9-0992	1089	PACKING; CTR BOLT	000000	000000
9099210980	9-0992	1098	PACKING	000000	000000
9099210990	9-0992	1099	PACKING; BREATHER	000834	000000
9099211000	9-0992	1100	GASKET;DRIV. GEAR,SPEEDO	000009	000006
9099211070	9-0992	1107	PACKING; CASE TO CYL BODY	000000	000000
9099211842	9-0992	1184	PACKING DA640	000000	000000
9099211880	9-0992	1188	GASKET; O/PUMP	000053	000047
9099211920	9-0992	1192	PACKING; CENTER PIPE	000000	000000
9099211930	9-0992	1193	PACKING; O-RING	000000	000041

9099211950	9-0992	1195	PACKING; CENTER PIPE, RUB	000073	000000
9099212080	9-0992	1208	PACKING; INLET PIPE	000011	000000
9099212400	9-0992	1240	PACKING; BODY, CAP E120	000000	000000
9099212420	9-0992	1242	GASKET; DRAIN CO	000000	000000
9099212460	9-0992	1246	PACKING; O-RING	000004	001291
9099220650	9-0992	2065	FELT RING	000000	000000
9099221020	9-0992	2102	PACKING	000000	000000
9099221100	9-0992	2110	RING; FELT	000000	000098
9099235120	9-0992	3512	PACKING; O-RING, INJ PUMP	000000	000000
9099235520	9-0992	3552	PACKING 6RB1	000026	000000
9099235710	9-0992	3571	O-RING; OIL PUMP	000000	000000
9099235730	9-0992	3573	PACKING; O-RING	000000	000000
9099235770	9-0992	3577	PACKING	000000	000000
9099235780	9-0992	3578	PACKING	000003	000000
9099235790	9-0992	3579	O-RING	000000	000000
9099241640	9-0992	4164	SEAL; OIL E120	000000	000000
9099241720			SEAL	000000	000000
9099241780			SEAL; OIL	000000	000000
9099241860	9-0992	4186	OIL SEAL	000000	000000
9099241870	9-0992	4187	SEAL; OIL, A/COMP	000000	000000
9099241890	9-0992	4189	SEAL OIL POWER DRIVE	000000	000000
9099241930			SEAL	000000	000000
9099241950			SEAL; OIL, POWER DRIVE	000000	000000
9099242100	9-0992	4210	SEAL	000000	000000
9099242920	9-0992	4292	SEAL;OIL	000000	000000
9099242960	9-0992	4296	SEAL,OIL,GEAR C	000000	000000
9099243150			SEAL	000000	000000
9099243510			SEAL	000000	000000
9099243550			SEAL; OIL	000010	000012
9099243590			SEAL	000000	000000
9099243700			SEAL; OIL, MAIN FRT	000000	000000
9099244070			SEAL	000000	000000
9099244150			SEAL;OIL,HUB IN	000000	000023
9099244160			OIL SEAL;INNER	000000	000000
9099244170			OIL SEAL;INNER	000000	000000
9099244480	9-0992	4448	SEALS	000000	000000
9099244490	9-0992	4449	SEAL; CRANKSHAFT	000000	000000
9099244491	9-0992	4449	SEAL; CRANKSHAFT	000000	000000
9099244520			SEAL	000000	000000
9099244690	9-0992	4469	SEAL; OIL, CRANKS	000000	000000
9099244880	9-0992	4488	SEAL; OIL,CRANK	000000	000000
9099244900	9-0992	4490	SEAL; DUST DA120	000000	000000
9099245060	9-0992	4506	SEAL	000000	000000
9099245080	9-0992	4508	OIL SEAL	000000	000000
9099245120	9-0992	4512	SEAL; OIL, CRANKS	000000	000000
9099245150	9-0992	4515	SEAL; OIL,BRG C	000000	000000
9099245580	9-0992	4558	SEAL; OIL,TIMING	000000	000000

9099245610	9-0992	4561	OIL SEAL	000000	000000
9099280220			VALVE	000000	000000
9099335140			TERMINAL	000000	000000
9099335150	9-0993	3515	TERMINAL	000000	000000
9099335190	9-0993	3519	TERMINAL ASM.; BATTERY (-)	000000	000000
9099335210	9-0993	3521	TERMINAL ASM.; BATTERY (+)	000000	000000
9099400120	9-0994	0012	SPRING; COIL, COMP.BOSS	000000	000000
9099403200	9-0994	0320	SPRING	000000	000000
9099403230			SPRING; LK BALL	000000	000000
9099403500	9-0994	0350	SPRING	000000	000044
9099404660	9-0994	0466	SPRING; RETURN	000000	000000
9099405820	9-0994	0582	SPRING; COIL	000000	000129
9099406070	9-0994	0607	SPRING,ROCKER A	000121	000000
9099406220			SPRING	000000	000000
9099406290	9-0994	0629	SPRING DA640	000000	000000
9099407100	9-0994	0710	SPRING; OIL RELIEF VALVE	000000	000000
9099407550	9-0994	0755	SPRING	000000	000017
9099408600	9-0994	0860	SPR.;RELIEF VLV	000019	000000
9099408970	9-0994	0897	SPRING;COIL	000000	000002
9099409010	9-0994	0901	SPRG;ELEMENT	000057	000000
9099409530	9-0994	0953	SPRING;OIL (DISCONTINUED)	000000	000000
9099409850	9-0994	0985	SPRING; COIL	000000	000010
9099410540	9-0994	1054	SPRING; OIL FILTER	000000	000021
9099410621	9-0994	1062	SPR;SHOE HOLD	000000	000058
9099410880	9-0994	1088	SPRING; R/A SHAFT E120	000000	000017
9099410980	9-0994	1098	SPRING; COIL	000032	000000
9099411000	9-0994	1100	SPRING; COIL, COMP	000001	000000
9099411090	9-0994	1109	SPRING; COMP	000000	000000
9099411400	9-0994	1140	SPRING; COMP, OIL GUIDE E	000006	000000
9099411510	9-0994	1151	SPRING; CUT-OFF VALVE	000010	000000
9099412180	9-0994	1218	SPRING	000000	000000
9099412190	9-0994	1219	SPRING	000000	000000
9099412710	9-0994	1271	SPRING; COIL, COMP ELEMEN	000000	000000
9099412830	9-0994	1283	SPRING;O/FILTER	000000	000006
9099412860	9-0994	1286	SPRING; ELEMENT HOLDING E	000045	000000
9099413000	9-0994	1300	SPRING; ELEMENT 2KC/3KC1	000000	000060
9099420140	9-0994	2014	SPRING	000000	000000
9099421180	9-0994	2118	SPRING; THROTTLE VALVE RE	000012	000000
9099423201	9-0994	2320	SPRING; RETURN,SHIFT	000000	000000
9099423401	9-0994	2340	SPRING, P/B	000000	000011
9099425211	9-0994	2521	SPRING, P/B	000016	000000
9099425410	9-0994	2541	SPRING E120	000000	000000
9099425521	9-0994	2552	SPRING, P/B	000000	000000
9099425531	9-0994	2553	SPRING, P/B	000000	000007
9099425600	9-0994	2560	SPRING	000003	000000
9099425671	9-0994	2567	SPRING;RETURN,BRAKE SHOE	000000	000006
9099425920	9-0994	2592	SPRING;RETURN,LEVER	000000	000007

9099500120	9-0995	0012	RING; SNAP	000003	000000
9099500880	9-0995	0088	RING; SNAP	000000	000000
9099501150	9-0995	0115	RING; SNAP	000109	000000
9099501240	9-0995	0124	RING; SNAP	000000	000000
9099501831	9-0995	0183	RING; SNAP	000000	000058
9099501962	9-0995	0196	RING; SNAP, DH SERIES	000000	000000
9099520340	9-0995	2034	RING; SNAP E120	000000	000000
9099520780	9-0995	2078	RING; SNAP	000000	000000
9099521030	9-0995	2103	RING; SNAP, SPIND	000000	000010
9099521430	9-0995	2143	SNAP RING; SHAFT	000000	000022
9099521490	9-0995	2149	RING, SNAP, GEAR	000000	000000
9099521491	9-0995	2149	RING; SNAP, GEAR	000003	000006
9099522170	9-0995	2217	RING; SNAP, CENTER PIPE	000002	000000
9099522511	9-0995	2251	RING; SNAP, 4TH COLLA	000000	000000
9099540290	9-0995	4029	CHAIN; OIL FILLER CAP	000000	000000
9099540350	9-0995	4035	CHAIN;	000017	000000
9099540480	9-0995	4048	SUPERSEDED**CHAIN	000000	000000
9099566820	9-0995	6682	SLEEVE; RUBBER, HARNESS	000117	000000
9099570100	9-0995	7010	HELISERT	000015	000000
9111210210			JET WATER VALVE	000000	000000
9111210220	9-1112	1022	JET WATER VALVE	000000	000000
9111290060	9-1112	9006	CUP; SEALING	000000	000037
9111290210			SEAL; CUP	000000	000000
9111290580			SEALING CUPS	000000	000000
9111290750			SEALING CUP	000000	000000
9111290780			SEAL	000000	000000
9111290810	9-1112	9081	PLUG; SHIFTER ROD	000000	000000
9111290820	9-1112	9082	CUP; SEALING, CLY/OIL GLLRY	000000	000000
9111290830	9-1112	9083	CUP, SEALING, DRI	000000	000000
9111290870	9-1112	9087	TUBE / GUIDE; PUSH ROD	000000	000000
9111291091	9-1112	9109	SLEEVE; NOZZLE HOLDER E12	000000	000000
9111291092	9-1112	9109	SLEEVE; NOZZLE HOLDER E12	000000	000000
9111291230	9-1112	9123	CUP; SEALING, W	000000	000000
9111291280	9-1112	9128	CUP; SEALING, LWR FACE	001822	000000
9111291310	9-1112	9131	SEALING CUP; WATER JACKET	000007	000000
9111296010	9-1112	9601	CUP; SEALING	000004	000110
9111296030	9-1112	9603	CUP; SEALING	000000	000000
9111411920	9-1114	1192	GASKET; CYL HEAD	000000	000000
9111414010			GASKET; CYL HEAD	000000	000038
9111414360			HEAD GASKET	000000	000000
9111415170			HEAD GASKET	000000	000030
9111415700	9-1114	1570	HEAD GASKET	000000	000000
9111416000			GASKET; CYL HEAD	000000	000000
9111416410			HEAD GASKET	000001	000000
9111416580	9-1114	1658	GASKET; CYL HEAD	000000	000000
9111416841	9-1114	1684	GASKET; CYL HEAD E120	000000	000000
9111417240	9-1114	1724	HEAD GASKET	000000	000000

9111417451	9-1114	1745	HEAD GASKET	000000	000000
9111456180	9-1114	5618	GASKET	000004	000000
9111456240	9-1114	5624	GASKET	000000	000020
9111456440	9-1114	5644	GASKET;CYL HEAD	000000	000000
9111481790	9-1114	8179	PACKING	000000	000000
9111500140	9-1115	0014	PRECHAMBER	000000	000000
9111500590			PRECHAMBER	000000	000000
9111501870	9-1115	0187	HOT PLUG ASSY	000000	000000
9111501872	9-1115	0187	HOT PLUG ASSY	000000	000000
9111501910	9-1115	0191	PLUG ASM; HOT	000000	000000
9111506040	9-1115	0604	HOT PLUG ASSY	000000	000000
9111508012	9-1115	0801	PLUG ASM.;HOT	000000	000000
9111508020	9-1115	0802	HOT PLUG CYL. HEAD	000004	000000
9111517500	9-1115	1750	PRECHAMBER	000038	000008
9111520680	9-1115	2068	PRECHAMBER COVER	000000	000000
9111520681	9-1115	2068	COVER; PRECHAMBER	000000	000004
9111520690	9-1115	2069	COVER DH100	000000	000000
9111530020	9-1115	3002	GASKET DH100	000025	000000
9111530080	9-1115	3008	GASKET**DISCONTINUED**	000000	000000
9111530180	9-1115	3018	GASKET	000010	000000
9111540010	9-1115	4001	PACKING	000036	000000
9111540030			GASKET	000000	000000
9111550010			PACKING	000036	000011
9111550270			SCREW	000000	000000
9111560040			GASKET	000000	000000
9111580010			LINER	000000	000000
9111703060			PACKING	000000	000000
9111730920			VALVE COVER GASKET	000003	000000
9111730940			VALVE COVER GASKET	000000	000000
9111731240			PACKING	000000	000017
9111731270	9-1117	3127	GASKET;VLV COV.	000000	000000
9111731290	9-1117	3129	VALVE COVER GASKET	000008	000000
9111731300	9-1117	3130	PACKING	000004	000001
9111731370	9-1117	3137	VALVE COVER GASKET	000000	000000
9111731680	9-1117	3168	PACKING	000000	000000
9111750080	9-1117	5008	N U T	000000	000000
9111750110	9-1117	5011	NUT; INLET COVE	000000	000000
9111750120	9-1117	5012	NUT;COVER TO CY	000000	000102
9111760020	9-1117	6002	RING; LOCK	000010	000000
9111776010	9-1117	7601	COVER ASM; CYL HEAD	000000	000000
9111790300	9-1117	9030	PACKING/GASKET;COVER TO	000000	000000
9111791050	9-1117	9105	WASHER;HEAD COVER	000140	000318
9111791320	9-1117	9132	WASHER,HEAD COV	000160	000000
9111791330	9-1117	9133	SUPERSEDED**PACKING	000000	000000
9111792280	9-1117	9228	PLATE; BAFFLE	000000	000000
9111798080	9-1117	9808	GASKET,HEAD COV	000000	000800
9112104190	9-1121	0419	BODY ASSY,CYL	000000	000000

9112105320	9-1121	0532	SUPERSEDED**	000000	000000
9112150810	9-1121	5081	CRANKCASE; EXTENTION C240	000000	000000
9112150840	9-1121	5084	CRANKCASE	000000	000000
9112150960	9-1121	5096	CASE ASSY	000000	000000
9112150963	9-1121	5096	CASE ASSY.	000000	000000
9112171693	9-1121	7169	BLOCK ASM; CYLINDER	000000	000000
9112176164	9-1121	7616	BLOCK ASM; CYLINDER	000000	000000
9112176165	9-1121	7616	BLOCK ASM; CYLINDER	000000	000001
9112176190	9-1121	7619	BLOCK ASM; CYLINDER	000000	000000
9112176193	9-1121	7619	BLOCK ASM; CYLINDER	000000	000000
9112178033	9-1121	7803	BLOCK; ENGINE QD27	000000	000001
9112190050	9-1121	9005	CUP, SEALING, CYL	000000	000014
9112190060	9-1121	9006	CUP; SEALING, TAPPET CHMBR	000000	000000
9112190130			SEALING CUP	000000	000000
9112190370			COVER	000000	000000
9112190910			PLUG; GALLERY OIL PUMP SI	000000	000000
9112190920	9-1121	9092	PLUG	000000	000000
9112190930	9-1121	9093	COVER	000014	000000
9112191920	9-1121	9192	CUP; SEALING, OIL GALLERY	000000	000000
9112191950	9-1121	9195	SEALING CUPS	000000	000000
9112191980	9-1121	9198	PLATE, CRANK CAS	000000	000000
9112192140	9-1121	9214	COVER; OIL PIPE 6RB1	000002	000000
9112192150	9-1121	9215	COVER; CRANK CASE 4JB1-PK	000006	000011
9112192160	9-1121	9216	PACKING; COVER C190/4JB1-	000024	000000
9112192290	9-1121	9229	CUP; SEALING	000000	000000
9112193020	9-1121	9302	COVER; CYL-BLOCK O-FILT.	000003	000000
9112193080	9-1121	9308	CUP; SEALING, CYLINDER	000000	000000
9112193160	9-1121	9316	PLATE; DIST	000000	000000
9112193222	9-1121	9322	PACKING; OIL COOLER	000000	000000
9112194241	9-1121	9424	COVER; CYL BODY	000000	000000
9112194470	9-1121	9447	PROTECTOR; HEAT	000000	000000
9112194670	9-1121	9467	CUP; SEALING, WA	000000	000000
9112210250	9-1122	1025	DUCT, WATER, CYL.	000000	000000
9112246020	9-1122	4602	BUSHING; OIL PUMP	000000	000000
9112246021	9-1122	4602	BUSHING; OIL PUMP	000000	000114
9112290030	9-1122	9003	DOWEL; I-GEAR SPINDLE E12	000000	000000
9112290031	9-1122	9003	DOWEL; I-GEAR SPINDLE E12	000011	000000
9112290110	9-1122	9011	DOWEL; BRG CAP	000000	000000
9112290111	9-1122	9011	DOWEL; BRG CAP	000000	000000
9112290112	9-1122	9011	DOWEL; BRG CAP	000001	000006
9112290300			GASKET; FUEL PUM	000000	000000
9112290320	9-1122	9032	DOWEL; FRONT CO	000000	000000
9112290340	9-1122	9034	DOWEL; COVER SETTING	000000	000000
9112290490	9-1122	9049	DOWEL, CYL BODY	000000	000000
9112290580	9-1122	9058	DOWEL, SEAL RET	000000	000000
9112290581	9-1122	9058	DOWEL; RET TO C/BL	000000	000050
9112290700	9-1122	9070	CLIP; WATER, OI	000000	000000

9112298010	9-1122	9801	DOWEL;HD TO BLK	000000	000000
9112570230	9-1125	7023	DOWEL; BRG CAP #4	000000	000000
9112580020			PACKING	000000	000000
9112580400			PACKING	000000	000000
9112580590			PACKING	000000	000000
9112581080			GASKET,OIL PAN	000000	000143
9112581160	9-1125	8116	PACKING	000024	000017
9112581300	9-1125	8130	SEAL; OIL, BRG CAP R C/BO	000000	000000
9112590070			PIN	000000	000000
9112610810			LINER	000000	000000
9112612240			LINER; CYLINDER CROMARD C	000000	000000
9112612241	9-1126	1224	LINER; CYLINDER CROMARD C	000000	000000
9112612270	9-1126	1227	LINER; CYLINDER	000000	000000
9112612300	9-1126	1230	LINER	000000	000000
9112612301	9-1126	1230	LINER	000000	000000
9112612410	9-1126	1241	LINER; CYLINDER	000000	000000
9112612530	9-1126	1253	LINER	000000	000000
9112612531	9-1126	1253	LINER; CYL C221	000000	000000
9112612570	9-1126	1257	LINER; CYL C330	000000	000008
9112612871	9-1126	1287	LINER	000000	000000
9112612880	9-1126	1288	LINERS	000000	000000
9112612900	9-1126	1290	LINER CYL.	000000	000000
9112613010			CYL LINER	000000	000000
9112670100			LINER O-RING	000000	000000
9112670371	9-1126	7037	LINER O-RING	000000	000000
9112670390	9-1126	7039	PACKING,LINER	000000	000000
9112808016	9-1128	0801	COVER ASM.;WATER	000000	000000
9112808021	9-1128	0802	COOLER ASM; OIL	000000	000000
9112818021	9-1128	1802	BODY;OIL COOLER	000000	000000
9112820181	9-1128	2018	PACKING; OIL COOLER	000000	000000
9112911050	9-1129	1105	COVER; TAPPET C	000000	000000
9112911051	9-1129	1105	COVER; TAPPET C	000000	000000
9112916040	9-1129	1604	COVER;TAPPET	000000	000000
9112916050	9-1129	1605	COVER; TAPPET CHAMBER 6BD	000000	000000
9112916051	9-1129	1605	COVER; TAPPET CHAMBER 6BD	000000	000000
9112920300			PACKING	000000	000000
9112920310			PACKING	000000	000000
9112920570			PACKING; TAPPET	000000	000000
9112920602	9-1129	2060	GASKET	000000	000000
9112976500	9-1129	7650	COVER ASSY	000014	000000
9112976501	9-1129	7650	COVER ASSY	000005	000000
9112996020	9-1129	9602	BAFFLE	000000	000000
9112996021	9-1129	9602	BAFFLE	000000	000000
9113111150			GEAR CASE	000000	000000
9113111220	9-1131	1122	GEAR CASE	000000	000000
9113111530	9-1131	1153	PLATE	000000	000040
9113111770	9-1131	1177	CASE; TIMING GEARS	000000	000000

9113112003			SUPERSEDED**GEAR CASE	000000	000000
9113118060	9-1131	1806	PLATE; FRONT	000000	000000
9113118071	9-1131	1807	CASE; TIMING GEARS	000000	000000
9113120340	9-1131	2034	GEAR CASE GASKET	000000	000000
9113120341	9-1131	2034	GEAR CASE GASKET	000151	000000
9113120460	9-1131	2046	TIMING GASKET	000000	000147
9113120560	9-1131	2056	PACKING; FRONT PLATE	000000	000000
9113120830	9-1131	2083	PACKING; FRONT PLATE	000000	000000
9113128030	9-1131	2803	PACKING	000000	000000
9113190430	9-1131	9043	PACKING; BRACKET TO PLATE	000000	000000
9113190650	9-1131	9065	DOWEL; GEAR CASE COVER SE	000000	000000
9113190651	9-1131	9065	DOWEL; GEAR CASE COVER SE	000000	000000
9113190652	9-1131	9065	DOWEL; GEAR CASE COVER SE	000000	000000
9113190653	9-1131	9065	DOWEL; GEAR CASE COVER SE	000004	001828
9113196370	9-1131	9637	PACKING	000004	000000
9113210460	9-1132	1046	PACKING; TIMING	000000	000000
9113211370	9-1132	1137	COVER; TIMING GEAR CASE	000001	000000
9113211480	9-1132	1148	COVER; TIMING GEAR CASE	000001	000005
9113211790	9-1132	1179	COVER	000001	000000
9113212160	9-1132	1216	SUPERSEDED**COVER	000000	000000
9113220050			PACKING	000000	000000
9113220460	9-1132	2046	GASKET; COVER	000000	000000
9113220580			PACKING	000000	000000
9113220590			PACKING	000000	000000
9113220660	9-1132	2066	PACKING; CHECKING	000000	000000
9113220772	9-1132	2077	PACKING;COVER	000000	000000
9113220830	9-1132	2083	PACKING; GEAR CASE F/P.N.	000014	000000
9113228020	9-1132	2802	GASKET; COVER	000000	000000
9113230010			COVER	000000	000000
9113230110			END PIECE	000000	000000
9113240140	9-1132	4014	PACKING	000000	000000
9113250580	9-1132	5058	COVER; BRG, TIMING GEAR C	000000	000000
9113250581	9-1132	5058	COVER; BRG, TIMING GEAR C	000001	000000
9113250650	9-1132	5065	BRG COVER	000000	000000
9113250720	9-1132	5072	CASE ASM; BRG, INJ PUMP	000000	000000
9113260030			PACKING	000003	000000
9113270310	9-1132	7031	POINTER; AIR CM	000000	000001
9113270450	9-1132	7045	POINTER; GEAR CASE	000000	000007
9113276020	9-1132	7602	POINTER, TIMING	000000	000046
9113290250			COVER	000000	000000
9113406115	9-1134	0611	SUPERSEDED**HOUSING	000000	000000
9113406118	9-1134	0611	SUPERSEDED**HOUSING	000000	000000
9113411790	9-1134	1179	PLATE	000000	000000
9113411791	9-1134	1179	PLATE	000003	000000
9113411940	9-1134	1194	PLATE; RR CYL BLOCK	000000	000000
9113411942	9-1134	1194	PLATE; RR CYL BLOCK	000000	000001
9113416099	9-1134	1609	HOUSING; FLYWHEEL 4BD/6BG	000000	000000

9113416110	9-1134	1611	HOUSING; FLYWHEEL SAE 5	000000	000000
9113416182	9-1134	1618	HOUSING; FLYWHEEL	000000	000000
9113416190	9-1134	1619	HOUSING; FLYWHEEL	000000	000000
9113416191	9-1134	1619	HOUSING; FLYWHEEL	000000	000000
9113416193	9-1134	1619	HOUSING; FLYWHEEL	000000	000000
9113416194	9-1134	1619	HOUSING; FLYWHEEL	000000	000000
9113416210	9-1134	1621	HOUSING; FLYWHEEL	000000	000000
9113416211	9-1134	1621	HOUSING; FLYWHEEL	000000	000000
9113416270	9-1134	1627	HOUSING; FLYWHEEL	000000	000000
9113416280	9-1134	1628	PLATE	000000	000000
9113416300	9-1134	1630	HOUSING; FLYWHEEL	000000	000000
9113416322	9-1134	1632	HOUSING; FLYWHEEL 4BD/6BG	000000	000000
9113416325	9-1134	1632	HOUSING; FLYWHEEL 4BD/6BG	000000	000000
9113416328	9-1134	1632	HOUSING; FLYWHEEL 4BD/6BG	000000	000002
9113416329	9-1134	1632	HOUSING; FLYWHEEL 4BD/6BG	000000	000000
9113416332	9-1134	1633	HOUSING; FLYWHEEL	000000	000000
9113416333	9-1134	1633	HOUSING; FLYWHEEL	000000	000000
9113416334	9-1134	1633	HOUSING; FLYWHEEL	000000	000000
9113416335	9-1134	1633	HOUSING; FLYWHEEL	000000	000003
9113418090	9-1134	1809	PLATE;RR.,CYL.BLOCK	000000	000000
9113420190	9-1134	2019	POINTER; TIMING	000000	000000
9113420240	9-1134	2024	POINTER; TIMING	000000	000000
9113426010	9-1134	2601	POINTER; TIMING	000000	000000
9113430391	9-1134	3039	COVER; FLYWHEEL HOUSING	000000	000000
9113430460	9-1134	3046	COVER; FLYWHEEL, HSG	000000	000000
9113438010	9-1134	3801	COVER;PTO,FLYWH	000000	000000
9113440151	9-1134	4015	PACKING	000000	000000
9113490490	9-1134	9049	COVER	000012	000000
9113490800	9-1134	9080	PACKING	000000	000000
9113491340	9-1134	9134	CVR;CHECK HOLE	000000	000000
9113491341	9-1134	9134	CVR;CHECK HOLE	000000	000005
9113491710	9-1134	9171	SPACER; FLYWHEEL	000000	000000
9113492050			COVER;HOLE	000000	000000
9113492360	9-1134	9236	DISTANCE PIECE DA120	000004	000000
9113498030	9-1134	9803	COVER; DUST,FLYWHEEL	000000	000000
9113605650	9-1136	0565	PAN ASM; OIL	000000	000000
9113606032	9-1136	0603	PAN ASM; OIL C240	000000	000003
9113606141	9-1136	0614	PAN ASM; OIL,W/DRAIN PLUG	000000	000000
9113606221	9-1136	0622	PAN ASM; OIL	000002	000000
9113608452	9-1136	0845	PAN ASM; OIL	000000	000000
9113615261	9-1136	1526	PAN ASM; OIL	000000	000000
9113670040			GASKET	000000	000000
9113671390			PACKING; OIL PAN TO CRANK	000000	000000
9113671421			PACKING OIL	000000	000000
9113671482			PACKING; OIL PAN E120	000000	000000
9113671522	9-1136	7152	GASKET	000000	000000
9113671560	9-1136	7156	PACKING; OIL PAN	000000	000000

9113671722	9-1136	7172	PACKING; OIL CYL BLOCK DA	000000	000000
9113676030	9-1136	7603	PACKING; OIL PAN	000000	000000
9113676031	9-1136	7603	PACKING; OIL PAN	000002	000000
9113678010	9-1136	7801	PACKING	000004	000000
9113690320	9-1136	9032	PACKING	000000	000000
9113692350	9-1136	9235	PLUG; DRAIN	000000	000000
9113692360	9-1136	9236	PLUG; TAPER/OIL PAN	000000	000000
9113692890	9-1136	9289	CLIP E120	000000	000000
9113693150	9-1136	9315	CLIP	000000	000000
9113706431	9-1137	0643	PAN ASM; OIL	000000	000000
9113706810	9-1137	0681	PAN ASM; OIL	000000	000000
9113706811	9-1137	0681	PAN ASM; OIL	000000	000000
9113706812	9-1137	0681	PAN ASM; OIL	000000	000000
9115101090			MAIN BRG	000000	000000
9115101250			MAIN BRGS	000000	000000
9115101360			METAL KIT; MAIN	000004	000002
9115101380	9-1151	0138	METAL KIT; MAIN	000003	000000
9115101490	9-1151	0149	METAL KIT; MAIN	000000	000000
9115101630	9-1151	0163	METAL KIT; MAIN	000000	000000
9115101890	9-1151	0189	METAL KIT; CRANK STD.	000001	000000
9115101940	9-1151	0194	METAL KIT	000001	000000
9115106060	9-1151	0606	METAL KIT; CRANK STD	000000	000000
9115151700	9-1151	5170	METAL KIT; THRUST	000005	000000
9115151980	9-1151	5198	METAL SET; THRUST	000002	000000
9115152160	9-1151	5216	METAL SET; THRU	000000	000000
9115301090			MAIN BRG KIT .025	000000	000000
9115301250			MAIN BRGS	000000	000000
9115301360			METAL BEARING; MAIN	000000	000002
9115301380	9-1153	0138	METAL KIT; CRANK	000003	000006
9115301630	9-1153	0163	METAL KIT, MAIN	000000	000000
9115301890			METAL KIT; CRANK	000005	000000
9115306060	9-1153	0606	METAL; .25 CRANK	000001	000000
9115401090			CRANK BRG KIT	000000	000000
9115401250			MAIN BRGS	000000	000000
9115401360			METAL KIT; CRANK	000003	000000
9115401380	9-1154	0138	METAL KIT; MAIN	000003	000003
9115401630	9-1154	0163	METAL KIT, MAIN	000000	000000
9115501090			CRANK BRG KIT	000000	000000
9115501250			MAIN BRGS	000000	000000
9115501360			CRANK BRG KIT	000000	000000
9115501380			MAIN BRG	000000	000000
9115501630	9-1155	0163	METAL KIT; .75 CRANK	000000	000000
9115601090			CRANK BRG KIT	000000	000000
9115601250			MAIN BRGS	000000	000000
9115601360			CRANK BRG KIT	000000	000000
9115601630	9-1156	0163	METAL KIT, MAIN	000000	000000
9115701090			CRANK BRG KIT	000000	000000

9115701360			CRANK BRG KIT	000000	000000
9115810480			METAL SET, THRUST	000000	000000
9115810570	9-1158	1057	THRUST METAL SET	000000	000000
9115856010	9-1158	5601	METAL SET; THRUST	000000	000000
9116100220			CAM BRG	000000	000000
9116106020			METAL KIT;CAMS	000000	000000
9116110020			CAM BRG	000000	000000
9116110240			METAL BRG	000001	000001
9116110480	9-1161	1048	METAL KIT; CAMSHAFT	000000	000000
9116110530	9-1161	1053	METAL; CAMSHAFT	000000	000000
9116130350	9-1161	3035	BRG;CAMSHAFT,RR	000000	000000
9116140150	9-1161	4015	METAL BRG # 3	000001	000000
9116160020	9-1161	6002	METAL BRG #2	000002	000000
9116170020	9-1161	7002	METAL BRG	000005	000000
9116170191	9-1161	7019	SUPERSEDED**BEARING	000000	000000
9116180130	9-1161	8013	SUPERSEDED**BEARING	000000	000000
9116190150	9-1161	9015	METAL BRG; CAM #7 E120	000000	000000
9116190170	9-1161	9017	METAL BRG; CAM #7 E120	000000	000000
9116190201	9-1161	9020	SUPERSEDED**BEARING SET	000000	000000
9116810100	9-1168	1010	THRUST PLATE	000000	000000
9116810101	9-1168	1010	THRUST PLATE	000000	000021
9116810150	9-1168	1015	PLATE; THRUST,CM/SHF	000000	000004
9116910480	9-1169	1048	METAL KIT; CAMSHAFT	000031	000098
9116930350	9-1169	3035	METAL;CMSHF,INTR & RR	000071	000086
9117110280			INSERT	000000	000000
9117110660			INSERT	000000	000008
9117111000	9-1171	1100	INSERT; VLV SEAT, EXH.	000000	000000
9117111410	9-1171	1141	VALVE INSERT	000000	000000
9117111450	9-1171	1145	INSERT	000000	000000
9117118030	9-1171	1803	INSERT.	000012	000002
9117150140			INSERT	000000	000000
9117150540			INSERT	000000	000020
9117150850	9-1171	5085	INSERT	000000	000000
9117151170	9-1171	5117	SEAT; VALVE INSERT, INLET	000000	000000
9117151230	9-1171	5123	VALVE INSERT	000000	000000
9117151260	9-1171	5126	VALVE; INSERT DH100	000000	000000
9117151311	9-1171	5131	SEAT; VALVE INSERT, INLET	000000	000000
9117156070	9-1171	5607	INSERT;VALVE	000012	000093
9117158010	9-1171	5801	SEAT; VALVE INSERT, INLET	000000	000008
9117210120			VALVE GUIDE	000000	000000
9117210150			VALVE GUIDE	000000	000000
9117210590			VALVE GUIDE	000000	000000
9117211130			VALVE GUIDE	000000	000030
9117211200	9-1172	1120	VALVE GUIDE	000000	000000
9117211230	9-1172	1123	VALVE GUIDE	000000	000000
9117211390	9-1172	1139	VALVE GUIDE	000000	000175
9117211530	9-1172	1153	VALVE GUIDE	000000	000100

9117211590	9-1172	1159	VALVE GUIDE; EXHAUST, CYL	000000	000000
9117211600	9-1172	1160	VALVE GUIDES	000006	000000
9117212120	9-1172	1212	VALVE GUIDE E120	000003	000000
9117228040	9-1172	2804	VALVE GUIDE	000000	000000
9117290090	9-1172	9009	BRIDGE GUIDE E120	000000	000000
9117400560	9-1174	0056	FILLER ASM.; OIL, W/CAP	000000	000000
9117400750			AIR BREATHER	000000	000000
9117400790			AIR BREATHER	000000	000000
9117401740			BREATHER ASM; AIR	000000	000000
9117401880	9-1174	0188	BREATHER	000000	000000
9117402511	9-1174	0251	BREATHER ASM; AIR	000000	000000
9117402981	9-1174	0298	BREATHER ASM; AIR	000000	000000
9117402983	9-1174	0298	BREATHER ASM; AIR	000000	000003
9117410930	9-1174	1093	FILLER ASM; OIL	000000	000000
9117411090	9-1174	1109	FILLER ASM; OIL 6RB1	000000	000000
9117411460	9-1174	1146	FILLER ASM; OIL	000000	000000
9117416060	9-1174	1606	FILLER ASM; OIL 4BB1	000000	000000
9117426140	9-1174	2614	PIPE; DRAIN	000000	000000
9117428040	9-1174	2804	PIPE; DRAIN	000000	000000
9117440342	9-1174	4034	PACKING; AIR BREATHER E12	000000	000000
9117450180	9-1174	5018	ELEMENT	000000	000000
9117450240	9-1174	5024	ELEMENT; AIR BREATHER	000000	000028
9117450590	9-1174	5059	ELEMENT	000005	000000
9117450610	9-1174	5061	BREATHER ASM; AIR	000006	000000
9117460230	9-1174	6023	RETAINER; BREATHER	000000	000000
9117460250	9-1174	6025	CAP; AIR BREATHER BODY	000001	000000
9117476080	9-1174	7608	BRACKET; OIL FILTER	000000	000000
9117500280	9-1175	0028	FILLER CAP	000000	000000
9117500310	9-1175	0031	OIL FILLER CAP	000000	000001
9117500430	9-1175	0043	CAP ASM	000000	000002
9117500460	9-1175	0046	CAP**	000000	000000
9117500500	9-1175	0050	CAP; FILLER OIL 6RB1/E120	000000	000000
9117500501	9-1175	0050	CAP; FILLER OIL 6RB1/E120	000000	000000
9117500531	9-1175	0053	CAP ASSY, OIL FI	000000	000000
9117506020	9-1175	0602	CAP ASM	000000	000000
9117510260	9-1175	1026	CAP	000000	000000
9117510381	9-1175	1038	CAP, OIL FILLER	000000	000000
9117590140	9-1175	9014	BRACKET; CHAIN	000022	000000
9117600360			LEVEL; GAUGE	000000	000000
9117601050			GUAGE LEVEL	000002	000001
9117601620	9-1176	0162	GAUGE ASM; OIL LEVEL	000002	000000
9117602071	9-1176	0207	OIL GUAGE	000000	000000
9117603020	9-1176	0302	GAUGE ASM; OIL LEVEL E120	000000	000000
9117606061	9-1176	0606	GAUGE ASM.; OIL LEVEL	000000	000001
9117606070	9-1176	0607	GAUGE ASM; OIL LEVEL	000000	000000
9117606090	9-1176	0609	GAUGE ASM; OIL LEVEL	000000	000001
9117606100	9-1176	0610	GAUGE ASM; OIL LEVEL	000000	000000

9117661371	9-1176	6137	TUBE GUIDE	000000	000000
9117690100	9-1176	9010	OIL SEAL	000000	000000
9117690570	9-1176	9057	STAY	000000	000000
9117690700	9-1176	9070	STAY;GUIDE TUBE	000000	000000
9117710511	9-1177	1051	FOOT; ENGINE FRONT RH, CY	000000	000000
9117710512	9-1177	1051	FOOT; ENGINE FRONT RH, CY	000000	000000
9117710521	9-1177	1052	FOOT; ENGINE FRONT LH	000000	000000
9117710522	9-1177	1052	FOOT; ENGINE FRONT LH	000000	000000
9117712070	9-1177	1207	FOOT; ENGINE RH	000000	000001
9117712150	9-1177	1215	FOOT; ENGINE E120	000000	000000
9117712151	9-1177	1215	FOOT; ENGINE E120	000000	000000
9117712470	9-1177	1247	FOOT;ENG.,RH	000000	000002
9117712480	9-1177	1248	FOOT;ENG.,LH	000000	000006
9117716320	9-1177	1632	FOOT;ENGINE (LH)	000000	000000
9117716350	9-1177	1635	FOOT; ENG., FRT.LH, BLOCK	000000	000000
9117716360	9-1177	1636	FOOT; ENGINE FRT CYL BLOC	000000	000000
9117718011	9-1177	1801	ENGINE FOOT	000000	000000
9117718012	9-1177	1801	ENGINE FOOT	000020	000000
9117718021	9-1177	1802	FOOT; ENGINE	000000	000000
9117718022	9-1177	1802	FOOT; ENGINE	000000	000004
9117718030	9-1177	1803	FOOT,ENGINE	000000	000000
9117718040	9-1177	1804	FOOT,ENGINE	000000	000000
9117718111	9-1177	1811	FOOT; ENGINE RH	000001	000000
9117718121	9-1177	1812	FOOT; ENGINE LH	000001	000000
9117738010	9-1177	3801	FOOT; ENGINE, RR.	000000	000000
9117770190	9-1177	7019	HANGER	000000	000000
9117770750	9-1177	7075	HANGAR	000000	000000
9117770870	9-1177	7087	HANGER; ENGINE E120	000000	000000
9117771311			HANGER; RR ENGINE LIFTING	000000	000000
9117771360	9-1177	7136	HANGER; R ENGINE	000007	000000
9117771521	9-1177	7152	HANGER; ENGINE, LIFT RR	000000	000000
9117771620	9-1177	7162	HANGER	000000	000000
9117771621	9-1177	7162	HANGER	000000	000011
9117776120	9-1177	7612	HANGER; ENG,LIFT	000000	000000
9117776121	9-1177	7612	HANGER; ENG,LIFT	000000	000000
9117776220	9-1177	7622	HANGER; R ENGINE, LIFT	000000	000000
9117776221	9-1177	7622	HANGER; R ENGINE, LIFT	000000	000000
9117778050	9-1177	7805	HGR; ENG LIFT	000000	000000
9121111960			PISTON	000000	000000
9121113020			PISTONS	000000	000000
9121116460			PISTONS	000000	000000
9121117423	9-1211	1742	PISTON	000000	000000
9121117424	9-1211	1742	PISTON	000006	000000
9121117841			PISTON; STD.	000000	000000
9121133020			PISTONS	000000	000000
9121143020			PISTON	000000	000000
9121146460			PISTON; .50	000000	000000

9121153020			PISTONS	000000	000000
9121163020			PISTON	000000	000000
9121810460			PISTON RING	000000	000000
9121810570			PISTON RING KIT	000000	000003
9121811000			PISTON RING KIT	000000	000000
9121811220			PISTON RING KIT	000000	000000
9121811380			PISTON RING SET	000000	000000
9121830050			PISTON RING KIT	000000	000000
9121830570			PISTON RING KIT	000000	000000
9121840570			PISTON RING KIT	000000	000000
9121850570			PISTON RING KIT	000000	000000
9121860570			PISTON RING KIT	000000	000000
9122000190			CON ROD ASM	000000	000000
9122000960			ROD ASM; CONN	000000	000000
9122110650	9-1221	1065	PISTON PINS	000017	000004
9122110660	9-1221	1066	PISTON PINS	000009	000000
9122110670	9-1221	1067	PIN; PISTON	000019	000000
9122110680			PISTON PIN	000000	000006
9122110780			PIN; PISTON	000004	000001
9122116040	9-1221	1604	PIN;PISTON	000000	000000
9122116041	9-1221	1604	PIN;PISTON	000000	000081
9122116070	9-1221	1607	PIN; PISTON	000000	000018
9122301100			CON ROD ASM	000000	000000
9122301810	9-1223	0181	CONN ROD	000000	000000
9122301860	9-1223	0186	ROD ASM; CONN	000000	000000
9122302451	9-1223	0245	ROD ASM; CONN, Z MARK E12	000000	000002
9122302461	9-1223	0246	ROD ASM	000000	000000
9122308020	9-1223	0802	CON ROD ASSY	000000	000000
9122351022	9-1223	5102	BOLT; CONN ROD	000007	000000
9122351041	9-1223	5104	BOLT; CONN ROD, MF	000000	000000
9122351060	9-1223	5106	BOLT	000026	000000
9122510340			BRUSH	000000	000000
9122510610			BUSH	000000	000133
9122510620	9-1225	1062	BUSHING	000004	000000
9122510700	9-1225	1070	BUSHING	000000	000000
9122510830	9-1225	1083	BUSH	000010	000000
9122510840	9-1225	1084	CON ROD BUSH	000006	000000
9122510880	9-1225	1088	BUSH; CONN ROD	000000	000000
9122510910	9-1225	1091	BUSH*	000000	000000
9122516020	9-1225	1602	BUSHING;CONN ROD	000000	000000
9122516030	9-1225	1603	BUSH; CONN ROD	000000	000011
9122611770	9-1226	1177	METAL SET; C-ROD	000000	000000
9122711210	9-1227	1121	METAL SET; ROD	000007	000013
9122711310	9-1227	1131	METAL SET; C-ROD	000000	000000
9122711320			CON ROD BRG	000000	000000
9122711460			METAL SET; ROD	000000	000007
9122711680	9-1227	1168	METAL SET	000000	000000

9122711790	9-1227	1179	METAL SET; C-ROD	000000	000000
9122711791	9-1227	1179	METAL SET; C-ROD	000000	000000
9122712040			METAL SET	000005	000000
9122716080	9-1227	1608	METAL SET; CONN ROD	000104	000081
9122731210	9-1227	3121	METAL SET; ROD	000009	000000
9122731310	9-1227	3131	METAL SET; ROD	000000	000000
9122731320			CON ROD BRG	000000	000000
9122731460			METAL SET; ROD	000011	000006
9122731520	9-1227	3152	METAL SET; .25 C-ROD	000000	000000
9122732040	9-1227	3204	BUSHING; CONN ROD	000004	000000
9122736080	9-1227	3608	METAL KIT;CONN ROD	000000	000059
9122741210	9-1227	4121	METAL SET; ROD	000000	000009
9122741310	9-1227	4131	METAL SET; ROD	000012	000000
9122741320			CON ROD BRGS	000000	000000
9122741460			METAL SET; ROD	000006	000000
9122741520	9-1227	4152	METAL SET; .50 C-ROD	000000	000000
9122741680	9-1227	4168	METAL	000000	000000
9122742040	9-1227	4204	BEARING SET; UNSI. 0.50	000000	000000
9122746080	9-1227	4608	METAL KIT;CONN ROD .50	000000	000037
9122751210			CON ROD BRG	000000	000000
9122751320			BEARING	000000	000000
9122751460			CON ROD BRG	000000	000000
9122756080	9-1227	5608	METAL KIT; CONN ROD .75	000000	000004
9122761210			CON ROD BRG	000000	000000
9122761320			CON ROD BRG	000000	000000
9122761460			CON ROD BRG SET	000000	000000
9122761520			METAL SET; 1.00 C-ROD	000000	000000
9122761680	9-1227	6168	METAL SET; 1.00 C-ROD	000000	000000
9122766080	9-1227	6608	METAL KIT; CONN ROD	000000	000002
9122771210			CON ROD BRG	000000	000000
9122771460			CON ROD BRGS	000000	000000
9123102450			CRANKSHAFT ASM	000000	000000
9123103701	9-1231	0370	CRANKSHAFT	000000	000000
9123104531	9-1231	0453	CRANKSHAFT ASM	000000	000001
9123105190	9-1231	0519	CRANKSHAFT ASM	000000	000000
9123190030	9-1231	9003	BUSH	000004	000000
9123190151	9-1231	9015	RING; WEAR, REAR CRANK	000002	000000
9123190320	9-1231	9032	SPACER; WEAR RING	000003	000000
9123206081	9-1232	0608	CRANKSHAFT ASM	000000	000000
9123206093	9-1232	0609	CRANKSHAFT ASM	000000	000000
9123206094	9-1232	0609	CRANKSHAFT ASM	000000	000000
9123206132	9-1232	0613	CRANKSHAFT ASM; SPLINE	000000	000000
9123206133			CRANKSHAFT ASM; SPLINE	000000	000000
9123206152	9-1232	0615	CRANKSHAFT ASM	000000	000000
9123206243	9-1232	0624	CRANKSHAFT ASM	000000	000000
9123208011	9-1232	0801	CRANKSHAFT ASM	000000	000000
9123208031	9-1232	0803	SUPERSEDED**CRANKSHAFT	000000	000000

9123301990	9-1233	0199	FLYWHEEL ASM	000000	000000
9123302570	9-1233	0257	FLYWHEEL	000000	000000
9123302700	9-1233	0270	FLYWHEEL ASM.	000000	000000
9123306100	9-1233	0610	FLYWHEEL ASM	000000	000000
9123306120	9-1233	0612	FLYWHEEL ASM.	000000	000000
9123306130	9-1233	0613	FLYWHEEL ASM; W/RING GEAR	000000	000000
9123306191	9-1233	0619	FLYWHEEL ASM	000000	000000
9123306421	9-1233	0642	FLYWHEEL ASM	000000	000000
9123306601	9-1233	0660	FLYWHEEL ASM	000000	000001
9123308010	9-1233	0801	FLYWHEEL ASM	000000	000000
9123308091	9-1233	0809	FLYWHEEL QD27/40	000000	000000
9123308110	9-1233	0811	FLYWHEEL ASM.	000000	000000
9123311080	9-1233	1108	FLYWHEEL	000000	000000
9123311081	9-1233	1108	FLYWHEEL	000000	000000
9123316130	9-1233	1613	FLYWHEEL; W/O GEAR, SEE 9	000000	000000
9123316140	9-1233	1614	FLYWHEEL ASM 8"	000000	000000
9123316331	9-1233	1633	FLYWHEEL	000000	000000
9123330140	9-1233	3014	GEAR; RING	000000	000000
9123330320	9-1233	3032	RING GEAR, FLYWH	000000	000000
9123330321	9-1233	3032	RING GEAR, FLYWH	000000	000011
9123330360			RING GEAR	000000	000000
9123330361			GEAR, RING, FLY W	000000	000041
9123330391	9-1233	3039	GEAR; RING (Z=112)	000000	000000
9123330410	9-1233	3041	GEAR; RING	000000	000001
9123336031	9-1233	3603	GEAR; RING (Z=114)	000000	000000
9123336051	9-1233	3605	GEAR; RING (Z=126) C240	000000	000001
9123336061	9-1233	3606	GEAR; RING	000002	000002
9123336070	9-1233	3607	GEAR; RING, FLYWH	000000	000001
9123340210	9-1233	4021	BOLT	000000	000000
9123340270	9-1233	4027	BOLT	000015	000000
9123360140			LOCK PLATE	000000	000000
9123360230			WASHERS	000000	000000
9123360251	9-1233	6025	WASHER; FLYWHEEL, FIX BOL	000008	000007
9123360300	9-1233	6030	PLATE; FIX	000000	000000
9123360390	9-1233	6039	PLATE LOCK; FLYWH	000050	000000
9123390610	9-1233	9061	BEARING; HOLDER	000000	000000
9123390611	9-1233	9061	BEARING; HOLDER	000000	000005
9123396030	9-1233	9603	CASE; BRG. FLY WHEEL	000000	000000
9123610130			THRUST COLLAR	000000	000000
9123610150			THRUST COLLAR	000000	000000
9123610242	9-1236	1024	THRUST COLLAR	000003	000000
9123620280			OIL THROWER	000000	000000
9123620360			OIL THROWER	000000	000000
9123620380	9-1236	2038	THROWER; OIL, FRONT	000000	000000
9123620390	9-1236	2039	THROWER	000015	000000
9123620520	9-1236	2052	THROWER; OIL	000000	000000
9123620530	9-1236	2053	THROWER; OIL, REAR	000000	000000

9123620590	9-1236	2059	THROWER	000000	000000
9123630730			RETAINER	000000	000000
9123631120			SPACER, CRANK SH	000000	000000
9123631121	9-1236	3112	SPACER; CRANK	000000	000002
9123631460	9-1236	3146	SPACER; OIL SEA	000000	000004
9123631530	9-1236	3153	RETAINER; CRANK	000000	000000
9123640190	9-1236	4019	PACKING E120	000000	000000
9123640200	9-1236	4020	PACKING	000000	000000
9123640202	9-1236	4020	PACKING; OIL	000000	000000
9123650380			OIL SEAL	000000	000000
9123650400			SEAL; RR CRANK	000000	000000
9123650560			SEAL; OIL	000000	000000
9123708071	9-1237	0807	PULLEY; CR/SHF	000000	000002
9123710040			PULLEY	000000	000000
9123711630			PULLEY	000000	000000
9123711650			PULLEY	000000	000000
9123711990			PULLEY	000000	000000
9123713460			SPACER	000000	000000
9123713600			SPACERS	000000	000000
9123713700			PULLEY	000000	000000
9123714590	9-1237	1459	PULLEY; CRANKSHAFT DH100	000000	000000
9123714811	9-1237	1481	PULLEY	000000	000000
9123714872	9-1237	1487	PULLEY; CRANKSHAFT	000000	000000
9123736051	9-1237	3605	PULLEY	000000	000000
9123736052	9-1237	3605	PULLEY; CRANKSHAFT	000002	000000
9123736060	9-1237	3606	THROWER	000018	000000
9123736120	9-1237	3612	PULLEY; KEY	000000	000000
9123736121	9-1237	3612	PULLEY; CRANKSHAFT	000000	000000
9123750231	9-1237	5023	DAMPER; CRANKSHAFT	000000	000000
9123751120	9-1237	5112	DAMPER	000000	000000
9123756020	9-1237	5602	DAMPER	000000	000000
9123780150			CLAW	000000	000000
9123780220			PULLEY NUT	000000	000000
9123780370			CLAW	000000	000000
9123780390			NUT; CRANK E120	000001	000001
9123790090			WASHER	000000	000000
9123790160			WASHER; CRANKSHAFT PULLEY	000122	000011
9123790240			BUSH	000000	000000
9123790350			LOCK PLATE	000000	000000
9123790360	9-1237	9036	LOCKING; PLATE	000000	000000
9123790450	9-1237	9045	BUSH; TAPER, PULLEY	000000	000034
9123790610	9-1237	9061	BUSH; TAPER E120	000000	000001
9123790670	9-1237	9067	THROWER; DUST, CENTER	000000	000000
9123790770	9-1237	9077	THROWER; DUST	000000	000000
9123790780	9-1237	9078	LOCK PLATE; DAMPER FIX	000000	000000
9123790790	9-1237	9079	LOCK PLATE; DAMPER FIX	000000	000000
9124118140	9-1241	1814	PISTON	000000	000006

9125110460			CAM SHAFT	000000	000000
9125111140			GEAR; CAMSHAFT	000000	000000
9125114630	9-1251	1463	CAMSHAFT	000000	000000
9125114640	9-1251	1464	CAMSHAFT	000001	000000
9125114660	9-1251	1466	SUPERSEDED**CAMSHAFT	000000	000000
9125115850	9-1251	1585	SUPERSEDED**CAMSHAFT	000000	000000
9125148030	9-1251	4803	CAMSHAFT	000000	000000
9125148031	9-1251	4803	CAMSHAFT	000000	000002
9125190090	9-1251	9009	WASHER	000000	000000
9125200490			GEAR; CAM SHAFT	000000	000000
9125210010			GEAR; CRANKSHAFT	000000	000000
9125210011	9-1252	1001	GEAR; CRANKSHAFT	000000	000001
9125210190			CRANK GEAR	000000	000000
9125210200			GEAR	000000	000000
9125210420	9-1252	1042	CRANK GEAR	000000	000000
9125210421	9-1252	1042	CRANK GEAR	000000	000003
9125210430	9-1252	1043	GEAR; CRANKSHAF	000000	000000
9125210452	9-1252	1045	GEAR; CRANKSHAFT	000000	000000
9125220030	9-1252	2003	GEAR; CAM	000004	000000
9125220271	9-1252	2027	GEAR; CAMSHAFT E120	000000	000000
9125220560			GEAR	000000	000000
9125221440			GEAR; CAMSHAFT	000000	000000
9125221441	9-1252	2144	GEAR; CAMSHAFT	000000	000009
9125221470	9-1252	2147	GEAR; CAMSHAFT	000000	000000
9125221471	9-1252	2147	GEAR; CAMSHAFT	000000	000000
9125228010	9-1252	2801	GEAR;	000002	000000
9125230360			GEAR	000000	000000
9125230540			GEAR; IDLE	000000	000000
9125230800	9-1252	3080	GEAR; W/BUSH	000000	000000
9125231080			GEAR	000000	000000
9125231270			GEAR	000003	000003
9125231350	9-1252	3135	GEAR	000000	000000
9125231500	9-1252	3150	GEAR; IDLER	000000	000000
9125238010	9-1252	3801	GEAR; IDLER	000000	000000
9125238011	9-1252	3801	GEAR; IDLER	000000	000000
9125238012	9-1252	3801	GEAR ASM; IDLE, W/BUSH	000000	000000
9125238013	9-1252	3801	GEAR; IDLER	000000	000000
9125238014	9-1252	3801	GEAR; IDLER	000000	000000
9125240010			GEAR	000000	000000
9125240190			GEAR; INJ PUMP E120	000000	000000
9125240250	9-1252	4025	GEAR; PUMP	000000	000000
9125240261	9-1252	4026	GEAR; INJ PUMP	000000	000000
9125240410	9-1252	4041	GEAR; PUMP	000000	000000
9125240550			GEAR; INJ PUMP	000000	000000
9125240860			GEAR; IDLER	000000	000000
9125248020			GEAR	000000	000000
9125248050			GEAR; DRIVE C190	000000	000000

9125258011	9-1252	5801	GEAR; HYDR/PUMP DRIVE	000000	000000
9125270030			SPACER	000000	000000
9125280180			GEAR; W/BUSH	000000	000000
9125280290	9-1252	8029	BUSH.	000001	000003
9125288010	9-1252	8801	BUSH	000000	000000
9125288011	9-1252	8801	BUSH	000000	000054
9125310120			SHAFT; IDLE	000000	000000
9125310140			SHAFT	000000	000000
9125310240	9-1253	1024	SHAFT; IDLE GEAR	000000	000000
9125310241	9-1253	1024	SHAFT; IDLE GEAR	000000	000033
9125310260	9-1253	1026	SHAFT	000000	000000
9125310300	9-1253	1030	SHAFT; IDLE GEAR	000000	000002
9125310331	9-1253	1033	SHAFT; IDLE GEAR E120	000000	000000
9125310332	9-1253	1033	SHAFT; IDLE GEAR E120	000000	000000
9125310410	9-1253	1041	SPNDLE; IDLE	000000	000000
9125320130			SHAFT	000000	000000
9125320150			SHAFT	000000	000000
9125320251			SHAFT	000000	000000
9125320260			SHAFT; INJ. PUMP	000002	000002
9125320300	9-1253	2030	SHAFT; INJ PUMP GEAR	000000	000000
9125320370	9-1253	2037	SHAFT; INJ. PUMP DRIVE	000000	000000
9125320421			SHAFT	000000	000000
9125320520	9-1253	2052	SHAFT; INJ PUMP DRIVE	000000	000000
9125350040			COLLAR	000000	000000
9125350050			COLLAR	000000	000000
9125350170			COLLAR	000000	000000
9125350200			THRUST COLLAR	000000	000000
9125350210	9-1253	5021	PLATE; THRUST, IDLE GEAR	000001	000000
9125390090	9-1253	9009	ADAPTOR	000000	000000
9125390590	9-1253	9059	ADAPTER E120	000000	000000
9125390670	9-1253	9067	ADAPTER E120	000000	000000
9125390710	9-1253	9071	TACH DRIVE 6BD1	000000	000000
9125390770	9-1253	9077	ADAPTOR; TACHO DRIVE	000000	000000
9125390790	9-1253	9079	DOWEL, IDLE SHAF	000000	000000
9125510220			INLET VALVE	000000	000000
9125510370			VALVE; INLET	000000	000000
9125510710			VALVE	000000	000000
9125510770			SUPERSEDED**VALVE	000000	000000
9125511320	9-1255	1132	INLET VALVE	000000	000000
9125511880	9-1255	1188	VALVE; INLET	000000	000006
9125518010	9-1255	1801	VALVE; INLET	000000	000000
9125518020	9-1255	1802	VALVE; INLET	000000	000000
9125518021	9-1255	1802	VALVE; INLET	000000	000140
9125520010	9-1255	2001	VALVE; EXHAUST	000000	000000
9125521030			EXH VALVE	000000	000000
9125521210			EXH VALVE	000000	000000
9125521290			VALVE; EXHAUST	000000	000000

9125521292	9-1255	2129	VALVE; EXHAUST	000000	000065
9125521500			VALVE	000000	000000
9125522070			VALVE; EXHAUST	000000	000000
9125522512	9-1255	2251	VALVE; EXH.	000000	000000
9125528010	9-1255	2801	VALVE; EXH	000000	000000
9125590050	9-1255	9005	RING	000021	000000
9125590080	9-1255	9008	RING, SEALING, SP	000000	005971
9125610210	9-1256	1021	SPRINGS	000022	000004
9125610370	9-1256	1037	SPRING; VALVE	000248	000000
9125610820	9-1256	1082	VALVE SPRING	000000	000000
9125611100	9-1256	1110	SPRING; VALVE	000000	000000
9125611410			SPRING; VALVE	000000	000735
9125620100	9-1256	2010	SPRING	000050	000000
9125620260	9-1256	2026	SPRING; VALVE	000029	000000
9125620650	9-1256	2065	VALVE SPRINGS	000000	000000
9125620890	9-1256	2089	SPRING DA100	000000	000000
9125630010			9-12563-054-0	000000	000000
9125630160			SEAT; SPRING	000000	000000
9125630540			SEAT	000000	000000
9125630550			SEAT	000000	000000
9125630950	9-1256	3095	SEAT	000000	000000
9125630960	9-1256	3096	SEAT; SPR	000000	000010
9125631070	9-1256	3107	SEAT	000000	000000
9125632170	9-1256	3217	SEAT	000017	000000
9125632190			SEAT	000000	000000
9125632300			SEAT	000000	000000
9125632310	9-1256	3231	SEAT; SPR, LWR	000000	000000
9125632311	9-1256	3231	SEAT; SPR, LWR	000000	000060
9125632510	9-1256	3251	SEAT*	000000	000000
9125632530	9-1256	3253	SEAT*	000000	000000
9125632581	9-1256	3258	SEAT; VALVE SPRING, LOWER	000000	000000
9125650060			SPLIT COLLAR	000000	000000
9125650120			SPLIT COLLAR	000048	000000
9125650170			COLLAR SPLIT	000000	000000
9125650220	9-1256	5022	VALVE CUTTER	000000	000000
9125650260	9-1256	5026	COLLAR	000000	000000
9125650350	9-1256	5035	SPLIT COLLAR	000075	000000
9125690220			CUP	000000	000000
9125690440	9-1256	9044	SEAL; VALVE	000000	000000
9125690551	9-1256	9055	VALVE STEM; OIL	000000	000000
9125690650			SEAL; VALVE, GUIDE	000000	000000
9125690720			SEAL; VALVE GUIDE E120	000034	000018
9125696010	9-1256	9601	SEAL; VALVE	000000	000000
9125710280	9-1257	1028	TAPPETS	000027	000003
9125710930			TAPPET	000000	000000
9125711550	9-1257	1155	TAPPET	000000	000000
9125718010	9-1257	1801	TAPPET, CAM SHAF	000000	000000

9125718011	9-1257	1801	TAPPET,CAM SHAF	000063	000217
9125750160			PUSH ROD	000000	000000
9125750790			PUSH ROD	000009	000009
9125751230			PUSH ROD	000047	000000
9125751640	9-1257	5164	PUSH ROD	000000	000000
9125751680	9-1257	5168	PUSH;ROD,CAMSHA	000000	000000
9125751860	9-1257	5186	PUSH ROD	000000	000000
9125752080	9-1257	5208	PUSH ROD	000000	000000
9125752191	9-1257	5219	ROD; PUSH E120	000000	000000
9125758030	9-1257	5803	PUSHROD;TAPPET	000000	000000
9125791910	9-1257	9191	SHIM T=1.0 3KC1	000000	000002
9125791920	9-1257	9192	SHIM T=1.025 3KC1	000000	000000
9125791930	9-1257	9193	SHIM T=1.05 3KC1	000000	000000
9125791940	9-1257	9194	ADJUSTER	000000	000000
9125791950	9-1257	9195	SHIM T=1.1 3KC1	000000	000000
9125791960	9-1257	9196	SHIM T=1.125 3KC1	000008	000000
9125791970	9-1257	9197	SHIM T=1.150 3KC1	000002	000000
9125791980	9-1257	9198	SHIM T=1.175 3KC1	000000	000000
9125791990	9-1257	9199	SHIM T=1.2 3KC1	000000	000000
9125792000	9-1257	9200	SHIM T=1.225 3KC1	000000	000000
9125792010	9-1257	9201	SHIM T=1.250 3KC1	000000	000000
9125792020	9-1257	9202	SHIM T=1.275 3KC1	000000	000000
9125792030	9-1257	9203	SHIM T=1.30 3KC1	000000	000000
9125792040	9-1257	9204	SHIM T=1.325 3KC1	000000	000000
9125792050	9-1257	9205	SHIM T=1.35 3KC1	000000	000000
9125792060	9-1257	9206	SHIM T=1.375 3KC1	000000	000000
9125792070	9-1257	9207	SHIM T=1.4 3KC1	000000	000000
9125792080	9-1257	9208	SHIM T=1.425 3KC1	000005	000000
9125792090	9-1257	9209	SHIM T=1.450	000009	000000
9125792100	9-1257	9210	SHIM T=1.475 3KC1	000002	000000
9125792110	9-1257	9211	SHIM T=1.5 3KC1	000003	000000
9125792120	9-1257	9212	SHIM T=1.525 3KC1	000000	000000
9125792130	9-1257	9213	SHIM T=1.55 3KC1	000009	000000
9125792140	9-1257	9214	SHIM T=1.575 3KC1	000003	000000
9125792150	9-1257	9215	SHIM T=1.6 3KC1	000003	000000
9125792160	9-1257	9216	SHIM T=1.625 3KC1	000001	000000
9125792170	9-1257	9217	SHIM T=1.65; 3KC1	000003	000000
9125792180	9-1257	9218	SHIM T=1.675 3KC1	000001	000000
9125792190	9-1257	9219	SHIM T=1.7 3KC1	000001	000000
9125792200	9-1257	9220	SHIM T=1.725 3KC1	000000	000000
9125792210	9-1257	9221	SHIM T=1.75 3KC1	000003	000000
9125792220	9-1257	9222	SHIM T=1.775	000001	000000
9125792230	9-1257	9223	SHIM T=1.8 3KC1	000001	000000
9125792240	9-1257	9224	SHIM T=1.825 3KC1	000000	000000
9125792250	9-1257	9225	SHIM T=1.85 3KC1	000000	000000
9125792260	9-1257	9226	SHIM T=1.875 3KC1	000000	000000
9125792270	9-1257	9227	SHIM T=1.9 3KC1	000000	000000

9125792280	9-1257	9228	SHIM T=1.925 3KC1	000000	000000
9125792290	9-1257	9229	SHIM T=1.95 3KC1	000002	000000
9125792300	9-1257	9230	SHIM T=1.975 3KC1	000000	000000
9125792310	9-1257	9231	SHIM T=2.0 3KC1	000003	000000
9125792320	9-1257	9232	SHIM T=2.025 2KC/3KC1	000000	000000
9125792330	9-1257	9233	SHIM T=2.05 3KC1	000001	000000
9125792340	9-1257	9234	SHIM T=2.075	000000	000000
9125792350	9-1257	9235	SHIM T=2.1 3KC1	000005	000000
9125792360	9-1257	9236	SHIM T=2.125 3KC1	000000	000000
9125792370	9-1257	9237	SHIM T=2.15 3KC1	000004	000000
9125792380	9-1257	9238	SHIM T=2.175 3KC1	000000	000000
9125792390	9-1257	9239	SHIM T=2.2 3KC1	000000	000000
9126110660			ROCKER ARM	000000	000000
9126111870			ROCKER ARM	000000	000000
9126111890			ROCKER ARM	000000	000000
9126112390			SHAFT; ROCKER	000000	000000
9126113150	9-1261	1315	ROCKER ASM	000017	000000
9126113160	9-1261	1316	ROCKER	000011	000000
9126113230	9-1261	1323	ROCKER ARM "A"	000000	000000
9126113250	9-1261	1325	ARM; ROCKER "A"	000000	000000
9126113470	9-1261	1347	ARM,ROCKER (C)	000000	000018
9126113490	9-1261	1349	ARM,ROCKER (D)	000000	000013
9126114462			ROCKER ARM	000030	000000
9126114482	9-1261	1448	ROCKER ARM	000040	000000
9126136200	9-1261	3620	ROCKER ARM ASM	000000	000000
9126150140	9-1261	5014	BUSH	000000	000000
9126150180	9-1261	5018	BUSH; ROCKER ARM D	000009	000000
9126150370	9-1261	5037	BUSH; ROCKER ARM A	000000	000000
9126150380	9-1261	5038	BUSH; ROCKER ARM B	000000	000000
9126156020	9-1261	5602	BUSHING;ROCKER	000013	000000
9126160230	9-1261	6023	SCREW,ADJ.,VLV.	000000	000000
9126160290	9-1261	6029	SCREW	000009	000000
9126160420	9-1261	6042	SCREW; ADJ,ROCKER ARM	000000	000149
9126160480	9-1261	6048	SCREW; ADJ E120	000000	000000
9126160530	9-1261	6053	SCREW; ADJ E120	000000	000000
9126200310	9-1262	0031	SHAFT ASM; R/ARM W/PLUG E	000002	000000
9126200311	9-1262	0031	SHAFT ASM; R/ARM W/PLUG E	000000	000000
9126210570	9-1262	1057	SHAFT	000000	000000
9126210571	9-1262	1057	SHAFT; R/ARM	000000	000001
9126210580	9-1262	1058	SHAFT	000000	000000
9126210581	9-1262	1058	SHAFT	000001	000000
9126211110	9-1262	1111	SHAFT; ROCKER	000000	000000
9126211261	9-1262	1126	SHAFT; R/ARM	000000	000002
9126211271	9-1262	1127	SHAFT; R/ARM	000000	000000
9126211290	9-1262	1129	SHAFT; ROCKER A	000000	000000
9126211300	9-1262	1130	SHAFT;ROCKER	000000	000000
9126211301	9-1262	1130	SHAFT;ROCKER	000000	000003

9126230140	9-1262	3014	CONNECTOR	000000	000000
9126260010	9-1262	6001	PLUG	000000	000000
9126260050	9-1262	6005	PLUG; ROCKER SHAFT	000000	000204
9126280150	9-1262	8015	ROCKER BRKT	000000	000000
9126280160	9-1262	8016	BRACKET	000000	000000
9126280930	9-1262	8093	BRACKET,ROCKER	000000	000003
9126281050	9-1262	8105	BRACKET;ROCKER SHAFT,INT	000000	000010
9126281530	9-1262	8153	SUPERSEDED**BRACKET	000000	000000
9126290020			WASHER	000000	000000
9126410140			SHAFT	000000	000000
9126510620			LEVER	000000	000000
9126510710			LEVER	000000	000000
9126510950	9-1265	1095	LEVER	000000	000000
9126520070			LINK ROD	000000	000000
9126520370			LINK ROD	000000	000000
9126520550			LINK ROD	000000	000000
9126520560			LINK ROD	000000	000000
9126540150			SHAFT	000000	000000
9126540270	9-1265	4027	SHAFT	000000	000000
9126560050	9-1265	6005	RETAINER	000000	000000
9130310400			OIL PUMP	000000	000000
9131001020			OIL PUMP	000000	000000
9131001040			OIL PUMP	000000	000000
9131002360	9-1310	0236	PUMP ASM; OIL	000000	000000
9131002460	9-1310	0246	PUMP ASM; OIL	000000	000000
9131002860			PUMP ASM; OIL	000000	000000
9131003460	9-1310	0346	OIL PUMP	000002	000002
9131006153	9-1310	0615	PUMP ASM; OIL	000000	000001
9131006373	9-1310	0637	PUMP ASM; OIL, W/STRAINER	000000	000001
9131008010	9-1310	0801	PUMP ASM; OIL, W/STRAINER	000000	000000
9131008014	9-1310	0801	PUMP ASM; OIL, W/STRAINER	000000	000032
9131008030	9-1310	0803	PUMP ASM; OIL	000000	000000
9131008033	9-1310	0803	PUMP ASM; OIL	000000	000001
9131008091	9-1310	0809	PUMP ASM; OIL C240	000000	000000
9131008093	9-1310	0809	PUMP ASM; OIL C240	000001	000004
9131130770	9-1311	3077	COVER ASM; OIL PUMP	000000	000000
9131130771	9-1311	3077	COVER ASM; OIL PUMP	000000	000004
9131130860	9-1311	3086	COVER ASM; OIL PUMP	000000	000000
9131140212	9-1311	4021	PACKING E120	000000	000000
9131160380	9-1311	6038	BUSH; SHAFT	000000	000000
9131160450	9-1311	6045	BUSH;OIL PUMP GEAR	000000	000000
9131190100	9-1311	9010	COLLAR; OIL PUMP PINION	000000	000008
9131190220	9-1311	9022	DOWEL;CVR	000000	000000
9131190270	9-1311	9027	DOWEL; OIL PUMP	000000	000000
9131190290	9-1311	9029	DOWEL; OIL PUMP	000000	000000
9131190320	9-1311	9032	COLLAR; THRUST	000000	000000
9131190370	9-1311	9037	STRAINER; OIL,OIL PUMP	000000	000000

9131196080	9-1311	9608	SPACER; OIL PUMP	000000	000000
9131196090	9-1311	9609	SPACER; OIL PUMP	000000	000000
9131200360			GEAR SET,OIL PU	000002	000000
9131200361	9-1312	0036	GEAR SET;OIL PU	000000	000000
9131200370	9-1312	0037	ROTOR SET	000000	000000
9131206010	9-1312	0601	ROTOR SET; OIL PUMP 2AB1	000000	000000
9131230850	9-1312	3085	SUPERSEDED**	000000	000000
9131230960	9-1312	3096	COUPLING	000000	000000
9131260170	9-1312	6017	BUSH; GEAR	000000	000000
9131280570	9-1312	8057	SUPERSEDED**	000000	000000
9131280640	9-1312	8064	GEAR; OIL PUMP DRIVE	000000	000000
9131280710	9-1312	8071	GEAR ASM; OIL PUMP IDLE E	000000	000000
9131280790	9-1312	8079	PINION, OIL PUMP GEAR	000000	000000
9131280890	9-1312	8089	GEAR ASM; IDLE	000000	000000
9131286010	9-1312	8601	SUPERSEDED**	000000	000000
9131290170	9-1312	9017	PIN; ROTOR INNE	000003	000000
9131290250	9-1312	9025	BUSH; I/GEAR, O/PUMP E120	000000	000000
9131290260	9-1312	9026	SPINDLE; GEAR	000000	000000
9131290390	9-1312	9039	BUSH, IDLE GEAR	000000	000000
9131290410	9-1312	9041	SEAT, SPRING	000000	000000
9131290570	9-1312	9057	BUSHING	000000	000000
9131290582	9-1312	9058	SPINDLE	000000	000000
9131401070			STRAINER	000000	000000
9131401200	9-1314	0120	STRAINER ASM; OIL PUMP C2	000001	000000
9131401430	9-1314	0143	STRAINER ASM; OIL PUMP	000000	000000
9131401690	9-1314	0169	STRAINER ASM; OIL PUMP	000000	000000
9131416051	9-1314	1605	CASE; OIL STRAINER	000000	000000
9131430100	9-1314	3010	GAUZE; STRAINER	000000	000001
9131436030			GAUZE; OIL STRAINER	000000	000000
9131436031	9-1314	3603	GAUZE; OIL STRAINER	000000	000001
9131490410	9-1314	9041	BUSH	000000	000000
9131490420	9-1314	9042	BUSH*	000000	000000
9131490550	9-1314	9055	GROMMET; STRAINER E120	000000	000000
9131600602	9-1316	0060	VALVE ASM; RELIEF, OIL E1	000000	000002
9131600670	9-1316	0067	RELIEF VALVE	000001	000000
9131600680	9-1316	0068	VALVE ASM; RELIEF	000001	000000
9131600810	9-1316	0081	COVER ASM; W/RELIEF VALVE	000000	000000
9131600850	9-1316	0085	VALVE ASM; RELIEF, OIL E1	000000	000000
9131606020	9-1316	0602	OIL RELIEF VALVE	000000	000000
9131606030	9-1316	0603	COVER ASM.;W/RELIEF VALVE	000000	000000
9131606031	9-1316	0603	COVER ASM.;W/RELIEF VALVE	000000	000000
9131606062	9-1316	0606	VALVE; OIL RELIEF	000000	000000
9131610130	9-1316	1013	VALVE ASM; RELIEF	000000	000000
9131610180	9-1316	1018	VALVE; RELIEF OIL DA220	000000	000000
9131650030	9-1316	5003	SEAT;RELIEF VAL	000000	000004
9131690281	9-1316	9028	VALVE ASM; RELIEF	000000	000000
9132000330			FILTER ASSY	000000	000000

9132000610			OIL FILTER	000000	000000
9132000710			FILTER ASM; FUEL	000000	000000
9132001290			OIL FILTER BODY	000000	000000
9132003406	9-1320	0340	FILTER ASM; OIL	000000	000000
9132003520	9-1320	0352	OIL FILTER	000000	000000
9132003523	9-1320	0352	FILTER ASM; OIL	000000	000000
9132003524	9-1320	0352	OIL FILTER	000000	000004
9132004192	9-1320	0419	FILTER ASM; FUEL	000000	000000
9132004193	9-1320	0419	FILTER ASM; FUEL	000000	000004
9132004222	9-1320	0422	FILTER ASSY	000000	000000
9132004225	9-1320	0422	FILTER ASM; OIL, CENTER E	000002	000000
9132004470	9-1320	0447	OIL FILTER	000000	000000
9132004490	9-1320	0449	FILTER ASM; OIL	000000	000000
9132004743	9-1320	0474	FILTER ASM; FUEL	000000	000000
9132005153	9-1320	0515	FILTER ASM; OIL E120	000000	000000
9132005155	9-1320	0515	FILTER ASM; OIL E120	000000	000000
9132005183			OIL FILTER ASSY	000000	000000
9132016230	9-1320	1623	SUPERSEDED**FILTER	000000	000000
9132018030	9-1320	1803	FILTER ASM; FUEL	000000	000887
9132018072	9-1320	1807	FILTER ASSY, OIL	000000	000000
9132018120	9-1320	1812	OIL FILTER	000000	000000
9132018123	9-1320	1812	FILTER ASM; OIL	000002	000000
9132100040	9-1321	0004	BODY ASM; W/SPINDLE	000000	000000
9132110230			BODY; FILTER	000000	000000
9132110940	9-1321	1094	BODY; OIL	000000	000002
9132110950	9-1321	1095	BODY; OIL FILTER	000000	000000
9132110951	9-1321	1095	BODY; OIL FILTER	000000	000001
9132111020	9-1321	1102	SUPERSEDED**	000000	000000
9132111070	9-1321	1107	BODY; FUEL FILT	000000	000000
9132111071	9-1321	1107	BODY; FUEL FILT	000000	000001
9132111100			BODY; FILTER	000000	000000
9132111130			BODY; FILTER	000000	000000
9132111240	9-1321	1124	BODY; FUEL FILTER	000000	000000
9132116040	9-1321	1604	BODY; FUEL FILTER	000000	000000
9132120360			PACKING; COVER	000000	000000
9132120770	9-1321	2077	COVER; UPPR, FUEL	000001	000003
9132120790	9-1321	2079	COVER; O/FILTER	000000	000000
9132121070	9-1321	2107	COVER; OIL FILTER	000000	000000
9132121090			PACKING	000000	000000
9132121240	9-1321	2124	COVER; OIL FILTER	000000	000000
9132121440	9-1321	2144	COVER; OIL FILTER E120	000000	000000
9132121510	9-1321	2151	COVER; OIL FILTER	000000	000000
9132121511	9-1321	2151	COVER; OIL FILTER	000001	000000
9132121530	9-1321	2153	COVER	000000	000000
9132126010	9-1321	2601	COVER; UPPER, FUEL FILTER	000006	000000
9132128040	9-1321	2804	CVR; FUEL FILTE	000000	000002
9132130060			PACKING	000000	000000

9132130080			PACKING	000000	000000
9132130130			PACKING	000000	000000
9132130150			O-RING	000634	000000
9132130250			PACKING	000000	000000
9132130310			PACKING	000000	000000
9132130340	9-1321	3034	GASKET,OIL FILT	000000	000008
9132130350	9-1321	3035	PACKING	000019	000000
9132130401	9-1321	3040	PACKING; BODY TO COVER E1	000038	000000
9132136010	9-1321	3601	GSKT;FUEL FILTE	000000	000040
9132190490	9-1321	9049	O-RING	000000	000312
9132190570	9-1321	9057	PACKING,FILTER	000000	000000
9132190700	9-1321	9070	PLUG; DRAIN,SEDIMENTER	000001	000119
9132190770	9-1321	9077	PACKING; OIL FILTER TO CY	000006	000000
9132190840	9-1321	9084	COCK ASSY	000000	000000
9132260090	9-1322	6009	ADAPTER	000000	000008
9132260110	9-1322	6011	PLUG;BODY,OIL	000000	000000
9132260130	9-1322	6013	ADAPTER	000078	000000
9132310230	9-1323	1023	CENTER BOLT	000004	000000
9132310350	9-1323	1035	DISCONTINUED**BOLT	000000	000000
9132310530	9-1323	1053	B O L T	000000	000000
9132310541	9-1323	1054	SPINDLE; ROTOR E120	000001	000000
9132310660	9-1323	1066	BOLT;CNTR,FUEL	000000	000001
9132310710	9-1323	1071	SUPERSEDED**BOLT	000000	000000
9132310750	9-1323	1075	BOLT 2KC1	000000	000000
9132316020	9-1323	1602	PIPE	000004	000000
9132316030	9-1323	1603	PIPE; CENTER	000000	000000
9132390170			HOLDER	000000	000000
9132390250			SEAT	000000	000000
9132390270	9-1323	9027	HOLDER; ELEMENT	000000	000000
9132390280	9-1323	9028	SEAT	000000	000000
9132390310	9-1323	9031	SEAT	000048	000000
9132390320	9-1323	9032	HOLDER; OIL FILTER	000007	000000
9132390330	9-1323	9033	SEAT; SPRING	000036	000000
9132390340	9-1323	9034	THRUST WASHER	000016	000000
9132390350	9-1323	9035	THRUST WASHER	000030	000000
9132400230	9-1324	0023	FUEL ELEMENT	000000	000000
9132400240			FUEL FILTER	000000	000000
9132400250			ELEMENT	000000	000000
9132400280			ELEMENT	000003	000000
9132400290	9-1324	0029	FUEL FILTER	000000	000000
9132400320	9-1324	0032	FUEL FILTER	000000	000000
9132400350			ELEMENT	000000	000000
9132400450			OIL FILTER	000000	000000
9132400490			ELEMENT ASM.	000000	000000
9132400780	9-1324	0078	ELEMENT ASSY	000000	000000
9132400820			ROTOR ASSY	000000	000000
9132400970			ROTOR ASSY	000000	000000

9132401010			ROTOR ASM E120	000000	000003
9132401100	9-1324	0110	FILTER;FUEL PAPER ELEMENT	000000	000000
9132408040	9-1324	0804	OIL FILTER;MAIN	000000	000000
9132408050	9-1324	0805	OIL FILTER	000000	000000
9132490090	9-1324	9009	PACKING	000000	000000
9132490150	9-1324	9015	GUIDE; OIL, UPPER	000003	000000
9132490160	9-1324	9016	GUIDE; OIL E120	000008	000000
9132600340	9-1326	0034	VALVE ASM; CUT E120	000000	000000
9132600561	9-1326	0056	VALVE ASM;OVE	000000	000000
9132600562	9-1326	0056	VALVE ASM;OVE	000000	000021
9132606011	9-1326	0601	VALVE ASM; SAFETY	000000	000000
9132606012	9-1326	0601	VALVE ASM; SAFETY	000000	000000
9132606020	9-1326	0602	PLUG;SAFETY VALVE	000000	000000
9132606040	9-1326	0604	VALVE ASM; OVERFLOW	000000	000000
9132610090	9-1326	1009	BODY;OVER FLOW VALVE	000000	000000
9132620090	9-1326	2009	VALVE;DRAIN UNI	000000	000003
9132620100	9-1326	2010	VALVE;RELI	000000	000000
9132620120	9-1326	2012	VALVE; CUT-OFF	000039	000000
9132630040	9-1326	3004	CAP; V-SPRING	000000	000000
9132630100	9-1326	3010	PLUG; BYPASS VLV	000000	000031
9132630110	9-1326	3011	CAP,VALVE SPRIN	000006	000000
9132630111	9-1326	3011	CAP,VALVE SPRIN	000000	000000
9132650070			CAP; VALVE	000000	000000
9133112550			OIL PIPE	000000	000000
9133112650			OIL PIPE	000000	000000
9133114010			OIL PIPE	000000	000000
9133114390			OIL PIPE	000000	000000
9133115420			OIL PIPE	000000	000000
9133115530			OIL PIPE	000000	000000
9133116420			OIL PIPE	000000	000000
9133116580			PIPE ASM; OIL E120	000000	000000
9133116690	9-1331	1669	PIPE ASM; OIL E120	000000	000000
9133117410			OIL PIPE	000000	000000
9133117420			OIL PIPE	000000	000000
9133117430			OIL PIPE	000000	000000
9133118230			PIPE; OIL	000043	000000
9133118510	9-1331	1851	PIPE ASM; OIL	000000	000000
9133118960			OIL PIPE	000000	000000
9133118970			OIL PIPE	000000	000000
9133119760			PIPE	000000	000000
9133119810			PIPE ASM, OIL P	000000	000000
9133120350	9-1331	2035	OIL PIPE	000000	000000
9133120700	9-1331	2070	OIL PIPE	000000	000000
9133121050			OIL PIPE	000000	000000
9133121060			OIL PIPE	000000	000000
9133121480	9-1331	2148	OIL PIPE	000000	000165
9133121490	9-1331	2149	PIPE ASM; OIL E120	000000	000000

9133121491	9-1331	2149	PIPE ASM; OIL E120	000001	000000
9133121621	9-1331	2162	PIPE ASM; OIL	000000	000000
9133121882	9-1331	2188	PIPE ASM; BODY	000000	000000
9133122072	9-1331	2207	PIPE ASM; OIL, BLOCK-CENT	000000	000000
9133122392	9-1331	2239	PIPE ASSY	000000	000000
9133122441			PIPE	000000	000000
9133122930			OIL	000002	000000
9133123250	9-1331	2325	PIPE ASM; OIL	000000	000001
9133123350	9-1331	2335	PIPE ASM; OIL, ROCKER	000000	000000
9133123351	9-1331	2335	PIPE ASM; OIL, ROCKER	000000	000000
9133123380	9-1331	2338	PIPE ASM; OIL	000001	000000
9133123931	9-1331	2393	PIPE; OIL	000000	000000
9133124141	9-1331	2414	PIPE ASM; OIL E120	000002	000003
9133124190			OIL PIPE	000000	000000
9133124230			PIPE; OIL DA120	000000	000000
9133124240	9-1331	2424	PIPE; OIL DA120	000000	000000
9133124830	9-1331	2483	PIPE ASM; OIL	000000	000000
9133125081	9-1331	2508	PIPE ASM; OIL E120	000000	000002
9133125420	9-1331	2542	PIPE ASM; OIL E120	000000	000000
9133126100	9-1331	2610	PIPE ASM; OIL, PUMP-BLOCK	000000	000000
9133126101	9-1331	2610	PIPE ASM; OIL, PUMP-BLOCK	000000	000000
9133126490	9-1331	2649	PIPE ASM; OIL	000000	000000
9133126560	9-1331	2656	PIPE ASM; OIL E120	000000	000000
9133126750	9-1331	2675	PIPE ASM; OIL E120	000005	000000
9133127371	9-1331	2737	PIPE ASM; OIL, STRAINER-P	000000	000000
9133127460	9-1331	2746	PIPE ASM; OIL	000000	000000
9133127530	9-1331	2753	PIPE ASM; OIL STRAINER	000000	000000
9133146130			OIL PIPE	000000	000000
9133146150			HOSE & PIPE; FUEL	000000	000000
9133146470			OIL PIPE	000000	000000
9133146510			PIPE ASM; OIL	000000	000000
9133146560	9-1331	4656	PIPE; OIL	000000	000000
9133146620	9-1331	4662	PIPE; OIL	000000	000000
9133146621	9-1331	4662	PIPE; OIL	000000	000001
9133148071	9-1331	4807	PIPE; OIL PUMP	000000	000008
9133416140	9-1334	1614	FLANGE; CYL BODY SIDE	000000	000000
9133416150	9-1334	1615	FLANGE; OIL PUMP SIDE	000000	000000
9133420020	9-1334	2002	OILING JET; TIMING GEAR	000000	000007
9133421550	9-1334	2155	JET ASM; OIL E120	000000	000000
9133450280	9-1334	5028	STAY; OIL PIPE, PUMP-BLOCK	000000	000000
9133450290	9-1334	5029	STAY*	000000	000000
9133450471	9-1334	5047	STAY; PIPE E120T	000000	000000
9133636060	9-1336	3606	PULLEY; IDLER	000000	000000
9133696030	9-1336	9603	COVER; DUST. IDLE PULLEY	000000	000101
9136103580	9-1361	0358	PUMP ASM; WATER	000000	000000
9136103930	9-1361	0393	PUMP ASM; WATER	000001	000000
9136104500			WATER PUMP	000000	000000

9136104510			WATER PUMP ASM	000001	000000
9136104560	9-1361	0456	PUMP ASM; WATER	000000	000000
9136104570	9-1361	0457	PUMP ASM; WATER	000000	000000
9136120530	9-1361	2053	COVER	000000	000000
9136120600	9-1361	2060	COVER,W/PUMP	000000	000000
9136120610	9-1361	2061	COVER	000000	000000
9136120790	9-1361	2079	COVER; WATER PUMP	000000	000000
9136120810	9-1361	2081	PULLEY PLATE	000000	000000
9136126021	9-1361	2602	COVER; PUMP BODY	000000	000000
9136128020	9-1361	2802	COVER; WATER PUMP	000000	000000
9136130200			PACKING; WATER PUMP	000000	000000
9136130650	9-1361	3065	PACKING; COVER TO BODY	000000	000000
9136136060	9-1361	3606	PACKING; COVER TO PUMP BO	000006	000000
9136136070	9-1361	3607	PACKING; COVER TO BODY	000000	000000
9136136080	9-1361	3608	PACKING,COVER T	000000	000000
9136136090	9-1361	3609	PACKING; COVER, WATER PUM	000000	000000
9136136130	9-1361	3613	GASKET; COVER TO BODY	000000	000000
9136140170	9-1361	4017	PACKING	000040	000000
9136140430			PACKING	000000	000160
9136140440	9-1361	4044	GASKET; W/PUMP	000000	000000
9136140452	9-1361	4045	PACKING; WATER PUMP	000000	000000
9136148010	9-1361	4801	PACKING,W/PUMP.	000000	000000
9136176402	9-1361	7640	PUMP ASM; WATER	000000	000004
9136196170	9-1361	9617	PLUG	000000	000001
9136200060	9-1362	0006	SEAL UNIT	000000	000000
9136200130	9-1362	0013	SEAL UNIT; WATER PUMP	000000	000000
9136200160	9-1362	0016	UNIT; SEAL,WATER	000000	000000
9136210210			IMPELLER	000000	000000
9136210290			IMPELLER	000000	000000
9136210370			IMPELLER	000000	000000
9136210430			SUPERSEDED**IMPELLER	000000	000000
9136210760	9-1362	1076	IMPELLER	000000	000031
9136218010	9-1362	1801	IMPELLER	000004	000000
9136218020	9-1362	1802	IMPELLER; WATER PUMP	000000	000004
9136230010			WASHER	000000	000000
9136240010			WASHER	000000	000000
9136260010			WASHER	000000	000000
9136310140			SPINDLE	000000	000000
9136310330	9-1363	1033	REPAIR KIT; W/P 3AB1	000000	000000
9136310400	9-1363	1040	SPINDLE	000004	000001
9136310620	9-1363	1062	SPINDLE	000000	000000
9136310980	9-1363	1098	SPINDLE ASM	000000	000000
9136316020	9-1363	1602	BEARING UNIT	000000	000000
9136316060	9-1363	1606	SHAFT; WATER PUMP	000000	000002
9136316070	9-1363	1607	SHAFT	000004	000000
9136340060	9-1363	4006	SPACER	000000	000000
9136340090	9-1363	4009	SPACER	000000	000000

9136340110	9-1363	4011	SPACER; BRG, SPINDLE	000000	000000
9136390010	9-1363	9001	THROWER;BR	000018	000000
9136410290			PULLEY	000000	000000
9136410420			PULLEY	000000	000000
9136410440			PULLEY	000000	000000
9136410800			PULLEY	000000	000000
9136411230	9-1364	1123	PULLEY; FAN	000000	000000
9136411240	9-1364	1124	PULLEY;WATER P.	000000	000000
9136411241	9-1364	1124	PULLEY;WATER P.	000000	000002
9136411250	9-1364	1125	PULLEY; FAN, CAST IRON	000000	000000
9136411251	9-1364	1125	PULLEY; FAN, CAST IRON	000000	000010
9136411350	9-1364	1135	PULLEY; CRANKSHAFT	000001	000000
9136411570	9-1364	1157	PULLEY; WATER PUMP	000000	000000
9136411580	9-1364	1158	PULLEY; WATER PUMP	000000	000000
9136416090	9-1364	1609	PULLEY	000000	000000
9136416093	9-1364	1609	PULLEY	000000	000000
9136416160	9-1364	1616	PULLEY	000000	000000
9136416162	9-1364	1616	PULLEY; FAN	000000	000000
9136416163	9-1364	1616	PULLEY; FAN	000000	000018
9136416240	9-1364	1624	PULLEY; COOLING FAN	000000	000000
9136416243	9-1364	1624	PULLEY; COOLING FAN	000000	000000
9136416280	9-1364	1628	PULLEY	000000	000001
9136420180			SPACER	000000	000000
9136420400			CENTER	000000	000000
9136420440			CENTER	000000	000000
9136420670	9-1364	2067	CENTER	000000	000000
9136420730	9-1364	2073	SPACER; FAN T=35.0	000040	000000
9136420761	9-1364	2076	CENTER; PULLEY	000009	000000
9136420770	9-1364	2077	SPACER; FAN	000000	000240
9136420780	9-1364	2078	SPACER; COOLING FAN TO PU	000000	000001
9136420790	9-1364	2079	SPACER	000000	000017
9136420800	9-1364	2080	PULLEY; CENTER	000000	000000
9136420801	9-1364	2080	PULLEY; CENTER	000000	000000
9136420810	9-1364	2081	CENTER; FAN	000000	000000
9136426051	9-1364	2605	SPACER; FAN, PULLEY	000000	000001
9136428032	9-1364	2803	SPACER; FAN-PULLEY	000000	000000
9136428050	9-1364	2805	SPACER	000000	000000
9136600460	9-1366	0046	FAN ASM; COOLING	000000	000002
9136600650	9-1366	0065	FAN ASM; COOLING	000000	000001
9136600670	9-1366	0067	FAN ASM; COOLING	000000	000001
9136600920	9-1366	0092	FAN ASM; COOLING	000001	000001
9136600930	9-1366	0093	FAN ASM; COOLING	000000	000003
9136600950	9-1366	0095	FAN ASM; COOLING	000000	000001
9136601220	9-1366	0122	FAN ASM; COOLING	000000	000003
9136602200	9-1366	0220	FAN ASM; COOLING	000000	000001
9136602750	9-1366	0275	FAN ASM; COOLING	000000	000000
9136603000	9-1366	0300	FAN ASM; COOLING	000000	000001

9136603270	9-1366	0327	FAN ASM; COOLING	000000	000000
9136603380	9-1366	0338	FAN ASM; COOLING	000000	000000
9136603390	9-1366	0339	FAN ASM; COOLING	000000	000003
9136603812	9-1366	0381	FAN	000000	000000
9136603890	9-1366	0389	FAN ASM; COOLING	000000	000000
9136604291	9-1366	0429	FAN ASM; COOLING	000000	000002
9136604320	9-1366	0432	FAN ASM; COOLING	000000	000000
9136604330	9-1366	0433	FAN ASM; COOLING	000000	000000
9136606190	9-1366	0619	FAN ASM; COOLING	000000	000069
9136606430	9-1366	0643	FAN ASM; COOLING	000000	000000
9136606480	9-1366	0648	FAN ASM; COOLING	000000	000000
9136606510	9-1366	0651	FAN ASM; COOLING	000000	000005
9136606541	9-1366	0654	FAN ASM; COOLING	000001	000000
9136608090	9-1366	0809	FAN ASM; COOLING	000000	000007
9136618010	9-1366	1801	FAN ASM; COOLING	000000	000000
9136621442	9-1366	2144	FAN ASM; COOLING	000000	000000
9136621451	9-1366	2145	FAN ASM; COOLING	000001	000001
9136626070	9-1366	2607	FAN ASM; COOLING	000000	000000
9136626080	9-1366	2608	FAN ASM; COOLING	000000	000000
9136628010	9-1366	2801	FAN ASM; COOLING	000000	000000
9136636060	9-1366	3606	PULLEY ASSY.,BE	000000	000000
9136690390	9-1366	9039	SPACER	000000	000000
9136690540	9-1366	9054	SPACER; FAN	000000	000000
9136690641	9-1366	9064	SPACER; FAN-PULLEY	000000	000000
9136690801	9-1366	9080	SPACER; FAN	000000	000000
9136691030	9-1366	9103	SPACER; FAN	000003	000000
9136696030	9-1366	9603	COVER;DUST,IDLE PULLEY	000000	000000
9136712661	9-1367	1266	BELT,FAN & GEN.	000000	000002
9136712860	9-1367	1286	BELT; FAN	000000	000000
9136713130	9-1367	1313	BELT; FAN	000002	000000
9136713210	9-1367	1321	BELT; FAN	000000	000000
9136713380	9-1367	1338	BELT; FAN	000000	000000
9136713470	9-1367	1347	BELT; FAN	000000	000000
9136716090	9-1367	1609	BELT; FAN	000000	000000
9136716480	9-1367	1648	BELT; FAN	000001	000001
9136716540	9-1367	1654	BELT ASM; COOLING	000000	000000
9136718010	9-1367	1801	BELT; COOLING	000000	000000
9136718020	9-1367	1802	BELT ASM; COOLING	000000	000000
9136718030	9-1367	1803	BELT; FAN	000000	000000
9136718060	9-1367	1806	BELT; FAN	000002	000000
9136718070	9-1367	1807	BELT; FAN	000000	000000
9136718080	9-1367	1808	BELT; FAN	000033	000000
9136718081			WATER PUMP ASSY	000000	000000
9136718090			BELT; FAN	000000	000000
9136750010			PLATE	000000	000000
9136750630			PLATE	000000	000000
9136750660			PLATE	000006	000000

9136750840			SLIDE BRACKET	000000	000000
9136750970			PLATE	000005	000001
9136751010	9-1367	5101	PLATE	000001	000000
9136752120	9-1367	5212	SLIDE BRACKET	000001	000000
9136752140	9-1367	5214	PLATE; ADJ, FAN BELT	000000	000000
9136752420	9-1367	5242	PLATE; ADJ, FAN BELT	000000	000004
9136756330	9-1367	5633	PLATE; ADJ, FAN BELT	000000	000002
9136758040	9-1367	5804	SLIDE BRACKET	000003	000000
9137101306	9-1371	0130	HOUSING*INVALID*	000000	000000
9137111870	9-1371	1187	PIPE; WATER	000000	000001
9137112010	9-1371	1201	OUTLET PIPE	000003	000001
9137112230			MANIFOLD	000000	000000
9137112480			WATER RAIL	000000	000000
9137113072	9-1371	1307	PIPE ASM; WATER PUMP	000001	000000
9137113300	9-1371	1330	WATER PIPE	000000	000000
9137113301	9-1371	1330	WATER PIPE	000000	000000
9137113302	9-1371	1330	WATER PIPE	000000	000001
9137113310	9-1371	1331	WATER PIPE	000000	000000
9137113820	9-1371	1382	***SUPERSEDED***	000000	000000
9137115060	9-1371	1506	PIPE; WATER PUMP	000000	000000
9137120130	9-1371	2013	SEAT C221	000000	000005
9137130220			PIPE	000000	000000
9137130380			PIPE;	000000	000000
9137130381	9-1371	3038	PIPE;	000000	000000
9137130541	9-1371	3054	JOINT	000000	000000
9137130542	9-1371	3054	JOINT; WATER OUTLET	000002	000000
9137130550			JOINT	000000	000000
9137130601			JOINT; THERMOSTAT E120	000000	000000
9137130641	9-1371	3064	PIPE; OUTLET	000000	000050
9137130781	9-1371	3078	NECK; WATER	000000	000006
9137130880	9-1371	3088	JOINT; WATER OUTLET PIPE	000000	000000
9137131121	9-1371	3112	JOINT; WATER PIPE	000000	000002
9137138020	9-1371	3802	JOINT;THERMOSTA	000000	000000
9137160561	9-1371	6056	HOUSING; THERMOSTAT	000000	000004
9137166040	9-1371	6604	HOUSING	000007	000000
9137166131	9-1371	6613	HOUSING; THERMOSTAT	000005	000000
9137168042	9-1371	6804	HOUSING	000000	000030
9137210660	9-1372	1066	HOSE; RUBBER	000000	000000
9137211320	9-1372	1132	HOSE; RUBBER BY-PASS	000000	000000
9137211322	9-1372	1132	HOSE; RUBBER BY-PASS	000104	000354
9137211330	9-1372	1133	HOSE	000000	000000
9137211332	9-1372	1133	HOSE; RUBBER	000024	000000
9137211343	9-1372	1134	HOSE; RUBBER	000000	000006
9137211540	9-1372	1154	NIPPLE	000000	000000
9137216010	9-1372	1601	PIPE ASM.;WATER DRAIN	000000	000000
9137218020	9-1372	1802	HOSE; RUBBER BY-PASS	000000	000001
9137410080	9-1374	1008	PACKING	000043	000000

9137410322	9-1374	1032	PACKING E120	000000	000000
9137410340	9-1374	1034	PACKING	000000	000000
9137410341	9-1374	1034	PACKING	000000	000000
9137420060			PACKING	000000	000000
9137420232			PACKING E120	000000	000000
9137430020			PACKING	000000	000000
9137430050			PACKING	000000	000000
9137430080	9-1374	3008	GASKET; THERMOSTAT	000000	000000
9137430110	9-1374	3011	GASKET;HOUSING	000000	000000
9137430130	9-1374	3013	GASK; OUTLET PI	000000	000000
9137430160	9-1374	3016	PACKING; HOUSING	000012	000000
9137436020	9-1374	3602	PACKING	000000	000000
9137436030	9-1374	3603	GASKET; THERMOSTAT	000000	000000
9137700941	9-1377	0094	THERMOSTAT	000018	000037
9137701200			THERMOSTAT	000000	000000
9137701280			THERMOSTAT	000002	000000
9137706210	9-1377	0621	THERMOSTAT; RADIO	000000	000000
9137706221	9-1377	6221	THERMOSTAT (82 C)	000000	000000
9141111170			PACKING	000000	000000
9141113980			PIPE; INLET	000000	000000
9141114870			INLET PIPE	000000	000000
9141115330			INLET MANIFOLD	000000	000000
9141115590	9-1411	1559	MANIFOLD; INLET	000000	000000
9141115640			INLET PIPE	000000	000000
9141115810			PIPE; INLET	000000	000000
9141115811	9-1411	1581	PIPE; INLET	000000	000000
9141118050	9-1411	1805	PIPE; INLET E120	000000	000000
9141118640	9-1411	1864	SUPERSEDED**COVER	000000	000000
9141121860	9-1411	2186	MANIFOLD ASM; INLET	000000	000000
9141126330	9-1411	2633	MANIFOLD ASM; INLET	000002	000000
9141126450	9-1411	2645	IN MANIFOLD	000000	000000
9141126551	9-1411	2655	MANIFOLD ASM; INLET	000002	000000
9141126950	9-1411	2695	MANIFOLD ASM; INLET	000000	000000
9141126951	9-1411	2695	MANIFOLD ASM; INLET	000000	000000
9141126955	9-1411	2695	MANIFOLD ASM; INLET	000000	000000
9141126956	9-1411	2695	MANIFOLD ASM; INLET	000000	000000
9141126970	9-1411	2697	PIPE; INLET 2AB1	000001	000001
9141128160	9-1411	2816	PIPE ASM; INLET	000000	000000
9141150350			PACKING, INLET	000000	000000
9141150402			PACKING; INLET MANIFOLD D	000000	000000
9141150600	9-1411	5060	PACKING; INLET COVER E120	000000	000000
9141150730	9-1411	5073	GASKET; INLET	000000	000000
9141160220			GASKET	000000	000000
9141170162			PACKING; INLET COVER	000000	000000
9141191851	9-1411	9185	COVER; INLET E120	000000	000000
9141192281	9-1411	9228	PIPE; VENT	000000	000000
9141402211	9-1414	0221	MANIFOLD ASM; EXHAUST	000000	000000

9141406120	9-1414	0612	MANIFOLD ASM; EXHAUST	000000	000000
9141406130	9-1414	0613	MANIFOLD ASM; EXHAUST	000000	000000
9141410660	9-1414	1066	MANIFOLD ASM; EXHAUST	000000	000000
9141410841	9-1414	1084	MANIFOLD ASM; EXHAUST 4BD	000000	000000
9141411120	9-1414	1112	MANIFOLD ASM; EXHAUST	000000	000000
9141411730	9-1414	1173	MANIFOLD ASM; EXHAUST	000000	000000
9141411740	9-1414	1174	MANIFOLD ASM; EXHAUST DA6	000000	000000
9141412530	9-1414	1253	MANIFOLD ASM; EXHAUST	000000	000000
9141412630	9-1414	1263	MANIFOLD ASM; EXHAUST	000000	000000
9141412761	9-1414	1276	MANIFOLD ASM; EXHAUST	000000	000000
9141413450	9-1414	1345	EXHAUST MANIFOLD	000000	000000
9141413451	9-1414	1345	EXHAUST MANIFOLD	000000	000000
9141413531	9-1414	1353	MANIFOLD ASM; EXH CTR DOW	000000	000004
9141413601	9-1414	1360	MANIFOLD ASM; EXHAUST	000000	000000
9141413603	9-1414	1360	MANIFOLD ASM; EXHAUST	000000	000000
9141413623	9-1414	1362	MANIFOLD ASM; EXHAUST E12	000001	000000
9141413920	9-1414	1392	MANIFOLD ASM; EXHAUST DA2	000000	000000
9141413974	9-1414	1397	MANIFOLD; EXH, RR	000000	000000
9141413981	9-1414	1398	MANIFOLD ASM	000000	000001
9141415013	9-1414	1501	MANIFOLD ASM: EXHAUST	000000	000000
9141415431	9-1414	1543	MANIFOLD FRT	000001	000001
9141415441	9-1414	1544	MANIFOLD RR	000001	000001
9141416031	9-1414	1603	MANIFOLD,EXH.	000000	000000
9141416130	9-1414	1613	MANIFOLD ASM; EXHAUST	000000	000000
9141416140	9-1414	1614	MANIFOLD ASM; EXHAUST	000000	000000
9141416142	9-1414	1614	MANIFOLD ASM; EXHAUST	000000	000000
9141416143	9-1414	1614	MANIFOLD ASM; EXHAUST	000000	000002
9141416230	9-1414	1623	PIPE: EXHAUST)	000000	000000
9141416460	9-1414	1646	MANIFOLD ASM; EXHAUST	000000	000000
9141418030	9-1414	1803	MANIFOLD ASM; EXHAUST	000000	000002
9141450230	9-1414	5023	GASKET; EXH TURBINE-SCROL	000000	000000
9141450240	9-1414	5024	GASKET; EXHAUST PIPE-SCRO	000000	000000
9141450300			GASKET	000000	000000
9141450340			GASKET	000000	000000
9141450390			EXH PIPE GASKET	000000	000000
9141450530	9-1414	5053	EXH MAN GASKETS	000000	000000
9141450670	9-1414	5067	GASKET	000000	000000
9141450760	9-1414	5076	GASKET; MANIFOLD	000000	000000
9141450761	9-1414	5076	GASKET; MANIFOLD	000000	000027
9141450880	9-1414	5088	GASKET; MANIFOLD	000003	000000
9141450950	9-1414	5095	GASKET; MANFLD/ADAPTOR	000000	000000
9141450960	9-1414	5096	GASKET; EXH. PIPE	000001	000001
9141451050	9-1414	5105	GASKET; EXHAUST MAINFOLD	000000	000000
9141451120	9-1414	5112	GASKET; TURBO E120	000000	000000
9141451130	9-1414	5113	GASKET; TURBO	000000	000000
9141456130	9-1414	5613	GASKET: EX PIPE TO FLANGE	000000	000000
9141458010	9-1414	5801	GASKET; EXHAUST MANIFOLD	000000	000000

9141458020	9-1414	5802	GASKET; EXHAUST MANIFOLD	000000	000000
9141460250			GASKET	000000	000000
9141460720	9-1414	6072	GASKET	000000	000000
9141460880	9-1414	6088	GASKET	000000	000000
9141460900	9-1414	6090	GASKET; EXHAUST MANIFOLD	000000	000000
9141490020	9-1414	9002	RING; SEALING	000000	000000
9141490260	9-1414	9026	SEAL; RING, EXH-MAN	000000	000000
9141490261	9-1414	9026	SEAL; RING, EXH-MAN	000000	000124
9141490850	9-1414	9085	DIST TUBE	000000	000000
9141491730	9-1414	9173	SPACER, INL. & EXH	000000	000333
9141491740	9-1414	9174	PIECE; DISTANCE	000000	000000
9141496210	9-1414	9621	COVER; END, EXHAUST MANIF	000002	000000
9141496220	9-1414	9622	GASKET	000001	000000
9141496330	9-1414	9633	FLANGE: EXHAUST	000000	000000
9141496530	9-1414	9653	RING; SEALNG 6BB/BD1	000000	000000
9141498040	9-1414	9804	GASKET	000000	000000
9141498050	9-1414	9805	GASKET	000000	000000
9141498060	9-1414	9806	COVER ASM; CYL HEAD	000000	000000
9141810150	9-1418	1015	PROTECTOR; HEAT	000000	000000
9141811291	9-1418	1129	PROTECTOR; HEAT	000000	000000
9142105721	9-1421	0572	CLEANER ASM; AIR	000000	000000
9142105961	9-1421	0596	PRE CLEANER	000000	000000
9142106540	9-1421	0654	CLEANER ASM; AIR	000000	000000
9142106551	9-1421	0655	CLEANER ASM; AIR	000000	000000
9142106731	9-1421	0673	CLEANER ASM; AIR	000000	000002
9142106890	9-1421	0689	CLEANER ASM; AIR	000000	000000
9142107520	9-1421	0752	CLEANER ASM; AIR, PAPER E	000000	000000
9142107550	9-1421	0755	CLEANER ASM; AIR E120	000000	000000
9142107561	9-1421	0756	CLEANER ASM AIR	000000	000000
9142108091	9-1421	0809	CLEANER ASM; AIR 6BD/6BB	000000	000001
9142113160	9-1421	1316	BODY ASM; AIR CLEANER	000000	000000
9142113981	9-1421	1398	BODY ASM; AIR CLEANER 4BB	000000	000000
9142116480	9-1421	1648	CASE ASM; W/CLIP	000000	000000
9142120940	9-1421	2094	C U P	000000	000000
9142120970	9-1421	2097	PAN ASM; DUST W/BAFFLE	000001	000000
9142121000	9-1421	2100	COVER ASM; W/PKG	000000	000000
9142121140	9-1421	2114	PAN ASM; DUST W/BAFFLE, 4	000001	000000
9142121300	9-1421	2130	DUST PAN	000001	000000
9142121310	9-1421	2131	PAN ASM; DUST	000000	000001
9142121380	9-1421	2138	DUST PAN ASSY	000001	000000
9142121990	9-1421	2199	PAN ASM; DUST	000000	000000
9142122020	9-1421	2202	PAN ASM; DUST W/BAFFLE	000000	000000
9142126400	9-1421	2640	COVER ASM.	000000	000000
9142126530	9-1421	2653	COVER; AIR CLEANER	000000	000000
9142130110	9-1421	3011	PACKING; COVER, CASE	000000	000000
9142130190	9-1421	3019	PACKING; COVER-CASE	000000	000000
9142130950	9-1421	3095	PACKING, ELEMENT	000000	000000

9142131130			PACKING	000000	000000
9142131160			PACKING	000000	000000
9142131250			PACKING,ELEMENT	000003	000000
9142131260	9-1421	3126	GASKET, A/CL	000000	000005
9142131290	9-1421	3129	PACKING; O-RING	000000	000000
9142131300	9-1421	3130	O-RING	000000	000000
9142136120	9-1421	3612	PACKING; COVER, ELEMENT	000000	000000
9142136130	9-1421	3613	PACKING; COVER	000001	000000
9142136140	9-1421	3614	PACKING; ELEMENT	000025	000000
9142150250			ELEMENT	000000	000000
9142150590			AIR FILTER	000000	000000
9142150670			SCREEN	000000	000000
9142151010	9-1421	5101	ELEMENT; AIR CLEANER C240	000003	000000
9142151030	9-1421	5103	ELEMENT; AIR CLEANER C240	000000	000000
9142151070	9-1421	5107	ELEMENT; AIR CLEANER	000000	000000
9142151321	9-1421	5132	ELEMENT; AIR CLEANER 6BB1	000000	000009
9142151341	9-1421	5134	ELEMENT; AIR CLEANER	000000	000000
9142151342	9-1421	5134	ELEMENT; AIR CLEANER	000000	000000
9142151351	9-1421	5135	ELEMENT; AIR CLEANER 6BB	000000	000003
9142151490			AIR FILTER	000000	000000
9142151521	9-1421	5152	ELEMENT; AIR CLEANER	000000	000007
9142151531	9-1421	5153	ELEMENT; AIR CLEANER	000000	000018
9142151560			ELEMENT	000000	000000
9142151661	9-1421	5166	ELEMENT; AIR CLEANER	000000	000001
9142151670	9-1421	5167	ELEMENT; AIR CLEANER	000001	000000
9142151700	9-1421	5170	ELEMENT; AIR CLEANER	000000	000000
9142151840	9-1421	5184	ELEMENT; AIR CLEANER	000000	000001
9142151932	9-1421	5193	ELEMENT ASM.; AIR CLEANER	000000	000000
9142151960	9-1421	5196	ELEMENT; AIR CLEANER	000000	000000
9142151970	9-1421	5197	ELEMENT; AIR CLEANER	000000	000000
9142156040	9-1421	5604	ELEMENT; AIR CLEANER 2AA/	000000	000004
9142156050	9-1421	5605	ELEMENT; AIR CLEANER	000000	000000
9142156080	9-1421	5608	ELEMENT KIT	000000	000000
9142170160	9-1421	7016	CLAMP	000000	000000
9142170580	9-1421	7058	BOLT ASM; WING E120T	000000	000000
9142170590	9-1421	7059	ELEMENT; AIR CLEANER	000002	000000
9142170600	9-1421	7060	CLAMP 6RB1	000002	000000
9142170610	9-1421	7061	CLAMP ASM; 4BB1,4BD1	000002	000000
9142170620	9-1421	7062	NUT; WING,ELEME	000000	000000
9142170630	9-1421	7063	NUT; WING	000000	000000
9142170730	9-1421	7073	BODY ASM W/GSKT/WASHR,4BB	000001	000000
9142170740	9-1421	7074	CLAMP ASM.	000000	000001
9142170760	9-1421	7076	BOLT ASM; CENTER	000000	000000
9142170790	9-1421	7079	WING NUT	000000	000000
9142170880	9-1421	7088	CLAMP	000000	000000
9142170900	9-1421	7090	BOLT ASM, A/CL	000000	000003
9142176020	9-1421	7602	BAND ASM; W/BOLT	000000	000003

9142190240	9-1421	9024	PACKING; COVER	000000	000000
9142190640	9-1421	9064	WASHER	000000	000000
9142191010	9-1421	9101	COVER ASM; AIR CLEANER	000000	000000
9142191350	9-1421	9135	BAFFLE ASM W/FX.BOLT	000000	000000
9142191360	9-1421	9136	O-RING	000000	000000
9142191410	9-1421	9141	INDICATOR;A/CL	000000	000000
9142191430	9-1421	9143	PACKING 6RB1	000005	000000
9142191440	9-1421	9144	BAFFLE 6RB1	000000	000000
9142191450	9-1421	9145	BAFFLE; AIR CLEANER	000000	000000
9142191490	9-1421	9149	CLIP,WIRE,COVER	000000	000000
9142191530	9-1421	9153	O-RING	000000	000000
9142191700	9-1421	9170	WASHER	000000	000000
9142191740	9-1421	9174	CAP; SCREEEN, AIR CLEANER	000000	000000
9142191770	9-1421	9177	GSKT;A/CL ELEME	000000	000009
9142191780	9-1421	9178	WASHER; GASKET	000000	000000
9142191880	9-1421	9188	BAND; A/CLEANER	000000	000000
9142191910	9-1421	9191	INDICATOR; SERV	000000	000000
9142191920	9-1421	9192	INDICATOR;A/CL	000000	000000
9142192030	9-1421	9203	PACKING	000000	000000
9142192740	9-1421	9274	PACKING	000000	000000
9142192750	9-1421	9275	PACKING	000000	000000
9142192780	9-1421	9278	CAP ASM; AIR CLEANER	000000	000000
9142192790	9-1421	9279	GSKT;AIR CLEANE	000002	000007
9142192850	9-1421	9285	VALVE; VACUATOR	000000	000000
9142192860	9-1421	9286	INDICATOR	000000	000000
9142192900	9-1421	9290	INDICATOR	000003	000000
9142192920	9-1421	9292	INDICATOR; DUST	000000	000000
9142193010	9-1421	9301	DUST INDICATOR	000000	000000
9142196020	9-1421	9602	BOLT; HANGER	000000	000000
9142196070	9-1421	9607	CAP ASM	000000	000000
9142196170	9-1421	9617	CLEANER; AIR, INDICATOR	000004	000000
9142196180	9-1421	9618	CONNECTOR,HOSE	000000	000000
9142206032	9-1422	0603	CLEANER ASM; AIR PAPER	000000	000000
9142206710	9-1422	0671	CLEANER ASM; AIR	000000	000000
9142206890	9-1422	0689	CLEANER ASM; AIR	000000	000000
9142206930	9-1422	0693	CLEANER ASM; AIR	000000	000000
9142206931	9-1422	0693	CLEANER ASM; AIR	000000	000000
9142207053	9-1422	0705	CLEANER ASM; AIR	000000	000000
9142207080	9-1422	0708	CLEANER ASM; AIR	000000	000000
9142207081	9-1422	0708	CLEANER ASM; AIR	000000	000000
9142207111	9-1422	0711	CLEANER; AIR ASM.	000000	000000
9142313110			NOSE	000000	000000
9142314270	9-1423	1427	HOSE; CONNECTING	000000	000000
9142314340	9-1423	1434	HOSE; CONNECTING	000001	000000
9142314520			RUBBER HOSE	000000	000000
9142341890			STAY	000000	000000
9142342310	9-1423	4231	BRACKET; AIR CLEANER	000000	000004

9142342452	9-1423	4245	BRACKET; AIR CLEANER	000000	000000
9142342460	9-1423	4246	STAY	000000	000000
9142346020	9-1423	4602	BRACKET; AIR CLEANER	000000	000000
9142346030	9-1423	4603	BRACKET; AIR CLEANER	000000	000000
9142346290	9-1423	4629	BRACKET; AIR CLEANER	000000	000000
9142346340	9-1423	4634	STAY; AIR CLEANER	000000	000000
9142346350	9-1423	4635	STAY; AIR CLEANER, LH	000000	000000
9142390200			RING	000000	000000
9142390260			BUSH; RUBBER	000000	000009
9142390280	9-1423	9028	INSULATOR	000000	000000
9142390640	9-1423	9064	NUT ASSY.,COVER	000000	000000
9142390650	9-1423	9065	PACKING,WING NU	000000	000000
9142391210	9-1423	9121	PACKING; CLEANER	000000	000000
9142391910	9-1423	9191	BAND; A/CLEANER	000000	000000
9142391920	9-1423	9192	END PIECE; UPPER	000000	000000
9142391930	9-1423	9193	END PIECE; LOWER	000000	000000
9142396950	9-1423	9695	PACKING:AIR CLE	000000	000000
9142396990	9-1423	9699	WASHER;WING NUT	000000	000000
9142397000	9-1423	9700	GAUGE ASM; OIL LEVEL	000000	000000
9143100021			INTAKE SHUTTER	000000	000000
9143102330			INTAKE SHUTTER	000000	000000
9143103810			INT SHUTTER	000000	000000
9143104020			VALVE; THROTTLE C240	000000	000000
9143104152	9-1431	0415	SHUTTER; INTAKE	000000	000000
9143104191	9-1431	0419	INTKAE SHUTTER	000000	000000
9143104192	9-1431	0419	SHUTTER; INTAKE	000002	000002
9143104690			INTAKE SHUTTER	000000	000000
9143104883			INTAKE SHUTTER	000000	000000
9143105410			INT SHUTTER	000000	000000
9143106112			THROTTLE VALVE	000000	000000
9143106241	9-1431	0624	SHUTTER; INTAKE E120	000000	000000
9143120580	9-1431	2058	VALVE; THROTTLE	000000	000000
9143120590	9-1431	2059	VALVE	000000	000000
9143120850	9-1431	2085	VALVE; INT. SHUTTER	000000	000000
9143140380	9-1431	4038	LEVER; SHUTTER CONTROL	000000	000000
9143140480	9-1431	4048	LEVER; CONTROL	000000	000000
9143141610			LEVER	000000	000000
9143141760			LEVER; CONTROL	000000	000000
9143142031	9-1431	4203	LEVER	000000	000000
9143142041			LEVER; INTAKE	000000	000000
9143146150			LEVER; ENG. STOP	000000	000000
9143146230	9-1431	4623	LEVER; RETURN SPRING	000000	000000
9143146240	9-1431	4624	LEVER; SHUTTER CONTROL	000000	000000
9143170100			PACKING	000000	000000
9143170232	9-1431	7023	PACKING E120	000000	000000
9143170242	9-1431	7024	PACKING; INTAKE E120/6RB1	000000	000000
9143190230	9-1431	9023	COVER; DUST	000000	000000

9143190370	9-1431	9037	FILTER; VACUUM DA220	000000	000000
9143192301			ROD ASSY	000000	000000
9143192660			BRACKET; ENGINE CONTROL	000000	000000
9143192680	9-1431	9268	CLIP; THROTTLE	000000	000000
9143193170	9-1431	9317	CLIP	000000	000000
9143193210	9-1431	9321	BUSH**SUPERSEDED	000000	000000
9143193260	9-1431	9326	BUSH; CASE - SHAFT	000000	000000
9143193681	9-1431	9368	NIPPLE;BREATHER	000000	000000
9143193750	9-1431	9375	CLIP*	000000	000000
9143193760	9-1431	9376	BRACKET; SPRING RETURN	000000	000000
9143196440	9-1431	9644	CLIP; SHUTTER CONT CABLE	000000	000000
9143196520	9-1431	9652	BUSH;	000000	000000
9143206140	9-1432	0614	INTAKE SHUTTER ASM(4BB1)	000000	000000
9143206151	9-1432	0615	SHUTTER; INTAKE	000000	000000
9143206290	9-1432	0629	INTAKE SHUTTER ASM(C330M)	000000	000000
9143206371	9-1432	0637	SHUTTER; INTAKE	000000	000000
9143206441	9-1432	0644	INTAKE SHUTTER ASM	000000	000000
9143206451	9-1432	0645	SHUTTER; INTAKE	000000	000000
9143206452	9-1432	0645	SHUTTER; INTAKE	000000	000000
9143206522	9-1432	0652	SHUTTER; INTAKE	000000	000000
9143208113	9-1432	0811	SHUTTER; INTAKE	000000	000001
9143300740	9-1433	0074	ENGINE CONTROL	000000	000000
9143300780	9-1433	0078	CONTROL ASM.; ENGINE	000000	000000
9143300790	9-1433	0079	CONTROL ASM.; ENGINE	000000	000000
9143320650			LINK	000000	000000
9143320700			LINK ASM.; ENGINE CONTROL	000000	000000
9143330740	9-1433	3074	LEVER	000000	000000
9143346400	9-1433	4640	EYE; SPRING SHUTTER	000000	000000
9143346410	9-1433	4641	EYE; SPRING	000000	000000
9143348060	9-1433	4806	EYE; SPRING	000000	000000
9143348120	9-1433	4812	EYE; SPRING, THROTTLE RET	000000	000000
9143396130	9-1433	9613	BUSH; LEVER	000000	000000
9143590160			PIPE	000000	000000
9143600020			OIL SEPERATOR	000000	000000
9143600141			SEPARATOR; OIL	000000	000000
9143600150	9-1436	0015	SEPARATOR; OIL	000000	000000
9143690420			PIPE	000000	000000
9144000660			TURBOCHARGER ASM DH100	000000	000000
9144000932	9-1440	0093	TURBOCHARGER ASM E120	000000	000002
9144250131	9-1442	5013	PIPE ASM; AIR E120	000000	000000
9144290230	9-1442	9023	PACKING; O-RING, BRG CASE	000000	000000
9144290420	9-1442	9042	PACKING E120	000003	000000
9144290450	9-1442	9045	PACKING; O-RING	000000	000000
9144290510	9-1442	9051	PACKING E120	000006	000000
9144490270	9-1444	9027	PLATE	000000	000000
9144490280	9-1444	9028	PLATE; LOCK	000002	000000
9144500250	9-1445	0025	ROTOR ASM. DH100	000000	000000

9144530400	9-1445	3040	BEARING; COMPRESSOR DH100	000000	000000
9144530430	9-1445	3043	BEARING; TURBINE DH100	000000	000000
9144550270	9-1445	5027	RING; SEAL, BRG. CASE, CM	000000	000000
9144550310	9-1445	5031	RING; SEAL, BRG CASE TURB	000000	000000
9144590060	9-1445	9006	PACKING; O-RING, IMPELLER	000000	000000
9151006021	9-1510	0602	PUMP; FEED	000000	000000
9151190370			INSULATOR	000000	000000
9153000670			INJ NOZZLE ASSY	000000	000000
9153000740			NOZZLE & HOLDER ASSY	000000	000000
9153001270			INJ NOZZLE	000000	000000
9153001842			NOZZLE ASM; INJECTION	000000	000001
9153001843	9-1530	0184	NOZZLE HOLDER	000000	000000
9153110010	9-1531	1001	NOZZLE	000013	000000
9153110011	9-1531	1001	NOZZLE	000000	000000
9153110420	9-1531	1042	INJECT NOZZLE	000006	000000
9153111850			INJ TIPS	000003	000000
9153113660			NOZZLE ASM; INJECTION	000000	000000
9153115740	9-1531	1574	NOZZLE ASM; INJECTION E12	000000	000000
9153150120			PACKING	000000	000000
9153150150			PACKING'	000000	000000
9153150260	9-1531	5026	WASHER,NOZZLE HOLDER	002169	000401
9153150270	9-1531	5027	SHIELD,HEAT INJ	000186	000012
9153150280	9-1531	5028	WASHER,HEAT SHIELD	000058	000136
9153150290	9-1531	5029	WASHER,CORUGATE	000000	000000
9153150330	9-1531	5033	PACKING	000000	000000
9153150331	9-1531	5033	PACKING	000050	000000
9153150700			PACKING	000000	000000
9153150740	9-1531	5074	WASHER,CORUGATE	001118	000419
9153150750	9-1531	5075	PACKING; INJ NOZZLE E120	000000	000000
9153150850	9-1531	5085	PACKING; NOZZLE	000008	000002
9153300300			NOZZLE HOLDER	000000	000000
9153300510			HOLDER; NOZZLE	000003	000000
9153300852	9-1533	0085	HOLDER; NOZZLE	000000	000000
9153300853	9-1533	0085	HOLDER; NOZZLE	000004	000024
9153300883	9-1533	0088	HOLDER ASM; NOZZLE DA120/	000001	000001
9153310040	9-1533	1004	SPACER; NOZZLE SPRING	000000	000100
9153320030			INJ NOZZIE	000000	000000
9153320100	9-1533	2010	NUT NOZZLE HOLD	000000	000000
9153320240	9-1533	2024	NUT; RETAINING	000000	000000
9153326010	9-1533	2601	NUT**	000000	000000
9153326030	9-1533	2603	NUT; RETAINING C221	000000	000016
9153330010	9-1533	3001	PLUG DH/DA SERIES	000005	000000
9153340120	9-1533	4012	NUT	000005	000000
9153370060			INJ FLANGE	000000	000000
9153370170	9-1533	7017	FLANGE; NOZZLE HOLDER	000000	000020
9153390220	9-1533	9022	SHIM; T=0.50	000000	000000
9153390230	9-1533	9023	SHIM;INJ NOZ.58	000000	000000

9153390240	9-1533	9024	SHIM; INJ NOZ.62	000000	000000
9153390250	9-1533	9025	SHIM; T=0.65	000000	000000
9153390260	9-1533	9026	SHIM; T=0.70	000000	000000
9153390270	9-1533	9027	SHIM; T=0.75	000000	000000
9153390280	9-1533	9028	SHIM; T=0.80	000000	000000
9153390290	9-1533	9029	SHIM; T=0.85	000000	000000
9153390300	9-1533	9030	SHIM; T=0.90	000000	000000
9153390310	9-1533	9031	SHIM; T=0.95	000000	000000
9153390360	9-1533	9036	CONNECTOR	000000	000000
9153390440	9-1533	9044	HEAT SHIELDS	000045	000000
9153390490	9-1533	9049	DUST COVER	000014	000000
9153390500	9-1533	9050	COVER; DUST	000011	000004
9153390510	9-1533	9051	DUST COVER; NOZ.	000327	000246
9153390560	9-1533	9056	GSKT; CAP NUT	000000	000152
9153390561	9-1533	9056	GASKET	000000	000000
9153390570	9-1533	9057	WASH; ADJ. SCREW	000145	000000
9153396010	9-1533	9601	SCREW; ADJ	000000	000000
9153396020			BOLT	000000	000020
9153396030			GASKET	000000	000000
9153410020	9-1534	1002	ROD; PUSH, NOZZLE HOLDER	000000	000080
9153410080	9-1534	1008	ROD; PUSH	000000	000000
9153430050	9-1534	3005	SPRING	000000	000000
9153430080			SPRING	000000	000000
9153430110			SCREW; ADJUSTING	000000	000000
9153430130	9-1534	3013	SPRING; NOZZLE	000009	000017
9153470030	9-1534	7003	PIN; NOZZLE HOLD	000000	000180
9153510070	9-1535	1007	CONNECTOR; INLET	000000	000000
9153520020	9-1535	2002	GASKET	000000	000000
9153520050	9-1535	2005	GASKET; NOZZLE	000000	000164
9153530040	9-1535	3004	STRAINER	000000	000000
9153590100			BOLT	000000	000000
9153596010			SCREW	000000	000000
9154113470			FUEL PIPE	000000	000000
9154115850			FUEL PIPE	000000	000000
9154116340			INJ PIPE	000000	000000
9154116360			INJ PIPE	000000	000000
9154116370			INJ PIPE	000000	000000
9154116381			INJ PIPE ASSY	000000	000000
9154116390			INJ PIPE	000000	000000
9154116400			INJ PIPE	000000	000000
9154116410			INJ PIPE	000000	000000
9154116420			INJ PIPE	000000	000000
9154116430			INJ PIPE	000000	000000
9154116440			INJ PIPE	000000	000000
9154116450			INJ PIPE	000000	000000
9154116460			INJ PIPE	000000	000000
9154116470			INJ PIPE	000000	000000

9154116480			PIPE ASM; INJECTION	000000	000000
9154116490	9-1541	1649	PIPE ASM; INJECTION	000000	000000
9154116500	9-1541	1650	PIPE ASM; INJECTION	000000	000000
9154116510	9-1541	1651	PIPE ASM; INJECTION	000000	000000
9154116520	9-1541	1652	PIPE ASM; INJECTION #2	000000	000000
9154116530	9-1541	1653	PIPE ASM; INJECTION #3	000000	000000
9154116540	9-1541	1654	PIPE ASM; INJECTION #4	000000	000000
9154118170			FUEL PIPE	000000	000000
9154118181			INJ PIPE	000000	000000
9154118191			INJ PIPE	000000	000000
9154118430			PIPE ASM; INJECTION	000000	000000
9154118450	9-1541	1845	INJ PIPE	000001	000001
9154118460	9-1541	1846	INJ PIPE	000004	000004
9154118470			INJ PIPE	000000	000000
9154118480			INJ PIPE	000003	000000
9154118490	9-1541	1849	INJ PIPE	000001	000000
9154118500	9-1541	1850	INJ PIPE	000002	000001
9154118800	9-1541	1880	INJECTION PIPE	000000	000000
9154118820	9-1541	1882	INJECTION PIPE	000000	000000
9154118830	9-1541	1883	INJECTION PIPE	000000	000000
9154118840	9-1541	1884	INJECTION PIPE	000000	000000
9154118970	9-1541	1897	PIPE ASM; FUEL	000000	000000
9154118980	9-1541	1898	INJ PIPE	000000	000000
9154118990			FUEL PIPE	000000	000000
9154121290			FUEL PIPE	000000	000000
9154121320			FUEL PIPE	000000	000000
9154122351			PIPE ASM; FUEL, NOZZLE LE	000000	000001
9154122371	9-1541	2237	PIPE; FUEL	000003	000000
9154122381			PIPE	000000	000000
9154123680			PIPE ASM; INJECTION C220	000000	000000
9154123690	9-1541	2369	PIPE; INJ. #1	000000	000000
9154123700	9-1541	2370	PIPE; INJ. #2	000000	000000
9154123720	9-1541	2372	PIPE; INJ. #4	000000	000000
9154124000	9-1541	2400	PIPE ASM; INJECTION	000002	000000
9154124010	9-1541	2401	PIPE ASM; INJECTION	000002	000000
9154124020	9-1541	2402	PIPE ASM; INJECTION	000002	000000
9154124030	9-1541	2403	PIPE ASM; INJECTION DH100	000000	000000
9154124040	9-1541	2404	PIPE ASM; INJECTION	000002	000000
9154124050	9-1541	2405	PIPE ASM; INJECTION	000000	000000
9154124100	9-1541	2410	PIPE ASM; FUEL	000000	000000
9154124110	9-1541	2411	PIPE ASM; FUEL	000000	000000
9154125200	9-1541	2520	FUEL PIPE	000000	000000
9154125700			FUEL PIPE	000000	000000
9154125710			PIPE ASM; FUEL	000000	000000
9154125810			INJ PIPE	000000	000000
9154125820			INJ PIPE	000000	000000
9154125830			INJ PIPE	000000	000000

9154125840			INJ PIPE	000000	000000
9154125850			FUEL PIPE	000000	000000
9154125860			FUEL PIPE	000000	000000
9154126110			INJ PIPE	000000	000000
9154126250			VERFLOW PIPE	000000	000000
9154126701			PIPE; FUEL	000000	000000
9154126730	9-1541	2673	FUEL PIPE	000000	000000
9154127100			FUEL PIPE	000000	000000
9154127311	9-1541	2731	PIPE ASM; FUEL, FILTER TO	000000	000007
9154128170	9-1541	2817	PIPE ASM; INJ NUMBER 2	000000	000000
9154128180	9-1541	2818	PIPE ASM; INJ NUMBER 2	000000	000000
9154128740	9-1541	2874	PIPE ASM; INJ #1 C330	000000	000000
9154128750	9-1541	2875	PIPE ASM; INJ #2 C330	000000	000000
9154128760	9-1541	2876	PIPE ASM; INJ #3 C330	000000	000000
9154128770	9-1541	2877	PIPE ASM; INJ #4 C330	000000	000000
9154128780	9-1541	2878	PIPE ASM; INJECTION	000000	000000
9154128790	9-1541	2879	PIPE ASM; INJECTION #2	000004	000000
9154130031	9-1541	3003	PIPE ASM; LEAK OFF	000000	000005
9154133701	9-1541	3370	PIPE ASM; FUEL INJECTION	000000	000000
9154133831	9-1541	3383	PIPE ASM; FUEL	000004	000000
9154133832	9-1541	3383	PIPE ASM; FUEL	000001	000000
9154133842	9-1541	3384	PIPE ASM; FUEL, HEATER	000000	000000
9154133851	9-1541	3385	PIPE ASM; FUEL FRT HEAT	000000	000000
9154133861	9-1541	3386	PIPE ASM; FUEL E120	000000	000000
9154190240	9-1541	9024	CLIP; INJ PIPE	000000	000000
9154190260			CLIP ASSY	000000	000000
9154190720	9-1541	9072	CLIP ASM; INJ PUMP 3KC1	000000	000000
9154190721	9-1541	9072	CLIP ASM; INJ PUMP 3KC1	000000	000226
9154190730	9-1541	9073	CLIP; INJ PIPE	000000	000000
9154190840	9-1541	9084	CLIP ASM; INJ PIPE	000001	000000
9154191050	9-1541	9105	NUTS;	000008	000003
9154191300	9-1541	9130	CLIP ASM	000002	000000
9154191340	9-1541	9134	HEATER; INTAKE	000000	000000
9154196120	9-1541	9612	CLIP; INJ PIPE	000000	000000
9154196130	9-1541	9613	CLIP; "A", INJ. PIPE	000000	000681
9154196140	9-1541	9614	CLIP; "B", INJ. PIPE	000000	001198
9154216091			FUEL PIPE	000000	000000
9154216120			PIPE ASM; INJECTION NO. 1	000000	000000
9154216130	9-1542	1613	PIPE ASM; INJECTION NO. 2	000000	000000
9154216570	9-1542	1657	PIPE ASM; INJ NO. 1 D500	000000	000000
9154216580	9-1542	1658	PIPE ASM; INJ NO. 2 D500	000000	000000
9154216590	9-1542	1659	PIPE ASM; INJ NO. 3 D500	000000	000000
9154216600	9-1542	1660	PIPE ASM; INJ NO.4 D500	000000	000000
9154216610	9-1542	1661	PIPE ASM; INJ #2	000000	000000
9154216620	9-1542	1662	PIPE ASM; INJ NO. 6 D500	000000	000000
9154216660	9-1542	1666	PIPE ASM; INJ #2	000002	000000
9154216670	9-1542	1667	PIPE ASM; FUEL	000000	000000

9154216680	9-1542	1668	PIPE ASM; FUEL	000000	000000
9154216701	9-1542	1670	PIPE ASM; FUEL	000000	000000
9154216881	9-1542	1688	PIPE ASM; FUEL	000000	000000
9154217020	9-1542	1702	PIPE ASM; INJ #3	000001	000000
9154217060			FUEL PIPE	000000	000000
9154217070			FUEL PIPE	000000	000000
9154217601			LEAK OFF PIPE	000000	000000
9154218460			FUEL PIPE	000000	000000
9154218470			PIPE	000000	000000
9154416130			CLIP; "A" INJ PIPE	000000	000000
9191000240	9-1910	0024	HEAD ASM.;CYL.	000000	000000
9191000242	9-1910	0024	HEAD ASM.;CYL.	000000	000000
9191000480			AIR COMPRESSOR	000000	000000
9191000963	9-1910	0096	COMPRESSOR ASM; AIR	000000	000000
9191000964	9-1910	0096	COMPRESSOR ASM; AIR	000000	000000
9191001072	9-1910	0107	AIR COMPRESSOR	000000	000000
9191100030			CYL HEAD	000000	000000
9191100240			HEAD ASM;AIR CO	000000	000000
9191100242	9-1911	0024	HEAD ASM; CYL, AIR COMPRE	000000	000002
9191100250	9-1911	0025	CYL HEAD ASM	000000	000000
9191110160	9-1911	1016	HEAD; CYL COMPRESSOR	000000	000000
9191150040			PACKING	000000	000000
9191150080			PACKING	000000	000000
9191150090	9-1911	5009	GSKT;CYL. HEAD	000000	000010
9191150120	9-1911	5012	PACKING E120	000000	000000
9191190220	9-1911	9022	ADAPTER; HOURMETER DRIVE	000000	000000
9191190320	9-1911	9032	PIPE ASM 6RB1	000001	000000
9191200020			VALVE	000000	000000
9191200060			VALVE ASM.; UNLOADER	000000	000000
9191200070	9-1912	0007	VALVE ASM.; UNLOADER	000000	000000
9191200080	9-1912	0008	VALVE;UNLOADER	000000	000000
9191300030			VALVE	000000	000000
9191300040			VALVE	000000	000000
9191300110			VALVE ASSY	000004	000000
9191300120	9-1913	0012	VALVE; DELIVERY	000000	000002
9191310060			PLATE VALVE	000000	000000
9191320070			SEAT	000000	000000
9191340240			PACKING; CYL HEAD	000000	000000
9191390210	9-1913	9021	SHIM; AIR CMPR	000000	000079
9191390220	9-1913	9022	O-RING E120	000004	000000
9191390240	9-1913	9024	GASKET	000000	000023
9191390310			SPRING	000000	000000
9191390350			GASKET	000000	000006
9191505100	9-1915	0510	WASHER; SPRING	000000	000000
9191510210	9-1915	1021	CYLINDER; AIR COMP	000000	000000
9191580240	9-1915	8024	GASKET; COVER	000000	000000
9191580350	9-1915	8035	O-RING; AIR COMPRESS	000000	000000

9191610020			PISTON	000000	000000
9191610050			PISTON	000000	000000
9191610090			PISTONS	000000	000000
9191610100	9-1916	1010	PISTON; A/C	000000	000000
9191610110	9-1916	1011	PISTON;AIR COMP	000000	000002
9191610120	9-1916	1012	PISTON; OVSI=70.25	000000	000000
9191610130	9-1916	1013	PISTON	000000	000000
9191610170	9-1916	1017	PISTON; AIR COMPRESSOR	000001	000000
9191640110			PISTON PIN	000000	000000
9191670030	9-1916	7003	PIN;PISTON A/C	000000	000024
9191670050	9-1916	7005	PISTON RING	000000	000000
9191670060	9-1916	7006	PIN; PISTON	000000	000002
9191670070	9-1916	7007	PISTON PIN	000000	000000
9191680010			STOP RING	000000	000000
9191680030	9-1916	8003	RING;SNAP,PISTON	000017	000001
9191680040	9-1916	8004	SNAP RING	000000	000000
9191680050	9-1916	8005	SNAP RING	000000	000000
9191680080	9-1916	8008	RING;SNAP,PISTON AIR COMP	000000	000000
9191710050			CRANK SHAFT	000000	000000
9191710140			CRANK SHAFT	000000	000000
9191710230			CRANKSHAFT;AIR	000000	000001
9191710231	9-1917	1023	CRANKSHAFT; AIR COMPRESSO	000000	000000
9191710270	9-1917	1027	CRANKSHAFT; A/COMP.	000000	000000
9191710300	9-1917	1030	CRANKSHAFT; AIR COMPRESSO	000000	000000
9191730140			CONN ROD	000000	000000
9191730230	9-1917	3023	ROD ASM;CONNECT	000000	000001
9191770050	9-1917	7005	CRANK KITS	000003	000000
9191910160	9-1919	1016	PIPE; AIR E120	000000	000000
9191990110	9-1919	9011	BOLT; CONN ROD A/C	000000	000000
9191990130	9-1919	9013	NUT;BOLT,CONN.ROD	000000	000000
9193100050	9-1931	0005	DRIVE ASM.; TACHDMETER	000000	000000
9193110200	9-1931	1020	COVER	000000	000000
9193110240	9-1931	1024	CASE	000000	000000
9193120060	9-1931	2006	PACKING; CASE TO COVER	000009	000000
9193160170	9-1931	6017	GEAR; DRIVEN	000000	000002
9193160270	9-1931	6027	GEAR; DRIVEN	000003	000000
9193190130	9-1931	9013	CAP;ELBOW	000000	000000
9195150080	9-1951	5008	SEAL; OIL,OIL PUMP	000000	000000
9195190250	9-1951	9025	VALVE; FLOW CONTROL	000000	000000
9195190350	9-1951	9035	RING,RETAINING,	000000	000000
9195190360	9-1951	9036	KEY; SHAFT,OIL PUMP	000000	000004
9195190690	9-1951	9069	BALL;STEEL	000000	000000
9195190770	9-1951	9077	RING;RETAINING	000000	000000
9195190780	9-1951	9078	RING; RETAINING,OIL PUMP	000000	000000
9195190880	9-1951	9088	WASHER; PL,SHAFT	000000	000000
9195190970	9-1951	9097	VALVE;PRESSURE RELIEF	000000	000000
9195191020	9-1951	9102	VALVE; PRESSURE RELIEF	000000	000000

9195191060	9-1951	9106	SPRING; OIL PUMP	000000	000000
9195191090	9-1951	9109	RING;RETAINING	000000	000000
9195191120	9-1951	9112	NUT; SHAFT,P/S PUMP	000000	000005
9195191130	9-1951	9113	RING;RETAINING	000000	000003
9195191140	9-1951	9114	WASHER;LK,RELAY/PL.SHAFT	000000	000000
9195192930	9-1951	9293	WASHER; PL.	000000	000000
9195210110	9-1952	1011	SHAFT ASSY.	000000	000000
9195230200	9-1952	3020	ROTOR ASM.	000000	000000
9195290120	9-1952	9012	COLLAR;OIL PUMP	000000	000000
9195290130	9-1952	9013	SPRING; PLUG TO	000000	000004
9195290200	9-1952	9020	SUPERSEDED**VANE	000000	000000
9195810072	9-1958	1007	GEAR,OIL PUMP D	000000	000000
9195810090	9-1958	1009	GEAR; OIL PUMP DRIVE E120	000000	000001
9196000160			VAC PUMP	000000	000000
9196210070			ROTOR ASSY	000000	000000
9196650150	9-1966	5015	VALVE VACUUM PU	000000	000002
9196716010			ROTOR	000000	000000
9197110060			FRT BRKT ASSY	000000	000000
9197110670			BRACKET	000000	000000
9197116010			BRACKET; GENERATOR	000001	000000
9197118020	9-1971	1802	BRACKET	000014	000002
9197118021	9-1971	1802	BRACKET	000000	000000
9197118030	9-1971	1803	BRACKET; GENERATOR	000000	000000
9197120370	9-1971	2037	BAND; DYNAMO CLAMP	000000	000000
9197130080	9-1971	3008	END PIECE	000018	000000
9197130090	9-1971	3009	END PIECE	000002	000001
9197140950	9-1971	4095	RETAINER E120	000000	000000
9197190580	9-1971	9058	SPACER	000000	000000
9197190590	9-1971	9059	SPACER; ACG FIX	000013	000000
9197320480			CONNECTOR	000000	000000
9197320530			CONNECTOR	000000	000000
9197320590	9-1973	2059	CONNECTOR	000000	000000
9197320600	9-1973	2060	CONNECTOR	000009	000000
9197320700	9-1973	2070	CONNECTOR,GLOW	000000	000000
9197320710	9-1973	2071	CONNECTOR,GLOW	000000	000000
9197320740	9-1973	2074	CONNECTOR	000000	000000
9197320750	9-1973	2075	CONNECTOR	000004	000000
9197326100	9-1973	2610	CONNECTOR,GLOW	000000	000000
9197510790	9-1975	1079	BRACKET; INJ PUMP	000001	000000
9197511040	9-1975	1104	BRKT;INJ.PUMP	000000	000000
9197511041	9-1975	1104	BRKT;INJ PUMP	000001	000001
9197511141	9-1975	1114	SUPERSEDED**BRACKET	000000	000000
9197511181	9-1975	1118	BRACKET; INJ PUMP	000000	000000
9197516010	9-1975	1601	BRACKET; INJ PUMP SPACER	000001	000000
9197518010	9-1975	1801	BRKT; FILTER	000004	000000
9197552370	9-1975	5237	BRACKET; FUEL FILTER	000002	000000
9197556061			BRKT	000000	000000

9197556110	9-1975	5611	BRACKET; FUEL FILTER	000000	000000
9197590190	9-1975	9019	DOWEL; INJ PUMP	000000	000000
9197590191	9-1975	9019	DOWEL; INJ PUMP	000038	000000
9197710130	9-1977	1013	STAY; TURBO SUPPORT	000000	000000
9197810070	9-1978	1007	GASKET	000000	000000
9198041431	9-1980	4143	BOLT	000000	000000
9211226012	9-2112	2601	PIPE ASM; JOINT	000000	000000
9214010410	9-2140	1041	RADIATOR ASM	000000	000000
9214191290	9-2141	9129	SEAT	000000	000000
9214196050	9-2141	9605	ROD	000000	000000
9214311960	9-2143	1196	HOSE; UPPER, RADIATOR C24	000000	000001
9214311970	9-2143	1197	HOSE; LOWER, RADIATOR C24	000000	000009
9214311980	9-2143	1198	HOSE; LOWER, RADIATOR C24	000000	000005
9214313310			HOSE	000000	000000
9214313320			HOSE	000000	000000
9214390760			CLIP;OVRFLOW	000000	000000
9214390880	9-2143	9088	PLUG;RAD DRAIN	000000	000000
9214390882	9-2143	9088	PLUG,DRAIN,RADI	000000	000000
9214500170			FILLER CAP	000000	000000
9214500240			CAP;RAD	000000	000000
9214500470			FILLER CAP	000000	000000
9214500540			CAP ASM	000000	000000
9214500690			FILLER CAP	000000	000000
9214506030			RAD CAP	000000	000000
9214506080	9-2145	0608	FILLER CAP	000001	000000
9214506100	9-2145	0610	CAP ASSY.,RADIA	000000	000001
9214506101	9-2145	0610	CAP ASM.RAD	000012	000000
9214676050	9-2146	7605	RUBBER;CUSH RAD	000000	000000
9214676060	9-2146	7606	RUBBER; CUSHION	000000	000000
9214691230			INSULATOR	000000	000000
9214696150			STAY ASM	000000	000000
9214996040	9-2149	9604	PACKING;PIPE	000000	000000
9214996100	9-2149	9610	PACKING; SEA WATER PIPE	000000	000000
9214996250	9-2149	9625	PACKING; INLET PIPE SEA W	000000	000000
9214996251	9-2149	9625	PACKING; INLET PIPE SEA W	000000	000005
9215170040			SEAL	000000	000000
9215340350			MARK	000000	000000
9215556721			PANEL; SEAL, RAD.	000000	000000
9216590460			RING SNAP	000000	000000
9217000690			COMPRESSOR	000000	000000
9217006020	9-2170	0602	COOLER ASM; OIL	000000	000002
9217290240	9-2172	9024	PACKING E120	000000	000000
9217290270	9-2172	9027	PLATE; BAFFLE E120	000000	000000
9217650690	9-2176	5069	BRACKET	000000	000000
9217650740	9-2176	5074	STAY	000010	000000
9221130251	9-2211	3025	TUBE; DIST	000000	000000
9221146510	9-2211	4651	PIPE; EXHAUST C240	000003	000000

9221150220	9-2211	5022	FLANGE	000015	000000
9221150380			FLANGE	000000	000000
9221156030			FLANGE; EXHAUST	000000	000000
9221160010	9-2211	6001	GASKET; EXHAUST PIPE	000000	000000
9221160210	9-2211	6021	PACKING, FRT. PIP	000002	000000
9221160320	9-2211	6032	SEAL RING	000000	000000
9221160460	9-2211	6046	SEAL RING	000013	000003
9221166060	9-2211	6606	PACKING, EXH. PIP	000001	000000
9221216090			BRACKET	000000	000000
9221230470			CLAMP	000000	000000
9221230490			CLAMP	000000	000000
9221232040			CLAMP; EXHAUST PIPE	000000	000000
9221233040	9-2212	3304	BRACKET EXH PIP	000000	000000
9221290870			SUPPORT RUBBER	000000	000000
9221400500	9-2214	0050	SILENCER	000000	000000
9221400660			SILENCER	000000	000000
9221403021			SILENCER ASM.; EXHAUST	000000	000000
9221403100	9-2214	0310	SILENCER ASM EXHAUST	000000	000000
9221460520			HORN BRACKET	000000	000000
9221511930			BRACKET	000000	000000
9221590090	9-2215	9009	TUBE; DISTANCE	000000	000000
9221590091	9-2215	9009	DIST. TUBE	000000	000003
9224017830			FUEL TANK	000000	000000
9224106540	9-2241	0654	TANK ASM.; FUEL 24L	000000	000000
9224350060	9-2243	5006	STRAINER	000000	000000
9224350120			STRAINER	000000	000000
9224400170			FUEL CAPS	000000	000000
9224400890			FUEL TANK CAP	000000	000000
9224400891	9-2244	0089	FUEL TANK CAP	000000	000000
9224406300	9-2244	0630	CAP; VAC, SAFE	000003	000002
9224410781	9-2244	1078	FUEL TANK CAP	000001	000000
9224510091			FUEL CAP	000000	000000
9224510100			DUST SEAL	000000	000000
9224600010			FILTER	000000	000000
9224600190			STRAINER	000000	000000
9224600230			STRAINER	000000	000000
9225114000	9-2251	1400	FUEL PIPE	000000	000000
9225115320	9-2251	1532	PIPE ASM; FUEL	000000	000000
9225127380			FUEL PIPE ASSY	000000	000000
9225180510			CLIP; FUEL HOSE	000004	000000
9225536051	9-2255	3605	LINING	000000	000000
9225536060	9-2255	3606	LINING B	000000	000000
9225536061	9-2255	3606	LINING B	000000	000000
9232102730			BUTTON	000000	000000
9232103170			BUTTON	000000	000000
9232104940			CABLE	000000	000000
9232105690			BUTTON ASSY	000000	000000

9232105970			CABLE	000000	000000
9232106951	9-2321	0695	BUTTON ASSY FUE	000000	000000
9232111231	9-2321	1123	BUTTON;FUEL CON	000000	000000
9232130050	9-2321	3005	JOINT	000000	000000
9232176200			CABLE	000000	000000
9232177090			CABLE	000000	000000
9232177271			CABLE; ENGINE CONTROL	000000	000000
9232177540			CABLE	000001	000000
9232178390			CABLE; ENG. STOP	000000	000000
9232190550	9-2321	9055	CLIP	000000	000000
9232196060	9-2321	9606	JAW; JOINT, PUMP-CABLE	000001	000005
9232401900			PEDAL	000000	000000
9232406070			LEVER	000000	000000
9232406350			PEDAL	000000	000000
9233002180			ENGINE CONTROL	000000	000000
9233002410			LINK ASM; ENG	000000	000000
9233115260			LEVER ASM.; ENGINE CONT.	000000	000000
9233117490			LINER	000000	000000
9233126030			LEVEL	000000	000000
9233142750			LINK ROD	000000	000000
9233143050			LINK ROD	000000	000000
9233143060			LINK ROD	000000	000000
9233143140			LINK ROD	000000	000000
9233143150			LINK ROD	000000	000000
9233143450			LINK ROD	000000	000000
9233143790			LINK ROD	000000	000000
9233147040			LINK ROD	000000	000000
9233147700			LINK ROD	000000	000000
9233147710			LINK ROD	000000	000000
9233156140			ROD	000000	000000
9233156230			LEVER	000000	000000
9233176040			LEVER	000000	000000
9233190460			BUSH;ENGINE CONTROL LEVER	000000	000000
9233190880			JOINT	000000	000000
9233191450			BUSH*	000000	000000
9233191590			NYLON CLIP	000000	000000
9233191960			JOINT	000000	000000
9233192160			BUSH*	000000	000000
9233212720	9-2332	1272	SHAFT;ENGINE CONTROL	000000	000000
9233246250	9-2332	4625	SHAFT;ENGINE CONTROL	000000	000000
9233260630	9-2332	6063	SPRING EYE	000000	000000
9233260640	9-2332	6064	SPRING; EYE	000000	000000
9233260660	9-2332	6066	EYE; SPRING	000000	000000
9233260670	9-2332	6067	SPRING EYE	000000	000000
9233291020	9-2332	9102	NUT; LOCK	000000	000000
9233291030	9-2332	9103	PIN; LOCK NUT	000000	000000
9233300090			ENGINE CONTROL	000000	000000

9262786010	9-2627	8601	SHIM; T=1.0M, ENGINE SUPP	000000	000000
9262786020	9-2627	8602	SHIM; T=.6M, ENGINE SUPPO	000000	000000
9262786030	9-2627	8603	SHIM; T=.4M, ENGINE SUPPO	000000	000000
9262786040	9-2627	8604	SHIM; T=.2M, ENGINE SUPPO	000000	000000
9262796010	9-2627	9601	NUT; W/WASHER	000000	000000
9263336011	9-2633	3601	SHAFT ASM.	000000	000000
9263466031	9-2634	6603	PROTECTOR	000000	000000
9263466041	9-2634	6604	BRACKET; BATTERY BOX	000000	000000
9263486010	9-2634	8601	PIECE; DISTANCE	000000	000000
9263786020	9-2637	8602	RUBBER CUSHION	000006	000002
9263786030	9-2637	8603	RUBBER; CUSION	000000	000000
9284104700	9-2841	0470	N U T:	000000	000000
9311116120	9-3111	1612	CLUTCH HOUSING	000000	000000
9311150730	9-3111	5073	BUSH	000000	000005
9311210090			PACKING	000000	000000
9311210130			PACKING BRG CASE	000000	000000
9311210170			PACKING	000000	000000
9311210220			PACING	000000	000000
9311310030	9-3113	1003	COVER	000000	000000
9311310240	9-3113	1024	COVER PLATE;CLUTCH HOUSIN	000000	000000
9311310351	9-3113	1035	DUST COVER	000000	000000
9311310352	9-3113	1035	DUST COVER	000000	000000
9311310360	9-3113	1036	CASE BRG POWER DRIVE	000000	000000
9311310780	9-3113	1078	COVER CHECK HOLE LEVER	000000	000000
9311311000	9-3113	1100	COVER CHECK HOLE	000000	000000
9311316020	9-3113	1602	COVER;DUST	000000	000000
9311316021	9-3113	1602	COVER;DUST	000000	000000
9311316042	9-3113	1604	COVER; UPPER	000000	000000
9311316062	9-3113	1606	COVER	000000	000000
9311390020	9-3113	9002	RING BRG CASE	000000	000000
9311390070	9-3113	9007	GROMMET;CLU HSG	000000	000010
9312100180	9-3121	0018	COVER ASSY	000000	000000
9312140500	9-3121	4050	SPRING	000000	000000
9312140580	9-3121	4058	SPRING	000000	000000
9312140760	9-3121	4076	SPRING	000000	000000
9312141140	9-3121	4114	SPRING CLUTCH (A)	000000	000000
9312141150	9-3121	4115	SPRING CLUTCH (B)	000000	000000
9312190130			SPRING	000000	000000
9312200870			PRESS PLATE	000000	000000
9312200890			PRESS PLATE	000000	000000
9312201280			PRESS PLATE	000000	000001
9312201820			PLATE	000000	000000
9312206111	9-3122	0611	PRESSURE PLATE	000009	000009
9312210690	9-3122	1069	PRESS PLATE	000000	000000
9312216180	9-3122	1618	PRESS PLATE	000000	000000
9312290180			PLATE	000000	000000
9312290870	9-3122	9087	PLATE;STR	000000	000000

9312310150	9-3123	1015	CASE SPRING	000000	000000
9312310540	9-3123	1054	LEVER;RELEASE,CLUTCH	000000	000000
9312310750	9-3123	1075	PLATE; LK,LEVER	000000	000000
9312310820	9-3123	1082	LEVER ASM	000000	000000
9312310840	9-3123	1084	LEVER	000000	000000
9312320090	9-3123	2009	PIN**	000000	000000
9312320100	9-3123	2010	PIN	000000	000000
9312330110	9-3123	3011	SPRING	000000	000000
9312330170	9-3123	3017	SPRING;RETURN,CLUTC	000000	000000
9312350130			NUT	000000	000000
9312350150			NUT	000000	000000
9312350160	9-3123	5016	NUT	000000	000000
9312350190	9-3123	5019	SUPPORT	000000	000000
9312350360	9-3123	5036	BUSH*	000000	000000
9312350470	9-3123	5047	NUT	000000	000000
9312350610	9-3123	5061	NUT; SUPPORT	000001	000000
9312356010	9-3123	5601	LEVER	000000	000000
9312390390	9-3123	9039	WASHER; PL., SU	000001	000006
9312390710	9-3123	9071	SPRING;ANTIRATTLE,CLUTC	000000	000000
9312391160	9-3123	9116	BUSH; RELEASE L	000001	000000
9312391210	9-3123	9121	DIST. PIECE	000000	000000
9312396020	9-3123	9602	PLATE	000000	000000
9312400920	9-3124	0092	DRIVEN PLATE	000000	000000
9312401700			DRIVEN PLATE	000000	000000
9312490150			SPACER1	000000	000000
9312490170			SPACER	000000	000000
9312490210			SPACER	000000	000000
9312550130			NUT	000000	000000
9313200200			SHIFT BLOCK	000000	000000
9313206041			SHIFT BLOCK ASM	000000	000000
9313206071			SHIFT BLOCK ASM	000000	000000
9313206201			COLLAR,SHIFT	000000	000000
9313250150			NUT	000000	000000
9313290050			SPRING	000000	000000
9313290100			SPRING;SHIFT	000000	000000
9313290120			SPRING	000000	000000
9313400110			WITHDRAW LEVER	000000	000000
9313400290			FORK ASM,CLUTCH	000000	000000
9313400291	9-3134	0029	FORK ASM;CLUTCH	000005	000000
9313410280	9-3134	1028	FORK; SHIFT, CLUTCH	000001	000000
9313410570	9-3134	1057	FORK SHIFT CLUTCH	000000	000000
9313420290	9-3134	2029	SHAFT;CLUTCH SHIFT	000000	000000
9313420300	9-3134	2030	SHAFT; CLUTCH SHIFT FORK	000000	000000
9313420600			SHAFT	000000	000000
9313456041			SUPPORT	000000	000000
9313490100			ROD END	000000	000000
9313490130	9-3134	9013	PLATE	000000	000000

9313780010	9-3137	8001	CLIP FLEX HOSE	000000	000000
9314210220	9-3142	1022	LEVER; SHIFT FORK SHAFT	000000	000000
9314211250			LEVER	000000	000000
9314291260	9-3142	9126	BUSH;CLU. SHAFT	000013	000000
9322512330			GEAR; 2ND	000000	000000
9331126020			PACKING	000000	000000
9331126030			PACKING	000000	000000
9331126041			PACKING	000000	000000
9331150060			GEAR CASE	000000	000000
9331196050			BREATHER	000000	000000
9331210070			COVERV	000000	000000
9331210710			COVER	000000	000000
9331210842			COVER FRONT TRAN CASE	000000	000000
9331210872	9-3312	1087	COVER; FRONT, MISSION CAS	000000	000000
9331216040			COVER	000000	000000
9331220060			PACKING; FRONT COVER	000000	000000
9331310560			DIST PIECE	000000	000000
9331311482	9-3313	1148	COVER; REAR, TRANS	000000	000000
9331311581			COVER	000000	000000
9331316610			COVER	000000	000000
9331320090			PACKING	000000	000000
9331320580			PACKING	000000	000000
9331326030			PACKING	000000	000000
9331390070	9-3313	9007	COVER; DUST, RR	000000	000000
9331390071	9-3313	9007	COVER, DUST TRAN	000000	000000
9331390072	9-3313	9007	COVER, DUST, TRAN	000000	000000
9331396030			BUSH	000000	000000
9331410100			COVER	000000	000000
9331416010	9-3314	1601	COVER, SIDE	000000	000000
9331416011	9-3314	1601	COVER, SIDE	000000	000000
9331416012	9-3314	1601	COVER; SIDE	000000	000007
9331420330			PACKING	000000	000000
9331426010	9-3314	2601	GSKT; SIDE CVR	000000	000014
9331510040			RETAINER	000000	000000
9331510050			RETAINER	000000	000000
9331510110			RETAINER	000000	000000
9332111510			TOP GEAR SHAFT	000000	000000
9332111910			TOP GEAR SHAFT	000000	000000
9332112260			TOP GEAR SHAFT	000000	000000
9332112270			TOP GEAR SHAFT	000000	000000
9332112700			TOP GEAR SHAFT	000000	000000
9332112710			TOP GEAR SHAFT	000000	000000
9332170280			WASHER	000000	000000
9332196030			RUBBER; BLOCK	000000	000000
9332310010			MAIN SHAFT	000000	000000
9332310240			MAIN SHAFT	000000	000000
9332310250			MAIN SHAFT	000000	000000

9332310970		MAIN SHAFT	000000	000000
9332340280		COLLAR	000000	000000
9332340340		COLLAR	000000	000000
9332341030		COLLAR	000000	000000
9332341420		MAIN SHAFT	000000	000000
9332346040		SPACER	000000	000000
9332346080		COLLAR	000000	000000
9332346093		COLLAR	000000	000000
9332346180	9-3323 4618	COLLAR; REVERSE	000000	000000
9332346181	9-3323 4618	COLLAR; REVERSE	000000	000002
9332350060		DIST PIECE	000000	000000
9332350080		DIST PIECE	000000	000000
9332356020	9-3323 5602	SPACER, SPEED	000000	000000
9332356021	9-3323 5602	SPACER; BRG TO	000000	000000
9332356022	9-3323 5602	SPACER; BRG TO	000000	000001
9332356061	9-3323 5606	SPACER	000000	000000
9332390130		WASHER	000000	000000
9332390140		WASHER	000000	000000
9332390550		PIN	000000	000000
9332390630		PIN	000000	000000
9332390680		THRUST PIECE	000000	000000
9332390720		COUPLING	000000	000000
9332390760		WASHER	000000	000000
9332396310		COUPLING	000000	000000
9332396480		WASHER	000000	000000
9332510640		2ND GEAR	000000	000000
9332511940		2ND GEAR	000000	000000
9332516120		GEAR; LOW	000000	000000
9332516630		GEAR	000000	000000
9332516810		GEAR	000000	000000
9332520070		GEAR	000000	000000
9332521940		3RD GEAR	000000	000000
9332522061		GEAR; 3RD COUNTER	000000	000000
9332526030		GEAR	000000	000000
9332526571		GEAR; 3RD MAIN	000000	000000
9332530010		GEAR; 6TH COUNTER	000000	000000
9332530440		GEAR; 6TH COUNTER	000000	000000
9332530450		GEAR	000000	000000
9332536160		5TH GEAR	000000	000000
9332550530		GEAR*	000000	000000
9332550610		GEAR	000000	000000
9332550720		GEAR; LOW	000000	000000
9332570400		GEAR	000000	000000
9332590740		BUSH	000000	000000
9332590750		BUSH	000000	000000
9332610320		CLUTCH HUB	000000	000000
9332611531		CLUTCH	000000	000000

9332616100		SYNCHRONIZER	000000	000000
9332616110		CLUTCH HUB	000000	000000
9332616180		CLUTCH HUB	000000	000000
9332616190		CLUTCH HUB	000000	000000
9332616260		HUB	000000	000000
9332620240		SLEEVE	000000	000000
9332620280		SLEEVE	000000	000000
9332620450		SLEEVE	000000	000000
9332620780		SLEEVE	000000	000000
9332626060		SLEEVE	000000	000000
9332630400		INSERT	000000	000000
9332630410		INSERT	000000	000000
9332630470		INSERT	000000	000000
9332630480		INSERT,CLUTCH H	000000	000000
9332630481	9-3326 3048	INSERT,CLUTCH	000000	000000
9332630482	9-3326 3048	INSERT,CLUTCH	000000	000000
9332630500		INSERT	000000	000000
9332636130	9-3326 3613	INSERT	000000	000000
9332640190		SPRING	000000	000000
9332640360		SPRING	000000	000000
9332640370		SPRING	000000	000000
9332646170		SPRING; INSERT	000000	000000
9332650810		BLOCK RING	000000	000000
9332651230		BLOCK RING	000000	000000
9332651420		BLOCK RING	000000	000000
9332656100		RING,BLOCK,TRAN	000000	000000
9332656101	9-3326 5610	RING,BLOCK,TRAN	000000	000000
9332656200		BLOCK RING	000000	000000
9332710280		WASHER	000000	000000
9332710330	9-3327 1033	WASHER;THRUST,REV SHAFT	000000	000013
9332716060	9-3327 1606	WASHER; THRUST,	000000	000000
9332716061	9-3327 1606	WASHER; THRUST,	000000	000004
9332716071	9-3327 1607	WASHER; THRUST,REV G	000000	000000
9333110010		SHAFT	000000	000000
9333110490		SHAFT	000000	000000
9333110770		SHAFT	000000	000000
9333140120		DIST PIECE	000000	000000
9333190270		WASHER	000000	000000
9333190280		WASHER	000000	000000
9333310150		GEAR	000000	000000
9333310320		GEAR; COUNTER SHAFT	000000	000000
9333310330		GEAR	000000	000000
9333310370		GEAR	000000	000000
9333326090		GEAR	000000	000000
9333326140		CLUSTER GEAR	000000	000000
9333330110		GEAR	000000	000000
9333380220		GEAR COUNTER	000000	000000

9333380240		GEAR; COUNTER	000000	000000
9333510130		REVERSE SHAFT	000000	000000
9333510410		REVERSE SHAFT	000000	000000
9333516020	9-3335 1602	REVERSE SHAFT	000000	000000
9333516041	9-3335 1604	SHAFT; REV	000000	000000
9333540070	9-3335 4007	PIECE;LK,REV SHAFT	000000	000060
9333610560		GEAR; REVERSE	000000	000000
9333616020		REVERSE GEAR	000000	000000
9333616110		REVERSE GEAR	000000	000000
9333616180		REVERSE GEAR	000000	000000
9333696010		THRUST WASHERS	000000	000000
9333710210		GEAR	000000	000000
9333716072	9-3337 1607	GEAR; SPEEDO DRIVE	000000	000000
9333716081	9-3337 1608	GEAR*	000000	000000
9333716090		GEAR	000000	000000
9333720030		GEAR	000000	000000
9333720270		GEAR	000000	000000
9333720280		GEAR	000000	000000
9333720480		GEAR	000000	000000
9333726290		GEAR	000000	000000
9333730550		BUSH	000000	000000
9333730740		BUSH	000000	000000
9333736260		BUSH; SPEED	000000	000000
9333736360		BUSHING	000000	000000
9333790230		PIPE	000000	000000
9335110700		SHIFT PIECE	000000	000000
9335110790		SHIFT ARM	000000	000000
9335110791		SHIFT ARM	000000	000000
9335110890		SHIFT ARM	000000	000000
9335110910		SHIFT BLOCK	000000	000000
9335110920		SHIFT BLOCK	000000	000000
9335110930		SHIFT ARM	000000	000000
9335110940		SHIFT BLOCK	000000	000000
9335110950		SHIFT ARM	000000	000000
9335111810		SHIFT ARM	000000	000000
9335111840		SHIFT ARM	000000	000000
9335112170		SHIFT ARM	000000	000000
9335113830		SHIFT ARM	000000	000000
9335113840		SHIFT BLOCK	000000	000000
9335113850		SHIFT BLOCK	000000	000000
9335113860		SHIFT BLOCK	000000	000000
9335114330		SHIFT ARM	000000	000000
9335116511		BLOCK; SHIFT	000000	000000
9335116800		SHIFT ARM	000000	000000
9335116810		SHIFT ARM	000000	000000
9335116820		SHIFT ARM	000000	000000
9335116830		SHIFT BLOCK	000000	000000

9335160601	9-3351 6060	CAP; RETURN SPR,SHIFT BLK	000000	000000
9335160630		SLEEVE	000000	000000
9335216210		SHIFT ARM	000000	000000
9335216610		LEVER	000000	000000
9335216900		LEVER	000000	000000
9335216910		LEVER	000000	000000
9335311100		SHAFT	000000	000000
9335312830		SHIFT ROD	000000	000000
9335313100		ROD	000000	000000
9335313180		ROD	000000	000000
9335313260		ROD	000000	000000
9335313600		SHIFT ROD	000000	000000
9335316690		SHIFT ROD	000000	000000
9335316700		SHIFT ROD	000000	000000
9335316810		SHIFT ROD	000000	000000
9335346021	9-3353 4602	PIN,INTER LOCK,	000000	000000
9335346030		PLUNGER	000000	000000
9335346031		PLUNGER	000000	000000
9335412770		QUADRANT BOX	000000	000000
9335416300		QUADRANT BOX	000000	000000
9335426070		PACKING	000000	000000
9335470080		BREATHER; RR AXLE	000000	000000
9335470100		BREATHER	000000	000000
9335496120		SEAT; SPRING	000000	000000
9335576010	9-3355 7601	SPACER; (T=2.0)	000000	000000
9335576020	9-3355 7602	SPACER; (T=2.5)	000000	000000
9335576030	9-3355 7603	SPACER; (T=3.0)	000000	000000
9335576040	9-3355 7604	SPACER; (T=3.5)	000000	000000
9336103370		GEAR SHIFTER	000000	000000
9336116100		KNOB, TRANS	000000	000000
9336136620		CHANGE LEVER	000000	000000
9336140220		RUBBER	000000	000000
9336140580		COVER; GEAR SHIFT	000000	000000
9336140820		S E A L	000000	000000
9336150170		BOSS	000000	000000
9336150410		BOSS CHANGE LEVER	000000	000000
9336190890	9-3361 9089	PACKING	000000	000000
9336505920		RELAY LEVER	000000	000000
9336592500		WASHER	000000	000000
9336593260		PIVOT PIN	000000	000000
9336594520		BUSH	000000	000000
9336594670	9-3365 9467	SEAT;SPR.ROD	000000	000038
9336594760	9-3365 9476	BUSHING;JOINT,A/T CONT.	000000	000002
9336594800		JAW; JOINT	000000	000000
9336600751		RELAY LEVER	000000	000000
9336607540		RELAY LEVER	000000	000000
9336616700		SHIFT LEVER	000000	000000

9336626980	CONT. SHAFT	000000 000000
9336627040	CONTROL ROD	000000 000000
9336627070	CONTROL ROD	000000 000000
9336627170	PIPE	000000 000000
9336676160	BOSS	000000 000000
9336676470	BRACKET	000000 000000
9336696530	GUIDE; BUSHING	000000 000000
9336766170	PIN	000000 000000
9336766450	BRACKET	000000 000000
9361220130	BREATHER; AIR, T	000000 000000
9361220151	BREATHER; TRANS	000000 000000
9361230090	GASKET; COVER T	000000 000000
9361530200	SHIM; BRG ADJ, I	000000 000000
9361530210	SHIM; BRG ADJ, I	000000 000000
9361530220	SHIM; BRG ADJ, I	000000 000000
9361530230	SHIM; BRG ADJ, I	000000 000000
9361530240	SHIM; BRG ADJ, I	000000 000000
9361530250	SHIM; BRG ADJ, I	000000 000000
9361530260	SHIM; BRG ADJ, I	000000 000000
9371113930	PROP SHAFT	000000 000000
9371200960	SLEEVE ASSY	000000 000000
9371212711	PROP SHAFT	000000 000000
9372110381	YOKE; FLANGE	000000 000000
9372110540	YOKE	000000 000000
9372110550	YOKE	000000 000000
9372400221	SPLINED YOKE	000000 000000
9372410630	YOKE	000000 000000
9372410971	YOKE*	000000 000000
9372410990	YOKE	000000 000000
9372411200	YOKE	000000 000000
9372451050	SLEEVE	000000 000000
9372451190	FLANGE ASSY	000000 000000
9372451820	FLANGE ASSY.	000000 000000
9372451822 9-3724 5182	FLANG ASM	000000 000000
9372456060	FLANGE	000000 000000
9373000650	U-JOINT ASM	000000 000000
9373001120	U-JOINT	000000 000000
9373006010	U-JOINT ASM	000000 000000
9373006050	U-JOINT	000000 000000
9375150700	BRKT	000000 000000
9375151170	BRKT	000000 000000
9375160310	CUSHION RUBBER	000000 000000
9375190120	RETAINER	000000 000000
9375190290	RETAINER	000000 000000
9375240120	DIST PIECE	000000 000000
9375290050	RETAINER	000000 000000
9375290260	RETAINER	000000 000000

9377520060			CENTER BOLT		000000	000000
9380006070			P.T.O.		000000	000000
9381710080	9-3817	1008	NUT; THRUST, BRG CASE		000000	000000
9381710120	9-3817	1012	NUT; THRUST		000000	000000
9381750090	9-3817	5009	RETAINER OIL SEAL		000000	000000
9381750110	9-3817	5011	THROWER;OIL		000000	000000
9381790040	9-3817	9004	LOCK; THRUST NUT		000000	000000
9381790050	9-3817	9005	LOCK; SET BOLT,THRUST NUT		000000	000000
9381790100	9-3817	9010	LOCK PULLEY SET BOLT		000000	000000
9381790110	9-3817	9011	WASHER THRUST		000000	000000
9381790130	9-3817	9013	WASHER; SHAFT END		000000	000000
9381790140	9-3817	9014	LOCK; SHAFT END		000000	000000
9381810061	9-3818	1006	CASE BRG		000000	000000
9381810071			CASE BRG		000000	000000
9381890050	9-3818	9005	SPACER;FLANGE		000000	000000
9382116100			SHAFT OUTPUT		000000	000000
9382260210	9-3822	6021	SPACER;OUTER		000000	000000
9382260220	9-3822	6022	SPACER;INNER		000000	000000
9382260230	9-3822	6023	SPACER;INNER		000000	000000
9382260240	9-3822	6024	SPACER;INNER		000000	000000
9382260250	9-3822	6025	SPACER;INNER		000000	000000
9382260260	9-3822	6026	SPACER;INNER		000000	000000
9382260269	9-3822	6026	SPACER;INNER T=9.00	OR	000000	000000
9382260270	9-3822	6027	SPACER;INNER		000000	000000
9382260280	9-3822	6028	SPACER;INNER		000000	000000
9382260290	9-3822	6029	SPACER;INNER		000000	000000
9382260300	9-3822	6030	SPACER;INNER		000000	000000
9382260310	9-3822	6031	SPACER;INNER		000000	000000
9382260319	9-3822	6031	SPACER;INNER T=8.65	OR	000000	000000
9382260320	9-3822	6032	SPACER;INNER		000000	000000
9382260329	9-3822	6032	SPACER;INNER T=8.58	OR	000000	000000
9382260330	9-3822	6033	SPACER;INNER		000000	000000
9382260339	9-3822	6033	SPACER;INNER T=8.51	OR	000000	000000
9382260340	9-3822	6034	SPACER;INNER		000000	000000
9382260350	9-3822	6035	SPACER;INNER		000000	000000
9382260360	9-3822	6036	SPACER;INNER		000000	000000
9382260370	9-3822	6037	SPACER;INNER		000000	000000
9382260380	9-3822	6038	SPACER;INNER		000000	000000
9382260390	9-3822	6039	SPACER;INNER		000000	000000
9382260400	9-3822	6040	SPACER;INNER		000000	000000
9382260410	9-3822	6041	SPACER;INNER		000000	000000
9382260420	9-3822	6042	SPACER;INNER		000000	000000
9382260430	9-3822	6043	SPACER;INNER		000000	000000
9382260440	9-3822	6044	SPACER;INNER		000000	000000
9382260450	9-3822	6045	BOLT;FLANGE		000000	000000
9382260460	9-3822	6046	SPACER;FLYWHEEL		000000	000000
9382260470	9-3822	6047	SPACER;FLYWHEEL		000000	000000

9382260480	9-3822	6048	SPACER; FLYWHEEL	000000	000000
9382260490	9-3822	6049	SPACER; FLYWHEEL	000000	000000
9382260500	9-3822	6050	SPACER; FLYWHEEL	000000	000000
9382260510	9-3822	6051	SPACER; FLYWHEEL	000000	000000
9382410760	9-3824	1076	GEAR PTO	000000	000000
9382416121	9-3824	1612	GEAR; OUTPUT, T/M SID	000000	000000
9382416140	9-3824	1614	GEAR; IDLE, T/M SIDE	000000	000000
9382416141	9-3824	1614	GEAR; IDLE, T/M SIDE	000000	000000
9382416230	9-3824	1623	GEAR; IDLE	000000	000000
9382416260	9-3824	1626	GEAR; FLYWHEEL	000000	000000
9382610090	9-3826	1009	SUPERSEDED**GEAR	000000	000000
9382610120	9-3826	1012	G E A R	000000	000000
9385110110	9-3851	1011	SHAFT; POWER DRIVE	000000	000000
9385110130	9-3851	1013	SHAFT POWER DRIVE	000000	000000
9385190050			COLLAR SHAFT POWER DRIVE	000000	000000
9411140121			GASKET	000000	000000
9411190020			COVER	000000	000000
9411190030			GASKET	000000	000000
9411190040			SHIM	000000	000000
9411190080			SHIM	000000	000000
9411190090			SHIM	000000	000000
9411190250			SHIM	000000	000000
9411190260			SHIM	000000	000000
9411190280			SHIM	000000	000000
9411190290			SHIM	000000	000000
9411190300			SHIM	000000	000000
9411270060	9-4112	7006	BOLT; ADJ, DRIVE	000000	000000
9411510170	9-4115	1017	C A G E	000000	000000
9411540220			SHIM	000000	000000
9411540230			SHIM	000000	000000
9411540380			SHIM	000000	000000
9411540390			SHIM	000000	000000
9411540400			SHIM	000000	000000
9411610140	9-4116	1014	RETAINER	000000	000000
9411620260	9-4116	2026	PACKING	000000	000000
9412006240			GEAR SET; FINAL	000000	000000
9412110340			PINION	000000	000000
9412110520			PINION	000000	000000
9412110810			PINION	000000	000000
9412111740			PINION	000000	000000
9412196100			SHIM	000000	000000
9412196160			SHIM	000000	000000
9412196180			SHIM	000000	000000
9412196260			SHIM	000000	000000
9412196330			DIST PIECE	000000	000000
9412290880			SHIM	000000	000000
9412291540			SHIM	000000	000000

9412291550			SHIM	000000	000000
9412291560			SHIM	000000	000000
9412292870			SPACER	000000	000000
9412292890	9-4122	9289	SPACER	000000	000000
9412293240	9-4122	9324	SHIM; FLYWHEEL	000000	000000
9412293250	9-4122	9325	SHIM; FLYWHEEL	000000	000000
9412293260	9-4122	9326	SHIM; FLYWHEEL	000094	000000
9412293270	9-4122	9327	SHIM; FLYWHEEL	000000	000000
9412293280	9-4122	9328	SHIM; FLYWHEEL	000000	000000
9412293290	9-4122	9329	SHIM; FLYWHEEL	000000	000000
9412293300	9-4122	9330	SHIM; FLYWHEEL	000094	000000
9412293310	9-4122	9331	SHIM; FLYWHEEL	000000	000000
9412293320	9-4122	9332	SHIM; FLYWHEEL	000000	000000
9412293330	9-4122	9333	SHIM; FLYWHEEL	000077	000000
9412293340	9-4122	9334	SHIM; FLYWHEEL	000000	000000
9412293350			SHIM	000000	000000
9412293390			SHIM	000000	000000
9412296030			SHIM	000000	000000
9412296070			SHIM	000000	000000
9412296110			SHIM	000000	000000
9412296140			SHIM	000000	000000
9412296150			SHIM	000000	000000
9412296190			SHIM	000000	000000
9412296200			SHIM	000000	000000
9412510530			G E A R	000000	000000
9412511090			GEAR; F	000000	000000
9412511100			FINAL GEAR	000000	000000
9412511511			CROWN	000000	000000
9412610010			HELICAL GEAR	000000	000000
9412610020			SIDE GEAR	000000	000000
9412620030			SIDE GEAR	000000	000000
9412620110			FINAL GEAR	000000	000000
9412650020			CROSS SHAFT	000000	000000
9412660020			SLEEVE	000000	000000
9412680020			WASHER	000000	000000
9412680030			WASHER	000000	000000
9412710020			FORK	000000	000000
9412790020			SHIM	000000	000000
9412790030			SHIM	000000	000000
9412790040			SLEEVE	000000	000000
9415100710			DIFF CAGE	000000	000000
9415106090			DIFF CAGE	000000	000000
9415106100			CAGE SET	000000	000000
9415118092			DIFF CAGE	000000	000000
9415190050			WASHER	000000	000000
9415190090			SHIM	000000	000000
9415190100			WASHERS	000000	000000

9415196010		SHIM	000000	000000
9415196020		SHIM	000000	000000
9415210170		SPIDER	000000	000000
9415210740		SPIDER	000000	000000
9415216051		PIN, CROSS; DIFF	000000	000000
9415510130		PINION	000000	000000
9415510210		RR END GEAR	000000	000000
9415510280		CAGE*	000000	000000
9415510290		PINION	000000	000000
9415510510		PINION	000000	000000
9415520040		WASHER	000000	000000
9415520060		WASHER	000000	000000
9415610150		SIDE GEAR	000000	000000
9415610470		SIDE GEAR	000000	000000
9420022320		FILTER	000000	000000
9421290450		RETAINER	000000	000000
9421420260		PACKING	000000	000000
9421720130		SHAFT; FLANGE	000000	000000
9421750040		PACKING	000000	000000
9423110270		HUB	000000	000000
9423110561		HUB	000000	000000
9423120731		HUB; FRONT	000000	000000
9423130390		HUB CAP	000000	000000
9423130580		HUB, CAP, FRT WHEEL	000000	000000
9423131060		HUB CAP	000000	000000
9423151520		DRUM	000000	000000
9423190360		PACKING	000000	000000
9423190890		PACKING	000000	000000
9423240710		SPRING EYE	000000	000000
9423256030		HOLDER	000000	000000
9423290071		DIST PIECE	000000	000000
9423310390		WHEEL PIN	000000	000000
9423310590		WHEEL PIN	000000	000000
9423311010		PIN	000000	000000
9423311040		WHEEL PIN	000000	000000
9423311220		WHEEL PIN	000000	000000
9423311350		WHEEL PIN	000000	000000
9423311351	9-4233 1135	PIN;WHEEL, FRT, R	000000	000000
9423311352	9-4233 1135	PIN;WHEEL, FRT, R	000001	000000
9423311360		WHEEL PIN	000000	000000
9423311770		WHEEL PIN	000000	000000
9423311851		RIGHT STUDS	000000	000000
9423320180		WHEEL PIN	000000	000000
9423320390		WHEEL PIN	000000	000000
9423320510		WHEEL PIN	000000	000000
9423320850		WHEEL PIN	000000	000000
9423321030		WHEEL PIN	000000	000000

9423321361	WHEEL PIN	000000	000000
9423321450	WHEEL PIN	000000	000000
9423321641	WHEEL PIN	000000	000000
9423321721	WHEEL PIN	000000	000000
9423330010	NUT	000000	000000
9423330070	NUT	000000	000000
9423330120	NUT; WHEEL FRT	000000	000000
9423330170	WHEEL NUT	000000	000000
9423330190	WHEEL NUT	000000	000000
9423330200	WHEEL NUT	000000	000000
9423340010	NUT	000000	000000
9423340050	WHEEL NUT	000000	000000
9423340070	NUT; WHEEL FRT	000000	000000
9423340130	WHEEL NUT	000000	000000
9423340140	WHEEL NUT	000000	000000
9423350010	RETAINER	000000	000000
9423350060	NUT	000000	000000
9423350081	WHEEL NUT	000000	000000
9423350090	WHEEL NUT	000000	000000
9423360050	WHEEL NUT	000000	000000
9423360060	NUT	000000	000000
9423360081	WHEEL NUT	000000	000000
9431156021	CASTER PLATE	000000	000000
9431301390	KNUCKLE	000000	000000
9431301400	KNUCKLE	000000	000000
9431336440	KNUCKLE; ARM	000000	000000
9431340350	TIE ROD ARM	000000	000000
9431356050	KNUCKLE	000000	000000
9431410070	KING PIN	000000	000000
9431410240	KING PIN	000000	000000
9431500330	ROD END	000000	000000
9431500340	ROD END	000000	000000
9431590060	COVER	000000	000000
9431610200	KING PIN	000000	000000
9431710040	WASHER	000000	000000
9431710050	WASHER	000000	000000
9431710060	WASHER	000000	000000
9431710450	WASHER	000000	000000
9431710460	WASHER	000000	000000
9431710490	WASHER	000000	000000
9431710520	WASHER	000000	000000
9431756010	COVER	000000	000000
9440017760	STEERING	000000	000000
9441102080	STEERING WHEEL	000000	000000
9441106060	STEERING WHEEL	000000	000000
9441200170	HORN BUTTON	000000	000000
9441200700	HORN RING	000000	000000

9441200910		HORN BUTTON	000000	000000
9441300390		BUSH	000000	000000
9441330040		BUSH	000000	000000
9441330280		BUSH	000000	000000
9441330300		BUSH	000000	000000
9441396040		STRIKER; RING	000000	000000
9442190290		COWL	000000	000000
9442196960		COWL	000000	000000
9443210760		SECTOR SHAFT	000000	000000
9443408100		STRIKER	000000	000000
9443576260		DRAG LINK	000000	000000
9443610560		JOINT BALL	000000	000000
9443611360		BALL JOINT	000000	000000
9443650540	9-4436 5054	BOOT	000000	000000
9443650541	9-4436 5054	BOOT	000000	000000
9443790310	9-4437 9031	CLIP*	000000	000006
9461104590		HAND BRAKE LEVER	000000	000000
9461104630		HAND BRAKE ASSY	000000	000000
9461104700		HAND BRAKE	000000	000000
9461106300		LEVER ASM.	000000	000000
9461111880	9-4611 1188	LEVER	000000	000000
9461120780	9-4611 2078	LINK	000000	000000
9461140060	9-4611 4006	SPRING	000000	000000
9461150130	9-4611 5013	COVER	000000	000000
9461190200		COLLAR	000000	000000
9461190410		SPACER	000000	000000
9461191290		JOINT	000000	000000
9461206100		HAND BRAKE ASSY	000000	000000
9461290190		SPRING	000000	000000
9461310240	9-4613 1024	C L A W	000000	000000
9461310241	9-4613 1024	C L A W	000000	000000
9461310330		CLAW	000000	000000
9461320311		RACHET	000000	000000
9461326010		RACHET; LEVER	000000	000000
9461330030		COLLAR	000000	000000
9461404690		LINK ROD	000000	000000
9461410750		JAW JOINT	000000	000000
9461424180		LINK	000000	000000
9461426010		ROD;LINK LEVER	000000	000000
9461431220		LEVER ASSY	000000	000000
9461492720		SPRING EYE	000000	000000
9461493280		WASHFR; PL., DISTAMCE	000000	000000
9461504210		BRAKE CABLE	000000	000000
9461516080		CABLE	000000	000000
9461516090		CABLE	000000	000000
9461590400		BOOT	000000	000000
9461600380		LINK ROD	000000	000000

9462000600		PARKING BRAKE	000000	000000
9462006011		PARKING BRAKE	000000	000000
9462006013	9-4620 0601	BRK ASM;PARKING	000000	000000
9462006014	9-4620 0601	BRK ASM;PARKING	000000	000000
9462006016	9-4620 0601	BRK ASM;PARKING	000000	000000
9462110270		DRUM	000000	000000
9462110490		DRUM	000000	000000
9462136012	9-4621 3601	BACKING PLATE	000000	000001
9462190150	9-4621 9015	COVER;CK.HOLE	000000	000000
9462190151	9-4621 9015	COVER;CHECK	000000	000000
9462300060		BRAKE BAND	000000	000000
9462300210		BRAKE BAND	000000	000000
9462300371		BRAKE SHOE ASM	000000	000000
9462350080		LINING	000000	000000
9462350160		LINING	000000	000000
9462390030	9-4623 9003	BRACE; PARKING BRAKE	000000	000002
9462400080	9-4624 0008	SCREW; ADJ,BRAKE SHOE	000000	000004
9462410050		ADJ, SCREW	000000	000000
9462410070		ADJ, SCREW	000000	000000
9462410150		ADJ SCREW	000000	000000
9462430040		PLATE	000000	000000
9462430060		BRACKET	000000	000000
9462500570		ADJUSTERS	000000	000000
9462520630		BRACKET	000000	000000
9462530090		ROD	000000	000000
9462550160		PIN	000000	000000
9463426401		LEVER; PARKING	000000	000000
9463426411		LEVER; PARKING	000000	000000
9463490051	9-4634 9005	RETAINER,LEVER	000009	000033
9471120240		BUSH	000000	000000
9471150210		BRAKE SHOE	000000	000000
9471152380		LINING	000000	000000
9471152400		LINING	000000	000000
9471152410		LINING	000000	000000
9471152600		BRAKE SHOE	000000	000000
9471153130		LINING	000000	000000
9471153210		LINING	000000	000000
9471155790		LINING	000000	000000
9471155800		BRAKE LINING	000000	000000
9471155810		LINING	000000	000000
9471310420		BOLT	000000	000000
9471320140		CLIP	000000	000000
9471620330	9-4716 2033	SEAT; BRK SHOE	000054	000016
9471620340	9-4716 2034	PIN;SHOE HOLD	000000	000004
9471630030		CLIP	000000	000000
9471650400		CAM, BRAKE	000000	000000
9471650410		CAM, BRAKE	000000	000000

9473130080		PEDAL	000000	000000
9473190350		RUBBER; SEAL	000000	000000
9473210950		BUSHING	000000	000000
9473240690		BRAKE	000000	000000
9473240750	9-4732 4075	SPRING EYE	000000	000063
9474144020		PIPE	000000	000000
9474144030		PIPE	000000	000000
9474144040		PIPE	000000	000000
9474144050		PIPE; BRAKE	000000	000000
9474148790		OIL PIPE	000000	000000
9474153580		BRAKE PIPE	000000	000000
9474167260		OIL PIPE	000000	000000
9474167280		OIL PIPE	000000	000000
9474167320		OIL PIPE	000000	000000
9474167940		PIPE	000000	000000
9474186310		OIL PIPE BRAKE	000000	000000
9474314480		PIPE	000000	000000
9474322540		PIPE	000000	000000
9474333220		FUEL LINE	000000	000000
9474337080		PIPE	000000	000000
9474337290		PIPE	000000	000000
9474340660		PIPE	000000	000000
9474347090		PIPE	000000	000000
9474357920		PIPE	000000	000000
9474366820		AIR PIPE	000000	000000
9474391420		PIPE	000000	000000
9474566020		CONNECTOR	000000	000000
9474566060		NIPPLE, MASTER V	000000	000000
9475000360		MASTER CYL	000000	000000
9475001731		BRAKE MASTER CYL	000000	000000
9475002740		MASTER CYL; BRAKE	000000	000000
9475002750		MASTER CYL; CLUTCH	000000	000000
9475003221		MASTER CYL	000000	000000
9475016520		MASTER CYL	000000	000000
9475016750		BRAKE MASTER CYL	000000	000000
9475016900		MASTER CYL	000000	000000
9475126130		UNION BOLT	000000	000000
9475150140		WASHER	000000	000000
9475250150		CLIP	000000	000000
9475250420		CAP; OIL TANK	000000	000000
9475256010	9-4752 5601	CAP, OIL TANK, MA	000000	000000
9475270100		SPRING	000000	000000
9475290240		FLOAT	000000	000000
9475290311		PLATE	000000	000000
9475300580		OIL TANK	000000	000000
9475306020		TANK; OIL, M/CYL	000000	000000
9475316010	9-4753 1601	TANK; OIL	000000	000000

9475410730	9-4754 1073	ROD; PUSH	000000	000000
9475450090		RUBBER; BOOT	000000	000000
9475450100		BOOT*	000000	000000
9475450200		RUBBER; BOOT	000000	000000
9475450240		BOOT	000000	000000
9475500210		PISTON	000000	000000
9475506090		PISTON	000000	000000
9475510190		PISTON	000000	000000
9475510430	9-4755 1043	PISTON	000000	000000
9475520010		VALVE	000000	000000
9475520070		VALVE	000000	000000
9475550010		BRAKE; CUP	000000	000000
9475550090		CUP; PRIMARY, CLU	000000	000000
9475550240		CUP	000000	000000
9475550250		CUP	000000	000000
9475556010		CUP	000000	000000
9475560020		RING BOOT	000000	000000
9475560080		CUP	000000	000000
9475570010		RING; BOOT	000000	000000
9475570020		RING; BOOT	000000	000000
9475600060		VALVE	000000	000000
9475656010		VALVE ASSY	000000	000000
9475660070		RETAINER	000000	000000
9475680070		VALVE SEAT	000000	000000
9476000090		WHEEL CYL	000000	000000
9476000100		WHEEL CYL	000000	000000
9476000200		VALVE	000000	000000
9476000350		WHEEL CYL	000000	000000
9476004980		WHEEL CYL	000000	000000
9476004990		WHEEL CYL	000000	000000
9476005390		WHEEL CYL	000000	000000
9476005400		WHEEL CYL	000000	000000
9476005460		WHEEL CYL	000000	000000
9476016031		WHEEL CYL	000000	000000
9476016041		WHEEL CYL ASM	000000	000000
9476016331		WHEEL CYL ASM	000000	000000
9476016341		CYL ASM; WHEEL	000000	000000
9476016351		CYL ASM; WHEEL	000000	000000
9476016361		WHEEL CYL	000000	000000
9476016520		WHEEL CYL	000000	000000
9476016530		WHEEL CYL	000000	000000
9476016541		CYL ASM; WHEEL	000000	000000
9476016550		WHEEL CYL	000000	000000
9476150080	9-4761 5008	SCREW; BLEEDER	000000	000000
9476150081	9-4761 5008	SCREW; BLEEDER, SLAVE CYL.	000000	000000
9476160970		BOOT	000000	000000
9476190050	9-4761 9005	CAP; BLEEDER, SLAVE CYL.	000000	000232

9476242000		PISTON REAR	000000	000000
9476242070		PISTON	000000	000000
9476242080		PISTON	000000	000000
9476246050		PISTON; WHEEL CYL	000000	000000
9476251100		CUPS	000000	000000
9476251510		PISTON CUP	000000	000000
9476251520		SECONDARY CUP	000000	000000
9476256050		CUP; FRT WHEEL	000000	000000
9476270110		SPRING; BRAKE	000000	000000
9476291360		O-RING	000000	000000
9476340080		UNION BOLT	000000	000000
9476340090		UNION BOLT	000000	000000
9476340150		UNION BOLT	000000	000000
9476600180		SAFETY VALVE	000000	000000
9476601741		SAFETY VALVE	000000	000000
9476601771		SAFETY VALVE	000000	000000
9477366790		PIPE	000000	000000
9482100270		RELAY VALVE	000000	000000
9482530100		CHAMBER	000000	000000
9483196010		PEDAL STOPPER	000000	000000
9483200030		SAFETY VALVE	000000	000000
9483400180		CHECK VALVE	000000	000000
9483500240		GOVERNOR ASM	000000	000000
9483500300		GOVERNOR ASM	000000	000000
9483500380		CHECK VALVE	000000	000000
9484100170		CHECK VALVE	000000	000000
9484100370	9-4841 0037	VALVE; BLEEDER, SLAVE CYL.	000000	000003
9484100450		CHECK VALVE	000000	000000
9484100510		CHECK VALVE	000000	000000
9484290280	9-4842 9028	GASKET; SUCTION PIPE	000000	000024
9511510231		BUSH; RUBBER	000000	000000
9511510270	9-5115 1027	BUSH; SHACKLE	000000	000058
9511510320	9-5115 1032	BUSHING; SHACKLE, RR SPR	000000	000026
9511600120		SPRING; PIN	000000	000000
9511620280		SHACKLE	000000	000000
9511716090		U-BOLT	000000	000000
9512176122		L. CONTROL ARM	000000	000000
9512496040		SPACER; BRKT TO BODY	000206	000003
9513510200		BUSH	000000	000000
9513510291		BUSH; SPRING	000000	000000
9513560280		CENTER BOLT	000000	000000
9513731710		CLAMP	000000	000000
9513736024		SHOCK BKT	000000	000000
9513910240		HELPER; RUBBER	000000	000000
9513916262		AXLE SEAT/BACK	000000	000000
9516301740		SHOCK ABSORBER	000000	000000
9516303220		SHOCK ABSORBER	000000	000000

9516303390		SHACKLE	000000	000000
9516306610		REAR SHOCK ABS.	000000	000000
9531576760		BACK BAR	000000	000000
9531576770		BACK BAR	000000	000000
9532151770		RUBBER CUSHION	000000	000000
9532151771	9-5321	5177 RUBBER CUSHION	000000	000000
9532151790		MOTOR MOUNTS	000000	000000
9532151970		RUBBER; CUSHION	000000	000000
9532156020	9-5321	5602 RUBBER; SUPPORT	000000	000000
9532156112	9-5321	5611 SUPPORT; RUBBER	000000	000000
9532156122	9-5321	5612 SUPPORT RUBBER	000000	000000
9532190280		COVER	000000	000000
9532196010		COVER; SUPPORT	000003	000000
9532196020	9-5321	9602 CVR;ENG. FOOT	000000	000000
9532251230		CUSHION RUBBER	000000	000000
9532256170		MOUNTING ASSY	000000	000000
9533190070	9-5331	9007 SPACER;	000000	000017
9533190240	9-5331	9024 WASHER/TUBE/SPACER;	000042	000000
9533190860		SPACER	000000	000000
9533656030		HELPER RUBBER	000000	000000
9534616210		BRACKET	000000	000000
9534616230		BRACKET	000000	000000
9534870920		BRACKET	000000	000000
9536120460		COVER; BATTERY	000000	000000
9536135930		EXH MANIFOLD	000000	000000
9536160830		BOLT	000000	000000
9536166150		TENSION ROD	000000	000000
9541150370		REST; SIDE	000000	000000
9541150460		REST; HOOD	000000	000000
9541210170		ORNAMENT	000000	000000
9541300640		STRIKER	000000	000000
9541300890		BONNET CATCH	000000	000000
9541300900		BONNET CATCH	000000	000000
9541906160		SIDE PANEL	000000	000000
9550200120		DIAPHRAGM ASSY	000000	000000
9611086510		CHANNEL	000000	000000
9611086520		CHANNEL	000000	000000
9611167180		HINGE DOOR LH	000000	000000
9611186051		PARKING	000000	000000
9611219300		SEAT	000000	000000
9611220790		HINGE; UPPER	000000	000000
9611220800		HINGE; UPPER	000000	000000
9611222030		DOOR HINGE	000000	000000
9611222260		HINGE COVER	000000	000000
9611222270		HINGE COVER	000000	000000
9611222510		HINGE; LOWER	000000	000000
9611222520		HINGE	000000	000000

9611226140	DOOR HINGE	000000	000000
9611226150	DOOR HINGE	000000	000000
9611227210	DOOR HINGE	000000	000000
9611227620	PANEL; UPPER	000000	000000
9611240461	CHECK ARM	000000	000000
9611260150	WEATHERSTRIP	000000	000000
9611260321	SEAL; RUBBER	000000	000000
9611261330	SUN VISOR	000000	000000
9611261380	WASHER	000000	000000
9611261420	MIRROR ASSY	000000	000000
9611262490	SUN VISOR	000000	000000
9611266882	CENTER MARK	000000	000000
9611266920	WEATHERSTRIP	000000	000000
9611267170	MIRROR	000000	000000
9611267340	CONTROL ROD	000000	000000
9611267403	COVER; HINGE	000000	000000
9611267413	COVER HINGE	000000	000000
9611269121	MARK	000000	000000
9611269143	MARK	000000	000000
9611269301	ELF MARK	000000	000000
9611271730	PIN	000000	000000
9611271773	ASH TRAY	000000	000000
9611272070	CONTROL KNOB	000000	000000
9611272080	GRILLE	000000	000000
9611272122	DUCT; AIR PIPE	000000	000000
9611272221	L/H OUTER GRILLE	000000	000000
9611272231	GRILLE	000000	000000
9611276641	HANDLE	000000	000000
9611277830	LH/RUBBER	000000	000000
9611280290	HOOK ASSY	000000	000000
9611281030	WING NUT	000000	000000
9611281570	WING BOLT	000000	000000
9611281650	HOOK	000000	000000
9611281700	SEAL; RUBBER	000000	000000
9611281711	SEAL; ENGINE	000000	000000
9611281940	SEAL; SLIDE	000000	000000
9611290342	CLIP; WAIST	000000	000000
9611290971	SEAL	000000	000000
9611291130	WEATHERSTRIP	000000	000000
9611295390	WATER SEAL	000000	000000
9611295710	PACKING	000000	000000
9611295891	GRILLE VENT	000000	000000
9611295962	SHUTTER ASSY	000000	000000
9611297470	ANTIRATTLER	000000	000000
9611297480	ANTIRATTLER	000000	000000
9611460150	GASKET	000000	000000
9611460450	GASKET; SUN VISOR	000000	000000

9611492351		RUN CHANNEL	000000	000000
9611492361		WEATHERSTRIP	000000	000000
9611661070	9-6116 6107	WASHER;WAVE,KNOB	000000	000002
9611862141		MUD COVER	000000	000000
9612024211		LOCK ASM; TAIL	000000	000000
9612024221		LOCK ASM; TAIL	000000	000000
9612037430		RUBBER BUMP RE	000000	000000
9612037540		HINGE	000000	000000
9612038390		MUD FLAPS	000000	000000
9612046210		LOCK	000000	000000
9612049370		CHAIN ASSY; HOLDER	000000	000000
9620512300	9-6205 1230	BOLT;COVER FIXING	000000	000000
9651124990		FLOOR MAT	000000	000000
9662360200		DOOR CHANNEL	000000	000000
9671000130		WINDOW GLASS	000000	000000
9671112190		GLASS	000000	000000
9671113960		WINDSHIELD	000000	000000
9671114820		WINDSHIELD	000000	000000
9671114940		WINDSHIELD	000000	000000
9671116560		GLASS; DOOR	000000	000000
9671203660		SEAL DOOR	000000	000000
9671211030		GASKET	000000	000000
9671218860		GASKET	000000	000000
9671219680		CHANNEL	000000	000000
9671219700		CHANNEL	000000	000000
9671220670		CLIPS	000000	000000
9672101530		REGULATOR	000000	000000
9672101540		BRACKET; WINDOW	000000	000000
9672102260		REGULATOR	000000	000000
9672102270		REGULATOR	000000	000000
9672102980		REGUALTOR	000000	000000
9672102990		REGULATOR	000000	000000
9672103100		REGULATOR ASSY	000000	000000
9672400690		HANDLE ASSY	000000	000000
9672410350		HANDLE; REGULATOR	000000	000000
9672990200		BASE	000000	000000
9672990220		GROMMET	000000	000000
9672990310		ESCUTCHEON	000000	000000
9675001020		STRIKER	000000	000000
9675001890		STRIKER	000000	000000
9675100170		GEAR SHIFTER	000000	000000
9675104350		LOCK, BARREL ASSY	000000	000000
9675104360		LOCK BARREL	000000	000000
9675104870		DOOR LOCK	000000	000000
9675104880		DOOR LOCK	000000	000000
9675106150		GEAR SHIFTER	000000	000000
9675107500		DOOR LOCK	000000	000000

9675107510		DOOR LOCK	000000	000000
9675108633		LOCK ASM.	000000	000000
9675108643		LOCK; DOOR FRT	000000	000000
9675121500		DOVE TAIL	000000	000000
9675202650		REMOTE CONTROL	000000	000000
9675202660		REMOTE CONTROL	000000	000000
9675212270		KNOB	000000	000000
9675212340		ESCUTCHEON	000000	000000
9675401700		DOOR HANDLE	000000	000000
9675402280		DOOR HANDLE	000000	000000
9675402890		DOOR HANDLE	000000	000000
9675402910		DOOR HANDLE	000000	000000
9675403001		DOOR HANDLE	000000	000000
9675403023		DOOR HANDLE	000000	000000
9675403101		DOOR HANDLE	000000	000000
9675411640		HANDLE	000000	000000
9675501010		STRIKER	000000	000000
9675501020		STRIKER	000000	000000
9675501450		STRIKER	000000	000000
9675501461		STRIKER	000000	000000
9675501780		DOOR PART	000000	000000
9675501880		STRIKER	000000	000000
9675991210		PACKING	000000	000000
9675991540		SEAT, DOOR STRIKER	000000	000000
9675991541		SEAT, DOOR STRIKER	000000	000000
9676110570		HANDLE	000000	000000
9676110600		CROWN	000000	000000
9676201250		SPRING, SHIM	000000	000000
9676201260		SPRING, SHIM	000000	000000
9676202110		HINGE RH-UP	000000	000000
9676202120		HINGE LH-UP	000000	000000
9676400120		HANDLE	000000	000000
9676400410		HANDLE	000000	000000
9676400411		HANDLE, INSIDE	000000	000004
9689302031		COVER ASSY., RH	000000	000000
9689302040		COVER ASSY., LH	000000	000000
9689302041		COVER ASSY., LH	000000	000000
9713115160	9-7131 1516	SHAFT	000000	000000
9811112980	9-8111 1298	COIL; FIELD	000000	000000
9811290270		WASHER	000000	000000
9811290280		THRUST WASHER	000000	000000
9811290330		WASHER	000000	000000
9811290410		BUSH	000000	000000
9811290940		BOLT; THROUGH	000000	000000
9811556760		DIAPHRAGM ASM	000000	000000
9812007120		PUMP ASM; INJ.	000000	000000
9812009542	9-8120 0954	PUMP ASM., INJ.	000000	000000

9812009620	9-8120	0962	PUMP ASM; INJ.	000000	000000
9812011202	9-8120	1120	PUMP ASM; INJ.	000000	000000
9812011203	9-8120	1120	PUMP ASM; INJ.	000000	000000
9812112610	9-8121	1261	COVER; HOUSING SIDE	000000	000000
9812112730	9-8121	1273	COVER; HOUSING	000000	000000
9812112770	9-8121	1277	GAUGE; OIL LEVEL	000000	000000
9812112780	9-8121	1278	COVER; HOUSING	000000	000000
9812112790	9-8121	1279	COVER	000000	000000
9812112890	9-8121	1289	COVER; INJ. PUMP 6BD1T	000001	000000
9812112980	9-8121	1298	COVER	000000	000000
9812114050			SCREW	000000	000000
9812114070			SCREW	000000	000000
9812115170			OIL LEVEL GAUGE	000002	000001
9812115270			LEVEL GAUGE	000000	000000
9812115320			GAUGE ASM; OIL LEVEL	000001	000000
9812115350	9-8121	1535	GAUGE; LEVEL	000002	000000
9812132060	9-8121	3206	COVER;HOUSING SIDE	000000	000000
9812132070	9-8121	3207	COVER;HOUSING	000000	000000
9812150150	9-8121	5015	PACKING	000046	000000
9812150330			BRUSH	000000	000000
9812150360			SCREW	000000	000000
9812150550			BOLT; EYE	000000	000000
9812150580			SCREW; COVER	000000	000000
9812150610			BREATHER	000000	000000
9812150850	9-8121	5085	VALVE ASM; OVER FLOW	000000	000000
9812151030	9-8121	5103	PIPE*	000000	000000
9812151040	9-8121	5104	BRKT;INJ PUMP	000000	000000
9812151150	9-8121	5115	STUD;FEED PUMP	000000	000045
9812151200	9-8121	5120	O-RING	000000	000000
9812151220	9-8121	5122	RING	000060	000076
9812151230	9-8121	5123	BUSH;CONTROL RACK	000001	000000
9812151250	9-8121	5125	BUSH; CONT. RACK	000008	000000
9812151270	9-8121	5127	SEAL; OIL	000001	000002
9812151280	9-8121	5128	O-RING	000068	000000
9812151290	9-8121	5129	PLUG*	000014	000000
9812151300	9-8121	5130	PLUG*	000000	000000
9812151360	9-8121	5136	SEAT; SP. PLUNGER	000000	000000
9812151380	9-8121	5138	GASKET;SCREW,COVER	000000	000000
9812151400	9-8121	5140	ADAPTER	000000	000000
9812151401	9-8121	5140	ADAPTER	000000	000000
9812151440	9-8121	5144	GASKET	000000	000000
9812151460	9-8121	5146	BOLT	000000	000000
9812151700	9-8121	5170	BOLT	000000	000000
9812151740	9-8121	5174	GASKET E120	001926	000000
9812151760	9-8121	5176	SHIM T=1.50	000000	000000
9812151770	9-8121	5177	SHIM T=1.80	000000	000000
9812151780	9-8121	5178	SHIM T=2.00	000000	000000

9812151800	9-8121	5180	GASKET	000000	000000
9812151810	9-8121	5181	POINTER	000000	000000
9812151850	9-8121	5185	PIN**	000000	000000
9812151880	9-8121	5188	OVER FLUW VALVE	000000	000000
9812153040	9-8121	5304	PIN; TAPPET ROL	000000	000000
9812153200			PLUG	000000	000000
9812153240			PLUG;AIR BLEED	000000	000000
9812153250	9-8121	5325	SPRING; PLUNGER	000000	000000
9812153300	9-8121	5330	SCREW	000000	000000
9812153340	9-8121	5334	SCREW;COVER FIX.	000000	000000
9812212090	9-8122	1209	BOLT; TAPPET	000000	000000
9812212100	9-8122	1210	NUT**	000000	000000
9812212200	9-8122	1220	PIN	000000	000000
9812212230	9-8122	1223	TAPPET	000002	000000
9812212400	9-8122	1240	TAPPET	000000	000000
9812212430	9-8122	1243	TAPPET ASM	000000	000000
9812212440	9-8122	1244	TAPPET	000000	000000
9812212460	9-8122	1246	GUIDE	000000	000000
9812214110	9-8122	1411	KEY;DRIVE GEAR	000000	000000
9812222200	9-8122	2220	PIN	000021	000000
9812231010	9-8122	3101	SUPERSEDED**CAMSHAFT	000000	000000
9812232010	9-8122	3201	BEARING; INJ PUMP	000000	000000
9812250330	9-8122	5033	SHIM* T=0.30	000000	000000
9812250380	9-8122	5038	SHIM;	000000	000000
9812250410	9-8122	5041	SEAL; OIL, INJ PUMP	000006	000000
9812250430	9-8122	5043	GASKET	000016	000000
9812250450	9-8122	5045	RING;CAM SHAFT,GOV.SIDE	000000	000000
9812250470	9-8122	5047	RING; INJ PUMP	000021	000000
9812250490	9-8122	5049	SHIM; T=0.1	000000	000000
9812250500	9-8122	5050	SHIM; T=0.12	000000	000000
9812250510	9-8122	5051	SHIM; T=0.14	000000	000000
9812250520	9-8122	5052	SHIM; T=0.16	000000	000000
9812250530	9-8122	5053	SHIM; T=0.18	000000	000000
9812250540	9-8122	5054	SHIM; T=0.5	000000	000000
9812250570	9-8122	5057	PINION	000007	000006
9812250580	9-8122	5058	CONTROL; SLEEVE PLUNGER	000013	000000
9812250590	9-8122	5059	RING*	000000	000000
9812250600	9-8122	5060	ROLLER	000000	000003
9812250610	9-8122	5061	BUSH*	000000	000000
9812250620	9-8122	5062	PIN**	000000	000000
9812250640	9-8122	5064	RING; GOV. SIDE	000005	000000
9812250650	9-8122	5065	BOLT;CENTER BEARING	000000	000000
9812250660	9-8122	5066	METAL SET; CAM CENTER	000000	000000
9812250680	9-8122	5068	BEARING; BALL, CAMSHAFT	000000	000003
9812250710	9-8122	5071	SEAL; OIL	000000	000004
9812253050	9-8122	5305	ROLLER	000000	000000
9812255510	9-8122	5551	SHIM; T=0.30	000000	000000

9812255520	9-8122	5552	SHIM; T=0.40	000000	000000
9812255530	9-8122	5553	SHIM; T=1.00	000000	000000
9812311230			PLUNGER ASM.	000012	000000
9812311260	9-8123	1126	PLUNGER; INJ PUMP E120	000000	000000
9812314020	9-8123	1402	SPRING	000000	000000
9812314070	9-8123	1407	SPRING; PLUNGER	000000	000000
9812314080	9-8123	1408	SPRING; PLUNGER	000000	000000
9812315230	9-8123	1523	SLEEVE; CONTROL	000000	000010
9812331010	9-8123	3101	PLUNGER	000000	000000
9812331030	9-8123	3103	PLUNGER ASM.	000000	000000
9812337010	9-8123	3701	RACK;CONT.	000000	000000
9812350030	9-8123	5003	SCREW;PINION INJ.	000000	000058
9812350150	9-8123	5015	SEAT; SPRING, PLUNGER, IN	000000	000016
9812350160	9-8123	5016	SEAT; SPRING	000000	000000
9812350170	9-8123	5017	ADAPT;EYE BOLT,PUMP HSG	000000	000003
9812350210	9-8123	5021	SEAT; SPRING	000006	000000
9812350340	9-8123	5034	CAP**	000024	000000
9812350420	9-8123	5042	SHIM; INJ. PUMP	000000	000000
9812350430	9-8123	5043	SHIM; T=1.05	000000	000000
9812350440	9-8123	5044	SHIM C240	000000	000000
9812350450	9-8123	5045	SHIM C240	000000	000027
9812350460	9-8123	5046	O-RING	000000	000106
9812350500	9-8123	5050	GASKET; BEARING COVER	000000	000000
9812350520	9-8123	5052	O-RING	000000	000071
9812411030	9-8124	1103	VALVE; DELIVERY	000033	000000
9812411040	9-8124	1104	TIP; VALVE	000007	000002
9812413030	9-8124	1303	SPRING; DELIVERY	000000	000000
9812413060	9-8124	1306	SPRING; DELIVERY VALVE	000000	000000
9812413070	9-8124	1307	SPRING	000000	000000
9812414060	9-8124	1406	HOLDER; DELIVERY VALVE	000000	000000
9812414160	9-8124	1416	HOLDER	000000	000000
9812414180	9-8124	1418	HOLDER; DELIVERY VALVE	000000	000000
9812450140	9-8124	5014	GASKET	000058	000000
9812450250	9-8124	5025	SEAT*	000000	000000
9813111380	9-8131	1138	MAIN HOUSING	000000	000000
9813111580	9-8131	1158	HOUSING, INJ.GOV	000000	000000
9813111660	9-8131	1166	COVER; INJ GOVERNOR	000000	000000
9813112090			DIAPHRAGM	000000	000000
9813112170			DIAPHRAGM	000000	000000
9813112200			DIAPHRAGM	000001	000001
9813112260	9-8131	1226	DIAPHRAGM	000000	000000
9813113400	9-8131	1340	SPRING;GOV.	000000	000000
9813114090	9-8131	1409	SPRING; GUIDE	000000	000000
9813114150	9-8131	1415	SPRING; INJ GOV C240	000001	000000
9813114170	9-8131	1417	SPRING; INJ GOV C240	000001	000000
9813114180	9-8131	1418	SPRING; INJ GOV	000001	000000
9813115160	9-8131	1516	SHAFT	000000	000000

9813115240	9-8131	1524	SHAFT; INJ PUMP	000002	000000
9813117300	9-8131	1730	LEVER	000000	000000
9813117360	9-8131	1736	LEVER	000000	000000
9813117510	9-8131	1751	LEVER; INJ PUMP	000000	000000
9813117520	9-8131	1752	LEVER; STOPPING	000000	000000
9813123100	9-8131	2310	SPRING	000000	000000
9813131050	9-8131	3105	COVER; INJ GOV	000000	000000
9813132010			PLUNGER	000000	000000
9813132090	9-8131	3209	DIAPHRAGM	000001	000000
9813132120	9-8131	3212	DIAPHRAGM	000000	000000
9813133060	9-8131	3306	SPRING; GOVERNOR	000000	000000
9813133100	9-8131	3310	SPRING	000000	000000
9813133120	9-8131	3312	SPRING, INJ. GOV.	000000	000000
9813134030	9-8131	3403	IDLE SPRING	000000	000000
9813135020	9-8131	3502	PIN; INJ GOV	000000	000000
9813137080	9-8131	3708	LEVER	000000	000000
9813137110	9-8131	3711	LEVER; GOVERNOR	000000	000000
9813150580	9-8131	5058	WASHER	000000	000000
9813150640	9-8131	5064	BREATHER	000000	000000
9813150650	9-8131	5065	ADAPTER; INJ GOV	000007	000000
9813150690	9-8131	5069	BOLT*	000000	000000
9813150730	9-8131	5073	SPRING GUIDE	000000	000000
9813150760	9-8131	5076	NUT**	000000	000000
9813150810	9-8131	5081	SCREW	000000	000000
9813150940	9-8131	5094	NUT; LOCK	000000	000000
9813151070	9-8131	5107	WASHER	000000	000000
9813151120	9-8131	5112	SPRING	000000	000000
9813151200	9-8131	5120	SHIM; INJ, GOV	000000	000000
9813151280	9-8131	5128	SCREW	000000	000000
9813151410	9-8131	5141	JOINT; HOSE	000000	000000
9813151640	9-8131	5164	SLEEVE	000000	000000
9813151650	9-8131	5165	SEAT; SPRING	000000	000000
9813151720	9-8131	5172	PLATE	000000	000000
9813151790	9-8131	5179	NUT; CAP, INJ GOV C240	000003	000000
9813151810	9-8131	5181	NUT**	000003	000000
9813151820	9-8131	5182	BOLT; STOPPING LEVER	000000	000000
9813151840	9-8131	5184	ROD; PUSH	000000	000000
9813151850	9-8131	5185	ROD; PUSH	000000	000000
9813151900	9-8131	5190	HOSE; JOINT	000000	000000
9813151910	9-8131	5191	PIN; SPLIT	000000	000000
9813151940	9-8131	5194	FLYWEIGHT ASM.	000000	000000
9813151950	9-8131	5195	SEAT; SPR.	000000	000000
9813152020	9-8131	5202	IMPELLER	000000	000000
9813152070	9-8131	5207	IMPELLER	000000	000000
9813152110	9-8131	5211	BOLT; DIAPHRAGM	000000	000000
9813152140	9-8131	5214	BREATHER; AIR	000000	000000
9813152210			WASHER	000000	000000

9813152280			ROD; PUSH	000000	000000
9813152290	9-8131	5229	ROD; PUSH C240	000000	000000
9813152300	9-8131	5230	ROD; PUSH	000000	000000
9813152410	9-8131	5241	ROD; PUSH	000000	000000
9813152540	9-8131	5254	CAP; CAMSHAFT	000000	000000
9813161080	9-8131	6108	SHIM;GOVERNOR	000000	000000
9813161090	9-8131	6109	SHIM;GOVERNOR	000000	000000
9813161100	9-8131	6110	SHIM;GOVERNOR	000000	000000
9813161110	9-8131	6111	SHIM;GOVERNOR	000000	000000
9813161120	9-8131	6112	SHIM;GOVERNOR	000000	000000
9813161220	9-8131	6122	GASKET;CONT SH	000000	000000
9813161230	9-8131	6123	SEAL; OIL	000000	000000
9813161260	9-8131	6126	PLUG; GOVERNOR	000000	000000
9813161270	9-8131	6127	RING; SNAP	000000	000000
9813161290	9-8131	6129	SCREW; INJ GOV C240	000000	000000
9813161300	9-8131	6130	SEAT; SPRING	000000	000000
9813161310	9-8131	6131	SEAT; SPR.	000000	000000
9813193050	9-8131	9305	WASHER; GOV LEVER	000000	000000
9813202980	9-8132	0298	GOVERNOR ASM.	000000	000000
9813204001	9-8132	0400	GOVERNOR ASM	000000	000000
9813204231	9-8132	0423	GOVERNOR ASM.	000000	000000
9813205040	9-8132	0504	GOVERNOR ASM.	000000	000000
9813205060	9-8132	0506	GOVERNOR ASM.	000000	000000
9813205090	9-8132	0509	GOVERNOR ASM.	000000	000000
9813205100	9-8132	0510	GOVERNOR ASM.	000000	000000
9813205120	9-8132	0512	GOVERNOR ASM.	000000	000000
9813205130	9-8132	0513	GOVERNOR ASM.	000000	000000
9813211850	9-8132	1185	COVER	000000	000000
9813211860	9-8132	1186	COVER;GOV.COVER	000000	000000
9813211890	9-8132	1189	COVER C240	000000	000000
9813212050	9-8132	1205	O-RING; SWIVEL LEVER	000016	000038
9813212130	9-8132	1213	SEAL; LEAD	000000	000000
9813212170	9-8132	1217	O-RING; SWIVEL LEVER	000000	000000
9813212200	9-8132	1220	OIL SEAL; SWIVEL LEVER	000002	000003
9813213100	9-8132	1310	FLYWEIGHT ASM.	000002	000000
9813213130	9-8132	1313	FLY WEIGHT ASM.	000000	000000
9813213220	9-8132	1322	WEIGHT ASM.;FLY	000000	000000
9813213230	9-8132	1323	FLYWEIGHT ASM.	000000	000003
9813213250	9-8132	1325	FLYWEIGHT ASM.	000006	000000
9813216220	9-8132	1622	SPRING; LINK	000000	000000
9813216360	9-8132	1636	SPRING; IDLING	000000	000000
9813216410	9-8132	1641	SPRING	000000	000000
9813216480	9-8132	1648	SPRING	000000	000000
9813216510	9-8132	1651	CAPSULE; SPR.	000000	000000
9813216840	9-8132	1684	SPRING; LINK	000000	000023
9813217050	9-8132	1705	LEVER;FLOATING	000000	000000
9813217130	9-8132	1713	LINK;FLOATING LEVER	000000	000000

9813217180	9-8132	1718	LINK	000004	000000
9813217210	9-8132	1721	LEVER; SWIVEL	000000	000000
9813217490	9-8132	1749	LEVER; SWIVEL	000000	000000
9813217540	9-8132	1754	LINK	000000	000000
9813217850	9-8132	1785	LEVER; TENSION	000000	000000
9813221180	9-8132	2118	CAPSULE; SPR.	000000	000000
9813221230	9-8132	2123	LEVER SPEED	000000	000000
9813221300	9-8132	2130	SHAFT LEVER	000000	000000
9813221310	9-8132	2131	LEVER ASM	000000	000000
9813221690	9-8132	2169	LEVER; FLOATING	000000	000000
9813222100	9-8132	2210	SPRING; GOV	000000	000005
9813222240	9-8132	2224	DAMPER SPRING	000000	000000
9813222260	9-8132	2226	CAPSULE; SPRING	000000	000000
9813222350	9-8132	2235	SPRING; LINK	000019	000000
9813222370	9-8132	2237	CAPSULE; SPR.	000000	000000
9813222380	9-8132	2238	SPRING; GOVERNOR	000000	000000
9813222440	9-8132	2244	SPRING; GOVERNO	000000	000000
9813222580	9-8132	2258	SPRING; GOV.	000000	000000
9813222750	9-8132	2275	CAPSULE; SPR.	000000	000000
9813222820	9-8132	2282	SPRING; GOVERNOR	000000	000000
9813222910	9-8132	2291	CAPSULE; SPR	000000	000000
9813223130	9-8132	2313	COVER; GOV. COVER	000000	000000
9813233020	9-8132	3302	WEIGHT ASM.; FLY	000000	000000
9813236040	9-8132	3604	SPRING, INJ GOV	000000	000000
9813236170	9-8132	3617	SPRING; IDLING	000000	000000
9813250300	9-8132	5030	KEY; WOOD RUFF 2AB1	000119	000000
9813250340	9-8132	5034	CAP**	000000	000000
9813250380	9-8132	5038	SHIM	000000	000000
9813250420	9-8132	5042	SHIM; T=0.95	000000	000000
9813250430	9-8132	5043	SHIM; T=1.05	000000	000000
9813250440	9-8132	5044	SHIM; T=1.15	000000	000000
9813250450	9-8132	5045	SHIM; T=1.25	000000	000000
9813250620	9-8132	5062	PIN**	000016	000000
9813250810	9-8132	5081	NUT; ADJ. BOLT	000000	000026
9813250840	9-8132	5084	KEY; DRIVE GEAR INJ PUMP	000000	000000
9813250860	9-8132	5086	NUT**	000034	000000
9813250880	9-8132	5088	WASHER	000000	000000
9813250890	9-8132	5089	SHIM; T=0.3	000000	000000
9813250960	9-8132	5096	WASHER	000000	000000
9813250970	9-8132	5097	SHIM; SWIVEL LEVER	000019	000000
9813250990	9-8132	5099	BUSH	000000	000000
9813251120	9-8132	5112	NUT	000000	000000
9813251170	9-8132	5117	NUT	000023	000000
9813251540	9-8132	5154	PACKING	000001	000000
9813251730	9-8132	5173	SHIM; SWIVEL LEVER	000002	000019
9813251770	9-8132	5177	SCREW; ADJUSTING	000044	000000
9813251810	9-8132	5181	SHIM*	000000	000000

9813251820	9-8132	5182	SCREW	000000	000000
9813251860	9-8132	5186	BOLT;BRACKET	000000	000017
9813251870	9-8132	5187	BOLT;WIRE BRKT	000000	000004
9813252100	9-8132	5210	CAP	000008	000008
9813252110	9-8132	5211	SLEVE	000000	000000
9813252370	9-8132	5237	NUT;LK,ADJ.SCRE	000000	000000
9813252870	9-8132	5287	SHIM SWIVEL LEVER T=0.10	000000	000000
9813252880	9-8132	5288	SHIM SWIVEL LEVER T=0.20	000000	000000
9813252890	9-8132	5289	SHIM SWIVEL LEVER T=0.30	000000	000000
9813253010	9-8132	5301	KEY;DRIVE GEAR INJ PUMP	000000	000000
9813253160	9-8132	5316	PLUG; HOUSING	000000	000000
9813253180	9-8132	5318	END PLATE	000128	000000
9813253210	9-8132	5321	BOLT;	000000	000000
9813253710	9-8132	5371	SCREW; STOPPER	000000	000000
9813253790	9-8132	5379	SHIM; T=0.10	000000	000000
9813253800	9-8132	5380	SHIM; T=0.20	000000	000000
9813253810	9-8132	5381	SHIM; T=0.25	000000	000000
9813253820	9-8132	5382	SHIM; T=1.00	000000	000000
9813253910	9-8132	5391	SPRING EYE	000000	000000
9813253970	9-8132	5397	PLATE	000001	000090
9813254180	9-8132	5418	SHIM; OUTER SPR	000000	000000
9813254190	9-8132	5419	SHIM; OUTER SPR	000000	000000
9813254200	9-8132	5420	SHIM; OUTER SPR	000000	000000
9813254290	9-8132	5429	BRUSH	000000	000001
9813254350	9-8132	5435	LIMETER; FOR GOVERNOR 4BD	000000	000000
9813254380	9-8132	5438	SLEEVE FLYWEIGHT	000000	000000
9813254400	9-8132	5440	SHAFT TENSION	000000	000000
9813254410	9-8132	5441	COLLAR	000000	000000
9813254450	9-8132	5445	RING; SNAP	000000	000000
9813254460	9-8132	5446	WIRE; LEAD SEAL 3KC1	000033	000000
9813254660	9-8132	5466	BOLT;EYE	000000	000000
9813254800	9-8132	5480	BOLT E120	000000	000000
9813254870	9-8132	5487	SEAL	000000	000025
9813254880	9-8132	5488	WASHER; LEVEL 2AB1	000004	000132
9813255120	9-8132	5512	O-RING; FEED PUMP 4BD1	000000	000000
9813255270	9-8132	5527	PLATE; HOUSING	000000	000000
9813255280	9-8132	5528	GASKET; CAP	000000	000115
9813255330	9-8132	5533	BOLT;COVER FIXING	000000	000000
9813255390	9-8132	5539	NUT; SPRING CAPSULE	000000	000000
9813255510	9-8132	5551	SHIM; T=0.3	000007	000000
9813255520	9-8132	5552	SHIM; T=0.4	000002	000000
9813255530	9-8132	5553	SHIM; T=1.0	000000	000000
9813255540	9-8132	5554	WASHER;MAGNET V	000000	000000
9813255560	9-8132	5556	SHIM*	000027	000000
9813255570	9-8132	5557	SHIM; INJ PUMP QD100	000000	000000
9813255580	9-8132	5558	SHIM; INJ PUMP QD100	000000	000000
9813255590	9-8132	5559	SHIM; INJ PUMP QD100	000000	000000

9813255600	9-8132	5560	SHIM; INJ PUMP QD100	000000	000000
9813255660	9-8132	5566	O-RING	000000	000000
9813261120	9-8132	6112	NUT**	000000	000000
9813261240	9-8132	6124	ADAPTER;GOV.HOUSING	000000	000000
9813400910	9-8134	0091	TIMER ASM	000000	000000
9813401120	9-8134	0112	TIMER ASM.	000001	000000
9813411220	9-8134	1122	CASE	000000	000000
9813411260	9-8134	1126	CASE	000000	000000
9813411270	9-8134	1127	HOLDER	000000	000000
9813415080	9-8134	1508	FLYWEIGHT	000000	000000
9813415170	9-8134	1517	FLYWEIGHT	000000	000000
9813431020	9-8134	3102	HOLDER	000000	000000
9813433030	9-8134	3303	FLANGE	000000	000000
9813433050	9-8134	3305	FLANGE	000000	000000
9813435050	9-8134	3505	FLYWIEGHT	000000	000000
9813450070	9-8134	5007	PLUG	000000	000000
9813450330	9-8134	5033	SHIM T=0.50	000000	000000
9813450340	9-8134	5034	SHIM T=1.00	000000	000000
9813450350	9-8134	5035	SHIM T=1.10	000000	000000
9813450360	9-8134	5036	SHIM T=0.20	000000	000000
9813450370	9-8134	5037	SHIM T=1.50	000000	000000
9813450380	9-8134	5038	O-RING	000000	000000
9813450430	9-8134	5043	WASHER	000000	000000
9813450440	9-8134	5044	WASHER	000000	000000
9813450450	9-8134	5045	WASHER	000000	000000
9813450520	9-8134	5052	PLATE;NUT LOCK	000000	000008
9813450670	9-8134	5067	PLUG; SCREW	000000	000000
9813450690	9-8134	5069	NUT;LK,AUTO TIM	000001	000000
9813450720	9-8134	5072	SPRING	000005	000000
9813450780	9-8134	5078	OIL SEAL	000001	000000
9813450950	9-8134	5095	SEAT	000000	000000
9813450980	9-8134	5098	SPRING; TIMER	000000	000000
9813451060	9-8134	5106	SPRING; TIMER	000000	000000
9813451380	9-8134	5138	O-RING	000003	000000
9813453060	9-8134	5306	NUT;HOLDER,TIM	000000	000000
9813453190	9-8134	5319	SHIM T= 0.30	000000	000000
9813453200	9-8134	5320	SHIM T= 0.50	000000	000000
9813453250	9-8134	5325	SHIM;TIMER FLA	000000	000000
9813453270	9-8134	5327	SHIM;;TIMER FLA	000000	000000
9813453280	9-8134	5328	SHIM;TIMER FLA	000000	000000
9813453290	9-8134	5329	SHIM;TIMER FLA	000000	000000
9813453300	9-8134	5330	SHIM;TIMER FLA	000000	000000
9813453310	9-8134	5331	SHIM;TIMER FLA	000000	000000
9813453320	9-8134	5332	SHIM T=.10; INJ PUMP	000000	000000
9813453380	9-8134	5338	WASHER ;FLANGE,	000000	000000
9813453400	9-8134	5340	SHIM T=0; INJ PUMP	000000	000000
9813500420	9-8135	0042	PUMP;FEED ASM 4JA/JB1	000000	000000

9813500421	9-8135	0042	PUMP;FEED ASM 4JA/JB1	000000	000000
9813500431	9-8135	0043	PUMP FEED	000000	000000
9813500440			FEED PUMP	000000	000000
9813500471	9-8135	0047	PUMP ASM; FEED	000000	000000
9813500490	9-8135	0049	PUMP ASM.;FEED	000002	000000
9813500610	9-8135	0061	FUEL PUMP	000000	000000
9813500611	9-8135	0061	FUEL PUMP	000003	000000
9813500661	9-8135	0066	PUMP ASM; FEED	000000	000000
9813505021	9-8135	0502	PUMP ASM; FEED 4BD1	000000	000000
9813512050	9-8135	1205	PISTON; FUEL FEED PUMP	000000	000057
9813513020	9-8135	1302	SPR;PISTON,FUEL FEED PMP	000000	000016
9813513030	9-8135	1303	SPRING; FEED PUMP	000000	000000
9813514030	9-8135	1403	ROLLER;TAPPET	000000	000006
9813514060	9-8135	1406	PIN; FEED PUMP	000000	000000
9813514070	9-8135	1407	GUIDE; TAPPET	000000	000000
9813514100	9-8135	1410	PIN;TAP.ROLLER	000006	000000
9813514160	9-8135	1416	GUIDE; FEED	000000	000000
9813514170	9-8135	1417	TAPPET	000000	000000
9813515030	9-8135	1503	SPRING; PISTON	000016	000000
9813516020	9-8135	1602	VALVE,FEED PUMP	000000	000179
9813517020	9-8135	1702	SPRING;VALVE,FUEL FEED PM	000004	000095
9813521040	9-8135	2104	PUMP; PRIMING	000000	000000
9813531040	9-8135	3104	HOUSING; FEED PUMP	000002	000000
9813531050	9-8135	3105	HOUSING;FEED PUMP	000000	000000
9813550230	9-8135	5023	PLUG;PISTON,FD.	000000	000000
9813550250	9-8135	5025	SNAP RING;FEED	000104	000000
9813550310	9-8135	5031	GASKET; FEED PUMP	000000	000382
9813550320			GASKET	000000	000000
9813550330			COVER; PRIMING	000015	000000
9813550350	9-8135	5035	GASKET;PISTON PLUG,FUEL	000000	000162
9813550460	9-8135	5046	O-RING.FEED PUM	000000	000000
9813550540	9-8135	5054	PLUG;VALVE,SPRNG,FUEL F/P	000000	000018
9813550590	9-8135	5059	ROLLER;TAPPET	000000	000000
9813550600	9-8135	5060	PIN;TAPPET	000000	000000
9813550620	9-8135	5062	SNAP RING; HOUSING	000000	000000
9813550650	9-8135	5065	FILTER	000000	000000
9813550690			NUT;INJ. TIMER	000000	000000
9813550760	9-8135	5076	BOLT; EYE	000000	000000
9813553070			BOLT	000000	000000
9813800260			COUPLING	000000	000000
9813800590	9-8138	0059	COUPLING ASM	000000	000000
9813800592	9-8138	0059	COUPLING ASM	000000	000000
9813800593	9-8138	0059	COUPLING ASM	000000	000014
9813800620	9-8138	0062	COUPLING ASM	000000	000000
9813800943	9-8138	0094	COUPLING ASM.	000000	000000
9813811160	9-8138	1116	PLATE; COUPLING	000000	000010
9813811260	9-8138	1126	COUPLING	000001	000012

9813813070	9-8138	1307	DISK,	000000	000000
9813813090	9-8138	1309	COUPLING; CROSS	000001	000000
9813815100	9-8138	1510	DISK,	000000	000000
9813850090	9-8138	5009	BOLT	000000	000001
9813850120	9-8138	5012	WASHER; LOCK	000003	000000
9813850140	9-8138	5014	COUPLING; INJ PUMP	000001	000000
9813850210	9-8138	5021	SHAFT	000000	000002
9813850220	9-8138	5022	BOLT E120	000032	000000
9813850230	9-8138	5023	BOLT; COVER	000000	000000
9813850240	9-8138	5024	PLATE	000001	000009
9813850260	9-8138	5026	PLATE; INJ PUMP DRIVE E12	000000	000006
9813911080	9-8139	1108	SCREW; STOPPER	000000	000000
9813911280	9-8139	1128	BOLT*	000000	000000
9813911290	9-8139	1129	SCREW	000000	000000
9813913010	9-8139	1301	SHIM;CONT SHAF	000000	000000
9813913020	9-8139	1302	WASHER; FEED PUMP	000000	000000
9813913030	9-8139	1303	WASHER; LOCK, INJ.	000000	000000
9813913050	9-8139	1305	WASHER	000000	000000
9813913070	9-8139	1307	LEVER;COLLAR 2AB1	000000	000000
9813913110	9-8139	1311	WASHER	000000	000000
9813915010	9-8139	1501	NIPPLE	000000	000000
9813915070	9-8139	1507	JOINT; EYE	000001	000000
9813917030	9-8139	1703	EYE JOINT	000000	000000
9813917050			EYE JOINT	000000	000000
9813919060	9-8139	1906	O-RING	000000	000028
9813919070	9-8139	1907	O-RING; COVER TO GOV E120	000003	000010
9813931010	9-8139	3101	BOLT;EYE	000000	000000
9813931020	9-8139	3102	BOLT*	000000	000000
9813932040	9-8139	3204	NUT	000000	000000
9813933010	9-8139	3301	SHIM	000000	000000
9813933020	9-8139	3302	SHIM T=0.6	000000	000000
9813933030	9-8139	3303	SHIM T=0.7	000000	000000
9813933040	9-8139	3304	SHIM T=0.8	000000	000000
9813933050	9-8139	3305	SHIM T=0.9	000000	000000
9813933060	9-8139	3306	SHIM*	000000	000000
9813933070	9-8139	3307	SHIM	000000	000000
9813933090	9-8139	3309	SHIM	000000	000000
9813939020	9-8139	3902	PIPE*	000000	000000
9813939070	9-8139	3907	GASKET	000000	000000
9813939090	9-8139	3909	CAPSULE;SPRING	000000	000000
9821000960			STARTER; HITACHI	000000	000000
9821001080			STARTER	000000	000000
9821001130			STARTER ASM	000000	000000
9821001840	9-8210	0184	STARTER; NIKKO	000000	000000
9821006081	9-8210	0608	STARTER; NIKKO	000000	000000
9821006161	9-8210	0616	STARTER; NIKKO	000000	000000
9821111330	9-8211	1133	METAL	000000	000000

9821112370			COIL;	000000	000000
9821112390	9-8211	1239	FIELD COIL	000000	000000
9821112730			PINION STOPPER	000000	000000
9821112900			FIELD COIL	000000	000000
9821112980	9-8211	1298	COIL; FIELD	000000	000000
9821113240	9-8211	1324	BUSH	000000	000000
9821113260			METAL	000000	000000
9821113580			GEAR CASE; STARTER	000000	000000
9821113760			METAL	000000	000000
9821113800	9-8211	1380	CASE ASM; GEAR	000000	000000
9821113920	9-8211	1392	METAL E120; BEARING	000002	000000
9821113950	9-8211	1395	BRUSH HOLDER	000000	000000
9821114150			BRG	000000	000000
9821114420			CENTER	000000	000000
9821114740	9-8211	1474	BEARING	000000	000000
9821114750	9-8211	1475	CENTER BRG	000000	000000
9821114790	9-8211	1479	METAL; CENTER	000000	000000
9821115840	9-8211	1584	COVER	000000	000000
9821115850	9-8211	1585	METAL	000000	000000
9821116030	9-8211	1603	BRUSHES	000000	000000
9821116210			BRUSH	000000	000000
9821116230			BRUSH	000000	000000
9821116260			BRUSH	000000	000000
9821116270			BRUSH	000000	000000
9821116340			BRUSH	000000	000000
9821116370			BRUSH	000000	000000
9821116410			BRUSH	000000	000000
9821116460			BRUSH	000000	000000
9821116470			BRUSH	000000	000000
9821116510	9-8211	1651	BRUSH	000008	000000
9821116520	9-8211	1652	BRUSH	000000	000000
9821116540	9-8211	1654	BRUSH	000000	000000
9821116570	9-8211	1657	BRUSH, (+), START	000000	000000
9821116580	9-8211	1658	BRUSH, (+), START	000000	000000
9821116590	9-8211	1659	BRUSH	000000	000000
9821117130	9-8211	1713	SPRING	000000	000000
9821117150	9-8211	1715	SPRING	000000	000000
9821117160	9-8211	1716	SPRING	000000	000000
9821117230	9-8211	1723	SPRING	000009	000000
9821117310	9-8211	1731	SPRING; BRUSH	000000	000000
9821118280			BRUSH HOLDER	000000	000000
9821118300			HOLDER; BRUSH	000000	000000
9821118410	9-8211	1841	BRUSH HOLDER	000000	000000
9821118420	9-8211	1842	HOLDER	000000	000000
9821118450	9-8211	1845	BRUSH; STARTER	000000	000000
9821118500	9-8211	1850	HOLDER ASM; BRUSH	000000	000000
9821119520	9-8211	1952	BRUSH; COVER	000000	000000

9821121160	9-8211	2116	METAL RR, STARTE	000000	000000
9821121170			METAL	000000	000000
9821121240			METAL	000000	000000
9821121250			METAL	000000	000000
9821121260			METAL	000000	000000
9821121330	9-8211	2133	METAL	000000	000000
9821121340	9-8211	2134	METAL; CTR	000035	000000
9821121380	9-8211	2138	COVER; BEARING	000000	000000
9821122130	9-8211	2213	COVER ASM; REAR	000000	000000
9821124040	9-8211	2404	METAL	000000	000000
9821132510	9-8211	3251	FIELD COIL	000000	000000
9821135510			FIELD COIL	000000	000000
9821135520			RR COVER	000000	000000
9821137510	9-8211	3751	BRUSH HOLDER	000000	000000
9821138510	9-8211	3851	BRUSH HOLDER	000000	000000
9821141510	9-8211	4151	BRUSHES+	000000	000000
9821141520	9-8211	4152	BRUSHES-	000000	000000
9821151250			WASHER	000000	000000
9821151330			FOVALIZER	000000	000000
9821152920	9-8211	5292	O-RING	000000	000000
9821153150	9-8211	5315	ORING	000000	000000
9821153220	9-8211	5322	DUST COVER	000000	000000
9821153230			PIN	000000	000000
9821153240			PIN	000000	000000
9821153260			SCREW; SET CORE	000000	000000
9821153440	9-8211	5344	PLAT; INSULATE	000000	000000
9821153520			SCREW	000000	000000
9821153650	9-8211	5365	METAL; FRONT C240	000000	000000
9821153960			SCREW	000000	000000
9821153970			DUST COVER SET	000000	000000
9821153980			SOLENOID END	000000	000000
9821154240			GEAR CASE	000000	000000
9821154330			METAL; GEAR GASE 2AB1	000000	000000
9821159630	9-8211	5963	BOLT; TERMINAL	000000	000000
9821161400	9-8211	6140	BUSH; INSULATE	000000	000000
9821161420	9-8211	6142	WASHER; INSULATE	000000	000000
9821211300	9-8212	1130	ARMATURE	000000	000000
9821211330			ARMATURE	000000	000000
9821211490			RR COVER ASM	000000	000000
9821211580	9-8212	1158	ARMATURE	000000	000000
9821211790	9-8212	1179	ARMATURE	000000	000000
9821212110			PINION CLUTCH	000000	000000
9821212130			PINION CLUTCH	000000	000000
9821212160			PINION CLUTCH	000000	000000
9821212200			PINION CLUTCH	000000	000000
9821212220			PINION CLUTCH	000000	000000
9821212230			PINION CLUTCH	000000	000000

9821212270		PINION CLUTCH	000000	000000
9821212280		PINION CLUTCH	000000	000000
9821212310		PINION CLUTCH	000000	000000
9821212330	9-8212 1233	PINION, CLUTCH	000000	000000
9821212340		PINION CLUTCH	000000	000000
9821212380		PINION CLUTCH	000014	000000
9821213220	9-8212 1322	PINION; METAL	000000	000000
9821213460		PINION	000000	000000
9821213670	9-8212 1367	PINION ASM	000000	000000
9821213690		PINION METAL	000000	000000
9821214060		PLATE; CLUTCH DRIVEN	000000	000000
9821214070	9-8212 1407	PLATE; CLUTCH BENDIX E120	000000	000000
9821215260	9-8212 1526	CLUTCH	000000	000000
9821217110		LEVER; SHIFT	000000	000000
9821217120		LEVER	000000	000000
9821231040	9-8212 3104	ARMATURE	000000	000000
9821231510	9-8212 3151	ARMATURE	000000	000000
9821232040	9-8212 3204	CLUTCH	000000	000000
9821237050	9-8212 3705	LEVER; SHIFT	000000	000000
9821250160		WASHER	000000	000000
9821250460	9-8212 5046	STOPPER	000000	000000
9821250520		WASHER	000000	000000
9821251170		WASHER; ADJUST C221	000000	000000
9821251180		WASHER	000000	000000
9821251190		WASHER	000000	000000
9821251200		STOPPER	000000	000000
9821251400		STOPPER	000000	000000
9821251410	9-8212 5141	WASHER	000000	000000
9821251420	9-8212 5142	CLIP	000000	000000
9821251630		PIN	000000	000000
9821251900		PINION; STOPPER	000000	000000
9821251930	9-8212 5193	RING	000035	000016
9821252070	9-8212 5207	COLLAR	000000	000000
9821252130	9-8212 5213	WASHER	000000	000000
9821252330		WASHER	000000	000000
9821252730	9-8212 5273	PINION STOPPER	000000	000000
9821253420		PINION	000000	000000
9821500330	9-8215 0033	SOLENOID SWITCH	000000	000000
9821500690		SWITCH	000000	000000
9821500710		SOLENOID SWITCH	000002	000000
9821500740		SOLENOID	000000	000000
9821500770		SWITCH	000000	000000
9821505031		SWITCH ASM; MAGNETIC	000001	000000
9821513230	9-8215 1323	CASE	000000	000000
9821514290	9-8215 1429	COIL	000000	000000
9821516400	9-8215 1640	CONTACTOR	000000	000000
9821551850		WIRE	000000	000000

9821700230		SWITCH	000000	000000	
9821700240		SWITCH	000000	000000	
9821712330		SUPERSEDED**WASHER	000000	000000	
9821712490	9-8217	1249	TERMINAL ASM	000000	000000
9821717090	9-8217	1709	COVER DA640	000000	000000
9822000890	9-8220	0089	GEN	000000	000000
9822001200		DYNAMO	000000	000000	
9822001380		GEN	000000	000000	
9822003010	9-8220	0301	GENERATOR	000000	000000
9822003370		ALTERNATOR	000000	000000	
9822004772	9-8220	0477	GENERATOR	000000	000000
9822004851	9-8220	0485	GENERATOR; NIKKO	000000	000000
9822007640	9-8220	0764	GENERATOR; C240:12V/30A	000000	000000
9822111410		GEN CASE	000000	000000	
9822113700		CONTACT WASHER	000000	000000	
9822113710		WASHER	000000	000000	
9822113720		WASHER	000000	000000	
9822113970		GEN COVER	000000	000000	
9822115080		RECTIFIER	000000	000000	
9822116330		BRUSH	000000	000000	
9822116540		BRUSH	000000	000000	
9822116550		SEAD WIRE	000000	000000	
9822116870		BRUSH	000000	000000	
9822116980	9-8221	1698	BRUSH	000000	000000
9822116990	9-8221	1699	DIODE; ALTERNATOR	000000	000000
9822117360	9-8221	1736	SPRING.BRUSH,RE	000000	000023
9822118550		HOLDER	000000	000000	
9822118610		HOLDER	000000	000000	
9822118870		ALT END CONTACT	000000	000000	
9822118910		BRUSH,RECTIFIER	000000	000000	
9822119360	9-8221	1936	COVER; BRUSH	000000	000000
9822119780	9-8221	1978	COVER	000000	000000
9822121010	9-8221	2101	DIODE	000000	000000
9822121020	9-8221	2102	DIODE	000000	000000
9822121030	9-8221	2103	DIODE	000000	000000
9822121050	9-8221	2105	BRUSH	000000	000000
9822121200	9-8221	2120	BRUSH	000000	000000
9822122120		BRUSH	000000	000000	
9822122800		RR COVER	000000	000000	
9822122810		COVER	000000	000000	
9822122910		ATL END BRG	000000	000000	
9822122920		ALT BRG END	000000	000000	
9822125070		SWITCH	000000	000000	
9822125190	9-8221	2519	STATOR ASM.	000000	000000
9822128010	9-8221	2801	HOLDER; BRUSH	000000	000000
9822150600	9-8221	5060	RETAINER	000000	000000
9822150720	9-8221	5072	SPACER*DISCONTINUED*	000000	000000

9822151460			KEY	000000	000000
9822151500			BOLT	000000	000000
9822151510			CLIP	000000	000000
9822151520			CLIP	000000	000000
9822151530			WASHER	000000	000000
9822151540			CLIP	000000	000000
9822151570			WASHER	000000	000000
9822151590			KEY; ALT PULLEY E120	000000	000000
9822152650			WASHER	000000	000000
9822152780			WASHER	000000	000000
9822153110			SCREW	000000	000000
9822153170			BOLT	000000	000000
9822153230			PACKING	000000	000000
9822153900	9-8221	5390	KEY;AIR CMPR	000000	000000
9822154430	9-8221	5443	TUBE; INSULATE	000000	000000
9822154580			INSULATING	000000	000000
9822155380			WASHER	000000	000000
9822155390			WASHER; FELT	000000	000000
9822155760			PACKING	000000	000000
9822155770			PACKING	000000	000000
9822155920			BRG RETAINER	000000	000000
9822156160	9-8221	5616	RETAINER; GENERATOR	000000	000000
9822156490	9-8221	5649	WASHER; INSULATE	000000	000000
9822157070	9-8221	5707	WASHER; FELT, ROTOR, GEN	000002	000133
9822157390	9-8221	5739	TUBE; INSULATE	000000	000000
9822158100	9-8221	5810	CLIP	000000	000000
9822158230	9-8221	5823	PACKING; BRG. GEN	000000	000007
9822158240	9-8221	5824	RETAINER; PACKING	000000	000000
9822158670	9-8221	5867	KEY; WOODRUFF	000000	000030
9822158790	9-8221	5879	BUSH: END FRAME	000000	000000
9822159170	9-8221	5917	RETAINER; BRG	000000	000000
9822159260	9-8221	5926	HOLDER; BRUSH, WO/BRUSH	000000	000000
9822159700			WASHER	000000	000000
9822159720			WASHER	000000	000000
9822160560	9-8221	6056	TERMINAL ASM.	000000	000000
9822160600	9-8221	6060	RETAINER	000007	000000
9822160680	9-8221	6068	BOLT; TERMINAL	000000	000000
9822160900	9-8221	6090	RECTIFIER ASM (+)	000000	000000
9822160910	9-8221	6091	RECTIFIER ASM (-)	000000	000000
9822160970	9-8221	6097	INSULATE BUSH	000000	000000
9822160980	9-8221	6098	NUT**	000006	000020
9822161090	9-8221	6109	TERMINAL ASM.	000000	000000
9822211300			ARMATURE	000000	000000
9822211440			ARMATURE	000000	000000
9822211950			ROTOR ASM	000000	000000
9822213160	9-8222	1316	FAN; PULLEY	000000	000000
9822214170			PULLEY	000000	000000

9822214180			PULLEY	000000	000000
9822214850			PULLEY ASM.	000000	000000
9822214860	9-8222	1486	PULLEY	000000	000000
9822217050			ROTOR	000000	000000
9822231090			ROTOR ASM.	000000	000000
9822250270	9-8222	5027	KEY; PULLEY	000000	000000
9822250290	9-8222	5029	KEY; PULLEY	000000	000000
9822250480			SPACER	000000	000000
9822250490			SPACER	000000	000000
9822250630			NUT ASM; PULLEY	000000	000000
9822250830			COUPLING	000000	000000
9822311090	9-8223	1109	STATOR ASM 2AB1/3AB1	000000	000000
9822311110	9-8223	1111	STATOR ASM; ALT C240	000000	000000
9822313070	9-8223	1307	COVER; FRONT	000000	000000
9822313080	9-8223	1308	COVER ASM; FRONT	000000	000000
9822314150	9-8223	1415	COVER ASM; REAR	000000	000000
9822316170	9-8223	1617	BRUSH ASM; FRONT	000014	000000
9822316180	9-8223	1618	BRUSH ASM; (E)	000014	000000
9822316190	9-8223	1619	RECTIFIER; GEN	000000	000000
9822316191	9-8223	1619	RECTIFIER; GEN	000000	000000
9822316200	9-8223	1620	HOLDER ASM; BRUSH	000003	000000
9822319040	9-8223	1904	COVER; DIODE ALT	000000	000000
9822332080	9-8223	3208	PULLEY ASM.	000000	000000
9822350150	9-8223	5015	NUT ASM; PULLEY	000000	000000
9822350400	9-8223	5040	CLAMP; CORD, GEN	000000	000000
9822350420	9-8223	5042	BEARING; BALL	000000	000000
9822350700	9-8223	5070	BOLT ASM; TERMINAL	000000	000000
9822350720	9-8223	5072	BOLT; THROUGH L=85	000000	000000
9822350730	9-8223	5073	BOLT; THROUGH L=95	000000	000000
9822350740	9-8223	5074	NUT ASM; PULLEY	000000	000000
9822350750	9-8223	5075	SCREW KIT	000000	000000
9822500560			REGULATOR	000000	000000
9822500720			REGULATOR	000000	000000
9822500730			REGULATOR	000000	000000
9822500820			REGULATOR	000000	000000
9822500860			REGULATOR	000000	000000
9822500990			REGULATOR	000000	000000
9822501100			REGULATOR ASM C221	000000	000000
9822501110			REGULATOR	000000	000000
9822501220	9-8225	0122	REGULATOR	000000	000000
9822501291	9-8225	0129	REGULATOR ASM.	000000	000000
9822521010			REGULATOR	000000	000000
9822531020			REGULATOR	000000	000000
9822531070			REGULATOR	000006	000000
9823507400	9-8235	0740	NUT ASM; PULLEY FIX.	000000	000000
9825119020	9-8251	1902	GLOW PLUG	000000	000000
9825119100			GLOW PLUG	000000	000000

9825119280		GLOW PLUG	000000	000000
9825119320		GLOW PLUG	000000	000000
9825119770	9-8251	1977 GLOW PLUGS	000002	000002
9825119771	9-8251	1977 GLOW PLUGS	000000	000000
9825119780	9-8251	1978 GLOW PLUGS	000000	000000
9825119781	9-8251	1978 GLOW PLUGS	000000	000000
9825119782	9-8251	1978 GLOW PLUGS	000000	000000
9825119783	9-8251	1978 GLOW PLUGS	000069	000025
9825119784	9-8251	1978 GLOW PLUGS	000000	000000
9825119940	9-8251	1994 GLOW PLUG	000007	000016
9825119950	9-8251	1995 GLOW PLUG	000059	000000
9825120350	9-8251	2035 PLUG; GLOW	000000	000000
9825121030	9-8251	2103 PACKING	000047	000000
9825121060	9-8251	2106 PACKING; PLUG	000000	000000
9825131030		SPARK PLUG	000000	000000
9825139240		PLUG; GLOW SHEATHED TYPE	000000	000000
9825139241	9-8251	3924 PLUG; GLOW SHEATHED TYPE	000000	000000
9825139285	9-8251	3928 PLUG; GLOW 24V 4BD/6BB/BD	000000	000000
9825139288	9-8251	3928 PLUG; GLOW 24V 4BD/6BB/BD	000000	000000
9825139289	9-8251	3928 PLUG; GLOW 24V 4BD/6BB/BD	000000	000000
9825139592	9-8251	3959 PLUG; GLOW	000000	000000
9825139593	9-8251	3959 PLUG; GLOW	000000	000000
9825139594	9-8251	3959 PLUG; GLOW	000000	000000
9825139595	9-8251	3959 PLUG; GLOW	000000	000216
9825139596	9-8251	3959 PLUG; GLOW	000000	000000
9825300060		RESISTANCE	000000	000000
9825300340		RESISTANCE	000000	000000
9825300380		RESISTANCE; CONTROL	000000	000001
9825300390	9-8253	0039 RESISTANCE	000014	000000
9825300410	9-8253	0041 CONT.RESIST.	000000	000002
9825300430	9-8253	0043 RESISTANCE ASM 24V 6BB/BD	000000	000000
9825300440	9-8253	0044 RESISTANCE	000000	000000
9825300450	9-8253	0045 CONTROL RESIS.	000000	000000
9825300460	9-8253	0046 RESISTOR; CONTROL, GL	000000	000003
9825300490	9-8253	0049 RESISTANCE; CONTROL	000000	000003
9825301010	9-8253	0101 RESISTANCE; CONTROL	000000	000000
9825301080	9-8253	0108 RESISTANCE; CONTROL 4BD1	000002	000003
9825301090	9-8253	0109 CONT.RESIST.	000000	000001
9825301100	9-8253	0110 RESISTANCE; CONTROL	000000	000014
9825301180	9-8253	0118 RESISTANCE; CONTROL	000000	000000
9826105170		HEAD LAMP	000000	000000
9826105460		LIGHT	000000	000000
9826105470		HEAD LAMP	000000	000000
9826108620		HEAD LAMP	000000	000000
9826108630		HEAD LAMP	000000	000000
9826115420		CABLE	000000	000000
9826117100		PACKING	000000	000000

9826121110		RIM	000000	000000
9826121120		HOUSING	000000	000000
9826121150		HOUSING	000000	000000
9826122820		RIM	000000	000000
9826151100		BOLT	000000	000000
9826151630		SCREW	000000	000000
9826201740		RR FLASHER	000000	000000
9826203690		LAMP	000000	000000
9826203700		PARKING LAMP	000000	000000
9826204460		LAMP ASSY	000000	000000
9826206600		LAMP	000000	000000
9826206610		LAMP	000000	000000
9826206620		LAMP	000000	000000
9826206630		LAMP	000000	000000
9826212360		LENS	000000	000000
9826214060		RIM	000000	000000
9826217280		PACKING	000000	000000
9826222210		LENS	000000	000000
9826222220		LENS	000000	000000
9826300410		CONTROL RESISTANCE	000000	000000
9826301090		LICENSE LIGHT	000000	000000
9826301440		STOP LAMP	000000	000000
9826302420		REFLECTOR	000000	000000
9826308930		LENS	000000	000000
9826309670		BACK LAMP	000000	000000
9826312770		LENS; TAIL, RIGHT	000000	000000
9826314850		RIM	000000	000000
9826318120		LENS	000000	000000
9826318330		LENS	000000	000000
9826321180		LAMP LENS	000000	000000
9826500380		LAMP	000000	000000
9826500400		LAMP	000000	000000
9826500460		PILOT LAMP	000000	000000
9826500531		PILOT LAMP ASM.	000000	000005
9826500600		PILOT	000000	000000
9826500630		LIGHT	000000	000000
9826500700		PILOT LAMP ASM.	000001	000000
9826553051	9-8265 5305	LAMP;PILOT	000002	000000
9826911300		SEALD BEAM	000000	000000
9826911410		SEALD BEAM	000000	000000
9826913050		BULB	000000	000000
9826913230		BULB	000000	000000
9826913700		BULB, 12V	000000	000000
9826916060		BULB; RR COMB LAMP	000000	000000
9827100450	9-8271 0045	SWITCH	000000	001045
9827100460	9-8271 0046	SWITCH	000000	000000
9827100500	9-8271 0050	START SWITCH	000000	000000

9827100520	9-8271	0052	SWITCH ASM; BATTERY	000000	000000
9827102050	9-8271	0205	SWITCH; STARTER	000000	000000
9827102092	9-8271	0209	SWITCH; OIL PRESSURE WARN	000000	000000
9827102270	9-8271	0227	SWITCH ASM; STARTER 3KC1/	000000	000000
9827102280	9-8271	0228	SUPERSEDED**SWITCH	000000	000000
9827115120	9-8271	1512	KEY;REPLACEMENT	000300	000677
9827150060	9-8271	5006	KEY & CYL FOR 9-8271 0045	000000	000000
9827150750	9-8271	5075	BARREL; KEY	000000	000000
9827150760	9-8271	5076	KEY BLANK	000000	000000
9827150770	9-8271	5077	KEY BLANK	000000	000000
9827150780	9-8271	5078	KEY BLANK	000047	000000
9827200090	9-8272	0009	SWITCH	000000	000000
9827200320			SWITCH	000000	000000
9827200360			SWITCH	000000	000000
9827200690	9-8272	0069	SWITCH; OIL PRESSURE 3KC1	000000	000295
9827200701	9-8272	0070	SWITCH; OIL PRESSURE 3KC1	000000	000000
9827200720			PRESSURE UNIT	000000	000000
9827200760			SWITCH	000000	000000
9827202080			SWITCH	000000	000000
9827202082	9-8272	0208	SWITCH,WARNING,	000000	000000
9827202092	9-8272	0209	SWITCH,WARNING,	000000	000003
9827300040			SWITCH	000000	000000
9827300090			SWITCH	000000	000000
9827400150	9-8274	0015	SWITCH	000000	000000
9827500400			IGN SWITCH	000000	000000
9827501160			KEYS	000000	000000
9827501910			SWITCH	000000	000000
9827502610			SWITCH	000000	000000
9827502630			SWITCH	000000	000000
9827502840	9-8275	0284	KEY & CYL FOR 9-8271 0045	000000	001093
9827502850	9-8275	0285	SUPERCEDED*****	000000	000000
9827502990			SWITCH	000000	000000
9827503430			SWITCH	000000	000000
9827503820			SWITCH	000000	000000
9827503950			SWITCH	000000	000000
9827504560			SWITCH	000000	000000
9827504570			SWITCH	000000	000000
9827504610			SWITCH	000000	000000
9827504660	9-8275	0466	SWITCH	000000	000000
9827504661	9-8275	0466	SWITCH	000000	000000
9827504910			SWITCH	000000	000000
9827504940			SWITCH	000000	000000
9827505061			KEY	000000	000000
9827505260			SWITCH	000000	000000
9827505310			SWITCH	000000	000000
9827505430			SWITCH	000000	000000
9827506100			SWITCH	000000	000000

9827506240		SWITCH	000000	000000
9827506740		SWITCH	000000	000000
9827506750		SWITCH	000000	000000
9827507010		SWITCH	000000	000000
9827507220		SWITCH; DOOR	000000	000000
9827600741	9-8276 0074	SWITCH; INTAKE	000000	000000
9827700120	9-8277 0012	SWITCH	000000	000000
9827900180		RELAY	000000	000000
9827900420		RELAY	000000	000000
9827900460	9-8279 0046	RELAY; GLOW PLUG	000000	000000
9827900490		RELAY	000000	000000
9827902010		RELAY; SAFETY	000000	000000
9827902180	9-8279 0218	RELAY ASM; HOUR METER	000000	000000
9827911131	9-8279 1113	SWITCH;BILGE,BUZZER	000000	000000
9829221120		WIRE ASSY	000000	000000
9829225230		HARNESS	000000	000000
9829225260		HARNESS	000000	000000
9829225400		HARNESS	000000	000000
9829232600		HARNESS	000000	000000
9829241090		WIRE ASSY	000000	000000
9829241170		FRT HARNESS	000000	000000
9829244040		HARNESS	000000	000000
9829254310	9-8292 5431	CABLE; OIL PRESSURE	000000	000000
9829255982		HARNESS	000000	000000
9829256450		HARNESS	000000	000000
9829257990		HARNESS	000000	000000
9829275290		KNOB	000000	000000
9829275300		HARNESS	000000	000000
9829275530		HARNESS	000000	000000
9829276630		HARNESS	000000	000000
9829277930		HARNESS	000000	000000
9829311530		CABLE ASM; BOND	000000	000000
9829311560	9-8293 1156	HARNESS; CABLE ASM, START	000000	000000
9829314811	9-8293 1481	CABLE; BATTERY	000000	000000
9829314821	9-8293 1482	HARNESS	000000	000000
9829315110	9-8293 1511	HARNESS	000011	000000
9829321880		CABLE; HARNESS	000000	000000
9829322110	9-8293 2211	CABLE;STARTER	000000	000117
9829322650	9-8293 2265	CABLE ASM.; BATTERY	000000	000000
9829322900	9-8293 2290	CABLE 6RB1	000000	000005
9829323270		CABLE; HARNESS	000000	000001
9829324030		CABLE	000000	000000
9829325670		CABLE	000000	000000
9829325770		CABLE E120	000000	000000
9829325810	9-8293 2581	CABLE ASM; STARTER	000000	000000
9829328120		CABLE	000000	000000
9829328240		CABLE ASSY,STAR	000000	000000

9829331400		CABLE	000000	000000
9829400080		BOX; FUSE	000000	000000
9829400180		FUSE BOX	000000	000000
9829400400		FUSE BOX	000000	000000
9829400740		FUSE BOX	000000	000000
9829401120		FUSE BOX	000000	000000
9829401280		FUSE BOX	000000	000000
9829402180		FUSE BOX	000000	000000
9829402240		FUSE BOX	000000	000000
9829404020		FUSE BOX	000000	000000
9829404160		FUSE BOX	000000	000000
9829404360		FUSE BOX	000000	000000
9829411350		FUSE UNIT, FUSE	000000	000000
9829411360	9-8294 1136	FUSE; 10A	000000	000000
9829419030		HOLDER	000000	000000
9829503010		CONNECTOR	000000	000000
9829513220	9-8295 1322	CAP; INSULATOR 6RB1	000012	000000
9829513230	9-8295 1323	CAP; TERMINAL, ID=2.8	000009	000030
9829513240	9-8295 1324	CAP; INSULATOR	000000	000797
9829513250	9-8295 1325	CAP; INSULATOR	000003	000080
9829513320	9-8295 1332	CAP C190	000000	000000
9829513330	9-8295 1333	CAP; BATTERY CABLE 6RB1	000003	000010
9829513400	9-8295 1340	TERM**DISCONTINUED**	000000	000000
9829513650	9-8295 1365	TERMINAL CAP KIT	000029	000000
9829514140		WIRE FITTING	000000	000000
9829516800		SWITCH	000000	000000
9829516990		CONSENT	000000	000000
9829550220		PLATE	000000	000000
9831014550	9-8310 1455	PANEL;METER	000000	000000
9831020890		METER	000000	000000
9831022240		METER	000000	000000
9831023150		METER ASSY	000000	000000
9831103120		TACHOMETER	000000	000000
9831104270		SPEEDOMETER	000000	000000
9831104720		METER ASM; HOUR	000000	000000
9831104730	9-8311 0473	TACH GAUGE	000000	000000
9831104980		TACHOMETER	000000	000000
9831105210		TACHOMETER	000000	000000
9831105430		TACHOMETER	000000	000000
9831108110		METER	000000	000000
9831108170		TACHOMETER ASM.	000000	000000
9831108190	9-8311 0819	TACHOMETER	000000	000000
9831108200	9-8311 0820	TACHOMETER	000000	000000
9831108280	9-8311 0828	TACHOMETER; 12V, 3000RPM	000000	000000
9831108750	9-8311 0875	TACHOMETER	000000	000000
9831109230		TACHOMETER	000000	000000
9831115700		SHAFT; FLEXIBLE	000000	000000

9831115710	9-8311	1571	SHAFT ASM; FLEX	000000	000000
9831115720	9-8311	1572	CABLE TACHOMETER	000000	000000
9831115740	9-8311	1574	SHAFT; FLEX., TACHOMETER	000000	000000
9831115760	9-8311	1576	SHAFT ASM.; FLEX.	000000	000000
9831115770	9-8311	1577	CABLE ASM; FLEX	000000	000000
9831115780	9-8311	1578	CABLE; TACHOMETER	000000	000000
9831121010			FLEX SHAFT	000000	000000
9831122020			VALVE	000000	000000
9831122160			VALVE	000000	000000
9831122210			VALVE	000000	000000
9831123790			CABLE	000000	000000
9831123891			CABLE; TACHOMETER, L=2300	000000	000000
9831123981			FLEX SHAFT	000000	000000
9831123991			FLEX SHAFT	000000	000000
9831128080			FLEX SHAFT ASSY	000000	000000
9831200320			AMMETER	000000	000000
9831200470			AMMETER	000000	000000
9831200700			AMMETER	000000	000000
9831200750			AMMETER	000000	000000
9831200780			AMMETER	000000	000000
9831200830			AMMETER ASM. (60A) JAPANE	000000	000000
9831200860	9-8312	0086	AMMETER	000000	000000
9831300020			FUEL TANK UNIT	000000	000000
9831300070			FUEL TANK UNIT	000000	000000
9831300950			FUEL METER	000000	000000
9831301070			FUEL METER	000000	000000
9831301180			METER; FUEL	000000	000000
9831302090			FUEL METER	000000	000000
9831312160			METER	000000	000000
9831314010			IDLE; SPRING	000000	000000
9831314100			FUEL UNIT ASSY	000000	000000
9831314111			TANK UNIT	000000	000000
9831314240			FUEL UNIT ASSY	000000	000000
9831315080			UNIT ASSY FUEL	000000	000000
9831315090			UNIT ASSY FUEL	000000	000000
9831315320			UNIT ASSY FUEL	000000	000000
9831316820			UNIT ASSY FUEL	000000	000000
9831316980			RESISTOR	000000	000000
9831317010			RESISTOR	000000	000000
9831317040			COIL	000000	000000
9831360700			METER	000000	000000
9831400430			METER	000000	000000
9831400820			METER	000000	000000
9831400910			UNIT; OIL PRESSURE	000003	000000
9831400920			METER	000000	000000
9831401301			GAUGE; OIL	000000	000007
9831401350			METER	000000	000000

9831401470		OIL PRESS METER	000000	000000
9831401570		OIL PRESS UNIT	000000	000000
9831401571	9-8314 0157	OIL PRESS UNIT	000022	000000
9831401750		METER	000000	000000
9831401850		METER; OIL PRESSURE E120	000000	000000
9831401870	9-8314 0187	PRESSURE METER; OIL (12V)	000036	000000
9831401950		OIL PRESS GAUGE	000000	000000
9831401980		GAUGE; OIL	000000	000000
9831401990		OIL PRESS GAUGE	000000	000000
9831403100		OIL;PRESSURE	000000	000000
9831500430		THERMO METER	000000	000000
9831500580		TEMP, UNIT	000000	000000
9831500620		THERMOMETER	000000	000000
9831500940		THERMOMETER	000000	000000
9831501520		GAUGE	000000	000000
9831501540		THERMO METER	000000	000000
9831501830		THERMOMETER	000000	000000
9831501840		THERMOMETER	000000	000000
9831501850	9-8315 0185	THERMOMETER ASM.	000000	000000
9831501860	9-8315 0186	THERMO METER	000000	000000
9831501890	9-8315 0189	THERMOMETER	000001	000000
9831502040	9-8315 0204	THERMOMETER	000003	000000
9831502400		HORN	000000	000000
9831503130		TEMP, UNIT	000000	000000
9831503210		THERMOMETER	000000	000000
9831506430		OIL GAUGE	000000	000000
9831514190		THERMOMETER UNI	000000	000000
9831514320	9-8315 1432	THERMO UNIT	000000	000025
9831514370	9-8315 1437	UNIT; THERMO OIL	000000	000000
9831514420	9-8315 1442	UNIT; THERMO OIL	000000	000000
9831514430	9-8315 1443	THERMOMETER UNIT; OIL GAL	000000	000000
9831517020	9-8315 1702	THERMOMETER	000000	000000
9831800930		COUPLING	000000	000000
9831800940		COUPLING	000000	000000
9831900750		METER	000000	000000
9831901020		METER	000000	000000
9831901450		COMB METER	000000	000000
9831901560		COMB METER	000000	000000
9831901830		COMB METER	000000	000000
9831901850		COMB GAUGE	000000	000000
9831910250		TACHO DRIVE	000000	000000
9831910390		TACHO DRIVE	000000	000000
9831910630		TACHO DRIVE	000000	000000
9832570250		GEAR	000000	000000
9833004050		HYDRO MASTER	000000	000000
9833004380		MASTER VAC	000000	000000
9833113070		END PLATE	000000	000000

9833113090		END PLATE	000000	000000
9833150800	9-8331 5080	NUT;AIR MSTR	000000	000000
9833150850	9-8331 5085	NUT;LK,CONT	000000	000000
9833350550	9-8333 5055	PACKING,O-RING,	000000	000007
9833412120		VALVE	000000	000000
9833634020		VALVES	000000	000000
9833733200		WIPER LINK	000000	000000
9834200450		SWITCH; RELAY	000000	000000
9834200460	9-8342 0046	RELAY; SAFETY E120	000000	000000
9834202040	9-8342 0204	RELAY; SAFETY	000000	000000
9834202051	9-8342 0205	RELAY; SAFETY	000000	000002
9834600070		SLAVE CYL	000000	000000
9834600360		SLAVE CYL	000000	000000
9834612150		PISTON	000000	000000
9834612160		PISTON;SLAVE CY	000001	000000
9834613020		PUSH ROD	000000	000000
9834617060	9-8346 1706	ROD;PUSH,SLAVE	000000	000007
9835100620		HORN	000000	000000
9835101260		HORN	000000	000000
9835101890		HORN	000000	000000
9835102420		HORN	000000	000000
9835103060		HORN	000000	000000
9835121330		RELAY	000000	000000
9835121450		RELAY	000000	000000
9835121860		HORN RELAY	000000	000000
9835221220		MAG VALVE	000000	000000
9835221260		VALVE	000000	000000
9835421460		SWITCH	000000	000000
9835511160		FLASHER UNIT	000000	000000
9835514420		COMB SWITCH	000000	000000
9835514650		SWITCH	000000	000000
9835518730		FLASHER UNIT	000000	000000
9835522350		SWITCH	000000	000000
9835522440		FLASHER SWITCH	000000	000000
9835522660		FLASHER SWITCH	000000	000000
9835601760		WINDSHIELD WASHER	000000	000000
9835602020		SCREEN WASHER	000000	000000
9835603720		WINDSHIELD WASHER	000000	000000
9835604300		WIND,WASHER ASM	000000	000000
9835618250		NOZZLE ASSY	000000	000000
9835622441		NOZZLE	000000	000000
9835712280		MOTOR	000000	000000
9835713350		WIPER MOTOR	000000	000000
9835713520		WIPER MOTOR	000000	000000
9835713600		WIPER MOTOR	000000	000000
9835721950		BLADE	000000	000000
9835722080		ARM	000000	000000

9835722950			ARM	000000	000000
9835726050			ARM	000000	000000
9835728310			WIPER MOTOR	000000	000000
9835728311			WIPER MOTOR	000000	000000
9835735390			ARM	000000	000000
9836253760	9-8362	5376	PIECE;DISTANCE	000000	000019
9836512600			COCK*	000000	000000
9836518430			NOZZLE	000000	000000
9836553550			HOSE	000000	000000
9839100590	9-8391	0059	TACHOMETER DRIVE ASM	000000	000000
9839100630	9-8391	0063	ELBOW ASM.	000000	000000
9839101010	9-8391	0101	ELBOW ASM	000000	000000
9839101011	9-8391	0101	ELBOW ASM	000000	000000
9839101012	9-8391	0101	TACHOMETER DRIVE	000000	000007
9839972510	9-8399	7251	CAUTION LABEL	000000	000000
9841392440	9-8413	9244	SPRING;GOVERNOR	000000	000000
9841711850	9-8417	1185	PLUG;PISTON SPRG,FUEL FEE	000000	000000
9844100270	9-8441	0027	NUT;ADJ,BOLT	000000	000071
9851119300	9-8511	1930	RETAINER; AUTO. TIMER	000000	000000
9851135010	9-8511	3501	WRENCH; INJ PUMP	000000	000000
9851137020	9-8511	3702	WRENCH ASM.; UNIVERSAL	000000	000000
9851137030	9-8511	3703	REMOVER; PILOT BEARING	000000	000000
9851139350			WRENCH; WHEEL	000000	000000
9851139380	9-8511	3938	WRENCH	000000	000000
9851139381	9-8511	3938	WRENCH	000000	000000
9851143060	9-8511	4306	HANDLE;WRENCH	000000	000000
9851143070	9-8511	4307	TOOL	000000	000000
9851154920			ORING	000000	000000
9851214060			HAMMER; 3/4 LBS	000000	000000
9851619020	9-8516	1902	WRENCH KIT	000000	000001
9851621010	9-8516	2101	WRENCH;22X17	000000	000000
9851631020	9-8516	3102	SPACER; BOX, OIL PRESSUR	000000	000000
9852100740	9-8521	0074	REMOVER	000000	000000
9852100970			REMOVER; WATER PUMP	000000	000000
9852100971	9-8521	0097	REMOVER; WATER PUMP	000002	000000
9852101200	9-8521	0120	PULLER ASM; WATER PUMP	000000	000000
9852101220	9-8521	0122	PULLER; ENG,BUSH	000000	000002
9852101230	9-8521	0123	REMOVER; BUSHING TAPER E1	000000	000005
9852101410	9-8521	0141	PULLER; TIMING GEAR	000000	000002
9852101460			PULLER	000000	000000
9852101540	9-8521	0154	PULLER; AUTO TIMER	000000	000000
9852105050	9-8521	0505	PULLER; TIMING GEAR	000000	000000
9852200110	9-8522	0011	INSTALLER; CRANKSHAFT OIL	000000	000000
9852200200	9-8522	0020	CRANKSHAFT GEAR INSTALLER	000000	000000
9852200210	9-8522	0021	SETTING	000000	000000
9852200250	9-8522	0025	INSTALLER; GEAR CRANK E12	000000	000001
9852200330	9-8522	0033	SETTING TOOL; TIMING GEAR	000005	000000

9852200340	9-8522	0034	INSTALLER; OIL SEAL	000000	000000
9852200350			TOOL	000000	000000
9852200420			INSTALLER; PIN PISTON BUS	000000	000000
9852200430	9-8522	0043	INSTALLER; LINER CYLINDER	000000	000000
9852210180	9-8522	1018	INSTALLER; CYLINDER LINER	000000	000000
9852211480	9-8522	1148	GRIP	000000	000002
9852211720	9-8522	1172	SETTING TOOL; PISTON ASM.	000000	000000
9852212510	9-8522	1251	SETTING TOOL ASM; PISTON	000000	000000
9852212540	9-8522	1254	TOOL;SETTING	000000	000000
9852212541			TOOL;SETTING	000000	000000
9852212550			TOOL*	000000	000000
9852212790	9-8522	1279	INSTALLER	000000	000000
9852212890	9-8522	1289	INSTALLER; SEAL VALVE E12	000001	000000
9852213190	9-8522	1319	SETTING TOOL	000002	000000
9852213240	9-8522	1324	INSTALLER;VALVE BRIDGE GD	000000	000000
9852213241	9-8522	1324	INSTALLER;VALVE BRIDGE GD	000000	000002
9852311690	9-8523	1169	REMOVER; CYLINDER LINER	000000	000001
9852311860	9-8523	1186	REMOVER; LINER CYLINDER E	000000	000000
9852312020	9-8523	1202	REMOVER & INSTALLER; VALV	000000	000006
9852312022	9-8523	1202	REMOVER & INSTALLER; VALV	000000	000000
9852312120	9-8523	1212	INSTALLER	000002	000000
9852312200	9-8523	1220	REMOVER/INSTALLER; GUIDE	000000	000000
9852312220	9-8523	1222	TOOL; VALVE GUIDE	000001	000000
9852313600	9-8523	1360	INSTALLER	000000	000000
9852313690	9-8523	1369	REMOVER	000002	000000
9852314230	9-8523	1423	TOOL	000000	000000
9852314231	9-8523	1423	TOOL	000000	000000
9852314260	9-8523	1426	VALVE SPRING COMPRESSOR	000000	000000
9852314360	9-8523	1436	SPRING; VALVE, COMPRESSOR	000001	000000
9852317370			INSTALLER	000000	000000
9852318070	9-8523	1807	REMOVER	000000	000000
9852318081	9-8523	1808	TOOL; INJ PUMP	000000	000000
9852318120	9-8523	1812	REMOVER	000002	000000
9852318180	9-8523	1818	REPLACER SET; CAM BRG.	000000	000000
9852320010	9-8523	2001	REMOVER; NOZZLE HOLDER E1	000000	000000
9852320011	9-8523	2001	REMOVER; NOZZLE HOLDER E1	000001	000003
9852325510	9-8523	2551	INSTALLER	000000	000001
9852325520	9-8523	2552	REMOVER	000000	000001
9852325540	9-8523	2554	SETTING TOOL; CYL. LINER	000000	000000
9852325541	9-8523	2554	SETTING TOOL; CYL. LINER	000000	000001
9852325550	9-8523	2555	REPLACER ASM; LINER	000000	000000
9852325570	9-8523	2557	ANKLE	000000	000000
9852325571	9-8523	2557	ANKLE	000000	000001
9854315050	9-8543	1505	GAUGE; COMPRESSION ADAPTO	000000	000001
9855817191	9-8558	1719	BAG;TOOL	000000	000000
9855821410			REPAIR KIT	000000	000000
9855821510			FILTER	000000	000000

9855826140		REPAIR KIT	000000	000000
9855829150		REPAIR KIT	000000	000000
9855829160		BRAKE REPAIR KIT	000000	000000
9875051100		SWITCH	000000	000000
9875410130		CAP; FILLER ASSY.	000000	000000
9876920950	9-8769 2095	LINER; CYLINDER DA220	000000	000000
9881100030		OIL SEAL	000000	000000
9881100040		SETTING	000000	000000
9881100070		PIN	000000	000000
9881100133		PACKING	000000	000000
9881100140		PACKING	000000	000000
9881100280		SEALS	000000	000000
9881100290		VALVE	000000	000000
9881100300		BOLT	000000	000000
9881100310		PACKING	000000	000000
9881100510		BOLT	000000	000000
9881201370		BOLT	000000	000000
9881300330	9-8813 0033	WASHER; THROUGH, BOLT, STRTR	000000	000000
9881300810	9-8813 0081	WASHER; CK VLV	000000	000000
9881300870	9-8813 0087	WASHER; OIL FEED	000000	000097
9881300880	9-8813 0088	SCREW; OIL FEED	000002	000033
9881300930	9-8813 0093	NUT, PULLEY TO F	000000	000000
9881300990	9-8813 0099	PIN; VAC PUMP	000000	000016
9881301010	9-8813 0101	BOLT DELIVERY V	000001	000001
9881301260	9-8813 0126	GASKET CONNECTO	000000	000036
9881301290	9-8813 0129	BOLT; **FOR WASHER PN 9-88	000000	000000
9882316180	9-8823 1618	BRUSH ASM-UNLISTED	000000	000000
9884020000	9-8840 2000	BEARING REMOVER	000000	000000
9884020570	9-8840 2057	REMOVER	000000	000000
9884100270	9-8841 0027	NUT; ADJ. BOLT LK	000000	000000
9884100370	9-8841 0037	NUT**	000000	000000
9884100460	9-8841 0046	WASHER	000000	000000
9884100900	9-8841 0090	WASHER	000000	000000
9884100940	9-8841 0094	BOLT;	000000	000024
9884101040	9-8841 0104	WASHER; SPR. CO	000000	000000
9884101130	9-8841 0113	SPRING WASHER (-6400)	000000	000000
9884101220	9-8841 0122	SHIM*	000000	000000
9884101230	9-8841 0123	S H I M	000000	000000
9884101240	9-8841 0124	WASHER; LK DUST CVR/KNUCLE	000000	000000
9884101300	9-8841 0130	BOLT	000000	000000
9884101970	9-8841 0197	SCREW; INJ. GOV.	000000	000000
9884101980	9-8841 0198	WASHER	000001	000000
9884102010	9-8841 0201	RING; SNAP	000000	000000
9884102040	9-8841 0204	SHIM*	000003	000000
9884102050	9-8841 0205	SHIM	000000	000000
9884102220	9-8841 0222	WASHER; LK FINAL DRIVE	000000	000000
9884102240	9-8841 0224	NUT; INJ GOV	000006	000000

9884102330	9-8841	0233	WASHER	000000	000000
9884102570	9-8841	0257	CAP; SPRING C240	000000	000000
9884102620	9-8841	0262	NUT**	000000	000000
9884102640	9-8841	0264	SPRING; WASHER	000000	000082
9884102760	9-8841	0276	NUT**	000000	000000
9884102900			NUT	000000	000000
9884103510	9-8841	0351	BOLT,BRACKET TO	000000	000000
9884103530			NUT; RET/CLU HSG	000000	000000
9884103890	9-8841	0389	BOLT;	000000	000000
9884104210	9-8841	0421	SHIM	000009	000000
9884104300	9-8841	0430	WASHER	000413	000000
9884104310	9-8841	0431	RING; SNAP	000220	000000
9884104320	9-8841	0432	STUD; HOUSING HEAD	000000	000014
9884104330	9-8841	0433	SHIM T=0.50	000000	000000
9884104340	9-8841	0434	SHIM T=0.60	000000	000000
9884104350	9-8841	0435	SHIM T=0.70	000000	000000
9884104360	9-8841	0436	SHIM T=0.80	000000	000000
9884104370	9-8841	0437	SHIM T=0.90	000000	000000
9884104380	9-8841	0438	SHIM T=0.40	000000	000000
9884104390	9-8841	0439	SHIM T=0.15	000000	000000
9884104400	9-8841	0440	PIN; CON. RACK	000101	000000
9884104410	9-8841	0441	SHIM T=1.20	000000	000000
9884104450	9-8841	0445	SHIM T=0.10	000005	000000
9884104460	9-8841	0446	SHIM T=0.12	000005	000000
9884104470	9-8841	0447	SHIM T=0.14	000000	000080
9884104480	9-8841	0448	SHIM T=0.16	000000	000080
9884104490	9-8841	0449	SHIM T=0.18	000001	000000
9884104500	9-8841	0450	SHIM T=0.30	000005	000000
9884104510	9-8841	0451	SHIM T=0.50	000004	000000
9884104520	9-8841	0452	WASHER E120	000000	000000
9884104530	9-8841	0453	SCREW	000016	000000
9884104540	9-8841	0454	WASHER	000000	000010
9884104560	9-8841	0456	N U T	000053	000000
9884104630	9-8841	0463	BOLT 6RB1	000000	000000
9884104660	9-8841	0466	NUT;DIAPHRAGM	000000	000000
9884104700	9-8841	0470	NUT; AUTOMATIC FIX	000000	000007
9884104730	9-8841	0473	BOLT E120	000006	000000
9884104860	9-8841	0486	WASHER;LK,BRG HOLDR TO CA	000000	000000
9884104890	9-8841	0489	STUD*	000000	000000
9884104970	9-8841	0497	PLUG;HOUSING	000000	000000
9884105020	9-8841	0502	NUT	000004	000000
9884105250	9-8841	0525	SWT CASE HEATER	000000	000027
9884105530	9-8841	0553	BOLT; EYE	000000	000000
9884105540	9-8841	0554	NUT; INJ PUMP	000000	000000
9884105560			JOINT BOLT	000000	000000
9885100420	9-8851	0042	WASHER; LK FINAL DRIVE	000000	000000
9885100510	9-8851	0051	NUT; HEX, CLEVIS	000000	000000

9885100920	9-8851	0092	NUT,MASTER VAC	000000	000000
9885102340	9-8851	0234	PACKING; O-RING	000000	000000
9885102350	9-8851	0235	ORING;OIL PUMP	000000	000000
9885102370	9-8851	0237	PIN;STRAIGHT	000000	000005
9885102450	9-8851	0245	SHIM;VLV,T-0.5	000000	000000
9885102460	9-8851	0246	SHIM;VLV,T-0.2	000000	000000
9885102470	9-8851	0247	SPRING	000000	000000
9885102480	9-8851	0248	GASKET;PLUG TO VALVE	000000	000000
9885102580	9-8851	0258	NUT;ADJ. SCREW	000000	000000
9885102670	9-8851	0267	BOLT; BRACKET TO TRANS	000000	000000
9885103690	9-8851	0369	PLATE;PRESSURE	000000	000000
9885103700	9-8851	0370	BOLT	000000	000000
9885103780	9-8851	0378	BOLT; OIL PUMP	000000	000000
9885104080	9-8851	0408	PIN; OIL PUMP	000000	000004
9885104090	9-8851	0409	BOLT	000000	000000
9885104210	9-8851	0421	PIN;STRAIGHT	000000	000034
9885104240	9-8851	0424	NUT; OIL PUMP	000000	000000
9885104250	9-8851	0425	WASHER;LK,O/PUMP/PL,SHAFT	000000	000000
9885104260	9-8851	0426	WASHER;PL.OIL PUMP/SHFT	000000	000000
9885111160	9-8851	1116	OIL FILTER ELEMENT	000002	000000
9885111250			OIL FILTER	000031	000000
9885111370			FUEL FILTER ELEMENT	000000	000000
9885111570			FILTER PAPER ELEMENT DH10	000000	000000
9885111580			PACKING KIT; OIL	000000	000000
9885111632			PACKING KIT	000000	000000
9885111634	9-8851	1163	PACKING KIT	000000	000000
9885111635	9-8851	1163	PACKING KIT	000000	000001
9885111650	9-8851	1165	ELEMENT KIT	000003	000000
9885111660	9-8851	1166	FILTER;OIL PAPER ELEMENT	000000	000000
9885111741			PACKING KIT	000000	000000
9885111742			PACKING KIT	000000	000000
9885111743			PACKING KIT	000000	000000
9885111750			VALVE SET	000015	000004
9885111760	9-8851	1176	VALVE SET	000015	000002
9885111780			VALVE SET	000000	000000
9885111910			FUEL FILTER	000000	000000
9885111911	9-8851	1191	FUEL FILTER	000000	000024
9885111941	9-8851	1194	OIL FILTER	000000	000000
9885111942	9-8851	1194	OIL FILTER	000000	000031
9885112050			PACKING KIT	000000	000000
9885112070			TRANS KIT	000000	000000
9885112120			PACKING KIT	000000	000000
9885112130			PACKING KIT	000000	000000
9885115010			KING PIN KIT	000000	000000
9885115030			KING PIN	000000	000000
9885118070			REPAIR KIT	000000	000000
9885121050			DL OVERHAUL KIT	000000	000000

9885121060			PACKING KIT	000000	000000
9885121080			PACKING KIT	000000	000000
9885121723			OVERHAUL GASKET SET	000000	000000
9885122180			TRANS GASKET SET	000000	000000
9885130610			KIT; MASTER	000000	000000
9885130690			KIT; MASTER	000000	000000
9885130830			REPAIR KIT	000000	000000
9885131060	9-8851	3106	OIL FILTER	000000	000000
9885131061	9-8851	3106	OIL FILTER	000000	000000
9885131062	9-8851	3106	OIL FILTER	000000	000081
9885131070	9-8851	3107	FILTER;OIL PAPER ELEMENT	000000	000000
9885131071	9-8851	3107	FILTER;OIL PAPER ELEMENT	000035	000000
9885131110	9-8851	3111	FUEL FILTER	000000	000000
9885131111	9-8851	3111	FUEL FILTER	000000	000000
9885131360			PACKING KIT	000000	000000
9885132630			FILTER;OIL PAPER ELEMENT	000000	000000
9885132640	9-8851	3264	ELEMENT KIT	000000	000000
9885132641	9-8851	3264	FILTER;OIL PAPER ELEMENT	000001	000000
9885132650	9-8851	3265	FILTER;OIL PAPER ELEMENT	000000	000000
9885132652	9-8851	3265	FILTER;OIL PAPER ELEMENT	000000	000000
9885132653	9-8851	3265	FILTER;OIL PAPER ELEMENT	000000	000071
9885200634	9-8852	0063	LINER KIT	000000	000000
9888100310			PROTECTOR	000000	000000
9888200260			PROTECTOR	000000	000000
9888200300			SPEEDOMETER	000000	000000
9888200310			SPEDOMETER	000000	000000
9888200320			THERMOMETER	000000	000000
9888200330			SPEEDOMETER	000000	000000
9888912010			DL201 PARTS CATALOG	000000	000000
9891121232			CASE; CRANK	000000	000000
9891121233	9-8911	2123	CASE; CRANK	000000	000000
9891121234	9-8911	2123	CASE; CRANK	000000	000011
9891129110	9-8911	2911	BOLT; REAMER 4JA1	000014	000000
9891174280	9-8911	7428	BREATHER ASM; AIR	000000	000000
9891176070	9-8911	7607	GAUGE ASM.; OIL LEVEL	000000	000000
9891177120	9-8911	7712	FOOT ASM; ENGINE (LH)	000000	000000
9891237110	9-8912	3711	PLATE; LK. PULLEY FIX.	000000	000000
9891364140	9-8913	6414	PULLEY; WATER PUMP	000000	000000
9891364230	9-8913	6423	SPACER; COOLING	000000	000059
9891371130	9-8913	7113	PIPE; WATER OUTLET	000000	000000
9891411210	9-8914	1121	PIPE; INLET	000000	000000
9891958020	9-8919	5802	SPACER; OIL PUMP BRKT.	000000	000000
9891958040	9-8919	5804	BRACKET; OIL PUMP	000000	000000
9891958041	9-8919	5804	BRACKET; OIL PUMP	000000	000000
9892140040	9-8921	4004	PLUG; DRAIN	000000	000000
9892140150	9-8921	4015	RADIATOR	000000	000000
9892142040	9-8921	4204	PLUG; DRAIN, RADIATOR	000000	000000

9892143020	9-8921	4302	HOSE;RUBBER,UPPER	000002	000000
9892143030	9-8921	4303	HOSE; RUBBER	000001	000001
9892143130	9-8921	4313	HOSE; RADIATOR, UPPER 3KC	000000	000001
9892143140	9-8921	4314	HOSE; RADIATOR, LOWER 3KC	000000	000001
9893111130	9-8931	1113	BUSH,SHF,HOUSIN	000000	000000
9893113010	9-8931	1301	CASE BRG. POWER DRIVE	000000	000000
9893132011	9-8931	3201	BLOCK;SHIFT	000000	000000
9893312020	9-8933	1202	COVER;FRONT	000000	000000
9893811010	9-8938	1101	PACKING;POWER DRIVE	000000	000000
9893851160	9-8938	5116	SHAFT;POWER DRIVE	000000	000000
9893851260	9-8938	5126	COLLAR SHAFT POWER DRIVE	000000	000000
9899313280	9-8993	1328	GASKET;FEED PUMP	000000	000000
9910412500	9-9104	1250	BOLT; SHOCK ABS	000000	000000
9910414450	9-9104	1445	BOLT;STRG UNIT	000000	000000
9910462600			BOLT;	000000	000000
9910462850	9-9104	6285	BOLT;	000000	000000
9910464450	9-9104	6445	BOLT BRG CASE	000000	000000
9910512350	9-9105	1235	BOLT,SPROCKET T	000000	000000
9910512400	9-9105	1240	BOLT,RR.BODY MO	000000	000000
9910512500	9-9105	1250	BOLT,UPPER LINK	000000	000000
9910512550	9-9105	1255	BOLT; SHACKLE PI	000000	000000
9910512650	9-9105	1265	BOLT;CAP	000000	000000
9910512700	9-9105	1270	BOLT	000000	000000
9910512800	9-9105	1280	BOLT; SPRING & SHACKLE	000000	000000
9910512850	9-9105	1285	BOLT; LINK END	000000	000000
9910512900	9-9105	1290	BOLT,	000000	000000
9910514450	9-9105	1445	BOLT;STRG UNIT	000000	000000
9910514500	9-9105	1450	BOLT	000000	000000
9910514550	9-9105	1455	BOLT; HOOK TO FRAME	000000	000000
9910514650	9-9105	1465	B O L T	000000	000000
9910514900			BOLT	000000	000000
9910516450	9-9105	1645	BOLT;HOOK	000000	000000
9910516650	9-9105	1665	BOLT;	000000	000000
9910516700	9-9105	1670	BOLT; FRAME HOO	000000	000000
9910516750	9-9105	1675	BOLT;HOOK	000000	000000
9910562400	9-9105	6240	BOLT,TRANS,CASE	000000	000000
9910562450	9-9105	6245	BOLT; BRAKE,M/CYL	000000	000000
9910562500	9-9105	6250	BOLT;UPPER LINK	000000	000000
9910562550	9-9105	6255	BOLT; CARRIER	000000	000000
9910562600	9-9105	6260	BOLT; POWER CHAMBER BRKT	000000	000000
9910562650	9-9105	6265	BOLT; CAP	000000	000000
9910562700	9-9105	6270	BOLT;BRKT,ENG M	000000	000000
9910562800	9-9105	6280	BOLT; SPR & SHAC.	000000	000000
9910562850	9-9105	6285	BOLT; TRANS,CASE	000000	000000
9910564400	9-9105	6440	BOLT;CARRIER SE	000000	000000
9910564450	9-9105	6445	BOLT;STRG UNIT	000000	000000
9910564500	9-9105	6450	BOLT; HSG	000000	000000

9910564550	9-9105	6455	BOLT; HOOK TO FRAME	000000	000000
9910564650	9-9105	6465	BOLT; HSG	000000	000000
9910564800	9-9105	6480	BOLT; SPARE TIRE	000000	000001
9910564900	9-9105	6490	BOLT, LOWER LINK	000000	000000
9910566450	9-9105	6645	BOLT; FRT BRKT	000000	000000
9910566650	9-9105	6665	BOLT; FINAL DRI	000000	000000
9910566900	9-9105	6690	BOLT BRG CASE	000000	000000
9910570600	9-9105	7060	BOLT; FLANGE	000000	000000
9910612350	9-9106	1235	BOLT; ARM END TO	000000	000000
9910612500	9-9106	1250	BOLT; S/ABS	000000	000000
9910612550	9-9106	1255	BOLT; TIE	000000	000019
9910612600	9-9106	1260	BOLT; IDLER FIX	000000	000000
9910614000	9-9106	1400	B O L T	000000	000000
9910614450	9-9106	1445	BOLT; STRG UNIT	000000	000000
9910614500	9-9106	1450	BOLT; CUSHION	000000	000000
9910614650	9-9106	1465	BOLT; UPPER LINK	000000	000000
9910614700	9-9106	1470	BOLT; BRKT FIX	000000	000000
9910618800	9-9106	1880	BOLT; CAMSHAFT GEAR FIX	000000	000000
9910662450	9-9106	6245	BOLT; TIE ROD END	000000	000000
9910662550	9-9106	6255	BOLT; FINAL DRIVE	000000	000000
9910662600	9-9106	6260	BOLT; LOWER BRK.	000000	000000
9910664000	9-9106	6400	BOLT; STEERING UNIT	000000	000000
9910664450	9-9106	6445	BOLT; STRG UNIT	000000	000000
9910664500	9-9106	6450	BOLT; FLYWHEEL	000000	000000
9910664650	9-9106	6465	BOLT; FLYWHEEL	000000	000000
9910664700	9-9106	6470	BOLT; BRKT FIX	000000	000000
9910666000	9-9106	6600	BOLT; CR/SHF PULLEY	000000	000000
9910666450	9-9106	6645	BOLT; CRAN	000000	000000
9910666600	9-9106	6660	BOLT; CUSHION, RUBBER TO	000000	000045
9910666650	9-9106	6665	BOLT	000000	000000
9910666700	9-9106	6670	BOLT; FRAME, HOO	000003	000000
9910666750	9-9106	6675	BOLT; HOOK	000000	000000
9910666900	9-9106	6690	BOLT BRG. CASE	000000	000000
9910668650	9-9106	6865	BOLT*	000000	000000
9910668700	9-9106	6870	BOLT; PULLEY TO CNTR	000000	000000
9910668800	9-9106	6880	BOLT	000000	000000
9911501080	9-9115	0108	NUT; FLANGE	000000	000000
9916466350	9-9164	6635	B O L T	000000	000000
9916514500	9-9165	1450	BOLT; PINION	000000	000000
9916514550	9-9165	1455	BOLT	000000	000000
9916564500	9-9165	6450	BOLT; PINON	000000	000000
9916564950	9-9165	6495	BOLT; HOUSING FIX.	000000	000000
9916568750			BOLT; FLYWHEEL	000000	000000
9916664000	9-9166	6400	BOLT; STAY TP C/BL	000000	000000
9916664450	9-9166	6445	BOLT; ENG FOOT	000000	000000
9916664500	9-9166	6450	BOLT; HSG	000000	000000
9916664600	9-9166	6460	BOLT; THRU	000000	000000

9916664900	9-9166	6490	BOLT; AIR CMPR FIX	000000	000007
9916666800	9-9166	6680	BOLT; I/GEAR SPINDLE FIX	000000	000000
9920404350	9-9204	0435	BOLT	000000	000000
9920405100	9-9204	0510	BOLT,CASE TO BR	000000	000000
9920405120	9-9204	0512	BOLT,BRKT.TO BO	000000	000000
9920405140	9-9204	0514	BOLT: CABLE	000000	000000
9920406120	9-9204	0612	BOLT; POINTER	000000	000000
9920412250	9-9204	1225	BOLT;CAB MTG	000000	000000
9920412350	9-9204	1235	BOLT;CAB MTG	000000	000000
9920412400			BOLT;RR BODY MO	000000	000000
9920414160			BOLT;EARTH PLAT	000000	000000
9920414180	9-9204	1418	BOLT;CLIP FIXING	000000	000000
9920414280	9-9204	1428	BOLT CLUTCH HOUSING	000000	000000
9920414300	9-9204	1430	BOLT;BRKT	000000	000000
9920414450	9-9204	1445	BOLT;STRG UNIT	000000	000000
9920414800	9-9204	1480	BOLT;SPARE TIRE	000000	000000
9920416450	9-9204	1645	BOLT; CARRIER	000000	000000
9920505100	9-9205	0510	BOLT; CONTR	000000	000000
9920505120	9-9205	0512	BOLT	000000	000000
9920505140	9-9205	0514	BOLT,BRKT.TO DA	000000	000000
9920505200	9-9205	0520	BOLT; CLIP, INJ, PIPE	000000	000000
9920505300	9-9205	0530	BOLT;MAP SENSOR	000000	000000
9920512220	9-9205	1222	BOLT; BRACKET	000000	000000
9920512250	9-9205	1225	BOLT	000000	000000
9920512280	9-9205	1228	BOLT;BRACKET	000000	000000
9920512300	9-9205	1230	BOLT,ENG.FOOT	000000	000000
9920512320	9-9205	1232	BOLT; LEVER	000000	000000
9920512350	9-9205	1235	BOLT;	000000	000000
9920512400	9-9205	1240	BOLT; EXH PIPE, FRT	000000	000000
9920512450	9-9205	1245	BOLT; BRAKE,M/CYL	000000	000000
9920512500	9-9205	1250	BOLT; CLAMP	000000	000000
9920514200	9-9205	1420	BOLT;	000000	000000
9920514220	9-9205	1422	BOLT; ENGINE FOOT	000000	000000
9920514250	9-9205	1425	BOLT; ENG. HANGER	000000	000000
9920514280	9-9205	1428	BOLT; ENG. HANGER	000000	000000
9920514300	9-9205	1430	BOLT;	000000	000006
9920514350	9-9205	1435	BOLT;SPACER	000000	000000
9920514400	9-9205	1440	BOLT;BRKT	000000	000000
9920514450	9-9205	1445	BOLT;STRG UNIT	000000	000000
9920516400	9-9205	1640	BOLT; BUMPER BR	000000	000000
9920520500	9-9205	2050	BOLT	000000	000000
9920520600	9-9205	2060	BOLT; FLANGE	000000	000000
9920612300	9-9206	1230	BOLT; MEMBER TO FRAME	000012	000000
9920612320	9-9206	1232	BOLT	000024	000000
9920612350	9-9206	1235	BOLT;CUSHION,LWR LINK	000000	000000
9920612450	9-9206	1245	BOLT; TIE ROD END	000000	000013
9920612550	9-9206	1255	BOLT; STARTER	000000	000000

9920614250	9-9206	1425	BOLT;FLEX PLATE	000000	000005
9920614280	9-9206	1428	BOLT;TIMING GEA	000000	000040
9920614350	9-9206	1435	BOLT;SPACER	000000	000000
9920614400	9-9206	1440	BOLT;CARRIER SE	000000	000000
9920614450	9-9206	1445	BOLT;STRG UNIT	000000	000000
9920614500	9-9206	1450	BOLT;STRG	000000	000087
9920616320	9-9206	1632	BOLT	000000	000000
9920616380	9-9206	1638	BOLT;FLYWHEEL	000000	000169
9920616400	9-9206	1640	BOLT; FINAL DRIVE SETTING	000000	000000
9920616450	9-9206	1645	BOLT;	000002	000036
9920616500	9-9206	1650	BOLT; FRT. BRKT.	000008	000000
9920618700	9-9206	1870	BOLT; PULLEY TO CNTR	000023	000050
9923514250	9-9235	1425	BOLT; BRACKET	000000	000000
9923514300	9-9235	1430	BOLT; COVER FIX.	000030	000000
9923514320	9-9235	1432	BOLT; SUPPORT	000000	000000
9923514380	9-9235	1438	BOLT; CAGE TO C	000000	000000
9923514400	9-9235	1440	BOLT; CAGE	000000	000000
9923614300	9-9236	1430	BOLT; THRUST COLLAR	000000	000000
9923614320	9-9236	1432	BOLT; ENGINE FOOT FIX	000119	000000
9923614350	9-9236	1435	BOLT;W/C SET	000000	000022
9923614400	9-9236	1440	BOLT E120	000000	000000
9923614450	9-9236	1445	BOLT*	000001	000000
9926212700	9-9262	1270	BOLT FLANGE FIX	000000	000000
9930905120	9-9309	0512	SCREW; SIDE DOOR	000002	000000
9932303080	9-9323	0308	SCREW	000000	000000
9932803080	9-9328	0308	SCREW; VALVE	000000	000000
9932803100	9-9328	0310	SCREW; VALVE FIX.	000000	000000
9932904100	9-9329	0410	SCREW; VALVE FIX.	000000	000000
9932905120	9-9329	0512	SCREW; SIDE DOOR	000000	000000
9934406120	9-9344	0612	SCREW; SHUTTER CONT CABLE	000000	000000
9934604120	9-9346	0412	SCREW;BRKT	000000	000000
9934705080	9-9347	0508	SCREW;FASTENER,	000000	000334
9934904080	9-9349	0408	SCREW	000000	000000
9934904100	9-9349	0410	SCREW,RIM TO BO	000000	000000
9934904120	9-9349	0412	SCREW,COWL TO C	000000	000032
9934904140	9-9349	0414	SCREW;HTR CASE	000020	000590
9934904160	9-9349	0416	SCREW; COWL	000000	000000
9934904250	9-9349	0425	SCREW; CLIP SET	000000	000000
9934904350	9-9349	0435	SCREW; PCV	000006	000000
9934905080			SCREW;RADIO	000000	000032
9934905100	9-9349	0510	SCREW; PROTECTOR	000000	000000
9934905120	9-9349	0512	SCREW;SEMS,SATE	000000	000064
9934905160	9-9349	0516	SCREW; AUTO START RELAY	000000	000000
9934905250	9-9349	0525	SCREW; BOARD-PLATE	000000	000000
9934975100	9-9349	7510	SCREW; TANK UNIT	000000	000000
9940105250	9-9401	0525	STUD; MANIFOLD	000026	000000
9941005250	9-9410	0525	STUD; CLIP FIX.	000000	000000

9941599880	9-9415	9988	GAUGE ASM; OIL LEVEL	000000	000000
9944110250	9-9441	1025	STUD; PUMP	000000	000000
9944111230	9-9441	1123	STUD; STARTER FIX-UNLISTE	000000	000000
9944112200	9-9441	1220	STUD;ADPTOR FIX.	000000	000000
9944112220	9-9441	1222	STUD; STARTER FIX.	000000	000000
9944112250			STUD;BACK BAR	000000	000000
9944112280			STUD; GEAR CASE 6BG/E120	000000	000000
9944112300	9-9441	1230	STUD; STARTER FIX	000004	000000
9944112330	9-9441	1233	STUD;START MTG	000000	000000
9944112350	9-9441	1235	STUD;FLY WHEEL	000003	000000
9944112352	9-9441	1235	STUD;FLY WHEEL	000000	000000
9944112360	9-9441	1236	STUD; MF NUT STARTER	000000	000000
9944112400	9-9441	1240	STUD;OIL PUMP FIX	000014	000016
9944112600	9-9441	1260	STUD;HOUSING	000000	000009
9958212300	9-9582	1230	BOLT;HSG-C/CASE	000000	000000
9958212550	9-9582	1255	BOLT; COVER 4JA/B1	000030	000000
9959212320	9-9592	1232	BOLT; HOUSING	000000	000011
9960205080	9-9602	0508	PIN; KNOB	000000	000000
9960234120	9-9602	3412	SCREW;STOPPER	000000	000000
9970865100	9-9708	6510	SCREW;HARNES	000000	000000
9983205500	9-9832	0550	ROD ASM.	000000	000000
9983305190	9-9833	0519	ROD; LINK	000000	000000
9991101120	9-9911	0112	NUT; CENTER BOLT	000000	000000
9991101140	9-9911	0114	NUT;DIFF.	000000	000000
9991101160	9-9911	0116	NUT;CENTER, BOLT	000000	000000
9991104040	9-9911	0404	NUT,U-BOLT DOUB	000000	000107
9991104050	9-9911	0405	NUT,LAMP ASSY.T	000003	006881
9991104060	9-9911	0406	N U T	000000	000000
9991104100	9-9911	0410	NUT;RBND,HSG TO CASE	000000	000000
9991104120	9-9911	0412	NUT;BRG HOLDER TO CASE	000000	000000
9991104140	9-9911	0414	NUT;ROD END,OUT,TRUCK ROD	000000	000000
9991104160	9-9911	0416	NUT;BRK ASM	000000	000000
9991104180	9-9911	0418	N U T	000000	000000
9991104200	9-9911	0420	NUT;LK, STRG,WHL	000000	000000
9991105050	9-9911	0505	NUT,CABLE TO BO	000000	000000
9991105120	9-9911	0512	NUT;BRG HOLDER TO CASE	000007	001491
9991105140	9-9911	0514	NUT;FRT AXLE MTG,TRUCK RO	000004	000128
9991105160	9-9911	0516	NUT,SHACKLE PIN	000000	000005
9991105180	9-9911	0518	NUT; STOP BOLT Q	000000	000000
9991105200	9-9911	0520	NUT;LK, DR.GEAR	000000	000000
9991114040	9-9911	1404	NUT;SIDE GRILLE	000000	000000
9991114050	9-9911	1405	NUT;WPR ARM/HDLMP/RR QTR	000000	000000
9991114120	9-9911	1412	NUT,SHOCK ABS.,	000000	000000
9991114140	9-9911	1414	NUT,LOCK,STRUT	000000	000000
9991114141	9-9911	1414	NUT,LOCK,STRUT	000000	000000
9991114160	9-9911	1416	NUT;BRAKE PIPE,RELAY LVR	000000	000000
9991114180			NUT	000000	000000

9991114200	9-9911	1420	NUT;CONNECTOR	000000	000000
9991115050	9-9911	1505	NUT	000000	000000
9991115120	9-9911	1512	NUT;S/ABSORBER TO LWR LNK	000000	000000
9991115140	9-9911	1514	NUT;S/ABSORBER	000000	000000
9991115160	9-9911	1516	NUT;HOLD PIN	000000	000000
9991115180	9-9911	1518	NUT	000000	000000
9991115200	9-9911	1520	NUT,COUPLING DR	000000	000000
9991115240	9-9911	1524	NUT;GEAR FIX	000000	000000
9991204120	9-9912	0412	NUT;STARTER	000000	000000
9992020140	9-9920	2014	PLUG; SCREW, OIL	000000	000000
9992023120	9-9920	2312	PLUG;DETENT BALL,TRANSFER	000000	000000
9992023140	9-9920	2314	PLUG; SCREW,OIL	000004	000305
9992023160	9-9920	2316	PLUG;THERMOSTAT	000003	000002
9992023180	9-9920	2318	PLUG;OIL FILLER	000000	000000
9992023200	9-9920	2320	PLUG;WTR PUMP	000036	000000
9992023240	9-9920	2324	PLUG; OIL DRAIN	000000	000000
9992027160	9-9920	2716	PLUG; SCREW	000000	000000
9992027200	9-9920	2720	PLUG;TRANS CASE/OIL DRAIN	000000	000000
9992033160	9-9920	3316	PLUG; SENSOR HOLE	000000	000000
9992045130	9-9920	4513	PLUG; AIR TANK	000000	000009
9992055170	9-9920	5517	PLUG;INL.MANIF	000000	000000
9992320100	9-9923	2010	BOLT; JOINT	000000	000000
9992320120	9-9923	2012	BOLT; JOINT	000000	000000
9992321120	9-9923	2112	BOLT; JOINT	000000	000006
9992326080	9-9923	2608	JOINT FUEL FILTER BOLT	000004	000000
9995921080	9-9959	2108	WRENCH;10X08	000000	000000